MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual Mainframe Operation

50th Edition

For safety and warning information, please read this manual before attempting to use the equipment.

Keep this manual with the equipment.

ANRITSU CORPORATION

Document No.: M-W2850AE-50.0

Safety Symbols

To prevent the risk of personal injury or loss related to equipment malfunction, Anritsu Corporation uses the following safety symbols to indicate safety-related information. Ensure that you clearly understand the meanings of the symbols BEFORE using the equipment. Some or all of the following symbols may be used on all Anritsu equipment. In addition, there may be other labels attached to products that are not shown in the diagrams in this manual.

Symbols used in manual



DANGER

This indicates a very dangerous procedure that could result in serious injury or death if not performed properly.



WARNING This indicates a hazardous procedure that could result in serious injury or death if not performed properly.



 
CAUTION

This indicates a hazardous procedure or danger that could result in light-to-severe injury, or loss related to equipment malfunction, if proper precautions are not taken.

Safety Symbols Used on Equipment and in Manual

The following safety symbols are used inside or on the equipment near operation locations to provide information about safety items and operation precautions. Ensure that you clearly understand the meanings of the symbols and take the necessary precautions BEFORE using the equipment.







This indicates an obligatory safety precaution. The obligatory operation is indicated symbolically in or near the circle.



This indicates a warning or caution. The contents are indicated symbolically in or near the triangle.

This indicates a note. The contents are described in the box.





These indicate that the marked part should be recycled.

MS2690A/MS2691A/MS2692A

Signal Analyzer

Operation Manual Mainframe Operation

15 May 2007 (First Edition) 2019 (50th Edition) August

Copyright © 2007-2019, ANRITSU CORPORATION.

All rights reserved. No part of this manual may be reproduced without the prior written permission of the publisher.

The contents of this manual may be changed without prior notice.

Printed in Japan



DANGER

Replacing Battery



When replacing the battery, use the specified battery and insert it
with the correct polarity. If the wrong battery is used, or if the battery
is inserted with reversed polarity, there is a risk of explosion causing
severe injury or death.

Battery Disposal

 DO NOT expose batteries to heat or fire. This is dangerous and can result in explosions or fire. Heating batteries may cause them to leak or explode.



WARNING



- ALWAYS refer to the operation manual when working near locations at which the alert mark shown on the left is attached. If the advice in the operation manual is not followed there is a risk of personal injury or reduced equipment performance. The alert mark shown on the left may also be used with other marks and descriptions to indicate other dangers.
- Overvoltage Category
 This equipment complies with overvoltage category II defined in IEC
 61010. DO NOT connect this equipment to the power supply of overvoltage category III or IV.

Electric Shock

 To ensure that the equipment is grounded, always use the supplied 3-pin power cord, and insert the plug into an outlet with a ground terminal. If power is supplied without grounding the equipment, there is a risk of receiving a severe or fatal electric shock or causing damage to the internal components.



WARNING

Repair



 Only qualified service personnel with a knowledge of electrical fire and shock hazards should service this equipment. This equipment cannot be repaired by the operator. DO NOT attempt to remove the equipment covers or unit covers or to disassemble internal components. There are high-voltage parts in this equipment presenting a risk of severe injury or fatal electric shock to untrained personnel. In addition, there is a risk of damage to precision components.

Calibration



• The performance-guarantee seal verifies the integrity of the equipment. To ensure the continued integrity of the equipment, only Anritsu service personnel, or service personnel of an Anritsu sales representative, should break this seal to repair or calibrate the equipment. Be careful not to break the seal by opening the equipment or unit covers. If the performance-guarantee seal is broken by you or a third party, the performance of the equipment cannot be guaranteed.



WARNING

Falling Over

 This equipment should always be positioned in the correct manner. If the cabinet is turned on its side, etc., it will be unstable and may be damaged if it falls over as a result of receiving a slight mechanical shock.

Always set up the equipment in a position where the power switch can be reached without difficulty.

Battery Fluid

• DO NOT short the battery terminals and never attempt to disassemble the battery or dispose of it in a fire. If the battery is damaged by any of these actions, the battery fluid may leak. This fluid is poisonous. DO NOT touch the battery fluid, ingest it, or get in your eyes. If it is accidentally ingested, spit it out immediately, rinse your mouth with water and seek medical help. If it enters your eyes accidentally, do not rub your eyes, rinse them with clean running water and seek medical help. If the liquid gets on your skin or clothes, wash it off carefully and thoroughly with clean water.

LCD

This equipment uses a Liquid Crystal Display (LCD). DO NOT subject
the equipment to excessive force or drop it. If the LCD is subjected to
strong mechanical shock, it may break and liquid may leak.

This liquid is very caustic and poisonous.

DO NOT touch it, ingest it, or get in your eyes. If it is ingested accidentally, spit it out immediately, rinse your mouth with water and seek medical help. If it enters your eyes accidentally, do not rub your eyes, rinse them with clean running water and seek medical help. If the liquid gets on your skin or clothes, wash it off carefully and thoroughly with soap and water.



CAUTION

Cleaning

- Always remove the main power cable from the power outlet before cleaning dust around the power supply and fan.
 - Clean the power inlet regularly. If dust accumulates around the power pins, there is a risk of fire.
 - Keep the cooling fan clean so that the ventilation holes are not obstructed. If the ventilation is obstructed, the cabinet may overheat and catch fire.

Check Terminal



• Never input a signal of more than the indicated value between the measured terminal and ground. Input of an excessive signal may damage the equipment.



CAUTION

Replacing Memory Back-up Battery

This equipment uses a Poly-carbomonofluoride lithium battery to backup the memory. This battery must be replaced by service personnel when it has reached the end of its useful life; contact the Anritsu sales section or your nearest representative.

Note: The battery used in this equipment has a maximum useful life of 7 years. It should be replaced before this period has elapsed.

External Storage Media

This equipment uses USB memory stick as external storage media for storing data and programs.

If this media is mishandled or becomes faulty, important data may be lost. It is recommended to periodically back up all important data and programs to protect them from being lost accidentally.

Anritsu will not be held responsible for lost data.

Pay careful attention to the following points.

- Never remove the USB memory stick from the equipment while it is being accessed.
- The USB memory stick may be damaged by static electric charges.
- Anritsu has thoroughly tested all external storage media shipped with this equipment. Users should note that external storage media not shipped with this equipment may not have been tested by Anritsu, thus Anritsu cannot guarantee the performance or suitability of such media.



CAUTION

Hard disk

The equipment is equipped with an internal hard disk from which, as with any hard disk, data may be lost under certain conditions. It is recommended to periodically back up all important data and programs to protect them from being lost accidentally.

Anritsu will not be held responsible for lost data.

To reduce the possibility of data loss, particular attention should be given to the following points.

- The equipment should only be used within the recommend temperature range, and should not be used in locations where the temperature may fluctuate suddenly.
- Always follow the guidelines to ensure that the equipment is set up in the specified manner.
- Always ensure that the fans at the rear and side of the equipment are not blocked or obstructed in any way.
- Exercise care not to bang or shake the equipment whilst the power is on.
- Never disconnect the mains power at the plug or cut the power at the breaker with the equipment turned on.

Notes on Handling (When Rubidium Reference Oscillator Option is Installed)

Please use the carrying case or the original packing materials when you transport it.

Because Rubidium Reference Oscillator frequency changes by the magnet, please do not set the one to have the magnetism (more than 0.5 Gauss) such as magnets near it.

Use in a Residential **Environment**

This equipment is designed for an industrial environment. In a residential environment, this equipment may cause radio interference in which case the user may be required to take adequate measures.

Use in Corrosive **Atmospheres**

Exposure to corrosive gases such as hydrogen sulfide, sulfurous acid, and hydrogen chloride will cause faults and failures. Note that some organic solvents release corrosive gases.

Equipment Certificate

Anritsu Corporation certifies that this equipment was tested before shipment using calibrated measuring instruments with direct traceability to public testing organizations recognized by national research laboratories, including the National Institute of Advanced Industrial Science and Technology, and the National Institute of Information and Communications Technology, and was found to meet the published specifications.

Anritsu Warranty

Anritsu Corporation will repair this equipment free-of-charge if a malfunction occurs within one year after shipment due to a manufacturing fault. However, software fixes will be made in accordance with the separate Software End-User License Agreement. Moreover, Anritsu Corporation will deem this warranty void when:

- The fault is outside the scope of the warranty conditions separately described in the operation manual.
- The fault is due to mishandling, misuse, or unauthorized modification or repair of the equipment by the customer.
- The fault is due to severe usage clearly exceeding normal usage.
- The fault is due to improper or insufficient maintenance by the customer.
- The fault is due to natural disaster, including fire, wind, flooding, earthquake, lightning strike, or volcanic ash, etc.
- The fault is due to damage caused by acts of destruction, including civil disturbance, riot, or war, etc.
- The fault is due to explosion, accident, or breakdown of any other machinery, facility, or plant, etc.
- The fault is due to use of non-specified peripheral or applied equipment or parts, or consumables, etc.
- The fault is due to use of a non-specified power supply or in a non-specified installation location.
- The fault is due to use in unusual environments^(Note).
- The fault is due to activities or ingress of living organisms, such as insects, spiders, fungus, pollen, or seeds.

In addition, this warranty is valid only for the original equipment purchaser. It is not transferable if the equipment is resold.

Anritsu Corporation shall assume no liability for injury or financial loss of the customer due to the use of or a failure to be able to use this equipment.

Note:

For the purpose of this Warranty, "unusual environments" means use:

- In places of direct sunlight
- In dusty places
- Outdoors
- In liquids, such as water, oil, or organic solvents, and medical fluids, or places where these liquids may adhere
- In salty air or in place chemically active gases (sulfur dioxide, hydrogen sulfide, chlorine, ammonia, nitrogen oxide, or hydrogen chloride etc.) are present
- In places where high-intensity static electric charges or electromagnetic fields are present
- In places where abnormal power voltages (high or low) or instantaneous power failures occur
- In places where condensation occurs
- In the presence of lubricating oil mists
- In places at an altitude of more than 2,000 m
- In the presence of frequent vibration or mechanical shock, such as in cars, ships, or airplanes

Anritsu Corporation Contact

In the event of this equipment malfunctions, contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

Software End-User License Agreement (EULA)

Please read this Software End-User License Agreement (hereafter this EULA) carefully before using (includes executing, copying, registering, etc.) this software (includes programs, databases, scenarios, etc., used to operate, set, etc., Anritsu electronic equipment). By reading this EULA and using this software, you are agreeing to be bound by the terms of its contents and Anritsu Corporation (hereafter Anritsu) hereby grants you the right to use this Software with the Anritsu-specified equipment (hereafter Equipment) for the purposes set out in this EULA.

1. Grant of License and Limitations

- Regardless of whether this Software was purchased from or provided free-of-charge by Anritsu, you agree not to rent, lease, lend, or otherwise distribute this Software to third parties and further agree not to disassemble, recompile, reverse engineer, modify, or create derivative works of this Software.
- 2. You may make one copy of this Software for backup purposes only.
- 3. You are not permitted to reverse engineer this software.
- 4. This EULA allows you to install one copy of this Software on one piece of Equipment.

2. Disclaimers

To the extent not prohibited by law, in no event shall Anritsu be liable for personal injury, or any incidental, special, indirect or consequential damages whatsoever, including, without limitation, damages for loss of profits, loss of data, business interruption or any other commercial damages or losses, arising out of or related to your use or inability to use this Software.

3. Limitation of Liability

- a. If a fault (bug) is discovered in this Software, preventing operation as described in the operation manual or specifications whether or not the customer uses this software as described in the manual, Anritsu shall at its own discretion, fix the bug, or exchange the software, or suggest a workaround, free-of-charge. However, notwithstanding the above, the following items shall be excluded from repair and warranty.
 - If this Software is deemed to be used for purposes not described in the operation manual or specifications.
 - ii) If this Software is used in conjunction with other non-Anritsu-approved software.
 - iii) Recovery of lost or damaged data.
 - iv) If this Software or the Equipment has been modified, repaired, or otherwise altered without Anritsu's prior approval.
 - v) For any other reasons out of Anritsu's direct control and responsibility, such as but not limited to, natural disasters, software virus infections, etc.
- b. Expenses incurred for transport, hotel, daily allowance, etc., for on-site repairs by Anritsu engineers necessitated by the above faults shall be borne by you.
- c. The warranty period for faults listed in article 3a above covered by this EULA shall be either 6 months from the date of purchase of this Software or 30 days after the date of repair, whichever is longer.

4. Export Restrictions

You may not use or otherwise export or re-export directly or indirectly this Software except as authorized by Japanese and United States law. In particular, this software may not be exported or re-exported (a) into any Japanese or US embargoed countries or (b) to anyone on the Japanese or US Treasury Department's list of Specially Designated Nationals or the US Department of Commerce Denied Persons List or Entity List. By using this Software, you warrant that you are not located in any such country or on any such list. You also agree that you will not use this Software for any purposes prohibited by Japanese and US law, including, without limitation, the development, design and manufacture or production of missiles or nuclear, chemical or biological weapons of mass destruction.

5. Termination

Anritsu shall deem this EULA terminated if you violate any conditions described herein. This EULA shall also be terminated if the conditions herein cannot be continued for any good reason, such as violation of copyrights, patents, or other laws and ordinances.

6. Reparations

If Anritsu suffers any loss, financial or otherwise, due to your violation of the terms of this EULA, Anritsu shall have the right to seek proportional damages from you.

7. Responsibility after Termination

Upon termination of this EULA in accordance with item 5, you shall cease all use of this Software immediately and shall as directed by Anritsu either destroy or return this Software and any backup copies, full or partial, to Anritsu.

8. Dispute Resolution

If matters of dispute or items not covered by this EULA arise, they shall be resolved by negotiations in good faith between you and Anritsu.

9. Court of Jurisdiction

This EULA shall be interpreted in accordance with Japanese law and any disputes that cannot be resolved by negotiation described in Article 8 shall be settled by the Japanese courts.

Using VISA Driver for Remote Control of This Equipment

When controlling this measuring equipment remotely using the Ethernet port, a VISA* 1 driver must be installed in the PC controller. We recommend using NI-VISA $^{\text{TM}*2}$ from National Instruments $^{\text{TM}}$ (NI hereafter) as the VISA driver.

Although a license is generally required to use NI-VISA $^{\text{TM}}$, the licensed NI-VISA $^{\text{TM}}$ driver is provided free-of-charge for use when performing remote control $^{\text{(Note)}}$ of this measuring equipment.

The NI-VISA™ driver can be downloaded from the NI website at: http://sine.ni.com/psp/app/doc/p/id/psp-411

Be sure to comply with the NI license agreement for the usage and license scope.

Be sure to uninstall the NI-VISATM driver when disposing of this measuring equipment or transferring it to a third party, etc., when ceasing to use NI-VISATM, or upon completion of the contract term when using this equipment on a rental contract.

(Notes)

Although the NI-VISA™ driver itself can be downloaded free-of-charge from the web, an implementation license is required for legal reasons when some requirements are not met. (Check the NI web page for the detailed requirements.)

If these requirements are not met, permission is not granted to use NI hardware and software and an NI implementation license must be purchased. However, since this measuring equipment incorporates NI hardware (GPIB ASIC), the NI-VISA™ driver can be downloaded and used free-of-charge.

Glossary of Terms:

- *1: VISA: Virtual Instrument Software Architecture
 I/O software specification for remote control of measuring instruments using interfaces such as GPIB, Ethernet, USB, etc.
- *2: NI-VISA™

World *de facto* standard I/O software interface developed by NI and standardized by the VXI Plug&Play Alliance.

Trademarks:

- National Instruments[™], NI[™], NI-VISA[™] and National Instruments Corporation are all trademarks of National Instruments Corporation.

Notes On Export Management

This product and its manuals may require an Export License/Approval by the Government of the product's country of origin for re-export from your country.

Before re-exporting the product or manuals, please contact us to confirm whether they are export-controlled items or not.

When you dispose of export-controlled items, the products/manuals need to be broken/shredded so as not to be unlawfully used for military purpose.

Trademark and Registered Trademark

IQproducer[™] is a registered trademark of Anritsu Corporation in the United States and/or other countries.

Lifetime of Parts

The life span of certain parts used in this instrument is determined by the operating time or the power-on time. Due consideration should be given to the life spans of these parts when performing continuous operation over an extended period. These parts must be replaced at the customer's expense even if within the guaranteed period described in Warranty at the beginning of this manual. For details on life span, refer to the corresponding section in this manual.

Example: Display backlight, internal hard disk, removable hard disk, connector for hard disk, cooling fan

Cautions against computer virus infection

· Copying files and data

Only files that have been provided directly from Anritsu or generated using Anritsu equipment should be copied to the instrument.

All other required files should be transferred by means of USB or CompactFlash media after undergoing a thorough virus check.

· Adding software

Do not download or install software that has not been specifically recommended or licensed by Anritsu.

• Network connections

Ensure that the network has sufficient anti-virus security protection in place.

Protection against malware (intentionally harmful software) and virus.

This equipment runs on Windows Operating System.

To connect This equipment to network, the following is advised.

- · Activate Firewall.
- · Install important updates of Windows.
- · Use antivirus software.

Crossed-out Wheeled Bin Symbol

Equipment marked with the Crossed-out Wheeled Bin Symbol complies with council directive 2012/19/EU (the "WEEE Directive") in European Union.



For Products placed on the EU market after August 13, 2005, please contact your local Anritsu representative at the end of the product's useful life to arrange disposal in accordance with your initial contract and the local law.

CE Conformity Marking

Anritsu affixes the CE conformity marking on the following product(s) in accordance with the Decision 768/2008/EC to indicate that they conform to the EMC, LVD, and RoHS directive of the European Union (EU).

CE marking



1. Product Model

Model: MS2690A/MS2691A/MS2692A Signal Analyzer

2. Applied Directive

EMC: Directive 2014/30/EU LVD: Directive 2014/35/EU RoHS: Directive 2011/65/EU

3. Applied Standards

EMC: Emission: EN 61326-1: 2013 (Class A)
 Immunity: EN 61326-1: 2013 (Table 2)

	Performance Criteria*
IEC 61000-4-2 (ESD)	В
IEC 61000-4-3 (EMF)	Α
IEC 61000-4-4 (Burst)	В
IEC 61000-4-5 (Surge)	В
IEC 61000-4-6 (CRF)	Α
IEC 61000-4-8 (RPFMF)	Α
IEC 61000-4-11 (V dip/short)	B, C

*: Performance Criteria

A: The equipment shall continue to operate as intended during and after the test. No degradation of performance or loss of function is allowed below a performance level specified by the manufacturer, when the equipment is used as intended. The performance level may be replaced by a permissible loss of performance. If the minimum performance level or the permissible performance loss is not specified by the manufacturer, either of these may be derived from the product description and documentation and what the user may reasonably expect from the equipment if used

as intended.

- B: The equipment shall continue to operate as intended after the test. No degradation of performance or loss of function is allowed below a performance level specified by the manufacturer, when the equipment is used as intended. The performance level may be replaced by a permissible loss of performance. During the test, degradation of performance is however allowed. No change of actual operating state or stored data is allowed. If the minimum performance level or the permissible performance loss is not specified by the manufacturer, either of these may be derived from the product description and documentation and what the user may reasonably expect from the equipment if used as intended.
- C: Temporary loss of function is allowed, provided the function is self-recoverable or can be restored by the operation of the controls.

Harmonic current emissions:


EN 61000-3-2: 2014 (Class A equipment)

- LVD: EN 61010-1: 2010 (Pollution Degree 2)
- RoHS: EN 50581: 2012 (Category 9)

If the third digit of the serial number is "7", the product complies with Directive 2011/65/EU as amended by (EU) 2015/863.

(Pb,Cd,Cr6+,Hg,PBB,PBDE,DEHP,BBP,DBP,DIBP) If the third digit of the serial number is "6", the product complies with Directive 2011/65/EU.

(Pb,Cd,Cr6+,Hg,PBB,PBDE)

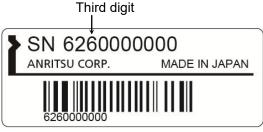

Serial number example

4. Contact

Name: Anritsu GmbH

Address, city: Nemetschek Haus, Konrad-Zuse-Platz 1

81829 München,

Country: Germany

Name: ANRITSU EMEA Ltd.

Address, city: 200 Capability Green, Luton

Bedfordshire, LU1 3LU

Country: United Kingdom

RCM Conformity Marking

Anritsu affixes the RCM mark on the following product(s) in accordance with the regulation to indicate that they conform to the EMC framework of Australia/New Zealand.

RCM marking



1. Product Model

Model: MS2690A/MS2691A/MS2692A Signal Analyzer

2. Applied Standards

EMC: Emission: EN 61326-1: 2013 (Class A equipment)

Anritsu Eco Label



The label shown on the left is attached to Anritsu products meeting our environmental standards.

Details about this label and the environmental standards are available on the Anritsu website at https://www.anritsu.com/

About This Manual

■ Associated Documents

The operation manual configuration of the MS2690A/MS2691A/MS2692A Signal Analyzer is shown below.

MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Main Frame Operation)

Or

MS2830A Signal Analyzer Operation Manual (Main Frame Operation)

MS2840A Signal Analyzer Operation Manual (Main Frame Operation)

MS2850A Signal Analyzer Operation Manual (Main Frame Operation)

MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Main Frame Remote Control)

MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Signal Analyzer Function Operation)



MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Signal Analyzer Function Operation)

MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Signal Analyzer Function Remote Control)

MS2690A/MS2691A/MS2692A Spectrum Analyzer Operation Manual (Spectrum Analyzer Function Operation)



MS2830A/MS2840A/MS2850A Spectrum Analyzer Operation Manual (Spectrum Analyzer Function Operation)

MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Spectrum Analyzer Function Remote Control)

MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Phase Noise Measurement Function Operation)

MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Phase Noise Measurement Function Remote Control)

- Signal Analyzer Operation Manual (Mainframe) < This document>
- Signal Analyzer Operation Manual (Mainframe Remote Control)

 Description of basic operations, maintenance procedures, common functions and common remote functions of the mainframe
- Signal Analyzer Operation Manual (Signal Analyzer Function)
- Signal Analyzer Operation Manual (Signal Analyzer Function Remote Control)

Description of basic operations, functions and remote functions of the signal analyzer

- Signal Analyzer Operation Manual (Spectrum Analyzer Function)
- Signal Analyzer Operation Manual (Spectrum Analyzer Function Remote Control)

Description of basic operations, functions and remote functions of the spectrum analyzer

- Signal Analyzer Operation Manual (Phase Noise Measurement Function Operation)
- Signal Analyzer Operation Manual (Phase Noise Measurement Function Remote Control)

Description of basic operations, functions and remote functions of the phase noise measurement function.

In this document, 🔲	🔝 indicates a p	anel key.
---------------------	-----------------	-----------

Table of Contents

For Safe	ety	iii
About T	his Manual	I
Chapter	1 Overview	1-1
1.1	Product Overview	1-2
1.2	Product Configuration	1-3
1.3	Specifications	1-13
Chapter	2 Before Use	2-1
2.1	On Transportation	2-2
2.2	Installation Location	2-3
2.3	Items to Check Before Use	2-6
2.4	Power Connection	2-10
Chapter	3 Common Operations	3-1
3.1	Part Names	3-2
3.2	Turning Power On/Off	3-10
3.3	Auto Calibration	3-12
3.4	Settings on Configuration Screen	3-17
3.5	Loading, Unloading, and Switching Applications	3-36
3.6	Save and Recall Functions	3-44
3.7	Initializing	3-53
3.8	Installing and Uninstalling	3-55
Chapter	4 Tutorial	4-1
4.1	Spectrum Analysis Using Signal Analyzer	4-2
4.2	Spectrum Analysis Using Spectrum Analyzer	4-7

Appendix

Index

Chapter	5 System	5-1
5.1	Setting Windows	5-2
5.2	Storage Device Configuration	5-9
5.3	System Recovery Functions	5-10
5.4	Windows Security Measures	5-15
Chapter	6 Performance Test	6-1
6.1	Overview of Performance Test	6-2
6.2	Performance Test Items	6-5
Chapter	7 Power Meter	7-1
7.1	Power Meter	7-2
7.2	Display Description	7-3
7.3	Function Menu	7-5
7.4	Initialization	7-15
7.5	Installing the Driver Software	7-16
Chapter	8 Maintenance	8-1
. 8.1	Daily Maintenance and Storage	8-2
8.2	Repackaging and transporting when returning	
	product	8-5
8.3	Calibration	8-7

Appendix A	Performance Test Result	
	Form	A-1
Appendix B	Panel Keys and Keyboard	
	Operations	B-1
Appendix C	Virus Check Procedure	
	(WES 2009)	C-1
Appendix D	Virus Check Procedure	
	(WES 7)	D-1
Appendix E	Initial Value List	E-1
Index	Inc	lex-1

Appendix | Index

Chapter 1 Overview

This chapter provides an overview of the MS2690A/MS2691A/MS2692A Signal Analyzer and product configuration.

1.1	Produ	ct Overview	1-2
1.2	Produ	ct Configuration	1-3
	1.2.1	Standard configuration	1-3
	1.2.2	Required setup services	1-4
	1.2.3	Options	1-4
	1.2.4	Applicable parts	1-10
1.3	Specif	ications	1-13
	1.3.1	Mainframe (MS2690A/MS2691A)	1-13
	1.3.2	Mainframe (MS2692A)	1-28
	1.3.3	Pre-amp option (MS269xA-008/108)	1-43
	1.3.4	Wideband Analysis Hardware Options	
		(MS269xA-004/104)	1-46
	1.3.5	Baseband Interface Unit option	
		(MS269xA-040/140)	1-48
	1.3.6	HDD Digitizing Interface Option	
		(MS269xA-050/150)	1-48
	1.3.7	Microwave Preselector Bypass Option	
		(MS2692A-067/167)	1-49
	1.3.8	Analysis Bandwidth Extension	
		(MS269xA-077/177)	1-50
	1.3.9	Analysis Bandwidth Extension	
		(MS269xA-078/178)	1-54

1.1 Product Overview

The MS2690A/MS2691A/MS2692A Signal Analyzer (hereinafter, referred to as "MS2690A/MS2691A/MS2692A") enables high-speed, high-accuracy, and simple measurements of transmission characteristics of radio devices for various mobile communications types.

The MS2690A/MS2691A/MS2692A enables high-speed and high-accuracy signal processing of wide-ranging analyses at full-span, a characteristic of conventional sweep-type spectrum analyzers, using a digital IF block. In addition, the FFT process (high-speed Fourier conversion) realizes high-speed spectrum analysis and simultaneous analysis on frequency and time axes not possible with conventional sweep-type spectrum analyzers. It also records RF input signals as digital data (digitize function). It can be used in a variety of applications from research and development to manufacturing thanks to its characteristics.

The following are characteristics of the MS2690A/MS2691A/MS2692A.

- Wide frequency band (6 GHz/13.5 GHz/26.5 GHz)
- Wide analysis bandwidth (31.25 MHz; however, 62.5/125 MHz when the option is installed)
- High dynamic range (180 dB)
- Enables full-span sweep
- High-speed, high-accuracy signal analysis using digital IF
- Enables time-continuous analysis of loaded data
- Loaded with large capacity waveform memory
- Enables high-speed spectrum analysis
- Rich measurement functions

The MS2690A/MS2691A/MS2692A is equipped with the hardware product made by National Instruments and comes with the license for NI-VISA. NI-VISA can be used for the purpose of controlling the MS2690A/MS2691A/MS2692A.

1.2 Product Configuration

1.2.1 Standard configuration

Tables 1.2.1-1 through 1.2.1-3 list the respective standard configurations of the MS2690A, MS2691A and MS2692A. First, after opening the packaging, check that all listed products are included. Contact an Anritsu Service and Sales office about missing or damaged parts.

Table 1.2.1-1 Standard configuration (MS2690A)

Item	Model Number	Product Name	Q'ty	Remarks
Unit	MS2690A	Signal Analyzer	1	_
		Power cord	1	_
Accessories	P0031A	USB memory	1	256 MB or more
	Z0541A	USB mouse	1	-
	Installation CD-ROM			
	MX269000A	Standard Software	1	Installed
	_	Operation Manual	1 set	

Table 1.2.1-2 Standard configuration (MS2691A)

Item	Model Number	Product Name	Q'ty	Remarks
Unit	MS2691A	Signal Analyzer	1	_
		Power cord	1	_
A	P0031A	USB memory	1	256 MB or more
Accessories	Z0541A	USB mouse	1	_
	Installation CD-ROM			
	MX269000A	Standard Software	1	Installed
	_	Operation Manual	1 set	

Table 1.2.1-3 Standard configuration (MS2692A)

Item	Model Number	Product Name	Q'ty	Remarks
Unit	MS2692A	Signal Analyzer	1	-
		Power cord	1	-
Accessories	P0031A	USB memory	1	256 MB or more
Accessories	Z0541A	USB mouse	1	_
	Installation CD-ROM			
	MX269000A	Standard Software	1	Installed
	_	Operation Manual	1 set	

1.2.2 Required setup services

Table 1.2.2-1 lists the required setup services for the MS2690A/MS2691A/ MS2692A.

Table 1.2.2-1 Required options (MS2690A/MS2691A/MS2692A)

Model Number	Product Name	Remarks
Z0979A	Optional setup service*	_

- *: The following contents are contained in the optional setup service.
- Initial setting and activation of Windows XP Professional
- Software installation

1.2.3 Options

Tables 1.2.3-1 through 1.2.3-4 list the options for the MS2690A/MS2691A/MS2692A. These options are sold separately.

Note:

There is a risk of losing the data when adding additional option(s), so back up the data stored on the hard disk, in advance. Anritsu is not responsible for any loss of data.

Table 1.2.3-1 Additional Options at/after shipment (MS2690A)

Option Number	Product Name	Remarks
MS2690A-001	Rubidium Reference Oscillator	Aging rate ±1 ×10 ⁻¹⁰ /month
MS2690A-101	Rubidium Reference Oscillator Retrofit	
MS2690A-004	Wideband Analysis Hardware	Extends the Analysis Bandwidth to 125 MHz
MS2690A-104	Wideband Analysis Hardware Retrofit	
MS2690A-008	6 GHz Preamplifier	100 kHz to 6 GHz
MS2690A-108	6 GHz Preamplifier Retrofit	
MS2690A-010	Phase Noise Measurement Function	
MS2690A-110	Phase Noise Measurement Function Retrofit	
MS2690A-017	Noise Figure Measurement Function	
MS2690A-117	Noise Figure Measurement Function Retrofit	
MS2690A-020	Vector Signal Generator	125 MHz to 6 GHz
MS2690A-120	Vector Signal Generator Retrofit	
MS2690A-037	Rubidium Reference Oscillator	Aging rate ±1 ×10 ⁻¹⁰ /month
MS2690A-137	Rubidium Reference Oscillator Retrofit	
MS2690A-050	HDD Digitizing Interface	Supports External HDD
MS2690A-150	HDD Digitizing Interface Retrofit	with MX269050A Extended Digitizing Software

Table 1.2.3-1 Additional Options at/after shipment (MS2690A) (Cont'd)

Option Number	Product Name	Remarks
MS2690A-077	Analysis Bandwidth Extension to 62.5MHz	Extends Analysis Bandwidth to 62.5 MHz
MS2690A-177	Analysis Bandwidth Extension to 62.5MHz Retrofit	
MS2690A-078	Analysis Bandwidth Extension to 125MHz	Extends Analysis Bandwidth to 125 MHz
MS2690A-178	Analysis Bandwidth Extension to 125MHz Retrofit	
MS2690A-180	CPU/Windows7 Upgrade Retrofit	Upgrades the CPU and operating system to Windows 7.

Table 1.2.3-2 Additional Options at/after shipment (MS2691A)

Option Number	Product Name	Remarks
MS2691A-001	Rubidium Reference Oscillator	Aging rate $\pm 1 \times 10^{-10}$ /month
MS2691A-101	Rubidium Reference Oscillator Retrofit	
MS2691A-003	Extension of Preselector Lower Limit to 3 GHz	Preselector lower limit, 3 GHz
MS2691A-103	Extension of Preselector Lower Limit to 3 GHz Retrofit	
MS2691A-004	Wideband Analysis Hardware	Extends the Analysis Bandwidth to 125 MHz
MS2691A-104	Wideband Analysis Hardware Retrofit	
MS2691A-008	6 GHz Preamplifier	100 kHz to 6 GHz
MS2691A-108	6 GHz Preamplifier Retrofit	
MS2691A-010	Phase Noise Measurement Function	
MS2691A-110	Phase Noise Measurement Function Retrofit	
MS2691A-017	Noise Figure Measurement Function	
MS2691A-117	Noise Figure Measurement Function Retrofit	
MS2691A-020	Vector Signal Generator	125 MHz to 6 GHz
MS2691A-120	Vector Signal Generator Retrofit	
MS2691A-037	Rubidium Reference Oscillator	Aging rate $\pm 1 \times 10^{-10}$ /month
MS2691A-137	Rubidium Reference Oscillator Retrofit	
MS2691A-050	HDD Digitizing Interface	Supports External HDD
MS2691A-150	HDD Digitizing Interface Retrofit	with MX269050A Extended Digitizing Software
MS2691A-077	Analysis Bandwidth Extension to 62.5MHz	Extends Analysis Bandwidth to 62.5 MHz
MS2691A-177	Analysis Bandwidth Extension to 62.5MHz Retrofit	

Table 1.2.3-2 Additional Options at/after shipment (MS2691A) (Cont'd)

Option Number	Product Name	Remarks
MS2691A-078	Analysis Bandwidth Extension to 125MHz	Extends Analysis Bandwidth to 125 MHz
MS2691A-178	Analysis Bandwidth Extension to 125MHz Retrofit	
MS2691A-180	CPU/Windows7 Upgrade Retrofit	Upgrades the CPU and operating system to Windows 7.

Table 1.2.3-3 Additional Options at/after shipment (MS2692A)

Option Number	Product Name	Remarks
MS2692A-001	Rubidium Reference Oscillator	Aging rate $\pm 1 \times 10^{-10}$ /month
MS2692A-101	Rubidium Reference Oscillator Retrofit	
MS2692A-003	Extension of Preselector Lower Limit to 3 GHz	Preselector lower limit, 3 GHz
MS2692A-103	Extension of Preselector Lower Limit to 3 GHz Retrofit	
MS2692A-004	Wideband Analysis Hardware	Extends the Analysis Bandwidth to 125 MHz
MS2692A-104	Wideband Analysis Hardware Retrofit	
MS2692A-008	6 GHz Preamplifier	100 kHz to 6 GHz
MS2692A-108	6 GHz Preamplifier Retrofit	
MS2692A-010	Phase Noise Measurement Function	
MS2692A-110	Phase Noise Measurement Function Retrofit	
MS2692A-017	Noise Figure Measurement Function	
MS2692A-117	Noise Figure Measurement Function Retrofit	
MS2692A-020	Vector Signal Generator	125 MHz to 6 GHz
MS2692A-120	Vector Signal Generator Retrofit	
MS2692A-037	Rubidium Reference Oscillator	Aging rate $\pm 1 \times 10^{-10}$ /month
MS2692A-137	Rubidium Reference Oscillator Retrofit	7
MS2692A-050	HDD Digitizing Interface	Supports External HDD
MS2692A-150	HDD Digitizing Interface Retrofit	with MX269050A Extended Digitizing Software
MS2692A-067	Microwave Preselector Bypass	Enables the preselector bypass.
MS2692A-167	Microwave Preselector Bypass Retrofit	7
MS2692A-077	Analysis Bandwidth Extension to 62.5MHz	Extends Analysis Bandwidth to 62.5 MHz
MS2692A-177	Analysis Bandwidth Extension to 62.5MHz Retrofit	

Table 1.2.3-3 Additional Options at/after shipment (MS2692A) (Cont'd)

Option Number	Product Name	Remarks
MS2692A-078	Analysis Bandwidth Extension to 125MHz	Extends Analysis Bandwidth to 125 MHz
MS2692A-178	Analysis Bandwidth Extension to 125MHz Retrofit	
MS2692A-180	CPU/Windows7 Upgrade Retrofit	Upgrades the CPU and operating system to Windows 7.

Table 1.2.3-4 Optional warranty extension (MS2690A/MS2691A/MS2692A)

Option Number	Product Name	Remarks
MS2690A-ES210	2-year warranty service	_
MS2690A-ES310	3-year warranty service	_
MS2690A-ES510	5-year warranty service	_
MS2691A-ES210	2-year warranty service	_
MS2691A-ES310	3-year warranty service	_
MS2691A-ES510	5-year warranty service	_
MS2692A-ES210	2-year warranty service	_
MS2692A-ES310	3-year warranty service	_
MS2692A-ES510	5-year warranty service	_

Tables 1.2.3-5 and 1.2.3-6 list the Application software for the MS2690A/MS2691A/MS2692A.

For the latest information on the application software, either visit the MS2690A/MS2691A/MS2692A page on Anritsu website or contact an Anritsu Service and Sales office.

Application software is sold separately.

Anritsu website: https://www.anritsu.com/

Table 1.2.3-5 Application software

Option Number	Product Name	Remarks
MX269010A	Mobile WiMAX Measurement	CD-ROM containing license
	Software	and operation manual
MV0C0011A	W-CDMA/HSPA Downlink	CD-ROM containing license
MX269011A	Measurement Software	and operation manual
MX269012A	W-CDMA/HSPA Uplink	CD-ROM containing license
MA269012A	Measurement Software	and operation manual
MX269013A	GSM/EDGE Measurement	CD-ROM containing license
WA209015A	Software	and operation manual
MX269014A	ETC/DSRC Measurement	CD-ROM containing license
MA209014A	Software	and operation manual
MX269015A	TD-SCDMA Measurement	CD-ROM containing license
MA269015A	Software	and operation manual
MX269016A	XG-PHS Measurement	CD-ROM containing license
WA209010A	Software	and operation manual
MX269017A	Vector Modulation Analysis	CD-ROM containing license
WAZ09017A	Software	and operation manual
MX269020A	LTE Downlink Measurement	CD-ROM containing license
WA209020A	Software	and operation manual
MX269021A	LTE Uplink Measurement	CD-ROM containing license
WIX209021A	Software	and operation manual
MX269022A	LTE TDD Downlink	CD-ROM containing license
WAZ09022A	Measurement Software	and operation manual
MX269023A	LTE TDD Uplink	CD-ROM containing license
WAZ09025A	Measurement Software	and operation manual
MX269024A	CDMA2000 Forward Link	CD-ROM containing license
WAZ09024A	Measurement Software	and operation manual
MX269026A	EV-DO Forward Link	CD-ROM containing license
WIAZUBUZUA	Measurement Software	and operation manual
MX269028A	WLAN(802.11)Measurement	CD-ROM containing license
WIAZUBUZOA	Software	and operation manual

Table 1.2.3-5 Application software (Cont'd)

Option Number	Product Name	Remarks
MX269030A	W-CDMA BS Measurement Software	CD-ROM containing license and operation manual
MX269036A	Measurement Software for MediaFLO	CD-ROM containing license and operation manual
MX269037A	ISDB-Tmm Analysis Software	CD-ROM containing license and operation manual
MX269050A	Extended Digitizing Software	CD-ROM containing license and operation manual
MX269074A	Power Amplifier Measurement Software	CD-ROM containing license and operation manual

Table 1.2.3-6 Application software (IQproducer $^{\text{\tiny TM}}$)

Option Number	Product Name	Remarks
MX269901A	HSDPA/HSUPA IQproducer™	CD-ROM containing license and operation manual
MX269902A	TDMA IQproducer™	CD-ROM containing license and operation manual
MX269904A	Multi-carrier IQproducer™	CD-ROM containing license and operation manual
MX269905A	Mobile WiMAX IQproducer™	CD-ROM containing license and operation manual
MX269908A	LTE IQproducer™	CD-ROM containing license and operation manual
MX269909A	XG-PHS IQproducer™	CD-ROM containing license and operation manual
MX269910A	LTE TDD IQproducer™	CD-ROM containing license and operation manual
MX269911A	WLAN IQproducer™	CD-ROM containing license and operation manual
MX269912A	TD-SCDMA IQproducer™	CD-ROM containing license and operation manual

1.2.4 Applicable parts

Table 1.2.4-1 lists the applicable parts for the MS2690A/MS2691A/MS2692A. These parts are sold separately.

Table 1.2.4-1 Applicable parts

Model Number	Product Name	Remarks
W2850AE	MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Mainframe Operation)	Printed version
W2851AE	MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Mainframe Remote Control)	Printed version
W2852AE	MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Signal Analyzer Function Operation)	Printed version
W2853AE	MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Signal Analyzer Function Remote Control)	Printed version
W2854AE	MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Spectrum Analyzer Function Operation)	Printed version
W2855AE	MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Spectrum Analyzer Function Remote Control)	Printed version
W3117AE	MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Phase Noise Measurement Function Operation)	Printed version
W3118AE	MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Phase Noise Measurement Function Remote Control)	Printed version
W2856AE	MS2690A/MS2691A/MS2692A Option 020 Vector Signal Generator Operation Manual (Operation)	Printed version
W2857AE	MS2690A/MS2691A/MS2692A Option 020 Vector Signal Generator Operation Manual (Remote Control)	Printed version
W2914AE	MS2690A/MS2691A/MS2692A and MS2830A/MS2840A Signal Analyzer Vector Signal Generator Operation Manual (IQproducer™)	Printed version
W2929AE	MS2690A/MS2691A/MS2692A and MS2830A/MS2840A Signal Analyzer Vector Signal Generator Operation Manual (Standard Waveform Pattern)	Printed version

Table 1.2.4-1 Applicable parts (Cont'd)

Model Number	Product Name	Remarks
K240B	Power divider (K connector)	DC to 26.5 GHz, 50 Ω K-J, 1 Wmax
MA1612A	FOUR-PORT Junction PAD	5 MHz to 3 GHz, N-J
MP752A	TERMINATION	DC to 12.4 GHz, 50 Ω N-P
MA24106A	USB Power Sensor	50 MHz to 6 GHz, USB/Mini B with cable (Refer to Chapter 7)
MA2512A	Band pass filter	W-CDMA compatible, Pass band: 1.92 to 2.17 GHz
J0576B	Coaxial cord	Approx. 1 m length (N-P, 5D-2W, N-P)
J0576D	Coaxial cord	Approx. 2 m length (N-P, 5D-2W, N-P)
J0127A	Coaxial cord	Approx. 1 m length (BNC-P, RG58A/U, BNC-P)
J0127B	Coaxial cord	Approx. 2 m length (BNC-P, RG58A/U, BNC-P)
J0127C	Coaxial cord	Approx. 0.5 m length (BNC-P, RG58A/U, BNC-P)
J0322A	Coaxial cord	DC to 18 GHz, approx. 0.5 m length (SMA-P, 50 Ω) SUCOFLEX104, SMA-P)
J0322B	Coaxial cord	DC to 18 GHz, approx. 1 m length (SMA-P, 50 Ω SUCOFLEX104, SMA-P)
J0322C	Coaxial cord	DC to 18 GHz, approx. 1.5 m length (SMA-P, 50 Ω SUCOFLEX104, SMA-P)
J0322D	Coaxial cord	DC to 18 GHz, approx. 2 m length (SMA-P, 50 Ω SUCOFLEX104, SMA-P)
J1398A	N-SMA ADAPTOR	DC to 26.5 GHz, 50 Ω N-P, SMA-J
J0911	Coaxial cord, 1.0 M (for 40 GHz)	DC to 40 GHz, approx 1 m length (SF102A, 11K254/11K254/1.0M)
J0912	Coaxial cord, 0.5 M (for 40 GHz)	DC to 40 GHz, approx 0.5 m length (SF102A, 11K254/11K254/0.5M)
41KC-3	Fixed Attenuator, 3 dB	DC to 40 GHz, 3 dB

Table 1.2.4-1 Applicable parts (Cont'd)

Model Number	Product Name	Remarks
J1261A	Ethernet cable (shield type)	Straight cable, approx. 1 m length
J1261B	Ethernet cable (shield type)	Straight cable, approx. 3 m length
J1261C	Ethernet cable (shield type)	Cross cable, approx. 1 m length
J1261D	Ethernet cable (shield type)	Cross cable, approx 3 m length
J0008	GPIB cable, 2.0 m	Approx. 2 m length
J1373A	AUX conversion adapter	$AUX \rightarrow BNC$ For vector signal generator option
B0597A	Rack mount kit	
B0589A	Carrying case	Protective cover, casters
B0633A	Carrying case (Soft Type)	
Z0975A	Keyboard (USB)	

1.3 Specifications

1.3.1 Mainframe (MS2690A/MS2691A)

Tables 1.3.1-1 through 1.3.1-4 show the specifications for the MS2690A/ $\rm MS2691A.$

The following specification values are those under the conditions after 30-min warm-up at stable ambient temperature. Also, note that the Typ. values are provided as reference data, and are not guaranteed specifications. The specifications of the Signal Analyzer function are values at the center frequency if not specified.

Setting Frequency Band Mode to Spurious can be performed when installing the MS2691A-003/103.

Table 1.3.1-1 Specifications for mainframe

Item		Specification	ı
Frequency			
Frequency range	50 Hz to 6 GHz 50 Hz to 13.5 GHz	(MS2690A) (MS2691A)	
Frequency band		Band	Mixer harmonic order[N]
Configuration	50 Hz to 6.0 GHz	0	1
	3 to 6.0 GHz when MS2691A-003/103 (MS2691A)	$\begin{array}{c} 1-L \\ \text{is mounted} \end{array}$	1
	5.9 to 8.0 GHz (MS2691A)	1–	1
	7.9 to 13.5 GHz (MS2691A)	1+	1
Preselector range	Frequency Band Mode:	Normal	
	5.9 to 13.5 GHz	(MS2691A)	
	Frequency Band Mode:	Spurious	
	3 to 13.5 GHz		
Frequency settings			
Settable range	0 Hz to 6 GHz 0 Hz to 13.5 GHz	(MS2690A) (MS2691A)	
Resolution	1 Hz		

Table 1.3.1-1 Specifications for mainframe (Cont'd)

Item	Specification	
Internal reference oscillator		
Activation characteristics	Based on frequency 24 hours after power-on, at 23°C $\pm 5 \times 10^{-7}$ (2 minutes after power-on) $\pm 5 \times 10^{-8}$ (5 minutes after power-on)	
Aging rate	$\pm 1 \times 10^{-7}$ /year	
Temperature characteristics	$\pm 2 \times 10^{-8} \text{ (5 to } 45^{\circ}\text{C)}$	
	When Option 001/101 Rubidium Reference Oscillator is installed	
Activation characteristics	Based on frequency 24 hours after power-on, at 23° C $\pm 1 \times 10^{-9}$ (7 minutes after power-on)	
Aging rate	$\pm 1 \times 10^{-10}$ /month	
Temperature characteristics	$\pm 1 \times 10^{-9} $ (5 to 45°C)	
	When Option 037/137 Rubidium Reference Oscillator is installed	
Activation characteristics	Based on frequency 24 hours after power-on, at 23° C $\pm 1 \times 10^{-9}$ (15 minutes after power-on)	
Aging rate	$\pm 1 \times 10^{-10}$ /month	
Temperature characteristics	$\pm 1 \times 10^{-9} $ (5 to 45°C)	
Single side band noise	At 18 to 28°C, 2 GHz	
	(Frequency offset) 100 kHz -116 dBc/Hz 1 MHz -137 dBc/Hz	
Amplitude		
Measurement range	Displays average noise level up to +30 dBm	
Maximum input level		
Continuous wave average Power	=	
DC	0 Vdc	
Input attenuator	0 to 60 dB, 2 dB steps	
Input attenuator switching	Based on input attenuator 10 dB	
error	Frequency Band Mode: Normal ≤ 6 GHz: ±0.2 dB (10 to 60 dB)	
	> 6 GHz: ±0.2 dB (10 to 60 dB) > 6 GHz: ±0.75 dB (10 to 60 dB) (MS2691A)	
	Frequency Band Mode: Spurious	
	< 3 GHz: ±0.2 dB (10 to 60 dB) (MS2691A)	
	$\geq 3 \text{ GHz: } \pm 0.75 \text{ dB (10 to 60 dB)}$ (MS2691A)	
Reference Level		
Setting range	Log scale: -120 to +50 dBm or equivalent value (Signal Analyzer Mode) -130 to +50 dBm or equivalent value (Spectrum Analyzer Mode)	
	Linear scale: 22.4 µV to 70.7 V or equivalent value (Signal Analyzer Mode) 70.7 nV to 70.7 V or equivalent value (Spectrum Analyzer Mode)	
	Resolution: 0.01 dB or equivalent level	
Units	Log scale: dBm, dBμV, dBmV, dBμV (emf), dBμV/m, V, W	
	Linear scale: V	

Table 1.3.1-1 Specifications for mainframe (Cont'd)

Table 1.3.1-1 Specifications for mainframe (Contrd)		
Item	Specification	
Linearity error	Excluding the noise floor effect	
RF frequency	After CAL execution, input attenuator = 10 dB, at 18 to 28°C	
characteristics	±0.35 dB (9 kHz ≤ frequency ≤ 6 GHz, Frequency Band mode: Normal) (9 kHz ≤ frequency < 3 GHz, Frequency Band mode: Spurious) After CAL execution, input attenuator = 10 dB, after preselector tuning, at 18 to 28°C (MS2691A) ±1.50 dB (6 GHz < frequency ≤ 13.5 GHz, Frequency Band mode: Normal) (3 GHz ≤ frequency ≤ 13.5 GHz, Frequency Band mode: Spurious)	
1-dB gain compression	At mixer input level ≥ +3 dBm (100 MHz ≤ frequency < 400 MHz) ≥ +7 dBm (400 MHz ≤ frequency ≤ 6 GHz, Frequency Band mode: Normal) (400 MHz ≤ frequency < 3 GHz, Frequency Band mode: Spurious) ≥ +3 dBm (MS2691A) (3 GHz ≤ frequency ≤ 6 GHz, Frequency Band mode: Spurious) ≥ +3 dBm (MS2691A)(6 GHz < frequency ≤ 13.5 GHz)	
Spurious Response		
Second harmonic wave distortion	$\begin{array}{lll} At \ mixer \ input \ level = -30 \ dBm \\ Harmonic \ wave \ [dBc] & SHI \ [dBm] \\ & \leq -60 & \geq +30 \\ & & & & & & & & & & & & \\ & & & & & $	
Residual response	$(1.5~\mathrm{GHz} \leq \mathrm{Input~frequency,~Frequency~Band~mode:~Spurious)}$ Frequency $\geq 1~\mathrm{MHz},~\mathrm{at~input~attenuator} = 0~\mathrm{dB},~50~\Omega$ (Excluding "bandwidth > 31.25 MHz" in Signal Analyzer.) $\leq -100~\mathrm{dBm}$	

Table 1.3.1-1 Specifications for mainframe (Cont'd)

Item	Specification
Connector	
RF input	
Connector	Front panel, N-J, $50~\Omega$
	VSWR: Input attenuator ≥10 dB, 18 to 28°C
	≤ 1.2 (Nominal value) (40 MHz \leq frequency ≤ 3 GHz)
	≤ 1.5 (Nominal value) (3 GHz < frequency ≤ 6 GHz)
	≤ 2.0 (Nominal value) (6 GHz < frequency ≤ 13.5 GHz) (MS2691A)
IF Output	
Connector	Rear panel, BNC-J, 50Ω (nominal value)
Frequency	875 MHz (when not installing the Signal Analyzer and
	$MS269xA-004/104/077/177/078/178$ or setting bandwidth ≤ 31.25 MHz)
	900 MHz (when installing the Signal Analyzer and
	MS269xA-004/104/077/177/078/178 or setting bandwidth >31.25)
	874.988 MHz (Spectrum Analyzer)
Gain	At the reference RF input level, 1 GHz RF frequency , and 0 dB input
	attenuator (nominal value)
	0 dB (nominal value)
IF bandwidth	120 MHz (nominal value)
External reference input	
Connector	Rear panel, BNC-J, $50~\Omega$ (nominal value)
Frequency	10 MHz or 13 MHz
Operating range	±1 ppm
Input level	$-15 \text{ dBm} \le \text{level} \le +20 \text{ dBm}, 50 \Omega \text{ (AC coupling)}$

Table 1.3.1-1 Specifications for mainframe (Cont'd)

Item	Specifications
Reference signal output	
Connector	Rear panel, BNC-J, $50~\Omega$ (nominal value)
Frequency	$10\mathrm{MHz}$
Output level	≥ 0 dBm (AC coupling)
Sweep status output	
Connector	Rear panel, BNC-J
Output level	TTL level (high level at sweep or waveform acquisition)
Trigger input	
Connector	Rear panel, BNC-J
Input level	TTL level
External controls	Control from external controller (except power)
Ethernet (10/100/1000Base-T)	
Connector	Rear panel, RJ-45
GPIB	
Connector	IEEE488.2 compatible
	Rear panel, IEEE488 bus connector
Interface function	SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT0, C0, E2
USB (B)	
Connector	USB2.0 compatible
USB	Rear panel, USB-B connector
USB	Used to connect the USB power sensor or to connect a USB memory stick for saving and reading the files (parameters, waveforms, screen
	copies, etc.).
Connector	USB 2.0 compatible
	USB-A connector (2 ports on front panel, 2 ports on rear panel)
Monitor output	
Connector	Rear panel, VGA compatibility, mini D-SUB 15 pin
Aux	
Connector	Used for trigger input/output from/to Option 020/120, etc.
	Rear panel, 68 pins (DX10BM-68S equivalent part)
Screen	XGA color LCD (resolution: 1024×768)
	8.4 inch (213 mm diagonal)

Table 1.3.1-1 Specifications for mainframe (Cont'd)

lto-m	Charification
Item	Specification
Overall Specifications	
Size, Weight	
Size	$340 \text{ mm (w)} \times 200 \text{ mm (h)} \times 350 \text{ mm (d) (excluding protrusions)}$
Weight	$\leq 13.5 \text{ kg (excluding options)}$
Power	
Voltage	Rated Voltage: AC 100 to 120 V or 200 to 240 V
Frequency	50 Hz to 60 Hz
Power consumption	8 1
	≤ 440 VA (including all options, maximum value)
Temperature	
Operating temperature	5 to 45°C
Storage temperature	−20 to 60°C
Environment Performance	
Conducted disturbance	EN 61326-1 (Class A)
Electromagnetic radiated	EN 61326-1 (Class A)
disturbance	
Harmonic current emission	EN 61000-3-2 (Class A equipment)
Electrostatic discharge	EN 61326-1 (Table 2)
Electromagnetic field	EN 61326-1 (Table 2)
immunity	
Fast transient/burst	EN 61326-1 (Table 2)
Surge	EN 61326-1 (Table 2)
Conducted RF	EN 61326-1 (Table 2)
Power frequency magnetic	EN 61326-1 (Table 2)
field	
Voltage dips/short	EN 61326-1 (Table 2)
interruption	

Also refer to Table 1.3.4-1 "Specifications for Wideband Analysis Hardware Options" when MS269xA-004/104 is installed.

Table 1.3.1-2 Specifications for signal analyzer function

Item	Specification
Common	
Trace mode	Spectrum, Power vs Time, Frequency vs Time, CCDF, Spectrogram No Trace
Bandwidth	
Range	Specifies the capture analysis bandwidth from the center frequency 1 kHz to 25 MHz (1-2.5-5 sequence), 31.25 MHz
Sampling rate	
Range	Automatically set depending on analysis bandwidth 2 kHz to 50 MHz (1-2-5 sequence)
Capture time	
Capture time length	Sets the capture time length
	Minimum capture time length: 2 μs to 50 ms (determined depending on analysis bandwidth)
	Maximum capture time length: 2 to 2000 s (determined depending on analysis bandwidth)
Setting mode	Auto, Manual
Trigger	
Trigger mode	Free Run (Trig Off), Video, Wide IF Video, External (TTL) SG Marker (when Option 020/120 is installed) BBIF (when Option 040/140 is installed)
ADC resolution	16bits
	(when not installing the MS269xA-004/104/077/177/078/178 or setting bandwidth ≤ 31.25 MHz)
Spectrum indicator function	
Function overview	Displays spectrums within random time spans and frequency ranges in captured waveform data.
Analysis time range	
Analysis Start Time	Sets analysis start time position from beginning of waveform data
Analysis Time Length	Sets analysis time length
Setting mode	Auto, Manual
Frequency	Center frequency and SPAN can be set within the frequency range in waveform data
Indicator frequency accuracy	$\pm [Indicator\ frequency imes reference\ frequency\ accuracy + SPAN frequency imes reference\ frequency\ accuracy + RBW imes 0.05 + 2 imes N + SPAN frequency / (Trace point count -1)] Hz$
	N:Mixer harmonic order
Resolution bandwidth (RBW)	
Setting range	1 Hz to 1 MHz (1-3 sequence)
Selectivity	(-60 dB/-3 dB) 4.5:1, nominal value

Table 1.3.1-2 Specifications for signal analyzer function (Cont'd)

Item	Specification		
Absolute amplitude accuracy	After CAL execution, 18 to 28°C, input attenuator \geq 10 dB, mixer input level \leq 0 dBm, RBW = Auto, Time Detection = Average, Marker Result = Integration or Peak(Accuracy), center frequency CW, excluding the noise floor effect ± 0.5 dB (50 Hz \leq frequency \leq 6 GHz, Frequency Band Mode: Normal) (50 Hz \leq frequency \leq 3 GHz, Frequency Band Mode: Spurious) After Preselector tuning (MS2691A) ± 1.8 dB (6 GHz $<$ frequency \leq 13.5 GHz, Frequency Band Mode: Normal) (3 GHz \leq frequency \leq 13.5 GHz, Frequency Band Mode: Spurious) The absolute amplitude accuracy is calculated from an RSS (root summed square) error of the RF frequency characteristics, linear error, and input attenuator switching error.		
In-band frequency characteristics	On the basis of a level of the center frequency, in center frequency ± 10 MHz, when MS269xA-004/104/077/177/078/178 is not installed or the bandwidth is ≤ 31.25 MHz: ± 0.31 dB (30 MHz \leq frequency \leq 6 GHz, Frequency Band Mode: Normal) (30 MHz \leq Frequency \leq 3 GHz, Frequency Band Mode: Spurious)		
Adjacent channel power (ACP) leakage	$ \begin{array}{llllllllllllllllllllllllllllllllllll$		
	Select Adjacent channel specification: 3 channels \times 2		
Channel power Absolute value measurement	dBm, dBm/Hz		
Occupied bandwidth (OBW)	N% of Power method, X dB Down method		

Table 1.3.1-2 Specifications for signal analyzer function (Cont'd)

Item	Specification		
Power vs Time Display Funct	ion		
Function overview	Indicates time changes of power for captured waveform data		
Analysis time range			
Analysis Start Time	Sets analysis start time position from beginning of waveform data		
Analysis Time Length	Sets analysis time length		
Setting mode	Auto, Manual		
Resolution bandwidth			
Filter type	Rect, Gaussian, Nyquist, Root Nyquist, Off (default: Off)		
Roll-off rate setting	0.01 to 1 (settable for Nyquist and Root Nyquist)		
Filter frequency offset	Filter center frequency can be set within frequency band of waveform data		
Peak to Peak measurement	Measured using AM Depth or marker function		
	+Peak, -Peak, (P-P)/2, Average		
Burst average power	Measures average power of burst signal		
Frequency vs. Time Display F	unction		
Function overview	Displays frequency time fluctuations of input signal from captured waveform data		
Resolution time range			
Analysis Start Time	Sets analysis start time position from beginning of waveform data		
Analysis Time Length	Sets analysis time length		
Setting mode	Auto, Manual		
Operating level range	-17 to $+30$ dBm (input attenuator ≥ 10 dB)		
Frequency (vertical axis)			
	Center frequency and SPAN can be set within frequency range in waveform data		
Display frequency range	Selectable from 1/25, 1/10, 1/5 and 1/2 of analysis bandwidth		
Input frequency range	10 MHz to 6 GHz		
Indicator frequency accuracy			
At CW input	Input level = -17 to $+30$ dBm, SPAN ≤ 31.25 MHz, scale = SPAN/25, \pm (reference oscillator accuracy \times center frequency + indicator frequency range \times 0.01) Hz		
Peak to Peak measurement	Measured using FM Deviation or marker function		
	+Peak, -Peak, (P-P)/2, Average		
Phase vs Time Display Funct	ion		
Function overview	Displays the phase time fluctuation of the input signal in the acquired waveform data.		
Analysis Time Range			
Analysis Start Time	Sets analysis start time position from beginning of waveform data.		
Analysis Time Length	Sets analysis time span.		
Available Mode	Auto, Manual		
Phase (Vertical Axis)			
Display Mode	Wrap, Unwrap		
Phase Display Range	Settable between 0.01 deg./div to 200G deg./div.		
Offset	-100M to 100 M deg.		

Table 1.3.1-2 Specifications for signal analyzer function (Cont'd)

Item	Specification	
CCDF Display Function		
Function overview	Displays CCDF and APD of waveform data captured at specific time	
Analysis time range		
Analysis Start Time	Sets analysis start time position from beginning of waveform data	
Analysis Time Length	Sets analysis time length	
Setting mode	Auto, Manual	
Display Histogram resolution	Graphically displays CCDF and APD 0.01 dB	
Numerical value indicator	Average Power, Max Power, Crest Factor	
Resolution bandwidth		
Filter type	Rectangle, Off (default: Off)	
Filter frequency offset	Filter center frequency can be set within frequency band of waveform data	
Spectrogram Display Function	n	
Function overview	Displays Spectrogram in arbitrary time length within the captured waveform data	
Analysis time range		
Analysis Start Time	Sets analysis start time position from beginning of waveform data	
Analysis Time Length	Sets analysis time length	
Setting Mode	Auto, Manual	
Frequency		
	Center frequency and SPAN can be set within frequency range in waveform data	
Resolution Bandwidth(RBW)		
Setting Range	1 Hz to 1 MHz (1-3 Sequence)	
Selectivity	(-60 dB/-3 dB) 4.5:1, Nominal value	
Digitize Function		
Function overview	Capable of outputting captured waveform data to internal hard disk or external device	
Waveform data		
Format	I, Q (each 32 bit Float Binary format)	
Level	$\sqrt{(I^2 + Q^2)} = 1$ at 0 dBm input	
Level accuracy:	Same as absolute amplitude accuracy of signal analyzer	
External output	Capable of outputting to external PC through Ethernet	

Table 1.3.1-2 Specifications for signal analyzer function (Cont'd)

Item	Specification		
Replay Function			
Function overview	Analyzes traces of saved waveform data		
Waveform data format	I, Q (Binary form	nat)	
Conditions for measurable	Analyzable combinations of SPAN and sampling rate		
waveform data	SPAN	Sampling rate	
	1 kHz	2 kHz	
	$2.5~\mathrm{kHz}$	$5~\mathrm{kHz}$	
	5 kHz	10 kHz	
	10 kHz	20 kHz	
	$25~\mathrm{kHz}$	$50~\mathrm{kHz}$	
	50 kHz	100 kHz	
	$100 \mathrm{\ kHz}$	200 kHz	
	$250~\mathrm{kHz}$	$500~\mathrm{kHz}$	
	$500 \mathrm{\ kHz}$	1 MHz	
	1 MHz	2 MHz	
	$2.5~\mathrm{MHz}$	$5~\mathrm{MHz}$	
	5 MHz	10 MHz	
	$10~\mathrm{MHz}$	20 MHz	
	18.6 MHz	20 MHz	
	$20~\mathrm{MHz}$	25 MHz	
	$25~\mathrm{MHz}$	50 MHz	
	$31.25~\mathrm{MHz}$	50 MHz	
	50 MHz	100 MHz	
	$62.5~\mathrm{MHz}$	$100~\mathrm{MHz}$	
	100 MHz	200 MHz	
	125 MHz	200 MHz	

Table 1.3.1-2 Specifications for signal analyzer function (Cont'd)

Item	Specification		
Conditions for measurable	Combinations of SPAN and minimum capture sample		
waveform data	SPAN	Minimum Capture Sample	
	1 kHz	74000 (37 s)	
	$2.5~\mathrm{kHz}$	160000 (32 s)	
	5 kHz	310000 (31 s)	
	$10~\mathrm{kHz}$	610000 (30.5 s)	
	$25~\mathrm{kHz}$	730000 (14.6 s)	
	$50~\mathrm{kHz}$	730000 (7.3 s)	
	$100 \mathrm{\ kHz}$	730000 (3.65 s)	
	$250~\mathrm{kHz}$	730000 (1.46 s)	
	$500~\mathrm{kHz}$	730000 (730 ms)	
	1 MHz	730000 (365 ms)	
	$2.5~\mathrm{MHz}$	730000 (146 ms)	
	$5\mathrm{MHz}$	730000 (73 ms)	
	$10\mathrm{MHz}$	730000 (36.5 ms)	
	$18.6~\mathrm{MHz}$	730000 (36.5 ms)	
	$20\mathrm{MHz}$	730000 (29.2 ms)	
	$25\mathrm{MHz}$	730000 (14.6 ms)	
	$31.25~\mathrm{MHz}$	730000 (14.6 ms)	
	$50\mathrm{MHz}$	730000 (7.3 ms)	
	$62.5~\mathrm{MHz}$	730000 (7.3 ms)	
	100 MHz	730000 (3.65 ms)	
	$125~\mathrm{MHz}$	730000 (3.65 ms)	

Table 1.3.1-3 Specifications for spectrum analyzer function

Item	Specification		
	Opecinication		
Frequency			
Span	a H. and H. J. a CH. (MCagana)		
Range	0 Hz, 300 Hz to 6 GHz (MS2690A) 0 Hz, 300 Hz to 13.5 GHz (MS2691A)		
Resolution	2 Hz		
Span accuracy	±0.2%		
Indicator frequency	± [Indicator frequency × reference frequency accuracy + SPAN		
accuracy	frequency × SPAN accuracy + RBW × 0.05 + 2 × N + SPAN		
	frequency/(Trace point count -1)] Hz		
	N is Mixer harmonic order		
Resolution bandwidth			
(RBW)			
Setting range	30 Hz to 3 MHz (1-3 sequence),		
	50 kHz, 5 MHz, 10 MHz, 20 MHz, 31.25 MHz		
Colootivity	31.25 MHz can be set only when SPAN is 0 Hz. (-60 dB/-3 dB) 4.5:1 (Nominal value, when setting at 30 Hz to 10 MHz)		
Selectivity Video bandwidth (VBW)	(-60 db/-5 db/ 4.5·1 (Nominal value, when setting at 50 Hz to 10 MHz)		
Setting range	1 Hz to 10 MHz (1-3 sequence), 5 kHz, OFF		
VBW mode	Video Average/Power Average		
Amplitude	Video Average/Fower Average		
Display average noise level	Detector = Sample, VBW = 1 Hz (Video Average), Input Attenuator 0		
Display average hoise level	dB, 18 to 28°C		
	100 kHz —135 [dBm/Hz]		
	1 MHz —145 [dBm/Hz]		
	$30 \text{ MHz} \le \text{Frequency} < 2.4 \text{ GHz} -155 \text{ [dBm/Hz]}$		
	$2.4 \text{ GHz} \le \text{Frequency} < 3 \text{ GHz} \qquad -153 \text{ [dBm/Hz]}$		
	Frequency Band Mode: Normal 3 GHz ≤ Frequency < 4 GHz		
	$3 \text{ GHz} \le \text{Frequency} < 4 \text{ GHz}$ -153 [dBm/Hz] $4 \text{ GHz} \le \text{Frequency} < 5 \text{ GHz}$ -152 [dBm/Hz]		
	$5 \text{ GHz} \le \text{Frequency} < 6 \text{ GHz}$ -152 [dBm/Hz]		
	$6 \text{ GHz} \leq \text{Frequency} < 10 \text{ GHz}$ $-151 \text{ [dBm/Hz] (MS2691A)}$		
	$10~\mathrm{GHz} \leq \mathrm{Frequency} \leq 13.5~\mathrm{GHz} -150~\mathrm{[dBm/Hz]}~\mathrm{(MS2691A)}$		
Absolute amplitude accuracy	After CAL execution, 18 to 28°C, input attenuator ≥ 10 dB, mixer input		
	level \le 0 dBm, Auto Sweep Time Select = Normal, RBW \le 1 MHz,		
	Detection = Positive, CW, excluding the noise floor effect		
	$\pm 0.5 \text{ dB}$ (50 Hz \leq frequency \leq 6 GHz, Frequency Band Mode: Normal)		
	(50 Hz \le frequency < 3 GHz, Frequency Band Mode: Spurious)		
	After preselector tuning (MS2691A)		
	±1.8 dB		
	(6 GHz < frequency ≤ 13.5 GHz, Frequency Band Mode: Normal)		
	(3 GHz ≤ frequency ≤ 13.5 GHz, Frequency Band Mode: Spurious)		
	The absolute amplitude accuracy is calculated from an RSS (root		
	summed square) error of the RF frequency characteristics, linear error, and input attenuator switching error.		

Table 1.3.1-3 Specifications for spectrum analyzer function (Cont'd)

Item	Specification	
Spurious Response		
Two-tone third-order intermodulation distortion	Mixer input level = -15 dBm (per wave), ≥ 300 kHz separation, 18 to 28° C ≤ -60 dBc (TOI = $+15$ dBm) (30 MHz \leq frequency < 400 MHz) ≤ -66 dBc (TOI = $+18$ dBm) (400 MHz \leq frequency < 700 MHz) ≤ -74 dBc (TOI = $+22$ dBm) (700 MHz \leq frequency < 4 GHz, Frequency Band Mode: Normal) (700 MHz \leq frequency < 3 GHz, Frequency Band Mode: Spurious) ≤ -66 dBc (TOI = $+18$ dBm) (4 GHz \leq frequency ≤ 6 GHz, Frequency Band Mode: Normal) ≤ -45 dBc (TOI = $+7.5$ dBm) (6 GHz $<$ frequency ≤ 13.5 GHz, Frequency Band Mode: Normal)	
Image response	(3 GHz ≤ frequency ≤ 13.5 GHz, Frequency Band Mode: Spurious) ≤ -70 dBc	
Sweep		
Sweep mode	Single, Continuous	
Sweep time	Single, continuous	
Setting range	2 ms to 1000 s (SPAN \geq 300 Hz) 1 μs to 1000 s (SPAN = 0 Hz)	
Detection mode	Pos & Neg, Positive Peak, Sample, Negative Peak, RMS	
Data point count	When SPAN > 500 MHz: 1001 to 30001 When 100 MHz < SPAN \leq 500 MHz: 101 to 30001 When 300 Hz \leq SPAN \leq 100 MHz and Sweep Time > 10 s: 101 to 30001 When 300 Hz \leq SPAN \leq 100 MHz and Sweep Time \leq 10s: 11 to 30001 When Span = 0 Hz and Sweep Time > 10 s: 101 to 30001 When Span = 0 Hz and Sweep Time \leq 10 s: 11 to 30001 When Span = 0 Hz and Sweep Time \leq 10 s: 11 to 30001 Resolution: 1 point	
Scale		
Log indicator (10 div/12 div) Lin indicator (10 div)	20 to 0.1 dB/div, 1-2-5 sequence 1 to 10%/div, 1-2-5 sequence	
Trigger function Trigger mode	Free Run (Trig Off), Video, Wide IF, External (TTL) SG Marker (when Option 020/120 is installed) BBIF (when Option 040/140 is installed)	
Gate function Gate mode		

Table 1.3.1-3 Specifications for spectrum analyzer function (Cont'd)

Item	Specification	
Measurement function		
Adjacent channel leakage		
power (ACP)	Reference: Span Total, Carrier Total, Both Sides of Carriers, or Carrier Select	
	Adjacent channel specification: 3 channels \times 2 (Normal Mode) 8 channels \times 2 (Advanced Mode)	
Burst average	Indicates average power of specified time in the time domain mode	
Channel power		
Absolute value measurement	dBm, dBm/Hz	
Occupied bandwidth(OBW)	N% of Power method, X dB Down method	
Spectrum Emission Mask (SEM)	Peak/Margin measurement: Pass/fail judgment is performed by Peak/Margin measurement.	
Spurious Emission	Worst/Peaks measurement: Pass/fail judgment is performed by Worst/Peaks measurement.	
Two-tone third-order intermodulation distortion	IM3, TOI measurement from two-tone signal.	
Frequency counter	Center frequency =1 GHz, SPAN \leq 1 MHz, RBW = 1 kHz, S/N \geq 50 dB, Gate Time \geq 100 ms	
	\pm (Marker frequency \times Reference frequency Accuracy + (0.01/Gate Time[s])Hz)	

Table 1.3.1-4 Phase Noise Measurement Function Specification

Item Specification	
Frequency	
Carrier Frequency Range	10 MHz to 6 GHz (MS2690A) 10 MHz to 13.5 GHz (MS2691A)
Offset Frequency Range	
Marker Mode	Normal, Integral Noise, RMS Noise, Jitter, Residual FM, Off

1.3.2 Mainframe (MS2692A)

Tables 1.3.2-1 through 1.3.2-4 show the specifications for the MS2692A.

The following specification values are those under the conditions after 30-min warm-up at stable ambient temperature. Also, note that the Typ. values are provided as reference data, and are not guaranteed specifications. The specifications of the Signal Analyzer function are values at the center frequency if not specified.

Setting Frequency Band Mode to Spurious can be performed when installing the MS2691A-003/103.

Table 1.3.2-1 Specifications for mainframe

rable 1.3.2-1 Opecifications for maintaine			
item	Specification		
Frequency			
Frequency range	50 Hz to 26.5 GHz		
Frequency band		Band	Mixer harmonic order[N]
configuration	50 Hz to 6.0 GHz	0	1
	3 to 6.0 GHz	1–L	1
	When MS2692A-003/1	103 is installed	
	5.9 to 8.0 GHz	1–	1
	7.9 to 13.5 GHz	1+	1
	13.4 to 20.0 GHz	2–	2
	19.9 to 26.5 GHz	2+	2
Preselector range	Frequency Band Mode 5.9 to 26.5 GHz	e: Normal	
	Frequency Band Mode 3 to 26.5 GHz	e: Spurious	
Frequency settings			
Settable range	0 Hz to 26.5 GHz		
Resolution	1 Hz		
Internal reference oscillator			
Activation characteristics	Based on frequency 24 hours after power-on, at 23° C $\pm 5 \times 10^{-7}$ (2 minutes after power-on) $\pm 5 \times 10^{-8}$ (5 minutes after power-on)		
Aging rate	$\pm 1 \times 10^{-7}$ /year		
Temperature characteristics	$\pm 2 \times 10^{\times 8} \text{ (5 to } 45^{\circ}\text{C)}$		
	When Option 001/101	Rubidium Refe	rence Oscillator is installed
Activation characteristics	Based on frequency 24 hours after power-on, at 23° C $\pm 1 \times 10^{-9}$ (7 minutes after power-on)		
Aging rate	±1×10 ⁻¹⁰ /month		
Temperature characteristics	±1×10 ⁻⁹ (5 to 45°C)		
_	When Option 037/137	Rubidium Refe	erence Oscillator is installed
Activation characteristics	Based on frequency 24 hours after power-on, at 23°C ±1×10 ⁻⁹ (15 minutes after power-on)		
Aging rate	$\pm 1 \times 10^{-10}$ /month		
Temperature characteristics	±1×10 ⁻⁹ (5 to 45°C)		

Table 1.3.2-1 Specifications for mainframe (Cont'd)

Item	Specification		
Single side band noise	At 18 to 28°C, 2 GHz		
	(Frequency Offset)		
	100 kHz $-116 dBc/Hz$		
	1 MHz —137 dBc/Hz		
Amplitude			
Measurement range	Displays Average noise level up to +30 dBm		
Maximum input level			
Continuous wave average Power	+30 dBm (Input attenuator ≥ 10 dB)		
DC	0 Vdc		
Input attenuator	0 to 60 dB, 2 dB steps		
Input attenuator switching	Based on input attenuator 10 dB		
error	Frequency Band Mode: Normal		
	≤ 6 GHz: ±0.2 dB (10 to 60 dB)		
	> 6 GHz: ±0.75 dB (10 to 60 dB)		
	Frequency Band Mode: Spurious < 3 GHz: ±0.2 dB (10 to 60 dB)		
	$\geq 3 \text{ GHz}$: $\pm 0.75 \text{ dB}$ (10 to 60 dB)		
Reference Level			
Setting range	Log scale: -120 to +50 dBm or equivalent value (Signal Analyzer Mode)		
	–130 to +50 dBm or equivalent value (Spectrum Analyzer Mode)		
	Linear scale: 22.4 µV to 70.7 V or equivalent value (Signal Analyzer Mode)		
	70.7 nV to 70.7 V or equivalent value (Spectrum Analyzer Mode)		
	Resolution: 0.01 dB or equivalent level		
Units	Log scale: dBm, dBμV, dBmV, dBμV (emf), dBμV/m, V, W		
	Linear scale: V		
Linearity error	excluding the noise floor effect		
	$\pm 0.07 \text{ dB (Mixer input level} \leq -20 \text{ dBm)}$		
	$\pm 0.10 \text{ dB (Mixer input level} \leq -10 \text{ dBm)}$		
	Frequency Band Mode: Normal		
	$\pm 0.15 \text{ dB (Mixer input level} \le 0 \text{ dBm, frequency} \le 6 \text{ GHz)}$		
	±0.60 dB (Mixer input level ≤ 0 dBm, frequency > 6 GHz)		
	Frequency Band Mode: Spurious ±0.15 dB (Mixer input level ≤ 0 dBm, frequency < 3 GHz)		
	$\pm 0.60 \text{ dB}$ (Mixer input level $\leq 0 \text{ dBm}$, frequency $\leq 3 \text{ GHz}$)		

Table 1.3.2-1 Specifications for mainframe (Cont'd)

Item	Specification		
RF frequency	After CAL execution, input attenuator = 10 dB, at 18 to 28°C		
characteristics	±0.35 dB		
	(9 kHz ≤ frequency ≤ 6 GHz, Frequency Band mode: Normal)		
	(9 kHz ≤ frequency < 3 GHz, Frequency Band mode: Spurious)		
	After CAL execution, input attenuator = 10 dB, after preselector tuning, at 18 to 28°C, when MS2692A-067/167 is not installed or Microwave Preselector Bypass is Off: ±1.50 dB		
	(6 GHz < frequency \leq 13.5 GHz, Frequency Band mode: Normal) (3 GHz \leq frequency \leq 13.5 GHz, Frequency Band mode: Spurious) \pm 2.50 dB		
	$(13.5 \text{ GHz} < \text{frequency} \le 26.5 \text{ GHz})$		
1-dB gain compression	At mixer input level $\geq +3 \text{ dBm}$ (100 MHz \leq frequency $<$ 400 MHz) $\geq +7 \text{ dBm}$		
	(400 MHz ≤ frequency ≤ 6 GHz, Frequency Band mode: Normal) (400 MHz ≤ frequency < 3 GHz, Frequency Band mode: Spurious) ≥ +0 dBm		
	(3 GHz ≤ frequency ≤ 6 GHz, Frequency Band mode: Spurious) ≥ +0 dBm (6 GHz < frequency ≤ 26.5 GHz)		
Spurious Response	(o dilla (lloquone) = 2010 dilla)		
Second harmonic wave	At mixer input level = -30 dBm		
distortion	Harmonic wave [dBc] SHI [dBm]		
	≤ -60 ≥ +30		
	$(10 \text{ MHz} \leq \text{Input frequency} \leq 400 \text{ MHz})$		
	≤ -75 $\geq +45$		
	$(0.4 \text{ GHz} < \text{Input frequency} \le 0.8 \text{ GHz})$		
	≤ -75 $\geq +45$ (0.8 CHz \leq Input frequency ≤ 1 CHz)		
	$ (0.8 \text{ GHz} < \text{Input frequency} \le 1 \text{ GHz}) $ $ \le -75 $ $ \ge +45 $		
	$(1 \text{ GHz} < \text{Input frequency} \le 3 \text{ GHz})$		
	At mixer input level = -10 dBm, when MS2692A-067/167 is not installed		
	Harmonic wave [dBc] SHI [dBm] ≤ -90 $\geq +80$		
	(3 GHz < Input frequency, Frequency Band mode: Normal) ≤ -90 $\geq +80$		
	(1.5 GHz ≤ Input frequency, Frequency Band mode: Spurious) At mixer input level = -10 dBm, when MS2692A-067/167 is not installed or Microwave Preselector Bypass is Off: Harmonic wave [dBc] SHI [dBm]		
	$ \leq -70 $		
	$(3 \text{ GHz} < \text{Input frequency} \le 13.25 \text{ GHz})$		

Table 1.3.2-1 Specifications for mainframe (Cont'd)

Item	Specification
Residual response	Frequency \geq 1 MHz, at input attenuator = 0 dB (Excluding "bandwidth > 31.25 MHz" in Signal Analyzer.) \leq -100 dBm
Connector	
RF input Connector	Front panel, N-J, 50Ω VSWR: Input attenuator $\geq 10 \text{ dB}$, $18 \text{ to } 28^{\circ}\text{C}$ $\leq 1.2 \text{ (Nominal value)}$ (40 MHz \leq frequency $\leq 3 \text{ GHz}$) $\leq 1.5 \text{ (Nominal value)}$ (3 GHz $<$ frequency $\leq 6 \text{ GHz}$) $\leq 2.0 \text{ (Nominal value)}$ (6 GHz $<$ frequency $\leq 26.5 \text{ GHz}$)
IF Output	
Connector Frequency	Rear panel, BNC-J, 50 Ω (nominal value) 875 MHz (when not installing the Signal Analyzer and MS269xA-004/104/077/177/078/178 or setting bandwidth \leq 31.25 MHz) 900 MHz (when installing the Signal Analyzer and MS269xA-004/104/077/177/078/178 or setting bandwidth >31.25 MHz) 874.988 MHz (Spectrum Analyzer)
Gain	At the reference RF input level, 1 GHz RF frequency, and 0 dB input attenuator (nominal value) 0 dB (nominal value)
IF bandwidth	120 MHz (nominal value)
External reference input Connector Frequency Operating range	Rear panel, BNC-J, 50 Ω (nominal value) 10 MHz or 13 MHz ± 1 ppm
Input level	$-15 \text{ dBm} \le \text{level} \le +20 \text{ dBm}, 50 \Omega \text{ (AC coupling)}$
Reference signal output Connector Frequency Output level	Rear panel, BNC-J, 50 Ω (nominal value) 10 MHz ≥ 0 dBm (AC coupling)
Sweep status output	Y T P B
Connector Output level	Rear panel, BNC-J TTL level (high level at sweep or waveform acquisition)
Trigger input Connector Input level	Rear panel, BNC-J TTL level
External controls	Control from external controller (except power)
Ethernet (10/100/1000Base-T) Connector	Rear panel, RJ-45
GPIB Connector	IEEE488.2 compatible Rear panel, IEEE488 bus connector
Interface function	SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT0, C0, E2

Table 1.3.2-1 Specifications for mainframe (Cont'd)

Item	Specification
USB (B)	
Connector	USB2.0 compatible
	Rear panel, USB-B connector
USB	
Connector	Enables waveform hard copy to USB compatible external device and
	saving mainframe setting parameters
	USB 2.0 compatible USB-A connector (2 ports on front panel, 2 ports on rear panel)
Monitor output	CSB A connector (2 ports on front paner, 2 ports on rear paner)
Connector	Rear panel, VGA compatibility, mini D-SUB 15 pin
Connector	Rear panel, VGA companionity, mini D SOB 15 pm
Aux	
Connector	Used for trigger input/output from/to Option 020/120, etc.
	Rear panel, 68 pins (DX10BM-68S equivalent part)
Screen	XGA color LCD (resolution: 1024×768) 8.4 inch (213 mm diagonal)
Overall Chasifications	8.4 men (213 mm diagonal)
Overall Specifications Size, Weight	
Size, weight Size	$340 \text{ mm (w)} \times 200 \text{ mm (h)} \times 350 \text{ mm (d) (excluding protrusions)}$
Weight	$\leq 13.5 \text{ kg (excluding options)}$
Power	\$ 15.5 kg (excluding options)
Voltage	Rated Voltage: AC 100 to 120 V or 200 to 240 V
Frequency	50 Hz to 60 Hz
Power consumption	≤ 260 VA (excluding options)
1 0 11 0 11 0 0 11 0 11 11 11 11 11 11 1	≤ 440 VA (including all options, maximum value)
Temperature	
Operating temperature	5 to 45°C
Storage temperature	−20 to 60°C
Environment Performance	
Conducted disturbance	EN 61326-1 (Class A)
Electromagnetic radiated	EN 61326-1 (Class A)
disturbance	
Harmonic current emission	EN 61000-3-2 (Class A equipment)
Electrostatic discharge	EN 61326-1 (Table 2)
Electromagnetic field immunity	EN 61326-1 (Table 2)
Fast transient/burst	EN 61326-1 (Table 2)
Surge	EN 61326-1 (Table 2)
Conducted RF	EN 61326-1 (Table 2)
Power frequency magnetic	EN 61326 1 (Table 2) EN 61326-1 (Table 2)
field	111 01020 1 (1abic 2)
Voltage dips/short	EN 61326-1 (Table 2)
interruption	

Also refer to Table 1.3.4-1 "Specifications for Wideband Analysis Hardware Options" when MS269xA-004/104 is installed.

Table 1.3.2-2 Specifications for signal analyzer function

Item	Specification
Common	
Trace mode	Spectrum, Power vs Time, Frequency vs Time, CCDF, Spectrogram, No Trace
Bandwidth Range	Specifies the capture analysis bandwidth from the center frequency 1 kHz to 25 MHz (1-2.5-5 sequence), 31.25 MHz
Sampling rate Range	Automatically set depending on analysis bandwidth 2 kHz to 50 MHz (1-2-5 sequence)
Capture time length	Sets the capture time length Minimum capture time length: $2~\mu s$ to $50~m s$ (determined depending on analysis bandwidth) Maximum capture time length: $2~to~2000~s$ (determined depending on analysis bandwidth)
Setting mode	Auto, Manual
Trigger Trigger mode	Free Run (Trig Off), Video, Wide IF Video, External (TTL) SG Marker (when Option 020/120 is installed) BBIF (when Option 040/140 is installed)
ADC resolution	16bits (when not installing the Signal Analyzer and MS269xA-004/104/077/177/078/178 or setting bandwidth ≤ 31.25 MHz)
Spectrum indicator function	
Function overview	Displays spectrums within random time spans and frequency ranges in captured waveform data.
Analysis time range Analysis Start Time Analysis Time Length Setting mode	Sets analysis start time position from beginning of waveform data Sets analysis time length Auto, Manual
Frequency	Center frequency and SPAN can be set within the frequency range in waveform data
Indicator frequency accuracy	\pm [Indicator frequency \times reference frequency accuracy + SPAN frequency \times reference frequency accuracy + RBW \times 0.05 + 2 \times N + SPAN frequency / (Trace point count – 1)] Hz N:Mixer harmonic order
Resolution bandwidth (RBW)	Availage marmonic order
Setting range Selectivity	1 Hz to 1 MHz (1-3 sequence) (-60 dB/-3 dB) 4.5:1, nominal value

Table 1.3.2-2 Specifications for signal analyzer function (Cont'd)

Item	Specification
	After CAL execution, 18 to 28°C, input attenuator ≥ 10 dB, mixer input
Absolute amplitude accuracy	level \leq 0 dBm, RBW = Auto, Time Detection = Average, Marker Result
accuracy	= Integration or Peak(Accuracy), center frequency CW, excluding the
	noise floor effect
	±0.5 dB
	(50 Hz ≤ frequency ≤ 6 GHz, Frequency Band Mode: Normal)
	(50 Hz ≤ frequency < 3 GHz, Frequency Band Mode: Spurious)
	After Preselector tuning
	±1.8 dB
	(6 GHz < frequency ≤ 13.5 GHz, Frequency Band Mode:
	Normal)
	(3 GHz ≤ frequency ≤ 13.5 GHz, Frequency Band Mode:
	Spurious)
	±3.0 dB
	$(13.5 \text{ GHz} < \text{frequency} \le 26.5 \text{ GHz})$
	The absolute amplitude accuracy is calculated from an RSS (root
	summed square) error of the RF frequency characteristics, linear error
T 1 1 0	and input attenuator switching error.
In-band frequency characteristics	On the basis of a level of the center frequency, in center frequency ± 10
characteristics	MHz, when MS269xA-004/104/077/177/078/178 is not installed or the bandwidth is ≤ 31.25 MHz:
	±0.31 dB
	(30 MHz ≤ frequency ≤ 6 GHz, Frequency Band Mode: Normal)
	(30 MHz \leq frequency \leq 3 GHz, Frequency Band Mode: Spurious)
Disulan assumant units lavel	Input attenuator 0 dB, at 18 to 28°C,
Display average noise level	6 GHz \leq frequency \leq 26.5 GHz when MS2692A-067/167 is not installed
	100 kHz -132.5 [dBm/Hz]
	1 MHz -142.5 [dBm/Hz]
	$30 \text{ MHz} \le \text{frequency} < 2.4 \text{ GHz} -152.5 \text{ [dBm/Hz]}$
	$2.4 \text{ GHz} \le \text{frequency} < 3 \text{ GHz}$ -150.5 [dBm/Hz]
	Frequency Band Mode: Normal
	$3 \text{ GHz} \le \text{frequency} < 4 \text{ GHz}$ -150.5 [dBm/Hz]
	$4 \text{ GHz} \le \text{frequency} < 5 \text{ GHz}$ -149.5 [dBm/Hz]
	5 GHz \le frequency < 6 GHz -149.5 [dBm/Hz]
	6 GHz ≤ frequency < 10 GHz
	$10~\mathrm{GHz} \leq \mathrm{frequency} \leq 13.5~\mathrm{GHz} -147.5~\mathrm{[dBm/Hz]}$ $13.5~\mathrm{GHz} \leq \mathrm{frequency} \leq 20~\mathrm{GHz} -144.5~\mathrm{[dBm/Hz]}$
	$15.5 \text{ GHz} \le \text{frequency} \le 20 \text{ GHz} -144.5 \text{ [dBm/Hz]}$ $20 \text{ GHz} \le \text{frequency} \le 26.5 \text{ GHz} -140.5 \text{ [dBm/Hz]}$
Adjacent channel power	20 GII I HOQUOIO I 20.0 GIII I I I I I I I I I I I I I I I I I
(ACP) leakage	Reference: Span Total, Carrier Total, Both Sides of Carriers, or Carrier
Tion / Touringe	Select
	Adjacent channel specification: 3 channels × 2
Channel power	
Absolute value	dBm, dBm/Hz
measurement	
Occupied bandwidth (OBW)	N% of Power method, X dB Down method
Occupied balluwidili (ODW)	11/0 Of 1 Ower method, A up bown method

Table 1.3.2-2 Specifications for signal analyzer function (Cont'd)

Item	Specification
Power vs Time Display Funct	ion
Function overview	Indicates time changes of power for captured waveform data
Analysis time range	
Analysis Start Time	Sets analysis start time position from beginning of waveform data
Analysis Time Length	Sets analysis time length
Setting mode	Auto, Manual
Resolution bandwidth	
Filter type	Rect, Gaussian, Nyquist, Root Nyquist, Off (default: Off)
Roll-off rate setting	0.01 to 1 (settable for Nyquist and Root Nyquist)
Filter frequency offset	Filter center frequency can be set within frequency band of waveform data
Peak to Peak measurement	Measured using AM Depth or marker function
	+Peak, -Peak, (P-P)/2, Average
Burst average power	Measures average power of burst signal
Frequency vs. Time Display I	Function Control of the Control of t
Function overview	Displays frequency time fluctuations of input signal from captured waveform data
Resolution time range	
Analysis Start Time	Sets analysis start time position from beginning of waveform data
Analysis Time Length	Sets analysis time length
Setting mode	Auto, Manual
Operating level range	-17 to +30 dBm (input attenuator ≥ 10 dB)
Frequency (vertical axis)	
	Center frequency and SPAN can be set within frequency range in waveform data
Display frequency range	Selectable from 1/25, 1/10, 1/5, and 1/2 of analysis bandwidth
Input frequency range	10 MHz to 6 GHz
Indicator frequency accuracy	
At CW input	Input level = -17 to $+30$ dBm, SPAN ≤ 31.25 MHz, scale = SPAN/25, \pm (reference oscillator accuracy \times center frequency + indicator frequency range \times 0.01) Hz
Peak to Peak measurement	Measured using FM Deviation or marker function
	+Peak, -Peak, (P-P)/2, Average

Table 1.3.2-2 Specifications for signal analyzer function (Cont'd)

Item	Specification	
CCDF Display Function		
Function overview	Displays CCDF and APD of waveform data captured at specific time	
Analysis time range		
Analysis Start Time	Sets analysis start time position from beginning of waveform data	
Analysis Time Length	Sets analysis time length	
Setting mode	Auto, Manual	
Display		
Histogram resolution	Graphically displays CCDF and APD 0.01 dB	
Numerical value indicator	Average Power, Max Power, Crest Factor	
Resolution bandwidth		
Filter type	Rectangle, Off (default: Off)	
Filter frequency offset	Filter center frequency can be set within frequency band of waveform data	
Spectrogram Display Function		
Function Overview	Displays Spectrogram in arbitrary time length within the captured waveform data	
Analysis Time Range		
Analysis Start Time	Sets analysis start time position from beginning of waveform data	
Analysis Time Length	Sets analysis time length	
Setting Mode	Auto,Manual	
Frequency		
	Center frequency and SPAN can be set within frequency range in waveform data	
Resolution Bandwidth(RBW)		
Setting Range	1 Hz to 1 MHz (1-3 Sequence)	
Selectivity	(–60 dB/–3 dB) 4.5:1, Nominal value	
Digitize Function		
Function overview	Capable of outputting captured waveform data to internal hard disk or external device	
Waveform data		
Format		
Level	$\sqrt{(I^2 + Q^2)} = 1$ at 0 dBm input	
Level accuracy:	Same as absolute amplitude accuracy of signal analyzer	
External output	Capable of outputting to external PC through Ethernet	

Table 1.3.2-2 Specifications for signal analyzer function (Cont'd)

Item		Specification
Replay Function		
Function Overview	Analyzes traces	of saved waveform data
Waveform Data Format	I, Q (Binary for	mat)
Conditions for measurable	Analyzable com	binations of SPAN and sampling rate
waveform data	SPAN	Sampling rate
	1 kHz	2 kHz
	$2.5~\mathrm{kHz}$	5 kHz
	$5~\mathrm{kHz}$	10 kHz
	10 kHz	20 kHz
	$25~\mathrm{kHz}$	$50~\mathrm{kHz}$
	$50~\mathrm{kHz}$	100 kHz
	$100~\mathrm{kHz}$	200 kHz
	$250~\mathrm{kHz}$	$500~\mathrm{kHz}$
	$500~\mathrm{kHz}$	1 MHz
	1 MHz	2 MHz
	$2.5~\mathrm{MHz}$	$5~\mathrm{MHz}$
	$5\mathrm{MHz}$	10 MHz
	$10~\mathrm{MHz}$	$20~\mathrm{MHz}$
	18.6 MHz	20 MHz
	$20~\mathrm{MHz}$	$25~\mathrm{MHz}$
	$25~\mathrm{MHz}$	50 MHz
	$31.25~\mathrm{MHz}$	$50~\mathrm{MHz}$
	$50~\mathrm{MHz}$	100 MHz
	$62.5~\mathrm{MHz}$	100 MHz
	100 MHz	200 MHz
	$125~\mathrm{MHz}$	200 MHz

Table 1.3.2-2 Specifications for signal analyzer function (Cont'd)

Item	Specification	
Conditions for measurable	Combinations or	f SPAN and minimum capture sample
waveform data	SPAN	Minimum Capture Sample
	1 kHz	74000 (37 s)
	$2.5~\mathrm{kHz}$	160000 (32 s)
	5 kHz	310000 (31 s)
	$10~\mathrm{kHz}$	610000 (30.5 s)
	$25~\mathrm{kHz}$	730000 (14.6 s)
	$50~\mathrm{kHz}$	730000 (7.3 s)
	$100~\mathrm{kHz}$	730000 (3.65 s)
	$250~\mathrm{kHz}$	730000 (1.46 s)
	$500~\mathrm{kHz}$	730000 (730 ms)
	1 MHz	730000 (365 ms)
	$2.5~\mathrm{MHz}$	730000 (146 ms)
	$5\mathrm{MHz}$	730000 (73 ms)
	$10\mathrm{MHz}$	730000 (36.5 ms)
	18.6 MHz	730000 (36.5 ms)
	$20\mathrm{MHz}$	730000 (29.2 ms)
	$25\mathrm{MHz}$	730000 (14.6 ms)
	$31.25~\mathrm{MHz}$	730000 (14.6 ms)
	$50~\mathrm{MHz}$	730000 (7.3 ms)
	$62.5~\mathrm{MHz}$	730000 (7.3 ms)
	100 MHz	730000 (3.65 ms)
	$125~\mathrm{MHz}$	730000 (3.65 ms)

Table 1.3.2-3 Specifications for spectrum analyzer function

Item	Specification		
Frequency			
Span			
Range	0 Hz, 300 Hz to 26.5 GHz		
Resolution	2 Hz		
Span accuracy	$\pm 0.2\%$		
Indicator frequency accuracy	\pm [Indicator frequency \times reference frequency accuracy + SPAN frequency \times SPAN accuracy + RBW \times 0.05 + 2 \times N + SPAN frequency/(Trace point count $-$ 1)] Hz N is Mixer harmonic order		
Resolution bandwidth (RBW)			
Setting range	30 Hz to 3 MHz (1-3 sequence), 50 kHz, 5 MHz, 10 MHz, 20 MHz, 31.25 MHz 31.25 MHz can be set when SPAN is 0 Hz.		
Selectivity	(-60 dB/-3 dB) 4.5:1 (nominal value, at 30 Hz to 10 MHz)		
Video bandwidth (VBW)	(00 dB/ 5 dB/ 4.5°1 (hollillar value, at 50 Hz to 10 MHz)		
Setting range	1 Hz to 10 MHz (1-3 sequence), 5 kHz, OFF		
VBW mode	Video Average/Power Average		
Amplitude			
Display average noise level	$\begin{array}{llllllllllllllllllllllllllllllllllll$		

Table 1.3.2-3 Specifications for spectrum analyzer function (Cont'd)

	Specifications for spectrum analyzer function (Cont d)
ltem	Specification
Absolute amplitude accuracy	After CAL execution, 18 to 28°C, input attenuator ≥ 10 dB, mixer input level ≤ 0 dBm, Auto Sweep Time Select = Normal, RBW ≤ 1 MHz, Detection = Positive, CW, excluding the noise floor effect
	±0.5 dB (50 Hz ≤ frequency ≤ 6 GHz, Frequency Band Mode: Normal) (50 Hz ≤ frequency < 3 GHz, Frequency Band Mode: Spurious)
	After preselector tuning (MS2691A) ±1.8 dB
	(6 GHz < frequency ≤ 13.5 GHz, Frequency Band Mode: Normal) (3 GHz ≤ frequency ≤ 13.5 GHz, Frequency Band Mode: Spurious)
	±3.0 dB
	$(13.5 \text{ GHz} < \text{frequency} \le 26.5 \text{ GHz})$
	The absolute amplitude accuracy is calculated from an RSS (root summed square) error of the RF frequency characteristics, linear error and input attenuator switching error.
Spurious Response	
Two-tone third-order inter	Mixer input level = −15 dBm (per wave), ≥ 300 kHz separation,
modulation distortion	18 to 28°C
	With MS2692A-067/167 and Microwave Preselector Bypass turned off
	$\leq -60 \text{ dBc (TOI} = +15 \text{ dBm)}$
	$(30 \text{ MHz} \le \text{frequency} < 400 \text{ MHz})$
	\leq -66 dBc (TOI = +18 dBm) (400 MHz \leq frequency $<$ 700 MHz)
	$\langle 400 \text{ MHz} \rangle \text{ irequency} \langle 700 \text{ MHz} \rangle$ $\leq -74 \text{ dBc (TOI} = +22 \text{ dBm)}$
	$\leq -74 \text{ dBC (101} + 22 \text{ dBm)}$ (700 MHz \leq frequency $< 4 \text{ GHz}$, Frequency Band Mode: Normal)
	(700 MHz ≤ frequency < 3 GHz, Frequency Band Mode: Spurious)
	≤ -66 dBc (TOI = +18 dBm)
	(4 GHz ≤ frequency ≤ 6 GHz, Frequency Band Mode: Normal)
	$\leq -45 \text{ dBc (TOI} = +7.5 \text{ dBm)}$
	(6 GHz < frequency ≤ 26.5 GHz, Frequency Band Mode: Normal)
	(3 GHz ≤ frequency ≤ 26.5 GHz, Frequency Band Mode: Spurious)
Image response	Without MS2692A-067/167:
	$\leq -70 \text{ dBc (frequency} \leq 13.5 \text{ GHz)}$
	\leq -65 dBc (13.5 GHz < frequency \leq 26.5 GHz)
	When MS2692A-067/167 is not installed, refer to Table 1.3.7-1.
Sweep	
Sweep mode	Single, Continuous
Sweep time	
Setting range	2 ms to 1000 s (SPAN \geq 300 Hz)
	$1 \mu s \text{ to } 1000 \text{ s (SPAN = 0 Hz)}$
Detection mode	Pos&Neg, Positive Peak, Sample, Negative Peak, RMS

Table 1.3.2-3 Specifications for spectrum analyzer function (Cont'd)

Item	Specification
Data point count	When SPAN > 500 MHz:
	1001 to 30001
	When 100 MHz < SPAN ≤ 500 MHz:
	101 to 30001
	When 300 Hz \leq SPAN \leq 100 MHz and Sweep Time > 10 s: 101 to 30001
	When 300 Hz \leq SPAN \leq 100 MHz and Sweep Time \leq 10 s: 11 to 30001
	When Span = 0 Hz and Sweep Time > 10 s: 101 to 30001
	When Span = 0 Hz and Sweep Time ≤ 10 s: 11 to 30001
	Resolution: 1 point
Scale	-
Log indicator (10 div/12 div)	20 to 0.1 dB/div, 1-2-5 sequence
Lin indicator (10 div)	1 to 10%/div, 1-2-5 sequence
Trigger function	
Trigger mode	Free Run (Trig Off), Video, Wide IF, External (TTL)
	SG Marker (when Option 020/120 is installed)
Gate function	BBIF (when Option 040/140 is installed)
Gate function Gate mode	Off, Wide IF, External,
Gate mode	SG Marker (when Option 020/120 is installed)
	BBIF (when Option 040/140 is installed)
Measurement function	
Adjacent channel leakage	
power (ACP)	Reference: Span Total, Carrier Total, Both Sides of Carriers, or Carrier Select
	Adjacent channel specification: 3 channels \times 2 (Normal Mode)
	$8 ext{ channels} imes 2 ext{ (Advanced Mode)}$
Burst average	Indicates average power of specified time in the time domain mode
Channel power	
Absolute value measurement	dBm, dBm/Hz
Occupied bandwidth(OBW)	N% of Power method, X dB Down method
Spectrum Emission Mask (SEM)	Peak/Margin measurement: Pass/fail judgment is performed by Peak/Margin measurement.
Spurious Emission	Worst/Peaks measurement: Pass/fail judgment is performed by Worst/Peaks measurement.
Two-tone third-order intermodulation distortion	IM3, TOI measurement from two-tone signal.
Frequency counter	Center frequency = 1 GHz, SPAN \leq 1 MHz, RBW = 1 kHz, S/N \geq 50 dB, Gate Time \geq 100 ms
rrequency counter	\pm (Marker frequency \times Reference frequency Accuracy + (0.01/Gate Time[s])Hz)

Table 1.3.2-4 Phase Noise Measurement Function Specification

Item	Specification
Frequency	
Carrier Frequency Range	10 MHz to 26.5 GHz
Offset Frequency Range	10 Hz to 10 MHz
Marker Mode	Normal, Integral Noise, RMS Noise, Jitter, Residual FM, Off

1.3.3 Pre-amp option (MS269xA-008/108)

Table 1.3.3-1 shows the specifications for the Pre-amp option.

The following specification values are those under the conditions after 30-min. warm-up at stable ambient temperature. Also note that the Typ. values are provided as reference data, and are not guaranteed specifications.

Table 1.3.3-1 Specifications for Pre-amp option

Item	Specification		
Frequency			
Frequency range	100 kHz to 6 GHz		
Amplitude			
Measurement range	Display average noise level at least +10 dBm		
Maximum input level	+10 dBm (When the input attenuator is 0 dB)		
Gain	$14 \text{ dB} (\le 3 \text{ GHz})$ $13 \text{ dB} (3 \text{ GHz} < \text{frequency} \le 4 \text{ GHz})$		
	11 dB $(4 \text{ GHz} < \text{frequency} \le 5 \text{ GHz})$ 10 dB $(5 \text{ GHz} < \text{frequency} \le 6 \text{ GHz})$		
Noise index	7 dB (≤ 3 GHz)		
	8.5 dB (3 GHz < frequency \leq 4 GHz)		
	9.5 dB (4 GHz < frequency $\leq 6 \text{ GHz}$)		
Amplitude			
Display average noise level	Input attenuator 0 dB, at 18 to 28°C (When Pre-amp is ON)		
(signal analyzer function)	100 kHz		
	-186.5[dBm/Hz] 30 MHz \leq frequency < 2.4 GHz $-163.5[dBm/Hz]$		
	$2.4 \text{ GHz} \leq \text{frequency} < 2.4 \text{ GHz} \qquad 150.5 \text{[dBm/Hz]}$ $2.4 \text{ GHz} \leq \text{frequency} < 3 \text{ GHz} \qquad -162.5 \text{[dBm/Hz]}$		
	Frequency Band Mode: Normal		
	$3 \text{ GHz} \le \text{frequency} < 4 \text{ GHz}$ -161.5[dBm/Hz]		
	$4 \text{ GHz} \le \text{frequency} < 5 \text{ GHz}$ $-158.5[\text{dBm/Hz}]$		
	$5 \text{ GHz} \le \text{frequency} \le 6 \text{ GHz}$ $-156.5[\text{dBm/Hz}]$		
	Pre-amp input level is calculated by the following formula. Pre-amp input level = RF input level – input attenuator setting value		
	When the Pre-amp option is installed and pre-amp is OFF, the items of the display average noise level shown in Tables 1.3.1-2 and 1.3.2-2 will change to the following values.		
Input attenuator 0 dB, at 18 to 28°C			
	100 kHz —132.5[dBm/Hz]		
	1 MHz —142.5[dBm/Hz]		
	30 MHz ≤ frequency < 2.4 GHz		
	2.4 GHz ≤ frequency < 3 GHz -149.5[dBm/Hz]		
	Frequency Band Mode: Normal 3 GHz ≤ frequency < 4 GHz —148.5[dBm/Hz]		
	$4 \text{ GHz} \le \text{frequency} < 4 \text{ GHz}$ -146.5[dBm/Hz] $4 \text{ GHz} \le \text{frequency} < 5 \text{ GHz}$ -147.5[dBm/Hz]		
	$5 \text{ GHz} \le \text{frequency} < 6 \text{ GHz}$ -146.5[dBm/Hz]		

Table 1.3.3-1 Specifications for Pre-amp option (Cont'd)

Item	Specification	
Amplitude		
Display average noise level (spectrum analyzer function)	Detector = Sample, VBW = 1 Hz (VdB, at 18 to 28°C (When Pre-amp in 100 kHz) 1 MHz 30 MHz ≤ frequency < 2.4 GHz 2.4 GHz ≤ frequency < 3 GHz	
	Frequency Band Mode: Normal $3 \text{ GHz} \leq \text{frequency} < 4 \text{ GHz}$ $4 \text{ GHz} \leq \text{frequency} < 5 \text{ GHz}$ $5 \text{ GHz} \leq \text{frequency} \leq 6 \text{ GHz}$	–164[dBm/Hz] –161[dBm/Hz] –159[dBm/Hz]
	Pre-amp input level is calculated by the following formula. Pre-amp input level = RF input level -input attenuator setting value	
	When the Pre-amp option is installed and pre-amp is OFF, the items of the display average noise level shown in Tables 1.3.1-3 and 1.3.2-3 will change to the following values.	
	Detector = Sample, VBW = 1 Hz (VdB, at 18 to 28°C	Video Average), input attenuator 0
	100 kHz 1 MHz 30 MHz \leq frequency \leq 2.4 GHz 2.4 GHz \leq frequency \leq 3 GHz	–135[dBm/Hz] –145[dBm/Hz] –153[dBm/Hz] –152[dBm/Hz]
	Frequency Band Mode: Normal 3 GHz ≤ frequency < 4 GHz 4 GHz ≤ frequency < 5 GHz 5 GHz ≤ frequency < 6 GHz	–151[dBm/Hz] –150[dBm/Hz] –149[dBm/Hz]

Table 1.3.3-1 Specifications for Pre-amp option (Cont'd)

Item	Specification		
Amplitude			
RF frequency characteristics	After CAL execution, input attenuator = 10 dB, at 18 to 28°C ± 0.65 dB		
		GHz, Frequency Band Mode: Normal) GHz, Frequency Band Mode: Spurious)	
Input attenuator switching error	Frequency Band Mode: No. ≤ 6 GHz: ±0.65 dB (10 to		
Linearity error	Excluding the noise floor effect $ \pm 0.07 \text{ dB (Pre-amp input level} \leq -40 \text{ dBm)} $ $ \pm 0.10 \text{ dB (Pre-amp input level} \leq -30 \text{ dBm)} $ Frequency Band Mode: Normal $ \pm 0.50 \text{ dB (Pre-amp input level} \leq -20 \text{ dBm, frequency} \leq 6 \text{ GHz)} $		
Second harmonic wave	At pre-amp input level-45	dBm	
distortion	Harmonic wave [dBc]	SHI[dBm]	
	≤ -50	≥ +5	
		$(10 \text{ Hz} \le \text{Input frequency} \le 400 \text{ MHz})$	
	≤ -55	≥+10	
		$(0.4 \text{ GHz} < \text{Input frequency} \le 0.8 \text{ GHz})$	
	≤ -55	≥ +10	
		$(0.8 \text{ GHz} < \text{Input frequency} \le 1 \text{ GHz})$	
	≤ -55	≥ +10	
		$(1 \text{ GHz} < \text{Input frequency} \le 3 \text{ GHz})$	
1-dB gain compression	At pre-amp input level ≥ -20 dBm (100 MHz ≤ frequency < 400 MHz) ≥ -15 dBm (400 MHz ≤ frequency ≤ 6 GHz, Frequency Band Mode: Normal) (400 MHz ≤ frequency < 3 GHz, Frequency Band Mode: Spurious)		
Two-tone third-order intermodulation distortion	Pre-amp input level = -45 dBm(per 1 wave), ≥ 300 kHz separation, at 18 to 28° C ≤ -73 dBc (TOI = -8.5 dBm) (30 MHz \leq frequency < 400 MHz) ≤ -78 dBc (TOI = -6 dBm) (400 MHz \leq frequency < 700 MHz) ≤ -81 dBc (TOI = -4.5 dBm) (400 MHz \leq frequency < 4 GHz, Frequency Band Mode: Normal) (400 MHz \leq frequency < 3 GHz, Frequency Band Mode: Spurious) ≤ -78 dBc (TOI = -6 dBm) (4 GHz \leq frequency ≤ 6 GHz, Frequency Band Mode: Normal)		

1.3.4 Wideband Analysis Hardware Options (MS269xA-004/104)

Table 1.3.4-1 shows the specifications for the wideband analysis hardware options.

The following specification values are those under the conditions after 30-min warm-up at stable ambient temperature. Also, note that the Typ. values are provided as reference data, and are not guaranteed specifications.

Table 1.3.4-1 Specifications for Wideband Analysis Hardware Options

Item	Specification		
Function			
Bandwidth			
Range	The following bandwidth is set in addition to the standard capture analysis bandwidth. 50 MHz, 100 MHz, 125 MHz		
Sampling rate			
Range	Automatically set depending on analysis bandwidth 100 MHz, 200 MHz		
Capture Time			
Capture Time Length	Sets the capture time length		
	Minimum capture time length:	500 ns to 1 μs (determined depending on analysis bandwidth)	
	Maximum capture time length:	500 ms	
Resolution bandwidth (RBW)			
Setting range	3 kHz to 10 MHz (1-3 sequence)		
Selectivity (-60 dB/-3 dB) 4.5:1, nominal value		lue	
ADC resolution	n 12 bits		
Frequency			
Frequency range	100 MHz to 6 GHz		

Table 1.3.4-1 Specifications for Wideband Analysis Hardware Options (Cont'd)

Item	Specification		
Amplitude			
Display average noise level	At input attenuator 0 dB, 18 to 28°C (When MS269xA-008/108 is not installed o 100 MHz ≤ frequency < 2.4 GHz 2.4 GHz ≤ frequency < 4 GHz 4 GHz ≤ frequency < 6 GHz (Frequency Band Mode: Normal)	r Pre-amp is OFF) -143[dBm/Hz] -141[dBm/Hz] -139[dBm/Hz]	
	At input attenuator 0 dB, 18 to 28°C (When MS269xA-008/108 is installed and I 100 MHz ≤ frequency < 2.4 GHz 2.4 GHz ≤ frequency < 4 GHz 4 GHz ≤ frequency < 6 GHz (Frequency Band Mode: Normal)	Pre-amp is ON) -156[dBm/Hz] -154[dBm/Hz] -150[dBm/Hz]	
Absolute amplitude accuracy	After CAL execution, 18 to 28°C, input atter level ≤ 0 dBm, RBW = Auto, Time Detection = Integration or Peak(Accuracy), center free (When MS269xA-008/108 is not installed of Except noise floor effect ±0.5 dB (100 MHz ≤ frequency ≤ 6 GHz, Frequent The absolute amplitude accuracy is calculated summed square) error of the RF frequency and input attenuator switching error.	n = Average, Marker Result equency CW, r Pre-amp is OFF) cy Band Mode: Normal) ated from an RSS (root	
Linearity error	Except noise floor effect (When MS269xA-008/108 is not installed or Pre-amp is OFF) $ \begin{array}{l} \pm 0.07 \; dB (\text{mixer input level} \leq -20 \; dBm) \\ \pm 0.10 \; dB (\text{mixer input level} \leq -10 \; dBm) \\ \pm 0.30 \; dB (\text{mixer input level} \leq 0 \; dBm) \\ \text{(Frequency Band Mode: Normal)} \\ \text{Except noise floor effect} \\ \text{(When MS269xA-008/108 is installed and Pre-amp is ON)} \\ \pm 0.07 \; dB \; (\text{mixer input level} \leq -40 \; dBm) \\ \pm 0.10 \; dB \; (\text{mixer input level} \leq -30 \; dBm) \\ \pm 0.50 \; dB \; (\text{mixer input level} \leq -20 \; dBm) \\ \end{array} $		
RF frequency characteristics	(Frequency Band Mode: Normal) After CAL execution, input attenuator = 10 dB, at 18 to 28°C (When MS269xA-008/108 is not installed or Pre-amp is OFF) ±0.35 dB (100 MHz ≤ frequency ≤ 6 GHz, Frequency Band Mode: Normal) After CAL execution, input attenuator = 10 dB, at 18 to 28°C (When MS269xA-008/108 is installed and Pre-amp is ON) ±0.65 dB (100 MHz ≤ frequency ≤ 6 GHz, Frequency Band Mode: Normal)		

1.3.5 Baseband Interface Unit option (MS269xA-040/140)

The Baseband Interface Unit option is not supported by the software package of Ver.6.00.00 or later.

1.3.6 HDD Digitizing Interface Option (MS269xA-050/150)

Table 1.3.6-1 lists the specifications for the HDD Digitizing Interface Option is installed.

Table 1.3.6-1 HDD Digitizing Interface Option Specifications

Item	Specification
Feature/Performance	
Interface	
	External Serial ATA connector
Data Rate	
Hot Plugging	Non compliant (When connecting or disconnecting a connector, make sure to turn off the power of the MS2690A/MS2691A/MS2692A and external HDD.)

1.3.7 Microwave Preselector Bypass Option (MS2692A-067/167)

Table 1.3.7-1 lists the specifications for the Microwave Preselector Bypass Option is installed.

Table 1.3.7-1 Microwave Preselector Bypass Option Specifications

Item	Specification	
Amplitude	1	
Functional Outline	Bypasses the preselector to improve the RF frequency characteristics and the in-band frequency characteristics.	
	By bypassing the image response elimination filter, the image response cannot be excluded. So, the spurious measurement is not supported.	
	Cannot install simultaneously with MS2692A-003/103/008/108.	
Frequency		
Frequency range	6 GHz to 26.5 GHz	
Amplitude		
RF frequency characteristics	After CAL execution, input attenuator = 10 dB, at 18 to 28°C, and when Microwave Preselector Bypass is On: $\pm 1.0 \text{ dB (6 GHz} \leq \text{Frequency} \leq 13.5 \text{ GHz)} \\ \pm 1.5 \text{ dB (13.5 GHz} < \text{Frequency} \leq 26.5 \text{ GHz)}$	
	After CAL execution, input attenuator = 10 dB, at 18 to 28°C, and when Microwave Preselector Bypass is Off:	
	See Table 1.3.2-1.	
Display average noise level	At 18 to 28°C, Detector = Sample, VBW = 1 Hz (Video Average), input attenuator = 0 dB, with Microwave Preselector Bypass turned on/off, If the frequency < 6 GHz, the specifications are the same as those in the state without MS2692A-067/167. Refer to Table 1.3.2-3 "Specifications for spectrum analyzer function: Display average noise level." $6 \text{ GHz} \leq \text{Frequency} < 10 \text{ GHz} \qquad -146[\text{dBm/Hz}]$ $10 \text{ GHz} \leq \text{Frequency} \leq 13.5 \text{ GHz} \qquad -145[\text{dBm/Hz}]$ $13.5 \text{ GHz} < \text{Frequency} \leq 20 \text{ GHz} \qquad -142[\text{dBm/Hz}]$ $20 \text{ GHz} < \text{Frequency} \leq 26.5 \text{ GHz} \qquad -138 \text{ [dBm/Hz]}$	
Image response	With Microwave Preselector Bypass turned off, \leq -60 dBc (6 GHz < Frequency \leq 26.5 GHz)	

1.3.8 Analysis Bandwidth Extension (MS269xA-077/177)

Table 1.3.8-1 lists the specifications for the Analysis Bandwidth Extension Option is installed.

The following specification values are those under the conditions after 30-min warm-up at stable ambient temperature. Typ. value is not the guaranteed performance with this specification; it is for reference.

Table 1.3.8-1 Analysis Bandwidth Extension Specifications

Item	Specification
Function	
Functional Outline	
	Extends Analysis Bandwidth to 62.5 MHz in Signal Analyzer mode
Bandwidth	
Range	The following bandwidth is added along with the standard capture
	analysis bandwidth.
Complian mate	50 MHz, 62.5 MHz
Sampling rate	When setting Bandwidth > 31.25 MHz:
Range	100 MHz
Capture Time	When setting Bandwidth > 31.25 MHz:
Capture Time Length	To set the capture time length:
	Min. capture time length: 1 μs
	(depending on the analysis bandwidth)
7 1 1 1 1 1 1	Max. capture time length: 500 ms
Resolution bandwidth (RBW)	When setting Bandwidth > 31.25 MHz:
Setting range	3 kHz to 3 MHz (1-3 sequence)
Selection	(–60 dB/–3 dB) 4.5:1, Nominal value
ADC resolution	14 bits
Frequency	
Frequency range	When MS2692A-067/167 is not installed and the bandwidth is set to > 31.25 MHz:
	100 MHz to 6 GHz
	When MS2692A-067/167 is not installed and the bandwidth is set to > 31.25 MHz:
	100 MHz to 26.5 GHz

Table 1.3.8-1 Analysis Bandwidth Extension Specifications (Cont'd)

Item	Specification
Amplitude	
Display average noise level	At 18 to 28°C, input attenuator = 0 dB, (Without MS269xA-008/108 or with Preamplifier turned off) $100 \text{ MHz} \leq \text{Frequency} < 2.2 \text{ GHz} - 147 \text{ [dBm/Hz]}$ $2.2 \text{ GHz} \leq \text{Frequency} < 4 \text{ GHz} - 145 \text{ [dBm/Hz]}$ $4 \text{ GHz} \leq \text{Frequency} \leq 6 \text{ GHz} - 143 \text{ [dBm/Hz]}$ (Frequency Band Mode: Normal) $\text{At 18 to 28°C, input attenuator} = 0 \text{ dB,}$ (With MS269xA-008/108 and with Preamplifier turned on) $100 \text{ MHz} \leq \text{Frequency} < 2.2 \text{ GHz} - 160 \text{ [dBm/Hz]}$ $2.2 \text{ GHz} \leq \text{Frequency} < 4 \text{ GHz} - 158 \text{ [dBm/Hz]}$ $4 \text{ GHz} \leq \text{Frequency} \leq 6 \text{ GHz} - 154 \text{ [dBm/Hz]}$ (Frequency Band Mode: Normal) $\text{At 18 to 28°C, input attenuator} = 0 \text{ dB,}$ (With MS2692A-067/167 and with Microwave Preselector Bypass turned on) $6 \text{ GHz} \leq \text{Frequency} \leq 10 \text{ GHz} - 140 \text{ [dBm/Hz]}$ $10 \text{ GHz} \leq \text{Frequency} \leq 13.5 \text{ GHz} - 136 \text{ [dBm/Hz]}$ $13.5 \text{ GHz} \leq \text{Frequency} \leq 20 \text{ GHz} - 133 \text{ [dBm/Hz]}$ $20 \text{ GHz} \leq \text{Frequency} \leq 26.5 \text{ GHz} - 129 \text{ [dBm/Hz]}$

Table 1.3.8-1 Analysis Bandwidth Extension Specifications (Cont'd)

Item	Specification
Absolute amplitude accuracy	After CAL execution at 18 to 28°C, input attenuator ≥10 dB, Mixer input level ≤ −10 dBm, RBW = Auto,Time Detection = Average, Marker Result = Integration or Peak (Accuracy), center frequency, CW, (Without MS269xA-008/108 or with Preamplifier turned off) When setting Bandwidth > 31.25 MHz:
	Excluding noise floor effects ±0.5 dB (100 MHz ≤ Frequency ≤ 6 GHz, Frequency Band Mode: Normal) The absolute amplitude accuracy is calculated from an RSS (root summed square) error of the RF frequency characteristics, linear error and input attenuator switching error.
	After CAL execution at 18 to 28°C, input attenuator ≥10 dB, Mixer input level ≤ -10 dBm, RBW = Auto, Time Detection = Average, Marker Result = Integration or Peak (Accuracy), center frequency, CW, (Without MS269xA-008/108 or with Preamplifier turned on) When setting Bandwidth > 31.25 MHz:
	Excluding noise floor effects ±1.0 dB (100 MHz \le Frequency \le 6 GHz, Frequency Band Mode: Normal) The absolute amplitude accuracy is calculated from an RSS (root summed square) error of the RF frequency characteristics, linear error and input attenuator switching error.
	After CAL execution at 18 to 28°C, input attenuator ≥10 dB, Mixer input level ≤ −10 dBm, RBW = Auto, Time Detection = Average, Marker Result = Integration or Peak (Accuracy), center frequency, CW, (With MS269xA-067/167 or with Microwave Preselector Bypass turned
	on) When setting Bandwidth > 31.25 MHz: Excluding noise floor effects ±1.8 dB (6 GHz ≤ Frequency ≤ 13.5 GHz, Frequency Band Mode:Normal)
	±3.0 dB (13.5 GHz ≤ Frequency ≤ 26.5 GHz) The absolute amplitude accuracy is calculated from an RSS (root summed square) error of the RF frequency characteristics, linear error and input attenuator switching error.

Table 1.3.8-1 Analysis Bandwidth Extension Specifications (Cont'd)

Item	Specification	
Linearity error	Excluding noise floor effects (Without MS269xA-008/108 or with Preamplifier turned off) $ \pm 0.07 \text{ dB (Mixer input level} \leq -20 \text{ dBm}) \\ \pm 0.10 \text{ dB (Mixer input level} \leq -10 \text{ dBm}) \\ \pm 0.30 \text{ dB (Preamplifier input level} \leq 0 \text{ dBm, Frequency} \leq 6 \text{ GHz}) \\ (\text{Frequency Band Mode:Normal}) \\ \text{Excluding noise floor effects} \\ (\text{With MS269xA-008/108 and with Preamplifier turned on}) \\ \pm 0.07 \text{ dB (Preamplifier input level} \leq -40 \text{ dBm}) \\ \pm 0.10 \text{ dB (Preamplifier input level} \leq -30 \text{ dBm}) \\ \pm 0.50 \text{ dB (Preamplifier input level} \leq -20 \text{ dBm}) \\ (\text{Frequency Band Mode:Normal}) \\ \text{Excluding noise floor effects} \\ (\text{With MS2692A-067/167 and with Microwave Preselector Bypass turned on}) $	
RF frequency characteristics	turned on) $\pm 0.60 \text{ dB (Preamplifier input level} \leq 0 \text{ dBm, Frequency} > 6 \text{ GHz})$ After CAL execution at 18 to 28°C, input attenuator = 10 dB (Without MS269xA-008/108 or with Preamplifier turned off) $\pm 0.35 \text{ dB}$ (100 MHz \leq Frequency \leq 6 GHz, Frequency Band Mode : Normal) After CAL execution at 18 to 28°C, input attenuator = 10 dB (With MS269xA-008/108 and with Preamplifier turned on) $\pm 0.65 \text{ dB}$ (100 MHz \leq Frequency \leq 6 GHz, Frequency Band Mode : Normal) After CAL execution at 18 to 28°C, input attenuator = 10 dB (With MS2692A-067/167 and with Microwave Preselector Bypass turned on) $\pm 1.0 \text{ dB}$ (6 GHz $<$ Frequency \leq 13.5 GHz) $\pm 1.5 \text{ dB}$ (13.5 GHz $<$ Frequency \leq 26.5 GHz)	

1.3.9 Analysis Bandwidth Extension (MS269xA-078/178)

Table 1.3.9-1 lists the specifications for the Analysis Bandwidth Extension Option is installed.

The following specification values are those under the conditions after 30-min warm-up at stable ambient temperature. Typ. value is not the guaranteed performance with this specification; it is for reference.

Table 1.3.9-1 Analysis Bandwidth Extension Specifications

Item	Specification
Function	·
Functional Outline	
	Extends Analysis Bandwidth to 125 MHz in Signal Analyzer mode
	The MS269xA-077/177 is required to install this option.
Bandwidth	
Range	The following bandwidth is added along with the standard capture
	analysis bandwidth.
g II	50 MHz, 62.5 MHz, 100 MHz, 125 MHz
Sampling rate	WILL II. D. 1. 111 - 01 OF MIL.
Range	When setting Bandwidth > 31.25 MHz: 100 MHz, 200 MHz (depending on the analysis bandwidth)
Capture Time	When setting Bandwidth > 31.25 MHz:
Capture Time Length	To set the capture time length:
o or	Min. capture time length: 500 ns to 1 µs (depending on the analysis
	bandwidth)
	Max. capture time length: 500 ms
Resolution bandwidth	When setting Bandwidth > 31.25 MHz:
(RBW)	3 kHz to 10 MHz (1-3 sequence)
Setting range	(–60 dB/–3 dB) 4.5:1, Nominal value
Selection	4/10
ADC resolution	14 bits
Frequency	D.C
Frequency range	Refer to Table 1.3.8-1.
Amplitude	Refer to Table 1.3.8-1.
Display average noise level	
Absolute amplitude	Refer to Table 1.3.8-1.
accuracy	
Linearity error	Refer to Table 1.3.8-1.
RF frequency characteristics	Refer to Table 1.3.8-1.

Chapter 2 Before Use

This chapter describes items that you should know before using the MS2690A/MS2691A/MS2692A. Be sure to read this section at least once as it contains safety tips and cautions for avoiding failure during use.

2.1	On Tra	ansportation2-2		
2.2	Installa	ation Location	2-3	
	2.2.1	Installation orientation	2-3	
	2.2.2	Distance from surrounding objects	2-4	
	2.2.3	Installation location conditions	2-5	
2.3	Items	to Check Before Use	2-6	
	2.3.1	Safety labels	2-6	
	2.3.2	Input level and reverse power (when vector	,	
		signal generator is installed) to RF Input	2-6	
	2.3.3	Electrostatic	2-7	
	2.3.4	Notes on handling input connector and SG		
		output connector (when vector signal gener	ator	
		is installed)	2-9	
	2.3.5	USB memory stick	2-9	
2.4	Power	Connection	2-10	
	2.4.1	Power requirements	2-10	
	2.4.2	Connecting power cord	2-11	

2.1 On Transportation

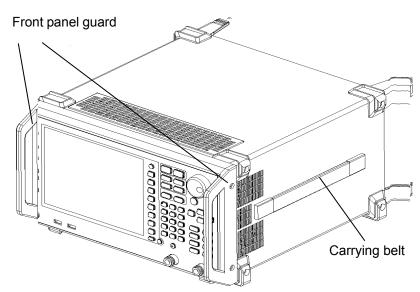


Figure 2.1-1 Guard and Carrying Belt

When carrying the unit, hold tightly the carrying belts on both sides. Do not use the front panel guard for moving. Doing so may loosen the fixing screws and damage the guard. (The guard is provided for protecting front panel connectors.)

2.2 Installation Location

2.2.1 Installation orientation

Install the MS2690A/MS2691A/MS2692A horizontally or at an angle using the tilted legs as shown in Figure 2.2.1-1. Do not place objects on top of the MS2690A/MS2691A/MS2692A when tilted.

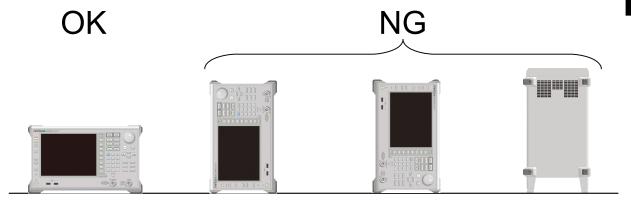


Figure 2.2.1-1 Installation orientation



If the MS269xA is not installed in a "OK" direction as above, a small shock may turn it over and harm the user.

2.2.2 Distance from surrounding objects

A fan is installed to the MS2690A/MS2691A/MS2692A to prevent the internal temperature from rising. Install the MS2690A/MS2691A/MS2692A in a location with the vents at least 10 cm away from walls, peripherals or other obstructions so as not to block the fan perimeter.

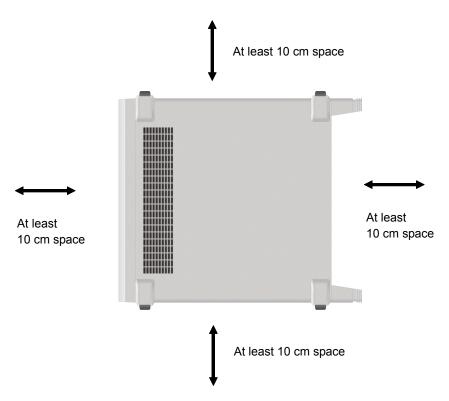


Figure 2.2.2-1 Distance from surrounding objects

2.2.3 Installation location conditions

Although the MS2690A/MS2691A/MS2692A operates at an ambient temperature of 5° C to 45° C, avoid using it in locations, such as the following, since it may cause failure.

- Locations with strong vibrations
- Humid and dusty locations
- Locations with direct sunlight
- Locations where there is the risk of exposure to active gases
- Locations where power voltage severely fluctuates

2.3 Items to Check Before Use

2.3.1 Safety labels

To protect the safety of the user, the WARNING label shown in Figure 2.3.1-1 is affixed to the rear panel. Observe the instructions on the label.

WARNING



THIS MEASURING EQUIPMENT IS A
PRECISION ELECTRONIC DEVICE
THAT CONTAINS HAZARDOUS PARTS,
AND THEREFORE MUST NOT BE
SERVICED BY THE CUSTOMER.
UNDER NO CIRCUMSTANCES
DISASSEMBLE THIS EQUIPMENT.
THIS EQUIPMENT MUST BE SERVICED

ONLY BY QUALIFIED SERVICE

Figure 2.3.1-1 Warning labels

PERSONNEL.

2.3.2 Input level and reverse power (when vector signal generator is installed) to RF Input

The MS2690A/MS2691A/MS2692A is not provided with over-power protection. Apply +30 dBm or lower power (mixer input level at maximum +20 dBm) to the RF input connector. In addition, do not apply DC voltage even when within the range described above.

When Pre-amp (optional) is ON, apply +10 dBm or lower power to the RF input connector.


There is no reverse power protection for the SG output connector when the vector signal generator (optional) is added. Be careful not to apply reverse power above +30 dBm (frequency greater than 300 MHz) or +24 dBm (frequency up to 300 MHz) to the SG output connector. In addition, ensure that DC voltage is not applied even when within the range described above.

2.3.3 Electrostatic

\wedge

CAUTION


- Always use the supplied 3-pin power cord to ground both the MS2690A/MS2691A/MS2692A and DUT (included in test circuit). After confirming that both the MS2690A/MS2691A/MS2692A and DUT are grounded, use coaxial cables to connect them.
 - NEVER connect the MS2690A/MS2691A/MS2692A and DUT without grounding, otherwise electrostatic discharge may damage the MS2690A/MS2691A/MS2692A.
- Do not touch the core conductor of the connector or bring it into contact with metal. Doing so may damage the input circuit of the MS2690A/MS2691A/MS2692A.

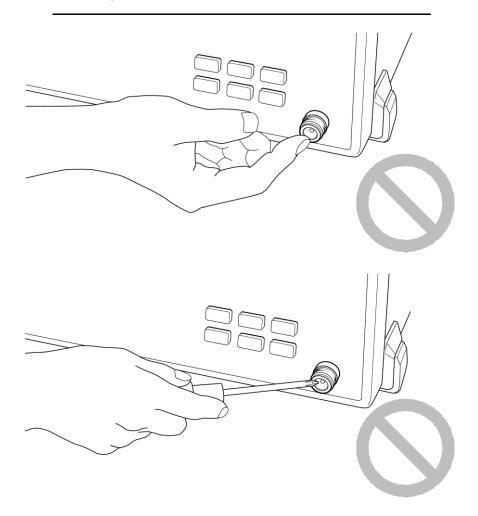

CAUTION

Do not touch the core conductor of the coaxial cable connected to the input connector or bring it into contact with metal.

Doing so may damage the input circuit of the MS2690A/MS2691A/MS2692A.

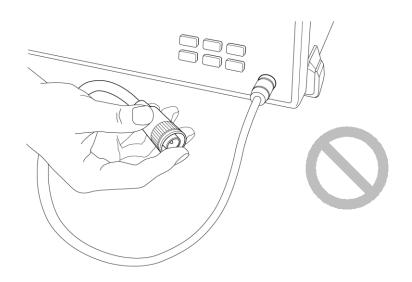




CAUTION

Do not touch the core conductor to the metal when connecting the coaxial cable to the connector.

Doing so may damage the input circuit of the MS2690A/MS2691A/MS2692A.

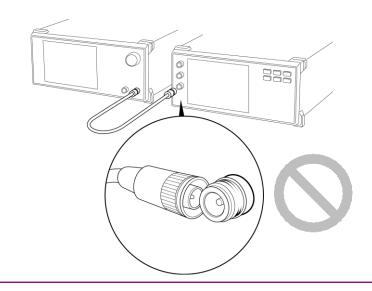

2.3.4 Notes on handling input connector and SG output connector (when vector signal generator is installed)

Connect only an N-type connector to RF Input and SG Output. Connecting a different connector will damage the connector.

2.3.5 USB memory stick

Note the orientation of the connection when using a USB memory stick. Plugging in a USB memory stick in the wrong direction may damage the connector.

2.4 Power Connection

This section describes the procedures for supplying power.

2.4.1 Power requirements

For normal operation of the MS2690A/MS2691A/MS2692A, observe the power voltage range described below.

Power source	Voltage range	Frequency
100 Vac system	100 to 120 V	50 to 60 Hz
200 Vac system	200 to 240 V	50 to 60 Hz

Operating voltage is within the range of +10% to -15% from the rated voltage (Max. 250 V).

Changeover between 100 and 200 V system is made automatically. The maximum power consumption of the MS2690A/MS2691A/MS2692A is 440 VA. Provide sufficient power capacity.



Supplying power exceeding the above range may result in electrical shock, fire, failure, or malfunction.

2.4.2 Connecting power cord

Insert the power plug into a grounded outlet, and connect the other end to the power inlet on the rear panel. To ensure that the instrument is properly grounded, always use the supplied 3-pin power cord.



WARNING

Always connect the instrument to a properly grounded outlet. Do not use the instrument with an extension cord or transformer that does not have a ground wire.

If the instrument is connected to an ungrounded outlet, there is a risk of receiving a fatal electric shock. In addition, the peripheral devices connected to the instrument may be damaged.

Unless otherwise specified, the signal-connector ground terminal, like an external conductor of the coaxial connector, of the instrument is properly grounded when connecting the power cord to a grounded outlet. Connect the ground terminal of DUT to a ground having the same potential before connecting with the instrument. Failure to do so may result in an electric shock, fire, failure, or malfunction.



CAUTION

If an emergency arises causing the instrument to fail or malfunction, disconnect the instrument from the power supply by disconnecting either end of the power cord.

When installing the instrument, place the instrument so that an operator may easily connect or disconnect the power cord from the power inlet and outlet. Moreover, DO NOT fix the power cord around the plug and the power inlet with a holding clamp or similar device.

If the instrument is mounted in a rack, a power switch for the rack or a circuit breaker may be used for power disconnection.

It should be noted that, the power switch on the front panel of the instrument is a standby switch, and cannot be used to cut the main power.

Chapter 3 Common Operations

This chapter describes items to be understood before actually operating the MS2690A/MS2691A/MS2692A, including part names, basic parameter setting methods, modulation operation method and useful functions.

3.1	Part Na	ames	3-2
	3.1.1	Part names	3-2
3.2	Turning Power On/Off		
	3.2.1	Turning power On	3-10
	3.2.2	Turning power Off	3-11
3.3	Auto C	alibration	3-12
3.4	Setting	s on Configuration Screen	3-17
	3.4.1	Display description	3-18
	3.4.2	Interface Settings	3-19
	3.4.3	Copy Settings	3-20
	3.4.4	System Settings	3-21
	3.4.5	Application Switch Settings	3-23
	3.4.6	System Information	3-24
	3.4.7	Option Information	3-26
	3.4.8	File Operation	3-26
	3.4.9	Software Install/Uninstall	3-27
	3.4.10	Correction	3-27
	3.4.11	Display Annotation	3-33
	3.4.12	Calibration Alert	3-33
3.5	Loading, Unloading, and Switching Applications		
	3.5.1	Loading applications	3-37
	3.5.2	Unloading applications	3-39
	3.5.3	Switching applications	3-41
	3.5.4	Changing application layout	3-42
3.6	Save a	nd Recall Functions	3-44
	3.6.1	Saving parameters and waveform data	3-44
	3.6.2	Recalling parameters	3-46
	3.6.3	Screen hard copy	3-48
	3.6.4	Simple Save&Recall	3-49
3.7	Initializing		3-53
	3.7.1	Preset	3-53
	3.7.2	System Reset	3-54
3.8	Installing and Uninstalling		3-55
	3.8.1	Installing software	3-55
	3.8.2	Uninstalling software	3-60

3.1 Part Names

3.1.1 Part names

Front Panel

This section describes the keys and connectors located on the front panel.

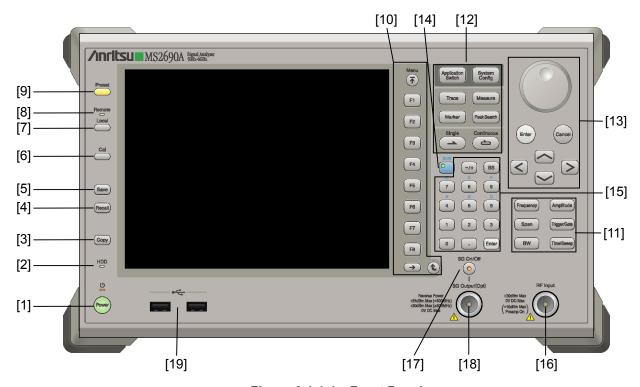


Figure 3.1.1-1 Front Panel

[1]



Power Switch

Press to switch between the standby state in which AC power is supplied and the Power On state in which the MS2690A/MS2691A/MS2692A is under operation. The Power lamp belights up orange in the standby state, and lights up green in the Power On state. Press the power switch for a reasonably long duration (for about two seconds).

[2] HDD

Hard disk access lamp

Lights up when the MS2690A/MS2691A/MS2692A internal hard disk is being accessed.

[3] Copy

Copy key

Press to capture a screen image from the display and save it to a file.


[4] Recall

Recall key

Press to recall a parameter file.

Save key [5] Save Press to save a parameter file. [6] Cal key Press to display the calibration execution menu. Local key [7] Press to return to local operation from remote control operation through GPIB, Ethernet or USB (B), and enable panel settings. [8] Remote Remote lamp Lights up when the MS2690A/MS2691A/MS2692A is in a remote control state. [9] Preset Preset key Resets parameters to their initial settings. [10] Function keys Used for selecting or executing function menu displayed on the right of the screen. The function menu contents are provided in multiple pages and layers. Press \rightarrow to open the next function menu page. The menu page number is displayed at the bottom of the function menu screen (e.g., "1 of 2"). Sublayer menus may be displayed when a function menu is executed. Press to go back to the upper layer, and press to go back to the uppermost (top) layer.

Chapter 3 Common Operations

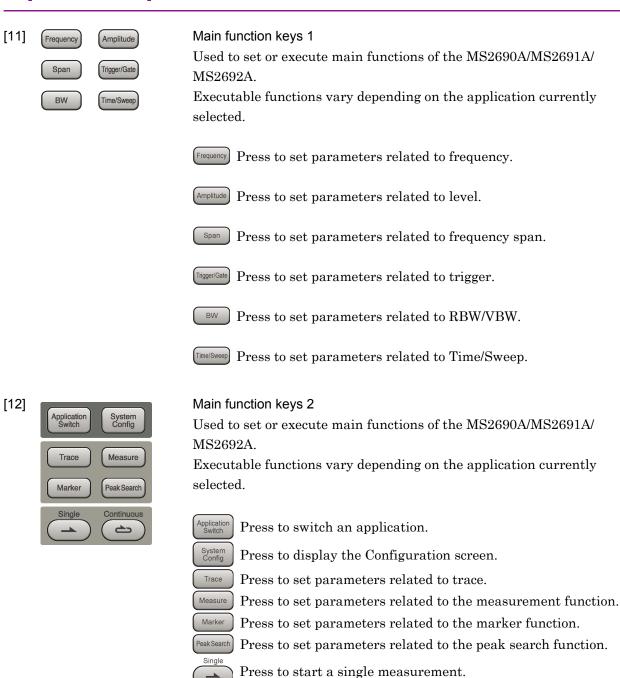

Press to start continuous measurements.

0



Rotary knob/Cursor keys/Enter key/Cancel key

The rotary knob and cursor keys are used to select display items or change settings.

Pressing (Enter) fixes the entered or selected data.

Pressing cancels the entered or selected data.



[14]

Shift key

 
Used to operate any keys with functions described in blue characters on the panel. First press the Shift key, then press the target key when the Shift key lamp lights up green.



Numeric keypad

Used to enter numbers on parameter setup screens.

Pressing (BS) deletes the last entered digit or character.





RF Input connector

Inputs an RF signal.

A conversion adapter (J1398A N-SMA ADAPTOR) is recommended for the measurement in the frequency 18 GHz or more.



RF output control key

If the MS2690A/MS2691A/MS2692A Option 020 Vector Signal Generator is installed, pressing $\bigcirc^{\text{\tiny SSGONOM}}$ enables (On) or disables (Off) the RF signal output. The lamp of the RF output control key lights up orange when the RF signal output is set to On.

[18]

SG Output(Opt)



RF output connector (if MS2690A-020/MS2691A-020/MS2692A-020 installed)

Outputs an RF signal.

[19]

USB connector (type A)

Used to connect a USB keyboard or mouse or the USB memory supplied with the MS2690A/MS2691A/MS2692A.

Rear panel

This section describes the connectors located on the rear panel.

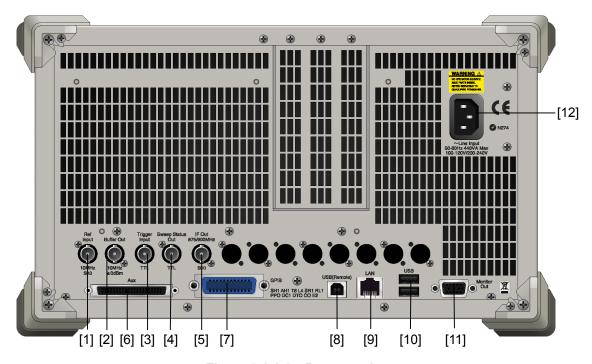


Figure 3.1.1-2 Rear panel

[1] Ref



Ref Input connector (reference frequency signal input connector)

Inputs an external reference frequency signal (10 MHz or 13 MHz). It is used for inputting reference frequency signals with accuracy higher than that of those inside the MS2690A/MS2691A/MS2692A, or for synchronizing the frequency of the MS2690A/MS2691A/MS2692A to that of other device.

[2] Buffer Out



Buffer Out connector (reference frequency signal output connector)

Outputs the reference frequency signal (10 MHz) generated inside the MS2690A/MS2691A/MS2692A. It is used for synchronizing the frequencies between other devices and the MS2690A/MS2691A/MS2692A based on the reference frequency signal output from this connector.

[3] Trigger Input



Trigger Input connector

Inputs a trigger signal from an external device. Refer to the operation manual of each application for operations when a trigger signal is input.

[4] Sweep Status Out



Sweep Status Out connector

Outputs a signal that is enabled when an internal measurement is performed or measurement data is obtained.

[5] IF Out 875/900MHz



IF Out connector

Outputs an IF signal. 874.988 MHz is specified as the center frequency during spectrum analyzer operations, and 875 MHz is specified during signal analyzer operations. It becomes 900 MHz when the MS2690A/MS2691A/MS2692A Option 004 Wideband Analysis Hardware is enabled. The IF signal is output without band limitation by RBW during both spectrum analyzer and signal analyzer operations.

[6] Aux

AUX connector

This is a complex connector for inputting an error rate measurement signal (optional) and inputting a baseband clock reference signal of the MS2690A-020/MS2691A-020/MS2692A-020 Vector Signal Generator (optional). See Table 3.1.1-1 for the internal pin assignment of the AUX connector.



GPIB connector

Used when controlling the MS2690A/MS2691A/MS2692A externally via GPIB.

[8] USB(Remote)



USB connector (type B)

Used when controlling the MS2690A/MS2691A/MS2692A externally via USB.

[9]



Ethernet connector

Used for connecting to a personal computer (PC) or for Ethernet connection.

[10] USE



USB connectors (type A)

Used to connect a USB keyboard or mouse or the USB memory supplied with the MS2690A/MS2691A/MS2692A.

[11]



Monitor Out connector

Used for connection with an external display.

[12]



AC inlet

Used for supplying power.

Table 3.1.1-1 Pin assignment of AUX connector

Function	Pin Number	Signal Name
	18	GND
	19	GND
BER	20	GND
DEK	51	BER_CLK
	52	BER_EN
	53	BER_DATA
	21	GND
	22	GND
	26	GND
	27	MARKER1
SG	28	MARKER3
50	30	GND
	54	PULS_MOD
	55	BB_REF_CLK
	61	MARKER2
	62	GND

Do not connect anything to connectors not listed in Table 3.1.1-1, because they are interface connectors provided for device maintenance.

3.2 Turning Power On/Off

3.2.1 Turning power On

The following shows the procedure for turning the power On.

<Procedure>

- 1. Plug in the power cord jack side to the AC power inlet on the rear panel. Make sure it is plugged all the way in at this time.
- 2. Plug the power cord plug side to the AC power outlet. The MS2690A/MS2691A/MS2692A enters standby state and the power switch but lamp lights up orange.
- 3. Press the power switch. The lamp lights up green and startup begins.

Turning the power On starts Windows then the MS2690A/MS2691A/MS2692A software. The following startup screen is displayed during startup. Do not press the power switch while the startup screen is displayed. The software may not startup normally when the power switch is pressed.



Figure 3.2.1-1 Example of Startup Screen

3.2.2 Turning power Off

The following shows the procedure for turning the power Off.

When turning power Off using panel keys

<Procedure>

1. Press the power switch to close applications and start shutdown. The green power switch power lamp lights off, the plamp lights up orange, and the power is turned Off. The main power is On at this time.

Note:

Do not press the power switch for more than 4 seconds. Doing so will forcibly shut down the system during software closing processing.

When turning power Off using mouse connected to MS2690A/MS2691A/MS2692A

<Procedure>

- 1. Connect the supplied mouse to the MS2690A/MS2691A/MS2692A and open the Start Menu from the Windows Taskbar.
- 2. Select "Turn off computer."
- 3. Select "Turn off."
- 4. Shutdown begins, the green power switch power lamp lights off, the lamp lights up orange, and the power is turned Off. The main power is On at this time.

Forced shutdown

<Procedure>

1. Press the power switch for four seconds or more. The green power switch power lamp lights off, the bar lamp lights up orange, and the power is turned Off.

Notes:

- Use forced shutdown as an emergency operation only when key, mouse, or keyboard operations are disabled. A failure may have occurred in the event the power cannot be turned Off even after pressing the power switch for 4 or more seconds. Unplug the power cord from the outlet and contact an Anritsu Service and Sales office or agent.
- Unplugging the power plug while accessing the hard disk may result in hard disk failures. Unplug the power plug when the power is turned Off.

3.3 Auto Calibration

An auto calibration function that uses an internal calibrating oscillator is provided to minimize measurement errors of the MS2690A/MS2691A/MS2692A.



Do not input signals to RF input when calibrating. Correct calibration values cannot be obtained when the auto calibrating function is executed while signals are being input.

Press Cal (Cal) to display the Cal function menu.

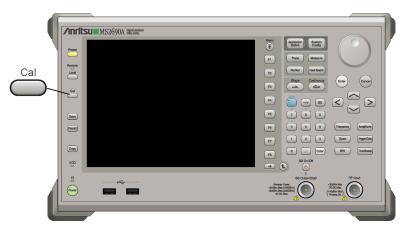


Figure 3.3-1 Cal key

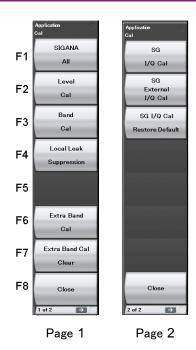


Figure 3.3-2 Cal function menu

Table 3.3-1 Description of Cal function menu

Menu Display	Function		
Page 1			
SIGANA All	Executes all calibrations (Level Cal, Band Cal, Local Leak Suppression) except Extra Band Cal.		
Level Cal	Executes level calibration.		
Band Cal	Executes analysis band calibration.		
Local Leak Suppression	Executes local leak suppression.		
Extra Band Cal	Executes analysis bandwidth calibration within the current center frequency.		
Extra Band Cal Clear	Clears the all calibration values obtained by Extra Band Cal to zero.		
Close	Returns to the application screen.		
Page 2	Displayed only when the Vector Signal Generator option is installed.		
	Calibrates Vector Signal Generator option.		
SG I/Q Cal	SG Output and RF Input do not need to be connected by cable.		
	Calibrates Vector Signal Generator option.		
SG External I/Q Cal	SG Output and RF Input need to be connected by cable. Do not input signals in RF Input.		
SG I/Q Cal Restore Default	Deletes the values obtained by SG I/Q Cal and SG External I/Q Cal and restores the factory defaults.		

The auto calibration function in Page 1 includes the following four calibration functions and a function to execute functions (1) to (3) at one time.

(1) Level calibration (Level Cal)

Calibrates reference level errors, RBW switching errors and input attenuator switching errors to minimize level measurement errors.

Example: Executing signal level calibration

<Procedure>

- 1. Press Cal (Cal).
- 2. Select [F2] (Level Cal).

(2) Analysis band calibration (Band Cal)

Calibrates the frequency flatness and phase characteristics within the analyzed band.

Example: Executing analysis band calibration

<Procedure>

- 1. Press Cal (Cal).
- 2. Select [F3] (Band Cal).

(3) Local Leak Suppression

Executes calibration to suppress local leaks affecting low frequency and low level measurements.

Example: Suppressing local leaks using local leak suppression function <Procedure>

- 1. Press Cal (Cal).
- 2. Select [F4] (Local Leak Suppression).

The following are the steps to batch execute all calibration functions.

<Procedure>

- 1. Press Cal (Cal).
- 2. Select [f] (SIGANA All).

(4) Extra Band Cal

Executes analysis bandwidth calibration within the current center frequency.

Example: Executing analysis bandwidth calibration within the current center frequency.

<Procedure>

- 1. Press Cal (Cal).
- 2. Select (Extra Band Cal).

When Extra Band Cal is executed, the obtained calibration value is held separately for each center frequency at the time of execution. When Extra Band Cal is executed at the center frequency already having the calibration value, the old calibration value is discarded. Up to 100 values obtained by Extra Band Cal can be held. If Extra Band Cal is executed when the number of the obtained values has reached 100, the oldest value is discarded and replaced by the newly obtained one.

The calibration value is applied if both of the following conditions are met:

- The difference between "the center frequency at the time of executing Extra Band Cal" and "the set value for the current center frequency" is 100 kHz or less.
- Both of the center frequencies are on the same frequency band.

This function cannot be executed when Spectrum Analyzer is selected. To activate Extra Band Cal, select any function other than Spectrum Analyzer, Signal Generator, BER Measurement, and Power Meter when Spectrum Analyzer is selected.

Depending on the version of the software you install, the existing Extra Band Cal calibration values might be cleared when installing the software. When the software is installed successfully, retry to execute Extra Band Cal and obtain a calibration value. For how to install the software, refer to 3.8.1 "Installing software".

(5) Extra Band Cal Clear

Clears the all calibration values obtained by Extra Band Cal.

Example: Clearing the all calibration values obtained by Extra Band Cal. < Procedure>

- 1. Press Cal (Cal).
- 2. Select F7 (Extra Band Cal).

The auto calibration function of Vector Signal Generator option in Page 2 includes the following two calibration functions (6) and (7) and a function (8) to delete the values calibrated by (6) and (7).

- (6) SG I/Q Cal
- (7) SG External I/Q Cal
- (8) SG I/Q Cal Restore Default

For details, see Section 2.9 "Auto Calibration" in MS2690A/MS2691A/MS2692A Signal Analyzer Option 020: Vector Signal Generator Operation Manual (Mainframe Operation).

3.4 Settings on Configuration Screen

MS2690A/MS2691A/MS2692A system settings, and settings for system information display and common application functions can be configured in the Configuration screen.

Press System to display the Configuration screen.

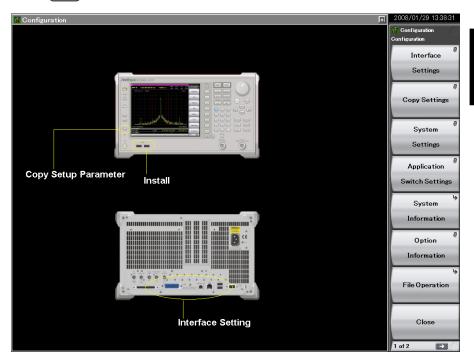


Figure 3.4-1 Configuration screen

3.4.1 Display description

The function menu in the Configuration screen consists of two pages, which can be toggled by pressing \longrightarrow .

Table 3.4.1-1 Configuration menu

Function Key	Menu Display	Function
Page 1	Configuration	Press System to display.
F1	Interface Settings	Sets interface used for remote control. **Mainframe Remote Control** 1.3 "Interface settings" 3.4.2 "Interface Settings"
F2	Copy Settings	Sets screen hard copy. 3.4.3 "Copy Settings"
F3	System Settings	Sets buzzer On/Off. 3.4.4 "System Settings"
F4	Application Switch Settings	Sets loading/unloading of applications. 3.4.5 "Application Switch Settings"
F5	System Information	Displays MS2690A/MS2691A/MS2692A system information. 3.4.6 "System Information"
F6	Option Information	Displays options installed in the MS2690A/MS2691A/ MS2692A. 3.4.7 "Option Information"
F7	File Operation	Sets file and data management. 3.4.8 "File Operation"
F8	Close	Closes Configuration screen.
Page 2	Configuration	Press (System of the press) to display.
F1	Software Install	Sets software and license installation. 3.4.9 "Software Install/Uninstall"
F3	Calibration Alert	Sets the calibration alert functions. 3.4.12 Calibration Alert
F4	Display Annotation	Turns on and off frequency and level display on the application screen. On: Display (default), Off: Hide 3.4.11 Display Annotation
F6	Save&Recall Settings	Sets the mode for save and recall functions. 3.6.4 "Simple Save&Recall"
F7	Correction	Sets the correction function. 3.4.10 "Correction"
F8	Close	Closes Configuration screen.

3.4.2 Interface Settings

Pressing (Interface Settings) after displays the Interface Settings screen. GPIB, Ethernet and USB interface conditions used for remote control can be set in this screen. Select the item to be set with the cursor, and then press (Set) to reflect the settings of that item.

Refer to Section 1.3 "Interface Settings" in the MS2690A/MS2691A/ MS2692A and MS2830A/MS2840A Signal Analyzer Operation Manual (Mainframe Remote Control) for details.

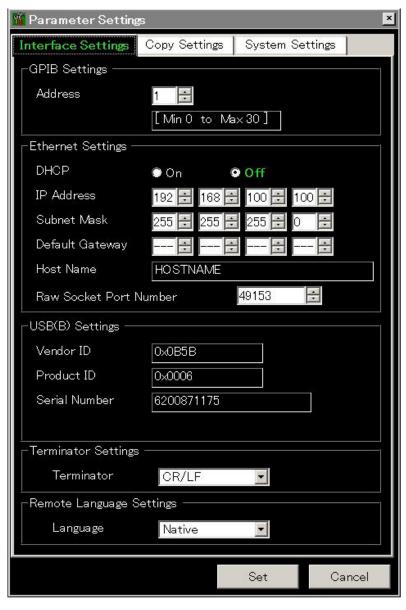


Figure 3.4.2-1 Interface Settings screen

3.4.3 Copy Settings

Pressing (Copy Settings) after displays the Copy Settings screen. Screen hard copy conditions can be set in this screen. Select the item to be set with the cursor, and then press (Set) to reflect the settings of that item.

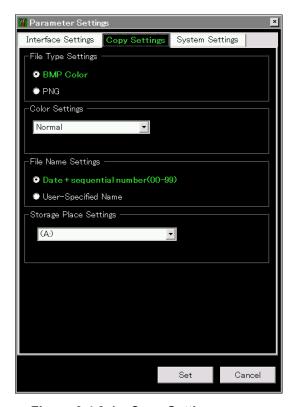


Figure 3.4.3-1 Copy Settings screen

Table 3.4.3-1 Copy settings items

Item	Description
File Type Settings	Selects the file format. BMP or PNG can be set.
Color Settings	Sets the screen hard copy color. The available color settings are: Normal (same as screen display), Reverse, Monochrome, or Reversed Monochrome.
File Name Settings	The file naming method can be selected from auto (date + sequence number) or random. This setting is applied also to determining file name for parameters/waveform data saving. 3.6.1 "Saving parameters and waveform data"
Storage Place Settings	The file save location can be selected.

3.4.4 System Settings

Pressing (System Settings) after (System System Settings) screen. Select the item to be set with the cursor, and then press (Set) to reflect the settings of that item.



Figure 3.4.4-1 System Settings screen

Table 3.4.4-1 System Settings items

Item	Description
Beep Sound Setting	Sets the warning sound On/Off.
	Selects the reference frequency signal type.
Reference Signal	Auto Detects and automatically selects external reference signal input. Synchronizes the internal reference oscillator when an external input is not detected, and synchronizes to the external reference signal when an external input is detected. Fixed to Internal Uses the internal reference oscillator.

Table 3.4.4-1 System Settings items(Cont'd)

Itam Danawinti		
Item	Description	
	Selects signal frequency, when using external reference signal as the signal source for reference frequency.	
	13 MHz external reference signal is available only when Board Revision of IF Local Board Revision is three or greater. You can check Board Revision using the procedure below:	
	1. After pressing (System Information) to display the System Information menu.	
External Reference Frequency	2. Press [54] (Board Revision View) to display the Board Revision list.	
	3. The Board Revision of IF Local Board displays to the right of IF Local Board.	
	If using the Board Revision of IF Local Board Revision with 3 or less, and also using the 13 MHz external reference versions, contact an Anritsu Service and Sales office immediately.	
	Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the CD version.	

3.4.5 Application Switch Settings

Pressing [4] (Application Switch Settings) after [5] displays the Application Switch Settings menu. The loading/unloading of applications can be set from this menu. Select the item to be set with the cursor, and then press [7] (Set) to display the setting window of that item or start performing the setting.



Figure 3.4.5-1 Application Switch Settings menu

Table 3.4.5-1 Setting items of Application Switch Settings

Menu Display	Description
Load Application Select	Selects an application located in the Unloaded Applications frame to startup the selected application.
Unload Application Select	Selects an application located in the Loaded Applications frame to end the selected application.
Position Change	Sets the loaded application anywhere on the Application Switch menu.

3.4.6 System Information

Pressing (System Information) after displays the System Information menu. The MS2690A/MS2691A/MS2692A system information can be viewed from this menu. Pressing the function key corresponding to the system information to be viewed displays the window of the selected item.

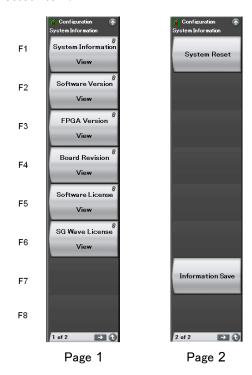


Figure 3.4.6-1 System Information menu

Table 3.4.6-1 System Information setting items

Menu Display	Description
System Information View	Displays the MS2690A/MS2691A/MS2692A product type, serial number, operating time, and attenuator switching counts. ATT01:2dB ATT02:4dB ATT03:8dB ATT04:10dB ATT05:16dB ATT05:16dB ATT06:20dB
Software Version View	Displays the version of the software installed in the MS2690A/MS2691A/MS2692A.
FPGA Version View	Displays the FPGA version for each board installed in the MS2690A/MS2691A/MS2692A.
Board Revision View	Displays the revisions of each board installed in the MS2690A/MS2691A/MS2692A. (Some boards are not displayed.)
Software License View	Displays the license of software installed in the MS2690A/MS2691A/MS2692A.
SG Wave License View	Displays the license of SG waveforms installed in the MS2690A/MS2691A/MS2692A (only when a vector signal generator is installed).
System Reset	Initializes the system.
Information Save	Saves the MS2690A/MS2691A/MS2692A system information.

3.4.7 Option Information

Pressing (Option Information) after (System) displays the option screen. Information on options installed in the MS2690A/MS2691A/MS2692A can be viewed in this screen.

3.4.8 File Operation

Pressing [7] (File Operation) after [System] displays the File Operation menu. Data files can be managed from this menu. Pressing the function key corresponding to the data file to be managed displays the setting window of that item.



Figure 3.4.8-1 File Operation menu

Table 3.4.8-1 File Operation setting items

Item	Description
Device (D:)	Selects the drive.
Parameter Save Data	Manages save data of parameter settings file.
Copy Data	Manages copied file data.
Trace Data	Manages trace data.
Digitizer Data	Manages digitized data.
System Information	Manages the MS2690A/MS2691A/MS2692A system information.

3.4.9 Software Install/Uninstall

Pressing (Software Install) after from page 2 of the System Information menu displays the Software Install menu. Software can be installed and uninstalled to/from the MS2690A/MS2691A/MS2692A from this menu. Pressing the function key corresponding to the item to be set executes the selected item.

Refer to Section 3.8 "Installing and Uninstalling" for details.

3.4.10 Correction

When making measurements with a spectrum analyzer, it may be necessary to correct the error and gain of the measurement system. The following are examples of them:

Frequency characteristics and loss of measurement cables

Frequency characteristics and loss of pre-amplifier, etc. connected to RF input connector.

When wanting to measure the field strength with an antenna or near-field probe connected (antenna factor correction).

In the cases above, Correction functions allow you to correct the error and gain.

You can input correction value via csv file or remote control operation. If inputting via csv file, refer to the Recall Correction Table. For details of remote command input, see "Correction Make Up" in Chapter 4 of the MS2690A/MS2691A/MS2692A and MS2830A/MS2840A Signal Analyzer Operation Manual Mainframe Remote Control.

Pressing (Correction) on page 2 of Correction function menu after displays Correction function menu. Those functions are used to set correction factors for frequency characteristics.



Figure 3.4.10-1 Correction function menu

Table 3.4.10-1 Items of Correction

Item	Description
Correction (On/Off)	Sets Correction to On/Off. When set to On, the level correction processing function is executed.
Save Correction Table	Opens the Save Correction Table function menu.
Recall Correction Table	Opens the Recall Correction Table function menu.
Close	Returns to the Configuration menu.

Pressing [52] (Save Correction Table) on Correction function menu displays Save Correction Table function menu. Those functions are used to save level frequency characteristics.

 


Figure 3.4.10-2 Save Correction Table function menu

Table 3.4.10-2 Items of Save Correction Table

Item	Description
Device (D:)	Selects the drive.
Save Correction Table	Saves the level frequency characteristics. When File Name Setting is set to Data + sequential, the file is automatically named "Corr date_sequential number". The file is in CSV format and is saved in "[Selected drive]:\Anritsu Corporation\Signal Analyzer\User Data\Corrections\". Up to 1000 files can be saved in the folder.
Close	Returns to the Configuration menu.

Pressing (Recall Correction Table) on Correction function menu displays the Recall Correction Table function menu. Those functions are used to recall the saved level frequency characteristics.

 


Figure 3.4.10-3 Recall Correction Table function menu

Table 3.4.10-3 Items of Recall Correction Table

Item	Description
Device (D:)	Selects the drive.
Recall Correction Table	Recalls the level frequency characteristics.
Recall Correction Table	A file is in CSV format.
Close	Returns to the Configuration menu.

A Correction file is in CSV format, as shown below. Signal levels can be corrected by sets of frequency and level in the Correction file. Also, the correction factors between Fa and Fb are calculated by the linear interpolation of log value at Fa and Fb.

Frequency(Hz),Level(dB) 0,0 980000000,1 1000000000,4 1200000000,1 Describe the frequency and level to be corrected within the following range for the CSV file.

Up to 4096 items of correction data can be set.

[Frequency]

Range -1 to 400 GHz Resolution 1 Hz Set the unit in Hz.

[Level]

Range -100 to 100 dB Resolution 0.001 dB

As shown in Figure 3.4.10-4, if the frequency range over which the correction factors are entered is from Fa to Fb, displayed frequency ranges lower than Fa or higher than Fb have correction factors applied. The correction factor for frequencies lower than Fa is the same as that (La) for Fa and the correction factor for frequencies higher than Fb is the same as that (Lb) for Fb. The correction factors between Fa and Fb are calculated by the linear interpolation of log value at Fa and Fb.

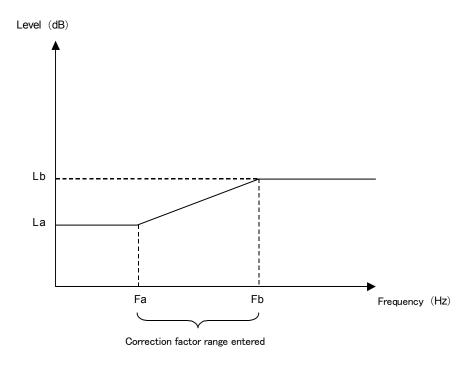


Figure 3.4.10-4 Operation When Correction Factors Are Entered

Correction factors apply to all the applications other than Signal Generator, BER Test, and RNC Simulator.

In Signal Analyzer functions, the correction factors of the center frequency are applied to all the trace data in the same span.

Executing the following functions initializes the correction factors. Installing application software does not initialize the correction factors.

To execute System Reset.

To execute the system recovery functions.

3.4.11 Display Annotation

When Display Annotation is OFF, the measurement target's frequency and level included in the frequency-related settings, level-related settings, marker values, and measurement results are hidden from the application screen to avoid being seen.

Press and then press . Switch On/Off the display by pressing (Display Annotation) on Page 2 of the Configuration function menu.

On Displays frequency and signal level. (Default)

Off Hides frequency and signal level.

Note:

When Display Annotation is Off, only applications that support Display Annotation function are displayed in the Application Switch menu.

3.4.12 Calibration Alert

Calibration Alert displays an alert when the temperature change or the elapsed time based on the last automatic calibration (SIGANA All) meets the trigger conditions. The trigger conditions for alerts, or temperature thresholds and elapsed time, can be specified.

Press system and then press . Pressing (Calibration Alert) on Page 2 of the Configuration function menu displays the Calibration Alert function menu.



Figure 3.4.12-1 Calibration Alert function menu

Table 3.4.12-1 Calibration Alert setting items

Item	Description
Alert Mode	Specifies the trigger conditions for alerts. None No alert occurs. Temperature An alert occurs when a temperature goes outsides the specified thresholds based on the internal temperature measured at the last automatic calibration (SIGANA All). Elapsed Time An alert occurs when the time passes longer than the specified Elapsed Time since the last automatic calibration time (SIGANA All) Both An alert occurs when either of temperature
	change or elapsed time meets the trigger conditions. Specifies the temperature thresholds for
Temperature	alerts. Range 0.5 to 50.0°C Resolution 0.5°C Default 2.0°C
Elapsed Time	Specifies the elapsed time for alerts. Range 1 to 200 h (hours) Resolution 1 h (hour) Default 1 h (hour)

When the specified trigger conditions are met, an alert appears at upper part of the screen as Figure 3.4.12-2. An alert is released by executing automatic calibration (SIGANA All).

 


Figure 3.4.12-2 Alert Display

When Alert Mode is Both or Temperature, the alert remains displayed even after the internal temperature goes back to within the specified thresholds. The alert is released by executing automatic calibration (SIGANA All).

Notes:

- Even when the trigger conditions are met, no alert appears for the first 30 minutes after turning On the MS269xA, because it is the warm-up time.
- This function uses Windows date/time to monitor the elapsed time from the last automatic calibration (SIGANA All). An alert is not displayed at correct elapsed time when the Windows date/time is changed. Execute automatic calibration (SIGANA All) again if it is changed.
- An alert is not displayed when using the MX269010A Mobile WiMAX Measurement Software. Query the alert status by remote control command when using the above software. For details of remote control commands to query status, refer to "Status of Calibration Alert" in Section 4.1 "Application Common Device Messages" in the MS2690A/MS2691A/MS2692A and MS2830A/MS2840A Signal Analyzer Operation Manual (Mainframe Remote Control).

3.5 Loading, Unloading, and Switching Applications

The following describes the procedures for loading, unloading and switching applications (signal analyzer, spectrum analyzer, etc.).

Loading applications refers to the setting of applications already installed to an execution state. Loaded applications are registered to the Application Switch menu and are in an operable state. In addition, these applications enter an execution state when the power is turned On after registration. All applications are in a loaded state at factory shipment.

Unloading applications refers to the halting and ending of applications in an execution state. Unloaded applications are released from Application Switch menu registration and will not run until they are re-loaded.

Switching applications refers to the operation for selecting the applications to be operated from the applications in an execution state. You can select the target applications from the Application Switch menu.



CAUTION

- Applications registered to the Application Switch menu automatically enter an execution state when starting up the MS2690A/MS2691A/MS2692A. The more registered applications, the longer startup will take.
- In the event running applications are suddenly ended while operating Windows, press , turn the MS2690A/MS2691A/MS2692A power Off or shutdown Windows, and then turn the MS2690A/MS2691A/ MS2692A power On again.
- When many applications are running simultaneously and the measurement software calls a measurement function from the signal or spectrum analyzer functions, sometimes the application may take a long time to switch. Reducing the number of simultaneously running applications by unloading them will help prevent this problem.

3.5.1 Loading applications

Applications can be loaded from the Configuration screen.

<Procedure>

- 1. After pressing (System), press (Application Switch Settings) to display the Application Switch Registration screen.
- 2. Press [FI] (Load Application Select), select the applications to be loaded from the applications displayed in "Unloaded Applications" at the bottom part of the screen, and then press [FI] (Set).

 Press [FI] (Load Application Select) once again, when an error message "Loading application failed" is displayed.

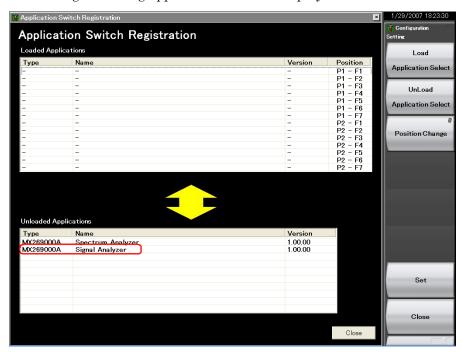


Figure 3.5.1-1 Application Switch Registration screen

3. When registered correctly, the selected applications will be displayed in "Loaded Applications" at the top part of the screen.

Figure 3.5.1-2 Application Switch Registration screen

4. Press replication to display the Application Switch menu. Check that the loaded application is displayed in the menu. Select the application with the function key to operate the application.



Figure 3.5.1-3 Application Switch Menu screen

3.5.2 Unloading applications

Applications can be unloaded from the Configuration screen.

<Procedure>

- 1. After pressing System, press [4] (Application Switch Settings) to display the Application Switch Registration screen.
- 2. Press [2] (Unload Application Select), select the application to be unloaded from the applications displayed in "Loaded Applications" at the top part of the screen with the cursor, and then press [5] (Set).

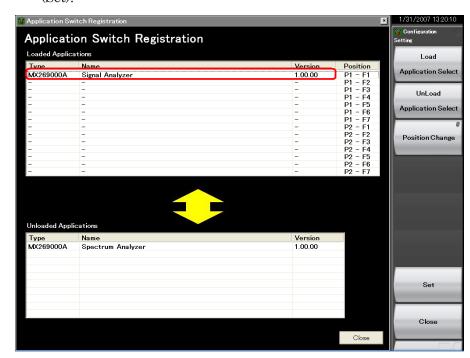


Figure 3.5.2-1 Application Switch Registration screen

3. When ended correctly, the selected applications will be displayed in "Unloaded Applications" at the bottom part of the screen.

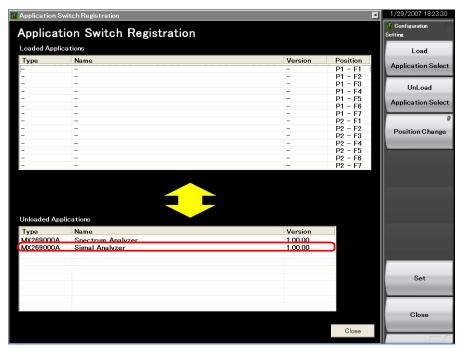


Figure 3.5.2-2 Application Switch Settings screen

3.5.3 Switching applications

Applications to be operated can be switched in the Application Switch menu.

Pressing Application Switch menu screen. Pressing the function key corresponding to the application to be switched switches to the selected application screen.

Note:

When Display Annotation is Off, only applications that support Display Annotation function are displayed in the Application Switch menu.



Figure 3.5.3-1 Application Switch menu

3.5.4 Changing application layout

The layout of applications can be changed as desired in the Application Switch menu. Set the application layout in the Configuration screen.

<Procedure>

- 1. After pressing (System), press [74] (Application Switch Settings) to display the Application Switch Registration screen.
- 2. Press (Position Change) to display the Application Switch Function Position Edit screen.
- 3. In the Function Position field, select the application whose layout is to be changed with the cursor, and then press (Enter).

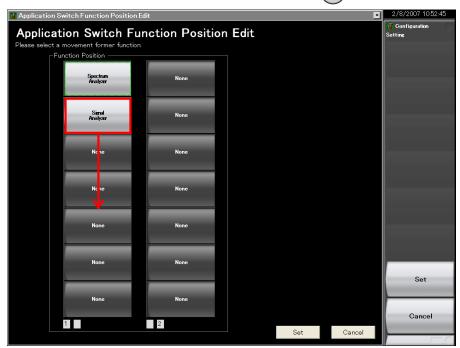


Figure 3.5.4-1 Application Switch Function Position Edit screen

- 4. Select the layout position from the slots in the Function Position field with the cursor, and then press (Enter).
- 5. After checking that the application is placed in the selected position, press [7] (Set).

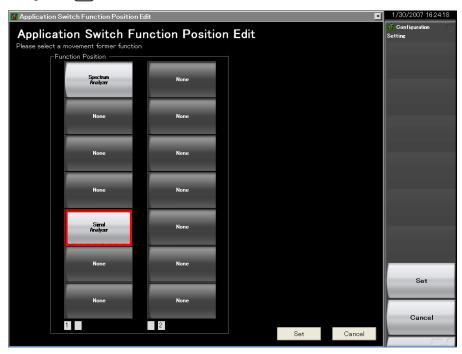


Figure 3.5.4-2 Application Switch Function Position Edit screen

3.6 Save and Recall Functions

This section describes the conditions for setting parameters to the internal hard disk and USB memory (Parameter) and saving (Save) and recalling (Recall) of waveform data (Trace).

Note:

Use the USB memory supplied with the MS2690A/MS2691A/ MS2692A. Using other USB memories may cause malfunction due to device incompatibility.

3.6.1 Saving parameters and waveform data

With the MS2690A/MS2691A/MS2692A, the current setting conditions and waveform data can be saved to the internal hard disk or a USB memory.

Saving parameter settings

<Procedure>

- 1. Press (Save) from the Configuration screen, Signal Analyzer screen, or Spectrum Analyzer screen to display the Save menu shown in Figure 3.6.1-1.
- 2. Press [F] (Device) to change the save destination. When the Setting window is displayed, select the drive to be saved and then press [F] (Set) to set.
- 3. When the save destination has been determined, press (Save Application). The save target will be all parameter setting conditions (Parameter) of the launched applications.

The parameter saving file will be output with the name "Param_date_sequential number.xml." If a parameter is saved on the same date, the file is automatically named in the order "Param_date_000.xml," "Param_date_001.xml," "Param_date_002.xml" and so on. Parameter saves of up to "Param_date_999.xml" can be made.

A sequential number from 000 to 999 will be added to the file name.

For file name specification, set User Specified Name as File Name Settings of Copy Settings. The parameter saving file name can be specified when saving.

3.4.3 "Copy Settings"

Files will be saved in the following directory of the save target drive specified in [F1] (Device).

\Anritsu Corporation\Signal Analyzer\User Data\ Parameter Setting

Up to 1000 files can be saved in the folder.

Saving waveform data

<Procedure>

- 1. Press Save from the Signal Analyzer and Spectrum Analyzer screen to display the Save menu shown in Figure 3.6.1-1.
- 2. Press [5] (Device) to change the save destination. When the Setting window is displayed, select the drive to be saved and then press (Set) to set.
- 3. When the save destination has been determined, press [F5] (Save Waveform CSV DATA). The save target will be the waveform data (Trace).

Table 3.6.1-1 Description of Save function menu

Function Key	Menu Display	Function
F1	Device (D:)	Changes the saving destination.
F3	Save Limit	Displays the Save Limit function menu.
F4	Save on Event	Displays the Save on Event function menu.
F5	Save Waveform CSV DATA	Saves the displayed waveform data (Trace).
F7	Save Application	Saves the parameter setting conditions of all the launched applications.
F8	Close	Returns to the Configuration screen.

A sequential number from 00 to 99 will be added to the file name. If a file with file number 99 is used, no more files can be saved.

For file name specification, set User Specified Name as File Name Settings of Copy Settings. The waveform data file name can be specified when saving.

3.4.3 "Copy Settings"

Files will be saved in the following directory of the save target drive specified in (Device).

\Anritsu Corporation\Signal Analyzer\User Data\Trace Data

The maximum number of files in one folder is:

Signal Analyzer: 1000 Spectrum Analyzer: 100

3.6.2 Recalling parameters

With the MS2690A/MS2691A/MS2692A, settings can be restored by loading saved setting conditions from the internal hard disk or a USB memory.

Recalling parameter setting conditions only of applications to be operated using Application Switch

<Procedure>

- 1. Press room the Configuration, Signal Analyzer, or Spectrum Analyzer screen to display the Recall menu shown in Figure 3.6.2-1.
- 2. Press [FI] (Device) to change the location of saved parameter setting conditions. When the Setting window is displayed, select the drive in which parameter setting conditions are saved, and then press [FI] (Set) to set.
- 3. Press (Recall Current Application) to display the Parameter Save Data List.
- 4. Select the parameter setting conditions to be recalled with the cursor, and then press (Set) to recall parameter setting conditions to the application.

Recalling parameter setting conditions for all launched applications. <Procedure>

- 1. Press from the Configuration, Signal Analyzer or Spectrum Analyzer screen to display the Recall menu shown in Figure 3.6.2-1.
- 2. Press [F] (Device) to change the location of saved setting parameters. When the Setting window is displayed, select the drive in which setting parameters are saved, and then press [F] (Set) to set.
- 3. Press (Recall All Application) to display the Parameter Save Data List.
- 4. Select the parameter setting conditions to be recalled with the cursor, and then press (Set) to recall the parameter setting conditions to all loaded applications.

 


Figure 3.6.2-1 Recall menu

3.6.3 Screen hard copy

A displayed screen image can be saved to the internal hard disk or a USB memory as a BMP or PNG formatted file.

The conditions for copying a screen image can be set in the Copy Settings screen. Refer to the following section for details.

3.4.3 "Copy Settings"

Executing screen hard copy

<Procedure>

- 1. Display the screen to be saved.
- 2. Press opposed to save the screen image to the selected media in BMP or PNG format. A saved file name is displayed when saving is completed.

The image file will be output with the file name

"Copy_Date_Sequence_Number.bmp". When screen hard copies are made on the same date, they are automatically named in an order as "Copy_Date_000.bmp", "Copy_Date_001.bmp", "Copy_Date_002.bmp", and so on. Screen hard copies of up to "Copy_Date_999.bmp" can be made.

A sequential number from 000 to 999 will be added to the file name.

Files will be saved in the following directory of the save target drive specified in [FI] (Device).

\Anritsu Corporation\Signal Analyzer\User Data\Copy Files

Up to 1000 files can be saved in the folder.

3.6.4 Simple Save&Recall

This function allows parameter setting conditions to be recalled with little operations.

Enabling Simple Save&Recall:

<Procedure>

- 1. Press System to display the Configuration screen.
- 2. Press \longrightarrow to display page 2 of the Configuration screen.
- 3. Press (Save&Recall Settings) to display the Save&Recall Settings menu in Figure 3.6.4-1.

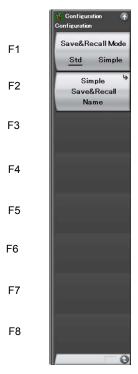


Figure 3.6.4-1 Save&Recall Settings menu

Table 3.6.4-1 Correction Settings items

Menu Display	Description
Save&Recall Mode	Switches the Save&Recall mode. Set the Standard mode or Simple mode. 3.6.1 "Saving parameters and waveform data" 3.6.2 "Recalling parameters"
Simple Save&Recall Name	Use this item to change the parameter name (file name) to be saved from the default setting in Simple mode.

Changing the parameter name (file name) to be saved from the default setting

Pressing [52] (Simple Save&Recall Name) in Figure 3.6.4-1 displays the Simple Save&Recall Name menu in Figure 3.6.4-2. Up to ten parameter names can be registered in Simple mode.

The default parameter names are PRM_1 to PRM_10.

To change the parameter name, press the function key to be changed.

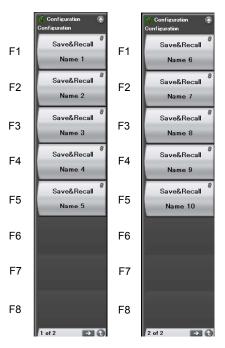


Figure 3.6.4-2 Simple Save&Recall Name menu

Simple Save function

Pressing Save in Simple mode displays the Simple Save menu in Figure 3.6.4-3.

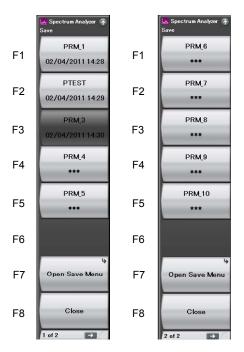


Figure 3.6.4-3 Simple Save menu

Parameter names set with the Simple Save&Recall Name menu are displayed on the function keys.

When the Protect of the parameter saving file has been set to On (when set to Read-only), the relevant function key is grayed out, and if it is pressed, an error message is displayed.

The last saved date and time of the parameter saving file is displayed in the second line. If the corresponding parameter saving file does not exist, "***" is displayed on the function key.

In the example in Figure 3.6.4-3, the parameter name of PRM_2 has been changed to the parameter name of PTEST. Also, PRM_3 file has been set to Read-only.

Pressing the function key stores the parameter saving file with the parameter name displayed.

\Anritsu Corporation\Signal Analyzer\User Data\Parameter Setting

The parameter settings can be saved in Standard mode on Open Save Menu.

3.6.1 "Saving parameters and waveform data"

Simple Recall function

Pressing the image of Recall button in Simple mode displays the Simple Recall menu in Figure 3.6.4-4.



Figure 3.6.4-4 Simple Recall menu

Parameter names set with the Simple Save&Recall Name menu are displayed on the function keys.

The last saved date and time of the parameter saving file is displayed in the second line.

Pressing the function key executes Recall of the corresponding parameter saving file.

If the corresponding parameter saving file does not exist, the function key is grayed out, and if it is pressed, an error message is displayed.

The parameter settings can be recalled in Standard mode on Open Recall Menu.

3.6.2 "Recalling parameters"

3.7 Initializing

This section describes how to initialize settings.

3.7.1 Preset

Preset is a function for initializing application settings. Configuration screen settings are not initialized using this function. Similarly, there is no effect on user data saved to the internal hard disk.

- 1. Press Preset to display the Preset function menu.
- 2. Press [f] (Preset) to initialize only applications to be operated using the Application Switch.
- 3. Press (Preset All Application) to initialize all loaded applications.

Table 2 7 1 1	Preset function	manıı
Table 3.7.1-1	Preset function	menu

Function Key	Menu Display	Function
F1	Preset	Initializes only the application subject to operation by the Application Switch.
F3	Preselector Tune Preset	Sets the preselector peaking bias value to factory default. For details, refer to the following operation manuals*.
F5	Preset All Application	Initializes all the loaded applications.
F6	Reboot	Restarts the equipment.
F8	Close	Closes the current menu screen and returns to the Configuration screen.

- *: MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Signal Analyzer Function Operation)
 - 6.7 "Setting Preselector"
 - MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Spectrum Analyzer Function Operation)
 - 6.1 "Preselector Tuning Function"
 - MX269017A Vector Modulation Analysis Software Operation Manual (Operation)
 - 3.2.2 "Preselector function menu"

3.7.2 System Reset

System Reset is a function for initializing all installed applications and Configuration screen settings, and deleting all user data saved to the internal hard disk.

Note:

User data deleted by executing this function cannot be recovered.

- 1. Press system to display the Configuration screen.
- 2. Press (System Information) and then press (to display page 2 of the System Information function menu.
- 3. Press [5] (System Reset) to execute System Reset.
- 4. The MS2690A/MS2691A/MS2692A restarts automatically when System Reset is completed.

Table 3.7.2-1 System Information function menu (2/2)

Function Key	Menu Display	Function
Page 2	System Information	Pressing System, then 5, and then displays page 2 of the System Information menu.
F1	System Reset	Initializes all the installed applications and the Configuration screen settings, and erases all the user data saved on the internal hard disk. Erased user data cannot be recovered.
F7	Information Save	Saves the system information

3.8 Installing and Uninstalling

This section describes the procedure for installing application software and licenses.

Note:

Before installing software, confirm that its version is later than the already installed software. Each of the following actions will initialize the calibration values stored in the hardware. If initialized, the accuracy of the measurement results may not satisfy the specifications. The mainframe needs to be returned to Anritsu when writing the calibration values again.

- Installation of the earlier software version than 4.09.00 initializes the calibration values related to the hardware options added to the version 4.09.00 or later.
- Installation of the earlier software version than 2.02.00 initializes the calibration values related to the hardware options added to the version 2.02.00 or later.

3.8.1 Installing software

Preparation for installing USB memory

<Procedure>

- Connect the USB memory to the PC, and then insert the installation disk.
- 2. Select MS269xA Install from Install Software on the installation menu.
- 3. Specify the root directory of the connected USB memory on the installation directory specification window (e.g., "E:\" when the USB memory is drive E).
- 4. Click [OK] to copy the installation data into the USB memory.

 The installation data is copied into the "E:\Anritsu

 Corporation\Signal Analyzer\Install" folder, when the USB memory is drive E.

Set the same folder configuration before the installation, in order to manually install by copying a set of the installation files in the USB memory and drive D.

Installing software

<Procedure>

- Remove the peripheral devices from the USB ports of the MS2690A/MS2691A/MS2692A, other than mouse and keyboard.
- 2. Press System to display the Configuration screen, and then press (Software Install) from page 2 of the Configuration menu.
- 3. The Software Install menu shown in Figure 3.8.1-1 is displayed. Press [1] (Install).
- 4. The installation selection menu is displayed. Insert the USB memory containing the purchased software data into the USB port of the MS2690A/MS2691A/MS2692A.

Note:

Do not insert any devices other than USB memory to the USB ports during installation.

- 5. Press [F1] (Software) to display the device selection window.
- 6. Select the USB memory device containing the software with the cursor, and then press (Set) to start the installation. The versions of the already installed software (Installed Applications) and of the software to install (Installation Package on XX) are displayed. They cannot be selected and installed individually.
- 7. When pressing [f] (Install), a message box asking "Do you install the application software?" is displayed. Press **Yes** to start installation.
- 8. The MS2690A/MS2691A/MS2692A restarts automatically when the installation is completed.

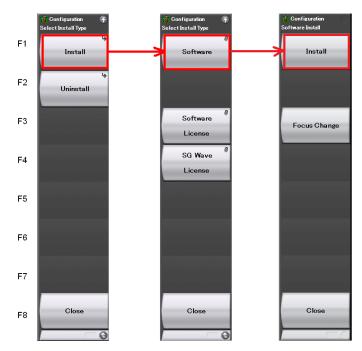


Figure 3.8.1-1 Software Install menu

Installing software licenses

- 1. Press stem to display the Configuration screen, and then press (Software Install) from page 2 of the Configuration menu.
- 2. The Software Install menu shown in Figure 3.8.1-2 is displayed. Press [1] (Install).
- 3. The installation selection menu is displayed. Insert the USB memory containing the purchased software license data into the USB port of the MS2690A/MS2691A/MS2692A.
- 4. Press [53] (Software License) to display the device selection window.
- 5. Select the USB memory device containing the software license with the cursor, and then press (Set) to start the installation. The licenses already installed (Installed Licenses) and the licenses to install (Installation Licenses on XX) are displayed. Select licenses to install.
- 6. When pressing [f] (Install), a message box asking "Do you install the selected application software license?" is displayed. Press **Yes** to start installation.
- 7. The license becomes valid when the MS2690A/MS2691A/MS2692A is restarted after installation is completed.

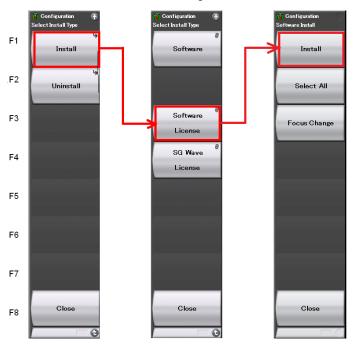


Figure 3.8.1-2 Software Install menu

Installing waveform pattern licenses

- 1. Press System to display the Configuration screen, and then press (Software Install) from page 2 of the Configuration menu.
- 2. The Software Install menu shown in Figure 3.8.1-3 is displayed. Press [1] (Install).
- 3. The installation selection menu is displayed. Insert the USB memory containing the purchased software license data into the USB port of the MS2690A/MS2691A/MS2692A.
- 4. Press [54] (SG Wave License) to display the device selection window.
- 5. Select the USB memory device containing the software license with the cursor, and then press (Set) to start the installation. The licenses already installed (Installed Licenses) and the licenses to install (Installation Licenses on XX) are displayed. Select licenses to install.
- 6. When pressing [f] (Install), a message box asking "Do you install the selected SG Waveform license?" is displayed. Press **Yes** to start installation.
- 7. The license will be valid when the MS2690A/MS2691A/MS2692A is restarted after installation is completed.

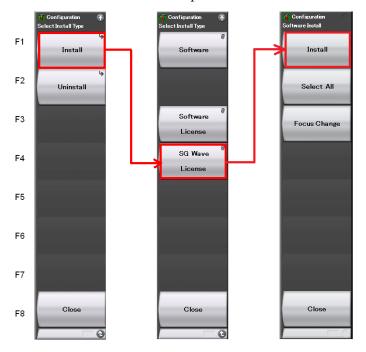


Figure 3.8.1-3 Software Install menu

3.8.2 Uninstalling software

The Install screen must be displayed in order to uninstall software or license files from the MS2690A/MS2691A/MS2692A.

Uninstalling software

- 1. Press system to display the Configuration screen, and then press (Software Install) from page 2 of the Configuration menu.
- 2. The Software Install menu shown in Figure 3.8.2-1 is displayed. Press [F2] (Uninstall).
- 3. The installation selection menu is displayed. Press [6] (Software).
- 4. The installed software list screen is displayed. Select the software to be uninstalled from the installed software with the cursor.
- 5. When pressing [5] (Uninstall), a message box asking "Do you uninstall the selected application software?" is displayed. Press **Yes** to start uninstallation.

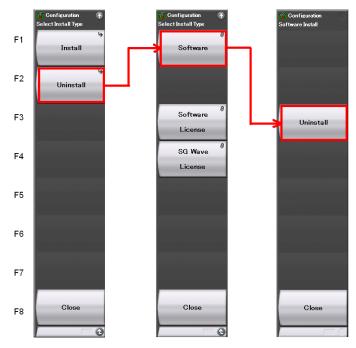


Figure 3.8.2-1 Software Install menu

Uninstalling software licenses

- 1. Press stem to display the Configuration screen, and then press (Software Install) from page 2 of the Configuration menu.
- 2. The Software Install menu shown in Figure 3.8.2-2 is displayed. Press [2] (Uninstall).
- 3. The installation selection menu is displayed. Press (Software License).
- 4. The installed software license list screen is displayed. Select the software license to be uninstalled from the installed software licenses with the cursor.
- 5. When pressing [53] (Uninstall), a message box asking "Do you uninstall the selected application software license?" is displayed. Press **Yes** to start uninstallation.

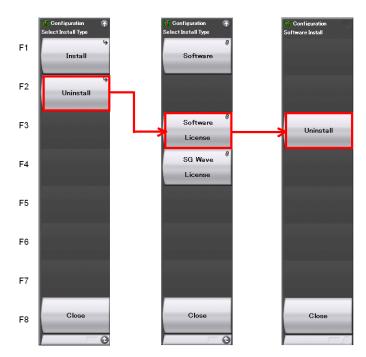


Figure 3.8.2-2 Software Install menu

Uninstalling waveform pattern licenses

- 1. Press System to display the Configuration screen, and then press (Software Install) from page 2 of the Configuration menu.
- 2. The Software Install menu shown in Figure 3.8.2-3 is displayed. Press [2] (Uninstall).
- 3. The installation selection menu is displayed. Press (SG Wave License).
- 4. The installed software license list screen is displayed. Select the software license to be uninstalled from the installed software licenses with the cursor.
- 5. When pressing [5] (Uninstall), a message box asking "Do you uninstall the selected SG Waveform license?" is displayed. Press **Yes** to start uninstallation.

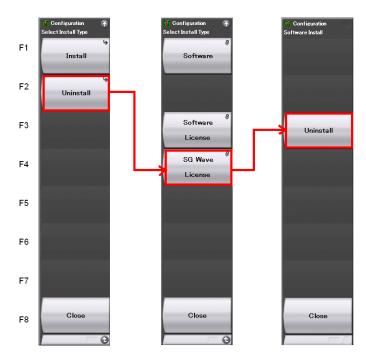


Figure 3.8.2-3 Software Install menu

Chapter 4 Tutorial

This chapter describes the waveform display of the signal analyzer and spectrum analyzer.

4.1	Spectrum Analysis Using Signal Analyzer4	
	4.1.1 Spectrum analysis4	-2
4.2	Spectrum Analysis Using Spectrum Analyzer4	-7
	4.2.1 Spectrum Analysis4	-7

4.1 Spectrum Analysis Using Signal Analyzer

4.1.1 Spectrum analysis

The section describes the operation procedure for outputting input signal waveforms to the application screen of the signal analyzer.

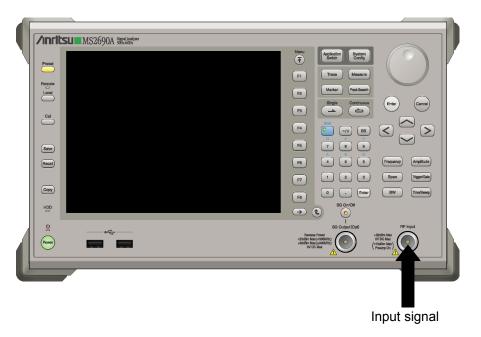


Figure 4.1.1-1 Front panel

Example: Input Signal: Frequency: 1 GHz (CW)

Level: -10 dBm

- 1. Connect the input signal to the RF Input (N-type connector) on the front panel of the MS2690A/MS2691A/MS2692A.
- 2. Press System then (Application Switch Settings) to display the Application Switch Settings menu.
- 3. Press [1] (Load Application Select) to select within the "Unload Applications" column of the application with the cursor. Select "Signal Analyzer" here with the cursor, and then press [7] (Set).
- 4. Check that "Signal Analyzer" is displayed within the "Loaded Applications" column then press Application.
- 5. Pressing the function key corresponding to the Signal Analyzer from the Application Switch Settings menu displays the application main screen of the Signal Analyzer.

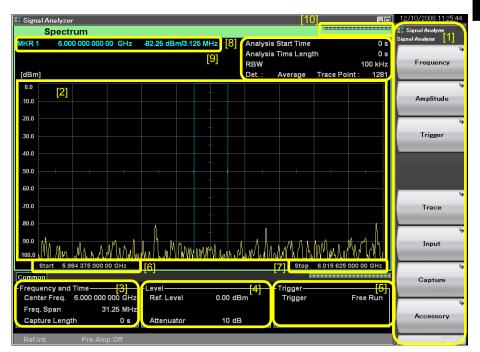


Figure 4.1.1-2 Application main screen

Table 4.1.1-1 Display items for Signal Analyzer

Item	Description
[1]	This is the main function key of the signal analyzer. Basic parameter settings of the signal analyzer are configured here. Signal Analyzer Function Operation 2.1 "Display Description"
[2]	Displays signal waveforms.
[3]	Displays the center frequency, frequency span and other frequency parameters. Signal Analyzer Function Operation 2.2 "Setting Frequency"
[4]	Displays the reference level, input attenuator value and other level parameters. Signal Analyzer Function Operation 2.3 "Setting Level"
[5]	Displays the trigger source, trigger level and other trigger parameters. Signal Analyzer Function Operation 3.2 "Trigger Function"
[6]	Displays the start frequency. Signal Analyzer Function Operation 2.2.3 "Setting start frequency"
[7]	Displays the stop frequency. Signal Analyzer Function Operation 2.2.4 "Setting stop frequency"
[8]	Displays the analysis start time, analysis time span, resolution bandwidth and other Spectrum trace parameters. Signal Analyzer Function Operation 4.2.1 "Spectrum"
[9]	Displays marker values. Signal Analyzer Function Operation 4.2.9 "Setting marker search"
[10]	This is used as an indictor expressing an analysis progression rate.

- 6. Frequency settings must be changed to display the input signal in the waveform display screen. Press (Frequency).
- 7. Press [5] (Center Frequency) and then enter the desired frequency using the numeric keypad. The center frequency setup window is displayed.



Figure 4.1.1-3 Center frequency setup window

Tutorial

8. Enter the center frequency then select the unit, from GHz, MHz, kHz, and Hz.

The waveform of the input signal is now displayed on the screen (see Figure 4.1.1-5).

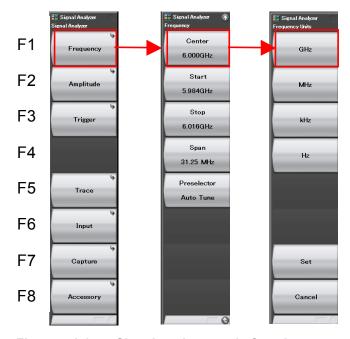


Figure 4.1.1-4 Signal analyzer main function menu

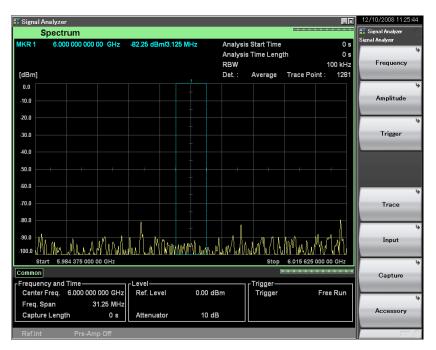


Figure 4.1.1-5 Waveform display using Signal Analyzer

Refer to the MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Signal Analyzer Function Operation) for how to use the Signal Analyzer.

4.2 Spectrum Analysis Using Spectrum Analyzer

4.2.1 Spectrum Analysis

This section describes the operation procedure for outputting input signal waveforms to the application screen of the spectrum analyzer.



Figure 4.2.1-1 Front panel

Example: Input Signal: Frequency: 1 GHz (CW)

Level: -10 dBm

<Procedure>

- 1. Connect the input signal to the RF Input (N-type connector) on the front panel of the MS2690A/MS2691A/MS2692A.
- 2. Press System then (Application Switch Settings) to display the Application Switch Settings menu.
- 3. Press [F] (Load Application Select) to select within the "Unload Applications" column of the application with the cursor. Select "Spectrum Analyzer" here with the cursor, and then press [F] (Set).
- 4. Check that "Spectrum Analyzer" is displayed within the "Loaded Applications" column then press [Application].
- Pressing the function key corresponding to the Spectrum Analyzer from the Application Switch Settings menu displays the application main screen of the Spectrum Analyzer.

The application is shipped already loaded.

The application is set to start automatically at power startup.

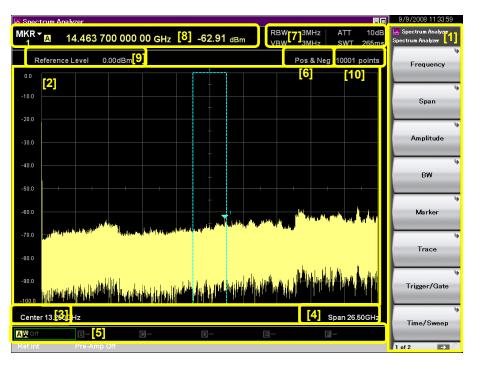


Figure 4.2.1-2 Application main screen

Table 4.2.1-1 Display items for Spectrum Analyzer

Item	Description
[1]	This is the main function key of the spectrum analyzer. Basic parameter settings of the spectrum analyzer are configured here.
	Spectrum Analyzer Function Operation 2.1 "Display Description"
[2]	Displays signal waveforms.
[3]	Displays the start frequency. Spectrum Analyzer Function Operation 2.3.3 "Setting start frequency"
[4]	Displays the stop frequency. Spectrum Analyzer Function Operation 2.3.4 "Setting stop frequency"
[5]	Displays trace parameters. Spectrum Analyzer Function Operation Chapter 3 "Selecting Display Mode"
[6]	Displays the wave detection mode status. Spectrum Analyzer Function Operation 3.1.4 "Setting wave detection mode"
[7]	Displays the resolution bandwidth, video bandwidth, input attenuator and sweep time parameters. Spectrum Analyzer Function Operation 2.4.2 "Setting input attenuator" 2.5 "Setting RBW/VBW"
[8]	Displays marker values. Spectrum Analyzer Function Operation 4.1 "Setting Marker"
[9]	Displays the reference level. Spectrum Analyzer Function Operation 2.4.1 "Setting reference level"
[10]	Displays the number of trace points. Spectrum Analyzer Function Operation 3.3 "Setting Time/Sweep"

- 6. Frequency settings must be changed to display the input signal to the waveform display screen. Press (Frequency).
- 7. Press (Center Frequency) and then enter the desired frequency using the numeric keypad. The center frequency setup window is displayed.



Figure 4.2.1-3 Center frequency setup window

8. Enter the center frequency then select the unit, from GHz, MHz, kHz, and Hz.

Example: To set 1 GHz for the center frequency, press $\ ^{\text{\tiny 1}}$ and then $\ ^{\text{\tiny p}}$ (GHz).

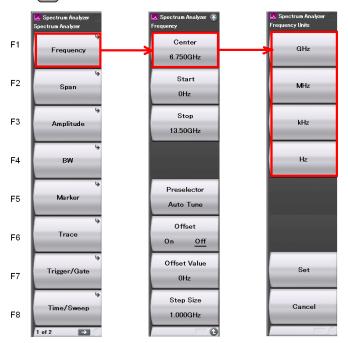


Figure 4.2.1-4 Spectrum analyzer main function menu

- 9. Return to the main screen of the spectrum analyzer to change frequency span. Press (**).
- 10. Press [52] (Span). Enter the desired frequency bandwidth using the numeric keypad.
- 11. Enter the frequency bandwidth then select the unit of the value.

The waveform of the input signal is now displayed on the screen (see Figure 4.2.1-5).

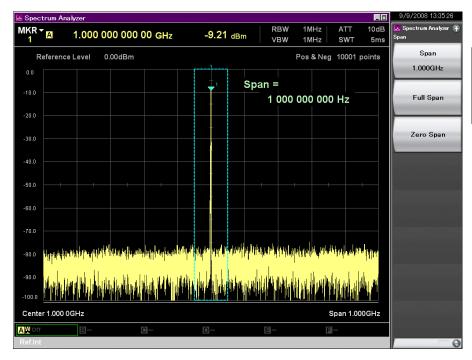


Figure 4.2.1-5 Waveform display using Spectrum Analyzer

Refer to the MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Spectrum Analyzer Function Operation) for how to use the Spectrum Analyzer.

Chapter 5 System

The MS2690A/MS2691A/MS2692A uses Microsoft Windows (hereinafter, referred to as "Windows") as the operating system. Settings for Windows and the system can be operated by connecting a mouse and a keyboard.

This chapter describes how to perform operations on Windows installed to the MS2690A/MS2691A/MS2692A and general notes.

Setting	y Windows	5-2
5.1.1	Displaying Windows Desktop	5-3
5.1.2	Setting Control Panel	5-4
5.1.3	Using external display	5-6
5.1.4	General notes	5-8
Storag	e Device Configuration	5-9
.3 System Recovery Functions		5-10
5.3.1	Phoenix Recover Pro	5-12
5.3.2	Paragon Drive Backup	5-13
Windo	ws Security Measures	5-15
5.4.1	Activating Firewall	5-17
5.4.2	Installing Important Windows Update Prog	ırams
	(Windows Update)	5-23
5.4.3	Using Antivirus Software	5-25
	5.1.1 5.1.2 5.1.3 5.1.4 Storag Systen 5.3.1 5.3.2 Windo 5.4.1 5.4.2	5.1.2 Setting Control Panel

Setting Windows 5.1

The MS2690A/MS2691A/MS2692A is set to default settings at factory shipment so as to perform optimal measurements. Changing the Windows settings without instructions is outside the scope of operation warranty. In addition, performance may drop or functions may not operate correctly when Windows settings are changed. Carefully read the general notes of this section when changes to Windows settings are required.

When the system fails to operate correctly due to Windows operation, execute system recovery functions to restore the MS2690A/MS2691A/ MS2692A to its status at factory shipment. See 5.3 "System Recovery Functions" for details.



WARNING

MS2690A/MS2691A/MS2692A operations are not guaranteed when the Windows settings are changed from the default shipment status without instructions.

Installing a program not recommended or admitted by Anritsu Corporation is prohibited by the license with Microsoft. However, it is the customer's responsibility to purchase, install, and operate antivirus software.



WARNING

Performing system recovery will cause software installation (including updates) after factory shipment of the MS2690A/MS2691A/MS2692A and application settings to be lost. In addition, data (measurements, parameters, etc.) recorded by the customer may be deleted depending on the method to perform system recovery.

5.1.1 Displaying Windows Desktop

Connect a mouse and a keyboard to operate Windows. Use the USB mouse included as standard equipment and a compatible keyboard (USB).

The following are methods to display the Windows Desktop. To display applications of the MS2690A/MS2691A/MS2692A again, press Application or select an application in the Windows Taskbar.

Mouse

Right-click anywhere on the screen, and click **Show the desktop** to display the Desktop.

Or, click the "Minimize" button located in the upper right corner of the application window of the MS2690A/MS2691A/MS2692A. Minimizing all applications displays the Desktop.

Keyboard

Pressing the **Windows** + **D** minimizes all windows and displays the Windows Desktop.

5.1.2 Setting Control Panel

Various Windows settings can be configured using the Control Panel. The following describes general notes on each setting. Although each setting can be configured without using the Control Panel, use these within the scope of the following restrictions.

MS2690A/MS2691A/MS2692A may not operate normally when any other Windows settings are changed from the factory defaults.

Program and Hardware

- Do not delete the installed devices or update/delete the drivers.
- MS2690A/MS2691A/MS2692A may not operate normally due to conflicts with device drivers when new hardware is added.
- Do not update or remove programs installed at the factory.
- Anritsu does not warrant operations of MS2690A/MS2691A/MS2692A when programs not guaranteed are installed.

Windows Update

• Automatic updating of Windows is turned off at the factory. Refer to 5.4 "Windows Security Measures" for details.

Network Connection

- TCP/IP settings may change when MS2690A/MS2691A/MS2692A is remote-controlled through Ethernet. For details, refer to the MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Mainframe Remote Control).
- The IP address is set to use DHCP before shipment from the factory. Ensure that the network administrator settings are appropriate when connecting MS2690A/MS2691A/MS2692A to a network.

User Account

Automatic login with the following settings is enabled at the factory.
 Do not change the User Account settings shown below.

Account Name "ANRITSU"
Password (None)

Account Type Computer Administrator

 New user accounts can be created. Specify "Computer Administrator" for the account type of the user account to be created. Applications will not start up normally with user accounts created using Limited (Power User).

Security

- Windows Firewall setting depends on the factory shipping date as show below.
 - Shipped in or before September 2018 Off
 - Shipped in or after October 2018 On

Refer to 5.4 "Windows Security Measures" for details.

When the setting is changed from Off to On, Windows Firewall displays a dialog box asking if you want to block the applications of MS2690A/MS2691A/MS2692A at the next startup time. Be sure to click **Unblock**.

- Antivirus software is not installed at the factory. Anritsu strongly recommends installing antivirus software when connecting MS2690A/MS2691A/MS2692A to a network. However, MS2690A/MS2691A/MS2692A may not be remote-controlled through Ethernet if the function blocking external communications works.
- Security warnings are not displayed by factory default.

Date & Time

- You can change the date, time and time zone.
- Internet Time is set to Off by factory default. Operations may be affected; therefore, do not change this setting.

Display

- This setting must be changed when using an external monitor with connected to the VGA connector of MS2690A/MS2691A/MS2692A. Refer to Section 5.1.3 "Using external display" for details.
- Operations may be affected by changing screen resolution, refresh rate or monitor power management or turning on the screen saver.

System

- The Computer Name can be changed. The factory default name is "SA" + "Serial Number".
- Do not change Hardware or Advanced settings.
- Do not enable the System Restore. Otherwise,
 MS2690A/MS2691A/MS2692A may not operate normally.

Power Option

- The settings for the Auto Power Off function (Turn off Monitor) of the display can be changed.
- The Power Off function of the hard disk (Turn off Hard Disks) is disabled (Never). Do not change this setting.
- Do not change power option settings other than those described above.
 MS2690A/MS2691A/MS2692A will not operate normally after recovering from hibernation.

5.1.3 Using external display

An external display can be connected to the VGA connector on the rear side of the MS2690A/MS2691A/MS2692A, to display screens of the MS2690A/MS2691A/MS2692A and show multiple displays. The following describes the operation procedure for this function.

When the OS on MS2690A/MS2691A/MS2692A is Windows XP



<Procedure>

- 1. Connect the display to the VGA connector on the rear side of the MS2690A/MS2691A/MS2692A.
- 2. Display the Intel® GMA Driver Settings screen using any of the following methods.
 - Execute "Intel® GMA Driver for Mobile" from the Windows Control Panel.
 - Press **Ctrl** + **Alt** + **F12** on the keyboard.
- 3. Change the Display Devices settings as shown below:

When not using an external display

• Single Display Notebook

When using only an external display

• Single Display Monitor

When displaying the MS2690A/MS2691A/MS2692A display to an external display

• Multiple Display Twin or Intel® Dual Display Clone

• Primary Device Notebook (MS2690A/MS2691A/MS2692A

display)

• Secondary Device Monitor

When displaying with the MS2690A/MS2691A/MS2692A and external display connected

• Multiple Display Extended Desktop

• Primary Device Notebook (MS2690A/MS2691A/MS2692A

display)

• Secondary Device Monitor

When the OS on MS2690A/MS2691A/MS2692A is Windows Embedded Standard 7



<Procedure>

- 1. Connect the display to the VGA connector on the rear of MS2690A/MS2691A/MS2692A.
- 2. Open the Intel® Graphics and Media Control Panel by one of the following methods:
 - In Control Panel of Windows, launch the Intel® Graphics and Media.
 - Press Ctrl + Alt + F12 on the keyboard.
- 3. Change the Multiple Displays settings as shown below:

When not using an external display

 Operating Mode Single Display
 Primary Display Built-in Display (MS2690A/MS2691A/MS2692A display)

When using only an external display

• Operating Mode Single Display

• Primary Display (Connected external display)

When displaying the same content on each of

MS2690A/MS2691A/MS2692A display and external display

 Operating Mode Clone Display
 Primary Device Built-in Display (MS2690A/MS2691A/MS2692A display)

• Secondary Device (Connected external display)

When displaying with MS2690A/MS2691A/MS2692A and external display connected

 Operating Mode Extended Desktop
 Primary Device Built-in Display (MS2690A/MS2691A/MS2692A display)

• Secondary Device (Connected external display)



CAUTION

Turning the MS2690A/MS2691A/MS2692A power On when an external display is not connected to the VGA connector initializes to mainframe display only. When continuously using an external display, it is recommended to keep the external monitor connected for use.



CAUTION

Do not change the resolution, refresh rate or power management settings of the mainframe monitor.

5.1.4 General notes

The MS2690A/MS2691A/MS2692A operations are guaranteed provided it is in factory default settings. The following situations may affect the MS2690A/MS2691A/MS2692A operations.

- Install software that is not factory-installed and operate it on the MS2690A/MS2691A/MS2692A.
 - e.g.) Install antivirus software and execute virus scan.
- Enable or operate a Windows program service that is disabled or stopped at factory.
 - e.g.) Transfer files by FTP while the MS2690A/MS2691A/MS2692A is running.

In addition to the above, note the below.

• The MS2690A/MS2691A/MS2692A may not work properly when the registries are changed.

5.2 Storage Device Configuration

The MS2690A/MS2691A/MS2692A has a built-in hard disk for storing the operating system, application software, user data, and the like.

The hard disk of the MS2690A/MS2691A/MS2692A consists of the following partitions.

Volume C: System Disk

Windows, application software and files required for operation of the MS2690A/MS2691A/MS2692A are stored. The MS2690A/MS2691A /MS2692A may not operate normally when data required for operating the MS2690A/MS2691A/MS2692A are changed or deleted. Do not operate data of this volume at normal use.

Volume D: Hard Disk

This volume is used mainly for inputting files to and as the output destination for the application software of the MS2690A/MS2691A/MS2692A. Adding data to this volume or deleting data on it will not affect MS2690A/MS2691A/MS2692A operations.

A USB memory, used for installing application software and inputting or outputting data, is included as standard equipment with the MS2690A/MS2691A/MS2692A. By factory default, the USB memory stick is recognized as the E drive.

Note the following items when operating MS2690A/MS2691A/MS2692A:

- Do not change the partition configuration. Doing so may affect system operation.
- Do not format the hard disk of the MS2690A/MS2691A/MS2692A.
 Besides the above, data for system recovery is stored within this hard disk. Recovery may become inoperable when the hard disk is formatted.
- The volumes and folders described above are not set to be shared at factory shipment. Although sharing is an effective means for transferring data to and from an external PC, be mindful of security when connecting to a network.

5.3 System Recovery Functions

The MS2690A/MS2691A/MS2692A has system recovery functions to restore data on the hard disk to the factory default. These functions can be used in the event of system instability.

The MS2690A/MS2691A/MS2692A comes with factory-installed recovery software, Phoenix Recover Pro or Paragon Drive Backup. To confirm the installed recovery software, start the MS2690A/MS2691A/MS2692A, and press the **F4** on the BIOS screen to start the recovery software.

<Procedure>

- 1. Disconnect the MS2690A/MS2691A/MS2692A from the network if connected.
- 2. Connect the keyboard and mouse to the mainframe, and then turn the MS2690A/MS2691A/MS2692A power On. The BIOS screen will appear in a few seconds after (The message "Press F2 for System Utilities" appears at the bottom part of the screen).
- 3. Press the **F4** (not font panel of the mainframe) while the screen in Step 2 is displayed.
- 4. Only when the screen displays the message "Press F4 to start recovery from Backup Capsule", press the **F4** again.
- 5. According to the software instructions on the screen, perform a system recovery.

Phoenix Always

Refer to Section 5.3.1 "Phoenix Recover Pro".

Paragon Drive Backup

Refer to Section 5.3.2 "Paragon Drive Backup".



CAUTION

To execute these functions, understand the following items for their use.

- All applications and updates added after factory shipment will be lost. Additionally, all data recorded to Volume C will be restored to the factory default. Backup important data before executing these functions.
- The user data area of Volume D can be restored to the factory default depending on the function to be selected. So as not to lose important user data due to incorrect operations, it is recommended to backup data in Volume D before executing these functions.
- Data deleted by these functions cannot be restored.
- When the Paragon Drive Backup software is installed, the backup data is saved to an unknown partition on the Disk 0. If the unknown partition is accidentally deleted, the backup data required for system recovery is deleted as well.

5.3.1 Phoenix Recover Pro

This subsection describes how to perform a system recovery with factory-installed recovery software "Phoenix Recover Pro".

Restore System drive (partition) only

This function restores only Volume C, in which Windows, application software, and files required for operations of the MS2690A/MS2691A /MS2692A are stored, to the factory default.

Restore entire hard disk

This function restores Volume C and Volume D to the factory default. Although Volume D is mainly used as a storage area for user data, all data on Volume D will be erased.

<Procedure>

1. After the screen displaying "Phoenix Always" appears, the following alternatives are displayed on the screen:

Restore System drive (partition) only

Recovers only Volume C.

Restore entire hard disk

Recovers Volumes C and D.

Select one of the two alternatives, and then click **NEXT**. To cancel, press and hold the Power Switch of the mainframe to power off.

2. After clicking **NEXT**, the confirmation screen appears. Click **OK** to start a system recovery. Although the required time for recovery varies depending on the conditions, it normally takes between 10 and 30 minutes. The progress of recovery is shown during recovery. Although the progress indicator may close during recovery, this is a normal operation.

The MS2690A/MS2691A/MS2692A will restart automatically then normal startup will be executed.

5.3.2 Paragon Drive Backup

This subsection describes how to perform a system recovery with factory-installed recovery software "Paragon Drive Backup".

Type: Partition

This function restores only Volume C, in which Windows, application software, and files required for operations of the MS2690A/MS2691A /MS2692A are stored, to the factory default.

Type: Disk

This function restores Volume C and Volume D to the factory default. Although Volume D is mainly used as a storage area for user data, all data on Volume D will be erased.

<Procedure>

1. After the screen displaying "Drive Backup" appears, the following alternatives are displayed on the screen:

Normal Mode

Safe Mode

Select **Normal Mode** with the arrow keys, and then press the **Enter**.

- 2. When the menu screen appears in about a minute, double-click **Simple Restore Wizard**.
- 3. The Paragon Simple Restore Wizard appears, so click Next.
- 4. The following alternatives are displayed on the screen:

Type: Partition

Recovers only Volume C.

Type: Disk

Recovers Volumes C and D.

Double-click either of them, and then click **NEXT**.

5. When the confirmation screen appears, click **Yes** to start a system recovery. Then, the Progress information screen appears, and the recovery process starts.

Do not click **Cancel** when a system recovery is in progress. Although the required time for recovery varies depending on the conditions, it normally takes between 10 and 30 minutes. The progress of recovery is shown during recovery. Although the progress indicator may close during recovery, this is a normal operation.

- 6. Upon completion of the recovery process, click **Close**. (**Close** appears after the recovery process is completed.)
- 7. When the completion screen appears, click **Finish** to return to the menu screen described in Step 5. Click **Reboot the computer** to reboot the MS2690A/MS2691A/MS2692A, or click **Power off** to turn the power Off.

5.4 Windows Security Measures

The MS2690A/MS2691A/MS2692A uses Windows XP Professional (WinXP) or Windows Embedded Standard 7 (WES7) 64bit version.

To apply security measures described in this section, the MS2690A/MS2691A/MS2692A must run WES7.

When using WinXP, upgrade the CPU and operating system (with MS2690A-180), and the operating system can be updated to WES7.

In terms of security measures and antivirus, we do not recommend connecting the MS2690A/MS2691A/MS2692A running WinXP to a network.

"C1" label is affixed on the rear panel of the MS2690A/MS2691A/MS2692A that runs on WES7.

When connecting the MS2690A/MS2691A/MS2692A with WES7 to a network, make sure the network is secure and protected from viruses. Additionally, it is recommended to take the following security measures to add protection against malware (malicious software) and viruses.

- Activating firewall
- Installing important Windows update programs
- Using antivirus software

The security measure settings condition of the MS2690A/MS2691A/MS2692A can be confirmed from the Control Panel of Windows.

- 1. Use the mouse to right-click anywhere on the screen, and click **Show** the desktop to reveal the desktop.
- 2. Click **Start** \rightarrow **Control Panel** from the Windows menu bar hidden in the lower part of the screen.
- 3. Click System and Security \rightarrow Action Center.
- 4. Click **Security**, and confirm security measures settings condition.

Note:

Security warnings are not displayed by factory default.



CAUTION

If the MS2690A/MS2691A/MS2692A is connected to an external network like the Internet, there may be a risk of causing unexpected problems or suffering unexpected losses. Anritsu Corporation is not responsible for any losses caused by connecting it to a network.



CAUTION

Adding any options or repair may restore the Windows settings to factory default settings. In this case, reinstall Windows updates, turn the firewall on again, and reinstall antivirus software.

5.4.1 Activating Firewall

It is recommended to turn On the Windows firewall on the MS2690A/MS2691A/MS2692A.

Windows firewall On/Off setting:

- 1. Use the mouse to right-click anywhere on the screen, and click **Show** the desktop to reveal the desktop.
- 2. Click **Start** \rightarrow **Control Panel** from the Windows menu bar hidden in the lower part of the screen.
- 3. Click System and Security \rightarrow Windows Firewall to show Windows Firewall display.

Note:

Windows firewall might be turned off by default on the MS2690A/MS2691A/MS2692A released in or before September 2018.

4. Click **Turn Windows Firewall on or off** found in left side of Windows Firewall display.

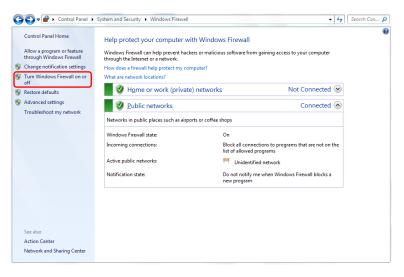


Figure 5.4.1-1 Windows Firewall display

5. Customize Settings display will be shown where Windows firewall On/Off settings can be changed.

Use the MS2690A/MS2691A/MS2692A with the following checkboxes Off (unchecked).

- Block all incoming connections, including those in the list of allowed programs
- Notify me when Windows Firewall blocks a new program



Figure 5.4.1-2 Customize Settings display

Confirmation and setting of allowed programs through Windows firewall:

Even if Windows firewall is On, in order for the MS2690A/MS2691A/MS2692A to operate properly, it is necessary to set as allowed programs those that enable external communication from the MS2690A/MS2691A/MS2692A.

Note:

The factory default setting for allowed programs might not be set properly on the MS2690A/MS2691A/MS2692A released in or before September 2018.

 Use the mouse to click Allow a program or feature through Windows Firewall found in left side of Windows Firewall display.

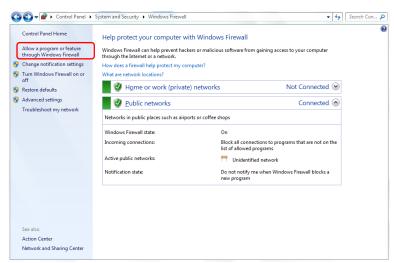


Figure 5.4.1-3 Windows Firewall display

2. Allowed Programs display will be shown where programs allowed through Windows firewall can be confirmed.

Confirm if MS269xA AppMgr is found and set to On (checked) under Allowed programs and features.

When no such information is displayed, it is necessary to add MS269xAAppMgr.

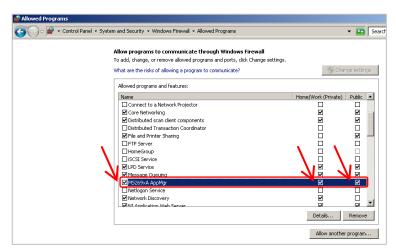


Figure 5.4.1-4 Allowed Programs display

Procedure to add MS269xA AppMgr when it is not registered:

1. Use the mouse to click **Allow another program...** found in Allowed Programs display.

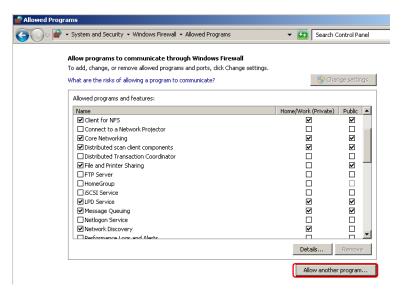


Figure 5.4.1-5 Allowed Programs display

2. Click **Browse...** to show Browse display of Add a Program.

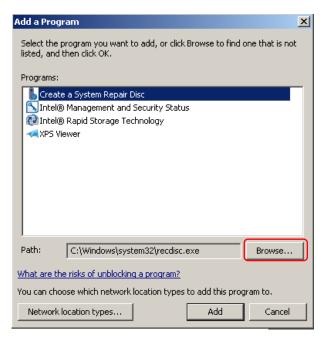


Figure 5.4.1-6 Add a Program display

3. Browse display of Add a Program is shown.

Select C:\Anritsu\Signal Analyzer\Applications\AppMgr.exe, and click **Open**.

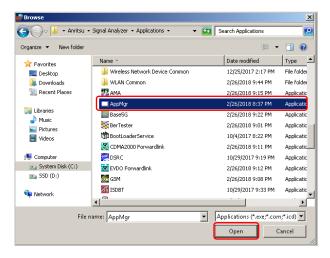


Figure 5.4.1-7 Browse display of Add a Program

4. In Add a Program display, select MS269xA AppMgr, and click Add.

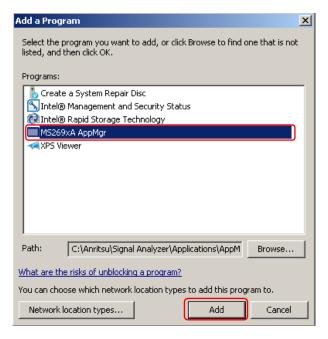


Figure 5.4.1-8 Add a Program display

MS269xA AppMgr is added to Allowed programs and features.
 Confirm if MS269xA AppMgr is found and set to On (checked).

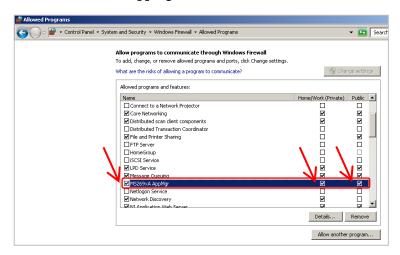


Figure 5.4.1-9 Allowed Programs display

5.4.2 Installing Important Windows Update Programs (Windows Update)

It is necessary to regularly check for important Windows update programs and keep Windows up-to-date. However, the performance of the MS2690A/MS2691A/MS2692A could decrease while downloading and installing Windows updates. Turn off automatic updates in Windows. Instead, it is recommended to manually check for, download, and install new updates on a periodic basis, avoiding the operating hours of the MS2690A/MS2691A/MS2692A.

Windows Update setting and execution:

- Use the mouse to right-click anywhere on the screen, and click Show the desktop to reveal the desktop.
- 2. Click $Start \rightarrow Control Panel$ from the Windows menu bar hidden in the lower part of the screen.
- 3. Click **System and Security** → **Windows Update** to show Windows Update display.
- 4. To turn off automatic updates, click **Change settings** found in left side of Windows Update display.



Figure 5.4.2-1 Windows Update display

5. Select **Never check for updates (not recommended)** in Important updates, then click **OK**.

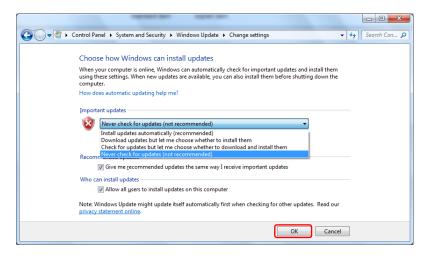


Figure 5.4.2-2 Change settings display

6. To check for newly available update programs (manual update), click **Check for updates** in Windows Update display.



Figure 5.4.2-3 Windows Update display (manual update)

7. When a new update program is found, download and install following the displayed instructions.

5.4.3 Using Antivirus Software

It is recommended to install antivirus software on the MS2690A/MS2691A/MS2692A. However, if the antivirus software updates virus definition data automatically or runs full scan in the background, the performance of the MS2690A/MS2691A/MS2692A could decrease. Do not allow the software to execute them. Instead, it is recommended to manually run them on a periodic basis, avoiding the operating hours of the MS2690A/MS2691A/MS2692A.

The antivirus software that checked operation in the MS2690A/MS2691A/MS2692A is shown below.

• Trend Micro OfficeScan XG

Note:

Refer to the antivirus software operation manual for its installation and operation procedures. It is confirmed that no negative effects in the general usage of the MS2690A/MS2691A/MS2692A are caused by using the software mentioned above, however, we do not guarantee the behavior of all functions of this antivirus software and other software containing similar functions.

Chapter 6 Performance Test

This chapter describes measurement devices, setup methods, and performance test procedures required for performing performance tests as preventive maintenance of the MS2690A/MS2691A/MS2692A.

6.1	Overview of Performance Test		6-2
	6.1.1	Performance test	6-2
	6.1.2	Performance test items and instruments	used.6-3
6.2	Performance Test Items		
	6.2.1	Display frequency accuracy	6-6
	6.2.2	Frequency span display accuracy	6-8
	6.2.3	Single sideband noise level	6-10
	6.2.4	RF frequency characteristics	6-13
	6.2.5	Display average noise level	6-18
	6.2.6	Second harmonic wave distortion	6-23

6.1 Overview of Performance Test

6.1.1 Performance test

Performance tests are performed as part of preventive maintenance in order to prevent the performance of the MS2690A/MS2691A/MS2692A from being degraded before it occurs.

Use performance tests when required for acceptance inspection, routine inspection and performance verification after repairs. Perform items deemed critical at regular intervals as preventive maintenance. Perform the following performance tests for acceptance inspection, routine inspection and performance verification after repairs of the MS2690A/MS2691A/MS2692A.

- Display frequency accuracy
- Frequency span display accuracy
- Single sideband noise level
- RF frequency characteristics
- Display average noise level
- Second harmonic wave distortion

Perform items deemed critical at regular intervals as preventive maintenance. A recommended cycle for routine tests of once or twice a year is desirable.

If items that do not meet the required level are detected during performance testing, contact an Anritsu Service and Sales office. Contact information is available in a separate file (for the PDF version), and on the last page of this manual (for the printed version).

6.1.2 Performance test items and instruments used

Table 6.1.2-1 lists measuring instruments used or performance tests.

Table 6.1.2-1 List of measuring instruments for performance test

Test Items	Required Performance	Name of Recommended Device (Model Name)
Display frequency accuracy	 Frequency range: 500 MHz to 24.5 GHz Hz resolution available Output level range: -20 to 0 dBm dB resolution available 	Signal generator (MG3693C/94C) MG3692C is also available for MS2690A and MS2691A. With Option 004 or 005.
Frequency span display accuracy	 Frequency range: 3,000 to 23,850 MHz 1 Hz resolution available Output level range: -20 to 0 dBm 0.1 dB resolution available 	Signal generator (MG3693C/94C)
Single sideband noise level	 Frequency range: 2 GHz, 1 MHz offset 1 Hz resolution available Output level range: -10 to 10 dBm 0.1 dB resolution available SSB phase noise: -130 dBc/Hz or less (at 100 kHz offset) SSB phase noise: -150 dBc/Hz or less (at 1 MHz offset) External reference input: (10 MHz) available 	Signal generator (HP8665B Equivalent)

Table 6.1.2-1 List of measuring instruments for performance test (Cont'd)

Test Items	Required Performance	Name of Recommended Device (Model Name)	
	• Frequency range: 250 kHz to 13.5 GHz	Signal generator (MG3710A) 6 GHz or less	
RF frequency characteristics	1 Hz resolution available • Output level range: -20 to 0 dBm 0.1 dB resolution available	Signal generator (MG3693C/94C) 6 GHz or more MG3692C is also available for MS2691A.	
characteristics	• Frequency range: 250 kHz to 13.5 GHz	Power meter (ML2488A)	
	• Measurement power range: -30 to +10 dBm (less than 6 GHz)	Power sensor (MA2421D) Less than 6 GHz	
	Measurement power range: -67 to +20 dBm (6 GHz or more)	Power sensor (MA2444D) 6 GHz or more	
	Mainframe accuracy: ±0.02 dB		
Display average noise level	 Frequency range: DC to 13.5 GHz VSWR: 1.2 or less Standard terminator (28N50-2) 		
	• 50 Ω		
		Signal generator (MG3710A)	
Second harmonic wave distortion	 Frequency range: 10 MHz to 6 GHz External reference input: (10 MHz) available Second harmonic wave: -30 dBc or less At 2× frequency of SG output: Loss < 40 dB (LPF) 	Low pass filter SLP-10.7+: fc = 14 MHz SLP-50+: fc = 55 MHz SLP-100+: fc = 108 MHz VLF-400(+): fc = 560 MHz SLP-850+: fc = 850 MHz VLF-1200(+): fc = 1530 MHz VLF-2250(+): fc = 2575 MHz VLF-3000+: fc = 3600 MHz	

6.2 Performance Test Items

Warm up the subject testing device and measuring instruments for at least 30 minutes except where directed, in order to stabilize them sufficiently before running performance tests. Demonstrating maximum measurement accuracy requires, in addition to the above, conducting performance tests under ambient temperatures, little AC power supply voltage fluctuations, as well as the absence of noise, vibrations, dust, humidity or other problems.



Figure 6.2-1 Performance test

6.2.1 Display frequency accuracy

The known frequency which is the reference for the display frequency, is added to the MS2690A/MS2691A/MS2692A as shown in (3) then the center frequency and frequency span are set from the front panel. The difference between the read value of the marker display frequency (bold arrow in figure below) of the spectrum peak point and the setting value of the center frequency (same value as known reference frequency) is measured at this time.

The Swept Frequency Synthesizer uses the signal source phase-locked using the same accuracy as the 10 MHz reference oscillator of the MS2690A/MS2691A/MS2692A.

(1) Test target standards

■ MS2690A/MS2691A/MS2692A

• Display frequency accuracy:

 \pm [Display frequency \times Reference frequency accuracy + Span frequency \times Span accuracy + RBW \times 0.05 + 2 \times N + Span Frequency/(No. of trace points – 1)] Hz

N indicates the mixer harmonic order (Refer to Tables 1.3.1-1 and 1.3.2-1).

(2) Measuring instrument for tests

• Signal generator (MG3693C/94C)

 $(MG3692C\ is\ also\ available$ for MS2690A and MS2691A)

(3) Setup

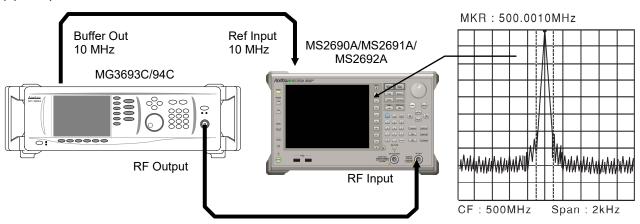


Figure 6.2.1-1 Display frequency accuracy test

(4) Notes on test

Set the output level of the MG3693C/94C to -20 to -10 dBm

(5) Test procedure

- 1. Press Application of the MS2690A/MS2691A/MS2692A then select the Spectrum Analyzer.
- 2. Press of the MS2690A/MS2691A/MS2692A.
- 3. Press (Preset) to perform Preset.
- 4. Press Frequency of the MS2690A/MS2691A/MS2692A to display the Frequency function menu.
- 5. Set the output frequency of the MG3693C/94C to the center frequency (500 MHz) shown in the Display Frequency Accuracy table of Appendix A.
- 6. Set the center frequency shown in the Display Frequency Accuracy table of Appendix A to the MS2690A/MS2691A/MS2692A.
- 7. Set the frequency span (10 kHz) and the resolution bandwidth (300 Hz) corresponding to the center frequency (500 MHz) shown in the Display Frequency Accuracy table of Appendix A to the MS2690A/MS2691A/MS2692A.
- 8. Read the marker frequency value (MKR value) shown on the screen, then check whether this value is within the range of the maximum value and minimum value in the specified range shown in the Display Frequency Accuracy table of Appendix A.
- 9. Repeat Steps 5 to 8 for the center frequency and frequency span according to the center frequency and frequency span combination shown in the Display Frequency Accuracy table of Appendix A.

6.2.2 Frequency span display accuracy

Set to the signal generator the frequencies of the first div and ninth div from the left edge of the screen as shown in (3), and read their frequency difference to obtain the span accuracy.

- (1) Test target standards
- MS2690A/MS2691A/MS2692A
- Frequency span accuracy: ±0.2%
- (2) Measuring instrument for tests
 - Signal generator (MG3693C/94C)

(MG3692C is also available for MS2690A and MS2691A)

(3) Setup

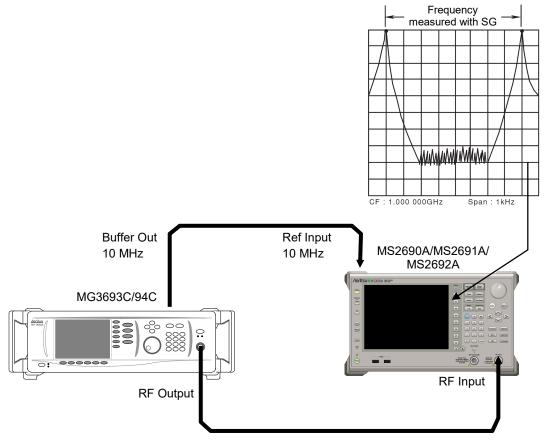


Figure 6.2.2-1 Frequency span display accuracy test

(4) Notes on test

Although the output level of the MG3693C/94C is not specified, set normally to -10 to 0 dBm.

(5) Test procedure

- 1. Press Application of the MS2690A/MS2691A/MS2692A then select the Spectrum Analyzer.
- 2. Press of the MS2690A/MS2691A/MS2692A.
- 3. Press (Preset) to perform Preset.
- 4. Connect the output of the MG3693C/94C to the RF input of the MS2690A/MS2691A/MS2692A.
- 5. Set the frequency span (10 kHz) and center frequency (3 GHz) of the MS2690A/MS2691A/MS2692A from the Frequency Span Display Accuracy table of Appendix A.
- 6. Set the output frequency of the MG3693C/94C to the frequency (2999.996 MHz) for f₁ shown in the Frequency Span Display Accuracy table of Appendix A.
- 7. Measure the spectrum waveform peak frequency by using the marker function of the MS2690A/MS2691A/MS2692A. This frequency is set to f₁'.
- 8. Set to the frequency of output frequency f₂ of the MG3693C/94C (3000.004 MHz), and then measure the spectrum waveform peak frequency by using the marker function. This frequency is set to f₂'.
- 9. Calculate $(f_2' f_1')/0.8/SPAN \times 100 100$ [%] then check whether it satisfies the specified range (minimum value to maximum value) shown in the Frequency Span Display Accuracy table of Appendix A.
- 10. Repeat Steps 5 to 9 for each frequency span of the center frequency at 3 GHz, 7 GHz, and 6.75 GHz shown in the Frequency Span Display Accuracy table of Appendix A.

Note:

7 GHz, and 6.75 GHz can be specified only with the MS2691A/MS2692A.

13.25 GHz can be specified only for the MS2692A.

6.2.3 Single sideband noise level

Set the resolution bandwidth to a specific value then input a signal with a single sideband noise level far smaller than the subject test device. Test how far the dB drops from the peak point for a noise level which is distanced by a specific frequency from the spectrum waveform peak point at this time.

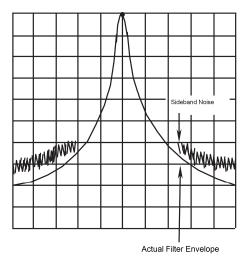


Figure 6.2.3-1 Single sideband noise level

- (1) Test target standards
- Single sideband noise: At 18 to 28°C, 2 GHz
 - ≤ -116 dBc/Hz (Frequency 2 GHz, 100 kHz Offset)
 - ≤-137 dBc/Hz (Frequency 2 GHz, 1 MHz Offset)
- (2) Measuring instrument for tests
 - Signal generator (HP8665B)

(3) Setup

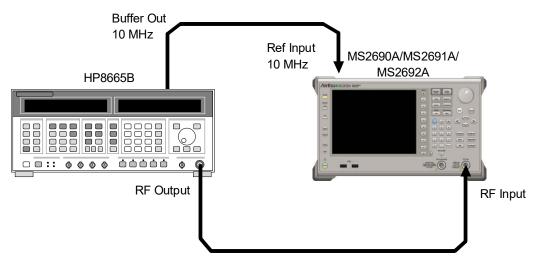


Figure 6.2.3-2 Signal sideband noise level

(4) Notes on test

Perform the test at an ambient temperature of 18 to 28°C and after warming up for at least 30 minutes.

(5) Test procedure

- 1. Start the application Spectrum Analyzer of the MS2690A/MS2691A/MS2692A.
- 2. Press Preset.
- 3. Press (Preset).
- 4. Press and then (SIGANA All).
- 5. Set 2 GHz, 0 dBm for the HP8665B.
- 6. Set as follows for the MS2690A/MS2691A/MS2692A:

Reference level 0 dBm 0 dB Attenuator Span frequency $0~\mathrm{Hz}$ VBW mode Power Det mode Sample **RBW** $100 \; \mathrm{Hz}$ **VBW** $1 \, \mathrm{Hz}$ Sweep time $1 \mathrm{s}$ 1001 Trace points

7. Set the center frequency of the MS2690A/MS2691A/MS2692A to 2 GHz.

- 8. Measure the following parameters for the burst average measurement function. Adjust the output level of the MP8665B so that the average measurement value becomes 0 dBm ±0.06 dB, and then measure level [p0].
 - Start time $0.1 \mathrm{s}$
 - Stop time 0.9 s
- For the MS2690A/MS2691A/MS2692A, set the center frequency (2.0001 GHz) corresponding to the offset frequency (100 kHz) shown in the Single Sideband Noise Level table of Appendix A. Also, set RBW to 10 kHz according to this table.
- 10. Measure level [p1] by using the burst average measurement function.
- 11. Calculate the single sideband noise using the measurement value. Single sideband noise = p1 p0 10log10000 [dBc/Hz]
- 12. In the same way as Step 9, measure level [p2] at the center frequency (2001 MHz).
- 13. Calculate the single sideband noise using the measurement value. Single sideband noise = p2 p0 10log30000 [dBc/Hz]

6.2.4 RF frequency characteristics

Even if multiple signals with different frequencies and the same amplitude are input to a spectrum analyzer, the amplitude of each spectrum must be displayed equally on the screen. This section describes how to obtain the level deviation of the frequency for each band by inputting calibrated signals from an external device.

(1) Test target standards

■ MS2690A

Frequency characteristics

After CAL execution, at input attenuator = 10 dB, 18 to 28°C
 (Without MS2690A-008 or Preamplifier=OFF)
 ±0.35 dB (9 kHz ≤ frequency ≤ 6 GHz, Frequency Band Mode: Normal)
 (With MS2690A-008 and Preamplifier=ON)
 ±0.65 dB (100 kHz ≤ frequency ≤ 6 GHz, Frequency Band Mode: Normal)

■ MS2691A

Frequency characteristics

• After CAL execution, at input attenuator = 10 dB, 18 to 28°C (Without MS2691A-008 or Preamplifier=OFF)

 $\pm 0.35~\mathrm{dB}$

(9 kHz ≤ frequency ≤ 6 GHz, Frequency Band Mode: Normal)

(9 kHz ≤ frequency < 3 GHz, Frequency Band Mode: Spurious)

(With MS2691A-008 and Preamplifier=ON)

 $\pm 0.65~\mathrm{dB}$

(100 kHz \leq frequency \leq 6 GHz, Frequency Band Mode: Normal)

(100 kHz ≤ frequency < 3 GHz, Frequency Band Mode: Spurious)

• After CAL execution, at input attenuator = 10 dB, after preselector tuning,

at 18 to 28°C

 $\pm 1.50~\mathrm{dB}$

(6 GHz < frequency ≤ 13.5 GHz, Frequency Band Mode: Normal)

(3 GHz ≤ frequency ≤ 13.5 GHz, Frequency Band Mode: Spurious)

■ MS2692A

Frequency characteristics

 After CAL execution, at input attenuator = 10 dB, 18 to 28°C (Without MS2692A-008 or Preamplifier=OFF)

 $\pm 0.35~\mathrm{dB}$

(9 kHz ≤ frequency ≤ 6 GHz, Frequency Band Mode: Normal)

(9 kHz ≤ frequency < 3 GHz, Frequency Band Mode: Spurious)

(With MS2692A-008 and Preamplifier=ON)

±0.65 dB

(100 kHz ≤ frequency ≤ 6 GHz, Frequency Band Mode: Normal) (100 kHz ≤ frequency < 3 GHz, Frequency Band Mode: Spurious)

• After CAL execution, at input attenuator = 10 dB, after preselector tuning,

at 18 to 28°C

(Without MS2692A-008 or Preselector Bypass =OFF)

 $\pm 1.50~\mathrm{dB}$

(6 GHz < frequency ≤ 13.5 GHz, Frequency Band Mode: Normal)

(3 GHz ≤ frequency ≤ 13.5 GHz, Frequency Band Mode: Spurious)

 $\pm 2.50~\mathrm{dB}$

 $(13.5 \text{ GHz} \le \text{frequency} \le 26.5 \text{ GHz})$

After CAL execution, at input attenuator = 10 dB,
 (With MS2692A-008 and Preamplifier Bypass = ON)

 $\pm 1.00~dB$

 $(6 \text{ GHz} < \text{frequency} \le 13.5 \text{ GHz})$

 $\pm 1.50~\mathrm{dB}$

 $(13.5 \text{ GHz} \le \text{frequency} \le 26.5 \text{ GHz})$

(2) Measuring instrument for tests

Signal generator (MG3710A) 6 GHz or less

(MG3693C/MG3694C) 6 GHz or more

(MG3692C is also available for MS2690A and MS2691A)

• Power meter (ML2488A)

• Power sensor (MA2421D) 6 GHz or less

(MA2444D) 6 GHz or more

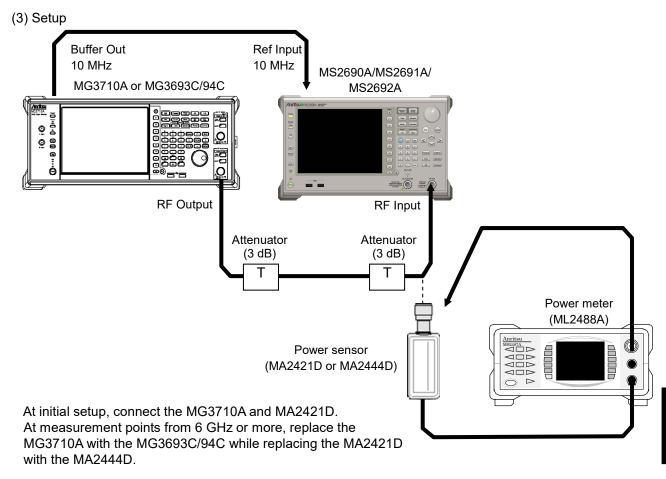


Figure 6.2.4-1 RF frequency characteristics test

(4) Notes on test

Perform the test at an ambient temperature of 18 to 28°C and after warming up for at least 30 minutes.

Regarding the cable, attenuator, and conversion adapter, the applied parts below are recommended.

Cable: J0912 Coaxial cord (for 40 GHz)
Attenuator: 41KC-3 Fixed Attenuator, 3 dB
Conversion adapter: J1398A N-SMA ADAPTOR

(5) Test procedure

- (a) Calibrating the MG3710A (MG3693C/94C) output level
 - 1. Set the MG3710A (MG3693C/94C) as follows:

OUTPUT FREQ 5 MHz OUTPUT LEVEL -4 dBm

- 2. Connect the MG3710A (MG3693C/94C) output to the power sensor of the power meter via the coaxial cable.
- 3. Check the power meter display.
- 4. Change the output frequency of the MG3710A (MG3693C/94C) to the center frequency shown in the RF Frequency Characteristics table of Appendix A. Perform calibration by using the power meter so that the signal level at each frequency becomes –10 dBm ±0.06 dB, and then read the setting value on the MG3710A (MG3693C/94C) and the indicated value (calibration value) on the power meter.
- (b) Measuring RF frequency characteristics
 - Connect the MG3710A (MG3693C/94C) RF output to the RF input of the MS2690A/MS2691A/MS2692A using the coaxial cable.
 - 2. Start the application Spectrum Analyzer of the MS2690A/MS2691A/MS2692A.
 - 3. Press of the MS2690A/MS2691A/MS2692A.
 - 4. Press (Preset).
 - 5. Press and then (SIGANA All).
 - 6. Set as follows for the MS2690A/MS2691A/MS2692A:

5 MHz Center Freq Span 0 HzATT 10 dB Reference Level -10 dBm**RBW** $100 \; \mathrm{Hz}$ Sweep Time 50 msTrace Point 1001 Det Mode RMS

- 7. Output the signal (calibration value) of the MG3710A (MG3693C/94C) calibrated in Step (a) 4 to the MS2690A/MS2691A/ MS2692A.
- 8. Using the burst average measurement function, set the following parameters and measure the level.

Start Time 5 ms Stop Time 45 ms

- 9. Repeat the measurement, changing the frequency as shown in the RF Frequency Characteristics table of Appendix A.
- 10. Calculate the RF frequency characteristics, using the calibration value of the MG3710A (MG3693C/94C) and the indicated value on the MS2690A/MS2691A/MS2692A. RF frequency characteristics = Indicated value on MS2690A/MS2691A/MS2692A calibration value (indicated value on power meter)
- 11. Set this instrument shown as below, only when Option 008 is installed:

Press Amplitude to display the amplitude menu, and then press (Pre-amp) to set the pre-amplitude settings to On. Calculate RF frequency characteristic, according to steps 8 and 9.

Center Freq	$50~\mathrm{MHz}$
Span	$0~\mathrm{Hz}$
ATT	10 dB
Reference Level	−30 dBm
RBW	$100~\mathrm{Hz}$
Sweep Time	$50~\mathrm{ms}$
Trace Point	1001
Det Mode	RMS

6.2.5 Display average noise level

Internal noise evenly distributed in proportion to the resolution bandwidth across the entire measurement frequency band is referred to as the display average noise level.

(1) Test target standards

Display average noise level
 VBW = 1 Hz (Video Average), detection mode: Sample, input attenuator 0 dB, at 18 to 28°C

■ MS2690A

```
(Without MS2690A-008)
\leq -135 \text{ dBm/Hz} (100 \text{ kHz})
\leq -145 \text{ dBm/Hz} (1 \text{ MHz})
\leq -155 \text{ dBm/Hz} (30 \text{ MHz} \leq \text{frequency} < 2.4 \text{ GHz})
\leq -153 dBm/Hz (2.4 GHz \leq frequency < 4 GHz)
\leq -152 \text{ dBm/Hz} (4 \text{ GHz} \leq \text{frequency} \leq 6 \text{ GHz})
(With MS2690A-008 or Preamplifier=ON)
\leq -150 \text{ dBm/Hz} (100 \text{ kHz})
\leq -159 \text{ dBm/Hz} (1 \text{ MHz})
\leq -166 dBm/Hz (30 MHz \leq frequency < 2.4 GHz)
\leq -165 dBm/Hz (2.4 GHz \leq frequency < 3 GHz)
\leq -164 \text{ dBm/Hz} (3 \text{ GHz} \leq \text{frequency} < 4 \text{ GHz})
\leq -161 dBm/Hz (4 GHz \leq frequency < 5 GHz)
\leq -159 \text{ dBm/Hz} (5 \text{ GHz} \leq \text{frequency} \leq 6 \text{ GHz})
(With MS2690A-008 or Preamplifier=OFF)
\leq -135 \text{ dBm/Hz} (100 \text{ kHz})
\leq -145 \text{ dBm/Hz} (1 \text{ MHz})
\leq -153 \text{ dBm/Hz} (30 \text{ MHz} \leq \text{frequency} < 2.4 \text{ GHz})
\leq -152 \text{ dBm/Hz} (2.4 \text{ GHz} \leq \text{frequency} < 3 \text{ GHz})
\leq -151 \text{ dBm/Hz} (3 \text{ GHz} \leq \text{frequency} < 4 \text{ GHz})
\leq -150 \text{ dBm/Hz} (4 \text{ GHz} \leq \text{frequency} < 5 \text{ GHz})
\leq -149 \text{ dBm/Hz} (5 \text{ GHz} \leq \text{frequency} \leq 6 \text{ GHz})
```

■ MS2691A

```
(Without MS2691A-008)  \leq -135 \text{ dBm/Hz } (100 \text{ kHz})   \leq -145 \text{ dBm/Hz } (1 \text{ MHz})   \leq -155 \text{ dBm/Hz } (30 \text{ MHz} \leq \text{frequency} < 2.4 \text{ GHz})   \leq -153 \text{ dBm/Hz } (2.4 \text{ GHz} \leq \text{frequency} < 3 \text{ GHz})   \leq -153 \text{ dBm/Hz } (3 \text{ GHz} \leq \text{frequency} < 4 \text{ GHz})   \leq -152 \text{ dBm/Hz } (4 \text{ GHz} \leq \text{frequency} < 6 \text{ GHz})   \leq -151 \text{ dBm/Hz } (6 \text{ GHz} \leq \text{frequency} < 10 \text{ GHz})   \leq -150 \text{ dBm/Hz } (10 \text{ GHz} \leq \text{frequency} \leq 13.5 \text{ GHz})
```

```
(With MS2691A-008 or Preamplifier=ON)
```

- $\leq -150 \text{ dBm/Hz} (100 \text{ kHz})$
- $\leq -159 \text{ dBm/Hz} (1 \text{ MHz})$
- \leq -166 dBm/Hz (30 MHz \leq frequency < 2.4 GHz)
- \leq -165 dBm/Hz (2.4 GHz \leq frequency < 3 GHz)
- \leq -164 dBm/Hz (3 GHz \leq frequency < 4 GHz)
- \leq -161 dBm/Hz (4 GHz \leq frequency < 5 GHz)
- $\leq -159 \text{ dBm/Hz} (5 \text{ GHz} \leq \text{frequency} \leq 6 \text{ GHz})$

(With MS2691A-008 or Preamplifier=OFF)

- $\leq -135 \text{ dBm/Hz} (100 \text{ kHz})$
- $\leq -145 \text{ dBm/Hz} (1 \text{ MHz})$
- \leq -153 dBm/Hz (30 MHz \leq frequency < 2.4 GHz)
- $\leq -152 \text{ dBm/Hz} (2.4 \text{ GHz} \leq \text{frequency} < 3 \text{ GHz})$
- \leq -151 dBm/Hz (3 GHz \leq frequency < 4 GHz)
- \leq -150 dBm/Hz (4 GHz \leq frequency < 5 GHz)
- \leq -149 dBm/Hz (5 GHz \leq frequency < 6 GHz)
- \leq -151 dBm/Hz (6 GHz \leq frequency < 10 GHz)
- $\leq -150 \text{ dBm/Hz} (10 \text{ GHz} \leq \text{frequency} \leq 13.5 \text{ GHz})$

■ MS2692A

(Without MS2692A-008,067)

- $\leq -135 \text{ dBm/Hz} (100 \text{ kHz})$
- \leq -145 dBm/Hz (1 MHz)
- $\leq -155 \text{ dBm/Hz} (30 \text{ MHz} \leq \text{frequency} < 2.4 \text{ GHz})$
- \leq -153 dBm/Hz (2.4 GHz \leq frequency < 3 GHz)
- $\leq -153 \text{ dBm/Hz} (3 \text{ GHz} \leq \text{frequency} < 4 \text{ GHz})$
- $\leq -152 \text{ dBm/Hz} (4 \text{ GHz} \leq \text{frequency} < 6 \text{ GHz})$
- \leq -151 dBm/Hz (6 GHz \leq frequency < 10 GHz)
- $\leq -150 \text{ dBm/Hz} (10 \text{ GHz} \leq \text{frequency} \leq 13.5 \text{ GHz})$
- \leq -147 dBm/Hz (13.5 GHz \leq frequency \leq 20 GHz)
- \leq -143 dBm/Hz (20 GHz < frequency \leq 26.5 GHz)

(With MS2692A-008 or Preamplifier=ON)

- $\leq -150 \text{ dBm/Hz} (100 \text{ kHz})$
- \leq -159 dBm/Hz (1 MHz)
- \leq -166 dBm/Hz (30 MHz \leq frequency < 2.4 GHz)
- \leq -165 dBm/Hz (2.4 GHz \leq frequency < 3 GHz)
- \leq -164 dBm/Hz (3 GHz \leq frequency < 4 GHz)
- \leq -161 dBm/Hz (4 GHz \leq frequency < 5 GHz)
- $\leq -159 \text{ dBm/Hz} (5 \text{ GHz} \leq \text{frequency} \leq 6 \text{ GHz})$

(With MS2692A-008 or Preamplifier=OFF)

- $\leq -135 \text{ dBm/Hz} (100 \text{ kHz})$
- $\leq -145 \text{ dBm/Hz} (1 \text{ MHz})$
- \leq -153 dBm/Hz (30 MHz \leq frequency < 2.4 GHz)
- \leq -152 dBm/Hz (2.4 GHz \leq frequency < 3 GHz)

```
\leq -151 \text{ dBm/Hz} (3 \text{ GHz} \leq \text{frequency} < 4 \text{ GHz})
\leq -150 \text{ dBm/Hz} (4 \text{ GHz} \leq \text{frequency} < 5 \text{ GHz})
\leq -149 dBm/Hz (5 GHz \leq frequency < 6 GHz)
\leq -151 \text{ dBm/Hz} (6 GHz \leq frequency < 10 \text{ GHz})
\leq -150 dBm/Hz (10 GHz < frequency \leq 13.5 GHz)
\leq -147 dBm/Hz (13.5 GHz < frequency \leq 20 GHz)
\leq -143 dBm/Hz (20 GHz < frequency \leq 26.5 GHz)
(With MS2692A-067)
\leq -135 \text{ dBm/Hz} (100 \text{ kHz})
\leq -145 \text{ dBm/Hz} (1 \text{ MHz})
\leq -155 \text{ dBm/Hz} (30 \text{ MHz} \leq \text{frequency} < 2.4 \text{ GHz})
\leq -153 \text{ dBm/Hz} (2.4 \text{ GHz} \leq \text{frequency} < 3 \text{ GHz})
\leq -153 \text{ dBm/Hz} (3 \text{ GHz} \leq \text{frequency} < 4 \text{ GHz})
\leq -152 dBm/Hz (4 GHz \leq frequency < 5 GHz)
\leq -152 \text{ dBm/Hz} (5 \text{ GHz} \leq \text{frequency} < 6 \text{ GHz})
\leq -146 dBm/Hz (6 GHz \leq frequency < 10 GHz)
\leq -145 \text{ dBm/Hz} (10 \text{ GHz} \leq \text{frequency} \leq 13.5 \text{ GHz})
\leq -142 dBm/Hz (13.5 GHz < frequency \leq 20 GHz)
\leq -138 dBm/Hz (20 GHz < frequency \leq 26.5 GHz)
```

(2) Measuring instrument for tests

• Standard terminator (28N50-2)

(3) Setup

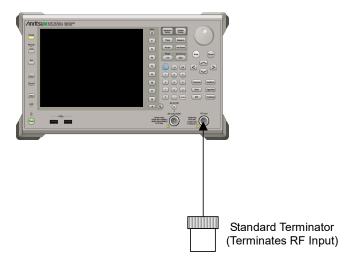


Figure 6.2.5-1 Display average noise level

(4) Notes on test

Perform the test at an ambient temperature of 18 to $28^{\circ}\mathrm{C}$ and after warming up for at least 30 minutes.

(5) Test procedure

- 1. Start the application Spectrum Analyzer of the MS2690A/MS2691A/MS2692A.
- 2. Press of the MS2690A/MS2691A/MS2692A.
- 3. Press [F1] (Preset).
- 4. Press and then (SIGANA All).
- 5. Terminate the RF input with the standard terminator.
- 6. Set as follows for the MS2690A/MS2691A/MS2692A (time domain mode).

Center Freq 100 kHzSpan $0~\mathrm{Hz}$ Reference Level -100 dBm **RBW** $1 \, \mathrm{kHz}$ **VBW** $1 \, \mathrm{Hz}$ **VBW** Mode Video Attenuator 0 dB Detection Sample Sweep Time $1 \mathrm{s}$

- 7. Press Trace
- 8. Press [4] (Trace-A Storage Mode) then select [4] (Average).
- 9. Press to return to the original page.
- 10. Press [F7] (Storage Count).
- 11. Set the average count to 16 times.
- 12. Press (Single) to start averaging then wait until the sweep for an average count of 16 times is completed.
- 13. Using the burst average measurement function, set the Start Time and Stop Time parameters as follows and measure the level.

Start Time 100 ms Stop Time 900 ms

- 14. The (Burst average measurement value [dBm] -30 dB) will be the display average noise level (dBm/Hz).
- 15. Set the center frequency according to the Display Average Noise Level table in Appendix A, then obtain the display average noise level according to Steps 7 to 14.
- 16. Set this instrument as shown below, only when Option 008 is installed:

Press Amplitude to display the amplitude menu, and then press (Pre-amp) to set the pre-amplitude settings to On.

Calculate the RF frequency characteristic, according to steps 11 to 15.

6.2.6 Second harmonic wave distortion

A harmonic wave is generated and displayed on the screen due to analyzer input mixer nonlinearity even when an input signal without harmonic wave distortion is applied to the spectrum analyzer.

The second harmonic wave level will be the highest among the harmonic waves displayed on this screen.

For the test method point, apply a distortion signal (at least 20 dB) lower than the internal harmonic wave of the MS2690A/MS2691A/MS2692A then measure the level difference between the fundamental wave and the second harmonic wave. In the event a low distortion signal source cannot be obtained, apply a low distortion signal to the MS2690A/MS2691A/MS2692A after passing through LPF.

(1) Test Target Standards

- Second harmonic wave distortion
- MS2690A/MS2691A/MS2692A

(Without MS2690A-008/MS2691A-008/MS2692A-008)

At mixer input level -30 dBm

 \leq -60 dBc (Input frequency: $10 \leq$ frequency \leq 400 MHz)

 ≤ -75 dBc (Input frequency: < 0.4 < frequency ≤ 0.8 GHz)

 ≤ -75 dBc (Input frequency: < 0.8 < frequency ≤ 1 GHz)

 ≤ -75 dBc (Input frequency: 1 < frequency ≤ 3 GHz)

(With MS2690A-008/MS2691A-008/MS2692A-008)

At Preamplifier input level -45 dBm

 \leq -50 dBc (Input frequency: $10 \leq$ frequency \leq 400 MHz)

 ≤ -55 dBc (Input frequency: < 0.4 < frequency ≤ 0.8 GHz)

 ≤ -55 dBc (Input frequency: < 0.8 < frequency ≤ 1 GHz)

 ≤ -55 dBc (Input frequency: $1 < \text{frequency} \leq 3 \text{ GHz}$)

(2) Measuring instrument for tests

- Signal generator (MG3710A)
- LPF: Items with 40 dB or higher attenuation at twice the frequency of the fundamental wave.

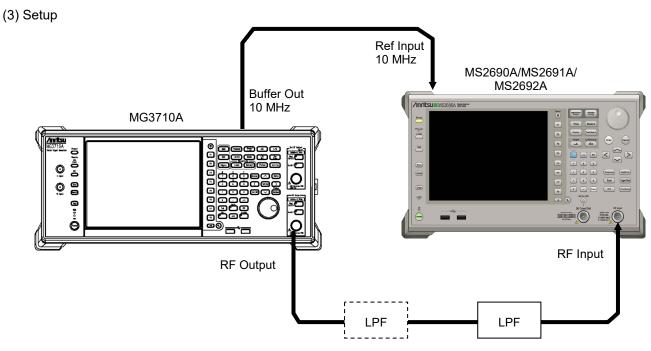


Figure 6.2.6-1 Second harmonic wave distortion test

(4) Notes on test

Perform the test at an ambient temperature of 18 to $28^{\circ}\mathrm{C}$ and after warming up for at least 30 minutes.

(5) Test procedure

- Start the application Spectrum Analyzer of the MS2690A/MS2691A/ MS2692A.
- 2. Press $\stackrel{\text{\tiny Preset}}{\frown}$ of the MS2690A/MS2691A/MS2692A.
- 3. Press (Preset).
- 4. Press cal then (SIGANA All).
- 5. Set as follows for the MS2690A/MS2691A/MS2692A:

Span 50 kHz
RBW 1 kHz
VBW 1 kHz
Attenuator 10 dB
Det Mode Positive
Sweep Time 150 ms

- 6. Set the output level of the MG3710A to -20~dBm.
- 7. Connect LPF according to the Second Harmonic Wave Distortion table in Appendix A. If LPF attenuation is insufficient, use LPF in 2 stages.
- 8. Set the output frequency of the MG3710A and center frequency of the MS2690A/MS2691A/MS2692A, and reference level, according to the Second Harmonic Wave Distortion table in Appendix A.

- 9. Adjust the output level of the signal generator so as to get the peak point of the spectrum waveform into the range of $-20 \text{ dBm} \pm 0.06 \text{ dB}$.
- 10. Press PeakSearch to perform a peak search. Set so as to include the signal trace peak point to the zone marker.
- 11. Press Marker to display the Marker function menu, and then press (Delta) to set to the delta marker.

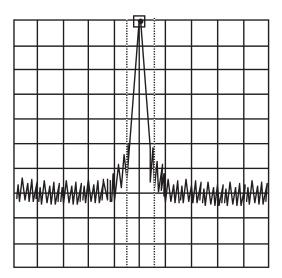


Figure 6.2.6-2 Fundamental wave

12. In order to display the second harmonic wave on the screen, set twice as much frequency as the center frequency. Delta marker level reading indicates the level difference between the fundamental wave and the second harmonic wave.

In the event the level difference is 80 dB or higher, set the reference level to -50 dBm. Check whether the setting value of the input attenuator is 10 dB.

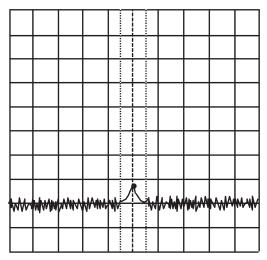


Figure 6.2.6-3 Second harmonic wave

13. Repeat Steps 7 to 12, according to the Second Harmonic Wave Distortion table in Appendix A.

Chapter 7 Power Meter

This chapter describes basic operations of the power meter functions.

7.1	Power Meter7-2		
7.2	Display Description		
7.3	Functi	on Menu	7-5
	7.3.1	Setting the frequency	7-6
	7.3.2	Level setting	7-7
	7.3.3	Measure	7-9
	7.3.4	Accessory	7-10
	7.3.5	Power Meter	7-11
	7.3.6	Aperture Setting	7-14
7.4	Initializ	zation	7-15
	7.4.1	Preset	7-15
	7.4.2	Default value list	7-15
7.5	Installi	ng the Driver Software	7-16

7.1 Power Meter

You can connect a USB power sensor to the MS2690A/MS2691A/MS2692A and read the measurement values.

Preparation

For the setup procedure of the application software for this function, refer to Section 3.8 "Installing and Uninstalling" and Section 3.5 "Loading, Unloading, and Switching Applications."

The MS2690A/MS2691A/MS2692A can accept any USB power sensor in the following table, automatically recognize its model name, and automatically set the COM Port regardless of the USB Port to which the USB power sensor is connected.

Table 7.1-1 shows the models and specifications of compatible power sensors.

Resolution Model Frequency **Dynamic Range** MA24104A 600 MHz to 4 GHz1 kHz +3 dBm to +51.76 dBm MA24105A $350~\mathrm{MHz}$ to $4~\mathrm{GHz}$ 100 kHz+3 dBm to +51.76 dBm MA24106A $50~\mathrm{MHz}$ to $6~\mathrm{GHz}$ 1 kHz-40 dBm to +23 dBmMA24108A $10~\mathrm{MHz}$ to $8~\mathrm{GHz}$ $100 \; \mathrm{kHz}$ -40 dBm to +20 dBm-40 dBm to +20 dBm MA24118A 10 MHz to 18 GHz 100 kHzMA24126A 10 MHz to 26 GHz100 kHz-40 dBm to +20 dBm

Table 7.1-1 USB Power Sensors

Follow the procedure below to select a USB power meter function:

<Procedure>

- Plug in the USB power sensor connector to the USB port of the MS2690A/MS2691A/MS2692A Signal Analyzer.
- 2. Press Application Switch function menu.
- 3. Press the Power Meter function key.

You can select the application also by clicking the Power Meter icon on the task bar.

7.2 Display Description

Press Application Switch function menu. Then, select the Power Meter, and you can display the power meter application main screen and the function menu.

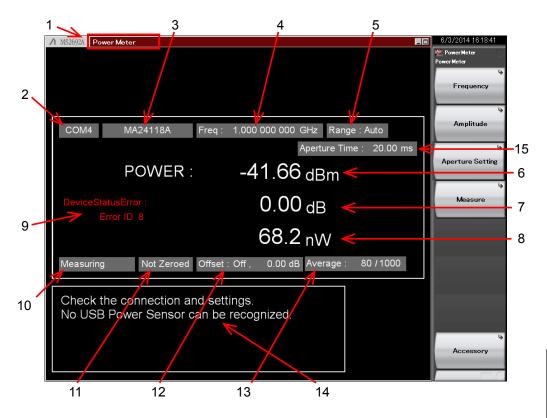


Figure 7.2-1 Power meter application main screen

Table 7.2-1 Parameters on the power meter application main screen

No.	Display	Description
1	Power Meter	Application software name The name of the synchronizing application is displayed in parentheses.
2	COMxx	COM Port number (xx) to which the USB power sensor is connected.
	Port	Appears when no USB power sensor is connected.
	MAxxxxA	Model of the connected USB power sensor.
3	Model	Appears when no USB power sensor is connected.
4	Frequency	Calibration factor frequency setting.
	Auto	Input range: Auto
5	Low	Input range: Low input level
	High	Input range: High input level
6	Power [dBm]	Measured power with offset level in dBm units. This value is displayed in red in case of a device status error.
7	Relative Power [dB]	Relative power in dB units.
8	Power [W]	Measured power with offset level in W units.
9	Device Status Error	Appears in case of a power sensor error.*
	Measuring	Measurement is in progress.
10	COM Searching	USB power sensor search in progress.
	Stop	USB power sensor search stopped.
11	Not Zeroed	Zeroing not executed.
	Zeroed	Zeroing executed.
12	Offset	Sets the offset level value to be added to the power sensor reading and turns on and off the offset function.
13	Average	Current count / Setting count of averaging. Appears when the Average is turned on. 7.3.5 "Power Meter"
14	Disconnect Info	Appears when no power sensor is connected or the connected power sensor is not recognized by the mainframe. If the power sensor is connected, disconnect it from the USB port and securely connect again.
15	Aperture Mode	Valid aperture setting value is displayed.
	Aperture Time	7.3.6 "Aperture Setting"

^{*:} For detailed information on error causes and Error IDs, refer to Chapter 13-3 "STATUS?" in "USB Power Sensors MA241xxA and PowerXpert User Guide"

7.3 Function Menu

 $\operatorname{Press} \buildrel {\buildrel {$

Table 7.3-1 Power Meter function menu

Function Key	Menu Display	Function
F1	Frequency	Opens the Frequency function menu. 7.3.1 "Setting the frequency"
F2	Amplitude	Opens the Amplitude function menu. 7.3.2 "Level setting"
F3	Aperture Setting	Opens the Aperture Setting function menu. 7.3.6 "Aperture Setting"
F4	Measure	Opens the Measure function menu. 7.3.3 "Measure"
F8	Accessory	Opens the Accessory function menu. 7.3.4 "Accessory"

7.3.1 Setting the frequency

In the Frequency function menu, you can set the calibration factor frequency of the USB power sensor.

Press $\[\]$ (Frequency) in the Power Meter function menu to display the Frequency function menu.

Table 7.3.1-1 Frequency function menu

Function Key	Menu Display	Function
F1	Frequency	Sets the calibration factor frequency of the power sensor.

Press [5] (Frequency) in the Frequency function menu or [5] to display the Frequency dialog box, and then set the measurement frequency.

Table 7.3.1-2 USB Power Sensor

Model	Setting range	Resolution
Disconnected	10 MHz to 26 GHz	1 Hz
MA24104A	600 MHz to 4 GHz	1 kHz
MA24105A	350 MHz to 4 GHz	100 kHz
MA24106A	50 MHz to 6 GHz	1 kHz
MA24108A	10 MHz to 8 GHz	100 kHz
MA24118A	10 MHz to 18 GHz	100 kHz
MA24126A	10 MHz to 26 GHz	100 kHz

Note:

The values below resolutions are rounded.

7.3.2 Level setting

Press [F2] (Amplitude) or [Amplitude] in the Power Meter function menu to display the Amplitude function menu.

Table 7.3.2-1 Amplitude function menu

Function Key	Menu Display	Function
F1	Range	Opens the Range function menu.
F7	Offset (On/Off)	Turns on and off the level offset function.
F8	Offset Value	Sets the level offset value.

Setting the range

Press [1] (Range) in the Amplitude function menu to display the Range function menu.

You can select the measurement range of the power sensor among Auto, High, and Low. (High and Low require manually setting.)

Note:

This parameter is always Auto when the model is MA24104A or MA24106A.

Table 7.3.2-2 Range function menu

Function Key	Menu Display	Function
F1	Auto Automatic setting (Default)	
F2	Low	When the model is MA24108A, MA24118A, or MA24126A: Input range: -40 dBm to -7 dBm When the model is MA24105A Input range: +3 dBm to +38 dBm
F3	High	When the model is MA24108A, MA24118A, or MA24126A: Input range: -7 dBm to +20 dBm When the model is MA24105A Input range: +38 dBm to +51.76 dBm

Setting the level offset

An arbitrary offset value is added to the measurement value, and their sum is displayed.

Press (Offset) in the Amplitude function menu to turn on and off the addition of the offset value.

Offset: Level offset

On Turns on the addition of the offset value.

Off Turns off the addition of the offset value (Default).

Press [58] (Offset Value) in the Amplitude function menu to display the Offset Value dialog box, and then set the offset value.

Offset Value:

Setting range and minimum resolution of level offset

Setting range -100.00 to 100.00 dB

Resolution 0.01 dB Default 0.00 dB

When this function is used, the displayed power sensor value is offset with the value specified in the Offset Value dialog box. It is used when the path loss or gain from the MS2690A/MS2691A/MS2692A to DUT is corrected.

[Power sensor reading after offset]

= [Power sensor reading] + [Offset level]

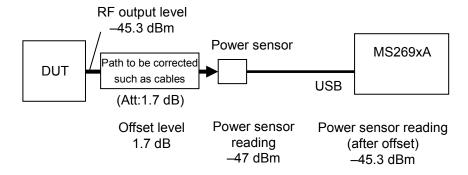


Figure 7.3.2-1 Summary of offset level

7.3.3 Measure

Press [4] (Measure) or [Measure] in the Power Meter function menu to display the Measure function menu.

The Measure function menu items depend on whether the Power Meter application synchronizes with the other application or not.

When not synchronizing with any applications

Table 7.3.3-1 Measure function menu

Function Key	Menu Display	Function
F1	Power Meter	Opens the Power Meter function menu. 7.3.5 "Power Meter"

When synchronizing with the application

Table 7.3.3-2 Measure function menu

Function Key	Menu Display	Function
F1	Modulation Analysis	Displays the application software that is synchronizing.
F2	Power Meter	Opens the Power Meter function menu. 7.3.5 "Power Meter"

Application synchronization

Application synchronization refers to a state in which the Power Meter application is selected in the Measure function menu of the other measurement application software. In this case, the parameters such as Frequency are shared between 2 applications and do not require setting again when switching the applications.

Table 7.3.3-3 Items to be synchronized between applications

Application Software	Items to be synchronized	
57 . 36 1 1	Frequency	Frequency
Vector Modulation Analysis	Offset	On/off state of the level offset function
Allalysis	Offset Value	Level offset value

When the application synchronization is enabled, the title bar displays "Power Meter (Application name)."

7.3.4 Accessory

Press [58] (Accessory) in the Power Meter function menu to display the Accessory function menu.

Table 7.3.4-1 Accessory function menu

Function Key	Menu Display	Function
F1	Title	Sets the title character string.
F2	Title (On/Off)	Turns on and off the title character string display.

Setting the title

A title consisting of up to 32 characters can be displayed on the screen. (Up to 17 characters can be displayed on the top of the function menu. The maximum character length depends on characters.)

<Procedure>

- 1. Press (Accessory) in the Power Meter function menu.
- 2. Press [5] (Title) to display the character string input dialog box.

 Use the rotary knob to select the characters, and press [57] (Set).
- 3. Press (Title On/Off) to select Off, and the title display is turned off.

7.3.5 Power Meter

Press Fi or F2 (Power Meter) in the Measure function menu.

In the Power Meter menu, you can set the measurement that is performed by using the USB power sensor.

Table 7.3.5-1 Power Meter function menu

Function Key	Menu Display	Function
F1	Average	Turns on and off the function of averaging the measurement results.
F2	Average Count	Sets the number of times the measurement results are averaged.
F3	Set Reference	Sets the "measurement value after offset and averaging" as the reference level of the relative power.
F6	Zero Sensor	Executes the zeroing of the USB power sensor.
F8	Back To Application	Appears only during application synchronization. Activates the synchronizing measurement application software.

Averaging

Press [1] (Average) in the Power Meter function menu to turn on and off the averaging function.

Average: Turns on and off the function of averaging .

On Turns on the averaging function.

Off Turns off the averaging function (Default).

Press [52] (Average Count) in the Power Meter function menu to display the Average Count dialog box, and then set the number of averaging times.

Averaging Count: Sets the number of averaging times.

Setting range 2 to 1000

Resolution 1
Default 10

Setting the reference level

Press [53] (Set Reference) in the Power Meter function menu to set the "measurement value after offset and averaging" as the reference level of the relative power.

Zeroing the USB power sensor

Press (Zero Sensor) in the Power Meter function menu to execute the zeroing.

When you execute the function, a progress dialog box appears.

Please do not operate the MS2690A/MS2691A/MS2692A during the zeroing.



Figure 7.3.5-1 "Power Meter zeroing" dialog box (Progress)

If the zeroing fails, the following dialog box appears.

 


Figure 7.3.5-2 "Power Meter zeroing" dialog box (Zeroing failed)

Zeroing the power sensor

<Procedure>

- 1. Plug in the USB power sensor connector to the USB port of the MS2690A/MS2691A/MS2692A Signal Analyzer.
- 2. Turn off the RF output of DUT (device under test) in advance. Connect the RF Input connector of the power sensor to the RF output terminal of DUT.



CAUTION

Avoid excessive input levels when connecting the power sensor to DUT(device under test). The power sensor may be damaged depending on output levels of DUT.

3. Execute the Zero Sensor menu.

Activating the synchronizing application

Press (Back To Application) in the Power Meter function menu to return to the synchronizing application software.

7.3.6 Aperture Setting

Press [3] (Aperture Setting) in the Power Meter function menu to display the Aperture Setting menu.

Refer to the "Aperture Time" section and the "Measurement Considerations" section of your power sensor chapter in "USB Power Sensors MA241xxA and PowerXpert User Guide" for more details.

Table 7.3.6-1 Aperture Setting function menu

Function Key	Menu Display Function	
F1	Aperture Time	Sets the Aperture Time. Available when MA24108A/MA24118A/MA24126A is connected.
F2	Aperture Mode	Sets the Aperture Mode. Available when MA24104A/MA24106A is connected.

The table below shows the ranges, resolutions, and defaults for Aperture Time.

Table 7.3.6-2 Aperture Time

Model	Range	Resolution	Default
Disconnected			
MA24104A	Disabled	Disabled	Disabled
MA24105A	Disabled	Disabled	Disabled
MA24106A	Disabled	Disabled	Disabled
MA24108A	0.01 to 300.00 ms	0.01 ms	20.00 ms
MA24118A	0.01 to 300.00 ms	0.01 ms	20.00 ms
MA24126A	0.01 to 300.00 ms	0.01 ms	20.00 ms

The table below shows the options and defaults for Aperture Mode.

Table 7.3.6-3 Aperture Mode

Model	Options	Default
Disconnected		
MA24104A	LAT, HAT	LAT
MA24105A	Disabled	Disabled
MA24106A	LAT, HAT	LAT
MA24108A	Disabled	Disabled
MA24118A	Disabled	Disabled
MA24126A	Disabled	Disabled

7.4 Initialization

7.4.1 Preset

Power Meter function is a kind of application. For the presetting procedure, refer to Section 3.7.1 "Preset."

7.4.2 Default value list

This section lists the default values of the Power Meter function.

Frequency 1 GHz
Level Offset State Off
Level Offset Value 0.00 dB
Average State Off
Average Count 10

 $\begin{array}{ll} \mbox{Reference Level} & 0.00 \mbox{ dBm} \\ \mbox{Reference Level Set} & \mbox{Off} \\ \mbox{Range} & \mbox{Auto} \\ \end{array}$

Sensor Connected Disconnected
Sensor Model Disconnected

Aperture LAT (MA24104A, MA24106A)

20.00 ms (MA24108A, MA24118A,

MA24126A)

7.5 Installing the Driver Software

The Found New Hardware Wizard appears when you first connect a USB power sensor to the MS2690A/MS2691A/MS2692A, when the driver software for the connected USB power sensor is not installed, or when you connect the USB power sensor to a different port.

Follow the wizard to install the driver software for the USB power sensor.

Note:

When the operating system on MS2690A/MS2691A/MS2692A is Windows Embedded Standard 7, the driver software will be installed without displaying the wizard.

1. This wizard appears when the USB power sensor is connected. Select "No, not this time" radio button, and click [Next].



Figure 7.5-1 Found New Hardware Wizard-1

2. Select "Install the software automatically (Recommended)," and click [Next]. "Anritsu MA24108A" in the following example shows the model name of the connected power sensor.

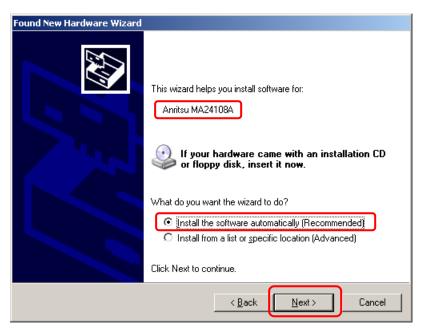


Figure 7.5-2 Found New Hardware Wizard-2

3. Click [Continue Anyway] in the Hardware Installation dialog box.



Figure 7.5-3 Hardware Installation dialog box

4. Click [Finish] to complete the installation.

"Anritsu MA24104A" in the following example shows the model name of the connected power sensor.

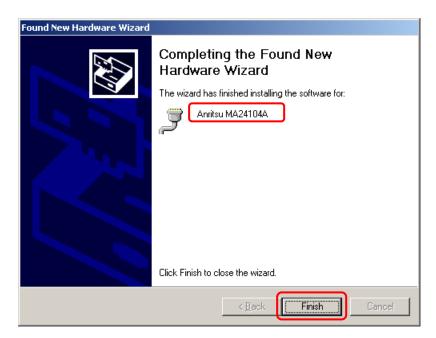


Figure 7.5-4 Found New Hardware Wizard-3

Chapter 8 Maintenance

This chapter describes cautions related to daily maintenance, storage, and shipping of the MS2690A/MS2691A/MS2692A, as well as the calibration procedure to be used as preventive maintenance.

8.1	Daily N	Maintenance and Storage	8-2
	8.1.1	Daily maintenance	8-2
	8.1.2	Cautions on storage MS2690A/MS2691A/MS26	92A
		for extended period	8-3
	8.1.3	Storing USB memory stick	8-4
8.2	Repack	kaging and transporting when returning product	8-5
	8.2.1	Repackaging	8-6
	8.2.2	Transporting	8-6
8.3	Calibra	ation	8-7
	8.3.1	Calibration	8-7
	8.3.2	Instruments used for calibrating	
		MS2690A/MS2691A/MS2692A	8-7
	8.3.3	Calibrating frequencies	
		using frequency counter	8-8

8.1 Daily Maintenance and Storage

8.1.1 Daily maintenance

Before daily maintenance of the MS2690A/MS2691A/MS2692A, be sure to turn the power off and unplug it from the AC outlet.

Panel surface dirt

When surface dirt is noticeable, after the MS2690A/MS2691A/MS2692A has been used in a dusty environment, or when the MS2690A/MS2691A/MS2692A has not been used for an extended period of time, wipe its surface with a cloth moistened in detergent and wrung enough.

Screen surface dirt

If the screen surface is dirty, first wipe it dry with a soft cloth. If the dirt persists, wipe the surface gently with a cloth dipped in detergent and wrung enough.

Loose screws

Use a Phillips screwdriver to tighten screws.

8.1.2 Cautions on storage MS2690A/MS2691A/MS2692A for extended period

Wipe off dust, fingerprint marks, stains, spots, etc. from the surface of the MS2690A/MS2691A/MS2692A before storing it. Avoid storing the MS2690A/MS2691A/MS2692A in these places:

- · Places that are exposed to direct sunlight
- · Dusty places
- Damp places where condensation may occur on the MS2690A/MS2691A/MS2692A surface
- Places where there the MS2690A/MS2691A/MS2692A may be corroded by active gases
- Places where the MS2690A/MS2691A/MS2692A may be oxidized
- Places having temperatures and relative humidity in the following ranges:

Temperature: -20°C or lower, or 60°C or higher

Humidity: 90% or higher

Recommended storage conditions

It is recommended that the MS2690A/MS2691A/MS2692A be stored in a place that meets the ambient conditions suggested above, plus the following conditions, if it is not to be used for a long period of time:

Temperature: 5°C to 45°CHumidity: 40% to 80%

• Little temperature and humidity fluctuations within one day

8.1.3 Storing USB memory stick

Store the USB memory stick at temperatures between 4° C and 53° C and relative humidity between 8% and 90% (no condensation). Avoid storing the USB memory stick in places that are:

- Dusty or damp
- Close to magnetized items
- Exposed to direct sunlight
- Close to heat sources

8.2 Repackaging and transporting when returning product

The following describes cautions on transporting the MS2690A/MS2691A/MS2692A.

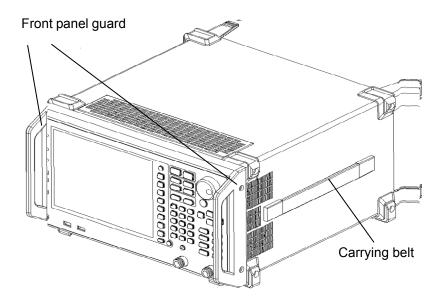


Figure 8.2-1 Guard and Carrying Belt

When carrying the unit, hold tightly the carrying belts on both sides. Do not use the front panel guard for moving. Doing so may loosen the fixing screws and damage the guard. (The guard is provided for protecting front panel connectors.)

8.2.1 Repackaging

Repack the MS2690A/MS2691A/MS2692A in the packing material (box) in which it had been delivered. If the packing material has been scrapped or damaged, repack the MS2690A/MS2691A/MS2692A in the following manner:

- 1. Wrap the MS2690A/MS2691A/MS2692A in plastic or a similar material.
- Procure a corrugated cardboard, wooden, or aluminum box large enough to pack in cushioning material around the MS2690A/MS2691A/MS2692A.
- 3. Place the MS2690A/MS2691A/MS2692A into the box. Then, pack in the cushioning material around the MS2690A/MS2691A/ MS2692A so that the MS2690A/MS2691A/MS2692A does not move around in the box.
- 4. Secure the outside of the box with packaging cord, adhesive tape, bands, or other such implements.

8.2.2 Transporting

Avoiding as much vibrations as possible and satisfying the recommended storage conditions is recommended for transporting.

8.3 Calibration

8.3.1 Calibration

Perform calibration as preventive maintenance to keep the MS2690A/MS2691A/MS2692A's performance from becoming degraded. Even if the MS2690A/MS2691A/MS2692A is functioning normally, calibrate it periodically to maintain its performance.

Calibrating the MS2690A/MS2691A/MS2692A once or twice a year is recommended. If the MS2690A/MS2691A/MS2692A fails to meet specifications after calibration, contact an Anritsu Service and Sales office.



CAUTION

Before performing the calibration, allow the MS2690A/MS2691A/MS2692A and the equipment used for the performance test to warm up at least 30 minutes to allow them to fully stabilize. For optimal measuring accuracy, run the MS2690A/MS2691A/MS2692A at the temperature of 23±5°C), with low AC voltage fluctuation (100 to 120 Vac or 200 to 240 Vac), in an environment free from noise, vibration, dust, moisture, and other harmful ambient conditions.

8.3.2 Instruments used for calibrating MS2690A/MS2691A/MS2692A

Table 8.3.2-1 lists the measuring instruments used to calibrate the MS2690A/MS2691A/MS2692A.

Table 8.3.2-1 List of measuring instruments for calibration

Name of Recommended Device	Required Performance	Calibration Items	
Frequency counter	Capable of 1 GHz measurement	Reference oscillator frequency accuracy	
Signal generator	Capable of outputting 1 GHz signal (Resolution: 0.01 Hz or higher)	Reference oscillator frequency accuracy	
Frequency standard device	Standard radio receiver or device with equivalent capability (Accuracy: 1×10^{-11} order or better)	Reference oscillator frequency accuracy	

8.3.3 Calibrating frequencies using frequency counter

Use a frequency counter to calibrate the reference oscillator frequency. Use a frequency standard radio signal (signal synchronized with a standard radio signal or with a rubidium atom standard device) offering enough accuracy higher than the reference oscillator installed in the MS2690A/MS2691A/MS2692A.

	•	
Reference Oscillator	Aging Rate	Temperature Stability
Internal reference oscillator	$\pm 1 \times 10^{-7}/\text{year}$	$\pm 2 \times 10^{-8} $ (5 to 45°C)
Rubidium reference	$\pm 1 \times 10^{-10}$ /month	$\pm 1 \times 10^{-9} $ (5 to 45°C)

Table 8.3.3-1 Calibration specifications

Calibration procedure

The procedure for calibrating the frequency using a frequency counter is described below.

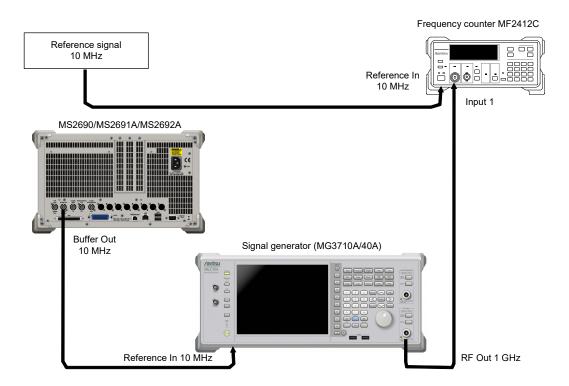


Figure 8.3.3-1 Connections for frequency calibration using frequency counter

^{*:} Only when Rubidium reference oscillator (optional) is installed.

- Connect a 10 MHz signal output from the frequency standard device to the reference signal input connector (Reference In) of frequency counter.
- 2. Connect the reference signal output (Buffer Out) located on the rear panel of the MS2690A/MS2691A/MS2692A to the reference signal input connector (Reference In) of Signal Generator.
- 3. Connect the RF output connector 1 of signal generator to input 1 connector of the frequency counter.
- 4. Set the frequency of signal generator to 1 GHz for output.
- 5. Set the measurement time of the frequency counter to 10 s and measure frequency.

When the frequency does not match, the MS2690A/MS2691A/MS2692A's reference oscillator should be adjusted.*

- 6. To achieve synchronization, start the Signal Analyzer application. Then press (Accessory) from the Main function menu of the signal analyzer.
- 7. Press [6] (Reference Clock) from the Accessory function menu.
- 8. Press [1] (Reference Clock) then input adjustment values. The adjustment value can be set from 0 to 1023.
- 9. Adjust so that frequency error is as small as possible.
- *: Perform a similar measurement after System Recovery.

 Re-adjustment is required when the frequency does not match.

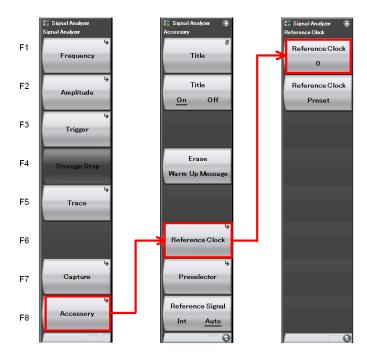


Figure 8.3.3-2 Signal analyzer function menu

Appendix

Appendix A Performance Test Result Form

Performance Test Result Form

Test Location		Report No.		
		Date		
_		Test person in charge		
Equipment Naı	me: MS2690A/MS2691A/MS269	2A Signal Analyzer		
Serial No.		Ambient temperature	$^{\circ}\mathrm{C}$	
Power frequency		Relative humidity	%	
Remarks				

■ Display Frequency Accuracy

MS2690A display frequency accuracy test

Setting for MS2690A					
Frequency [Hz]	Snan Bandwigth		Minimum [Hz]	Reading Frequency	Maximum [Hz]
1.5 G	10 k	300	1499999962		1500000038
	200 k	3 k	1499999420		1500000580
	2 M	30 k	1499994200		1500005800
	5 M	30 k	1499987500		1500012500
	10 M	100 k	1499973000		1500027000
	20 M	100 k	1499952000		1500048000
	3 G	3 M	1493400000		1506600000

MS2691A display frequency accuracy test

S	Setting for MS2690A				
Frequency [Hz]	Frequency Span [Hz]	Resolution Bandwidth [Hz]	Minimum [Hz]	Reading Frequency	Maximum [Hz]
1.5 G	10 k	300	1499999962		1500000038
	200 k	3 k	1499999420		1500000580
	2 M	30 k	1499994200		1500005800
	5 M	30 k	1499987500		1500012500
	10 M	100 k	1499973000		1500027000
	20 M	100 k	1499952000		1500048000
	3 G	3 M	1493400000		1506600000
7 G	10 k	300	6999999962		7000000038
	50 k	3 k	6999999740		7000000260
	2 M	30 k	6999994200		7000005800
	5 M	30 k	6999987500		7000012500
	10 M	100 k	6999973000		7000027000
	20 M	100 k	6999952000		7000048000
	1600 M	3 M	6996480000		7003520000

MS2692A display frequency accuracy test

S	etting for MS269	0A			
Frequency Frequency Resolution [Hz] Frequency Resolution [Hz] Bandwidth [Hz]		Bandwidth	Minimum [Hz]	Reading Frequency	Maximum [Hz]
1.5 G	10 k	300	1499999962		1500000038
	200 k	3 k	1499999420		1500000580
	2 M	30 k	1499994200		1500005800
	5 M	30 k	1499987500		1500012500
	10 M	100 k	1499973000		1500027000
	20 M	100 k	1499952000		1500048000
	3 G	3 M	1493400000		1506600000
7 G	10 k	300	6999999962		7000000038
	50 k	3 k	6999999740		7000000260
	2 M	30 k	6999994200		7000005800
	5 M	30 k	6999987500		7000012500
	10 M	100 k	6999973000		7000027000
	20 M	100 k	6999952000		7000048000
	1600 M	3 M	6996480000		7003520000
17.5 G	10 k	300	17499999962		17500000038
	50 k	3 k	17499999740		17500000260
	2 M	30 k	17499994200		17500005800
	5 M	30 k	17499987500		17500012500
	10 M	100 k	17499973000		17500027000
	20 M	100 k	17499952000		17500048000
	1600 M	3 M	17496480000		17503520000

■ Frequency Span Display Accuracy

Frequency span frequency display verification test

Settir	igs for MS269	0A/MS2691A/M	S2692A		Measurement	
	_	Signal Generator		Minimum	Results	Maximum
Frequency [Hz]	Frequency Span [Hz]	f ₁ [Hz]	f ₂ [Hz]	[%]	$(f_2' - f_1')/0.8$ /SPAN × 100 – 100 [%]	[%]
3 G	10 k	2999996000	3000004000	-0.2		+0.2
	2 M	2999200000	3000800000	-0.2		+0.2
	30 M	2988000000	3012000000	-0.2		+0.2
	400 M	2840000000	3160000000	-0.2		+0.2
	6 G	600000000	5400000000	-0.2		+0.2
7 G	10 k	6999996000	7000004000	-0.2		+0.2
(only for	2 M	6999200000	7000800000	-0.2		+0.2
MS2691A	30 M	6988000000	7012000000	-0.2		+0.2
and MS2692A)	400 M	6840000000	7160000000	-0.2		+0.2
1410,200,211)	2 G	6200000000	7800000000	-0.2		+0.2
6.75 GHz (only for MS2691A and MS2692A)	13.5 G	1350000000	12150000000	-0.2		+0.2
13.25 GHz (only for MS2692A)	26.5 G	2650000000	23850000000	-0.2		+0.2

■ Single Sideband Noise Level

Settings for MS2690A/MS2691A/MS2692A				Maximum	Uncertainty
Offset Frequency [Hz]	Center Frequency [Hz]	Resolution Bandwidth [Hz]	Measurement Results	[dBc/Hz]	[dB]
100 k	2.0001 G	10 k		-116	+0.5
1 M	2.001 G	30 k		-137	+0.5

■ RF Frequency Characteristics

Frequency Band Mode: Normal (MS2690A/MS2691A/MS2692A) Without Preamplifier or Preamplifier=OFF

Frequency	Frequency Calibration	Measured	Minimum	Measurement Results	Maximum	Uncertainty
[Hz] Value [dBm]	Vallid	[dB]	Measured Value — Calibration Value [dB]	[dB]	[dB]	
5 M			-0.35		+0.35	± 0.11
10 M			-0.35		+0.35	± 0.11
20 M			-0.35		+0.35	± 0.11
50 M			-0.35		+0.35	± 0.11
100 M			-0.35		+0.35	± 0.11
200 M			-0.35		+0.35	± 0.11
500 M			-0.35		+0.35	± 0.11
1 G			-0.35		+0.35	± 0.11
2 G			-0.35		+0.35	± 0.11
3 G			-0.35		+0.35	± 0.11
4 G			-0.35		+0.35	± 0.11
5 G			-0.35		+0.35	± 0.11
6 G			-0.35		+0.35	± 0.11

Frequency Band Mode: Normal (MS2690A/MS2691A/MS2692A) With Preamplifier and Preamplifier=ON

_	Calibration	Measured		Measurement Results		
I IH7I	Value [dBm]	Minimum (Measured Value — Calibration Value [dB]	Maximum [dB]	Uncertainty [dB]	
50 M			-0.65		+0.65	± 0.15
100 M			-0.65		+0.65	± 0.15
200 M			-0.65		+0.65	± 0.15
500 M			-0.65		+0.65	± 0.15
1 G			-0.65		+0.65	± 0.15
2 G			-0.65		+0.65	± 0.15
3 G			-0.65		+0.65	± 0.15
4 G			-0.65		+0.65	± 0.15
5 G			-0.65		+0.65	± 0.15
6 G			-0.65		+0.65	± 0.15

Frequency Band Mode: Normal (only for MS2691A/MS2692A)

Frequency [Hz]	Calibration Value [dBm]	Measured Value [dBm]	Minimum [dB]	Measurement Results Measured Value — Calibration Value [dB]	Maximum [dB]	Uncertainty [dB]
6.01 G			-1.50		+1.50	± 0.30
8 G			-1.50		+1.50	± 0.30
10 G			-1.50		+1.50	± 0.30
12 G			-1.50		+1.50	± 0.30
13.5 G			-1.50		+1.50	± 0.30

Frequency Band Mode: Normal (only for MS2692A)

Frequency [Hz]	Calibration Value [dBm]	Measured Value [dBm]	Minimum [dB]	Measurement Results Measured Value— Calibration Value [dB]	Maximum [dB]	Uncertainty [dB]
13.51 G			-2.50		+2.50	± 0.70
16 G			-2.50		+2.50	± 0.70
20 G			-2.50		+2.50	± 0.70
20.01 G			-2.50		+2.50	± 0.70
23 G			-2.50		+2.50	± 0.70
26.5 G			-2.50		+2.50	± 0.70

Frequency Band Mode: Spurious (only when Option 003 is installed)

Frequency [Hz]	Calibration Value [dBm]	Measured Value [dBm]	Minimum [dB]	Measurement Results Measured Value— Calibration Value [dB]	Maximum [dB]	Uncertainty [dB]
3.01 G			-1.50		+1.50	± 0.30
4 G			-1.50		+1.50	± 0.30
5 G			-1.50		+1.50	± 0.30
6 G		_	-1.50		+1.50	± 0.30

Appendix

■ Display Average Noise Level

Frequency Band Mode: Normal

Without Preamplifier

Center Frequency [Hz]	Display Average Noise Level (dBm/Hz)	Specification Value
100 k		-135
1 M		-145
30 M		
99 M		
999 M		-155
1999 M		
2399 M		
2999 M		-153
3999 M		-199
4999 M		-152
5999 M		-102
6001 M		
8001 M		-151
9999 M		
11499 M		-150
13499 M		-100
13501 M		
16999 M		-147
19999 M		
20001 M		
22999 M		-143
26499 M		

Note:

- $9~\mathrm{kHz}$ to $5999~\mathrm{MHz}$ for the MS2690A
- $9~\mathrm{kHz}$ to $13500~\mathrm{MHz}$ for the MS2691A
- $9~\mathrm{kHz}$ to $26500~\mathrm{MHz}$ for the MS2692A

Frequency Band Mode: Normal

With Preamplifier and Preamplifier=ON

Center Frequency [Hz]	Display Average Noise Level (dBm/Hz)	Specification Value
100 k		-150
1 M		-159
30 M		
99 M		
999 M		-166
1999 M		
2399 M		
2999 M		-165
3999 M		-164
4999 M		-161
6000 M		-159

Note:

 $100~\mathrm{kHz}$ to $6000~\mathrm{MHz}$ for the MS2690A $100~\mathrm{kHz}$ to $6000~\mathrm{MHz}$ for the MS2691A $100~\mathrm{kHz}$ to $6000~\mathrm{MHz}$ for the MS2692A

Frequency Band Mode: Normal With Preamplifier and Preamplifier=OFF

Center Frequency [Hz]	Display Average Noise Level (dBm/Hz)	Specification Value
100 k		-135
1 M		-145
30 M		
99 M		
999 M		-153
1999 M		
2399 M		
2999 M		-152
3999 M		-151
4999 M		-150
5999 M		-149
6001 M		
8001 M		-151
9999 M		
11499 M		-150
13499 M		-100
13501 M		
16999 M		-147
19999 M		
20001 M		
22999 M		-143
26499 M		

Note:

- $9~\mathrm{kHz}$ to $5999~\mathrm{MHz}$ for the MS2690A
- $9~\mathrm{kHz}$ to $13500~\mathrm{MHz}$ for the MS2691A
- $9~\mathrm{kHz}$ to $26500~\mathrm{MHz}$ for the MS2692A

Frequency Band Mode: Spurious (Only when Option 003 is installed)

Center Frequency [Hz]	Display Average Noise Level (dBm/Hz)	Specification Value
100 k		-135
1 M		-145
30 M		
99 M		
999 M		-155
1999 M		
2399 M		
2999 M		-153
3001 M		
4999 M		-148
5999 M		
6001 M		
8001 M		-151
9999 M		
11499 M		150
13499 M		-150
13501 M		
16999 M		-147
19999 M		
20001 M		
22999 M		-143
26499 M		

Note:

 $9~\mathrm{kHz}$ to $13500~\mathrm{MHz}$ for the MS2691A $9~\mathrm{kHz}$ to $26500~\mathrm{MHz}$ for the MS2692A

Appendix

■ Second Harmonic Wave Distortion

Second harmonic wave measurement

Without F	reamı	olifier
-----------	-------	---------

Settings for MS2690A/MS2691A/MS2692A		Measurement Results [dBc]	Maximum [dBc] (Mixer Input	Uncertaint y	
Frequency [MHz]	Ref_Level [dBm]	Applicable LPF		Level=_30 dBm)	[dB]
10	-10	SLP-10.7 (2-stage series)		00	+1.5
51	-10	SLP-50+		_60	+1.5
101	-10	SLP-100+			+1.5
401	-10	VLF-400(+)			+1.5
801	-10	SLP-850+			+1.5
1001	-10	VLF-1200(+)			+1.5
1801	-10	VLF-2250(+) (2-stage series)		-75	+1.5
2999	-10	VLF-3000(+) (2-stage series)			+1.5

Second harmonic wave measurement

With Preamplifier

Settings for MS2690A/MS2691A/MS2692A			Measurement Results [dBc]	Maximum [dBc] (Mixer Input	Uncertaint y
Frequency [MHz]	Ref_Level [dBm]	Applicable LPF		Level=_30 dBm)	[dB]
10	-10	SLP-10.7 (2-stage series)		-50	+1.5
51	-10	SLP-50+			+1.5
101	-10	SLP-100+			+1.5
401	-10	VLF-400(+)			+1.5
801	-10	SLP-850+			+1.5
1001	-10	VLF-1200(+)		-55	+1.5
1801	-10	VLF-2250(+) (2-stage series)			+1.5
2999	-10	VLF-3000(+) (2-stage series)			+1.5

Appendix B Panel Keys and Keyboard Operations

Table B-1 Correspondences between panel keys and keyboard operations

Panel Key	USB Keyboard
Preset [Preset]	[Ctrl]+[Shift]+[R]
Menu [Top]	[Ctrl]+[Shift]+[↑]
[F1]	[F1]
[F2]	[F2]
[F3]	[F3]
[F4]	[F4]
[F5]	[F5]
[F6]	[F6]
[F7]	[F7]
[F8]	[F8]
(Back)	$[Ctrl]+[Shift]+[\leftarrow]$
(More)	$[Ctrl]+[Shift]+[\rightarrow]$
Trace [Trace]	[Ctrl]+[Alt]+[V]
Measure [Measure]	[Ctrl]+[Alt]+[X]
Encoder [Right rotation]	Mouse wheel [Scroll for above]
Encoder [Left rotation]	Mouse wheel [Scroll for below]
[1]	[↑]
[→]	[→]
[↓]	[\
((←)	[←]
Enter [Enter]	[Enter]

Table B-1 Correspondences between panel keys and keyboard operations (Cont'd)

Panel Key	USB Keyboard
[0]	[0]
1 [1]	[1]
2 [2]	[2]
3 [3]	[3]
4 [4]	[4]
⁶ [5]	[5]
6 [6]	[6]
7 [7]	[7]
8 [8]	[8]
9 [9]	[9]
[.]	[.]
[+/-]	[-]
Shift Shift]	[Shift]+
Cancel]	[Esc]
BS [BS]	[Back Space]
[Single]	[Ctrl]+[Shift]+[F1]
[Continuous]	[Ctrl]+[Shift]+[F2]
Frequency [Frequency]	[Ctrl]+[Shift]+[0]
Span [Span]	[Ctrl]+[Shift]+[1]
Amplitude [Amplitude]	[Ctrl]+[Shift]+[2]
Marker [Marker]	[Ctrl]+[Shift]+[3]
BW [BW]	[Ctrl]+[Shift]+[4]
Trigger/Gate]	[Ctrl]+[Shift]+[5]
Time/Sweep]	[Ctrl]+[Shift]+[6]
Peak Search [Peak Search]	[Ctrl]+[Shift]+[7]
Save [Save]	[Ctrl]+[S]
Recall [Recall]	[Ctrl]+[O]
Copy [Copy]	[Ctrl]+[Shift]+ [8]
Cal [Cal]	[Ctrl]+[Shift]+[9]

Note:

The figure in [Ctrl]+[Shift]+"figure" cannot be entered by the numeric keypad.

Appendix C Virus Check Procedure (WES 2009)

It is the customer's responsibility to purchase, install, and operate anti-virus software on the MS269xA. Follow the manual of the anti-virus software you purchased.

This document explains the procedure of virus scanning without installing any anti-virus software on the MS269xA. Virus scanning can be performed by assigning the equipment drives to network drives on an external computer on which anti-virus software is installed.

Even if network drives cannot be scanned using your software, scanning might be possible by dragging and dropping a network drive onto the anti-virus software icon in Windows Explorer.

C.1	Connecting External PC to MS269xAC-3
,	L
C.2	Checking IP address of MS269xA
	L
C.3	Configuring shared settings
C.4	Changing the user account for the equipmentC-5
	•
C.5	Shared Settings for MS269xA
C.6	Mounting the equipment drives to
	the external computer drives
,	
C.7	Scanning for virus
	I .
C.8	Unmounting the equipment drives from the external
	computer drives
	L .
C.9	Making the equipment drives unshared
C.10	Restoring the previous user account setting for the
	equipment
	•
C 11	Enabling Simple File Sharing C 13
U.II	Enabling Simple File Sharing

Notes:

 Be sure to follow the procedure described in this document. If this procedure is not followed, not only will it not be possible to check for viruses, but the equipment might become unusable.

If the equipment runs abnormally after removing viruses, execute system recovery to restore all drives to the factory default settings. For the procedure, refer to Section 5.3 "System Recovery Functions".

After performing system recovery, the firmware might have to be upgraded to the latest version depending on when the equipment was released.

• Before using anti-virus software, be sure to check its usage and the license scope.

C.1 Connecting External PC to MS269xA


Connect MS269xA and the external PC with LAN cable.

For details about how to set up the network for the MS269xA, see Chapter 1 "Basics of Remote Control" in the MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Main Frame, Remote Control).

C.2 Checking IP address of MS269xA

If the IP address is automatically assigned upon establishing a DHCP connection, check the IP address by using the following procedure:

- Display the MS269xA desktop.
 To display the desktop, right-click anywhere on the screen and select Show the Desktop.
- 2. Display the MS-DOS Prompt. Select **Start All Programs – Accessories Command Prompt**.

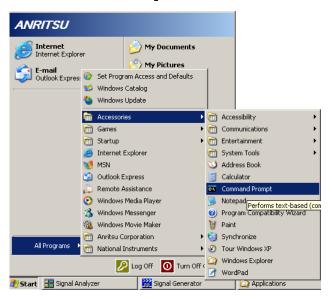

3. Enter the following:


ipconfig

The assigned IP address displays as shown.

C.3 Configuring shared settings

Simple File Sharing is enabled for the equipment by default. If authentication is performed by way of a network while Simple File Sharing is enabled, the accessing user is regarded as having a Guest account and cannot access important folders and files such as the Windows folder. To avoid this, use the following procedure to temporarily disable Simple File Sharing.

- 1. On MS269xA, click the **Start** button and then click **My Computer**.
- 2. In the **Tool** menu, click **Folder Options**, and click the **View** tab.
- 3. From the **Advanced Settings** list, make sure that the **Use simple file** sharing (Recommended) is NOT selected.

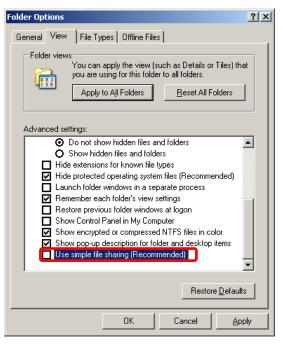


4. Click **OK**.

\ppendix


C.4 Changing the user account for the equipment

This section describes how to change the user account used when the equipment drives are mounted to network drives.


- 1. From the Start menu, select **Control Panel**.
- 2. Select **Administrative Tools** from the Control Panel.

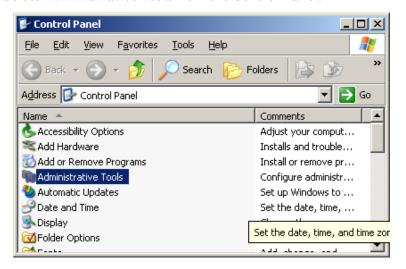


3. Select Computer Management.

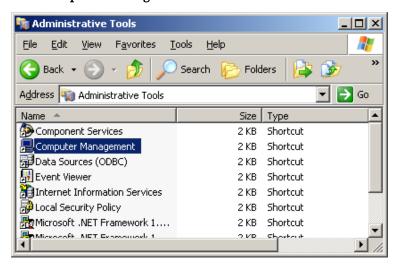

4. In the Computer Management tree, select **Users** under **Local Users** and **Groups**.

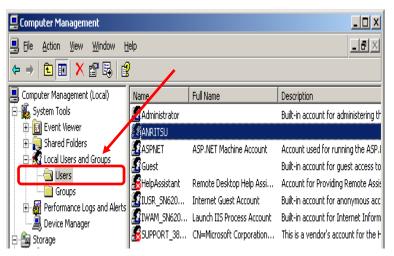

5. Right click the user account "ANRITSU" to use, and select Set Password....

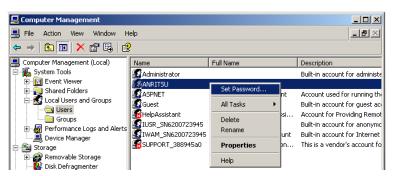

6. When the message below is shown, select **Proceed**.




7. Type ANRITSU for the password.



8. Confirm and click **OK**.

C.5 Shared Settings for MS269xA

- 1. From the **Start** menu, select **My Computer**.
- 2. Right-click the C drive.
- 3. Select Sharing and Security.
- 4. Select the **Sharing** tab.

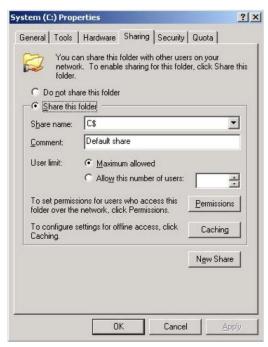


- 5. To disable currently enabled folder sharing setting, select **Do not** share this folder.
- 6. Click Apply.




7. A dialog appears. Select Yes.



- 8. Select Share this folder.
- 9. Click **Permissions**.

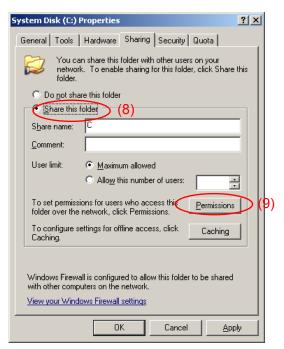

10. Select Allow for Full control.

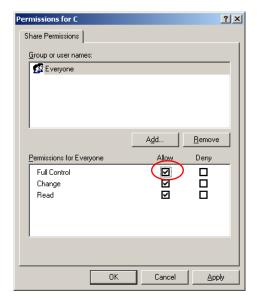

- 11. Click **OK** to close the two dialog boxes respectively.
- 12. Repeat steps 3 to 11 to the D drive.


C.6 Mounting the equipment drives to the external computer drives

- 1. On the computer connected by way of the network (which is used to run the anti-virus software), mount (assign) all the shared drives of the MS269xA as network drives.
- 2. On the PC, right click **My Network Places**, and select **Map Network Drive**.
- 3. Enter "The IP address of MS269xA + drive name" for the folder name.

Example When the IP address of the MS269xA is 192.168.0.1:

To mount the C drive, specify Y for Drive and \\192.168.0.1\c for Folder.

To mount the D drive, specify Z for Drive and \\192.168.0.1\d for Folder

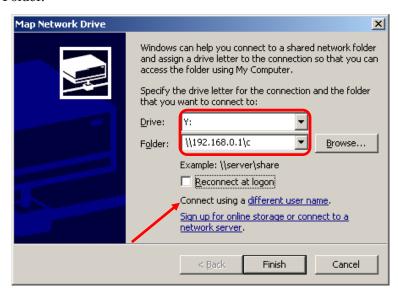

- 4. Click Connect using a different user name.
- 5. Enter ANRITSU for the User name, and also ANRITSU for the Password (as specified in C.4, Step 7).



- 6. Click **OK** – **Finish** to complete.
- Repeat steps 2 to 6 to the D drive.

C.7 Scanning for virus

Scan the network drives mounted on the external computer for viruses.

Even if network drives cannot be scanned using your software, scanning might be possible by dragging and dropping a network drive onto the anti-virus software icon in Windows Explorer.

C.8 Unmounting the equipment drives from the external computer drives

Right click My Network Places on the external PC, and select Disconnect Network Drive.

Unmount the two mapped drives.

C.9 Making the equipment drives unshared

- From the Start menu, select My Computer.
- 2. Right-click the C drive.
- 3. Select Sharing and Security.
- Select the **Sharing** tab. 4.
- 5. Select Do not share this folder.
- Repeat steps 2 to 5 to the D drive.


C.10 Restoring the previous user account setting for the equipment

The user password has been changed in Section C.4 "Changing the user account for the equipment" for mounting the equipment drives to network drives of the external computer. Restore the password before change in the same way as it was changed. Note that no password is specified by default.

C.11 Enabling Simple File Sharing

Simple File Sharing has been disabled in Section C.3 "Configuring shared settings" for sharing drives. To restore the original settings, enable Simple File Sharing by using the following procedure:

- 1. On MS269xA, click the **Start** button and then click **My Computer**.
- 2. In the **Tool** menu, click **Folder Options**, and click the **View** tab.
- 3. From the **Advanced Settings** list, make sure that the **Use simple file** sharing (Recommended) is selected.

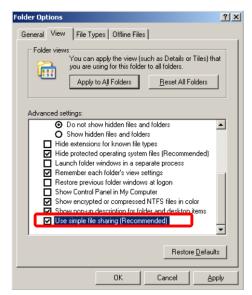

4. Click **OK**.

Appendix D Virus Check Procedure (WES 7)

It is the customer's responsibility to purchase, install, and operate anti-virus software on the MS269xA. Follow the manual of the anti-virus software you purchased.

This document explains the procedure of virus scanning without installing any anti-virus software on the MS269xA. Virus scanning can be performed by assigning the equipment drives to network drives on an external computer on which anti-virus software is installed.

Even if network drives cannot be scanned using your software, scanning might be possible by dragging and dropping a network drive onto the anti-virus software icon in Windows Explorer.

D.1	Connecting External PC to MS269xA	D-3
D.2	Checking IP address of MS269xA	D-3
D.3	Configuring shared settings	D-4
D.4	Changing the user account for the equipment	D-5
D.5	Shared Settings for MS269xA	D-8
D.6	Mounting the equipment drives to the external computed rives	
D.7	Scanning for virusD)-12
D.8	Unmounting the equipment drives from the external computer drives)-12
D.9	Making the equipment drives unsharedD)-12
D.10	Restoring the previous user account setting for the equipment)-12
D.11	Enabling Simple File SharingD)-13

Notes:

 Be sure to follow the procedure described in this document. If this procedure is not followed, not only will it not be possible to check for viruses, but the equipment might become unusable.

If the equipment runs abnormally after removing viruses, execute system recovery to restore all drives to the factory default settings. For the procedure, refer to Section 5.3 "System Recovery Functions".

After performing system recovery, the firmware might have to be upgraded to the latest version depending on when the equipment was released.

• Before using anti-virus software, be sure to check its usage and the license scope.

D.1 Connecting External PC to MS269xA


Connect MS269xA and the external PC with LAN cable.

For details about how to set up the network for the MS269xA, see Chapter 1 "Basics of Remote Control" in the MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Main Frame, Remote Control).

D.2 Checking IP address of MS269xA

If the IP address is automatically assigned upon establishing a DHCP connection, check the IP address by using the following procedure:

- Display the MS269xA desktop.
 To display the desktop, right-click anywhere on the screen and select Show the Desktop.
- Display the MS-DOS Prompt. Move a mouse downward on the MS269xA screen to display the task bar. Select Start > All Programs > Accessories > Command Prompt.

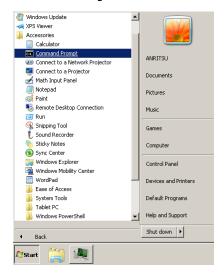

3. Enter the following:


ipconfig

The assigned IP address displays as shown.

D.3 Configuring shared settings

Simple File Sharing is enabled for the equipment by default. If authentication is performed by way of a network while Simple File Sharing is enabled, the accessing user is regarded as having a Guest account and cannot access important folders and files such as the Windows folder. To avoid this, use the following procedure to temporarily disable Simple File Sharing.

- 1. Move a mouse downward on the MS269xA screen to display the task bar. Click **Start > Computer**.
- 2. In **Organize** menu, click **Folder and search options**, and click **View** tab.
- Advanced Settings list, turn off Use sharing Wizard (Recommended) check box.

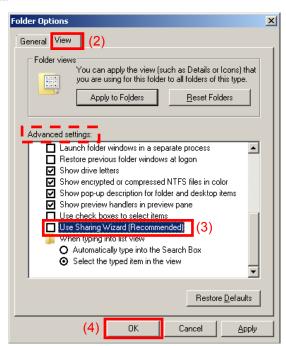


4. Click OK.


D.4 Changing the user account for the equipment

This section describes how to change the user account used when the equipment drives are mounted to network drives.


- 1. From the Start menu, click Control Panel.
- 2. Click **Administrative Tools** from the Control Panel.

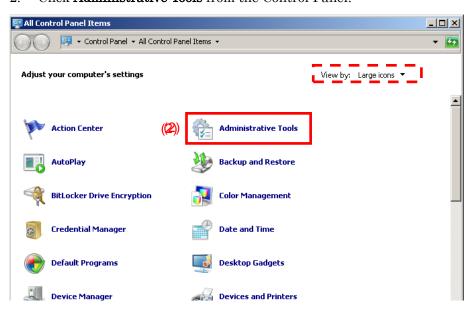


Click Computer Management.

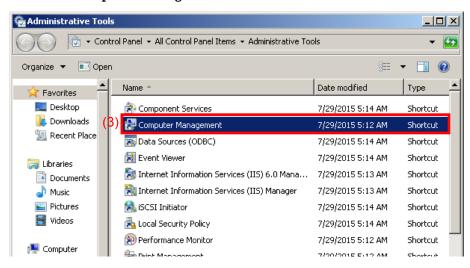

4. In Computer Management tree, click **Users** under **Local Users and Groups**.

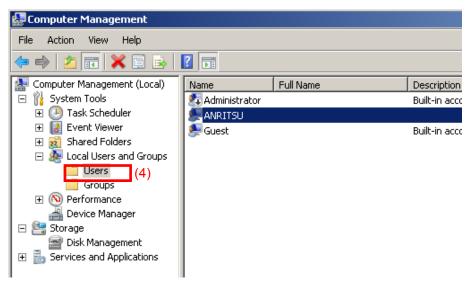


 Right click the user account "ANRITSU" to use, and click Set Password...

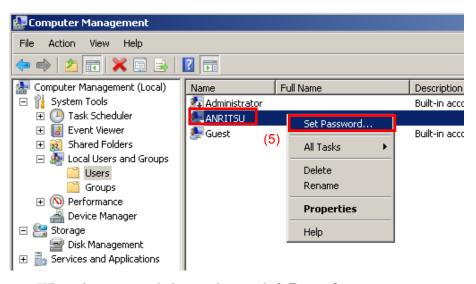

6. When the message below is shown, click **Proceed**.




7. Type ANRITSU for the password.

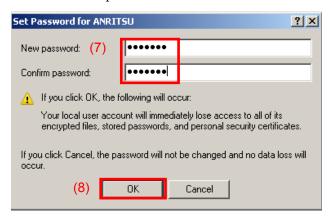


8. Confirm and click **OK**.

D.5 Shared Settings for MS269xA

- 1. From the **Start** menu, click **Computer**.
- 2. Right-click the C drive.
- 3. Click Share with > Advanced sharing.
- 4. Click the **Sharing** tab.

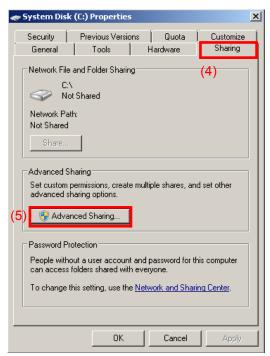


- 5. Click Advanced Sharing...
- 6. Turn off **Share this folder** check box to disable currently enabled folder sharing setting.

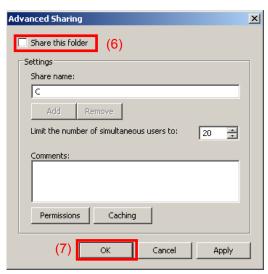


7. Click **OK**.

 
8. Sharing dialog box appears. Click Yes.



- 9. Turn on **Share this folder** check box.
- 10. Click **Permissions**.

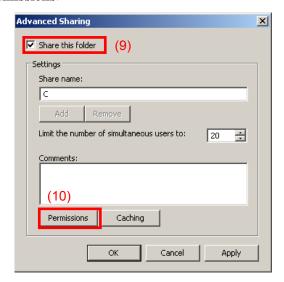


11. Turn on **Allow** check box of **Full Control**.

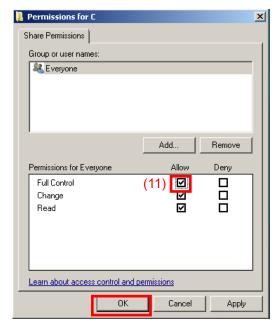

- 12. Click **OK** to close the two dialog boxes respectively.
- 13. Repeat steps 2 to 12 to the D drive.

D.6 Mounting the equipment drives to the external computer drives

- 1. On the computer connected by way of the network (which is used to run the anti-virus software), mount (assign) all the shared drives of the MS269xA as network drives.
- On the PC, click Start > Computer.
 Right click Network on the Navigation window and click Mapnetwork drive...

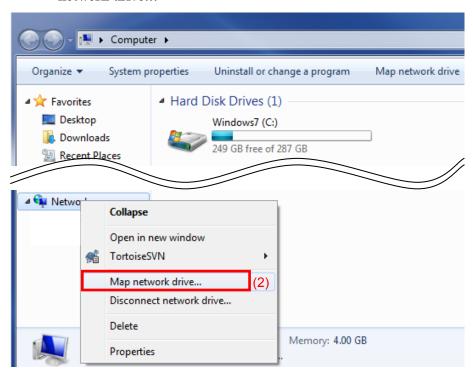


3. Enter "The IP address of MS269xA + drive name" for the folder name.

Example When the IP address of the MS269xA is 192.168.0.1:

To mount the C drive, specify Y for Drive and $\$ for Eolder

To mount the D drive, specify Z for Drive and $\$ \\192.168.0.1\\d for Folder.

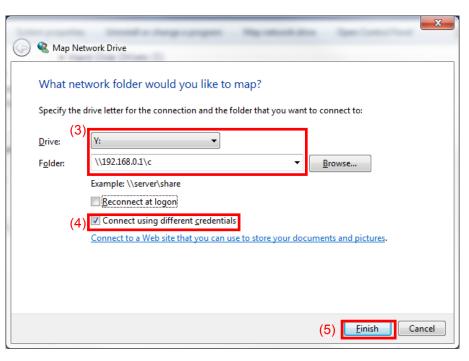

- 4. Turn on **Connect using different credentials** check box.
- 5. Click Finish.
- 6. Enter ANRITSU for the User name, and also ANRITSU for the Password (as specified in D.4, Step 7).



- 7. Click **OK** > **Finish** to complete.
- 8. Repeat steps 2 to 7 to the D drive.

D.7 Scanning for virus

Scan the network drives mounted on the external computer for viruses.

D.8 Unmounting the equipment drives from the external computer drives

Right click **My Network Places** on the external PC, and select **Disconnect Network Drive**.

Unmount the two mapped drives.

D.9 Making the equipment drives unshared

- 1. From **Start** menu, click **Computer**.
- 2. Right-click the C drive.
- 3. Click Share with > Advanced sharing.
- 4. Click **Sharing** tab.
- 5. Click Advanced Sharing
- 6. Turn off **Share this folder** check box.
- 7. Click **OK.**
- 8. Sharing dialog box appears. Click Yes.
- 9. Repeat steps 2 to 8 to the D drive.

D.10 Restoring the previous user account setting for the equipment


The user password has been changed in Section D.4 "Changing the user account for the equipment" for mounting the equipment drives to network drives of the external computer. Restore the password before change in the same way as it was changed. Note that no password is specified by default.

۱ppendix

D.11 Enabling Simple File Sharing

Simple File Sharing has been disabled in Section D.3 "Configuring shared settings" for sharing drives. To restore the original settings, enable Simple File Sharing by using the following procedure:

- 1. On MS269xA, click **Start > Computer**.
- 2. In Organize menu, click Folder and search options, and click View tab.
- 3. From the Advanced Settings list, Turn on Use Sharing Wizard (Recommended) check box.

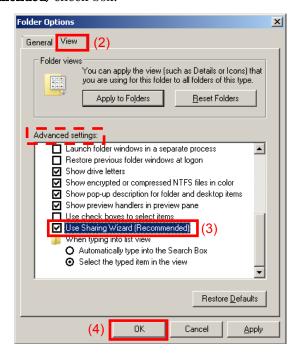

Click **OK**.

Appendix E Initial Value List

<System Configuration>

Interface Settings

GPIB Setting

Address 1

Ethernet Settings

DHCP On

 IP Address
 --- --- --

 Subnet Mask
 --- --- --

 Default Gateway
 --- --- --

Raw Socket Port Number 49153

Terminator Settings

Terminator CR/LF

Remote Language Settings

Language Native

Copy Settings

File Type Settings BMP Color Color Settings Normal

File Name Settings Data + sequential number (00-99)

Storage Place Settings (D:)

System Settings

Beep Sound Settings On Reference Signal Auto External Reference Frequency 10 MHz

Calibration Alert

 $\begin{array}{ccc} \text{Alert Mode} & \text{None} \\ \text{Temperature} & 2.0\,^{\circ}\text{C} \\ \text{Elapsed Time} & 1 \text{ Hour} \\ \text{Display Annotation} & \text{On} \end{array}$

Simple Save&Recall

Save&Recall Mode Std

Correction

Correction (On/Off) Off

References are to page numbers.

Symbol and Numbers	E
Α	Elapsed Time3-34
AC inlet	Enter key3-5
Accessory	Ethernet 3-3, 3-19
Alert Mode	Ethernet connector3-8
Amplitude	External display5-6
Analysis band calibration3-14	Extra Band Cal 3-13, 3-15
Aperture Setting	Extra Band Cal Clear 3-13, 3-16
Application Switch	F
Application Switch Settings	
3-18, 3-23, 3-37, 3-39, 3-42	File Name Settings
Application synchronization 7-9	File Operation
AUX connector	File Type Settings
Averaging7-11	FPGA Version View
В	Frequency 7-6
Ь	Function keys
Band Cal3-13	G
Beep Sound Setting3-21	GPIB
Board Revision View3-25	GPIB connector
Buffer Out connector 3-7	н
C	П
Cal key 3-3	Hard disk5-9
Calibration	Hard disk access lamp3-2
Calibration Alert	1
Cancel key 3-5	IF Out connector 3-8
Close	Information Save
Color Settings	Initialization
COM Port	Initializing 3-53
Configuration3-18	Install 3-56
Copy3-48	Installing
Copy Data3-26	Interface Settings
Copy key 3-2	-
Copy Settings3-18, 3-20	L
Correction3-18, 3-28	Level Cal 3-13
Cursor keys	Level calibration3-14
D	Level offset
	Load Application Select 3-23, 3-37
Digitizer Data	Loading3-36
Display Annotation3-18, 3-33	Local key3-3
	Local Leak Suppression 3-13, 3-14

Index

SIGANA All 3-13 Signal Analyzer 4-2 Open Recall Menu 3-52 Simple Recall 3-52 Open Save Menu 3-51 Simple Save 3-51 Option Information 3-18, 3-26 Simple Save&Recall 3-49 P Simple Save&Recall Name 3-50 Software Install 3-18, 3-27, 3-56, 3-61 3-61 Position Change 3-23, 3-42 Software License 3-58, 3-61 Power Meter 7-2 Software Version View 3-25 power sensor 7-2 Spectrum Analysis 4-7 Power Switch 3-2 Storage Place Settings 3-20 Preset 3-53 Sweep Status Out connector 3-8 Preset 3-53 System Information 3-18, 3-24, 3-26, 3-54 Preset key 3-3 System Recovery 5-10 R System Recovery 5-10 System Settings 3-18, 3-21 T System Settings 3-18, 3-21	M	Set Reference7-11
Monitor Out connector 3-8 SG I/Q Cal 3-13 N SG Wave License View 3-25 Numeric keypad 3-5 Shift key 3-5 O SIGANA All 3-13 Open Recall Menu 3-52 Simple Recall 3-52 Open Save Menu 3-51 Simple Recall 3-52 Option Information 3-18, 3-26 Simple Save & Recall 3-51 Option Information 3-18, 3-26 Simple Save & Recall Name 3-50 P Simple Save & Recall Name 3-50 Software Install 3-18, 3-27, 3-56, 3-61 Software License View 3-58, 3-61 Software Version View 3-25 Software Version View 3-25 Software Version View 3-25 Spectrum Analysis 4-7 Spectrum Analysis 4-7 Spectrum Analysis 3-20 Preset All Application 3-53 System Information 3-18, 3-24, 3-26, 3-54 System Recovery 5-10 System Reset 3-25, 3-54	Main function keys 3-4	SG External I/Q Cal 3-13
N SG Wave License 3-59, 3-62 Numeric keypad 3-5 SG Wave License View 3-25 O SIGANA All 3-13 Signal Analyzer 4-2 4-2 Open Recall Menu 3-52 Simple Recall 3-52 Open Save Menu 3-51 Simple Save & Recall 3-52 Option Information 3-18, 3-26 Simple Save & Recall 3-49 P Simple Save & Recall Name 3-50 3-50 Software Install 3-18, 3-27, 3-56, 3-61 3-60 3-50 3		SG I/Q Cal3-13
Soft Wave Elicense view 3 25 Shift key 3-5 Open Recall Menu 3-52 Simple Recall 3-52 Open Save Menu 3-51 Simple Save 3-51 Option Information 3-18, 3-26 Simple Save&Recall 3-49 P Simple Save&Recall Name 3-50 Software Install 3-18, 3-27, 3-56, 3-61 Software License 3-58, 3-61 Position Change 3-23, 3-42 Software License 3-58, 3-61 Power Meter 7-2 Software Version View 3-25 power sensor 7-2 Spectrum Analysis 4-7 Power Switch 3-2 Sweep Status Out connector 3-8 Preset 3-53, 7-15 Switching 3-36 Preset All Application 3-53 System Information 3-18, 3-24, 3-26, 3-54 R System Recovery 5-10 System Reset 3-25, 3-54 System Settings 3-18, 3-21		SG Wave License
SIGANA All 3-13	N	SG Wave License View 3-25
Open Recall Menu 3-52 Signal Analyzer 4-2 Open Save Menu 3-51 Simple Recall 3-52 Option Information 3-18, 3-26 Simple Save&Recall 3-49 Option Information 3-18, 3-26 Simple Save&Recall Name 3-50 Parameter Save Data 3-26 Software Install 3-18, 3-27, 3-56, 3-61 Position Change 3-23, 3-42 Software License 3-58, 3-61 Power Meter 7-2 Software Version View 3-25 Power Switch 3-2 Spectrum Analysis 4-7 Power Switch 3-2 Storage Place Settings 3-20 Preset 3-53 Sweep Status Out connector 3-8 Preset 3-53, 7-15 Switching 3-36 Preset All Application 3-53 System Information 3-18, 3-24, 3-26, 3-54 R System Reset 3-25, 3-54 System Reset 3-25, 3-54 System Settings 3-18, 3-21	Numeric keypad	Shift key 3-5
Signal Analyzer	0	SIGANA All 3-13
Open Save Menu 3-51 Simple Save 3-51 Option Information 3-18, 3-26 Simple Save&Recall 3-49 P Simple Save&Recall Name 3-50 Software Install 3-18, 3-27, 3-56, 3-61 Position Change 3-23, 3-42 Software License 3-58, 3-61 Power Meter 7-2 Software Version View 3-25 power sensor 7-2 Spectrum Analysis 4-7 Power Switch 3-2 Storage Place Settings 3-20 Preselector Tune Preset 3-53 Sweep Status Out connector 3-8 Preset 3-53, 7-15 Switching 3-36 Preset key 3-3 System Information 3-18, 3-24, 3-26, 3-54 R System Recovery 5-10 Range 7-7 System Reset 3-25, 3-54 System Settings 3-18, 3-21		Signal Analyzer 4-2
P Simple Save&Recall 3-49 Parameter Save Data 3-26 Simple Save&Recall Name 3-50 Position Change 3-23, 3-42 Software License 3-58, 3-61 Power Meter 7-2 Software Version View 3-25 power sensor 7-2 Spectrum Analysis 4-7 Power Switch 3-2 Sweep Status Out connector 3-8 Preset 3-53, 7-15 Switching 3-36 Preset All Application 3-53 System Information 3-18, 3-24, 3-26, 3-54 R System Recovery 5-10 Range 7-7 System Settings 3-18, 3-21 T System Settings 3-18, 3-21	Open Recall Menu3-52	Simple Recall
Simple Save&Recall Name 3-50 Parameter Save Data 3-26 Software Install 3-18, 3-27, 3-56, 3-61 Position Change 3-23, 3-42 Software License 3-58, 3-61 Power Meter 7-2 Software Version View 3-25 power sensor 7-2 Spectrum Analysis 4-7 Power Switch 3-2 Storage Place Settings 3-20 Preselector Tune Preset 3-53 Sweep Status Out connector 3-8 Preset 3-53, 7-15 Switching 3-36 Preset All Application 3-53 System Information 3-18, 3-24, 3-26, 3-54 R System Recovery 5-10 Range 7-7 System Reset 3-25, 3-54 System Settings 3-18, 3-21 3-18, 3-21	Open Save Menu3-51	Simple Save3-51
Software Install 3-18, 3-27, 3-56, 3-61 Parameter Save Data 3-26 Software License 3-58, 3-61 Position Change 3-23, 3-42 Software License View 3-25 Power Meter 7-2 Software Version View 3-25 power sensor 7-2 Spectrum Analysis 4-7 Power Switch 3-2 Sweep Place Settings 3-20 Preselector Tune Preset 3-53 Switching 3-36 Preset All Application 3-53 System Information 3-18, 3-24, 3-26, 3-54 Preset key 3-3 System Recovery 5-10 R System Reset 3-25, 3-54 System Settings 3-18, 3-21 T T	Option Information3-18, 3-26	Simple Save&Recall 3-49
Software Install 3-18, 3-27, 3-56, 3-61	P	Simple Save&Recall Name3-50
Position Change 3-23, 3-42 Software License View 3-25 Power Meter 7-2 Software Version View 3-25 power sensor 7-2 Spectrum Analysis 4-7 Power Switch 3-2 Storage Place Settings 3-20 Preselector Tune Preset 3-53 Sweep Status Out connector 3-8 Preset All Application 3-53 System Information 3-18, 3-24, 3-26, 3-54 Preset key 3-3 System Recovery 5-10 System Reset 3-25, 3-54 System Settings 3-18, 3-21 T T		Software Install3-18, 3-27, 3-56, 3-61
Power Meter		Software License
power sensor 7-2 Spectrum Analysis 4-7 Power Switch 3-2 Storage Place Settings 3-20 Preselector Tune Preset 3-53 Sweep Status Out connector 3-8 Preset 3-53, 7-15 Switching 3-36 Preset All Application 3-53 System Information 3-18, 3-24, 3-26, 3-54 Preset key 3-3 System Recovery 5-10 System Reset 3-25, 3-54 System Settings 3-18, 3-21 T T		Software License View 3-25
Power Switch 3-2 Storage Place Settings 3-20 Preselector Tune Preset 3-53 Sweep Status Out connector 3-8 Preset 3-53, 7-15 Switching 3-36 Preset All Application 3-53 System Information 3-18, 3-24, 3-26, 3-54 Preset key 3-3 System Recovery 5-10 System Reset 3-25, 3-54 System Settings 3-18, 3-21 T T		Software Version View 3-25
Preselector Tune Preset 3-53 Sweep Status Out connector 3-8 Preset 3-53, 7-15 Switching 3-36 Preset All Application 3-53 System Information 3-18, 3-24, 3-26, 3-54 Preset key 3-3 System Information View 3-25 System Recovery 5-10 System Reset 3-25, 3-54 System Settings 3-18, 3-21 T T		Spectrum Analysis4-7
Preset .3-53, 7-15 Switching 3-36 Preset All Application .3-53 System Information .3-18, 3-24, 3-26, 3-54 Preset key .3-3 System Information View .3-25 System Recovery .5-10 System Reset .3-25, 3-54 System Settings .3-18, 3-21 T .3-18, 3-21		Storage Place Settings 3-20
Preset All Application 3-53 System Information 3-18, 3-24, 3-26, 3-54 Preset key 3-3 System Information View 3-25 System Recovery 5-10 System Reset 3-25, 3-54 System Reset 3-25, 3-54 System Settings 3-18, 3-21 T		Sweep Status Out connector 3-8
Preset key 3-3 System Information View 3-25 Range 5-10 Recall All Application 3-46 System Information View 3-25 System Recovery 5-10 System Reset 3-25, 3-54 System Settings 3-18, 3-21		Switching3-36
Range 7-7 Recall All Application 3-46 System Recovery 5-10 System Reset 3-25, 3-54 System Settings 3-18, 3-21		System Information3-18, 3-24, 3-26, 3-54
Range	Preset key	System Information View 3-25
Range	R	System Recovery 5-10
Recall All Application	D	System Reset
T		System Settings 3-18, 3-21
$\mathbf{D}_{-} = 1 1 1 1 1 1 1 1$		Т
Recall Current Application	Recall Current Application	-
Temperature	Recall key	
	Ref Input connector	
	Reference frequency signal	
D 1	Reference Signal	_
- 1115501 5151141	Remote lamp	Trigger signal 3-7
	RF Input connector	U
	RF output connector	Uningtall 2.60
•	RF output control key	
II.1	Rotary knob	
	S	_
USB	Save Application3-44, 3-45	•
C 1	Save key	
CDD connector (type D)	Save Waveform CSV DATA3-45	- -
COD memory suck	Save&Recall Mode	-
Osci data	Save&Recall Settings3-49	User data3-54
	Screen hard copy3-48	

W	
Windows	5-2
Z	
Zeroing	7-12