

**MT1000A/MT1100A/MT1040A
Remote Scripting Operation Manual**

Ninth Edition

ANRITSU CORPORATION

Document No.: M-W4041AE-9.0

-
- This is an addendum to “Network Master Pro Operation Manual” and “Network Master Flex Operation Manual”.
 - For safety and warning information, please read “Network Master Pro Operation Manual” or “Network Master Flex Operation Manual” before attempting to use the equipment.
 - Keep this manual with the equipment.

Notes On Export Management

We assume no responsibility if this product is re-exported and used without our approval since it may not comply with the safety standards, etc., of specific countries

This product and its manuals may require an Export License/Approval by the Government of the product's country of origin for re-export from your country.

Before re-exporting the product or manuals, please contact us to confirm whether they are export-controlled items or not.

For more details, visit

<https://www.anritsu.com/support/export-procedures>.

When you dispose of the products or manuals subject to export control, they must be physically destroyed or shredded so as not to be unlawfully used for military purpose.

July 21, 2020 (First Edition)

August 26, 2022 (Ninth Edition)

Copyright ©2020-2022, ANRITSU CORPORATION.

All rights reserved. No part of this manual may be reproduced without the prior written permission of the publisher.

The operational instructions of this manual may be changed without prior notice.

Printed in Japan

About This Manual

This operation manual describes the SCPI (Standard Commands for Programmable Instruments) commands for Network Master Pro/Flex.

Note: SCPI commands described in this manual are supported in Network Master Pro/Flex version 12.06.

Some commands or queries in this manual may require that specific hardware or software options are installed. These options must be purchased separately.

This operation manual uses the notations described in the following standards:

- IEEE: Std 488.2-1992
- SCPI: VERSION 1999.0 (SCPI Consortium)

Contents

1	Overview	53
1.1	Ethernet Based Remote Control	53
1.1.1	Connecting Cable	53
1.1.2	Ethernet Remote Control Settings	54
1.1.3	Communication Buffers	54
1.2	Program Messages	55
1.2.1	Program Message Unit	55
1.2.2	Program Headers	56
1.2.3	Program Data	57
1.2.4	Program Message Terminator	58
1.2.5	Compound Program Messages	58
1.2.6	Sequential Execution	58
1.3	Response Messages	59
1.3.1	Response Data	59
1.3.2	Response Messages Terminator	61
1.3.3	Prompt	61
1.4	Status	62
1.4.1	Configuration of Status Registers	62
1.4.2	IEEE488.2-defined Registers	64
1.4.3	SCPI-defined Registers	67
1.4.4	Network Master Device-Dependent Status Registers	69
1.4.5	Reading, Writing and Clearing Status Registers	70
1.5	Controller Example	72
1.5.1	PuTTY	72
1.6	Definitions	75
1.6.1	NaN (Not a Number)	75
1.6.2	→ Right Arrow	75
1.6.3	Data Bit (DB)	75
1.6.4	Port Number (Logical Port)	75
2	SCPI Conformance Information	77
2.1	SCPI Version	77
2.2	IEEE 488.2 Mandatory Commands	78
2.2.1	*CLS	78
2.2.2	*ESE	78
2.2.3	*ESR?	79
2.2.4	*IDN?	79
2.2.5	*OPC	79
2.2.6	*RST	80
2.2.7	*SRE	80
2.2.8	*STB?	81
2.2.9	*TST?	81
2.2.10	*WAI	81
2.3	SCPI System Subsystem Commands	82
2.3.1	SYSTem:VERSion?	82
2.3.2	SYSTem:ERRor[:NEXT]?	82
2.3.3	SYSTem:ERRor:ADDitional[:MESSAge]	82
2.3.4	SYSTem:DATE	83
2.3.5	SYSTem:TIME	83

2.3.6	SYSTem:REBoot	83
2.3.7	SYSTem:GPS:NSATellites?	84
2.3.8	SYSTem:GPS:TIME?	84
2.3.9	SYSTem:GPS:LOCation?	84
2.3.10	SYSTem:GPS:POSition?	84
2.3.11	SYSTem:GPS:POWER	84
2.3.12	SYSTem:GPS:SYNCmode	85
2.3.13	SYSTem:GPS:ANTNpower	85
2.3.14	SYSTem:GPS:GPS	85
2.3.15	SYSTem:GPS:GLONass	86
2.3.16	SYSTem:GPS:GALileo	86
2.3.17	SYSTem:GPS:BEIDou	86
2.3.18	SYSTem:GPS:MBANd	87
2.3.19	SYSTem:GPS:PWRElapsed?	87
2.3.20	SYSTem:GPS:LOCElapsed?	87
2.3.21	SYSTem:GPS:SYNElapsed?	87
2.3.22	SYSTem:GPS:EMASk	88
2.3.23	SYSTem:GPS:FPOSition	88
2.3.24	SYSTem:GPS:LNUMber?	88
2.3.25	SYSTem:GPS:LSElect	89
2.3.26	SYSTem:GPS:LLISt?	89
2.3.27	SYSTem:GPS:LADD	89
2.3.28	SYSTem:GPS:LREMove	90
2.3.29	SYSTem:GPS:LEdit	90
2.3.30	SYSTem:GPS:ADValue	90
2.3.31	SYSTem:GPS:REFCorrection	91
2.3.32	SYSTem:GPS:OPOLarity	91
2.3.33	SYSTem:GPS:MStatus?	92
2.3.34	SYSTem:GPS:HOLElapsed?	92
2.3.35	SYSTem:GPS:HOLRemaining?	92
2.3.36	SYSTem:GPS:RBTemperature?	92
2.3.37	SYSTem:COMMunicate:TERMinator	93
2.3.38	SYSTem:PROMpt	93
2.3.39	SYSTem:LOCal:CONTRol	93
2.3.40	SYSTem:NCONnectivity:COMunication:AUTH:TYPE	94
2.3.41	SYSTem:NCONnectivity:COMunication:BASic	94
2.3.42	SYSTem:NCONnectivity:COMunication:TURi	94
2.3.43	SYSTem:NCONnectivity:COMunication:SET	95
2.3.44	SYSTem:NCONnectivity:COMunication:LRETurn:RRESponse?	95
2.3.45	SYSTem:NCONnectivity:COMunication:LRETurn:RStatus?	95
2.3.46	SYSTem:NCONnectivity:COMunication:LRETurn:ERRor?	95
2.3.47	SYSTem:UTILity:SANalysis:STARt	96
2.3.48	SYSTem:UTILity:SANalysis:STATus?	96
2.3.49	SYSTem:UTILity:SANalysis:RESult:SUMMery?	97
2.3.50	SYSTem:DTIMestamp?	97
2.3.51	SYSTem:TIMing:EXTRnal?	97
2.3.52	SYSTem:STIMuli:INSert	98
2.3.53	SYSTem:STIMuli:CLR	98
2.3.54	SYSTem:WAIT[:IDLE]	98
2.3.55	SYSTem:WAIT:DURation	98
2.3.56	SYSTem:APPLication	99
2.3.57	SYSTem:APPLication?	99
2.4	SCPI Instrument Subsystem Commands	100
2.4.1	Connection to Application Server	100
2.4.2	Connection to multiple applications	100
2.4.3	Connection from multiple users	100
2.4.4	Force Termination of Application Server	100
2.4.5	INSTrument:STARt[:DEFault]	101
2.4.6	INSTrument:STARt:LAST	103

2.4.7	INSTRument:START:GUI	103
2.4.8	INSTRument:TERMinate	103
2.4.9	INSTRument:TERMinate:FORCe	103
2.4.10	INSTRument:COUNt?	103
2.4.11	INSTRument:CATalog?	104
2.4.12	INSTRument:STATe?	104
2.4.13	INSTRument:CONNect	104
2.4.14	INSTRument:CONNect:ALL	104
2.4.15	INSTRument:CONNect[:CATalog]?	105
2.4.16	INSTRument:DISConnect	105
2.4.17	INSTRument[:SElect]	105
2.4.18	INSTRument:ERRor[:NEXT]?	106
2.4.19	INSTRument:PORT?	106
2.4.20	INSTRument:PORT:FREE?	106
2.4.21	INSTRument:PORT:CATalog?	106
2.4.22	INSTRument:MODule:CATalog?	106
2.4.23	INSTRument:CTRL:NAME?	107
2.4.24	INSTRument:CTRL:SN?	107
2.4.25	INSTRument:CTRL:TRT?	107
2.4.26	INSTRument:CTRL:OPTion:CATalog?	107
2.4.27	INSTRument:MODule<Md>:NAME?	107
2.4.28	INSTRument:MODule<Md>:SN?	107
2.4.29	INSTRument:MODule<Md>:TRT?	108
2.4.30	INSTRument:MODule<Md>:OPTion:CATalog?	108
2.5	SCPI Status Subsystem Commands	109
2.5.1	STATus:OPERation[:EVENT]?	109
2.5.2	STATus:OPERation:CONDition?	109
2.5.3	STATus:OPERation:ENABle	109
2.5.4	STATus:OPERation:PTRansition	110
2.5.5	STATus:OPERation:NTRansition	110
2.5.6	STATus:QUESTionable[:EVENT]?	110
2.5.7	STATus:QUESTionable:CONDition?	111
2.5.8	STATus:QUESTionable:ENABle	111
2.5.9	STATus:QUESTionable:PTRansition	111
2.5.10	STATus:QUESTionable:NTRansition	112
2.5.11	STATus:PORT[:EVENT]?	112
2.5.12	STATus:PORT:CONDition?	112
2.5.13	STATus:PORT:ENABle	112
2.5.14	STATus:PORT:PTRansition	113
2.5.15	STATus:PORT:NTRansition	113
2.5.16	STATus:PRESet	114
2.5.17	STATus:INTERface:PORT<Pt>[:EVENT]?	114
2.5.18	STATus:INTERface:PORT<Pt>:CONDition?	115
2.6	Mass Memory Subsystem Commands	116
2.6.1	MMEMory:LOAD	116
2.6.2	MMEMory:STORe:STATe	116
2.6.3	MMEMory:STORe:DATA	116
2.6.4	MMEMory:DELeTe	117
2.6.5	MMEMory:DATA?	117
2.6.6	MMEMory:COpy	117
2.6.7	MMEMory:MOVe	117
2.6.8	MMEMory:INFO?	118
2.6.9	MMEMory:CATalog?	118
2.6.10	MMEMory:DCATalog?	118
2.6.11	MMEMory:MDIRectory	118
2.6.12	MMEMory:RDIRectory	119
2.6.13	MMEMory:SAVe	119

3.1	Interface Setup	121
3.1.1	NFRame:PORT<Pt>:INTerface:TYPE	121
3.1.2	NFRame:PORT<Pt>:INTerface:BITRate	122
3.1.3	NFRame:PORT<Pt>:INTerface:LANE	122
3.1.4	NFRame:PORT<Pt>:TIMing	123
3.1.5	NFRame:PORT<Pt>[:RX]:INTerface:PATtern:FOLLow	123
3.1.6	NFRame:PORT<Pt>:TX:INTerface:PATtern	124
3.1.7	NFRame:PORT<Pt>:RX:INTerface:PATtern	124
3.1.8	NFRame:PORT<Pt>:TX:INTerface:PINVersion	125
3.1.9	NFRame:PORT<Pt>:RX:INTerface:PINVersion	125
3.1.10	NFRame:PORT<Pt>:TX:INTerface:LANE<Ln>:PATtern	125
3.1.11	NFRame:PORT<Pt>:RX:INTerface:LANE<Ln>:PATtern	126
3.1.12	NFRame:PORT<Pt>:TX:INTerface:LANE<Ln>:PINVersion	126
3.1.13	NFRame:PORT<Pt>:RX:INTerface:LANE<Ln>:PINVersion	127
3.1.14	NFRame:PORT<Pt>:TX:INTerface:PATtern:LANE:FOLLow	127
3.1.15	NFRame:PORT<Pt>:RX:INTerface:PATtern:LANE:FOLLow	127
3.1.16	NFRame:PORT<Pt>:PATtern:RXFollow	128
3.1.17	NFRame:PORT<Pt>:TX:PATtern	128
3.1.18	NFRame:PORT<Pt>:RX:PATtern	129
3.1.19	NFRame:PORT<Pt>:TX:PINVersion	129
3.1.20	NFRame:PORT<Pt>:RX:PINVersion	129
3.1.21	NFRame:PORT<Pt>:TX:LANE:PATtern	130
3.1.22	NFRame:PORT<Pt>:RX:LANE:PATtern	130
3.1.23	NFRame:PORT<Pt>:TX:LANE:PINVersion	131
3.1.24	NFRame:PORT<Pt>:RX:LANE:PINVersion	131
3.1.25	NFRame:PORT<Pt>:TX:PATtern:LNFollow	132
3.1.26	NFRame:PORT<Pt>:RX:PATtern:LNFollow	132
3.1.27	NFRame:PORT<Pt>:THResholds:FEC:SYMBOLerror:RATE	132
3.2	Stimuli	133
3.2.1	NFRame:PORT<Pt>:STIMuli:TX:FOFFset	133
3.2.2	NFRame:PORT<Pt>:STIMuli:TX:LANE	133
3.3	Result	134
3.3.1	NFRame:PORT<Pt>[:RX]:IFETch?	134
3.4	Status	134
3.4.1	NFRame:STATus:PORT<Pt>[:RX]:AESummary[:EVENT]?	134
3.4.2	NFRame:STATus:PORT<Pt>[:RX]:AESummary:CONDition?	135
3.4.3	NFRame:STATus:PORT<Pt>[:RX]:ALARm[:EVENT]?	135
3.4.4	NFRame:STATus:PORT<Pt>[:RX]:ALARm:CONDition?	135
3.4.5	NFRame:STATus:PORT<Pt>[:RX]:ERRor[:EVENT]?	135
3.4.6	NFRame:STATus:PORT<Pt>[:RX]:ERRor:CONDition?	136
3.4.7	NFRame:STATus:PORT<Pt>[:RX]:PSLevel?	136
3.4.8	NFRame:STATus:PORT<Pt>:TX:PSLevel?	136
3.4.9	NFRame:STATus:PORT<Pt>[:RX]:PFRequency?	136
3.4.10	NFRame:STATus:PORT<Pt>[:RX]:PDEViation?	136
3.4.11	NFRame:STATus:PORT<Pt>[:RX]:PCDRlock?	137
3.4.12	NFRame:STATus:PORT<Pt>[:RX]:PLSS?	137
3.4.13	NFRame:STATus:PORT<Pt>[:RX]:PSYMberr?	137
3.4.14	NFRame:STATus:PORT<Pt>[:RX]:PBITerr?	137
4	CPRI/OBSAI	139
4.1	Port	139
4.1.1	CPRI:PORT<Pt>:MODE	139
4.1.2	CPRI:PORT<Pt>:TIMing:SOURce	139
4.1.3	CPRI:PORT<Pt>:LRATe	140
4.1.4	CPRI:PORT<Pt>:LRATe:MODE	140
4.1.5	CPRI:PORT<Pt>:CONTents	141
4.1.6	CPRI:PORT<Pt>:FEC	141
4.1.7	CPRI:PORT<Pt>:PATtern	141
4.1.8	CPRI:PORT<Pt>:PINVersion	142

4.1.9	CPRI:PORT<Pt>:UP32	142
4.1.10	CPRI:PORT<Pt>:PVERsion	142
4.1.11	CPRI:PORT<Pt>:PROLe	143
4.1.12	CPRI:PORT<Pt>:SSEqence	143
4.1.13	CPRI:PORT<Pt>:CMHDlc	143
4.1.14	CPRI:PORT<Pt>:EENable	144
4.1.15	CPRI:PORT<Pt>:CMEPointer	144
4.1.16	CPRI:PORT<Pt>:OBSai:FSSeed	144
4.1.17	CPRI:PORT<Pt>:OBSai:TX:FIDLe	145
4.1.18	CPRI:PORT<Pt>:OBSai:TX:SSINdex	145
4.1.19	CPRI:PORT<Pt>:OBSai:TX:SSValue	145
4.1.20	CPRI:PORT<Pt>:OBSai:TX:ADDRess	146
4.1.21	CPRI:PORT<Pt>:OBSai:TX:TYPE	146
4.1.22	CPRI:PORT<Pt>:OBSai:RX:FILTer	146
4.1.23	CPRI:PORT<Pt>:OBSai:RX:SSINdex	147
4.1.24	CPRI:PORT<Pt>:OBSai:RX:SSValue	147
4.1.25	CPRI:PORT<Pt>:OBSai:RX:ADDRess	147
4.1.26	CPRI:PORT<Pt>:OBSai:RX:TYPE	147
4.1.27	CPRI:PORT<Pt>:SETup:FOLLow	148
4.2	Stimuli	149
4.2.1	CPRI:PORT<Pt>:STIMuli:ALARm	149
4.2.2	CPRI:PORT<Pt>:STIMuli:AINSerction	149
4.2.3	CPRI:PORT<Pt>:STIMuli:ERRor	150
4.2.4	CPRI:PORT<Pt>:STIMuli:EINSerction	150
4.2.5	CPRI:PORT<Pt>:STIMuli:EBLength	150
4.2.6	CPRI:PORT<Pt>:STIMuli:FOFFset	151
4.3	Result	152
4.3.1	CPRI:PORT<Pt>:IFETch?	152
4.4	Status	153
4.4.1	CPRI:PORT<Pt>:STATus:AESummary[:EVENT]?	153
4.4.2	CPRI:PORT<Pt>:STATus:AESummary:CONDiton?	153
4.4.3	CPRI:PORT<Pt>:STATus:ALARm<section>[:EVENT]?	153
4.4.4	CPRI:PORT<Pt>:STATus:ALARm<section>:CONDition?	154
4.4.5	CPRI:PORT<Pt>:STATus:ERRor[:EVENT]?	154
4.4.6	CPRI:PORT<Pt>:STATus:ERRor:CONDition?	154
4.4.7	CPRI:PORT<Pt>:STATus:FEC[:EVENT]?	154
4.4.8	CPRI:PORT<Pt>:STATus:FEC:CONDition?	154
4.4.9	CPRI:PORT<Pt>:STATus:TX:PSLevel?	155
4.4.10	CPRI:PORT<Pt>:STATus:RX:PSLevel?	155
4.4.11	CPRI:PORT<Pt>:STATus:TX:PDEViation?	155
4.4.12	CPRI:PORT<Pt>:STATus:RX:PDEViation?	155
4.4.13	CPRI:PORT<Pt>:STATus:TX:PBRate?	155
4.4.14	CPRI:PORT<Pt>:STATus:RX:PBRate?	156
4.4.15	CPRI:PORT<Pt>:STATus:TX:PPBRate?	156
4.4.16	CPRI:PORT<Pt>:STATus:RX:PPBRate?	156
4.4.17	CPRI:PORT<Pt>:STATus:LINK:STATE?	156
4.4.18	CPRI:PORT<Pt>:STATus:LINK:PROLe?	156
4.4.19	CPRI:PORT<Pt>:STATus:RX:LINK:PVERsion?	156
4.4.20	CPRI:PORT<Pt>:STATus:RX:LINK:HRATE?	157
4.4.21	CPRI:PORT<Pt>:STATus:RX:LINK:POINterp?	157
4.4.22	CPRI:PORT<Pt>:STATus:TX:LINK:PVERsion?	157
4.4.23	CPRI:PORT<Pt>:STATus:TX:LINK:HRATE?	157
4.4.24	CPRI:PORT<Pt>:STATus:TX:LINK:POINterp?	157
4.4.25	CPRI:PORT<Pt>:STATus:OBSai:TX:LINK:STATE?	157
4.4.26	CPRI:PORT<Pt>:STATus:OBSai:RX:LINK:STATE?	158
4.5	RTD	159
4.5.1	CPRI:PORT<Pt>:RTD:ENABle	159
4.5.2	CPRI:PORT<Pt>:RTD:MLIMit	159
4.5.3	CPRI:PORT<Pt>:RTD:NUMBer?	159

4.5.4	CPRI:PORT<Pt>:RTD:ATime?	159
4.5.5	CPRI:PORT<Pt>:RTD:MTIME?	160
4.5.6	CPRI:PORT<Pt>:RTD:LTime?	160
4.6	APS	161
4.6.1	CPRI:PORT<Pt>:APS:ENable	161
4.6.2	CPRI:PORT<Pt>:APS:EVENT	161
4.6.3	CPRI:PORT<Pt>:APS:PERiod	162
4.6.4	CPRI:PORT<Pt>:APS:MLIMit	162
4.6.5	CPRI:PORT<Pt>:APS:NUMBer?	162
4.6.6	CPRI:PORT<Pt>:APS:ATime?	162
4.6.7	CPRI:PORT<Pt>:APS:MTIME?	163
4.6.8	CPRI:PORT<Pt>:APS:LTime?	163
4.6.9	CPRI:PORT<Pt>:APS:CTime?	163
5	2 Mbps	165
5.1	Receiver	165
5.1.1	TMBPs:RX<Pt>[:ENABled]	165
5.1.2	TMBPs:RX<Pt>:FOLLow	165
5.1.3	TMBPs:RX<Pt>:CONNector	166
5.1.4	TMBPs:RX<Pt>:MODE	166
5.1.5	TMBPs:RX<Pt>:SENSitivity	166
5.1.6	TMBPs:RX<Pt>:CODE	167
5.1.7	TMBPs:RX<Pt>:PCMFrame	167
5.1.8	TMBPs:RX<Pt>:CRC4	167
5.1.9	TMBPs:RX<Pt>:EBITs	168
5.1.10	TMBPs:RX<Pt>:PATtern	168
5.1.11	TMBPs:RX<Pt>:PINVersion	169
5.1.12	TMBPs:RX<Pt>:PTSLots	169
5.1.13	TMBPs:RX<Pt>:UP16	170
5.1.14	TMBPs:RX<Pt>:UP32	170
5.1.15	TMBPs:RX<Pt>:UP2K	170
5.1.16	TMBPs:RX<Pt>:AUDio	171
5.1.17	TMBPs:RX<Pt>:ATSLot	171
5.1.18	TMBPs:RX<Pt>:CAS	171
5.2	Transmitter	172
5.2.1	TMBPs:TX<Pt>[:ENABled]	172
5.2.2	TMBPs:TX<Pt>:FOLLow	172
5.2.3	TMBPs:TX<Pt>:CONNector	172
5.2.4	TMBPs:TX<Pt>:DINSert[:ENABle]	173
5.2.5	TMBPs:TX<Pt>:TIMing	173
5.2.6	TMBPs:TX<Pt>:FOFFset	173
5.2.7	TMBPs:TX<Pt>:CODE	174
5.2.8	TMBPs:TX<Pt>:PCMFrame	174
5.2.9	TMBPs:TX<Pt>:CRC4	174
5.2.10	TMBPs:TX<Pt>:SABits	175
5.2.11	TMBPs:TX<Pt>:SABMode	175
5.2.12	TMBPs:TX<Pt>:SABMode?	176
5.2.13	TMBPs:TX<Pt>:PATtern	176
5.2.14	TMBPs:TX<Pt>:PINVersion	176
5.2.15	TMBPs:TX<Pt>:PTSLots	177
5.2.16	TMBPs:TX<Pt>:UP16	177
5.2.17	TMBPs:TX<Pt>:UP32	177
5.2.18	TMBPs:TX<Pt>:UP2K	178
5.2.19	TMBPs:TX<Pt>:UTSLots	178
5.2.20	TMBPs:TX<Pt>:SCContent	179
5.2.21	TMBPs:TX<Pt>:SCTSlot	179
5.2.22	TMBPs:TX<Pt>:TFR	179
5.2.23	TMBPs:TX<Pt>:TLEVel	180
5.2.24	TMBPs:TX<Pt>:CAS	180

5.2.25	TMBPs:TX<Pt>:CASChannel	180
5.2.26	TMBPs:TX<Pt>:CASBits	181
5.2.27	TMBPs:TX<Pt>:COCBits	181
5.3	Stimuli	182
5.3.1	TMBPs:STIMuli:TX<Pt>:ALARm	182
5.3.2	TMBPs:STIMuli:TX<Pt>:ERRor	182
5.3.3	TMBPs:STIMuli:TX<Pt>:EINSert	183
5.3.4	TMBPs:STIMuli:TX<Pt>:EBLength	183
5.4	Result	183
5.4.1	TMBPs:RX<Pt>:IFETch?	183
5.5	Status	185
5.5.1	TMBPs:STATus:RX<Pt>:AESummary[:EVENT]?	185
5.5.2	TMBPs:STATus:RX<Pt>:AESummary:CONDition?	185
5.5.3	TMBPs:STATus:RX<Pt>:ALARm[:EVENT]?	185
5.5.4	TMBPs:STATus:RX<Pt>:ALARm:CONDition?	186
5.5.5	TMBPs:STATus:RX<Pt>:ERRor[:EVENT]?	186
5.5.6	TMBPs:STATus:RX<Pt>:ERRor:CONDition?	186
5.5.7	TMBPs:STATus:RX<Pt>:PSLevel?	187
5.5.8	TMBPs:STATus:RX<Pt>:PDEviation?	187
5.5.9	TMBPs:STATus:RX<Pt>:PBRate?	187
5.5.10	TMBPs:STATus:RX<Pt>:PPBRate?	187
5.5.11	TMBPs:STATus:RX<Pt>:FNFWord?	187
5.5.12	TMBPs:STATus:RX<Pt>:FDUMp?	188
5.5.13	TMBPs:STATus:RX<Pt>:ACONtent?	188
5.5.14	TMBPs:STATus:RX<Pt>:AEBContent?	188
5.5.15	TMBPs:STATus:RX<Pt>:APPeak?	188
5.5.16	TMBPs:STATus:RX<Pt>:ANPeak?	188
5.5.17	TMBPs:STATus:RX<Pt>:ALEVel?	188
5.5.18	TMBPs:STATus:RX<Pt>:AFRequency?	189
5.5.19	TMBPs:STATus:RX<Pt>:ACOFFset?	189
5.5.20	TMBPs:STATus:RX<Pt>:CMSignal?	189
5.5.21	TMBPs:STATus:RX<Pt>:CBITs?	189
5.6	APS	190
5.6.1	TMBPs:APS:STARt	190
5.6.2	TMBPs:APS:STOP	190
5.6.3	TMBPs:APS:RX<Pt>:NUMBer?	190
5.6.4	TMBPs:APS:RX<Pt>:ATIMe?	190
5.6.5	TMBPs:APS:RX<Pt>:MTIMe?	190
5.6.6	TMBPs:APS:RX<Pt>:LTIMe?	191
5.6.7	TMBPs:APS:RX<Pt>:EVENt	191
5.6.8	TMBPs:APS:RX<Pt>:MLIMit	191
5.7	RTD	192
5.7.1	TMBPs:RTD:RX<Pt>:NUMBer?	192
5.7.2	TMBPs:RTD:RX<Pt>:ATIMe?	192
5.7.3	TMBPs:RTD:RX<Pt>:MTIMe?	192
5.7.4	TMBPs:RTD:RX<Pt>:LTIMe?	192
6	T1	193
6.1	Receiver	193
6.1.1	T1:RX<Pt>[:ENABled]	193
6.1.2	T1:RX<Pt>:FOLLow	193
6.1.3	T1:RX<Pt>:MODE	194
6.1.4	T1:RX<Pt>:CODE	194
6.1.5	T1:RX<Pt>:PCMFrame	194
6.1.6	T1:RX<Pt>:FTYPE	195
6.1.7	T1:RX<Pt>:PATtern	195
6.1.8	T1:RX<Pt>:PINVersion	196
6.1.9	T1:RX<Pt>:PTSLots	196
6.1.10	T1:RX<Pt>:UP16	196

6.1.11	T1:RX<Pt>:UP32	197
6.1.12	T1:TX<Pt>:SCContent	197
6.1.13	T1:RX<Pt>:AUDio	197
6.1.14	T1:RX<Pt>:ATSLot	198
6.1.15	T1:RX<Pt>:UP2K	198
6.1.16	T1:RX<Pt>:CAS	198
6.2	Transmitter	199
6.2.1	T1:TX<Pt>[:ENABled]	199
6.2.2	T1:TX<Pt>:FOLLow	199
6.2.3	T1:TX<Pt>:DINSert[:ENABle]	200
6.2.4	T1:TX<Pt>:TIMing	200
6.2.5	T1:TX<Pt>:FOFFset	200
6.2.6	T1:TX<Pt>:CODE	201
6.2.7	T1:TX<Pt>:LBOut	201
6.2.8	T1:TX<Pt>:PCMFrame	201
6.2.9	T1:TX<Pt>:FTYPE	202
6.2.10	T1:TX<Pt>:PATtern	202
6.2.11	T1:TX<Pt>:PINVersion	203
6.2.12	T1:TX<Pt>:PTSLots	203
6.2.13	T1:TX<Pt>:UP16	204
6.2.14	T1:TX<Pt>:UP32	204
6.2.15	T1:TX<Pt>:UP2K	204
6.2.16	T1:TX<Pt>:UTSLots	205
6.2.17	T1:TX<Pt>:SCTSlot	205
6.2.18	T1:TX<Pt>:TFR	205
6.2.19	T1:TX<Pt>:TLEVel	206
6.2.20	T1:TX<Pt>:CAS	206
6.2.21	T1:TX<Pt>:CASChannel	206
6.2.22	T1:TX<Pt>:CASBits	207
6.2.23	T1:TX<Pt>:COCBits	207
6.2.24	T1:TX<Pt>:SF:CASBits	207
6.2.25	T1:TX<Pt>:SF:COCBits	208
6.3	Stimuli	208
6.3.1	T1:STIMuli:TX<Pt>:ALARm	208
6.3.2	T1:STIMuli:TX<Pt>:ERRor	209
6.3.3	T1:STIMuli:TX<Pt>:EINSert	209
6.3.4	T1:STIMuli:TX<Pt>:EBLength	210
6.3.5	T1:STIMuli:TX<Pt>:FDLink	210
6.3.6	T1:STIMuli:TX<Pt>:FDLink:UFDL	211
6.3.7	T1:STIMuli:TX<Pt>:FDLink:IBCode	211
6.4	Result	212
6.4.1	T1:RX<Pt>:IFETch?	212
6.5	Status	213
6.5.1	T1:STATus:RX<Pt>:AESummary[:EVENT]?	213
6.5.2	T1:STATus:RX<Pt>:AESummary:CONDition?	213
6.5.3	T1:STATus:RX<Pt>:ALARm[:EVENT]?	213
6.5.4	T1:STATus:RX<Pt>:ALARm:CONDition?	214
6.5.5	T1:STATus:RX<Pt>:ERRor[:EVENT]?	214
6.5.6	T1:STATus:RX<Pt>:ERRor:CONDition?	214
6.5.7	T1:STATus:RX<Pt>:PSLevel?	215
6.5.8	T1:STATus:RX<Pt>:PDEViation?	215
6.5.9	T1:STATus:RX<Pt>:PBRate?	215
6.5.10	T1:STATus:RX<Pt>:FDUMp?	215
6.5.11	T1:STATus:RX<Pt>:ACONtent?	215
6.5.12	T1:STATus:RX<Pt>:AIBContent?	216
6.5.13	T1:STATus:RX<Pt>:APPeak?	216
6.5.14	T1:STATus:RX<Pt>:ANPeak?	216
6.5.15	T1:STATus:RX<Pt>:ALEVel?	216
6.5.16	T1:STATus:RX<Pt>:AFRequency?	216

6.5.17	T1:STATus:RX<Pt>:ACOFset?	216
6.5.18	T1:STATus:RX<Pt>:PPBRate?	217
6.5.19	T1:STATus:RX<Pt>:FBIT?	217
6.5.20	T1:STATus:RX<Pt>:SBIT?	217
6.5.21	T1:STATus:RX<Pt>:MBIT?	217
6.5.22	T1:STATus:RX<Pt>:FDL:MODE	217
6.5.23	T1:STATus:RX<Pt>:FDL:MBIT:CODE?	218
6.5.24	T1:STATus:RX<Pt>:FDL:INBand:CODE?	218
6.5.25	T1:STATus:RX<Pt>:FDL:UDEFined	218
6.5.26	T1:STATus:RX<Pt>:FDL:UCODE	218
6.5.27	T1:STATus:RX<Pt>:FDL:TRIGger	219
6.5.28	T1:STATus:RX<Pt>:CBITs?	219
6.6	APS	220
6.6.1	T1:APS:STARt	220
6.6.2	T1:APS:STOP	220
6.6.3	T1:APS:RX<Pt>:NUMBer?	220
6.6.4	T1:APS:RX<Pt>:ATIME?	220
6.6.5	T1:APS:RX<Pt>:MTIME?	220
6.6.6	T1:APS:RX<Pt>:LTIME?	221
6.6.7	T1:APS:RX<Pt>:EVENT	221
6.6.8	T1:APS:RX<Pt>:MLIMit	221
6.7	RTD	222
6.7.1	T1:RTD:RX<Pt>:NUMBer?	222
6.7.2	T1:RTD:RX<Pt>:ATIME?	222
6.7.3	T1:RTD:RX<Pt>:MTIME?	222
6.7.4	T1:RTD:RX<Pt>:LTIME?	222
7	E3	223
7.1	Receiver	223
7.1.1	E3:RX<Pt>[:ENABled]	223
7.1.2	E3:RX<Pt>:MODE	223
7.1.3	E3:RX<Pt>:FOLLow	224
7.1.4	E3:RX<Pt>:PCMFrame	224
7.1.5	E3:RX<Pt>:PATtern	225
7.1.6	E3:RX<Pt>:PINVersion	225
7.1.7	E3:RX<Pt>:UP16	226
7.1.8	E3:RX<Pt>:UP32	226
7.1.9	E3:RX<Pt>:UP2K	226
7.2	Transmitter	227
7.2.1	E3:TX<Pt>[:ENABled]	227
7.2.2	E3:TX<Pt>:FOLLow	227
7.2.3	E3:TX<Pt>:TIMing	227
7.2.4	E3:TX<Pt>:FOFFset	228
7.2.5	E3:TX<Pt>:PCMFrame	228
7.2.6	E3:TX<Pt>:PATtern	229
7.2.7	E3:TX<Pt>:PINVersion	229
7.2.8	E3:TX<Pt>:UP16	230
7.2.9	E3:TX<Pt>:UP32	230
7.2.10	E3:TX<Pt>:UP2K	230
7.3	Stimuli	231
7.3.1	E3:STIMuli:TX<Pt>:ALARm	231
7.3.2	E3:STIMuli:TX<Pt>:ERRor	231
7.3.3	E3:STIMuli:TX<Pt>:EINsert	232
7.3.4	E3:STIMuli:TX<Pt>:EBLength	232
7.4	Results	233
7.4.1	E3:RX<Pt>:IFETch?	233
7.5	Status	234
7.5.1	E3:STATus:RX<Pt>:PSLevel?	234
7.5.2	E3:STATus:RX<Pt>:PDEViation?	234

7.5.3	E3:STATus:RX<Pt>:PBRate?	234
7.5.4	E3:STATus:RX<Pt>:PPBRate?	234
7.5.5	E3:STATus:RX<Pt>:AESummary[:EVENT]?	234
7.5.6	E3:STATus:RX<Pt>:AESummary:CONDition?	235
7.5.7	E3:STATus:RX<Pt>:ALARm[:EVENT]?	235
7.5.8	E3:STATus:RX<Pt>:ALARm:CONDition?	235
7.5.9	E3:STATus:RX<Pt>:ERRor[:EVENT]?	236
7.5.10	E3:STATus:RX<Pt>:ERRor:CONDition?	236
7.6	RTD	237
7.6.1	E3:RTD:RX<Pt>:NUMBer?	237
7.6.2	E3:RTD:RX<Pt>:ATime?	237
7.6.3	E3:RTD:RX<Pt>:MTime?	237
7.6.4	E3:RTD:RX<Pt>:LTime?	237
8	T3	239
8.1	Receiver	239
8.1.1	T3:RX<Pt>[:ENABled]	239
8.1.2	T3:RX<Pt>:MODE	239
8.1.3	T3:RX<Pt>:FOLLow	240
8.1.4	T3:RX<Pt>:PCMFrame	240
8.1.5	T3:RX<Pt>:FTYPE	240
8.1.6	T3:RX<Pt>:PATtern	241
8.1.7	T3:RX<Pt>:PINVersion	241
8.1.8	T3:RX<Pt>:UP16	242
8.1.9	T3:RX<Pt>:UP32	242
8.1.10	T3:RX<Pt>:UP2K	242
8.2	Transmitter	243
8.2.1	T3:TX<Pt>[:ENABled]	243
8.2.2	T3:TX<Pt>:FOLLow	243
8.2.3	T3:TX<Pt>:TIMing	243
8.2.4	T3:TX<Pt>:FOFFset	244
8.2.5	T3:TX<Pt>:PCMFrame	244
8.2.6	T3:TX<Pt>:FTYPE	244
8.2.7	T3:TX<Pt>:LBOut	245
8.2.8	T3:TX<Pt>:PATtern	245
8.2.9	T3:TX<Pt>:PINVersion	246
8.2.10	T3:TX<Pt>:UP16	246
8.2.11	T3:TX<Pt>:UP32	246
8.2.12	T3:TX<Pt>:UP2K	247
8.3	Stimuli	248
8.3.1	T3:STIMuli:TX<Pt>:ALARm	248
8.3.2	T3:STIMuli:TX<Pt>:ERRor	248
8.3.3	T3:STIMuli:TX<Pt>:EINsert	249
8.3.4	T3:STIMuli:TX<Pt>:EBLength	249
8.4	Results	250
8.4.1	T3:RX<Pt>:IFETch?	250
8.5	Status	251
8.5.1	T3:STATus:RX<Pt>:PSLevel?	251
8.5.2	T3:STATus:RX<Pt>:PDEVIation?	251
8.5.3	T3:STATus:RX<Pt>:PBRate?	251
8.5.4	T3:STATus:RX<Pt>:PPBRate?	251
8.5.5	T3:STATus:RX<Pt>:AESummary[:EVENT]?	251
8.5.6	T3:STATus:RX<Pt>:AESummary:CONDition?	252
8.5.7	T3:STATus:RX<Pt>:ALARm[:EVENT]?	252
8.5.8	T3:STATus:RX<Pt>:ALARm:CONDition?	252
8.5.9	T3:STATus:RX<Pt>:ERRor[:EVENT]?	253
8.5.10	T3:STATus:RX<Pt>:ERRor:CONDition?	253
8.6	RTD	254
8.6.1	T3:RTD:RX<Pt>:NUMBer?	254

8.6.2	T3:RTD:RX<Pt>:ATime?	254
8.6.3	T3:RTD:RX<Pt>:MTime?	254
8.6.4	T3:RTD:RX<Pt>:LTime?	254
9	E4	255
9.1	Receiver	255
9.1.1	E4:RX<Pt>[:ENABled]	255
9.1.2	E4:RX<Pt>:GAIN	255
9.1.3	E4:RX<Pt>:FOLLow	256
9.1.4	E4:RX<Pt>:PCMFrame	256
9.1.5	E4:RX<Pt>:PATtern	257
9.1.6	E4:RX<Pt>:PINVersion	257
9.1.7	E4:RX<Pt>:UP16	258
9.1.8	E4:RX<Pt>:UP32	258
9.1.9	E4:RX<Pt>:UP2K	258
9.2	Transmitter	259
9.2.1	E4:TX<Pt>[:ENABled]	259
9.2.2	E4:TX<Pt>:FOLLow	259
9.2.3	E4:TX<Pt>:TIMing	259
9.2.4	E4:TX<Pt>:FOFFset	260
9.2.5	E4:TX<Pt>:PCMFrame	260
9.2.6	E4:TX<Pt>:PATtern	261
9.2.7	E4:TX<Pt>:PINVersion	261
9.2.8	E4:TX<Pt>:UP16	262
9.2.9	E4:TX<Pt>:UP32	262
9.2.10	E4:TX<Pt>:UP2K	262
9.3	Stimuli	263
9.3.1	E4:STIMuli:TX<Pt>:ALARm	263
9.3.2	E4:STIMuli:TX<Pt>:ERRor	263
9.3.3	E4:STIMuli:TX<Pt>:EINsert	264
9.3.4	E4:STIMuli:TX<Pt>:EBLength	264
9.4	Status	265
9.4.1	E4:STATus:RX<Pt>:PSLevel?	265
9.4.2	E4:STATus:RX<Pt>:PDEViation?	265
9.4.3	E4:STATus:RX<Pt>:PBRate?	265
9.4.4	E4:STATus:RX<Pt>:PPBRate?	265
9.4.5	E4:STATus:RX<Pt>:AESummary[:EVENT]?	265
9.4.6	E4:STATus:RX<Pt>:AESummary:CONDition?	266
9.4.7	E4:STATus:RX<Pt>:ALARm[:EVENT]?	266
9.4.8	E4:STATus:RX<Pt>:ALARm:CONDition?	266
9.4.9	E4:STATus:RX<Pt>:ERRor[:EVENT]?	266
9.4.10	E4:STATus:RX<Pt>:ERRor:CONDition?	267
9.5	Results	268
9.5.1	E4:RX<Pt>:IFETch?	268
9.6	RTD	269
9.6.1	E4:RTD:RX<Pt>:NUMber?	269
9.6.2	E4:RTD:RX<Pt>:ATime?	269
9.6.3	E4:RTD:RX<Pt>:MTime?	269
9.6.4	E4:RTD:RX<Pt>:LTime?	269
10	SDH	271
10.1	Receiver	271
10.1.1	SDH:RX<Pt>:INterface	271
10.1.2	SDH:RX<Pt>:STMLevel	271
10.1.3	SDH:RX<Pt>:AUGroup	272
10.1.4	SDH:RX<Pt>:CONCatenation	272
10.1.5	SDH:RX<Pt>:CONTainer	273
10.1.6	SDH:RX<Pt>:SSTRucture	273
10.1.7	SDH:RX<Pt>:PATtern	274
10.1.8	SDH:RX<Pt>:UP16	274

10.1.9	SDH:RX<Pt>:UP32	275
10.1.10	SDH:RX<Pt>:UP2K	275
10.1.11	SDH:RX<Pt>:PINVersion	275
10.1.12	SDH:RX<Pt>:TCM	276
10.1.13	SDH:RX<Pt>:TUG3	276
10.1.14	SDH:RX<Pt>:TUG2	276
10.1.15	SDH:RX<Pt>:TU12	277
10.1.16	SDH:RX<Pt>:TU11	277
10.1.17	SDH:RX<Pt>:CHANnel	278
10.1.18	SDH:RX<Pt>:MAPPING	278
10.1.19	SDH:RX<Pt>:GAIN	278
10.1.20	SDH:RX<Pt>:FOLLOW	279
10.1.21	SDH:RX<Pt>:MEASUREMENT:HPLM	279
10.1.22	SDH:RX<Pt>:MEASUREMENT:LPLM	279
10.2	Transmitter	280
10.2.1	SDH:TX<Pt>:INTERFACE	280
10.2.2	SDH:TX<Pt>:[:ENABLE]	280
10.2.3	SDH:TX<Pt>:OPTICAL	280
10.2.4	SDH:TX<Pt>:ELECTRICAL	281
10.2.5	SDH:TX<Pt>:STMLevel	281
10.2.6	SDH:TX<Pt>:AUGROUP	282
10.2.7	SDH:TX<Pt>:CONCATENATION	282
10.2.8	SDH:TX<Pt>:CONTAINER	283
10.2.9	SDH:TX<Pt>:STRUCTURE	283
10.2.10	SDH:TX<Pt>:PATTERN	284
10.2.11	SDH:TX<Pt>:UP16	284
10.2.12	SDH:TX<Pt>:UP32	285
10.2.13	SDH:TX<Pt>:UP2K	285
10.2.14	SDH:TX<Pt>:PINVersion	285
10.2.15	SDH:TX<Pt>:TIMING	286
10.2.16	SDH:TX<Pt>:TCM	286
10.2.17	SDH:TX<Pt>:TUG3	286
10.2.18	SDH:TX<Pt>:TUG2	287
10.2.19	SDH:TX<Pt>:TU12	287
10.2.20	SDH:TX<Pt>:TU11	288
10.2.21	SDH:TX<Pt>:CHANnel	288
10.2.22	SDH:TX<Pt>:MAPPING	288
10.2.23	SDH:TX<Pt>:SOH:DEFAULT	289
10.2.24	SDH:TX<Pt>:SOH:TRACE	289
10.2.25	SDH:TX<Pt>:SOH:TRACE:CRC	289
10.2.26	SDH:TX<Pt>:SOH	290
10.2.27	SDH:TX<Pt>:VC4:POH:DEFAULT	291
10.2.28	SDH:TX<Pt>:VC4:POH:TRACE	291
10.2.29	SDH:TX<Pt>:VC4:POH:TRACE:CRC	291
10.2.30	SDH:TX<Pt>:VC4:POH:TTCM	292
10.2.31	SDH:TX<Pt>:VC4:POH	292
10.2.32	SDH:TX<Pt>:VC3:POH:DEFAULT	293
10.2.33	SDH:TX<Pt>:VC3:POH:TRACE	293
10.2.34	SDH:TX<Pt>:VC3:POH:TRACE:CRC	293
10.2.35	SDH:TX<Pt>:VC3:POH:TTCM	294
10.2.36	SDH:TX<Pt>:VC3:POH	294
10.2.37	SDH:TX<Pt>:VC12:POH:DEFAULT	294
10.2.38	SDH:TX<Pt>:VC12:POH:TRACE	295
10.2.39	SDH:TX<Pt>:VC12:POH:TRACE:CRC	295
10.2.40	SDH:TX<Pt>:VC12:POH:TTCM	295
10.2.41	SDH:TX<Pt>:VC12:POH	296
10.2.42	SDH:TX<Pt>:VC11:POH:DEFAULT	296
10.2.43	SDH:TX<Pt>:VC11:POH:TRACE	296
10.2.44	SDH:TX<Pt>:VC11:POH:TRACE:CRC	297

10.2.45	SDH:TX<Pt>:VC11:POH:TTCM	297
10.2.46	SDH:TX<Pt>:VC11:POH	298
10.2.47	SDH:TX<Pt>:AU3:VC3:POH:DEFault	298
10.2.48	SDH:TX<Pt>:AU3:VC3:POH:TRACe	298
10.2.49	SDH:TX<Pt>:AU3:VC3:POH:TRACe:CRC	299
10.2.50	SDH:TX<Pt>:AU3:VC3:POH:TTCM	299
10.2.51	SDH:TX<Pt>:AU3:VC3:POH	299
10.2.52	SDH:TX<Pt>:FOLLow	300
10.2.53	SDH:TX<Pt>:OTHRough	300
10.2.54	SDH:TX<Pt>:OTHRough:BYTE	301
10.2.55	SDH:TX<Pt>:STL:MMAPing:LANE	301
10.3	Stimuli	302
10.3.1	SDH:STIMuli:TX<Pt>:FOFFset	302
10.3.2	SDH:STIMuli:TX<Pt>:ALARm	303
10.3.3	SDH:STIMuli:TX<Pt>:AINSert	303
10.3.4	SDH:STIMuli:TX<Pt>:ANLength	304
10.3.5	SDH:STIMuli:TX<Pt>:AALength	304
10.3.6	SDH:STIMuli:TX<Pt>:ERRor	305
10.3.7	SDH:STIMuli:TX<Pt>:EINSert	306
10.3.8	SDH:STIMuli:TX<Pt>:EBLength	306
10.3.9	SDH:STIMuli:TX<Pt>:ENLength	307
10.3.10	SDH:STIMuli:TX<Pt>:EELength	307
10.3.11	SDH:STIMuli:TX<Pt>:PTSequence	307
10.3.12	SDH:STIMuli:TX<Pt>:PMOVE	308
10.3.13	SDH:STIMuli:TX<Pt>:PJUMp	309
10.3.14	SDH:STIMuli:TX<Pt>:STL:AERRor:LANE	309
10.3.15	SDH:STIMuli:TX<Pt>:STL:ALARm	310
10.3.16	SDH:STIMuli:TX<Pt>:STL:AINSert	310
10.3.17	SDH:STIMuli:TX<Pt>:STL:ABLength	310
10.3.18	SDH:STIMuli:TX<Pt>:STL:AALength	311
10.3.19	SDH:STIMuli:TX<Pt>:STL:ANLength	311
10.3.20	SDH:STIMuli:TX<Pt>:STL:ERRor	311
10.3.21	SDH:STIMuli:TX<Pt>:STL:EINSert	312
10.3.22	SDH:STIMuli:TX<Pt>:STL:EELength	312
10.3.23	SDH:STIMuli:TX<Pt>:STL:ENLength	312
10.3.24	SDH:STIMuli:TX<Pt>:STL:SKEW:BIT	313
10.3.25	SDH:STIMuli:TX<Pt>:STL:SKEW:NS?	313
10.3.26	SDH:STIMuli:TX<Pt>:STL:SKEW:LANE	313
10.4	Result	314
10.4.1	SDH:RX<Pt>:IFETCh?	314
10.4.2	SDH:PMOVement:RX<Pt>:FETCh?	318
10.5	Status	318
10.5.1	SDH:STATus:RX<Pt>:AESummary[:EVENT]?	318
10.5.2	SDH:STATus:RX<Pt>:AESummary:CONDition?	318
10.5.3	SDH:STATus:RX<Pt>:ALARm<section>[:EVENT]?	319
10.5.4	SDH:STATus:RX<Pt>:ALARm<section>:CONDition?	320
10.5.5	SDH:STATus:RX<Pt>:ERRor<section>[:EVENT]?	320
10.5.6	SDH:STATus:RX<Pt>:ERRor<section>:CONDition?	321
10.5.7	SDH:STATus:RX<Pt>:PSLevel?	321
10.5.8	SDH:STATus:TX<Pt>:PSLevel?	321
10.5.9	SDH:STATus:RX<Pt>:PDEViation?	321
10.5.10	SDH:STATus:RX<Pt>:PBRate?	321
10.5.11	SDH:STATus:RX<Pt>:DIFFerence?	322
10.5.12	SDH:STATus:RX<Pt>:RACCumulated	322
10.5.13	SDH:STATus:RX<Pt>:PPBRate?	322
10.5.14	SDH:STATus:RX<Pt>:CAPTure:SOH:TRACe?	322
10.5.15	SDH:STATus:RX<Pt>:CAPTure<Frame>:SOH?	323
10.5.16	SDH:STATus:RX<Pt>:CAPTure:VC4:POH:TRACe?	323
10.5.17	SDH:STATus:RX<Pt>:CAPTure<Frame>:VC4:POH?	324

10.5.18	SDH:STATus:RX<Pt>:CAPTure:VC3:POH:TRACe?	324
10.5.19	SDH:STATus:RX<Pt>:CAPTure<Frame>:VC3:POH?	324
10.5.20	SDH:STATus:RX<Pt>:CAPTure:VC12:POH:TRACe?	325
10.5.21	SDH:STATus:RX<Pt>:CAPTure<Frame>:VC12:POH?	325
10.5.22	SDH:STATus:RX<Pt>:CAPTure:VC11:POH:TRACe?	325
10.5.23	SDH:STATus:RX<Pt>:CAPTure<Frame>:VC11:POH?	325
10.5.24	SDH:STATus:RX<Pt>:CAPTure:AU3:VC3:POH:TRACe?	326
10.5.25	SDH:STATus:RX<Pt>:CAPTure<Frame>:AU3:VC3:POH?	326
10.6	APS	327
10.6.1	SDH:APS:STARt	327
10.6.2	SDH:APS:STOP	327
10.6.3	SDH:APS:RX<Pt>:PINterpret?	327
10.6.4	SDH:APS:RX<Pt>:NUMBer?	327
10.6.5	SDH:APS:RX<Pt>:ATIMe?	327
10.6.6	SDH:APS:RX<Pt>:MTIMe?	328
10.6.7	SDH:APS:RX<Pt>:LTIMe?	328
10.6.8	SDH:APS:RX<Pt>:CTIMe?	328
10.6.9	SDH:APS:RX<Pt>:EVENT	329
10.6.10	SDH:APS:RX<Pt>:MLIMit	329
10.6.11	SDH:APS:RX<Pt>:PERiod	330
10.6.12	SDH:APS:RX<Pt>:CONFig	330
10.6.13	SDH:APS:RX<Pt>:RTYPE	331
10.6.14	SDH:APS:RX<Pt>:K1	332
10.6.15	SDH:APS:RX<Pt>:K2	332
10.6.16	SDH:APS:RX<Pt>:APPLY	332
10.7	Tributary Scan	332
10.7.1	SDH:TSCan:STARt	332
10.7.2	SDH:TSCan:STOP	333
10.7.3	SDH:TSCan:RX<Pt>:NHOCContainer?	333
10.7.4	SDH:TSCan:RX<Pt>:GHOCContainer?	333
10.7.5	SDH:TSCan:RX<Pt>:SHOCContainer	333
10.7.6	SDH:TSCan:RX<Pt>:SHOCContainer?	333
10.7.7	SDH:TSCan:RX<Pt>:DHOCContainer?	334
10.7.8	SDH:TSCan:RX<Pt>:NLOCContainer?	334
10.7.9	SDH:TSCan:RX<Pt>:GLOCContainer?	334
10.7.10	SDH:TSCan:RX<Pt>:DLOCContainer?	334
10.7.11	SDH:TSCan:RX<Pt>:DMUX?	335
10.8	RTD	336
10.8.1	SDH:RTD:RX<Pt>:MLIMit	336
10.8.2	SDH:RTD:RX<Pt>:NUMBer?	336
10.8.3	SDH:RTD:RX<Pt>:ATIMe?	336
10.8.4	SDH:RTD:RX<Pt>:MTIMe?	336
10.8.5	SDH:RTD:RX<Pt>:LTIMe?	337
10.8.6	SDH:RTD:RX<Pt>:CTIMe?	337
11	SONET	339
11.1	Receiver	339
11.1.1	SONet:RX<Pt>:INTerface	339
11.1.2	SONet:RX<Pt>:OCLevel	339
11.1.3	SONet:RX<Pt>:STSLevel	340
11.1.4	SONet:RX<Pt>:STS3c	340
11.1.5	SONet:RX<Pt>:CONCatenation	341
11.1.6	SONet:RX<Pt>:CONTainer	341
11.1.7	SONet:RX<Pt>:SSTRucture	342
11.1.8	SONet:RX<Pt>:PATtern	342
11.1.9	SONet:RX<Pt>:UP32	343
11.1.10	SONet:RX<Pt>:UP2K	343
11.1.11	SONet:RX<Pt>:PINVersion	343
11.1.12	SONet:RX<Pt>:TCM	344

11.1.13	SONet:RX<Pt>:TUG3	344
11.1.14	SONet:RX<Pt>:VTG	344
11.1.15	SONet:RX<Pt>:VT2	345
11.1.16	SONet:RX<Pt>:VT15	345
11.1.17	SONet:RX<Pt>:CHANnel	346
11.1.18	SONet:RX<Pt>:MAPPING	346
11.1.19	SONet:RX<Pt>:GAIN	346
11.1.20	SONet:RX<Pt>:FOLLOW	347
11.1.21	SONet:RX<Pt>:MEASurement:PLMP	347
11.1.22	SONet:RX<Pt>:MEASurement:PLMV	347
11.2	Transmitter	348
11.2.1	SONet:TX<Pt>:INTERface	348
11.2.2	SONet:TX<Pt>[:ENABLE]	348
11.2.3	SONet:TX<Pt>:OPTical	348
11.2.4	SONet:TX<Pt>:ELECTrical	349
11.2.5	SONet:TX<Pt>:OCLevel	349
11.2.6	SONet:TX<Pt>:STSLevel	350
11.2.7	SONet:TX<Pt>:STS3c	350
11.2.8	SONet:TX<Pt>:CONCatenation	351
11.2.9	SONet:TX<Pt>:CONTainer	351
11.2.10	SONet:TX<Pt>:SSTRucture	352
11.2.11	SONet:TX<Pt>:PATtern	352
11.2.12	SONet:TX<Pt>:UP32	353
11.2.13	SONet:TX<Pt>:UP2K	353
11.2.14	SONet:TX<Pt>:PINVersion	353
11.2.15	SONet:TX<Pt>:TIMing	354
11.2.16	SONet:TX<Pt>:TCM	354
11.2.17	SONet:TX<Pt>:TUG3	354
11.2.18	SONet:TX<Pt>:VTG	355
11.2.19	SONet:TX<Pt>:VT2	355
11.2.20	SONet:TX<Pt>:VT15	356
11.2.21	SONet:TX<Pt>:CHANnel	356
11.2.22	SONet:TX<Pt>:MAPPING	356
11.2.23	SONet:TX<Pt>:TOH:DEFault	357
11.2.24	SONet:TX<Pt>:TOH:TRACe	357
11.2.25	SONet:TX<Pt>:TOH:TRACe:CRC	357
11.2.26	SONet:TX<Pt>:TOH	358
11.2.27	SONet:TX<Pt>:STS3:POH:DEFault	359
11.2.28	SONet:TX<Pt>:STS3:POH:TRACe	359
11.2.29	SONet:TX<Pt>:STS3:POH:TRACe:CRC	359
11.2.30	SONet:TX<Pt>:STS3:POH:TTCM	360
11.2.31	SONet:TX<Pt>:STS3:POH	360
11.2.32	SONet:TX<Pt>:STS1:POH:DEFault	361
11.2.33	SONet:TX<Pt>:STS1:POH:TRACe	361
11.2.34	SONet:TX<Pt>:STS1:POH:TRACe:CRC	361
11.2.35	SONet:TX<Pt>:STS1:POH:TTCM	362
11.2.36	SONet:TX<Pt>:STS1:POH	362
11.2.37	SONet:TX<Pt>:VT2:POH:DEFault	362
11.2.38	SONet:TX<Pt>:VT2:POH:TRACe	363
11.2.39	SONet:TX<Pt>:VT2:POH:TRACe:CRC	363
11.2.40	SONet:TX<Pt>:VT2:POH:TTCM	363
11.2.41	SONet:TX<Pt>:VT2:POH	364
11.2.42	SONet:TX<Pt>:VT15:POH:DEFault	364
11.2.43	SONet:TX<Pt>:VT15:POH:TRACe	364
11.2.44	SONet:TX<Pt>:VT15:POH:TRACe:CRC	365
11.2.45	SONet:TX<Pt>:VT15:POH:TTCM	365
11.2.46	SONet:TX<Pt>:VT15:POH	366
11.2.47	SONet:TX<Pt>:STS1:STS1:POH:DEFault	366
11.2.48	SONet:TX<Pt>:STS1:STS1:POH:TRACe	366

11.2.49	SONet:TX<Pt>:STS1:STS1:POH:TRACe:CRC	367
11.2.50	SONet:TX<Pt>:STS1:STS1:POH:TTCM	367
11.2.51	SONet:TX<Pt>:STS1:STS1:POH	367
11.2.52	SONet:TX<Pt>:FOLLow	368
11.2.53	SONet:TX<Pt>:OTHRough	368
11.2.54	SONet:TX<Pt>:OTHRough:BYTE	369
11.2.55	SONet:TX<Pt>:STL:MMAPIng:LANE	369
11.3	Stimuli	370
11.3.1	SONet:STIMuli:TX<Pt>:FOFFset	370
11.3.2	SONet:STIMuli:TX<Pt>:ALARm	371
11.3.3	SONet:STIMuli:TX<Pt>:AINSert	371
11.3.4	SONet:STIMuli:TX<Pt>:ANLength	372
11.3.5	SONet:STIMuli:TX<Pt>:AALength	372
11.3.6	SONet:STIMuli:TX<Pt>:ERRor	373
11.3.7	SONet:STIMuli:TX<Pt>:EINSert	374
11.3.8	SONet:STIMuli:TX<Pt>:EBLength	374
11.3.9	SONet:STIMuli:TX<Pt>:ENLength	375
11.3.10	SONet:STIMuli:TX<Pt>:EELength	375
11.3.11	SONet:STIMuli:TX<Pt>:PTSequence	375
11.3.12	SONet:STIMuli:TX<Pt>:PMOVe	376
11.3.13	SONet:STIMuli:TX<Pt>:PJUMp	377
11.3.14	SONet:STIMuli:TX<Pt>:STL:AERRor:LANE	377
11.3.15	SONet:STIMuli:TX<Pt>:STL:ALARm	378
11.3.16	SONet:STIMuli:TX<Pt>:STL:AINSert	378
11.3.17	SONet:STIMuli:TX<Pt>:STL:ABLength	378
11.3.18	SONet:STIMuli:TX<Pt>:STL:AALength	379
11.3.19	SONet:STIMuli:TX<Pt>:STL:ANLength	379
11.3.20	SONet:STIMuli:TX<Pt>:STL:ERRor	379
11.3.21	SONet:STIMuli:TX<Pt>:STL:EINSert	380
11.3.22	SONet:STIMuli:TX<Pt>:STL:EELength	380
11.3.23	SONet:STIMuli:TX<Pt>:STL:ENLength	380
11.3.24	SONet:STIMuli:TX<Pt>:STL:SKEW:BIT	381
11.3.25	SONet:STIMuli:TX<Pt>:STL:SKEW:NS?	381
11.3.26	SONet:STIMuli:TX<Pt>:STL:SKEW:LANE	381
11.3.27	SONet:STIMuli:TX<Pt>:STL:SKEW:LANE?	381
11.4	Result	382
11.4.1	SONet:RX<Pt>:IFETch?	382
11.4.2	SONet:PMOVement:RX<Pt>:FETCh?	386
11.5	Status	386
11.5.1	SONet:STATus:RX<Pt>:AESummary[:EVENT]?	386
11.5.2	SONet:STATus:RX<Pt>:AESummary:CONDition?	387
11.5.3	SONet:STATus:RX<Pt>:ALARm<section>[:EVENT]?	388
11.5.4	SONet:STATus:RX<Pt>:ALARm<section>:CONDition?	389
11.5.5	SONet:STATus:RX<Pt>:ERRor<section>[:EVENT]?	389
11.5.6	SONet:STATus:RX<Pt>:ERRor<section>:CONDition?	390
11.5.7	SONet:STATus:RX<Pt>:PSLevel?	390
11.5.8	SONet:STATus:TX<Pt>:PSLevel?	390
11.5.9	SONet:STATus:RX<Pt>:PDEViation?	390
11.5.10	SONet:STATus:RX<Pt>:PBRate?	390
11.5.11	SONet:STATus:RX<Pt>:DIFference?	391
11.5.12	SONet:STATus:RX<Pt>:RACCumulated	391
11.5.13	SONet:STATus:RX<Pt>:PPBRate?	391
11.5.14	SONet:STATus:RX<Pt>:CAPTure:TOH:TRACe?	391
11.5.15	SONet:STATus:RX<Pt>:CAPTure<Frame>:TOH?	392
11.5.16	SONet:STATus:RX<Pt>:CAPTure:STS3:POH:TRACe?	392
11.5.17	SONet:STATus:RX<Pt>:CAPTure<Frame>:STS3:POH?	393
11.5.18	SONet:STATus:RX<Pt>:CAPTure:STS1:POH:TRACe?	393
11.5.19	SONet:STATus:RX<Pt>:CAPTure<Frame>:STS1:POH?	393
11.5.20	SONet:STATus:RX<Pt>:CAPTure:VT2:POH:TRACe?	394

11.5.21	SONet:STATus:RX<Pt>:CAPTure<Frame>:VT2:POH?	394
11.5.22	SONet:STATus:RX<Pt>:CAPTure:VT15:POH:TRACe?	394
11.5.23	SONet:STATus:RX<Pt>:CAPTure<Frame>:VT15:POH?	394
11.5.24	SONet:STATus:RX<Pt>:CAPTure:STS1:STS1:POH:TRACe?	395
11.5.25	SONet:STATus:RX<Pt>:CAPTure<Frame>:STS1:STS1:POH?	395
11.6	APS	396
11.6.1	SONet:APS:STARt	396
11.6.2	SONet:APS:STOP	396
11.6.3	SONet:APS:RX<Pt>:PINterpret?	396
11.6.4	SONet:APS:RX<Pt>:NUMBer?	396
11.6.5	SONet:APS:RX<Pt>:ATIME?	396
11.6.6	SONet:APS:RX<Pt>:MTIME?	397
11.6.7	SONet:APS:RX<Pt>:LTIME?	397
11.6.8	SONet:APS:RX<Pt>:CTIME?	397
11.6.9	SONet:APS:RX<Pt>:EVENt	398
11.6.10	SONet:APS:RX<Pt>:MLIMit	398
11.6.11	SONet:APS:RX<Pt>:PERiod	399
11.6.12	SONet:APS:RX<Pt>:CONFig	399
11.6.13	SONet:APS:RX<Pt>:RTYPE	400
11.6.14	SONet:APS:RX<Pt>:K1	401
11.6.15	SONet:APS:RX<Pt>:K2	401
11.6.16	SONet:APS:RX<Pt>:APPLY	401
11.7	Tributary Scan	401
11.7.1	SONet:TSCan:STARt	401
11.7.2	SONet:TSCan:STOP	402
11.7.3	SONet:TSCan:RX<Pt>:NHOCOnainer?	402
11.7.4	SONet:TSCan:RX<Pt>:GHOCOnainer?	402
11.7.5	SONet:TSCan:RX<Pt>:SHOCOnainer	402
11.7.6	SONet:TSCan:RX<Pt>:SHOCOnainer?	402
11.7.7	SONet:TSCan:RX<Pt>:DHOCOnainer?	403
11.7.8	SONet:TSCan:RX<Pt>:NLOCOnainer?	403
11.7.9	SONet:TSCan:RX<Pt>:GLOCOnainer?	403
11.7.10	SONet:TSCan:RX<Pt>:DLOCOnainer?	403
11.7.11	SONet:TSCan:RX<Pt>:DMUX?	404
11.8	RTD	405
11.8.1	SONet:RTD:RX<Pt>:MLIMit	405
11.8.2	SONet:RTD:RX<Pt>:NUMBer?	405
11.8.3	SONet:RTD:RX<Pt>:ATIME?	405
11.8.4	SONet:RTD:RX<Pt>:MTIME?	405
11.8.5	SONet:RTD:RX<Pt>:LTIME?	406
11.8.6	SONet:RTD:RX<Pt>:CTIME?	406
12	Ethernet	407
12.1	Port Setup	407
12.1.1	ETHernet:PORT<Pt>:ITYPe	407
12.1.2	ETHernet:PORT<Pt>:MODE	408
12.1.3	ETHernet:PORT<Pt>:ANEGotiate	408
12.1.4	ETHernet:PORT<Pt>:FMODE	409
12.1.5	ETHernet:PORT<Pt>:CMODE	409
12.1.6	ETHernet:PORT<Pt>:MDICrossover	410
12.1.7	ETHernet:PORT<Pt>:TIMing:SOURce	410
12.1.8	ETHernet:PORT<Pt>:PFRames	410
12.1.9	ETHernet:PORT<Pt>:FEC	411
12.1.10	ETHernet:PORT<Pt>:BREakout	411
12.2	WAN	412
12.2.1	ETHernet:PORT<Pt>:WAN[:ENABLe]	412
12.2.2	ETHernet:PORT<Pt>:WAN:TERMinology	412
12.2.3	ETHernet:PORT<Pt>:WAN:SOH:DEFault	412
12.2.4	ETHernet:PORT<Pt>:WAN:SOH:TRACe	413

12.2.5	ETHERnet:PORT<Pt>:WAN:SOH:TRACe:CRC	413
12.2.6	ETHERnet:PORT<Pt>:WAN:SOH	413
12.2.7	ETHERnet:PORT<Pt>:WAN:POH:DEFault	415
12.2.8	ETHERnet:PORT<Pt>:WAN:POH:TRACe	415
12.2.9	ETHERnet:PORT<Pt>:WAN:POH:TRACe:CRC	415
12.2.10	ETHERnet:PORT<Pt>:WAN:POH	416
12.3	Reflector	417
12.3.1	ETHERnet:PORT<Pt>:REFLector:SWAP[:ENABLE]	417
12.3.2	ETHERnet:PORT<Pt>:REFLector:SSMac	417
12.3.3	ETHERnet:PORT<Pt>:REFLector:SMAC	417
12.3.4	ETHERnet:PORT<Pt>:REFLector:IPSWap	418
12.3.5	ETHERnet:PORT<Pt>:REFLector:PSWap	418
12.3.6	ETHERnet:PORT<Pt>:REFLector:ATCP	418
12.3.7	ETHERnet:PORT<Pt>:REFLector:RSMac[:ENABLE]	419
12.3.8	ETHERnet:PORT<Pt>:REFLector:RMAC	419
12.3.9	ETHERnet:PORT<Pt>:REFLector:RMAC:DEFault	419
12.4	PCS	421
12.4.1	ETHERnet:PORT<Pt>:PCS:MMAPIng:LANE	421
12.5	Traffic	421
12.5.1	ETHERnet:TRAFfic:GENerator:START	421
12.5.2	ETHERnet:PORT<Pt>:TRAFfic:GENerator:START	421
12.5.3	ETHERnet:TRAFfic:GENerator:STOP	422
12.5.4	ETHERnet:PORT<Pt>:TRAFfic:GENerator:STOP	422
12.5.5	ETHERnet:PORT<Pt>:TRAFfic:GENerator:STATUS?	422
12.5.6	ETHERnet:PORT<Pt>:TRAFfic:DMode	422
12.5.7	ETHERnet:PORT<Pt>:TRAFfic:DURation	423
12.5.8	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:TXMode	423
12.5.9	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:PROFile	423
12.5.10	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:PROFile:MRAMP [:MODE]	424
12.5.11	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:LLoad[:CONStant]	424
12.5.12	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP[:MODE]	425
12.5.13	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:START	425
12.5.14	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:END	426
12.5.15	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:STEP	426
12.5.16	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:DURation	427
12.5.17	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:PROFile:MRAMP :DURation	427
12.5.18	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:PROFile	428
12.5.19	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe[:STARt]	428
12.5.20	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:END	428
12.5.21	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:STEP	429
12.5.22	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:DURation	429
12.5.23	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:PROFile	430
12.5.24	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:ENCoding:VIDeo	430
12.5.25	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:ENCoding:VOICe	431
12.5.26	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:NCHannels	431
12.5.27	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:MODE	431
12.5.28	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:NBURSt:MODE	432
12.5.29	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:NBURSt:BNUmber	432
12.5.30	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:PDUTy [:DUTY]	433
12.5.31	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:PDUTy :PERiod	433
12.5.32	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:DUTY?	433
12.5.33	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:PERiod?	433
12.5.34	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:BLENgtH	434
12.5.35	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:BGAP	434
12.5.36	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:RMODE	435

12.5.37	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:BLENgth :STARt	435
12.5.38	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:BLENgth :END	436
12.5.39	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:BGAP	436
12.6	Frame Content	437
12.6.1	ETHERnet:PORT<Pt>:STReam<St>:FRAMed	437
12.6.2	ETHERnet:PORT<Pt>:STReam<St>:MAC:SOURce	437
12.6.3	ETHERnet:PORT<Pt>:STReam<St>:MAC:DESTination	437
12.6.4	ETHERnet:PORT<Pt>:STReam<St>:MAC:ARP	438
12.6.5	ETHERnet:PORT<Pt>:STReam<St>:MAC:ARP:LKUP	438
12.6.6	ETHERnet:PORT<Pt>:STReam<St>:MAC:ARP:RESult?	438
12.6.7	ETHERnet:PORT<Pt>:STReam<St>:MAC:NDP	439
12.6.8	ETHERnet:PORT<Pt>:STReam<St>:MAC:NDP:LKUP	439
12.6.9	ETHERnet:PORT<Pt>:STReam<St>:MAC:NDP:RESult?	439
12.6.10	ETHERnet:PORT<Pt>:STReam<St>:MAC:BROadcast	439
12.6.11	ETHERnet:PORT<Pt>:STReam<St>:MAC:DEFault	440
12.6.12	ETHERnet:PORT<Pt>:STReam<St>:MAC:ETYPe	440
12.6.13	ETHERnet:PORT<Pt>:STReam<St>:MAC:L3ETYPe	441
12.6.14	ETHERnet:PORT<Pt>:STReam<St>:MPLS[:ENABle]	441
12.6.15	ETHERnet:PORT<Pt>:STReam<St>:MPLS:LCount	441
12.6.16	ETHERnet:PORT<Pt>:STReam<St>:MPLS:LEVel<Lv>:LABel	442
12.6.17	ETHERnet:PORT<Pt>:STReam<St>:MPLS:LEVel<Lv>:EBITs	442
12.6.18	ETHERnet:PORT<Pt>:STReam<St>:MPLS:LEVel<Lv>:TTL	443
12.6.19	ETHERnet:PORT<Pt>:STReam<St>:MPLS:ETHERnet[:ENABle]	443
12.6.20	ETHERnet:PORT<Pt>:STReam<St>:MPLS:ETHERnet:AINCrement	443
12.6.21	ETHERnet:PORT<Pt>:STReam<St>:MPLS:ETHERnet:SMAC	444
12.6.22	ETHERnet:PORT<Pt>:STReam<St>:MPLS:ETHERnet:DMAC	444
12.6.23	ETHERnet:PORT<Pt>:STReam<St>:MPLS:ETHERnet:ETYPe	445
12.6.24	ETHERnet:PORT<Pt>:STReam<St>:MIM[:ENABle]	445
12.6.25	ETHERnet:PORT<Pt>:STReam<St>:MIM:BTAG:DEI	445
12.6.26	ETHERnet:PORT<Pt>:STReam<St>:MIM:BTAG:PRiority	446
12.6.27	ETHERnet:PORT<Pt>:STReam<St>:MIM:BTAG:VID	446
12.6.28	ETHERnet:PORT<Pt>:STReam<St>:MIM:ITAG:UCA	447
12.6.29	ETHERnet:PORT<Pt>:STReam<St>:MIM:ITAG:DEI	447
12.6.30	ETHERnet:PORT<Pt>:STReam<St>:MIM:ITAG:PRiority	447
12.6.31	ETHERnet:PORT<Pt>:STReam<St>:MIM:ITAG:SID	448
12.6.32	ETHERnet:PORT<Pt>:STReam<St>:MIM:ETHERnet:SMAC	448
12.6.33	ETHERnet:PORT<Pt>:STReam<St>:MIM:ETHERnet:DMAC	448
12.6.34	ETHERnet:PORT<Pt>:STReam<St>:MIM:ETHERnet:ETYPe	449
12.6.35	ETHERnet:PORT<Pt>:STReam<St>:VLAN[:ENABle]	449
12.6.36	ETHERnet:PORT<Pt>:STReam<St>:VLAN:LCount	450
12.6.37	ETHERnet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:ID	450
12.6.38	ETHERnet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:CFI	450
12.6.39	ETHERnet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:DEI	451
12.6.40	ETHERnet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:PRiority	451
12.6.41	ETHERnet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:ETYPe	452
12.6.42	ETHERnet:PORT<Pt>:STReam<St>:LLC[:ENABle]	452
12.6.43	ETHERnet:PORT<Pt>:STReam<St>:SNAP[:ENABle]	453
12.6.44	ETHERnet:PORT<Pt>:STReam<St>:L2Custom[:ENABle]	453
12.6.45	ETHERnet:PORT<Pt>:STReam<St>:IPV4[:ENABle]	454
12.6.46	ETHERnet:PORT<Pt>:STReam<St>:IPV4:SOURce	454
12.6.47	ETHERnet:PORT<Pt>:STReam<St>:IPV4:DESTination	454
12.6.48	ETHERnet:PORT<Pt>:STReam<St>:IPV4:GATeway[:ENABle]	455
12.6.49	ETHERnet:PORT<Pt>:STReam<St>:IPV4:GATeway:ADDRess	455
12.6.50	ETHERnet:PORT<Pt>:STReam<St>:IPV4:NETMask	456
12.6.51	ETHERnet:PORT<Pt>:STReam<St>:IPV4:HOST	456
12.6.52	ETHERnet:PORT<Pt>:STReam<St>:IPV4:TTL	456
12.6.53	ETHERnet:PORT<Pt>:STReam<St>:IPV4:TOS	457

12.6.54	ETHERnet:PORT<Pt>:STReam<St>:IPV4:IDENtifier	457
12.6.55	ETHERnet:PORT<Pt>:STReam<St>:IPV4:AINCrement	458
12.6.56	ETHERnet:PORT<Pt>:STReam<St>:IPV4:MF	458
12.6.57	ETHERnet:PORT<Pt>:STReam<St>:IPV4:DF	458
12.6.58	ETHERnet:PORT<Pt>:STReam<St>:IPV4:RES	459
12.6.59	ETHERnet:PORT<Pt>:STReam<St>:IPV4:PROToCol	459
12.6.60	ETHERnet:PORT<Pt>:STReam<St>:IPV4:TLENgth?	460
12.6.61	ETHERnet:PORT<Pt>:STReam<St>:IPV4:CHECksum?	460
12.6.62	ETHERnet:PORT<Pt>:STReam<St>:IPV4:IGMP[:ENABle]	460
12.6.63	ETHERnet:PORT<Pt>:STReam<St>:IPV4:IGMP:VERSIon	460
12.6.64	ETHERnet:PORT<Pt>:STReam<St>:IPV4:IGMP:GROUp[:ADDReSS]	461
12.6.65	ETHERnet:PORT<Pt>:STReam<St>:IPV4:IGMP:SOURce[:ENABle]	461
12.6.66	ETHERnet:PORT<Pt>:STReam<St>:IPV4:IGMP:SOURce:ADDReSS	462
12.6.67	ETHERnet:PORT<Pt>:STReam<St>:DNS[:ENABle]	462
12.6.68	ETHERnet:PORT<Pt>:STReam<St>:DNS:PRIMary	462
12.6.69	ETHERnet:PORT<Pt>:STReam<St>:DNS:SECOndary	463
12.6.70	ETHERnet:PORT<Pt>:STReam<St>:IPV6[:ENABle]	463
12.6.71	ETHERnet:PORT<Pt>:STReam<St>:IPV6:TCLass	464
12.6.72	ETHERnet:PORT<Pt>:STReam<St>:IPV6:FLABel	464
12.6.73	ETHERnet:PORT<Pt>:STReam<St>:IPV6:NHeader	464
12.6.74	ETHERnet:PORT<Pt>:STReam<St>:IPV6:HLIMit	465
12.6.75	ETHERnet:PORT<Pt>:STReam<St>:IPV6:SOURce	465
12.6.76	ETHERnet:PORT<Pt>:STReam<St>:IPV6:DESTination	466
12.6.77	ETHERnet:PORT<Pt>:STReam<St>:IPV6:GATeway[:ENABle]	466
12.6.78	ETHERnet:PORT<Pt>:STReam<St>:IPV6:GATeway:ADDReSS	466
12.6.79	ETHERnet:PORT<Pt>:STReam<St>:IPV6:PREFix	467
12.6.80	ETHERnet:PORT<Pt>:STReam<St>:IPV6:ADDRconfig	467
12.6.81	ETHERnet:PORT<Pt>:STReam<St>:IPV6:ADDRconfig:RESult?	468
12.6.82	ETHERnet:PORT<Pt>:STReam<St>:IPV6:SLESs:IID	468
12.6.83	ETHERnet:PORT<Pt>:STReam<St>:IPV6:SLESs:IID:AUTO	468
12.6.84	ETHERnet:PORT<Pt>:STReam<St>:IPV6:SLESs:LINKlocal?	469
12.6.85	ETHERnet:PORT<Pt>:STReam<St>:IPV6:SLESs:RAFLag?	469
12.6.86	ETHERnet:PORT<Pt>:STReam<St>:IPV6:SLESs:SRMac?	469
12.6.87	ETHERnet:PORT<Pt>:STReam<St>:IPV6:SLESs:PREFix?	469
12.6.88	ETHERnet:PORT<Pt>:STReam<St>:IPV6:SLESs:PRFLag?	469
12.6.89	ETHERnet:PORT<Pt>:STReam<St>:IPV6:SLESs:LTIME?	470
12.6.90	ETHERnet:PORT<Pt>:STReam<St>:IPV6:SLESs:RENew	470
12.6.91	ETHERnet:PORT<Pt>:STReam<St>:IPV6:PLENgth?	470
12.6.92	ETHERnet:PORT<Pt>:STReam<St>:IPV6:MLD[:ENABle]	470
12.6.93	ETHERnet:PORT<Pt>:STReam<St>:IPV6:MLD:VERSIon	471
12.6.94	ETHERnet:PORT<Pt>:STReam<St>:IPV6:MLD:GROUp[:ADDReSS]	471
12.6.95	ETHERnet:PORT<Pt>:STReam<St>:IPV6:MLD:SOURce[:ENABle]	471
12.6.96	ETHERnet:PORT<Pt>:STReam<St>:IPV6:MLD:SOURce:ADDReSS	472
12.6.97	ETHERnet:PORT<Pt>:STReam<St>:L3Custom[:ENABle]	472
12.6.98	ETHERnet:PORT<Pt>:STReam<St>:DHCP[:ENABle]	473
12.6.99	ETHERnet:PORT<Pt>:STReam<St>:DHCP:RENew	473
12.6.100	ETHERnet:PORT<Pt>:STReam<St>:DHCP:DNS	473
12.6.101	ETHERnet:PORT<Pt>:STReam<St>:DHCP:GATeway	474
12.6.102	ETHERnet:PORT<Pt>:STReam<St>:DHCP:LETime?	474
12.6.103	ETHERnet:PORT<Pt>:STReam<St>:UDP[:ENABle]	474
12.6.104	ETHERnet:PORT<Pt>:STReam<St>:UDP:SPORt	475
12.6.105	ETHERnet:PORT<Pt>:STReam<St>:UDP:DPORt	475
12.6.106	ETHERnet:PORT<Pt>:STReam<St>:UDP:LENgth?	475
12.6.107	ETHERnet:PORT<Pt>:STReam<St>:UDP:CNUlL	476
12.6.108	ETHERnet:PORT<Pt>:STReam<St>:UDP:CHECksum?	476
12.6.109	ETHERnet:PORT<Pt>:STReam<St>:TCP[:ENABle]	476
12.6.110	ETHERnet:PORT<Pt>:STReam<St>:TCP:ACONnect	477
12.6.111	ETHERnet:PORT<Pt>:STReam<St>:TCP:LMODe	477
12.6.112	ETHERnet:PORT<Pt>:STReam<St>:TCP:SPORt	477

12.6.113	ETHERnet:PORT<Pt>:STReam<St>:TCP:DPORT	478
12.6.114	ETHERnet:PORT<Pt>:STReam<St>:TCP:SEQuence	478
12.6.115	ETHERnet:PORT<Pt>:STReam<St>:TCP:AINCrement	479
12.6.116	ETHERnet:PORT<Pt>:STReam<St>:TCP:ACKNowledge	479
12.6.117	ETHERnet:PORT<Pt>:STReam<St>:TCP:REServed	479
12.6.118	ETHERnet:PORT<Pt>:STReam<St>:TCP:FCWR	480
12.6.119	ETHERnet:PORT<Pt>:STReam<St>:TCP:FECE	480
12.6.120	ETHERnet:PORT<Pt>:STReam<St>:TCP:FURG	481
12.6.121	ETHERnet:PORT<Pt>:STReam<St>:TCP:FACK	481
12.6.122	ETHERnet:PORT<Pt>:STReam<St>:TCP:FPSH	481
12.6.123	ETHERnet:PORT<Pt>:STReam<St>:TCP:FRST	482
12.6.124	ETHERnet:PORT<Pt>:STReam<St>:TCP:FSYN	482
12.6.125	ETHERnet:PORT<Pt>:STReam<St>:TCP:FFIN	483
12.6.126	ETHERnet:PORT<Pt>:STReam<St>:TCP:WINDow	483
12.6.127	ETHERnet:PORT<Pt>:STReam<St>:TCP:UPOinter	483
12.6.128	ETHERnet:PORT<Pt>:STReam<St>:TCP:CHECKsum?	484
12.6.129	ETHERnet:PORT<Pt>:STReam1:BER:UTGenerator	484
12.6.130	ETHERnet:PORT<Pt>:STReam1:BER:SEQuence	484
12.6.131	ETHERnet:PORT<Pt>:STReam1:BER:SDMeasure[:ENABLEd]	485
12.6.132	ETHERnet:PORT<Pt>:STReam1:BER:SDMeasure:DTYPE	485
12.6.133	ETHERnet:PORT<Pt>:STReam1:BER:SDMeasure:MLIMit	485
12.6.134	ETHERnet:PORT<Pt>:STReam1:BER:SDMeasure:MDISruption	486
12.6.135	ETHERnet:PORT<Pt>:STReam1:BER:SDMeasure:EFPeriod	486
12.6.136	ETHERnet:PORT<Pt>:STReam1:BER:STHResholds[:ENABLE]	486
12.6.137	ETHERnet:PORT<Pt>:STReam1:BER:STHResholds:VALue	487
12.6.138	ETHERnet:PORT<Pt>:STReam<St>:PAYLoad	487
12.6.139	ETHERnet:PORT<Pt>:STReam<St>:UP16	488
12.6.140	ETHERnet:PORT<Pt>:STReam<St>:UP32	488
12.6.141	ETHERnet:PORT<Pt>:STReam:PCMA	488
12.6.142	ETHERnet:PORT<Pt>:STReam:CROSSprbs	489
12.6.143	ETHERnet:PORT<Pt>:STReam<St>:LATency	489
12.6.144	ETHERnet:PORT<Pt>:STReam<St>:JITTer	489
12.6.145	ETHERnet:PORT<Pt>:STReam<St>:FLOSS	490
12.6.146	ETHERnet:PORT<Pt>:STReam<St>:FLOSS:THResholds[:ENABLE]	490
12.6.147	ETHERnet:PORT<Pt>:STReam<St>:FLOSS:THResholds:MODE	490
12.6.148	ETHERnet:PORT<Pt>:STReam<St>:FLOSS:THResholds:COUNt	491
12.6.149	ETHERnet:PORT<Pt>:STReam<St>:FLOSS:THResholds:RATio	491
12.6.150	ETHERnet:PORT<Pt>:STReam<St>:LATency:THResholds[:ENABLE]	492
12.6.151	ETHERnet:PORT<Pt>:STReam<St>:LATency:THResholds:VALue	492
12.6.152	ETHERnet:PORT<Pt>:STReam<St>:JITTer:THResholds[:ENABLE]	492
12.6.153	ETHERnet:PORT<Pt>:STReam<St>:JITTer:THResholds:VALue	493
12.6.154	ETHERnet:PORT<Pt>:STReam:TSTamp:CCTimestamp	493
12.6.155	ETHERnet:PORT<Pt>:STReam:TSTamp:TSRC	494
12.6.156	ETHERnet:PORT<Pt>:STReam:TSTamp:GCable	494
12.6.157	ETHERnet:PORT<Pt>:STReam:TSTamp:SYNC?	494
12.6.158	ETHERnet:PORT<Pt>:STReam<St>:VARIABLE<No>:FIELD	495
12.6.159	ETHERnet:PORT<Pt>:STReam<St>:VARIABLE<No>:TYPE	496
12.6.160	ETHERnet:PORT<Pt>:STReam<St>:VARIABLE<No>:OFFSet	496
12.6.161	ETHERnet:PORT<Pt>:STReam<St>:VARIABLE<No>:LENGth	497
12.6.162	ETHERnet:PORT<Pt>:STReam<St>:VARIABLE<No>:STARt	497
12.6.163	ETHERnet:PORT<Pt>:STReam<St>:VARIABLE<No>:END	497
12.6.164	ETHERnet:PORT<Pt>:STReam<St>:VARIABLE<No>:STEP	498
12.6.165	ETHERnet:PORT<Pt>:STReam<St>:CUSTom:LENGth	498
12.6.166	ETHERnet:PORT<Pt>:STReam<St>:CUSTom:DATA	499
12.6.167	ETHERnet:PORT<Pt>:PING:STARt	499
12.6.168	ETHERnet:PORT<Pt>:PING:STOP	499
12.6.169	ETHERnet:PORT<Pt>:PING:STATus?	499
12.6.170	ETHERnet:PORT<Pt>:PING:RESults?	500
12.6.171	ETHERnet:PORT<Pt>:PING:SUMMary?	500

12.7	Settings	501
12.7.1	ETHERnet:PORT<Pt>:SETTings:AARP	501
12.7.2	ETHERnet:PORT<Pt>:SETTings:ANDP	501
12.7.3	ETHERnet:PORT<Pt>:SETTings:APINg	501
12.7.4	ETHERnet:PORT<Pt>:SETTings:RLFSignaling	502
12.7.5	ETHERnet:PORT<Pt>:SETTings:ACMA	502
12.7.6	ETHERnet:PORT<Pt>:SETTings:PLENenght	502
12.7.7	ETHERnet:PORT<Pt>:SETTings:IPViolations	503
12.7.8	ETHERnet:PORT<Pt>:SETTings:ILThreshold	503
12.7.9	ETHERnet:PORT<Pt>:SETTings:FIViolations	503
12.7.10	ETHERnet:PORT<Pt>:SETTings:JFSize	504
12.7.11	ETHERnet:PORT<Pt>:SETTings:FECDeGrade:ENABle	504
12.7.12	ETHERnet:PORT<Pt>:SETTings:FECDeGrade:INTerval	504
12.7.13	ETHERnet:PORT<Pt>:SETTings:FECDeGrade:ACTivate:THReshold	505
12.7.14	ETHERnet:PORT<Pt>:SETTings:FECDeGrade:DEACTivate:THReshold	505
12.7.15	ETHERnet:PORT<Pt>:SETTings:FECDeGrade:RDEGrade	505
12.7.16	ETHERnet:PORT<Pt>:SETTings:ERFault	506
12.7.17	ETHERnet:PORT<Pt>:SETTings:FRESults	506
12.7.18	ETHERnet:PORT<Pt>:SETTings:ACISetup	506
12.7.19	ETHERnet:PORT<Pt>:SETTings:ASTGenerator	507
12.7.20	ETHERnet:PORT<Pt>:SETTings:BER:OBAMeasuring	507
12.7.21	ETHERnet:PORT<Pt>:SETTings:BER:IAFFilter	507
12.7.22	ETHERnet:PORT<Pt>:SETTings:BER:CLFrames	508
12.7.23	ETHERnet:PORT<Pt>:SETTings:BER:HIDEframeLoss	508
12.7.24	ETHERnet:PORT<Pt>:SETTings:CINBand[:ENABle]	508
12.7.25	ETHERnet:PORT<Pt>:SETTings:CINBand:PASSword[:ENABle]	509
12.7.26	ETHERnet:PORT<Pt>:SETTings:CINBand:PASSword:VALue	509
12.7.27	ETHERnet:PORT<Pt>:SETTings:CINBand:MAC:SOURce	509
12.7.28	ETHERnet:PORT<Pt>:SETTings:CINBand:MAC:DEFault	510
12.7.29	ETHERnet:PORT<Pt>:SETTings:CINBand:IPV4:SOURce	510
12.7.30	ETHERnet:PORT<Pt>:SETTings:CINBand:DHCP[:ENABle]	510
12.7.31	ETHERnet:PORT<Pt>:SETTings:CINBand:IPV4:NETMask	511
12.7.32	ETHERnet:PORT<Pt>:SETTings:CINBand:IPV4:GATeway[:ENABle]	511
12.7.33	ETHERnet:PORT<Pt>:SETTings:CINBand:IPV4:GATeway:ADDRes	511
12.7.34	ETHERnet:PORT<Pt>:SETTings:CINBand:VLAN:LCount	512
12.7.35	ETHERnet:PORT<Pt>:SETTings:CINBand:VLAN:LEVel<Lv>:ID	512
12.8	Filter	513
12.8.1	ETHERnet:PORT<Pt>:FILTer[:ENABle]	513
12.8.2	ETHERnet:PORT<Pt>:FILTer:RESet	513
12.8.3	ETHERnet:PORT<Pt>:FILTer:ENCapsulation	513
12.8.4	ETHERnet:PORT<Pt>:FILTer:PROTocols	514
12.8.5	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>[:ENABle]	515
12.8.6	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:SMAC	515
12.8.7	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:DMAC	515
12.8.8	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:EMSMac	516
12.8.9	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:EMDMac	516
12.8.10	ETHERnet:PORT<Pt>:FILTer:POFFset	517
12.8.11	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:PATtern	517
12.8.12	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:SPORT	517
12.8.13	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:DPORT	518
12.8.14	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:SIV4	518
12.8.15	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:DIV4	519
12.8.16	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:SIV6	519
12.8.17	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:HIV6	520
12.8.18	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:FIV6	520
12.8.19	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:LABel	521
12.8.20	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:EBITs	521
12.8.21	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:BOLStack	522
12.8.22	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:TTL	522

12.8.23	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:ID	523
12.8.24	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:CFI	523
12.8.25	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:DEI	524
12.8.26	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:PRiority	524
12.8.27	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MMSMac	525
12.8.28	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MMDMac	525
12.8.29	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MMBTAG:ID	525
12.8.30	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MMBTAG:PRiority	526
12.8.31	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MMBTAG:DEI	526
12.8.32	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:ID	527
12.8.33	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:PRiority	527
12.8.34	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:DEI	528
12.8.35	ETHERnet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:UCA	528
12.9	Thresholds	529
12.9.1	ETHERnet:PORT<Pt>:THResholds[:ENABle]	529
12.9.2	ETHERnet:PORT<Pt>:THResholds:SELect	529
12.9.3	ETHERnet:PORT<Pt>:THResholds:VALue	530
12.9.4	ETHERnet:PORT<Pt>:THResholds:FEC:SYMBolerror:RATE	531
12.9.5	ETHERnet:PORT<Pt>:THResholds:FEC:CW:DISTriBution	531
12.10	SyncE	532
12.10.1	ETHERnet:SYNCe:PTHROUGH:FCAPture	532
12.10.2	ETHERnet:PORT<Pt>:SYNCe:PTHROUGH:QLEVel[:ENABle]	532
12.10.3	ETHERnet:PORT<Pt>:SYNCe:PTHROUGH:QLEVel:USER	532
12.10.4	ETHERnet:PORT<Pt>:SYNCe[:ENABle]	533
12.10.5	ETHERnet:PORT<Pt>:SYNCe:MODE	533
12.10.6	ETHERnet:PORT<Pt>:SYNCe:FCAPture	533
12.10.7	ETHERnet:PORT<Pt>:SYNCe:QLEVel	534
12.10.8	ETHERnet:PORT<Pt>:SYNCe:MAC	534
12.10.9	ETHERnet:PORT<Pt>:SYNCe:MAC:AUTO	534
12.10.10	ETHERnet:PORT<Pt>:SYNCe:EFLag	535
12.10.11	ETHERnet:PORT<Pt>:SYNCe:VLAN[:ENABle]	535
12.10.12	ETHERnet:PORT<Pt>:SYNCe:VLAN:ETYPe	536
12.10.13	ETHERnet:PORT<Pt>:SYNCe:VLAN:LCount	536
12.10.14	ETHERnet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:ID	536
12.10.15	ETHERnet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:CFI	537
12.10.16	ETHERnet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:DEI	537
12.10.17	ETHERnet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:PRiority	538
12.10.18	ETHERnet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:ETYPe	538
12.11	Precision Time Protocol - IEEE 1588v2	539
12.11.1	ETHERnet:PORT<Pt>:PTP[:ENABle]	539
12.11.2	ETHERnet:PORT<Pt>:PTP:SONLy	539
12.11.3	ETHERnet:PORT<Pt>:PTP:CAST	539
12.11.4	ETHERnet:PORT<Pt>:PTP:UNEGotiate	540
12.11.5	ETHERnet:PORT<Pt>:PTP:PROFile	540
12.11.6	ETHERnet:PORT<Pt>:PTP:DOMain	540
12.11.7	ETHERnet:PORT<Pt>:PTP:TPRotocol	541
12.11.8	ETHERnet:PORT<Pt>:PTP:MAC[:SOURce]	541
12.11.9	ETHERnet:PORT<Pt>:PTP:MAC:AUTO	542
12.11.10	ETHERnet:PORT<Pt>:PTP:MAC:DESTination	542
12.11.11	ETHERnet:PORT<Pt>:PTP:MAC:SMULTicast	542
12.11.12	ETHERnet:PORT<Pt>:PTP:MAC:ARP	543
12.11.13	ETHERnet:PORT<Pt>:PTP:MAC:ARP:RESult?	543
12.11.14	ETHERnet:PORT<Pt>:PTP:MAC:NDP	543
12.11.15	ETHERnet:PORT<Pt>:PTP:MAC:NDP:RESult?	543
12.11.16	ETHERnet:PORT<Pt>:PTP:PTYPe	544
12.11.17	ETHERnet:PORT<Pt>:PTP:EXT	544
12.11.18	ETHERnet:PORT<Pt>:PTP:EXT:TYPE	544
12.11.19	ETHERnet:PORT<Pt>:PTP:EXT:LENGth	545
12.11.20	ETHERnet:PORT<Pt>:PTP:EXT:DATA	545

12.11.21	ETHERnet:PORT<Pt>:PTP:IP:IPV4:SOURce	546
12.11.22	ETHERnet:PORT<Pt>:PTP:IP:IPV4:DESTination	546
12.11.23	ETHERnet:PORT<Pt>:PTP:IPV4:IGMP[:ENABLE]	546
12.11.24	ETHERnet:PORT<Pt>:PTP:IPV4:IGMP:VERSion	547
12.11.25	ETHERnet:PORT<Pt>:PTP:IP:IPV6:SOURce	547
12.11.26	ETHERnet:PORT<Pt>:PTP:IP:IPV6:DESTination	547
12.11.27	ETHERnet:PORT<Pt>:PTP:IPV6:ADDRconfig	548
12.11.28	ETHERnet:PORT<Pt>:PTP:IPV6:ADDRconfig:RESult?	548
12.11.29	ETHERnet:PORT<Pt>:PTP:IPV6:SLESS:IID	548
12.11.30	ETHERnet:PORT<Pt>:PTP:IPV6:SLESS:IID:AUTO	549
12.11.31	ETHERnet:PORT<Pt>:PTP:IPV6:SLESS:LINKlocal?	549
12.11.32	ETHERnet:PORT<Pt>:PTP:IPV6:SLESS:RAFLag?	549
12.11.33	ETHERnet:PORT<Pt>:PTP:IPV6:SLESS:SRCMac?	549
12.11.34	ETHERnet:PORT<Pt>:PTP:IPV6:SLESS:PREFix?	549
12.11.35	ETHERnet:PORT<Pt>:PTP:IPV6:SLESS:PRFLag?	550
12.11.36	ETHERnet:PORT<Pt>:PTP:IPV6:SLESS:LTIME?	550
12.11.37	ETHERnet:PORT<Pt>:PTP:IPV6:SLESS:RENew	550
12.11.38	ETHERnet:PORT<Pt>:PTP:IPV6:MLD[:ENABLE]	550
12.11.39	ETHERnet:PORT<Pt>:PTP:IPV6:MLD:VERSion	551
12.11.40	ETHERnet:PORT<Pt>:PTP:IP:DSCP:EVENt	551
12.11.41	ETHERnet:PORT<Pt>:PTP:IP:DSCP:NORMal	551
12.11.42	ETHERnet:PORT<Pt>:PTP:TUNNeling	552
12.11.43	ETHERnet:PORT<Pt>:PTP:TUNNeling:VLAN:LCount	552
12.11.44	ETHERnet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:ID	552
12.11.45	ETHERnet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:CFI	553
12.11.46	ETHERnet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:DEI	553
12.11.47	ETHERnet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:PRiority	554
12.11.48	ETHERnet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:ETYPe	554
12.11.49	ETHERnet:PORT<Pt>:PTP:TUNNeling:MPLS:LCount	555
12.11.50	ETHERnet:PORT<Pt>:PTP:TUNNeling:MPLS:LEVel<Lv>:LABel	555
12.11.51	ETHERnet:PORT<Pt>:PTP:TUNNeling:MPLS:LEVel<Lv>:EBITs	555
12.11.52	ETHERnet:PORT<Pt>:PTP:TUNNeling:MPLS:LEVel<Lv>:TTL	556
12.11.53	ETHERnet:PORT<Pt>:PTP:FCAPture	556
12.11.54	ETHERnet:PORT<Pt>:PTP:FCAPture:DIRecotry	557
12.11.55	ETHERnet:PORT<Pt>:PTP:ELOG	557
12.11.56	ETHERnet:PORT<Pt>:PTP:SMODE	557
12.11.57	ETHERnet:PORT<Pt>:PTP:DMEChanism	558
12.11.58	ETHERnet:PORT<Pt>:PTP:CLOCK:SOURce	558
12.11.59	ETHERnet:PORT<Pt>:PTP:CLOCK:IDENTity	558
12.11.60	ETHERnet:PORT<Pt>:PTP:CLOCK:IDENTity:AUTO	559
12.11.61	ETHERnet:PORT<Pt>:PTP:CLOCK:P1	559
12.11.62	ETHERnet:PORT<Pt>:PTP:CLOCK:P2	559
12.11.63	ETHERnet:PORT<Pt>:PTP:CLOCK:CLASs	560
12.11.64	ETHERnet:PORT<Pt>:PTP:CLOCK:ACCuracy	560
12.11.65	ETHERnet:PORT<Pt>:PTP:CLOCK:ACCuracy:USER	561
12.11.66	ETHERnet:PORT<Pt>:PTP:CLOCK:TSource	561
12.11.67	ETHERnet:PORT<Pt>:PTP:CLOCK:TSource:USER	562
12.11.68	ETHERnet:PORT<Pt>:PTP:TIMing:AINTerval	562
12.11.69	ETHERnet:PORT<Pt>:PTP:TIMing:ATIMEout	562
12.11.70	ETHERnet:PORT<Pt>:PTP:TIMing:UOFFset	563
12.11.71	ETHERnet:PORT<Pt>:PTP:TIMing:SINTerval	563
12.11.72	ETHERnet:PORT<Pt>:PTP:TIMing:DRINTerval	564
12.11.73	ETHERnet:PORT<Pt>:PTP:TIMing:UDURation	564
12.11.74	ETHERnet:PORT<Pt>:PTP:TIMing:GCABLE	565
12.11.75	ETHERnet:PORT<Pt>:PTP:FFIeld?	565
12.11.76	ETHERnet:PORT<Pt>:PTP:FFIeld:AMFLag	565
12.11.77	ETHERnet:PORT<Pt>:PTP:FFIeld:L61	565
12.11.78	ETHERnet:PORT<Pt>:PTP:FFIeld:L59	566
12.11.79	ETHERnet:PORT<Pt>:PTP:FFIeld:CUOValid	566

12.11.80	ETHERnet:PORT<Pt>:PTP:FFIeld:PTIMescale	566
12.11.81	ETHERnet:PORT<Pt>:PTP:FFIeld:TTRaceable	567
12.11.82	ETHERnet:PORT<Pt>:PTP:FFIeld:FTRaceable	567
12.11.83	ETHERnet:PORT<Pt>:PTP:FFIeld:SUNCertain	567
12.11.84	ETHERnet:PORT<Pt>:PTP:POPTions:IRTLv	568
12.11.85	ETHERnet:PORT<Pt>:PTP:POPTions:IRTLv:SPEEd	568
12.11.86	ETHERnet:PORT<Pt>:PTP:LOG?	569
12.12	Follow	570
12.12.1	ETHERnet:FOLLow:TRAFfic	570
12.12.2	ETHERnet:FOLLow:STReam<St>	570
12.12.3	ETHERnet:FOLLow:GATeway<St>	570
12.12.4	ETHERnet:FOLLow:SETTings	571
12.12.5	ETHERnet:FOLLow:FILTer	571
12.12.6	ETHERnet:FOLLow:THResholds	571
12.12.7	ETHERnet:FOLLow:SYNCe	572
12.12.8	ETHERnet:FOLLow:PTP	572
12.12.9	ETHERnet:PORT<Pt>:FOLLow:TRAFfic	572
12.12.10	ETHERnet:PORT<Pt>:FOLLow:STReam<St>	573
12.12.11	ETHERnet:PORT<Pt>:FOLLow:GATeway<St>	573
12.12.12	ETHERnet:PORT<Pt>:FOLLow:SETTings	574
12.12.13	ETHERnet:PORT<Pt>:FOLLow:FILTer	574
12.12.14	ETHERnet:PORT<Pt>:FOLLow:THResholds	574
12.12.15	ETHERnet:PORT<Pt>:FOLLow:SYNCe	575
12.12.16	ETHERnet:PORT<Pt>:FOLLow:PTP	575
12.12.17	ETHERnet:PORT<Pt>:FOLLow:WAN	575
12.13	Alarm/Error Insertion	576
12.13.1	ETHERnet:PORT<Pt>:STIMuli:ALARm	576
12.13.2	ETHERnet:PORT<Pt>:STIMuli:ERRor	576
12.13.3	ETHERnet:PORT<Pt>:STIMuli:EINSerion	577
12.13.4	ETHERnet:PORT<Pt>:STIMuli:EBLength	577
12.13.5	ETHERnet:PORT<Pt>:STIMuli:FEC:ERRor:LANE	578
12.13.6	ETHERnet:PORT<Pt>:STIMuli:WAN:ALARm	578
12.13.7	ETHERnet:PORT<Pt>:STIMuli:WAN:ERRor	579
12.13.8	ETHERnet:PORT<Pt>:STIMuli:WAN:EINSerion	579
12.13.9	ETHERnet:PORT<Pt>:STIMuli:WAN:EBLength	579
12.13.10	ETHERnet:PORT<Pt>:STIMuli:DEViation	580
12.13.11	ETHERnet:PORT<Pt>:STIMuli:PCS:ALARm	580
12.13.12	ETHERnet:PORT<Pt>:STIMuli:PCS:ERRor	581
12.13.13	ETHERnet:PORT<Pt>:STIMuli:PCS:ERRor:LANE	581
12.13.14	ETHERnet:PORT<Pt>:STIMuli:PCS:EINSerion	582
12.13.15	ETHERnet:PORT<Pt>:STIMuli:PCS:EBLength	582
12.13.16	ETHERnet:PORT<Pt>:STIMuli:PCS:ERATe	582
12.13.17	ETHERnet:PORT<Pt>:STIMuli:PCS:EELength	583
12.13.18	ETHERnet:PORT<Pt>:STIMuli:PCS:ENLength	583
12.13.19	ETHERnet:PORT<Pt>:STIMuli:PCS:ECOUNt	583
12.13.20	ETHERnet:PORT<Pt>:STIMuli:PCS:CWRate	584
12.13.21	ETHERnet:PORT<Pt>:STIMuli:PCS:SKEW:BIT	584
12.13.22	ETHERnet:PORT<Pt>:STIMuli:PCS:SKEW:TYPE	585
12.13.23	ETHERnet:PORT<Pt>:STIMuli:PCS:SKEW:LANE	585
12.13.24	ETHERnet:PORT<Pt>:STIMuli:PCS:SKEW:NS?	585
12.14	Result	586
12.14.1	ETHERnet:PORT<Pt>:IFETch?	586
12.14.2	ETHERnet:PORT<Pt>:TFETch?	592
12.14.3	ETHERnet:PORT<Pt>:TFRDiffrence:PSELection	593
12.15	Status	595
12.15.1	ETHERnet:STATus:PORT<Pt>:AESummary[:EVENT]?	595
12.15.2	ETHERnet:STATus:PORT<Pt>:AESummary:CONDition?	595
12.15.3	ETHERnet:STATus:PORT<Pt>:ALARm<section>[:EVENT]?	595
12.15.4	ETHERnet:STATus:PORT<Pt>:ALARm<section>:CONDition?	597

12.15.5	ETHERnet:STATus:PORT<Pt>:ERRor<section>[:EVENT]?	598
12.15.6	ETHERnet:STATus:PORT<Pt>:ERRor<section>:CONDition?	599
12.15.7	ETHERnet:STATus:PORT<Pt>:LINK?	599
12.15.8	ETHERnet:STATus:PORT<Pt>:INTerface?	599
12.15.9	ETHERnet:STATus:PORT<Pt>:FRAMes?	599
12.15.10	ETHERnet:STATus:PORT<Pt>:MPLS?	599
12.15.11	ETHERnet:STATus:PORT<Pt>:VLAN?	600
12.15.12	ETHERnet:STATus:PORT<Pt>:SPeEd?	600
12.15.13	ETHERnet:STATus:PORT<Pt>:DUPLex?	600
12.15.14	ETHERnet:STATus:PORT<Pt>:MDI?	600
12.15.15	ETHERnet:STATus:PORT<Pt>:L10G?	600
12.15.16	ETHERnet:STATus:PORT<Pt>:LFS?	601
12.15.17	ETHERnet:STATus:PORT<Pt>:ANComplete?	601
12.15.18	ETHERnet:STATus:PORT<Pt>:PCAPable?	601
12.15.19	ETHERnet:STATus:PORT<Pt>:APRequest?	601
12.15.20	ETHERnet:STATus:PORT<Pt>:RFAult?	601
12.15.21	ETHERnet:STATus:PORT<Pt>:LClock?	602
12.15.22	ETHERnet:STATus:PORT<Pt>:SADuplex?	602
12.15.23	ETHERnet:STATus:PORT<Pt>:UTILization?	602
12.15.24	ETHERnet:STATus:PORT<Pt>:THRoughput?	602
12.15.25	ETHERnet:STATus:PORT<Pt>:EFRames?	603
12.15.26	ETHERnet:STATus:PORT<Pt>:PCS:SHLock?	603
12.15.27	ETHERnet:STATus:PORT<Pt>:PCS:AMLock?	603
12.15.28	ETHERnet:STATus:PORT<Pt>:TIMing?	603
12.15.29	ETHERnet:STATus:PORT<Pt>:TIMing:SOURce?	603
12.15.30	ETHERnet:STATus:PORT<Pt>:SYNCe?	604
12.15.31	ETHERnet:STATus:PORT<Pt>:PTP:LClock?	604
12.15.32	ETHERnet:STATus:PORT<Pt>:PTP:WCLock?	604
12.15.33	ETHERnet:STATus:PORT<Pt>:PTP:PCLock?	604
12.15.34	ETHERnet:STATus:PORT<Pt>:PTP:GClock?	605
12.15.35	ETHERnet:STATus:PORT<Pt>:PTP:FMASters?	605
12.15.36	ETHERnet:STATus:PORT<Pt>:WAN:CAPTure:SOH:TRACe?	605
12.15.37	ETHERnet:STATus:PORT<Pt>:WAN:CAPTure<Frame>:SOH?	605
12.15.38	ETHERnet:STATus:PORT<Pt>:WAN:CAPTure:POH:TRACe?	606
12.15.39	ETHERnet:STATus:PORT<Pt>:WAN:CAPTure<Frame>:POH?	607
12.15.40	ETHERnet:STATus:PORT<Pt>:TSRC:R10M?	607
12.15.41	ETHERnet:STATus:PORT<Pt>:TSRC:RPPS?	607
12.15.42	ETHERnet:STATus:PORT<Pt>:TSRC:GPS?	608
12.16	Ping	609
12.16.1	ETHERnet:PING:STARt	609
12.16.2	ETHERnet:PING:STOP	609
12.16.3	ETHERnet:PING:SETup:PORT<Pt>:DMODE	609
12.16.4	ETHERnet:PING:SETup:PORT<Pt>:SDURation	609
12.16.5	ETHERnet:PING:SETup:PORT<Pt>:RDURation	610
12.16.6	ETHERnet:PING:SETup:PORT<Pt>:INTerval	610
12.16.7	ETHERnet:PING:SETup:PORT<Pt>:FSIZe	610
12.16.8	ETHERnet:PING:SETup:PORT<Pt>:TOUT	611
12.16.9	ETHERnet:PING:RESults:SUMMARY?	611
12.16.10	ETHERnet:PING:RESults:RTT?	611
12.16.11	ETHERnet:PING:RESults:NREQuests?	612
12.16.12	ETHERnet:PING:RESults:SREQuest?	612
12.17	Traceroute	613
12.17.1	ETHERnet:TRACeroute:STARt	613
12.17.2	ETHERnet:TRACeroute:STOP	613
12.17.3	ETHERnet:TRACeroute:SETup:NATTempts	613
12.17.4	ETHERnet:TRACeroute:SETup:MNHops	613
12.17.5	ETHERnet:TRACeroute:SETup:TOUT	614
12.17.6	ETHERnet:TRACeroute:SETup:NTPHosts	614
12.17.7	ETHERnet:TRACeroute:RESults:NHOPs?	614

12.17.8	ETHERnet:TRACeroute:RESults:HOP?	614
12.18	RFC2544	616
12.18.1	ETHERnet:RFC:STARt	616
12.18.2	ETHERnet:RFC:STOP	616
12.18.3	ETHERnet:RFC:SETup:GENeral:MODE	616
12.18.4	ETHERnet:RFC:SETup:GENeral:TSElection	616
12.18.5	ETHERnet:RFC:SETup:GENeral:E2E:OWAY	617
12.18.6	ETHERnet:RFC:SETup:GENeral:E2E:ADDress	617
12.18.7	ETHERnet:RFC:SETup:GENeral:E2E:TDIRection	617
12.18.8	ETHERnet:RFC:SETup:GENeral:E2E:SSTore	618
12.18.9	ETHERnet:RFC:SETup:GENeral:TLFrames	618
12.18.10	ETHERnet:RFC:SETup:GENeral:IAFFilter	618
12.18.11	ETHERnet:RFC:SETup:GENeral:JITTer	619
12.18.12	ETHERnet:RFC:SETup:GENeral:ACCumulate	619
12.18.13	ETHERnet:RFC:SETup:GENeral:TCLayer	619
12.18.14	ETHERnet:RFC:SETup:GENeral:TTYPe	620
12.19	RFC2544 - Throughput	621
12.19.1	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:FSIZE:MODE	621
12.19.2	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:FSIZE:USER	621
12.19.3	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:FSIZE:JUMBo	622
12.19.4	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:FSIZE:BEGin	622
12.19.5	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:FSIZE:END	622
12.19.6	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:FSIZE:STEP	623
12.19.7	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:FSIZE:CONStant	623
12.19.8	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:FSIZE:FLEXible:COUNT	623
12.19.9	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:FSIZE:FLEXible <Count>:SIZE	624
12.19.10	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:STOP	624
12.19.11	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:MINimum	625
12.19.12	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:MAXimum	625
12.19.13	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:STEP	626
12.19.14	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch[:ENABLE]	626
12.19.15	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:MODE	626
12.19.16	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch :RESolution	627
12.19.17	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:DURation:STEP	627
12.19.18	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:DURation:REPeats	628
12.19.19	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:THReshold:ENABLEd	628
12.19.20	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:THReshold	628
12.19.21	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:LOSTorelance :ENABLEd	629
12.19.22	ETHERnet:RFC:SETup:PORT<Pt>:THRoughput:LOSTorelance	629
12.20	RFC2544 - Frame Loss	630
12.20.1	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:FSIZE:MODE	630
12.20.2	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:FSIZE:USER	630
12.20.3	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:FSIZE:JUMBo	631
12.20.4	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:FSIZE:BEGin	631
12.20.5	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:FSIZE:END	631
12.20.6	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:FSIZE:STEP	632
12.20.7	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:FSIZE:CONStant	632
12.20.8	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:FSIZE:FLEXible:COUNT	632
12.20.9	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:FSIZE:FLEXible<Count>:SIZE	633
12.20.10	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:LLoad:STOP	633
12.20.11	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:LLoad:MINimum	634
12.20.12	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:LLoad:MAXimum	634
12.20.13	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:LLoad:STEP	635
12.20.14	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:LLoad:ASEarch[:ENABLE]	635
12.20.15	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:LLoad:ASEarch:MODE	635
12.20.16	ETHERnet:RFC:SETup:PORT<Pt>:FLOSSs:LLoad:ASEarch:RESolution	636

12.20.17	ETHERnet:RFC:SETup:PORT<Pt>:FLOs:DuRation:STEP	636
12.20.18	ETHERnet:RFC:SETup:PORT<Pt>:FLOs:DuRation:REPeats	637
12.21	RFC2544 - Throughput and Frame Loss	638
12.21.1	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:MODE	638
12.21.2	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:USER	638
12.21.3	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:JUMBo	639
12.21.4	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:BEGin	639
12.21.5	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:END	639
12.21.6	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:STEP	640
12.21.7	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:CONStant	640
12.21.8	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:FLEXible:COUNt	640
12.21.9	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:FLEXible<Count>:SIZE	641
12.21.10	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:STOP	641
12.21.11	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:MINimum	642
12.21.12	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:MAXimum	642
12.21.13	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:STEP	643
12.21.14	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:ASEarch [:ENABLE]	643
12.21.15	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:ASEarch:MODE	644
12.21.16	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:ASEarch :RESolution	644
12.21.17	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:DuRation:STEP	644
12.21.18	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:DuRation:REPeats	645
12.21.19	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:THReshold:ENABLEd	645
12.21.20	ETHERnet:RFC:SETup:PORT<Pt>:TAFLoss:THReshold	645
12.22	RFC2544 - Latency	647
12.22.1	ETHERnet:RFC:SETup:PORT<Pt>:LATency:FSIZE:MODE	647
12.22.2	ETHERnet:RFC:SETup:PORT<Pt>:LATency:FSIZE:USER	647
12.22.3	ETHERnet:RFC:SETup:PORT<Pt>:LATency:FSIZE:JUMBo	648
12.22.4	ETHERnet:RFC:SETup:PORT<Pt>:LATency:FSIZE:BEGin	648
12.22.5	ETHERnet:RFC:SETup:PORT<Pt>:LATency:FSIZE:END	648
12.22.6	ETHERnet:RFC:SETup:PORT<Pt>:LATency:FSIZE:STEP	649
12.22.7	ETHERnet:RFC:SETup:PORT<Pt>:LATency:FSIZE:CONStant	649
12.22.8	ETHERnet:RFC:SETup:PORT<Pt>:LATency:FSIZE:FLEXible:COUNt	649
12.22.9	ETHERnet:RFC:SETup:PORT<Pt>:LATency:FSIZE:FLEXible<Count>:SIZE	650
12.22.10	ETHERnet:RFC:SETup:PORT<Pt>:LATency:LLoad:MINimum	650
12.22.11	ETHERnet:RFC:SETup:PORT<Pt>:LATency:LLoad:MAXimum	651
12.22.12	ETHERnet:RFC:SETup:PORT<Pt>:LATency:LLoad:STEP	651
12.22.13	ETHERnet:RFC:SETup:PORT<Pt>:LATency:LLoad:ONLY	652
12.22.14	ETHERnet:RFC:SETup:PORT<Pt>:LATency:LLoad:OTEST	652
12.22.15	ETHERnet:RFC:SETup:PORT<Pt>:LATency:LLoad:TLEVel	652
12.22.16	ETHERnet:RFC:SETup:PORT<Pt>:LATency:DuRation:STEP	653
12.22.17	ETHERnet:RFC:SETup:PORT<Pt>:LATency:DuRation:REPeats	653
12.22.18	ETHERnet:RFC:SETup:PORT<Pt>:LATency:LTHReshold:ENABLEd	653
12.22.19	ETHERnet:RFC:SETup:PORT<Pt>:LATency:LTHReshold	654
12.22.20	ETHERnet:RFC:SETup:PORT<Pt>:LATency:JTHReshold:ENABLEd	654
12.22.21	ETHERnet:RFC:SETup:PORT<Pt>:LATency:JTHReshold	654
12.23	RFC2544 - Burst	656
12.23.1	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:MODE	656
12.23.2	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FSIZE:MODE	656
12.23.3	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FSIZE:USER	656
12.23.4	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FSIZE:JUMBo	657
12.23.5	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FSIZE:BEGin	657
12.23.6	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FSIZE:END	658
12.23.7	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FSIZE:STEP	658
12.23.8	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FSIZE:CONStant	658
12.23.9	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FSIZE:FLEXible:COUNt	659
12.23.10	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FSIZE:FLEXible<Count>:SIZE	659
12.23.11	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:MODE	660

12.23.12	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:BEgin	660
12.23.13	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:END	660
12.23.14	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:STEP	661
12.23.15	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:CONStant	661
12.23.16	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:STOP	661
12.23.17	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch[:ENABLE]	662
12.23.18	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:MODE	662
12.23.19	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:RESolution	663
12.23.20	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:SPBurst:SEConds	663
12.23.21	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:SPBurst:ASEarch:MODE	663
12.23.22	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:SPBurst:ASEarch:RESolution	664
12.23.23	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:DURation:STEP	664
12.23.24	ETHERnet:RFC:SETup:PORT<Pt>:BURSt:DURation:REPeats	665
12.24	RFC2544 - Result	666
12.24.1	ETHERnet:RFC:RESult:TEST	666
12.24.2	ETHERnet:RFC:RESult:PORT<Pt>:NSTep?	666
12.24.3	ETHERnet:RFC:RESult:PORT<Pt>:SElect	666
12.24.4	ETHERnet:RFC:RESult:PORT<Pt>:FETCh?	668
12.25	Y.1564 Service Activation Test	669
12.25.1	ETHERnet:SATest:STARt	669
12.25.2	ETHERnet:SATest:STOP	669
12.25.3	ETHERnet:SATest:SETup:TMODe	669
12.25.4	ETHERnet:SATest:SETup:OWTest:LTRemote[:ENABLE]	669
12.25.5	ETHERnet:SATest:SETup:OWTest:RTLocal[:ENABLE]	670
12.25.6	ETHERnet:SATest:SETup:OWTest:BSYMMetry	670
12.25.7	ETHERnet:SATest:SETup:OWTest:SYNChronization	671
12.25.8	ETHERnet:SATest:SETup:OWTest:TLSAddresses[:ENABLE]	671
12.25.9	ETHERnet:SATest:SETup:CCFC	671
12.25.10	ETHERnet:SATest:SETup:CBRate	672
12.25.11	ETHERnet:SATest:SETup:SPTDuration	672
12.25.12	ETHERnet:SATest:SETup:SPTDuration:CDURation	672
12.25.13	ETHERnet:SATest:SETup:COFail	674
12.25.14	ETHERnet:SATest:SETup:GENeral:IAFFilter	674
12.25.15	ETHERnet:SATest:SETup:SERVice<no>[:ENABLE]	674
12.25.16	ETHERnet:SATest:SETup:SERVice<no>:NAME	675
12.25.17	ETHERnet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]	675
12.25.18	ETHERnet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]	675
12.25.19	ETHERnet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:PROFile	676
12.25.20	ETHERnet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:PROFile	676
12.25.21	ETHERnet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:ENCoding :VIDeo	677
12.25.22	ETHERnet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:ENCoding :VIDeo	677
12.25.23	ETHERnet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:ENCoding :VOICe	677
12.25.24	ETHERnet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:ENCoding :VOICe	678
12.25.25	ETHERnet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:NCHannels	678
12.25.26	ETHERnet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:NCHannels	679
12.25.27	ETHERnet:SATest:SETup:SERVice<no>[:LTRemote]:EIRate	679
12.25.28	ETHERnet:SATest:SETup:SERVice<no>:RTLocal:EIRate	679
12.25.29	ETHERnet:SATest:SETup:SERVice<no>[:LTRemote]:TPOLicing[:ENABLE]	680
12.25.30	ETHERnet:SATest:SETup:SERVice<no>:RTLocal:TPOLicing[:ENABLE]	680
12.25.31	ETHERnet:SATest:SETup:SERVice<no>[:LTRemote]:TPOLicing:MARGIN	681
12.25.32	ETHERnet:SATest:SETup:SERVice<no>:RTLocal:TPOLicing:MARGIN	681
12.25.33	ETHERnet:SATest:SETup:SERVice<no>[:LTRemote]:CBSize	681
12.25.34	ETHERnet:SATest:SETup:SERVice<no>:RTLocal:CBSize	682
12.25.35	ETHERnet:SATest:SETup:SERVice<no>[:LTRemote]:EBSize	682
12.25.36	ETHERnet:SATest:SETup:SERVice<no>:RTLocal:EBSize	683

12.25.37	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:CAVare[:ENABle]	683
12.25.38	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:CAVare[:ENABle]	683
12.25.39	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:CAVare:CMETHod	684
12.25.40	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:CAVare:CMETHod	684
12.25.41	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:CAVare:DSCP:GREen	685
12.25.42	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:CAVare:DSCP:GREen	685
12.25.43	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:CAVare:DSCP :YELLow	685
12.25.44	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:CAVare:DSCP:YELLow	686
12.25.45	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:CAVare:PCP:GREen	686
12.25.46	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:CAVare:PCP:GREen	687
12.25.47	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:CAVare:PCP :YELLow	687
12.25.48	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:CAVare:PCP:YELLow	687
12.25.49	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:SACRiteria:FTDelay	688
12.25.50	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:SACRiteria:FTDelay	688
12.25.51	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:SACRiteria :FDVariation	689
12.25.52	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:SACRiteria:FDVariation	689
12.25.53	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:SACRiteria:FLRatio	689
12.25.54	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:SACRiteria:FLRatio	690
12.25.55	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:SACRiteria :AVAIability	690
12.25.56	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:SACRiteria:AVAIability	690
12.25.57	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:FSMode	691
12.25.58	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:FSMode	691
12.25.59	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:CFSize	691
12.25.60	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:CFSize	692
12.25.61	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:EMIX	692
12.25.62	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:EMIX	693
12.25.63	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:MTU	694
12.25.64	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:MTU	694
12.25.65	ETHERnet:SATest:SETup:SERvice<no>[:LTRemote]:UDFSize	694
12.25.66	ETHERnet:SATest:SETup:SERvice<no>:RTLocal:UDFSize	695
12.25.67	ETHERnet:SATest:SETup:SERvice<no>:SCTSteps:SDURation	695
12.25.68	ETHERnet:SATest:SETup:SERvice<no>:SCTSteps:NSTep	695
12.25.69	ETHERnet:SATest:SETup:SERvice<no>:SCTSteps:SLOPe	696
12.25.70	ETHERnet:SATest:SETup:VERCompati	696
12.25.71	ETHERnet:SATest:RESult:TSYNchronization?	697
12.25.72	ETHERnet:SATest:RESult:SCTest[:LTRemote]?	697
12.25.73	ETHERnet:SATest:RESult:SCTest:RTLocal?	697
12.25.74	ETHERnet:SATest:RESult:SCTest:SERvice<no>[:LTRemote]:CIRate?	697
12.25.75	ETHERnet:SATest:RESult:SCTest:SERvice<no>:RTLocal:CIRate?	698
12.25.76	ETHERnet:SATest:RESult:SCTest:SERvice<no>[:LTRemote]:EIRate?	698
12.25.77	ETHERnet:SATest:RESult:SCTest:SERvice<no>:RTLocal:EIRate?	698
12.25.78	ETHERnet:SATest:RESult:SCTest:SERvice<no>[:LTRemote]:TPOLicing?	699
12.25.79	ETHERnet:SATest:RESult:SCTest:SERvice<no>:RTLocal:TPOLicing?	699
12.25.80	ETHERnet:SATest:RESult:SCTest:SERvice<no>[:LTRemote]:CBSize?	699
12.25.81	ETHERnet:SATest:RESult:SCTest:SERvice<no>:RTLocal:CBSize?	699
12.25.82	ETHERnet:SATest:RESult:SCTest:SERvice<no>[:LTRemote]:EBSize?	700
12.25.83	ETHERnet:SATest:RESult:SCTest:SERvice<no>:RTLocal:EBSize?	700
12.25.84	ETHERnet:SATest:RESult:SPTTest[:LTRemote]?	701
12.25.85	ETHERnet:SATest:RESult:SPTTest:RTLocal?	701
12.25.86	ETHERnet:SATest:RESult:SPTTest:SERvice<no>[:LTRemote]?	701
12.25.87	ETHERnet:SATest:RESult:SPTTest:SERvice<no>:RTLocal?	702
12.26	Cable Test	703
12.26.1	ETHERnet:CABLe:STARt	703
12.26.2	ETHERnet:CABLe:STOP	703
12.26.3	ETHERnet:CABLe:CCStandard	703

12.26.4	ETHERnet:CABLe:RESults:PAIR<Pr>?	704
12.27	IP Channel Statistics	705
12.27.1	ETHERnet:CStat:StARt	705
12.27.2	ETHERnet:CStat:StOP	705
12.27.3	ETHERnet:CStat:SEtup:FOLLow	705
12.27.4	ETHERnet:CStat:SEtup:PORT<Pt>:FOLLow	705
12.27.5	ETHERnet:CStat:SEtup:PORT<Pt>:CDEFinitions	706
12.27.6	ETHERnet:CStat:SEtup:PORT<Pt>:MERGe	706
12.27.7	ETHERnet:CStat:SEtup:PORT<Pt>:FRESults	707
12.27.8	ETHERnet:CStat:RESults:PORT<Pt>:NCHannels?	707
12.27.9	ETHERnet:CStat:RESults:PORT<Pt>:DFRames?	707
12.27.10	ETHERnet:CStat:RESults:PORT<Pt>:FETCh?	707
12.27.11	ETHERnet:CStat:RESults:RESet	709
12.28	Monitor Generator	710
12.28.1	ETHERnet:MONGen:SEtup:GENeral:IAFFilter	710
12.29	Sync Test	711
12.29.1	ETHERnet:SYNTest:SEtup:MPERiod	711
12.29.2	ETHERnet:SYNTest:SEtup:MPERiod:USERdefined	711
12.29.3	ETHERnet:SYNTest:SEtup:MPERiod:USERdefined:TIME	711
12.29.4	ETHERnet:SYNTest:SEtup:PPS:MODE[:ENABle]	712
12.29.5	ETHERnet:SYNTest:SEtup:PPS:CABLeCorrection	712
12.29.6	ETHERnet:SYNTest:SEtup:PACKet:CABLeCorrection	712
12.29.7	ETHERnet:SYNTest:SEtup:PPS:MEASurement[:ENABle]	713
12.29.8	ETHERnet:SYNTest:SEtup:SYNCe:WANDer[:ENABle]	713
12.29.9	ETHERnet:SYNTest:SEtup:PTP:ANALysis[:ENABle]	713
12.29.10	ETHERnet:THResholds:PPS:PHASe[:ENABle]	714
12.29.11	ETHERnet:THResholds:PPS:PHASe:MINValue	714
12.29.12	ETHERnet:THResholds:PPS:PHASe:MAXValue	714
12.29.13	ETHERnet:THResholds:PPS:FILTERed[:ENABle]	715
12.29.14	ETHERnet:THResholds:PPS:FILTERed:MINValue	715
12.29.15	ETHERnet:THResholds:PPS:FILTERed:MAXValue	715
12.29.16	ETHERnet:THResholds:PPS:DEViation[:ENABle]	716
12.29.17	ETHERnet:THResholds:PPS:DEViation:MINValue	716
12.29.18	ETHERnet:THResholds:PPS:DEViation:MAXValue	716
12.29.19	ETHERnet:THResholds:OWD:SYNC[:ENABle]	717
12.29.20	ETHERnet:THResholds:OWD:SYNC:MINValue	717
12.29.21	ETHERnet:THResholds:OWD:SYNC:MAXValue	717
12.29.22	ETHERnet:THResholds:OWD:FOLLow[:ENABle]	718
12.29.23	ETHERnet:THResholds:OWD:FOLLow:MINValue	718
12.29.24	ETHERnet:THResholds:OWD:FOLLow:MAXValue	718
12.29.25	ETHERnet:THResholds:OWD:DELay[:ENABle]	719
12.29.26	ETHERnet:THResholds:OWD:DELay:MINValue	719
12.29.27	ETHERnet:THResholds:OWD:DELay:MAXValue	719
12.29.28	ETHERnet:PORT<Pt>:SYNTest:ADVanced:ADAPte[:ENABle]	720
12.29.29	ETHERnet:SYNTest:SEtup:ADVanced:FOLLow	720
12.29.30	ETHERnet:PORT<Pt>:SYNCtest:RESults:BOUNDs?	720
12.29.31	ETHERnet:SYNCtest:1PPS:RESults?	720
12.29.32	ETHERnet:PORT<Pt>:SYNCtest:OWD:RESults?	721
12.29.33	ETHERnet:PORT<Pt>:SYNCtest:TERR:RESults?	721
12.29.34	ETHERnet:PORT<Pt>:SYNTest:RESults:SYNCe:WANDer:StORe	721
12.29.35	ETHERnet:SYNTest:RESults:PPS:StORe	721
12.29.36	ETHERnet:PORT<Pt>:SYNTest:RESults:PTP:PDVFpp:StORe	722
12.29.37	ETHERnet:PORT<Pt>:SYNTest:RESults:PTP:ANALysis:StORe	722
12.30	Frame Capture	722
12.30.1	ETHERnet:PORT<Pt>:CAPTure:StARt	722
12.30.2	ETHERnet:PORT<Pt>:CAPTure:StOP	722
12.30.3	ETHERnet:PORT<Pt>:CAPTure:StATUS?	723
12.30.4	ETHERnet:PORT<Pt>:CAPTure:BUFSize	723
12.30.5	ETHERnet:PORT<Pt>:CAPTure:SLICing	723

12.30.6	ETHERnet:PORT<Pt>:CAPtUre:ALOCation	724
12.30.7	ETHERnet:PORT<Pt>:CAPtUre:TXFRame	724
12.30.8	ETHERnet:PORT<Pt>:CAPtUre:TRIGger:TYPE	724
12.30.9	ETHERnet:PORT<Pt>:CAPtUre:TRIGger:POSition	725
12.30.10	ETHERnet:PORT<Pt>:CAPtUre:TRIGger:ERRor	725
12.30.11	ETHERnet:PORT<Pt>:CAPtUre:TRIGger:OFFSet	726
12.30.12	ETHERnet:PORT<Pt>:CAPtUre:TRIGger:PATtern	726
12.30.13	ETHERnet:PORT<Pt>:CAPtUre:STORe	726
12.30.14	ETHERnet:PORT<Pt>:CAPtUre:BUFFer?	727
12.31	Discovery	728
12.31.1	ETHERnet:DISCovey:SETup:TYPE	728
12.31.2	ETHERnet:DISCovey:SETup:TARGeT:COUNt	728
12.31.3	ETHERnet:DISCovey:SETup:TARGeT:IPV4[:BEGin]	728
12.31.4	ETHERnet:DISCovey:RESults:NREQuest?	729
12.31.5	ETHERnet:DISCovey:RESults:SREQuest?	729
12.31.6	ETHERnet:DISCovey:RESults:SREQuest:DETail?	729
12.31.7	ETHERnet:DISCovey:RESults:UPDate	730
12.31.8	ETHERnet:DISCovey:RESults:UPDate:RESult?	730
12.31.9	ETHERnet:DISCovey:CAPPLication[:EXECute]	730
12.31.10	ETHERnet:DISCovey:CAPPLication:PASSword	730
12.31.11	ETHERnet:DISCovey:CAPPLication:SAPPLication	731
12.31.12	ETHERnet:DISCovey:CAPPLication:TARGeT:MAC:SOURce	731
12.31.13	ETHERnet:DISCovey:CAPPLication:TARGeT:IPV4:SOURce	731
12.31.14	ETHERnet:DISCovey:CAPPLication:TARGeT:IPV4:DESTination	732
12.31.15	ETHERnet:DISCovey:CAPPLication:TARGeT:IPV4:NETMask	732
12.31.16	ETHERnet:DISCovey:CAPPLication:TARGeT:IPV4:GATeway[:ENABLE]	732
12.31.17	ETHERnet:DISCovey:CAPPLication:TARGeT:IPV4:GATeway:ADDReSS	733
12.31.18	ETHERnet:DISCovey:CAPPLication:TARGeT:VLAN:LCount	733
12.31.19	ETHERnet:DISCovey:CAPPLication:TARGeT:VLAN:LEVel<Lv>:ID	733
12.31.20	ETHERnet:DISCovey:CAPPLication:IMULti:MAC:SOURce	734
12.31.21	ETHERnet:DISCovey:CAPPLication:IMULti:IPV4:SOURce	734
12.31.22	ETHERnet:DISCovey:CAPPLication:IMULti:VLAN:LEVel<Lv>:ID	734
12.32	OAM	736
12.32.1	ETHERnet:PORT<Pt>:OAM:PROTOcol	736
12.32.2	ETHERnet:PORT<Pt>:OAM:SMAC	736
12.32.3	ETHERnet:PORT<Pt>:OAM:MAC:ETYPe	737
12.32.4	ETHERnet:PORT<Pt>:OAM:AH:DISCovey[:ENABLE]	737
12.32.5	ETHERnet:PORT<Pt>:OAM:AH:DISCovey:LMODe	737
12.32.6	ETHERnet:PORT<Pt>:OAM:AH:DISCovey:VOUI	738
12.32.7	ETHERnet:PORT<Pt>:OAM:AH:DISCovey:VSINfo	738
12.32.8	ETHERnet:PORT<Pt>:OAM:AH:DISCovey:UNIDirectional	738
12.32.9	ETHERnet:PORT<Pt>:OAM:AH:DISCovey:VRETrival	739
12.32.10	ETHERnet:PORT<Pt>:OAM:AH:LDEFects:LFAults	739
12.32.11	ETHERnet:PORT<Pt>:OAM:AH:LDEFects:DGASp	739
12.32.12	ETHERnet:PORT<Pt>:OAM:AH:LDEFects:CEvent	740
12.32.13	ETHERnet:PORT<Pt>:OAM:AG[:ENABLE]	740
12.32.14	ETHERnet:PORT<Pt>:OAM:AG:MEPid	740
12.32.15	ETHERnet:PORT<Pt>:OAM:AG:MDLevel	741
12.32.16	ETHERnet:PORT<Pt>:OAM:AG:DOMain	741
12.32.17	ETHERnet:PORT<Pt>:OAM:AG:MAIDentifier	741
12.32.18	ETHERnet:PORT<Pt>:OAM:AG:CCM:INTerval	742
12.32.19	ETHERnet:PORT<Pt>:OAM:AG:LBM:OTLV	742
12.32.20	ETHERnet:PORT<Pt>:OAM:AG:LBM:TLVLength	743
12.32.21	ETHERnet:PORT<Pt>:OAM:AG:LBM:DTLV:VALue	743
12.32.22	ETHERnet:PORT<Pt>:OAM:AG:LBM:TTLV:VALue	743
12.32.23	ETHERnet:PORT<Pt>:OAM:AG:LTM:TTL	744
12.32.24	ETHERnet:PORT<Pt>:OAM:AG:LTM:TID	744
12.32.25	ETHERnet:PORT<Pt>:OAM:AG:MEPList:ADD	744
12.32.26	ETHERnet:PORT<Pt>:OAM:AG:MEPList:DELeTe[:MEP]	745

12.32.27	ETHernet:PORT<Pt>:OAM:AG:MEPList:CATalog?	745
12.32.28	ETHernet:PORT<Pt>:OAM:Y[:ENABLE]	745
12.32.29	ETHernet:PORT<Pt>:OAM:Y:MEPid	745
12.32.30	ETHernet:PORT<Pt>:OAM:Y:MEGid	746
12.32.31	ETHernet:PORT<Pt>:OAM:Y:MEGLevel	746
12.32.32	ETHernet:PORT<Pt>:OAM:Y:CCM:INTerval	747
12.32.33	ETHernet:PORT<Pt>:OAM:Y:LBM:OTLV	747
12.32.34	ETHernet:PORT<Pt>:OAM:Y:LBM:TLVLength	747
12.32.35	ETHernet:PORT<Pt>:OAM:Y:LBM:DTLV:VALue	748
12.32.36	ETHernet:PORT<Pt>:OAM:Y:LBM:TTLV:VALue	748
12.32.37	ETHernet:PORT<Pt>:OAM:Y:LTM:TTL	748
12.32.38	ETHernet:PORT<Pt>:OAM:Y:LTM:TID	749
12.32.39	ETHernet:PORT<Pt>:OAM:Y:TST:FTSend	749
12.32.40	ETHernet:PORT<Pt>:OAM:Y:TST:RATE	749
12.32.41	ETHernet:PORT<Pt>:OAM:Y:TST:OTLV	750
12.32.42	ETHernet:PORT<Pt>:OAM:Y:TST:TLVLength	750
12.32.43	ETHernet:PORT<Pt>:OAM:Y:TST:TTLV:VALue	750
12.32.44	ETHernet:PORT<Pt>:OAM:Y:MCC:OUI	751
12.32.45	ETHernet:PORT<Pt>:OAM:Y:MCC:DATA	751
12.32.46	ETHernet:PORT<Pt>:OAM:Y:LCK:CMEG	751
12.32.47	ETHernet:PORT<Pt>:OAM:Y:LCK:RATE	752
12.32.48	ETHernet:PORT<Pt>:OAM:Y:AIS:CMEG	752
12.32.49	ETHernet:PORT<Pt>:OAM:Y:AIS:RATE	752
12.32.50	ETHernet:PORT<Pt>:OAM:Y:DMONe:TYPE	753
12.32.51	ETHernet:PORT<Pt>:OAM:Y:DMONe:RATE	753
12.32.52	ETHernet:PORT<Pt>:OAM:Y:DMONe:FTSend	754
12.32.53	ETHernet:PORT<Pt>:OAM:Y:DMONe:OTLV	754
12.32.54	ETHernet:PORT<Pt>:OAM:Y:DMONe:TLVLength	754
12.32.55	ETHernet:PORT<Pt>:OAM:Y:DMONe:DTLV:VALue	755
12.32.56	ETHernet:PORT<Pt>:OAM:Y:DMONe:TTLV:VALue	755
12.32.57	ETHernet:PORT<Pt>:OAM:Y:DMM:TYPE	755
12.32.58	ETHernet:PORT<Pt>:OAM:Y:DMM:RATE	756
12.32.59	ETHernet:PORT<Pt>:OAM:Y:DMM:FTSend	756
12.32.60	ETHernet:PORT<Pt>:OAM:Y:DMM:FVTHreshold	756
12.32.61	ETHernet:PORT<Pt>:OAM:Y:DMM:OTLV	757
12.32.62	ETHernet:PORT<Pt>:OAM:Y:DMM:TLVLength	757
12.32.63	ETHernet:PORT<Pt>:OAM:Y:DMM:DTLV:VALue	757
12.32.64	ETHernet:PORT<Pt>:OAM:Y:DMM:TTLV:VALue	758
12.32.65	ETHernet:PORT<Pt>:OAM:Y:LMM:RATE	758
12.32.66	ETHernet:PORT<Pt>:OAM:Y:LMM:FTSend	758
12.32.67	ETHernet:PORT<Pt>:OAM:Y:LMM:FLTHreshold	759
12.32.68	ETHernet:PORT<Pt>:OAM:Y:SLM:RATE	759
12.32.69	ETHernet:PORT<Pt>:OAM:Y:SLM:FTSend	759
12.32.70	ETHernet:PORT<Pt>:OAM:Y:SLM:FLTHreshold	760
12.32.71	ETHernet:PORT<Pt>:OAM:Y:EXM:DATA	760
12.32.72	ETHernet:PORT<Pt>:OAM:Y:VSM:DATA	760
12.32.73	ETHernet:PORT<Pt>:OAM:Y:MEPList:ADD	761
12.32.74	ETHernet:PORT<Pt>:OAM:Y:MEPList:DElete[:MEP]	761
12.32.75	ETHernet:PORT<Pt>:OAM:Y:MEPList:CATalog?	761
12.32.76	ETHernet:PORT<Pt>:OAM:DISCcovery:TYPE	761
12.32.77	ETHernet:PORT<Pt>:OAM:DISCcovery:INTerval	762
12.32.78	ETHernet:PORT<Pt>:OAM:DISCcovery:DMAX	762
12.32.79	ETHernet:PORT<Pt>:OAM:DISCcovery:CATalog?	763
12.32.80	ETHernet:PORT<Pt>:OAM:MPLS[:ENABLE]	763
12.32.81	ETHernet:PORT<Pt>:OAM:MPLS:LCOunt	763
12.32.82	ETHernet:PORT<Pt>:OAM:MPLS:LEVel<Lv>:LABel	764
12.32.83	ETHernet:PORT<Pt>:OAM:MPLS:LEVel<Lv>:TCClass	764
12.32.84	ETHernet:PORT<Pt>:OAM:MPLS:LEVel<Lv>:TTL	764
12.32.85	ETHernet:PORT<Pt>:OAM:MPLS:TPRofile[:ENABLE]	765

12.32.86	ETHERnet:PORT<Pt>:OAM:MIM[:ENABLE]	765
12.32.87	ETHERnet:PORT<Pt>:OAM:MIM:BTAG:DEI	765
12.32.88	ETHERnet:PORT<Pt>:OAM:MIM:BTAG:PRiority	766
12.32.89	ETHERnet:PORT<Pt>:OAM:MIM:BTAG:VID	766
12.32.90	ETHERnet:PORT<Pt>:OAM:MIM:ITAG:UCA	766
12.32.91	ETHERnet:PORT<Pt>:OAM:MIM:ITAG:DEI	767
12.32.92	ETHERnet:PORT<Pt>:OAM:MIM:ITAG:PRiority	767
12.32.93	ETHERnet:PORT<Pt>:OAM:MIM:ITAG:SID	767
12.32.94	ETHERnet:PORT<Pt>:OAM:MIM:SMAC	768
12.32.95	ETHERnet:PORT<Pt>:OAM:MIM:ETHERnet:DMAC	768
12.32.96	ETHERnet:PORT<Pt>:OAM:VLAN[:ENABLE]	768
12.32.97	ETHERnet:PORT<Pt>:OAM:VLAN:LCOunt	769
12.32.98	ETHERnet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:ID	769
12.32.99	ETHERnet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:CFI	770
12.32.100	ETHERnet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:DEI	770
12.32.101	ETHERnet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:PRiority	771
12.32.102	ETHERnet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:ETYPe	771
12.32.103	ETHERnet:PORT<Pt>:OAM:OUTPut:ULBM	772
12.32.104	ETHERnet:PORT<Pt>:OAM:OUTPut:MLBM	772
12.32.105	ETHERnet:PORT<Pt>:OAM:OUTPut:LTM	772
12.32.106	ETHERnet:PORT<Pt>:OAM:OUTPut:MCC	772
12.32.107	ETHERnet:PORT<Pt>:OAM:OUTPut:EXM	772
12.32.108	ETHERnet:PORT<Pt>:OAM:OUTPut:VSM	773
12.32.109	ETHERnet:PORT<Pt>:OAM:OUTPut:TST	773
12.32.110	ETHERnet:PORT<Pt>:OAM:OUTPut:LMM	773
12.32.111	ETHERnet:PORT<Pt>:OAM:OUTPut:SLM	773
12.32.112	ETHERnet:PORT<Pt>:OAM:OUTPut:DMONe	773
12.32.113	ETHERnet:PORT<Pt>:OAM:OUTPut:DMM	774
12.32.114	ETHERnet:PORT<Pt>:OAM:OUTPut:CCM	774
12.32.115	ETHERnet:PORT<Pt>:OAM:OUTPut:AIS	774
12.32.116	ETHERnet:PORT<Pt>:OAM:OUTPut:LCK	774
12.32.117	ETHERnet:PORT<Pt>:OAM:OUTPut:LOOP	775
12.32.118	ETHERnet:PORT<Pt>:OAM:STATus:AH:REMOte:MODE?	775
12.32.119	ETHERnet:PORT<Pt>:OAM:STATus:AH:REMOte:PARSer?	775
12.32.120	ETHERnet:PORT<Pt>:OAM:STATus:AH:REMOte:MUXer?	775
12.32.121	ETHERnet:PORT<Pt>:OAM:STATus:AH:REMOte:OUI?	776
12.32.122	ETHERnet:PORT<Pt>:OAM:STATus:AH:REMOte:VSI?	776
12.32.123	ETHERnet:PORT<Pt>:OAM:STATus:AH:REMOte:UNIDirectional?	776
12.32.124	ETHERnet:PORT<Pt>:OAM:STATus:AH:REMOte:LEVents?	776
12.32.125	ETHERnet:PORT<Pt>:OAM:STATus:AH:REMOte:LBACK?	776
12.32.126	ETHERnet:PORT<Pt>:OAM:STATus:AH:REMOte:VRETrieval?	776
12.32.127	ETHERnet:PORT<Pt>:OAM:STATus:AH:REMOte:REViision?	777
12.32.128	ETHERnet:PORT<Pt>:OAM:STATus:AH:REMOte:MAC?	777
12.32.129	ETHERnet:PORT<Pt>:OAM:STATus:AH:REMOte:MPDU?	777
12.32.130	ETHERnet:PORT<Pt>:OAM:STATus:AH:LOCAl:MODE?	777
12.32.131	ETHERnet:PORT<Pt>:OAM:STATus:AH:LOCAl:PARSer?	777
12.32.132	ETHERnet:PORT<Pt>:OAM:STATus:AH:LOCAl:MUXer?	777
12.32.133	ETHERnet:PORT<Pt>:OAM:STATus:AH:LOCAl:UNIDirectional?	778
12.32.134	ETHERnet:PORT<Pt>:OAM:STATus:AH:LOCAl:LEVents?	778
12.32.135	ETHERnet:PORT<Pt>:OAM:STATus:AH:LOCAl:LBACK?	778
12.32.136	ETHERnet:PORT<Pt>:OAM:STATus:AH:LOCAl:VRETrieval?	778
12.32.137	ETHERnet:PORT<Pt>:OAM:STATus:AH:LOCAl:REViision?	778
12.32.138	ETHERnet:PORT<Pt>:OAM:STATus:AH:LOCAl:MPDU?	778
12.32.139	ETHERnet:PORT<Pt>:OAM:STATus:AH:LOCAl:STATe?	779
12.32.140	ETHERnet:PORT<Pt>:OAM:STATus:AH:VARiable:REQuest	779
12.32.141	ETHERnet:PORT<Pt>:OAM:STATus:AH:VARiable:RESPonse?	780
12.32.142	ETHERnet:PORT<Pt>:OAM:LOG?	780
12.33	TCP Throughput Test - RFC-6349	781
12.33.1	ETHERnet:TTTest:SETup:TCPPort	781

12.33.2	ETHERnet:TTTest:SETup:FATSequence	781
12.33.3	ETHERnet:TTTest:SETup:CIPerf	781
12.33.4	ETHERnet:TTTest:SETup:SLSName	782
12.33.5	ETHERnet:TTTest:SETup:LLSName	782
12.33.6	ETHERnet:TTTest:SETup:SRSName	782
12.33.7	ETHERnet:TTTest:SETup:LRSName	783
12.33.8	ETHERnet:TTTest:SETup:TDLR	783
12.33.9	ETHERnet:TTTest:SETup:TDRL	783
12.33.10	ETHERnet:TTTest:SETup:TDSimultaneos	784
12.33.11	ETHERnet:TTTest:SETup[:LTRemote]:CIRate	784
12.33.12	ETHERnet:TTTest:SETup[:LTRemote]:MTUSize	784
12.33.13	ETHERnet:TTTest:SETup:RTLocal:CIRate	785
12.33.14	ETHERnet:TTTest:SETup:RTLocal:MTUSize	785
12.33.15	ETHERnet:TTTest:SETup:PMTU:DISCover[:ENABLE]	785
12.33.16	ETHERnet:TTTest:SETup:PMTU:DISCover:MINimum	786
12.33.17	ETHERnet:TTTest:SETup:PMTU:DISCover:MAXimum	786
12.33.18	ETHERnet:TTTest:SETup:BRTT	786
12.33.19	ETHERnet:TTTest:SETup:BRTT:AUTO	787
12.33.20	ETHERnet:TTTest:SETup:BRTT:AUTO:DURATION	787
12.33.21	ETHERnet:TTTest:SETup:WSTTest[:ENABLE]	787
12.33.22	ETHERnet:TTTest:SETup:WSTTest:MODE	788
12.33.23	ETHERnet:TTTest:SETup:WSCan[:LTRemote]:SDURATION	788
12.33.24	ETHERnet:TTTest:SETup:WSCan[:LTRemote]:AMODE:MWSIZE	788
12.33.25	ETHERnet:TTTest:SETup:WSCan:RTLocal:SDURATION	789
12.33.26	ETHERnet:TTTest:SETup:WSCan:RTLocal:AMODE:MWSIZE	789
12.33.27	ETHERnet:TTTest:SETup:WSCan:AMODE[:LTRemote]:STEP<no> [:ENABLE]	789
12.33.28	ETHERnet:TTTest:SETup:WSCan:AMODE:RTLocal:STEP<no>[:ENABLE]	790
12.33.29	ETHERnet:TTTest:SETup:WSCan:EMODE[:LTRemote]:STEP<no> [:ENABLE]	790
12.33.30	ETHERnet:TTTest:SETup:WSCan:EMODE[:LTRemote]:STEP<no>:WSIZE	790
12.33.31	ETHERnet:TTTest:SETup:WSCan:EMODE[:LTRemote]:STEP<no> :CONNECTIONS	791
12.33.32	ETHERnet:TTTest:SETup:WSCan:EMODE:RTLocal:STEP<no>[:ENABLE]	791
12.33.33	ETHERnet:TTTest:SETup:WSCan:EMODE:RTLocal:STEP<no>:WSIZE	792
12.33.34	ETHERnet:TTTest:SETup:WSCan:EMODE:RTLocal:STEP<no> :CONNECTIONS	792
12.33.35	ETHERnet:TTTest:SETup:TTEst[:LTRemote]:THRShold[:ENABLE]	792
12.33.36	ETHERnet:TTTest:SETup:TTEst[:LTRemote]:THRShold:PERcentage	793
12.33.37	ETHERnet:TTTest:SETup:TTEst[:LTRemote]:SDURATION	793
12.33.38	ETHERnet:TTTest:SETup:TTEst:RTLocal:THRShold[:ENABLE]	793
12.33.39	ETHERnet:TTTest:SETup:TTEst:RTLocal:THRShold:PERcentage	794
12.33.40	ETHERnet:TTTest:SETup:TTEst:RTLocal:SDURATION	794
12.33.41	ETHERnet:TTTest:SETup:TTEst:EMODE[:LTRemote][:ENABLE]	794
12.33.42	ETHERnet:TTTest:SETup:TTEst:EMODE[:LTRemote]:WSIZE	795
12.33.43	ETHERnet:TTTest:SETup:TTEst:EMODE[:LTRemote]:CONNECTIONS	795
12.33.44	ETHERnet:TTTest:SETup:TTEst:EMODE:RTLocal[:ENABLE]	795
12.33.45	ETHERnet:TTTest:SETup:TTEst:EMODE:RTLocal:WSIZE	796
12.33.46	ETHERnet:TTTest:SETup:TTEst:EMODE:RTLocal:CONNECTIONS	796
12.33.47	ETHERnet:TTTest:SETup:MSERvice[:ENABLE]	796
12.33.48	ETHERnet:TTTest:SETup:MSERvice[:LTRemote]:TDURATION	797
12.33.49	ETHERnet:TTTest:SETup:MSERvice[:LTRemote]:WSIZE	797
12.33.50	ETHERnet:TTTest:SETup:MSERvice[:LTRemote]:WSIZE:AUTO	797
12.33.51	ETHERnet:TTTest:SETup:MSERvice:RTLocal:TDURATION	798
12.33.52	ETHERnet:TTTest:SETup:MSERvice:RTLocal:WSIZE	798
12.33.53	ETHERnet:TTTest:SETup:MSERvice:RTLocal:WSIZE:AUTO	798
12.33.54	ETHERnet:TTTest:SETup:MSERvice:SERVICE<no>[:ENABLE]	799
12.33.55	ETHERnet:TTTest:SETup:MSERvice:SERVICE<no>:DPORT	799
12.33.56	ETHERnet:TTTest:SETup:MSERvice:SERVICE<no>:DOT	799

12.33.57	ETHERnet:TTTest:SETup:MSERvice:SERvice<no>:TCLass	800
12.33.58	ETHERnet:TTTest:SETup:MSERvice:SERvice<no>:FLABel	800
12.33.59	ETHERnet:TTTest:SETup:MSERvice:SERvice<no>:NAME	800
12.33.60	ETHERnet:TTTest:RESult:PARAmeters?	801
12.33.61	ETHERnet:TTTest:RESult:WSCan?	801
12.33.62	ETHERnet:TTTest:RESult:THRoughput?	802
12.33.63	ETHERnet:TTTest:RESult:THRoughput:EXPort	802
12.33.64	ETHERnet:TTTest:RESult:MSERvice?	803
12.33.65	ETHERnet:TTTest:RESult:MSERvice:TOTal?	803
12.33.66	ETHERnet:TTTest:RESult:MSERvice:EXPort	804
13	eCPRI/RoE BERT	805
13.1	Port Setup	805
13.1.1	ETHERnet:PORT<Pt>:DPIConstraint	805
13.2	PCS	805
13.3	Traffic	805
13.4	Settings	805
13.5	Thresholds	806
13.6	SyncE	806
13.7	Precision Time Protocol - IEEE 1588v2	806
13.8	Follow	806
13.9	Stimuli	806
13.10	Result	806
13.11	Status	806
13.12	Frame Content	807
13.12.1	ETHERnet:PORT<Pt>:STReam<St>:RFRame	807
13.12.2	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:MESSage	807
13.12.3	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:MVAL	808
13.12.4	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:LENGth	808
13.12.5	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:IQData:PCID	808
13.12.6	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:IQData:SEQId	809
13.12.7	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:BITSeq:PCID	809
13.12.8	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:BITSeq:SEQId	809
13.12.9	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:RTCDData:PCID	810
13.12.10	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:RTCDData:SEQId	810
13.12.11	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:GDTRans:PCID	810
13.12.12	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:GDTRans:SEQId	811
13.12.13	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:RMACess:ACID	811
13.12.14	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:RMACess:RW	811
13.12.15	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:RMACess:RRESp	812
13.12.16	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:RMACess:ELID	812
13.12.17	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:RMACess:ADDRes	813
13.12.18	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:RMACess:LENGth	813
13.12.19	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:OWDMeas:MESId	813
13.12.20	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:OWDMeas:ACTType	814
13.12.21	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:OWDMeas:TSTamp	814
13.12.22	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:OWDMeas:CVALue	814
13.12.23	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:RRESet:REID	815
13.12.24	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:RRESet:COPTion	815
13.12.25	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:CDATa	816
13.12.26	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:CLENGth	816
13.12.27	ETHERnet:PORT<Pt>:STReam<St>:ECPRi:CENable	816
13.12.28	ETHERnet:PORT<Pt>:STReam<St>:ROE:SUBType	817
13.12.29	ETHERnet:PORT<Pt>:STReam<St>:ROE:SVALue	817
13.12.30	ETHERnet:PORT<Pt>:STReam<St>:ROE:FLID	817
13.12.31	ETHERnet:PORT<Pt>:STReam<St>:ROE:LENGth	818
13.12.32	ETHERnet:PORT<Pt>:STReam<St>:ROE:OINFo	818
13.12.33	ETHERnet:PORT<Pt>:STReam<St>:ROE:CONTRol:OPCode	818
13.12.34	ETHERnet:PORT<Pt>:STReam<St>:ROE:CDATa	819

13.12.35	ETHERnet:PORT<Pt>:STReam<St>:ROE:CLENgth	819
13.12.36	ETHERnet:PORT<Pt>:STReam<St>:ROE:CENable	819
14	Fibre Channel	821
14.1	Port	821
14.1.1	FCHannel:PORT<Pt>:MODE	821
14.1.2	FCHannel:TX<Pt>:TIMing	821
14.2	Interface	822
14.2.1	FCHannel:PORT<Pt>:TOPology	822
14.2.2	FCHannel:PORT<Pt>:PTP:LOGin	822
14.2.3	FCHannel:PORT<Pt>:FABRic:LOGin	822
14.2.4	FCHannel:PORT<Pt>:EPORt:ELP	823
14.2.5	FCHannel:PORT<Pt>:FCONtrol[:ENABLE]	823
14.2.6	FCHannel:PORT<Pt>:FCONtrol:LCredit	823
14.2.7	FCHannel:PORT<Pt>:FCONtrol:RCredit	823
14.2.8	FCHannel:PORT<Pt>:SOURce:WWN	824
14.2.9	FCHannel:PORT<Pt>:SOURce:WWN:DEFault	824
14.2.10	FCHannel:PORT<Pt>:SOURce:ID	824
14.2.11	FCHannel:PORT<Pt>:DESTination:WWN	825
14.2.12	FCHannel:PORT<Pt>:DESTination:ID	825
14.2.13	FCHannel:PORT<Pt>:DESTination:LOGin	825
14.3	Frame	826
14.3.1	FCHannel:PORT<Pt>:FRAME:FRAMing	826
14.3.2	FCHannel:PORT<Pt>:FRAME:CONTent	826
14.3.3	FCHannel:PORT<Pt>:FRAME:UP32	827
14.3.4	FCHannel:PORT<Pt>:FRAME:HEADer:SID	827
14.3.5	FCHannel:PORT<Pt>:FRAME:HEADer:OID	827
14.3.6	FCHannel:PORT<Pt>:FRAME:HEADer:RID	828
14.4	Generator	828
14.4.1	FCHannel:PORT<Pt>:TRAFfic:DMODE	828
14.4.2	FCHannel:PORT<Pt>:TRAFfic:DSEConds	828
14.4.3	FCHannel:PORT<Pt>:TRAFfic:DFRames	829
14.4.4	FCHannel:PORT<Pt>:TRAFfic:ASTGenerator	829
14.4.5	FCHannel:TRAFfic:GENerator:START	829
14.4.6	FCHannel:TRAFfic:GENerator:STOP	830
14.4.7	FCHannel:PORT<Pt>:TRAFfic:GENerator:START	830
14.4.8	FCHannel:PORT<Pt>:TRAFfic:GENerator:STOP	830
14.4.9	FCHannel:PORT<Pt>:TRAFfic:GENerator:STATus?	830
14.5	Stream	830
14.5.1	FCHannel:PORT<Pt>:TRAFfic:STReam:LLOad:PROFile	830
14.5.2	FCHannel:PORT<Pt>:TRAFfic:STReam:LLOad[:CONStant]	831
14.5.3	FCHannel:PORT<Pt>:TRAFfic:STReam:LLOad:RAMP[:MODE]	831
14.5.4	FCHannel:PORT<Pt>:TRAFfic:STReam:LLOad:RAMP:START	831
14.5.5	FCHannel:PORT<Pt>:TRAFfic:STReam:LLOad:RAMP:END	832
14.5.6	FCHannel:PORT<Pt>:TRAFfic:STReam:LLOad:RAMP:STEP	832
14.5.7	FCHannel:PORT<Pt>:TRAFfic:STReam:LLOad:RAMP:DURation	832
14.5.8	FCHannel:PORT<Pt>:TRAFfic:STReam:FSIZE	833
14.5.9	FCHannel:PORT<Pt>:TRAFfic:STReam:LATency[:ENABLE]	833
14.5.10	FCHannel:PORT<Pt>:TRAFfic:STReam:LATency:THResholds[:ENABLE]	833
14.5.11	FCHannel:PORT<Pt>:TRAFfic:STReam:LATency:THResholds:VALue	834
14.5.12	FCHannel:PORT<Pt>:TRAFfic:STReam:JITTer[:ENABLE]	834
14.5.13	FCHannel:PORT<Pt>:TRAFfic:STReam:JITTer:THResholds[:ENABLE]	834
14.5.14	FCHannel:PORT<Pt>:TRAFfic:STReam:JITTer:THResholds:VALue	835
14.5.15	FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure[:ENABLE]	835
14.5.16	FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure:MDISruption	835
14.5.17	FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure:THResholds[:ENABLE]	836
14.5.18	FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure:THResholds:VALue	836

14.6	Settings	837
14.6.1	FCHannel:PORT<Pt>:SETTings:BER:OBAMeasuring	837
14.6.2	FCHannel:PORT<Pt>:SETTings:BER:IAFFilter	837
14.6.3	FCHannel:PORT<Pt>:SETTings:BER:CLFrames	837
14.6.4	FCHannel:PORT<Pt>:SETTings:BER:HIDEframeLoss	838
14.7	Thresholds	839
14.7.1	FCHannel:PORT<Pt>:THResholds[:ENABle]	839
14.7.2	FCHannel:PORT<Pt>:THResholds:SElect	839
14.7.3	FCHannel:PORT<Pt>:THResholds:VALue	840
14.8	Follow	840
14.8.1	FCHannel:PORT<Pt>:FOLLow:GENerator	840
14.8.2	FCHannel:PORT<Pt>:FOLLow:THResholds	841
14.8.3	FCHannel:PORT<Pt>:FOLLow:FRAME	841
14.8.4	FCHannel:PORT<Pt>:FOLLow:STReam	841
14.9	Stimuli	842
14.9.1	FCHannel:PORT<Pt>:STIMuli:ALARm	842
14.9.2	FCHannel:PORT<Pt>:STIMuli:ERRor	842
14.9.3	FCHannel:PORT<Pt>:STIMuli:EINSection	843
14.9.4	FCHannel:PORT<Pt>:STIMuli:EBLength	843
14.9.5	FCHannel:PORT<Pt>:STIMuli:FOFFset	844
14.10	Results	845
14.10.1	FCHannel:PORT<Pt>:IFETch?	845
14.10.2	FCHannel:PORT<Pt>:TFETch?	846
14.11	Status	847
14.11.1	FCHannel:STATus:PORT<Pt>:AESummary[:EVENT]?	847
14.11.2	FCHannel:STATus:PORT<Pt>:AESummary:CONDition?	847
14.11.3	FCHannel:STATus:PORT<Pt>:ALARm[:EVENT]?	847
14.11.4	FCHannel:STATus:PORT<Pt>:ALARm:CONDition?	848
14.11.5	FCHannel:STATus:PORT<Pt>:ERRor[:EVENT]?	848
14.11.6	FCHannel:STATus:PORT<Pt>:ERRor:CONDition?	848
14.11.7	FCHannel:STATus:PORT<Pt>:SID?	848
14.11.8	FCHannel:STATus:PORT<Pt>:DID?	848
14.11.9	FCHannel:STATus:PORT<Pt>:PDEViation?	849
14.12	Performance Test	850
14.12.1	FCHannel:PERF:STARt	850
14.12.2	FCHannel:PERF:STOP	850
14.12.3	FCHannel:PERF:SETup:GENeral:MODE	850
14.12.4	FCHannel:PERF:SETup:GENeral:TSElection	850
14.12.5	FCHannel:PERF:SETup:GENeral:TCLayer	851
14.12.6	FCHannel:PERF:SETup:GENeral:TTPe	851
14.12.7	FCHannel:PERF:SETup:FSIZE:MODE	852
14.12.8	FCHannel:PERF:SETup:FSIZE:USER	852
14.12.9	FCHannel:PERF:SETup:FSIZE:JUMBo	852
14.12.10	FCHannel:PERF:SETup:FSIZE:BEGIN	853
14.12.11	FCHannel:PERF:SETup:FSIZE:END	853
14.12.12	FCHannel:PERF:SETup:FSIZE:STEP	853
14.12.13	FCHannel:PERF:SETup:FSIZE:CONStant	854
14.12.14	FCHannel:PERF:SETup:PORT<Pt>:THRoughput:LLoad:MAXimum	854
14.12.15	FCHannel:PERF:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch :MODE	855
14.12.16	FCHannel:PERF:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch :RESolution	855
14.12.17	FCHannel:PERF:SETup:PORT<Pt>:THRoughput:DURation:STEP	855
14.13	Performance Test - Traffic Profile	857
14.13.1	FCHannel:PERF:SETup:PORT<Pt>:PROFile:LLoad:MINimum	857
14.13.2	FCHannel:PERF:SETup:PORT<Pt>:PROFile:LLoad:MAXimum	857
14.13.3	FCHannel:PERF:SETup:PORT<Pt>:PROFile:LLoad:STEP	858
14.13.4	FCHannel:PERF:SETup:PORT<Pt>:PROFile:DURation:STEP	858
14.14	Performance Test - Latency	859

14.14.1	FCHannel:PERF:SETup:PORT<Pt>:LATency:DURation:STEP	859
14.15	Performance Test - Burst	860
14.15.1	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:MODE	860
14.15.2	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:BEGin	860
14.15.3	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:END	860
14.15.4	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:STEP	861
14.15.5	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:MODE	861
14.15.6	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:RESolution	862
14.16	Performance Test - Credit	863
14.16.1	FCHannel:PERF:SETup:PORT<Pt>:CREDit:MODE	863
14.16.2	FCHannel:PERF:SETup:PORT<Pt>:CREDit:BEGin	863
14.16.3	FCHannel:PERF:SETup:PORT<Pt>:CREDit:END	863
14.16.4	FCHannel:PERF:SETup:PORT<Pt>:CREDit:STEP	864
14.16.5	FCHannel:PERF:SETup:PORT<Pt>:CREDit:ASEarch:MODE	864
14.16.6	FCHannel:PERF:SETup:PORT<Pt>:CREDit:ASEarch:RESolution	864
14.16.7	FCHannel:PERF:SETup:PORT<Pt>:CREDit:DURation:STEP	865
14.17	Performance Test - Result	866
14.17.1	FCHannel:PERF:RESult:TEST	866
14.17.2	FCHannel:PERF:RESult:PORT<Pt>:NSTep?	866
14.17.3	FCHannel:PERF:RESult:PORT<Pt>:SElect	866
14.17.4	FCHannel:PERF:RESult:PORT<Pt>:FETCh?	867
15	OTN	869
15.1	Transmitter	869
15.1.1	OTN:TX<Pt>:INTerface	869
15.1.2	OTN:TX<Pt>:[:ENABled]	869
15.1.3	OTN:TX<Pt>:TIMing	870
15.1.4	OTN:TX<Pt>:MAPPing:CSIGnal	870
15.1.5	OTN:TX<Pt>:PATtern	872
15.1.6	OTN:TX<Pt>:PINVersion	872
15.1.7	OTN:TX<Pt>:UP32	872
15.1.8	OTN:TX<Pt>:UP2K	873
15.1.9	OTN:TX<Pt>:MAPPing:OUTPutsignal	873
15.1.10	OTN:TX<Pt>:FEC	874
15.1.11	OTN:TX<Pt>:MAPPing:MULTiplexing<stage>	874
15.1.12	OTN:TX<Pt>:MAPPing:LANE	875
15.1.13	OTN:TX<Pt>:COPY	875
15.1.14	OTN:TX<Pt>:CSF	876
15.1.15	OTN:TX<Pt>:FOLLow	877
15.1.16	OTN:OH:TX<Pt>:OTN:OH	877
15.1.17	OTN:OH:TX<Pt>:OTN:OH:DEFault	878
15.1.18	OTN:TX<Pt>:TP	878
15.1.19	OTN:TX<Pt>:TS	880
15.1.20	OTN:TX<Pt>:ODUFlex:TS	881
15.1.21	OTN:TX<Pt>:ALLocated	882
15.1.22	OTN:TX<Pt>:GFP:PTI	883
15.1.23	OTN:TX<Pt>:GFP:PFI	883
15.1.24	OTN:TX<Pt>:GFP:EXI	883
15.1.25	OTN:TX<Pt>:GFP:UPI	884
15.1.26	OTN:TX<Pt>:GFP:EXTHeader:CID	884
15.1.27	OTN:TX<Pt>:GFP:EXTHeader:SPARe	884
15.1.28	OTN:TX<Pt>:GFP:PTIMes	885
15.2	Receiver	886
15.2.1	OTN:RX<Pt>:INTerface	886
15.2.2	OTN:RX<Pt>:MAPPing:CSIGnal	886
15.2.3	OTN:RX<Pt>:PATtern	888
15.2.4	OTN:RX<Pt>:PINVersion	888
15.2.5	OTN:RX<Pt>:UP32	888
15.2.6	OTN:RX<Pt>:UP2K	889

15.2.7	OTN:RX<Pt>:MAPPING:INPUTsignal	889
15.2.8	OTN:RX<Pt>:MAPPING:MULTiplexing<stage>	890
15.2.9	OTN:RX<Pt>:FEC	890
15.2.10	OTN:RX<Pt>:FOLLOW	891
15.2.11	OTN:RX<Pt>:TP	891
15.2.12	OTN:RX<Pt>:TS	892
15.2.13	OTN:RX<Pt>:ODUFlex:TS	893
15.2.14	OTN:RX<Pt>:TPTS:DETect	894
15.2.15	OTN:RX<Pt>:MEAS:TTI:DET	895
15.3	Measurement Setup	896
15.3.1	OTN:TX<Pt>:MEAS:TTI:ENCoding	896
15.3.2	OTN:RX<Pt>:MEAS:TCM:ENABLE	896
15.3.3	OTN:RX<Pt>:MEASurement:PLM	897
15.3.4	MEASurement:SETup:OTN:RX<Pt>:MSIMdetection<stage>:SETup	897
15.3.5	MEASurement:SETup:OTN:RX<Pt>:MSIMdetection<stage>:MSIM?	898
15.3.6	MEASurement:SETup:PERformance:OTN:RX<Pt>:PARAMeter	898
15.3.7	MEASurement:SETup:PERformance:OTN:RX<Pt>:ALLocation	899
15.3.8	MEASurement:SETup:PERformance:OTN:TPERiod	899
15.3.9	MEASurement:SETup:PERformance:OTN:RX<Pt>:OBJectives	900
15.4	Result	901
15.4.1	OTN:RX<Pt>:IFETch?	901
15.5	Status	904
15.5.1	OTN:STATus:RX<Pt>:AESummary[:EVENT]?	904
15.5.2	OTN:STATus:RX<Pt>:AESummary:CONDition?	904
15.5.3	OTN:STATus:RX<Pt>:ALARm<section>[:EVENT]?	904
15.5.4	OTN:STATus:RX<Pt>:ALARm<section>:CONDition?	905
15.5.5	OTN:STATus:RX<Pt>:ERRor<section>[:EVENT]?	905
15.5.6	OTN:STATus:RX<Pt>:ERRor<section>:CONDition?	907
15.5.7	OTN:STATus:RX<Pt>:MSTage:AESummary[:EVENT]?	907
15.5.8	OTN:STATus:RX<Pt>:MSTage:AESummary:CONDition?	907
15.5.9	OTN:STATus:RX<Pt>:OTU:ASUMmary[:EVENT]?	909
15.5.10	OTN:STATus:RX<Pt>:OTU:ASUMmary:CONDition?	909
15.5.11	OTN:STATus:RX<Pt>:OTU:ESUMmary[:EVENT]?	909
15.5.12	OTN:STATus:RX<Pt>:OTU:ESUMmary:CONDition?	909
15.5.13	OTN:STATus:RX<Pt>:OTU:ALARm<section>[:EVENT]?	910
15.5.14	OTN:STATus:RX<Pt>:OTU:ALARm<section>:CONDition?	910
15.5.15	OTN:STATus:RX<Pt>:OTU:ERRor<section>[:EVENT]?	911
15.5.16	OTN:STATus:RX<Pt>:OTU:ERRor<section>:CONDition?	912
15.5.17	OTN:STATus:RX<Pt>:SONE:ASUMmary[:EVENT]?	913
15.5.18	OTN:STATus:RX<Pt>:SONE:ASUMmary:CONDition?	913
15.5.19	OTN:STATus:RX<Pt>:SONE:ESUMmary[:EVENT]?	913
15.5.20	OTN:STATus:RX<Pt>:SONE:ESUMmary:CONDition?	913
15.5.21	OTN:STATus:RX<Pt>:SONE:ALARm<section>[:EVENT]?	914
15.5.22	OTN:STATus:RX<Pt>:SONE:ALARm<section>:CONDition?	914
15.5.23	OTN:STATus:RX<Pt>:SONE:ERRor<section>[:EVENT]?	915
15.5.24	OTN:STATus:RX<Pt>:SONE:ERRor<section>:CONDition?	915
15.5.25	OTN:STATus:RX<Pt>:STWO:ASUMmary[:EVENT]?	916
15.5.26	OTN:STATus:RX<Pt>:STWO:ASUMmary:CONDition?	916
15.5.27	OTN:STATus:RX<Pt>:STWO:ESUMmary[:EVENT]?	916
15.5.28	OTN:STATus:RX<Pt>:STWO:ESUMmary:CONDition?	916
15.5.29	OTN:STATus:RX<Pt>:STWO:ALARm<section>[:EVENT]?	917
15.5.30	OTN:STATus:RX<Pt>:STWO:ALARm<section>:CONDition?	917
15.5.31	OTN:STATus:RX<Pt>:STWO:ERRor<section>[:EVENT]?	917
15.5.32	OTN:STATus:RX<Pt>:STWO:ERRor<section>:CONDition?	917
15.5.33	OTN:STATus:RX<Pt>:STHRee:ASUMmary[:EVENT]?	918
15.5.34	OTN:STATus:RX<Pt>:STHRee:ASUMmary:CONDition?	918
15.5.35	OTN:STATus:RX<Pt>:STHRee:ESUMmary[:EVENT]?	918
15.5.36	OTN:STATus:RX<Pt>:STHRee:ESUMmary:CONDition?	918
15.5.37	OTN:STATus:RX<Pt>:STHRee:ALARm<section>[:EVENT]?	919

15.5.38	OTN:STATus:RX<Pt>:STHRee:ALARm<section>:CONDition?	919
15.5.39	OTN:STATus:RX<Pt>:STHRee:ERRor<section>[:EVENT]?	919
15.5.40	OTN:STATus:RX<Pt>:STHRee:ERRor<section>:CONDition?	919
15.5.41	OTN:STATus:RX<Pt>:CLient:ASUMmary[:EVENT]?	920
15.5.42	OTN:STATus:RX<Pt>:CLient:ASUMmary:CONDition?	920
15.5.43	OTN:STATus:RX<Pt>:CLient:ESUMmary[:EVENT]?	920
15.5.44	OTN:STATus:RX<Pt>:CLient:ESUMmary:CONDition?	920
15.5.45	OTN:STATus:RX<Pt>:CLient:ALARm<section>[:EVENT]?	921
15.5.46	OTN:STATus:RX<Pt>:CLient:ALARm<section>:CONDition?	921
15.5.47	OTN:STATus:RX<Pt>:CLient:ERRor<section>[:EVENT]?	922
15.5.48	OTN:STATus:RX<Pt>:CLient:ERRor<section>:CONDition?	922
15.5.49	OTN:STATus:RX<Pt>:PSLevel?	922
15.5.50	OTN:STATus:TX<Pt>:PSLevel?	923
15.5.51	OTN:STATus:RX<Pt>:FREQuency?	923
15.5.52	OTN:STATus:TX<Pt>:FREQuency?	923
15.5.53	OTN:STATus:RX<Pt>:CAPTure:OH?	924
15.6	Stimuli	925
15.6.1	OTN:STIMuli:TX<Pt>:TYPE	925
15.6.2	OTN:STIMuli:TX<Pt>:AEINsert:LEVel	925
15.6.3	OTN:STIMuli:TX<Pt>:AEINsert:TYPE	926
15.6.4	OTN:STIMuli:TX<Pt>:AEINsert:INSert	927
15.6.5	OTN:STIMuli:TX<Pt>:AEINsert:BURSt	927
15.6.6	OTN:STIMuli:TX<Pt>:AEINsert:AERRor	927
15.6.7	OTN:STIMuli:TX<Pt>:AEINsert:NORMal	928
15.6.8	OTN:STIMuli:TX<Pt>:AEINsert:RATE	928
15.6.9	OTN:STIMuli:TX<Pt>:JUSTification:LEVel	929
15.6.10	OTN:STIMuli:TX<Pt>:JUSTification:BURSt	929
15.6.11	OTN:STIMuli:TX<Pt>:JUSTification:MOVement	930
15.6.12	OTN:STIMuli:TX<Pt>:JMOVE	930
15.6.13	OTN:STIMuli:TX<Pt>:FREQuency:OFFSet	930
15.6.14	OTN:STIMuli:TX<Pt>:PAYLoad:OFFSet<stage>	931
15.6.15	OTN:STIMuli:TX<Pt>:GMP:AEINsert:LEVel	931
15.6.16	OTN:STIMuli:TX<Pt>:GMP:AEINsert:TYPE	932
15.6.17	OTN:STIMuli:TX<Pt>:GMP:AEINsert:INSert	932
15.6.18	OTN:STIMuli:TX<Pt>:GMP:AEINsert:EBITs	932
15.6.19	OTN:STIMuli:TX<Pt>:GFP:AEINsert:TYPE	933
15.6.20	OTN:STIMuli:TX<Pt>:GFP:AEINsert:INSert	933
15.6.21	OTN:STIMuli:TX<Pt>:GFP:AEINsert:EBITs	934
15.6.22	OTN:STIMuli:TX<Pt>:GFP:AEINsert:BURSt	934
15.6.23	OTN:STIMuli:TX<Pt>:GFP:AEINsert:CMF:INTerval	934
15.6.24	OTN:STIMuli:TX<Pt>:FEC:AEINsert:TYPE	935
15.6.25	OTN:STIMuli:TX<Pt>:FEC:AEINsert:INSert	935
15.6.26	OTN:STIMuli:TX<Pt>:FEC:AEINsert:RMANtissa	935
15.6.27	OTN:STIMuli:TX<Pt>:FEC:AEINsert:REXPnent	936
15.6.28	OTN:STIMuli:TX<Pt>:FEC:AEINsert:EFAS	936
15.6.29	OTN:STIMuli:TX<Pt>:FEC:AEINsert:SUBRow	937
15.6.30	OTN:STIMuli:TX<Pt>:LLD:AEINsert:TYPE	937
15.6.31	OTN:STIMuli:TX<Pt>:LLD:AEINsert:ALARm	937
15.6.32	OTN:STIMuli:TX<Pt>:LLD:AEINsert:ERRor	938
15.6.33	OTN:STIMuli:TX<Pt>:LLD:AEINsert:INSert	938
15.6.34	OTN:STIMuli:TX<Pt>:LLD:AEINsert:BURSt	938
15.6.35	OTN:STIMuli:TX<Pt>:LLD:AEINsert:AERRor	939
15.6.36	OTN:STIMuli:TX<Pt>:LLD:AEINsert:NORMal	939
15.6.37	OTN:STIMuli:TX<Pt>:LLD:AEINsert:LANE	939
15.6.38	OTN:STIMuli:TX<Pt>:LLD:SKEW:LANE	940
15.6.39	OTN:STIMuli:TX<Pt>:LLD:SKEW:BIT	940
15.6.40	OTN:STIMuli:TX<Pt>:LLD:SKEW:TYPE	941
15.7	Tributary Scan	942
15.7.1	OTN:TSCan:STARt	942

15.7.2	OTN:TSCan:STOP	942
15.7.3	OTN:TSCan:RX<Pt>:ODU2:NUMBER?	942
15.7.4	OTN:TSCan:RX<Pt>:ODU2:GET?	942
15.7.5	OTN:TSCan:RX<Pt>:ODU2:DETailed?	942
15.7.6	OTN:TSCan:RX<Pt>:ODU1:NUMBER?	943
15.7.7	OTN:TSCan:RX<Pt>:ODU1:GET?	943
15.7.8	OTN:TSCan:RX<Pt>:ODU1:SCANning	943
15.7.9	OTN:TSCan:RX<Pt>:ODU1:DETailed?	943
15.7.10	OTN:TSCan:RX<Pt>:ODU0:NUMBER?	944
15.7.11	OTN:TSCan:RX<Pt>:ODU0:GET?	944
15.7.12	OTN:TSCan:RX<Pt>:ODU0:DETailed?	944
15.8	APS	945
15.8.1	OTN:APS:RX<Pt>:BEVent	945
15.8.2	OTN:APS:RX<Pt>:EEVent	946
15.8.3	OTN:APS:RX<Pt>:PERiod	946
15.8.4	OTN:APS:RX<Pt>:MLIMit	947
15.8.5	OTN:APS:STARt	947
15.8.6	OTN:APS:STOP	947
15.8.7	OTN:APS:RX<Pt>:NUMBER?	947
15.8.8	OTN:APS:RX<Pt>:MTIME?	948
15.8.9	OTN:APS:RX<Pt>:LTIME?	948
15.8.10	OTN:APS:RX<Pt>:ATIME?	948
15.8.11	OTN:APS:RX<Pt>:CTIME?	948
15.9	RTD	949
15.9.1	OTN:RTD:RX<Pt>:MLIMit	949
15.9.2	OTN:RTD:RX<Pt>:NUMBER?	949
15.9.3	OTN:RTD:RX<Pt>:ATIME?	949
15.9.4	OTN:RTD:RX<Pt>:MTIME?	949
15.9.5	OTN:RTD:RX<Pt>:LTIME?	950
15.9.6	OTN:RTD:RX<Pt>:CTIME?	950
16	Pluggable Module	951
16.1	Status	951
16.1.1	PMODule:STATus:PORT<Pt>:PRESent?	951
16.1.2	PMODule:STATus:PORT<Pt>:VENDor?	951
16.1.3	PMODule:STATus:PORT<Pt>:WAVelength?	951
16.1.4	PMODule:STATus:PORT<Pt>:BRATe?	951
16.1.5	PMODule:STATus:PORT<Pt>:COMPLiance?	952
16.1.6	PMODule:STATus:PORT<Pt>:PNUMBER?	952
16.1.7	PMODule:STATus:PORT<Pt>:REVision?	952
16.1.8	PMODule:STATus:PORT<Pt>:SNUMBER?	952
16.1.9	PMODule:STATus:PORT<Pt>:DATE?	952
16.1.10	PMODule:STATus:PORT<Pt>:LOT?	952
16.1.11	PMODule:STATus:PORT<Pt>:TPower?	953
16.1.12	PMODule:STATus:PORT<Pt>:RPower?	953
16.1.13	PMODule:STATus:PORT<Pt>:STATus?	953
16.1.14	PMODule:STATus:PORT<Pt>:GALarm?	953
16.1.15	PMODule:STATus:PORT<Pt>:PALarm?	953
16.1.16	PMODule:STATus:PORT<Pt>:AESummary[:EVENT]?	953
16.1.17	PMODule:STATus:PORT<Pt>:AESummary:CONDition?	954
16.1.18	PMODule:STATus:PORT<Pt>:ALARm[:EVENT]?	954
16.1.19	PMODule:STATus:PORT<Pt>:ALARm:CONDition?	954
16.2	MDIO	955
16.2.1	PMODule:PORT<Pt>:MDIO:WRITe	955
16.2.2	PMODule:PORT<Pt>:MDIO:READ?	955
16.3	I2C	955
16.3.1	PMODule:PORT<Pt>:I2C:WRITe	955
16.3.2	PMODule:PORT<Pt>:I2C:READ?	956
16.4	CFP2-QSFP28 Adaptor	956

16.4.1	PMODule:PORT<Pt>:MDIO:ADPT:WRITe	956
16.4.2	PMODule:PORT<Pt>:MDIO:ADPT:READ?	956
16.5	Tx reference clock output	956
16.5.1	PMODule:TOUTput:PORT<Pt>[:ENABLE]	956
16.5.2	PMODule:TOUTput:PORT<Pt>:FREQuency	957
16.5.3	PMODule:TOUTput:PORT<Pt>:SYNC:FREQuency	957
16.6	tunable SFP	958
16.6.1	PMODule:PORT<Pt>:TSFP:CHANnel	958
16.6.2	PMODule:PORT<Pt>:TSFP:CHANnel?	958
16.6.3	PMODule:PORT<Pt>:TSFP:WLENgth	958
16.6.4	PMODule:PORT<Pt>:TSFP:WLENgth?	958
16.7	Transceiver settings - CFP2-QSFP28 Adaptor	959
16.7.1	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:ATTN:TRACking	959
16.7.2	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:ATTN	959
16.7.3	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:PRE:TRACking	959
16.7.4	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:PRE	960
16.7.5	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:POST:TRACking	960
16.7.6	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:POST	960
16.7.7	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:EAUTo	961
16.7.8	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:EQUalizer:TRACking	961
16.7.9	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:EQUalizer	961
16.7.10	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:RESTore	962
16.7.11	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:AUTotune	962
16.7.12	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:DEFault	962
16.8	Transceiver settings - CFP2	963
16.8.1	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:ATTN:TRACking	963
16.8.2	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:ATTN	963
16.8.3	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:PRE:TRACking	963
16.8.4	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:PRE	964
16.8.5	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:POST:TRACking	964
16.8.6	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:POST	964
16.8.7	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:EAUTo	965
16.8.8	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:EQUalizer:TRACking	965
16.8.9	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:EQUalizer	965
16.8.10	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:RESTore	966
16.8.11	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:AUTotune	966
16.8.12	PMODule:PORT<Pt>:TRANsceiver:CFP2:DEFault	966
16.9	Transceiver settings - CXP	967
16.9.1	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:VOD:TRACking	967
16.9.2	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:VOD	967
16.9.3	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:FIRSt:TRACking	967
16.9.4	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:FIRSt	968
16.9.5	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:PRE:TRACking	968
16.9.6	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:PRE	968
16.9.7	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:SECond:TRACking	969
16.9.8	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:SECond	969
16.9.9	PMODule:PORT<Pt>:TRANsceiver:CXP:RX:CONTRol:TRACking	969
16.9.10	PMODule:PORT<Pt>:TRANsceiver:CXP:RX:CONTRol	970
16.9.11	PMODule:PORT<Pt>:TRANsceiver:CXP:RX:DCGain:TRACking	970
16.9.12	PMODule:PORT<Pt>:TRANsceiver:CXP:RX:DCGain	971
16.9.13	PMODule:PORT<Pt>:TRANsceiver:CXP:DEFault	971
16.10	Transceiver settings - CFP	972
16.10.1	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:VOD:TRACking	972
16.10.2	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:VOD	972
16.10.3	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:FIRSt:TRACking	972
16.10.4	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:FIRSt	973
16.10.5	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:PRE:TRACking	973
16.10.6	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:PRE	973
16.10.7	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:SECond:TRACking	974

16.10.8	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:SECond	974
16.10.9	PMODule:PORT<Pt>:TRANsceiver:CFP:RX:CONTRol:TRACking	975
16.10.10	PMODule:PORT<Pt>:TRANsceiver:CFP:RX:CONTRol	975
16.10.11	PMODule:PORT<Pt>:TRANsceiver:CFP:RX:DCGain:TRACking	975
16.10.12	PMODule:PORT<Pt>:TRANsceiver:CFP:RX:DCGain	976
16.10.13	PMODule:PORT<Pt>:TRANsceiver:CFP:DEFAult	976
16.11	Transceiver settings - QSFP	977
16.11.1	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:VOD:TRACking	977
16.11.2	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:VOD	977
16.11.3	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:FIRSt:TRACking	977
16.11.4	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:FIRSt	978
16.11.5	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:PRE:TRACking	978
16.11.6	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:PRE	978
16.11.7	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:SECond:TRACking	979
16.11.8	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:SECond	979
16.11.9	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:CONTRol:TRACking	979
16.11.10	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:CONTRol	980
16.11.11	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DCGain:TRACking	980
16.11.12	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DCGain	980
16.11.13	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:POST:TRACking	981
16.11.14	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:POST	981
16.11.15	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DFE:TRACking	981
16.11.16	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DFE	982
16.11.17	PMODule:PORT<Pt>:TRANsceiver:QSFP:DEFAult	982
16.12	Transceiver settings - SFP28	983
16.12.1	PMODule:PORT<Pt>:TRANsceiver:SFP28:TX:VOD	983
16.12.2	PMODule:PORT<Pt>:TRANsceiver:SFP28:TX:PRE	983
16.12.3	PMODule:PORT<Pt>:TRANsceiver:SFP28:TX:POST	983
16.12.4	PMODule:PORT<Pt>:TRANsceiver:SFP28:RX:DFE	984
16.12.5	PMODule:PORT<Pt>:TRANsceiver:SFP28:DEFAult	984
16.13	Transceiver settings - CFP4	985
16.13.1	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:VOD:TRACking	985
16.13.2	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:VOD	985
16.13.3	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:PRE:TRACking	985
16.13.4	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:PRE	986
16.13.5	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:POST:TRACking	986
16.13.6	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:POST	987
16.13.7	PMODule:PORT<Pt>:TRANsceiver:CFP4:RX:DFE:TRACking	987
16.13.8	PMODule:PORT<Pt>:TRANsceiver:CFP4:RX:DFE	987
16.13.9	PMODule:PORT<Pt>:TRANsceiver:CFP4:DEFAult	988
16.14	Transceiver settings - QSFP28	989
16.14.1	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:VOD:TRACking	989
16.14.2	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:VOD	989
16.14.3	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:PRE:TRACking	989
16.14.4	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:PRE	990
16.14.5	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:POST:TRACking	990
16.14.6	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:POST	991
16.14.7	PMODule:PORT<Pt>:TRANsceiver:QSFP28:RX:DFE:TRACking	991
16.14.8	PMODule:PORT<Pt>:TRANsceiver:QSFP28:RX:DFE	991
16.14.9	PMODule:PORT<Pt>:TRANsceiver:QSFP28:DEFAult	992
16.15	Transceiver settings - QSFP-DD	993
16.15.1	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:VOD:TRACking	993
16.15.2	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:VOD	993
16.15.3	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE1:TRACking	993
16.15.4	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE1	994
16.15.5	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE2:TRACking	994
16.15.6	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE2	995
16.15.7	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:POST:TRACking	995
16.15.8	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:POST	995

16.15.9	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRECoding	996
16.15.10	PMODule:PORT<Pt>:TRANsceiver:QDD:DEFAult	996
16.15.11	PMODule:PORT<Pt>:CMIS:TUNing:GRDSpacing	996
16.15.12	PMODule:PORT<Pt>:CMIS:TUNing:GRDSpacing?	997
16.15.13	PMODule:PORT<Pt>:CMIS:TUNing:CHANnel	997
16.15.14	PMODule:PORT<Pt>:CMIS:TUNing:CHANnel?	997
16.15.15	PMODule:PORT<Pt>:CMIS:TUNing:FINe	997
16.15.16	PMODule:PORT<Pt>:CMIS:TUNing:FINe?	997
16.15.17	PMODule:PORT<Pt>:CMIS:TUNing:FINe:OFFSet	997
16.15.18	PMODule:PORT<Pt>:CMIS:TUNing:FINe:OFFSet?	998
16.15.19	PMODule:PORT<Pt>:CMIS:TUNing:FINe:RESolution?	998
16.15.20	PMODule:PORT<Pt>:CMIS:TUNing:FREQuency?	998
16.15.21	PMODule:PORT<Pt>:CMIS:TUNing:WAVelength?	998
16.16	Transceiver settings - OSFP	999
16.16.1	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:VOD:TRACking	999
16.16.2	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:VOD	999
16.16.3	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE1:TRACking	999
16.16.4	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE1	1000
16.16.5	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE2:TRACking	1000
16.16.6	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE2	1001
16.16.7	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:POST:TRACking	1001
16.16.8	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:POST	1001
16.16.9	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRECoding	1002
16.16.10	PMODule:PORT<Pt>:TRANsceiver:OSFP:DEFAult	1002
16.16.11	PMODule:PORT<Pt>:TRANsceiver:DISTurbance	1002
17	Common Application Settings	1003
17.1	RTD	1003
17.1.1	RTD:MODE	1003
17.1.2	RTD:PERiod	1003
17.1.3	RTD:IFMData	1004
17.1.4	RTD:PDH:RX<Pt>:MLMit	1004
17.2	Hierarchy	1005
17.2.1	HIERarchy:PORT<Pt>:OTN:TX	1005
17.2.2	HIERarchy:PORT<Pt>:OTN:RX	1005
17.2.3	HIERarchy:PORT<Pt>:SDH:TX	1005
17.2.4	HIERarchy:PORT<Pt>:SDH:RX	1006
17.2.5	HIERarchy:PORT<Pt>:PDH:TX	1006
17.2.6	HIERarchy:PORT<Pt>:PDH:RX	1006
18	Measurement	1009
18.1	Application, Start and Stop	1010
18.1.1	MEASurement:APPLication?	1010
18.1.2	MEASurement:STARt	1010
18.1.3	MEASurement:STOP	1011
18.2	Setup	1011
18.2.1	MEASurement:SETup:PORT<Pt>:TERMinology	1011
18.2.2	MEASurement:SETup:SElect	1011
18.2.3	MEASurement:SETup:ILENght	1012
18.2.4	MEASurement:SETup:STARt	1012
18.2.5	MEASurement:SETup:STAT	1013
18.2.6	MEASurement:SETup:STOP	1013
18.2.7	MEASurement:SETup:SPAT	1014
18.2.8	MEASurement:SETup:SDURation	1014
18.2.9	MEASurement:SETup:MALLocation	1015
18.2.10	MEASurement:SETup:PERFormance:TMBPs:PARAmeter	1015
18.2.11	MEASurement:SETup:PERFormance:T1:PARAmeter	1016
18.2.12	MEASurement:SETup:PERFormance:E3:PARAmeter	1016
18.2.13	MEASurement:SETup:PERFormance:T3:PARAmeter	1016
18.2.14	MEASurement:SETup:PERFormance:E4:PARAmeter	1017

18.2.15	MEASurement:SETup:PERFormance:SDH:PARAmeter	.1017
18.2.16	MEASurement:SETup:PERFormance:SDH:MUX	.1017
18.2.17	MEASurement:SETup:PERFormance:SDH:VC4	.1018
18.2.18	MEASurement:SETup:PERFormance:SDH:VC3	.1018
18.2.19	MEASurement:SETup:PERFormance:SDH:VC12	.1018
18.2.20	MEASurement:SETup:PERFormance:SDH:TPERiod	.1019
18.2.21	MEASurement:SETup:PERFormance:SONet:PARAmeter	.1019
18.2.22	MEASurement:SETup:PERFormance:SONet:MUX	.1020
18.2.23	MEASurement:SETup:PERFormance:SONet:STS3	.1020
18.2.24	MEASurement:SETup:PERFormance:SONet:STS1	.1020
18.2.25	MEASurement:SETup:PERFormance:SONet:VT2	.1021
18.2.26	MEASurement:SETup:PERFormance:SONet:TPERiod	.1021
18.2.27	MEASurement:SETup:PERFormance:WAN:PARAmeter	.1021
18.2.28	MEASurement:SETup:EVALuation:RX<Pt>[:ENABLE]	.1022
18.2.29	MEASurement:SETup:EVALuation:RX<Pt>:INTERface	.1022
18.2.30	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:ITEM	.1022
18.2.31	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:ITEM:ALARm	.1023
18.2.32	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:ITEM:ERRor	.1023
18.2.33	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:TYPE	.1024
18.2.34	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:CNT:PASS	.1024
18.2.35	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:CNT:FAIL	.1025
18.2.36	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:RATio:PASS	.1025
18.2.37	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:RATio:FAIL	.1025
18.2.38	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:ITEM	.1026
18.2.39	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:TYPE	.1026
18.2.40	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:CNT:PASS	.1027
18.2.41	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:CNT:FAIL	.1027
18.2.42	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:RATio:PASS	.1027
18.2.43	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:RATio:FAIL	.1028
18.2.44	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:PCT:PASS	.1028
18.2.45	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:PCT:FAIL	.1028
18.2.46	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:HREFerence	.1029
18.2.47	MEASurement:SETup:EVALuation:E3:RX<Pt>:ITEM	.1029
18.2.48	MEASurement:SETup:EVALuation:E3:RX<Pt>:TYPE	.1030
18.2.49	MEASurement:SETup:EVALuation:E3:RX<Pt>:CNT:PASS	.1030
18.2.50	MEASurement:SETup:EVALuation:E3:RX<Pt>:CNT:FAIL	.1030
18.2.51	MEASurement:SETup:EVALuation:E3:RX<Pt>:RATio:PASS	.1031
18.2.52	MEASurement:SETup:EVALuation:E3:RX<Pt>:RATio:FAIL	.1031
18.2.53	MEASurement:SETup:EVALuation:E4:RX<Pt>:ITEM	.1032
18.2.54	MEASurement:SETup:EVALuation:E4:RX<Pt>:TYPE	.1032
18.2.55	MEASurement:SETup:EVALuation:E4:RX<Pt>:CNT:PASS	.1033
18.2.56	MEASurement:SETup:EVALuation:E4:RX<Pt>:CNT:FAIL	.1033
18.2.57	MEASurement:SETup:EVALuation:E4:RX<Pt>:RATio:PASS	.1033
18.2.58	MEASurement:SETup:EVALuation:E4:RX<Pt>:RATio:FAIL	.1034
18.2.59	MEASurement:SETup:EVALuation:SDH:RX<Pt>:ITEM	.1034
18.2.60	MEASurement:SETup:EVALuation:SDH:RX<Pt>:ITEM:ALARm	.1035
18.2.61	MEASurement:SETup:EVALuation:SDH:RX<Pt>:ITEM:ERRor	.1036
18.2.62	MEASurement:SETup:EVALuation:SDH:RX<Pt>:TYPE	.1036
18.2.63	MEASurement:SETup:EVALuation:SDH:RX<Pt>:CNT:PASS	.1037
18.2.64	MEASurement:SETup:EVALuation:SDH:RX<Pt>:CNT:FAIL	.1037
18.2.65	MEASurement:SETup:EVALuation:SDH:RX<Pt>:RATio:PASS	.1037
18.2.66	MEASurement:SETup:EVALuation:SDH:RX<Pt>:RATio:FAIL	.1038
18.2.67	MEASurement:SETup:EVALuation:SONet:RX<Pt>:ITEM	.1038
18.2.68	MEASurement:SETup:EVALuation:SONet:RX<Pt>:ITEM:ALARm	.1039
18.2.69	MEASurement:SETup:EVALuation:SONet:RX<Pt>:ITEM:ERRor	.1040
18.2.70	MEASurement:SETup:EVALuation:SONet:RX<Pt>:TYPE	.1040
18.2.71	MEASurement:SETup:EVALuation:SONet:RX<Pt>:CNT:PASS	.1041
18.2.72	MEASurement:SETup:EVALuation:SONet:RX<Pt>:CNT:FAIL	.1041
18.2.73	MEASurement:SETup:EVALuation:SONet:RX<Pt>:RATio:PASS	.1041

18.2.74	MEASurement:SETup:EVALuation:SONet:RX<Pt>:RATio:FAIL	.1042
18.2.75	MEASurement:SETup:EVALuation:OTN:RX<Pt>:ITEM	.1042
18.2.76	MEASurement:SETup:EVALuation:OTN:RX<Pt>:ITEM:ALARm	.1042
18.2.77	MEASurement:SETup:EVALuation:OTN:RX<Pt>:ITEM:ERRor	.1044
18.2.78	MEASurement:SETup:EVALuation:OTN:RX<Pt>:TYPE	.1045
18.2.79	MEASurement:SETup:EVALuation:OTN:RX<Pt>:CNT:PASS	.1045
18.2.80	MEASurement:SETup:EVALuation:OTN:RX<Pt>:CNT:FAIL	.1045
18.2.81	MEASurement:SETup:EVALuation:OTN:RX<Pt>:RATio:PASS	.1046
18.2.82	MEASurement:SETup:EVALuation:OTN:RX<Pt>:RATio:FAIL	.1046
18.2.83	MEASurement:SETup:EVALuation:BER:OBAMeasuring	.1046
18.2.84	MEASurement:SETup:EVALuation:BER:IAFFilter	.1047
18.2.85	MEASurement:SETup:EVALuation:BER:CLFrames	.1047
18.2.86	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds [:ENABLE]	.1047
18.2.87	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:MODE	.1048
18.2.88	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:COUNt	.1048
18.2.89	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:RATio	.1048
18.2.90	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds :PERCent	.1049
18.2.91	MEASurement:SETup:POINtermovement:SDH:MODE	.1049
18.2.92	MEASurement:SETup:POINtermovement:SONet:MODE	.1049
18.3	Information	.1050
18.3.1	MEASurement:INFO:TBEGin?	.1050
18.3.2	MEASurement:INFO:TEND?	.1050
18.3.3	MEASurement:INFO:MDURation?	.1050
18.3.4	MEASurement:INFO:STATus<Pt>?	.1050
18.3.5	MEASurement:INFO:IMIN?	.1051
18.3.6	MEASurement:INFO:IMAX?	.1051
18.3.7	MEASurement:INFO:IFIRst?	.1051
18.3.8	MEASurement:INFO:ILASt?	.1051
18.4	Event Log	.1051
18.4.1	MEASurement:ELOG:MINimum?	.1051
18.4.2	MEASurement:ELOG:MAXimum?	.1051
18.4.3	MEASurement:ELOG:FETCh?	.1052
18.4.4	MEASurement:ELOG:FETCh:NEXt?	.1052
18.4.5	MEASurement:ELOG:EXPort	.1052
18.5	Result	.1053
18.5.1	MEASurement:RESult:SUMMary?	.1053
18.5.2	MEASurement:RESult:SUMMary:STATistics:PORT<Pt>?	.1053

A	Example Scripts	1055
A.1	Hints	.1055
A.2	2 Mbps BERT	.1056
A.3	2 Mbps Status & Stimuli	.1057
A.4	E3 BERT	.1058
A.5	E4 BERT	.1059
A.6	SDH BERT	.1060
A.7	Ethernet BERT	.1061
A.8	Ethernet Discovery	.1062
A.9	Fibre Channel BERT	.1063
A.10	OTN BERT	.1064
A.11	CPRI BERT	.1065
A.12	Sending an HTTP GET request	.1066
A.13	Setting parameters for uploading scenario results	.1067

List of Figures

1.1	System setup using Ethernet	53
1.2	Connector panel	53
1.3	Configure TCP Port for Remote Control	54
1.4	Program message structure	55
1.5	Program message unit	55
1.6	Response message structure	59
1.7	Configuration of Status Registers in the Network Master $\oplus$ means logical OR.	62
1.8	The register model for the Status registers.	63
1.9	Configuration of Status Byte Register and Service Request Enable Register	64
1.10	Configuration of Standard Event Status Register and Standard Event Status Enable Register	65
1.11	Configuration of Questionable Status Register	67
1.12	Configuration of Operation Status Register	68
1.13	Configuration of Port Status Register	69
1.14	The structure for the Port Interface Status Register	70
1.15	The generic structure for the AESummary register of interfaces	70
1.16	Enable Implicit CR in every LF in PuTTY	73
1.17	IP Address on the Network Master	73
1.18	Specify the destination and Open the connection in PuTTY	74
1.19	Connection established with PuTTY	74
1.20	Data bit	75
1.21	Correspondence between physical and logical port numbers (Three ports)	75
1.22	Correspondence between physical and logical port numbers (One port)	76
1.23	Correspondence between physical and logical port numbers (Two ports)	76
2.1	INST:STAR automatically <i>connects</i> and selects started application server.	101
2.2	Original client session has to <i>disconnect</i> , before another client session can <i>connect</i> .	101
2.3	When connected to multiple application servers, client session <i>selects</i> to which application server the application specific commands are dispatched.	101

Chapter 1

Overview

The Network Master command based remote control functions support the built-in Ethernet service interface. Software specifications are in conformity with the IEEE488.2 standard based on SCPI version 1999 (Standard Commands for Programmable Instruments). Network Master becomes an automated measurement instrument when it is connected to an external controller.

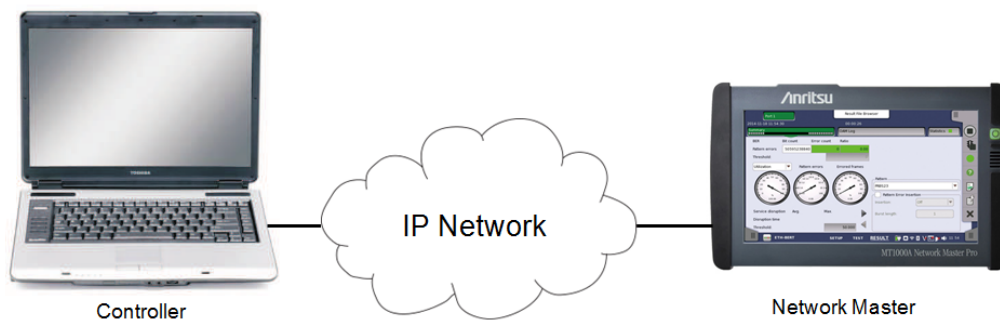 


Figure 1.1: System setup using Ethernet

1.1 Ethernet Based Remote Control

1.1.1 Connecting Cable

To use remote control via the Ethernet service interface, connect an Ethernet cable to the Ethernet connector next to the power socket.



Figure 1.2: Connector panel

1.1.2 Ethernet Remote Control Settings

Port Number

To change a TCP port number (for a valid range, see Table 1.1) type the number in the **TCP Port** field (see Figure 1.3).

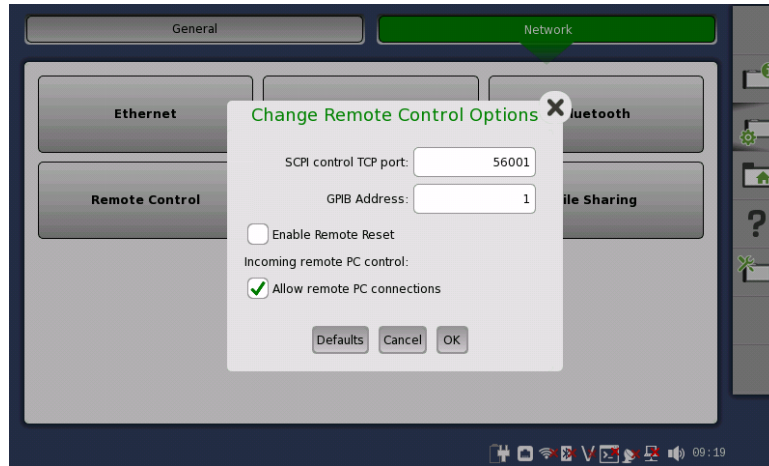 


Figure 1.3: Configure TCP **Port** for Remote Control

Table 1.1: Allowable TCP port range

Setup item	Description	Allowable range
SCPI Control TCP port	TCP Port Number	1024 to 65535 (default: 56001)

1.1.3 Communication Buffers

The input- and output streams are buffered. Besides the TCP receive buffer (87380 bytes) and the TCP transmit buffer (16384 bytes), the two streams share a common command/response buffer of 32 entries. Each buffer entry can hold a compound program message of maximum 4 KB or a response message of maximum 64 KB.

Program data transferred as <ARBITRARY BLOCK PROGRAM DATA> does not go through the internal buffer, but is streamed directly from the TCP receive buffer to the internal file system. Similar for response data of type <DEFINITE LENGTH ARBITRARY BLOCK RESPONSE DATA>; it is streamed directly from the internal file system to the TCP transmit buffer.

1.2 Program Messages

Program messages are the remote commands sent to Network Master as shown in Figure 1.4.

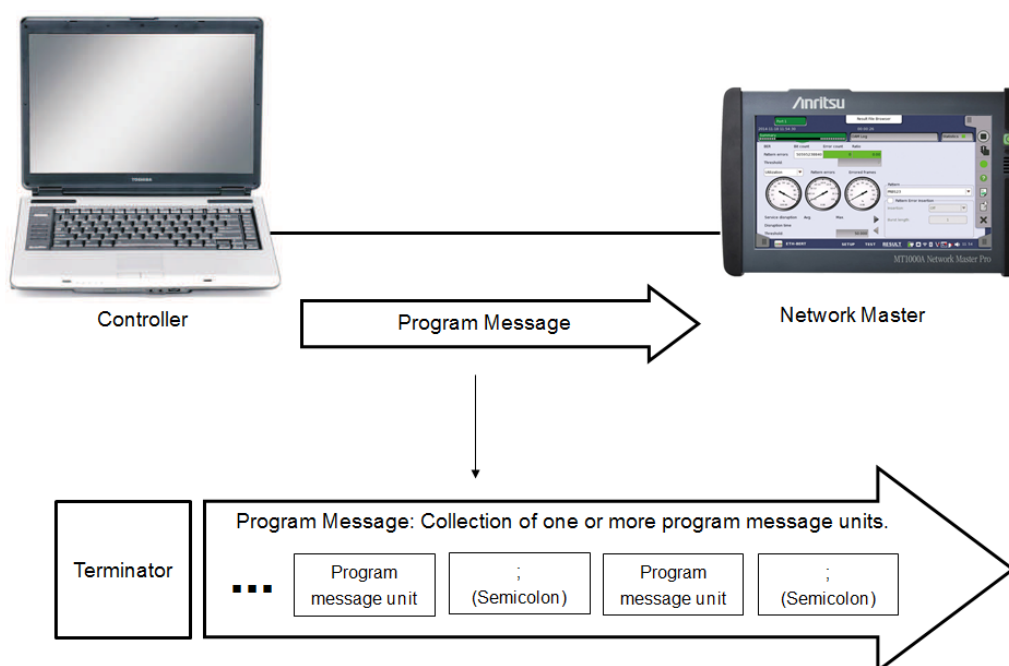 


Figure 1.4: Program message structure

A program message consists of one or more program message units separated with a semicolon (;). Space(s) before or after a semicolon is ignored (space has no meaning). For more information on program message units, see section 1.2.1 Program Message Unit.

When a program message is sent to Network Master, a terminator is appended after it. Network Master receives the program message by detecting the terminator. For a description of the terminator, see section 1.2.4 Program Message Terminator.

The Network Master is able to handle program messages with a maximum length of 4096 characters including the message terminator.

1.2.1 Program Message Unit

A program message unit consists of a program header and a program data, see Figure 1.5.

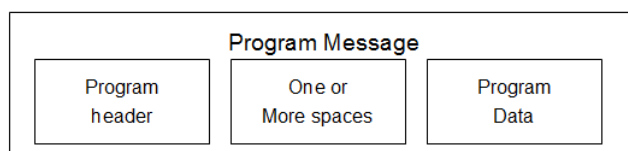 


Figure 1.5: Program message unit

There must be one or more spaces between a program header and a program data. Network Master recognizes the program header and program data using the space(s). One or more spaces before a program header are ignored.

1.2.2 Program Headers

The program header specifies the function of the command message unit sent from the controller to Network Master. There are two types of program headers:

- Program headers for command message units.
- Program headers for query message units. Similar to headers for command message unit, but are always followed by a question mark "?".

The Network Master supports some of the common commands defined in the IEEE488.2 standard. These common commands are special in the way that they are always preceded by an asterisk "*"; e.g. `*IDN?`. All other commands are referred to as "device specific commands". Device specific commands consists of two or more <program mnemonic>'s (hereinafter called "mnemonic") separated with a colon ":". e.g. `SYSTem:TIME`.

[:]<program mnemonic>[:<program mnemonic>]... e.g. `SYSTem:TIME`

A mnemonic is a character string, which consists of capital and small letters. The capital part of the mnemonic is also referred to as the short form of the mnemonic.

- Long form program header: `INSTrument:STARt`
- Short form program header: `INST:STAR`

The Network Master recognizes a mnemonic even if only the short form is sent. For example, mnemonic `INSTrument` is recognized as a normal mnemonic when `INST` is sent.

In this way, capital and small letters are used for recognizing long and short forms of a mnemonic, The Network Master does not distinguish between capital and small letters when reading the program header. However, the Network Master only accepts the short form or the complete long form of a mnemonic. Hence `INSTru` is **not** a valid mnemonic. The following program headers are all acceptable and assumed to be the same:

- `SYSTEM:GPS:NSATELLITES?`
- `system:gps:nsatellites?`
- `SySteM:GpS:NsAtElLiTeS?`
- `syst:GPS:nsat?`

1.2.3 Program Data

Program data is sent following the program header as parameters specified in the command message unit. This operation manual uses the notations given below in Table 1.2 for indicating the program data format. Most of them are defined in the IEEE488.2 standard.

Table 1.2: Acceptable program data

Program data type	Description
<BOOLEAN PROGRAM DATA>	Defined in IEEE488.2. Indicates On/Off, Enable/Disable, or Yes/No. To specify On/Enable state, set {ON 1}. To specify Off/Disable state, set {OFF 0}.
<NUMERIC PROGRAM DATA>	Comprises <DECIMAL NUMERIC PROGRAM DATA> and <NON-DECIMAL NUMERIC PROGRAM DATA> as Defined in IEEE488.2. The Network Master accepts both decimal and non-decimal entries for the <NUMERIC PROGRAM DATA>.
<DECIMAL NUMERIC PROGRAM DATA>	Defined in IEEE488.2. Comprises <NR1>, <NR2> and <NR3> decimal values, where <NR1> indicates an integer value. <NR2> indicates a numeric value in fixed point format. <NR3> indicates a numeric value in floating point format. Examples: <NR1>: 123 <NR2>: -123.456 <NR3>: 1.23E-3
<NONDECIMAL NUMERIC PROGRAM DATA>	Defined in IEEE488.2. Comprises <HEXADECIMAL>, <OCTAL> or <BINARY> program data. See below for further details.
<HEXADECIMAL>	Conforms to the hexadecimal format defined in IEEE488.2 as follows: #{H h}{A a B b C c D d E e F f <digit>}... <digit> is an ASCII character with a value in the range of 0x30 to 0x39 (48 to 57 in decimal), that is, a numeric 0 to 9. Examples: #h1234ABCD #Hfe1a9
<OCTAL>	Conforms to the octal format defined in IEEE488.2 as follows: #{Q q}{0 1 2 3 4 5 6 7}... Examples: #q12345670 #Q77
<BINARY>	Conforms to the binary format defined in IEEE488.2 as follows: #{B b}{0 1}... Examples: #b10101010 #B110
<STRING PROGRAM DATA>	Defined in IEEE488.2. A character string in a pair of single quotation marks (') or double quotation marks ("). Examples: "Network Master" 'Testing the network'

continued on next page...

...continued from previous page

Program data type	Description
<CHARACTER PROGRAM DATA>	Defined in IEEE488.2. Indicates two or more mnemonics for selections. Like program header mnemonics, <CHARACTER PROGRAM DATA> mnemonics can have a short and a long form. The syntax used in the Network Master additionally allows a digit as the first character of a mnemonic and also allows a dash (-) inside a mnemonic.

1.2.4 Program Message Terminator

A program message terminator indicates the end of the program message. Upon reception of a terminator, the Network Master assumes that the program message is complete and starts processing the message. A terminator must always be added to the end of a program message. For Network Master the program message terminator is:

[<WHITE SPACE>]{NL} for Ethernet based remote control

<WHITE SPACE> is one or more ASCII characters with a value in the range of 0x00 to 0x09 or 0x0B to 0x20 (0 to 9 or 11 to 32 in decimal). These ranges include the ASCII control characters and space, except NL (newline). Since <WHITE SPACE> includes CR (0x0D) (13 in decimal), {CR}{NL} is also interpreted as a terminator by Network Master in Ethernet based remote control - to keep compatibility with conventional models.

1.2.5 Compound Program Messages

Compound headers are supported by the Network Master. Examples of the use of the compound headers are shown below.

The three program message units:

SYSTem:TIME?

SYSTem:DATE?

SYSTem:GPS:NSATellites?

can be combined in one program message as follows:

SYSTem:TIME?; :SYSTem:DATE?; :SYSTem:GPS:NSATellites?

or just:

SYSTem:TIME?; DATE?; GPS:NSATellites?

(SYST: mnemonic can be omitted in the second and third program data units)

For further information on compound headers, see Appendix A of the IEEE488.2 standard.

1.2.6 Sequential Execution

The Network Master processes one program message unit at a time and in the same order in which they are arranged within the program message. The Network Master will not start processing a new program message until the processing of the current program message is finished.

1.3 Response Messages

Response messages are messages sent from a Network Master to a controller as reply to queries, see Figure 1.6.

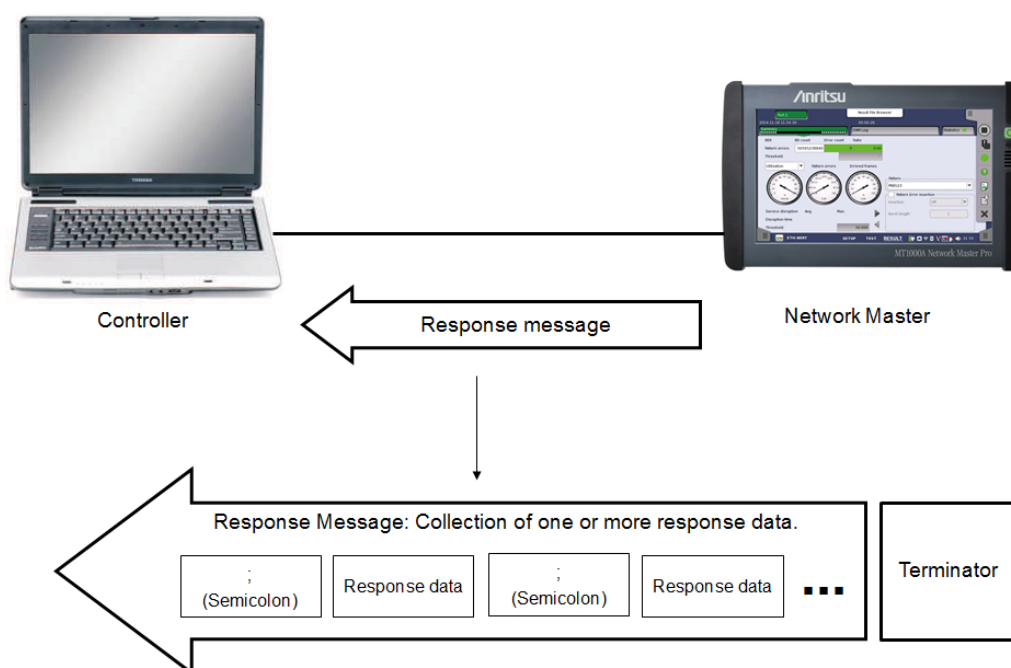 


Figure 1.6: Response message structure

A response message consists of one or more response data separated with a semicolon (;). The response message is terminated with the response message terminator.

1.3.1 Response Data

Response data is a data returned by Network Master as reply to a query received from the controller. Table 1.3 shows examples of the response data format used in this manual.

Table 1.3: Network Master response data

Response data type	Description
<BOOLEAN RESPONSE DATA>	Defined in SCPI-99. Indicates On/Off, Enable/Disable, or Yes/No. When "1" is returned, it indicates an On/Enable state. When "0" is returned, it indicates an Off/Disable state.
<NR1 NUMERIC RESPONSE DATA>	Defined in IEEE488.2. Indicates an decimal integer value. Examples: 123 -500
<NR2 NUMERIC RESPONSE DATA>	Defined in IEEE488.2. Indicates a numeric value in fixed point format. Examples: 123.45 -500.0

continued on next page...

...continued from previous page

Response data type	Description
<NR3 NUMERIC RESPONSE DATA>	Defined in IEEE488.2. Indicates a numeric value in floating point format. Examples: 1.23E3 -5.67E-4
<HEXADECIMAL NUMERIC RESPONSE DATA>	Conforms to the hexadecimal format defined in IEEE488.2 as follows: #H{A B C D E F <digit>}... <digit> is an ASCII character with a value in the range of 0x30 to 0x39 (48 to 57 in decimal), a numeric 0 to 9. Example: #H0011EEFF
<BINARY NUMERIC RESPONSE DATA>	Conforms to the binary format defined in IEEE488.2 as follows: #B{0 1}... Example: #B10101010
<STRING RESPONSE DATA>	Defined in IEEE488.2. A character string enclosed in a pair of double quotation marks ("). Example: "Network Master - Testing the network."
<CHARACTER RESPONSE DATA>	Defined in IEEE488.2. Indicates two or more mnemonics for selections. Like program header mnemonics, <CHARACTER RESPONSE DATA> mnemonics can have a short and a long form. The Network Master always returns the short form. The syntax used in the Network Master additionally allows a digit as the first character of a mnemonic and also allows a dash (-) inside a mnemonic.
<EXPRESSION RESPONSE DATA>	Defined in IEEE488.2. A Network Master-defined set of <RESPONSE DATA> elements separated by a comma (,) and enclosed by a set of parenthesis. Example: (2,0.5),(3,0.25),(4,1.75) For further details refer to the detailed description of the Network Master specific commands.
<DEFINITE LENGTH ARBITRARY BLOCK RESPONSE DATA>	Defined in IEEE488.2. This response data type is used when the instrument streams binary data (typically PDF files) to the controller. It is defined as #<nonzero digit><digits><8 bit data bytes> , where: <nonzero digit> is a single ASCII character in the range of '1'-'9'. It represents the length of <digits> in number of bytes. <digits> is a number of ASCII characters in the range of '0'-'9', which together are a decimal representation of the number of succeeding data bytes. Example: #49137<9137 bytes of binary data>

1.3.2 Response Messages Terminator

A response message terminator indicates the end of the response message. Network Master appends the terminator to the end of a response message to indicate the end of the message. For Network Master the response message terminator is `{NL}` .

1.3.3 Prompt

For Ethernet based remote control a prompt can optionally be returned by the Network Master when all commands in a program message has completed. The prompt is inserted after the response message if any. It can be useful to enable the prompt when manually typing commands on the command line of the remote control interface. The prompt inserted is:

`SCPI:>`

See section [2.3.38](#) on page [93](#) and section [1.5](#) Controller Example.

1.4 Status

Network Master has registers which show instrument status such as the error occurrence and the command procession. This section describes these registers.

1.4.1 Configuration of Status Registers

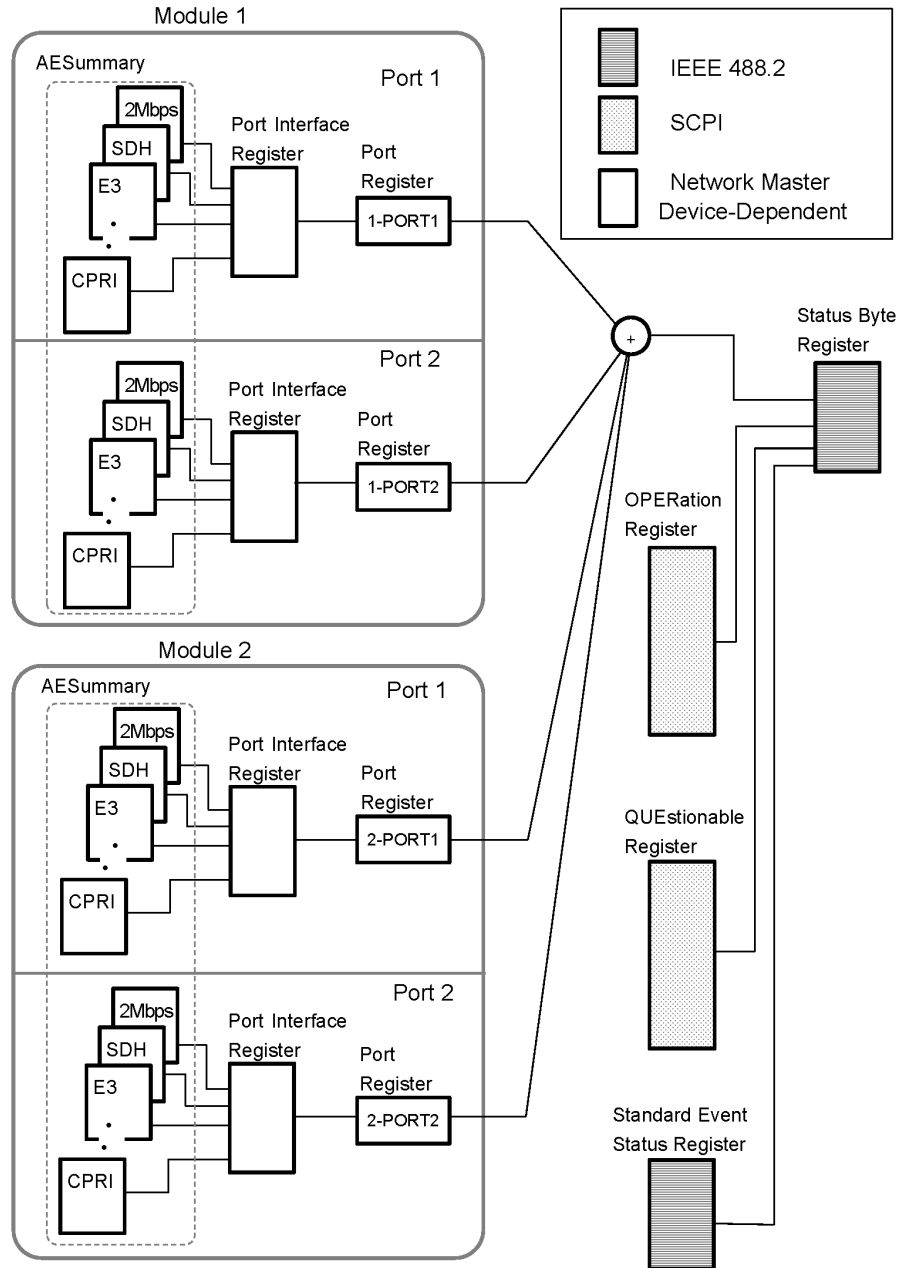 


Figure 1.7: Configuration of Status Registers in the Network Master $\oplus$ means logical OR.

Each register has eight bits data or 16 bits and the bit enable register is provided against each register. The register model for SCPI defined status registers and Network Master device dependant registers is shown in Figure 1.8.

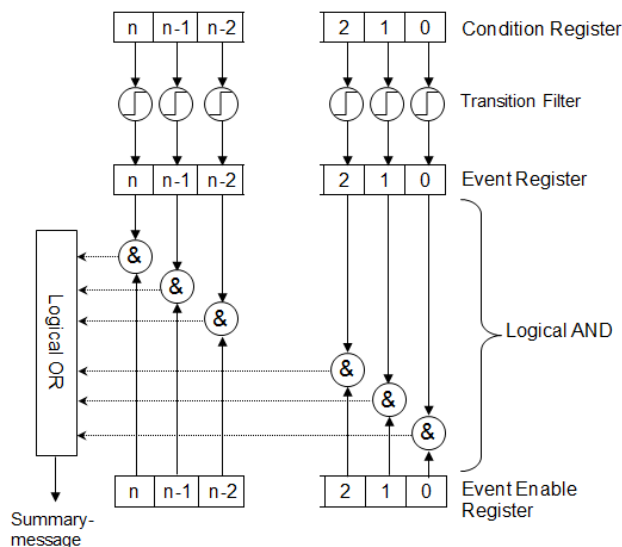 


Figure 1.8: The register model for the Status registers.

Condition Registers

The Condition registers reflect the real-time status of the instrument or summary-message bits of other status registers. Thus, this register does not memorize the status.

Transition Filters

Sets the Condition Register data in the Event Register. The following three types of transition filters are available depending on which change of the Condition Register is to be evaluated.

- Positive direction change: The event becomes true only when the corresponding condition changes from false to true.
- Negative direction change: The event becomes true only when the corresponding condition changes from true to false.
- Bi-directional change: The event becomes true when a change arise either in the positive or negative direction.

The transition filters for the Network Master's Device-Dependent Status registers are locked to the "Positive transition" criteria. This means that events will be generated when the condition bits goes from 0 to 1. It is not possible to change the transition criteria.

Event Registers

The Event registers store the transition filter output. These registers are cleared when read.

Event Enable Registers

The Event Enable registers cannot be read or written and on power-on they are all set to zero. To enable the Event Enable registers and hence generation of summary-messages, the STATUS:PRESet command must be send. The STATUS:PRESet command changes all the bits in the Event Enable registers to 1.

1.4.2 IEEE488.2-defined Registers

Status Byte

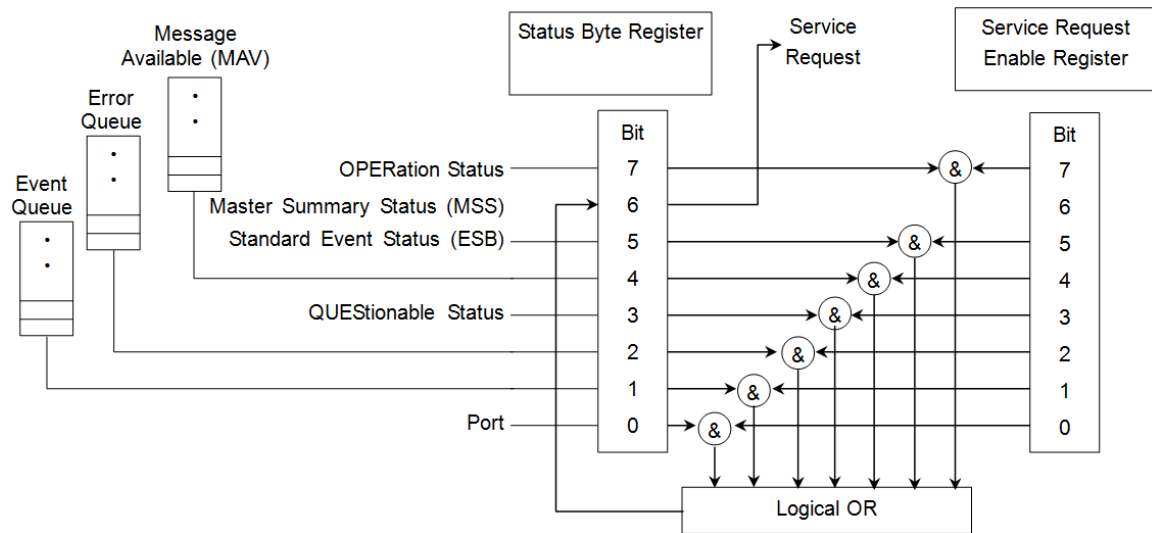 


Figure 1.9: Configuration of Status Byte Register and Service Request Enable Register

Note:

When using the GPIB interface (J1667A GPIB-USB Converter), the service request is enabled. For more

Table 1.4: Bits in the Status Byte register

Bit	Name	Description
7	OPERation	Summary-message bit for the Operation Status register. Use the STATUS:OPERation:ENABLE command described in section 2.5.2 to enable generation of this summary-message.
6	Master Summary (MSS)	The Master Summary Status message. Use the *SRE command described in section 2.2.7 to enable generation of this summary-message.
5	Standard Event (ESB)	Summary-message bit for the Standard Event Status register. Use the *ESE command described in section 2.2.2 to enable generation of this summary-message.
4	Message Available (MAV)	Summary-message bit for the Output Queue.
3	QUESTionable	Summary-message bit for the Questionable Status register. Use the STATUS:QUESTionable:ENABLE command described in section 2.5.8 to enable generation of this summary-message.
2	Error Queue	Summary-message bit for the Error queue for all connected application servers. Use the INSTRument:ERRor[:NEXT]? command described in section 2.4.18 to retrieve the messages.
1	Event Queue	Summary-message bit for the Event Queue for the currently selected application server. Use the SYSTem:ERRor[:NEXT]? command described in section 2.3.2 to retrieve the messages.
0	Port	Summary-message bit for the Port Event Summary register. Use the STATUS:PRESet command described in section 2.5.16 and the STATUS:PORT:ENABLE command described in section 2.5.13 to enable generation of this summary-message.

information about the Status Byte register, see section 2.2.8 on page 81.

Standard Event Status

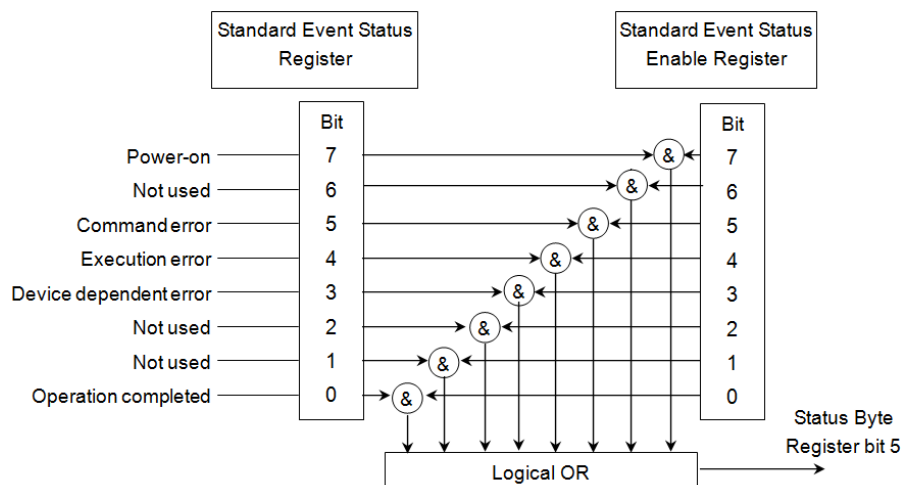 


Figure 1.10: Configuration of Standard Event Status Register and Standard Event Status Enable Register

Table 1.5: Bits in the Standard Event Status register (unused bits are not listed)

Bit	Name	Description
7	Power On	The condition bit changes to 1 when the external power supply is connected.
5	Command Error	The condition bit changes to 1 when a unknown or errored command is received.
4	Execution Error	The condition bit changes to 1 when a command fail to execute properly.
3	Device Dependent Error	The condition bit changes to 1 when a required SW or HW options is missing or the Error/Event queue is full.
0	Operation Complete	The condition bit changes to 1 when *OPC command is received.

All condition bits are immediately changed back to 0 after they are set. This means that the only way to check the bits is to read the Event register. For more information on what triggers the Device Dependent, Execution and Command Errors see the Error/Event Queue section on page 66.

For more information on the Standard Event Status register see section 2.2.2 on page 78.

Error/Event Queue

When an unexpected error or event occurs, an entry is added to the Error/Event queue. This queue can hold 4 errors or events. If the queue overflows, the most recent events are discarded. A summary-message in bit 2 of the Status Byte is 1 when the queue is not empty. Table 1.6 gives an overview of the different errors and events inserted in the queue.

For more information about the Event queue, see section 2.4.18 on page 106.

Table 1.6: Errors and events that can occur in the Error/Event queue

Event Number	Error Description
0	No Error (when queue is empty)
<i>Command errors (Command Error bit is simultaneously set)</i>	
-100	Command error
-102	Syntax error
-104	Data type error
-115	Unexpected number of parameters
-130	Suffix error
-131	Invalid suffix
-138	Suffix not allowed
<i>Execution errors (Execution Error bit is simultaneously set)</i>	
-200	Execution error
-220	Parameter error
-221	Settings conflict
-222	Data out of range
-224	Illegal parameter value
-250	Mass storage error
<i>Device Dependent errors (Device Dependent Error bit is simultaneously set)</i>	
1	Options Missing
-350	Queue overflow

For more information about the Error queue, see section 2.3.2 on page 82.

1.4.3 SCPI-defined Registers

Questionable Status

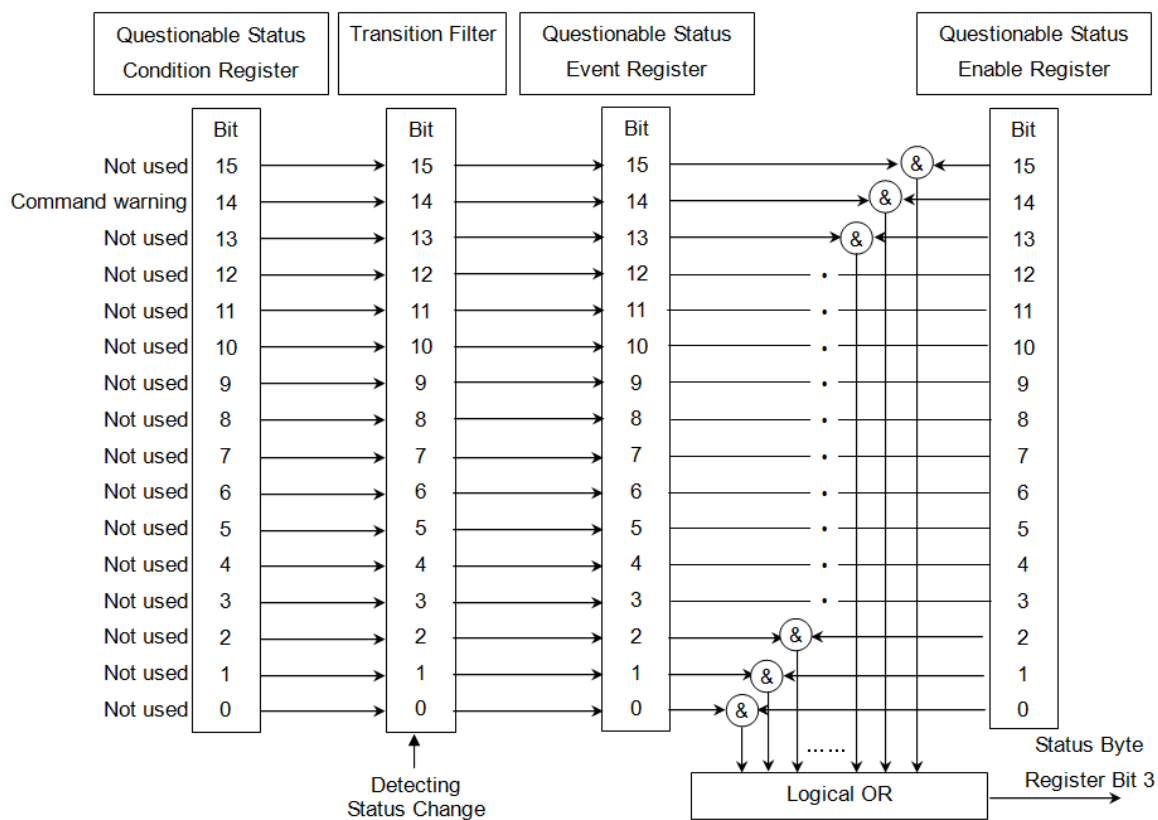 


Figure 1.11: Configuration of Questionable Status Register

Table 1.7: Bit in the Questionable Status register (unused bits are not listed)

Bit	Name	Description
14	Command warning	The command warning bit changes to 1 when the command which could not be processed was sent.

For more information about the Questionable Status register, see section 2.5.6 on page 110.

Operation Status

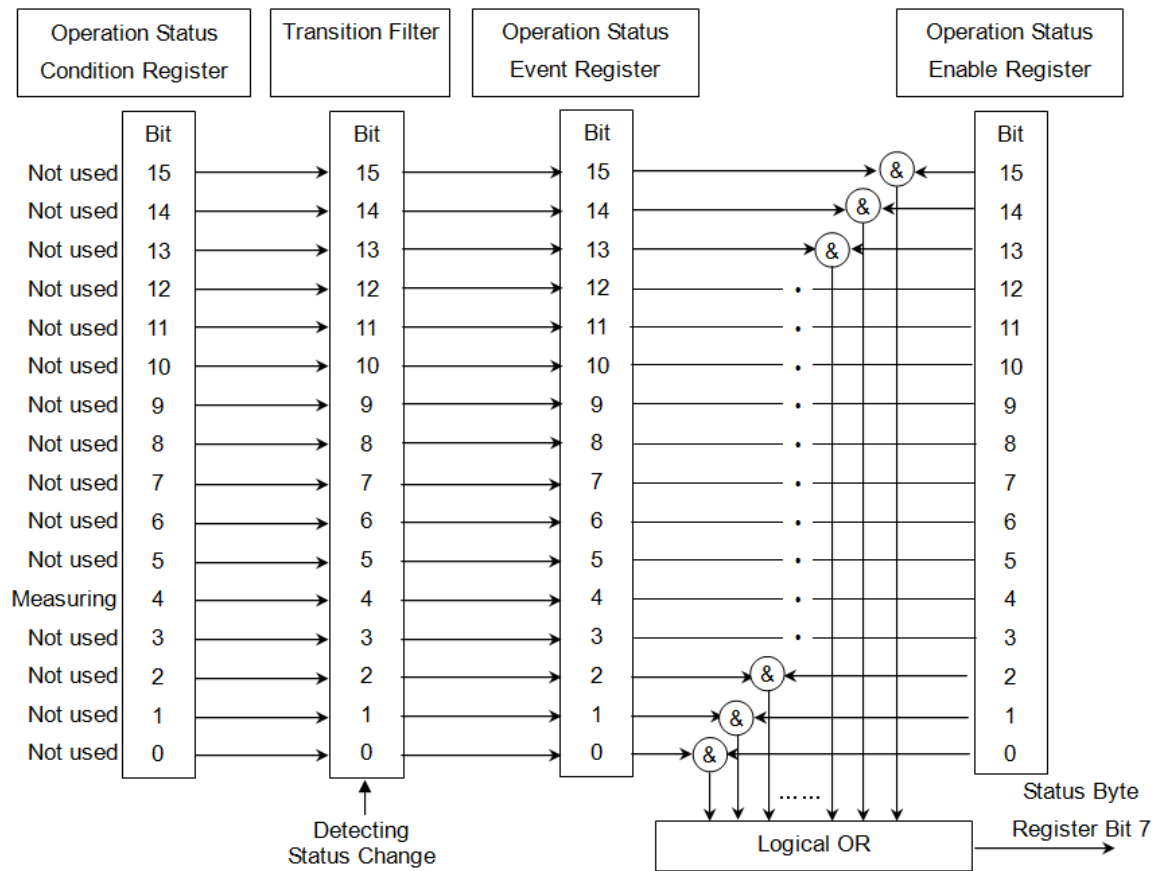 


Figure 1.12: Configuration of Operation Status Register

Table 1.8: Bit in the Operation Status register (unused bits are not listed)

Bit	Name	Description
4	Measuring	The measuring condition bit changes to 1 when the an Application Server is running a measurement or a test. It returns to 0 when the measurement or test is stopped.

For more information about the Operation Status register, see section 2.5.1 on page 109.

1.4.4 Network Master Device-Dependent Status Registers

Figure 1.13 shows the structure of Port Status registers as the Network Master Device-Dependent status registers.

There is a Port Status register for each port on the Network Master. The Port Status registers summarize the

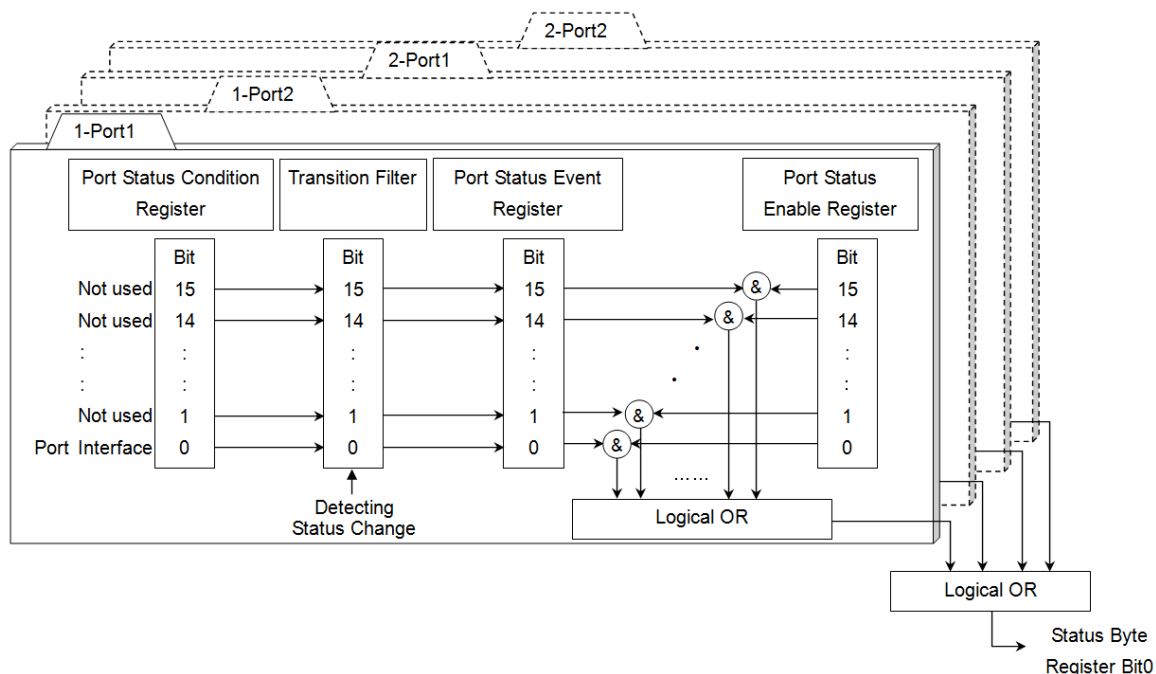 


Figure 1.13: Configuration of Port Status Register

AESummary (Alarm and Error Summary) registers from the active interfaces. The Port Status registers are again summarized in bit 0 of the Status Byte, see Figure 1.14.

Summary Register

The summarized status of the following registers is stored in the Summary Register (Refer to Table 1.15). The Network Master Device-Dependent Status registers are used to report alarms and errors for all interfaces. Each interface has one or more registers to represent the current alarm and error status. Each of these Alarm and Error registers are summarized in a General Interface Summary register (AESummary), see Figure 1.15. The exact layout of each register is found under the Status section for each interface.

- Alarm event registers
- Error event registers
- Event registers of lower layer summary registers

Like other status registers, the Summary register consists of the Condition register and the Event register, according to the register model defined in section 11.4.2 of IEEE488.2. The Summary register is locked to positive transition criteria because it consists of lower layer Event registers.

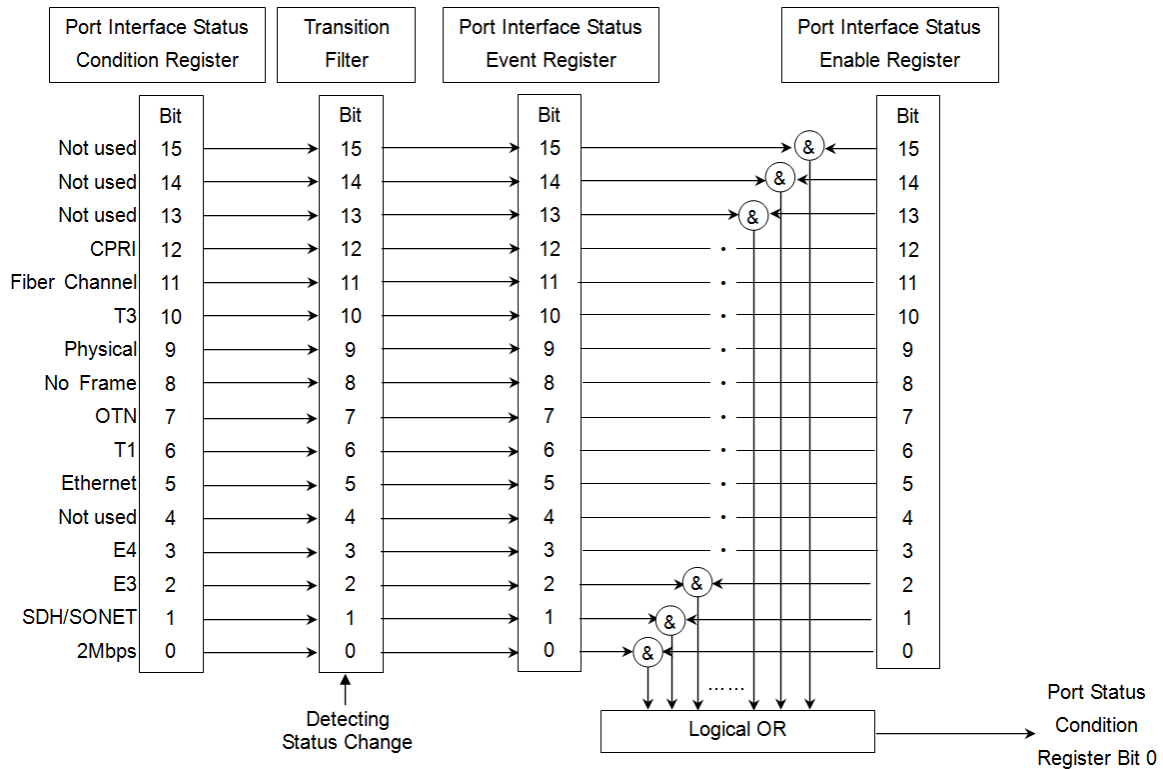 


Figure 1.14: The structure for the Port Interface Status Register

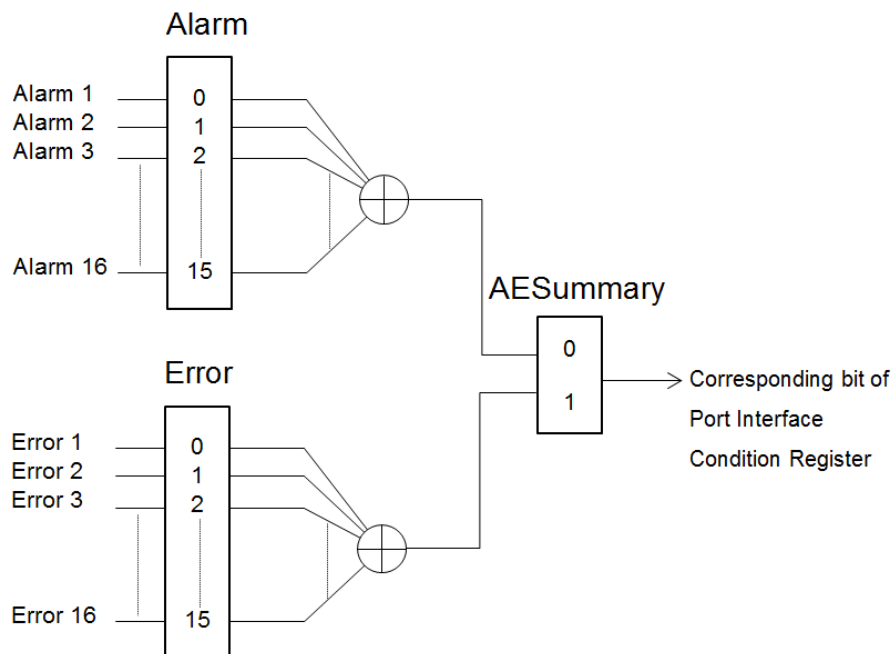 


Figure 1.15: The generic structure for the AESummary register of interfaces

1.4.5 Reading, Writing and Clearing Status Registers

The following two tables list the possibilities for reading and writing the various status registers and queues. They also show when and how registers are cleared or enabled.

Table 1.9: Reading and writing of Status registers

Registers		Reading	Writing
IEEE488.2 standard status registers	Status Byte	*STB?	Not possible
	Service Request Enable	*SRE?	*SRE
	Standard Event Status	*ESR? After reading, the register con- tent is cleared.	Not possible
	Standard Event Status Enable	*ESE?	*ESE
SCPI defined status registers	Error/Event Queue	SYST:ERR? After reading, the error/event is removed from the queue.	Not possible
	Operation Event	STAT:OPER? After reading, the register con- tent is cleared.	Not possible
	Operation En- able	STAT:OPER:ENAB?	STAT:OPER:ENAB
	Questionable Event	STAT:QUES? After reading, the register con- tent is cleared.	Not possible
	Questionable Enable	STAT:QUES:ENAB?	STAT:QUES:ENAB
Network Master device-dependent status registers	Condition	<Interface>:STAT:<Port>: <Register>:COND?	Not possible
	Transition Filter	Not possible	Not possible
	Event	<Interface>:STAT:<Port>: <Register>? After reading, the register content is cleared.	Not possible
	Enable	Not possible	Not possible

Notes

The Condition register of the Summary register is locked to positive transition criteria. Therefore, if clearing the register (*CLS) while an alarm or error is occurring, the register bits stay in "0" (cleared) in spite of the alarm or error occurrence.

Table 1.10: Status registers behaviour for different commands/events

Registers		*RST	*CLS	PowerOn	STAT:PRES
IEEE488.2 standard status registers	Status Byte	No Changes	Cleared	Cleared	No Changes
	Service Request Enable	No Changes	No Changes	Cleared	No Changes
	Standard Event Status	No Changes	Cleared	Cleared	No Changes
	Standard Event Status Enable	No Changes	No Changes	Cleared	No Changes
SCPI defined status registers	Error/Event Queue	No Changes	Cleared	Cleared	No Changes
	Operation Event	No Changes	Cleared	Cleared	No Changes
	Operation En- able	No Changes	No Changes	Cleared	No Changes
	Questionable Event	No Changes	Cleared	Cleared	No Changes
	Questionable Enable	No Changes	No Changes	Cleared	No Changes
Network Master Unique Status registers	Condition	No Changes	No Changes	Cleared	No Changes
	Transition Filter	No Changes	No Changes	No Changes	No Changes
	Event	No Changes	Cleared	Cleared	No Changes
	Enable	No Changes	No Changes	Cleared	Enabled (all 1's)

1.5 Controller Example

One example of how to connect a controller to the Network Master instrument is described in this section.

 
1.5.1 PuTTY

PuTTY is a free Telnet/SSH client which supports raw TCP connections. With PuTTY it is possible to get terminal emulation access to the instrument. It is recommended to enable the prompt when using PuTTY. PuTTY does not support file streaming like the MEAS:EXP command.

 
PuTTY can be downloaded from <http://www.chiark.greenend.org.uk/~sgtatham/putty/>

Setup

1. Install PuTTY.
2. Start PuTTY.
3. In the PuTTY Configuration enable **Implicit CR in every LF** at **Category:→Terminal**.

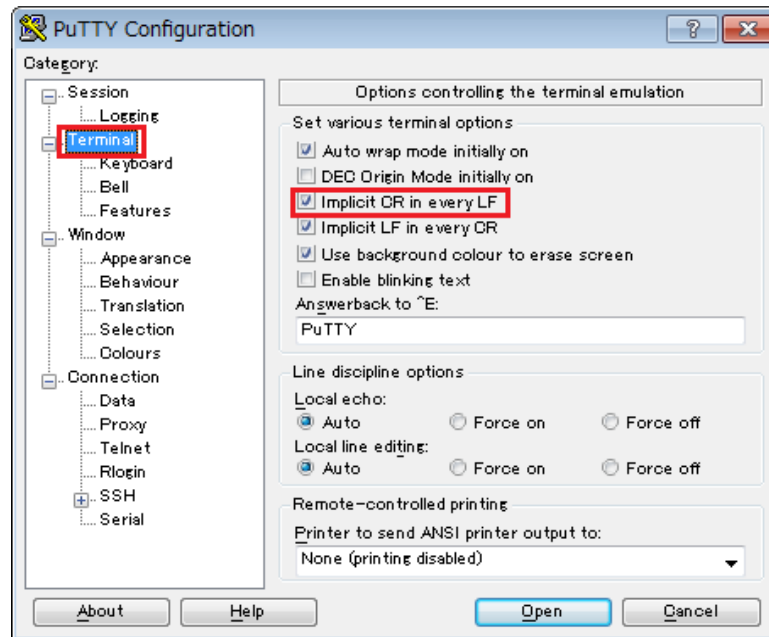Figure 1.16: Enable **Implicit CR in every LF** in PuTTY

4. In the Network Master GUI, find the **IP Address** information, see Figure 1.17. Then type it in PuTTY, see Figure 1.18.

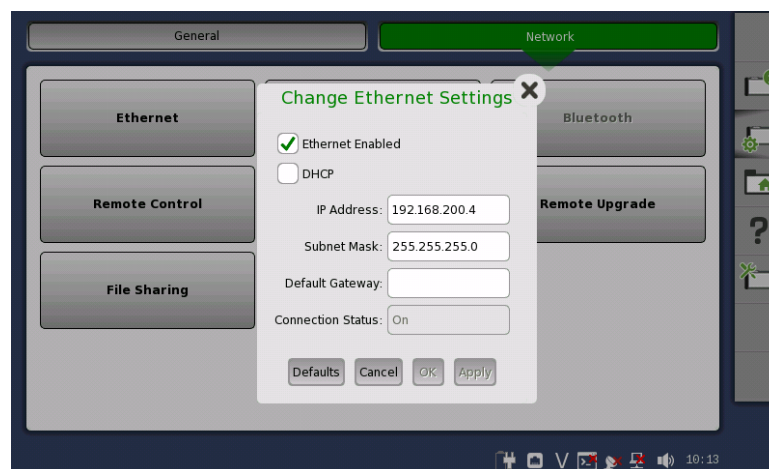Figure 1.17: **IP Address** on the Network Master

5. In PuTTY, type 56001 in the **Port** field, select the **Raw** radio button in the **Connection type** field, and click the **Open** button. see Figure 1.18.

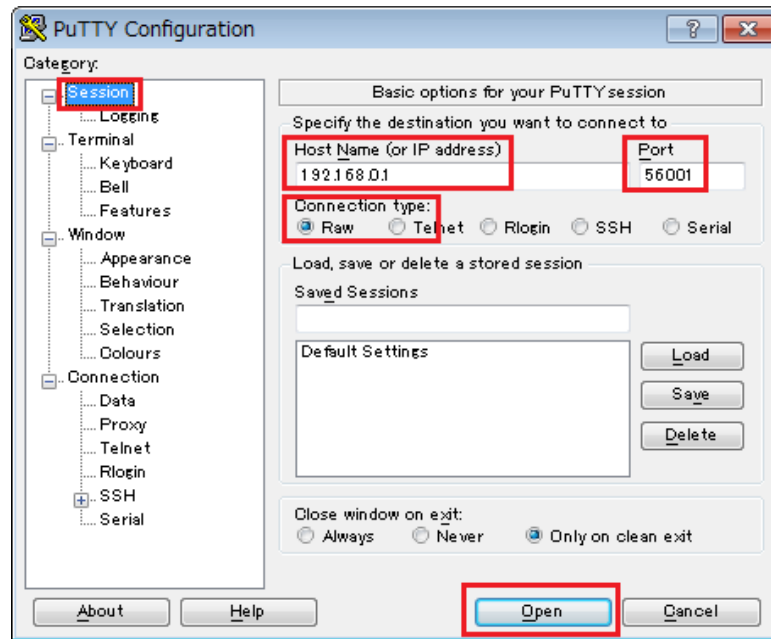 


Figure 1.18: Specify the destination and **Open** the connection in PuTTY

6. A window appears, see Figure 1.19.

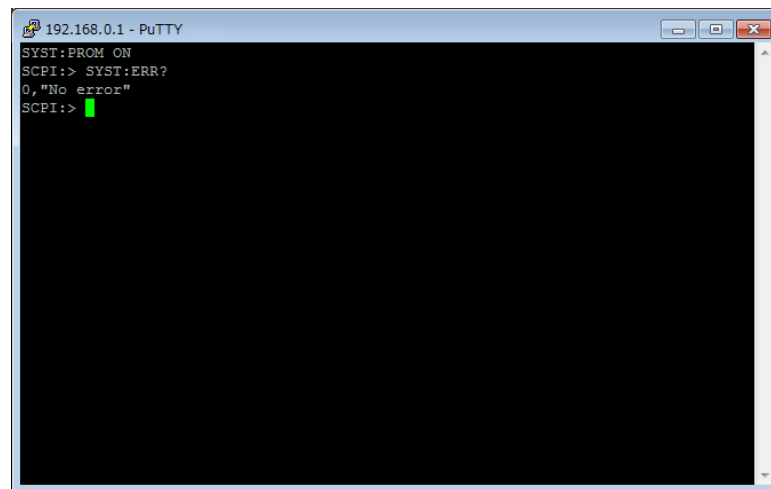 


Figure 1.19: Connection established with PuTTY

1.6 Definitions

1.6.1 NaN (Not a Number)

NaN is defined in SCPI-99. NaN is represented as 9.91E37 (<NR3 NUMERIC RESPONSE DATA>) as defined in IEEE 754. NaN is also used to represent missing data.

1.6.2 → Right Arrow

The right arrow → used in this document has the following meanings:

- On the left side of the arrow is a query and returned value on the right hand side.
Example: `TMBP:RX1:PATT? → PRBS11`

1.6.3 Data Bit (DB)

Data bit is represented as DBx where x represents the bit index in a register. DB1 is always LSB.

 


Figure 1.20: Data bit

1.6.4 Port Number (Logical Port)

Specify a logical port number assigned for each started application as a port number <Pt> in the SCPI command. The logical port numbers will be assigned in the order of Module1-Port1, Module1-Port2, Module2-Port1, and Module2-Port2. The logical port number starts with "1" regardless of the physical port numbers.

Example of logical port assignment when using the application start command

- `INST:STAR TP-BERT-OTN,1-PORT2,1-PORT1,2-PORT1` (Figure 1.21)
Physical Port : Logical Port
1-PORT1 : PORT1
1-PORT2 : PORT2
2-PORT1 : PORT3

When setting CFP for 2-PORT1 by using command, specify "3" for <Pt> in `OTN:TX<PT>:INTerface`.
Example: `OTN:TX3:INT CFP`

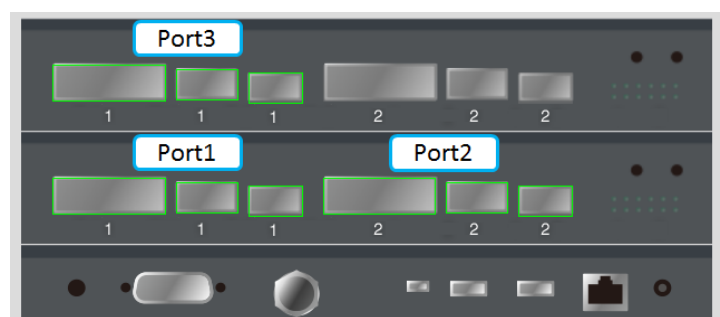 


Figure 1.21: Correspondence between physical and logical port numbers (Three ports)

- `INST:STAR TP-BERT-OTN,2-PORT2` (Figure 1.22)
Physical Port : Logical Port
2-PORT2 : PORT1

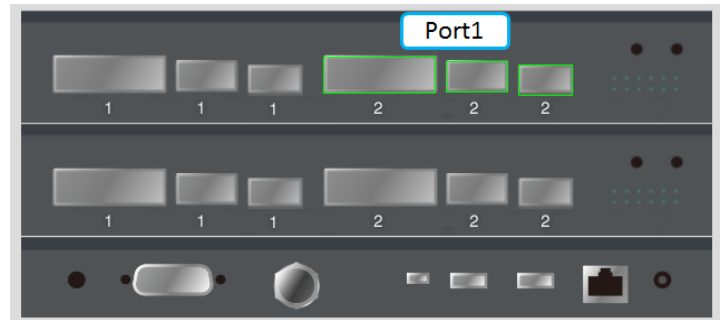 


Figure 1.22: Correspondence between physical and logical port numbers (One port)

- `INST:STAR TP-BERT-ETH,1-PORT2,2-PORT1` (Figure 1.23)
 Physical Port : Logical Port
 1-PORT2 : PORT1
 2-PORT1 : PORT2

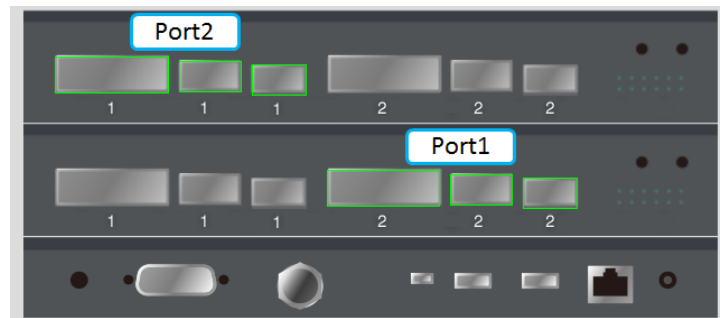 


Figure 1.23: Correspondence between physical and logical port numbers (Two ports)

Notes

- The physical ports (1-PORT1, 2-PORT1 etc.) specified at application startup basically do not match the logical port numbers assigned in each application.
- The logical ports are not assigned in the same order of the physical ports described in the SCPI command for starting application.(Figure 1.21) For example, the following two commands include the same physical port numbers in different orders. However, for the both cases, 1-PORT is assigned to logical PORT1 and 1-PORT2 is assigned to logical PORT2.
`INST:STAR TP-BERT-OTN,1-PORT1,1-PORT2`
`INST:STAR TP-BERT-OTN,1-PORT2,1-PORT1`
- When multiple applications are started, the logical ports are numbered from 1 for each application.

Chapter 2

SCPI Conformance Information

2.1 SCPI Version

The Network Master Remote Control application conforms to SCPI 1999.0

2.2 IEEE 488.2 Mandatory Commands

2.2.1 *CLS

Syntax	*CLS
Description	This command clears all the event registers summarized in the Status Byte register. The error queue is emptied. Neither the Standard Event Status Enable register, nor the Service Request Enable register are affected by this command.
Parameter	None.
Response	None.
Example	*CLS
Note	All active (SCPI) sessions has their own set of standard registers.

2.2.2 *ESE

Syntax	*ESE <mask>
Description	This command sets bits in the Standard Event Status Enable register. A 1 in a bit in the enable register enables the corresponding bit in the Standard Event Status register. This register is cleared at power-on. The *RST and *CLS commands do not affect this register.
Parameter	<mask> = <NUMERIC PROGRAM DATA> The bits and their values for the enable mask: DB1 (1) = Operation Complete DB2 = NOT USED DB3 = NOT USED DB4 (8) = Device Dependent Error DB5 (16) = Execution Error DB6 (32) = Command Error DB7 = NOT USED DB8 (128) = Power On <i>MINimum=0, MAXimum=255</i>
Response	None.
Example	*ESE 16
Note	All active sessions has their own Standard Event Status Enable register.

Syntax	*ESE?
Description	This query returns the contents of the Standard Event Status Enable register.
Parameter	None.
Response	<mask> = <NR1 NUMERIC RESPONSE DATA> See the *ESE command for bit values for the enable mask.
Example	*ESE? → 16
Note	

2.2.3 *ESR?

Syntax	*ESR?
Description	This query returns the contents of the Standard Event Status register. This register is cleared after being read.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA> The bits and their values for the register: DB1 (1) = Operation Complete DB2 = NOT USED DB3 = NOT USED DB4 (8) = Device Dependent Error DB5 (16) = Execution Error DB6 (32) = Command Error DB7 = NOT USED DB8 (128) = Power On
Example	*ESR? → 49
Note	All active sessions has their own Standard Event Status register.

2.2.4 *IDN?

Syntax	*IDN?
Description	This query returns the instrument identification over the interface.
Parameter	None.
Response	<manufacturer>,<model>,<serial>,<version> = <ARBITRARY ASCII RESPONSE DATA>
Example	*IDN? → Anritsu,MT1000A,6123456789,1.00
Note	

2.2.5 *OPC

Syntax	*OPC
Description	This command causes the instrument to generate the operation complete message in the Standard Event Status register when all pending selected instrument operations have been finished.
Parameter	None.
Response	None.
Example	*OPC
Note	All active sessions has their own Standard Event Status register.

Syntax	*OPC?
Description	This query places the ASCII character '1' into the instrument's output queue when all pending operations have been finished.
Parameter	None.
Response	<operation complete> = <NR1 NUMERIC RESPONSE DATA>
Example	*OPC? → 1
Note	Only application servers connected to by the current session are synchronized.

2.2.6 *RST

Syntax	*RST
Description	This command sets the instrument to reset setting (standard setting) stored in internal storage. The instrument is placed in the idle state awaiting a command. All running application/servers are closed when the *RST command is issued. The following are not changed: - Service Request Enable register (SRE) - Standard Event Status register (ESR) - Standard Event Status Enable register (ESE) - Any instrument specific Status Event or Status Event Enable registers
Parameter	None.
Response	None.
Example	*RST
Note	*RST is specially configured to be compatible with SCPI remote control.

2.2.7 *SRE

Syntax	*SRE <enable mask>
Description	This command sets bits in the Service Request Enable register. A 1 in a bit in the enable register enables the corresponding bit in the Status Byte, also sets the Master Summary Status bit (DB7) in the Status Byte. The register is cleared at power-on. The *RST and *CLS commands do not affect the register.
Parameter	<enable mask> = <NUMERIC PROGRAM DATA> The bits and their values for the register: DB1 (1) = Port Event Summary DB2 (2) = Event Queue Summary for the currently selected application server. DB3 (4) = Error Queue Summary for all connected application servers. DB4 (8) = Questionable Status Summary DB5 (16) = Message Available (MAV) DB6 (32) = Standard Event Status Summary (ESB) DB7 = NOT USED DB8 (128) = Operation Status Summary <i>MINimum=0, MAXimum=255</i>
Response	None.
Example	*SRE 255
Note	All active sessions has their own Service Request Enable register.

Syntax	*SRE?
Description	This query returns the contents of the Service Request Enable register.
Parameter	None.
Response	<mask> = <NR1 NUMERIC RESPONSE DATA> See the *SRE command for bit values for the enable mask.
Example	*SRE? → 255
Note	

2.2.8 *STB?

Syntax	*STB?
Description	This query returns the contents of the Status Byte register. The Master Summary Status (MSS) bit is true when any bit of the STB register is set and a matching bit in the Service Request Enable Register is set, see *SRE. The Status Byte register including the MSS is not altered by this query.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA> The bits and their values for the register: DB1 (1) = Port Event Summary DB2 (2) = Event Queue Summary for the currently selected application server. DB3 (4) = Error Queue Summary for all connected application servers. DB4 (8) = Questionable Status Summary DB5 (16) = Message Available (MAV) DB6 (32) = Standard Event Status Summary (ESB) DB7 (64) = Master Summary Status (MSS) DB8 (128) = Operation Status Summary
Example	*STB? → 7
Note	

2.2.9 *TST?

Syntax	*TST?
Description	This query returns whether or not the instrument completed the self-test without any detected errors.
Parameter	None.
Response	<result> = <NR1 NUMERIC RESPONSE DATA> 0: No self-test errors detected 1: Self-test error detected
Example	*TST? → 0
Note	Self-test is performed automatically at the time of power up.

2.2.10 *WAI

Syntax	*WAI
Description	This command prevents the instrument from executing any further commands until the current command has been finished. All pending operations are completed during the wait period.
Parameter	None.
Response	None.
Example	*WAI
Note	*WAI functions for commands called "overlap command". For now Network Master does not have any overlap commands. So *WAI does not work on the current Network Master.

2.3 SCPI System Subsystem Commands

2.3.1 SYSTem:VERSion?

Syntax	SYSTem:VERSion?
Description	This query returns the SCPI revision to which the system complies.
Parameter	None.
Response	<version> = <NR2 NUMERIC RESPONSE DATA>
Example	SYST:VERS? → 1999.0
Note	

2.3.2 SYSTem:ERRor[:NEXT]?

Syntax	SYSTem:ERRor[:NEXT]?
Description	This query returns the oldest entry of the error queue and removes the returned entry from the queue.
Parameter	None.
Response	<error number> = <NR1 NUMERIC RESPONSE DATA> <description> = <STRING RESPONSE DATA>
Example	SYST:ERR? → -222,"Data out of range"
Note	All active sessions has their own error queue. Application server ID is added to each error message when the additional message is selected TEST or BOTH. Application server ID is -1 for system errors. Application server ID is fixed to 0 if no error message is in error queue. Error command is added to each error message when the additional message is selected COMMand or BOTH.

2.3.3 SYSTem:ERRor:ADDITIONal[:MESSAge]

Syntax	SYSTem:ERRor:ADDITIONal[:MESSAge] <message>
Description	This command select additional message in the error message.
Parameter	<message> = <CHARACTER PROGRAM DATA> NONE TEST COMMand BOTH
Response	None.
Example	SYST:ERR:ADD BOTH SYST:ERR? → -115,"Unexpected number of parameters:-1:INST:TERM"
Note	This setting is applied only for the current session and defaulted to NONE when session closed. See also section 2.3.2 SYSTem:ERRor[:NEXT]?

Syntax	SYSTem:ERRor:ADDITIONal[:MESSAge]?
Description	This query returns additional message in the error message.
Parameter	None.
Response	<message> = <CHARACTER RESPONSE DATA>
Example	SYST:ERR:ADD? → NON
Note	

2.3.4 SYSTem:DATE

Syntax	SYSTem:DATE <year>,<month>,<day>
Description	This command sets the date of the internal calender.
Parameters	<year> = <NUMERIC PROGRAM DATA> <i>MINimum = 1997, MAXimum = 2036</i>
	<month> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 12</i>
	<day> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 31</i>
Response	None.
Example	SYST:DATE 2009,12,31
Note	

Syntax	SYSTem:DATE?
Description	This query returns the date of the internal calender.
Parameter	None.
Response	<year>,<month>,<day> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:DATE? → 2009,07,04
Note	

2.3.5 SYSTem:TIME

Syntax	SYSTem:TIME <hour>,<minute>,<second>
Description	This command sets the time of the internal clock.
Parameters	<hour> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 23</i>
	<minute> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 59</i>
	<second> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 59</i>
Response	None.
Example	SYST:TIME 23,59,59
Note	

Syntax	SYSTem:TIME?
Description	This query gets the time of the internal clock.
Parameter	None.
Response	<hour>,<minute>,<second> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:TIME? → 15,45,03
Note	

2.3.6 SYSTem:REBoot

Syntax	SYSTem:REBoot
Description	This command will force a reboot of the instrument. A TCP remote connection to the instrument will be lost.
Parameter	None.
Response	None.
Example	SYST:REB
Note	

2.3.7 SYSTem:GPS:NSATellites?

Syntax	SYSTem:GPS:NSATellites?
Description	This query returns the number of satellites found by GNSS.
Parameter	None.
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:NSAT? → 5
Note	Returns "0" if GNSS is not available.

2.3.8 SYSTem:GPS:TIME?

Syntax	SYSTem:GPS:TIME?
Description	This query returns the GNSS time.
Parameter	None.
Response	<time> = <CHARACTER RESPONSE DATA>
Example	SYST:GPS:TIME? → 2014-01-01T12:34:56
Note	Returns "0" if GNSS is not available.

2.3.9 SYSTem:GPS:LOCation?

Syntax	SYSTem:GPS:LOCation?
Description	This query returns the latitude and longitude of the current location.
Parameter	None.
Response	<location> = <NR2 NUMERIC RESPONSE DATA>
Example	SYST:GPS:LOC? → 85 26.8444N, 22 20.4508E
Note	Returns "0" if GNSS is not available.

2.3.10 SYSTem:GPS:POSition?

Syntax	SYSTem:GPS:POSition?
Description	This query returns latitude, longitude, and altitude of the current position. Altitude means the ellipsoidal height.
Parameter	None.
Response	<position> = <NR2 NUMERIC RESPONSE DATA>
Example	SYST:GPS:POS? → 35.4458420N, 139.3429018E, 53.1m
Note	The response format is different from SYSTem: GPS: LOCation? of MU100090A.

2.3.11 SYSTem:GPS:POWER

Syntax	SYSTem:GPS:POWER <power>
Description	This command turns power of the MU100090A or MU100090B ON/OFF (1 - ON, 0 - OFF).
Parameters	<power> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 1
Response	None.
Example	SYST:GPS:POWE 0
Note	

Syntax	SYSTem:GPS:POWER?
Description	This query returns whether power of the MU100090A or MU100090B is ON or OFF (1 - ON, 0 - OFF).
Parameter	None.
Response	<power> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:POWE? → 0
Note	

2.3.12 SYSTem:GPS:SYNCmode

Syntax	SYSTem:GPS:SYNCmode <mode>
Description	This command sets sync mode of the MU100090A or MU100090B is set (1 - GPS, 0 - 1PPS Sync In).
Parameters	<mode> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 1
Response	None.
Example	SYST:GPS:SYNC 0
Note	

Syntax	SYSTem:GPS:SYNCmode?
Description	This query returns whether sync mode of the MU100090A or MU100090B (1 - GPS, 0 - 1PPS Sync In).
Parameter	None.
Response	<mode> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:SYNC? → 0
Note	

2.3.13 SYSTem:GPS:ANTNpower

Syntax	SYSTem:GPS:ANTNpower <power>
Description	This command switches voltage setting to be fed to the antenna from the MU100090A or MU100090B (2 - Off, 1 - 5V, 0 - 3.3V).
Parameters	<power> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 2
Response	None.
Example	SYST:GPS:ANTN 0
Note	Off is valid only when MU100090B is installed.

Syntax	SYSTem:GPS:ANTNpower?
Description	This query returns the voltage setting to be fed to the antenna from the MU100090A or MU100090B (2 - Off, 1 - 5V, 0 - 3.3V).
Parameter	None.
Response	<power> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:ANTN? → 0
Note	

2.3.14 SYSTem:GPS:GPS

Syntax	SYSTem:GPS:GPS <gps>
Description	This command enables or disables GPS/QZSS usage ON / OFF (1 - ON, 0 - OFF).
Parameters	<gps> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 1
Response	None.
Example	SYST:GPS:GPS 1
Note	

Syntax	SYSTem:GPS:GPS?
Description	This query returns whether GPS/QZSS usage is enabled or disabled(1 - ON, 0 - OFF).
Parameter	None.
Response	<gps> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:GPS? → 1
Note	

2.3.15 SYSTem:GPS:GLONass

Syntax	SYSTem:GPS:GLONass <glonass>
Description	This command enables or disables GLONASS usage (1 - ON, 0 - OFF).
Parameters	<glonass> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1</i>
Response	None.
Example	SYST:GPS:GLON 1
Note	Valid only if the Multi-GNSS option is installed. If there is no option, -221, "setting conflict" error will occur and it cannot be set.

Syntax	SYSTem:GPS:GLONass?
Description	This query returns whether GLONASS usage is enabled or disabled (1 - ON, 0 - OFF).
Parameter	None.
Response	<glonass> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:GLON? → 1
Note	This query is available even if there is no Multi-GNSS option. When there is no Multi-GNSS option, it is fixed at 0.

2.3.16 SYSTem:GPS:GALileo

Syntax	SYSTem:GPS:GALileo <galileo>
Description	This command enables or disables Galileo usage (1 - ON, 0 - OFF).
Parameters	<galileo> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1</i>
Response	None.
Example	SYST:GPS:GAL 1
Note	Valid only if the Multi-GNSS option is installed. If there is no option, -221, "setting conflict" error will occur and it cannot be set.

Syntax	SYSTem:GPS:GALileo?
Description	This query returns whether Galileo usage is enabled or disabled (1 - ON, 0 - OFF).
Parameter	None.
Response	<galileo> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:GAL? → 1
Note	This query is available even if there is no Multi-GNSS option. When there is no Multi-GNSS option, it is fixed at 0.

2.3.17 SYSTem:GPS:BEIDou

Syntax	SYSTem:GPS:BEIDou <beidou>
Description	This command enables or disables BeiDou usage (1 - ON, 0 - OFF).
Parameters	<beidou> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1</i>
Response	None.
Example	SYST:GPS:BEID 1
Note	Valid only if the Multi-GNSS option is installed. If there is no option, -221, "setting conflict" error will occur and it cannot be set.

Syntax	SYSTem:GPS:BEIDou?
Description	This query returns whether BeiDou usage is enabled or disabled (1 - ON, 0 - OFF).
Parameter	None.
Response	<beidou> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:BEID? → 1
Note	This query is available even if there is no Multi-GNSS option. When there is no Multi-GNSS option, it is fixed at 0.

2.3.18 SYSTem:GPS:MBANd

Syntax	SYSTem:GPS:MBANd <mband>
Description	This command enables or disables Multi band (1 - ON, 0 - OFF).
Parameters	<mband> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1</i>
Response	None.
Example	SYST:GPS:MBAN 1
Note	Valid only if the High Stability/Multi-band option is installed. If there is no option, -221, "setting conflict" error will occur and it cannot be set.

Syntax	SYSTem:GPS:MBANd?
Description	This query returns whether Multi band is enabled or disabled (1 - ON, 0 - OFF).
Parameter	None.
Response	<mband> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:MBAN? → 1
Note	This query is available even if there is no High Stability/Multi-band option. When there is no High Stability/Multi-band option, it is fixed at 0.

2.3.19 SYSTem:GPS:PWRElapsed?

Syntax	SYSTem:GPS:PWRElapsed?
Description	This query returns the elapsed time in seconds after the MU100090A or MU100090B was turned on (Power On Elapsed Time).
Parameter	None.
Response	<time> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:PWRE? → 0
Note	

2.3.20 SYSTem:GPS:LOCElapsed?

Syntax	SYSTem:GPS:LOCElapsed?
Description	This query returns the OSC Lock Elapsed Time of the MU100090A or MU100090B in seconds.
Parameter	None.
Response	<time> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:LOCE? → 0
Note	

2.3.21 SYSTem:GPS:SYNElapsed?

Syntax	SYSTem:GPS:SYNElapsed?
Description	This query returns the Sync Mode Elapsed Time of the MU100090A or MU100090B in seconds.
Parameter	None.
Response	<time> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:SYNE? → 0
Note	

2.3.22 SYSTem:GPS:EMASk

Syntax	SYSTem:GPS:EMASk <mask>
Description	This command set the elevation mask.
Parameters	<mask> = <NR2 NUMERIC PROGRAM DATA> <i>MINimum = 5, DEFault = 5, MAXimum = 90</i>
Response	None.
Example	SYST:GPS:EMAS 5
Note	Valid only if the High Stability/Multi-band or Multi-GNSS option is installed. If there is no option, -221, "setting conflict" error will occur and it cannot be set.

Syntax	SYSTem:GPS:EMASK?
Description	This query returns the elevation mask.
Parameter	None.
Response	<mask> = <NR2 NUMERIC RESPONSE DATA>
Example	SYST:GPS:EMAS? → 5
Note	This query is available even if there is not High Stability/Multi-band nor Multi-GNSS option. When there is no option, it is fixed at 5.

2.3.23 SYSTem:GPS:FPOStion

Syntax	SYSTem:GPS:FPOStion <position>
Description	This command enables or disables the Fixed Position check box on the MU100090B Setup dialog box (1 - ON, 0 - OFF).
Parameters	<position> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1</i>
Response	None.
Example	SYST:GPS:FPOS 0
Note	Valid only if the High Stability/Multi-band option is installed. If there is no option, -221, "setting conflict" error will occur and it cannot be set.

Syntax	SYSTem:GPS:FPOStion?
Description	This query returns the Fixed Position check box setting on the MU100090B Setup dialog box (1 - ON, 0 - OFF).
Parameter	None.
Response	<position> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:FPOS? → 0
Note	This query is available even if there is no High Stability/Multi-band option. When there is no High Stability/Multi-band option, it is fixed at 0.

2.3.24 SYSTem:GPS:LNUMber?

Syntax	SYSTem:GPS:LNUMber?
Description	This query returns the number of locations registered in the location list.
Parameter	None.
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:LNUM? → 0
Note	This query is available even if there is no High Stability/Multi-band option. When there is no High Stability/Multi-band option, it is fixed at 0.

2.3.25 SYSTem:GPS:LSElect

Syntax	SYSTem:GPS:LSElect <list>
Description	This command selects an index of the location information to be set as the fixed position.
Parameters	<list> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 1, <i>MAXimum</i> = 32
Response	None.
Example	SYST:GPS:LSEL 1
Note	Valid only if the High Stability/Multi-band option is installed. If there is no option, -221, "setting conflict" error will occur and it cannot be set.

Syntax	SYSTem:GPS:LSElect?
Description	This query returns the index of the location information selected as the fixed position.
Parameter	None.
Response	<list> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:LSEL? → 1
Note	This query is available even if there is no High Stability/Multi-band option. When there is no High Stability/Multi-band option, it is fixed at 0.

2.3.26 SYSTem:GPS:LLIST?

Syntax	SYSTem:GPS:LLIST? <list>
Description	This query returns the location information of the index specified by the <list> parameter.
Parameter	<list> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 1, <i>MAXimum</i> = 32
Response	<name> = <STRING RESPONSE DATA> <latitude> = <NR2 NUMERIC RESPONSE DATA> <longitude> = <NR2 NUMERIC RESPONSE DATA> <altitude> = <NR2 NUMERIC RESPONSE DATA> <altitude> means the ellipsoidal height.
Example	SYST:GPS:LLIST? 1 → "Anritsu", 35.4462305, 139.3425769, 53.1
Note	This query is available even if there is no High Stability/Multi-band option. When there is no High Stability/Multi-band option, it is fixed at 0. Returns positive values for east longitude and north latitude, and negative values for west longitude and south latitude.

2.3.27 SYSTem:GPS:LADD

Syntax	SYSTem:GPS:LADD <name>
Description	Adds location information of the location name specified by the <name> parameter to the fixed position list.
Parameters	<name> = <STRING PROGRAM DATA> Up to 64 characters.
Response	None.
Example	SYST:GPS:LADD "Anritsu"
Note	For latitude, longitude, and altitude, information on the current position is registered. The Location information added by this command is added to the end of the Location list. If the same Location name has already been registered, it will be -221, "setting conflict", and Location information cannot be added. Valid only if the High Stability/Multi-band option is installed. If there is no option, -221, "setting conflict" error will occur and it cannot be set.

2.3.28 SYSTem:GPS:LREMove

Syntax	SYSTem:GPS:LREMove <list>
Description	Deletes the location information of the index specified by the <list> parameter from fixed position list.
Parameter	<list> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 32</i>
Response	None.
Example	SYST:GPS:REM 1
Note	When the Location information in the middle of the list is deleted by this command, the list number of the subsequent list is decreased by -1. Valid only if the High Stability/Multi-band option is installed. If there is no option, -221, "setting conflict" error will occur and it cannot be set.

2.3.29 SYSTem:GPS:LEdit

Syntax	SYSTem:GPS:LEdit <list>, <name>, <latitude>, <longitude>, <altitude>
Description	Changes the location information of the index specified by the <list> parameter. <altitude> specifies the ellipsoidal height.
Parameters	<list> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 32</i> <name> = <STRING PROGRAM DATA> Up to 64 characters. <latitude> = <NR2 NUMERIC PROGRAM DATA> <longitude> = <NR2 NUMERIC PROGRAM DATA> <altitude> = <NR2 NUMERIC PROGRAM DATA>
Response	None.
Example	SYST:GPS:LED 1, "Anritsu", 35.4462305, 139.3425769, 53.1
Note	Valid only if the High Stability/Multi-band option is installed. If there is no option, -221, "setting conflict" error will occur and it cannot be set. Specify positive values for east longitude and north latitude, and negative values for west longitude and south latitude.

2.3.30 SYSTem:GPS:ADValue

Syntax	SYSTem:GPS:ADValue <drift>
Description	This command set MU100090B's allowable phase drift value(ns) during Holdover.
Parameters	<drift> = <NR2 NUMERIC PROGRAM DATA> <i>MINimum = 0, DEFault = 100, MAXimum = 1000</i>
Response	None.
Example	SYST:GPS:ADV 5
Note	

Syntax	SYSTem:GPS:ADValue?
Description	This query returns MU100090B's allowable phase drift value(ns).
Parameter	None.
Response	<drift> = <NR2 NUMERIC RESPONSE DATA>
Example	SYST:GPS:ADV? → 5
Note	

2.3.31 SYSTem:GPS:REFCorrection

Syntax	SYSTem:GPS:REFCorrection <correction>
Description	This command set MU100090B's 1PPS correction value(ns).
Parameters	<correction> = <NR1 NUMERIC PROGRAM DATA> <i>MINimum</i> = -100000000, <i>DEFault</i> = -1000000, <i>MAXimum</i> = 0
Response	None.
Example	SYST:GPS:REFC -100
Note	Valid only if the High Stability/Multi-band option is installed. If there is no option, -221, "setting conflict" error will occur and it cannot be set.

Syntax	SYSTem:GPS:REFCorrection?
Description	This query returns MU100090B's 1PPS correction value(ns).
Parameter	None.
Response	<correction> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:REFC? → -100
Note	This query is available even if there is no High Stability/Multi-band option. When there is no High Stability/Multi-band option, it is fixed at 0.

2.3.32 SYSTem:GPS:OPOLarity

Syntax	SYSTem:GPS:OPOLarity <signal>
Description	This command set MU100090B's 1PPS output polarity.
Parameters	<signal> = <CHARACTER PROGRAM DATA> POSitive: Positive NEGative: Negative DEFault = POS
Response	None.
Example	SYST:GPS:OPOL POS
Note	

Syntax	SYSTem:GPS:OPOLarity?
Description	This query returns MU100090B's output polarity.
Parameter	None.
Response	<signal> = <CHARACTER RESPONSE DATA>
Example	SYST:GPS:OPOL? → POS
Note	

2.3.33 SYSTem:GPS:MStatus?

Syntax	SYSTem:GPS:MStatus?
Description	This query returns MU100090B's status.
Parameter	None.
Response	<status> = <CHARACTER RESPONSE DATA> Off: MU100090B is turned off. INIT: Initializing WAIT: Wait for GPS/GNSS or 1PPS Sync. In The oscillator is waiting for the connecting the GPS/GNSS or 1pps Sync In signal. LEAR: Learning The oscillator is trying to synchronize with the signal of the GPS/GNSS or 1pps Sync In. SYNC: Synchronized with GPS/GNSS or 1PPS Sync. In The oscillator is synchronized with the signal of the GPS/GNSS or the 1pps Sync In. However, less than 3 hours have passed since the OSC LED turned on. FINE: Fine locked The oscillator is in synchronized status and 3 hours or more passed since the OSC LED turned on. HOLD: Holdover Running holdover. Phase drift and temperature are within range. OUT: Holdover (spec out) Running holdover. At least one of phase drift and temperature is out of range.
Example	SYST:GPS:MST? → INIT
Note	

2.3.34 SYSTem:GPS:HOLElapsed?

Syntax	SYSTem:GPS:HOLElapsed?
Description	This query returns MU100090B's holdover elapsed seconds.
Parameter	None.
Response	<time> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:HOLE? → 0
Note	Returns 0 if MU100090B is not in the Holdover state.

2.3.35 SYSTem:GPS:HOLRemaining?

Syntax	SYSTem:GPS:HOLRemaining?
Description	This query returns MU100090B's holdover remaining seconds until the Drift capacity is exceeded.
Parameter	None.
Response	<time> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:HOLR? → 0
Note	Returns 0 if MU100090B is not in the Holdover state.

2.3.36 SYSTem:GPS:RBTemperature?

Syntax	SYSTem:GPS:RBTemperature?
Description	This query returns Rb temperature of the MU100090A or MU100090B.
Parameter	None.
Response	<temperature> = <NR1 NUMERIC RESPONSE DATA>
Example	SYST:GPS:RBT? → 38.2
Note	

2.3.37 SYSTem:COMMunicate:TERMinator

Syntax	SYSTem:COMMunicate:TERMinator <terminator>
Description	This command sets the terminator code which is appended to the query response.
Parameter	<terminator> = <CHARACTER PROGRAM DATA> NONE(only GPIB) LF CRLF
Response	None.
Example	SYST:COMM:TERM LF
Note	This setting is applied only for the current session and defaulted to CRLF when session closed.

Syntax	SYSTem:COMMunicate:TERMinator?
Description	This query returns the terminator code which is appended to the query response.
Parameter	None.
Response	<terminator> = <CHARACTER RESPONSE DATA>
Example	SYST:COMM:TERM? → LF
Note	

2.3.38 SYSTem:PROMpt

Syntax	SYSTem:PROMpt <enable>
Description	This command enables or disables appending of prompt to all replies from Remote Control interface.
Parameter	<enable> = <BOOLEAN PROGRAM DATA>
Response	None.
Example	SYST:PROM 1
Note	The prompt string is "SCPI:> " This setting is applied only for the current session and forgets when session closed.

Syntax	SYSTem:PROMpt?
Description	This query returns whether the appending of prompt is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	SYST:PROM? → SCPI:>1
Note	

2.3.39 SYSTem:LOCal:CONTRol

Syntax	SYSTem:LOCal:CONTRol <enable>
Description	This command enables or disables local control.
Parameter	<enable> = <BOOLEAN PROGRAM DATA>
Response	None.
Example	SYST:LOC:CONT 1
Note	This setting is applied all connected sessions and forgets when turn off SCPI.

Syntax	SYSTem:LOCal:CONTRol?
Description	This query returns whether local control is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	SYST:LOC:CONT? → 1
Note	

2.3.40 SYSTem:NCONnectivity:COMunication:AUTH:TYPE

Syntax	SYSTem:NCONnectivity:COMunication:AUTH:TYPE <type>
Description	This command sets the authentication type for HTTP requests.
Parameter	<type> = <CHARACTER PROGRAM DATA> NONE: Does not use authentication. BASIC: Uses basic authentication. OAUTH20: Uses OAuth 2.0.
Response	None.
Example	SYST:NCON:COM:AUTH:TYPE BASIC
Note	

Syntax	SYSTem:NCONnectivity:COMunication:AUTH:TYPE?
Description	This query returns the authentication type set for HTTP requests.
Parameter	None.
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SYST:NCON:COM:AUTH:TYPE? → BASIC
Note	

2.3.41 SYSTem:NCONnectivity:COMunication:BASic

Syntax	SYSTem:NCONnectivity:COMunication:BASic <id>,<password>
Description	This command sets the ID and password for Basic authentication.
Parameter	<id> = <STRING PROGRAM DATA> <password> = <STRING PROGRAM DATA>
Response	None.
Example	SYST:NCON:COM:BAS "id","password"
Note	The ID and password can be up to 128 characters.

Syntax	SYSTem:NCONnectivity:COMunication:BASic?
Description	This query returns the ID and password for Basic authentication.
Parameter	None.
Response	<id> = <CHARACTER RESPONSE DATA> <password> = <CHARACTER RESPONSE DATA>
Example	SYST:NCON:COM:BAS? → id,*****
Note	<password> is the same number of asterisks as the number of characters in the password.

2.3.42 SYSTem:NCONnectivity:COMunication:TURi

Syntax	SYSTem:NCONnectivity:COMunication:TURi <uri>
Description	This command sets the URI to upload scenario results.
Parameter	<uri> = <STRING PROGRAM DATA>
Response	None.
Example	SYST:NCON:COM:TUR "https://sample.net/upload"
Note	A URI can be up to 2048 characters.

Syntax	SYSTem:NCONnectivity:COMunication:TURi?
Description	This query returns the URI to upload scenario results.
Parameter	None.
Response	<uri> = <CHARACTER RESPONSE DATA>
Example	SYST:NCON:COM:TUR? → https://sample.net/upload
Note	

2.3.43 SYSTem:NCONnectivity:COMunication:SET

Syntax	SYSTem:NCONnectivity:COMunication:SET <uri>
Description	This command sends an HTTP GET request to the specified URI.
Parameter	<uri> = <STRING PROGRAM DATA>
Response	None.
Example	SYST:NCON:COM:SET "https://sample.net/config?argument=sample" SYST:NCON:COM:LRET:RST? → 0 SYST:WAIT:DUR 5 SYST:NCON:COM:LRET:RST? → 1 SYST:NCON:COM:LRET:ERR? → 0, "No error." SYST:NCON:COM:LRET:RRES? → {"key": "value"}
Note	The URI can be up to 2048 characters.

2.3.44 SYSTem:NCONnectivity:COMunication:LRETurn:RRESponse?

Syntax	SYSTem:NCONnectivity:COMunication:LRETurn:RRESponse?
Description	This query returns a response to the sent HTTP GET request.
Parameter	None.
Response	<response>=<CHARACTER RESPONSE DATA>
Example	SYST:NCON:COM:LRET:RRES? → {"key": "value"}
Note	The maximum number of characters in <response> is 65636.

2.3.45 SYSTem:NCONnectivity:COMunication:LRETurn:RSTatus?

Syntax	SYSTem:NCONnectivity:COMunication:LRETurn:RSTatus?
Description	This query returns whether the Network Master successfully receives a response to the HTTP GET request.
Parameter	None.
Response	<status>=<NR1 NUMERIC RESPONSE DATA> 0: Incomplete 1: Done
Example	SYST:NCON:COM:LRET:RST? → 1
Note	

2.3.46 SYSTem:NCONnectivity:COMunication:LRETurn:ERRor?

Syntax	SYSTem:NCONnectivity:COMunication:LRETurn:ERRor?
Description	This query returns an error status when it fails to receive an HTTP response.
Parameter	None.
Response	<error>=<NR1 NUMERIC RESPONSE DATA> <message>=<STRING RESPONSE DATA> 0: No error. 1: Network Master is not connected to the cloud server. 2: The network was disconnected. 3: Log in to the cloud server, and implement OAuth 2.0 authentication. 4: An unexpected error occurred on the cloud server. 5: Failed to connect to the specified server. 6: An unexpected error was returned from the specified server. 7: The received response is in an invalid format. 8: Invalid ID or password for Basic authentication. 9: The request timed out. 10: Invalid license for MX109020A-003.
Example	SYST:NCON:COM:LRET:ERR? → 0, "No error."
Note	

2.3.47 SYSTem:UTILity:SANalysis:STARt

Syntax	SYSTem:UTILity:SANalysis:STARt <type>,<file>,<parameters>[,<reportfile>]
Description	This command starts the Sync Analysis application.
Parameters	<type> = <CHARACTER PROGRAM DATA> SWANder: SyncE Wander PDVFpp: IEEE1588v2 - PDV/FPP PSELte: IEEE1588v2 - Packet selected TE PWANder: IEEE1588v2 - Wander PPSWander: 1PPS Wander <file> = <STRING PROGRAM DATA> The path and name of the file to load <parameters> = <STRING PROGRAM DATA> The path and name of the parameter configuration file <reportfile> = <STRING PROGRAM DATA> The path and name of the report file
Response	None.
Example	SYST:UTIL:SAN:STAR PDVF, "Internal/PDVFPP.owd", "Internal/PDVFPP.cfg", "Internal/Result.pdf"
Note	

2.3.48 SYSTem:UTILity:SANalysis:STATus?

Syntax	SYSTem:UTILity:SANalysis:STATus?
Description	This query returns the status of the Sync Analysis application.
Parameter	None.
Response	<status>=<NR1 NUMERIC RESPONSE DATA> 0: The Sync Analysis application has never been started. 1: The Sync Analysis application has started and is running an analysis. 2: The analysis is complete. Negative value: The analysis was aborted due to an error. In this case, the code will be the value corresponding to the SCPI error code. Example: -200 = Execution error, -220 = Parameter error etc.
Example	SYST:UTIL:SAN:STAT? → 0
Note	

2.3.49 SYSTem:UTILity:SANalysis:RESult:SUMMary?

Syntax	SYSTem:UTILity:SANalysis:RESult:SUMMary?
Description	This query returns the results of measurement by the Sync Analysis application.
Parameter	None.
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Format: String : total, result Numeric : value SyncE Wander <total>,(<mtie result>,<tdev result>) IEEE1588v2 - PDV/FPP <total>,(<pdv f value>,<pdv f result>),(<pdv r value>,<pdv r result>), (<fpp f value>,<fpp f result>),(<fpp r value>,<fpp r result>) IEEE1588v2 - Packet selected TE <total>,(<apts value>,<apts result>),(<pts value>,<pts result>) IEEE1588v2 - Wander <total>,(<mtie result>),(<tdev result>),(<tel value>,<tel result>),(<dteh value>,<dteh result>) 1PPS Wander <total>,(<mtie result>),(<tdev result>),(<tel value>,<tel result>),(<dteh value>,<dteh result>)
Example	SYST:UTIL:SAN:RES:SUMM? → PASS, (PASS,PASS)
Note	

2.3.50 SYSTem:DTIMestamp?

Syntax	SYSTem:DTIMestamp?
Description	This query returns the current time.
Parameter	None.
Response	<timestamp> = <CHARACTER RESPONSE DATA> Format: String : yyyyMMddhhmmss yyyy: year MM: month dd: day hh: hour mm: minute ss: second
Example	SYST:DTIM? → 20210715153342
Note	

2.3.51 SYSTem:TIMing:EXTernal?

Syntax	SYSTem:TIMing:EXTernal?
Description	This query returns external clock input signal status.
Response	<clock> = <STRING RESPONSE DATA> "2M" : 2MHz clock or E1 (SETS) signal "1.5M" : T1 (BITS) signal "10M" : 10MHz clock signal "N/A" : No Input
Example	SYST:TIM:EXT? → "2M"
Note	There must be a connected application server for this command to be recognized as a legal command.

2.3.52 SYSTem:STIMuli:INSert

Syntax	SYSTem:STIMuli:INSert
Description	This command emulates pressing the Error Insert button of the GUI. Errors are inserted in the outgoing data stream according to the configuration of the active Stimuli setup(s).
Parameter	None.
Response	None.
Example	SYST:STIM:INS
Note	There must be a connected application server for this command to be recognized as a legal command.

2.3.53 SYSTem:STIMuli:CLR

Syntax	SYSTem:STIMuli:CLR
Description	This command clears the Stimuli setup(s) for all interfaces.
Parameter	None.
Response	None.
Example	SYST:STIM:CLR
Note	There must be a connected application server for this command to be recognized as a legal command.

2.3.54 SYSTem:WAIT[:IDLE]

Syntax	SYSTem:WAIT[:IDLE]
Description	This command waits for the instrument to go into IDLE state, i.e. no measurement or test is pending, running, loading or being stored. It also waits for load and save of settings to finish.
Parameter	None.
Response	None.
Example	SYST:WAIT
Note	Be careful when using this command as it may lead to undesired blocking of the remote interface. In some situations the instrument requires a remote command or other user intervention in order to return to IDLE state; e.g. when a measurement is running and measurement stop mode is set to MANual. In this situation, for the instrument to return to IDLE state press the START/STOP button on the GUI. The latter is NOT possible if SYST:WAIT:IDLE is currently being executed. If an undesired blocking occurs close and re-open the remote connection. And then send *RST command to reset undesired blocking remote connection.

2.3.55 SYSTem:WAIT:DURation

Syntax	SYSTem:WAIT:DURation <seconds>
Description	This command waits for the specified number of seconds.
Parameter	<seconds> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 3600</i>
Response	None.
Example	SYST:WAIT:DUR 5
Note	There must be a connected application server for this command to be recognized as a legal command.

2.3.56 SYSTem:APPLication

Syntax	SYSTem:APPLication <application>
Description	This command selects between the BERT, APS and RTD applications <application> = <CHARACTER PROGRAM DATA> BERT: BERT Application APS: APS Application RTD: RTD Application <i>DEFault = BERT</i>
Response	None.
Example	SYST:APP BERT
Note	This command only applies in the OTN or SDH/SONET/PDH/DSn BERT applications.

2.3.57 SYSTem:APPLication?

Syntax	SYSTem:APPLication?
Description	This command returns the application type
Response	<app> = <CHARACTER PROGRAM DATA> BERT: BERT Application APS: APS Application RTD: RTD Application
Example	SYST:APP? → BERT
Note	This command only applies in the OTN or SDH/SONET/PDH/DSn BERT applications.

2.4 SCPI Instrument Subsystem Commands

To use the application-specific SCPI commands, you need to connect the client session to the application server. By sending SCPI commands to the application server connected, you can control the application.

2.4.1 Connection to Application Server

To connect the client session to the application server, do one of the following:

- Use the `INST:CONN:ALL` command.
This command connects a client session to the application server which is not occupied.
If a different client session is already connected to the server (application server is occupied), the connection attempt fails.
- Use the `INST:CONN` command.
This command connects a client session to all application servers which are not occupied.
- Use the `INST:STAR` command.
This command starts a new application server and connects a client session to the application server.

2.4.2 Connection to multiple applications

A client session can connect to multiple application servers simultaneously. In this case, the SCPI command destination will be the selected application server.

The destination can be set by using the `INST:SEL` command. To confirm the selected application server, use the `INST?` command.

When a new application server has started by the `INST:STAR` command, the SCPI command destination will be changed to the newly started application server.

2.4.3 Connection from multiple users

When using a Network Master by multi-users, multiple client sessions connect to a Network Master. Under this condition, make sure that the application server is not occupied by any other user.

If a client session has already connected to an application server, Network Master cannot connect any other client session to the application server.

To connect to the application server occupied by a client session, you need to release the application server by disconnecting the client session which is connecting currently. To release the application server, do one of the following:

- Use the `INST:DISC` command.
You can disconnect the server by sending the `INST:DISC` command from the connecting client session.
- Terminate the Client Session.
After the client session terminated, all application servers to which the client session was connected are released.
You can terminate the client session by disconnecting connection to Network Master from the User PC.

You can connect a client session to the released application server again by using the `INST:CONN` command or the `INST:CONN:ALL` command.

2.4.4 Force Termination of Application Server

An application server to which a session is connecting doesn't receive SCPI commands from any other session. An exception is the `INST:TERM:FORC` command. This command is always accepted even if sent from the other session and terminates the application server to which a session is connecting.

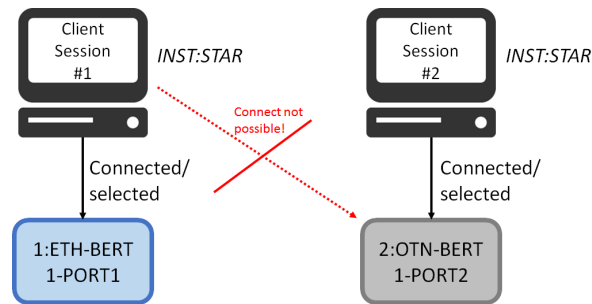 


Figure 2.1: `INST:STAR` automatically *connects* and selects started application server.

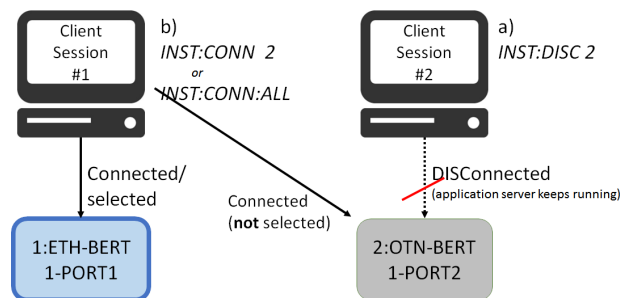 


Figure 2.2: Original client session has to *disconnect*, before another client session can *connect*.

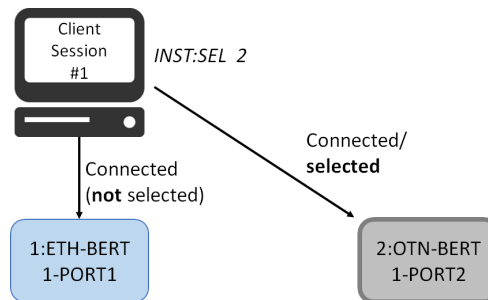 


Figure 2.3: When connected to multiple application servers, client session *selects* to which application server the application specific commands are dispatched.

2.4.5 INSTRument:STARt[:DEFAult]

Syntax	INSTRument:STARt[:DEFAult] <app name>[, <port name>[, <port name>, ...]]
Description	This command starts an application server with default settings.
Parameters	<app name> = <CHARACTER PROGRAM DATA> TP-APS-OTN: OTN Automatic Protection Switching application. TP-APS-SDHPDH: SDH/PDH Automatic Protection Switching application. TP-APS-SDHPDH-OTN: SDH/PDH over OTN Automatic Protection Switching application. TP-BERT-CPRI: CPRI Bit Error Rate Test application. TP-BERT-CPRI-OTN: CPRI over OTN Bit Error Rate Test application. TP-BERT-ETH: Ethernet Bit Error Rate Test application. TP-BERT-ETH-OTN: Ethernet over OTN Bit Error Rate Test application. TP-BERT-FC: Fibre Channel Bit Error Rate Test application. TP-BERT-FC-OTN: Fibre Channel over OTN Bit Error Rate Test application. TP-BERT-OTN: OTN Bit Error Rate Test application. TP-BERT-ROE: eCPRI/RoE Bit Error Rate Test application.

continued on next page...

...continued from previous page

	TP-BERT-SDHPDH: PDH/SDH Bit Error Rate Test application. TP-BERT-SDHPDH-OTN: PDH/SDH over OTN Bit Error Rate Test application. TP-NPBERT-ETH: Ethernet N-PORT BERT application. TP-CABLE-ETH: Ethernet cable test application. TP-CHSTAT-ETH: Ethernet channel statistics application. TP-DISC-ETH: Ethernet discovery application. TP-MONGEN-ETH: Ethernet monitor/generate application. TP-MONGEN-ETH-OTN: Ethernet over OTN monitor/generate application. TP-NOFRAME-DEVICE: No frame device test (Unframed Bit Error Rate Test) application. TP-PASS-CPRI: CPRI pass-through application. TP-PASS-ETH: Ethernet pass-through application. TP-PERF-FC: Fibre Channel performance test application. TP-PERF-FC-OTN: Fibre Channel over OTN performance test application. TP-PING-ETH: Ethernet ICMP ping application. TP-REFL-ETH: Ethernet reflector application. TP-REFL-ETH-OTN: Ethernet over OTN reflector application. TP-REFL-FC: Fibre Channel reflector application. TP-REFL-FC-OTN: Fibre Channel over OTN reflector application. TP-RFC-ETH: Ethernet RFC-2544 test application. TP-RFC-ETH-OTN: Ethernet over OTN RFC-2544 test application. TP-RFC6349-ETH: Ethernet RFC-6349 test application. TP-RTD-OTN: OTN Round Trip Delay test application. TP-RTD-SDHPDH: SDH/PDH Round Trip Delay test application. TP-RTD-SDHPDH-OTN: SDH/PDH Round Trip Delay test application. TP-SAT-ETH: Ethernet Service Activation Test application. TP-SAT-ETH-OTN: Ethernet over OTN Service Activation Test application. TP-SYNCTEST-ETH: Ethernet sync test application. TP-TRACE-ETH: Ethernet trace-route application. OTDR-OTDR: Standard OTDR application. OTDR-OLTS: OLTS application.
	<port name> = <CHARACTER PROGRAM DATA> 1-PORT1: Port 1 on module 1 1-PORT2: Port 2 on module 1 2-PORT1: Port 1 on module 2 2-PORT2: Port 2 on module 2 1-PORT-SING1: Single port 1 on module 1 (for MU110011A/MU110012A/MU110013A) 1-PORT-MULT1: Port 1 on module 1 (for TP-BERT-ROE with "25G eCPRI/RoE Dual Ability") 1-PORT-MULT2: Port 2 on module 1 (for TP-BERT-ROE with "25G eCPRI/RoE Dual Ability") The physical port(s) given as parameters are assigned to logical port numbers in the application server. The logical port number range is from 1 to the actual number of port assigned to the application server. The list of ports returned by the <code>INSTRument:STATe? <id></code> command reveals the virtual port number sequence. The ports will be shown sorted in (1st) module order and (2nd) port order.
Response	None.
Example	INST:STAR TP-BERT-OTN,1-PORT1 INST? → 2
Note	Operators can get started application server ID by using the <code>INSTRument:SELeCt?</code> command. When you start an application server, the application server will be connected and selected automatically. When using this command, the application server will be started with DEFault setup.

2.4.6 INStrument:STARt:LAST

Syntax	INStrument:STARt:LAST <app name>[, <port name>[, <port name>,...]]
Description	This command starts an application server and loads the applicable auto saved settings.
Parameters	The parameters of this command are similar to the parameters of the INStrument:STARt[:DEFAUlt] command above.
Response	None.
Example	INST:STAR:LAST TP-BERT-OTN,1-PORT1 INST? → 2
Note	When you start an application server, the application server will be connected and selected automatically. When using this command, the application server will be started with LAST setup.

2.4.7 INStrument:STARt:GUI

Syntax	INStrument:STARt:GUI [<test index>]
Description	This command starts the GUI display during remote control.
Parameter	<test index> = <NUMERIC PROGRAM DATA>
Response	None.
Example	INST:STAR TP-BERT-OTN,1-PORT1 INST? → 2 INST:STAR:GUI 2
Note	Must connect to the application server first. Defaults to the current application server if a value is omitted.

2.4.8 INStrument:TERMinate

Syntax	INStrument:TERMinate [<test index>]
Description	This command terminates an application server.
Parameter	<test index> = <NUMERIC PROGRAM DATA>
Response	None.
Example	INST:STAR TP-BERT-OTN,1-PORT1 INST? → 2 INST:TERM 2
Note	Must connect to the application server first. Defaults to the current application server if a value is omitted.

2.4.9 INStrument:TERMinate:FORCe

Syntax	INStrument:TERMinate:FORCe [<test index>]
Description	This command force terminates an application server.
Parameter	<test index> = <NUMERIC PROGRAM DATA>
Response	None.
Example	INST:STAR TP-BERT-OTN,1-PORT1 INST? → 2 INST:TERM:FORC 2
Note	WARNING. This command can terminate the application to which the other session communicating. Defaults to the current application server if a value is omitted.

2.4.10 INStrument:COUNt?

Syntax	INStrument:COUNt?
Description	This query returns the number of active application servers.
Parameter	None.
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	INST:COUN? → 2
Note	

2.4.11 INSTrument:CATalog?

Syntax	INSTrument:CATalog?
Description	This query returns test indices, application name and port name of all active application servers.
Parameter	None.
Response	<test index> = <EXPRESSION RESPONSE DATA> Expression format: (<test index>,<app name>,<port name>)
Example	INST:CAT? → (1,TP-SAT-ETH,1-PORT1),(2,TP-BERT-SDHPDH,1-PORT2)
Note	Return -1 if no application server is running.

2.4.12 INSTrument:STATe?

Syntax	INSTrument:STATe? <test index>
Description	This query returns status information about a given application server.
Parameter	<test index> = <NUMERIC PROGRAM DATA>
Response	<app name> = <CHARACTER RESPONSE DATA> <client connection> = <CHARACTER RESPONSE DATA> NON IP Address <select status> = <CHARACTER RESPONSE DATA> NON SELECTED <port name> = <CHARACTER RESPONSE DATA> Expression format: Character list
Example	INST:STAT? 1 → TP-BERT-OTN,192.168.128.21,SELECTED,1-PORT1,2-PORT2...
Note	

2.4.13 INSTrument:CONNect

Syntax	INSTrument:CONNect <test index>
Description	This command allows client session to connect to an existing application server.
Parameter	<test index> = <NUMERIC PROGRAM DATA>
Response	None.
Example	INST:CONN 1
Note	This command fails if the application server is already connect to by another client session. Use INSTrument:CATalog? query to acquire the list of all existing application servers. If command succeeds, the application server will be selected automatically.

2.4.14 INSTrument:CONNect:ALL

Syntax	INSTrument:CONNect:ALL
Description	This command allows client session to connect to all existing application servers.
Parameter	None.
Response	None.
Example	INST:CONN:ALL
Note	This command fails if no application server is selected when the command exits, e.g. because all application servers was already connected to by other client sessions, or because there are no application servers at all. If connected to multiple application servers, the application server with the lowest index will be selected, but selected index will not change if an application server was already selected prior to issuing this command.

2.4.15 INSTRument:CONNect[:CATalog]?

Syntax	INSTRument:CONNect[:CATalog]?
Description	This query returns indices of all application servers for the current client session.
Parameter	None.
Response	<test index> = <EXPRESSION RESPONSE DATA> Expression format: Numeric list
Example	INST:CONN? → 0,1,...
Note	Return -1 if current client session has no application servers.

2.4.16 INSTRument:DISConnect

Syntax	INSTRument:DISConnect <test index>
Description	This command disconnect the application server from the client session.
Parameter	<test index> = <NUMERIC PROGRAM DATA>
Response	None.
Example	INST:DISC 1
Note	When current application is disconnected, the application server lowest ID will be selected automatically. When a client session is disconnected all the currently connected application servers will be disconnected automatically.

2.4.17 INSTRument[:SElect]

Syntax	INSTRument[:SElect] <test index>
Description	This command select the current application server.
Parameter	<test index> = <NUMERIC PROGRAM DATA>
Response	None.
Example	INST:STAR TP-BERT-OTN,1-PORT1 INST? → 1 INST:STAR TP-BERT-OTN,1-PORT2 INST? → 2 INST 1
Note	All future commands are forwarded to the current application server until the current application server is changed.

Syntax	INSTRument[:SElect]?
Description	This query returns index of the currently selected application server.
Parameter	None.
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	INST:STAR TP-BERT-OTN,1-PORT1 INST? → 1 INST:STAR TP-BERT-OTN,1-PORT2 INST? → 2 INST 1
Note	Return -1 if current client session does not have a currently selected application server.

2.4.18 INSTRument:ERRor[:NEXT]?

Syntax	INSTRument:ERRor[:NEXT]?
Description	This query returns the oldest entry of the event queue for the currently selected application server and removes the returned entry from the queue.
Parameter	None.
Response	<description> = <STRING RESPONSE DATA>
Example	INST:ERR? → "Signal abnormal"
Note	Application server has its own event queue. This event queue is not destroyed when the session is closed. Before checking the server status by using this command, controller may check DB2 (Event Queue Summary) of the Status Byte Register to see if it is set. DB2 of the Status Byte Register will aggregate input from potentially many application servers, and clear if event queues of all servers are empty.

2.4.19 INSTRument:PORT?

Syntax	INSTRument:PORT?
Description	This query returns ports assigned for the currently selected application server.
Parameter	None.
Response	<port name> = <CHARACTER RESPONSE DATA> Expression format: Character list
Example	INST:STAR TP-BERT-OTN,1-PORT1,1-PORT2 INST:PORT? → 1-PORT1,1-PORT2
Note	Operates on the application server currently selected by the INSTRument:SElect command. Returns NON if the client session does not have a currently selected application server. Returns NON if no ports are assigned for the currently selected application server.

2.4.20 INSTRument:PORT:FREE?

Syntax	INSTRument:PORT:FREE? <app name>
Description	This query returns all unused ports for the target application name.
Parameter	<app name> = <CHARACTER PROGRAM DATA>
Response	<port name> = <CHARACTER RESPONSE DATA> Expression format: Character list
Example	INST:PORT:FREE? TP-BERT-OTN → 1-PORT1,1-PORT2
Note	

2.4.21 INSTRument:PORT:CATalog?

Syntax	INSTRument:PORT:CATalog?
Description	This query returns all ports of device.
Parameter	None.
Response	<port name> = <CHARACTER RESPONSE DATA> Expression format: Character list
Example	INST:PORT:CAT? → 1-PORT1,1-PORT2
Note	When SCPI client uses any of the STATus:PORT: commands, <bit> index is the same as returned by the INSTRument:PORT:CATalog?

2.4.22 INSTRument:MODule:CATalog?

Syntax	INSTRument:MODule:CATalog?
Description	This query returns module names of device.
Parameter	None.
Response	{<module n>,*} = <CHARACTER RESPONSE DATA>
Example	INST:MOD:CAT? → MU100010A,MU100011A
Note	

2.4.23 INSTRument:CTRL:NAME?

Syntax	INSTRument:CTRL:NAME?
Description	This query returns model name.
Parameter	None.
Response	<model name> = <CHARACTER RESPONSE DATA>
Example	INST:CTRL:NAME? → MT1000A
Note	

2.4.24 INSTRument:CTRL:SN?

Syntax	INSTRument:CTRL:SN?
Description	This query returns controller serial number.
Parameter	None.
Response	<serial number> = <CHARACTER RESPONSE DATA>
Example	INST:CTRL:SN? → 1234567890
Note	

2.4.25 INSTRument:CTRL:TRT?

Syntax	INSTRument:CTRL:TRT?
Description	This query returns controller total run time(sec).
Parameter	None.
Response	<time> = <NR1 NUMERIC RESPONSE DATA>
Example	INST:CTRL:TRT? → 5000000
Note	

2.4.26 INSTRument:CTRL:OPTion:CATalog?

Syntax	INSTRument:CTRL:OPTion:CATalog?
Description	This query returns controller enabled options.
Parameter	None.
Response	{<option n>,*} = <CHARACTER RESPONSE DATA>
Example	INST:CTRL:OPT:CAT? → MT1000A-303,MT1000A-005
Note	

2.4.27 INSTRument:MODule<Md>:NAME?

Syntax	INSTRument:MODule<Md>:NAME?
Description	This query returns module model number.
Parameter	None.
Response	<model name> = <CHARACTER RESPONSE DATA>
Example	INST:MOD1:NAME? → MU100010A
Note	

2.4.28 INSTRument:MODule<Md>:SN?

Syntax	INSTRument:MODule<Md>:SN?
Description	This query returns module serial number.
Parameter	None.
Response	<serial number> = <CHARACTER RESPONSE DATA>
Example	INST:MOD1:SN? → 1234567890
Note	

2.4.29 INSTrument:MODule<Md>:TRT?

Syntax	INSTrument:MODule<Md>:TRT?
Description	This query returns module total run time(sec).
Parameter	None.
Response	<time> = <NR1 NUMERIC RESPONSE DATA>
Example	INST:MOD1:TRT? → 5000000
Note	

2.4.30 INSTrument:MODule<Md>:OPTion:CATalog?

Syntax	INSTrument:MODule<Md>:OPTion:CATalog?
Description	This query returns module enabled options.
Parameter	None.
Response	{<option n>,*} = <CHARACTER RESPONSE DATA>
Example	INST:MOD1:OPT:CAT? → MU100010A-001,MU100010A-002
Note	

2.5 SCPI Status Subsystem Commands

2.5.1 STATus:OPERation[:EVENTt]?

Syntax	STATus:OPERation[:EVENTt]?
Description	This query returns and clears the operation event register.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA> The bits and their values for the register: DB1-DB4 = NOT USED DB5 (16) = Measuring DB6-DB16 = NOT USED
Example	STAT:OPER? → 16
Note	All active sessions has their own register and it is cleared when the session starts.

2.5.2 STATus:OPERation:CONDition?

Syntax	STATus:OPERation:CONDition?
Description	This query returns the operation condition register.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA> The bits and their values for the register: DB1-DB4 = NOT USED DB5 (16) = Measuring DB6-DB16 = NOT USED
Example	STAT:OPER:COND? → 16
Note	

2.5.3 STATus:OPERation:ENABle

Syntax	STATus:OPERation:ENABle <mask>
Description	This command sets the enable mask for the operation event register.
Parameter	<mask> = <NUMERIC PROGRAM DATA> The bits and their values for the register: DB1-DB4 = NOT USED DB5 (16) = Measuring DB6-DB16 = NOT USED <i>MINimum = 0, MAXimum = 65535</i>
Response	None.
Example	STAT:OPER:ENAB 65535
Note	

Syntax	STATus:OPERation:ENABle?
Description	This query returns the enable mask for the operation event register.
Parameter	None.
Response	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	STAT:OPER:ENAB? → 16
Note	

2.5.4 STATus:OPERation:PTRansition

Syntax	STATus:OPERation:PTRansition <mask>
Description	This command sets the positive transition filter for the operation event register.
Parameter	<mask> = <NUMERIC PROGRAM DATA> The bits and their values for the register: DB1-DB4 = NOT USED DB5 (16) = Measuring DB6-DB16 = NOT USED <i>MINimum = 0, DEFault = 65535, MAXimum = 65535</i>
Response	None.
Example	STAT:OPER:PTR 16384
Note	

Syntax	STATus:OPERation:PTRansition?
Description	This query returns the positive transition filter for the operation event register.
Parameter	None.
Response	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	STAT:OPER:PTR? → 16384
Note	

2.5.5 STATus:OPERation:NTRansition

Syntax	STATus:OPERation:NTRansition <mask>
Description	This command sets the negative transition filter for the operation event register.
Parameter	<mask> = <NUMERIC PROGRAM DATA> The bits and their values for the register: DB1-DB4 = NOT USED DB5 (16) = Measuring DB6-DB16 = NOT USED <i>MINimum = 0, MAXimum = 65535</i>
Response	None.
Example	STAT:OPER:NTR 16384
Note	

Syntax	STATus:OPERation:NTRansition?
Description	This query returns the negative transition filter for the operation event register.
Parameter	None.
Response	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	STAT:OPER:NTR? → 16384
Note	

2.5.6 STATus:QUEStionable[:EVENTt]?

Syntax	STATus:QUEStionable[:EVENTt]?
Description	This query returns and clears the questionable event register.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA> The bits and their values for the register: DB1-DB14 = NOT USED DB15 (16384) = Command Warning DB16 = NOT USED
Example	STAT:QUES? → 16384
Note	All active sessions has their own register and it is cleared when the session starts.

2.5.7 STATus:QUEStionable:CONDition?

Syntax	STATus:QUEStionable:CONDition?
Description	This query returns the questionable condition register.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA> The bits and their values for the register: DB1-DB14 = NOT USED DB15 (16384) = Command Warning DB16 = NOT USED
Example	STAT:QUES:COND? → 16384
Note	

2.5.8 STATus:QUEStionable:ENABle

Syntax	STATus:QUEStionable:ENABle <mask>
Description	This command sets the enable mask for the questionable event register.
Parameter	<mask> = <NUMERIC PROGRAM DATA> The bits and their values for the register: DB1-DB14 = NOT USED DB15 (16384) = Command Warning DB16 = NOT USED <i>MINimum = 0, MAXimum = 65535</i>
Response	None.
Example	STAT:QUES:ENAB 16384
Note	

Syntax	STATus:QUEStionable:ENABle?
Description	This query returns the enable mask for the questionable event register.
Parameter	None.
Response	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	STAT:QUES:ENAB? → 16384
Note	

2.5.9 STATus:QUEStionable:PTRansition

Syntax	STATus:QUEStionable:PTRansition <mask>
Description	This command sets the positive transition filter for the questionable event register.
Parameter	<mask> = <NUMERIC PROGRAM DATA> The bits and their values for the register: DB1-DB14 = NOT USED DB15 (16384) = Command Warning DB16 = NOT USED <i>MINimum = 0, DEFault = 65535, MAXimum = 65535</i>
Response	None.
Example	STAT:QUES:PTR 16384
Note	

Syntax	STATus:QUEStionable:PTRansition?
Description	This query returns the positive transition filter for the questionable event register.
Parameter	None.
Response	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	STAT:QUES:PTR? → 16384
Note	

2.5.10 STATus:QUEStionable:NTRansition

Syntax	STATus:QUEStionable:NTRansition <mask>
Description	This command sets the negative transition filter for the questionable event register.
Parameter	<mask> = <NUMERIC PROGRAM DATA> The bits and their values for the register: DB1-DB14 = NOT USED DB15 (16384) = Command Warning DB16 = NOT USED <i>MINimum = 0, MAXimum = 65535</i>
Response	None.
Example	STAT:QUES:NTR 16384
Note	

Syntax	STATus:QUEStionable:NTRansition?
Description	This query returns the negative transition filter for the questionable event register.
Parameter	None.
Response	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	STAT:QUES:NTR? → 16384
Note	

2.5.11 STATus:PORT[:EVENTt]?

Syntax	STATus:PORT[:EVENTt]? <port name>
Description	This query returns and clears the port event register.
Parameter	<port name> = <CHARACTER PROGRAM DATA> Expression format: Character list
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	STAT:PORT? 1-PORT1 → 1
Note	All active sessions has their own register and it is cleared when the session starts. <port name> is the same as the one returned by INSTRument:PORT:CATalog?.

2.5.12 STATus:PORT:CONDition?

Syntax	STATus:PORT:CONDition? <port name>
Description	This query returns the port condition register.
Parameter	<port name> = <CHARACTER PROGRAM DATA> Expression format: Character list
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	STAT:PORT:COND? 1-PORT1 → 1
Note	<port name> is the same as one of the returned by the INSTRument:PORT:CATalog?

2.5.13 STATus:PORT:ENABLE

Syntax	STATus:PORT:ENABLE <port name>,<enable>
Description	This command sets the enable mask for the port event register.
Parameters	<port name> = <CHARACTER PROGRAM DATA> Expression format: Character list <enable> = <BOOLEAN PROGRAM DATA>
Response	None.
Example	STAT:PORT:ENAB 1-PORT1,ON
Note	<port name> is the same as one of the returned by the INSTRument:PORT:CATalog?

Syntax	STATus:PORT:ENABle? <port name>
Description	This query returns the enable mask for the port event register.
Parameter	<port name> = <CHARACTER PROGRAM DATA> Expression format: Character list
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	STAT:PORT:ENAB? 1-PORT1 → 1
Note	<port name> is the same as one of the returned by the INSTRument:PORT:CATalog?

2.5.14 STATus:PORT:PTRansition

Syntax	STATus:PORT:PTRansition <port name>,<enable>
Description	This command sets the positive transition filter for the port event register.
Parameters	<port name> = <CHARACTER PROGRAM DATA> Expression format: Character list <enable> = <BOOLEAN PROGRAM DATA>
Response	None.
Example	STAT:PORT:PTR 1-PORT1,ON
Note	<port name> is the same as one of the returned by the INSTRument:PORT:CATalog?

Syntax	STATus:PORT:PTRansition? <port name>
Description	This query returns the positive transition filter for the port event register.
Parameter	<port name> = <CHARACTER PROGRAM DATA> Expression format: Character list
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	STAT:PORT:PTR? 1-PORT1 → 1
Note	<port name> is the same as one of the returned by the INSTRument:PORT:CATalog?

2.5.15 STATus:PORT:NTRansition

Syntax	STATus:PORT:NTRansition <port name>,<enable>
Description	This command sets the negative transition filter for the port event register.
Parameters	<port name> = <CHARACTER PROGRAM DATA> Expression format: Character list <enable> = <BOOLEAN PROGRAM DATA>
Response	None.
Example	STAT:PORT:NTR 1-PORT1,OFF
Note	<port name> is the same as one of the returned by the INSTRument:PORT:CATalog?

Syntax	STATus:PORT:NTRansition? <port name>
Description	This query returns the negative transition filter for the port event register.
Parameter	<port name> = <CHARACTER PROGRAM DATA> Expression format: Character list
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	STAT:PORT:NTR? 1-PORT1 → 0
Note	<port name> is the same as one of the returned by the INSTRument:PORT:CATalog?

2.5.16 STATus:PRESet

Syntax	STATus:PRESet
Description	For the instrument-dependent status data structures, the PRESet commands sets the enable register to all 1's and the transition filter register to recognize only positive transitions. For the SCPI-mandated status structures (operation, questionable and port status) the PRESet command sets the transition filter registers to recognize only positive transitions and set the enable registers to 0's. This command does not affect either the Status Byte or the Standard Event Status register. PRESet does not clear any of the event registers or any item from the error or event queues.
Parameter	None.
Response	None.
Example	STAT:PRES
Note	All active sessions have their own set of registers. This command affects registers in all connected application servers.

2.5.17 STATus:INTerface:PORT<Pt>[:EVENT]?

Syntax	STATus:INTerface:PORT<Pt>[:EVENT]?
Description	This query returns and clears the device dependent interface event status register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> The bits and their values for the register: DB1 (1) = 2 Mbps Summary DB2 (2) = SDH/SONET Summary DB3 (4) = E3 Summary DB4 (8) = E4 Summary DB5 (16) = NOT USED. Reserved for V-Series/Codir. Summary DB6 (32) = Ethernet Summary DB7 (64) = T1 Summary DB8 (128) = OTN Summary DB9 (256) = NoFrame Summary DB10 (512) = Physical Summary DB11 (1024) = T3 Summary DB12 (2048) = Fibre Channel Summary DB13 (4096) = CPRI Summary DB14 - DB16 = NOT USED
Example	STAT:INT:PORT1? → 16
Note	There must be a connected application server for this command to be recognized as a legal command.

2.5.18 STATus:INTerface:PORT<Pt>:CONDition?

Syntax	STATus:INTerface:PORT<Pt>:CONDition?
Description	This query returns the instrument dependent interface status condition register. This register summarize all events/alarms from the different interfaces.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> The bits and their values for the register: DB1 (1) = 2 Mbps Summary DB2 (2) = SDH/SONET Summary DB3 (4) = E3 Summary DB4 (8) = E4 Summary DB5 (16) = NOT USED. Reserved for V-Series/Codir. Summary DB6 (32) = Ethernet Summary DB7 (64) = T1 Summary DB8 (128) = OTN Summary DB9 (256) = NoFrame Summary DB10 (512) = Physical Summary DB11 (1024) = T3 Summary DB12 (2048) = Fibre Channel Summary DB13 (4096) = CPRI Summary DB14 - DB16 = NOT USED
Example	STAT:INT:PORT1:COND? → 16
Note	There must be a connected application server for this command to be recognized as a legal command.

2.6 Mass Memory Subsystem Commands

The commands in this section operates on files and directories placed in the following storage areas:

Location	Description
Internal/	The internal storage of the Network Master.
Usb/	An USB connected storage device. This location is only accessible when a USB storage device is mounted.
Internal/remote/	A remote network drive. Refer to the User Manual for information on how to connect to an external storage location. This location is only accessible when external storage is configured and the Network Master is able to connect to it.

Files must be located in one of the locations described in the table above - or a in a sub-directory of one of these.

2.6.1 MMEMory:LOAD

Syntax	MMEMory:LOAD <file>
Description	This command loads a file into the currently selected application server. The file may contain settings only or both settings and results data.
Parameter	<file> = <STRING PROGRAM DATA> The path and name of the file to be loaded.
Response	None
Example	MMEM:LOAD "Internal/SAT-settings.cfg"
Note	There must be a connected application server for this command to be recognized as a legal command.
	The application server must be in the idle state and the content of the loaded file must match the application server type.

2.6.2 MMEMory:STORe:STATe

Syntax	MMEMory:STORe:STATe <file>
Description	This command stores the current settings to a file on the instrument.
Parameter	<file> = <STRING PROGRAM DATA> The path and name of the file to store the data.
Response	None
Example	MMEM:STOR:STAT "Internal/my-bert-settings.cfg"
Note	There must be a connected application server for this command to be recognized as a legal command.
	The application server must be in the idle state.

2.6.3 MMEMory:STORe:DATA

Syntax	MMEMory:STORe:DATA <file>
Description	This command stores the current settings and result data to a file on the instrument.
Parameter	<file> = <STRING PROGRAM DATA> The path and name of the file to store the data.
Response	None
Example	MMEM:STOR:DATA "Usb/my-bert-result.res"
Note	There must be a connected application server for this command to be recognized as a legal command.
	The application server must be in the idle state.

2.6.4 MMEMory:DELeTe

Syntax	MMEMory:DELeTe <file>
Description	This command deletes a file.
Parameter	<file> = <STRING PROGRAM DATA> The path to the file to be deleted.
Response	None.
Example	MMEM:DEL "Internal/report.pdf"
Note	

2.6.5 MMEMory:DATA?

Syntax	MMEMory:DATA? <file>
Description	This command retrieves a file.
Parameter	<file> = <STRING PROGRAM DATA> The path to the file to be retrieved.
Response	<DEFINITE LENGTH ARBITRARY BLOCK RESPONSE DATA> = #<nonzero digit><digits><8 bit data bytes>, where: <nonzero digit> is a single ASCII character in the range of '1'-'9'. It represents the length of <digits> in number of bytes. <digits> is a number of ASCII characters in the range of '0'-'9', which together are a decimal representation of the number of succeeding data bytes.
Example	MMEM:DATA? "Internal/report.pdf" → #49137<9137 bytes of binary data>
Note	This command cannot be used together with other commands in a compound command.

2.6.6 MMEMory:COpy

Syntax	MMEMory:COpy <source-file>,<destination-file>
Description	This command copies a file.
Parameter	<source-file> = <STRING PROGRAM DATA> The path to the file to be copied. <destination-file> = <STRING PROGRAM DATA> The path to the new file.
Response	None.
Example	MMEM:COpy "Internal/report.pdf","Usb/report.pdf"
Note	

2.6.7 MMEMory:MOve

Syntax	MMEMory:MOve <old-file>,<new-file>
Description	This command moves or renames a file.
Parameter	<old-file> = <STRING PROGRAM DATA> The path to the file to be moved or renamed. <new-file> = <STRING PROGRAM DATA> The new path to the file.
Response	None.
Example	MMEM:MOve "Internal/report.pdf","Usb/report.pdf"
Note	

2.6.8 MMEMory:INFO?

Syntax	MMEMory:INFO? <file>
Description	This command retrieves information about a file.
Parameter	<file> = <STRING PROGRAM DATA> The path to the file to retrieve file information about.
Response	<file-date-time> = <STRING RESPONSE DATA> Last file modification date.
	<file-size> = <NR1 NUMERIC RESPONSE DATA> The file size in bytes.
Example	MMEM:INFO? "Internal/report.pdf" → "2015-05-29 16:02:20",9137
Note	

2.6.9 MMEMory:CATalog?

Syntax	MMEMory:CATalog? <directory>[,<pattern>]
Description	This command lists the files present in a directory.
Parameters	<directory> = <STRING PROGRAM DATA> The path to the directory to be listed.
	<pattern> = <STRING PROGRAM DATA> An optional case sensitive file name pattern. Wildcard characters are * and ?.
Response	({<item>} + {,}*) = <EXPRESSION RESPONSE DATA> A list of quoted file and directory names.
Example	MMEM:CAT? "Internal/reports" → ("report.pdf","setup.cfg")
Note	

2.6.10 MMEMory:DCATalog?

Syntax	MMEMory:DCATalog? <directory>
Description	This command lists the sub-directories present in a directory.
Parameter	<directory> = <STRING PROGRAM DATA> The path to the directory to be listed.
Response	({<directory>} + {,}*) = <EXPRESSION RESPONSE DATA> A list for quoted directory names.
Example	MMEM:DCAT? "Internal/" → ("diagnostics","favorites","logs","remote","screens","windowsinstaller")
Note	

2.6.11 MMEMory:MDIRectory

Syntax	MMEMory:MDIRectory <directory>
Description	This command makes a new sub-directory.
Parameter	<directory> = <STRING PROGRAM DATA> The path to the directory to be created.
Response	None.
Example	MMEM:MDIR "Internal/reports"
Note	

2.6.12 MMEMory:RDIrectory

Syntax	MMEMory:RDIrectory <directory>[,<force>]
Description	This command removes an existing directory.
Parameter	<directory> = <STRING PROGRAM DATA> The path to the directory to be removed.
	<force> = <BOOLEAN PROGRAM DATA> If set to ON then ALL CONTENTS i.e. files and sub-directories will be deleted.
Response	None.
Example	MMEM:RDIR "Internal/reports"
Note	None.

2.6.13 MMEMory:SAVE

Syntax	MMEMory:SAVE <enable>
Description	This command enables or disables auto saving configuration when the application is terminated
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	INST:STAR:LAST TP-BERT-OTN,1-PORT1 MMEM:SAVE ON INST? → 2 INST:TERM 2
Note	

Syntax	MMEMory:SAVE?
Description	This query returns whether auto saving configuration is enabled or disabled when the application is terminated.
Parameter	None.
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	MMEM:SAVE? → 1
Note	

Chapter 3

No frame

3.1 Interface Setup

3.1.1 NFRame:PORT<Pt>:INTerface:TYPE

Syntax	NFRame:PORT<Pt>:INTerface:TYPE <type>
Description	This command sets the interface type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF QSFP: QSFP optical interface (40 Gbps) CXP: CXP optical interface (100 Gbps) CFP: CFP optical interface (40/100 Gbps) CFP2: CFP2 optical interface (100 Gbps) QSFP28ADpt: CFP2-QSFP28 Adaptor interface (100 Gbps) CFP4: CFP4 optical interface (100 Gbps) QSFP28: QSFP28 optical interface (100 Gbps) SFP28: SFP28 optical interface (25 Gbps) QSFP56: QSFP56 optical interface (200 Gbps) QSFPDD: QSFP-DD optical interface (400 Gbps) OSFP: OSFP optical interface (400 Gbps) <i>DEFault = OFF</i>
Response	None.
Example	NFR:PORT1:INT:TYPE QSFP
Note	

Syntax	NFRame:PORT<Pt>:INTerface:TYPE?
Description	This query returns the interface type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:INT:TYPE? → QSFP
Note	

3.1.2 NFRame:PORT<Pt>:INTerface:BITRate

Syntax	NFRame:PORT<Pt>:INTerface:BITRate <bitrate>
Description	This command sets the interface bitrate.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> E400G: 400G Ethernet E200G: 200G Ethernet E100G: 100G Ethernet E40G: 40G Ethernet E25G: 25G Ethernet STM256: STM256/OC768 OTU4 OTU3 OTU3E1 OTU3E2 <i>DEFault = E100G</i>
Response	None.
Example	NFR:PORT1:INT:BITR E100G
Note	

Syntax	NFRame:PORT<Pt>:INTerface:BITRate?
Description	This query returns the interface bitrate.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:INT:BITR? → E100G
Note	

3.1.3 NFRame:PORT<Pt>:INTerface:LANE

Syntax	NFRame:PORT<Pt>:INTerface:LANE <type>
Description	This command sets the lane type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> LANE10: 10 Lanes LANE20: 20 Lanes LANE4 : 4 Lanes LANE1 : 1 Lane LANE8 : 8 Lanes (PAM4) LANE16: 16 Lanes (Logical) LANE4PAM4: 4 Lanes (PAM4) LANE8LOG: 8 Lanes (Logical) <i>DEFault = LANE10</i>
Response	None.
Example	NFR:PORT1:INT:LANE LANE10
Note	

Syntax	NFRame:PORT<Pt>:INTerface:LANE?
Description	This query returns the lane type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:INT:LANE? → LANE10
Note	

3.1.4 NFRame:PORT<Pt>:TIMing

Syntax	NFRame:PORT<Pt>:TIMing <source>
Description	This command sets the timing source.
Parameters	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> INTernal: Internal clock. EXTernal: External clock. <i>DEFault = INT</i>
Response	None.
Example	NFR:PORT1:TIM INT
Note	

Syntax	NFRame:PORT<Pt>:TIMing?
Description	This query returns the timing source.
Parameter	<Pt> = Port number
Response	<source> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:TIM? → INT
Note	

3.1.5 NFRame:PORT<Pt>[:RX]:INTERface:PATtern:FOLLow

Syntax	NFRame:PORT<Pt>[:RX]:INTERface:PATtern:FOLLow <follow>
Description	This command sets the receiver to follow transmitter setup or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> OFF: Do not follow ON: Follow the transmitter setup <i>DEFault = ON</i>
Response	None.
Example	NFR:PORT1:INT:PATT:FOLL ON
Note	

Syntax	NFRame:PORT<Pt>[:RX]:INTERface:PATtern:FOLLow?
Description	This query returns whether the receiver follow transmitter setup.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:INT:PATT:FOLL? → ON
Note	

3.1.6 NFRame:PORT<Pt>:TX:INTerface:PATtern

Syntax	NFRame:PORT<Pt>:TX:INTerface:PATtern <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> PRBS7 PRBS9 PRBS13 PRBS15 PRBS23 PRBS31 PRBS13Q PRBS31Q SWAVe: Square Wave <i>DEFault = PRBS7</i>
Response	None.
Example	NFR:PORT1:TX:INT:PATT PRBS31
Note	This command sets all lanes when 4Lanes is selected

Syntax	NFRame:PORT<Pt>:TX:INTerface:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:TX:INT:PATT? → PRBS31
Note	

3.1.7 NFRame:PORT<Pt>:RX:INTerface:PATtern

Syntax	NFRame:PORT<Pt>:RX:INTerface:PATtern <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> PRBS7 PRBS9 PRBS13 PRBS15 PRBS23 PRBS31 PRBS13Q PRBS31Q <i>DEFault = PRBS7</i>
Response	None.
Example	NFR:PORT1:RX:INT:PATT PRBS31
Note	This command sets all lanes when 4Lanes is selected

Syntax	NFRame:PORT<Pt>:RX:INTerface:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:RX:INT:PATT? → PRBS31
Note	

3.1.8 NFRame:PORT<Pt>:TX:INTerface:PINVersion

Syntax	NFRame:PORT<Pt>:TX:INTerface:PINVersion <inversion>
Description	This command enables or disables transmitter pattern inversion.
Parameters	<Pt> = Port number <inversion> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	NFR:PORT1:TX:INT:PINV ON
Note	This command sets all lanes when 4Lanes is selected

Syntax	NFRame:PORT<Pt>:TX:INTerface:PINVersion?
Description	This query returns whether transmitter pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inversion> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:TX:INT:PINV? → 1
Note	

3.1.9 NFRame:PORT<Pt>:RX:INTerface:PINVersion

Syntax	NFRame:PORT<Pt>:RX:INTerface:PINVersion <inversion>
Description	This command enables or disables receiver pattern inversion.
Parameters	<Pt> = Port number <inversion> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	NFR:PORT1:RX:INT:PINV ON
Note	This command sets all lanes when 4Lanes is selected

Syntax	NFRame:PORT<Pt>:RX:INTerface:PINVersion?
Description	This query returns whether receiver pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inversion> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:RX:INT:PINV? → 1
Note	

3.1.10 NFRame:PORT<Pt>:TX:INTerface:LANE<Ln>:PATtern

Syntax	NFRame:PORT<Pt>:TX:INTerface:LANE<Ln>:PATtern <type>
Description	This command sets the pattern type(each lane).
Parameters	<Pt> = Port number <Ln> = Lane number (1-16) <type> = <CHARACTER PROGRAM DATA> PRBS7 PRBS9 PRBS13 PRBS15 PRBS23 PRBS31 PRBS13Q PRBS31Q <i>DEFault</i> = <i>PRBS7</i>
Response	None.
Example	NFR:PORT1:TX:INT:LANE2:PATT PRBS31
Note	This command can be used on 4Lanes or 8Lanes or 16Lanes. Lane number is 1 origin.

Syntax	NFRame:PORT<Pt>:TX:INterface:LANE<Ln>:PATtern?
Description	This query returns the pattern type(each lane).
Parameter	<Pt> = Port number
	<Ln> = Lane number (1-16)
Response	<type> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:TX:INT:LANE2:PATT? → PRBS31
Note	

3.1.11 NFRame:PORT<Pt>:RX:INterface:LANE<Ln>:PATtern

Syntax	NFRame:PORT<Pt>:RX:INterface:LANE<Ln>:PATtern <type>
Description	This command sets the pattern type(each lane).
Parameters	<Pt> = Port number
	<Ln> = Lane number (1-16)
	<type> = <CHARACTER PROGRAM DATA>
	PRBS7
	PRBS9
	PRBS13
	PRBS15
	PRBS23
Response	PRBS31
	PRBS13Q
	PRBS31Q
	<i>DEFault = PRBS7</i>
	None.
Example	NFR:PORT1:RX:INT:LANE2:PATT PRBS31
Note	This command can be used on 4Lanes or 8Lanes or 16Lanes. Lane number is 1 origin.

Syntax	NFRame:PORT<Pt>:RX:INterface:LANE<Ln>:PATtern?
Description	This query returns the pattern type(each lane).
Parameter	<Pt> = Port number
	<Ln> = Lane number (1-16)
Response	<type> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:RX:INT:LANE2:PATT? → PRBS31
Note	

3.1.12 NFRame:PORT<Pt>:TX:INterface:LANE<Ln>:PINVersion

Syntax	NFRame:PORT<Pt>:TX:INterface:LANE<Ln>:PINVersion <inversion>
Description	This command enables or disables transmitter pattern inversion (each lane).
Parameters	<Pt> = Port number
	<Ln> = Lane number (1-16)
	<inversion> = <BOOLEAN PROGRAM DATA>
	<i>DEFault = OFF</i>
Response	None.
Example	NFR:PORT1:TX:INT:LANE2:PINV ON
Note	This command can be used on 4Lanes or 8Lanes or 16Lanes. Lane number is 1 origin.

Syntax	NFRame:PORT<Pt>:TX:INterface:LANE<Ln>:PINVersion?
Description	This query returns whether transmitter pattern inversion is enabled or disabled (each lane).
Parameter	<Pt> = Port number
	<Ln> = Lane number (1-16)
Response	<inversion> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:TX:INT:LANE2:PINV? → 1
Note	

3.1.13 NFRame:PORT<Pt>:RX:INterface:LANE<Ln>:PINVersion

Syntax	NFRame:PORT<Pt>:RX:INterface:LANE<Ln>:PINVersion <inversion>
Description	This command enables or disables receiver pattern inversion (each lane).
Parameters	<Pt> = Port number
	<Ln> = Lane number (1-16)
	<inversion> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	NFR:PORT1:RX:INT:LANE2:PINV ON
Note	This command can be used on 4Lanes or 8Lanes or 16Lanes. Lane number is 1 origin.

Syntax	NFRame:PORT<Pt>:RX:INterface:LANE<Ln>:PINVersion?
Description	This query returns whether receiver pattern inversion is enabled or disabled (each lane).
Parameter	<Pt> = Port number
	<Ln> = Lane number (1-16)
Response	<inversion> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:RX:INT:LANE2:PINV? → 1
Note	

3.1.14 NFRame:PORT<Pt>:TX:INterface:PATtern:LANE:FOLLow

Syntax	NFRame:PORT<Pt>:TX:INterface:PATtern:LANE:FOLLow <follow>
Description	This command sets the transmitter follow the pattern of lane2 to lane16 from lane1 or not to follow.
Parameters	<Pt> = Port number
	<follow> = <CHARACTER PROGRAM DATA> OFF: Do not follow ON: Follow the lane2 to lane16 from lane1 <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	NFR:PORT1:TX:INT:PATT:LANE:FOLL ON
Note	

Syntax	NFRame:PORT<Pt>:TX:INterface:PATtern:LANE:FOLLow?
Description	This query returns whether the transmitter follow pattern setup.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:TX:INT:PATT:LANE:FOLL? → ON
Note	

3.1.15 NFRame:PORT<Pt>:RX:INterface:PATtern:LANE:FOLLow

Syntax	NFRame:PORT<Pt>:RX:INterface:PATtern:LANE:FOLLow <follow>
Description	This command sets the receiver follow the pattern of lane2 to lane4 from lane1 or not to follow.
Parameters	<Pt> = Port number
	<follow> = <CHARACTER PROGRAM DATA> OFF: Do not follow ON: Follow the lane2 to lane16 from lane1 <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	NFR:PORT1:RX:INT:PATT:LANE:FOLL ON
Note	

Syntax	NFRame:PORT<Pt>:RX:INTerface:PATtern:LANE:FOLLow?
Description	This query returns whether the receiver follow pattern setup.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:RX:INT:PATT:LANE:FOLL? → ON
Note	

3.1.16 NFRame:PORT<Pt>:PATtern:RXFollow

Syntax	NFRame:PORT<Pt>:PATtern:RXFollow <follow>
Description	This command sets the receiver to follow transmitter setup or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> OFF: Do not follow ON: Follow the transmitter setup <i>DEFault = ON</i>
Response	None.
Example	NFR:PORT1:PATT:RXF ON
Note	

Syntax	NFRame:PORT<Pt>:PATtern:RXFollow?
Description	This query returns whether the receiver follow transmitter setup.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:PATT:RXF? → ON
Note	

3.1.17 NFRame:PORT<Pt>:TX:PATtern

Syntax	NFRame:PORT<Pt>:TX:PATtern <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> PRBS7 PRBS9 PRBS13 PRBS15 PRBS23 PRBS31 PRBS13Q PRBS31Q SWAVE: Square Wave <i>DEFault = PRBS7</i>
Response	None.
Example	NFR:PORT1:TX:PATT PRBS31
Note	This command sets all lanes when 4Lanes is selected

Syntax	NFRame:PORT<Pt>:TX:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:TX:PATT? → PRBS31
Note	

3.1.18 NFRame:PORT<Pt>:RX:PATtern

Syntax	NFRame:PORT<Pt>:RX:PATtern <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> PRBS7 PRBS9 PRBS13 PRBS15 PRBS23 PRBS31 PRBS13Q PRBS31Q <i>DEFault = PRBS7</i>
Response	None.
Example	NFR:PORT1:RX:PATT PRBS31
Note	This command sets all lanes when 4Lanes is selected

Syntax	NFRame:PORT<Pt>:RX:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:RX:PATT? → PRBS31
Note	

3.1.19 NFRame:PORT<Pt>:TX:PINVersion

Syntax	NFRame:PORT<Pt>:TX:PINVersion <inversion>
Description	This command enables or disables pattern inversion.
Parameters	<Pt> = Port number <inversion> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	NFR:PORT1:TX:PINV ON
Note	This command sets all lanes when 4Lanes is selected

Syntax	NFRame:PORT<Pt>:TX:PINVersion?
Description	This query returns whether the pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inversion> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:TX:PINV? → 1
Note	

3.1.20 NFRame:PORT<Pt>:RX:PINVersion

Syntax	NFRame:PORT<Pt>:RX:PINVersion <inversion>
Description	This command enables or disables pattern inversion.
Parameters	<Pt> = Port number <inversion> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	NFR:PORT1:RX:PINV ON
Note	This command sets all lanes when 4Lanes is selected

Syntax	NFRame:PORT<Pt>:RX:PINVersion?
Description	This query returns whether the inversion state of the pattern is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inversion> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:RX:PINV? → 1
Note	

3.1.21 NFRame:PORT<Pt>:TX:LANE:PATtern

Syntax	NFRame:PORT<Pt>:TX:LANE:PATtern <lane>,<type>
Description	This command sets the pattern type(each lane).
Parameters	<Pt> = Port number
	<lane> = Lane number (0-15)
	<type> = <CHARACTER PROGRAM DATA> PRBS7 PRBS9 PRBS13 PRBS15 PRBS23 PRBS31 PRBS13Q PRBS31Q SWAVE: Square Wave <i>DEFault = PRBS7</i>
Response	None.
Example	NFR:PORT1:TX:LANE:PATT 2,PRBS31
Note	This command can be used on 4Lanes or 8Lanes or 16Lanes.

Syntax	NFRame:PORT<Pt>:TX:LANE:PATtern? <lane>
Description	This query returns the pattern type(each lane).
Parameter	<Pt> = Port number
	<lane> = Lane number (0-15)
Response	<type> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:TX:LANE:PATT? 2 → PRBS31
Note	

3.1.22 NFRame:PORT<Pt>:RX:LANE:PATtern

Syntax	NFRame:PORT<Pt>:RX:LANE:PATtern <lane>,<type>
Description	This command sets the pattern type(each lane).
Parameters	<Pt> = Port number
	<lane> = Lane number (0-15)
	<type> = <CHARACTER PROGRAM DATA> PRBS7 PRBS9 PRBS13 PRBS15 PRBS23 PRBS31 PRBS13Q PRBS31Q <i>DEFault = PRBS7</i>
Response	None.
Example	NFR:PORT1:RX:LANE:PATT 2,PRBS31
Note	This command can be used on 4Lanes or 8Lanes or 16Lanes.

Syntax	NFRame:PORT<Pt>:RX:LANE:PATtern? <lane>
Description	This query returns the pattern type(each lane).
Parameter	<Pt> = Port number
	<lane> = Lane number (0-15)
Response	<type> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:RX:LANE:PATT? 2 → PRBS31
Note	

3.1.23 NFRame:PORT<Pt>:TX:LANE:PINVersion

Syntax	NFRame:PORT<Pt>:TX:LANE:PINVersion <lane>,<inversion>
Description	This command enables or disables transmitter pattern inversion (each lane).
Parameters	<Pt> = Port number
	<lane> = Lane number (0-15)
	<inversion> = <BOOLEAN PROGRAM DATA>
	DEFault = OFF
Response	None.
Example	NFR:PORT1:TX:LANE:PINV 2,ON
Note	This command can be used on 8Lanes or 16Lanes.

Syntax	NFRame:PORT<Pt>:TX:LANE:PINVersion? <lane>
Description	This query returns whether transmitter pattern inversion is enabled or disabled (each lane).
Parameter	<Pt> = Port number
	<lane> = Lane number (0-15)
Response	<inversion> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:TX:LANE:PINV? 2 → 1
Note	

3.1.24 NFRame:PORT<Pt>:RX:LANE:PINVersion

Syntax	NFRame:PORT<Pt>:RX:LANE:PINVersion <lane>,<inversion>
Description	This command enables or disables receiver pattern inversion (each lane).
Parameters	<Pt> = Port number
	<lane> = Lane number (0-15)
	<inversion> = <BOOLEAN PROGRAM DATA>
	DEFault = OFF
Response	None.
Example	NFR:PORT1:RX:LANE:PINV 2,ON
Note	This command can be used on 8Lanes or 16Lanes.

Syntax	NFRame:PORT<Pt>:RX:LANE:PINVersion? <lane>
Description	This query returns whether receiver pattern inversion is enabled or disabled (each lane).
Parameter	<Pt> = Port number
	<Ln> = Lane number (0-15)
Response	<inversion> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:RX:LANE:PINV? 2 → 1
Note	

3.1.25 NFRame:PORT<Pt>:TX:PATtern:LNFollow

Syntax	NFRame:PORT<Pt>:TX:PATtern:LNFollow <follow>
Description	This command sets the transmitter follow the pattern of lane2 to lane16 from lane1 or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> OFF: Do not follow ON: Follow the lane2 to lane16 from lane1 <i>DEFault = OFF</i>
Response	None.
Example	NFR:PORT1:TX:PATT:LNF ON
Note	

Syntax	NFRame:PORT<Pt>:TX:PATtern:LNFollow?
Description	This query returns whether the transmitter follow pattern setup.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:TX:PATT:LNF? → ON
Note	

3.1.26 NFRame:PORT<Pt>:RX:PATtern:LNFollow

Syntax	NFRame:PORT<Pt>:RX:PATtern:LNFollow <follow>
Description	This command sets the receiver follow the pattern of lane2 to lane4 from lane1 or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> OFF: Do not follow ON: Follow the lane2 to lane16 from lane1 <i>DEFault = OFF</i>
Response	None.
Example	NFR:PORT1:RX:PATT:LNF ON
Note	

Syntax	NFRame:PORT<Pt>:RX:PATtern:LNFollow?
Description	This query returns whether the receiver follow pattern setup.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	NFR:PORT1:RX:PATT:LNF? → ON
Note	

3.1.27 NFRame:PORT<Pt>:THResholds:FEC:SYMbolerror:RATE

Syntax	NFRame:PORT<Pt>:THResholds:FEC:SYMbolerror:RATE <ratio>
Description	This command sets the FEC symbol error rate thresholds.
Parameters	<Pt> = Port number <ratio> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.00, MAXimum = 1.00, DEFault = 0.00</i>
Response	None.
Example	NFR:PORT1:THR:FEC:SYM:RAT 0.000015 NFR:PORT1:THR:FEC:SYM:RAT 15e-06
Note	This parameter can be used on 400G.

Syntax	NFRame:PORT<Pt>:THResholds:FEC:SYMbolerror:RAte?
Description	This query returns FEC symbol error rate thresholds.
Parameter	<Pt> = Port number <ratio> = <NR3 NUMERIC RESPONSE DATA> <i>MINimum = 0.00, MAXimum = 1.00, DEFault = 0.00</i>
Examples	NFR:PORT1:THR:FEC:SYM:RAT? → 15e-06
Note	

3.2 Stimuli

3.2.1 NFRame:PORT<Pt>:STIMuli:TX:FOFFset

Syntax	NFRame:PORT<Pt>:STIMuli:TX:FOFFset <offset>
Description	This command sets the frequency / baud rate offset for the clock source. Unit: ppm.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> <i>MINimum=-200.0, MAXimum=200.0, DEFault = 0</i>
Response	None.
Example	NFR:PORT1:STIM:TX:FOFF 10.0
Note	

Syntax	NFRame:PORT<Pt>:STIMuli:TX:FOFFset?
Description	This query returns the frequency / baud rate offset (ppm) for the clock source.
Parameter	<Pt> = Port number
Response	<offset> = <NR2 NUMERIC RESPONSE DATA>
Example	NFR:PORT1:STIM:TX:FOFF? → 10.0
Note	

3.2.2 NFRame:PORT<Pt>:STIMuli:TX:LANE

Syntax	NFRame:PORT<Pt>:STIMuli:TX:LANE <lane>
Description	This command sets the bit error insertion lane.
Parameters	<Pt> = Port number <lane> = <NUMERIC PROGRAM DATA> 4 lanes: <i>MINimum=#B0, MAXimum=#B1111, DEFault=#B0</i> 8 lanes: <i>MINimum=#B0, MAXimum=#B11111111, DEFault=#B0</i> 10 lanes: <i>MINimum=#B0, MAXimum=#B1111111111, DEFault=#B0</i> 16 lanes: <i>MINimum=#B0, MAXimum=#B11111111111111, DEFault=#B0</i> 20 lanes: <i>MINimum=#B0, MAXimum=#B111111111111111111, DEFault=#B0</i>
Response	None.
Example	NFR:PORT1:STIM:TX:LANE #B101 This command inserts errors into lane 0 and lane 2.
Note	

Syntax	NFRame:PORT<Pt>:STIMuli:TX:LANE?
Description	This query returns the bit error insertion lane.
Parameter	<Pt> = Port number
Response	<lane> = <BINARY NUMERIC RESPONSE DATA>
Example	NFR:PORT1:STIM:TX:LANE? → #B1010 → #B10100000 → #B1010000000 → #B1010000000000000 → #B1010000000000000000
Note	

3.3 Result

3.3.1 NFRame:PORT<Pt>[:RX]:IFETch?

Syntax	NFRame:PORT<Pt>[:RX]:IFETch? <parameter>
Description	This query fetches an NoFrame interval if available.
Parameters	<Pt> = Port number ({<parameter>} + {,})* = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. Alarms LOS: Loss of signal. Response: <Seconds>,<Ratio> LSSx: Loss of signal synchronization of lane x (x = 0-19). Response: <Seconds>,<Ratio> Errors ERRPRBS: Bit Error (total). Response: <Count>,<Ratio> ERRPRBSx: Bit Error of lane x (x = 0-19). Response: <Count>,<Ratio> SYMBERR: Symbol Error (total). Response: <Count>,<Ratio> SYMBERRx: Symbol Error of lane x (x = 0-19). Response: <Count>,<Ratio> Rx Frequency FREQDEV: Frequency deviation. Response: <ppm> FREQDEVx: Frequency / baud rate deviation of lane x (x = 0-19). Response: <ppm>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Expression format: Numeric List Each result is formatted according to the specification in the parameter field. Values that are not relevant or applicable for the current measurement return NaN (section 1.6.1).
Example	NFR:PORT1:IFET? (LOS,LSS0) → (3,0.00532),(4,0.00709)
Notes	This command fetches the results from the interval selected using the MEASurement:SETup:SElect command (see section 18.2.2). If the requested result is not available, NaN (section 1.6.1) is returned. If there is one or more results, the last ",," is always removed.

3.4 Status

3.4.1 NFRame:STATus:PORT<Pt>[:RX]:AESummary[:EVENT]?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:AESummary[:EVENT]?
Description	This query returns the NoFrame alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of NFR:STAT:PORT<Pt>:ALAR[:EVEN]? DB2 - DB8 = NOT USED DB9 (256) = Summary bit of NFR:STAT:PORT<Pt>:ERR[:EVEN]? DB10 - DB16 = NOT USED
Example	NFR:STAT:PORT1:AES? → 1
Note	

3.4.2 NFRame:STATus:PORT<Pt>[:RX]:AESummary:CONDition?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:AESummary:CONDition?
Description	This query returns the NoFrame alarms and errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as NFR:STAT:PORT<Pt>:AESummary[:EVENT]?
Example	NFR:STAT:PORT1:AES:COND? → 2
Note	

3.4.3 NFRame:STATus:PORT<Pt>[:RX]:ALARm[:EVENT]?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:ALARm[:EVENT]?
Description	This query returns the alarms event register.
Parameters	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = LOS, Loss of signal DB2 (2) = LSS, Loss of signal synchronization DB3 (4) = CDRL, CDR Lock status DB4 - DB16 = NOT USED
Example	NFR:STAT:PORT1:ALAR? → 2
Notes	

3.4.4 NFRame:STATus:PORT<Pt>[:RX]:ALARm:CONDition?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:ALARm:CONDition?
Description	This query returns the alarms condition register.
Parameters	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = LOS, Loss of signal DB2 (2) = LSS, Loss of signal synchronization DB3 (4) = CDRL, CDR Lock status DB4 - DB16 = NOT USED
Example	NFR:STAT:PORT1:ALAR:COND? → 4
Notes	

3.4.5 NFRame:STATus:PORT<Pt>[:RX]:ERRor[:EVENT]?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:ERRor[:EVENT]?
Description	This query returns the errors event register.
Parameters	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Bit Error DB2 (2) = Symbol Error DB3 - DB16 = NOT USED
Example	NFR:STAT:PORT1:ERR? → 1
Notes	

3.4.6 NFRame:STATus:PORT<Pt>[:RX]:ERRor:CONDition?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:ERRor:CONDition?
Description	This query returns the errors condition register.
Parameters	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Bit Error DB2 (2) = Symbol Error DB3 - DB16 = NOT USED
Example	NFR:STAT:PORT1:ERR:COND? → 1
Notes	

3.4.7 NFRame:STATus:PORT<Pt>[:RX]:PSLevel?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:PSLevel?
Description	This query returns the physical signal level. Unit: dBm.
Parameters	<Pt> = Port number
Response	<signallevel> = <STRING RESPONSE DATA> " <power> dBm": Min: " < <min> dBm", Max: "Exceeds Level" "N/A": Module not present or not ready.
Example	NFR:STAT:PORT1:PSL? → "-3 dBm"
Note	

3.4.8 NFRame:STATus:PORT<Pt>:TX:PSLevel?

Syntax	NFRame:STATus:PORT<Pt>:TX:PSLevel?
Description	This query returns the physical signal level. Unit: dBm.
Parameters	<Pt> = Port number
Response	<signallevel> = <STRING RESPONSE DATA> " <power> dBm": Min: " < <min> dBm", Max: "Exceeds Level" "N/A": Module not present or not ready.
Example	NFR:STAT:PORT1:TX:PSL? → "-3 dBm"
Note	

3.4.9 NFRame:STATus:PORT<Pt>[:RX]:PFRequency?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:PFRequency? [<lane>]
Description	This query returns the physical frequency / baud rate. Unit: Hz or Bd.
Parameters	<Pt> = Port number <lane> = Lane number (0-15)
Response	<frequency> = <NR1 NUMERIC RESPONSE DATA>
Example	NFR:STAT:PORT1:PFR? → 103125000192 ¹ NFR:STAT:PORT1:PFR? 0 → 5250845696
Note	¹ <lane> is not used if the Lane Select is 20 Lanes.

3.4.10 NFRame:STATus:PORT<Pt>[:RX]:PDEViation?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:PDEViation? [<lane>]
Description	This query returns the physical frequency / baud rate deviation. Unit: ppm.
Parameters	<Pt> = Port number <lane> = Lane number (0-15)
Response	<deviation> = <NR2 NUMERIC RESPONSE DATA>
Example	NFR:STAT:PORT1:PDEV? → 0.0 ¹ NFR:STAT:PORT1:PDEV? 0 → 0.0
Note	¹ <lane> is not used if the Lane Select is 20 Lanes.

3.4.11 NFRame:STATus:PORT<Pt>[:RX]:PCDRlock?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:PCDRlock? [<lane>]
Description	This query returns the physical CDR lock status.
Parameters	<Pt> = Port number
	<lane> = Lane number (0-15)
Response	<status> = <BOOLEAN RESPONSE DATA> 0: CDR Locked 1: CDR Unlocked
Example	NFR:STAT:PORT1:PCDR? → 0 ¹ NFR:STAT:PORT1:PCDR? 0 → 0
Note	¹ <lane> is not used if the Lane Select is 20 Lanes.

3.4.12 NFRame:STATus:PORT<Pt>[:RX]:PLSS?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:PLSS? [<lane>]
Description	This query returns the physical LSS status.
Parameters	<Pt> = Port number
	<lane> = Lane number (0-15)
Response	<status> = <BOOLEAN RESPONSE DATA> 0: No LSS 1: LSS
Example	NFR:STAT:PORT1:PLSS? 0 → 0
Note	

3.4.13 NFRame:STATus:PORT<Pt>[:RX]:PSYMberr?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:PSYMberr? [<lane>]
Description	This query returns the physical symbol error status.
Parameters	<Pt> = Port number
	<lane> = Lane number (0-7)
Response	<status> = <BOOLEAN RESPONSE DATA> 0: No Symbol Error 1: Symbol Error
Example	NFR:STAT:PORT1:PSYM? 0 → 0
Note	This command can be used on 8Lanes.

3.4.14 NFRame:STATus:PORT<Pt>[:RX]:PBITerr?

Syntax	NFRame:STATus:PORT<Pt>[:RX]:PBITerr? [<lane>]
Description	This query returns the physical Bit error status.
Parameters	<Pt> = Port number
	<lane> = Lane number (0-15)
Response	<status> = <BOOLEAN RESPONSE DATA> 0: No Bit Error 1: Bit Error
Example	NFR:STAT:PORT1:PBIT? 0 → 0
Note	This command can be used on 16Lanes.

Chapter 4

CPRI/OBSAI

4.1 Port

4.1.1 CPRI:PORT<Pt>:MODE

Syntax	CPRI:PORT<Pt>:MODE <mode>
Description	This command sets the port mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Port off NORMal: Normal THROugh: (1 Port / 2 Port) Pass Through Mode <i>DEFault = OFF</i>
Response	None.
Example	CPRI:PORT1:MODE NORM
Note	This command is disabled when over OTN is selected.

Syntax	CPRI:PORT<Pt>:MODE?
Description	This query returns the port mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:MODE? → NORM
Note	This command is disabled when over OTN is selected.

4.1.2 CPRI:PORT<Pt>:TIMing:SOURce

Syntax	CPRI:PORT<Pt>:TIMing:SOURce <source>
Description	This command sets Timing source.
Parameters	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> INTernal: Internal clock EXTernal: External clock GPS: GPS signal RX: Received clock <i>DEFault = INTernal</i>
Response	None.
Example	CPRI:PORT1:TIM:SOUR INT
Note	

Syntax	CPRI:PORT<Pt>:TIMing:SOURce?
Description	This query returns the timing source
Parameter	<Pt> = Port number
Response	<source> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:TIM:SOUR? → INT
Note	

4.1.3 CPRI:PORT<Pt>:LRATe

Syntax	CPRI:PORT<Pt>:LRATe <rate>
Description	This command set Line Rate.
Parameters	<Pt> = Port number <rate> = <CHARACTER PROGRAM DATA> 614M: 614.4Mbps(CPRI) 768M: 768.0Mbps(OBSAI) 1228M: 1228.8Mbps(CPRI) 1536M: 1536.0Mbps(OBSAI) 2457M: 2457.6Mbps(CPRI) 3072M: 3072.0Mbps(CPRI/OBSAI) 4915M: 4915.2Mbps(CPRI) 6144M: 6144.0Mbps(CPRI/OBSAI) 9830M: 9830.4Mbps(CPRI) 10137M: 10137.6Mbps(CPRI) 12165M: 12165.12Mbps(CPRI) 24330M: 24330.24Mbps(CPRI) <i>DEFault = 614M</i>
Response	None.
Example	CPRI:PORT1:LRAT 614M
Note	This command is disabled when over OTN is selected. When selecting 768M or 4915M, the contents of signal becomes unframed.

Syntax	CPRI:PORT<Pt>:LRATe?
Description	This query returns Line rate.
Parameter	<Pt> = Port number
Response	<rate> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:LRAT? → 614M
Note	This command is disabled when over OTN is selected.

4.1.4 CPRI:PORT<Pt>:LRATe:MODE

Syntax	CPRI:PORT<Pt>:LRATe:MODE <mode>
Description	This command set Line rate mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> CPRI: CPRI OBSAI: OBSAI <i>DEFault = CPRI</i>
Response	None.
Example	CPRI:PORT1:LRAT:MODE OBSAI
Note	This command is disabled when over OTN is selected. When selecting OBSAI, the contents of signal becomes unframed.

Syntax	CPRI:PORT<Pt>:LRATe:MODE?
Description	This query returns Line rate mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:LRAT:MODE? → OBSAI
Note	This command is disabled when over OTN is selected.

4.1.5 CPRI:PORT<Pt>:CONTents

Syntax	CPRI:PORT<Pt>:CONTents <contents>
Description	This command sets contents.
Parameter	<Pt> = Port number <contents> = <CHARACTER PROGRAM DATA> UFRamed: Unframed LINK: CPRI Link OBLINK: OBSAI Link
Response	None.
Example	CPRI:PORT1:CONT UFR
Note	

Syntax	CPRI:PORT<Pt>:CONTents?
Description	This query returns contents.
Parameter	<Pt> = Port number
Response	<contents> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:CONT? → UFR
Note	

4.1.6 CPRI:PORT<Pt>:FEC

Syntax	CPRI:PORT<Pt>:FEC <mode>
Description	The command enables or disables the FEC.
Parameter	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	CPRI:PORT1:FEC ON
Note	This command is available when the line rate is 12165.12 Mbps or 24330.24 Mbps.

Syntax	CPRI:PORT<Pt>:FEC?
Description	This query returns whether the FEC is enabled or disabled.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:FEC? → ON
Note	

4.1.7 CPRI:PORT<Pt>:PATtern

Syntax	CPRI:PORT<Pt>:PATtern <type>
Description	This command sets Pattern type.
Parameter	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> PRBS15: PRBS15 pattern PRBS20: PRBS20 pattern PRBS23: PRBS23 pattern PRBS31: PRBS31 pattern USER32BIT: User Pattern (32bit) OFF: Pattern OFF
Response	None.
Example	CPRI:PORT1:PATT PRBS15
Note	This command supports CPRI and OBSAI mode.

Syntax	CPRI:PORT<Pt>:PATtern?
Description	This query returns pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:PATT? → PRBS15
Note	

4.1.8 CPRI:PORT<Pt>:PINVersion

Syntax	CPRI:PORT<Pt>:PINVersion <inversion>
Description	This command enables or disables the data contents pattern inversion.
Parameter	<Pt> = Port number <inversion> = <CHARACTER PROGRAM DATA> NORMal: Invert Off INVerted: Invert On
Response	None.
Example	CPRI:PORT1:PINV NORM
Note	This command supports CPRI and OBSAI mode.

Syntax	CPRI:PORT<Pt>:PINVersion?
Description	This query returns whether the data contents pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inversion> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:PINV? → NORM
Note	

4.1.9 CPRI:PORT<Pt>:UP32

Syntax	CPRI:PORT<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when CONTent is USER32BIT .
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Example	CPRI:PORT1:UP32 "0110"
Note	This command supports CPRI and OBSAI mode.

Syntax	CPRI:PORT<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	CPRI:PORT1:UP32? → "0110"
Note	

4.1.10 CPRI:PORT<Pt>:PVERsion

Syntax	CPRI:PORT<Pt>:PVERsion <version>
Description	This command sets protocol version.
Parameter	<Pt> = Port number <version> = <CHARACTER PROGRAM DATA> PVER1: Protocol version 1 (= Scrambling OFF) PVER2: Protocol version 2 (= Scrambling ON)
Response	None.
Example	CPRI:PORT1:PVER PVER1
Note	This command supports CPRI and OBSAI mode.

Syntax	CPRI:PORT<Pt>:PVERsion?
Description	This query returns protocol version.
Parameter	<Pt> = Port number
Response	<version> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:PVER? → PVER1
Note	

4.1.11 CPRI:PORT<Pt>:PROLe

Syntax	CPRI:PORT<Pt>:PROLe <role>
Description	This command sets port role.
Parameter	<Pt> = Port number <role> = <CHARACTER PROGRAM DATA> MASTer: Master SLAVE: Slave
Response	None.
Example	CPRI:PORT1:PROL MAST
Note	This command supports CPRI mode.

Syntax	CPRI:PORT<Pt>:PROLe?
Description	This query returns port role.
Parameter	<Pt> = Port number
Response	<role> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:PROL? → MAST
Note	

4.1.12 CPRI:PORT<Pt>:SSEQence

Syntax	CPRI:PORT<Pt>:SSEQence <sequence>
Description	This command enables or disables start-up sequence.
Parameter	<Pt> = Port number <sequence> = <BOOLEAN PROGRAM DATA> DEFault = OFF
Response	None.
Example	CPRI:PORT1:SSEQ OFF
Note	This command supports CPRI mode.

Syntax	CPRI:PORT<Pt>:SSEQence?
Description	This query returns whether start-up sequence is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	CPRI:PORT1:SSEQ? → 0
Note	This command supports CPRI mode.

4.1.13 CPRI:PORT<Pt>:CMHDlc

Syntax	CPRI:PORT<Pt>:CMHDlc <hdlc>
Description	This command sets CM HDLC.
Parameter	<Pt> = Port number <hdlc> = <CHARACTER PROGRAM DATA> NONE: NONE 240K: 240k 480K: 480k 960K: 960k 1920K: 1920k 2400K: 2400k HIGH: Highest Possible
Response	None.
Example	CPRI:PORT1:CMHD NONE
Note	This command supports CPRI mode.

Syntax	CPRI:PORT<Pt>:CMHdlc?
Description	This query returns CM HDLC.
Parameter	<Pt> = Port number
Response	<hdlc> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:CMHD? → NONE
Note	

4.1.14 CPRI:PORT<Pt>:EENable

Syntax	CPRI:PORT<Pt>:EENable <enable>
Description	This command enables or disables Ethernet.
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	CPRI:PORT1:EEN OFF
Note	This command supports CPRI mode.

Syntax	CPRI:PORT<Pt>:EENable?
Description	This query returns whether Ethernet is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	CPRI:PORT1:EEN? → 0
Note	

4.1.15 CPRI:PORT<Pt>:CMEPointer

Syntax	CPRI:PORT<Pt>:CMEPointer <pointer>
Description	This command sets the control manager ethernet pointer.
Parameters	<Pt> = Port number <pointer> = <NUMERIC PROGRAM DATA> <i>MINimum=20, MAXimum=63, DEFault=20</i>
Response	None.
Example	CPRI:PORT1:CMEP 63
Note	This command cannot be executed when Ethernet is disabled. This command supports CPRI mode.

Syntax	CPRI:PORT<Pt>:CMEPointer?
Description	This query returns the control manager ethernet pointer.
Parameter	<Pt> = Port number
Response	<pointer> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:CMEP? → 20
Note	

4.1.16 CPRI:PORT<Pt>:OBSai:FSSeed

Syntax	CPRI:PORT<Pt>:OBSai:FSSeed <enable>
Description	This command enables or disables the forced scrambler seed.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> OFF ON
Response	None.
Example	CPRI:PORT1:OBS:FSS ON
Note	This command supports OBSAI mode.

Syntax	CPRI:PORT<Pt>:OBSai:FSSeed?
Description	This query returns whether the forced scrambler seed is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	CPRI:PORT1:OBS:FSS? → ON
Note	

4.1.17 CPRI:PORT<Pt>:OBSai:TX:FIDLe

Syntax	CPRI:PORT<Pt>:OBSai:TX:FIDLe <type>
Description	This command sets the Tx forced idle.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF: Idle OFF ON: Idle ON (up to 3072M) IREQ: Idle REQ (6144M) IACK: Idle ACK (6144M)
Response	None.
Example	CPRI:PORT1:OBS:TX:FIDL ON
Note	This command supports OBSAI mode.

Syntax	CPRI:PORT<Pt>:OBSai:TX:FIDLe?
Description	This query returns the Tx forced idle.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:OBS:TX:FIDL? → ON
Note	

4.1.18 CPRI:PORT<Pt>:OBSai:TX:SSIndex

Syntax	CPRI:PORT<Pt>:OBSai:TX:SSIndex <seed>
Description	This command sets the Tx scrambler seed index.
Parameters	<Pt> = Port number <seed> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=17, DEFault=0</i>
Response	None.
Example	CPRI:PORT1:OBS:TX:SSIN 1
Note	This command supports OBSAI mode.

Syntax	CPRI:PORT<Pt>:OBSai:TX:SSIndex?
Description	This query returns the Tx scrambler seed index.
Parameter	<Pt> = Port number
Response	<seed> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:OBS:TX:SSIN? → 1
Note	

4.1.19 CPRI:PORT<Pt>:OBSai:TX:SSValue

Syntax	CPRI:PORT<Pt>:OBSai:TX:SSValue?
Description	This query returns the Tx scrambler seed value.
Parameter	<Pt> = Port number
Response	<seed> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:OBS:TX:SSV? → #B11
Note	This command supports OBSAI mode.

4.1.20 CPRI:PORT<Pt>:OBSai:TX:ADDRess

Syntax	CPRI:PORT<Pt>:OBSai:TX:ADDRess <address>
Description	This command sets the Tx RP3 address.
Parameters	<Pt> = Port number <address> = <NUMERIC PROGRAM DATA> <i>MINimum=#H0000, MAXimum=#H1FFF, DEFault=#H0000</i>
Response	None.
Example	CPRI:PORT1:OBS:TX:ADDR #H0001
Note	This command supports OBSAI mode.

Syntax	CPRI:PORT<Pt>:OBSai:TX:ADDRess?
Description	This query returns Tx RP3 address.
Parameter	<Pt> = Port number
Response	<address> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:OBS:TX:ADDR? → #H1
Note	

4.1.21 CPRI:PORT<Pt>:OBSai:TX:TYPE

Syntax	CPRI:PORT<Pt>:OBSai:TX:TYPE <type>
Description	This command sets the Tx RP3 type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> WCDMA: WCDMA/FDD GSM: GSM/EDGE IEEE80216: IEEE 802.16 LTE: LTE
Response	None.
Example	CPRI:PORT1:OBS:TX:TYPE LTE
Note	This command supports OBSAI mode.

Syntax	CPRI:PORT<Pt>:OBSai:TX:TYPE?
Description	This query returns the Tx RP3 type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:OBS:TX:TYPE? → LTE
Note	

4.1.22 CPRI:PORT<Pt>:OBSai:RX:FILTER

Syntax	CPRI:PORT<Pt>:OBSai:RX:FILTER <enable>
Description	This command enables or disablesthe Rx filter. <enable> = <BOOLEAN PROGRAM DATA> OFF ON
Response	None.
Example	CPRI:PORT1:OBS:RX:FILT ON
Note	This command supports OBSAI mode.

Syntax	CPRI:PORT<Pt>:OBSai:RX:FILTER?
Description	This query returns whether the Rx filter is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	CPRI:PORT1:OBS:RX:FILT? → 1
Note	

4.1.23 CPRI:PORT<Pt>:OBSai:RX:SSINdex

Syntax	CPRI:PORT<Pt>:OBSai:RX:SSINdex <seed>
Description	This command sets the Rx scrambler seed index.
Parameters	<Pt> = Port number <seed> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=17, DEFault=0</i>
Response	None.
Example	CPRI:PORT1:OBS:RX:SSIN 1
Note	This command supports OBSAI mode.

Syntax	CPRI:PORT<Pt>:OBSai:RX:SSINdex?
Description	This query returns the Rx scrambler seed index.
Parameter	<Pt> = Port number
Response	<seed> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:OBS:RX:SSIN? → 1
Note	

4.1.24 CPRI:PORT<Pt>:OBSai:RX:SSValue

Syntax	CPRI:PORT<Pt>:OBSai:RX:SSValue?
Description	This query returns the Rx scrambler seed value.
Parameter	<Pt> = Port number
Response	<seed> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:OBS:RX:SSV? → #B11
Note	This command supports OBSAI mode.

4.1.25 CPRI:PORT<Pt>:OBSai:RX:ADDRess

Syntax	CPRI:PORT<Pt>:OBSai:RX:ADDRess <address>
Description	This command sets the Rx RP3 address.
Parameters	<Pt> = Port number <address> = <NUMERIC PROGRAM DATA> <i>MINimum=#H0000, MAXimum=#H1FFF, DEFault=#H0000</i>
Response	None.
Example	CPRI:PORT1:OBS:RX:ADDR #H0001
Note	This command supports OBSAI mode.

Syntax	CPRI:PORT<Pt>:OBSai:RX:ADDRess?
Description	This query returns the Rx RP3 address.
Parameter	<Pt> = Port number
Response	<address> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:OBS:RX:ADDR? → #H1
Note	

4.1.26 CPRI:PORT<Pt>:OBSai:RX:TYPE

Syntax	CPRI:PORT<Pt>:OBSai:RX:TYPE <type>
Description	This command sets the Rx RP3 type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> WCDMA: WCDMA/FDD GSM: GSM/EDGE IEEE80216: IEEE 802.16 LTE: LTE
Response	None.
Example	CPRI:PORT1:OBS:RX:TYPE LTE
Note	This command supports OBSAI mode.

Syntax	CPRI:PORT<Pt>:OBSai:RX:TYPE?
Description	This query returns the Rx RP3 type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:OBS:RX:TYPE? → LTE
Note	

4.1.27 CPRI:PORT<Pt>:SETup:FOLLow

Syntax	CPRI:PORT<Pt>:SETup:FOLLow <follow>
Description	This command sets that port2 settings follow port1 settings.
Parameter	<Pt> = Port number <follow> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	CPRI:PORT2:SET:FOLL OFF
Note	This command is not available for PORT1. This command supports CPRI and OBSAI mode.

Syntax	CPRI:PORT<Pt>:SETup:FOLLow?
Description	This query returns whether port2 settings follow port1 settings or not.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	CPRI:PORT2:SET:FOLL? → 0
Note	This command is not available for PORT1.

4.2 Stimuli

4.2.1 CPRI:PORT<Pt>:STIMuli:ALARm

Syntax	CPRI:PORT<Pt>:STIMuli:ALARm <alarm>
Description	This command sets stimuli alarm.
Parameter	<Pt> = Port number <alarm> = <CHARACTER PROGRAM DATA> SLOS: Optical Loss of signal LOS: Loss of Signal LOF: Loss of Frame LSS: Loss of signal synchronization RLOS: Remote LOS RLOF: Remote LOF RAI: L1-RAI (Remote Alarm Indication) SDI: L1-SDI (SAP Defect Indication) RESet: L1-Reset (Master:Reset confirmation; Slave:Reset Request)
Response	None.
Example	CPRI:PORT1:STIM:ALAR LOF
Note	When :CONTents is UNFramed only SLOS and LSS is valid.

Syntax	CPRI:PORT<Pt>:STIMuli:ALARm?
Description	This query returns stimuli alarm.
Parameter	<Pt> = Port number
Response	<alarm> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:STIM:ALAR? → LOS
Note	

4.2.2 CPRI:PORT<Pt>:STIMuli:AINSerion

Syntax	CPRI:PORT<Pt>:STIMuli:AINSerion <insertion>
Description	This command set Alarm insertion.
Parameter	<Pt> = Port number <insertion> = <CHARACTER RESPONSE DATA> OFF: Off PERManent: Permanent <i>DEFault = OFF</i>
Response	None.
Example	CPRI:PORT1:STIM:AINS OFF
Note	

Syntax	CPRI:PORT<Pt>:STIMuli:AINSerion?
Description	This query returns Alarm insertion.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:STIM:AINS? → OFF
Note	

4.2.3 CPRI:PORT<Pt>:STIMuli:ERRor

Syntax	CPRI:PORT<Pt>:STIMuli:ERRor <error>
Description	This command sets stimuli Error.
Parameter	<Pt> = Port number <error> = <CHARACTER PROGRAM DATA> LCV: LCV SHV: SHV K307: K30.7 PE: Pattern Error FECSE: FEC Symbol Error
Response	None.
Example	CPRI:PORT1:STIM:ERR LCV
Note	

Syntax	CPRI:PORT<Pt>:STIMuli:ERRor?
Description	This query returns stimuli alarm.
Parameter	<Pt> = Port number
Response	<alarm> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:STIM:ERR? → LCV
Note	

4.2.4 CPRI:PORT<Pt>:STIMuli:EINSection

Syntax	CPRI:PORT<Pt>:STIMuli:EINSection <insertion>
Description	This command sets the method to insert errors.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF MANual B04: Burst · 1E-04 B05: Burst · 1E-05 B06: Burst · 1E-06 B07: Burst · 1E-07 B08: Burst · 1E-08 B09: Burst · 1E-09 B10: Burst · 1E-10 <i>DEFault = OFF</i>
Response	None.
Example	CPRI:PORT1:STIM:EINS OFF
Note	None.

Syntax	CPRI:PORT<Pt>:STIMuli:EINSection?
Description	This query returns the error insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	CPRI:PORT1:STIM:EINS? → B04
Note	

4.2.5 CPRI:PORT<Pt>:STIMuli:EBLength

Syntax	CPRI:PORT<Pt>:STIMuli:EBLength <length>
Description	This command sets Error Burst Length.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=256, DEFault=1</i>
Response	None.
Example	CPRI:PORT1:STIM:EBL 64
Note	This command is enabled when error insertion is Manual.

Syntax	CPRI:PORT<Pt>:STIMuli:EBLength?
Description	This query returns Error Burst Length.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:STIM:EBL → 64
Note	

4.2.6 CPRI:PORT<Pt>:STIMuli:FOFFset

Syntax	CPRI:PORT<Pt>:STIMuli:FOFFset <offset>
Description	This command sets the frequency offset for the clock source. Unit: ppm.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> <i>MINimum=-100, MAXimum=100, DEFault=0</i>
Response	None.
Example	CPRI:PORT1:STIM:FOFF 0
Note	

Syntax	CPRI:PORT<Pt>:STIMuli:FOFFset?
Description	This query returns the frequency offset for the clock source. Unit: ppm.
Parameter	<Pt> = Port number
Response	<offset> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:STIM:FOFF → 0
Note	

4.3 Result

4.3.1 CPRI:PORT<Pt>:IFETch?

Syntax	CPRI:PORT<Pt>:IFETch? <parameter>
Description	This query fetches a CPRI interval if available.
Parameters	<Pt> = Port number {(<parameter>} + {,}*) = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. Alarms SLOS: Optical loss of signal. Response: <Seconds>,<Ratio> LOS: Loss of signal. Response: <Seconds>,<Ratio> LOF: Loss of frame. Response: <Seconds>,<Ratio> NMES: No message. Response: <Seconds>,<Ratio> LSS: Loss of signal synchronization. Response: <Seconds>,<Ratio> L1Remote Alarm RLOS: Remote loss. Response: <Count>,<Ratio> RLOF: Remote loss of frame. Response: <Count>,<Ratio> RRAI: Remote alarm indication. Response: <Count>,<Ratio> RSDI: Remote SAP defect indication. Response: <Count>,<Ratio> RES: Reset. Response: <Count>,<Ratio> Errors LCV: LCV. Response: <Count>,<Ratio> SHV: SHV. Response: <Count>,<Ratio> K307: K30.7. Response: <Count>,<Ratio> PE: Pattern error. Response: <Count>,<Ratio> Frame TXHF: TX hyper frames. Response: <Count> TXCW: TX code words. Response: <Count> RXHF: RX hyper frames. Response: <Count> RXCW: RX code words. Response: <Count> TXMSGG: Tx OBSAI Message group. Response: <Count> RXMSGG: Rx OBSAI Message group. Response: <Count> FEC FECLOFA: Loss of FEC Alignment. Response: <Count> FECCORCW: Fec Corrected Codewords. Response: <Count> FECUCORCW: Fec Uncorrected Codewords. Response: <Count> FECSYMERR: Fec Symbol errors. Response: <Count> FECSYMERRRATE: Fec Symbol error rate. Response: <Count> Delay DEL: Delay. Response: <second> AVED: Average Delay. Response: <second> MIND: Maximum Delay. Response: <second> MAXD: Minimum Delay. Response: <second> DMC: Measurement Count. Response: <Count>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Format: Numeric List Each result is formatted according to the specification in the parameter field. Values that are not relevant or applicable for the current measurement return NaN (section 1.6.1).
Example	CPRI:PORT1:IFET? (LOS,LOF) → (3,0.00532),(4,0.00709)
Notes	This command fetches the results from the interval selected using the MEASurement:SEtup:SElect command (see section 18.2.2). If the requested result is not available, NaN (section 1.6.1) is returned. If there is one or more results, the last ", " is always removed.

4.4 Status

4.4.1 CPRI:PORT<Pt>:STATus:AESummary[:EVENT]?

Syntax	CPRI:PORT<Pt>:STATus:AESummary[:EVENT]?
Description	This query returns the alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of CPRI:PORT<Pt>:STAT:ALAR1[:EVENT]? DB2 (2) = Summary bit of CPRI:PORT<Pt>:STAT:ALAR2[:EVENT]? Remote Alarm DB3 (4) = Summary bit of CPRI:PORT<Pt>:STAT:ERR[:EVENT]? DB4 (8) = Summary bit of CPRI:PORT<Pt>:STAT:FEC[:EVENT]? FEC Alarm/Error DB5 - DB16 = NOT USED
Example	CPRI:PORT1:STAT:AES? → 3
Note	

4.4.2 CPRI:PORT<Pt>:STATus:AESummary:CONDition?

Syntax	CPRI:PORT<Pt>:STATus:AESummary:CONDition?
Description	This query returns alarms and errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as CPRI:PORT<Pt>:STAT:AESummary[:EVENT]?
Example	CPRI:PORT1:STAT:AES:COND? → 3
Note	

4.4.3 CPRI:PORT<Pt>:STATus:ALARm<section>[:EVENT]?

Syntax	CPRI:PORT<Pt>:STATus:ALARm<section>[:EVENT]?
Description	This query returns one of the alarms event register.
Parameters	<Pt> = Port number <section> = CPRI Alarm(1), CPRI L1Remote Alarm(2), CPRI FEC Alarm(3)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> <section> = 1: DB1 (1) = Signal Loss DB2 (2) = LOS DB3 (4) = LOF DB4 (8) = LSS DB5 (16) = No message DB6 - DB16 = NOT USED <section> = 2: DB1 (1) = Remote LOS DB2 (2) = Remote LOF DB3 (4) = RAI DB4 (8) = SDI DB5 (16) = Reset DB6 - DB16 = NOT USED
Example	CPRI:PORT1:STAT:ALAR1? → 1
Note	

4.4.4 CPRI:PORT<Pt>:STATus:ALARm<section>:CONDition?

Syntax	CPRI:PORT<Pt>:STATus:ALARm<section>:CONDition?
Description	This query returns one of the alarms condition registers.
Parameters	<Pt> = Port number <section> = CPRI Alarm(1), CPRI L1Remote Alarm(2)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as CPRI:PORT<Pt>:STATus:ALARm<section>[:EVENT]?
Example	CPRI:PORT1:STAT:ALAR1:COND? → 1
Note	

4.4.5 CPRI:PORT<Pt>:STATus:ERRor[:EVENT]?

Syntax	CPRI:PORT<Pt>:STATus:ERRor[:EVENT]?
Description	This query returns the errors event register.
Parameters	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = LCV DB2 (2) = SHV DB3 (4) = K30.7 DB4 (8) = Pattern error DB5 - DB16 = NOT USED
Example	CPRI:PORT1:STAT:ERR? → 3
Note	

4.4.6 CPRI:PORT<Pt>:STATus:ERRor:CONDition?

Syntax	CPRI:PORT<Pt>:STATus:ERRor:CONDition?
Description	This query returns errors condition register.
Parameters	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as CPRI:PORT<Pt>:STATus:ERRor[:EVENT]?
Example	CPRI:PORT1:STAT:ERR:COND? → 3
Note	

4.4.7 CPRI:PORT<Pt>:STATus:FEC[:EVENT]?

Syntax	CPRI:PORT<Pt>:STATus:FEC[:EVENT]?
Description	This query returns the FEC alarms and errors event register.
Parameters	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Loss of FEC Alignment (LOFA) DB2 (2) = FEC Corrected Codewords DB3 (4) = FEC Uncorrected Codewords DB4 (8) = FEC Symbol Errors DB5 - DB16 = NOT USED
Example	CPRI:PORT1:STAT:FEC? → 3
Note	

4.4.8 CPRI:PORT<Pt>:STATus:FEC:CONDition?

Syntax	CPRI:PORT<Pt>:STATus:FEC:CONDition?
Description	This query returns FEC alarms and errors condition register.
Parameters	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as CPRI:PORT<Pt>:STATus:FEC[:EVENT]?
Example	CPRI:PORT1:STAT:FEC:COND? → 3
Note	

4.4.9 CPRI:PORT<Pt>:STATus:TX:PSLevel?

Syntax	CPRI:PORT<Pt>:STATus:TX:PSLevel?
Description	This query returns the TX signal level. Unit: dBm.
Parameters	<Pt> = Port number
Response	<signal-level> = <STRING RESPONSE DATA> "<signal-level> dBm": Min: "< <min> dBm", Max: "Exceeds Level" "N/A": Module not present or not ready.
Example	CPRI:PORT1:STAT:TX:PSL? → "-3dBm"
Note	

4.4.10 CPRI:PORT<Pt>:STATus:RX:PSLevel?

Syntax	CPRI:PORT<Pt>:STATus:RX:PSLevel?
Description	This query returns the RX signal level. Unit: dBm.
Parameters	<Pt> = Port number
Response	<signal-level> = <STRING RESPONSE DATA> "<signal-level> dBm": Min: "< <min> dBm", Max: "Exceeds Level" "N/A": Module not present or not ready.
Example	CPRI:PORT1:STAT:RX:PSL? → "-3dBm"
Note	

4.4.11 CPRI:PORT<Pt>:STATus:TX:PDEViation?

Syntax	CPRI:PORT<Pt>:STATus:TX:PDEViation? [<unit>]
Description	This query returns TX deviation.
Parameters	<Pt> = Port number <unit> = <CHARACTER PROGRAM DATA> PPM = Parts per million BPS = Bits per second
Response	<pdeviation> = <NR2 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:STAT:TX:PDEV? PPM → -3
Note	

4.4.12 CPRI:PORT<Pt>:STATus:RX:PDEViation?

Syntax	CPRI:PORT<Pt>:STATus:RX:PDEViation? [<unit>]
Description	This query returns RX deviation.
Parameters	<Pt> = Port number <unit> = <CHARACTER PROGRAM DATA> PPM = Parts per million BPS = Bits per second
Response	<pdeviation> = <NR2 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:STAT:RX:PDEV? PPM → 10
Note	

4.4.13 CPRI:PORT<Pt>:STATus:TX:PBRate?

Syntax	CPRI:PORT<Pt>:STATus:TX:PBRate?
Description	This query returns the bit rate on TX.
Parameters	<Pt> = Port number
Response	<pbrate> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:STAT:TX:PBR? → 614400000
Note	

4.4.14 CPRI:PORT<Pt>:STATus:RX:PBRate?

Syntax	CPRI:PORT<Pt>:STATus:RX:PBRate?
Description	This query returns the bit rate on RX.
Parameters	<Pt> = Port number
Response	<pbrate> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:STAT:RX:PBR? → 614400000
Note	

4.4.15 CPRI:PORT<Pt>:STATus:TX:PPBRate?

Syntax	CPRI:PORT<Pt>:STATus:TX:PPBRate?
Description	This query returns the pattern bit rate on TX.
Parameters	<Pt> = Port number
Response	<ppbrate> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:STAT:TX:PPBR? → 614400000
Note	

4.4.16 CPRI:PORT<Pt>:STATus:RX:PPBRate?

Syntax	CPRI:PORT<Pt>:STATus:RX:PPBRate?
Description	This query returns the pattern bit rate on RX.
Parameters	<Pt> = Port number
Response	<ppbrate> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:STAT:RX:PPBR? → 614400000
Note	

4.4.17 CPRI:PORT<Pt>:STATus:LINK:STATe?

Syntax	CPRI:PORT<Pt>:STATus:LINK:STATe?
Description	This query returns the CPRI link State.
Parameters	<Pt> = Port number
Response	<state> = <CHARACTER PROGRAM DATA>
Example	CPRI:PORT1:STAT:LINK:STAT? → "Standby"
Note	

4.4.18 CPRI:PORT<Pt>:STATus:LINK:PROLe?

Syntax	CPRI:PORT<Pt>:STATus:LINK:PROLe?
Description	This query returns the port role of CPRI link.
Parameters	<Pt> = Port number
Response	<role> = <CHARACTER PROGRAM DATA>
Example	CPRI:PORT1:STAT:LINK:PROL? → "Master"
Note	

4.4.19 CPRI:PORT<Pt>:STATus:RX:LINK:PVERsion?

Syntax	CPRI:PORT<Pt>:STATus:RX:LINK:PVERsion?
Description	This query returns the protocol version of CPRI link.
Parameters	<Pt> = Port number
Response	<version> = <CHARACTER PROGRAM DATA>
Example	CPRI:PORT1:STAT:RX:LINK:PVER? → "Version 1"
Note	

4.4.20 CPRI:PORT<Pt>:STATus:RX:LINK:HRATe?

Syntax	CPRI:PORT<Pt>:STATus:RX:LINK:HRATe?
Description	This query returns the HDLC Rate of CPRI link.
Parameters	<Pt> = Port number
Response	<rate> = <CHARACTER PROGRAM DATA>
Example	CPRI:PORT1:STAT:RX:LINK:HRAT? → "2400 kbit/s HDLC"
Note	

4.4.21 CPRI:PORT<Pt>:STATus:RX:LINK:POINterp?

Syntax	CPRI:PORT<Pt>:STATus:RX:LINK:POINterp?
Description	This query returns the ethernet pointer of CPRI link.
Parameters	<Pt> = Port number
Response	<pointer> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:STAT:RX:LINK:POIN? → 20
Note	

4.4.22 CPRI:PORT<Pt>:STATus:TX:LINK:PVERsion?

Syntax	CPRI:PORT<Pt>:STATus:TX:LINK:PVERsion?
Description	This query returns the protocol version of CPRI link.
Parameters	<Pt> = Port number
Response	<version> = <CHARACTER PROGRAM DATA>
Example	CPRI:PORT1:STAT:TX:LINK:PVER? → "Version 1"
Note	

4.4.23 CPRI:PORT<Pt>:STATus:TX:LINK:HRATe?

Syntax	CPRI:PORT<Pt>:STATus:TX:LINK:HRATe?
Description	This query returns the HDLC Rate of CPRI link.
Parameters	<Pt> = Port number
Response	<rate> = <CHARACTER PROGRAM DATA>
Example	CPRI:PORT1:STAT:TX:LINK:HRAT? → "2400 kbit/s HDLC"
Note	

4.4.24 CPRI:PORT<Pt>:STATus:TX:LINK:POINterp?

Syntax	CPRI:PORT<Pt>:STATus:TX:LINK:POINterp?
Description	This query returns the ethernet pointer of CPRI link.
Parameters	<Pt> = Port number
Response	<pointer> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:STAT:TX:LINK:POIN? → 20
Note	

4.4.25 CPRI:PORT<Pt>:STATus:OBSai:TX:LINK:STATe?

Syntax	CPRI:PORT<Pt>:STATus:OBSai:TX:LINK:STATe?
Description	This query returns the OBSAI link Tx State.
Parameters	<Pt> = Port number
Response	<state> = <CHARACTER PROGRAM DATA>
Example	CPRI:PORT1:STAT:OBS:TX:LINK:STAT? → "FRAME_TX"
Note	

4.4.26 CPRI:PORT<Pt>:STATus:OBSai:RX:LINK:STATe?

Syntax	CPRI:PORT<Pt>:STATus:OBSai:RX:LINK:STATe?
Description	This query returns the CPRI link Rx State.
Parameters	<Pt> = Port number
Response	<state> = <CHARACTER PROGRAM DATA>
Example	CPRI:PORT1:STAT:OBS:RX:LINK:STAT? → "FRAME_SYNC"
Note	

4.5 RTD

4.5.1 CPRI:PORT<Pt>:RTD:ENABLE

Syntax	CPRI:PORT<Pt>:RTD:ENABLE <enable>
Description	This command enables or disables the round-trip-delay measurement.
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	CPRI:PORT1:RTD:ENAB ON
Note	

Syntax	CPRI:PORT<Pt>:RTD:ENABLE?
Description	This query returns whether the round-trip-delay measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	CPRI:PORT1:RTD:ENAB? → 1
Note	

4.5.2 CPRI:PORT<Pt>:RTD:MLIMit

Syntax	CPRI:PORT<Pt>:RTD:MLIMit <limit>
Description	This command sets the Threshold of maximum limit. Unit: us.
Parameters	<Pt> = Port number <limit> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1,000,000, DEFault=1,000,000</i>
Response	None.
Example	CPRI:PORT1:RTD:MLIM 1000000.00
Note	

Syntax	CPRI:PORT<Pt>:RTD:MLIMit?
Description	This query returns the Threshold of maximum limit. Unit: us.
Parameter	<Pt> = Port number
Response	<limit> = <NR2 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:RTD:MLIM? → 1000000.00
Note	

4.5.3 CPRI:PORT<Pt>:RTD:NUMBer?

Syntax	CPRI:PORT<Pt>:RTD:NUMBer?
Description	This query returns the number of the RTD data.
Parameters	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:RTD:NUMB? → 1
Note	

4.5.4 CPRI:PORT<Pt>:RTD:ATIMe?

Syntax	CPRI:PORT<Pt>:RTD:ATIMe?
Description	This query returns the Average delay. Unit:us.
Parameters	<Pt> = Port number
Response	<delay> = <NR2 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:RTD:ATIM? → 1.46
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

4.5.5 CPRI:PORT<Pt>:RTD:MTIME?

Syntax	CPRI:PORT<Pt>:RTD:MTIME?
Description	This query returns the maximum delay. Unit:us.
Parameters	<Pt> = Port number
Response	<delay> = <NR2 NUMERIC RESPONSE DATA> <limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	CPRI:PORT1:RTD:MTIM? → 1.46
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

4.5.6 CPRI:PORT<Pt>:RTD:LTIME?

Syntax	CPRI:PORT<Pt>:RTD:LTIME?
Description	This query returns the minimum delay. Unit:us.
Parameters	<Pt> = Port number
Response	<delay> = <NR2 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:RTD:LTIM? → 1.46
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

4.6 APS

4.6.1 CPRI:PORT<Pt>:APS:ENABLE

Syntax	CPRI:PORT<Pt>:APS:ENABLE <enable>
Description	This command enables or disables APS measurement.
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	CPRI:PORT1:APS:ENAB ON
Note	

Syntax	CPRI:PORT<Pt>:APS:ENABLE?
Description	This query returns whether APS measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	CPRI:PORT1:APS:ENAB? → 1
Note	

4.6.2 CPRI:PORT<Pt>:APS:EVENT

Syntax	CPRI:PORT<Pt>:APS:EVENT <events>
Description	This command sets the time reference event.
Parameters	<Pt> = Port number ({<events>} * {,}*) = <EXPRESSION PROGRAM DATA> SLOS : Signal loss LOS : LOS LOF : LOF LCV : LCV SHV : SHV PE : Pattern error RLOS : Remote LOS RLOF : Remote LOF RAI : RAI SDI : SDI RESet : Reset
Response	None.
Example	CPRI:PORT1:APS:EVEN (LOS,LOF)
Note	

Syntax	CPRI:PORT<Pt>:APS:EVENT?
Description	This query returns the time reference event.
Parameter	<Pt> = Port number
Response	{(<events>),}* = <EXPRESSION RESPONSE DATA>
Example	CPRI:PORT1:APS:EVEN? → (LOS,LOF)
Note	

4.6.3 CPRI:PORT<Pt>:APS:PERiod

Syntax	CPRI:PORT<Pt>:APS:PERiod <period>
Description	This command sets the error free period.
Parameters	<Pt> = Port number <period> = <NUMERIC PROGRAM DATA> 1,10,20,30,40,50,60,70,80,90,100 Unit ms <i>DEFault = 100</i>
Response	None.
Example	CPRI:PORT1:APS:PER 10
Note	

Syntax	CPRI:PORT<Pt>:APS:PERiod?
Description	This query returns the error free period.
Parameter	<Pt> = Port number
Response	<period> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:APS:PER? → 10
Note	

4.6.4 CPRI:PORT<Pt>:APS:MLIMit

Syntax	CPRI:PORT<Pt>:APS:MLIMit <max>
Description	This command sets the time reference maximum limit. Unit: ms.
Parameters	<Pt> = Port number <max> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 1000.000, DEFault = 50.000</i>
Response	None.
Example	CPRI:PORT1:APS:MLIM 50.000
Note	

Syntax	CPRI:PORT<Pt>:APS:MLIMit?
Description	This query returns the time reference maximum limit. Unit: ms.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:APS:MLIM? → 50.000
Note	

4.6.5 CPRI:PORT<Pt>:APS:NUMBer?

Syntax	CPRI:PORT<Pt>:APS:NUMBer?
Description	This query returns the number of times an APS Protocol event has occurred.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:APS:NUMB? → 17
Note	

4.6.6 CPRI:PORT<Pt>:APS:ATIMe?

Syntax	CPRI:PORT<Pt>:APS:ATIMe?
Description	This query returns the average time of the reference event occurrences. Unit: ms.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:APS:ATIM? → 4.000
Note	The maximum measurable time is 1000 ms. The maximum measurable time will be responded if the result exceeds 1000 ms.

4.6.7 CPRI:PORT<Pt>:APS:MTIME?

Syntax	CPRI:PORT<Pt>:APS:MTIME?
Description	This query returns the maximum time of the reference event occurrences. Unit: ms.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
	<limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	CPRI:PORT1:APS:MTIM? → 4.000,0
Note	The maximum measurable time is 1000 ms. The maximum measurable time will be responded if the result exceeds 1000 ms.

4.6.8 CPRI:PORT<Pt>:APS:LTIME?

Syntax	CPRI:PORT<Pt>:APS:LTIME?
Description	This query returns the least (minimum) time of the reference event occurrences. Unit: ms.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:APS:LTIM? → 4.000
Note	The maximum measurable time is 1000 ms. The maximum measurable time will be responded if the result exceeds 1000 ms.

4.6.9 CPRI:PORT<Pt>:APS:CTIME?

Syntax	CPRI:PORT<Pt>:APS:CTIME?
Description	This query returns the current time of the reference event occurrences. Unit: ms.
Parameter	<Pt> = Port number
Response	<current> = <NR2 NUMERIC RESPONSE DATA>
Example	CPRI:PORT1:APS:CTIM? → 4.000
Note	The maximum measurable time is 1000 ms. The maximum measurable time will be responded if the result exceeds 9999.999 ms.

Chapter 5

2 Mbps

5.1 Receiver

5.1.1 TMBPs:RX<Pt>[:ENABled]

Syntax	TMBPs:RX<Pt>[:ENABled] <interface>
Description	This command enables or disables the 2 Mbps receiver.
Parameters	<Pt> = Port number <interface> = <CHARACTER PROGRAM DATA> OFF ON <i>DEFault = OFF</i>
Response	None.
Example	TMBP:RX1 ON
Note	

Syntax	TMBPs:RX<Pt>[:ENABled]?
Description	This query returns whether the 2 Mbps receiver is enabled or disabled.
Parameter	<Pt> = Port number
Response	<interface> = <CHARACTER RESPONSE DATA>
Example	TMBP:RX1? → ON TMBP:RX1:ENAB? → SDH
Note	Returns SDH if E1 is over SDH or SONET.

5.1.2 TMBPs:RX<Pt>:FOLLow

Syntax	TMBPs:RX<Pt>:FOLLow <follow>
Description	This command sets the receiver to follow another setup or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> NONE: Do not follow TX: Transmitter of the same port RX1: Receiver of port 1 <i>DEFault = NONE</i>
Response	None.
Example	TMBP:RX1:FOLL TX (i.e., RX1 follows TX1) TMBP:RX2:FOLL RX1 (i.e., RX2 follows RX1)
Note	

Syntax	TMBPs:RX<Pt>:FOLLow?
Description	This query returns whether the receiver follow another setup.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	TMBP:RX1:FOLL? → TX
Note	

5.1.3 TMBPs:RX<Pt>:CONNector

Syntax	TMBPs:RX<Pt>:CONNector <type>
Description	This command sets the physical type of connector.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> BALanced: Using balanced connector UNBalanced: Using unbalanced connector <i>DEFault = UNBalanced</i>
Response	None.
Example	TMBP:RX1:CONN BAL
Note	

Syntax	TMBPs:RX<Pt>:CONNector?
Description	This query returns the physical type of connector.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	TMBP:RX1:CONN? → BAL
Note	

5.1.4 TMBPs:RX<Pt>:MODE

Syntax	TMBPs:RX<Pt>:MODE <mode>
Description	This command sets the signal termination mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> TERMinate: Nominal impedance. Normal frequency dependent AGC. BRIDged: High impedance. MONitor: Nominal impedance. Frequency linear AGC. <i>DEFault = TERMinate</i>
Response	None.
Example	TMBP:RX1:MODE TERM
Note	

Syntax	TMBPs:RX<Pt>:MODE?
Description	This query returns the signal termination mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	TMBP:RX1:MODE? → TERM
Note	

5.1.5 TMBPs:RX<Pt>:SENSitivity

Syntax	TMBPs:RX<Pt>:SENSitivity <sens>
Description	This command sets the input sensitivity.
Parameters	<Pt> = Port number <sens> = <CHARACTER PROGRAM DATA> FULL M20DB: Input sensitivity -20 dB M33DB: Input sensitivity -33 dB <i>DEFault = FULL</i>
Response	None.
Example	TMBP:RX1:SENS FULL
Note	

Syntax	TMBPs:RX<Pt>:SENSitivity?
Description	This query returns the input sensitivity.
Parameter	<Pt> = Port number
Response	<sens> = <CHARACTER RESPONSE DATA>
Example	TMBP:RX1:SENS? → FULL
Note	

5.1.6 TMBPs:RX<Pt>:CODE

Syntax	TMBPs:RX<Pt>:CODE <code>
Description	This command sets the line code type.
Parameters	<Pt> = Port number <code> = <CHARACTER PROGRAM DATA> AMI HDB3 <i>DEFault = HDB3</i>
Response	None.
Example	TMBP:RX1:CODE AMI
Note	

Syntax	TMBPs:RX<Pt>:CODE?
Description	This query returns the line code type.
Parameter	<Pt> = Port number
Response	<code> = <CHARACTER RESPONSE DATA>
Example	TMBP:RX1:CODE? → AMI
Note	

5.1.7 TMBPs:RX<Pt>:PCMFrame

Syntax	TMBPs:RX<Pt>:PCMFrame <enable>
Description	This command enables or disables the PCM frame.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	TMBP:RX1:PCMF ON
Note	

Syntax	TMBPs:RX<Pt>:PCMFrame?
Description	This query returns whether PCM frame is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:RX1:PCMF? → 1
Note	

5.1.8 TMBPs:RX<Pt>:CRC4

Syntax	TMBPs:RX<Pt>:CRC4 <enable>
Description	This command enables or disables the CRC4 bits.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	TMBP:RX1:CRC4 ON
Note	

Syntax	TMBPs:RX<Pt>:CRC4?
Description	This query returns whether the CRC4 bits is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:RX1:CRC4? → 1
Note	

5.1.9 TMBPs:RX<Pt>:EBITs

Syntax	TMBPs:RX<Pt>:EBITs <enable>
Description	This command enables or disables the E-bits.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	TMBP:RX1:EBIT ON
Note	

Syntax	TMBPs:RX<Pt>:EBITs?
Description	This query returns whether the E-bits is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:RX1:EBIT? → 1
Note	

5.1.10 TMBPs:RX<Pt>:PATtern

Syntax	TMBPs:RX<Pt>:PATtern <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF USER16BIT: Obsolete. For backward compatibility only. Same as USER32BIT. USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS6 PRBS7 PRBS9 PRBS11 PRBS15 PRBS20 PRBS23 QRSS11 QRSS20 FOX FOXCMA3000 ALL0 ALL1 ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 ALT324: Alternating 3:24 <i>DEFault = PRBS11</i>
Response	None.
Example	TMBP:RX1:PATT PRBS11
Note	

Syntax	TMBPs:RX<Pt>:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	TMBP:RX1:PATT? → PRBS11
Note	

5.1.11 TMBPs:RX<Pt>:PINVersion

Syntax	TMBPs:RX<Pt>:PINVersion <inverted>
Description	This command enables or disables pattern inversion.
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	TMBP:RX1:PINV ON
Note	The following patterns can be inverted: PRBSxx, QRSSxx, ALT11, ALT13, ALT17, ALT324, USER32BIT and USER2048BIT.

Syntax	TMBPs:RX<Pt>:PINVersion?
Description	This query returns whether the pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inverted> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:RX1:PINV? → 1
Note	

5.1.12 TMBPs:RX<Pt>:PTSLots

Syntax	TMBPs:RX<Pt>:PTSLots <slots>
Description	This command sets the pattern time slots.
Parameters	<Pt> = Port number <slots> = <EXPRESSION PROGRAM DATA> Format: Numeric List List consist of slot number(s) ranging from 1 to 31
Response	None.
Examples	TMBP:RX1:PTSL (1,3,5)
Note	

Syntax	TMBPs:RX<Pt>:PTSLots?
Description	This query returns the pattern time slots.
Parameter	<Pt> = Port number
Response	<slots> = <EXPRESSION RESPONSE DATA> Format: Numeric List
Example	TMBP:RX1:PTSL? → (1,3,5)
Note	

5.1.13 TMBPs:RX<Pt>:UP16

Syntax	TMBPs:RX<Pt>:UP16 <pattern>
Description	This command sets the 16 bit user pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Valid characters: '0' and '1' The string must consist of 1 to 16 characters.
Response	None.
Example	TMBP:RX1:UP16 "101101"
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

5.1.14 TMBPs:RX<Pt>:UP32

Syntax	TMBPs:RX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATtern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Examples	TMBP:RX2:UP32 "01101"
Note	

Syntax	TMBPs:RX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	TMBP:RX2:UP32? → "01101"
Note	

5.1.15 TMBPs:RX<Pt>:UP2K

Syntax	TMBPs:RX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	TMBP:RX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when TMBP:RX2:PATT is USER2048BIT

Syntax	TMBPs:RX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	None.
Response	<pattern> = <STRING RESPONSE DATA>
Example	TMBP:RX1:UP2K? → "12DF"
Note	

5.1.16 TMBPs:RX<Pt>:AUDio

Syntax	TMBPs:RX<Pt>:AUDio <type>
Description	This command sets the audio decoding.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF ON <i>DEFault = OFF</i>
Response	None.
Example	TMBP:RX1:AUD ON
Note	

Syntax	TMBPs:RX<Pt>:AUDio?
Description	This query returns the audio decoding.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	TMBP:RX1:AUD? → ON
Note	

5.1.17 TMBPs:RX<Pt>:ATSLot

Syntax	TMBPs:RX<Pt>:ATSLot <timeslotno>
Description	This command sets the audio timeslot to be monitored.
Parameters	<Pt> = Port number <timeslotno> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=31</i> <i>DEFault=2</i>
Response	None.
Example	TMBP:RX1:ATSL 4
Note	

Syntax	TMBPs:RX<Pt>:ATSLot?
Description	This query returns the monitored audio timeslot.
Parameter	<Pt> = Port number
Response	<timeslotno> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:RX1:ATSL? → 4
Note	

5.1.18 TMBPs:RX<Pt>:CAS

Syntax	TMBPs:RX<Pt>:CAS <enable>
Description	This command enables or disables the channel associated signaling.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	TMBP:RX1:CAS ON
Note	

Syntax	TMBPs:RX<Pt>:CAS?
Description	This query returns whether the channel associated signaling is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:RX1:CAS? → 1
Note	

5.2 Transmitter

5.2.1 TMBPs:TX<Pt>[:ENABled]

Syntax	TMBPs:TX<Pt>[:ENABled] <interface>
Description	This command enables or disables the 2 Mbps transmitter.
Parameters	<Pt> = Port number <interface> = <CHARACTER PROGRAM DATA> OFF ON <i>DEFault = OFF</i>
Response	None.
Examples	TMBP:TX1 ON TMBP:TX1:ENAB ON
Note	

Syntax	TMBPs:TX<Pt>[:ENABled]?
Description	This query returns whether the 2 Mbps transmitter is enabled or disabled.
Parameter	<Pt> = Port number
Response	<interface> = <CHARACTER RESPONSE DATA>
Examples	TMBP:TX1? → ON TMBP:TX1:ENAB? → SDH
Note	Returns SDH if E1 is over SDH or SONET.

5.2.2 TMBPs:TX<Pt>:FOLLow

Syntax	TMBPs:TX<Pt>:FOLLow <follow>
Description	This command sets the transmitter setting to follow another setup or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> NONE: Do not follow TX1: Follow the setting of the port 1 transmitter <i>DEFault = NONE</i>
Response	None.
Example	TMBP:TX2:FOLL TX1 (i.e., TX2 follows TX1)
Note	This command is not valid for :TX1

Syntax	TMBPs:TX<Pt>:FOLLow?
Description	This query returns whether the transmitter follow the TX1 settings.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	TMBP:TX2:FOLL? → TX1
Note	This command is not valid for :TX1

5.2.3 TMBPs:TX<Pt>:CONNector

Syntax	TMBPs:TX<Pt>:CONNector <type>
Description	This command sets the physical type of connector.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> BALanced: Using balanced connector UNBalanced: Using unbalanced connector <i>DEFault = UNBalanced</i>
Response	None.
Example	TMBP:TX1:CONN BAL
Note	

Syntax	TMBPs:TX<Pt>:CONNector?
Description	This query returns the physical type of connector.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	TMBP:TX1:CONN? → BAL
Note	

5.2.4 TMBPs:TX<Pt>:DINSert[:ENABle]

Syntax	TMBPs:TX<Pt>:DINSert[:ENABle] <enable>
Description	This command enables or disables Drop and Insert.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	TMBP:TX1:DINS OFF
Note	

Syntax	TMBPs:TX<Pt>:DINSert[:ENABle]?
Description	This query returns whether Drop and Insert is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:TX1:DINS? → 0
Note	

5.2.5 TMBPs:TX<Pt>:TIMing

Syntax	TMBPs:TX<Pt>:TIMing <source>
Description	This command sets the timing source.
Parameters	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> INTernal: Internal timing source EXTernal: External timing source RX: Received signal on the same port <i>DEFault = INTernal</i>
Response	None.
Example	TMBP:TX1:TIM INT
Note	

Syntax	TMBPs:TX<Pt>:TIMing?
Description	This query returns the timing source.
Parameter	<Pt> = Port number
Response	<source> = <CHARACTER RESPONSE DATA>
Example	TMBP:TX1:TIM? → INT
Note	

5.2.6 TMBPs:TX<Pt>:FOFFset

Syntax	TMBPs:TX<Pt>:FOFFset <offset>
Description	This command sets the frequency offset for the clock source. Unit: ppm.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> <i>MINimum=-125, MAXimum=125, DEFault=0</i> <i>Allowed suffix = ppm</i>
Response	None.
Example	TMBP:TX1:FOFF 0ppm
Note	

Syntax	TMBPs:TX<Pt>:FOFFset?
Description	This query returns the frequency offset (ppm) for the clock source.
Parameter	<Pt> = Port number
Response	<offset> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:TX1:FOFF? → 0
Note	

5.2.7 TMBPs:TX<Pt>:CODE

Syntax	TMBPs:TX<Pt>:CODE <code>
Description	This command sets the line code type.
Parameters	<Pt> = Port number <code> = <CHARACTER PROGRAM DATA> AMI HDB3 <i>DEFault = HDB3</i>
Response	None.
Example	TMBP:TX1:CODE AMI
Note	

Syntax	TMBPs:TX<Pt>:CODE?
Description	This query returns the line code type.
Parameter	<Pt> = Port number
Response	<code> = <CHARACTER RESPONSE DATA>
Example	TMBP:TX1:CODE? → AMI
Note	

5.2.8 TMBPs:TX<Pt>:PCMFrame

Syntax	TMBPs:TX<Pt>:PCMFrame <enable>
Description	This command enables or disables the PCM frame.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	TMBP:TX1:PCMF ON
Note	

Syntax	TMBPs:TX<Pt>:PCMFrame?
Description	This query returns whether PCM frame is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:TX1:PCMF? → 1
Note	

5.2.9 TMBPs:TX<Pt>:CRC4

Syntax	TMBPs:TX<Pt>:CRC4 <enable>
Description	This command enables or disables the CRC4 bits.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	TMBP:TX1:CRC4 ON
Note	

Syntax	TMBPs:TX<Pt>:CRC4?
Description	This query returns whether the CRC4 bits is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:TX1:CRC4? → 1
Note	

5.2.10 TMBPs:TX<Pt>:SABits

Syntax	TMBPs:TX<Pt>:SABits <frame1>,<frame3>,<frame5>,<frame7>
Description	This command sets the Sa-bits.
Parameters	<Pt> = Port number <frame1> = <NUMERIC PROGRAM DATA> MINimum=#B00000, MAXimum=#B11111 DEFault=#B11111 <frame3> = <NUMERIC PROGRAM DATA> MINimum=#B00000, MAXimum=#B11111 DEFault=#B11111 <frame5> = <NUMERIC PROGRAM DATA> MINimum=#B00000, MAXimum=#B11111 DEFault=#B11111 <frame7> = <NUMERIC PROGRAM DATA> MINimum=#B00000, MAXimum=#B11111 DEFault=#B11111
Response	None.
Examples	TMBP:TX1:SAB #B11111,#B11111,#B11111,#B11111 TMBP:TX1:SAB 31,31,31,31 TMBP:TX1:SAB min,max,def,0
Note	

Syntax	TMBPs:TX<Pt>:SABits?
Description	This query returns the Sa-Bits.
Parameter	<Pt> = Port number
Response	<frame1> = <BINARY NUMERIC RESPONSE DATA> <frame3> = <BINARY NUMERIC RESPONSE DATA> <frame5> = <BINARY NUMERIC RESPONSE DATA> <frame7> = <BINARY NUMERIC RESPONSE DATA>
Example	TMBP:TX1:SAB? → #B11111,#B11111,#B11111,#B11111
Note	

5.2.11 TMBPs:TX<Pt>:SABMode

Syntax	TMBPs:TX<Pt>:SABMode <mode>
Description	This command sets the Sa-Bits mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> INSert BYPass DEFault = BYPass
Response	None.
Example	TMBP:TX1:SABM INS
Note	

5.2.12 TMBPs:TX<Pt>:SABMode?

Syntax	TMBPs:TX<Pt>:SABMode?
Description	This query returns the Sa-Bits mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	TMBP:TX1:SABM? → INS
Note	

5.2.13 TMBPs:TX<Pt>:PATtern

Syntax	TMBPs:TX<Pt>:PATtern <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF USER16BIT: Obsolete. For backward compatibility only. Same as USER32BIT. USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS6 PRBS7 PRBS9 PRBS11 PRBS15 PRBS20 PRBS23 QRSS11 QRSS20 FOX FOXCMA3000 ALL0 ALL1 ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 ALT324: Alternating 3:24 <i>DEFault = PRBS11</i>
Response	None.
Example	TMBP:TX1:PATT PRBS11
Note	

Syntax	TMBPs:TX<Pt>:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	TMBP:TX1:PATT? → PRBS11
Note	

5.2.14 TMBPs:TX<Pt>:PINVersion

Syntax	TMBPs:TX<Pt>:PINVersion <inversion>
Description	This command enables or disables pattern inversion.
Parameters	<Pt> = Port number <inversion> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	TMBP:TX1:PINV ON
Note	The following patterns can be inverted: PRBSxx, QRSSxx, ALT11, ALT13, ALT17, ALT324, USER32BIT and USER2048BIT.

Syntax	TMBPs:TX<Pt>:PINVersion?
Description	This query returns whether the pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inversion> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:TX1:PINV? → 1
Note	

5.2.15 TMBPs:TX<Pt>:PTSLots

Syntax	TMBPs:TX<Pt>:PTSLots <timeslot>
Description	This command sets the pattern time slots.
Parameters	<Pt> = Port number <timeslots> = <EXPRESSION PROGRAM DATA> Format: Numeric List List consist of slot number(s) ranging from 1 to 31
Response	None.
Examples	TMBP:TX1:PTSL (1,3,5)
Note	

Syntax	TMBPs:TX<Pt>:PTSLots?
Description	This query returns the pattern time slots.
Parameter	<Pt> = Port number
Response	<timeslot> = <EXPRESSION RESPONSE DATA> Format: Numeric List.
Example	TMBP:TX1:PTSL? → (1,3,5)
Note	

5.2.16 TMBPs:TX<Pt>:UP16

Syntax	TMBPs:TX<Pt>:UP16 <pattern>
Description	This command sets the 16 bit user pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Valid characters: '0' and '1' The string must consist of 1 to 16 characters.
Response	None.
Example	TMBP:TX1:UP16 "101101"
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

5.2.17 TMBPs:TX<Pt>:UP32

Syntax	TMBPs:TX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATtern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Examples	TMBP:TX1:UP32 "01101"
Note	

Syntax	TMBPs:TX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	TMBP:TX1:UP32? → "01101"
Note	

5.2.18 TMBPs:TX<Pt>:UP2K

Syntax	TMBPs:TX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	TMBP:TX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when TMBP:TX1:PATT is USER2048BIT

Syntax	TMBPs:TX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	TMBP:TX1:UP2K? → "12DF"
Note	

5.2.19 TMBPs:TX<Pt>:UTSLots

Syntax	TMBPs:TX<Pt>:UTSLots <content>
Description	This command sets the content of unused time slots.
Parameters	<Pt> = Port number <content> = <NUMERIC PROGRAM DATA> <i>MINimum=#B00000000, MAXimum=#B11111111</i> <i>DEFault=#B01010101</i>
Response	None.
Example	TMBP:TX1:UTSL 128
Note	

Syntax	TMBPs:TX<Pt>:UTSLots?
Description	This query returns the content of unused time slots.
Parameter	<Pt> = Port number <content> = <BINARY NUMERIC RESPONSE DATA>
Response	None.
Example	TMBP:TX1:UTSL? → #B10101010
Note	

5.2.20 TMBPs:TX<Pt>:SCContent

Syntax	TMBPs:TX<Pt>:SCContent <content>
Description	This command sets the channel content.
Parameters	<Pt> = Port number <content> = <CHARACTER PROGRAM DATA> OFF TONE TRANsparent SPEech <i>DEFault=OFF</i>
Response	None.
Example	TMBP:TX1:SCC TONE
Note	

Syntax	TMBPs:TX<Pt>:SCContent?
Description	This query returns the channel content.
Parameter	<Pt> = Port number
Response	<content> = <CHARACTER RESPONSE DATA>
Example	TMBP:TX1:SCC? → TONE
Note	

5.2.21 TMBPs:TX<Pt>:SCTSlot

Syntax	TMBPs:TX<Pt>:SCTSlot <timeslot>
Description	This command sets the channel time slot.
Parameters	<Pt> = Port number <timeslot> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=31</i> <i>DEFault=2</i>
Response	None.
Example	TMBP:TX1:SCTS 4
Note	

Syntax	TMBPs:TX<Pt>:SCTSlot?
Description	This query returns the channel time slot.
Parameter	<Pt> = Port number
Response	<timeslot> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:TX1:SCTS? → 4
Note	

5.2.22 TMBPs:TX<Pt>:TFR

Syntax	TMBPs:TX<Pt>:TFR <frequency>
Description	This command sets the tone frequency.
Parameters	<Pt> = Port number <frequency> = <NUMERIC PROGRAM DATA> <i>MINimum = 1 hz, MAXimum = 4000 hz</i> <i>DEFault = 440</i> <i>Allowed suffixes = HZ, KHZ</i>
Response	None.
Example	TMBP:TX1:TFR 500HZ
Note	

Syntax	TMBPs:TX<Pt>:TFR?
Description	This query returns the tone frequency (Hz).
Parameter	<Pt> = Port number
Response	<frequency> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:TX1:TFR? → 500
Note	

5.2.23 TMBPs:TX<Pt>:TLEVel

Syntax	TMBPs:TX<Pt>:TLEVel <level>
Description	This command sets the tone level.
Parameters	<Pt> = Port number <level> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = -70, <i>MAXimum</i> = 3 <i>DEFault</i> = -20 <i>Allowed suffixes</i> = dB
Response	None.
Example	TMBP:TX1:TLEV 2dB
Note	

Syntax	TMBPs:TX<Pt>:TLEVel?
Description	This query returns the tone level.
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:TX1:TLEV? → 2
Note	

5.2.24 TMBPs:TX<Pt>:CAS

Syntax	TMBPs:TX<Pt>:CAS <enable>
Description	This command enables or disables the channel associated signaling.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = OFF
Response	None.
Example	TMBP:TX1:CAS ON
Note	

Syntax	TMBPs:TX<Pt>:CAS?
Description	This query returns whether the channel associated signaling is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:TX1:CAS? → 1
Note	

5.2.25 TMBPs:TX<Pt>:CASChannel

Syntax	TMBPs:TX<Pt>:CASChannel <channel>
Description	This command sets the CAS channel number.
Parameters	<Pt> = Port number <channel> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =1, <i>MAXimum</i> =30, <i>DEFault</i> =1
Response	None.
Example	TMBP:TX1:CASC 5
Note	

Syntax	TMBPs:TX<Pt>:CASChannel?
Description	This query returns the CAS channel number.
Parameter	<Pt> = Port number
Response	<channel> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:TX1:CASC? → 5
Note	

5.2.26 TMBPs:TX<Pt>:CASBits

Syntax	TMBPs:TX<Pt>:CASBits <bits>
Description	This command sets the CAS channel bits.
Parameters	<Pt> = Port number <bits> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000, MAXimum=#B1111, DEFault=#B1111</i>
Response	None.
Example	TMBP:TX1:CASB #B1111
Note	

Syntax	TMBPs:TX<Pt>:CASBits?
Description	This query returns the CAS channel bits.
Parameter	<Pt> = Port number
Response	<bits> = <BINARY NUMERIC RESPONSE DATA>
Example	TMBP:TX1:CASB? → #B1111
Note	

5.2.27 TMBPs:TX<Pt>:COCBits

Syntax	TMBPs:TX<Pt>:COCBits <bits>
Description	This command sets the CAS other channel bits.
Parameters	<Pt> = Port number <bits> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000, MAXimum=#B1111, DEFault=#B1001</i>
Response	None.
Example	TMBP:TX1:COCB #B0000
Note	

Syntax	TMBPs:TX<Pt>:COCBits?
Description	This query returns the CAS other channel bits.
Parameter	<Pt> = Port number
Response	<bits> = <BINARY NUMERIC RESPONSE DATA>
Example	TMBP:TX1:COCB? → #B0000
Note	

5.3 Stimuli

5.3.1 TMBPs:STIMuli:TX<Pt>:ALARm

Syntax	TMBPs:STIMuli:TX<Pt>:ALARm <type>
Description	This command sets the alarm type to be generated.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> NALarm: No alarm NSIGnal: No signal AIS: Alarm indication signal NFRame: No frame DALarm: Distant alarm (RDI) NSYNc: No pattern sync NCAM: No CAS MFAS DMF: Distant MF alarm <i>DEFault = NALarm</i>
Response	None.
Example	TMBP:STIM:TX1:ALAR NSIG
Note	

Syntax	TMBPs:STIMuli:TX<Pt>:ALARm?
Description	This query returns the generated alarm type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	TMBP:STIM:TX1:ALAR? → NSIG
Note	

5.3.2 TMBPs:STIMuli:TX<Pt>:ERRor

Syntax	TMBPs:STIMuli:TX<Pt>:ERRor <destination>
Description	This command sets the error destination.
Parameters	<Pt> = Port number <destination> = <CHARACTER PROGRAM DATA> FAS FNFas: FAS and NFAS FWORD: FAS word CRC4 CMFas: CRC4 MFAS CODE PATTern CAMFas: CAS MFAS EBIT: E-Bit PSLip: Pattern slip FSLip: Frame slip TRANsparent: Transparent <i>DEFault = CRC4</i>
Response	None.
Example	TMBP:STIM:TX1:ERR FAS
Note	

Syntax	TMBPs:STIMuli:TX<Pt>:ERRor?
Description	This query returns the error destination.
Parameter	<Pt> = Port number
Response	<destination> = <CHARACTER RESPONSE DATA>
Example	TMBP:STIM:TX1:ERR? → FAS
Note	

5.3.3 TMBPs:STIMuli:TX<Pt>:EINsert

Syntax	TMBPs:STIMuli:TX<Pt>:EINsert <insertion>
Description	This command sets the method to insert errors.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF MANual B02: Burst · 1E-02 B03: Burst · 1E-03 B04: Burst · 1E-04 B05: Burst · 1E-05 B06: Burst · 1E-06 B07: Burst · 1E-07 ES: Errored seconds SES: Severe errored seconds <i>DEFault = OFF</i>
Response	None.
Example	TMBP:STIM:TX1:EINS MAN
Note	If insertion is set to MANual, errors are inserted with SYST:STIM:INS. See section 2.3.52

Syntax	TMBPs:STIMuli:TX<Pt>:EINsert?
Description	This query returns the error insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	TMBP:STIM:TX1:EINS? → MAN
Note	

5.3.4 TMBPs:STIMuli:TX<Pt>:EBLength

Syntax	TMBPs:STIMuli:TX<Pt>:EBLength <burstlength>
Description	This command sets the error burst length to generate.
Parameters	<Pt> = Port number <burstlength> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=255, DEFault=1</i>
Response	None.
Example	TMBP:STIM:TX1:EBL 1
Note	For TMBP:STIM:TX<Pt>:ERR? → FWORD, <i>MAXimum = 16</i>

Syntax	TMBPs:STIMuli:TX<Pt>:EBLength?
Description	This query returns the error burst length to generate.
Parameter	<Pt> = Port number
Response	<burstlength> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:STIM:TX1:EBL? → 1
Note	

5.4 Result

5.4.1 TMBPs:RX<Pt>:IFETch?

Syntax	TMBPs:RX<Pt>:IFETch? <parameter>
Description	This command fetches results from a 2 Mbps interval if available.
Parameters	<Pt> = Port number ({<parameter>} + {,}*) = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. Alarms

continued on next page...

...continued from previous page

	NSIGnal: No signal. Response: <Seconds>,<Ratio> AIS: Alarm indication Signal. Response: <Seconds>,<Ratio> NFrame: No frame. Response: <Seconds>,<Ratio> NCMF: No CRC4 multi frame. Response: <Seconds>,<Ratio> DALarm: Distant alarm. Response: <Seconds>,<Ratio> NSYNc: No sync. Response: <Seconds>,<Ratio> NCAM: No CAS MF. Response: <Seconds>,<Ratio> DMF: Distant MF. Response: <Seconds>,<Ratio> Errors FAS: Frame alignment signal. Response: <Count>,<Ratio> PATtern: Pattern. Response: <Count>,<Ratio> CRC4: CRC4. Response: <Count>,<Ratio> CRCM: CRC4 MFAS. Response: <Count>,<Ratio> EBIT: E-Bits. Response: <Count>,<Ratio> CODE: Code. Response: <Count>,<Ratio> PSLip: Pattern slip. Response: <Count>,<Ratio> PBLocK: Pattern block. Response: <Count>,<Ratio> FSLip: Frame slip. Response: <Count>,<Ratio> FAS performance errors FES: FAS ES. Response: <Count>,<Ratio%> FSES: FAS SES. Response: <Count>,<Ratio%> FBBE: FAS BBE. Response: <Count>,<Ratio%> FALS: FAS ALS. Response: <Count>,<Ratio%> FUAT: FAS UAT. Response: <Count>,<Ratio%> FAVT: FAS AVT. Response: <Count>,<Ratio%> FEFS: FAS EFS. Response: <Count>,<Ratio%> Pattern performance errors PES: Pattern ES. Response: <Count>,<Ratio%> PSES: Pattern SES. Response: <Count>,<Ratio%> PBBE: Pattern BBE. Response: <Count>,<Ratio%> PALS: Pattern ALS. Response: <Count>,<Ratio%> PUAT: Pattern UAT. Response: <Count>,<Ratio%> PAVT: Pattern AVT. Response: <Count>,<Ratio%> PEFS: Pattern EFS. Response: <Count>,<Ratio%> CRC4 performance errors CES: CRC4 ES. Response: <Count>,<Ratio%> CSES: CRC4 SES. Response: <Count>,<Ratio%> CBBE: CRC4 BBE. Response: <Count>,<Ratio%> CALs: CRC4 ALS. Response: <Count>,<Ratio%> CUAT: CRC4 UAT. Response: <Count>,<Ratio%> CAVT: CRC4 AVT. Response: <Count>,<Ratio%> CEFS: CRC4 EFS. Response: <Count>,<Ratio%> E-Bit performance errors EES: E-Bit ES. Response: <Count>,<Ratio%> ESES: E-Bit SES. Response: <Count>,<Ratio%> EBBE: E-Bit BBE. Response: <Count>,<Ratio%> EALS: E-Bit ALS. Response: <Count>,<Ratio%> EUAT: E-Bit UAT. Response: <Count>,<Ratio%> EAVT: E-Bit AVT. Response: <Count>,<Ratio%> EEFS: E-Bit EFS. Response: <Count>,<Ratio%>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Expression format: Numeric List

continued on next page...

... continued from previous page

	Each result is formatted according to the specification in the parameter field. Values that are not relevant or applicable for the current measurement, returns NaN (section 1.6.1).
Example	TMBP:RX1:IFET? (AIS,FES) → (9,0.0429),(10,0.0343)
Note	This command fetches the results from the interval selected using the MEASurement:SETup:SElect command (see section 18.2.2). If the requested result is not available, NaN (section 1.6.1) is returned. If there is one or more results, the last "," is always removed.

5.5 Status

5.5.1 TMBPs:STATus:RX<Pt>:AESummary[:EVENT]?

Syntax	TMBPs:STATus:RX<Pt>:AESummary[:EVENT]?
Description	This query returns alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = summary of TMBP:STAT:RX<Pt>:ALAR[:EVENT]? DB2 (2) = summary of TMBP:STAT:RX<Pt>:ERR[:EVENT]? DB3 - DB16 = NOT USED
Example	TMBP:STAT:RX1:AES? → 1 TMBP:STAT:RX1:AES:EVENT? → 1
Note	

5.5.2 TMBPs:STATus:RX<Pt>:AESummary:CONDition?

Syntax	TMBPs:STATus:RX<Pt>:AESummary:CONDition?
Description	This query returns alarms and errors summary operation register query. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as TMBP:STAT:RX<Pt>:AESummary[:EVENT]?
Example	TMBP:STAT:RX1:AES:COND? → 1
Note	

5.5.3 TMBPs:STATus:RX<Pt>:ALARm[:EVENT]?

Syntax	TMBPs:STATus:RX<Pt>:ALARm[:EVENT]?
Description	This query returns alarms event register query.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = No sync DB2 (2) = Distant MF DB3 (4) = No CAS MF DB4 (8) = Distant DB5 (16) = No CRC4 MF DB6 (32) = No frame DB7 (64) = Alarm indication signal (AIS) DB8 (128) = No signal DB9 - DB16 = NOT USED
Example	TMBP:STAT:RX1:ALAR? → 64
Note	

5.5.4 TMBPs:STATus:RX<Pt>:ALARm:CONDition?

Syntax	TMBPs:STATus:RX<Pt>:ALARm:CONDition?
Description	This query returns alarms condition register query.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = No sync DB2 (2) = Distant MF DB3 (4) = No CAS MF DB4 (8) = Distant DB5 (16) = No CRC4 MF DB6 (32) = No Frame DB7 (64) = Alarm Indication Signal (AIS) DB8 (128) = No Signal DB9 - DB16 = NOT USED
Example	TMBP:STAT:RX1:ALAR:COND? → 64
Note	

5.5.5 TMBPs:STATus:RX<Pt>:ERRor[:EVENT]?

Syntax	TMBPs:STATus:RX<Pt>:ERRor[:EVENT]?
Description	This query returns errors event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Pattern slip DB2 (2) = Pattern DB3 (4) = E-Bit DB4 (8) = CRC4 DB5 (16) = Frame slip DB6 (32) = CRC4 MFAS DB7 (64) = FAS DB8 (128) = Code DB9 (256) = Sequence DB10 - DB16 = NOT USED
Example	TMBP:STAT:RX1:ERR? → 64
Note	

5.5.6 TMBPs:STATus:RX<Pt>:ERRor:CONDition?

Syntax	TMBPs:STATus:RX<Pt>:ERRor:CONDition?
Description	This query returns errors condition register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Pattern slip DB2 (2) = Pattern DB3 (4) = E-Bit DB4 (8) = CRC4 DB5 (16) = Frame slip DB6 (32) = CRC4 MFAS DB7 (64) = FAS DB8 (128) = Code DB9 (256) = Sequence DB10 - DB16 = NOT USED
Example	TMBP:STAT:RX1:ERR:COND? → 64
Note	

5.5.7 TMBPs:STATus:RX<Pt>:PSLevel?

Syntax	TMBPs:STATus:RX<Pt>:PSLevel?
Description	This query returns physical signal level. Unit: dB.
Parameter	<Pt> = Port number
Response	<signallevel> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:STAT:RX1:PSL? → 0
Note	Minimum level is -11 dB.

5.5.8 TMBPs:STATus:RX<Pt>:PDEViation?

Syntax	TMBPs:STATus:RX<Pt>:PDEViation?
Description	This query returns physical deviation. Units: ppm and bps.
Parameter	<Pt> = Port number
Response	<ppm> = <NR1 NUMERIC RESPONSE DATA> <bps> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:STAT:RX1:PDEV? → 0, 0
Note	

5.5.9 TMBPs:STATus:RX<Pt>:PBRate?

Syntax	TMBPs:STATus:RX<Pt>:PBRate?
Description	This query returns physical bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:STAT:RX1:PBR? → 2048000
Note	

5.5.10 TMBPs:STATus:RX<Pt>:PPBRate?

Syntax	TMBPs:STATus:RX<Pt>:PPBRate?
Description	This query returns payload pattern bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:STAT:RX1:PPBR? → 64000
Note	

5.5.11 TMBPs:STATus:RX<Pt>:FNFWord?

Syntax	TMBPs:STATus:RX<Pt>:FNFWord?
Description	This query returns FAS Non FAS word. Returns the content of time slot 0. Data length is always 2 · 64 bit shown as hexadecimal.
Parameter	<Pt> = Port number
Response	<hex> = <HEXADECEMAL NUMERIC RESPONSE DATA> Frame Group I, Frame 0-7 <hex> = <HEXADECEMAL NUMERIC RESPONSE DATA> Frame Group II, Frame 8-15
Example	TMBP:STAT:RX1:FNFW? → #H5F1BDF1B5F1B5F9b,#HDF1BDF1BDF1BDF9B
Note	

5.5.12 TMBPs:STATus:RX<Pt>:FDUMp?

Syntax	TMBPs:STATus:RX<Pt>:FDUMp?
Description	This query returns a sample of a full E1 Frame (32 bytes).
Parameters	<Pt> = Port number
Response	<hex> = <EXPRESSION RESPONSE DATA> Expression format: Numeric list Contains all 32 Frame timeslots.
Example	TMBP:STAT:RX1:FDUM? → #H1B,#H55,#H55,...
Note	

5.5.13 TMBPs:STATus:RX<Pt>:ACONtent?

Syntax	TMBPs:STATus:RX<Pt>:ACONtent?
Description	This query returns audio channel content.
Parameter	<Pt> = Port number
Response	<audiocontent> = <BINARY NUMERIC RESPONSE DATA>
Example	TMBP:STAT:RX1:ACON? → #B01010101
Note	For sub-rates this field shows the content of the sub channel.

5.5.14 TMBPs:STATus:RX<Pt>:AEBContent?

Syntax	TMBPs:STATus:RX<Pt>:AEBContent?
Description	This query returns sub channel audio even bit inverting content.
Parameter	<Pt> = Port number
Response	<audiocontent> = <BINARY NUMERIC RESPONSE DATA>
Example	TMBP:STAT:RX1:AEB? → #B10000000
Note	With A-law coded speech, it is possible to observe the A-law code words before the even bit inverting.

5.5.15 TMBPs:STATus:RX<Pt>:APPeak?

Syntax	TMBPs:STATus:RX<Pt>:APPeak?
Description	This query returns sub channel audio positive peak value.
Parameter	<Pt> = Port number
Response	<positivepeak> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:STAT:RX1:APP? → 85
Note	This query only applies for A-law speech and shows the largest received A-law coded value.

5.5.16 TMBPs:STATus:RX<Pt>:ANPeak?

Syntax	TMBPs:STATus:RX<Pt>:ANPeak?
Description	This query returns sub channel audio negative peak value.
Parameter	<Pt> = Port number
Response	<negativepeak> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:STAT:RX1:ANP? → -85
Note	This query only applies for A-law speech and shows the smallest received A-law coded value.

5.5.17 TMBPs:STATus:RX<Pt>:ALEVel?

Syntax	TMBPs:STATus:RX<Pt>:ALEVel?
Description	This query returns sub channel audio level. Unit: dBm.
Parameter	<Pt> = Port number
Response	<audiolevel> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:STAT:RX1:ALEV? → -4
Note	

5.5.18 TMBPs:STATus:RX<Pt>:AFRequency?

Syntax	TMBPs:STATus:RX<Pt>:AFRequency?
Description	This query returns sub channel audio tone frequency. Unit: Hz.
Parameter	<Pt> = Port number
Response	<audiofrequency> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:STAT:RX1:AFR? → 366
Note	

5.5.19 TMBPs:STATus:RX<Pt>:ACOffset?

Syntax	TMBPs:STATus:RX<Pt>:ACOffset?
Description	This query returns sub channel audio coder offset.
Parameter	<Pt> = Port number
Response	<coderoffset> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:STAT:RX1:ACOF? → 0
Note	Only available for 64 or 32 kbps audio sub channels.

5.5.20 TMBPs:STATus:RX<Pt>:CMSignal?

Syntax	TMBPs:STATus:RX<Pt>:CMSignal?
Description	This query returns CAS MFAS signal status.
Parameter	<Pt> = Port number
Response	<status> = <BINARY NUMERIC RESPONSE DATA>
Example	TMBP:STAT:RX1:CMS? → #B00000101
Note	

5.5.21 TMBPs:STATus:RX<Pt>:CBITs?

Syntax	TMBPs:STATus:RX<Pt>:CBITs?
Description	This query returns CAS bits.
Parameter	<Pt> = Port number
Response	<bits> = <EXPRESSION RESPONSE DATA> Expression format: Numeric list Contains all 30 CAS bit sets.
Example	TMBP:STAT:RX1:CBIT? → (#B0101,#B0101, ..., #B0101,#B0101)
Note	

5.6 APS

This section document commands for Automatic Protection Switching testing.

5.6.1 TMBPs:APS:STARt

Syntax	TMBPs:APS:STARt
Description	This command starts the APS (Automatic Protection Switching) measurement.
Parameter	None.
Response	None.
Example	TMBP:APS:STAR
Note	

5.6.2 TMBPs:APS:STOP

Syntax	TMBPs:APS:STOP
Description	This command stops the APS (Automatic Protection Switching) measurement.
Parameter	None.
Response	None.
Example	TMBP:APS:STOP
Note	

5.6.3 TMBPs:APS:RX<Pt>:NUMBer?

Syntax	TMBPs:APS:RX<Pt>:NUMBer?
Description	This query returns the number of times has measured.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:APS:RX1:NUMB? → 17
Note	

5.6.4 TMBPs:APS:RX<Pt>:ATIME?

Syntax	TMBPs:APS:RX<Pt>:ATIME?
Description	This query returns the average time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	TMBP:APS:RX1:ATIM? → 4.000
Note	The maximum measurable time is 4000 ms. The maximum measurable time will be responded if the result exceeds 4000 ms.

5.6.5 TMBPs:APS:RX<Pt>:MTIME?

Syntax	TMBPs:APS:RX<Pt>:MTIME?
Description	This query returns the maximum time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA> <limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	TMBP:APS:RX1:MTIM? → 29.170,0
Note	The maximum measurable time is 4000 ms. The maximum measurable time will be responded if the result exceeds 4000 ms.

5.6.6 TMBPs:APS:RX<Pt>:LTIME?

Syntax	TMBPs:APS:RX<Pt>:LTIME?
Description	This query returns the minimum time of the reference event occurrences. Unit: ms.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	TMBP:APS:RX1:LTIM? → 1.0
Note	The maximum measurable time is 4000 ms. The maximum measurable time will be responded if the result exceeds 4000 ms.

5.6.7 TMBPs:APS:RX<Pt>:EVENT

Syntax	TMBPs:APS:RX<Pt>:EVENT <event>
Description	This command sets the Time Reference event.
Parameters	<Pt> = Port number <event> = <CHARACTER PROGRAM DATA> AIS = Alarm indication signal NFRame = No frame PERRor = Pattern error
Response	None.
Example	TMBP:APS:RX1:EVEN AIS
Note	The event cannot be changed during the measurement.

Syntax	TMBPs:APS:RX<Pt>:EVENT?
Description	This query returns the time reference event.
Parameter	<Pt> = Port number
Response	<event> = <CHARACTER RESPONSE DATA>
Example	TMBP:APS:RX1:EVEN? → AIS
Note	

5.6.8 TMBPs:APS:RX<Pt>:MLIMit

Syntax	TMBPs:APS:RX<Pt>:MLIMit <max>
Description	This command sets the time reference maximum limit. Unit: ms.
Parameters	<Pt> = Port number <max> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 4000.000, DEFault = 50.000</i>
Response	None.
Example	TMBP:APS:RX1:MLIM 50.000
Note	

Syntax	TMBPs:APS:RX<Pt>:MLIMit?
Description	This query returns the time reference maximum limit. Unit: ms.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
Example	TMBP:APS:RX1:MLIM? → 50.000
Note	

5.7 RTD

This section document commands to retrieve Round Trip Delay measurement results. Commands for general RTD settings are described in section 17.1 on page 1003.

5.7.1 TMBPs:RTD:RX<Pt>:NUMBer?

Syntax	TMBPs:RTD:RX<Pt>:NUMBer?
Description	This query returns the number of the RTD data.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	TMBP:RTD:RX1:NUMB? → 2
Note	

5.7.2 TMBPs:RTD:RX<Pt>:ATIMe?

Syntax	TMBPs:RTD:RX<Pt>:ATIMe?
Description	This query returns the average time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	TMBP:RTD:RX1:ATIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

5.7.3 TMBPs:RTD:RX<Pt>:MTIMe?

Syntax	TMBPs:RTD:RX<Pt>:MTIMe?
Description	This query returns the maximum time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA> <limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	TMBP:RTD:RX1:MTIM? → 1.0,0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

5.7.4 TMBPs:RTD:RX<Pt>:LTIMe?

Syntax	TMBPs:RTD:RX<Pt>:LTIMe?
Description	This query returns the least (minimum) time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	TMBP:RTD:RX1:LTIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

Chapter 6

T1

6.1 Receiver

6.1.1 T1:RX<Pt>[:ENABled]

Syntax	T1:RX<Pt>[:ENABled] <interface>
Description	This command enables or disables the T1 receiver.
Parameters	<Pt> = Port number <interface> = <CHARACTER PROGRAM DATA> OFF ON <i>DEFault = OFF</i>
Response	None.
Example	T1:RX1 ON
Note	

Syntax	T1:RX<Pt>[:ENABled]?
Description	This query returns whether the T1 receiver is enabled or disabled.
Parameter	<Pt> = Port number
Response	<interface> = <CHARACTER RESPONSE DATA>
Example	T1:RX1? → ON T1:RX1:ENAB? → SDH
Note	Returns SDH if T1 is over SDH or SONET.

6.1.2 T1:RX<Pt>:FOLLow

Syntax	T1:RX<Pt>:FOLLow <follow>
Description	This command sets the receiver to follow another setup or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> NONE: Do not follow TX: Transmitter of the same port RX1: Receiver of port 1 <i>DEFault = NONE</i>
Response	None.
Example	T1:RX1:FOLL TX (i.e., RX1 follows TX1) T1:RX2:FOLL RX1 (i.e., RX2 follows RX1)
Note	

Syntax	T1:RX<Pt>:FOLLow?
Description	This query returns whether the receiver follows another setup.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	T1:RX1:FOLL? → TX
Note	

6.1.3 T1:RX<Pt>:MODE

Syntax	T1:RX<Pt>:MODE <mode>
Description	This command sets the signal termination mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> TERMinate: Nominal impedance. Normal frequency dependent AGC. BRIDged: High impedance. MONitor: Nominal impedance. Frequency linear AGC. <i>DEFault = TERMinate</i>
Response	None.
Example	T1:RX1:MODE TERM
Note	

Syntax	T1:RX<Pt>:MODE?
Description	This query returns the signal termination mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	T1:RX1:MODE? → TERM
Note	

6.1.4 T1:RX<Pt>:CODE

Syntax	T1:RX<Pt>:CODE <code>
Description	This command sets the line code type.
Parameters	<Pt> = Port number <code> = <CHARACTER PROGRAM DATA> AMI B8ZS <i>DEFault = B8ZS</i>
Response	None.
Example	T1:RX1:CODE AMI
Note	

Syntax	T1:RX<Pt>:CODE?
Description	This query returns the line code type.
Parameter	<Pt> = Port number
Response	<code> = <CHARACTER RESPONSE DATA>
Example	T1:RX1:CODE? → AMI
Note	

6.1.5 T1:RX<Pt>:PCMFrame

Syntax	T1:RX<Pt>:PCMFrame <enable>
Description	This command enables or disables the PCM frame.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	T1:RX1:PCMF ON
Note	

Syntax	T1:RX<Pt>:PCMFrame?
Description	This query returns whether PCM frame is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:RX1:PCMF? → 1
Note	

6.1.6 T1:RX<Pt>:FTYPE

Syntax	T1:RX<Pt>:FTYPE <type>
Description	This command sets the PCM frame type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> TSF: T1 SF/D4 mode TESF: T1 ESF mode JESF: J1 ESF mode <i>DEFault = TSF</i>
Response	None.
Example	T1:RX1:FTYP TESF
Note	

Syntax	T1:RX<Pt>:FTYPE?
Description	This query returns PCM frame type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	T1:RX1:FTYP? → TESF
Note	

6.1.7 T1:RX<Pt>:PATTERN

Syntax	T1:RX<Pt>:PATTERN <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF USER16BIT: Obsolete. For backward compatibility only. Same as USER32BIT. USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS9 PRBS11 PRBS15 PRBS20 PRBS23 PRBS29 PRBS31 QRSS20 FOX FOXCMA3000 ALL0 ALL1 ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 ALT324: Alternating 3:24 <i>DEFault = PRBS11</i>
Response	None.
Example	T1:RX1:PATT PRBS11

Syntax	T1:RX<Pt>:PATTERN?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	T1:RX1:PATT? → PRBS11
Note	

6.1.8 T1:RX<Pt>:PINVersion

Syntax	T1:RX<Pt>:PINVersion <inverted>
Description	This command enables or disables pattern inversion.
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	T1:RX1:PINV ON
Note	The following patterns can be inverted: PRBSxx, QRSSxx, ALT11, ALT13, ALT17, ALT324, USER32BIT and USER2048BIT.

Syntax	T1:RX<Pt>:PINVersion?
Description	This query returns whether the pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inverted> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:RX1:PINV? → 1
Note	

6.1.9 T1:RX<Pt>:PTSLots

Syntax	T1:RX<Pt>:PTSLots <slots>
Description	This command sets the pattern time slots.
Parameters	<Pt> = Port number <slots> = <EXPRESSION PROGRAM DATA> Format: Numeric List List consist of slot number(s) ranging from 1 to 23
Response	None.
Examples	T1:RX1:PTSL (1,3,5)
Note	

Syntax	T1:RX<Pt>:PTSLots?
Description	This query returns the pattern time slots.
Parameter	<Pt> = Port number
Response	<slots> = <EXPRESSION RESPONSE DATA> Format: Numeric List
Example	T1:RX1:PTSL? → (1,3,5)
Note	

6.1.10 T1:RX<Pt>:UP16

Syntax	T1:RX<Pt>:UP16 <pattern>
Description	This command sets the 16 bit user pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Valid characters: '0' and '1' The string must consist of 1 to 16 characters.
Response	None.
Example	T1:RX1:UP16 "101101"
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

6.1.11 T1:RX<Pt>:UP32

Syntax	T1:RX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATtern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters.
Response	None.
Examples	T1:RX2:UP32 "01101"
Note	

Syntax	T1:RX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	T1:RX2:UP32? → "01101"
Note	

6.1.12 T1:TX<Pt>:SCContent

Syntax	T1:TX<Pt>:SCContent <content>
Description	This command sets the channel content.
Parameters	<Pt> = Port number <content> = <CHARACTER PROGRAM DATA> OFF TONE TRANsparent SPEech <i>DEFault=OFF</i>
Response	None.
Example	T1:TX1:SCC TONE
Note	

Syntax	T1:TX<Pt>:SCContent?
Description	This query returns the channel content.
Parameter	<Pt> = Port number
Response	<content> = <CHARACTER RESPONSE DATA>
Example	T1:TX1:SCC? → TONE
Note	

6.1.13 T1:RX<Pt>:AUDio

Syntax	T1:RX<Pt>:AUDio <type>
Description	This command sets the audio decoding.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF ON <i>DEFault = OFF</i>
Response	None.
Example	T1:RX1:AUD ON
Note	

Syntax	T1:RX<Pt>:AUDio?
Description	This query returns the audio decoding.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	T1:RX1:AUD? → ON
Note	

6.1.14 T1:RX<Pt>:ATSLot

Syntax	T1:RX<Pt>:ATSLot <timeslotno>
Description	This command sets the audio timeslot to be monitored.
Parameters	<Pt> = Port number <timeslotno> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=23, DEFault=1</i>
Response	None.
Example	T1:RX1:ATSL 4
Note	

Syntax	T1:RX<Pt>:ATSLot?
Description	This query returns the monitored audio timeslot.
Parameter	<Pt> = Port number
Response	<timeslotno> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:RX1:ATSL? → 4
Note	

6.1.15 T1:RX<Pt>:UP2K

Syntax	T1:RX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	T1:RX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when T1:RX2:PATT is USER2048BIT

Syntax	T1:RX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	T1:RX1:UP2K? → "12DF"
Note	

6.1.16 T1:RX<Pt>:CAS

Syntax	T1:RX<Pt>:CAS <enable>
Description	This command enables or disables the channel associated signaling.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	T1:RX1:CAS ON
Note	

Syntax	T1:RX<Pt>:CAS?
Description	This query returns whether the channel associated signaling is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:RX1:CAS? → 1
Note	

6.2 Transmitter

6.2.1 T1:TX<Pt>[:ENABLEd]

Syntax	T1:TX<Pt>[:ENABLEd] <interface>
Description	This command enables or disables the T1 transmitter.
Parameters	<Pt> = Port number <interface> = <CHARACTER PROGRAM DATA> OFF ON <i>DEFault = OFF</i>
Response	None.
Examples	T1:TX1 ON T1:TX1:ENAB ON
Note	

Syntax	T1:TX<Pt>[:ENABLEd]?
Description	This query returns whether the T1 transmitter is enabled or disabled.
Parameter	<Pt> = Port number
Response	<interface> = <CHARACTER RESPONSE DATA>
Examples	T1:TX1? → ON T1:TX1:ENAB? → SDH
Note	Returns SDH if T1 is over SDH or SONET.

6.2.2 T1:TX<Pt>:FOLLow

Syntax	T1:TX<Pt>:FOLLow <follow>
Description	This command sets the transmitter setting to follow another setup or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> NONE: Do not follow TX1: Follow the setting of the port 1 transmitter <i>DEFault = NONE</i>
Response	None.
Example	T1:TX2:FOLL TX1 (i.e., TX2 follows TX1)
Note	This command is not valid for :TX1

Syntax	T1:TX<Pt>:FOLLow?
Description	This query returns whether the transmitter follows the TX1 settings.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	T1:TX2:FOLL? → TX1
Note	This command is not valid for :TX1

6.2.3 T1:TX<Pt>:DINSert[:ENABle]

Syntax	T1:TX<Pt>:DINSert[:ENABle] <enable>
Description	This command enables or disables Drop and Insert.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	T1:TX1:DINS OFF
Note	

Syntax	T1:TX<Pt>:DINSert[:ENABle]?
Description	This query returns whether Drop and Insert is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:TX1:DINS? → 0
Note	

6.2.4 T1:TX<Pt>:TIMing

Syntax	T1:TX<Pt>:TIMing <source>
Description	This command sets the timing source.
Parameters	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> INTernal: Internal timing source EXTernal: External timing source RX: Received signal on the same port <i>DEFault = INTernal</i>
Response	None.
Example	T1:TX1:TIM INT
Note	

Syntax	T1:TX<Pt>:TIMing?
Description	This query returns the timing source.
Parameter	<Pt> = Port number
Response	<source> = <CHARACTER RESPONSE DATA>
Example	T1:TX1:TIM? → INT
Note	

6.2.5 T1:TX<Pt>:FOFFset

Syntax	T1:TX<Pt>:FOFFset <offset>
Description	This command sets the frequency offset for the clock source. Unit: ppm.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> <i>MINimum=-125, MAXimum=125, DEFault=0</i> <i>Allowed suffixes = ppm</i>
Response	None.
Example	T1:TX1:FOFF 0ppm
Note	

Syntax	T1:TX<Pt>:FOFFset?
Description	This query returns the frequency offset (ppm) for the clock source.
Parameter	<Pt> = Port number
Response	<offset> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:TX1:FOFF? → 0
Note	

6.2.6 T1:TX<Pt>:CODE

Syntax	T1:TX<Pt>:CODE <code>
Description	This command sets the line code type.
Parameters	<Pt> = Port number <code> = <CHARACTER PROGRAM DATA> AMI B8ZS <i>DEFault</i> = B8ZS
Response	None.
Example	T1:TX1:CODE AMI
Note	

Syntax	T1:TX<Pt>:CODE?
Description	This query returns the line code type.
Parameter	<Pt> = Port number
Response	<code> = <CHARACTER RESPONSE DATA>
Example	T1:TX1:CODE? → AMI
Note	

6.2.7 T1:TX<Pt>:LBOut

Syntax	T1:TX<Pt>:LBOut <lbo>
Description	This command sets the line build out.
Parameters	<Pt> = Port number <lbo> = <CHARACTER PROGRAM DATA> 0TO133: 0 to 133 feet 133TO266: 133 tp 266 feet 266TO399: 266 to 399 feet 399TO533: 399 tp 533 feet 533TO655: 533 to 655 feet GMODe: Gain mode (Monitor) DB0: 0 db DB7: -7.5 db DB15: -15 db DB22: -22.5 db <i>DEFault</i> = 0TO133
Response	None.
Example	T1:TX1:LB0 133TO266
Note	

Syntax	T1:TX<Pt>:LBOut?
Description	This query returns the line build out setting.
Parameter	<Pt> = Port number
Response	<lbo> = <CHARACTER RESPONSE DATA>
Example	T1:TX1:LB0? → 0TO133
Note	

6.2.8 T1:TX<Pt>:PCMFrame

Syntax	T1:TX<Pt>:PCMFrame <enable>
Description	This command enables or disables the PCM frame.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	T1:TX1:PCMF ON
Note	

Syntax	T1:TX<Pt>:PCMFrame?
Description	This query returns whether PCM frame is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:TX1:PCMF? → 1
Note	

6.2.9 T1:TX<Pt>:FTYPE

Syntax	T1:TX<Pt>:FTYPE <type>
Description	This command sets the PCM frame type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> TSF: T1 SF/D4 mode TESF: T1 ESF mode JESF: J1 ESF mode <i>Default = TSF</i>
Response	None.
Example	T1:TX1:FTYP TESF
Note	

Syntax	T1:TX<Pt>:FTYPE?
Description	This query returns PCM frame type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	T1:TX1:FTYP? → TESF
Note	

6.2.10 T1:TX<Pt>:PATTERN

Syntax	T1:TX<Pt>:PATTERN <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF USER16BIT: Obsolete. For backward compatibility only. Same as USER32BIT. USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS9 PRBS11 PRBS15 PRBS20 PRBS23 PRBS29 PRBS31 QRSS20 FOX FOXCMA3000 ALL0 ALL1 ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 ALT324: Alternating 3:24 <i>Default = PRBS11</i>
Response	None.
Example	T1:TX1:PATT PRBS11

Syntax	T1:TX<Pt>:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	T1:TX1:PATT? → PRBS11
Note	

6.2.11 T1:TX<Pt>:PINVersion

Syntax	T1:TX<Pt>:PINVersion <inversion>
Description	This command enables or disables pattern inversion.
Parameters	<Pt> = Port number <inversion> = <BOOLEAN PROGRAM DATA> <i>Default = OFF</i>
Response	None.
Example	T1:TX1:PINV ON
Note	The following patterns can be inverted: PRBSxx, QRSSxx, ALT11, ALT13, ALT17, ALT324, USER32BIT and USER2048BIT.

Syntax	T1:TX<Pt>:PINVersion?
Description	This query returns the inversion state (enabled or disabled) of the pattern.
Parameter	<Pt> = Port number
Response	<inversion> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:TX1:PINV? → 1
Note	

6.2.12 T1:TX<Pt>:PTSLots

Syntax	T1:TX<Pt>:PTSLots <timeslot>
Description	This command sets the pattern time slots.
Parameters	<Pt> = Port number <timeslots> = <EXPRESSION PROGRAM DATA> Format: Numeric List List consist of slot number(s) ranging from 1 to 23
Response	None.
Example	T1:TX1:PTSL (1,3,5)
Note	

Syntax	T1:TX<Pt>:PTSLots?
Description	This query returns the pattern time slots.
Parameter	<Pt> = Port number
Response	<timeslot> = <EXPRESSION RESPONSE DATA> Format: Numeric List.
Example	T1:TX1:PTSL? → (1,3,5)
Note	

6.2.13 T1:TX<Pt>:UP16

Syntax	T1:TX<Pt>:UP16 <pattern>
Description	This command sets the 16 bit user pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Valid characters: '0' and '1' The string must consist of 1 to 16 characters.
Response	None.
Example	T1:TX1:UP16 "101101"
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

6.2.14 T1:TX<Pt>:UP32

Syntax	T1:TX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATTern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters.
Response	None.
Examples	T1:TX1:UP32 "01101"
Note	

Syntax	T1:TX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	T1:TX1:UP32? → "01101"
Note	

6.2.15 T1:TX<Pt>:UP2K

Syntax	T1:TX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	T1:TX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when T1:TX2:PATT is USER2048BIT

Syntax	T1:TX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	T1:TX1:UP2K? → "12DF"
Note	

6.2.16 T1:TX<Pt>:UTSLots

Syntax	T1:TX<Pt>:UTSLots <content>
Description	This command sets the content of unused time slots.
Parameters	<Pt> = Port number <content> = <NUMERIC PROGRAM DATA> <i>MINimum=#B00000000, MAXimum=#B11111111, DEFault=#B01010101</i>
Response	None.
Example	T1:TX1:UTSL 128
Note	

Syntax	T1:TX<Pt>:UTSLots?
Description	This query returns the content of unused time slots.
Parameter	<Pt> = Port number <content> = <BINARY NUMERIC RESPONSE DATA>
Response	None.
Example	T1:TX1:UTSL? → #B10101010
Note	

6.2.17 T1:TX<Pt>:SCTSlot

Syntax	T1:TX<Pt>:SCTSlot <timeslot>
Description	This command sets the channel time slot.
Parameters	<Pt> = Port number <timeslot> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=23, DEFault=1</i>
Response	None.
Example	T1:TX1:SCTS 4
Note	

Syntax	T1:TX<Pt>:SCTSlot?
Description	This query returns the sub channel time slot.
Parameter	<Pt> = Port number
Response	<timeslot> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:TX1:SCTS? → 4
Note	

6.2.18 T1:TX<Pt>:TFR

Syntax	T1:TX<Pt>:TFR <frequency>
Description	This command sets the tone frequency.
Parameters	<Pt> = Port number <frequency> = <NUMERIC PROGRAM DATA> <i>MINimum = 1 hz, MAXimum = 4000 hz</i> <i>DEFault = 440</i> <i>Allowed suffixes = HZ, KHZ</i>
Response	None.
Example	T1:TX1:TFR 500HZ
Note	

Syntax	T1:TX<Pt>:TFR?
Description	This query returns the tone frequency (Hz).
Parameter	<Pt> = Port number
Response	<frequency> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:TX1:TFR? → 500
Note	

6.2.19 T1:TX<Pt>:TLEVel

Syntax	T1:TX<Pt>:TLEVel <level>
Description	This command sets the tone level.
Parameters	<Pt> = Port number <level> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = -70, <i>MAXimum</i> = 3 <i>DEFault</i> = -20 <i>Allowed suffixes</i> = dB
Response	None.
Example	T1:TX1:TLEV 2dB
Note	

Syntax	T1:TX<Pt>:TLEVel?
Description	This query returns the tone level.
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:TX1:TLEV? → 2
Note	

6.2.20 T1:TX<Pt>:CAS

Syntax	T1:TX<Pt>:CAS <enable>
Description	This command enables or disables the channel associated signaling.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = OFF
Response	None.
Example	T1:TX1:CAS ON
Note	

Syntax	T1:TX<Pt>:CAS?
Description	This query returns whether the channel associated signaling is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:TX1:CAS? → 1
Note	

6.2.21 T1:TX<Pt>:CASChannel

Syntax	T1:TX<Pt>:CASChannel <channel>
Description	This command sets the CAS channel number.
Parameters	<Pt> = Port number <channel> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =1, <i>MAXimum</i> =24, <i>DEFault</i> =1
Response	None.
Example	T1:TX1:CASC 5
Note	

Syntax	T1:TX<Pt>:CASChannel?
Description	This query returns the CAS channel number.
Parameter	<Pt> = Port number
Response	<channel> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:TX1:CASC? → 5
Note	

6.2.22 T1:TX<Pt>:CASBits

Syntax	T1:TX<Pt>:CASBits <bits>
Description	This command sets the CAS channel bits.
Parameters	<Pt> = Port number <bits> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000, MAXimum=#B1111, DEFault=#B1111</i>
Response	None.
Example	T1:TX1:CASB #B1111
Note	

Syntax	T1:TX<Pt>:CASBits?
Description	This query returns the CAS channel bits.
Parameter	<Pt> = Port number
Response	<bits> = <BINARY NUMERIC RESPONSE DATA>
Example	T1:TX1:CASB? → #B1111
Note	

6.2.23 T1:TX<Pt>:COCBits

Syntax	T1:TX<Pt>:COCBits <bits>
Description	This command sets the CAS other channel bits.
Parameters	<Pt> = Port number <bits> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000, MAXimum=#B1111, DEFault=#B1001</i>
Response	None.
Example	T1:TX1:COCB #B0000
Note	

Syntax	T1:TX<Pt>:COCBits?
Description	This query returns the CAS other channel bits.
Parameter	<Pt> = Port number
Response	<bits> = <BINARY NUMERIC RESPONSE DATA>
Example	T1:TX1:COCB? → #B0000
Note	

6.2.24 T1:TX<Pt>:SF:CASBits

Syntax	T1:TX<Pt>:SF:CASBits <bits>
Description	This command sets the CAS channel bits for SF framing.
Parameters	<Pt> = Port number <bits> = <NUMERIC PROGRAM DATA> <i>MINimum=#B00, MAXimum=#B11, DEFault=#B11</i>
Response	None.
Example	T1:TX1:SF:CASB #B11
Note	

Syntax	T1:TX<Pt>:SF:CASBits?
Description	This query returns the CAS channel bits for SF framing.
Parameter	<Pt> = Port number
Response	<bits> = <BINARY NUMERIC RESPONSE DATA>
Example	T1:TX1:SF:CASB? → #B11
Note	

6.2.25 T1:TX<Pt>:SF:COCBits

Syntax	T1:TX<Pt>:SF:COCBits <bits>
Description	This command sets the CAS other channel bits for SF framing.
Parameters	<Pt> = Port number <bits> = <NUMERIC PROGRAM DATA> <i>MINimum=#B00, MAXimum=#B11, DEFault=#B11</i>
Response	None.
Example	T1:TX1:SF:COCB #B00
Note	

Syntax	T1:TX<Pt>:SF:COCBits?
Description	This query returns the CAS other channel bits for SF framing.
Parameter	<Pt> = Port number
Response	<bits> = <BINARY NUMERIC RESPONSE DATA>
Example	T1:TX1:SF:COCB? → #B00
Note	

6.3 Stimuli

6.3.1 T1:STIMuli:TX<Pt>:ALARm

Syntax	T1:STIMuli:TX<Pt>:ALARm <type>
Description	This command sets the alarm type to be generated.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> NALarm: No alarm OOF: Out of frame NSIGnal: No signal AIS: Alarm indication signal RAI: Remote Alarm Indication NSYNc: No pattern sync (LSS) <i>DEFault = NALarm</i>
Response	None.
Example	T1:STIM:TX1:ALAR NSIG
Note	

Syntax	T1:STIMuli:TX<Pt>:ALARm?
Description	This query returns the generated alarm type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	T1:STIM:TX1:ALAR? → NSIG
Note	

6.3.2 T1:STIMuli:TX<Pt>:ERRor

Syntax	T1:STIMuli:TX<Pt>:ERRor <destination>
Description	This command sets the error destination.
Parameters	<Pt> = Port number <destination> = <CHARACTER PROGRAM DATA> OFF CRC6: CRC-6 PATtern: Pattern Error FBIT: F-Bit SBIT: S-Bit BPV: Bipolar Violation PSLip: Pattern slip EXZ: Excessive Zeroes <i>DEFault = OFF</i>
Response	None.
Example	T1:STIM:TX1:ERR CODE
Note	

Syntax	T1:STIMuli:TX<Pt>:ERRor?
Description	This query returns the error destination.
Parameter	<Pt> = Port number
Response	<destination> = <CHARACTER RESPONSE DATA>
Example	T1:STIM:TX1:ERR? → CODE
Note	

6.3.3 T1:STIMuli:TX<Pt>:EINsert

Syntax	T1:STIMuli:TX<Pt>:EINsert <insertion>
Description	This command sets the method to insert errors.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF MANual B02: Burst · 1E-02 B03: Burst · 1E-03 B04: Burst · 1E-04 B05: Burst · 1E-05 B06: Burst · 1E-06 B07: Burst · 1E-07 ES: Errored seconds SES: Severe errored seconds <i>DEFault = OFF</i>
Response	None.
Example	T1:STIM:TX1:EINS MAN
Note	If insertion is set to MANual, errors are inserted with SYST:STIM:INS. See section 2.3.52

Syntax	T1:STIMuli:TX<Pt>:EINsert?
Description	This query returns the error insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	T1:STIM:TX1:EINS? → MAN
Note	

6.3.4 T1:STIMuli:TX<Pt>:EBLength

Syntax	T1:STIMuli:TX<Pt>:EBLength <burstlength>
Description	This command sets the error burst length to generate.
Parameters	<Pt> = Port number <burstlength> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=255, DEFault=1</i>
Response	None.
Example	T1:STIM:TX1:EBL 1
Note	For T1:STIM:TX<Pt>:ERR? → CODE, <i>MAXimum = 1</i>

Syntax	T1:STIMuli:TX<Pt>:EBLength?
Description	This query returns the error burst length to generate.
Parameter	<Pt> = Port number
Response	<burstlength> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STIM:TX1:EBL? → 1
Note	

6.3.5 T1:STIMuli:TX<Pt>:FDLink

Syntax	T1:STIMuli:TX<Pt>:FDLink <code>
Description	This command sets the transmitted FDL- or in-bound code.
Parameters	<Pt> = Port number <code> = <CHARACTER PROGRAM DATA> OFF: LLA: LLD: PLA: PLD: ULB: NLA: USER: Use the user defined FDL value ACS: DCS: AN1: DN1: AN2: DN2: 100K: UINBand: Use the user defined in-band coed. <i>DEFault = OFF</i>
Response	None.
Example	T1:STIM:TX1:FDL LLA
Note	

Syntax	T1:STIMuli:TX<Pt>:FDLink?
Description	This query returns the transmitted FDL- or inbound code.
Parameter	<Pt> = Port number
Response	<code> = <CHARACTER RESPONSE DATA>
Example	T1:STIM:TX1:FDL? → LLA
Note	

6.3.6 T1:STIMuli:TX<Pt>:FDLink:UFDL

Syntax	T1:STIMuli:TX<Pt>:FDLink:UFDL <value>
Description	This command sets the user defined FDL code.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=63, DEFault=0</i>
Response	None.
Example	T1:STIM:TX1:FDL:UFDL #B111111
Note	

Syntax	T1:STIMuli:TX<Pt>:FDLink:UFDL?
Description	This query returns the user defined FDL code.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STIM:TX1:FDL:UFDL? → 63
Note	

6.3.7 T1:STIMuli:TX<Pt>:FDLink:IBCode

Syntax	T1:STIMuli:TX<Pt>:FDLink:IBCode <value>
Description	This command sets the user defined in-bound code.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=16777215, DEFault=0</i>
Response	None.
Example	T1:STIM:TX1:FDL:IBC #HFFFFFFE
Note	

Syntax	T1:STIMuli:TX<Pt>:FDLink:IBCode?
Description	This query returns the user defined in-bound code.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STIM:TX1:FDL:IBC? → 16777214
Note	

6.4 Result

6.4.1 T1:RX<Pt>:IFETch?

Syntax	T1:RX<Pt>:IFETch? <parameter>
Description	This command fetches results from a T1 interval if available.
Parameters	<Pt> = Port number ({<parameter>} + {,})* = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. Alarms NSIGNAL: No signal. Response: <Seconds>,<Ratio> AIS: Alarm indication Signal. Response: <Seconds>,<Ratio> OOF: Out of frame. Response: <Seconds>,<Ratio> NSYNc: No sync (LSS). Response: <Seconds>,<Ratio> RAI: Remote Alarm Indication. Response: <Seconds>,<Ratio> Errors PATtern: Pattern. Response: <Count>,<Ratio> PSLip: Pattern slip. Response: <Count>,<Ratio> PBLocK: Pattern block. Response: <Count>,<Ratio> CODE: Bipolar Violation (BPV). Response: <Count>,<Ratio> FBIT: F-bit. Response: <Count>,<Ratio> SBIT: S-bit. Response: <Count>,<Ratio> CRC6: CRC-6. Response: <Count>,<Ratio> EZERro: Excessive Zeroes. Response: <Count>,<Ratio> FAS performance errors FES: FAS ES. Response: <Count>,<Ratio%> FSES: FAS SES. Response: <Count>,<Ratio%> FBBE: FAS BBE. Response: <Count>,<Ratio%> FALS: FAS ALS. Response: <Count>,<Ratio%> FUAT: FAS UAT. Response: <Count>,<Ratio%> FAVT: FAS AVT. Response: <Count>,<Ratio%> FEFS: FAS EFS. Response: <Count>,<Ratio%> Pattern performance errors PES: Pattern ES. Response: <Count>,<Ratio%> PSES: Pattern SES. Response: <Count>,<Ratio%> PBBE: Pattern BBE. Response: <Count>,<Ratio%> PALS: Pattern ALS. Response: <Count>,<Ratio%> PUAT: Pattern UAT. Response: <Count>,<Ratio%> PAVT: Pattern AVT. Response: <Count>,<Ratio%> PEFS: Pattern EFS. Response: <Count>,<Ratio%> CRC6 performance errors CES: CRC6 ES. Response: <Count>,<Ratio%> CSES: CRC6 SES. Response: <Count>,<Ratio%> CBBE: CRC6 BBE. Response: <Count>,<Ratio%> CALS: CRC6 ALS. Response: <Count>,<Ratio%> CUAT: CRC6 UAT. Response: <Count>,<Ratio%> CAVT: CRC6 AVT. Response: <Count>,<Ratio%> CEFS: CRC6 EFS. Response: <Count>,<Ratio%>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Expression format: Numeric List Each result is formatted according to the specification in the parameter field. Values that are not relevant or applicable for the current measurement, returns NaN (section 1.6.1).
Example	T1:RX1:IFET? (AIS,PATT) → (9,0.0429),(10,0.0343)
Note	This command fetches the results from the interval selected using the MEASurement:SETup:SElect command (see section 18.2.2). If the requested result is not available, NaN (section 1.6.1) is returned. If there is one or more results, the last ", " is always removed.

6.5 Status

6.5.1 T1:STATus:RX<Pt>:AESummary[:EVENT]?

Syntax	T1:STATus:RX<Pt>:AESummary[:EVENT]?
Description	This query returns alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of T1:STAT:RX<Pt>:ALAR[:EVENT]? DB2 (2) = Summary bit of T1:STAT:RX<Pt>:ERR[:EVENT]? DB3 - DB16 = NOT USED
Example	T1:STAT:RX1:AES? → 1 T1:STAT:RX1:AES:EVENT? → 1
Note	

6.5.2 T1:STATus:RX<Pt>:AESummary:CONDition?

Syntax	T1:STATus:RX<Pt>:AESummary:CONDition?
Description	This query returns alarms and errors summary operation register query. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as T1:STAT:RX<Pt>:AESummary[:EVENT]?
Example	T1:STAT:RX1:AES:COND? → 1
Note	

6.5.3 T1:STATus:RX<Pt>:ALARm[:EVENT]?

Syntax	T1:STATus:RX<Pt>:ALARm[:EVENT]?
Description	This query returns alarms event register query.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = No sync (LSS) DB2 (2) = NOT USED DB3 (4) = NOT USED DB4 (8) = Remote Alarm Indication (RAI) DB5 (16) = NOT USED DB6 (32) = Out of frame (OOF) DB7 (64) = Alarm indication signal (AIS) DB8 (128) = No signal DB9 - DB16 = NOT USED
Example	T1:STAT:RX1:ALAR? → 64
Note	

6.5.4 T1:STATus:RX<Pt>:ALARm:CONDition?

Syntax	T1:STATus:RX<Pt>:ALARm:CONDition?
Description	This query returns alarms condition register query.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = No sync (LSS) DB2 (2) = NOT USED DB3 (4) = NOT USED DB4 (8) = Remote Alarm Indication (RAI) DB5 (16) = NOT USED DB6 (32) = Out of frame (OOF) DB7 (64) = Alarm indication signal (AIS) DB8 (128) = No signal DB9 - DB16 = NOT USED
Example	T1:STAT:RX1:ALAR:COND? → 64
Note	

6.5.5 T1:STATus:RX<Pt>:ERRor[:EVENT]?

Syntax	T1:STATus:RX<Pt>:ERRor[:EVENT]?
Description	This query returns errors event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Pattern slip DB2 (2) = Pattern DB3 (4) = S-Bit DB4 (8) = CRC-6 DB5 (16) = NOT USED DB6 (32) = Excessive Zeroes (EXZ) DB7 (64) = F-Bit DB8 (128) = Bipolar Violation (BPV) DB9 - DB16 = NOT USED
Example	T1:STAT:RX1:ERR? → 64
Note	

6.5.6 T1:STATus:RX<Pt>:ERRor:CONDition?

Syntax	T1:STATus:RX<Pt>:ERRor:CONDition?
Description	This query returns errors condition register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Pattern slip DB2 (2) = Pattern DB3 (4) = S-Bit DB4 (8) = CRC-6 DB5 (16) = NOT USED DB6 (32) = Excessive Zeroes (EXZ) DB7 (64) = F-Bit DB8 (128) = Bipolar Violation (BPV) DB9 - DB16 = NOT USED
Example	T1:STAT:RX1:ERR:COND? → 64
Note	

6.5.7 T1:STATus:RX<Pt>:PSLevel?

Syntax	T1:STATus:RX<Pt>:PSLevel?
Description	This query returns physical signal level. Unit: dB.
Parameter	<Pt> = Port number
Response	<signallevel> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:PSL? → 0
Note	Minimum level is -11 dB.

6.5.8 T1:STATus:RX<Pt>:PDEViation?

Syntax	T1:STATus:RX<Pt>:PDEViation?
Description	This query returns physical deviation. Units: ppm and bps.
Parameter	<Pt> = Port number
Response	<ppm> = <NR1 NUMERIC RESPONSE DATA> <bps> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:PDEV? → 0, 0
Note	

6.5.9 T1:STATus:RX<Pt>:PBRate?

Syntax	T1:STATus:RX<Pt>:PBRate?
Description	This query returns physical bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:PBR? → 1544000
Note	

6.5.10 T1:STATus:RX<Pt>:FDUMp?

Syntax	T1:STATus:RX<Pt>:FDUMp?
Description	This query returns a sample of a full DS1 Frame (24 bytes).
Parameters	<Pt> = Port number
Response	<hex> = <EXPRESSION RESPONSE DATA> Expression format: Numeric list Contains all 24 Frame timeslots.
Example	T1:STAT:RX1:FDUM? → #H55,#H55,#H55,...
Note	This result is based on a measurement of the delay between sending and receiving the selected PRBS pattern. A PRBS pattern should be selected. The maximum delay time for the measurement target depends on the length of the selected PRBS pattern.

6.5.11 T1:STATus:RX<Pt>:ACONtent?

Syntax	T1:STATus:RX<Pt>:ACONtent?
Description	This query returns audio channel content.
Parameter	<Pt> = Port number
Response	<audiocontent> = <BINARY NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:ACON? → #B01010101
Note	For sub-rates this field shows the content of the sub channel.

6.5.12 T1:STATus:RX<Pt>:AIBContent?

Syntax	T1:STATus:RX<Pt>:AIBContent?
Description	This query returns sub channel audio all bit inverting content.
Parameter	<Pt> = Port number
Response	<audiocontent> = <BINARY NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:AIBC? → #B10000000
Note	With u-law coded speech, it is possible to observe the u-law code words before the bit inverting.

6.5.13 T1:STATus:RX<Pt>:APPeak?

Syntax	T1:STATus:RX<Pt>:APPeak?
Description	This query returns sub channel audio positive peak value.
Parameter	<Pt> = Port number
Response	<positivepeak> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:APP? → 85
Note	This query only applies for u-law speech and shows the largest received u-law coded value.

6.5.14 T1:STATus:RX<Pt>:ANPeak?

Syntax	T1:STATus:RX<Pt>:ANPeak?
Description	This query returns sub channel audio negative peak value.
Parameter	<Pt> = Port number
Response	<negativepeak> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:ANP? → -85
Note	This query only applies for u-law speech and shows the smallest received u-law coded value.

6.5.15 T1:STATus:RX<Pt>:ALEVel?

Syntax	T1:STATus:RX<Pt>:ALEVel?
Description	This query returns sub channel audio level. Unit: dBm.
Parameter	<Pt> = Port number
Response	<audiolevel> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:ALEV? → -4
Note	

6.5.16 T1:STATus:RX<Pt>:AFRequency?

Syntax	T1:STATus:RX<Pt>:AFRequency?
Description	This query returns sub channel audio tone frequency. Unit: Hz.
Parameter	<Pt> = Port number
Response	<audiofrequency> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:AFR? → 366
Note	

6.5.17 T1:STATus:RX<Pt>:ACOFfset?

Syntax	T1:STATus:RX<Pt>:ACOFfset?
Description	This query returns sub channel audio coder offset.
Parameter	<Pt> = Port number
Response	<coderoffset> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:ACOF? → 0
Note	Only available for 64 kbps audio channels.

6.5.18 T1:STATus:RX<Pt>:PPBRate?

Syntax	T1:STATus:RX<Pt>:PPBRate?
Description	This query returns payload pattern bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:PPBR? → 64000
Note	

6.5.19 T1:STATus:RX<Pt>:FBIT?

Syntax	T1:STATus:RX<Pt>:FBIT?
Description	This query returns FAS bits. (Frame Alignment Signal bits). Data is shown as binary.
Parameter	<Pt> = Port number
Response	<bits> = <BINARY NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:FBIT? → #B101010
Note	

6.5.20 T1:STATus:RX<Pt>:SBIT?

Syntax	T1:STATus:RX<Pt>:SBIT?
Description	This query returns S-Bits (Multi Frame Alignment Signal bits). Data is shown as binary.
Parameter	<Pt> = Port number
Response	<bits> = <BINARY NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:SBIT? → #B001110
Note	

6.5.21 T1:STATus:RX<Pt>:MBIT?

Syntax	T1:STATus:RX<Pt>:MBIT?
Description	This query returns M-Bits (Data Link Message bits). Data is shown as binary.
Parameter	<Pt> = Port number
Response	<bits> = <BINARY NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:MBIT? → #B00000000000000000
Note	

6.5.22 T1:STATus:RX<Pt>:FDL:MODE

Syntax	T1:STATus:RX<Pt>:FDL:MODE <interface>
Description	This command selects the FDL mode. This can be MBIT or INBand.
Parameters	<Pt> = Port number <interface> = <CHARACTER PROGRAM DATA> MBIT INBand <i>DEFault = MBIT</i>
Response	None.
Example	T1:STAT:RX1:FDL:MODE INB
Note	

Syntax	T1:STATus:RX<Pt>:FDL:MODE?
Description	This query returns the state of the FDL mode.
Parameter	<Pt> = Port number
Response	<interface> = <CHARACTER RESPONSE DATA>
Example	T1:STAT:RX1:FDL:MODE? → MBIT
Note	

6.5.23 T1:STATus:RX<Pt>:FDL:MBIT:CODE?

Syntax	T1:STATus:RX<Pt>:FDL:MBIT:CODE?
Description	This query returns MBIT FDL Code (Data Link Message mnemonic).
Parameter	<Pt> = Port number
Response	<bits> = <BINARY NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:FDL:MBIT:CODE? → PLA
Note	

6.5.24 T1:STATus:RX<Pt>:FDL:INBand:CODE?

Syntax	T1:STATus:RX<Pt>:FDL:INBand:CODE?
Description	This query returns Inband FDL Code (Data Link Message mnemonic).
Parameter	<Pt> = Port number
Response	<bits> = <BINARY NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:FDL:INB:CODE? → AN1
Note	

6.5.25 T1:STATus:RX<Pt>:FDL:UDEFined

Syntax	T1:STATus:RX<Pt>:FDL:UDEFined <enable>
Description	This command enables or disables the User Defined of Alignment status.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	T1:STAT:RX1:FDL:UDEF 1
Note	

Syntax	T1:STATus:RX<Pt>:FDL:UDEFined?
Description	This query returns whether the User Defined of Alignment status is enabled or disabled..
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	T1:STAT:RX1:FDL:UDEF? → 1
Note	

6.5.26 T1:STATus:RX<Pt>:FDL:UCODE

Syntax	T1:STATus:RX<Pt>:FDL:UCODE <max>
Description	This command sets the FDL User Code.
Parameters	<Pt> = Port number <max> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 16777215, DEFault = 0</i>
Response	None.
Example	T1:STAT:RX1:FDL:UCOD 123456
Note	

Syntax	T1:STATus:RX<Pt>:FDL:UCODE?
Description	This query returns the FDL User Code.
Parameter	<Pt> = Port number
Response	<max> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:STAT:RX1:FDL:UCOD? → 123456
Note	

6.5.27 T1:STATus:RX<Pt>:FDL:TRIGger

Syntax	T1:STATus:RX<Pt>:FDL:TRIGger <interface>
Description	This command enables or disables the FDL trigger.
Parameters	<Pt> = Port number <interface> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	T1:STAT:RX1:FDL:TRIG ON
Note	

Syntax	T1:STATus:RX<Pt>:FDL:TRIGger?
Description	This query returns whether the FDL trigger is enabled or disabled.
Parameter	<Pt> = Port number
Response	<interface> = <BOOLEAN RESPONSE DATA>
Example	T1:STAT:RX1:FDL:TRIG? → 1
Note	

6.5.28 T1:STATus:RX<Pt>:CBITs?

Syntax	T1:STATus:RX<Pt>:CBITs?
Description	This query returns CAS bits.
Parameter	<Pt> = Port number
Response	<bits> = <EXPRESSION RESPONSE DATA> Expression format: Numeric list Contains all 24 CAS bit sets.
Example	T1:STAT:RX1:CBIT? → (#B0101,#B0101, ..., #B0101,#B0101)
Note	

6.6 APS

6.6.1 T1:APS:STARt

Syntax	T1:APS:STARt
Description	This command starts the APS (Automatic Protection Switching) measurement.
Parameter	None.
Response	None.
Example	T1:APS:STAR
Note	

6.6.2 T1:APS:STOP

Syntax	T1:APS:STOP
Description	This command stops the APS (Automatic Protection Switching) measurement command.
Parameter	None.
Response	None.
Example	T1:APS:STOP
Note	

6.6.3 T1:APS:RX<Pt>:NUMBer?

Syntax	T1:APS:RX<Pt>:NUMBer?
Description	This query returns the number of times has measured.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:APS:RX1:NUMB? → 17
Note	

6.6.4 T1:APS:RX<Pt>:ATIMe?

Syntax	T1:APS:RX<Pt>:ATIMe?
Description	This query returns the average time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	T1:APS:RX1:ATIM? → 4.000
Note	The maximum measurable time is 4000 ms. The maximum measurable time will be re-sponded if the result exceeds 4000 ms.

6.6.5 T1:APS:RX<Pt>:MTIMe?

Syntax	T1:APS:RX<Pt>:MTIMe?
Description	This query returns the maximum time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA> <limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	T1:APS:RX1:MTIM? → 29.170,0
Note	The maximum measurable time is 4000 ms. The maximum measurable time will be re-sponded if the result exceeds 4000 ms.

6.6.6 T1:APS:RX<Pt>:LTIMe?

Syntax	T1:APS:RX<Pt>:LTIMe?
Description	This query returns the minimum time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	T1:APS:RX1:LTIM? → 1.0
Note	The maximum measurable time is 4000 ms. The maximum measurable time will be responded if the result exceeds 4000 ms.

6.6.7 T1:APS:RX<Pt>:EVENTt

Syntax	T1:APS:RX<Pt>:EVENTt <event>
Description	This command sets the Time Reference event.
Parameters	<Pt> = Port number <event> = <CHARACTER PROGRAM DATA> AIS = Alarm indication signal OOF = Out of frame PERRor = Pattern error
Response	None.
Example	T1:APS:RX1:EVEN AIS
Note	

Syntax	T1:APS:RX<Pt>:EVENT?
Description	This query returns the time reference event.
Parameter	<Pt> = Port number
Response	<event> = <CHARACTER RESPONSE DATA>
Example	T1:APS:RX1:EVEN? → AIS
Note	

6.6.8 T1:APS:RX<Pt>:MLIMit

Syntax	T1:APS:RX<Pt>:MLIMit <max>
Description	This command sets the time reference maximum limit. Unit: ms.
Parameters	<Pt> = Port number <max> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 4000.000, DEFault = 50.000</i>
Response	None.
Example	T1:APS:RX1:MLIM 50.000
Note	

Syntax	T1:APS:RX<Pt>:MLIMit?
Description	This query returns the time reference maximum limit. Unit: ms.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
Example	T1:APS:RX1:MLIM? → 50.000
Note	

6.7 RTD

This section document commands to retrieve Round Trip Delay measurement results. Commands for general RTD settings are described in section 17.1 on page 1003.

6.7.1 T1:RTD:RX<Pt>:NUMBer?

Syntax	T1:RTD:RX<Pt>:NUMBer?
Description	This query returns the number of the RTD data.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	T1:RTD:RX1:NUMB? → 2
Note	

6.7.2 T1:RTD:RX<Pt>:ATIME?

Syntax	T1:RTD:RX<Pt>:ATIME?
Description	This query returns the average time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	T1:RTD:RX1:ATIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

6.7.3 T1:RTD:RX<Pt>:MTIME?

Syntax	T1:RTD:RX<Pt>:MTIME?
Description	This query returns the maximum time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA> <limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	T1:RTD:RX1:MTIM? → 1.0,0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

6.7.4 T1:RTD:RX<Pt>:LTIME?

Syntax	T1:RTD:RX<Pt>:LTIME?
Description	This query returns the least (minimum) time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	T1:RTD:RX1:LTIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

Chapter 7

E3

7.1 Receiver

7.1.1 E3:RX<Pt>[:ENABled]

Syntax	E3:RX<Pt>[:ENABled] <state>
Description	This command enables or disables the receiver.
Parameters	<Pt> = Port number <state> = <CHARACTER PROGRAM DATA> OFF ON <i>DEFault = OFF</i>
Response	None.
Examples	E3:RX1 ON E3:RX1:ENAB ON
Note	

Syntax	E3:RX<Pt>[:ENABled]?
Description	This query returns whether the receiver is enabled or disabled.
Parameter	<Pt> = Port number
Response	<state> = <CHARACTER RESPONSE DATA>
Examples	E3:RX1? → ON E3:RX1:ENAB? → SDH
Note	Returns SDH if E3 is over SDH or SONET.

7.1.2 E3:RX<Pt>:MODE

Syntax	E3:RX<Pt>:MODE <mode>
Description	This command sets the signal termination mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> TERMinate: Nominal impedance. Normal frequency dependent AGC. MONitor: Nominal impedance. Frequency linear AGC. <i>DEFault = TERMinate</i>
Response	None.
Example	E3:RX1:MODE TERM
Note	

Syntax	E3:RX<Pt>:MODE?
Description	This query returns the signal termination mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	E3:RX1:MODE? → TERM
Note	

7.1.3 E3:RX<Pt>:FOLLow

Syntax	E3:RX<Pt>:FOLLow <follow>
Description	This command sets the receiver to follow another setup or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> NONE: Do not follow TX: Transmitter of the same port RX1: Receiver of port 1 <i>DEFault = NONE</i>
Response	None.
Example	E3:RX1:FOLL TX
Note	

Syntax	E3:RX<Pt>:FOLLow?
Description	This query returns whether the receiver follow another setup.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	E3:RX1:FOLL? → TX
Note	

7.1.4 E3:RX<Pt>:PCMFrame

Syntax	E3:RX<Pt>:PCMFrame <enable>
Description	This command enables or disables the PCM frame.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	E3:RX1:PCMF ON
Note	

Syntax	E3:RX<Pt>:PCMFrame?
Description	This query returns whether PCM frame is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	E3:RX1:PCMF? → 1
Note	

7.1.5 E3:RX<Pt>:PATtern

Syntax	E3:RX<Pt>:PATtern <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF USER16BIT: Obsolete. For backward compatibility only. Same as USER32BIT. USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS9 PRBS11 PRBS15 PRBS20 PRBS23 PRBS31 FOX FOXCMA3000 ALL0 ALL1 ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 ALT324: Alternating 3:24 <i>DEFault = PRBS23</i>
Response	None.
Example	E3:RX1:PATT PRBS11
Note	

Syntax	E3:RX<Pt>:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	E3:RX1:PATT? → PRBS11
Note	

7.1.6 E3:RX<Pt>:PINVersion

Syntax	E3:RX<Pt>:PINVersion <inverted>
Description	This command enables or disables pattern inversion.
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	E3:RX1:PINV ON
Note	The following patterns can be inverted: PRBSxx, FOX, ALL1, ALL0, ALT11, ALT13, ALT17, ALT324, UP16 and UP2K.

Syntax	E3:RX<Pt>:PINVersion?
Description	This query returns whether the pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inverted> = <NR1 NUMERIC RESPONSE DATA>
Example	E3:RX1:PINV? → 1
Note	

7.1.7 E3:RX<Pt>:UP16

Syntax	E3:RX<Pt>:UP16 <pattern>
Description	This command sets 16 bit user pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Valid characters: '0' and '1' The string must consist of 1 to 16 characters.
Response	None.
Example	E3:RX1:UP16 "101101"
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

7.1.8 E3:RX<Pt>:UP32

Syntax	E3:RX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATTern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Example	E3:RX2:UP32 "01101"
Note	

Syntax	E3:RX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	E3:RX2:UP32? → "01101"
Note	

7.1.9 E3:RX<Pt>:UP2K

Syntax	E3:RX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	E3:RX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when E3:RX2:PATT is USER2048BIT

Syntax	E3:RX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	E3:RX1:UP2K? → "12DF"
Note	

7.2 Transmitter

7.2.1 E3:TX<Pt>[:ENABled]

Syntax	E3:TX<Pt>[:ENABled] <state>
Description	This command enables or disables the transmitter.
Parameters	<Pt> = Port number <state> = <CHARACTER PROGRAM DATA> OFF ON <i>DEFault = OFF</i>
Response	None.
Examples	E3:TX1 ON E3:TX1:ENAB ON
Note	The ENABled command is the default node for E3:TX<Pt>.

Syntax	E3:TX<Pt>[:ENABled]?
Description	This query returns whether the transmitter is enabled or disabled.
Parameter	<Pt> = Port number
Response	<state> = <CHARACTER RESPONSE DATA>
Examples	E3:TX1? → ON E3:TX1:ENAB? → SDH
Note	Returns SDH if E3 is over SDH or SONET.

7.2.2 E3:TX<Pt>:FOLLow

Syntax	E3:TX<Pt>:FOLLow <follow>
Description	This command sets the transmitter setting to follow another setup or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> NONE: Do not follow TX1: Follow the setting of the port 1 transmitter <i>DEFault = NONE</i>
Response	None.
Example	E3:TX2:FOLL TX1
Note	This command is not valid for :TX1

Syntax	E3:TX<Pt>:FOLLow?
Description	This query returns whether the transmitter follow the TX1 settings.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	E3:TX2:FOLL? → TX1
Note	This command is not valid for :TX1

7.2.3 E3:TX<Pt>:TIMing

Syntax	E3:TX<Pt>:TIMing <source>
Description	This command sets the timing source.
Parameters	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> INTernal: Internal timing source EXTernal: External timing source RX: Received signal on the same port <i>DEFault = INTernal</i>
Response	None.
Example	E3:TX1:TIM INT
Note	

Syntax	E3:TX<Pt>:TIMing?
Description	This query returns the timing source.
Parameter	<Pt> = Port number
Response	<source> = <CHARACTER RESPONSE DATA>
Example	E3:TX1:TIM? → INT
Note	

7.2.4 E3:TX<Pt>:FOFFset

Syntax	E3:TX<Pt>:FOFFset <offset>
Description	This command sets the frequency offset for the clock source. Unit: ppm.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> <i>MINimum=-125, MAXimum=125, DEFault=0</i> <i>Allowed suffix = ppm</i>
Response	None.
Example	E3:TX1:FOFF -25ppm
Note	

Syntax	E3:TX<Pt>:FOFFset?
Description	This query returns the frequency offset for the clock source. Unit: ppm.
Parameter	<Pt> = Port number
Response	<offset> = <NR1 NUMERIC RESPONSE DATA>
Example	E3:TX1:FOFF? → -25
Note	

7.2.5 E3:TX<Pt>:PCMFrame

Syntax	E3:TX<Pt>:PCMFrame <enable>
Description	This command enables or disables the PCM frame.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	E3:TX1:PCMF ON
Note	

Syntax	E3:TX<Pt>:PCMFrame?
Description	This query returns whether the PCM frame is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	E3:TX1:PCMF? → 1
Note	

7.2.6 E3:TX<Pt>:PATtern

Syntax	E3:TX<Pt>:PATtern <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF USER16BIT: Obsolete. For backward compatibility only. Same as USER32BIT. USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS9 PRBS11 PRBS15 PRBS20 PRBS23 PRBS31 FOX FOXCMA3000 ALL0 ALL1 ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 ALT324: Alternating 3:24 <i>DEFault = PRBS23</i>
Response	None.
Example	E3:TX1:PATT PRBS11
Note	

Syntax	E3:TX<Pt>:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	E3:TX1:PATT? → PRBS11
Note	

7.2.7 E3:TX<Pt>:PINVersion

Syntax	E3:TX<Pt>:PINVersion <inverted>
Description	This command sets pattern inversion.
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	E3:TX1:PINV ON
Note	

Syntax	E3:TX<Pt>:PINVersion?
Description	This query returns pattern inversion.
Parameter	<Pt> = Port number
Response	<inverted> = <NR1 NUMERIC RESPONSE DATA>
Example	E3:TX1:PINV? → 1
Note	

7.2.8 E3:TX<Pt>:UP16

Syntax	E3:TX<Pt>:UP16 <pattern>
Description	This command sets 16 bit user pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Valid characters: '0' and '1' The string must consist of 1 to 16 characters.
Response	None.
Example	E3:TX1:UP16 "101101"
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

7.2.9 E3:TX<Pt>:UP32

Syntax	E3:TX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATTern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Example	E3:TX1:UP32 "01101"
Note	

Syntax	E3:TX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	E3:TX1:UP32? → "01101"
Note	

7.2.10 E3:TX<Pt>:UP2K

Syntax	E3:TX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	E3:TX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when E3:TX2:PATT is USER2048BIT

Syntax	E3:TX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	E3:TX1:UP2K? → "12DF"
Note	

7.3 Stimuli

7.3.1 E3:STIMuli:TX<Pt>:ALARm

Syntax	E3:STIMuli:TX<Pt>:ALARm <alarmtype>
Description	This command sets the alarm type to generate.
Parameters	<Pt> = Port number <alarmtype> = <CHARACTER PROGRAM DATA> NALarm: No alarm NSIGnal: No signal AIS: Alarm Indication Signal NFRame: No frame DALarm: Distant alarm (RDI) NSYNc: No pattern sync <i>DEFault = NALarm</i>
Response	None.
Example	E3:STIM:TX1:ALAR NALarm
Note	

Syntax	E3:STIMuli:TX<Pt>:ALARm?
Description	This query returns the stimuli alarm type.
Parameter	<Pt> = Port number
Response	<alarmtype> = <CHARACTER RESPONSE DATA>
Example	E3:STIM:TX1:ALAR? → NSIG
Note	

7.3.2 E3:STIMuli:TX<Pt>:ERRor

Syntax	E3:STIMuli:TX<Pt>:ERRor <errordestination>
Description	This command sets the error destination.
Parameters	<Pt> = Port number <errordestination> = <CHARACTER PROGRAM DATA> FRAME: Frame CODE: Code PATtern: Pattern PSLip: Pattern slip <i>DEFault = FRAME</i>
Response	None.
Example	E3:STIM:TX1:ERR CODE
Note	

Syntax	E3:STIMuli:TX<Pt>:ERRor?
Description	This query returns the error destination.
Parameter	<Pt> = Port number
Response	<errordestination> = <CHARACTER RESPONSE DATA>
Example	E3:STIM:TX1:ERR? → CODE
Note	

7.3.3 E3:STIMuli:TX<Pt>:EINsert

Syntax	E3:STIMuli:TX<Pt>:EINsert <insertion>
Description	This command sets the method to insert errors.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF MANual B02: Burst · 1E-02 B03: Burst · 1E-03 B04: Burst · 1E-04 B05: Burst · 1E-05 B06: Burst · 1E-06 B07: Burst · 1E-07 <i>DEFault = OFF</i>
Response	None.
Example	E3:STIM:TX1:EINS MAN
Note	If insertion is set to MANual, errors are inserted with SYST:STIM:INS. See section 2.3.52

Syntax	E3:STIMuli:TX<Pt>:EINsert?
Description	This query returns the error insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	E3:STIM:TX1:EINS? → MAN
Note	

7.3.4 E3:STIMuli:TX<Pt>:EBLength

Syntax	E3:STIMuli:TX<Pt>:EBLength <burstlength>
Description	This command sets the error burst length to generate.
Parameters	<Pt> = Port number <burstlength> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=255, DEFault=1</i>
Response	None.
Example	E3:STIM:TX1:EBL 1
Note	

Syntax	E3:STIMuli:TX<Pt>:EBLength?
Description	This query returns the error burst length to generate.
Parameter	<Pt> = Port number
Response	<burstlength> = <NR1 NUMERIC RESPONSE DATA>
Example	E3:STIM:TX1:EBL? → 1
Note	

7.4 Results

7.4.1 E3:RX<Pt>:IFETch?

Syntax	E3:RX<Pt>:IFETch? <parameters>
Description	This query fetches an interval if available.
Parameters	<Pt> = Port number ({<parameter>} + {,}*) = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. Alarms NSIG: No signal. Response: <Seconds>,<Ratio> AIS: Alarm indication signal. Response: <Seconds>,<Ratio> NFR: No frame. Response: <Seconds>,<Ratio> NSYN: No sync. Response: <Seconds>,<Ratio> DAL: Distant Alarm. Response: <Seconds>,<Ratio> Errors FASW: FAS words. Response: <Count>,<Ratio> CODE: Code. Response: <Count>,<Ratio> PATT: Pattern. Response: <Count>,<Ratio> PSL: Pattern slip. Response: <Count>,<Ratio> PBL: Pattern block. Response: <Count>,<Ratio> Rx frequency DEV: Frequency deviation. Response: <ppm> FAS performance errors FES: FAS ES. Response: <Count>,<Ratio%> FSES: FAS SES. Response: <Count>,<Ratio%> FBBE: FAS BBE. Response: <Count>,<Ratio%> FALS: FAS ALS. Response: <Count>,<Ratio%> FUAT: FAS UAT. Response: <Count>,<Ratio%> FAVT: FAS AVT. Response: <Count>,<Ratio%> FEFS: FAS EFS. Response: <Count>,<Ratio%> Pattern performance errors PES: Pattern ES. Response: <Count>,<Ratio%> PSES: Pattern SES. Response: <Count>,<Ratio%> PBBE: Pattern BBE. Response: <Count>,<Ratio%> PALS: Pattern ALS. Response: <Count>,<Ratio%> PUAT: Pattern UAT. Response: <Count>,<Ratio%> PAVT: Pattern AVT. Response: <Count>,<Ratio%> PEFS: Pattern EFS. Response: <Count>,<Ratio%>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Expression format: Numeric List Each result is formatted according to the specification in the parameter field. Values that are not relevant or applicable for the current measurement return NaN (section 1.6.1).
Example	E3:RX1:IFET? (FES,PATT) → (2,0.5),(4,0.25)
Notes	This command fetches the result from the interval selected by the MEASurement:SETup:SElect command (see section 18.2.2). NFR, DAL, FASW, FASB return NaN (section 1.6.1), if the PCM frame is disabled (E3:RX<Pt>:PCMFrame? → 0). If requested result is not available, NaN (section 1.6.1) is returned. If there is one or more results, the last ",," is always removed.

7.5 Status

7.5.1 E3:STATus:RX<Pt>:PSLevel?

Syntax	E3:STATus:RX<Pt>:PSLevel?
Description	This query returns physical signal level. Unit: dB.
Parameter	<Pt> = Port number
Response	<signallevel> = <NR1 NUMERIC RESPONSE DATA>
Example	E3:STAT:RX1:PSL? → 0
Note	Minimum level is -48 dB.

7.5.2 E3:STATus:RX<Pt>:PDEViation?

Syntax	E3:STATus:RX<Pt>:PDEViation?
Description	This query returns physical deviation. Units: ppm and bps.
Parameter	<Pt> = Port number
Response	<ppm> = <NR1 NUMERIC RESPONSE DATA> <bps> = <NR1 NUMERIC RESPONSE DATA>
Example	E3:STAT:RX1:PDEV? → 0, 0
Note	

7.5.3 E3:STATus:RX<Pt>:PBRate?

Syntax	E3:STATus:RX<Pt>:PBRate?
Description	This query returns physical bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	E3:STAT:RX1:PBR? → 34368000
Note	

7.5.4 E3:STATus:RX<Pt>:PPBRate?

Syntax	E3:STATus:RX<Pt>:PPBRate?
Description	This query returns payload pattern bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	E3:STAT:RX1:PPBR? → 34099504
Note	

7.5.5 E3:STATus:RX<Pt>:AESummary[:EVENT]?

Syntax	E3:STATus:RX<Pt>:AESummary[:EVENT]?
Description	This query returns the E3 alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of E3:STAT:RX<Pt>:ALAR[:EVENT]? DB2 (2) = Summary bit of E3:STAT:RX<Pt>:ERR[:EVENT]? DB3 - DB16 = NOT USED
Example	E3:STAT:RX1:AES? → 1
Note	

7.5.6 E3:STATus:RX<Pt>:AESummary:CONDition?

Syntax	E3:STATus:RX<Pt>:AESummary:CONDition?
Description	This query returns the E3 alarms and errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as E3:STAT:RX<Pt>:AESummary[:EVENT]?
Example	E3:STAT:RX1:AES:COND? → 2
Note	

7.5.7 E3:STATus:RX<Pt>:ALARm[:EVENT]?

Syntax	E3:STATus:RX<Pt>:ALARm[:EVENT]?
Description	This query returns the alarms event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = No signal DB2 (2) = Alarm Indication Signal (AIS) DB3 (4) = No frame DB4 (8) = Distant DB5 (16) = No sync DB6 - DB16 = NOT USED
Example	E3:STAT:RX1:ALAR? → 2
Note	The No frame and Distant are only valid when the PCM frame is enabled (E3:RX<Pt>:PCMFrame? → 1).

7.5.8 E3:STATus:RX<Pt>:ALARm:CONDition?

Syntax	E3:STATus:RX<Pt>:ALARm:CONDition?
Description	This query returns the alarms condition register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = No signal DB2 (2) = Alarm Indication Signal (AIS) DB3 (4) = No frame DB4 (8) = Distant DB5 (16) = No sync DB6 - DB16 = NOT USED
Example	E3:STAT:RX1:ALAR:COND? → 4
Note	The No frame and Distant are only valid when the PCM frame is enabled (E3:RX<Pt>:PCMFrame? → 1).

7.5.9 E3:STATus:RX<Pt>:ERRor[:EVENT]?

Syntax	E3:STATus:RX<Pt>:ERRor[:EVENT]?
Description	This query returns the errors event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = FAS words DB2 (2) = NOT USED DB3 (4) = Pattern DB4 (8) = Code DB5 (16) = Pattern slip (PSL) DB6 - DB16 = NOT USED
Example	E3:STAT:RX1:ERR? → 8
Notes	The FAS words and FAS bits are only valid when the PCM frame is enabled (E3:RX<Pt>:PCMFrame? → 1). The Code is not valid when using E3 over SDH.

7.5.10 E3:STATus:RX<Pt>:ERRor:CONDition?

Syntax	E3:STATus:RX<Pt>:ERRor:CONDition?
Description	This query returns the errors condition register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = FAS words DB2 (2) = NOT USED DB3 (4) = Pattern DB4 (8) = Code DB5 (16) = Pattern slip (PSL) DB6 - DB16 = NOT USED
Example	E3:STAT:RX1:ERR:COND? → 8
Note	The FAS words and FAS bits are only valid when the PCM frame is enabled (E3:RX<Pt>:PCMFrame? → 1). The Code is not valid when using E3 over SDH.

7.6 RTD

This section document commands to retrieve Round Trip Delay measurement results. Commands for general RTD settings are described in section 17.1 on page 1003.

7.6.1 E3:RTD:RX<Pt>:NUMBer?

Syntax	E3:RTD:RX<Pt>:NUMBer?
Description	This query returns the number of the RTD data.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	E3:RTD:RX1:NUMB? → 2
Note	

7.6.2 E3:RTD:RX<Pt>:ATIMe?

Syntax	E3:RTD:RX<Pt>:ATIMe?
Description	This query returns the average time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	E3:RTD:RX1:ATIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

7.6.3 E3:RTD:RX<Pt>:MTIMe?

Syntax	E3:RTD:RX<Pt>:MTIMe?
Description	This query returns the maximum time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA> <limit exceeded> = <NR1 NUMERIC RESPONSE DATA>
Example	E3:RTD:RX1:MTIM? → 1.0,0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

7.6.4 E3:RTD:RX<Pt>:LTIMe?

Syntax	E3:RTD:RX<Pt>:LTIMe?
Description	This query returns the least (minimum) time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	E3:RTD:RX1:LTIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

Chapter 8

T3

8.1 Receiver

8.1.1 T3:RX<Pt>[:ENABled]

Syntax	T3:RX<Pt>[:ENABled] <state>
Description	This command enables or disables the receiver.
Parameters	<Pt> = Port number <state> = <CHARACTER PROGRAM DATA> OFF ON <i>DEFault = OFF</i>
Response	None.
Examples	T3:RX1 ON T3:RX1:ENAB ON
Note	

Syntax	T3:RX<Pt>[:ENABled]?
Description	This query returns whether the receiver is enabled or disabled.
Parameter	<Pt> = Port number
Response	<state> = <CHARACTER RESPONSE DATA>
Examples	T3:RX1? → ON T3:RX1:ENAB? → SDH
Note	Returns SDH if T3 is over SDH or SONET.

8.1.2 T3:RX<Pt>:MODE

Syntax	T3:RX<Pt>:MODE <mode>
Description	This command sets the signal termination mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> TERMinate: Nominal impedance. Normal frequency dependent AGC. MONitor: Nominal impedance. Frequency linear AGC. <i>DEFault = TERMinate</i>
Response	None.
Example	T3:RX1:MODE TERM
Note	

Syntax	T3:RX<Pt>:MODE?
Description	This query returns the signal termination mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	T3:RX1:MODE? → TERM
Note	

8.1.3 T3:RX<Pt>:FOLLow

Syntax	T3:RX<Pt>:FOLLow <follow>
Description	This command sets the receiver to follow another setup or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> NONE: Do not follow TX: Transmitter of the same port RX1: Receiver of port 1 <i>DEFault</i> = <i>NONE</i>
Response	None.
Example	T3:RX1:FOLL TX
Note	

Syntax	T3:RX<Pt>:FOLLow?
Description	This query returns whether the receiver follows another setup.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	T3:RX1:FOLL? → TX
Note	

8.1.4 T3:RX<Pt>:PCMFrame

Syntax	T3:RX<Pt>:PCMFrame <enable>
Description	This command enables or disables the PCM frame.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>ON</i>
Response	None.
Example	T3:RX1:PCMF ON
Note	

Syntax	T3:RX<Pt>:PCMFrame?
Description	This query returns whether the PCM frame is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	T3:RX1:PCMF? → 1
Note	

8.1.5 T3:RX<Pt>:FTYPE

Syntax	T3:RX<Pt>:FTYPE <type>
Description	This command sets the PCM frame type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> M13: M13 mode CBIT: C-bit mode <i>DEFault</i> = <i>M13</i>
Response	None.
Example	T3:RX1:FTYP CBIT
Note	

Syntax	T3:RX<Pt>:FTYPE?
Description	This query returns the PCM frame type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	T3:RX1:FTYP? → CBIT
Note	

8.1.6 T3:RX<Pt>:PATtern

Syntax	T3:RX<Pt>:PATtern <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF USER16BIT: Obsolete. For backward compatibility only. Same as USER32BIT. USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS9 PRBS11 PRBS15 PRBS20 PRBS23 PRBS29 PRBS31 QRSS20 FOX FOXCMA3000 ALL0 ALL1 ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 ALT324: Alternating 3:24 <i>DEFault = PRBS23</i>
Response	None.
Example	T3:RX1:PATT PRBS11
Note	

Syntax	T3:RX<Pt>:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	T3:RX1:PATT? → PRBS11
Note	

8.1.7 T3:RX<Pt>:PINVersion

Syntax	T3:RX<Pt>:PINVersion <inverted>
Description	This command enables or disables pattern inversion.
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	T3:RX1:PINV ON
Note	The following patterns can be inverted: PRBSxx, FOX, ALL1, ALL0, ALT11, ALT13, ALT17, ALT324, UP16 and UP2K.

Syntax	T3:RX<Pt>:PINVersion?
Description	This query returns whether the pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inverted> = <NR1 NUMERIC RESPONSE DATA>
Example	T3:RX1:PINV? → 1
Note	

8.1.8 T3:RX<Pt>:UP16

Syntax	T3:RX<Pt>:UP16 <pattern>
Description	This command sets 16 bit user pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Valid characters: '0' and '1' The string must consist of 1 to 16 characters.
Response	None.
Example	T3:RX1:UP16 "101101"
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

8.1.9 T3:RX<Pt>:UP32

Syntax	T3:RX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATTern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters.
Response	None.
Example	T3:RX2:UP32 "01101"
Note	

Syntax	T3:RX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	T3:RX2:UP32? → "01101"
Note	

8.1.10 T3:RX<Pt>:UP2K

Syntax	T3:RX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	T3:RX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when T3:RX2:PATT is USER2048BIT

Syntax	T3:RX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	T3:RX1:UP2K? → "12DF"
Note	

8.2 Transmitter

8.2.1 T3:TX<Pt>[:ENABled]

Syntax	T3:TX<Pt>[:ENABled] <state>
Description	This command enables or disables the transmitter.
Parameters	<Pt> = Port number <state> = <CHARACTER PROGRAM DATA> OFF ON <i>DEFault = OFF</i>
Response	None.
Examples	T3:TX1 ON T3:TX1:ENAB ON
Note	The ENABled command is the default node for T3:TX<Pt>.

Syntax	T3:TX<Pt>[:ENABled]?
Description	This query returns whether the transmitter is enabled or disabled.
Parameter	<Pt> = Port number
Response	<state> = <CHARACTER RESPONSE DATA>
Examples	T3:TX1? → ON T3:TX1:ENAB? → SDH
Note	Returns SDH if T3 is over SDH or SONET.

8.2.2 T3:TX<Pt>:FOLLow

Syntax	T3:TX<Pt>:FOLLow <follow>
Description	This command sets the transmitter setting to follow another setup or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> NONE: Do not follow TX1: Follow the setting of the port 1 transmitter <i>DEFault = NONE</i>
Response	None.
Example	T3:TX2:FOLL TX1
Note	This command is not valid for :TX1

Syntax	T3:TX<Pt>:FOLLow?
Description	This query returns whether the transmitter follows the TX1 settings.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	T3:TX2:FOLL? → TX1
Note	This command is not valid for :TX1

8.2.3 T3:TX<Pt>:TIMing

Syntax	T3:TX<Pt>:TIMing <source>
Description	This command sets the timing source.
Parameters	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> INTernal: Internal timing source EXTernal: External timing source RX: Received signal on the same port <i>DEFault = INTernal</i>
Response	None.
Example	T3:TX1:TIM INT
Note	

Syntax	T3:TX<Pt>:TIMing?
Description	This query returns the timing source.
Parameter	<Pt> = Port number
Response	<source> = <CHARACTER RESPONSE DATA>
Example	T3:TX1:TIM? → INT
Note	

8.2.4 T3:TX<Pt>:FOFFset

Syntax	T3:TX<Pt>:FOFFset <offset>
Description	This command sets the frequency offset for the clock source. Unit: ppm.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> <i>MINimum=-125, MAXimum=125, DEFault=0</i> <i>Allowed suffix = ppm</i>
Response	None.
Example	T3:TX1:FOFF -25ppm
Note	

Syntax	T3:TX<Pt>:FOFFset?
Description	This query returns the frequency offset for the clock source. Unit: ppm.
Parameter	<Pt> = Port number
Response	<offset> = <NR1 NUMERIC RESPONSE DATA>
Example	T3:TX1:FOFF? → -25
Note	

8.2.5 T3:TX<Pt>:PCMFrame

Syntax	T3:TX<Pt>:PCMFrame <enable>
Description	This command enables or disables the PCM frame.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	T3:TX1:PCMF ON
Note	

Syntax	T3:TX<Pt>:PCMFrame?
Description	This query returns whether PCM frame is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	T3:TX1:PCMF? → 1
Note	

8.2.6 T3:TX<Pt>:FTYPE

Syntax	T3:TX<Pt>:FTYPE <type>
Description	This command sets the PCM frame type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> M13: M13 mode CBIT: C-bit mode <i>DEFault = M13</i>
Response	None.
Example	T3:TX1:FTYP CBIT
Note	

Syntax	T3:TX<Pt>:FTYPE?
Description	This query returns PCM frame type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	T3:TX1:FTYP? → CBIT
Note	

8.2.7 T3:TX<Pt>:LBOut

Syntax	T3:TX<Pt>:LBOut <lbo>
Description	This command sets the line build out.
Parameters	<Pt> = Port number <lbo> = <CHARACTER PROGRAM DATA> HIGH: High-0 ft DSX: DSX-450 ft <i>DEFault = HIGH</i>
Response	None.
Example	T3:TX1:LB0 DSX
Note	

Syntax	T3:TX<Pt>:LBOut?
Description	This query returns the line build out setting.
Parameter	<Pt> = Port number
Response	<lbo> = <CHARACTER RESPONSE DATA>
Example	T3:TX1:LB0? → DSX
Note	

8.2.8 T3:TX<Pt>:PATtern

Syntax	T3:TX<Pt>:PATtern <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF USER16BIT: Obsolete. For backward compatibility only. Same as USER32BIT. USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS9 PRBS11 PRBS15 PRBS20 PRBS23 PRBS29 PRBS31 QRSS20 FOX FOXCMA3000 ALL0 ALL1 ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 ALT324: Alternating 3:24 <i>DEFault = PRBS23</i>
Response	None.
Example	T3:TX1:PATT PRBS11
Note	

Syntax	T3:TX<Pt>:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	T3:TX1:PATT? → PRBS11
Note	

8.2.9 T3:TX<Pt>:PINVersion

Syntax	T3:TX<Pt>:PINVersion <inverted>
Description	This command sets pattern inversion.
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	T3:TX1:PINV ON
Note	

Syntax	T3:TX<Pt>:PINVersion?
Description	This query returns pattern inversion.
Parameter	<Pt> = Port number
Response	<inverted> = <NR1 NUMERIC RESPONSE DATA>
Example	T3:TX1:PINV? → 1
Note	

8.2.10 T3:TX<Pt>:UP16

Syntax	T3:TX<Pt>:UP16 <pattern>
Description	This command sets 16 bit user pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Valid characters: '0' and '1' The string must consist of 1 to 16 characters.
Response	None.
Example	T3:TX1:UP16 "101101"
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

8.2.11 T3:TX<Pt>:UP32

Syntax	T3:TX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATtern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters.
Response	None.
Examples	T3:TX1:UP32 "01101"
Note	

Syntax	T3:TX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	T3:TX1:UP32? → "01101"
Note	

8.2.12 T3:TX<Pt>:UP2K

Syntax	T3:TX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	T3:TX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when T3:TX2:PATT is USER2048BIT

Syntax	T3:TX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	T3:TX1:UP2K? → "12DF"
Note	

8.3 Stimuli

8.3.1 T3:STIMuli:TX<Pt>:ALARm

Syntax	T3:STIMuli:TX<Pt>:ALARm <alarmtype>
Description	This command sets the alarm type to generate.
Parameters	<Pt> = Port number <alarmtype> = <CHARACTER PROGRAM DATA> NALarm: No alarm NSIGnal: No signal AIS: Alarm Indication Signal RAI: Remote Alarm Indication IDLE: Idle NFRame: No frame (LOF) NSYNc: No pattern sync (LSS) <i>DEFault = NALarm</i>
Response	None.
Example	T3:STIM:TX1:ALAR NALarm
Note	

Syntax	T3:STIMuli:TX<Pt>:ALARm?
Description	This query returns the stimuli alarm type.
Parameter	<Pt> = Port number
Response	<alarmtype> = <CHARACTER RESPONSE DATA>
Example	T3:STIM:TX1:ALAR? → NSIG
Note	

8.3.2 T3:STIMuli:TX<Pt>:ERRor

Syntax	T3:STIMuli:TX<Pt>:ERRor <errordestination>
Description	This command sets the error destination.
Parameters	<Pt> = Port number <errordestination> = <CHARACTER PROGRAM DATA> OFF CBIT: C-Bit FBIT: F-Bit PBIT: P-Bit FEBE: PATtern: Pattern Error PSLip: Pattern slip BPV: <i>DEFault = FBIT</i>
Response	None.
Example	T3:STIM:TX1:ERR FEBE
Note	

Syntax	T3:STIMuli:TX<Pt>:ERRor?
Description	This query returns the error destination.
Parameter	<Pt> = Port number
Response	<errordestination> = <CHARACTER RESPONSE DATA>
Example	T3:STIM:TX1:ERR? → FEBE
Note	

8.3.3 T3:STIMuli:TX<Pt>:EINsert

Syntax	T3:STIMuli:TX<Pt>:EINsert <insertion>
Description	This command sets the method to insert errors.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF MANual B02: Burst · 1E-02 B03: Burst · 1E-03 B04: Burst · 1E-04 B05: Burst · 1E-05 B06: Burst · 1E-06 B07: Burst · 1E-07 <i>DEFault = OFF</i>
Response	None.
Example	T3:STIM:TX1:EINS MAN
Note	If insertion is set to MANual, errors are inserted with SYST:STIM:INS. See section 2.3.52

Syntax	T3:STIMuli:TX<Pt>:EINsert?
Description	This query returns the error insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	T3:STIM:TX1:EINS? → MAN
Note	

8.3.4 T3:STIMuli:TX<Pt>:EBLength

Syntax	T3:STIMuli:TX<Pt>:EBLength <burstlength>
Description	This command sets the error burst length to generate.
Parameters	<Pt> = Port number <burstlength> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=255, DEFault=1</i>
Response	None.
Example	T3:STIM:TX1:EBL 1
Note	

Syntax	T3:STIMuli:TX<Pt>:EBLength?
Description	This query returns the error burst length to generate.
Parameter	<Pt> = Port number
Response	<burstlength> = <NR1 NUMERIC RESPONSE DATA>
Example	T3:STIM:TX1:EBL? → 1
Note	

8.4 Results

8.4.1 T3:RX<Pt>:IFETch?

Syntax	T3:RX<Pt>:IFETch? <parameters>
Description	This query fetches an interval if available.
Parameters	<Pt> = Port number ({<parameter>} + {,}*) = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. Alarms NSIG: No signal. Response: <Seconds>,<Ratio> AIS: Alarm indication signal. Response: <Seconds>,<Ratio> NFR: No frame. Response: <Seconds>,<Ratio> NSYN: No sync (LSS). Response: <Seconds>,<Ratio> DAL: Distant Alarm (RAI). Response: <Seconds>,<Ratio> IDLE: Idle alarm. Response: <Seconds>,<Ratio> Errors CODE: Code (BPV). Response: <Count>,<Ratio> FBIT: F-bit. Response: <Count>,<Ratio> CBIT: C-bit. Response: <Count>,<Ratio> PATT: Pattern. Response: <Count>,<Ratio> PSL: Pattern slip. Response: <Count>,<Ratio> PBL: Pattern block. Response: <Count>,<Ratio> PAR: Parity. Response: <Count>,<Ratio> FEBE: FEBE. Response: <Count>,<Ratio> Rx frequency DEV: Frequency deviation. Response: <ppm> FAS performance errors FES: FAS ES. Response: <Count>,<Ratio%> FSES: FAS SES. Response: <Count>,<Ratio%> FBBE: FAS BBE. Response: <Count>,<Ratio%> FALS: FAS ALS. Response: <Count>,<Ratio%> FUAT: FAS UAT. Response: <Count>,<Ratio%> FAVT: FAS AVT. Response: <Count>,<Ratio%> FEFS: FAS EFS. Response: <Count>,<Ratio%> Pattern performance errors PES: Pattern ES. Response: <Count>,<Ratio%> PSES: Pattern SES. Response: <Count>,<Ratio%> PBBE: Pattern BBE. Response: <Count>,<Ratio%> PALS: Pattern ALS. Response: <Count>,<Ratio%> PUAT: Pattern UAT. Response: <Count>,<Ratio%> PAVT: Pattern AVT. Response: <Count>,<Ratio%> PEFS: Pattern EFS. Response: <Count>,<Ratio%>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Expression format: Numeric List Each result is formatted according to the specification in the parameter field. Values that are not relevant or applicable for the current measurement return NaN.
Example	T3:RX1:IFET? (FES,PATT) → (2,0.5),(4,0.25)
Notes	This command fetches the result from the interval selected by the MEASurement:SETup:SElect command (see section 18.2.2). NFR, DAL, FASW, FASB return NaN, if the PCM frame is disabled (T3:RX<Pt>:PCMFrame? → 0). If requested result is not available, NaN is returned. If there is one or more results, the last ",," is always removed.

8.5 Status

8.5.1 T3:STATus:RX<Pt>:PSLevel?

Syntax	T3:STATus:RX<Pt>:PSLevel?
Description	This query returns physical signal level. Unit: dB.
Parameter	<Pt> = Port number
Response	<signallevel> = <NR1 NUMERIC RESPONSE DATA>
Example	T3:STAT:RX1:PSL? → 0
Note	Minimum level is -48 dB.

8.5.2 T3:STATus:RX<Pt>:PDEViation?

Syntax	T3:STATus:RX<Pt>:PDEViation?
Description	This query returns physical deviation. Units: ppm and bps.
Parameter	<Pt> = Port number
Response	<ppm> = <NR1 NUMERIC RESPONSE DATA> <bps> = <NR1 NUMERIC RESPONSE DATA>
Example	T3:STAT:RX1:PDEV? → 0, 0
Note	

8.5.3 T3:STATus:RX<Pt>:PBRate?

Syntax	T3:STATus:RX<Pt>:PBRate?
Description	This query returns physical bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	T3:STAT:RX1:PBR? → 44736000
Note	

8.5.4 T3:STATus:RX<Pt>:PPBRate?

Syntax	T3:STATus:RX<Pt>:PPBRate?
Description	This query returns payload pattern bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	T3:STAT:RX1:PPBR? → 44209704
Note	

8.5.5 T3:STATus:RX<Pt>:AESummary[:EVENT]?

Syntax	T3:STATus:RX<Pt>:AESummary[:EVENT]?
Description	This query returns the T3 alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of T3:STAT:RX<Pt>:ALAR[:EVENT]? DB2 (2) = Summary bit of T3:STAT:RX<Pt>:ERR[:EVENT]? DB3 - DB16 = NOT USED
Example	T3:STAT:RX1:AES? → 1
Note	

8.5.6 T3:STATus:RX<Pt>:AESummary:CONDition?

Syntax	T3:STATus:RX<Pt>:AESummary:CONDition?
Description	This query returns the T3 alarms and errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as T3:STAT:RX<Pt>:AESummary[:EVENT]?
Example	T3:STAT:RX1:AES:COND? → 2
Note	

8.5.7 T3:STATus:RX<Pt>:ALARm[:EVENT]?

Syntax	T3:STATus:RX<Pt>:ALARm[:EVENT]?
Description	This query returns the alarms event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = No signal DB2 (2) = NOT USED DB3 (4) = Alarm Indication Signal (AIS) DB4 (8) = No frame (LOF) DB5 (16) = NOT USED DB6 (32) = Distant (RAI) DB7 (64) = No sync (LSS) DB8 (128) = Idle DB9 - DB16 = NOT USED
Example	T3:STAT:RX1:ALAR? → 2
Note	The No frame and Distant are only valid when the PCM frame is enabled (T3:RX<Pt>:PCMFrame? → 1).

8.5.8 T3:STATus:RX<Pt>:ALARm:CONDition?

Syntax	T3:STATus:RX<Pt>:ALARm:CONDition?
Description	This query returns the alarms condition register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = No signal DB2 (2) = NOT USED DB3 (4) = Alarm Indication Signal (AIS) DB4 (8) = No frame (LOF) DB5 (16) = NOT USED DB6 (32) = Distant (RAI) DB7 (64) = No sync (LSS) DB8 (128) = Idle DB9 - DB16 = NOT USED
Example	T3:STAT:RX1:ALAR:COND? → 4
Note	The No frame and Distant are only valid when the PCM frame is enabled (T3:RX<Pt>:PCMFrame? → 1).

8.5.9 T3:STATus:RX<Pt>:ERRor[:EVENT]?

Syntax	T3:STATus:RX<Pt>:ERRor[:EVENT]?
Description	This query returns the errors event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = F-bit DB2 (2) = NOT USED DB3 (4) = Pattern DB4 (8) = Code (BPV) DB5 (16) = Pattern slip (PSL) DB6 (32) = Parity DB7 (64) = C-bit DB8 (128) = FEBE DB9 - DB16 = NOT USED
Example	T3:STAT:RX1:ERR? → 8
Notes	The FAS words and FAS bits are only valid when the PCM frame is enabled (T3:RX<Pt>:PCMFrame? → 1). The Code is not valid when using T3 over SDH.

8.5.10 T3:STATus:RX<Pt>:ERRor:CONDition?

Syntax	T3:STATus:RX<Pt>:ERRor:CONDition?
Description	This query returns the errors condition register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = F-bit DB2 (2) = NOT USED DB3 (4) = Pattern DB4 (8) = Code (BPV) DB5 (16) = Pattern slip (PSL) DB6 (32) = Parity DB7 (64) = C-bit DB8 (128) = FEBE DB9 - DB16 = NOT USED
Example	T3:STAT:RX1:ERR:COND? → 8
Note	The FAS words and FAS bits are only valid when the PCM frame is enabled (T3:RX<Pt>:PCMFrame? → 1). The Code is not valid when using T3 over SDH.

8.6 RTD

This section document commands to retrieve Round Trip Delay measurement results. Commands for general RTD settings are described in section 17.1 on page 1003.

8.6.1 T3:RTD:RX<Pt>:NUMBer?

Syntax	T3:RTD:RX<Pt>:NUMBer?
Description	This query returns the number of the RTD data.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	T3:RTD:RX1:NUMB? → 2
Note	

8.6.2 T3:RTD:RX<Pt>:ATIME?

Syntax	T3:RTD:RX<Pt>:ATIME?
Description	This query returns the average time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	T3:RTD:RX1:ATIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

8.6.3 T3:RTD:RX<Pt>:MTIME?

Syntax	T3:RTD:RX<Pt>:MTIME?
Description	This query returns the maximum time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
	<limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	T3:RTD:RX1:MTIM? → 1.0,0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

8.6.4 T3:RTD:RX<Pt>:LTIME?

Syntax	T3:RTD:RX<Pt>:LTIME?
Description	This query returns the least (minimum) time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	T3:RTD:RX1:LTIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

Chapter 9

E4

9.1 Receiver

9.1.1 E4:RX<Pt>[:ENABled]

Syntax	E4:RX<Pt>[:ENABled] <state>
Description	This command enables or disables the receiver.
Parameters	<Pt> = Port number <state> = <CHARACTER PROGRAM DATA> OFF ON <i>DEFault = OFF</i>
Response	None.
Examples	E4:RX1 ON E4:RX1:ENAB ON
Note	ENABled is the default node for E4:RX<Pt>.

Syntax	E4:RX<Pt>[:ENABled]?
Description	This query returns whether the receiver is enabled or disabled.
Parameter	<Pt> = Port number
Response	<state> = <CHARACTER RESPONSE DATA>
Examples	E4:RX1? → ON E4:RX1:ENAB? → SDH
Note	Returns SDH if E4 is over SDH or SONET.

9.1.2 E4:RX<Pt>:GAIN

Syntax	E4:RX<Pt>:GAIN <gain>
Description	This command sets the gain for the receiver.
Parameters	<Pt> = Port number <gain> = <CHARACTER PROGRAM DATA> TERMinate: Nominal impedance. Normal frequency dependent AGC. MONitor: Nominal impedance. Frequency linear AGC. <i>DEFault = TERMinate</i>
Response	None.
Example	E4:RX1:GAIN MON
Note	

Syntax	E4:RX<Pt>:GAIN?
Description	This query returns the gain of the receiver.
Parameter	<Pt> = Port number
Response	<gain> = <CHARACTER RESPONSE DATA>
Example	E4:RX1:GAIN? → MON
Note	

9.1.3 E4:RX<Pt>:FOLLow

Syntax	E4:RX<Pt>:FOLLow <follow>
Description	This command sets the receiver to follow another setup or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> NONE: Do not follow TX: Transmitter of the same port RX1: Receiver of port 1 <i>DEFault</i> = <i>NONE</i>
Response	None.
Example	E4:RX1:FOLL TX
Note	

Syntax	E4:RX<Pt>:FOLLow?
Description	This query returns whether the receiver follow another setup.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	E4:RX1:FOLL? → TX
Note	

9.1.4 E4:RX<Pt>:PCMFrame

Syntax	E4:RX<Pt>:PCMFrame <enable>
Description	This command enables or disables the PCM frame.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>ON</i>
Response	None.
Example	E4:RX1:PCMF ON
Note	

Syntax	E4:RX<Pt>:PCMFrame?
Description	This query returns whether PCM frame is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	E4:RX1:PCMF? → 1
Note	

9.1.5 E4:RX<Pt>:PATtern

Syntax	E4:RX<Pt>:PATtern <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF USER16BIT: Obsolete. For backward compatibility only. Same as USER32BIT. USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS9 PRBS11 PRBS15 PRBS20 PRBS23 PRBS29 PRBS31 QRSS20 ALL0 ALL1 ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 ALT324: Alternating 3:24 <i>DEFault = PRBS23</i>
Response	None.
Example	E4:RX1:PATT PRBS11
Note	

Syntax	E4:RX<Pt>:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	E4:RX1:PATT? → PRBS11
Note	

9.1.6 E4:RX<Pt>:PINVersion

Syntax	E4:RX<Pt>:PINVersion <inverted>
Description	This command enables or disables pattern inversion.
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	E4:RX1:PINV ON
Note	The following patterns can be inverted: PRBSxx, QRSSxx, ALL1, ALL0, ALT11, ALT13, ALT17 and UP16.

Syntax	E4:RX<Pt>:PINVersion?
Description	This query returns whether the pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inverted> = <NR1 NUMERIC RESPONSE DATA>
Example	E4:RX1:PINV? → 1
Note	

9.1.7 E4:RX<Pt>:UP16

Syntax	E4:RX<Pt>:UP16 <pattern>
Description	This command sets 16 bit user pattern.
Parameters	<Pt> = Port number <pattern> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=65535</i> <i>DEFault=0</i>
Response	None.
Example	E4:RX1:UP16 #B1111000011110000
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

9.1.8 E4:RX<Pt>:UP32

Syntax	E4:RX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATtern is USER32BIT .
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Examples	E4:RX1:UP32 "01101"
Note	

Syntax	E4:RX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	E4:RX1:UP32? → "01101"
Note	

9.1.9 E4:RX<Pt>:UP2K

Syntax	E4:RX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	E4:RX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when E4:RX2:PATT is USER2048BIT

Syntax	E4:RX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	E4:RX1:UP2K? → "12DF"
Note	

9.2 Transmitter

9.2.1 E4:TX<Pt>[:ENABled]

Syntax	E4:TX<Pt>[:ENABled] <state>
Description	This command enables or disables the transmitter.
Parameters	<Pt> = Port number <state> = <CHARACTER PROGRAM DATA> OFF ON <i>DEFault = OFF</i>
Response	None.
Examples	E4:TX ON E4:TX1:ENAB ON
Note	The ENABled command is the default node for E4:TX.

Syntax	E4:TX<Pt>[:ENABled]?
Description	This query returns whether the transmitter is enabled or disabled.
Parameter	<Pt> = Port number
Response	<state> = <CHARACTER RESPONSE DATA>
Examples	E4:TX? → ON E4:TX1:ENAB? → SDH
Note	Returns SDH if E4 is over SDH or SONET.

9.2.2 E4:TX<Pt>:FOLLow

Syntax	E4:TX<Pt>:FOLLow <follow>
Description	This command sets the transmitter setting to follow another setup or not to follow.
Parameters	<Pt> = Port number <follow> = <CHARACTER PROGRAM DATA> NONE: Do not follow TX1: Follow the setting of the port 1 transmitter <i>DEFault = NONE</i>
Response	None.
Example	E4:TX2:FOLL TX1
Note	This command is not valid for :TX1

Syntax	E4:TX<Pt>:FOLLow?
Description	This query returns whether the transmitter follow the TX1 settings.
Parameter	<Pt> = Port number
Response	<follow> = <CHARACTER RESPONSE DATA>
Example	E4:TX2:FOLL? → TX1
Note	This command is not valid for :TX1

9.2.3 E4:TX<Pt>:TIMing

Syntax	E4:TX<Pt>:TIMing <source>
Description	This command sets the timing source.
Parameters	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> INTernal: Internal timing source EXTernal: External timing source RX: Received signal on the same port <i>DEFault = INTernal</i>
Response	None.
Example	E4:TX1:TIM INT
Note	

Syntax	E4:TX<Pt>:TIMing?
Description	This query returns the timing source.
Parameter	<Pt> = Port number
Response	<source> = <CHARACTER RESPONSE DATA>
Example	E4:TX1:TIM? → INT
Note	

9.2.4 E4:TX<Pt>:FOFFset

Syntax	E4:TX<Pt>:FOFFset <offset>
Description	This command sets the frequency offset for the clock source. Unit: ppm.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> <i>MINimum=-125, MAXimum=125, DEFault=0</i> <i>Allowed suffix = ppm</i>
Response	None.
Example	E4:TX1:FOFF 0ppm
Note	

Syntax	E4:TX<Pt>:FOFFset?
Description	This query returns the frequency offset for the clock source. Unit: ppm.
Parameter	<Pt> = Port number
Response	<offset> = <NR1 NUMERIC RESPONSE DATA>
Example	E4:TX1:FOFF? → 0
Note	Returned value is in ppm.

9.2.5 E4:TX<Pt>:PCMFrame

Syntax	E4:TX<Pt>:PCMFrame <enable>
Description	This command enables or disables the PCM frame.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	E4:TX1:PCMF ON
Note	

Syntax	E4:TX<Pt>:PCMFrame?
Description	This query returns whether PCM frame is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	E4:TX1:PCMF? → 1
Note	

9.2.6 E4:TX<Pt>:PATtern

Syntax	E4:TX<Pt>:PATtern <type>
Description	This command sets the pattern type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OFF USER16BIT: Obsolete. For backward compatibility only. Same as USER32BIT. USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS9 PRBS11 PRBS15 PRBS20 PRBS23 PRBS29 PRBS31 QRSS20 ALL0 ALL1 ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 ALT324: Alternating 3:24 <i>DEFault = PRBS23</i>
Response	None.
Example	E4:TX1:PATT PRBS23
Note	

Syntax	E4:TX<Pt>:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	E4:TX1:PATT? → PRBS11
Note	

9.2.7 E4:TX<Pt>:PINVersion

Syntax	E4:TX<Pt>:PINVersion <inverted>
Description	This command sets pattern inversion.
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	E4:TX1:PINV ON
Note	

Syntax	E4:TX<Pt>:PINVersion?
Description	This query returns pattern inversion.
Parameter	<Pt> = Port number
Response	<inverted> = <NR1 NUMERIC RESPONSE DATA>
Example	E4:TX1:PINV? → 1
Note	

9.2.8 E4:TX<Pt>:UP16

Syntax	E4:TX<Pt>:UP16 <pattern>
Description	This command sets 16 bit user pattern.
Parameters	<Pt> = Port number <pattern> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=65535</i> <i>DEFault=0</i>
Response	None.
Example	E4:TX1:UP16 #B1111000011110000
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

9.2.9 E4:TX<Pt>:UP32

Syntax	E4:TX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATtern is USER32BIT .
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Examples	E4:TX1:UP32 "01101"
Note	

Syntax	E4:TX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	E4:TX1:UP32? → "01101"
Note	

9.2.10 E4:TX<Pt>:UP2K

Syntax	E4:TX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	E4:TX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when E4:TX2:PATT is USER2048BIT

Syntax	E4:TX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	E4:TX1:UP2K? → "12DF"
Note	

9.3 Stimuli

9.3.1 E4:STIMuli:TX<Pt>:ALARm

Syntax	E4:STIMuli:TX<Pt>:ALARm <alarmtype>
Description	This command sets the alarm type to generate.
Parameters	<Pt> = Port number <alarmtype> = <CHARACTER PROGRAM DATA> NALarm: No alarm NSIGnal: No signal AIS: Alarm Indication Signal NFRame: No frame DALarm: Distant alarm (RDI) NSYNc: No pattern sync <i>DEFault = NALarm</i>
Response	None.
Example	E4:STIM:TX1:ALAR NSIG
Note	

Syntax	E4:STIMuli:TX<Pt>:ALARm?
Description	This query returns the stimuli alarm type.
Parameter	<Pt> = Port number
Response	<alarmtype> = <CHARACTER RESPONSE DATA>
Example	E4:STIM:TX1:ALAR? → NSIG
Note	

9.3.2 E4:STIMuli:TX<Pt>:ERRor

Syntax	E4:STIMuli:TX<Pt>:ERRor <errordestination>
Description	This command sets the error destination.
Parameters	<Pt> = Port number <errordestination> = <CHARACTER PROGRAM DATA> FRAME: Frame PATtern: Pattern PSLip: Pattern slip <i>DEFault = FRAME</i>
Response	None.
Example	E4:STIM:TX1:ERR PATT
Note	

Syntax	E4:STIMuli:TX<Pt>:ERRor?
Description	This query returns the error destination.
Parameter	<Pt> = Port number
Response	<errordestination> = <CHARACTER RESPONSE DATA>
Example	E4:STIM:TX1:ERR? → PATT
Note	

9.3.3 E4:STIMuli:TX<Pt>:EINsert

Syntax	E4:STIMuli:TX<Pt>:EINsert <insertion>
Description	This command sets the method to insert errors.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF MANual B02: Burst · 1E-02 B03: Burst · 1E-03 B04: Burst · 1E-04 B05: Burst · 1E-05 B06: Burst · 1E-06 B07: Burst · 1E-07 <i>DEFault = OFF</i>
Response	None.
Example	E4:STIM:TX1:EINS MAN
Note	If insertion is set to MANual, errors are inserted with SYST:STIM:INS. See section 2.3.52

Syntax	E4:STIMuli:TX<Pt>:EINsert?
Description	This query returns the error insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	E4:STIM:TX1:EINS? → MAN
Note	

9.3.4 E4:STIMuli:TX<Pt>:EBLength

Syntax	E4:STIMuli:TX<Pt>:EBLength <burstlength>
Description	This command sets the error burst length to generate.
Parameters	<Pt> = Port number <burstlength> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=255, DEFault=1</i>
Response	None.
Example	E4:STIM:TX1:EBL 1
Note	

Syntax	E4:STIMuli:TX<Pt>:EBLength?
Description	This query returns the error burst length to generate.
Parameter	<Pt> = Port number
Response	<burstlength> = <NR1 NUMERIC RESPONSE DATA>
Example	E4:STIM:TX1:EBL? → 1
Note	

9.4 Status

9.4.1 E4:STATus:RX<Pt>:PSLevel?

Syntax	E4:STATus:RX<Pt>:PSLevel?
Description	This query returns physical signal level. Unit: dB.
Parameter	<Pt> = Port number
Response	<signallevel> = <STRING RESPONSE DATA>
Example	E4:STAT:RX1:PSL? → "-0.5"
Notes	If signal levels is too high, the response will be "TOO HIGH".

9.4.2 E4:STATus:RX<Pt>:PDEViation?

Syntax	E4:STATus:RX<Pt>:PDEViation?
Description	This query returns physical deviation. Units: ppm and bps.
Parameter	<Pt> = Port number
Response	<ppm> = <NR1 NUMERIC RESPONSE DATA> <bps> = <NR1 NUMERIC RESPONSE DATA>
Example	E4:STAT:RX1:PDEV? → 1,136
Note	

9.4.3 E4:STATus:RX<Pt>:PBRate?

Syntax	E4:STATus:RX<Pt>:PBRate?
Description	This query returns physical bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	E4:STAT:RX1:PBR? → 139264000
Note	

9.4.4 E4:STATus:RX<Pt>:PPBRate?

Syntax	E4:STATus:RX<Pt>:PPBRate?
Description	This query returns payload pattern bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	E4:STAT:RX1:PPBR? → 137361488
Note	

9.4.5 E4:STATus:RX<Pt>:AESummary[:EVENT]?

Syntax	E4:STATus:RX<Pt>:AESummary[:EVENT]?
Description	This query returns the E4 alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of E4:STAT:RX<Pt>:ALAR[:EVENT]? DB2 (2) = Summary bit of E4:STAT:RX<Pt>:ERR[:EVENT]? DB3 - DB16 = NOT USED
Example	E4:STAT:RX1:AES? → 1
Note	

9.4.6 E4:STATus:RX<Pt>:AESummary:CONDition?

Syntax	E4:STATus:RX<Pt>:AESummary:CONDition?
Description	This query returns the E4 alarms and errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as E4:STAT:RX<Pt>:AESummary[:EVENT]?
Example	E4:STAT:RX1:AES:COND? → 2
Note	

9.4.7 E4:STATus:RX<Pt>:ALARm[:EVENT]?

Syntax	E4:STATus:RX<Pt>:ALARm[:EVENT]?
Description	This query returns the alarms event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = No signal DB2 (2) = Alarm Indication Signal (AIS) DB3 (4) = No frame DB4 (8) = Distant DB5 (16) = No sync DB6 - DB16 = NOT USED
Example	E4:STAT:RX1:ALAR? → 2
Note	The No frame and Distant are only valid when the PCM frame is enabled (E4:RX<Pt>:PCMFrame? → 1).

9.4.8 E4:STATus:RX<Pt>:ALARm:CONDition?

Syntax	E4:STATus:RX<Pt>:ALARm:CONDition?
Description	This query returns the alarms condition register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = No signal DB2 (2) = Alarm Indication Signal (AIS) DB3 (4) = No frame DB4 (8) = Distant DB5 (16) = No sync DB6 - DB16 = NOT USED
Example	E4:STAT:RX1:ALAR:COND? → 4
Note	The No frame and Distant are only valid when the PCM frame is enabled (E4:RX<Pt>:PCMFrame? → 1).

9.4.9 E4:STATus:RX<Pt>:ERRor[:EVENT]?

Syntax	E4:STATus:RX<Pt>:ERRor[:EVENT]?
Description	This query returns the errors event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = FAS words DB2 - DB3 = NOT USED DB4 (8) = Pattern DB5 (16) = Pattern slip DB6 - DB16 = NOT USED
Example	E4:STAT:RX1:ERR? → 8
Note	The FAS words is only valid when PCM frame is enabled (E4:RX<Pt>:PCMFrame? → 1).

9.4.10 E4:STATus:RX<Pt>:ERRor:CONDition?

Syntax	E4:STATus:RX<Pt>:ERRor:CONDition?
Description	This query returns the errors condition register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = FAS words DB2 - DB3 = NOT USED DB4 (8) = Pattern DB5 (16) = Pattern slip DB6 - DB16 = NOT USED
Example	E4:STAT:RX1:ERR:COND? → 8
Notes	The FAS words is only valid when the PCM frame is enabled (E4:RX<Pt>:PCMFrame? → 1).

9.5 Results

9.5.1 E4:RX<Pt>:IFETch?

Syntax	E4:RX<Pt>:IFETch? <parameters>
Description	This query fetches an interval if available.
Parameters	<Pt> = Port number {(<parameter>} + {,}*) = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. Alarms NSIG: No signal. Response: <Seconds>,<Ratio> AIS: Alarm indication signal. Response: <Seconds>,<Ratio> NFR: No frame. Response: <Seconds>,<Ratio> DAL: Distant alarm. Response: <Seconds>,<Ratio> NSYN: No sync. Response: <Seconds>,<Ratio> Errors FASW: FAS words. Response: <Count>,<Ratio> PATT: PAttern. Response: <Count>,<Ratio> PSL: Pattern Slip. Response: <Count>,<Ratio> PBL: Pattern block. Response: <Count>,<Ratio> Rx frequency DEV: Frequency deviation. Response: <ppm> DIFF: Frequency difference (RX1-RX2). Response: <ppm> (Only for RX1, RX2 is always NaN (section 1.6.1)) FAS performance errors FES: FAS ES. Response: <Count>,<Ratio%> FSES: FAS SES. Response: <Count>,<Ratio%> FBBE: FAS BBE. Response: <Count>,<Ratio%> FALS: FAS ALS. Response: <Count>,<Ratio%> FUAT: FAS UAT. Response: <Count>,<Ratio%> FAVT: FAS AVT. Response: <Count>,<Ratio%> FEFS: FAS EFS. Response: <Count>,<Ratio%> Pattern performance errors PES: Pattern ES. Response: <Count>,<Ratio%> PSES: Pattern SES. Response: <Count>,<Ratio%> PBBE: Pattern BBE. Response: <Count>,<Ratio%> PALS: Pattern ALS. Response: <Count>,<Ratio%> PUAT: Pattern UAT. Response: <Count>,<Ratio%> PAVT: Pattern AVT. Response: <Count>,<Ratio%> PEFS: Pattern EFS. Response: <Count>,<Ratio%>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Expression format: Numeric List Each result is formatted according to the specification in the parameter field. Values that are not relevant or applicable for the current measurement return NaN (section 1.6.1).
Example	E4:RX1:IFET? (FES,PATT) → (2,0.5),(4,0.25)
Notes	This command fetches the result from the interval selected by the MEASurement:SETup:SElect command (see section 18.2.2). NFR, DAL, FASW, FASB will only return NaN (section 1.6.1), if the PCM frame is disabled (E4:RX<Pt>:PCMFrame? → 0). If requested result is not available, NaN (section 1.6.1) is returned. If there is one or more results, the last ",," is always removed.

9.6 RTD

This section document commands to retrieve Round Trip Delay measurement results. Commands for general RTD settings are described in section 17.1 on page 1003.

9.6.1 E4:RTD:RX<Pt>:NUMBer?

Syntax	E4:RTD:RX<Pt>:NUMBer?
Description	This query returns the number of the RTD data.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	E4:RTD:RX1:NUMB? → 2
Note	

9.6.2 E4:RTD:RX<Pt>:ATIMe?

Syntax	E4:RTD:RX<Pt>:ATIMe?
Description	This query returns the average time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	E4:RTD:RX1:ATIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

9.6.3 E4:RTD:RX<Pt>:MTIMe?

Syntax	E4:RTD:RX<Pt>:MTIMe?
Description	This query returns the maximum time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA> <limit exceeded> = <NR1 NUMERIC RESPONSE DATA>
Example	E4:RTD:RX1:MTIM? → 1.0,0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

9.6.4 E4:RTD:RX<Pt>:LTIMe?

Syntax	E4:RTD:RX<Pt>:LTIMe?
Description	This query returns the least (minimum) time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	E4:RTD:RX1:LTIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

Chapter 10

SDH

Use `MEAS:SET:PORT<Pt>:TERM` to change the SDH/SONET terminology (see section [18.2.1](#)).

10.1 Receiver

10.1.1 SDH:RX<Pt>:INTerface

Syntax	SDH:RX<Pt>:INTerface <mode>
Description	This command sets the used interface or switches off the receiver.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Disables receiver ELECtrical: Electrical interface SFP: SFP/SFP+ optical interface CFP: CFP optical interface OPTical: Obsolete. For CMA 3000 backward compatibility only. Same as SFP <i>DEFault = OFF</i>
Response	None.
Example	SDH:RX1:INT OFF
Note	

Syntax	SDH:RX<Pt>:INTerface?
Description	This query returns the used interface.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SDH:RX1:INT? → OFF
Note	Returns OTN when SDH over OTN.

10.1.2 SDH:RX<Pt>:STMLevel

Syntax	SDH:RX<Pt>:STMLevel <level>
Description	This command sets the STM level of the SDH receiver.
Parameters	<Pt> = Port number <level> = <CHARACTER PROGRAM DATA> 1: STM-1 signal. 4: STM-4 signal. 16: STM-16 signal. 64: STM-64 signal. 256: STM-256 signal. PRBSTRANS: Trans.(PRBS). NULLTRANS: Trans.(NULL). <i>DEFault = 1</i>
Response	None.
Example	SDH:RX1:STML 1
Note	Setting the STM level may change the VC-4 concatenation level.

Syntax	SDH:RX<Pt>:STMLevel?
Description	This query returns the STM level of the SDH receiver.
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:RX1:STMLevel? → 1
Note	

10.1.3 SDH:RX<Pt>:AUGroup

Syntax	SDH:RX<Pt>:AUGroup <aug>
Description	This command sets the AU Group(s) to be used in the signal structure.
Parameters	<Pt> = Port number <aug> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 768, DEFault = 1</i>
Response	None.
Example	SDH:RX1:AUGR 1
Note	The specified AUG cannot exceed the STM level divided by the VC-4 concatenation level.

Syntax	SDH:RX<Pt>:AUGroup?
Description	This query returns AU Group(s) used in the signal structure.
Parameter	<Pt> = Port number
Response	<aug> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:RX1:AUGR? → 1
Note	

10.1.4 SDH:RX<Pt>:CONCatenation

Syntax	SDH:RX<Pt>:CONCatenation <level>
Description	This command sets the VC concatenation level.
Parameters	<Pt> = Port number <level> = <CHARACTER PROGRAM DATA> VC3 VC4 4C 16C 64C 256C <i>DEFault = VC4</i>
Response	None.
Example	SDH:RX1:CONC VC4
Note	Setting the VC concatenation level may change the STM level.

Syntax	SDH:RX<Pt>:CONCatenation?
Description	This query returns the VC concatenation level.
Parameter	<Pt> = Port number
Response	<level> = <CHARACTER RESPONSE DATA>
Example	SDH:RX1:CONC? → VC4
Note	

10.1.5 SDH:RX<Pt>:CONTainer

Syntax	SDH:RX<Pt>:CONTainer <type>
Description	This command sets the container type (container-n).
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> C3 C4 C11 C12 <i>DEFault = C4</i>
Response	None.
Example	SDH:RX1:CONT C4
Note	Setting the container type.

Syntax	SDH:RX<Pt>:CONTainer?
Description	This query returns the container type (container-n).
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SDH:RX1:CONT? → 4C
Note	

10.1.6 SDH:RX<Pt>:SSTRucture

Syntax	SDH:RX<Pt>:SSTRucture <structure>
Description	This command sets the expected SDH signal structure.
Parameters	<Pt> = Port number <structure> = <CHARACTER PROGRAM DATA> BULK: Bulk data in the VC-4. E1: E1 signal in a VC-12 in one or all AU-4's E3: E3 signal in a VC-3 in one or all AU-4's DS1: DS1 signal in a VC-11 in one or all AU-4's DS3: DS3 signal in a VC-3 in one or all AU-4's E4: E4 signal in a VC-4 in one or all AU-4's <i>DEFault = BULK</i>
Response	None.
Example	SDH:RX1:SSTR BULK
Note	Choosing any of the interfaces above requires the corresponding option to be present.

Syntax	SDH:RX<Pt>:SSTRucture?
Description	This query returns the expected SDH signal structure.
Parameter	<Pt> = Port number
Response	<structure> = <CHARACTER RESPONSE DATA>
Example	SDH:RX1:SSTR? → BULK
Note	

10.1.7 SDH:RX<Pt>:PATtern

Syntax	SDH:RX<Pt>:PATtern <pattern>
Description	This command sets the pattern to be expected as payload when SSTRucture is BULK.
Parameters	<Pt> = Port number <pattern> = <CHARACTER PROGRAM DATA> OFF USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS9: PRBS-9 pattern. PRBS11: PRBS-11 pattern. PRBS15: PRBS-15 pattern. PRBS20: PRBS-20 pattern. PRBS23: PRBS23 pattern. PRBS29: PRBS-29 pattern. PRBS31: PRBS-31 pattern. ALL0: Pattern of all zeros. ALL1: Pattern of all ones. ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 B2IN8: Random pattern with two ones for every eight bits. <i>DEFault = PRBS23</i>
Response	None.
Example	SDH:RX1:PATT PRBS23
Note	

Syntax	SDH:RX<Pt>:PATtern?
Description	This query returns the pattern to be expected as payload when SSTRucture is BULK.
Parameter	<Pt> = Port number
Response	<pattern> = <CHARACTER RESPONSE DATA>
Example	SDH:RX1:PATT? → PRBS23
Note	

10.1.8 SDH:RX<Pt>:UP16

Syntax	SDH:RX<Pt>:UP16 <pattern>
Description	This command sets the 16 bit user pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Valid characters: '0' and '1' The string must consist of 1 to 16 characters.
Response	None.
Example	SDH:RX1:UP16 "101101"
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

10.1.9 SDH:RX<Pt>:UP32

Syntax	SDH:RX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATTern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Examples	SDH:RX1:UP32 "01101"
Note	

Syntax	SDH:RX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	SDH:RX1:UP32? → "01101"
Note	

10.1.10 SDH:RX<Pt>:UP2K

Syntax	SDH:RX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	SDH:RX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when SDH:RX1:PATT is USER2048BIT

Syntax	SDH:RX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	SDH:RX1:UP2K? → "12DF"
Note	

10.1.11 SDH:RX<Pt>:PINVersion

Syntax	SDH:RX<Pt>:PINVersion <inverted>
Description	This command enables or disables PRBS pattern inversion (when SSTRucture is BULK).
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	SDH:RX1:PINV OFF
Note	

Syntax	SDH:RX<Pt>:PINVersion?
Description	This query returns whether the PRBS pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inverted> = <BOOLEAN RESPONSE DATA>
Example	SDH:RX1:PINV? → 0
Note	

10.1.12 SDH:RX<Pt>:TCM

Syntax	SDH:RX<Pt>:TCM <mode>
Description	This command sets the Tandem Connection Monitoring mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Off VC4: N1 (VC-4) VC3: N1 (VC-3) VC12: N2 (VC-12) VC11: N2 (VC-12) <i>DEFault = OFF</i>
Response	None.
Example	SDH:RX1:TCM OFF
Note	This command requires the TCM option to be present.

Syntax	SDH:RX<Pt>:TCM?
Description	This query returns Tandem Connection Monitoring mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SDH:RX1:TCM? → OFF
Note	

10.1.13 SDH:RX<Pt>:TUG3

Syntax	SDH:RX<Pt>:TUG3 <id>
Description	This command sets the TUG-3 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: TUG-3 number one. 2: TUG-3 number two. 3: TUG-3 number three. <i>MINimum = 1, MAXimum = 3, DEFault = 1</i>
Response	None.
Example	SDH:RX1:TUG3 1
Note	This value influences the channel number.

Syntax	SDH:RX<Pt>:TUG3?
Description	This query returns TUG3 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:RX1:TUG3? → 1
Note	

10.1.14 SDH:RX<Pt>:TUG2

Syntax	SDH:RX<Pt>:TUG2 <id>
Description	This command sets the TUG-2 number for signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: TUG-2 number one. 2: TUG-2 number two. ... 7: TUG-2 number seven. <i>MINimum = 1, MAXimum = 7, DEFault = 1</i>
Response	None.
Example	SDH:RX1:TUG2 1
Note	This value influences the channel number.

Syntax	SDH:RX<Pt>:TUG2?
Description	This query returns TUG2 number for signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:RX1:TUG2? → 1
Note	

10.1.15 SDH:RX<Pt>:TU12

Syntax	SDH:RX<Pt>:TU12 <id>
Description	This command sets the TU-12 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: TU-12 number one. 2: TU-12 number two. 3: TU-12 number three. <i>MINimum = 1, MAXimum = 3, DEFault = 1</i>
Response	None.
Example	SDH:RX1:TU12 1
Note	This value influences the channel number.

Syntax	SDH:RX<Pt>:TU12?
Description	This query returns TU-12 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:RX1:TU12? → 1
Note	

10.1.16 SDH:RX<Pt>:TU11

Syntax	SDH:RX<Pt>:TU11 <id>
Description	This command sets the TU-11 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: TU-11 number one. 2: TU-11 number two. 3: TU-11 number three. 4: TU-11 number four. <i>MINimum = 1, MAXimum = 4, DEFault = 1</i>
Response	None.
Example	SDH:RX1:TU11 1
Note	This value influences the channel number.

Syntax	SDH:RX<Pt>:TU11?
Description	This query returns TU-11 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:RX1:TU11? → 1
Note	

10.1.17 SDH:RX<Pt>:CHANnel

Syntax	SDH:RX<Pt>:CHANnel <id>
Description	This command sets the channel number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=84, DEFault = 1</i>
Response	None.
Example	SDH:RX1:CHAN 1
Note	This value influences the TUG-3, TUG-2, TU-12 and TU-11 numbers.

Syntax	SDH:RX<Pt>:CHANnel?
Description	This query returns the channel number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:RX1:CHAN? → 1
Note	

10.1.18 SDH:RX<Pt>:MAPPing

Syntax	SDH:RX<Pt>:MAPPing <type>
Description	This command sets the mapping type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> SYNChronous: Synchronous mapping. ASYNchronous: Asynchronous mapping. <i>DEFault = SYNC</i>
Response	None.
Example	SDH:RX1:MAPP SYNC
Note	

Syntax	SDH:RX<Pt>:MAPPing?
Description	This query returns the mapping type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SDH:RX1:MAPP? → SYNC
Note	

10.1.19 SDH:RX<Pt>:GAIN

Syntax	SDH:RX<Pt>:GAIN <type>
Description	This command sets the receiver gain.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> TERMinate: Frequency dependent AGC. MONitor: Frequency linear AGC. <i>DEFault = TERMinate</i>
Response	None.
Example	SDH:RX1:GAIN TERM
Note	

Syntax	SDH:RX<Pt>:GAIN?
Description	This query returns the receiver gain.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SDH:RX1:GAIN? → TERM
Note	

10.1.20 SDH:RX<Pt>:FOLLow

Syntax	SDH:RX<Pt>:FOLLow <mode>
Description	This command sets the receiver setup to follow another setup or not to follow.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> NONE: Do not follow. TX: Follows setup of the Tx port. RX1: Follows setup of the Rx port1. <i>DEFault = NONE</i>
Response	None.
Example	SDH:RX1:FOLL NONE
Note	

Syntax	SDH:RX<Pt>:FOLLow?
Description	This query returns the receiver setup to follow another setup or not to follow.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SDH:RX1:FOLL? → NONE
Note	

10.1.21 SDH:RX<Pt>:MEASurement:HPLM

Syntax	SDH:RX<Pt>:MEASurement:HPLM <enable>
Description	This command enables or disables HP-PLM measurement.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	SDH:RX1:MEAS:HPLM ON
Note	

Syntax	SDH:RX<Pt>:MEASurement:HPLM?
Description	This query returns whether HP-PLM measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	SDH:RX1:MEAS:HPLM? → 1
Note	

10.1.22 SDH:RX<Pt>:MEASurement:LPLM

Syntax	SDH:RX<Pt>:MEASurement:LPLM <enable>
Description	This command enables or disables LP-PLM measurement.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	SDH:RX1:MEAS:LPLM ON
Note	

Syntax	SDH:RX<Pt>:MEASurement:LPLM?
Description	This query returns whether LP-PLM measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	SDH:RX1:MEAS:LPLM? → 1
Note	

10.2 Transmitter

10.2.1 SDH:TX<Pt>:INTErface

Syntax	SDH:TX<Pt>:INTErface <mode>
Description	This command sets the used interface of the transmitter.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> ELECtrical: Electrical interface SFP: SFP/SFP+ optical interface CFP: CFP optical interface <i>DEFault = ELEC</i>
Response	None.
Example	SDH:TX1:INT SFP
Note	

Syntax	SDH:TX<Pt>:INTErface?
Description	This query returns the used interface.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:INT? → SFP
Note	

10.2.2 SDH:TX<Pt>[:ENABle]

Syntax	SDH:TX<Pt>[:ENABle] <mode>
Description	This command sets the mode of the transmitter.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Turn off the transmitter. NORMal: Normal transmission mode using the configured signal. THROugh: Through mode. The signal from the receiver is transmitted. OTHROugh: OH overwrite through mode. THA: Obsolete. For CMA 3000 backward compatibility only. Same as THROugh. <i>DEFault = OFF</i>
Response	None.
Example	SDH:TX1 NORM
Note	

Syntax	SDH:TX<Pt>[:ENABle]?
Description	This query returns the mode of the transmitter.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1? → NORM
Note	

10.2.3 SDH:TX<Pt>:OPTical

Syntax	SDH:TX<Pt>:OPTical <mode>
Description	Obsolete. For CMA 3000 backward compatibility only. Same as SDH:TX<Pt>:INT SFP and SDH:TX<Pt>
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA>
Response	None.
Example	SDH:TX1:OPT NORM
Note	Compared to CMA 3000 there is no longer a suffix on the last node.

Syntax	SDH:TX<Pt>:OPTical?
Description	Obsolete. For CMA 3000 backward compatibility only. Same as SDH:TX<Pt>?
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:OPT? → NORM
Note	

10.2.4 SDH:TX<Pt>:ELECtrical

Syntax	SDH:TX<Pt>:ELECtrical <mode>
Description	Obsolete. For CMA 3000 backward compatibility only. Same as SDH:TX<Pt>:INT ELEC and SDH:TX<Pt>
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA>
Response	None.
Example	SDH:TX1:ELEC NORM
Note	Compared to CMA 3000 mode=THB is no longer supported.

Syntax	SDH:TX<Pt>:ELECtrical?
Description	Obsolete. For CMA 3000 backward compatibility only. Same as SDH:TX<Pt>?
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:ELEC? → NORM
Note	

10.2.5 SDH:TX<Pt>:STMLevel

Syntax	SDH:TX<Pt>:STMLevel <level>
Description	This command sets the STM level of the transmitted SDH signal.
Parameters	<Pt> = Port number <level> = <CHARACTER PROGRAM DATA> 1: STM-1 signal. 4: STM-4 signal. 16: STM-16 signal. 64: STM-64 signal. 256: STM-256 signal. PRBSTRANS: Trans.(PRBS). NULLTRANS: Trans.(NULL). <i>DEFault = 1</i>
Response	None.
Example	SDH:TX1:STML 1
Note	Setting the STM level may change the VC-4 concatenation level.

Syntax	SDH:TX<Pt>:STMLevel?
Description	This query returns the STM level of the transmitted SDH signal.
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:TX1:STML? → 1
Note	

10.2.6 SDH:TX<Pt>:AUGroup

Syntax	SDH:TX<Pt>:AUGroup <value>
Description	This command sets the AUG where the test signal is inserted.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> ALL 1 to 768 <i>DEFault</i> = <i>ALL</i>
Response	None.
Example	SDH:TX1:AUGR ALL
Note	The specified AUG cannot exceed the STM level divided by the VC-4 concatenation level.

Syntax	SDH:TX<Pt>:AUGroup?
Description	This query returns the AUG where the test signal has been inserted.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:TX1:AUGR? → ALL
Note	

10.2.7 SDH:TX<Pt>:CONCatenation

Syntax	SDH:TX<Pt>:CONCatenation <level>
Description	This command sets the VC concatenation level.
Parameters	<Pt> = Port number <level> = <CHARACTER PROGRAM DATA> VC3 VC4 4C 16C 64C 256C <i>DEFault</i> = <i>VC4</i>
Response	None.
Example	SDH:TX1:CONC 4C
Note	Setting the VC concatenation level may change the STM level.

Syntax	SDH:TX<Pt>:CONCatenation?
Description	This query returns the VC concatenation level.
Parameter	<Pt> = Port number
Response	<level> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:CONC? → 4C
Note	

10.2.8 SDH:TX<Pt>:CONTainer

Syntax	SDH:TX<Pt>:CONTainer <type>
Description	This command sets the container type (container-n).
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> C3 C4 C11 C12 <i>DEFault = C4</i>
Response	None.
Example	SDH:TX1:CONT C4
Note	Setting the container type.

Syntax	SDH:TX<Pt>:CONTainer?
Description	This query returns the container type (container-n).
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:CONT? → 4C
Note	

10.2.9 SDH:TX<Pt>:SSTRucture

Syntax	SDH:TX<Pt>:SSTRucture <structure>
Description	This command sets the SDH signal structure.
Parameters	<Pt> = Port number <structure> = <CHARACTER PROGRAM DATA> BULK: Bulk data in the VC-4. E1: E1 signal in a VC-12 in one or all AU-4's E3: E3 signal in a VC-3 in one or all AU-4's DS1: DS1 signal in a VC-11 in one or all AU-4's DS3: DS3 signal in a VC-3 in one or all AU-4's E4: E4 signal in a VC-4 in one or all AU-4's <i>DEFault = BULK</i>
Response	None.
Example	SDH:TX1:SSTR BULK
Note	Choosing any of the interfaces above requires the corresponding option to be present.

Syntax	SDH:TX<Pt>:SSTRucture?
Description	This query returns the SDH signal structure.
Parameter	<Pt> = Port number
Response	<structure> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:SSTR? → BULK
Note	

10.2.10 SDH:TX<Pt>:PATtern

Syntax	SDH:TX<Pt>:PATtern <pattern>
Description	This command sets the pattern to be used as payload when SSTRucture is BULK.
Parameters	<Pt> = Port number <pattern> = <CHARACTER PROGRAM DATA> OFF USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS9: PRBS-9 pattern. PRBS11: PRBS-11 pattern. PRBS15: PRBS-15 pattern. PRBS20: PRBS-20 pattern. PRBS23: PRBS23 pattern. PRBS29: PRBS-29 pattern. PRBS31: PRBS-31 pattern. ALL0: Pattern of all zeros. ALL1: Pattern of all ones. ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 B2IN8: Random pattern with two ones for every eight bits. <i>DEFault = PRBS23</i>
Response	None.
Example	SDH:TX1:PATT PRBS23
Note	

Syntax	SDH:TX<Pt>:PATtern?
Description	Queries the pattern to be used as payload when SSTRucture is BULK.
Parameter	<Pt> = Port number
Response	<pattern> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:PATT? → PRBS23
Note	

10.2.11 SDH:TX<Pt>:UP16

Syntax	SDH:TX<Pt>:UP16 <pattern>
Description	This command sets the 16 bit user pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Valid characters: '0' and '1' The string must consist of 1 to 16 characters.
Response	None.
Example	SDH:TX1:UP16 "101101"
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

10.2.12 SDH:TX<Pt>:UP32

Syntax	SDH:TX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATTern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Examples	SDH:TX1:UP32 "01101"
Note	

Syntax	SDH:TX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	SDH:TX1:UP32? → "01101"
Note	

10.2.13 SDH:TX<Pt>:UP2K

Syntax	SDH:TX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	SDH:TX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when SDH:TX1:PATT is USER2048BIT

Syntax	SDH:TX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	SDH:TX1:UP2K? → "12DF"
Note	

10.2.14 SDH:TX<Pt>:PINVersion

Syntax	SDH:TX<Pt>:PINVersion <inverted>
Description	This command enables or disables PRBS pattern inversion (when SSTRucture is BULK).
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	SDH:TX1:PINV OFF
Note	

Syntax	SDH:TX<Pt>:PINVersion?
Description	This query returns whether the PRBS pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inverted> = <BOOLEAN RESPONSE DATA>
Example	SDH:TX1:PINV? → 0
Note	

10.2.15 SDH:TX<Pt>:TIMing

Syntax	SDH:TX<Pt>:TIMing <source>
Description	This command sets the timing source.
Parameters	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> INTernal: Internal clock. EXTernal: External clock. RX: Received Rx signal clock. <i>DEFault = INT</i>
Response	None.
Example	SDH:TX1:TIM INT
Note	

Syntax	SDH:TX<Pt>:TIMing?
Description	This query returns the timing source.
Parameter	<Pt> = Port number
Response	<source> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:TIM? → INT
Note	

10.2.16 SDH:TX<Pt>:TCM

Syntax	SDH:TX<Pt>:TCM <mode>
Description	This command sets the TCM mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Off VC4: N1 (VC-4) VC3: N1 (VC-3) VC12: N2 (VC-12) VC11: N2 (VC-12) <i>DEFault = OFF</i>
Response	None.
Example	SDH:TX1:TCM OFF
Note	

Syntax	SDH:TX<Pt>:TCM?
Description	Queries the TCM mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:TCM? → OFF
Note	

10.2.17 SDH:TX<Pt>:TUG3

Syntax	SDH:TX<Pt>:TUG3 <id>
Description	This command sets the TUG-3 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: TUG-3 number one. 2: TUG-3 number two. 3: TUG-3 number three. <i>MINimum = 1, MAXimum = 3, DEFault = 1</i>
Response	None.
Example	SDH:TX1:TUG3 1
Note	This value influences the channel number.

Syntax	SDH:TX<Pt>:TUG3?
Description	This query returns TUG3 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:TX1:TUG3? → 1
Note	

10.2.18 SDH:TX<Pt>:TUG2

Syntax	SDH:TX<Pt>:TUG2 <id>
Description	This command sets the TUG-2 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: TUG-2 number one. 2: TUG-2 number two. ... 7: TUG-2 number seven. <i>MINimum = 1, MAXimum = 7, DEFault = 1</i>
Response	None.
Example	SDH:TX1:TUG2 1
Note	This value influences the channel number.

Syntax	SDH:TX<Pt>:TUG2?
Description	This query returns TUG2 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:TX1:TUG2? → 1
Note	

10.2.19 SDH:TX<Pt>:TU12

Syntax	SDH:TX<Pt>:TU12 <id>
Description	This command sets the TU-12 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: TU-12 number one. 2: TU-12 number two. 3: TU-12 number three. <i>MINimum = 1, MAXimum = 3, DEFault = 1</i>
Response	None.
Example	SDH:TX1:TU12 1
Note	This value influences the channel number.

Syntax	SDH:TX<Pt>:TU12?
Description	This query returns TU-12 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:TX1:TU12? → 1
Note	

10.2.20 SDH:TX<Pt>:TU11

Syntax	SDH:TX<Pt>:TU11 <id>
Description	This command sets the TU-11 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: TU-11 number one. 2: TU-11 number two. 3: TU-11 number three. 4: TU-11 number four. <i>MINimum = 1, MAXimum = 4, DEFault = 1</i>
Response	None.
Example	SDH:TX1:TU11 1
Note	This value influences the channel number.

Syntax	SDH:TX<Pt>:TU11?
Description	This query returns TU-11 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:TX1:TU11? → 1
Note	

10.2.21 SDH:TX<Pt>:CHANnel

Syntax	SDH:TX<Pt>:CHANnel <id>
Description	This command sets the channel number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=84, DEFault = 1</i>
Response	None.
Example	SDH:TX1:CHAN 1
Note	The value influences the TUG-3, TUG-2 and TU-12 numbers.

Syntax	SDH:TX<Pt>:CHANnel?
Description	This query returns the channel number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:TX1:CHAN? → 1
Note	

10.2.22 SDH:TX<Pt>:MAPPing

Syntax	SDH:TX<Pt>:MAPPing <type>
Description	This command sets the mapping type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> SYNChronous: Synchronous mapping. ASYNchronous: Asynchronous mapping. <i>DEFault = SYNC</i>
Response	None.
Example	SDH:TX1:MAPP SYNC
Note	

Syntax	SDH:TX<Pt>:MAPPing?
Description	This query returns the mapping type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:MAPP? → SYNC
Note	

10.2.23 SDH:TX<Pt>:SOH:DEFault

Syntax	SDH:TX<Pt>:SOH:DEFault
Description	This command sets all STM SOH bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	SDH:TX1:SOH:DEF
Note	There is no query version of this command.

10.2.24 SDH:TX<Pt>:SOH:TRACe

Syntax	SDH:TX<Pt>:SOH:TRACe <string>[,<idlechar>]
Description	This command sets the SOH trace (J0) to the specified string.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: The string to be used as section trace string. <i>DEFault</i> = "Message_Test_J0" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SDH:TX1:SOH:TRAC "Message_Test_J0",#H20
Note	If the entered trace string is more than 15 characters long, the string will be truncated.

 
Syntax	SDH:TX<Pt>:SOH:TRACe?
Description	This query returns the SOH trace for string and idle char.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:SOH:TRAC? → "Message_Test_J0",#H20
Note	

10.2.25 SDH:TX<Pt>:SOH:TRACe:CRC

Syntax	SDH:TX<Pt>:SOH:TRACe:CRC <mode>
Description	This command sets the SOH trace (J0) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	SDH:TX1:SOH:TRAC:CRC ON
Note	

Syntax	SDH:TX<Pt>:SOH:TRACe:CRC?
Description	This query returns the mode of the SOH trace (J0) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <BOOLEAN RESPONSE DATA>
Example	SDH:TX1:SOH:TRAC:CRC? → 1
Note	

10.2.26 SDH:TX<Pt>:SOH

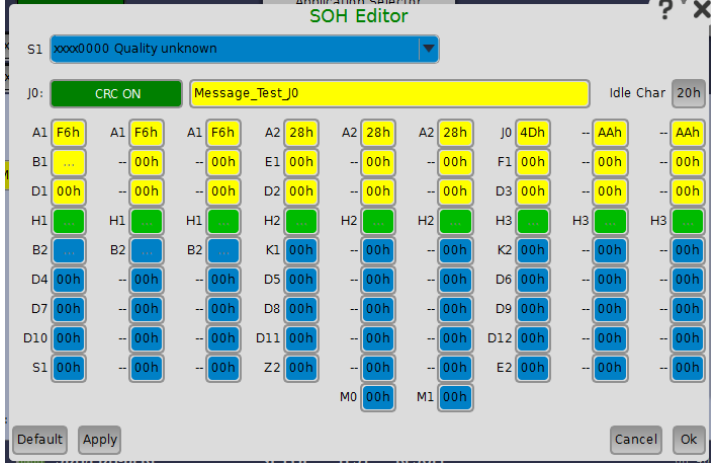Syntax	SDH:TX<Pt>:SOH <SOH-byte>,<value1>[,<value2>[,<value3>]]
Description	This command sets the value of the specified bytes in the SOH.
Parameters	<Pt> = Port number <SOH-byte> = <CHARACTER PROGRAM DATA> A1: 3 bytes. A2: 3 bytes. J0: 3 bytes. Note: The defined trace string will be disabled. B1: 2 bytes. <value3> is ignored. E1: 3 bytes. F1: 3 bytes. D1: 3 bytes. D2: 3 bytes. D3: 3 bytes. K1: 3 bytes. K2: 3 bytes. D4: 3 bytes. D5: 3 bytes. D6: 3 bytes. D7: 3 bytes. D8: 3 bytes. D9: 3 bytes. D10: 3 bytes. D11: 3 bytes. D12: 3 bytes. S1: 3 bytes. Z2: 3 bytes. E2: 3 bytes. M0: 1 byte. <value2> and <value3> are ignored. ¹ M1: 1 byte. <value2> and <value3> are ignored.  <value1> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255 <value2> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255 <value3> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255
Response	None.
Examples	SDH:TX1:SOH A1,0,0,0 SDH:TX1:SOH D7,253,32,26 SDH:TX1:SOH B1,4,5 SDH:TX1:SOH M1,0
Note	¹ Only valid for SDH:TX<Pt>:STMLevel = 64 or 256.

Syntax	SDH:TX<Pt>:SOH? <SOH-byte>
Description	This query returns the value of the specified bytes in the SOH.
Parameters	<Pt> = Port number <SOH-byte> = <CHARACTER PROGRAM DATA>
Response	<value1> = <HEXADECIMAL NUMERIC RESPONSE DATA> [,<value2> = <HEXADECIMAL NUMERIC RESPONSE DATA> [,<value3> = <HEXADECIMAL NUMERIC RESPONSE DATA>]]
Examples	SDH:TX1:SOH? A1 → #H00,#H00,#H00 SDH:TX1:SOH? D7 → #HFD,#H20,#H1A SDH:TX1:SOH? B1 → #H04,#H05 SDH:TX1:SOH? M1 → #H00
Note	

10.2.27 SDH:TX<Pt>:VC4:POH:DEFault

Syntax	SDH:TX<Pt>:VC4:POH:DEFault
Description	This command sets all VC-4 path overhead bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	SDH:TX1:VC4:POH:DEF
Note	There is no query version of this command.

10.2.28 SDH:TX<Pt>:VC4:POH:TRACe

Syntax	SDH:TX<Pt>:VC4:POH:TRACe <string>[,<idlechar>]
Description	This command sets the VC-4 path trace (J1) to the specified string and its idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: The string to be used as path trace string. <i>DEFault</i> = "Message_Test_J1" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SDH:TX1:VC4:POH:TRAC "Message_Test_J1",#H20
Note	If the entered trace string is more than 15 characters long, the string will be truncated.

Syntax	SDH:TX<Pt>:VC4:POH:TRACe?
Description	This query returns the VC-4 path trace text and idle char.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:VC4:POH:TRAC? → "Message_Test_J1",#H20
Note	

10.2.29 SDH:TX<Pt>:VC4:POH:TRACe:CRC

Syntax	SDH:TX<Pt>:VC4:POH:TRACe:CRC <mode>
Description	This command sets the section overhead trace (J1) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	SDH:TX1:VC4:POH:TRAC:CRC ON
Note	

Syntax	SDH:TX<Pt>:VC4:POH:TRACe:CRC?
Description	This query returns the mode of the overhead trace (J1) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <BOOLEAN RESPONSE DATA>
Example	SDH:TX1:VC4:POH:TRAC:CRC? → 1
Note	

10.2.30 SDH:TX<Pt>:VC4:POH:TTCM

Syntax	SDH:TX<Pt>:VC4:POH:TTCM <string>[,<idlechar>]
Description	This command sets the VC-4 TCM trace (N1) to the specified string and its idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Apid_TCM_N1" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SDH:TX1:VC4:POH:TTCM "Apid_TCM_N1",#H20
Note	

Syntax	SDH:TX<Pt>:VC4:POH:TTCM?
Description	This query returns the VC-4 TCM trace text and idle char.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:VC4:POH:TTCM? → "Apid_TCM_N1",#H20
Note	

10.2.31 SDH:TX<Pt>:VC4:POH

Syntax	SDH:TX<Pt>:VC4:POH <POH-byte>,<value>
Description	This command sets the value of the specified byte in the VC-4 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA> C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. F3: F3 byte. K3: K3 byte. N1: N1 byte. <value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255
Response	None.
Example	SDH:TX1:VC4:POH C2,0
Note	

Syntax	SDH:TX<Pt>:VC4:POH? <POH-byte>
Description	This query returns the value of the specified byte in the VC-4 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA>
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Examples	SDH:TX1:VC4:POH? C2 → #H00 SDH:TX1:VC4:POH? H4 → #HFF
Note	

10.2.32 SDH:TX<Pt>:VC3:POH:DEFault

Syntax	SDH:TX<Pt>:VC3:POH:DEFault
Description	This command sets all VC-3 path overhead bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	SDH:TX1:VC3:POH:DEF
Note	There is no query version of this command.

10.2.33 SDH:TX<Pt>:VC3:POH:TRACe

Syntax	SDH:TX<Pt>:VC3:POH:TRACe <string>[,<idlechar>]
Description	This command sets the VC-3 path trace (J1) to the specified string.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Message_Test_J1" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SDH:TX1:VC3:POH:TRAC "Message_Test_J1",#H20
Note	

Syntax	SDH:TX<Pt>:VC3:POH:TRACe?
Description	This query returns the VC-3 path trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:VC3:POH:TRAC? → "Message_Test_J1",#H20
Note	

10.2.34 SDH:TX<Pt>:VC3:POH:TRACe:CRC

Syntax	SDH:TX<Pt>:VC3:POH:TRACe:CRC <mode>
Description	This command sets the section overhead trace (J1) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	SDH:TX1:VC3:POH:TRAC:CRC ON
Note	

Syntax	SDH:TX<Pt>:VC3:POH:TRACe:CRC?
Description	This query returns the mode of the overhead trace (J1) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <BOOLEAN RESPONSE DATA>
Example	SDH:TX1:VC3:POH:TRAC:CRC? → 1
Note	

10.2.35 SDH:TX<Pt>:VC3:POH:TTCM

Syntax	SDH:TX<Pt>:VC3:POH:TTCM <string>[,<idlechar>]
Description	This command sets the VC-3 TCM trace (N1) to the specified string, and the idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Apid_TCM_N1" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SDH:TX1:VC3:POH:TTCM "Apid_TCM_N1",#H20
Note	

Syntax	SDH:TX<Pt>:VC3:POH:TTCM?
Description	This query returns the VC-3 TCM trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:VC3:POH:TTCM? → "Apid_TCM_N1",#H20
Note	

10.2.36 SDH:TX<Pt>:VC3:POH

Syntax	SDH:TX<Pt>:VC3:POH <POH-byte>,<value>
Description	This command sets the value of the specified byte in the VC-3 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA> C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. F3: F3 byte. K3: K3 byte. N1: N1 byte. Only available when there is no TCM. <value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255
Response	None.
Example	SDH:TX1:VC3:POH C2,0
Note	

Syntax	SDH:TX<Pt>:VC3:POH? <POH-byte>
Description	This query returns the value of the specified byte in the VC-3 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA>
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:VC3:POH? C2 → #H00
Note	

10.2.37 SDH:TX<Pt>:VC12:POH:DEFault

Syntax	SDH:TX<Pt>:VC12:POH:DEFault
Description	This command sets all VC-12 path overhead bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	SDH:TX1:VC12:POH:DEF
Note	There is no query version of this command.

10.2.38 SDH:TX<Pt>:VC12:POH:TRACe

Syntax	SDH:TX<Pt>:VC12:POH:TRACe <string>[,<idlechar>]
Description	This command sets the VC-12 path trace (J2) to the specified string and the idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Message_Test_J2" <idlechar> = <NUMERIC PROGRAM DATA>
Response	None.
Example	SDH:TX1:VC12:POH:TRAC "Message_Test_J2",#H20
Note	

Syntax	SDH:TX<Pt>:VC12:POH:TRACe?
Description	This query returns the VC-12 path trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:VC12:POH:TRAC? → "Message_Test_J2",#H20
Note	

10.2.39 SDH:TX<Pt>:VC12:POH:TRACe:CRC

Syntax	SDH:TX<Pt>:VC12:POH:TRACe:CRC <mode>
Description	This command sets the section overhead trace (J2) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	SDH:TX1:VC12:POH:TRAC:CRC ON
Note	

Syntax	SDH:TX<Pt>:VC12:POH:TRACe:CRC?
Description	This query returns the mode of the overhead trace (J2) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <BOOLEAN RESPONSE DATA>
Example	SDH:TX1:VC12:POH:TRAC:CRC? → 1
Note	

10.2.40 SDH:TX<Pt>:VC12:POH:TTCM

Syntax	SDH:TX<Pt>:VC12:POH:TTCM <string>[,<idlechar>]
Description	This command sets the VC-12 TCM trace (N2) to the specified string and the idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Apid_TCM_N2" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SDH:TX1:VC12:POH:TTCM "Apid_TCM_N2",#H20
Note	

Syntax	SDH:TX<Pt>:VC12:POH:TTCM?
Description	This query returns the VC-12 trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:VC12:POH:TTCM? → "Apid_TCM_N2",#H20
Note	

10.2.41 SDH:TX<Pt>:VC12:POH

Syntax	SDH:TX<Pt>:VC12:POH <POH-byte>,<value>
Description	This command sets the value of the specified byte in the VC-12 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA> V5: V5 byte. N2: N2 byte. K4: K4 byte. <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 255</i>
Response	None.
Example	SDH:TX1:VC12:POH V5,#H04
Note	

Syntax	SDH:TX<Pt>:VC12:POH? <POH-byte>
Description	This query returns the value of the specified byte in the VC-11 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA>
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:VC12:POH? V5 → #H04
Note	

10.2.42 SDH:TX<Pt>:VC11:POH:DEFault

Syntax	SDH:TX<Pt>:VC11:POH:DEFault
Description	This command sets all VC-11 path overhead bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	SDH:TX1:VC11:POH:DEF
Note	There is no query version of this command.

10.2.43 SDH:TX<Pt>:VC11:POH:TRACe

Syntax	SDH:TX<Pt>:VC11:POH:TRACe <string>[,<idlechar>]
Description	This command sets the VC-11 path trace (J2) to the specified string and the idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault = "Message_Test_J2"</i> <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault = #H20</i>
Response	None.
Example	SDH:TX1:VC11:POH:TRAC "Message_Test_J2",#H20
Note	

Syntax	SDH:TX<Pt>:VC11:POH:TRACe?
Description	This query returns the VC-11 path trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:VC11:POH:TRAC? → "Message_Test_J2",#H20
Note	

10.2.44 SDH:TX<Pt>:VC11:POH:TRACe:CRC

Syntax	SDH:TX<Pt>:VC11:POH:TRACe:CRC <mode>
Description	This command sets the section overhead trace (J2) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	SDH:TX1:VC11:POH:TRAC:CRC ON
Note	

Syntax	SDH:TX<Pt>:VC11:POH:TRACe:CRC?
Description	This query returns the mode of the overhead trace (J2) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <BOOLEAN RESPONSE DATA>
Example	SDH:TX1:VC11:POH:TRAC:CRC? → 1
Note	

10.2.45 SDH:TX<Pt>:VC11:POH:TTCM

Syntax	SDH:TX<Pt>:VC11:POH:TTCM <string>[,<idlechar>]
Description	This command sets the VC-11 TCM trace (N2) to the specified string and the idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Apid_TCM_N2" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SDH:TX1:VC11:POH:TTCM "Apid_TCM_N2",#H20
Note	

Syntax	SDH:TX<Pt>:VC11:POH:TTCM?
Description	This query returns the VC-11 trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:VC11:POH:TTCM? → "Apid_TCM_N2",#H20
Note	

10.2.46 SDH:TX<Pt>:VC11:POH

Syntax	SDH:TX<Pt>:VC11:POH <POH-byte>,<value>
Description	This command sets the value of the specified byte in the VC-11 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA> V5: V5 byte. N2: N2 byte. K4: K4 byte. <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 255</i>
Response	None.
Example	SDH:TX1:VC11:POH V5,#H04
Note	

Syntax	SDH:TX<Pt>:VC11:POH? <POH-byte>
Description	This query returns the value of the specified byte in the VC-11 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA>
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:VC11:POH? V5 → #H04
Note	

10.2.47 SDH:TX<Pt>:AU3:VC3:POH:DEFault

Syntax	SDH:TX<Pt>:AU3:VC3:POH:DEFault
Description	This command sets all VC-3 path overhead bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	SDH:TX1:AU3:VC3:POH:DEF
Note	There is no query version of this command.

10.2.48 SDH:TX<Pt>:AU3:VC3:POH:TRACe

Syntax	SDH:TX<Pt>:AU3:VC3:POH:TRACe <string>[,<idlechar>]
Description	This command sets the VC-3 path trace (J1) to the specified string.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault = "Message_Test_J1"</i> <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault = #H20</i>
Response	None.
Example	SDH:TX1:AU3:VC3:POH:TRAC "Message_Test_J1",#H20
Note	

Syntax	SDH:TX<Pt>:AU3:VC3:POH:TRACe?
Description	This query returns the VC-3 path trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:AU3:VC3:POH:TRAC? → "Message_Test_J1",#H20
Note	

10.2.49 SDH:TX<Pt>:AU3:VC3:POH:TRACe:CRC

Syntax	SDH:TX<Pt>:AU3:VC3:POH:TRACe:CRC <mode>
Description	This command sets the section overhead trace (J1) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	SDH:TX1:AU3:VC3:POH:TRAC:CRC ON
Note	

Syntax	SDH:TX<Pt>:AU3:VC3:POH:TRACe:CRC?
Description	This query returns the mode of the overhead trace (J1) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <BOOLEAN RESPONSE DATA>
Example	SDH:TX1:AU3:VC3:POH:TRAC:CRC? → 1
Note	

10.2.50 SDH:TX<Pt>:AU3:VC3:POH:TTCM

Syntax	SDH:TX<Pt>:AU3:VC3:POH:TTCM <string>[,<idlechar>]
Description	This command sets the VC-3 TCM trace (N1) to the specified string, and the idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Apid.TCM.N1" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SDH:TX1:AU3:VC3:POH:TTCM "Apid.TCM.N1",#H20
Note	

Syntax	SDH:TX<Pt>:AU3:VC3:POH:TTCM?
Description	This query returns the VC-3 TCM trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:AU3:VC3:POH:TTCM? → "Apid.TCM.N1",#H20
Note	

10.2.51 SDH:TX<Pt>:AU3:VC3:POH

Syntax	SDH:TX<Pt>:AU3:VC3:POH <POH-byte>,<value>
Description	This command sets the value of the specified byte in the VC-3 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA> C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. F3: F3 byte. K3: K3 byte. N1: N1 byte. Only available when there is no TCM. <value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255
Response	None.
Example	SDH:TX1:AU3:VC3:POH C2,0
Note	

Syntax	SDH:TX<Pt>:AU3:VC3:POH? <POH-byte>
Description	This query returns the value of the specified byte in the VC-3 path overhead.
Parameters	<Pt> = Port number
	<POH-byte> = <CHARACTER PROGRAM DATA>
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:TX1:AU3:VC3:POH? C2 → #H00
Note	

10.2.52 SDH:TX<Pt>:FOLLow

Syntax	SDH:TX<Pt>:FOLLow <mode>
Description	This command sets the transmitter setup to follow another setup or not to follow.
Parameters	<Pt> = Port number
	<mode> = <CHARACTER PROGRAM DATA>
	NONE: Do not follow.
	TX1: Follows setup of the Tx port1. <i>DEFault</i> = <i>NONE</i>
Response	None.
Example	SDH:TX1:FOLL NONE
Note	

Syntax	SDH:TX<Pt>:FOLLow?
Description	This query returns the transmitter setup to follow another setup or not to follow.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:FOLL? → NONE
Note	

10.2.53 SDH:TX<Pt>:OTHRough

Syntax	SDH:TX<Pt>:OTHRough <mode>
Description	This command sets the OH Overwrite Position.
Parameters	<Pt> = Port number
	<mode> = <CHARACTER PROGRAM DATA>
	SOH: SOH Data.
	A1A2: A1/A2 byte.
	K1K2: K1/K2 byte.
	S1: S1 byte.
	DCC1TO3: DCC1-3 byte.
	DCC4TO12: DCC4-12 byte.
	J0: J0 byte.
	SOH1BYTE: 1 byte of SOH.(selectable) <i>DEFault</i> = <i>SOH</i>
Response	None.
Example	SDH:TX1:OTHR A1A2
Note	

Syntax	SDH:TX<Pt>:OTHRough?
Description	This query returns the OH Overwrite Position.
Parameter	<Pt> = Port number
Response	<position> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:OTHR? → A1A2
Note	

10.2.54 SDH:TX<Pt>:OTHRough:BYTE

Syntax	SDH:TX<Pt>:OTHRough:BYTE <byte>
Description	This command sets the OH Overwrite Position.
Parameters	<Pt> = Port number <byte> = <CHARACTER PROGRAM DATA> A11-A13: A1 bytes. A21-A23: A2 bytes. J0: J0 byte. E1: E1 byte. F1: F1 byte. D1: D1 byte. D2: D2 byte. D3: D3 byte. K1: K1 byte. K2: K2 byte. D4: D4 byte. D5: D5 byte. D6: D6 byte. D7: D7 byte. D8: D8 byte. D9: D9 byte. D10: D10 byte. D11: D11 byte. D12: D12 byte. S1: S1 byte. M0: M0 byte. M1: M1 byte. E2: E2 byte. X18-X99: X<Line><Column> <i>DEFault = A11</i>
Response	None.
Example	SDH:TX1:OTHR:BYTE A11
Note	

Syntax	SDH:TX<Pt>:OTHRough:BYTE?
Description	This query returns the OH Overwrite Position.
Parameter	<Pt> = Port number
Response	<byte> = <CHARACTER RESPONSE DATA>
Example	SDH:TX1:OTHR:BYTE? → A11
Note	

10.2.55 SDH:TX<Pt>:STL:MMAPIg:LANE

Syntax	SDH:TX<Pt>:STL:MMAPIg:LANE <value>
Description	This command sets the STL lane marker assignment.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List List consist of the value of the lane marker ranging from 0 to 3.
Response	None.
Example	SDH:TX1:STL:MMAPIg:LANE (0,1,2,3)
Note	This command can be used on 40G

Syntax	SDH:TX<Pt>:STL:MMAPing:LANE?
Description	This query returns the STL lane marker assignment.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION RESPONSE DATA> Format: Numeric List
Example	SDH:TX1:STL:MMAP:LANE? → (0,1,2,3)
Note	This command can be used on 40G

10.3 Stimuli

10.3.1 SDH:STIMuli:TX<Pt>:FOFFset

Syntax	SDH:STIMuli:TX<Pt>:FOFFset <offset>
Description	This command sets the frequency offset for the clock source. Unit: ppm.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> MT1000A: <i>MINimum</i> =-50, <i>MAXimum</i> =50, <i>DEFault</i> =0 MT1100A, MT1040A: <i>MINimum</i> =-200.0, <i>MAXimum</i> =200.0, <i>DEFault</i> = 0
Response	None.
Example	SDH:STIM:TX1:FOFF 0
Note	

Syntax	SDH:STIMuli:TX<Pt>:FOFFset?
Description	This query returns the frequency offset for the clock source. Unit: ppm.
Parameter	<Pt> = Port number
Response	MT1000A: <offset> = <NR1 NUMERIC RESPONSE DATA> MT1100A, MT1040A: <offset> = <NR2 NUMERIC RESPONSE DATA>
Example	MT1000A: SDH:STIM:TX1:FOFF? → 0 MT1100A, MT1040A: SDH:STIM:TX1:FOFF? → 0.0
Note	

10.3.2 SDH:STIMuli:TX<Pt>:ALARm

Syntax	SDH:STIMuli:TX<Pt>:ALARm <alarmtype>
Description	This command sets the type of alarm to be generated.
Parameters	<Pt> = Port number <alarmtype> = <CHARACTER PROGRAM DATA> LOS: Loss of signal LOF: Loss of frame OOF: Out of frame MSAIS: MS alarm indication signal MSRDI: MS remote defect indicator AUAIS: AU alarm indication signal AULOP: AU loss of pointer HPTIM: HP trace identifier mismatch HPPLM: HP payload label mismatch HPUNEQ: HP unequipped HPRDI: HP remote defect indicator TUAIS: TU alarm indication signal TULOP: TU loss of pointer TULOM: TU loss of multiframe LPTIM: LP trace identifier mismatch LPUNEQ: LP unequipped LPRDI: LP remote defect indicator LPPLM: LP payload label mismatch LSS: Loss of signal synchronization TCUNEQ: TC unequipped TCLTC: TC loss of tandem connection TCTIM: TC trace identifier mismatch TCAIS: TC alarm indication signal TCRDI: TC remote defect indicator TCODI: TC outgoing defect indicator <i>DEFault = LOS</i>
Response	None.
Example	SDH:STIM:TX1:ALAR LOS
Note	

Syntax	SDH:STIMuli:TX<Pt>:ALARm?
Description	This query returns the type of alarm to be generated.
Parameter	<Pt> = Port number
Response	<alarmtype> = <CHARACTER RESPONSE DATA>
Example	SDH:STIM:TX1:ALAR? → LOS
Note	

10.3.3 SDH:STIMuli:TX<Pt>:AINSert

Syntax	SDH:STIMuli:TX<Pt>:AINSert <insertion>
Description	This command sets the method to insert alarm.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF PERManent ALTerminate <i>DEFault = OFF</i>
Response	None.
Example	SDH:STIM:TX1:AINS PERM
Note	

Syntax	SDH:STIMuli:TX<Pt>:AINsert?
Description	This query returns the alarm insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	SDH:STIM:TX1:AINS? → PERM
Note	

10.3.4 SDH:STIMuli:TX<Pt>:ANLength

Syntax	SDH:STIMuli:TX<Pt>:ANLength <frames>
Description	This command sets the alternate normal length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 1, <i>MAXimum</i> = 8000, <i>DEFault</i> =1 Maximum depends on the error insert method, see SDH:STIM:TX<Pt>:AINS
Response	None.
Example	SDH:STIM:TX1:ANL 1
Note	

Syntax	SDH:STIMuli:TX<Pt>:ANLength?
Description	This query returns the alternate normal length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:ANL? → 1
Note	

10.3.5 SDH:STIMuli:TX<Pt>:AALength

Syntax	SDH:STIMuli:TX<Pt>:AALength <frames>
Description	This command sets the alternate alarm length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 1, <i>MAXimum</i> = 8000, <i>DEFault</i> =1 Maximum depends on the error insert method, see SDH:STIM:TX<Pt>:AINS
Response	None.
Example	SDH:STIM:TX1:AAL 1
Note	

Syntax	SDH:STIMuli:TX<Pt>:AALength?
Description	This query returns the alternate alarm length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:AAL? → 1
Note	

10.3.6 SDH:STIMuli:TX<Pt>:ERRor

Syntax	SDH:STIMuli:TX<Pt>:ERRor <errordestination>
Description	This command sets the error destination.
Parameters	<Pt> = Port number <errordestination> = <CHARACTER PROGRAM DATA> A1A2: Frame alignment word B1: B1 checksum byte B2: B2 checksum byte MSREI: MS remote error indication B3: B3 checksum byte HPREI: HP Remote error indication V5LPB3: B3 checksum of the low-order path LPREI: LP remote error indication PRBS: Pattern error ETRans: ERR-TRANS TCIEC: Tandem Connection incoming error count TCREI: Tandem Connection remote error indication TCOEI: Tandem Connection outgoing error indication TCBIP2: 2-bit Bit Interleaved Parity for Tandem Connection <i>DEFault = A1A2</i>
Response	None.
Example	SDH:STIM:TX1:ERR MSREI
Note	Some errors are depended on type of content, setting them without the correct type of content will set EINSert to OFF. Changing the error may also change the insert method. See section 10.3.7.

Syntax	SDH:STIMuli:TX<Pt>:ERRor?
Description	This query returns the error destination.
Parameter	<Pt> = Port number
Response	<errordestination> = <CHARACTER RESPONSE DATA>
Example	SDH:STIM:TX1:ERR? → MSREI
Note	

10.3.7 SDH:STIMuli:TX<Pt>:EINsert

Syntax	SDH:STIMuli:TX<Pt>:EINsert <insertion>
Description	This command sets the method to insert errors.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF MANual B03: Burst · 1E-03 ¹ B04: Burst · 1E-04 ¹ B05: Burst · 1E-05 ¹ B06: Burst · 1E-06 ² B07: Burst · 1E-07 B08: Burst · 1E-08 B09: Burst · 1E-09 B10: Burst · 1E-10 ALternate <i>DEFault = OFF</i>
Response	None.
Example	SDH:STIM:TX1:EINS MAN
Note	If insertion is set to MANual, errors are inserted with SYST:STIM:INS. See section 2.3.52. ¹ Is available for PRBS and ETRans (B03 is only available for ETRans if the STM Level is 1). ² Is available for PRBS, ETRans, B2, V5LPB3, LPREI, TCIEC, TCBIP2, TCRI and TCOEI. Selecting an unsupported burst rate will reset the rate to the closest possible.

Syntax	SDH:STIMuli:TX<Pt>:EINsert?
Description	This query returns the error insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	SDH:STIM:TX1:EINS? → MAN
Note	

10.3.8 SDH:STIMuli:TX<Pt>:EBLength

Syntax	SDH:STIMuli:TX<Pt>:EBLength <burstlength>
Description	This command sets the error burst length to generate.
Parameters	<Pt> = Port number <burstlength> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, DEFault = 1</i> Maximum depends on the error insert method, see SDH:STIM:TX<Pt>:EINS B03 - B10: Maximum = 1 MANual: Maximum = 8000 ¹
Response	None.
Example	SDH:STIM:TX1:EBL 1
Note	¹ If VC12 is active the maximum value for LPREI, V5LPB3, TCIEC, TCBIP2, TCRI and TCOEI is 2000. The maximum value is 4000 when :STIM:TX<Pt>:ERR is PRBS (Pattern error).

Syntax	SDH:STIMuli:TX<Pt>:EBLength?
Description	This query returns the error burst length to generate.
Parameter	<Pt> = Port number
Response	<burstlength> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:EBL? → 1
Note	

10.3.9 SDH:STIMuli:TX<Pt>:ENLength

Syntax	SDH:STIMuli:TX<Pt>:ENLength <frames>
Description	This command sets the alternate normal length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i> Maximum depends on the error insert method, see SDH:STIM:TX<Pt>:EINS
Response	None.
Example	SDH:STIM:TX1:ENL 1
Note	

Syntax	SDH:STIMuli:TX<Pt>:ENLength?
Description	This query returns the alternate normal length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:ENL? → 1
Note	

10.3.10 SDH:STIMuli:TX<Pt>:EELength

Syntax	SDH:STIMuli:TX<Pt>:EELength <frames>
Description	This command sets the alternate error length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i> Maximum depends on the error insert method, see SDH:STIM:TX<Pt>:EINS
Response	None.
Example	SDH:STIM:TX1:EEL 1
Note	

Syntax	SDH:STIMuli:TX<Pt>:EELength?
Description	This query returns the alternate error length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:EEL? → 1
Note	

10.3.11 SDH:STIMuli:TX<Pt>:PTSequence

Syntax	SDH:STIMuli:TX<Pt>:PTSequence <type>,<sequence>
Description	This command sets the SDH pointer test sequence.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> AU4: AU-4 pointer AU3: AU-3 pointer TU3: TU-3 pointer TU12: TU-12 pointer TU11: TU-11 pointer <sequence> = <CHARACTER PROGRAM DATA> NONE: No test sequence SALternating: Single alternating RDOuble: Regular + double RMISsing: Regular + missing DALternating: Double alternating
Response	None.
Example	SDH:STIM:TX1:PTS AU4,NONE
Note	

Syntax	SDH:STIMuli:TX<Pt>:PTSequence? <type>
Description	This query returns the SDH pointer test sequence.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> AU4: AU-4 pointer AU3: AU-3 pointer TU3: TU-3 pointer TU12: TU-12 pointer TU11: TU-11 pointer
Response	<sequence> = <CHARACTER RESPONSE DATA>
Example	SDH:STIM:TX1:PTS? AU4 → NONE
Note	

10.3.12 SDH:STIMuli:TX<Pt>:PMOVE

Syntax	SDH:STIMuli:TX<Pt>:PMOVE <type>,<value>
Description	This command sets the SDH pointer movement sequence. The value specifies the number of pointer increments.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> AU4: AU-4 pointer AU3: AU-3 pointer TU3: TU-3 pointer TU12: TU-12 pointer TU11: TU-11 pointer <value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = -100, <i>MAXimum</i> = 100
Response	None.
Example	SDH:STIM:TX1:PMOV AU4,9
Notes	There is no query version of this command. A value of zero has no effect. A negative value results in pointer decrements.

10.3.13 SDH:STIMuli:TX<Pt>:PJUMp

Syntax	SDH:STIMuli:TX<Pt>:PJUMp <type>,<value>[,<ndf>]
Description	This command sets the SDH pointer jump. The value specifies the new pointer value.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> AU4: AU-4 pointer AU3: AU-3 pointer TU3: TU-3 pointer TU12: TU-12 pointer TU11: TU-11 pointer <value> = <NUMERIC PROGRAM DATA> The valid range depends on SDH:STIMuli:TX<Pt>:PTYPE AU4: 0 to 782 AU3: 0 to 782 TU3: 0 to 764 TU12: 0 to 139 TU11: 0 to 103 <ndf> = <CHARACTER PROGRAM DATA> WITH: With new data flag (NDF) WOUT: Without new data flag (NDF) <i>DEFault = WITH</i>
Response	None.
Example	SDH:STIM:TX1:PJUM AU4,300
Notes	There is no query version of this command. A negative value disables new data flag (NDF).

10.3.14 SDH:STIMuli:TX<Pt>:STL:AERRor:LANE

Syntax	SDH:STIMuli:TX<Pt>:STL:AERRor:LANE <lane>
Description	This command sets the lane of the multi lane alarm/error to be inserted.
Parameters	<Pt> = Port number <lane> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000, MAXimum=#B1111, DEFault=#B1000</i>
Response	None.
Example	SDH:STIM:TX1:STL:AERR:LANE #B01 SDH:STIM:TX1:STL:AERR:LANE #B0100 These commands add error into lane 1.
Note	This command can be used on 40G

Syntax	SDH:STIMuli:TX<Pt>:STL:AERRor:LANE?
Description	This query returns the lane of the multi lane alarm/error to be inserted.
Parameters	<Pt> = Port number
Response	<lane> = <BINARY NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:STL:AERR:LANE? → #B0100
Note	This command can be used on 40G

10.3.15 SDH:STIMuli:TX<Pt>:STL:ALARm

Syntax	SDH:STIMuli:TX<Pt>:STL:ALARm <alarmtype>
Description	This command sets the type of alarm to be inserted.
Parameters	<Pt> = Port number <alarmtype> = <CHARACTER PROGRAM DATA> LOFOOF: LOF/OOF-STL LOROOR: LOR/OOR-STL <i>DEFault = LOFOOF</i>
Response	None.
Example	SDH:STIM:TX1:STL:ALAR LOFOOF
Note	This command can be used on 40G

Syntax	SDH:STIMuli:TX<Pt>:STL:ALARm?
Description	This query returns the type of alarm to be inserted.
Parameter	<Pt> = Port number
Response	<alarmtype> = <CHARACTER RESPONSE DATA>
Example	SDH:STIM:TX1:STL:ALAR? → LOFOOF
Note	This command can be used on 40G

10.3.16 SDH:STIMuli:TX<Pt>:STL:AINSert

Syntax	SDH:STIMuli:TX<Pt>:STL:AINSert <insertion>
Description	This command sets the method to insert alarm.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF MANual ALTernate <i>DEFault = OFF</i>
Response	None.
Example	SDH:STIM:TX1:STL:AINS MAN
Note	This command can be used on 40G

Syntax	SDH:STIMuli:TX<Pt>:STL:AINSert?
Description	This query returns the alarm insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	SDH:STIM:TX1:STL:AINS? → MAN
Note	This command can be used on 40G

10.3.17 SDH:STIMuli:TX<Pt>:STL:ABLength

Syntax	SDH:STIMuli:TX<Pt>:STL:ABLength <frames>
Description	This command sets the alarm burst length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i>
Response	None.
Example	SDH:STIM:TX1:STL:ABL 8000
Note	This command can be used on 40G

Syntax	SDH:STIMuli:TX<Pt>:STL:ABLength?
Description	This query returns the alarm burst length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:STL:ABL? → 8000
Note	This command can be used on 40G

10.3.18 SDH:STIMuli:TX<Pt>:STL:AALength

Syntax	SDH:STIMuli:TX<Pt>:STL:AALength <frames>
Description	This command sets the alternate alarm length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i>
Response	None.
Example	SDH:STIM:TX1:STL:AAL 8000
Note	This command can be used on 40G

Syntax	SDH:STIMuli:TX<Pt>:STL:AALength?
Description	This query returns the alternate alarm length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:STL:AAL? → 8000
Note	This command can be used on 40G

10.3.19 SDH:STIMuli:TX<Pt>:STL:ANLength

Syntax	SDH:STIMuli:TX<Pt>:STL:ANLength <frames>
Description	This command sets the alternate normal length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i>
Response	None.
Example	SDH:STIM:TX1:STL:ANL 8000
Note	This command can be used on 40G

Syntax	SDH:STIMuli:TX<Pt>:STL:ANLength?
Description	This query returns the alternate normal length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:STL:ANL? → 8000
Note	This command can be used on 40G

10.3.20 SDH:STIMuli:TX<Pt>:STL:ERRor

Syntax	SDH:STIMuli:TX<Pt>:STL:ERRor <errortype>
Description	This command sets the type of error to be inserted.
Parameters	<Pt> = Port number <errortype> = <CHARACTER PROGRAM DATA> A1A2: A1A2-STL <i>DEFault = A1A2</i>
Response	None.
Example	SDH:STIM:TX1:STL:ERR A1A2
Note	This command can be used on 40G

Syntax	SDH:STIMuli:TX<Pt>:STL:ERRor?
Description	This query returns the type of error to be inserted.
Parameter	<Pt> = Port number
Response	<errortype> = <CHARACTER RESPONSE DATA>
Example	SDH:STIM:TX1:STL:ERR? → A1A2
Note	This command can be used on 40G

10.3.21 SDH:STIMuli:TX<Pt>:STL:EINsert

Syntax	SDH:STIMuli:TX<Pt>:STL:EINsert <insertion>
Description	This command sets the method to insert errors.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF ALternate <i>DEFault = OFF</i>
Response	None.
Example	SDH:STIM:TX1:STL:EINS ALT
Note	This command can be used on 40G

Syntax	SDH:STIMuli:TX<Pt>:STL:EINsert?
Description	This query returns the error insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	SDH:STIM:TX1:STL:EINS? → ALT
Note	This command can be used on 40G

10.3.22 SDH:STIMuli:TX<Pt>:STL:EELength

Syntax	SDH:STIMuli:TX<Pt>:STL:EELength <frames>
Description	This command sets the alternate error length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i>
Response	None.
Example	SDH:STIM:TX1:STL:EEL 8000
Note	This command can be used on 40G

Syntax	SDH:STIMuli:TX<Pt>:STL:EELength?
Description	This query returns the alternate error length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:STL:EEL? → 8000
Note	This command can be used on 40G

10.3.23 SDH:STIMuli:TX<Pt>:STL:ENLength

Syntax	SDH:STIMuli:TX<Pt>:STL:ENLength <frames>
Description	This command sets the alternate normal length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i>
Response	None.
Example	SDH:STIM:TX1:STL:ENL 8000
Note	This command can be used on 40G

Syntax	SDH:STIMuli:TX<Pt>:STL:ENLength?
Description	This query returns the alternate normal length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:STL:ENL? → 8000
Note	This command can be used on 40G

10.3.24 SDH:STIMuli:TX<Pt>:STL:SKEW:BIT

Syntax	SDH:STIMuli:TX<Pt>:STL:SKEW:BIT <bits>
Description	This command sets the bits of the skew .
Parameters	<Pt> = Port number <bits> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 138240, DEFault=1</i>
Response	None.
Example	SDH:STIM:TX1:STL:SKEW:BIT 1000
Note	This command can be used on 40G

Syntax	SDH:STIMuli:TX<Pt>:STL:SKEW:BIT?
Description	This query returns the bits of the skew .
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:STL:SKEW:BIT? → 1000
Note	This command can be used on 40G

10.3.25 SDH:STIMuli:TX<Pt>:STL:SKEW:NS?

Syntax	SDH:STIMuli:TX<Pt>:STL:SKEW:NS?
Description	This query returns the time of the skew to be inserted. Unit: ns
Parameter	<Pt> = Port number
Response	<skew> = <NR2 NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:STL:SKEW:NS? → 100.469
Note	This command can be used on 40G

10.3.26 SDH:STIMuli:TX<Pt>:STL:SKEW:LANE

Syntax	SDH:STIMuli:TX<Pt>:STL:SKEW:LANE <lane>
Description	This command sets the lane of the skew to be inserted.
Parameters	<Pt> = Port number <lane> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000, MAXimum=#B1111, DEFault=#B1000</i>
Response	None.
Example	SDH:STIM:TX1:STL:SKEW:LANE #B01 SDH:STIM:TX1:STL:SKEW:LANE #B0100 These commands add skew into lane 1.
Note	This command can be used on 40G

Syntax	SDH:STIMuli:TX<Pt>:STL:SKEW:LANE?
Description	This query returns the lane of the skew to be inserted.
Parameters	<Pt> = Port number
Response	<lane> = <BINARY NUMERIC RESPONSE DATA>
Example	SDH:STIM:TX1:STL:SKEW:LANE? → #B0100
Note	This command can be used on 40G

10.4 Result

10.4.1 SDH:RX<Pt>:IFETch?

Syntax	SDH:RX<Pt>:IFETch? <parameter>
Description	This query fetches a SDH interval if available.
Parameters	<Pt> = Port number ({<parameter>} + {,}*) = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. Alarms LOS: Loss of signal. Response: <Seconds>,<Ratio> GAIS: Generic alarm indication signal. Response: <Seconds>,<Ratio> LOF: Loss of frame. Response: <Seconds>,<Ratio> OOF: Out of frame. Response: <Seconds>,<Ratio> MSAIS: Multiplex section alarm indication signal. Response: <Seconds>,<Ratio> MSRDI: Multiplex section remote defect indicator. Response: <Seconds>,<Ratio> AUAIS: Administrative unit - alarm indication signal. Response: <Seconds>,<Ratio> AULOP: Administrative unit - loss of pointer. Response: <Seconds>,<Ratio> HPTIM: High-order path trace identifier mismatch. Response: <Seconds>,<Ratio> HPPLM: Payload label mismatch. Response: <Seconds>,<Ratio> HPUNEQ: High-order path unequipped. Response: <Seconds>,<Ratio> HPRDI: High-order path remote defect indicator. Response: <Seconds>,<Ratio> TUAIS: Tributary unit alarm indication signal¹. Response: <Seconds>,<Ratio> TULOP: Tributary unit loss of pointer¹. Response: <Seconds>,<Ratio> TULOM: Tributary unit loss of multi frame¹. Response: <Seconds>,<Ratio> LPTIM: Low-order path trace identifier mismatch¹. Response: <Seconds>,<Ratio> LPUNEQ: Low-order path unequipped¹. Response: <Seconds>,<Ratio> LPRDI: Low-order path remote defect indicator¹. Response: <Seconds>,<Ratio> LPPLM: Low-order path payload label mismatch¹. Response: <Seconds>,<Ratio> LSS: Loss of signal synchronization¹. Response: <Seconds>,<Ratio> Errors A1A2: Response: <Count>,<Ratio> B1: Response: <Count>,<Ratio> B2: Response: <Count>,<Ratio> MSREI: Response: <Count>,<Ratio> B3: Response: <Count>,<Ratio> HPREI: Response: <Count>,<Ratio> V5LPB3: ¹Response: <Count>,<Ratio> ERRPRBS: Pattern errors¹. Response: <Count>,<Ratio> ERRPRBSBLK: Pattern block errors¹. Response: <Count>,<Ratio> LPREI: Response: <Count>,<Ratio> AUNDF: Response: <Count>,<Ratio> TUNDF: Response: <Count>,<Ratio> SAPS: Switch APS. Response: <Count>,<Ratio> Rx frequency FREQ: Frequency deviation. Response: <ppm> FREQDIF: Frequency difference (RX1-RX2). Response: <ppm> (Only for RX1, RX2 is always NaN (section 1.6.1)) Mux quality MFES: Forward ES. Response: <Count>,<Ratio%> MFSES: Forward SES. Response: <Count>,<Ratio%> MFUNAV: Forward UNAV. Response: <Count>,<Ratio%> MBES: Backward ES. Response: <Count>,<Ratio%> MBSES: Backward SES. Response: <Count>,<Ratio%> MBUNAV: Backward UNAV. Response: <Count>,<Ratio%> VC-4 quality VC4FES: Forward ES. Response: <Count>,<Ratio%> VC4FSES: Forward SES. Response: <Count>,<Ratio%>

continued on next page...

...continued from previous page

VC4FUNAV: Forward UNAV. Response: <Count>,<Ratio%> VC4BES: Backward ES. Response: <Count>,<Ratio%> VC4BSES: Backward SES. Response: <Count>,<Ratio%> VC4BUNAV: Backward UNAV. Response: <Count>,<Ratio%> VC-3 quality¹ VC3FES: Forward ES. Response: <Count>,<Ratio%> VC3FSES: Forward SES. Response: <Count>,<Ratio%> VC3FUNAV: Forward UNAV. Response: <Count>,<Ratio%> VC3BES: Backward ES. Response: <Count>,<Ratio%> VC3BSES: Backward SES. Response: <Count>,<Ratio%> VC3BUNAV: Backward UNAV. Response: <Count>,<Ratio%> VC-12 quality¹ VC12FES: Forward ES. Response: <Count>,<Ratio%> VC12FSES: Forward SES. Response: <Count>,<Ratio%> VC12FUNAV: Forward UNAV. Response: <Count>,<Ratio%> VC12BES: Backward ES. Response: <Count>,<Ratio%> VC12BSES: Backward SES. Response: <Count>,<Ratio%> VC12BUNAV: Backward UNAV. Response: <Count>,<Ratio%> VC-11 quality¹ VC11FES: Forward ES. Response: <Count>,<Ratio%> VC11FSES: Forward SES. Response: <Count>,<Ratio%> VC11FUNAV: Forward UNAV. Response: <Count>,<Ratio%> VC11BES: Backward ES. Response: <Count>,<Ratio%> VC11BSES: Backward SES. Response: <Count>,<Ratio%> VC11BUNAV: Backward UNAV. Response: <Count>,<Ratio%> Bulk quality ES: ES. Response: <Count>,<Ratio%> SES: SES. Response: <Count>,<Ratio%> UNAV: UNAV. Response: <Count>,<Ratio%> AU-4 pointer AUPOINT: AU pointer. Response: <Count> AUNEG: Negative. Response: <Count> AUPOS: Positive. Response: <Count> TU-3 or TU-12 or TU-11 pointer¹ TUPOINT: TU pointer. Response: <Count> TUNEG: Negative. Response: <Count> TUPOS: Positive. Response: <Count> Justification¹ JNEG: Negative justification. Response: <Count> JPOS: Positive justification. Response: <Count> MUX performance¹ PMPES: Performance MUX PO limit ES. Response: <Count>,<Ratio%> PMPSES: Performance MUX PO limit SES. Response: <Count>,<Ratio%> PMPBBE: Performance MUX PO limit BBE. Response: <Count>,<Ratio%> PMBS1ES: Performance MUX BIS limit S1ES. Response: <Count> PMBS2ES: Performance MUX BIS limit S2ES. Response: <Count> PMBS1SES: Performance MUX BIS limit S1SES. Response: <Count> PMBS2SES: Performance MUX BIS limit S2SES. Response: <Count> PMFSTAT: Performance MUX forward status. Response: <STRING RESPONSE DATA> PMFES: Performance MUX forward ES. Response: <Count>,<Ratio%> PMFSES: Performance MUX forward SES. Response: <Count>,<Ratio%> PMFUNAV: Performance MUX forward UNAV. Response: <Count>,<Ratio%> PMFBBE: Performance MUX forward BBE. Response: <Count>,<Ratio%> PMBSTAT: Performance MUX backward status. Response: <STRING RESPONSE DATA> PMBES: Performance MUX backward ES. Response: <Count>,<Ratio%>
--

continued on next page...

...continued from previous page

PMBSES: Performance MUX backward SES. Response: <Count>,<Ratio%> PMBUNAV: Performance MUX backward UNAV. Response: <Count>,<Ratio%> PMBBBE: Performance MUX backward BBE. Response: <Count>,<Ratio%> VC-4 performance¹ PVC4PES: Performance VC4 PO limit ES. Response: <Count>,<Ratio%> PVC4PSES: Performance VC4 PO limit SES. Response: <Count>,<Ratio%> PVC4PBBE: Performance VC4 PO limit BBE. Response: <Count>,<Ratio%> PVC4BS1ES: Performance VC4 BIS limit S1ES. Response: <Count> PVC4BS2ES: Performance VC4 BIS limit S2ES. Response: <Count> PVC4BS1SES: Performance VC4 BIS limit S1SES. Response: <Count> PVC4BS2SES: Performance VC4 BIS limit S2SES. Response: <Count> PVC4FSTAT: Performance VC4 forward status. Response: <STRING RESPONSE DATA> PVC4FES: Performance VC4 forward ES. Response: <Count>,<Ratio%> PVC4FSES: Performance VC4 forward SES. Response: <Count>,<Ratio%> PVC4FUNAV: Performance VC4 forward UNAV. Response: <Count>,<Ratio%> PVC4FBBE: Performance VC4 forward BBE. Response: <Count>,<Ratio%> PVC4BSTAT: Performance VC4 backward status. Response: <STRING RESPONSE DATA> PVC4BES: Performance VC4 backward ES. Response: <Count>,<Ratio%> PVC4BSES: Performance VC4 backward SES. Response: <Count>,<Ratio%> PVC4BUNAV: Performance VC4 backward UNAV. Response: <Count>,<Ratio%> PVC4BBBE: Performance VC4 backward BBE. Response: <Count>,<Ratio%> VC-12 performance¹ PVC12PES: Performance VC12 PO limit ES. Response: <Count>,<Ratio%> PVC12PSES: Performance VC12 PO limit SES. Response: <Count>,<Ratio%> PVC12PBBE: Performance VC12 PO limit BBE. Response: <Count>,<Ratio%> PVC12BS1ES: Performance VC12 BIS limit S1ES. Response: <Count> PVC12BS2ES: Performance VC12 BIS limit S2ES. Response: <Count> PVC12BS1SES: Performance VC12 BIS limit S1SES. Response: <Count> PVC12BS2SES: Performance VC12 BIS limit S2SES. Response: <Count> PVC12FSTAT: Performance VC12 forward status. Response: <STRING RESPONSE DATA> PVC12FES: Performance VC12 forward ES. Response: <Count>,<Ratio%> PVC12FSES: Performance VC12 forward SES. Response: <Count>,<Ratio%> PVC12FUNAV: Performance VC12 forward UNAV. Response: <Count>,<Ratio%> PVC12FBBE: Performance VC12 forward BBE. Response: <Count>,<Ratio%> PVC12BSTAT: Performance VC12 backward status. Response: <STRING RESPONSE DATA> PVC12BES: Performance VC12 backward ES. Response: <Count>,<Ratio%> PVC12BSES: Performance VC12 backward SES. Response: <Count>,<Ratio%> PVC12BUNAV: Performance VC12 backward UNAV. Response: <Count>,<Ratio%> PVC12BBBE: Performance VC12 backward BBE. Response: <Count>,<Ratio%> VC-11 performance¹ PVC11PES: Performance VC11 PO limit ES. Response: <Count>,<Ratio%> PVC11PSES: Performance VC11 PO limit SES. Response: <Count>,<Ratio%> PVC11PBBE: Performance VC11 PO limit BBE. Response: <Count>,<Ratio%> PVC11BS1ES: Performance VC11 BIS limit S1ES. Response: <Count> PVC11BS2ES: Performance VC11 BIS limit S2ES. Response: <Count> PVC11BS1SES: Performance VC11 BIS limit S1SES. Response: <Count> PVC11BS2SES: Performance VC11 BIS limit S2SES. Response: <Count> PVC11FSTAT: Performance VC11 forward status. Response: <STRING RESPONSE DATA> PVC11FES: Performance VC11 forward ES. Response: <Count>,<Ratio%> PVC11FSES: Performance VC11 forward SES. Response: <Count>,<Ratio%> PVC11FUNAV: Performance VC11 forward UNAV. Response: <Count>,<Ratio%> PVC11FBBE: Performance VC11 forward BBE. Response: <Count>,<Ratio%>
--

continued on next page...

...continued from previous page

	PVC11BSTAT: Performance VC11 backward status. Response: <STRING RESPONSE DATA> PVC11BES: Performance VC11 backward ES. Response: <Count>,<Ratio%> PVC11BSES: Performance VC11 backward SES. Response: <Count>,<Ratio%> PVC11BUNAV: Performance VC11 backward UNAV. Response: <Count>,<Ratio%> PVC11BBBE: Performance VC11 backward BBE. Response: <Count>,<Ratio%> VC-3 performance¹ PVC3PES: Performance VC3 PO limit ES. Response: <Count>,<Ratio%> PVC3PSES: Performance VC3 PO limit SES. Response: <Count>,<Ratio%> PVC3PBBE: Performance VC3 PO limit BBE. Response: <Count>,<Ratio%> PVC3BS1ES: Performance VC3 BIS limit S1ES. Response: <Count> PVC3BS2ES: Performance VC3 BIS limit S2ES. Response: <Count> PVC3BS1SES: Performance VC3 BIS limit S1SES. Response: <Count> PVC3BS2SES: Performance VC3 BIS limit S2SES. Response: <Count> PVC3FSTAT: Performance VC3 forward status. Response: <STRING RESPONSE DATA> PVC3FES: Performance VC3 forward ES. Response: <Count>,<Ratio%> PVC3FSES: Performance VC3 forward SES. Response: <Count>,<Ratio%> PVC3FUNAV: Performance VC3 forward UNAV. Response: <Count>,<Ratio%> PVC3FBBE: Performance VC3 forward BBE. Response: <Count>,<Ratio%> PVC3BSTAT: Performance VC3 backward status. Response: <STRING RESPONSE DATA> PVC3BES: Performance VC3 backward ES. Response: <Count>,<Ratio%> PVC3BSES: Performance VC3 backward SES. Response: <Count>,<Ratio%> PVC3BUNAV: Performance VC3 backward UNAV. Response: <Count>,<Ratio%> PVC3BBBE: Performance VC3 backward BBE. Response: <Count>,<Ratio%> Frequency DEV: Deviation(ppm). Response: <Min>,<Max>,<Avg> SDH TCM¹ TCUNEQ: Tandem connection unequipped. response: <Count>,<Ratio%> TCLTC: Response: <Count>,<Ratio%> TCTIM: Tandem connection trace identifier mismatch. Response: <Count>,<Ratio%> TCAIS: Tandem connection alarm indication signal. Response: <Count>,<Ratio%> TCRDI: Tandem connection remote defect indicator. Response: <Count>,<Ratio%> TCODI: Tandem Connection Outgoing Defect Indicator. Response: <Count>,<Ratio%> TCIEC: Response: <Count>,<Ratio%> TCBIP2: Response: <Count>,<Ratio%> TCREI: Response: <Count>,<Ratio%> TCOEI: Response: <Count>,<Ratio%> TAPID: TCM APID. Response N1 or N2 TCM ID: <id> STL LOFSTL: STL LOF. Response: <Seconds> x 4 lanes LORSTL: STL LOR. Response: <Seconds> x 4 lanes OOFSTL: STL OOF. Response: <Frames> x 4 lanes ORSTL: STL OOR. Response: <Frames> x 4 lanes A1A2STL: A1A2-STL. Response: <Count> x 4 lanes OLA: OLA. Response: <Seconds>,<Ratio> RSKEW: Relative Skew. Response: <Nanoseconds> x 4 lanes MMAPI: Marker Map. Response: <NR1> x 4 lanes
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Format: Numeric List Each result is formatted according to the specification in the parameter field. Values that are not relevant or applicable for the current measurement return NaN (section 1.6.1).
Example	SDH:RX1:IFET? (LOS,LOF,00F) → (3,0.00532),(4,0.00709),(5,0.00887)
Notes	This command fetches the results from the interval selected using the MEASurement:SETup:SElect command (see section 18.2.2).

continued on next page...

...continued from previous page

	¹ Requires the current interface/application is active in the measurement. If the requested result is not available, NaN (section 1.6.1) is returned. If there is one or more results, the last "," is always removed.
--	---

10.4.2 SDH:PMOVement:RX<Pt>:FETCh?

Syntax	SDH:PMOVement:RX<Pt>:FETCh? <pointer>,<min_time>,<max_time>
Description	This query fetches the pointer values.
Parameters	<pointer> = <CHARACTER PROGRAM DATA> AU: AU-4 or AU-3 pointer movements TU: TU pointer movements. TU-3 or TU-12 or TU-11 depending on SDH interface setup. <min_time> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=31536000</i> Beginning of the interval in seconds. <max_time> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=31536000</i> End of the interval in seconds.
Response	{<pointermovements>}* = <EXPRESSION RESPONSE DATA> The response is all pointer movements taking place in the requested time interval. Format: (pointerChange0,timestamp0),(pointerChange1,timestamp1),...
Example	SDH:PMOV:RX1:FETC? AU,0,3600 → (1,10.000),(-1,15.002)
Notes	The interval is closed, i.e., it includes both endpoints. The displayed resolution of the timestamps is 1/1000 second = 0.001s.

10.5 Status

10.5.1 SDH:STATus:RX<Pt>:AESummary[:EVENT]?

Syntax	SDH:STATus:RX<Pt>:AESummary[:EVENT]?
Description	This query returns the alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of SDH:STAT:RX<Pt>:ALAR1[:EVENT]? High-order alarm DB2 (2) = Summary bit of SDH:STAT:RX<Pt>:ALAR2[:EVENT]? Low-order alarm DB3 (4) = Summary bit of SDH:STAT:RX<Pt>:ERR1[:EVENT]? DB4 (8) = Summary bit of SDH:STAT:RX<Pt>:ERR2[:EVENT]? DB5 (16) = Summary bit of SDH:STAT:RX<Pt>:ALAR3[:EVENT]? STL alarm DB6 (32) = Summary bit of SDH:STAT:RX<Pt>:ERR3[:EVENT]? STL error DB7 - DB16 = NOT USED
Example	SDH:STAT:RX1:AES? → 3
Note	SDH can embed E1, E3 or E4 so if a PDH signal is embedded it is a good idea to send the following query STAT:INT:PORT<Pt>[:EVENT]? to see if there is alarms or error at the embedded signal.

10.5.2 SDH:STATus:RX<Pt>:AESummary:CONDition?

Syntax	SDH:STATus:RX<Pt>:AESummary:CONDition?
Description	This query returns alarms and errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as SDH:STAT:RX<Pt>:AESummary[:EVENT]?
Example	SDH:STAT:RX1:AES:COND? → 3
Note	

10.5.3 SDH:STATus:RX<Pt>:ALARm<section>[:EVENT]?

Syntax	SDH:STATus:RX<Pt>:ALARm<section>[:EVENT]?
Description	This query returns one of the alarms event register.
Parameters	<Pt> = Port number <section> = Physical- and high-order path alarms(1), Low-order path and tandem connection alarms(2) or STL alarms(3)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> <section> = 1: DB1 (1) = LOS, Loss of signal DB2 (2) = LOF, Loss of frame DB3 (4) = OOF, Out of frame DB4 (8) = MS-AIS, Multiplex section - alarm indication signal DB5 (16) = MS-RDI, Multiplex section - remote defect indicator DB6 (32) = AU-AIS, Administrative unit - alarm indication signal DB7 (64) = AU-LOP, Administrative unit - loss of pointer DB8 (128) = HP-TIM, High-order path - trace identifier mismatch DB9 (256) = HP-PLM, High-order path - payload label mismatch DB10 (512) = HP-UNEQ, High-order path - unequipped DB11 (1024) = HP-RDI, High-order path - remote defect indicator DB12 (2048) = TU-AIS, Tributary unit - alarm indication signal DB13 (4096) = TU-LOP, Tributary unit - loss of pointer DB14 (8192) = TU-LOM, Tributary unit - loss of multi frame DB15 (16384) = G-AIS, Generic alarm indication signal DB16 = NOT USED <section> = 2: DB1 (1) = LP-TIM, Low-order path - trace identifier mismatch DB2 (2) = LP-UNEQ, Low-order path - unequipped DB3 (4) = LP-RDI, Low-order path - remote defect indicator DB4 (8) = LSS, Loss of signal synchronization DB5 = NOT USED DB6 (32) = LP-PLM, Low-order path - payload label mismatch DB7 (64) = TC-UNEQ, Tandem connection - unequipped DB8 (128) = TC-LTC, Tandem connection - loss of tandem connection DB9 (256) = TC-TIM, Tandem connection - trace identifier mismatch DB10 (512) = TC-AIS, Tandem connection - alarm indication signal DB11 (1024) = TC-RDI, Tandem connection - remote defect indicator DB12 (2048) = TC-ODI, Tandem connection - outgoing defect indicator DB13 - DB16 = NOT USED <section> = 3: DB1 (1) = STL LOF DB2 (2) = STL OOF DB3 (4) = STL LOR DB4 (8) = STL OOR DB5 (16) = OLA DB6 - DB16 = NOT USED
Example	SDH:STAT:RX1:ALAR1? → 1
Note	

10.5.4 SDH:STATus:RX<Pt>:ALARm<section>:CONDition?

Syntax	SDH:STATus:RX<Pt>:ALARm<section>:CONDition?
Description	This query returns one of the alarms condition registers.
Parameters	<Pt> = Port number <section> = Physical- and high-order path alarms(1), Low-order path and tandem connection alarms(2) or STL alarms(3)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as SDH:STATus:RX<Pt>:ALARm<section>[:EVENT]?
Example	SDH:STAT:RX1:ALAR1:COND? → 1
Note	

10.5.5 SDH:STATus:RX<Pt>:ERRor<section>[:EVENT]?

Syntax	SDH:STATus:RX<Pt>:ERRor<section>[:EVENT]?
Description	This query returns the errors event register.
Parameters	<Pt> = Port number <section> = (1-3)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> <section> = 1: DB1 (1) = A1A2 DB2 (2) = B1 DB3 (4) = B2 DB4 (8) = MS-REI DB5 (16) = B3 DB6 (32) = HP-REI DB7 (64) = V5/LP-B3 DB8 (128) = LP-REI DB9 (256) = PRBS DB10 (512) = TU-NDF DB11 (1024) = AU-NDF DB12 (2048) = APS DB13 - DB16 = NOT USED <section> = 2: DB1 (1) = TU-NEG DB2 (2) = TU-POS DB3 (4) = AU-NEG DB4 (8) = AU-POS DB5 (16) = NOT USED DB6 (32) = TC-IEC DB7 (64) = TC-BIP-2 DB8 (128) = TC-REI DB9 (256) = TC-OEI DB10 - DB16 = NOT USED <section> = 3: DB1 (1) = A1A2-STL DB2 - DB16 = NOT USED
Example	SDH:STAT:RX1:ERR1? → 3
Note	

10.5.6 SDH:STATus:RX<Pt>:ERRor<section>:CONDition?

Syntax	SDH:STATus:RX<Pt>:ERRor<section>:CONDition?
Description	This query returns errors condition register.
Parameters	<Pt> = Port number <section> = (1-3)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as SDH:STATus:RX<Pt>:ERRor<section>[:EVENT]?
Example	SDH:STAT:RX1:ERR1:COND? → 3
Note	

10.5.7 SDH:STATus:RX<Pt>:PSLevel?

Syntax	SDH:STATus:RX<Pt>:PSLevel?
Description	This query returns the physical signal level. Unit: dBm.
Parameter	<Pt> = Port number
Response	<signallevel> = <STRING RESPONSE DATA> "N/A": Module not present or not ready. - Electrical(STM1) - " <power> dBm": Min: "< -48 dBm", Max: "Exceeds Level" - Optical(Both module types) - " <power> dBm": Min: "< -27 dBm", Max: "Exceeds Level"
Example	SDH:STAT:RX1:PSL? → "-3 dBm"
Note	

10.5.8 SDH:STATus:TX<Pt>:PSLevel?

Syntax	SDH:STATus:TX<Pt>:PSLevel?
Description	This query returns the physical signal level. Unit: dBm.
Parameter	<Pt> = Port number
Response	<signallevel> = <STRING RESPONSE DATA> " <power> dBm": Min: "< -27 dBm", Max: "Exceeds Level" "N/A": Module not present or not ready.
Example	SDH:STAT:TX1:PSL? → "-3 dBm"
Note	Only available for Optical.

10.5.9 SDH:STATus:RX<Pt>:PDEViation?

Syntax	SDH:STATus:RX<Pt>:PDEViation? [<unit>]
Description	This query returns the physical deviation.
Parameters	<Pt> = Port number <unit> = <CHARACTER PROGRAM DATA> PPM = Parts per million BPS = Bits per second DEFault = PPM
Response	<deviation> = <NR2 NUMERIC RESPONSE DATA>
Example	SDH:STAT:RX1:PDEV? PPM → 0
Note	

10.5.10 SDH:STATus:RX<Pt>:PBRate?

Syntax	SDH:STATus:RX<Pt>:PBRate?
Description	This query returns the physical bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STAT:RX1:PBR? → 155520000
Note	

10.5.11 SDH:STATus:RX<Pt>:DIFFerence?

Syntax	SDH:STATus:RX<Pt>:DIFFerence?
Description	This query returns physical bit rate difference between port A and port B (RX1 - RX2). Units: ppm, bps and bits.
Parameter	<Pt> = Port number
Response	<ppm> = <NR1 NUMERIC RESPONSE DATA>
	<bps> = <NR1 NUMERIC RESPONSE DATA>
	<acc> = <NR1 NUMERIC RESPONSE DATA> Accumulated difference in bits.
Example	SDH:STAT:RX1:DIFF? → -1,-4,-324
Note	A valid response is only available if both RX1 and RX2 are on. Using either RX1 or RX2 will give the same results.

10.5.12 SDH:STATus:RX<Pt>:RACCumulated

Syntax	SDH:STATus:RX<Pt>:RACCumulated
Description	This command resets the accumulated difference.
Parameter	<Pt> = Port number
Response	None.
Example	SDH:STAT:RX1:RACC
Note	Using either RX1 or RX2 will give the same results.

10.5.13 SDH:STATus:RX<Pt>:PPBRate?

Syntax	SDH:STATus:RX<Pt>:PPBRate?
Description	This query returns physical pattern bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:STAT:RX1:PPBR? → 149760000
Note	

10.5.14 SDH:STATus:RX<Pt>:CAPTure:SOH:TRACe?

Syntax	SDH:STATus:RX<Pt>:CAPTure:SOH:TRACe?
Description	This query returns the SOH trace (J0) for the latest captured frames.
Parameter	<Pt> = Port number
Response	<J0_trace> = <STRING RESPONSE DATA>
Example	SDH:STAT:RX1:CAPT:SOH:TRAC? → "Message_Test_J0"
Note	If one of the alarms LOS or LOF is present, an empty string is returned.

10.5.15 SDH:STATus:RX<Pt>:CAPTure<Frame>:SOH?

Syntax	SDH:STATus:RX<Pt>:CAPTure<Frame>:SOH? <SOH-byte>
Description	This query returns the SOH bytes from the selected frame. 256 new frames are captured every second.
Parameters	<Pt> = Port number
	<Frame> = Frame number (1-64)
	<SOH-byte> = <CHARACTER PROGRAM DATA> A1: Returns 3 bytes. A2: Returns 3 bytes. J0: Returns 3 bytes. B1: Returns 3 bytes. E1: Returns 3 bytes. F1: Returns 3 bytes. D1: Returns 3 bytes. D2: Returns 3 bytes. D3: Returns 3 bytes. H1: Returns 3 bytes. H2: Returns 3 bytes. H3: Returns 3 bytes. B2: Returns 3 bytes. K1: Returns 3 bytes. K2: Returns 3 bytes. D4: Returns 3 bytes. D5: Returns 3 bytes. D6: Returns 3 bytes. D7: Returns 3 bytes. D8: Returns 3 bytes. D9: Returns 3 bytes. D10: Returns 3 bytes. D11: Returns 3 bytes. D12: Returns 3 bytes. S1: Returns 3 bytes. Z2: Returns 3 bytes. E2: Returns 3 bytes. M0: Returns 1 byte. ¹ M1: Returns 1 byte.
Response	<byte1>[,<byte2>[,<byte3>]] = <HEXADECIMAL NUMERIC RESPONSE DATA> Refer to <SOH-byte> parameter description above to see how many bytes this command returns.
Examples	SDH:STAT:RX1:CAPT64:SOH? A1 → #HF6,#HF6,#HF6 SDH:STAT:RX2:CAPT23:SOH? H1 → #H69,#H93,#H93 SDH:STAT:RX1:CAPT1:SOH? M1 → #H00
Note	If one of the alarms LOS or LOF is present NaN (section 1.6.1) is returned. ¹ Only valid for SDH:RX<Pt>:STMLevel = 64 or 256.

10.5.16 SDH:STATus:RX<Pt>:CAPTure:VC4:POH:TRACe?

Syntax	SDH:STATus:RX<Pt>:CAPTure:VC4:POH:TRACe?
Description	This query returns the VC4 path overhead trace (J1) for the latest captured frames. 64 new frames are captured every second.
Parameter	<Pt> = Port number
Response	<J1_trace> = <STRING RESPONSE DATA>
Example	SDH:STAT:RX1:CAPT:VC4:POH:TRAC? → "Message_Test_J1"
Note	If one of the alarms LOS, LOF, HPUNEQ or AULOP is present, an empty string is returned.

10.5.17 SDH:STATus:RX<Pt>:CAPTure<Frame>:VC4:POH?

Syntax	SDH:STATus:RX<Pt>:CAPTure<Frame>:VC4:POH? <POH-byte>
Description	This query returns the VC4 path overhead bytes from the selected frame. 256 new frames are captured every second.
Parameters	<Pt> = Port number
	<Frame> = Frame number (1-64)
	<POH-byte> = <CHARACTER PROGRAM DATA> J1: J1 byte. B3: B3 byte. C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. F3: F3 byte. K3: K3 byte. N1: N1 byte.
Response	<byte> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:STAT:RX1:CAPT1:VC4:POH? H4 → #HFF
Note	If one of the alarms LOS, LOF, HPUNEQ or AULOP is present NaN (section 1.6.1) is returned.

10.5.18 SDH:STATus:RX<Pt>:CAPTure:VC3:POH:TRACe?

Syntax	SDH:STATus:RX<Pt>:CAPTure:VC3:POH:TRACe?
Description	This command queries the VC3 path overhead trace (J1) for the latest captured frames. 64 new frames are captured every second.
Parameter	<Pt> = Port number
Response	<J1_trace> = <STRING RESPONSE DATA>
Example	SDH:STAT:RX1:CAPT:VC3:POH:TRAC? → "Message_Test_J1"
Note	If one of the alarms LOS, LOF, HPUNEQ or LPUNEQ is present, an empty string is returned.

10.5.19 SDH:STATus:RX<Pt>:CAPTure<Frame>:VC3:POH?

Syntax	SDH:STATus:RX<Pt>:CAPTure<Frame>:VC3:POH? <POH-byte>
Description	This query returns the VC3 path overhead bytes from the selected frame. 64 new frames are captured every second.
Parameters	<Pt> = Port number
	<Frame> = Frame number (1-64)
	<POH-byte> = <CHARACTER PROGRAM DATA> J1: J1 byte. B3: B3 byte. C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. F3: F3 byte. K3: K3 byte. N1: N1 byte.
Response	<byte> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:STAT:RX1:CAPT1:VC3:POH? C2 → #HA3
Note	If one of the alarms LOS, LOF, HPUNEQ or LPUNEQ is present NaN (section 1.6.1) is returned. Use the SDH:RX<Pt>:VC3:POH:CMASk command to selected which bytes to be captured.

10.5.20 SDH:STATus:RX<Pt>:CAPTure:VC12:POH:TRACe?

Syntax	SDH:STATus:RX<Pt>:CAPTure:VC12:POH:TRACe?
Description	This query returns VC12 path overhead trace (J2) for the latest captured frames. 64 new frames are captured every second.
Parameter	<Pt> = Port number
Response	<J2_trace> = <STRING RESPONSE DATA>
Example	SDH:STAT:RX1:CAPT:VC12:POH:TRAC? → "Message_Test_J2"
Note	If one of the alarms LOS, LOF, HPUNEQ or LPUNEQ is present, an empty string is returned.

10.5.21 SDH:STATus:RX<Pt>:CAPTure<Frame>:VC12:POH?

Syntax	SDH:STATus:RX<Pt>:CAPTure<Frame>:VC12:POH? <POH-byte>
Description	This query returns the VC12 path overhead bytes from the selected frame. 64 new frames are captured every second.
Parameters	<Pt> = Port number <Frame> = Frame number (1-64) <POH-byte> = <CHARACTER PROGRAM DATA> V5: V5-SL byte. J2: J2 byte. N2: N2 byte. K4: K4 byte.
Response	<byte> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:STAT:RX1:CAPT1:VC12:POH? V5 → #H04
Note	If one of the alarms LOS, LOF, HPUNEQ or LPUNEQ is present NaN (section 1.6.1) is returned.

10.5.22 SDH:STATus:RX<Pt>:CAPTure:VC11:POH:TRACe?

Syntax	SDH:STATus:RX<Pt>:CAPTure:VC11:POH:TRACe?
Description	This query returns VC11 path overhead trace (J2) for the latest captured frames. 64 new frames are captured every second.
Parameter	<Pt> = Port number
Response	<J2_trace> = <STRING RESPONSE DATA>
Example	SDH:STAT:RX1:CAPT:VC11:POH:TRAC? → "Message_Test_J2"
Note	If one of the alarms LOS, LOF, HPUNEQ or LPUNEQ is present, an empty string is returned.

10.5.23 SDH:STATus:RX<Pt>:CAPTure<Frame>:VC11:POH?

Syntax	SDH:STATus:RX<Pt>:CAPTure<Frame>:VC11:POH? <POH-byte>
Description	This query returns the VC11 path overhead bytes from the selected frame. 64 new frames are captured every second.
Parameters	<Pt> = Port number <Frame> = Frame number (1-64) <POH-byte> = <CHARACTER PROGRAM DATA> V5: V5-SL byte. J2: J2 byte. N2: N2 byte. K4: K4 byte.
Response	<byte> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:STAT:RX1:CAPT1:VC11:POH? V5 → #H04
Note	If one of the alarms LOS, LOF, HPUNEQ or LPUNEQ is present NaN (section 1.6.1) is returned.

10.5.24 SDH:STATus:RX<Pt>:CAPTure:AU3:VC3:POH:TRACe?

Syntax	SDH:STATus:RX<Pt>:CAPTure:AU3:VC3:POH:TRACe?
Description	This query returns the VC3 path overhead trace (J1) for the latest captured frames. 64 new frames are captured every second.
Parameters	<Pt> = Port number
Response	<J1_trace> = <STRING RESPONSE DATA>
Example	SDH:STAT:RX1:CAPT:AU3:VC3:POH:TRAC? → "Message_Test_J1"
Note	If one of the alarms LOS, LOF, HPUNEQ or AULOP is present, an empty string is returned.

10.5.25 SDH:STATus:RX<Pt>:CAPTure<Frame>:AU3:VC3:POH?

Syntax	SDH:STATus:RX<Pt>:CAPTure<Frame>:AU3:VC3:POH? <POH-byte>
Description	This query returns the VC3 path overhead bytes from the selected frame. 64 new frames are captured every second.
Parameters	<Pt> = Port number <Frame> = Frame number (1-64) <POH-byte> = <CHARACTER PROGRAM DATA> J1: J1 byte. B3: B3 byte. C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. F3: F3 byte. K3: K3 byte. N1: N1 byte.
Response	<byte> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SDH:STAT:RX1:CAPT1:AU3:VC3:POH? H4 → #HFF
Note	If one of the alarms LOS, LOF, HPUNEQ or AULOP is present NaN (section 1.6.1) is returned.

10.6 APS

10.6.1 SDH:APS:STARt

Syntax	SDH:APS:STARt
Description	This command starts the APS (Automatic Protection Switching) measurement.
Parameter	None.
Response	None.
Example	SDH:APS:STAR
Note	

10.6.2 SDH:APS:STOP

Syntax	SDH:APS:STOP
Description	This command stops the APS (Automatic Protection Switching) measurement.
Parameter	None.
Response	None.
Example	SDH:APS:STOP
Note	

10.6.3 SDH:APS:RX<Pt>:PINTerpret?

Syntax	SDH:APS:RX<Pt>:PINTerpret?
Description	This query returns the protocol interpretation.
Parameter	<Pt> = Port number
Response	<interpretation> = <STRING RESPONSE DATA>
Example	SDH:APS:RX1:PINT? → "00:00:19 Number 0 Time: 0.000ms ----- k1: Signal degrade (protection) Destination Node (K1) 2 k2: Short Source Node (K2) 7"
Note	

10.6.4 SDH:APS:RX<Pt>:NUMBer?

Syntax	SDH:APS:RX<Pt>:NUMBer?
Description	This query returns the number of times has measured.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:APS:RX1:NUMB? → 17
Note	

10.6.5 SDH:APS:RX<Pt>:ATIME?

Syntax	SDH:APS:RX<Pt>:ATIME?
Description	This query returns the average time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	SDH:APS:RX1:ATIM? → 4.000
Note	The maximum measurable time is 10000 ms. The maximum measurable time will be responded if the result exceeds 10000 ms.

10.6.6 SDH:APS:RX<Pt>:MTIMe?

Syntax	SDH:APS:RX<Pt>:MTIMe?
Description	This query returns the maximum time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
	<limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	SDH:APS:RX1:MTIM? → 4.000,0
Note	The maximum measurable time is 10000 ms. The maximum measurable time will be responded if the result exceeds 10000 ms.

10.6.7 SDH:APS:RX<Pt>:LTIMe?

Syntax	SDH:APS:RX<Pt>:LTIMe?
Description	This query returns the least (minimum) time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	SDH:APS:RX1:LTIM? → 4.000
Note	The maximum measurable time is 10000 ms. The maximum measurable time will be responded if the result exceeds 10000 ms.

10.6.8 SDH:APS:RX<Pt>:CTIMe?

Syntax	SDH:APS:RX<Pt>:CTIMe?
Description	This query returns the current time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<current> = <NR2 NUMERIC RESPONSE DATA>
Example	SDH:APS:RX1:CTIM? → 4.000
Note	The maximum measurable time is 10000 ms. The maximum measurable time will be responded if the result exceeds 99999.999 ms.

10.6.9 SDH:APS:RX<Pt>:EVENTt

Syntax	SDH:APS:RX<Pt>:EVENTt <event>
Description	This command sets the time reference event.
Parameters	<Pt> = Port number <event> = <CHARACTER PROGRAM DATA> LOS = Loss of signal LOF = Loss of frame OOF = Out of frame MSAIS = MS alarm indication signal MSRDI = MS remote defect indicator APSS = APS switch-over AUAIS = AU alarm indication signal AULOP = AU loss of pointer HPTIM = HP trace identifier mismatch HPPLM = HP payload label mismatch HPUNEQ = HP unequipped TULOM = TU loss of multiframe TUAIS = TU alarm indication signal TULOP = TU loss of pointer LPTIM = LP trace identifier mismatch LPPLM = LP payload label mismatch LPUNEQ = LP unequipped A1A2 = Frame alignment word error B1 = B1 checksum byte error B2 = B2 checksum byte error MSREI = MS remote error indication B3 = B3 checksum byte error V5 = B3 checksum of the low-order path PERRor = Pattern error ANYERROR = Any errors <i>DEFault = LOS</i>
Response	None.
Example	SDH:APS:RX1:EVEN LOF
Note	

Syntax	SDH:APS:RX<Pt>:EVENT?
Description	This query returns the time reference event.
Parameter	<Pt> = Port number
Response	<event> = <CHARACTER RESPONSE DATA>
Example	SDH:APS:RX1:EVEN? → LOF
Note	

10.6.10 SDH:APS:RX<Pt>:MLIMit

Syntax	SDH:APS:RX<Pt>:MLIMit <max>
Description	This command sets the time reference maximum limit. Unit: ms.
Parameters	<Pt> = Port number <max> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 10000.000, DEFault = 50.000</i>
Response	None.
Example	SDH:APS:RX1:MLIM 50.000
Note	

Syntax	SDH:APS:RX<Pt>:MLIMit?
Description	This query returns the time reference maximum limit. Unit: ms.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
Example	SDH:APS:RX1:MLIM? → 50.000
Note	

10.6.11 SDH:APS:RX<Pt>:PERiod

Syntax	SDH:APS:RX<Pt>:PERiod <period>
Description	This command sets the error free period.
Parameters	<Pt> = Port number <period> = <NUMERIC PROGRAM DATA> 1,10,20,30,40,50,60,70,80,90,100 Unit ms <i>DEFault</i> = 1
Response	None
Example	SDH:APS:RX1:PER 1
Note	

Syntax	SDH:APS:RX<Pt>:PERiod?
Description	This query returns the error free period.
Parameter	<Pt> = Port number
Response	<period> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:APS:RX1:PER? → 1
Note	

10.6.12 SDH:APS:RX<Pt>:CONFig

Syntax	SDH:APS:RX<Pt>:CONFig <protection>,<path>
Description	This command sets the protection type and the path or architecture.
Parameters	<Pt> = Port number <protection> = <CHARACTER PROGRAM DATA> RING = Ring protection LINear = Linear <i>DEFault</i> = RING <path> = <CHARACTER PROGRAM DATA> Ring Path: SHRT = Short path LONG = Long path <i>DEFault</i> = SHRT Linear Architecture: 1P1 = 1+1 Architecture 1N = 1:n Architecture
Response	None.
Example	SDH:APS:RX1:CONF RING,SHRT
Notes	

Syntax	SDH:APS:RX<Pt>:CONFig?
Description	This query returns the protection type and the path or architecture.
Parameter	<Pt> = Port number
Response	<protection> = <CHARACTER RESPONSE DATA> <path> = <CHARACTER PROGRAM DATA>
Example	SDH:APS:RX1:CONF? → RING,SHRT
Note	

10.6.13 SDH:APS:RX<Pt>:RTYPE

Syntax	SDH:APS:RX<Pt>:RTYPE <type>
Description	This command sets the request type for the transmitter.
Parameter	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> Ring Request Types: for SDH:APS:RX<Pt>:CONFig? → RING,.... RLOP = Lockout of protection (span) RFSS = Forced switch (span) RFSR = Forced switch (ring) RSFS = Signal fail (span) RSFR = Signal fail (ring) RSDP = Signal degrade (protection) RSDS = Signal degrade (span) RSDR = Signal degrade (ring) RMSS = Manual switch (span) RMSR = Manual switch (ring) RWTR = Wait to restore REXS = Exercise (span) REXR = Exercise (ring) RRRS = Reverse request (span) RRRR = Reverse request (ring) RNRQ = No request <i>DEFault = RLOP</i> Linear Request Types: for SDH:APS:RX<Pt>:CONFig? → LIN,.... LLOP = Lockout of protection LFSW = Forced switch LSFH = Signal fail (high priority) LSFL = Signal fail (low priority) LSDH = Signal degrade (high priority) LSDL = Signal degrade (low priority) LMSW = Manual switch (ring) LWTR = Wait to restore LEXC = Exercise LRRQ = Reverse request LDNR = Do not revert LNRQ = No request <i>DEFault = LLOP</i>
Response	None.
Example	SDH:APS:RX1:RTYP RLOP
Note	Use the SDH:APS:RX<Pt>:APPLy command to apply the request to the transmitter.

Syntax	SDH:APS:RX<Pt>:RTYPE?
Description	This query returns the request type for the transmitter.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SDH:APS:RX1:RTYP? → RLOP
Note	

10.6.14 SDH:APS:RX<Pt>:K1

Syntax	SDH:APS:RX<Pt>:K1 <value>
Description	This command sets the destination node/source channel (K1).
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=15, DEFault = 0</i>
Response	None.
Example	SDH:APS:RX1:K1 3
Notes	Cannot be changed if the SDH:APS:CONFIg command is set to LIN, 1P1. Changes to SDH:APS:CONFIg will reset this value to 0.

Syntax	SDH:APS:RX<Pt>:K1?
Description	This query returns the destination node/source channel (K1).
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:APS:RX1:K1? → 3
Note	

10.6.15 SDH:APS:RX<Pt>:K2

Syntax	SDH:APS:RX<Pt>:K2 <value>
Description	This command sets the source node/bridged channel (K2).
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=15, DEFault = 0</i>
Response	None.
Example	SDH:APS:RX1:K2 3
Notes	Cannot be changed if the SDH:APS:CONFIg command is set to LIN, 1P1. Changes to SDH:APS:CONFIg will reset this value to 0.

Syntax	SDH:APS:RX<Pt>:K2?
Description	This query returns the source node/bridged channel (K2).
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:APS:RX1:K2? → 3
Note	

10.6.16 SDH:APS:RX<Pt>:APPLy

Syntax	SDH:APS:RX<Pt>:APPLy
Description	This command applies the K1/K2 request setup to the transmitter.
Parameter	<Pt> = Port number
Response	None.
Example	SDH:APS:RX1:APPL
Notes	

10.7 Tributary Scan

10.7.1 SDH:TSCan:STARt

Syntax	SDH:TSCan:STARt
Description	This command starts the tributary scan test.
Parameter	None.
Response	None.
Example	SDH:TSC:STAR
Note	It is possible to run only one test or measurement at a time. The SDH interface must be active for at least one of the receivers.

10.7.2 SDH:TSCan:STOP

Syntax	SDH:TSCan:STOP
Description	This command stops the tributary scan test.
Parameter	None.
Response	None.
Example	SDH:TSC:STOP
Note	

10.7.3 SDH:TSCan:RX<Pt>:NHOCContainer?

Syntax	SDH:TSCan:RX<Pt>:NHOCContainer?
Description	This query returns the number of High-order containers (VC-4/3)
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:TSC:RX1:NHOC? → 4
Note	If '0' is returned, no High-order containers were found. To get more information, use the SDH:TSCan:RX<Pt>:MUX? query.

10.7.4 SDH:TSCan:RX<Pt>:GHOCContainer?

Syntax	SDH:TSCan:RX<Pt>:GHOCContainer?
Description	This query returns the state of High-order containers (VC-4/3)
Parameter	<Pt> = Port number
Response	({<value>},)+ = <NR1 NUMERIC RESPONSE DATA> The values are presented in ascending order, meaning that VC-4 #1 is the first on the list. 0 = No alarms or errors. 1 = Alarms or errors present.
Example	SDH:TSC:RX1:GHOC? → (0,0,1,0)
Note	If there is one or more results, the last ",," is always removed.

10.7.5 SDH:TSCan:RX<Pt>:SHOCContainer

Syntax	SDH:TSCan:RX<Pt>:SHOCContainer <VC4>
Description	This command sets the High-order container (VC-4/3) for scanning.
Parameters	<Pt> = Port number <VC4> = High-order container number <i>MINimum=1, MAXimum=768</i>
Response	None.
Example	SDH:TSC:RX1:SHOC 2
Note	

10.7.6 SDH:TSCan:RX<Pt>:SHOCContainer?

Syntax	SDH:TSCan:RX<Pt>:SHOCContainer?
Description	This query returns the High-order container (VC-4/3) set for scanning.
Parameter	<Pt> = Port number
Response	<VC4> = High-order container number
Example	SDH:TSC:RX1:SHOC? → 2
Note	

10.7.7 SDH:TSCan:RX<Pt>:DHOCContainer?

Syntax	SDH:TSCan:RX<Pt>:DHOCContainer? <VC4/3>
Description	This query returns the detailed alarm and error information from a High-order container (VC-4/3).
Parameters	<Pt> = Port number <VC4> = High-order container number <i>MINimum=1, MAXimum=768</i>
Response	<selected>, = <STRING RESPONSE DATA>. {RXn} _□ {High-order}, separated by one space character. RXn = RX1 or RX2 High-order = VC-4#0 ... VC-4#64 or VC-3#0 ... VC-3#192 ({<alarmerrors>,*}) = <STRING RESPONSE DATA> List of alarms and errors.
Example	SDH:TSC:RX1:DHOC? 1 → "RX1 VC-4#1",("B1","A1A2")
Note	If there is one or more responses, the last "," is always removed.

10.7.8 SDH:TSCan:RX<Pt>:NLOCContainer?

Syntax	SDH:TSCan:RX<Pt>:NLOCContainer?
Description	This query returns the number of Low-order containers (VC-3/12/11).
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:TSC:RX1:NLOC? → 3
Note	

10.7.9 SDH:TSCan:RX<Pt>:GLOCContainer?

Syntax	SDH:TSCan:RX<Pt>:GLOCContainer?
Description	This query returns the state of Low-order containers (VC-3/12/11).
Parameter	<Pt> = Port number
Response	({<value>,*}) = <NR1 NUMERIC RESPONSE DATA> The values are presented in ascending order, meaning that VC-4 #1 is the first in the list. 0 = No alarms or errors. 1 = Alarms or errors present.
Example	SDH:TSC:RX1:GLOC? → (0,1,1)
Note	If there is one or more responses, the last "," is always removed.

10.7.10 SDH:TSCan:RX<Pt>:DLOCContainer?

Syntax	SDH:TSCan:RX<Pt>:DLOCContainer? <VC3/12/11>
Description	This query returns the detailed alarm and error information from a Low-order container (VC-3/12/11).
Parameters	<Pt> = Port number <VC3/12/11> = Low-order container number <i>MINimum=1, MAXimum=84</i>
Response	<selected>, = <STRING RESPONSE DATA>. {RXn} _□ {High-order}:{Low-order}, First separated by one space character and next with a colon char. RXn = RX1 or RX2 High-order = VC-4#0 ... VC-4#64 or VC-3#0 ... VC-3#192 Low-order = VC-3#1 ... VC-3#3 or VC-12#1 ... VC-12#63 or VC-11#1 ... VC-11#84 ({<alarmerrors>,*}) = <STRING RESPONSE DATA> List of alarms and errors.
Example	SDH:TSC:RX1:DLOC? 1 → "RX1 VC-4#1:VC-3#1",("B1","A1A2")
Notes	To select the High-order container, use the SDH:TSCan:RX<rx>:SHOCContainer command. If there is one or more responses, the last "," is always removed.

10.7.11 SDH:TSCan:RX<Pt>:DMUX?

Syntax	SDH:TSCan:RX<Pt>:DMUX?
Description	This query returns the detailed alarm and error information from the MUX.
Parameter	<Pt> = Port number
Response	<selected> = <STRING RESPONSE DATA>. {Rx} MUX
	({<alarmerrors>, }*) = <STRING RESPONSE DATA> List of alarms and errors.
Example	SDH:TSC:RX1:DMUX? → "Rx1 MUX", ("LOS", "LOF", "OOF")
Notes	This query is only available when no High-order containers are present. To determine if MUX is available, use the SDH:TSCan:RX<Pt>:NHOCContainer? query. If there is one or more responses, the last ", " is always removed.

10.8 RTD

This section document commands for the Round Trip Delay application.
Commands for general RTD settings are described in section 17.1 on page 1003.

10.8.1 SDH:RTD:RX<Pt>:MLIMit

Syntax	SDH:RTD:RX<Pt>:MLIMit <max>
Description	This command sets the time reference maximum limit. Unit: us.
Parameters	<Pt> = Port number <max> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0, MAXimum = 10000000.0, DEFault = MAXimum</i>
Response	None.
Example	SDH:RTD:RX1:MLIM 0.0
Note	

Syntax	SDH:RTD:RX<Pt>:MLIMit?
Description	This query returns the time reference maximum limit. Unit: us.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
Example	SDH:RTD:RX1:MLIM? → 0.0
Note	

10.8.2 SDH:RTD:RX<Pt>:NUMBER?

Syntax	SDH:RTD:RX<Pt>:NUMBER?
Description	This query returns the number of the RTD data.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	SDH:RTD:RX1:NUMB? → 2
Note	

10.8.3 SDH:RTD:RX<Pt>:ATIMe?

Syntax	SDH:RTD:RX<Pt>:ATIMe?
Description	This query returns the average time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	SDH:RTD:RX1:ATIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

10.8.4 SDH:RTD:RX<Pt>:MTIMe?

Syntax	SDH:RTD:RX<Pt>:MTIMe?
Description	This query returns the maximum time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA> <limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	SDH:RTD:RX1:MTIM? → 1.0,0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

10.8.5 SDH:RTD:RX<Pt>:LTIME?

Syntax	SDH:RTD:RX<Pt>:LTIME?
Description	This query returns the least (minimum) time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	SDH:RTD:RX1:LTIME? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

10.8.6 SDH:RTD:RX<Pt>:CTIME?

Syntax	SDH:RTD:RX<Pt>:CTIME?
Description	This query returns the current time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	SDH:RTD:RX1:CTIME? → 1.0
Note	The maximum measurable time will be responded if the result exceeds 99999999.9 us.

Chapter 11

SONET

Use `MEAS:SET:PORT<Pt>:TERM` to change the SDH/SONET terminology (see section [18.2.1](#)).

11.1 Receiver

11.1.1 SONet:RX<Pt>:INTerface

Syntax	SONet:RX<Pt>:INTerface <mode>
Description	This command sets the used interface or switches off the receiver.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Disables receiver ELECtrical: Electrical interface SFP: SFP/SFP+ optical interface CFP: CFP optical interface OPTical: Obsolete. For CMA 3000 backward compatibility only. Same as SFP <i>DEFault = OFF</i>
Response	None.
Example	SON:RX1:INT OFF
Note	

Syntax	SONet:RX<Pt>:INTerface?
Description	This query returns the used interface.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SON:RX1:INT? → OFF
Note	Returns OTN when SONET over OTN.

11.1.2 SONet:RX<Pt>:OCLevel

Syntax	SONet:RX<Pt>:OCLevel <level>
Description	This command sets the OC level of the SONET receiver.
Parameters	<Pt> = Port number <level> = <CHARACTER PROGRAM DATA> 3: OC-3 signal. 12: OC-12 signal. 48: OC-48 signal. 192: OC-192 signal. 768: OC-768 signal. <i>DEFault = 3</i>
Response	None.
Example	SON:RX1:OCL 3
Note	Setting the OC level may change the STS-3cSPE concatenation level.

Syntax	SONet:RX<Pt>:OCLevel?
Description	This query returns the OC level of the SONET receiver.
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:RX1:OCL? → 3
Note	

11.1.3 SONet:RX<Pt>:STSLevel

Syntax	SONet:RX<Pt>:STSLevel <level>
Description	This command sets the STS level of the SONET receiver.
Parameters	<Pt> = Port number <level> = <CHARACTER PROGRAM DATA> 3: STS-3 signal. 12: STS-12 signal. 48: STS-48 signal. 192: STS-192 signal. 768: STS-768 signal. <i>DEFault = 3</i>
Response	None.
Example	SON:RX1:STSL 3
Note	Setting the STS level may change the STS-3cSPE concatenation level.

Syntax	SONet:RX<Pt>:STSLevel?
Description	This query returns the STS level of the SONET receiver.
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:RX1:STSL? → 3
Note	

11.1.4 SONet:RX<Pt>:STS3c

Syntax	SONet:RX<Pt>:STS3c <sts>
Description	This command sets the STS Group(s) to be used in the signal structure.
Parameters	<Pt> = Port number <sts> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 768, DEFault = 1</i>
Response	None.
Example	SON:RX1:STS3 1
Note	The specified STS3c cannot exceed the OC level divided by the STS-3cSPE concatenation level.

Syntax	SONet:RX<Pt>:STS3c?
Description	This query returns STS Group(s) used in the signal structure.
Parameter	<Pt> = Port number
Response	<sts> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:RX1:STS3? → 1
Note	

11.1.5 SONet:RX<Pt>:CONCatenation

Syntax	SONet:RX<Pt>:CONCatenation <level>
Description	This command sets the STS concatenation level.
Parameters	<Pt> = Port number <level> = <CHARACTER PROGRAM DATA> STS1SPE STS3CSPE STS12C STS48C STS192C STS768C <i>DEFault = STS3CSPE</i>
Response	None.
Example	SON:RX1:CONC STS3CSPE
Note	Setting the STS concatenation level may change the OC level.

Syntax	SONet:RX<Pt>:CONCatenation?
Description	This query returns the STS concatenation level.
Parameter	<Pt> = Port number
Response	<level> = <CHARACTER RESPONSE DATA>
Example	SON:RX1:CONC? → STS3CSPE
Note	

11.1.6 SONet:RX<Pt>:CONTainer

Syntax	SONet:RX<Pt>:CONTainer <type>
Description	This command sets the container type (container-n).
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> C3 C4 C11 C12 <i>DEFault = C4</i>
Response	None.
Example	SON:RX1:CONT C4
Note	Setting the container type.

Syntax	SONet:RX<Pt>:CONTainer?
Description	This query returns the container type (container-n).
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SON:RX1:CONT? → C4
Note	

11.1.7 SONet:RX<Pt>:SSTRucture

Syntax	SONet:RX<Pt>:SSTRucture <structure>
Description	This command sets the expected SONET signal structure.
Parameters	<Pt> = Port number <structure> = <CHARACTER PROGRAM DATA> BULK: Bulk data in the STS3. E1: E1 signal in a VT2 in one or all STS's E3: E3 signal in a STS1 in one or all STS's DS1: DS1 signal in a VT15 in one or all STS's DS3: DS3 signal in a STS1 in one or all STS's E4: E4 signal in a STS3 in one or all STS's <i>DEFault = BULK</i>
Response	None.
Example	SON:RX1:SSTR BULK
Note	

Syntax	SONet:RX<Pt>:SSTRucture?
Description	This query returns the expected SONET signal structure.
Parameter	<Pt> = Port number
Response	<structure> = <CHARACTER RESPONSE DATA>
Example	SON:RX1:SSTR? → BULK
Note	

11.1.8 SONet:RX<Pt>:PATtern

Syntax	SONet:RX<Pt>:PATtern <pattern>
Description	This command sets the pattern to be expected as payload when SSTRucture is BULK.
Parameters	<Pt> = Port number <pattern> = <CHARACTER PROGRAM DATA> OFF USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS9: PRBS-9 pattern. PRBS11: PRBS-11 pattern. PRBS15: PRBS-15 pattern. PRBS20: PRBS-20 pattern. PRBS23: PRBS23 pattern. PRBS29: PRBS-29 pattern. PRBS31: PRBS-31 pattern. ALL0: Pattern of all zeros. ALL1: Pattern of all ones. ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 B2IN8: Random pattern with two ones for every eight bits. <i>DEFault = PRBS23</i>
Response	None.
Example	SON:RX1:PATT PRBS23
Note	

Syntax	SONet:RX<Pt>:PATtern?
Description	This query returns the pattern to be expected as payload when SSTRucture is BULK.
Parameter	<Pt> = Port number
Response	<pattern> = <CHARACTER RESPONSE DATA>
Example	SON:RX1:PATT? → PRBS23
Note	

11.1.9 SONet:RX<Pt>:UP32

Syntax	SONet:RX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATtern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Examples	SON:RX1:UP32 "01101"
Note	

Syntax	SONet:RX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	SON:RX1:UP32? → "01101"
Note	

11.1.10 SONet:RX<Pt>:UP2K

Syntax	SONet:RX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	SON:RX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when SON:RX1:PATT is USER2048BIT

Syntax	SONet:RX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	SON:RX1:UP2K? → "12DF"
Note	

11.1.11 SONet:RX<Pt>:PINVersion

Syntax	SONet:RX<Pt>:PINVersion <inverted>
Description	This command enables or disables PRBS pattern inversion (when SSTRucture is BULK).
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	SON:RX1:PINV OFF
Note	

Syntax	SONet:RX<Pt>:PINVersion?
Description	This query returns whether the PRBS pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inverted> = <BOOLEAN RESPONSE DATA>
Example	SON:RX1:PINV? → 0
Note	

11.1.12 SONet:RX<Pt>:TCM

Syntax	SONet:RX<Pt>:TCM <mode>
Description	This command sets the Tandem Connection Monitoring mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Off STS3: Z5 (STS3) STS1: Z5 (STS1) VT2: Z6 (VT2) VT15: Z6 (VT1.5) <i>DEFault = OFF</i>
Response	None.
Example	SON:RX1:TCM OFF
Note	

Syntax	SONet:RX<Pt>:TCM?
Description	This query returns Tandem Connection Monitoring mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SON:RX1:TCM? → OFF
Note	

11.1.13 SONet:RX<Pt>:TUG3

Syntax	SONet:RX<Pt>:TUG3 <id>
Description	This command sets the TUG-3 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: TUG-3 number one. 2: TUG-3 number two. 3: TUG-3 number three. <i>MINimum = 1, MAXimum = 3, DEFault = 1</i>
Response	None.
Example	SON:RX1:TUG3 1
Note	This value influences the channel number.

Syntax	SONet:RX<Pt>:TUG3?
Description	This query returns TUG3 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:RX1:TUG3? → 1
Note	

11.1.14 SONet:RX<Pt>:VTG

Syntax	SONet:RX<Pt>:VTG <id>
Description	This command sets the VTG number for signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: VTG number one. 2: VTG number two. ... 7: VTG number seven. <i>MINimum = 1, MAXimum = 7, DEFault = 1</i>
Response	None.
Example	SON:RX1:VTG 1
Note	This value influences the channel number.

Syntax	SONet:RX<Pt>:VTG?
Description	This query returns VTG number for signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:RX1:VTG? → 1
Note	

11.1.15 SONet:RX<Pt>:VT2

Syntax	SONet:RX<Pt>:VT2 <id>
Description	This command sets the VT2 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: VT2 number one. 2: VT2 number two. 3: VT2 number three. <i>MINimum = 1, MAXimum = 3, DEFault = 1</i>
Response	None.
Example	SON:RX1:VT2 1
Note	This value influences the channel number.

Syntax	SONet:RX<Pt>:VT2?
Description	This query returns VT2 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:RX1:VT2? → 1
Note	

11.1.16 SONet:RX<Pt>:VT15

Syntax	SONet:RX<Pt>:VT15 <id>
Description	This command sets the VT1.5 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: VT1.5 number one. 2: VT1.5 number two. 3: VT1.5 number three. 4: VT1.5 number four. <i>MINimum = 1, MAXimum = 4, DEFault = 1</i>
Response	None.
Example	SON:RX1:VT15 1
Note	This value influences the channel number.

Syntax	SONet:RX<Pt>:VT15?
Description	This query returns VT1.5 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:RX1:VT15? → 1
Note	

11.1.17 SONet:RX<Pt>:CHANnel

Syntax	SONet:RX<Pt>:CHANnel <id>
Description	This command sets the channel number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=84, DEFault = 1</i>
Response	None.
Example	SON:RX1:CHAN 1
Note	This value influences the TUG-3, VTG, VT2 and VT1.5 numbers.

Syntax	SONet:RX<Pt>:CHANnel?
Description	This query returns the channel number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:RX1:CHAN? → 1
Note	

11.1.18 SONet:RX<Pt>:MAPPING

Syntax	SONet:RX<Pt>:MAPPING <type>
Description	This command sets the mapping type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> SYNChronous: Synchronous mapping. ASYNchronous: Asynchronous mapping. <i>DEFault = SYNC</i>
Response	None.
Example	SON:RX1:MAPP SYNC
Note	

Syntax	SONet:RX<Pt>:MAPPING?
Description	This query returns the mapping type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SON:RX1:MAPP? → SYNC
Note	

11.1.19 SONet:RX<Pt>:GAIN

Syntax	SONet:RX<Pt>:GAIN <type>
Description	This command sets the receiver gain.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> TERMinate: Frequency dependent AGC. MONitor: Frequency linear AGC. <i>DEFault = TERMinate</i>
Response	None.
Example	SON:RX1:GAIN TERM
Note	

Syntax	SONet:RX<Pt>:GAIN?
Description	This query returns the receiver gain.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SON:RX1:GAIN? → TERM
Note	

11.1.20 SONet:RX<Pt>:FOLLow

Syntax	SONet:RX<Pt>:FOLLow <mode>
Description	This command sets the receiver setup to follow another setup or not to follow.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> NONE: Do not follow. TX: Follows setup of the Tx port. RX1: Follows setup of the Rx port1. <i>DEFault = NONE</i>
Response	None.
Example	SON:RX1:FOLL NONE
Note	

Syntax	SONet:RX<Pt>:FOLLow?
Description	This query returns the receiver setup to follow another setup or not to follow.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SON:RX1:FOLL? → NONE
Note	

11.1.21 SONet:RX<Pt>:MEASurement:PLMP

Syntax	SONet:RX<Pt>:MEASurement:PLMP <detected>
Description	This command enables or disables PLM-P measurement.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	SON:RX1:MEAS:PLMP ON
Note	

Syntax	SONet:RX<Pt>:MEASurement:PLMP?
Description	This query returns whether PLM-P measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	SON:RX1:MEAS:PLMP? → 1
Note	

11.1.22 SONet:RX<Pt>:MEASurement:PLMV

Syntax	SONet:RX<Pt>:MEASurement:PLMV <detected>
Description	This command enables or disables PLM-V measurement.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	SON:RX1:MEAS:PLMV ON
Note	

Syntax	SONet:RX<Pt>:MEASurement:PLMV?
Description	This query returns whether PLM-V measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	SON:RX1:MEAS:PLMV? → 1
Note	

11.2 Transmitter

11.2.1 SONet:TX<Pt>:INTerface

Syntax	SONet:TX<Pt>:INTerface <mode>
Description	This command sets the used interface of the transmitter.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> ELECtrical: Electrical interface SFP: SFP/SFP+ optical interface CFP: CFP optical interface <i>DEFault = ELEC</i>
Response	None.
Example	SON:TX1:INT SFP
Note	

Syntax	SONet:TX<Pt>:INTerface?
Description	This query returns the used interface.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:INT? → SFP
Note	Returns OTN when SONET over OTN.

11.2.2 SONet:TX<Pt>[:ENABLE]

Syntax	SONet:TX<Pt>[:ENABLE] <mode>
Description	This command sets the mode of the transmitter.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Turn off the transmitter. NORMal: Normal transmission mode using the configured signal. THRough: Through mode. The signal from the receiver is transmitted. OTHRough: OH overwrite through mode. THA: Same as THRough. For CMA 3000 backward compatibility only. <i>DEFault = OFF</i>
Response	None.
Example	SON:TX1 NORM
Note	

Syntax	SONet:TX<Pt>[:ENABLE]?
Description	This query returns the mode of the transmitter.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SON:TX1? → NORM
Note	

11.2.3 SONet:TX<Pt>:OPTical

Syntax	SONet:TX<Pt>:OPTical <mode>
Description	Obsolete. For CMA 3000 backward compatibility only. Same as SON:TX<Pt>:INT SFP and SON:TX<Pt>
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA>
Response	None.
Example	SON:TX1:OPT NORM
Note	Compared to CMA 3000 there is no longer a suffix on the last node.

Syntax	SONet:TX<Pt>:OPTical?
Description	Obsolete. For CMA 3000 backward compatibility only. Same as SON:TX<Pt>?
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:OPT? → NORM
Note	

11.2.4 SONet:TX<Pt>:ELECtrical

Syntax	SONet:TX<Pt>:ELECtrical <mode>
Description	Obsolete. For CMA 3000 backward compatibility only. Same as SON:TX<Pt>:INT ELEC and SON:TX<Pt>
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA>
Response	None.
Example	SON:TX1:ELEC NORM
Note	Compared to CMA 3000 mode=THB is no longer supported.

Syntax	SONet:TX<Pt>:ELECtrical?
Description	Obsolete. For CMA 3000 backward compatibility only. Same as SON:TX<Pt>?
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:ELEC? → NORM
Note	

11.2.5 SONet:TX<Pt>:OCLevel

Syntax	SONet:TX<Pt>:OCLevel <level>
Description	This command sets the OC level of the transmitted SONET signal.
Parameters	<Pt> = Port number <level> = <CHARACTER PROGRAM DATA> 3: OC-3 signal. 12: OC-12 signal. 48: OC-48 signal. 192: OC-192 signal. 768: OC-768 signal. <i>DEFault = 3</i>
Response	None.
Example	SON:TX1:OCL 3
Notes	Setting the OC level may change the STS-3cSPE concatenation level.

Syntax	SONet:TX<Pt>:OCLevel?
Description	This query returns the OC level of the transmitted SONET signal.
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:TX1:OCL? → 1
Note	

11.2.6 SONet:TX<Pt>:STSLevel

Syntax	SONet:TX<Pt>:STSLevel <level>
Description	This command sets the STS level of the SONET receiver.
Parameters	<Pt> = Port number <level> = <CHARACTER PROGRAM DATA> 3: STS-3 signal. 12: STS-12 signal. 48: STS-48 signal. 192: STS-192 signal. 768: STS-768 signal. <i>DEFault = 3</i>
Response	None.
Example	SON:TX1:STSL 3
Note	Setting the STS level may change the STS-3cSPE concatenation level.

Syntax	SONet:TX<Pt>:STSLevel?
Description	This query returns the STS level of the SONET receiver.
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:TX1:STSL? → 3
Note	

11.2.7 SONet:TX<Pt>:STS3c

Syntax	SONet:TX<Pt>:STS3c <value>
Description	This command sets the STS where the test signal is inserted.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> ALL 1 to 768 <i>DEFault = ALL</i>
Response	None.
Example	SON:TX1:STS3 ALL
Note	The specified STS3c cannot exceed the OC level divided by the STS-3cSPE concatenation level.

Syntax	SONet:TX<Pt>:STS3c?
Description	This query returns the STS where the test signal has been inserted.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:TX1:STS3? → ALL
Note	

11.2.8 SONet:TX<Pt>:CONCatenation

Syntax	SONet:TX<Pt>:CONCatenation <level>
Description	This command sets the STS concatenation level.
Parameters	<Pt> = Port number <level> = <CHARACTER PROGRAM DATA> STS1SPE STS3CSPE STS12C STS48C STS192C STS768C <i>DEFault = STS3CSPE</i>
Response	None.
Example	SON:TX1:CONC STS3CSPE
Note	Setting the STS concatenation level may change the STM level.

Syntax	SONet:TX<Pt>:CONCatenation?
Description	This query returns the STS concatenation level.
Parameter	<Pt> = Port number
Response	<level> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:CONC? → STS3CSPE
Note	

11.2.9 SONet:TX<Pt>:CONTainer

Syntax	SONet:TX<Pt>:CONTainer <type>
Description	This command sets the container type (container-n).
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> C3 C4 C11 C12 <i>DEFault = C4</i>
Response	None.
Example	SON:TX1:CONT C4
Note	Setting the container type.

Syntax	SONet:TX<Pt>:CONTainer?
Description	This query returns the container type (container-n).
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:CONT? → C4
Note	

11.2.10 SONet:TX<Pt>:SSTRucture

Syntax	SONet:TX<Pt>:SSTRucture <structure>
Description	This command sets the SONET signal structure.
Parameters	<Pt> = Port number <structure> = <CHARACTER PROGRAM DATA> BULK: Bulk data in the STS3. E1: E1 signal in a VC-12 in one or all STS's E3: E3 signal in a VC-3 in one or all STS's DS1: DS1 signal in a VC-11 in one or all STS's DS3: DS3 signal in a VC-3 in one or all STS's E4: E4 signal in a VC-4 in one or all STS's <i>DEFault</i> = <i>BULK</i>
Response	None.
Example	SON:TX1:SSTR BULK
Note	

Syntax	SONet:TX<Pt>:SSTRucture?
Description	This query returns the SONET signal structure.
Parameter	<Pt> = Port number
Response	<structure> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:SSTR? → BULK
Note	

11.2.11 SONet:TX<Pt>:PATtern

Syntax	SONet:TX<Pt>:PATtern <pattern>
Description	This command sets the pattern to be used as payload when SSTRucture is BULK.
Parameters	<Pt> = Port number <pattern> = <CHARACTER PROGRAM DATA> OFF USER32BIT: 32 bit user defined pattern. USER2048BIT: 2048 bit user defined pattern. PRBS9: PRBS-9 pattern. PRBS11: PRBS-11 pattern. PRBS15: PRBS-15 pattern. PRBS20: PRBS-20 pattern. PRBS23: PRBS23 pattern. PRBS29: PRBS-29 pattern. PRBS31: PRBS-31 pattern. ALL0: Pattern of all zeros. ALL1: Pattern of all ones. ALT11: Alternating 1:1 ALT13: Alternating 1:3 ALT17: Alternating 1:7 B2IN8: Random pattern with two ones for every eight bits. <i>DEFault</i> = <i>PRBS23</i>
Response	None.
Example	SON:TX1:PATT PRBS23
Note	

Syntax	SONet:TX<Pt>:PATtern?
Description	Queries the pattern to be used as payload when SSTRucture is BULK.
Parameter	<Pt> = Port number
Response	<pattern> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:PATT? → PRBS23
Note	

11.2.12 SONet:TX<Pt>:UP32

Syntax	SONet:TX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATTern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Examples	SON:TX1:UP32 "01101"
Note	

Syntax	SONet:TX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	SON:TX1:UP32? → "01101"
Note	

11.2.13 SONet:TX<Pt>:UP2K

Syntax	SONet:TX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	SON:TX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when SON:TX1:PATT is USER2048BIT

Syntax	SONet:TX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	SON:TX1:UP2K? → "12DF"
Note	

11.2.14 SONet:TX<Pt>:PINVersion

Syntax	SONet:TX<Pt>:PINVersion <inverted>
Description	This command enables or disables PRBS pattern inversion (when SSTRucture is BULK).
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	SON:TX1:PINV OFF
Note	

Syntax	SONet:TX<Pt>:PINVersion?
Description	This query returns whether the PRBS pattern inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inverted> = <BOOLEAN RESPONSE DATA>
Example	SON:TX1:PINV? → 0
Note	

11.2.15 SONet:TX<Pt>:TIMing

Syntax	SONet:TX<Pt>:TIMing <source>
Description	This command sets the timing source.
Parameters	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> INTernal: Internal clock. EXTernal: External clock. RX: Received Rx signal clock. <i>DEFault = INT</i>
Response	None.
Example	SON:TX1:TIM INT
Note	

Syntax	SONet:TX<Pt>:TIMing?
Description	This query returns the timing source.
Parameter	<Pt> = Port number
Response	<source> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:TIM? → INT
Note	

11.2.16 SONet:TX<Pt>:TCM

Syntax	SONet:TX<Pt>:TCM <mode>
Description	This command sets the TCM mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Off STS3: Z5 (STS3) STS1: Z5 (STS1) VT2: Z6 (VT2) VT15: Z6 (VT1.5) <i>DEFault = OFF</i>
Response	None.
Example	SON:TX1:TCM OFF
Note	

Syntax	SONet:TX<Pt>:TCM?
Description	Queries the TCM mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:TCM? → OFF
Note	

11.2.17 SONet:TX<Pt>:TUG3

Syntax	SONet:TX<Pt>:TUG3 <id>
Description	This command sets the TUG-3 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: TUG-3 number one. 2: TUG-3 number two. 3: TUG-3 number three. <i>MINimum = 1, MAXimum = 3, DEFault = 1</i>
Response	None.
Example	SON:TX1:TUG3 1
Note	This value influences the channel number.

Syntax	SONet:TX<Pt>:TUG3?
Description	This query returns TUG3 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:TX1:TUG3? → 1
Note	

11.2.18 SONet:TX<Pt>:VTG

Syntax	SONet:TX<Pt>:VTG <id>
Description	This command sets the VTG number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: VTG number one. 2: VTG number two. ... 7: VTG number seven. <i>MINimum = 1, MAXimum = 7, DEFault = 1</i>
Response	None.
Example	SON:TX1:VTG 1
Note	This value influences the channel number.

Syntax	SONet:TX<Pt>:VTG?
Description	This query returns VTG number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:TX1:VTG? → 1
Note	

11.2.19 SONet:TX<Pt>:VT2

Syntax	SONet:TX<Pt>:VT2 <id>
Description	This command sets the VT2 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: VT2 number one. 2: VT2 number two. 3: VT2 number three. <i>MINimum = 1, MAXimum = 3, DEFault = 1</i>
Response	None.
Example	SON:TX1:VT2 1
Note	This value influences the channel number.

Syntax	SONet:TX<Pt>:VT2?
Description	This query returns VT2 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:TX1:VT2? → 1
Note	

11.2.20 SONet:TX<Pt>:VT15

Syntax	SONet:TX<Pt>:VT15 <id>
Description	This command sets the VT1.5 number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> 1: VT1.5 number one. 2: VT1.5 number two. 3: VT1.5 number three. 4: VT1.5 number four. <i>MINimum = 1, MAXimum = 4, DEFault = 1</i>
Response	None.
Example	SON:TX1:VT15 1
Note	This value influences the channel number.

Syntax	SONet:TX<Pt>:VT15?
Description	This query returns VT1.5 number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:TX1:VT15? → 1
Note	

11.2.21 SONet:TX<Pt>:CHANnel

Syntax	SONet:TX<Pt>:CHANnel <id>
Description	This command sets the channel number for the signal structure.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=84, DEFault = 1</i>
Response	None.
Example	SON:TX1:CHAN 1
Note	The value influences the TUG-3, TUG-2 and TU-12 numbers.

Syntax	SONet:TX<Pt>:CHANnel?
Description	This query returns the channel number for the signal structure.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:TX1:CHAN? → 1
Note	

11.2.22 SONet:TX<Pt>:MAPPing

Syntax	SONet:TX<Pt>:MAPPing <type>
Description	This command sets the mapping type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> SYNChronous: Synchronous mapping. ASYNchronous: Asynchronous mapping. <i>DEFault = SYNC</i>
Response	None.
Example	SON:TX1:MAPP SYNC
Note	

Syntax	SONet:TX<Pt>:MAPPING?
Description	This query returns the mapping type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:MAPP? → SYNC
Note	

11.2.23 SONet:TX<Pt>:TOH:DEFault

Syntax	SONet:TX<Pt>:TOH:DEFault
Description	This command sets all OC TOH bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	SON:TX1:TOH:DEF
Note	There is no query version of this command.

11.2.24 SONet:TX<Pt>:TOH:TRACe

Syntax	SONet:TX<Pt>:TOH:TRACe <string>[,<idlechar>]
Description	This command sets the TOH trace (J0) to the specified string.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: The string to be used as section trace string. <i>DEFault</i> = "Message_Test_J0" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SON:TX1:TOH:TRAC "Message_Test_J0",#H20
Note	If the entered trace string is more than 15 characters long, the string will be truncated.

 
Syntax	SONet:TX<Pt>:TOH:TRACe?
Description	This query returns the TOH trace for string and idle char.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:TOH:TRAC? → "Message_Test_J0",#H20
Note	

11.2.25 SONet:TX<Pt>:TOH:TRACe:CRC

Syntax	SONet:TX<Pt>:TOH:TRACe:CRC <mode>
Description	This command sets the TOH trace (J0) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	SON:TX1:TOH:TRAC:CRC ON
Note	

Syntax	SONet:TX<Pt>:TOH:TRACe:CRC?
Description	This query returns the mode of the TOH trace (J0) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:TOH:TRAC:CRC? → 1
Note	

11.2.26 SONet:TX<Pt>:TOH

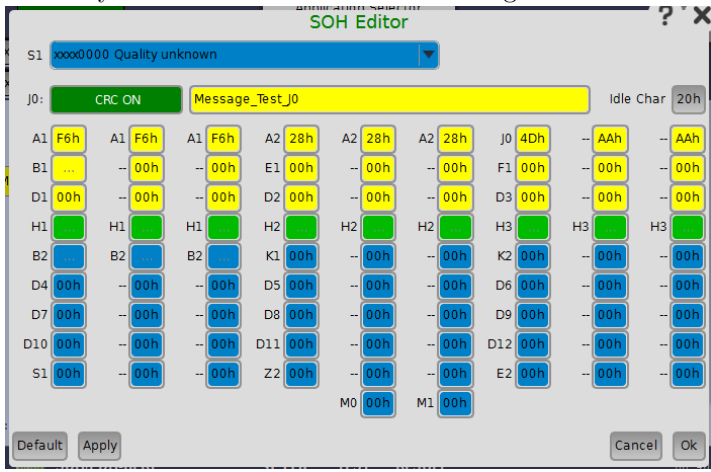Syntax	SONet:TX<Pt>:TOH <TOH-byte>,<value1>[,<value2>[,<value3>]]
Description	This command sets the value of the specified bytes in the TOH.
Parameters	<Pt> = Port number <TOH-byte> = <CHARACTER PROGRAM DATA> A1: 3 bytes. A2: 3 bytes. J0: 3 bytes. Note: The defined trace string will be disabled. B1: 2 bytes. <value3> is ignored. E1: 3 bytes. F1: 3 bytes. D1: 3 bytes. D2: 3 bytes. D3: 3 bytes. K1: 3 bytes. K2: 3 bytes. D4: 3 bytes. D5: 3 bytes. D6: 3 bytes. D7: 3 bytes. D8: 3 bytes. D9: 3 bytes. D10: 3 bytes. D11: 3 bytes. D12: 3 bytes. S1: 3 bytes. Z2: 3 bytes. E2: 3 bytes. M0: 1 byte. <value2> and <value3> are ignored. ¹ M1: 1 byte. <value2> and <value3> are ignored.  <value1> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255 <value2> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255 <value3> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255
Response	None.
Examples	SON:TX1:TOH A1,0,0,0 SON:TX1:TOH D7,253,32,26 SON:TX1:TOH B1,4,5 SON:TX1:TOH M1,0
Note	¹ Only valid for SONet:TX<Pt>:OCLevel = 192 or 768.

Syntax	SONet:TX<Pt>:TOH? <TOH-byte>
Description	This query returns the value of the specified bytes in the TOH.
Parameters	<Pt> = Port number <SOH-byte> = <CHARACTER PROGRAM DATA>
Response	<value1> = <HEXADECIMAL NUMERIC RESPONSE DATA> [,<value2> = <HEXADECIMAL NUMERIC RESPONSE DATA> [,<value3> = <HEXADECIMAL NUMERIC RESPONSE DATA>]]
Examples	SON:TX1:TOH? A1 → #H00,#H00,#H00 SON:TX1:TOH? D7 → #HFD,#H20,#H1A SON:TX1:TOH? B1 → #H04,#H05 SON:TX1:TOH? M1 → #H00
Note	

11.2.27 SONet:TX<Pt>:STS3:POH:DEFault

Syntax	SONet:TX<Pt>:STS3:POH:DEFault
Description	This command sets all STS3 path overhead bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	SON:TX1:STS3:POH:DEF
Note	There is no query version of this command.

11.2.28 SONet:TX<Pt>:STS3:POH:TRACe

Syntax	SONet:TX<Pt>:STS3:POH:TRACe <string>[,<idlechar>]
Description	This command sets the STS3 path trace (J1) to the specified string and its idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: The string to be used as path trace string. <i>DEFault</i> = "Message_Test_J1" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SON:TX1:STS3:POH:TRAC "Message_Test_J1",#H20
Note	If the entered trace string is more than 15 characters long, the string will be truncated.

Syntax	SONet:TX<Pt>:STS3:POH:TRACe?
Description	This query returns the STS3 path trace text and idle char.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:STS3:POH:TRAC? → "Message_Test_J1",#H20
Note	

11.2.29 SONet:TX<Pt>:STS3:POH:TRACe:CRC

Syntax	SONet:TX<Pt>:STS3:POH:TRACe:CRC <mode>
Description	This command sets the section overhead trace (J1) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	SON:TX1:STS3:POH:TRAC:CRC ON
Note	

Syntax	SONet:TX<Pt>:STS3:POH:TRACe:CRC?
Description	This query returns the mode of the overhead trace (J1) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <BOOLEAN RESPONSE DATA>
Example	SON:TX1:STS3:POH:TRAC:CRC? → 1
Note	

11.2.30 SONet:TX<Pt>:STS3:POH:TTCM

Syntax	SONet:TX<Pt>:STS3:POH:TTCM <string>[,<idlechar>]
Description	This command sets the STS3 TCM trace (Z5) to the specified string and its idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Apid_TCM_Z5" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SON:TX1:STS3:POH:TTCM "Apid_TCM_Z5",#H20
Note	

Syntax	SONet:TX<Pt>:STS3:POH:TTCM?
Description	This query returns the STS3 TCM trace text and idle char.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:STS3:POH:TTCM? → "Apid_TCM_Z5",#H20
Note	

11.2.31 SONet:TX<Pt>:STS3:POH

Syntax	SONet:TX<Pt>:STS3:POH <POH-byte>,<value>
Description	This command sets the value of the specified byte in the STS3 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA> C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. Z3: Z3 byte. Z4: Z4 byte. Z5: Z5 byte. Only available when there is no TCM. <value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255
Response	None.
Example	SON:TX1:STS3:POH C2,0
Note	

Syntax	SONet:TX<Pt>:STS3:POH? <POH-byte>
Description	This query returns the value of the specified byte in the STS3 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA>
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Examples	SON:TX1:STS3:POH? C2 → #H00 SON:TX1:STS3:POH? H4 → #HFF
Note	

11.2.32 SONet:TX<Pt>:STS1:POH:DEFault

Syntax	SONet:TX<Pt>:STS1:POH:DEFault
Description	This command sets all STS1 path overhead bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	SON:TX1:STS1:POH:DEF
Note	There is no query version of this command.

11.2.33 SONet:TX<Pt>:STS1:POH:TRACe

Syntax	SONet:TX<Pt>:STS1:POH:TRACe <string>[,<idlechar>]
Description	This command sets the STS1 path trace (J1) to the specified string.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Message_Test_J1" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SON:TX1:STS1:POH:TRAC "Message_Test_J1",#H20
Note	

Syntax	SONet:TX<Pt>:STS1:POH:TRACe?
Description	This query returns the STS1 path trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:STS1:POH:TRAC? → "Message_Test_J1",#H20
Note	

11.2.34 SONet:TX<Pt>:STS1:POH:TRACe:CRC

Syntax	SONet:TX<Pt>:STS1:POH:TRACe:CRC <mode>
Description	This command sets the section overhead trace (J1) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	SON:TX1:STS1:POH:TRAC:CRC ON
Note	

Syntax	SONet:TX<Pt>:STS1:POH:TRACe:CRC?
Description	This query returns the mode of the overhead trace (J1) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <BOOLEAN RESPONSE DATA>
Example	SON:TX1:STS1:POH:TRAC:CRC? → 1
Note	

11.2.35 SONet:TX<Pt>:STS1:POH:TTCM

Syntax	SONet:TX<Pt>:STS1:POH:TTCM <string>[,<idlechar>]
Description	This command sets the STS1 TCM trace (Z5) to the specified string, and the idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Apid_TCM_Z5" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SON:TX1:STS1:POH:TTCM "Apid_TCM_Z5",#H20
Note	

Syntax	SONet:TX<Pt>:STS1:POH:TTCM?
Description	This query returns the STS1 TCM trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:STS1:POH:TTCM? → "Apid_TCM_Z5",#H20
Note	

11.2.36 SONet:TX<Pt>:STS1:POH

Syntax	SONet:TX<Pt>:STS1:POH <POH-byte>,<value>
Description	This command sets the value of the specified byte in the STS1 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA> C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. Z3: Z3 byte. Z4: Z4 byte. Z5: Z5 byte. Only available when there is no TCM. <value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255
Response	None.
Example	SON:TX1:STS1:POH C2,0
Note	

Syntax	SONet:TX<Pt>:STS1:POH? <POH-byte>
Description	This query returns the value of the specified byte in the STS1 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA>
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:STS1:POH? C2 → #H00
Note	

11.2.37 SONet:TX<Pt>:VT2:POH:DEFault

Syntax	SONet:TX<Pt>:VT2:POH:DEFault
Description	This command sets all VT2 path overhead bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	SON:TX1:VT2:POH:DEF
Note	There is no query version of this command.

11.2.38 SONet:TX<Pt>:VT2:POH:TRACe

Syntax	SONet:TX<Pt>:VT2:POH:TRACe <string>[,<idlechar>]
Description	This command sets the VT2 path trace (J2) to the specified string and the idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Message_Test_J2" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SON:TX1:VT2:POH:TRAC "Message_Test_J2",#H20
Note	

Syntax	SONet:TX<Pt>:VT2:POH:TRACe?
Description	This query returns the VT2 path trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:VT2:POH:TRAC? → "Message Test J2",#H20
Note	

11.2.39 SONet:TX<Pt>:VT2:POH:TRACe:CRC

Syntax	SONet:TX<Pt>:VT2:POH:TRACe:CRC <mode>
Description	This command sets the section overhead trace (J2) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	SON:TX1:VT2:POH:TRAC:CRC ON
Note	

Syntax	SONet:TX<Pt>:VT2:POH:TRACe:CRC?
Description	This query returns the mode of the overhead trace (J2) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <BOOLEAN RESPONSE DATA>
Example	SON:TX1:VT2:POH:TRAC:CRC? → 1
Note	

11.2.40 SONet:TX<Pt>:VT2:POH:TTCM

Syntax	SONet:TX<Pt>:VT2:POH:TTCM <string>[,<idlechar>]
Description	This command sets the VT2 TCM trace (Z6) to the specified string and the idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Apid_TCM_Z6" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SON:TX1:VT2:POH:TTCM "Apid_TCM_Z6",#H20
Note	

Syntax	SONet:TX<Pt>:VT2:POH:TTCM?
Description	This query returns the VT2 trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:VT2:POH:TTCM? → "Apid_TCM_Z6",#H20
Note	

11.2.41 SONet:TX<Pt>:VT2:POH

Syntax	SONet:TX<Pt>:VT2:POH <POH-byte>,<value>
Description	This command sets the value of the specified byte in the VT2 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA> V5: V5 byte. Z6: Z6 byte. Z7: Z7 byte. <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 255</i>
Response	None.
Example	SON:TX1:VT2:POH V5,#H04
Note	

Syntax	SONet:TX<Pt>:VT2:POH? <POH-byte>
Description	This query returns the value of the specified byte in the VT2 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA>
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:VT2:POH? V5 → #H04
Note	

11.2.42 SONet:TX<Pt>:VT15:POH:DEFault

Syntax	SONet:TX<Pt>:VT15:POH:DEFault
Description	This command sets all VT1.5 path overhead bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	SON:TX1:VT15:POH:DEF
Note	There is no query version of this command.

11.2.43 SONet:TX<Pt>:VT15:POH:TRACe

Syntax	SONet:TX<Pt>:VT15:POH:TRACe <string>[,<idlechar>]
Description	This command sets the VT1.5 path trace (J2) to the specified string and the idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault = "Message_Test_J2"</i> <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault = #H20</i>
Response	None.
Example	SON:TX1:VT15:POH:TRAC "Message_Test_J2",#H20
Note	

Syntax	SONet:TX<Pt>:VT15:POH:TRACe?
Description	This query returns the VT1.5 path trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:VT15:POH:TRAC? → "Message_Test_J2",#H20
Note	

11.2.44 SONet:TX<Pt>:VT15:POH:TRACe:CRC

Syntax	SONet:TX<Pt>:VT15:POH:TRACe:CRC <mode>
Description	This command sets the section overhead trace (J2) CRC mode (OFF/ON).
Parameters	<Pt> = Port number
	<mode> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	SON:TX1:VT15:POH:TRAC:CRC ON
Note	

Syntax	SONet:TX<Pt>:VT15:POH:TRACe:CRC?
Description	This query returns the mode of the overhead trace (J2) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <BOOLEAN RESPONSE DATA>
Example	SON:TX1:VT15:POH:TRAC:CRC? → 1
Note	

11.2.45 SONet:TX<Pt>:VT15:POH:TTCM

Syntax	SONet:TX<Pt>:VT15:POH:TTCM <string>[,<idlechar>]
Description	This command sets the VT1.5 TCM trace (Z6) to the specified string and the idle char.
Parameters	<Pt> = Port number
	<string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Apid_TCM_Z6"
	<idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SON:TX1:VT15:POH:TTCM "Apid_TCM_Z6",#H20
Note	

Syntax	SONet:TX<Pt>:VT15:POH:TTCM?
Description	This query returns the VT1.5 trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:VT15:POH:TTCM? → "Apid_TCM_Z6",#H20
Note	

11.2.46 SONet:TX<Pt>:VT15:POH

Syntax	SONet:TX<Pt>:VT15:POH <POH-byte>,<value>
Description	This command sets the value of the specified byte in the VT1.5 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA> V5: V5 byte. Z6: Z6 byte. Z7: Z7 byte. <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 255</i>
Response	None.
Example	SON:TX1:VT15:POH V5,#H04
Note	

Syntax	SONet:TX<Pt>:VT15:POH? <POH-byte>
Description	This query returns the value of the specified byte in the VT1.5 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA>
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:VT15:POH? V5 → #H04
Note	

11.2.47 SONet:TX<Pt>:STS1:STS1:POH:DEFault

Syntax	SONet:TX<Pt>:STS1:STS1:POH:DEFault
Description	This command sets all STS1 path overhead bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	SON:TX1:STS1:STS1:POH:DEF
Note	There is no query version of this command.

11.2.48 SONet:TX<Pt>:STS1:STS1:POH:TRACe

Syntax	SONet:TX<Pt>:STS1:STS1:POH:TRACe <string>[,<idlechar>]
Description	This command sets the STS1 path trace (J1) to the specified string.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault = "Message_Test_J1"</i> <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault = #H20</i>
Response	None.
Example	SON:TX1:STS1:STS1:POH:TRAC "Message_Test_J1",#H20
Note	

Syntax	SONet:TX<Pt>:STS1:STS1:POH:TRACe?
Description	This query returns the STS1 path trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:STS1:STS1:POH:TRAC? → "Message_Test_J1",#H20
Note	

11.2.49 SONet:TX<Pt>:STS1:STS1:POH:TRACe:CRC

Syntax	SONet:TX<Pt>:STS1:STS1:POH:TRACe:CRC <mode>
Description	This command sets the section overhead trace (J1) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	SON:TX1:STS1:STS1:POH:TRAC:CRC ON
Note	

Syntax	SONet:TX<Pt>:STS1:STS1:POH:TRACe:CRC?
Description	This query returns the mode of the overhead trace (J1) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <BOOLEAN RESPONSE DATA>
Example	SON:TX1:STS1:STS1:POH:TRAC:CRC? → 1
Note	

11.2.50 SONet:TX<Pt>:STS1:STS1:POH:TTCM

Syntax	SONet:TX<Pt>:STS1:STS1:POH:TTCM <string>[,<idlechar>]
Description	This command sets the STS1 TCM trace (Z5) to the specified string, and the idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> Quoted string: Path trace string. <i>DEFault</i> = "Apid_TCM_Z5" <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	SON:TX1:STS1:STS1:POH:TTCM "Apid_TCM_Z5",#H20
Note	

Syntax	SONet:TX<Pt>:STS1:STS1:POH:TTCM?
Description	This query returns the STS1 TCM trace.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA>, <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:STS1:STS1:POH:TTCM? → "Apid_TCM_Z5",#H20
Note	

11.2.51 SONet:TX<Pt>:STS1:STS1:POH

Syntax	SONet:TX<Pt>:STS1:STS1:POH <POH-byte>,<value>
Description	This command sets the value of the specified byte in the STS1 path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA> C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. Z3: Z3 byte. Z4: Z4 byte. Z5: Z5 byte. Only available when there is no TCM. <value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255
Response	None.
Example	SON:TX1:STS1:STS1:POH C2,0
Note	

Syntax	SONet:TX<Pt>:STS1:STS1:POH? <POH-byte>
Description	This query returns the value of the specified byte in the STS1 path overhead.
Parameters	<Pt> = Port number
	<POH-byte> = <CHARACTER PROGRAM DATA>
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:TX1:STS1:STS1:POH? C2 → #H00
Note	

11.2.52 SONet:TX<Pt>:FOLLow

Syntax	SONet:TX<Pt>:FOLLow <mode>
Description	This command sets the transmitter setup to follow another setup or not to follow.
Parameters	<Pt> = Port number
	<mode> = <CHARACTER PROGRAM DATA>
	NONE: Do not follow.
	TX1: Follows setup of the Tx port1. <i>DEFault = NONE</i>
Response	None.
Example	SON:TX1:FOLL NONE
Note	

Syntax	SONet:TX<Pt>:FOLLow?
Description	This query returns the transmitter setup to follow another setup or not to follow.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:FOLL? → NONE
Note	

11.2.53 SONet:TX<Pt>:OTHRough

Syntax	SONet:TX<Pt>:OTHRough <mode>
Description	This command sets the OH Overwrite Position.
Parameters	<Pt> = Port number
	<mode> = <CHARACTER PROGRAM DATA>
	TOH: SOH Data.
	A1A2: A1/A2 byte.
	K1K2: K1/K2 byte.
	S1: S1 byte.
	DCC1TO3: DCC1-3 byte.
	DCC4TO12: DCC4-12 byte.
	J0: J0 byte.
	TOH1BYTE: 1 byte of TOH.(selectable) <i>DEFault = TOH</i>
Response	None.
Example	SON:TX1:OTHR A1A2
Note	

Syntax	SONet:TX<Pt>:OTHRough?
Description	This query returns the OH Overwrite Position.
Parameter	<Pt> = Port number
Response	<position> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:OTHR? → A1A2
Note	

11.2.54 SONet:TX<Pt>:OTHRough:BYTE

Syntax	SONet:TX<Pt>:OTHRough:BYTE <byte>
Description	This command sets the OH Overwrite Position.
Parameters	<Pt> = Port number <byte> = <CHARACTER PROGRAM DATA> A11-A13: A1 bytes. A21-A23: A2 bytes. J0: J0 byte. E1: E1 byte. F1: F1 byte. D1: D1 byte. D2: D2 byte. D3: D3 byte. K1: K1 byte. K2: K2 byte. D4: D4 byte. D5: D5 byte. D6: D6 byte. D7: D7 byte. D8: D8 byte. D9: D9 byte. D10: D10 byte. D11: D11 byte. D12: D12 byte. S1: S1 byte. M0: M0 byte. M1: M1 byte. E2: E2 byte. X18-X99: X<Line><Column> <i>DEFault = A11</i>
Response	None.
Example	SON:TX1:OTHR:BYTE A11
Note	

Syntax	SONet:TX<Pt>:OTHRough:BYTE?
Description	This query returns the OH Overwrite Position.
Parameter	<Pt> = Port number
Response	<byte> = <CHARACTER RESPONSE DATA>
Example	SON:TX1:OTHR:BYTE? → A11
Note	

11.2.55 SONet:TX<Pt>:STL:MMAPIng:LANE

Syntax	SONet:TX<Pt>:STL:MMAPIng:LANE <lanes>
Description	This command sets the STL lane marker assignment.
Parameters	<Pt> = Port number {(<lanes>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List List consist of the value of the lane marker ranging from 0 to 3.
Response	None.
Example	SON:TX1:STL:MMAPIng:LANE (0,1,2,3)
Note	This command can be used on 40G

Syntax	SONet:TX<Pt>:STL:MMAPing:LANE?
Description	This query returns the STL lane marker assignment.
Parameter	<Pt> = Port number
Response	{(<lanes>),}* = <EXPRESSION RESPONSE DATA> Format: Numeric List
Example	SON:TX1:STL:MMAP:LANE? → (0,1,2,3)
Note	This command can be used on 40G

11.3 Stimuli

11.3.1 SONet:STIMuli:TX<Pt>:FOFFset

Syntax	SONet:STIMuli:TX<Pt>:FOFFset <offset>
Description	This command sets the frequency offset for the clock source. Unit: ppm.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> MT1000A: <i>MINimum</i> =-50, <i>MAXimum</i> =50, <i>DEFault</i> =0 MT1100A, MT1040A: <i>MINimum</i> =-200.0, <i>MAXimum</i> =200.0, <i>DEFault</i> = 0
Response	None.
Example	SON:STIM:TX1:FOFF 0
Note	

Syntax	SONet:STIMuli:TX<Pt>:FOFFset?
Description	This query returns the frequency offset for the clock source. Unit: ppm.
Parameter	<Pt> = Port number
Response	MT1000A: <offset> = <NR1 NUMERIC RESPONSE DATA> MT1100A, MT1040A: <offset> = <NR2 NUMERIC RESPONSE DATA>
Example	MT1000A: SON:STIM:TX1:FOFF? → 0 MT1100A, MT1040A: SON:STIM:TX1:FOFF? → 0.0
Note	

11.3.2 SONet:STIMuli:TX<Pt>:ALARm

Syntax	SONet:STIMuli:TX<Pt>:ALARm <alarmtype>
Description	This command sets the type of alarm to be generated.
Parameters	<Pt> = Port number <alarmtype> = <CHARACTER PROGRAM DATA> LOS: Loss of signal LOF: Loss of frame OOF: Out of frame AISL(MSAIS): MS alarm indication signal RDIL(MSRDI): MS remote defect indicator AISP(AUAIS): AU alarm indication signal LOPP(AULOP): AU loss of pointer TIMP(HPTIM): HP trace identifier mismatch PLMP(HPPLM): HP payload label mismatch UNEQP(HPUNEQ): HP unequipped RDIP(HPRDI): HP remote defect indicator AISV(TUAIS): TU alarm indication signal LOPV(TULOP): TU loss of pointer LOMV(TULOM): TU loss of multiframe TIMV(LPTIM): LP trace identifier mismatch UNEQV(LPUNEQ): LP unequipped RDIV(LPRDI): LP remote defect indicator PLMV(LPPLM): LP payload label mismatch LSS: Loss of signal synchronization TCUNEQ: TC unequipped TCLTC: TC loss of tandem connection TCTIM: TC trace identifier mismatch TCAIS: TC alarm indication signal TCRDI: TC remote defect indicator TCODI: TC outgoing defect indicator <i>DEFault = LOS</i>
Response	None.
Example	SON:STIM:TX1:ALAR LOS
Note	

Syntax	SONet:STIMuli:TX<Pt>:ALARm?
Description	This query returns the type of alarm to be generated.
Parameter	<Pt> = Port number
Response	<alarmtype> = <CHARACTER RESPONSE DATA>
Example	SON:STIM:TX1:ALAR? → LOS
Note	

11.3.3 SONet:STIMuli:TX<Pt>:AINSert

Syntax	SONet:STIMuli:TX<Pt>:AINSert <insertion>
Description	This command sets the method to insert alarm.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF PERManent ALTerminate <i>DEFault = OFF</i>
Response	None.
Example	SON:STIM:TX1:AINS PERM
Note	

Syntax	SONet:STIMuli:TX<Pt>:AINSer?
Description	This query returns the alarm insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	SON:STIM:TX1:AINS? → PERM
Note	

11.3.4 SONet:STIMuli:TX<Pt>:ANLength

Syntax	SONet:STIMuli:TX<Pt>:ANLength <frames>
Description	This command sets the alternate normal length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i> Maximum depends on the error insert method, see SON:STIM:TX<Pt>:AINS
Response	None.
Example	SON:STIM:TX1:ANL 1
Note	

Syntax	SONet:STIMuli:TX<Pt>:ANLength?
Description	This query returns the alternate normal length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:ANL? → 1
Note	

11.3.5 SONet:STIMuli:TX<Pt>:AALength

Syntax	SONet:STIMuli:TX<Pt>:AALength <frames>
Description	This command sets the alternate alarm length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i> Maximum depends on the error insert method, see SON:STIM:TX<Pt>:AINS
Response	None.
Example	SON:STIM:TX1:AAL 1
Note	

Syntax	SONet:STIMuli:TX<Pt>:AALength?
Description	This query returns the alternate alarm length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:AAL? → 1
Note	

11.3.6 SONet:STIMuli:TX<Pt>:ERRor

Syntax	SONet:STIMuli:TX<Pt>:ERRor <errordestination>
Description	This command sets the error destination.
Parameters	<Pt> = Port number <errordestination> = <CHARACTER PROGRAM DATA> A1A2: Frame alignment word B1: B1 checksum byte B2: B2 checksum byte REIL(MSREI): MS remote error indication B3: B3 checksum byte REIP(HPREI): HP Remote error indication V5LPB3: B3 checksum of the low-order path REIV(LPREI): LP remote error indication PRBS: Pattern error ETRans: ERR-TRANS TCIEC: Tandem Connection incoming error count TCREI: Tandem Connection remote error indication TCOEI: Tandem Connection outgoing error indication TCBIP2: 2-bit Bit Interleaved Parity for Tandem Connection <i>DEFault = A1A2</i>
Response	None.
Example	SON:STIM:TX1:ERR MSREI
Note	Some errors are depended on type of content, setting them without the correct type of content will set EINSert to OFF. Changing the error may also change the insert method. See section 11.3.7.

Syntax	SONet:STIMuli:TX<Pt>:ERRor?
Description	This query returns the error destination.
Parameter	<Pt> = Port number
Response	<errordestination> = <CHARACTER RESPONSE DATA>
Example	SON:STIM:TX1:ERR? → MSREI
Note	

11.3.7 SONet:STIMuli:TX<Pt>:EINsert

Syntax	SONet:STIMuli:TX<Pt>:EINsert <insertion>
Description	This command sets the method to insert errors.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF MANual B03: Burst · 1E-03 ¹ B04: Burst · 1E-04 ¹ B05: Burst · 1E-05 ¹ B06: Burst · 1E-06 ² B07: Burst · 1E-07 B08: Burst · 1E-08 B09: Burst · 1E-09 B10: Burst · 1E-10 ALternate DEFault = OFF
Response	None.
Example	SON:STIM:TX1:EINS MAN
Note	If insertion is set to MANual, errors are inserted with SYST:STIM:INS. See section 2.3.52. ¹ Is available for PRBS and ETRans (B03 is only available for ETRans if the STM Level is 1). ² Is available for PRBS, ETRans, B2, V5LPB3, REIL, TCIEC, TCBIP2, TCRI and TCOEI. Selecting an unsupported burst rate will reset the rate to the closest possible.

Syntax	SONet:STIMuli:TX<Pt>:EINsert?
Description	This query returns the error insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	SON:STIM:TX1:EINS? → MAN
Note	

11.3.8 SONet:STIMuli:TX<Pt>:EBLength

Syntax	SONet:STIMuli:TX<Pt>:EBLength <burstlength>
Description	This command sets the error burst length to generate.
Parameters	<Pt> = Port number <burstlength> = <NUMERIC PROGRAM DATA> MINimum = 1, DEFault = 1 Maximum depends on the error insert method, see SON:STIM:TX<Pt>:EINS B03 - B10: Maximum = 1 MANual: Maximum = 8000¹
Response	None.
Example	SON:STIM:TX1:EBL 1
Note	¹ If VC12 is active the maximum value for REIL, V5LPB3, TCIEC, TCBIP2, TCRI and TCOEI is 2000. The maximum value is 4000 when :STIM:TX<Pt>:ERR is PRBS (Pattern error).

Syntax	SONet:STIMuli:TX<Pt>:EBLength?
Description	This query returns the error burst length to generate.
Parameter	<Pt> = Port number
Response	<burstlength> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:EBL? → 1
Note	

11.3.9 SONet:STIMuli:TX<Pt>:ENLength

Syntax	SONet:STIMuli:TX<Pt>:ENLength <frames>
Description	This command sets the alternate normal length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i> Maximum depends on the error insert method, see SON:STIM:TX<Pt>:EINS
Response	None.
Example	SON:STIM:TX1:ENL 1
Note	

Syntax	SONet:STIMuli:TX<Pt>:ENLength?
Description	This query returns the alternate normal length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:ENL? → 1
Note	

11.3.10 SONet:STIMuli:TX<Pt>:EELength

Syntax	SONet:STIMuli:TX<Pt>:EELength <frames>
Description	This command sets the alternate error length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i> Maximum depends on the error insert method, see SON:STIM:TX<Pt>:EINS
Response	None.
Example	SON:STIM:TX1:EEL 1
Note	

Syntax	SONet:STIMuli:TX<Pt>:EELength?
Description	This query returns the alternate error length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:EEL? → 1
Note	

11.3.11 SONet:STIMuli:TX<Pt>:PTSequence

Syntax	SONet:STIMuli:TX<Pt>:PTSequence <type>,<sequence>
Description	This command sets the SONET pointer test sequence.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> STS3: STS3 pointer STS1: STS1 pointer TU3: TU-3 pointer VT2: VT2 pointer VT15: VT1.5 pointer <sequence> = <CHARACTER PROGRAM DATA> NONE: No test sequence SALternating: Single alternating RDOuble: Regular + double RMISsing: Regular + missing DALternating: Double alternating
Response	None.
Example	SON:STIM:TX1:PTS STS3,NONE
Note	

Syntax	SONet:STIMuli:TX<Pt>:PTSequence? <type>
Description	This query returns the SONET pointer test sequence.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> STS3: STS3 pointer STS1: STS1 pointer TU3: TU-3 pointer VT2: VT2 pointer VT15: VT1.5 pointer
Response	<sequence> = <CHARACTER RESPONSE DATA>
Example	SON:STIM:TX1:PTS? STS3 → NONE
Note	

11.3.12 SONet:STIMuli:TX<Pt>:PMOVe

Syntax	SONet:STIMuli:TX<Pt>:PMOVe <type>,<value>
Description	This command sets the SONET pointer movement sequence. The value specifies the number of pointer increments.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> STS3: STS3 pointer STS1: STS1 pointer TU3: TU-3 pointer VT2: VT2 pointer VT15: VT1.5 pointer <value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = -100, <i>MAXimum</i> = 100
Response	None.
Example	SON:STIM:TX1:PMOV AU4,9
Notes	There is no query version of this command. A value of zero has no effect. A negative value results in pointer decrements.

11.3.13 SONet:STIMuli:TX<Pt>:PJUMp

Syntax	SONet:STIMuli:TX<Pt>:PJUMp <type>,<value>[,<ndf>]
Description	This command sets the SONET pointer jump. The value specifies the new pointer value.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> STS3: STS3 pointer STS1: STS1 pointer TU3: TU-3 pointer VT2: VT2 pointer VT15: VT1.5 pointer <value> = <NUMERIC PROGRAM DATA> The valid range depends on SONet:STIMuli:TX<Pt>:PTYPE STS3: 0 to 782 STS1: 0 to 782 TU3: 0 to 764 VT2: 0 to 139 VT15: 0 to 103 <ndf> = <CHARACTER PROGRAM DATA> WITH: With new data flag (NDF) WOUT: Without new data flag (NDF) <i>DEFault = WITH</i>
Response	None.
Example	SON:STIM:TX1:PJUM AU4,300
Notes	There is no query version of this command. A negative value disables new data flag (NDF).

11.3.14 SONet:STIMuli:TX<Pt>:STL:AERRor:LANE

Syntax	SONet:STIMuli:TX<Pt>:STL:AERRor:LANE <lane>
Description	This command sets the lane of the multi lane alarm/error to be inserted.
Parameters	<Pt> = Port number <lane> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000, MAXimum=#B1111, DEFault=#B1000</i>
Response	None.
Example	SON:STIM:TX1:STL:AERR:LANE #B01 SON:STIM:TX1:STL:AERR:LANE #B0100 These commands add error into lane 1.
Note	This command can be used on 40G

Syntax	SONet:STIMuli:TX<Pt>:STL:AERRor:LANE?
Description	This query returns the lane of the multi lane alarm/error to be inserted.
Parameter	<Pt> = Port number
Response	<lane> = <BINARY NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:STL:AERR:LANE? → #B0100
Note	This command can be used on 40G

11.3.15 SONet:STIMuli:TX<Pt>:STL:ALARm

Syntax	SONet:STIMuli:TX<Pt>:STL:ALARm <alarmtype>
Description	This command sets the type of alarm to be inserted.
Parameters	<Pt> = Port number <alarmtype> = <CHARACTER PROGRAM DATA> LOFOOF: LOF/OOF-STL LOROOR: LOR/OOR-STL <i>DEFault = LOFOOF</i>
Response	None.
Example	SON:STIM:TX1:STL:ALAR LOF
Note	This command can be used on 40G

Syntax	SONet:STIMuli:TX<Pt>:STL:ALARm?
Description	This query returns the type of alarm to be inserted.
Parameter	<Pt> = Port number
Response	<alarmtype> = <CHARACTER RESPONSE DATA>
Example	SON:STIM:TX1:STL:ALAR? → LOF
Note	This command can be used on 40G

11.3.16 SONet:STIMuli:TX<Pt>:STL:AINSert

Syntax	SONet:STIMuli:TX<Pt>:STL:AINSert <insertion>
Description	This command sets the method to insert alarm.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF MANual ALternate <i>DEFault = OFF</i>
Response	None.
Example	SON:STIM:TX1:STL:AINS MAN
Note	This command can be used on 40G

Syntax	SONet:STIMuli:TX<Pt>:STL:AINSert?
Description	This query returns the alarm insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	SON:STIM:TX1:STL:AINS? → MAN
Note	This command can be used on 40G

11.3.17 SONet:STIMuli:TX<Pt>:STL:ABLength

Syntax	SONet:STIMuli:TX<Pt>:STL:ABLength <frames>
Description	This command sets the alarm burst length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i>
Response	None.
Example	SON:STIM:TX1:STL:ABL 8000
Note	This command can be used on 40G

Syntax	SONet:STIMuli:TX<Pt>:STL:ABLength?
Description	This query returns the alarm burst length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:STL:ABL? → 8000
Note	This command can be used on 40G

11.3.18 SONet:STIMuli:TX<Pt>:STL:AALength

Syntax	SONet:STIMuli:TX<Pt>:STL:AALength <frames>
Description	This command sets the alternate alarm length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i>
Response	None.
Example	SON:STIM:TX1:STL:AAL 8000
Note	This command can be used on 40G

Syntax	SONet:STIMuli:TX<Pt>:STL:AALength?
Description	This query returns the alternate alarm length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:STL:AAL? → 8000
Note	This command can be used on 40G

11.3.19 SONet:STIMuli:TX<Pt>:STL:ANLength

Syntax	SONet:STIMuli:TX<Pt>:STL:ANLength <frames>
Description	This command sets the alternate normal length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i>
Response	None.
Example	SON:STIM:TX1:STL:ANL 8000
Note	This command can be used on 40G

Syntax	SONet:STIMuli:TX<Pt>:STL:ANLength?
Description	This query returns the alternate normal length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:STL:ANL? → 8000
Note	This command can be used on 40G

11.3.20 SONet:STIMuli:TX<Pt>:STL:ERRor

Syntax	SONet:STIMuli:TX<Pt>:STL:ERRor <errortype>
Description	This command sets the type of error to be inserted.
Parameters	<Pt> = Port number <errortype> = <CHARACTER PROGRAM DATA> A1A2: A1A2-STL <i>DEFault = A1A2</i>
Response	None.
Example	SON:STIM:TX1:STL:ERR A1A2
Note	This command can be used on 40G

Syntax	SONet:STIMuli:TX<Pt>:STL:ERRor?
Description	This query returns the type of error to be inserted.
Parameter	<Pt> = Port number
Response	<errortype> = <CHARACTER RESPONSE DATA>
Example	SON:STIM:TX1:STL:ERR? → A1A2
Note	This command can be used on 40G

11.3.21 SONet:STIMuli:TX<Pt>:STL:EINsert

Syntax	SONet:STIMuli:TX<Pt>:STL:EINsert <insertion>
Description	This command sets the method to insert errors.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> OFF ALternate <i>DEFault = OFF</i>
Response	None.
Example	SON:STIM:TX1:STL:EINS ALT
Note	This command can be used on 40G

Syntax	SONet:STIMuli:TX<Pt>:STL:EINsert?
Description	This query returns the error insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	SON:STIM:TX1:STL:EINS? → ALT
Note	This command can be used on 40G

11.3.22 SONet:STIMuli:TX<Pt>:STL:EELength

Syntax	SONet:STIMuli:TX<Pt>:STL:EELength <frames>
Description	This command sets the alternate error length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i>
Response	None.
Example	SON:STIM:TX1:STL:EEL 8000
Note	This command can be used on 40G

Syntax	SONet:STIMuli:TX<Pt>:STL:EELength?
Description	This query returns the alternate error length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:STL:EEL? → 8000
Note	This command can be used on 40G

11.3.23 SONet:STIMuli:TX<Pt>:STL:ENLength

Syntax	SONet:STIMuli:TX<Pt>:STL:ENLength <frames>
Description	This command sets the alternate normal length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault=1</i>
Response	None.
Example	SON:STIM:TX1:STL:ENL 8000
Note	This command can be used on 40G

Syntax	SONet:STIMuli:TX<Pt>:STL:ENLength?
Description	This query returns the alternate normal length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:STL:ENL? → 8000
Note	This command can be used on 40G

11.3.24 SONet:STIMuli:TX<Pt>:STL:SKEW:BIT

Syntax	SONet:STIMuli:TX<Pt>:STL:SKEW:BIT <bits>
Description	This command sets the bits of the skew .
Parameters	<Pt> = Port number <bits> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 138240, DEFault=1</i>
Response	None.
Example	SON:STIM:TX1:STL:SKEW:BIT 1000
Note	This command can be used on 40G

Syntax	SONet:STIMuli:TX<Pt>:STL:SKEW:BIT?
Description	This query returns the bits of the skew .
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:STL:SKEW:BIT? → 1000
Note	This command can be used on 40G

11.3.25 SONet:STIMuli:TX<Pt>:STL:SKEW:NS?

Syntax	SONet:STIMuli:TX<Pt>:STL:SKEW:NS?
Description	This query returns the time of the skew to be inserted. Unit: ns
Parameter	<Pt> = Port number
Response	<skew> = <NR2 NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:STL:SKEW:NS? → 100.469
Note	This command can be used on 40G

11.3.26 SONet:STIMuli:TX<Pt>:STL:SKEW:LANE

Syntax	SONet:STIMuli:TX<Pt>:STL:SKEW:LANE <lane>
Description	This command sets the lane of the skew to be inserted.
Parameters	<Pt> = Port number <lane> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000, MAXimum=#B1111, DEFault=#B1000</i>
Response	None.
Example	SON:STIM:TX1:STL:SKEW:LANE #B01 SON:STIM:TX1:STL:SKEW:LANE #B0100 These commands add skew into lane 1.
Note	This command can be used on 40G

11.3.27 SONet:STIMuli:TX<Pt>:STL:SKEW:LANE?

Syntax	SONet:STIMuli:TX<Pt>:STL:SKEW:LANE?
Description	This query returns the lane of the skew to be inserted.
Parameters	<Pt> = Port number
Response	<lane> = <BINARY NUMERIC RESPONSE DATA>
Example	SON:STIM:TX1:STL:SKEW:LANE? → #B0100
Note	This command can be used on 40G

11.4 Result

11.4.1 SONet:RX<Pt>:IFETch?

Syntax	SONet:RX<Pt>:IFETch? <parameter>
Description	This query fetches a SONET interval if available.
Parameters	<Pt> = Port number ({<parameter>} + {,}*) = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. Alarms LOS: Loss of signal. Response: <Seconds>,<Ratio> GAIS: Generic alarm indication signal. Response: <Seconds>,<Ratio> LOF: Loss of frame. Response: <Seconds>,<Ratio> OOF: Out of frame. Response: <Seconds>,<Ratio> AISL: Multiplex section alarm indication signal. Response: <Seconds>,<Ratio> RDIL: Multiplex section remote defect indicator. Response: <Seconds>,<Ratio> AISP: Administrative unit - alarm indication signal. Response: <Seconds>,<Ratio> LOPP: Administrative unit - loss of pointer. Response: <Seconds>,<Ratio> TIMP: High-order path trace identifier mismatch. Response: <Seconds>,<Ratio> PLMP: Payload label mismatch. Response: <Seconds>,<Ratio> UNEQP: High-order path unequipped. Response: <Seconds>,<Ratio> RDIP: High-order path remote defect indicator. Response: <Seconds>,<Ratio> AISV: Tributary unit alarm indication signal¹. Response: <Seconds>,<Ratio> LOPV: Tributary unit loss of pointer¹. Response: <Seconds>,<Ratio> LOMV: Tributary unit loss of multi frame¹. Response: <Seconds>,<Ratio> TIMV: Low-order path trace identifier mismatch¹. Response: <Seconds>,<Ratio> UNEQV: Low-order path unequipped¹. Response: <Seconds>,<Ratio> RDIV: Low-order path remote defect indicator¹. Response: <Seconds>,<Ratio> PLMV: Low-order path payload label mismatch¹. Response: <Seconds>,<Ratio> LSS: Loss of signal synchronization¹. Response: <Seconds>,<Ratio> Errors A1A2: Response: <Count>,<Ratio> B1: Response: <Count>,<Ratio> B2: Response: <Count>,<Ratio> REIL: Response: <Count>,<Ratio> B3: Response: <Count>,<Ratio> REIP: Response: <Count>,<Ratio> V5LPB3: ¹Response: <Count>,<Ratio> ERRPRBS: Pattern errors¹. Response: <Count>,<Ratio> ERRPRBSBLK: Pattern block errors¹. Response: <Count>,<Ratio> REIV: Response: <Count>,<Ratio> STSNDF: Response: <Count>,<Ratio> VTNDF: Response: <Count>,<Ratio> SAPS: Switch APS. Response: <Count>,<Ratio> Rx frequency FREQ: Frequency deviation. Response: <ppm> FREQDIF: Frequency difference (RX1-RX2). Response: <ppm> (Only for RX1, RX2 is always NaN (section 1.6.1)) Mux quality MFES: Forward ES. Response: <Count>,<Ratio%> MFSES: Forward SES. Response: <Count>,<Ratio%> MFUNAV: Forward UNAV. Response: <Count>,<Ratio%> MBES: Backward ES. Response: <Count>,<Ratio%> MBSES: Backward SES. Response: <Count>,<Ratio%> MBUNAV: Backward UNAV. Response: <Count>,<Ratio%> STS3CSPE quality STS3CSPEFES: Forward ES. Response: <Count>,<Ratio%> STS3CSPEFSES: Forward SES. Response: <Count>,<Ratio%>

continued on next page...

...continued from previous page

STS3CSPEFUNAV: Forward UNAV. Response: <Count>,<Ratio%>
 STS3CSPEBES: Backward ES. Response: <Count>,<Ratio%>
 STS3CSPEBSES: Backward SES. Response: <Count>,<Ratio%>
 STS3CSPEBUNAV: Backward UNAV. Response: <Count>,<Ratio%>
STS1SPE quality¹
 STS1SPEFES: Forward ES. Response: <Count>,<Ratio%>
 STS1SPEFSES: Forward SES. Response: <Count>,<Ratio%>
 STS1SPEFUNAV: Forward UNAV. Response: <Count>,<Ratio%>
 STS1SPEBES: Backward ES. Response: <Count>,<Ratio%>
 STS1SPEBSES: Backward SES. Response: <Count>,<Ratio%>
 STS1SPEBUNAV: Backward UNAV. Response: <Count>,<Ratio%>
VT2 quality¹
 VT2FES: Forward ES. Response: <Count>,<Ratio%>
 VT2FSES: Forward SES. Response: <Count>,<Ratio%>
 VT2FUNAV: Forward UNAV. Response: <Count>,<Ratio%>
 VT2BES: Backward ES. Response: <Count>,<Ratio%>
 VT2BSES: Backward SES. Response: <Count>,<Ratio%>
 VT2BUNAV: Backward UNAV. Response: <Count>,<Ratio%>
VT15 quality¹
 VT15FES: Forward ES. Response: <Count>,<Ratio%>
 VT15FSES: Forward SES. Response: <Count>,<Ratio%>
 VT15FUNAV: Forward UNAV. Response: <Count>,<Ratio%>
 VT15BES: Backward ES. Response: <Count>,<Ratio%>
 VT15BSES: Backward SES. Response: <Count>,<Ratio%>
 VT15BUNAV: Backward UNAV. Response: <Count>,<Ratio%>
Bulk quality
 ES: ES. Response: <Count>,<Ratio%>
 SES: SES. Response: <Count>,<Ratio%>
 UNAV: UNAV. Response: <Count>,<Ratio%>
STS pointer
 STSPOINT: AU pointer. Response: <Count>
 STSNEG: Negative. Response: <Count>
 STSPOS: Positive. Response: <Count>
VT pointer¹
 VTPOINT: VT pointer. Response: <Count>
 VTNEG: Negative. Response: <Count>
 VTPOS: Positive. Response: <Count>
Justification¹
 JNEG: Negative justification. Response: <Count>
 JPOS: Positive justification. Response: <Count>
MUX performance¹
 PMPES: Performance MUX PO limit ES. Response: <Count>,<Ratio%>
 PMPSES: Performance MUX PO limit SES. Response: <Count>,<Ratio%>
 PMPBBE: Performance MUX PO limit BBE. Response: <Count>,<Ratio%>
 PMBS1ES: Performance MUX BIS limit S1ES. Response: <Count>
 PMBS2ES: Performance MUX BIS limit S2ES. Response: <Count>
 PMBS1SES: Performance MUX BIS limit S1SES. Response: <Count>
 PMBS2SES: Performance MUX BIS limit S2SES. Response: <Count>
 PMFSTAT: Performance MUX forward status.
 Response: <STRING RESPONSE DATA>
 PMFES: Performance MUX forward ES. Response: <Count>,<Ratio%>
 PMFSES: Performance MUX forward SES. Response: <Count>,<Ratio%>
 PMFUNAV: Performance MUX forward UNAV. Response: <Count>,<Ratio%>
 PMFBBE: Performance MUX forward BBE. Response: <Count>,<Ratio%>
 PMBSTAT: Performance MUX backward status.
 Response: <STRING RESPONSE DATA>
 PMBES: Performance MUX backward ES. Response: <Count>,<Ratio%>

continued on next page...

...continued from previous page

	PMBSES: Performance MUX backward SES. Response: <Count>,<Ratio%> PMBUNAV: Performance MUX backward UNAV. Response: <Count>,<Ratio%> PMBBBE: Performance MUX backward BBE. Response: <Count>,<Ratio%> STS3CSPE performance¹ PSTS3CSPEPES: Performance VC4 PO limit ES. Response: <Count>,<Ratio%> PSTS3CSPEPSES: Performance VC4 PO limit SES. Response: <Count>,<Ratio%> PSTS3CSPEPBBE: Performance VC4 PO limit BBE. Response: <Count>,<Ratio%> PSTS3CSPEBS1ES: Performance VC4 BIS limit S1ES. Response: <Count> PSTS3CSPEBS2ES: Performance VC4 BIS limit S2ES. Response: <Count> PSTS3CSPEBS1SES: Performance VC4 BIS limit S1SES. Response: <Count> PSTS3CSPEBS2SES: Performance VC4 BIS limit S2SES. Response: <Count> PSTS3CSPEFSTAT: Performance VC4 forward status. Response: <STRING RESPONSE DATA> PSTS3CSPEFES: Performance VC4 forward ES. Response: <Count>,<Ratio%> PSTS3CSPEFSES: Performance VC4 forward SES. Response: <Count>,<Ratio%> PSTS3CSPEFUNAV: Performance VC4 forward UNAV. Response: <Count>,<Ratio%> PSTS3CSPEFBBE: Performance VC4 forward BBE. Response: <Count>,<Ratio%> PSTS3CSPEBSTAT: Performance VC4 backward status. Response: <STRING RESPONSE DATA> PSTS3CSPEBES: Performance VC4 backward ES. Response: <Count>,<Ratio%> PSTS3CSPEBSES: Performance VC4 backward SES. Response: <Count>,<Ratio%> PSTS3CSPEBUNAV: Performance VC4 backward UNAV. Response: <Count>,<Ratio%> PSTS3CSPEBBBE: Performance VC4 backward BBE. Response: <Count>,<Ratio%> VT2 performance¹ PVT2PES: Performance VC12 PO limit ES. Response: <Count>,<Ratio%> PVT2PSES: Performance VC12 PO limit SES. Response: <Count>,<Ratio%> PVT2PBBE: Performance VC12 PO limit BBE. Response: <Count>,<Ratio%> PVT2BS1ES: Performance VC12 BIS limit S1ES. Response: <Count> PVT2BS2ES: Performance VC12 BIS limit S2ES. Response: <Count> PVT2BS1SES: Performance VC12 BIS limit S1SES. Response: <Count> PVT2BS2SES: Performance VC12 BIS limit S2SES. Response: <Count> PVT2FSTAT: Performance VC12 forward status. Response: <STRING RESPONSE DATA> PVT2FES: Performance VC12 forward ES. Response: <Count>,<Ratio%> PVT2FSES: Performance VC12 forward SES. Response: <Count>,<Ratio%> PVT2FUNAV: Performance VC12 forward UNAV. Response: <Count>,<Ratio%> PVT2FBBE: Performance VC12 forward BBE. Response: <Count>,<Ratio%> PVT2BSTAT: Performance VC12 backward status. Response: <STRING RESPONSE DATA> PVT2BES: Performance VC12 backward ES. Response: <Count>,<Ratio%> PVT2BSES: Performance VC12 backward SES. Response: <Count>,<Ratio%> PVT2BUNAV: Performance VC12 backward UNAV. Response: <Count>,<Ratio%> PVT2BBBE: Performance VC12 backward BBE. Response: <Count>,<Ratio%> VT1.5 performance¹ PVT15PES: Performance VC11 PO limit ES. Response: <Count>,<Ratio%> PVT15PSES: Performance VC11 PO limit SES. Response: <Count>,<Ratio%> PVT15PBBE: Performance VC11 PO limit BBE. Response: <Count>,<Ratio%> PVT15BS1ES: Performance VC11 BIS limit S1ES. Response: <Count> PVT15BS2ES: Performance VC11 BIS limit S2ES. Response: <Count> PVT15BS1SES: Performance VC11 BIS limit S1SES. Response: <Count> PVT15BS2SES: Performance VC11 BIS limit S2SES. Response: <Count> PVT15FSTAT: Performance VC11 forward status. Response: <STRING RESPONSE DATA> PVT15FES: Performance VC11 forward ES. Response: <Count>,<Ratio%> PVT15FSES: Performance VC11 forward SES. Response: <Count>,<Ratio%> PVT15FUNAV: Performance VC11 forward UNAV. Response: <Count>,<Ratio%> PVT15FBBE: Performance VC11 forward BBE. Response: <Count>,<Ratio%>
--	--

continued on next page...

...continued from previous page

	PVT15BSTAT: Performance VC11 backward status. Response: <STRING RESPONSE DATA> PVT15BES: Performance VC11 backward ES. Response: <Count>,<Ratio%> PVT15BSES: Performance VC11 backward SES. Response: <Count>,<Ratio%> PVT15BUNAV: Performance VC11 backward UNAV. Response: <Count>,<Ratio%> PVT15BBBE: Performance VC11 backward BBE. Response: <Count>,<Ratio%> STS1SPE performance¹ PSTS1SPEPES: Performance VC3 PO limit ES. Response: <Count>,<Ratio%> PSTS1SPEPSES: Performance VC3 PO limit SES. Response: <Count>,<Ratio%> PSTS1SPEPBBE: Performance VC3 PO limit BBE. Response: <Count>,<Ratio%> PSTS1SPEBS1ES: Performance VC3 BIS limit S1ES. Response: <Count> PSTS1SPEBS2ES: Performance VC3 BIS limit S2ES. Response: <Count> PSTS1SPEBS1SES: Performance VC3 BIS limit S1SES. Response: <Count> PSTS1SPEBS2SES: Performance VC3 BIS limit S2SES. Response: <Count> PSTS1SPEFSTAT: Performance VC3 forward status. Response: <STRING RESPONSE DATA> PSTS1SPEFES: Performance VC3 forward ES. Response: <Count>,<Ratio%> PSTS1SPEFSES: Performance VC3 forward SES. Response: <Count>,<Ratio%> PSTS1SPEFUNAV: Performance VC3 forward UNAV. Response: <Count>,<Ratio%> PSTS1SPEFBBE: Performance VC3 forward BBE. Response: <Count>,<Ratio%> PSTS1SPEBSTAT: Performance VC3 backward status. Response: <STRING RESPONSE DATA> PSTS1SPEBES: Performance VC3 backward ES. Response: <Count>,<Ratio%> PSTS1SPEBSES: Performance VC3 backward SES. Response: <Count>,<Ratio%> PSTS1SPEBUNAV: Performance VC3 backward UNAV. Response: <Count>,<Ratio%> PSTS1SPEBBBE: Performance VC3 backward BBE. Response: <Count>,<Ratio%> Frequency DEV: Deviation(ppm). Response: <Min>,<Max>,<Avg> SDH TCM¹ TCUNEQ: Tandem connection unequipped. response: <Count>,<Ratio%> TCLTC: Response: <Count>,<Ratio%> TCTIM: Tandem connection trace identifier mismatch. Response: <Count>,<Ratio%> TCAIS: Tandem connection alarm indication signal. Response: <Count>,<Ratio%> TCRDI: Tandem connection remote defect indicator. Response: <Count>,<Ratio%> TCODI: Tandem Connection Outgoing Defect Indicator. Response: <Count>,<Ratio%> TCIEC: Response: <Count>,<Ratio%> TCBIP2: Response: <Count>,<Ratio%> TCREI: Response: <Count>,<Ratio%> TCOEI: Response: <Count>,<Ratio%> TAPID: TCM APID. Response N1 or N2 TCM ID: <id> STL LOFSTL: STL LOF. Response: <Seconds> x 4 lanes LORSTL: STL LOR. Response: <Seconds> x 4 lanes OOFSTL: STL OOF. Response: <Frames> x 4 lanes ORSTL: STL OOR. Response: <Frames> x 4 lanes A1A2STL: A1A2-STL. Response: <Count> x 4 lanes OLA: OLA. Response: <Seconds>,<Ratio> RSKEW: Relative Skew. Response: <Nanoseconds> x 4 lanes MMAp: Marker Map. Response: <NR1> x 4 lanes
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Format: Numeric List Each result is formatted according to the specification in the parameter field. Values that are not relevant or applicable for the current measurement return NaN (section 1.6.1).
Example	SON:RX1:IFET? (LOS,LOF,00F) → (3,0.00532),(4,0.00709),(5,0.00887)
Notes	This command fetches the results from the interval selected using the MEASurement:SETup:SElect command (see section 18.2.2).

continued on next page...

...continued from previous page

	¹ Requires the current interface/application is installed and is currently active in the measurement. If requested result is not available, NaN (section 1.6.1) is returned. If there is one or more results, the last ",," is always removed.
--	---

11.4.2 SONet:PMOVement:RX<Pt>:FETCh?

Syntax	SONet:PMOVement:RX<Pt>:FETCh? <pointer>,<min_time>,<max_time>
Description	This query fetches the pointer values.
Parameters	<pointer> = <CHARACTER PROGRAM DATA> STS: STS3 or STS1 pointer movements VT: VT pointer movements. VTG or VT2 or VT1.5 depending on SONET interface setup. <min_time> = <NUMERIC PROGRAM DATA> MINimum=0, MAXimum=31536000 Beginning of the interval in seconds. <max_time> = <NUMERIC PROGRAM DATA> MINimum=0, MAXimum=31536000 End of the interval in seconds.
Response	{<pointermovements>}* = <EXPRESSION RESPONSE DATA> The response is all pointer movements taking place in the requested time interval. Format: (pointerChange0,timestamp0),(pointerChange1,timestamp1),...
Example	SON:PMOV:RX1:FETC? AU,0,3600 → (1,10.000),(-1,15.002)
Notes	The interval is closed, i.e., it includes both endpoints. The displayed resolution of the timestamps is 1/1000 second = 0.001s.

11.5 Status

11.5.1 SONet:STATus:RX<Pt>:AESummary[:EVENT]?

Syntax	SONet:STATus:RX<Pt>:AESummary[:EVENT]?
Description	This query returns the alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of SON:STAT:RX<Pt>:ALAR1[:EVEN]? Physical and high-order alarm DB2 (2) = Summary bit of SON:STAT:RX<Pt>:ALAR2[:EVEN]? Low-order path and tandem connection alarm DB3 (4) = Summary bit of SON:STAT:RX<Pt>:ERR1[:EVEN]? DB4 (8) = Summary bit of SON:STAT:RX<Pt>:ERR2[:EVEN]? DB5 (16) = Summary bit of SON:STAT:RX<Pt>:ALAR3[:EVEN]? STL alarm DB6 (32) = Summary bit of SON:STAT:RX<Pt>:ERR3[:EVEN]? STL error DB7 - DB16 = NOT USED
Example	SON:STAT:RX1:AES? → 3
Note	SDH can embed E1, E3 or E4 so if a PDH signal is embedded it is a good idea to send the following query STAT:INT:PORT<Pt>[:EVEN]? to see if there is alarms or error at the embedded signal.

11.5.2 SONet:STATus:RX<Pt>:AESummary:CONDition?

Syntax	SONet:STATus:RX<Pt>:AESummary:CONDition?
Description	This query returns alarms and errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as SON:STAT:RX<Pt>:AESummary[:EVEN]?
Example	SON:STAT:RX1:AES:COND? → 3
Note	

11.5.3 SONet:STATus:RX<Pt>:ALARm<section>[:EVENT]?

Syntax	SONet:STATus:RX<Pt>:ALARm<section>[:EVENT]?
Description	This query returns one of the alarms event register.
Parameters	<Pt> = Port number <section> = Physical- and high-order path alarms(1), Low-order path and tandem connection alarms(2) or STL alarms(3)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> <section> = 1: DB1 (1) = LOS, Loss of signal DB2 (2) = LOF, Loss of frame DB3 (4) = OOF, Out of frame DB4 (8) = AISL, Multiplex section - alarm indication signal DB5 (16) = RDIL, Multiplex section - remote defect indicator DB6 (32) = AISP, Administrative unit - alarm indication signal DB7 (64) = LOPP, Administrative unit - loss of pointer DB8 (128) = TIMP, High-order path - trace identifier mismatch DB9 (256) = PLMP, High-order path - payload label mismatch DB10 (512) = UNEQP, High-order path - unequipped DB11 (1024) = RDIP, High-order path - remote defect indicator DB12 (2048) = AISV, Tributary unit - alarm indication signal DB13 (4096) = LOPV, Tributary unit - loss of pointer DB14 (8192) = LOMV, Tributary unit - loss Of multi frame DB15 (16384) = G-AIS, Generic alarm indication signal DB16 = NOT USED <section> = 2: DB1 (1) = TIMV, Low-order path - trace identifier mismatch DB2 (2) = UNEQV, Low-order path - unequipped DB3 (4) = RDIV, Low-order path - remote defect indicator DB4 (8) = LSS, Loss of signal synchronization DB5 = NOT USED DB6 (32) = PLMV, Low-order path - payload label mismatch DB7 (64) = TC-UNEQ, Tandem connection - unequipped DB8 (128) = TC-LTC, Tandem connection - loss of tandem connection DB9 (256) = TC-TIM, Tandem connection - trace identifier mismatch DB10 (512) = TC-AIS, Tandem connection - alarm indication signal DB11 (1024) = TC-RDI, Tandem connection - remote defect indicator DB12 (2048) = TC-ODI, Tandem connection - outgoing defect indicator DB13 - DB16 = NOT USED <section> = 3: DB1 (1) = STL LOF DB2 (2) = STL OOF DB3 (4) = STL LOR DB4 (8) = STL OOR DB5 (16) = OLA DB6 - DB16 = NOT USED
Example	SON:STAT:RX1:ALAR1? → 1
Note	

11.5.4 SONet:STATus:RX<Pt>:ALARm<section>:CONDition?

Syntax	SONet:STATus:RX<Pt>:ALARm<section>:CONDition?
Description	This query returns one of the alarms condition registers.
Parameters	<Pt> = Port number <section> = Physical- and high-order path alarms(1), Low-order path and tandem connection alarms(2) or STL alarms(3)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as SONet:STATus:RX<Pt>:ALARm<section>[:EVENT]?
Example	SON:STAT:RX1:ALAR1:COND? → 1
Note	

11.5.5 SONet:STATus:RX<Pt>:ERRor<section>[:EVENT]?

Syntax	SONet:STATus:RX<Pt>:ERRor<section>[:EVENT]?
Description	This query returns the errors event register.
Parameters	<Pt> = Port number <section> = (1-3)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> <section> = 1: DB1 (1) = A1A2 DB2 (2) = B1 DB3 (4) = B2 DB4 (8) = REIL DB5 (16) = B3 DB6 (32) = REIP DB7 (64) = V5/LP-B3 DB8 (128) = REIV DB9 (256) = PRBS DB10 (512) = VT-NDF DB11 (1024) = STS-NDF DB12 (2048) = APS DB13 - DB16 = NOT USED <section> = 2: DB1 (1) = TU-NEG DB2 (2) = TU-POS DB3 (4) = AU-NEG DB4 (8) = AU-POS DB5 not used DB6 (32) = TC-IEC DB7 (64) = TC-BIP-2 DB8 (128) = TC-REI DB9 (256) = TC-OEI DB10 - DB16 = NOT USED <section> = 3: DB1 (1) = A1A2-STL DB2 - DB16 = NOT USED
Example	SON:STAT:RX1:ERR1? → 3
Note	

11.5.6 SONet:STATus:RX<Pt>:ERRor<section>:CONDition?

Syntax	SONet:STATus:RX<Pt>:ERRor<section>:CONDition?
Description	This query returns errors condition register.
Parameters	<Pt> = Port number <section> = (1-2)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as SONet:STATus:RX<Pt>:ERRor<section>[:EVENTt]?
Example	SON:STAT:RX1:ERR1:COND? → 3
Note	

11.5.7 SONet:STATus:RX<Pt>:PSLevel?

Syntax	SONet:STATus:RX<Pt>:PSLevel?
Description	This query returns the physical signal level. Unit: dBm.
Parameter	<Pt> = Port number
Response	<signallevel> = <STRING RESPONSE DATA> "N/A": Module not present or not ready. - Electrical(STM1) - " <power> dBm": Min: "< -48 dBm", Max: "Exceeds Level" - Optical(Both module types) - " <power> dBm": Min: "< -27 dBm", Max: "Exceeds Level"
Example	SON:STAT:RX1:PSL? → "-3 dBm"
Note	

11.5.8 SONet:STATus:TX<Pt>:PSLevel?

Syntax	SONet:STATus:TX<Pt>:PSLevel?
Description	This query returns the physical signal level. Unit: dBm.
Parameter	<Pt> = Port number
Response	<signallevel> = <STRING RESPONSE DATA> " <power> dBm": Min: "< -27 dBm", Max: "Exceeds Level" "N/A": Module not present or not ready.
Example	SON:STAT:TX1:PSL? → "-3 dBm"
Note	Only available for Optical.

11.5.9 SONet:STATus:RX<Pt>:PDEViation?

Syntax	SONet:STATus:RX<Pt>:PDEViation? [<unit>]
Description	This query returns the physical deviation.
Parameters	<Pt> = Port number <unit> = <CHARACTER PROGRAM DATA> PPM = Parts per million BPS = Bits per second <i>DEFault = PPM</i>
Response	<deviation> = <NR2 NUMERIC RESPONSE DATA>
Example	SON:STAT:RX1:PDEV? PPM → 0
Note	

11.5.10 SONet:STATus:RX<Pt>:PBRate?

Syntax	SONet:STATus:RX<Pt>:PBRate?
Description	This query returns the physical bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STAT:RX1:PBR? → 155520000
Note	

11.5.11 SONet:STATus:RX<Pt>:DIFFerence?

Syntax	SONet:STATus:RX<Pt>:DIFFerence?
Description	This query returns physical bit rate difference between port A and port B (RX1 - RX2). Units: ppm, bps and bits.
Parameter	<Pt> = Port number
Response	<ppm> = <NR1 NUMERIC RESPONSE DATA>
	<bps> = <NR1 NUMERIC RESPONSE DATA>
	<acc> = <NR1 NUMERIC RESPONSE DATA> Accumulated difference in bits.
Example	SON:STAT:RX1:DIFF? → -1,-4,-324
Note	A valid response is only available if both RX1 and RX2 are on. Using either RX1 or RX2 will give the same results.

11.5.12 SONet:STATus:RX<Pt>:RACCumulated

Syntax	SONet:STATus:RX<Pt>:RACCumulated
Description	This command resets the accumulated difference.
Parameter	<Pt> = Port number
Response	None.
Example	SON:STAT:RX1:RACC
Note	Using either RX1 or RX2 will give the same results.

11.5.13 SONet:STATus:RX<Pt>:PPBRate?

Syntax	SONet:STATus:RX<Pt>:PPBRate?
Description	This query returns physical pattern bit rate. Unit: bps.
Parameter	<Pt> = Port number
Response	<bitrate> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:STAT:RX1:PPBR? → 149760000
Note	

11.5.14 SONet:STATus:RX<Pt>:CAPTure:TOH:TRACe?

Syntax	SONet:STATus:RX<Pt>:CAPTure:TOH:TRACe?
Description	This query returns the TOH trace (J0) for the latest captured frames.
Parameter	<Pt> = Port number
Response	<J0_trace> = <STRING RESPONSE DATA>
Example	SON:STAT:RX1:CAPT:TOH:TRAC? → "Message_Test_J0"
Note	If one of the alarms LOS or LOF is present, an empty string is returned.

11.5.15 SONet:STATus:RX<Pt>:CAPTure<Frame>:TOH?

Syntax	SONet:STATus:RX<Pt>:CAPTure<Frame>:TOH? <TOH-byte>
Description	This query returns the TOH bytes from the selected frame. 256 new frames are captured every second.
Parameters	<Pt> = Port number
	<Frame> = Frame number (1-64)
	<TOH-byte> = <CHARACTER PROGRAM DATA> A1: Returns 3 bytes. A2: Returns 3 bytes. J0: Returns 3 bytes. B1: Returns 3 bytes. E1: Returns 3 bytes. F1: Returns 3 bytes. D1: Returns 3 bytes. D2: Returns 3 bytes. D3: Returns 3 bytes. H1: Returns 3 bytes. H2: Returns 3 bytes. H3: Returns 3 bytes. B2: Returns 3 bytes. K1: Returns 3 bytes. K2: Returns 3 bytes. D4: Returns 3 bytes. D5: Returns 3 bytes. D6: Returns 3 bytes. D7: Returns 3 bytes. D8: Returns 3 bytes. D9: Returns 3 bytes. D10: Returns 3 bytes. D11: Returns 3 bytes. D12: Returns 3 bytes. S1: Returns 3 bytes. Z2: Returns 3 bytes. E2: Returns 3 bytes. M0: Returns 1 byte. ¹ M1: Returns 1 byte.
Response	<byte1>[,<byte2>[,<byte3>]] = <HEXADECIMAL NUMERIC RESPONSE DATA> Refer to <TOH-byte> parameter description above to see how many bytes this command returns.
Examples	SON:STAT:RX1:CAPT64:TOH? A1 → #HF6,#HF6,#HF6 SON:STAT:RX2:CAPT23:TOH? H1 → #H69,#H93,#H93 SON:STAT:RX1:CAPT1:TOH? M1 → #H00
Note	If one of the alarms LOS or LOF is present NaN (section 1.6.1) is returned. ¹ Only valid for SONet:RX<Pt>:OCLevel = 192 or 768.

11.5.16 SONet:STATus:RX<Pt>:CAPTure:STS3:POH:TRACe?

Syntax	SONet:STATus:RX<Pt>:CAPTure:STS3:POH:TRACe?
Description	This query returns the STS3 path overhead trace (J1) for the latest captured frames. 64 new frames are captured every second.
Parameter	<Pt> = Port number
Response	<J1_trace> = <STRING RESPONSE DATA>
Example	SON:STAT:RX1:CAPT:STS3:POH:TRAC? → "Message_Test_J1"
Note	If one of the alarms LOS, LOF, UNEQP or LOPP is present, an empty string is returned.

11.5.17 SONet:STATus:RX<Pt>:CAPTure<Frame>:STS3:POH?

Syntax	SONet:STATus:RX<Pt>:CAPTure<Frame>:STS3:POH? <POH-byte>
Description	This query returns the STS3 path overhead bytes from the selected frame. 256 new frames are captured every second.
Parameters	<Pt> = Port number
	<Frame> = Frame number (1-64)
	<POH-byte> = <CHARACTER PROGRAM DATA>
	J1: J1 byte. B3: B3 byte. C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. Z3: Z3 byte. Z4: Z4 byte. Z5: Z5 byte.
Response	<byte> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:STAT:RX1:CAPT1:STS3:POH? H4 → #HFF
Note	If one of the alarms LOS, LOF, UNEQP or LOPP is present NaN (section 1.6.1) is returned.

11.5.18 SONet:STATus:RX<Pt>:CAPTure:STS1:POH:TRACe?

Syntax	SONet:STATus:RX<Pt>:CAPTure:STS1:POH:TRACe?
Description	This command queries the STS1 path overhead trace (J1) for the latest captured frames. 64 new frames are captured every second.
Parameter	<Pt> = Port number
Response	<J1_trace> = <STRING RESPONSE DATA>
Example	SON:STAT:RX1:CAPT:STS1:POH:TRAC? → "Message_Test_J1"
Note	If one of the alarms LOS, LOF, UNEQP or UNEQV is present, an empty string is returned.

11.5.19 SONet:STATus:RX<Pt>:CAPTure<Frame>:STS1:POH?

Syntax	SONet:STATus:RX<Pt>:CAPTure<Frame>:STS1:POH? <POH-byte>
Description	This query returns the STS1 path overhead bytes from the selected frame. 64 new frames are captured every second.
Parameters	<Pt> = Port number
	<Frame> = Frame number (1-64)
	<POH-byte> = <CHARACTER PROGRAM DATA>
	J1: J1 byte. B3: B3 byte. C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. Z3: Z3 byte. Z4: Z4 byte. Z5: Z5 byte.
Response	<byte> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:STAT:RX1:CAPT1:STS1:POH? C2 → #HA3
Note	If one of the alarms LOS, LOF, UNEQP or UNEQV is present NaN (section 1.6.1) is returned. Use the SONet:RX<Pt>:STS1:POH:CMASk command to selected which bytes to be captured.

11.5.20 SONet:STATus:RX<Pt>:CAPTure:VT2:POH:TRACe?

Syntax	SONet:STATus:RX<Pt>:CAPTure:VT2:POH:TRACe?
Description	This query returns VT2 path overhead trace (J2) for the latest captured frames. 64 new frames are captured every second.
Parameter	<Pt> = Port number
Response	<J2_trace> = <STRING RESPONSE DATA>
Example	SON:STAT:RX1:CAPT:VT2:POH:TRAC? → "Message_Test_J2"
Note	If one of the alarms LOS, LOF, UNEQP or UNEQV is present, an empty string is returned.

11.5.21 SONet:STATus:RX<Pt>:CAPTure<Frame>:VT2:POH?

Syntax	SONet:STATus:RX<Pt>:CAPTure<Frame>:VT2:POH? <POH-byte>
Description	This query returns the VT2 path overhead bytes from the selected frame. 64 new frames are captured every second.
Parameters	<Pt> = Port number <Frame> = Frame number (1-64) <POH-byte> = <CHARACTER PROGRAM DATA> V5: V5-SL byte. J2: J2 byte. Z6: Z6 byte. Z7: Z7 byte.
Response	<byte> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:STAT:RX1:CAPT1:VT2:POH? V5 → #H04
Note	If one of the alarms LOS, LOF, UNEQP or UNEQV is present NaN (section 1.6.1) is returned.

11.5.22 SONet:STATus:RX<Pt>:CAPTure:VT15:POH:TRACe?

Syntax	SONet:STATus:RX<Pt>:CAPTure:VT15:POH:TRACe?
Description	This query returns VT1.5 path overhead trace (J2) for the latest captured frames. 64 new frames are captured every second.
Parameter	<Pt> = Port number
Response	<J2_trace> = <STRING RESPONSE DATA>
Example	SON:STAT:RX1:CAPT:VT15:POH:TRAC? → "Message_Test_J2"
Note	If one of the alarms LOS, LOF, UNEQP or UNEQV is present, an empty string is returned.

11.5.23 SONet:STATus:RX<Pt>:CAPTure<Frame>:VT15:POH?

Syntax	SONet:STATus:RX<Pt>:CAPTure<Frame>:VT15:POH? <POH-byte>
Description	This query returns the VT1.5 path overhead bytes from the selected frame. 64 new frames are captured every second.
Parameters	<Pt> = Port number <Frame> = Frame number (1-64) <POH-byte> = <CHARACTER PROGRAM DATA> V5: V5-SL byte. J2: J2 byte. Z6: Z6 byte. Z7: Z7 byte.
Response	<byte> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:STAT:RX1:CAPT1:VT15:POH? V5 → #H04
Note	If one of the alarms LOS, LOF, UNEQP or UNEQV is present NaN (section 1.6.1) is returned.

11.5.24 SONet:STATus:RX<Pt>:CAPTure:STS1:STS1:POH:TRACe?

Syntax	SONet:STATus:RX<Pt>:CAPTure:STS1:STS1:POH:TRACe?
Description	This query returns the STS1 path overhead trace (J1) for the latest captured frames. 64 new frames are captured every second.
Parameters	<Pt> = Port number
Response	<J1_trace> = <STRING RESPONSE DATA>
Example	SON:STAT:RX1:CAPT:STS1:STS1:POH:TRAC? → "Message_Test_J1"
Note	If one of the alarms LOS, LOF, UNEQP or LOPP is present, an empty string is returned.

11.5.25 SONet:STATus:RX<Pt>:CAPTure<Frame>:STS1:STS1:POH?

Syntax	SONet:STATus:RX<Pt>:CAPTure<Frame>:STS1:STS1:POH? <POH-byte>
Description	This query returns the STS1 path overhead bytes from the selected frame. 256 new frames are captured every second.
Parameters	<Pt> = Port number
	<Frame> = Frame number (1-64)
	<POH-byte> = <CHARACTER PROGRAM DATA> J1: J1 byte. B3: B3 byte. C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. Z3: Z3 byte. Z4: Z4 byte. Z5: Z5 byte.
Response	<byte> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	SON:STAT:RX1:CAPT1:STS1:STS1:POH? H4 → #HFF
Note	If one of the alarms LOS, LOF, UNEQP or LOPP is present NaN (section 1.6.1) is returned.

11.6 APS

11.6.1 SONet:APS:START

Syntax	SONet:APS:START
Description	This command starts the APS (Automatic Protection Switching).
Parameter	None.
Response	None.
Example	SON:APS:STAR
Note	

11.6.2 SONet:APS:STOP

Syntax	SONet:APS:STOP
Description	This command stops the APS (Automatic Protection Switching) command.
Parameter	None.
Response	None.
Example	SON:APS:STOP
Note	

11.6.3 SONet:APS:RX<Pt>:PINterpret?

Syntax	SONet:APS:RX<Pt>:PINterpret?
Description	This query returns the protocol interpretation.
Parameter	<Pt> = Port number
Response	<interpretation> = <STRING RESPONSE DATA>
Example	SON:APS:RX1:PINT? → "00:00:19 Number 0 Time: 0.000ms ----- k1: Signal degrade (protection) Destination Node (K1) 2 k2: Short Source Node (K2) 7"
Note	

11.6.4 SONet:APS:RX<Pt>:NUMBER?

Syntax	SONet:APS:RX<Pt>:NUMBER?
Description	This query returns the number of times an APS Protocol event has occurred.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:APS:RX1:NUMB? → 17
Note	

11.6.5 SONet:APS:RX<Pt>:ATIME?

Syntax	SONet:APS:RX<Pt>:ATIME?
Description	This query returns the average time of the reference event occurrences. Unit: ms.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	SON:APS:RX1:ATIM? → 4.000
Note	The maximum measurable time is 10000 ms. The maximum measurable time will be responded if the result exceeds 10000 ms.

11.6.6 SONet:APS:RX<Pt>:MTIMe?

Syntax	SONet:APS:RX<Pt>:MTIMe?
Description	This query returns the maximum time of the reference event occurrences. Unit: ms.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
	<limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	SON:APS:RX1:MTIM? → 29.17,0
Note	The maximum measurable time is 10000 ms. The maximum measurable time will be responded if the result exceeds 10000 ms.

11.6.7 SONet:APS:RX<Pt>:LTIMe?

Syntax	SONet:APS:RX<Pt>:LTIMe?
Description	This query returns the least (minimum) time of the reference event occurrences. Unit: ms.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	SON:APS:RX1:LTIM? → 29.17
Note	The maximum measurable time is 10000 ms. The maximum measurable time will be responded if the result exceeds 10000 ms.

11.6.8 SONet:APS:RX<Pt>:CTIMe?

Syntax	SONet:APS:RX<Pt>:CTIMe?
Description	This query returns the current time of the reference event occurrences. Unit: ms.
Parameter	<Pt> = Port number
Response	<current> = <NR2 NUMERIC RESPONSE DATA>
Example	SON:APS:RX1:CTIM? → 4.000
Note	The maximum measurable time is 10000 ms. The maximum measurable time will be responded if the result exceeds 99999.999 ms.

11.6.9 SONet:APS:RX<Pt>:EVENT

Syntax	SONet:APS:RX<Pt>:EVENT <event>
Description	This command sets the Time Reference event.
Parameters	<Pt> = Port number <event> = <CHARACTER PROGRAM DATA> LOS = Loss of signal LOF = Loss of frame OOF = Out of frame AISL = MS alarm indication signal RDIL = MS remote defect indicator APSS = APS switch-over AISP = AU alarm indication signal LOPP = AU loss of pointer TIMP = HP trace identifier mismatch PLMP = HP payload label mismatch UNEQP = HP unequipped LOMV = TU loss of multiframe AISV = TU alarm indication signal LOPV = TU loss of pointer TIMV = LP trace identifier mismatch PLMV = LP payload label mismatch UNEQV = LP unequipped A1A2 = Frame alignment word error B1 = B1 checksum byte error B2 = B2 checksum byte error REIL = MS remote error indication B3 = B3 checksum byte error V5 = B3 checksum of the low-order path PERRor = Pattern error ANYERROR = Any errors <i>DEFault = LOS</i>
Response	None.
Example	SON:APS:RX1:EVEN LOF
Note	

Syntax	SONet:APS:RX<Pt>:EVENT?
Description	This query returns the time reference event.
Parameter	<Pt> = Port number
Response	<event> = <CHARACTER RESPONSE DATA>
Example	SON:APS:RX1:EVEN? → LOF
Note	

11.6.10 SONet:APS:RX<Pt>:MLIMit

Syntax	SONet:APS:RX<Pt>:MLIMit <max>
Description	This command sets the time reference maximum limit. Unit: ms.
Parameters	<Pt> = Port number <max> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 10000.000, DEFault = 50.000</i>
Response	None.
Example	SON:APS:RX1:MLIM 50.000
Note	

Syntax	SONet:APS:RX<Pt>:MLIMit?
Description	This query returns the time reference maximum limit. Unit: ms.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
Example	SON:APS:RX1:MLIM? → 50.000
Note	

11.6.11 SONet:APS:RX<Pt>:PERiod

Syntax	SONet:APS:RX<Pt>:PERiod <period>
Description	This command sets the error free period.
Parameters	<Pt> = Port number <period> = <CHARACTER PROGRAM DATA> 1,10,20,30,40,50,60,70,80,90,100 Unit ms <i>DEFault = 1</i>
Response	None
Example	SON:APS:RX1:PER 1
Note	

Syntax	SONet:APS:RX<Pt>:PERiod?
Description	This query returns the error free period.
Parameter	<Pt> = Port number
Response	<period> = <CHARACTER PROGRAM DATA>
Example	SON:APS:RX1:PER? → 1
Note	

11.6.12 SONet:APS:RX<Pt>:CONFig

Syntax	SONet:APS:RX<Pt>:CONFig <protection>,<path>
Description	This command sets the protection type and the path or architecture.
Parameters	<Pt> = Port number <protection> = <CHARACTER PROGRAM DATA> RING = Ring protection LINear = Linear <i>DEFault = RING</i> <path> = <CHARACTER PROGRAM DATA> Ring Path: SHRT = Short path LONG = Long path <i>DEFault = SHRT</i> Linear Architecture: 1P1 = 1+1 Architecture 1N = 1:n Architecture
Response	None.
Example	SON:APS:RX1:CONF RING,SHRT
Notes	

Syntax	SONet:APS:RX<Pt>:CONFig?
Description	This query returns the protection type and the path or architecture.
Parameter	<Pt> = Port number
Response	<protection> = <CHARACTER RESPONSE DATA> <path> = <CHARACTER PROGRAM DATA>
Example	SON:APS:RX1:CONF? → RING,SHRT
Note	

11.6.13 SONet:APS:RX<Pt>:RTYPE

Syntax	SONet:APS:RX<Pt>:RTYPE <type>
Description	This command sets the request type for the transmitter.
Parameter	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> Ring Request Types: for SONet:APS:RX<Pt>:CONFig? → RING,.... RLOP = Lockout of protection (span) RFSS = Forced switch (span) RFSR = Forced switch (ring) RSFS = Signal fail (span) RSFR = Signal fail (ring) RSDP = Signal degrade (protection) RSDS = Signal degrade (span) RSDR = Signal degrade (ring) RMSS = Manual switch (span) RMSR = Manual switch (ring) RWTR = Wait to restore REXS = Exercise (span) REXR = Exercise (ring) RRRS = Reverse request (span) RRRR = Reverse request (ring) RNRQ = No request <i>DEFault = RLOP</i> Linear Request Types: for SDH:APS:RX<Pt>:CONFig? → LIN,.... LLOP = Lockout of protection LFSW = Forced switch LSFH = Signal fail (high priority) LSFL = Signal fail (low priority) LSDH = Signal degrade (high priority) LSDL = Signal degrade (low priority) LMSW = Manual switch (ring) LWTR = Wait to restore LEXC = Exercise LRRQ = Reverse request LDNR = Do not revert LNRQ = No request <i>DEFault = LLOP</i>
Response	None.
Example	SON:APS:RX1:RTYP RLOP
Notes	Use the SONet:APS:RX<Pt>:APPLy command to apply the request to the transmitter.

Syntax	SONet:APS:RX<Pt>:RTYPE?
Description	This query returns the request type for the transmitter.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	SON:APS:RX1:RTYP? → RLOP
Note	

11.6.14 SONet:APS:RX<Pt>:K1

Syntax	SONet:APS:RX<Pt>:K1 <value>
Description	This command sets the destination node/source channel (K1).
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=15, DEFault = 0</i>
Response	None.
Example	SON:APS:RX1:K1 3
Notes	Cannot be changed if the SONet:APS:CONFig command is set to LIN, 1P1. Changes to SONet:APS:CONFig will reset this value to 0.

Syntax	SONet:APS:RX<Pt>:K1?
Description	This query returns the destination node/source channel (K1).
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:APS:RX1:K1? → 3
Note	

11.6.15 SONet:APS:RX<Pt>:K2

Syntax	SONet:APS:RX<Pt>:K2 <value>
Description	This command sets the source node/bridged channel (K2).
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=15, DEFault = 0</i>
Response	None.
Example	SON:APS:RX1:K2 3
Notes	Cannot be changed if the SONet:APS:CONFig command is set to LIN, 1P1. Changes to SONet:APS:CONFig will reset this value to 0.

Syntax	SONet:APS:RX<Pt>:K2?
Description	This query returns the source node/bridged channel (K2).
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:APS:RX1:K2? → 3
Note	

11.6.16 SONet:APS:RX<Pt>:APPLy

Syntax	SONet:APS:RX<Pt>:APPLy
Description	This command applies the K1/K2 request setup to the transmitter.
Parameter	<Pt> = Port number
Response	None.
Example	SON:APS:RX1:APPL
Notes	

11.7 Tributary Scan

11.7.1 SONet:TSCan:STARt

Syntax	SONet:TSCan:STARt
Description	This command starts the tributary scan test.
Parameter	None.
Response	None.
Example	SON:TSC:STAR
Note	It is possible to run only one test or measurement at a time. The SONET interface must be active for at least one of the receivers.

11.7.2 SONet:TSCan:STOP

Syntax	SONet:TSCan:STOP
Description	This command stops the tributary scan test.
Parameter	None.
Response	None.
Example	SON:TSC:STOP
Note	

11.7.3 SONet:TSCan:RX<Pt>:NHOCContainer?

Syntax	SONet:TSCan:RX<Pt>:NHOCContainer?
Description	This query returns the number of High-order containers (STS3/STS1)
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:TSC:RX1:NHOC? → 4
Note	If '0' is returned, no High-order containers were found. To get more information, use the SONet:TSCan:RX<Pt>:MUX? query.

11.7.4 SONet:TSCan:RX<Pt>:GHOCContainer?

Syntax	SONet:TSCan:RX<Pt>:GHOCContainer?
Description	This query returns the state of High-order containers (STS3/STS1)
Parameter	<Pt> = Port number
Response	({<value>,}+) = <NR1 NUMERIC RESPONSE DATA> The values are presented in ascending order, meaning that STS3 #1 is the first on the list. 0 = No alarms or errors. 1 = Alarms or errors present.
Example	SON:TSC:RX1:GHOC? → (0,0,1,0)
Note	If there is one or more results, the last ",," is always removed.

11.7.5 SONet:TSCan:RX<Pt>:SHOCContainer

Syntax	SONet:TSCan:RX<Pt>:SHOCContainer <STS>
Description	This command sets the High-order container (STS3/STS1) for scanning.
Parameters	<Pt> = Port number <STS> = High-order container number <i>MINimum=1, MAXimum=768</i>
Response	None.
Example	SON:TSC:RX1:SHOC 2
Note	

11.7.6 SONet:TSCan:RX<Pt>:SHOCContainer?

Syntax	SONet:TSCan:RX<Pt>:SHOCContainer?
Description	This query returns the High-order container (STS3/STS1) set for scanning.
Parameter	<Pt> = Port number
Response	<STS> = High-order container number
Example	SON:TSC:RX1:SHOC? → 2
Note	

11.7.7 SONet:TSCan:RX<Pt>:DHOCContainer?

Syntax	SONet:TSCan:RX<Pt>:DHOCContainer? <STS3/STS1>
Description	This query returns the detailed alarm and error information from a High-order container (STS3/STS1).
Parameters	<Pt> = Port number <VC4> = High-order container number <i>MINimum=1, MAXimum=768</i>
Response	<selected>, = <STRING RESPONSE DATA>. {RXn} _□ {High-order}, separated by one space character. RXn = RX1 or RX2 High-order = STS3#0 ... STS3#64 or STS1#0 ... STS1#192 ({<alarmerrors>,}*) = <STRING RESPONSE DATA> List of alarms and errors.
Example	SON:TSC:RX1:DHOC? 1 → "RX1 STS3#1",("B1","A1A2")
Note	If there is one or more responses, the last ", " is always removed.

11.7.8 SONet:TSCan:RX<Pt>:NLOCContainer?

Syntax	SONet:TSCan:RX<Pt>:NLOCContainer?
Description	This query returns the number of Low-order containers (STS1/VT2/VT1.5).
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:TSC:RX1:NLOC? → 3
Note	

11.7.9 SONet:TSCan:RX<Pt>:GLOCContainer?

Syntax	SONet:TSCan:RX<Pt>:GLOCContainer?
Description	This query returns the state of Low-order containers (STS1/VT2/VT1.5).
Parameter	<Pt> = Port number
Response	({<value>,}*) = <NR1 NUMERIC RESPONSE DATA> The values are presented in ascending order, meaning that STS3 #1 is the first in the list. 0 = No alarms or errors. 1 = Alarms or errors present.
Example	SON:TSC:RX1:GLOC? → (0,1,1)
Note	If there is one or more responses, the last ", " is always removed.

11.7.10 SONet:TSCan:RX<Pt>:DLOCContainer?

Syntax	SONet:TSCan:RX<Pt>:DLOCContainer? <STS1/VT2/VT15>
Description	This query returns the detailed alarm and error information from a Low-order container (STS1/VT2/VT1.5).
Parameters	<Pt> = Port number <STS1/VT2/VT15> = Low-order container number <i>MINimum=1, MAXimum=84</i>
Response	<selected>, = <STRING RESPONSE DATA>. {RXn} _□ {High-order}:{Low-order}, First separated by one space character and next with a colon char. RXn = RX1 or RX2 High-order = STS3#0 ... STS3#64 or STS1#0 ... STS1#192 Low-order = STS1#1 ... STS1#3 or VT2#1 ... VT2#63 or VT1.5#1 ... VT1.5#84 ({<alarmerrors>,}*) = <STRING RESPONSE DATA> List of alarms and errors.
Example	SON:TSC:RX1:DLOC? 1 → "RX1 STS3#1:STS1#1",("B1","A1A2")
Notes	To select the High-order container, use the SONet:TSCan:RX<rx>:SHOCContainer command. If there is one or more responses, the last ", " is always removed.

11.7.11 SONet:TSCan:RX<Pt>:DMUX?

Syntax	SONet:TSCan:RX<Pt>:DMUX?
Description	This query returns the detailed alarm and error information from the MUX.
Parameter	<Pt> = Port number
Response	<selected> = <STRING RESPONSE DATA>. {Rx} MUX
	({<alarmerrors>, }*) = <STRING RESPONSE DATA> List of alarms and errors.
Example	SON:TSC:RX1:DMUX? → "Rx1 MUX", ("LOS", "LOF", "OOF")
Notes	This query is only available when no High-order containers are present. To determine if MUX is available, use the SONet:TSCan:RX<Pt>:NHOCContainer? query. If there is one or more responses, the last ", " is always removed.

11.8 RTD

This section document commands for the Round Trip Delay application.
Commands for general RTD settings are described in section 17.1 on page 1003.

11.8.1 SONet:RTD:RX<Pt>:MLIMit

Syntax	SONet:RTD:RX<Pt>:MLIMit <max>
Description	This command sets the time reference maximum limit. Unit: us.
Parameters	<Pt> = Port number <max> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0, MAXimum = 10000000.0, DEFault = MAXimum</i>
Response	None.
Example	SON:RTD:RX1:MLIM 0.0
Note	

Syntax	SONet:RTD:RX<Pt>:MLIMit?
Description	This query returns the time reference maximum limit. Unit: us.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
Example	SON:RTD:RX1:MLIM? → 0.0
Note	

11.8.2 SONet:RTD:RX<Pt>:NUMBer?

Syntax	SONet:RTD:RX<Pt>:NUMBer?
Description	This query returns the number of the RTD data.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	SON:RTD:RX1:NUMB? → 2
Note	

11.8.3 SONet:RTD:RX<Pt>:ATIMe?

Syntax	SONet:RTD:RX<Pt>:ATIMe?
Description	This query returns the average time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	SON:RTD:RX1:ATIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

11.8.4 SONet:RTD:RX<Pt>:MTIMe?

Syntax	SONet:RTD:RX<Pt>:MTIMe?
Description	This query returns the maximum time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA> <limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	SON:RTD:RX1:MTIM? → 1.0,0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

11.8.5 SONet:RTD:RX<Pt>:LTIME?

Syntax	SONet:RTD:RX<Pt>:LTIME?
Description	This query returns the least (minimum) time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	SON:RTD:RX1:LTIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

11.8.6 SONet:RTD:RX<Pt>:CTIME?

Syntax	SONet:RTD:RX<Pt>:CTIME?
Description	This query returns the current time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	SON:RTD:RX1:CTIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds 99999999.9 us.

Chapter 12

Ethernet

By default, the Ethernet settings cannot be changed during a measurement. Use `ETH:PORT<Pt>:SETT:ACIS` to change this behavior (see section 12.7.18).

12.1 Port Setup

12.1.1 ETHernet:PORT<Pt>:ITYPE

Syntax	ETHernet:PORT<Pt>:ITYPE <interface>
Description	This command sets the interface type.
Parameters	<Pt> = Port number <interface> = <CHARACTER PROGRAM DATA> ELECtrical: Electrical interface (10/100/1000 Mbps) SFP: SFP optical interface (100/1000 Mbps) SFPP: SFP+ optical interface (10 Gbps) SFP28: SFP28 optical interface (25 Gbps) QSFP: QSFP optical interface (40 Gbps) QSFP28: QSFP28 optical interface (100 Gbps) CXP: CXP optical interface (100 Gbps) CFP: CFP optical interface (40/100 Gbps) CFP2: CFP2 optical interface (100 Gbps) CFP4: CFP4 optical interface (100 Gbps) QSFP28ADpt: CFP2-QSFP28 Adaptor interface (100 Gbps) QSFP56: QSFP56 optical interface (200 Gbps) QSFPDD: QSFP-DD optical interface (400 Gbps) OSFP: OSFP optical interface (400 Gbps) OPTical: Obsolete. For CMA 3000 backward compatibility only. Same as SFP. 10Gbps: Obsolete. For CMA 3000 backward compatibility only. Same as SFPP. <i>DEFault = ELECtrical</i>
Response	None.
Example	ETH:PORT1:ITYP ELEC
Notes	

Syntax	ETHernet:PORT<Pt>:ITYPE?
Description	This query returns the interface type.
Parameter	<Pt> = Port number
Response	<interface> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:ITYP? → ELEC
Note	

12.1.2 EThernet:PORT<Pt>:MODE

Syntax	EThernet:PORT<Pt>:MODE <mode>
Description	The command sets the port mode
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Port off ANEGotiate: Port ON in auto negotiation mode FORCed: Port ON in forced mode <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:MODE ANEG
Note	ANEGotiate does not apply to the 10Gbps interface.

Syntax	EThernet:PORT<Pt>:MODE?
Description	This query returns the port mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:MODE? → ANEG
Note	

12.1.3 EThernet:PORT<Pt>:ANEGotiate

Syntax	EThernet:PORT<Pt>:ANEGotiate <speedduplex>
Description	This command sets the speed(s) and duplex to auto negotiate for electrical interface.
Parameters	<Pt> = Port number ({<speedduplex>} + {,}*) = <EXPRESSION PROGRAM DATA> 10MH: 10Mbps half duplex 10MF: 10Mbps full duplex 100MH: 100Mbps half duplex 100MF: 100Mbps full duplex 1GF: 1Gbps full duplex
Response	None.
Example	ETH:PORT1:ANEG (10MH,100MF)
Note	

Syntax	EThernet:PORT<Pt>:ANEGotiate?
Description	This query returns the auto negotiation speed(s) and duplex for electrical interface.
Parameter	<Pt> = Port number
Response	{(<speedduplex>),}* = <EXPRESSION RESPONSE DATA> <speedduplex> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:ANEG? → (10MH,100MF)
Note	

12.1.4 EThernet:PORT<Pt>:FMODE

Syntax	EThernet:PORT<Pt>:FMODE <mode>
Description	This command sets the speed/duplex in forced mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> 10MH: 10Mbps half duplex 10MF: 10Mbps full duplex 100MH: 100Mbps half duplex 100MF: 100Mbps full duplex 1GF: 1Gbps full duplex 10GF: 10Gbps full duplex 25GF: 25Gbps full duplex 40GF: 40Gbps full duplex 100GF: 100Gbps full duplex 200GF: 200Gbps full duplex 400GF: 400Gbps full duplex <i>DEFault = 10MH</i>
Response	None.
Example	ETH:PORT1:FMODE 100MF
Note	

Syntax	EThernet:PORT<Pt>:FMODE?
Description	This query returns forced mode speed/duplex.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:FMODE? → 100MF
Note	

12.1.5 EThernet:PORT<Pt>:CMODE

Syntax	EThernet:PORT<Pt>:CMODE <mode>
Description	This command sets the 1000Mbps clock mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> MASTer: Master PMASTer: Prefer master SLAVE: Slave PSLave: Prefer slave <i>DEFault = PMASTer</i>
Response	None.
Example	ETH:PORT1:CMODE MAST
Note	

Syntax	EThernet:PORT<Pt>:CMODE?
Description	This query returns the 1000Mbps clock mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:CMODE? → SLAV
Note	

12.1.6 EThernet:PORT<Pt>:MDICrossover

Syntax	EThernet:PORT<Pt>:MDICrossover <mode>
Description	This command sets the MDI Crossover mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> AUTO MDI MDIX <i>DEFault = AUTO</i>
Response	None.
Example	ETH:PORT1:MDIC AUTO
Note	

Syntax	EThernet:PORT<Pt>:MDICrossover?
Description	This query returns the MDI Crossover mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:MDIC? → AUTO
Note	

12.1.7 EThernet:PORT<Pt>:TIMing:SOURce

Syntax	EThernet:PORT<Pt>:TIMing:SOURce <source>
Description	This command sets the transmitter timing source.
Parameter	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> INTernal: Internal clock. EXTernal: External input clock (2MHz/E1(SETS)/T1(BITS)). GPS: GPS signal. RX: Received clock. PTP: PTP(IEEE 1588v2) recovered clock. <i>DEFault = INTernal</i>
Response	None.
Example	ETH:PORT1:TIM:SOUR INT
Note	

Syntax	EThernet:PORT<Pt>:TIMing:SOURce?
Description	This query returns the transmitter timing source.
Parameter	<Pt> = Port number
Response	<source> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:TIM:SOUR? → INT
Note	

12.1.8 EThernet:PORT<Pt>:PFRames

Syntax	EThernet:PORT<Pt>:PFRames <respond>
Description	This command enable or disable respond to PAUSE frames.
Parameters	<Pt> = Port number <respond> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PFR ON
Note	

Syntax	ETHernet:PORT<Pt>:PFRames?
Description	This query returns the state of respond to PAUSE frames.
Parameter	<Pt> = Port number
Response	<respond> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PFR? → 1
Note	

12.1.9 ETHernet:PORT<Pt>:FEC

Syntax	ETHernet:PORT<Pt>:FEC <mode>
Description	The command sets the FEC mode
Parameters	<Pt> = Port number <mode> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:FEC ON
Note	This command can be used on MU110013A. This command can be used when interface type is CFP2 or QSFP28 Adpt..

Syntax	ETHernet:PORT<Pt>:FEC?
Description	This query returns the FEC mode.
Parameter	<Pt> = Port number
Response	<respond> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:FEC? → 1
Note	This command can be used on MU110013A. This command can be used when interface type is CFP2 or QSFP28 Adpt.

12.1.10 ETHernet:PORT<Pt>:BREakout

Syntax	ETHernet:PORT<Pt>:BREakout <mode>
Description	This command sets breakout mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> 4X100G: 400G 4x100G 2X200G: 400G 2x200G <i>DEFault = 4X100G</i>
Response	None.
Example	ETH:PORT1:BRE 4X100G
Note	This command can only be used for Ethernet N-Port BERT application.

Syntax	ETHernet:PORT<Pt>:BREakout?
Description	This query returns breakout mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA> 4X100G: 400G 4x100G 2X200G: 400G 2x200G
Example	ETH:PORT1:BRE? → 4X100G
Note	This command can only be used for Ethernet N-Port BERT application.

12.2 WAN

12.2.1 ETHernet:PORT<Pt>:WAN[:ENABle]

Syntax	ETHernet:PORT<Pt>:WAN[:ENABle] <enable>
Description	This command enables or disables the WAN layer of the 10Gbps interface.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFAult = OFF</i>
Response	None.
Examples	ETH:PORT1:WAN ON
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:WAN[:ENABle]?
Description	This query returns whether the WAN layer of the 10Gbps interface is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:WAN? → 1
Note	This command can be used in V2.00 or later.

12.2.2 ETHernet:PORT<Pt>:WAN:TERMinology

Syntax	ETHernet:PORT<Pt>:WAN:TERMinology <terminology>
Description	This command sets the WAN terminology.
Parameters	<Pt> = Port number <terminology> = <CHARACTER PROGRAM DATA> SONet: SONET terminology SDH: SDH terminology <i>DEFAult = SONet</i>
Response	None.
Example	ETH:PORT1:WAN:TERM SON
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:WAN:TERMinology?
Description	This query returns the WAN terminology.
Parameter	<Pt> = Port number
Response	<terminology> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:WAN:TERM? → SON
Note	This command can be used in V2.00 or later.

12.2.3 ETHernet:PORT<Pt>:WAN:SOH:DEFault

Syntax	ETHernet:PORT<Pt>:WAN:SOH:DEFault
Description	This command sets all WAN section overhead bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	ETH:PORT1:WAN:SOH:DEF
Note	This command can be used in V2.00 or later.

12.2.4 ETHernet:PORT<Pt>:WAN:SOH:TRACe

Syntax	ETHernet:PORT<Pt>:WAN:SOH:TRACe <string>[,<idlechar>]
Description	This command sets the WAN section overhead trace (J0) to the specified string.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> This quoted string is used as section trace string. <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault</i> = #H20
Response	None.
Example	ETH:PORT1:WAN:SOH:TRAC "Anritsu Network Master",#H20
Note	If the entered trace string is more than 15 characters long, the string will be truncated. This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:WAN:SOH:TRACe?
Description	This query returns the WAN section overhead trace string and idle char.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA> <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:WAN:SOH:TRAC? → "Anritsu Network Master",#H20
Note	This command can be used in V2.00 or later.

12.2.5 ETHernet:PORT<Pt>:WAN:SOH:TRACe:CRC

Syntax	ETHernet:PORT<Pt>:WAN:SOH:TRACe:CRC <mode>
Description	This command sets the SOH trace (J0) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: CRC OFF ON : CRC ON <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT1:WAN:SOH:TRAC:CRC ON
Note	

Syntax	ETHernet:PORT<Pt>:WAN:SOH:TRACe:CRC?
Description	This query returns the mode of the SOH trace (J0) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:WAN:SOH:TRAC:CRC? → ON
Note	

 
12.2.6 ETHernet:PORT<Pt>:WAN:SOH

Syntax	ETHernet:PORT<Pt>:WAN:SOH <SOH-byte>,<value1>[,<value2>[,<value3>]]
Description	This command sets the value of the specified bytes in the WAN section overhead.
Parameters	<Pt> = Port number <SOH-byte> = <CHARACTER PROGRAM DATA> A1: 3 bytes. A2: 3 bytes. J0: 3 bytes. Note: The defined trace string will be disabled. B1: 2 bytes. <value3> is ignored. E1: 3 bytes. F1: 3 bytes. D1: 3 bytes. D2: 3 bytes. D3: 3 bytes.

continued on next page...

...continued from previous page

K1: 3 bytes.
 K2: 3 bytes.
 D4: 3 bytes.
 D5: 3 bytes.
 D6: 3 bytes.
 D7: 3 bytes.
 D8: 3 bytes.
 D9: 3 bytes.
 D10: 3 bytes.
 D11: 3 bytes.
 D12: 3 bytes.
 S1: 3 bytes.
 Z2: 3 bytes.
 E2: 3 bytes.
 M0: 1 byte. <value2> and <value3> are ignored.
 M1: 1 byte. <value2> and <value3> are ignored.

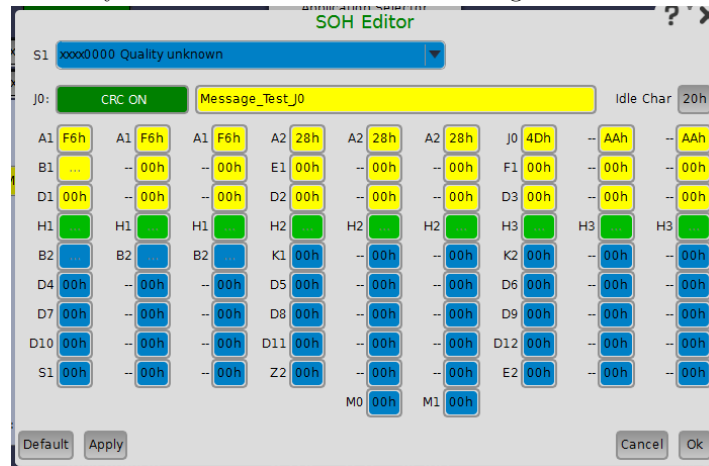

<value1> = <NUMERIC PROGRAM DATA>

<value2> = <NUMERIC PROGRAM DATA>

<value3> = <NUMERIC PROGRAM DATA>

MINimum = #H00, *MAXimum* = #HFF

Response	None.
Examples	ETH:PORT1:WAN:SOH A1,#H00,#H00,#H00 ETH:PORT1:WAN:SOH D7,#HFD,#H20,#H1A ETH:PORT1:WAN:SOH B1,#H04,#H05 ETH:PORT1:WAN:SOH M1,#H00
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:WAN:SOH? <SOH-byte>
Description	This query returns the value of the specified bytes in the WAN section overhead.
Parameters	<Pt> = Port number <SOH-byte> = <CHARACTER PROGRAM DATA>
Response	<value1> = <HEXADECIMAL NUMERIC RESPONSE DATA> [,<value2> = <HEXADECIMAL NUMERIC RESPONSE DATA> [,<value3> = <HEXADECIMAL NUMERIC RESPONSE DATA>]]
Examples	ETH:PORT1:WAN:SOH? A1 → #H00,#H00,#H00 ETH:PORT1:WAN:SOH? D7 → #HFD,#H20,#H1A ETH:PORT1:WAN:SOH? B1 → #H04,#H05 ETH:PORT1:WAN:SOH? M1 → #H00
Note	This command can be used in V2.00 or later.

12.2.7 ETHernet:PORT<Pt>:WAN:POH:DEFault

Syntax	ETHernet:PORT<Pt>:WAN:POH:DEFault
Description	This command sets all WAN path overhead bytes to their default value.
Parameter	<Pt> = Port number
Response	None.
Example	ETH:PORT1:WAN:POH:DEF
Note	This command can be used in V2.00 or later.

12.2.8 ETHernet:PORT<Pt>:WAN:POH:TRACe

Syntax	ETHernet:PORT<Pt>:WAN:POH:TRACe <string>[,<idlechar>]
Description	This command sets the WAN path trace (J1) to the specified string and it's idle char.
Parameters	<Pt> = Port number <string> = <STRING PROGRAM DATA> This quoted string is used as section trace string. <idlechar> = <NUMERIC PROGRAM DATA> <i>DEFault = #H20</i>
Response	None.
Example	ETH:PORT1:WAN:POH:TRAC "Anritsu Network Master",#H20
Note	If the entered trace string is more than 15 characters long, the string will be truncated. This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:WAN:POH:TRACe?
Description	This query returns the WAN path trace string and idle char.
Parameter	<Pt> = Port number
Response	<string> = <STRING RESPONSE DATA> <idlechar> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:WAN:POH:TRAC? → "Anritsu Network Master",#H20
Note	This command can be used in V2.00 or later.

12.2.9 ETHernet:PORT<Pt>:WAN:POH:TRACe:CRC

Syntax	ETHernet:PORT<Pt>:WAN:POH:TRACe:CRC <mode>
Description	This command sets the POH trace (J0) CRC mode (OFF/ON).
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: CRC OFF ON : CRC ON <i>DEFault = ON</i>
Response	None.
Example	ETH:PORT1:WAN:POH:TRAC:CRC ON
Note	

Syntax	ETHernet:PORT<Pt>:WAN:POH:TRACe:CRC?
Description	This query returns the mode of the POH trace (J0) CRC.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:WAN:POH:TRAC:CRC? → ON
Note	

12.2.10 ETHernet:PORT<Pt>:WAN:POH

Syntax	ETHernet:PORT<Pt>:WAN:POH <POH-byte>,<value>
Description	This command sets the value of the specified byte in the WAN path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA> C2: C2 byte. G1: G1 byte. F2: Z1 / F2 byte. H4: Z2 / H4 byte. F3: Z3 / F3 byte. K3: Z4 / K3 byte. N1: Z5 / N1 byte. <value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 0, <i>MAXimum</i> = 255
Response	None.
Example	ETH:PORT1:WAN:POH C2,0
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:WAN:POH? <POH-byte>
Description	This query returns the value of the specified byte in the WAN path overhead.
Parameters	<Pt> = Port number <POH-byte> = <CHARACTER PROGRAM DATA>
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Examples	ETH:PORT1:WAN:POH? C2 → #H0 ETH:PORT1:WAN:POH? H4 → #HFF
Note	This command can be used in V2.00 or later.

12.3 Reflector

12.3.1 ETHernet:PORT<Pt>:REFLector:SWAP[:ENABLE]

Syntax	ETHernet:PORT<Pt>:REFLector:SWAP[:ENABLE] <enable>
Description	This command sets the Swap Parameter Enable.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT1:REFL:SWAP ON
Note	

Syntax	ETHernet:PORT<Pt>:REFLector:SWAP[:ENABLE]?
Description	This query returns the Swap Parameter Enable.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:REFL:SWAP? → 1
Note	

12.3.2 ETHernet:PORT<Pt>:REFLector:SSMac

Syntax	ETHernet:PORT<Pt>:REFLector:SSMac <enable>
Description	This command enables or disables swapping of specific MAC addresses when the port is in reflector mode.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = OFF
Response	None.
Example	ETH:PORT1:REFL:SSM ON
Note	

Syntax	ETHernet:PORT<Pt>:REFLector:SSMac?
Description	This query returns whether swapping of specific MAC addresses is enabled or disabled when the port is in reflector mode.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:REFL:SSM? → 1
Note	

12.3.3 ETHernet:PORT<Pt>:REFLector:SMAC

Syntax	ETHernet:PORT<Pt>:REFLector:SMAC <address>
Description	This command sets the specific MAC address to swap when MAC address swapping is enabled.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:REFL:SMAC "00-50-C2-35-D2-EF"
Note	

Syntax	ETHernet:PORT<Pt>:REFLector:SMAC?
Description	This query returns the specific MAC address to swap.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:REFL:SMAC? → "00-50-C2-35-D2-EF"
Note	

12.3.4 ETHernet:PORT<Pt>:REFLector:IPSWap

Syntax	ETHernet:PORT<Pt>:REFLector:IPSWap <enable>
Description	This command enables or disables the IP address swap mode when the port is in reflector mode.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:REFL:IPSW ON
Note	

Syntax	ETHernet:PORT<Pt>:REFLector:IPSWap?
Description	This query returns whether the IP address swap mode is enabled or disabled when the port is in reflector mode.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:REFL:IPSW? → 1
Note	

12.3.5 ETHernet:PORT<Pt>:REFLector:PSWap

Syntax	ETHernet:PORT<Pt>:REFLector:PSWap <enable>
Description	This command enables or disables swapping of port numbers in UDP and TCP frames when the port is in reflector mode.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:REFL:PSW ON
Note	

Syntax	ETHernet:PORT<Pt>:REFLector:PSWap?
Description	This query returns whether swapping of port numbers in UDP and TCP frames is enabled or disabled when the port is in reflector mode.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:REFL:PSW? → 1
Note	

12.3.6 ETHernet:PORT<Pt>:REFLector:ATCP

Syntax	ETHernet:PORT<Pt>:REFLector:ATCP <enable>
Description	This command enables or disables ACK on TCP frames when the port is in reflector mode.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:REFL:ATCP ON
Note	

Syntax	ETHernet:PORT<Pt>:REFLector:ATCP?
Description	This query returns whether ACK on TCP frames is enabled or disabled when the port is in reflector mode.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:REFL:ATCP? → 1
Note	

12.3.7 ETHernet:PORT<Pt>:REFLector:RSMac[:ENABLE]

Syntax	ETHernet:PORT<Pt>:REFLector:RSMac[:ENABLE] <enable>
Description	This command sets the replace source MAC address Enable.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = OFF
Response	None.
Example	ETH:PORT1:REFL:RSM ON
Note	

Syntax	ETHernet:PORT<Pt>:REFLector:RSMac[:ENABLE]?
Description	This query returns the replace source MAC address Enable.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:REFL:RSM? → 1
Note	

12.3.8 ETHernet:PORT<Pt>:REFLector:RMAC

Syntax	ETHernet:PORT<Pt>:REFLector:RMAC <address>
Description	This command sets the specific source MAC address to replace when the replace source MAC address is enabled.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:REFL:RMAC "00-50-C2-35-D2-EF"
Note	

Syntax	ETHernet:PORT<Pt>:REFLector:RMAC?
Description	This query returns the specific source MAC address to replace.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:REFL:RMAC? → "00-50-C2-35-D2-EF"
Note	

12.3.9 ETHernet:PORT<Pt>:REFLector:RMAC:DEFault

Syntax	ETHernet:PORT<Pt>:REFLector:RMAC:DEFault <enable>
Description	This command enables or disables use of default source MAC address of replace control.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = OFF
Response	None.
Example	ETH:PORT1:REFL:RMAC:DEF ON
Note	

Syntax	ETHernet:PORT<Pt>:REFLector:RMAC:DEFault?
Description	This query returns whether the use of default source MAC address of replace control is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:REFL:RMAC:DEF? → 1
Note	

12.4 PCS

12.4.1 EThernet:PORT<Pt>:PCS:MMAPIng:LANE

Syntax	EThernet:PORT<Pt>:PCS:MMAPIng:LANE <value>
Description	This command sets the PCS lane marker assignment.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List List consist of the value of the lane marker. 40G: 0 to 3 100G: 0 to 19 400G: 0 to 15
Response	None.
Example	ETH:PORT1:PCS:MMAPIng:LANE (1,3,0,2) ETH:PORT1:PCS:MMAPIng:LANE (0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19)
Note	This command can be used on 40/100/400G.

Syntax	EThernet:PORT<Pt>:PCS:MMAPIng:LANE?
Description	This query returns the PCS lane marker assignment.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION RESPONSE DATA> Format: Numeric List
Example	ETH:PORT1:PCS:MMAPIng:LANE? → (0,1,2,3) → (0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19)
Note	This command can be used on 40/100/400G.

12.5 Traffic

BERT, RFC-6349, Ping, and Traceroute applications use stream number one only. Setting other streams has no effect in these applications.

12.5.1 EThernet:TRAFfic:GENerator:STARt

Syntax	EThernet:TRAFfic:GENerator:STARt
Description	This command starts the traffic generator.
Parameter	None.
Response	None.
Example	ETH:TRAF:GEN:STAR
Note	This command applies to all ports.

12.5.2 EThernet:PORT<Pt>:TRAFfic:GENerator:STARt

Syntax	EThernet:PORT<Pt>:TRAFfic:GENerator:STARt
Description	This command starts the traffic generator.
Parameter	<Pt> = Port number
Response	None.
Example	ETH:PORT1:TRAF:GEN:STAR
Note	This command requires that the Port is enabled (EThernet:PORT<Pt>:MODE).

12.5.3 EThernet:TRAFfic:GENerator:STOP

Syntax	EThernet:TRAFfic:GENerator:STOP
Description	This command stops the traffic generator.
Parameter	None.
Response	None.
Example	ETH:TRAF:GEN:STOP
Note	This command applies to all ports.

12.5.4 EThernet:PORT<Pt>:TRAFfic:GENerator:STOP

Syntax	EThernet:PORT<Pt>:TRAFfic:GENerator:STOP
Description	This command stops the traffic generator.
Parameter	<Pt> = Port number
Response	None.
Example	ETH:PORT1:TRAF:GEN:STOP
Note	

12.5.5 EThernet:PORT<Pt>:TRAFfic:GENerator:STATus?

Syntax	EThernet:PORT<Pt>:TRAFfic:GENerator:STATus?
Description	This query returns the current status of the traffic generator.
Parameter	<Pt> = Port number
Response	<stat> = <NR1 NUMERIC RESPONSE DATA> 0: Traffic generator inactive 1: Traffic generator active
Example	ETH:PORT1:TRAF:GEN:STAT? → 1
Note	

12.5.6 EThernet:PORT<Pt>:TRAFfic:DMDDe

Syntax	EThernet:PORT<Pt>:TRAFfic:DMDDe <mode>
Description	This command sets the duration mode for the traffic generator.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> CONTInuous: Continuous FRAMes: Frames SECOnds: Seconds <i>DEFault = CONTInuous</i>
Response	None.
Example	ETH:PORT1:TRAF:DMD CONT
Note	

Syntax	EThernet:PORT<Pt>:TRAFfic:DMDDe?
Description	This query returns the duration mode for the traffic generator.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:TRAF:DMD? → SEC
Note	

12.5.7 ETHernet:PORT<Pt>:TRAFfic:DURation

Syntax	ETHernet:PORT<Pt>:TRAFfic:DURation <duration>
Description	This command sets the duration for the traffic generator.
Parameters	<Pt> = Port number <duration> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 2000000000, DEFault = 5</i>
Response	None.
Example	ETH:PORT1:TRAF:DUR 1
Note	Unit for this command can be either [frames] or [seconds] depending on DMODe.

Syntax	ETHernet:PORT<Pt>:TRAFfic:DURation?
Description	This query returns the duration for the traffic generator.
Parameter	<Pt> = Port number
Response	<duration> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:DUR? → 1
Note	

12.5.8 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:TXMode

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:TXMode <mode>
Description	This command sets the transmitting mode.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <mode> = <CHARACTER PROGRAM DATA> NORMal: BURSt: Burst transmitting <i>DEFault = NORMal</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:TXM BURS
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:TXMode?
Description	This query returns the transmitting mode.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:TXM? → BURS
Note	

12.5.9 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:PROFile

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:PROFile <profile>
Description	This command sets the stream Line Load Profile.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <profile> = <CHARACTER PROGRAM DATA> CONStant: Constant line load profile RAMP: Ramp line load profile <i>DEFault = CONStant</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:LL:PROF CONS
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:PROFile?
Description	This query returns the stream Line Load Profile.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<profile> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:LL:PROF? → RAMP
Note	

12.5.10 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:PROFile:MRAMp[:MODE]

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:PROFile:MRAMp[:MODE] <enable>
Description	This command enables or disables milliseconds ramp.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:LL:PROF:MRAM ON
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:PROFile:MRAMp[:MODE]?
Description	This query returns whether milliseconds ramp is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:LL:PROF:MRAM? → 0
Note	

12.5.11 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad[:CONStant]

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad[:CONStant] <load>
Description	This command sets the stream Line Load in constant mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<load> = <NUMERIC PROGRAM DATA> <i>MINimum=0.0000, MAXimum=100.0000¹, DEFault=100.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS, IFG. Default = PCT</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:LL 10.0000
Notes	The minimum possible line load is 0.0008PCT. The maximum combined line load for all 16 streams is 100PCT. ¹ The maximum allowed Line Load varies depending on the stream frame size. MINimum, MAXimum and DEFault are all in PCT.

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad[:CONStant]? [<suffix>]
Description	This query returns the stream Line Load is constant mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second IFG: Inter Frame Gap <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:LL? → 10.0000
Note	

12.5.12 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP[:MODE]

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP[:MODE] <mode>
Description	This command sets the ramp mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<mode> = <CHARACTER PROGRAM DATA> KEEPend: Maintain line load level at ramp end INVert: Invert ramp REPeat: Repeat ramp <i>DEFault = KEEPend</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:LL:RAMP KEEP
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP[:MODE]?
Description	This query returns the ramp mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:LL:RAMP? → INV
Note	

12.5.13 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:STARt

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:STARt <load>
Description	This command sets the stream initial line load in ramp mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<load> = <NUMERIC PROGRAM DATA> <i>MINimum=0.0000, MAXimum=100.0000¹, DEFault=0.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS, IFG. Default = PCT</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:LL:RAMP:STAR 10.0000
Notes	The minimum possible line load is 0.0008PCT. The maximum combined line load for all 16 streams are 100PCT. ¹ The maximum allowed Line Load varies depending on the stream frame size. MINimum, MAXimum and DEFault are all in PCT.

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:STARt? [<suffix>]
Description	This query returns the stream initial line load in ramp mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second IFG: Inter Frame Gap <i>DEFAult = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:LL:RAMP:STAR? → 10.0000
Note	

12.5.14 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:END

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:END <load>
Description	This command sets the stream end line load in ramp mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<load> = <NUMERIC PROGRAM DATA> <i>MINimum=0.0000, MAXimum=100.0000¹, DEFAult=0.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS, IFG. Default = PCT</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:LL:RAMP:END 10.0000
Notes	The minimum possible line load is 0.0008PCT.
	The maximum combined line load for all 16 streams are 100PCT. ¹ The maximum allowed Line Load varies depending on the stream frame size. MINimum, MAXimum and DEFAult are all in PCT.

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:END? [<suffix>]
Description	This query returns the stream end line load in ramp mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second IFG: Inter Frame Gap <i>DEFAult = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:LL:RAMP:END? → 10.0000
Note	

12.5.15 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:STEP

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:STEP <load>
Description	This command sets the stream line load step size, in ramp mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<load> = <NUMERIC PROGRAM DATA> <i>MINimum=0.0000, MAXimum=100.0000¹, DEFAult=1.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS, IFG. Default = PCT</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:LL:RAMP:STEP 10.0000
Notes	The minimum possible line load is 0.0008PCT.
	¹ The maximum allowed Line Load varies depending on the stream frame size. MINimum, MAXimum and DEFAult are all in PCT.

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:STEP? [<suffix>]
Description	This query returns the stream line load step size, in ramp mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second IFG: Inter Frame Gap <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:LL:RAMP:STEP? → 10.0000
Note	

12.5.16 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:DURation

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:DURation <dur>
Description	This command sets the stream step line load duration in ramp mode. Unit: Seconds.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<dur> = <NUMERIC PROGRAM DATA> <i>MINimum = 3, MAXimum = 3600, DEFault = 10</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:LL:RAMP:DUR 10
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:RAMP:DURation?
Description	This query returns the stream step line load duration in ramp mode. Unit: Seconds.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<load> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:LL:RAMP:DUR? → 10
Note	

12.5.17 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:PROFile:MRAMp:DURation

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:PROFile:MRAMp:DURation <dur>
Description	This command sets the stream step line load duration in milliseconds ramp mode. Unit: Seconds.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<dur> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.001, MAXimum = 3.000, DEFault = 0.001</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:LL:PROF:MRAM:DUR 1.000
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:LLoad:PROFile:MRAMp:DURation?
Description	This query returns the stream step line load duration in milliseconds ramp mode. Unit: Seconds.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<load> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:LL:PROF:MRAM:DUR? → 1.000
Note	

12.5.18 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:PROFile

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:PROFile <profile>
Description	This command sets the stream frame size profile.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<profile> = <CHARACTER PROGRAM DATA> CONStant: Constant frame size STEPped: Stepped frame size profile RANDom: Random frame size profile BINCrement: 1 byte increment <i>DEFault = CONStant</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:FSIZ:PROF CONS
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:PROFile?
Description	This query returns the stream frame size profile.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<profile> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:FSIZ:PROF? → RAND
Note	

12.5.19 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe[:STARt]

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe[:STARt] <size>
Description	This command sets start frame size. Unit: Bytes
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:FSIZ 120
Notes	This is used as the frame size for the Constant profile and start frame size for the Stepped and Random profiles.
	¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe[:STARt]?
Description	This query returns the start frame size. Unit: Bytes
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:FSIZ? → 100
Note	

12.5.20 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:END

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:END <size>
Description	This command sets end frame size. Unit: Bytes
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:FSIZ:END 320
Notes	This is used as the end frame size for the Stepped and Random profiles.
	¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:END?
Description	This query returns the end frame size. Unit: Bytes
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:FSIZ:END? → 320
Note	

12.5.21 ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:STEP

Syntax	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:STEP <size>
Description	This command sets step frame size. Unit: Bytes
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:FSIZ:STEP 100
Notes	This is used as the step frame size for the Stepped profile.

Syntax	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:STEP?
Description	This query returns the step frame size. Unit: Bytes
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:FSIZ:STEP? → 100
Note	

12.5.22 ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:DURation

Syntax	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:DURation <duration>
Description	This command sets the step duration. Unit: Seconds.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<duration> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 3600, DEFault = 1</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:FSIZ:DUR 5
Note	

Syntax	ETHERnet:PORT<Pt>:TRAFfic:STReam<St>:FSIZe:DURation?
Description	This query returns the step duration. Unit: Seconds.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<duration> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:FSIZ:DUR? → 10
Note	

12.5.23 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:PROFile

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:PROFile <profile>
Description	This command sets the stream profile.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<profile> = <CHARACTER PROGRAM DATA> DATA: Data VIDeo: Video VOICe: Voice <i>DEFault</i> = <i>DATA</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:PROF VID
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:PROFile?
Description	This query returns the stream profile.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<profile> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:PROF? → VID
Note	

12.5.24 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:ENCoding:VIDeo

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:ENCoding:VIDeo <codec>
Description	This command sets the stream encoding video codec.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<codec> = <CHARACTER PROGRAM DATA> SDMPEG2: SDTV (MPEG2) HDMPEG2: HDTV (MPEG2) HDMPEG4: HDTV (MPEG4) <i>DEFault</i> = <i>SDMPEG2</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:ENC:VID HDMPEG2
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:ENCoding:VIDeo?
Description	This query returns the stream encoding video codec.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<codec> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:ENC:VID? → HDMPEG2
Note	

12.5.25 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:ENCoding:VOICe

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:ENCoding:VOICe <codec>
Description	This command sets the stream encoding voice codec.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <codec> = <CHARACTER PROGRAM DATA> G711: VoIP G.711 G7231: VoIP G.723.1 G729: VoIP G.729 <i>DEFault = G711</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:ENC:VOIC G7231
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:ENCoding:VOICe?
Description	This query returns the stream encoding voice codec.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<codec> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:ENC:VOIC? → G7231
Note	

12.5.26 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:NCHannels

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:NCHannels <channel>
Description	This command sets the number of channels.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <channel> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 100000, DEFault = 1</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:NCH 3
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:NCHannels?
Description	This query returns the number of channels.
Parameter	<Pt> = Port number
Response	<channel> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:NCH? → 3
Note	

12.5.27 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:MODE

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:MODE <mode>
Description	This command sets the burst mode.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <mode> = <CHARACTER PROGRAM DATA> OFF : OFF CONStant : constant RAMP : ramp <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:BURS:MOD RAMP
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:MODE?
Description	This query returns the burst mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:BURS:MOD? → RAMP
Note	

12.5.28 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:NBURst:MODE

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:NBURst:MODE <enable>
Description	This command enables or disables number of burst mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:BURS:NBUR:MOD ON
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:NBURst:MODE?
Description	This query returns whether number of burst mode is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:BURS:NBUR:MOD? → 0
Note	

12.5.29 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:NBURst:BNUmber

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:NBURst:BNUmber <number>
Description	This command sets the number of burst .
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<number> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 65535, DEFault = 1</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:BURS:NBUR:BNUM 100
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:NBURst:BNUmber?
Description	This query returns the number of burst.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:BURS:NBUR:BNUM? → 100
Note	

12.5.30 EThernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:PDUTy[:DUTY]

Syntax	EThernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:PDUTy[:DUTY] <duty>, <period>
Description	This command sets the burst configuration. Duty is prior than period . Period Unit: ms
Parameters	<Pt> = Port number <St> = Stream number (1-16) <duty> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.00000, MAXimum = 100.00000, DEFault = 0.00000</i> <period> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.00001, MAXimum = 5000.0000, DEFault = 1.0000</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:BURS:CONS:PDUT 100.0000, 1.0000
Note	

12.5.31 EThernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:PDUTy:PERiod

Syntax	EThernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:PDUTy:PERiod <duty>, <period>
Description	This command sets the burst configuration. Period is prior than duty. Period Unit: ms
Parameters	<Pt> = Port number <St> = Stream number (1-16) <duty> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.00000, MAXimum = 100.00000, DEFault = 0.00000</i> <period> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.00001, MAXimum = 5000.0000, DEFault = 1.0000</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:BURS:CONS:PDUT:PER 100.0000, 1.0000
Note	

12.5.32 EThernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:DUTY?

Syntax	EThernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:DUTY?
Description	This query returns the duty percentage.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<duty> = <NUMERIC PROGRAM DATA>
Example	ETH:PORT1:TRAF:STR1:BURS:CONS:DUTY? → 100.00000
Note	

12.5.33 EThernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:PERiod?

Syntax	EThernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:PERiod?
Description	This query returns the period milliseconds.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<period> = <NUMERIC PROGRAM DATA>
Example	ETH:PORT1:TRAF:STR1:BURS:CONS:PER? → 1.00000
Note	

12.5.34 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:BLENgth

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:BLENgth <length>[,<suffix>]
Description	This command sets the burst length of constant.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum = 8.0000, MAXimum = 919117647.0000, DEFault = 1.0000</i> <suffix> = <CHARACTER PROGRAM DATA> FRAMes : number of frames BYTes : bytes MSEConds : milli seconds <i>DEFault = FRAMes</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:BURS:CONS:BLEN 10
Notes	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:BLENgth? [<suffix>]
Description	This query returns the burst length of constant.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> FRAMes: number of frames BYTes: bytes MSEConds: milli seconds <i>DEFault = FRAMes</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:BURS:CONS:BLEN? → 10
Note	

12.5.35 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:BGAP

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:BGAP <length>[,<suffix>]
Description	This command sets the inter burst gap of constant.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum = 128 bytes, MAXimum = 62500000000 bytes, DEFault = 1024 bytes</i> <suffix> = <CHARACTER PROGRAM DATA> BYTes : bytes MSEConds : milli seconds <i>DEFault = BYTes</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:BURS:CONS:BGAP 10
Notes	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:CONStant:BGAP? [<suffix>]
Description	This query returns the inter burst gap of constant.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> BYTes: bytes MSEConds: milli seconds <i>DEFault = BYTes</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:BURS:CONS:BGAP? → 10
Note	

12.5.36 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:RMODE

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:RMODE <mode>
Description	This command sets the burst ramp mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<mode> = <CHARACTER PROGRAM DATA> KEEPEnd : keep end REPeat : repeat <i>DEFault = KEEPEnd</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:BURS:RAMP:RMOD KEEP
Note	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:RMODE?
Description	This query returns the burst ramp mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:BURS:RAMP:RMOD? → KEEP
Note	

12.5.37 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:BLENght:STARt

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:BLENght:STARt <length>[,<suffix>]
Description	This command sets the burst ramp start length of ramp.
Parameters	<Pt> = Port number
	<length> = <NUMERIC PROGRAM DATA> <i>MINimum = 8.0000, MAXimum = 919117647.0000, DEFault = 1.0000</i>
	<suffix> = <CHARACTER PROGRAM DATA> FRAMES : number of frames BYTes : bytes MSEConds : milli seconds <i>DEFault = FRAMES</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:BURS:RAMP:BLen:STAR 10
Notes	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:BLENght:STARt? [<suffix>]
Description	This query returns the burst ramp end length of ramp.
Parameters	<Pt> = Port number
	<suffix> = <CHARACTER PROGRAM DATA> FRAMES: number of frames BYTes: bytes MSEConds: milli seconds <i>DEFault = FRAMES</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:BURS:RAMP:BLen:STAR? → 10
Note	

12.5.38 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:BLENgtH:END

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:BLENgtH:END <length>[,<suffix>]
Description	This command sets the burst ramp end length of ramp.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum = 8.0000, MAXimum = 919117647.0000, DEFault = 1.0000</i> <suffix> = <CHARACTER PROGRAM DATA> FRAMes : number of frames BYTes : bytes MSEConds : seconds <i>DEFault = FRAMes</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:BURS:RAMP:BLen:END 10
Notes	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:BLENgtH:END? [<suffix>]
Description	This query returns the burst ramp start length of ramp.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> FRAMes: number of frames BYTes: bytes MSEConds: milli seconds <i>DEFault = FRAMes</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:BURS:RAMP:BLen:END? → 10
Note	

12.5.39 ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:BGAP

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:BGAP <length>[,<suffix>]
Description	This command sets the inter burst gap of ramp.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum = 128 bytes, MAXimum = 62500000000 bytes, DEFault = 1024 bytes</i> <suffix> = <CHARACTER PROGRAM DATA> BYTes : bytes MSEConds : milli seconds <i>DEFault = BYTes</i>
Response	None.
Example	ETH:PORT1:TRAF:STR1:BURS:RAMP:BGAP 10
Notes	

Syntax	ETHernet:PORT<Pt>:TRAFfic:STReam<St>:BURSt:RAMP:BGAP? [<suffix>]
Description	This query returns the inter burst gap of ramp.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> BYTes: bytes MSEConds: milli seconds <i>DEFault = BYTes</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:TRAF:STR1:BURS:RAMP:BGAP? → 10
Note	

12.6 Frame Content

12.6.1 ETHernet:PORT<Pt>:STReam<St>:FRAMed

Syntax	ETHernet:PORT<Pt>:STReam<St>:FRAMed <enable>
Description	This command enables or disables framed Ethernet.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:PORT1:STR1:FRAM OFF
Note	BER is the only allowed protocol when framed Ethernet is OFF (unframed).

Syntax	ETHernet:PORT<Pt>:STReam<St>:FRAMed?
Description	This query returns whether framed Ethernet is enabled or disabled.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:FRAM? → 0
Note	

12.6.2 ETHernet:PORT<Pt>:STReam<St>:MAC:SOURce

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:SOURce <address>
Description	This command sets the MAC source address.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:STR1:MAC:SOUR "00-50-C2-35-D2-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:SOURce?
Description	This query returns the MAC source address.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:MAC:SOUR? → "00-50-C2-35-D2-EF"
Note	

12.6.3 ETHernet:PORT<Pt>:STReam<St>:MAC:DESTination

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:DESTination <address>
Description	This command sets the MAC destination address.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:STR1:MAC:DEST "00-50-C2-35-D2-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:DESTination?
Description	This query returns the MAC destination address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:MAC:DEST? → "00-50-C2-35-D2-EF"
Note	

12.6.4 ETHernet:PORT<Pt>:STReam<St>:MAC:ARP

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:ARP <enable>
Description	This command enables or disables use of ARP to resolve destination MAC address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA>
	<i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:MAC:ARP ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:ARP?
Description	This query returns whether use of ARP is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:MAC:ARP? → 1
Note	

12.6.5 ETHernet:PORT<Pt>:STReam<St>:MAC:ARP:LKUP

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:ARP:LKUP
Description	This command execute ARP. this command valid only when IPv4 is selected on layer3.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	None.
Example	ETH:PORT1:STR1:MAC:ARP:LKUP
Note	

12.6.6 ETHernet:PORT<Pt>:STReam<St>:MAC:ARP:RESult?

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:ARP:RESult?
Description	This query returns the ARP condition. this command valid only when IPv4 is selected on layer3.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<status> = <CHARACTER RESPONSE DATA> SUCCESS: ARP lookup succeeded. TIMEOUT: ARP lookup timed out.
Example	ETH:PORT1:STR1:MAC:ARP:RES? → SUCCESS
Note	

12.6.7 ETHernet:PORT<Pt>:STReam<St>:MAC:NDP

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:NDP <enable>
Description	This command enables or disables use of NDP to resolve destination MAC address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:MAC:NDP ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:NDP?
Description	This query returns whether use of NDP to resolve destination MAC address is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:MAC:NDP? → 1
Note	

12.6.8 ETHernet:PORT<Pt>:STReam<St>:MAC:NDP:LKUP

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:NDP:LKUP
Description	This command execute NDP. this command valid only when IPv6 is selected on layer3.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	None.
Example	ETH:PORT1:STR1:MAC:NDP:LKUP
Note	

12.6.9 ETHernet:PORT<Pt>:STReam<St>:MAC:NDP:RESult?

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:NDP:RESult?
Description	This query returns the NDP condition. this command valid only when IPv6 is selected on layer3.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<status> = <CHARACTER RESPONSE DATA> SUCCESS: ARP lookup succeeded. TIMEOUT: ARP lookup timed out.
Example	ETH:PORT1:STR1:MAC:NDP:RES? → SUCCESS
Note	

12.6.10 ETHernet:PORT<Pt>:STReam<St>:MAC:BRoadcast

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:BRoadcast <percentage>
Description	This command sets the percentage of stream packets that will be transmitted as broadcast packets.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<percentage> = <NUMERIC PROGRAM DATA> <i>MINimum=0.0, MAXimum=100.0, DEFault=0.0</i>
Response	None.
Example	ETH:PORT1:STR1:MAC:BRO 10.0
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:BRoadcast?
Description	This query returns the stream broadcast percentage.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<percentage> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MAC:BR0? → 10.5
Note	

12.6.11 ETHernet:PORT<Pt>:STReam<St>:MAC:DEFault

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:DEFault <enable>
Description	This command enables or disables use of default source MAC address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:MAC:DEF ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:DEFault?
Description	This query returns whether the use of default source MAC address is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:MAC:DEF? → 1
Note	

12.6.12 ETHernet:PORT<Pt>:STReam<St>:MAC:ETYPe

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:ETYPe <type>
Description	This command sets MAC level Ethertype.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<type> = <NUMERIC PROGRAM DATA> Acceptable values: #H8100 #H88A8 #H9100 #H9200
Response	None.
Example	ETH:PORT1:STR1:MAC:ETYP #H8100
Note	This command can only be used when MPLS is disabled and VLAN is enabled. When IPv4 and IPv6 is disabled this level is set by :MAC:L3EType command (see section 12.6.13).

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:ETYPe?
Description	This query returns MAC level Ethertype.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<type> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MAC:ETYP? → #H8100
Note	This command can only be used when MPLS is disabled and VLAN is enabled.

12.6.13 ETHernet:PORT<Pt>:STReam<St>:MAC:L3EType

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:L3EType <type>
Description	This command sets the Ethertype for layer three when no protocol is defined for this layer.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<type> = <NUMERIC PROGRAM DATA> <i>MINimum=1501, MAXimum=65535, DEFault=1501</i>
Response	None.
Example	ETH:PORT1:STR1:MAC:L3ET #H0800
Note	This command can only be used when IPv4 or IPv6 is disabled. When VLAN is enabled this level is set by :MAC:ETYPe command (see section 12.6.12).

Syntax	ETHernet:PORT<Pt>:STReam<St>:MAC:L3EType?
Description	This query returns the Ethertype for layer three when no protocol is defined for this layer.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<type> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MAC:L3ET? → #0800
Note	This command can only be used when IPv4 or IPv6 is disabled.

12.6.14 ETHernet:PORT<Pt>:STReam<St>:MPLS[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS[:ENABLE] <enable>
Description	This command enables or disables MPLS.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:MPLS ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS[:ENABLE]?
Description	This query returns whether the MPLS is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:MPLS? → 1
Note	

12.6.15 ETHernet:PORT<Pt>:STReam<St>:MPLS:LCount

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:LCount <levels>
Description	This command sets the number of active MPLS levels.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<levels> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8, DEFault=1</i>
Response	None.
Example	ETH:PORT1:STR1:MPLS:LC 2
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:LCOUNT?
Description	This query returns the number of active MPLS levels.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<levels> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MPLS:LC? → 2
Note	

12.6.16 ETHernet:PORT<Pt>:STReam<St>:MPLS:LEVel<Lv>:LABel

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:LEVel<Lv>:LABel <label>
Description	This command sets the MPLS label.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<Lv> = MPLS level (1-N ¹)
	<label> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1048575, DEFault=0</i>
Response	None.
Example	ETH:PORT1:STR1:MPLS:LEV1:LAB 1048575
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active MPLS Levels (see section 12.6.15). Level 1 corresponds to the level at the top of the label stack and N is the level at the bottom of the stack (bottom of stack flag set).

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:LEVel<Lv>:LABel?
Description	This query returns the MPLS label.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<Lv> = MPLS level (1-N)
Response	<label> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MPLS:LEV1:LAB? → 1048575
Note	

12.6.17 ETHernet:PORT<Pt>:STReam<St>:MPLS:LEVel<Lv>:EBITs

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:LEVel<Lv>:EBITs <value>
Description	This command sets the MPLS experimental bits.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<Lv> = MPLS level (1-N ¹)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=0</i>
Response	None.
Example	ETH:PORT1:STR1:MPLS:LEV1:EBIT 5
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active MPLS Levels (see section 12.6.15). Level 1 corresponds to the level at the top of the label stack and N is the level at the bottom of the stack (bottom of stack flag set).

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:LEVel<Lv>:EBITs?
Description	This query returns the MPLS experimental bits.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<Lv> = MPLS level (1-N)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MPLS:LEV1:EBIT? → 5
Note	

12.6.18 ETHernet:PORT<Pt>:STReam<St>:MPLS:LEVel<Lv>:TTL

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:LEVel<Lv>:TTL <value>
Description	This command sets the MPLS time to live.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<Lv> = MPLS level (1-N ¹)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=32</i>
Response	None.
Example	ETH:PORT1:STR1:MPLS:LEV1:TTL 32
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active MPLS Levels (see section 12.6.15). Level 1 corresponds to the level at the top of the label stack and N is the level at the bottom of the stack (bottom of stack flag set).

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:LEVel<Lv>:TTL?
Description	This query returns the MPLS time to live.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<Lv> = MPLS level (1-N)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MPLS:LEV1:TTL? → 32
Note	

12.6.19 ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet[:ENABLE] <enable>
Description	This command enables or disables Ethernet over MPLS.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:MPLS:ETH ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet[:ENABLE]?
Description	This query returns whether the Ethernet over MPLS is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:MPLS:ETH? → 1
Note	

12.6.20 ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet:AINCrement

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet:AINCrement <enable>
Description	This command enables or disables EoMPLS auto increment of sequence numbers.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:MPLS:ETH:AINC ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet:AINCrement?
Description	This query returns whether the EoMPLS auto increment of sequence numbers is enabled or disabled.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:MPLS:ETH:AINC? → 1
Note	

12.6.21 ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet:SMAC

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet:SMAC <address>
Description	This command sets EoMPLS source MAC address.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:STR1:MPLS:ETH:SMAC "66-60-C2-35-D3-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet:SMAC?
Description	This query returns the EoMPLS source MAC address.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:MPLS:ETH:SMAC? → "66-60-C2-35-D3-EF"
Note	

12.6.22 ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet:DMAC

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet:DMAC <address>
Description	This command sets the EoMPLS destination MAC address.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:STR1:MPLS:ETH:DMAC "66-60-C2-35-D3-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet:DMAC?
Description	This query returns the EoMPLS destination MAC address.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:MPLS:ETH:DMAC? → "66-60-C2-35-D3-EF"
Note	

12.6.23 ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet:ETYPe

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet:ETYPe <type>
Description	This command sets the EoMPLS Ethertype.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<type> = <NUMERIC PROGRAM DATA>
	Acceptable values: #H8100 #H88A8 #H9100 #H9200
Response	None.
Example	ETH:PORT1:STR1:MPLS:ETH:ETYP #H8100
Note	This command can only be used when MPLS and VLAN are enabled.

Syntax	ETHernet:PORT<Pt>:STReam<St>:MPLS:ETHernet:ETYPe?
Description	This query returns the EoMPLS Ethertype.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<type> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MPLS:ETH:ETYP? → #H8100
Note	

12.6.24 ETHernet:PORT<Pt>:STReam<St>:MIM[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM[:ENABLE] <enable>
Description	This command enables or disables MiM.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA>
	DEFault=OFF
Response	None.
Example	ETH:PORT1:STR1:MIM ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM[:ENABLE]?
Description	This query returns whether MiM is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:MIM? → 1
Note	

12.6.25 ETHernet:PORT<Pt>:STReam<St>:MIM:BTAG:DEI

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:BTAG:DEI <enable>
Description	This command sets the B-TAG DEI bit.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA>
	DEFault=OFF
Response	None.
Example	ETH:PORT1:STR1:MIM:BTAG:DEI ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:BTAG:DEI?
Description	This query returns the B-TAG DEI bit.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:MIM:BTAG:DEI? → 1
Note	

12.6.26 ETHernet:PORT<Pt>:STReam<St>:MIM:BTAG:Priority

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:BTAG:Priority <priority>
Description	This command sets the B-TAG Priority (PCP).
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<priority> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:MIM:BTAG:PR 7
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:BTAG:Priority?
Description	This query returns the B-TAG Priority (PCP).
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<priority> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MIM:BTAG:PR? → 7
Note	

12.6.27 ETHernet:PORT<Pt>:STReam<St>:MIM:BTAG:VID

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:BTAG:VID <vid>
Description	This command sets the B-TAG Backbone VLAN ID.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<vid> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 4095, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:MIM:BTAG:VID 1024
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:BTAG:VID?
Description	This query returns the B-TAG Backbone VLAN ID.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<vid> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MIM:BTAG:VID? → 1024
Note	

12.6.28 ETHernet:PORT<Pt>:STReam<St>:MIM:ITAG:UCA

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ITAG:UCA <enable>
Description	This command sets the I-TAG UCA bit.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:MIM:ITAG:UCA ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ITAG:UCA?
Description	This query returns the I-TAG UCA bit.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:MIM:ITAG:UCA? → 1
Note	

12.6.29 ETHernet:PORT<Pt>:STReam<St>:MIM:ITAG:DEI

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ITAG:DEI <enable>
Description	This command sets the I-TAG DEI bit.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:MIM:ITAG:DEI ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ITAG:DEI?
Description	This query returns the I-TAG DEI bit.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:MIM:ITAG:DEI? → 1
Note	

12.6.30 ETHernet:PORT<Pt>:STReam<St>:MIM:ITAG:PRiority

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ITAG:PRiority <priority>
Description	This command sets the I-TAG Priority (PCP).
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<priority> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:MIM:ITAG:PR 7
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ITAG:Priority?
Description	This query returns the I-TAG Priority (PCP).
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<priority> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MIM:ITAG:PR? → 7
Note	

12.6.31 ETHernet:PORT<Pt>:STReam<St>:MIM:ITAG:SID

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ITAG:SID <sid>
Description	This command sets the I-TAG SID.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<sid> = <NUMERIC PROGRAM DATA>
	<i>MINimum = 0, MAXimum = 16777215, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:MIM:ITAG:SID 1
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ITAG:SID?
Description	This query returns the I-TAG SID.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<sid> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MIM:ITAG:SID? → 1
Note	

12.6.32 ETHernet:PORT<Pt>:STReam<St>:MIM:ETHernet:SMAC

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ETHernet:SMAC <address>
Description	This command sets the encapsulated customer source MAC address.
Parameters	<Pt> = Port number
	<address> = <STRING PROGRAM DATA>
	MAC address
Response	None.
Example	ETH:PORT1:STR1:MIM:ETH:SMAC "00-50-C2-35-D2-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ETHernet:SMAC?
Description	This query returns the encapsulated customer source MAC address.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:MIM:ETH:SMAC? → "00-50-C2-35-D2-EF"
Note	

12.6.33 ETHernet:PORT<Pt>:STReam<St>:MIM:ETHernet:DMAC

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ETHernet:DMAC <address>
Description	This command sets the encapsulated customer destination MAC address.
Parameters	<Pt> = Port number
	<address> = <STRING PROGRAM DATA>
	MAC address
Response	None.
Example	ETH:PORT1:STR1:MIM:ETH:DMAC "00-50-C2-35-D2-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ETHernet:DMAC?
Description	This query returns the encapsulated customer destination MAC address.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:MIM:ETH:DMAC? → "00-50-C2-35-D2-EF"
Note	

12.6.34 ETHernet:PORT<Pt>:STReam<St>:MIM:ETHernet:ETYPe

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ETHernet:ETYPe <type>
Description	This command sets the encapsulated customer Ethernet Type.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<type> = <NUMERIC PROGRAM DATA>
	Acceptable values: #H8100 #H88A8 #H9100 #H9200
Response	None.
Example	ETH:PORT1:STR1:MIM:ETH:ETYP #H8100
Note	This command can only be used when MiM and VLAN is enabled. When IPv4 and IPv6 is disabled this level is set by :MAC:L3EType command (see section 12.6.13).

Syntax	ETHernet:PORT<Pt>:STReam<St>:MIM:ETHernet:ETYPe?
Description	This query returns the encapsulated customer Ethernet Type.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<type> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:MIM:ETH:ETYP? → #H8100
Note	

12.6.35 ETHernet:PORT<Pt>:STReam<St>:VLAN[:ENABle]

Syntax	ETHernet:PORT<Pt>:STReam<St>:VLAN[:ENABle] <enable>
Description	This command enables or disables VLAN.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA>
	DEFault = OFF
Response	None.
Example	ETH:PORT1:STR1:VLAN ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:VLAN[:ENABle]?
Description	This query returns whether VLAN is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<boolean> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:VLAN? → 1
Note	

12.6.36 ETHernet:PORT<Pt>:STReam<St>:VLAN:LCOUNT

Syntax	ETHernet:PORT<Pt>:STReam<St>:VLAN:LCOUNT <levels>
Description	This command sets the number of active VLAN levels.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<levels> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8, DEFault=1</i>
Response	None.
Example	ETH:PORT1:STR1:VLAN:LC 2
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:VLAN:LCOUNT?
Description	This query returns the number of active VLAN levels.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<levels> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:VLAN:LC? → 2
Note	

12.6.37 ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:ID

Syntax	ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:ID <number>
Description	This command sets the VLAN ID.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<Lv> = VLAN level (1-N ¹)
	<number> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=4095, DEFault=0</i>
Response	None.
Example	ETH:PORT1:STR1:VLAN:LEV1:ID 1024
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.6.36). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame).

Syntax	ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:ID?
Description	This query returns the VLAN ID.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<Lv> = VLAN level (1-N)
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:VLAN:LEV1:ID? → 1024
Note	

12.6.38 ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:CFI

Syntax	ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:CFI <enable>
Description	This command enables or disables the VLAN canonical format indicator.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<Lv> = VLAN level (1-N ¹)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:VLAN:LEV1:CFI ON

continued on next page...

...continued from previous page

Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.6.36). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame). ² CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition. ³ This command is as same as <code>ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:DEI</code> .
Syntax	<code>ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:CFI?</code>
Description	This query returns whether the VLAN canonical format indicator is enabled or disabled.
Parameters	<code><Pt></code> = Port number <code><St></code> = Stream number (1-16) <code><Lv></code> = VLAN level (1-N)
Response	<code><enable></code> = <BOOLEAN RESPONSE DATA>
Example	<code>ETH:PORT1:STR1:VLAN:LEV1:CFI? → 1</code>
Note	¹ CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition. ² This command is as same as <code>ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:DEI?</code> .

12.6.39 ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:DEI

Syntax	<code>ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:DEI <enable></code>
Description	This command enables or disables the VLAN canonical format indicator.
Parameters	<code><Pt></code> = Port number <code><St></code> = Stream number (1-16) <code><Lv></code> = VLAN level (1-N ¹) <code><enable></code> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	<code>ETH:PORT1:STR1:VLAN:LEV1:DEI ON</code>
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.6.36). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame). ² CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition. ³ This command is as same as <code>ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:CFI</code> .

Syntax	<code>ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:DEI?</code>
Description	This query returns whether the VLAN canonical format indicator is enabled or disabled.
Parameters	<code><Pt></code> = Port number <code><St></code> = Stream number (1-16) <code><Lv></code> = VLAN level (1-N)
Response	<code><enable></code> = <BOOLEAN RESPONSE DATA>
Example	<code>ETH:PORT1:STR1:VLAN:LEV1:DEI? → 1</code>
Note	¹ CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition. ² This command is as same as <code>ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:CFI?</code> .

12.6.40 ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:PRiority

Syntax	<code>ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:PRiority <priority></code>
Description	This command sets the VLAN priority.
Parameters	<code><Pt></code> = Port number <code><St></code> = Stream number (1-16) <code><Lv></code> = VLAN level (1-N ¹) <code><priority></code> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=0</i>
Response	None.
Example	<code>ETH:PORT1:STR1:VLAN:LEV1:PR 7</code>
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.6.36). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame).

Syntax	ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:PRiority?
Description	This query returns the VLAN priority.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<Lv> = VLAN level (1-N)
Response	<priority> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:VLAN:LEV1:PR? → 7
Note	

12.6.41 ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:ETYPe

Syntax	ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:ETYPe <type>
Description	This command sets the VLAN Ethertype.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<Lv> = VLAN level (1-N) ¹
	<type> = <NUMERIC PROGRAM DATA> Acceptable values: #H8100 #H88A8 #H9100 #H9200 <i>DEFault=#H8100</i>
Response	None.
Example	ETH:PORT1:STR1:VLAN:LEV1:ETYP #H8100
Notes	¹ It is only possible to use this command for levels (1-M), where M is the number of active VLAN Levels minus one (see section 12.6.36). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame). It is not possible to use this command for VLAN level N as Ethertype because: - When IPv4 or IPv6 is enabled this level is automatically set according to the selected higher-level protocol. - When IPv4 and IPv6 is disabled this level is set by :MAC:L3EType command (see section 12.6.13). MAC level Ethertype is set by :MAC:ETYPe command (see section 12.6.12).

Syntax	ETHernet:PORT<Pt>:STReam<St>:VLAN:LEVel<Lv>:ETYPe?
Description	This query returns the VLAN Ethertype.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<Lv> = VLAN level (1-N) ¹
Response	<type> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:VLAN:LEV1:ETYP? → #H8100
Note	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.6.36).

12.6.42 ETHernet:PORT<Pt>:STReam<St>:LLC[:ENABLE] <enable>

Syntax	ETHernet:PORT<Pt>:STReam<St>:LLC[:ENABLE] <enable>
Description	This command enables or disables LLC1 (logical link control type 1).
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:LLC ON
Note	Disabling LLC will automatically also disable SNAP.

Syntax	ETHernet:PORT<Pt>:STReam<St>:LLC[:ENABLE]?
Description	This query returns whether LLC1 is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:LLC? → 1
Note	

12.6.43 ETHernet:PORT<Pt>:STReam<St>:SNAP[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam<St>:SNAP[:ENABLE] <enable>
Description	This command enables or disables SNAP.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:SNAP ON
Note	Enabling SNAP will automatically also enable LLC.

Syntax	ETHernet:PORT<Pt>:STReam<St>:SNAP[:ENABLE]?
Description	This query returns whether SNAP is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:SNAP? → 1
Note	

12.6.44 ETHernet:PORT<Pt>:STReam<St>:L2Custom[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam<St>:L2Custom[:ENABLE] <enable>
Description	This command enables or disables L2Custom.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:L2C ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:L2Custom[:ENABLE]?
Description	This query returns whether L2Custom is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<boolean> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:L2C? → 1
Note	

12.6.45 ETHernet:PORT<Pt>:STReam<St>:IPV4[:ENABle]

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4[:ENABle] <enable>
Description	This command enables or disables IPv4.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT1:STR1:IPV4 ON
Note	Enabling of this parameter will disable IPv6

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4[:ENABle]?
Description	This query returns whether IPv4 is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4? → 1
Note	

12.6.46 ETHernet:PORT<Pt>:STReam<St>:IPV4:SOURce

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:SOURce <address>
Description	This command sets the IPv4 source address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:PORT1:STR1:IPV4:SOUR "172.29.2.36"
Note	Only the character '.' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:SOURce?
Description	This query returns the IPv4 source address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:SOUR? → "172.29.2.36"
Note	

12.6.47 ETHernet:PORT<Pt>:STReam<St>:IPV4:DESTination

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:DESTination <address>
Description	This command sets the IPv4 destination address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:PORT1:STR1:IPV4:DEST "172.29.2.36"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:DESTination?
Description	This query returns the IPv4 destination address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:DEST? → "172.29.2.36"
Note	

12.6.48 ETHernet:PORT<Pt>:STReam<St>:IPV4:GATeway[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:GATeway[:ENABLE] <enable>
Description	This command enables or disables use of the IPv4 gateway.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:IPV4:GAT ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:GATeway[:ENABLE]?
Description	This query returns whether the use of IPv4 gateway is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:GAT? → 1
Note	

12.6.49 ETHernet:PORT<Pt>:STReam<St>:IPV4:GATeway:ADDRess

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:GATeway:ADDRess <address>
Description	This command sets the IPv4 default gateway.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:PORT1:STR1:IPV4:GAT:ADDR "172.29.2.36"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:GATeway:ADDRess?
Description	This query returns the IPv4 default gateway.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:GAT:ADDR? → "172.29.2.36"
Note	

12.6.50 ETHernet:PORT<Pt>:STReam<St>:IPV4:NETMask

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:NETMask <mask>
Description	This command sets the IPv4 netmask.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<mask> = <STRING PROGRAM DATA> IPv4 netmask
Response	None.
Example	ETH:PORT1:STR1:IPV4:NETM "255.255.255.0"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:NETMask?
Description	This query returns the IPv4 netmask.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:NETM? → "255.255.255.0"
Note	

12.6.51 ETHernet:PORT<Pt>:STReam<St>:IPV4:HOST

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:HOST <host>
Description	This command sets the IPv4 destination host name which is used in case DNS is enabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<host> = <STRING PROGRAM DATA> Host name (max. 255 characters)
Response	None.
Example	ETH:PORT1:STR1:IPV4:HOST "www.anritsu.com"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:HOST?
Description	This query returns the IPv4 destination host name.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<host> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:HOST? → "www.anritsu.com"
Note	

12.6.52 ETHernet:PORT<Pt>:STReam<St>:IPV4:TTL

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:TTL <value>
Description	This command sets the IPv4 time to live.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=32</i>
Response	None.
Example	ETH:PORT1:STR1:IPV4:TTL 32
Note	This command sets the same storage parameter within the instrument as the IPv6 command <code>ETHernet:PORT<Pt>:STReam<St>:IPV6:HLIMit</code> (see section 12.6.74).

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:TTL?
Description	This query returns the IPv4 time to live.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:TTL? → 32
Note	

12.6.53 ETHernet:PORT<Pt>:STReam<St>:IPV4:TOS

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:TOS <value>
Description	This command sets the IPv4 DSCP/TOS byte.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=0</i>
Response	None.
Examples	ETH:PORT1:STR1:IPV4:TOS #HFF ETH:PORT1:STR1:IPV4:TOS 128
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:TOS?
Description	This query returns the IPv4 DSCP/TOS byte.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:TOS? → 255
Note	

12.6.54 ETHernet:PORT<Pt>:STReam<St>:IPV4:IDENtifier

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:IDENtifier <value>
Description	This command sets the IPv4 identifier field.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=65535, DEFault=43981</i>
Response	None.
Examples	ETH:PORT1:STR1:IPV4:IDEN #HABCD ETH:PORT1:STR1:IPV4:IDEN 12345
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:IDENtifier?
Description	This query returns the IPv4 identifier field.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:IDEN? → 43981
Note	

12.6.55 ETHernet:PORT<Pt>:STReam<St>:IPV4:AINCrement

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:AINCrement <enable>
Description	This command enables or disables auto increment of the IPv4 identifier field.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	ETH:PORT1:STR1:IPV4:AINC OFF
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:AINCment?
Description	This query returns whether auto increment of the IPv4 identifier field is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:AINC? → 0
Note	

12.6.56 ETHernet:PORT<Pt>:STReam<St>:IPV4:MF

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:MF <boolean>
Description	This command sets or clears the IPv4 more fragments flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<boolean> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	ETH:PORT1:STR1:IPV4:MF 1
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:MF?
Description	This query returns the IPv4 more fragments flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<boolean> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:MF? → 1
Note	

12.6.57 ETHernet:PORT<Pt>:STReam<St>:IPV4:DF

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:DF <boolean>
Description	This command sets or clears the IPv4 don't fragment flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<boolean> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>ON</i>
Response	None.
Example	ETH:PORT1:STR1:IPV4:DF 1
Note	

Syntax	ETHERnet:PORT<Pt>:STReam<St>:IPV4:DF?
Description	This query returns the IPv4 don't fragment flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<boolean> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:DF? → 1
Note	

12.6.58 ETHERnet:PORT<Pt>:STReam<St>:IPV4:RES

Syntax	ETHERnet:PORT<Pt>:STReam<St>:IPV4:RES <boolean>
Description	This command sets or clears the IPv4 reserved flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<boolean> = <BOOLEAN PROGRAM DATA>
	<i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:IPV4:RES 0
Note	

Syntax	ETHERnet:PORT<Pt>:STReam<St>:IPV4:RES?
Description	This query returns the IPv4 reserved flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<boolean> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:RES? → 0
Note	

12.6.59 ETHERnet:PORT<Pt>:STReam<St>:IPV4:PROTocol

Syntax	ETHERnet:PORT<Pt>:STReam<St>:IPV4:PROTocol <value>
Description	This command sets the IPv4 protocol byte.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA>
	<i>MINimum=0, MAXimum=255, DEFault=253</i>
Response	None.
Examples	ETH:PORT1:STR1:IPV4:PROT #HFD ETH:PORT1:STR1:IPV4:PROT 17
Notes	This command sets the same storage parameter within the instrument as the IPv6 command ETHERnet:PORT<Pt>:STReam<St>:IPV6:NHeader (see section 12.6.73). In case UDP or TCP is enabled, the value set by this command is not used. Instead values 17 (UDP) or 6 (TCP) are automatically inserted in the IPv4 header.

Syntax	ETHERnet:PORT<Pt>:STReam<St>:IPV4:PROTocol?
Description	This query returns the IPv4 protocol byte.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:PROT? → 6
Note	

12.6.60 ETHernet:PORT<Pt>:STReam<St>:IPV4:TLENgth?

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:TLENgth?
Description	This query returns the Total Length field in the IP header.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:TLEN? → 62
Note	

12.6.61 ETHernet:PORT<Pt>:STReam<St>:IPV4:CHECksum?

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:CHECksum?
Description	This query returns the checksum field in the IP header.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<checksum> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:CHEC? → #HA2E3
Note	

12.6.62 ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP[:ENABle]

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP[:ENABle] <enable>
Description	This command enables or disables use of the IPv4 IGMP.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:IPV4:IGMP ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP[:ENABle]?
Description	This query returns whether the use of the IPv4 IGMP is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:IGMP? → 1
Note	

12.6.63 ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP:VERSion

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP:VERSion <version>
Description	This command sets the IGMP version.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<version> = <CHARACTER PROGRAM DATA> V1: IGMPv1 V2: IGMPv2 V3: IGMPv3 <i>DEFault = V2</i>
Response	None.
Example	ETH:PORT1:STR1:IPV4:IGMP:VERS V1
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP:VERSion?
Description	This query returns the IGMP version.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<version> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:IGMP:VERS? → V2
Note	

12.6.64 ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP:GRoup[:ADDRESS]

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP:GRoup[:ADDRESS] <address>
Description	This command sets the IPv4 IGMP group address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:PORT1:STR1:IPV4:IGMP:GR0 "239.1.1.5"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP:GRoup[:ADDRESS]?
Description	This query returns the IPv4 IGMP group address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:IGMP:GR0? → "239.1.1.5"
Note	

12.6.65 ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP:SOURce[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP:SOURce[:ENABLE] <enable>
Description	This command enables or disables use of the IPv4 IGMPv3 source address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:IPV4:IGMP:SOUR ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP:SOURce[:ENABLE]?
Description	This query returns whether use of the IPv4 IGMPv3 source is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:IGMP:SOUR? → 1
Note	

12.6.66 ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP:SOURce:ADDRes

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP:SOURce:ADDRes <address>
Description	This command sets the IPv4 IGMPv3 source address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:PORT1:STR1:IPV4:IGMP:SOUR:ADDR "192.168.1.5"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV4:IGMP:SOURce:ADDRes?
Description	This query returns the IPv4 IGMPv3 source address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV4:IGMP:SOUR:ADDR? → "192.168.1.5"
Note	

12.6.67 ETHernet:PORT<Pt>:STReam<St>:DNS[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam<St>:DNS[:ENABLE] <enable>
Description	This command enables or disables DNS.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:DNS ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:DNS[:ENABLE]?
Description	This query returns whether DNS is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:DNS? → 1
Note	

12.6.68 ETHernet:PORT<Pt>:STReam<St>:DNS:PRIMary

Syntax	ETHernet:PORT<Pt>:STReam<St>:DNS:PRIMary <address>
Description	This command sets primary DNS sever address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:PORT1:STR1:DNS:PRIM "172.29.2.36"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:DNS:PRIMary?
Description	This query returns the primary DNS server address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:DNS:PRIM? → "172.29.2.36"
Note	

12.6.69 ETHernet:PORT<Pt>:STReam<St>:DNS:SECondary

Syntax	ETHernet:PORT<Pt>:STReam<St>:DNS:SECondary <address>
Description	This command sets secondary DNS sever address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:PORT1:STR1:DNS:SEC "172.29.2.37"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:DNS:SECondary?
Description	This query returns the secondary DNS server address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:DNS:SEC? → "172.29.2.37"
Note	

12.6.70 ETHernet:PORT<Pt>:STReam<St>:IPV6[:ENABle]

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6[:ENABle] <enable>
Description	This command enables or disables IPv6.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:IPV6 ON
Note	Enabling of this parameter will disable IPv4

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6[:ENABle]?
Description	This query returns whether IPv6 is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6? → 1
Note	

12.6.71 ETHernet:PORT<Pt>:STReam<St>:IPv6:TCLass

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPv6:TCLass <value>
Description	This command sets the IPv6 traffic class byte.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=0</i>
Response	None.
Examples	ETH:PORT1:STR1:IPv6:TCL #HFF
	ETH:PORT1:STR1:IPv6:TCL 128
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPv6:TCLass?
Description	This query returns the IPv6 traffic class byte.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:IPv6:TCL? → 255
Note	

12.6.72 ETHernet:PORT<Pt>:STReam<St>:IPv6:FLABel

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPv6:FLABel <value>
Description	This command sets the IPv6 flow label field.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1048575, DEFault=0</i>
Response	None.
Examples	ETH:PORT1:STR1:IPv6:FLAB #HFFFFFF
	ETH:PORT1:STR1:IPv6:FLAB 1024
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPv6:FLABel?
Description	This query returns the IPv6 flow label field.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:IPv6:FLAB? → 1024
Note	

12.6.73 ETHernet:PORT<Pt>:STReam<St>:IPv6:NHeader

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPv6:NHeader <value>
Description	This command sets the IPv6 next header field.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=253</i>
Response	None.
Examples	ETH:PORT1:STR1:IPv6:NH #HFF
	ETH:PORT1:STR1:IPv6:NH 128
Notes	This command sets the same storage parameter within the instrument as the IPv4 command ETHernet:PORT<Pt>:STReam<St>:IPv4:PRoToCol (see section 12.6.59). In case UDP or TCP is enabled, the value set by this command is not used. Instead values 17 (UDP) or 6 (TCP) are automatically inserted in the IPv6 header.

Syntax	ETHERnet:PORT<Pt>:STReam<St>:IPV6:NHeader?
Description	This query returns the IPv6 next header field.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:NH? → 233
Note	

12.6.74 ETHERnet:PORT<Pt>:STReam<St>:IPV6:HLIMit

Syntax	ETHERnet:PORT<Pt>:STReam<St>:IPV6:HLIMit <value>
Description	This command sets the IPv6 hop limit field.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=32</i>
Response	None.
Example	ETH:PORT1:STR1:IPV6:HLIM 32
Note	This command sets the same storage parameter within the instrument as the IPv4 command ETHERnet:PORT<Pt>:STReam<St>:IPV4:TTL (see section 12.6.52).

Syntax	ETHERnet:PORT<Pt>:STReam<St>:IPV6:HLIMit?
Description	This query returns the IPv6 hop limit field.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:HLIM? → 32
Note	

12.6.75 ETHERnet:PORT<Pt>:STReam<St>:IPV6:SOURce

Syntax	ETHERnet:PORT<Pt>:STReam<St>:IPV6:SOURce <address>
Description	This command sets the IPv6 source address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<address> = <STRING PROGRAM DATA> IPv6 address
Response	None.
Example	ETH:PORT1:STR1:IPV6:SOUR "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	

Syntax	ETHERnet:PORT<Pt>:STReam<St>:IPV6:SOURce?
Description	This query returns the IPv6 source address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:SOUR? → "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	

12.6.76 ETHernet:PORT<Pt>:STReam<St>:IPV6:DESTination

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:DESTination <address>
Description	This command sets the IPv6 destination address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<address> = <STRING PROGRAM DATA> IPv6 address
Response	None.
Example	ETH:PORT1:STR1:IPV6:DEST "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:DESTination?
Description	This query returns the IPv6 destination address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:DEST? → "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	

12.6.77 ETHernet:PORT<Pt>:STReam<St>:IPV6:GATeway[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:GATeway[:ENABLE] <enable>
Description	This command enables or disables use of the IPv6 gateway.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:IPV6:GAT ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:GATeway[:ENABLE]?
Description	This query returns whether the use of IPv6 gateway is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:GAT? → 1
Note	

12.6.78 ETHernet:PORT<Pt>:STReam<St>:IPV6:GATeway:ADDRess

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:GATeway:ADDRess <address>
Description	This command sets the IPv6 default gateway.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<address> = <STRING PROGRAM DATA> IPv6 address
Response	None.
Example	ETH:PORT1:STR1:IPV6:GAT:ADDR "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:GATeway:ADDRes?
Description	This query returns the IPv6 default gateway.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:GAT:ADDR? → "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	

12.6.79 ETHernet:PORT<Pt>:STReam<St>:IPV6:PREFix

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:PREFix <mask>
Description	This command sets the IPv6 prefix mask.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<mask> = <STRING PROGRAM DATA> IPv6 prefix mask
Response	None.
Example	ETH:PORT1:STR1:IPV6:PREF "FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:0000"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:PREFix?
Description	This query returns the IPv6 prefix mask.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:PREF? → "FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:0000"
Note	

12.6.80 ETHernet:PORT<Pt>:STReam<St>:IPV6:ADDRconfig

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:ADDRconfig <mode>
Description	This command sets the address configuration mode for IPv6.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<mode> = <CHARACTER PROGRAM DATA> MANual: Manual SLEsS: Stateless DEFault = SLEsS
Response	None.
Example	ETH:PORT1:STR1:IPV6:ADDR SLES
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:ADDRconfig?
Description	This query returns the address configuration mode for IPv6.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:ADDR? → SLES
Note	

12.6.81 ETHernet:PORT<Pt>:STReam<St>:IPV6:ADDRconfig:RESult?

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:ADDRconfig:RESult?
Description	This query returns the result of address config for IPv6.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<result> = <CHARACTER RESPONSE DATA> SUCCESS: Address configuration succeeded. TIMEOUT: Address configuration timed out.
Example	ETH:PORT1:STR1:IPV6:ADDR:RES? → TIMEOUT
Note	

12.6.82 ETHernet:PORT<Pt>:STReam<St>:IPV6:SLESs:IID

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:SLESs:IID <id>
Description	This command sets the interface ID for stateless IPv6.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<id> = <STRING PROGRAM DATA> The interface ID string must consist of 16 hexadecimal digits.
Response	None.
Example	ETH:PORT1:STR1:IPV6:SLES:IID "00-00-00-00-00-00-00-00"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:SLESs:IID?
Description	This query returns the interface ID for stateless IPv6.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<mode> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:SLES:IID? → "00-00-00-00-00-00-00-00"
Note	

12.6.83 ETHernet:PORT<Pt>:STReam<St>:IPV6:SLESs:IID:AUTO

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:SLESs:IID:AUTO <enable>
Description	This command enables or disables the interface ID for stateless IPv6.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:IPV6:SLES:IID:AUTO ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:SLESs:IID:AUTO?
Description	This query returns whether the interface ID for stateless IPv6 is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:SLES:IID:AUTO? → 1
Note	

12.6.84 ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:LINKlocal?

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:LINKlocal?
Description	This query returns the link local address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:SLES:LINK? → "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	

12.6.85 ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:RAFLag?

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:RAFLag?
Description	This query returns the stateless RA flags.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<flags> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:SLES:RAFL? → "0x00"
Note	

12.6.86 ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:SRCMac?

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:SRCMac?
Description	This query returns the stateless source MAC address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:SLES:SRCM? → "00-00-00-00-00-00"
Note	

12.6.87 ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:PREFIX?

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:PREFIX?
Description	This query returns the stateless prefix.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<prefix> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:SLES:PREFIX? → "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	

12.6.88 ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:PRFLag?

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:PRFLag?
Description	This query returns the stateless prefix flags.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<flags> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:SLES:PRFL? → "0x00"
Note	

12.6.89 ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:LTIme?

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:LTIme?
Description	This query returns the stateless life time.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<time> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:SLES:LTIM? → "Fri Jan 8 14:24:44 2010"
Note	

12.6.90 ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:RENew

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:SLEs:RENew
Description	This command execute Stateless address configuration. This command valid only when IpV6 is selected on layer3.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	None.
Example	ETH:PORT1:STR1:IPV6:SLES:REN
Note	

12.6.91 ETHernet:PORT<Pt>:STReam<St>:IPV6:PLENgtH?

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:PLENgtH?
Description	This query returns the Payload Length field in the IP header.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:PLEN? → 62
Note	

12.6.92 ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD[:ENABle]

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD[:ENABle] <enable>
Description	This command enables or disables use of the IPv6 MLD.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA>
	<i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:IPV6:MLD ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD[:ENABle]?
Description	This query returns whether the use of IPv6 MLD is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:MLD? → 1
Note	

12.6.93 ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD:VERSion

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD:VERSion <version>
Description	This command sets the MLD version.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<version> = <CHARACTER PROGRAM DATA> V1: MLDv1 V2: MLDv2 <i>DEFault</i> = V1
Response	None.
Example	ETH:PORT1:STR1:IPV6:MLD:VERS V1
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD:VERSion?
Description	This query returns the MLD version.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<version> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:MLD:VERS? → V1
Note	

12.6.94 ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD:GROup[:ADDRESS]

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD:GROup[:ADDRESS] <address>
Description	This command sets the IPv6 MLD group address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<address> = <STRING PROGRAM DATA> IPv6 address
Response	None.
Example	ETH:PORT1:STR1:IPV6:MLD:GRO "FF05:0000:0000:0000:0000:0000:0000:0333"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD:GROup[:ADDRESS]?
Description	This query returns the IPv6 MLD group address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:MLD:GRO? → "FF05:0000:0000:0000:0000:0000:0000:0333"
Note	

12.6.95 ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD:SOURce[:ENABle]

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD:SOURce[:ENABle] <enable>
Description	This command enables or disables use of the IPv6 MLDv2 source address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = OFF
Response	None.
Example	ETH:PORT1:STR1:IPV6:MLD:SOUR ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD:SOURce[:ENABle]?
Description	This query returns whether the use of IPv6 MLDv2 source is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:MLD:SOUR? → 1
Note	

12.6.96 ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD:SOURce:ADDRess

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD:SOURce:ADDRess <address>
Description	This command sets the IPv6 MLDv2 source address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<address> = <STRING PROGRAM DATA> IPv6 address
Response	None.
Example	ETH:PORT1:STR1:IPV6:MLD:SOUR:ADDR "2001:0001:0001:0001:0000:0000:0000:0005"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:IPV6:MLD:SOURce:ADDRess?
Description	This query returns the IPv6 MLDv2 source address.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:IPV6:MLD:SOUR:ADDR? → "2001:0001:0001:0001:0000:0000:0000:0005"
Note	

12.6.97 ETHernet:PORT<Pt>:STReam<St>:L3Custom[:ENABle]

Syntax	ETHernet:PORT<Pt>:STReam<St>:L3Custom[:ENABle] <enable>
Description	This command enables or disables Layer3 CUSTOM.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:L3C ON
Note	Enabling of this parameter will disable IPv4 and IPv6

Syntax	ETHernet:PORT<Pt>:STReam<St>:L3Custom[:ENABle]?
Description	This query returns whether Layer3 CUSTOM is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:L3C? → 1
Note	

12.6.98 ETHernet:PORT<Pt>:STReam<St>:DHCP[:ENABle]

Syntax	ETHernet:PORT<Pt>:STReam<St>:DHCP[:ENABle] <enable>
Description	This command enables or disables DHCP.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:DHCP ON
Note	When DHCP is enabled a new DHCP discover message is transmitted. Use the query ETH:PORT1:STR1:DHCP:LET? (see section 12.6.102) to check if lease is obtained.

Syntax	ETHernet:PORT<Pt>:STReam<St>:DHCP[:ENABle]?
Description	This query returns whether DHCP is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:DHCP? → 1
Note	

12.6.99 ETHernet:PORT<Pt>:STReam<St>:DHCP:RENew

Syntax	ETHernet:PORT<Pt>:STReam<St>:DHCP:RENew <enable>
Description	This command enables or disables renewal of DHCP lease when link is reestablished.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:DHCP:REN ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:DHCP:RENew?
Description	This query returns whether renewal of DHCP lease is enabled or disabled when link reestablished.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:DHCP:REN? → 1
Note	

12.6.100 ETHernet:PORT<Pt>:STReam<St>:DHCP:DNS

Syntax	ETHernet:PORT<Pt>:STReam<St>:DHCP:DNS <enable>
Description	This command enables or disables obtaining DNS server info through DHCP.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:DHCP:DNS ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:DHCP:DNS?
Description	This query returns whether obtaining DNS server info through DHCP is enabled or disabled.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:DHCP:DNS? → 1
Note	

12.6.101 ETHernet:PORT<Pt>:STReam<St>:DHCP:GATeway

Syntax	ETHernet:PORT<Pt>:STReam<St>:DHCP:GATeway <enable>
Description	This command enables or disables obtaining gateway setup through DHCP.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:DHCP:GAT ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:DHCP:GATeway?
Description	This query returns whether obtaining gateway setup through DHCP is enabled or disabled.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:DHCP:GAT? → 1
Note	

12.6.102 ETHernet:PORT<Pt>:STReam<St>:DHCP:LETime?

Syntax	ETHernet:PORT<Pt>:STReam<St>:DHCP:LETime?
Description	This query returns the current DHCP lease expire time.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<time> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:DHCP:LET? → "Fri Jan 8 14:24:44 2010"
Note	"N/A" is returned if DHCP is disabled or a lease has not been obtained .

12.6.103 ETHernet:PORT<Pt>:STReam<St>:UDP[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam<St>:UDP[:ENABLE] <enable>
Description	This command enables or disables UDP.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:UDP ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:UDP[:ENABLE]?
Description	This query returns whether UDP is enabled or disabled.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:UDP? → 1
Note	

12.6.104 EThernet:PORT<Pt>:STReam<St>:UDP:SPORt

Syntax	EThernet:PORT<Pt>:STReam<St>:UDP:SPORt <value>
Description	This command sets the UDP source port.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 65535, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:UDP:SPOR 22
Note	

Syntax	EThernet:PORT<Pt>:STReam<St>:UDP:SPORt?
Description	This query returns the UDP source port
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:UDP:SPOR? → 22
Note	

12.6.105 EThernet:PORT<Pt>:STReam<St>:UDP:DPORT

Syntax	EThernet:PORT<Pt>:STReam<St>:UDP:DPORT <value>
Description	This command sets the UDP destination port.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 65535, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:UDP:DPOR 22
Note	

Syntax	EThernet:PORT<Pt>:STReam<St>:UDP:DPORT?
Description	This query returns the UDP destination port.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:UDP:DPOR? → 22
Note	

12.6.106 EThernet:PORT<Pt>:STReam<St>:UDP:LENGth?

Syntax	EThernet:PORT<Pt>:STReam<St>:UDP:LENGth?
Description	This query returns the Length field in the UDP header.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:UDP:LENG? → 62
Note	

12.6.107 ETHernet:PORT<Pt>:STReam<St>:UDP:CNULl

Syntax	ETHernet:PORT<Pt>:STReam<St>:UDP:CNULl <enable>
Description	This command enables or disables forcing of the UDP header checksum to null.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:UDP:CNUL ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:UDP:CNULl?
Description	This query returns whether forcing of UDP checksum to null is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:UDP:CNUL? → 1
Note	

12.6.108 ETHernet:PORT<Pt>:STReam<St>:UDP:CHECKsum?

Syntax	ETHernet:PORT<Pt>:STReam<St>:UDP:CHECKsum?
Description	This query returns the checksum field in the UDP header.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<checksum> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:UDP:CHEC? → #HA2E3
Note	

12.6.109 ETHernet:PORT<Pt>:STReam<St>:TCP[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP[:ENABLE] <enable>
Description	This command enables or disables TCP.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:TCP ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP[:ENABLE]?
Description	This query returns whether TCP is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP? → 1
Note	

12.6.110 ETHernet:PORT<Pt>:STReam<St>:TCP:ACONnect

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:ACONnect <enable>
Description	This command enables or disables automatic TCP connect.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:ACON ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:ACONnect?
Description	This query returns whether automatic TCP connect is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:ACON? → 1
Note	

12.6.111 ETHernet:PORT<Pt>:STReam<St>:TCP:LMODe

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:LMODe <enable>
Description	This command enables or disables TCP listen mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:LMODe ON
Note	Requires ACONnect to be enabled.

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:LMODe?
Description	This query returns whether TCP listen mode is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:LMODe? → 1
Note	

12.6.112 ETHernet:PORT<Pt>:STReam<St>:TCP:SPORt

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:SPORt <value>
Description	This command sets the TCP source port.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 65535, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:SPOR 22
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:SPORt?
Description	This query returns the TCP source port
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:SPOR? → 22
Note	

12.6.113 ETHernet:PORT<Pt>:STReam<St>:TCP:DPORT

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:DPORT <value>
Description	This command sets the TCP destination port.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 65535, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:DPOR 22
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:DPORT?
Description	This query returns the TCP destination port.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:DPOR? → 22
Note	

12.6.114 ETHernet:PORT<Pt>:STReam<St>:TCP:SEQUence

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:SEQUence <value>
Description	This command sets the TCP sequence number.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=4294967295, DEFault=0</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:SEQ 123456
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:SEQUence?
Description	This query returns the TCP sequence number.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:SEQ? → 123456
Note	

12.6.115 EThernet:PORT<Pt>:STream<St>:TCP:AINCrement

Syntax	EThernet:PORT<Pt>:STream<St>:TCP:AINCrement <enable>
Description	This command enables or disables auto increment of the TCP sequence number.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:AINC ON
Note	

Syntax	EThernet:PORT<Pt>:STream<St>:TCP:AINCrement?
Description	This query returns whether auto increment of the TCP sequence number is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:AINC? → 1
Note	

12.6.116 EThernet:PORT<Pt>:STream<St>:TCP:ACKnowledge

Syntax	EThernet:PORT<Pt>:STream<St>:TCP:ACKnowledge <value>
Description	This command sets the TCP acknowledgment number.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 4294967295, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:ACKN 123456
Note	

Syntax	EThernet:PORT<Pt>:STream<St>:TCP:ACKnowledge?
Description	This query returns the TCP acknowledgment number.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:ACKN? → 123456
Note	

12.6.117 EThernet:PORT<Pt>:STream<St>:TCP:REServed

Syntax	EThernet:PORT<Pt>:STream<St>:TCP:REServed <value>
Description	This command sets the TCP reserved value.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 63, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:RES 10
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:REServed?
Description	This query returns the TCP reserved value.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:RES? → 10
Note	

12.6.118 ETHernet:PORT<Pt>:STReam<St>:TCP:FCWR

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FCWR <enable>
Description	This command enables or disables the TCP CWR flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:FCWR ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FCWR?
Description	This query returns whether the TCP CWR flag is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:FCWR? → 1
Note	

12.6.119 ETHernet:PORT<Pt>:STReam<St>:TCP:FECE

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FECE <enable>
Description	This command enables or disables the TCP ECE flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:FECE ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FECE?
Description	This query returns whether the TCP ECE flag is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:FECE? → 1
Note	

12.6.120 ETHernet:PORT<Pt>:STReam<St>:TCP:FURG

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FURG <enable>
Description	This command enables or disables the TCP URG flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:FURG ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FURG?
Description	This query returns whether the TCP URG flag is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:FURG? → 1
Note	

12.6.121 ETHernet:PORT<Pt>:STReam<St>:TCP:FAck

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FAck <enable>
Description	This command enables or disables the TCP ACK flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:FAck ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FAck?
Description	This query returns whether the TCP ACK flag is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:FAck? → 1
Note	

12.6.122 ETHernet:PORT<Pt>:STReam<St>:TCP:FPSH

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FPSH <enable>
Description	This command enables or disables the TCP PSF flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:FPSH ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FPSH?
Description	This query returns whether the TCP PSH flag is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:FPSH? → 1
Note	

12.6.123 ETHernet:PORT<Pt>:STReam<St>:TCP:FRST

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FRST <enable>
Description	This command enables or disables the TCP RST flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA>
	<i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:FRST ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FRST?
Description	This query returns whether the TCP RST flag is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:FRST? → 1
Note	

12.6.124 ETHernet:PORT<Pt>:STReam<St>:TCP:FSYN

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FSYN <enable>
Description	This command enables or disables the TCP SYN flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA>
	<i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:FSYN ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FSYN?
Description	This query returns whether the TCP SYN flag is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:FSYN? → 1
Note	

12.6.125 ETHernet:PORT<Pt>:STReam<St>:TCP:FFIN

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FFIN <enable>
Description	This command enables or disables the TCP FIN flag.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:FFIN ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:FFIN?
Description	This query returns whether the TCP FIN flag is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:FFIN? → 1
Note	

12.6.126 ETHernet:PORT<Pt>:STReam<St>:TCP:WINDow

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:WINDow <value>
Description	This command sets the TCP window size.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 65535, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:WIND 1000
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:WINDow?
Description	This query returns the TCP window size.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:WIND? → 1000
Note	

12.6.127 ETHernet:PORT<Pt>:STReam<St>:TCP:UPointer

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:UPointer <value>
Description	This command sets the TCP urgent pointer.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 65535, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:TCP:UP0 1000
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:UPOinter?
Description	This query returns the TCP urgent pointer.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:UP0? → 1000
Note	

12.6.128 ETHernet:PORT<Pt>:STReam<St>:TCP:CHECKsum?

Syntax	ETHernet:PORT<Pt>:STReam<St>:TCP:CHECKsum?
Description	This query returns the checksum field in the TCP header.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<length> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:TCP:CHEC? → #HA2E3
Note	

12.6.129 ETHernet:PORT<Pt>:STReam1:BER:UTGenerator

Syntax	ETHernet:PORT<Pt>:STReam1:BER:UTGenerator <enable>
Description	This command enables or disables automatic start of the transmitter when running a BER measurement.
Parameters	<Pt> = Port number
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = OFF
Response	None.
Example	ETH:PORT1:STR1:BER:UTG ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam1:BER:UTGenerator?
Description	This query returns whether it is enabled or disabled that the transmitter automatically starts when running a BER measurement.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:BER:UTG? → 1
Note	

12.6.130 ETHernet:PORT<Pt>:STReam1:BER:SEQuence

Syntax	ETHernet:PORT<Pt>:STReam1:BER:SEQuence <enable>
Description	This command enables or disables sequence checking when using unframed Ethernet.
Parameters	<Pt> = Port number
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT1:STR1:BER:SEQ ON
Note	This is only valid when FRAMed is OFF.

Syntax	ETHernet:PORT<Pt>:STReam1:BER:SEQuence?
Description	This query returns whether sequence checking is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:BER:SEQ? → 1
Note	

12.6.131 ETHernet:PORT<Pt>:STReam1:BER:SDMeasure[:ENABled]

Syntax	ETHernet:PORT<Pt>:STReam1:BER:SDMeasure[:ENABled] <enable>
Description	This command enables or disables Service Disruption Measurement.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:BER:SDM ON
Note	This is only valid when FRAMed is ON.

Syntax	ETHernet:PORT<Pt>:STReam1:BER:SDMeasure[:ENABled]?
Description	This query returns whether Service Disruption Measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:BER:SDM? → 1
Note	

12.6.132 ETHernet:PORT<Pt>:STReam1:BER:SDMeasure:DTYPe

Syntax	ETHernet:PORT<Pt>:STReam1:BER:SDMeasure:DTYPe <type>
Description	This command sets the Disruption Type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> PACK: Packet LOS: Loss of Signal
Response	None.
Example	ETH:PORT1:STR1:BER:SDM:DTYP PACK
Note	

Syntax	ETHernet:PORT<Pt>:STReam1:BER:SDMeasure:DTYPe?
Description	This query returns the Disruption Type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STR1:BER:SDM:DTYP? → PACK
Note	

12.6.133 ETHernet:PORT<Pt>:STReam1:BER:SDMeasure:MLIMit

Syntax	ETHernet:PORT<Pt>:STReam1:BER:SDMeasure:MLIMit <value>
Description	This command sets the Max Limit. Unit: μ s.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 5000000, DEFault = 50000</i>
Response	None.
Example	ETH:PORT1:STR1:BER:SDM:MLIM 10
Note	

Syntax	ETHernet:PORT<Pt>:STReam1:BER:SDMeasure:MLIMit?
Description	This query returns the Max Limit. Unit: μ s.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:BER:SDM:MLIM? → 10
Note	

12.6.134 ETHernet:PORT<Pt>:STReam1:BER:SDMeasure:MDISruption

Syntax	ETHernet:PORT<Pt>:STReam1:BER:SDMeasure:MDISruption <value>
Description	This command sets the Min Disruption Frames.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 5000, DEFault = 10</i>
Response	None.
Example	ETH:PORT1:STR1:BER:SDM:MDIS 5
Note	

Syntax	ETHernet:PORT<Pt>:STReam1:BER:SDMeasure:MDISruption?
Description	This query returns the Min Disruption Frames.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:BER:SDM:MDIS? → 5
Note	

12.6.135 ETHernet:PORT<Pt>:STReam1:BER:SDMeasure:EFPeriod

Syntax	ETHernet:PORT<Pt>:STReam1:BER:SDMeasure:EFPeriod <value>
Description	This command sets the LOS Error Free Period. Unit: ms
Parameters	<Pt> = Port number <value> = <NR1 NUMERIC RESPONSE DATA> <i>MINimum = 1, MAXimum = 100, DEFault = 100</i>
Response	None.
Example	ETH:PORT1:STR1:BER:SDM:EFP 5
Note	

Syntax	ETHernet:PORT<Pt>:STReam1:BER:SDMeasure:EFPeriod?
Description	This query returns the LOS Error Free Period. Unit: ms
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:BER:SDM:EFP? → 5
Note	

12.6.136 ETHernet:PORT<Pt>:STReam1:BER:STHResholds[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam1:BER:STHResholds[:ENABLE] <enable>
Description	This command enables or disables BER Sequence error thresholds.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:PORT1:STR1:BER:STHR ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam1:BER:STHResholds[:ENABLE]?
Description	This query returns whether BER Sequence error thresholds are enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Examples	ETH:PORT1:STR1:BER:STHR? → 1
Note	

12.6.137 ETHernet:PORT<Pt>:STReam1:BER:STHResholds:VALue

Syntax	ETHernet:PORT<Pt>:STReam1:BER:STHResholds:VALue <value>
Description	This command sets the Sequence errors threshold value.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 4294967295, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:BER:STHR:VAL 100
Note	

Syntax	ETHernet:PORT<Pt>:STReam1:BER:STHResholds:VALue?
Description	This query returns the Sequence errors threshold value.
Parameters	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:BER:STHR:VAL? → 10
Note	

12.6.138 ETHernet:PORT<Pt>:STReam<St>:PAYLoad

Syntax	ETHernet:PORT<Pt>:STReam<St>:PAYLoad <pattern>
Description	This command sets stream payload pattern
Parameters	<Pt> = Port number <St> = Stream number (1-16) <pattern> = <CHARACTER PROGRAM DATA> FOX: 'Fox' pattern 5555: 'All-5s' pattern PRBS9: PRBS9 sequence PRBS11: PRBS11 sequence PRBS15: PRBS15 sequence PRBS20: PRBS20 sequence PRBS23: PRBS23 sequence PRBS29: PRBS29 sequence PRBS31: PRBS31 sequence HFTest: HF test pattern CRPAT: Compliant random Pattern JTPAT: Jitter tolerance pattern SPAT: Supply noise test sequence USER32BIT: 32 bit user defined pattern. USER16BIT: Obsolete. For CMA 3000 backward compatibility only. Same as USER32BIT. <i>DEFault = PRBS23</i>
Response	None.
Example	ETH:PORT1:STR1:PAYL FOX
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:PAYLoad?
Description	This query returns the stream payload pattern
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<pattern> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STR1:PAYL? → SPAT
Note	

12.6.139 ETHernet:PORT<Pt>:STReam<St>:UP16

Syntax	ETHernet:PORT<Pt>:STReam<St>:UP16 <pattern>
Description	This command sets the 16 bit user pattern.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<pattern> = <STRING PROGRAM DATA> Valid characters: '0' and '1' The string must consist of 1 to 16 characters.
Response	None.
Example	ETH:PORT1:STR1:UP16 "101101"
Note	This command is for backward compatibility only, and a query command is not available. Actually the new 32 bit user pattern is set by this command.

12.6.140 ETHernet:PORT<Pt>:STReam<St>:UP32

Syntax	ETHernet:PORT<Pt>:STReam<St>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PAYLoad is USER32BIT.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Example	ETH:PORT1:STR1:UP32 "01101"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<pattern> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:UP32? → "01101"
Note	

12.6.141 ETHernet:PORT<Pt>:STReam:PCMA

Syntax	ETHernet:PORT<Pt>:STReam:PCMA <enable>
Description	This command sets PRBS pattern for CMA 3000 compatibility.
Parameter	<Pt> = Port number
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR:PCMA ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam:PCMA?
Description	This query returns whether PRBS pattern for CMA 3000 compatibility.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR:PCMA? → 1
Note	

12.6.142 ETHernet:PORT<Pt>:STReam:CROSPrbs

Syntax	ETHernet:PORT<Pt>:STReam:CROSPrbs <enable>
Description	This command sets Enable or Disable cross pattern by Frame by Frame.
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR:CROS ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam:CROSPrbs?
Description	This query returns Enable or Disable cross pattern by Frame by Frame.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR:CROS? → 1
Note	

12.6.143 ETHernet:PORT<Pt>:STReam<St>:LATency

Syntax	ETHernet:PORT<Pt>:STReam<St>:LATency <enable>
Description	This command enables or disables stream latency measurement.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:LAT ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:LATency?
Description	This query returns whether stream latency measurement is enabled or disabled.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:LAT? → 1
Note	

12.6.144 ETHernet:PORT<Pt>:STReam<St>:JITTer

Syntax	ETHernet:PORT<Pt>:STReam<St>:JITTer <enable>
Description	This command enables or disables stream jitter measurement.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:JITT ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:JITTer?
Description	This query returns whether stream jitter measurement is enabled or disabled.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:JITT? → 1
Note	

12.6.145 ETHernet:PORT<Pt>:STReam<St>:FLOsS

Syntax	ETHernet:PORT<Pt>:STReam<St>:FLOsS <enable>
Description	This command enables or disables multistream frame loss measurement.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:STR1:FLOS ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:FLOsS?
Description	This query returns whether multistream frame loss measurement is enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR1:FLOS? → 1
Note	

12.6.146 ETHernet:PORT<Pt>:STReam<St>:FLOsS:THResholds[:ENABLE]

Syntax	ETHernet:PORT<Pt>:STReam<St>:FLOsS:THResholds[:ENABLE] <enable>
Description	This command enables or disables Frameloss thresholds.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:PORT1:STR1:FLOS:THR ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:FLOsS:THResholds[:ENABLE]?
Description	This query returns whether Frameloss thresholds are enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Examples	ETH:PORT1:STR1:FLOS:THR? → 1
Note	

12.6.147 ETHernet:PORT<Pt>:STReam<St>:FLOsS:THResholds:MODE

Syntax	ETHernet:PORT<Pt>:STReam<St>:FLOsS:THResholds:MODE <mode>
Description	This command sets the Frameloss thresholds mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<mode> = <NUMERIC PROGRAM DATA>
	COUNT: Count RATE: Rate <i>DEFault=COUNT</i>
Response	None.
Example	ETH:PORT1:STR1:FLOS:THR:MODE COUNT
Note	

Syntax	ETHERnet:PORT<Pt>:STReam<St>:FLOs:THResholds:MODE? <mode>
Description	This query returns the Frameloss thresholds mode.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:FLOS:THR:MODE? → COUNT
Note	

12.6.148 ETHERnet:PORT<Pt>:STReam<St>:FLOs:THResholds:COUNT

Syntax	ETHERnet:PORT<Pt>:STReam<St>:FLOs:THResholds:COUNT <value>
Description	This command sets the Frameloss thresholds count value.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 4294967295, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:FLOS:THR:COUNT 100
Note	

Syntax	ETHERnet:PORT<Pt>:STReam<St>:FLOs:THResholds:COUNT?
Description	This query returns the Frameloss thresholds count value.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:FLOS:THR:COUNT? → 100
Note	

12.6.149 ETHERnet:PORT<Pt>:STReam<St>:FLOs:THResholds:RATio

Syntax	ETHERnet:PORT<Pt>:STReam<St>:FLOs:THResholds:RATio <ratio>
Description	This command sets the Frameloss thresholds ratio% value.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<ratio> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.00000, MAXimum = 100.00000, DEFault = 0.00000</i>
Response	None.
Example	ETH:PORT1:STR1:FLOS:THR:RAT 10.00000
Note	

Syntax	ETHERnet:PORT<Pt>:STReam<St>:FLOs:THResholds:RATio?
Description	This query returns the Frameloss thresholds ratio% value.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:FLOS:THR:RAT? → 10.00000
Note	

12.6.150 ETHernet:PORT<Pt>:STReam<St>:LATency:THResholds[:ENABle]

Syntax	ETHernet:PORT<Pt>:STReam<St>:LATency:THResholds[:ENABle] <enable>
Description	This command enables or disables Latency thresholds.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:PORT1:STR1:LAT:THR ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:LATency:THResholds[:ENABle]?
Description	This query returns whether Latency thresholds are enabled or disabled.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Examples	ETH:PORT1:STR1:LAT:THR? → 1
Note	

12.6.151 ETHernet:PORT<Pt>:STReam<St>:LATency:THResholds:VALue

Syntax	ETHernet:PORT<Pt>:STReam<St>:LATency:THResholds:VALue <value>
Description	This command sets the Latency thresholds value.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 429496729.500, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:LAT:THR:VAL 100.000
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:LATency:THResholds:VALue?
Description	This query returns the level for the Latency thresholds value.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:LAT:THR:VAL? → 10.000
Note	

12.6.152 ETHernet:PORT<Pt>:STReam<St>:JITTer:THResholds[:ENABle]

Syntax	ETHernet:PORT<Pt>:STReam<St>:JITTer:THResholds[:ENABle] <enable>
Description	This command enables or disables Jitter thresholds.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:PORT1:STR1:JITT:THR ON
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:JITTer:THResholds[:ENABle]?
Description	This query returns whether Jitter thresholds are enabled or disabled.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Examples	ETH:PORT1:STR1:JITT:THR? → 1
Note	

12.6.153 ETHernet:PORT<Pt>:STReam<St>:JITTer:THResholds:VALue

Syntax	ETHernet:PORT<Pt>:STReam<St>:JITTer:THResholds:VALue <value>
Description	This command sets the Jitter thresholds value.
Parameters	<Pt> = Port number <St> = Stream number (1-16) <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 429496729.500, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:JITT:THR:VAL 100.00
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:JITTer:THResholds:VALue?
Description	This query returns the Jitter thresholds value.
Parameters	<Pt> = Port number <St> = Stream number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:JITT:THR:VAL? → 10.000
Note	

12.6.154 ETHernet:PORT<Pt>:STReam:TSTamp:CCTimestamp

Syntax	ETHernet:PORT<Pt>:STReam:TSTamp:CCTimestamp <version>
Description	This command sets the Latency/Jitter time stamp compatible configuration.
Parameters	<Pt> = Port number <version> = <CHARACTER PROGRAM DATA> V0906: From V9.06 or later ¹ V0100: V9.05 or older <i>DEFault = V0906</i>
Response	None.
Example	ETH:PORT1:STR:TST:CCT V0906
Note	¹ Only available for MU100010A, MU100011A, MU104014A, MU104015A, or MU104011A.

Syntax	ETHernet:PORT<Pt>:STReam:TSTamp:CCTimestamp?
Description	This query returns the Latency/Jitter time stamp compatible configuration.
Parameters	<Pt> = Port number
Response	<version> = <CHARACTER PROGRAM DATA>
Example	ETH:PORT1:STR:TST:CCT? → V0906
Note	

12.6.155 ETHernet:PORT<Pt>:STReam:TSTamp:TSRC

Syntax	ETHernet:PORT<Pt>:STReam:TSTamp:TSRC <source>
Description	This command sets the time stamp source.
Parameters	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> INTernal: Internal GPS: GPS R1PPS: 1PPS(Ext. ref. 10MHz) ¹ RGPS: GPS(Ext. ref. 10MHz) ¹ <i>DEFault = INTernal</i>
Response	None.
Example	ETH:PORT1:STR:TST:TSRC GPS
Note	¹ Only available for MU100010A, MU104014A, MU104015A, or MU104011A.

Syntax	ETHernet:PORT<Pt>:STReam:TSTamp:TSRC?
Description	This query returns the time stamp source.
Parameters	<Pt> = Port number
Response	<version> = <CHARACTER PROGRAM DATA>
Example	ETH:PORT1:STR:TST:TSRC? → GPS
Note	

12.6.156 ETHernet:PORT<Pt>:STReam:TSTamp:GCABle

Syntax	ETHernet:PORT<Pt>:STReam:TSTamp:GCABle <delay>
Description	This command sets the delay time of GPS antenna cable length. Unit: nano seconds.
Parameters	<Pt> = Port number <delay> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1000000000, DEFault=0</i>
Response	None.
Example	ETH:PORT1:STR:TST:GCAB 35
Note	

Syntax	ETHernet:PORT<Pt>:STReam:TSTamp:GCABle?
Description	This query returns the delay time of GPS antenna cable length.
Parameter	<Pt> = Port number
Response	<delay> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR:TST:GCAB? → 35
Note	

12.6.157 ETHernet:PORT<Pt>:STReam:TSTamp:SYNC?

Syntax	ETHernet:PORT<Pt>:STReam:TSTamp:SYNC?
Description	This query returns whether time stamp source is synchronize with target source.
Parameter	<Pt> = Port number
Response	<sync> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:STR:TST:SYNC? → 1
Note	

12.6.158 ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:FIEld

Syntax	ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:FIEld <protocol>
Description	This command sets the variable field protocol.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
	<protocol> = <CHARACTER PROGRAM DATA> OFF: OFF SMAC: Source MAC Address DMAC: Destination MAC Address VLANx: VLAN ID where x is the VLAN level (1-8) BTAG: B-Tag VID ITAG: I-Tag SID MPLSx: MPLS where x is the MPLS level (1-8) MIMDMAC: MiM Destination MAC Address EMDM: EoMPLS destination MAC Address MIMSMAC: MiM Source MAC Address EMSM: EoMPLS source MAC Address SIV4: Source IPv4 DIV4: Destination IPv4 SIV6: Source IPv6 DIV6: Destination IPv6 CUST: Custom Header PCID: PC_ID (2byte) SEQID: SEQ_ID (2byte) PCID4B: PC_ID (4byte) SEQID4B: SEQ_ID (4byte) RTCID: RTC_ID RSTID: RST_ID FLOWID: FLOW_ID ODRINFO: Ordering Information MSGHEAD: Message header SUBHEAD: Sub Header <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STR1:VAR1:FIEL SMAC
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:FIEld?
Description	This query returns the variable field protocol.
Parameter	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
Response	<protocol> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STR1:VAR1:FIEL? → SMAC
Note	

12.6.159 ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:TYPE

Syntax	ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:TYPE <type>
Description	This command sets the variable field type.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
	<type> = <CHARACTER PROGRAM DATA> INCREMENT: Increment DECREMENT: Decrement RANDOM: Random <i>DEFault = INCREMENT</i>
Response	None.
Example	ETH:PORT1:STR1:VAR1:TYPE INCREMENT
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:TYPE?
Description	This query returns the variable field type.
Parameter	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
Response	<type> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STR1:VAR1:TYPE? → INCREMENT
Note	

12.6.160 ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:OFFSet

Syntax	ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:OFFSet <offset>
Description	This command sets the variable field offset.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
	<offset> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 127, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:VAR1:OFFS 1
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:OFFSet?
Description	This query returns the variable field offset.
Parameter	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
Response	<offset> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:VAR1:OFFS? → 1
Note	

12.6.161 ETHernet:PORT<Pt>:STream<St>:VARiable<No>:LENGth

Syntax	ETHernet:PORT<Pt>:STream<St>:VARiable<No>:LENGth <length>
Description	This command sets the variable field length.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
	<length> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 32, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:VAR1:LENG 1
Note	

Syntax	ETHernet:PORT<Pt>:STream<St>:VARiable<No>:LENGth?
Description	This query returns the variable field length.
Parameter	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field Number (1-2)
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:VAR1:LENG? → 1
Note	

12.6.162 ETHernet:PORT<Pt>:STream<St>:VARiable<No>:STARt

Syntax	ETHernet:PORT<Pt>:STream<St>:VARiable<No>:STARt <start>
Description	This command sets the variable field start value.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
	<start> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 4294967295, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:VAR1:STAR 1
Note	

Syntax	ETHernet:PORT<Pt>:STream<St>:VARiable<No>:STARt?
Description	This query returns the variable field start value.
Parameter	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
Response	<start> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:VAR1:STAR? → 1
Note	

12.6.163 ETHernet:PORT<Pt>:STream<St>:VARiable<No>:END

Syntax	ETHernet:PORT<Pt>:STream<St>:VARiable<No>:END <end>
Description	This command sets the variable field end value.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
	<end> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 4294967295, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:VAR1:END 10
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:END?
Description	This query returns the variable field end value.
Parameter	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
Response	<end> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:VAR1:END? → 10
Note	

12.6.164 ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:STEP

Syntax	ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:STEP <step>
Description	This command sets the variable field step value.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
	<step> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 2147483648, DEFault = 1</i>
Response	None.
Example	ETH:PORT1:STR1:VAR1:STEP 1
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:VARiable<No>:STEP?
Description	This query returns the variable field step value.
Parameter	<Pt> = Port number
	<St> = Stream number (1-16)
	<No> = Variable field number (1-2)
Response	<step> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:VAR1:STEP? → 1
Note	

12.6.165 ETHernet:PORT<Pt>:STReam<St>:CUSTom:LENGth

Syntax	ETHernet:PORT<Pt>:STReam<St>:CUSTom:LENGth <length>
Description	This command sets the custom header length.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<length> = <NUMERIC PROGRAM DATA> <i>MINimum = 2, MAXimum = 256</i>
Response	None.
Example	ETH:PORT1:STR1:CUST:LENG 2
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:CUSTom:LENGth?
Description	This query returns the custom header length.
Parameter	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:CUST:LENG? → 2
Note	

12.6.166 ETHernet:PORT<Pt>:STReam<St>:CUSTom:DATA

Syntax	ETHernet:PORT<Pt>:STReam<St>:CUSTom:DATA <data>
Description	This command sets the custom header data.
Parameters	<Pt> = Port number
	<St> = Stream number (1-16)
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:CUST:DAT "33FF0011"
Note	

Syntax	ETHernet:PORT<Pt>:STReam<St>:CUSTom:DATA?
Description	This query returns the custom header data.
Parameter	<Pt> = Port number
	<St> = Stream number (1-16)
Response	<data> = <STRING PROGRAM DATA>
Example	ETH:PORT1:STR1:CUST:DAT? → "33FF0011"
Note	

12.6.167 ETHernet:PORT<Pt>:PING:STARt

Syntax	ETHernet:PORT<Pt>:PING:STARt
Description	This command starts the ping test.
Parameters	<Pt> = Port number
Response	None.
Example	ETH:PORT1:PING:STAR
Note	Ping test is supported in the stream setup page. This command does not support the Ping application. This command can only be used for Ethernet N-Port BERT application.

12.6.168 ETHernet:PORT<Pt>:PING:STOP

Syntax	ETHernet:PORT<Pt>:PING:STOP
Description	This command stops the ping test.
Parameters	<Pt> = Port number
Response	None.
Example	ETH:PORT1:PING:STOP
Note	Ping test is supported in the stream setup page. This command does not support the Ping application. This command can only be used for Ethernet N-Port BERT application.

12.6.169 ETHernet:PORT<Pt>:PING:STATus?

Syntax	ETHernet:PORT<Pt>:PING:STATus?
Description	This query returns the ping status.
Parameters	<Pt> = Port number
Response	<stat> = <NR1 NUMERIC RESPONSE DATA>
	0: Ping test inactive
	1: Ping test active
Example	ETH:PORT1:PING:STAT? → 1
Note	Ping test is supported in the stream setup page. This command does not support the Ping application. This command can only be used for Ethernet N-Port BERT application.

12.6.170 ETHernet:PORT<Pt>:PING:RESults?

Syntax	ETHernet:PORT<Pt>:PING:RESults?
Description	This query returns the ping latency.
Parameters	<Pt> = Port number
Response	<Latency> = <NR2 NUMERIC RESPONSE DATA> (<Latency>,<Latency>,...) Unit: milli seconds.
Example	ETH:PORT1:PING:RES? → (10.870,10.713,10.895,10.282)
Note	Ping test is supported in the stream setup page. This command does not support the Ping application. This command can only be used for Ethernet N-Port BERT application.

12.6.171 ETHernet:PORT<Pt>:PING:SUMMary?

Syntax	ETHernet:PORT<Pt>:PING:SUMMary?
Description	This query returns the ping summary.
Parameters	<Pt> = Port number
Response	<sent> = <NR1 NUMERIC RESPONSE DATA> Number of sent requests. <received> = <NR1 NUMERIC RESPONSE DATA> Number of received requests. <lost> = <NR1 NUMERIC RESPONSE DATA> Number of request time outs.
Example	ETH:PORT1:PING:SUMM? → 4,3,1
Note	Ping test is supported in the stream setup page. This command does not support the Ping application. This command can only be used for Ethernet N-Port BERT application.

12.7 Settings

12.7.1 EThernet:PORT<Pt>:SETTings:AARP

Syntax	EThernet:PORT<Pt>:SETTings:AARP <enable>
Description	This command enables or disables answering incoming ARP requests.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT1:SETT:AARP ON
Note	

Syntax	EThernet:PORT<Pt>:SETTings:AARP?
Description	This query returns whether answering incoming ARP requests is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:AARP? → 1
Note	

12.7.2 EThernet:PORT<Pt>:SETTings:ANDP

Syntax	EThernet:PORT<Pt>:SETTings:ANDP <enable>
Description	This command enables or disables answering incoming NDP requests.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT1:SETT:ANDP ON
Note	

Syntax	EThernet:PORT<Pt>:SETTings:ANDP?
Description	This query returns whether answering incoming NDP requests is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:ANDP? → 1
Note	

12.7.3 EThernet:PORT<Pt>:SETTings:APING

Syntax	EThernet:PORT<Pt>:SETTings:APING <enable>
Description	This command enables or disables answering incoming PING requests.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT1:SETT:APIN ON
Note	

Syntax	EThernet:PORT<Pt>:SETTings:APING?
Description	This query returns whether answering incoming PING requests is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:APIN? → 1
Note	

12.7.4 EThernet:PORT<Pt>:SETTings:RLFSignaling

Syntax	EThernet:PORT<Pt>:SETTings:RLFSignaling <enable>
Description	This command enables or disables respond to link fault signaling.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>ON</i>
Response	None.
Example	ETH:PORT1:SETT:RLFS ON
Note	

Syntax	EThernet:PORT<Pt>:SETTings:RLFSignaling?
Description	This query returns whether respond to link fault signaling is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:RLFS? → 1
Note	

12.7.5 EThernet:PORT<Pt>:SETTings:ACMA

Syntax	EThernet:PORT<Pt>:SETTings:ACMA <enable>
Description	This command enables or disables answering incoming Network Master configuration frames.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	ETH:PORT1:SETT:ACMA ON
Note	

Syntax	EThernet:PORT<Pt>:SETTings:ACMA?
Description	This query returns whether it is enabled or disabled to answer incoming Network Master configuration frames.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:ACMA? → 1
Note	

12.7.6 EThernet:PORT<Pt>:SETTings:PLENenght

Syntax	EThernet:PORT<Pt>:SETTings:PLENenght <length>
Description	This command sets the expected preamble length at 1Gbps and lower speeds.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 3, <i>MAXimum</i> = 15, <i>DEFault</i> = 8
Response	None.
Example	ETH:PORT1:SETT:PLEN 8
Notes	

Syntax	EThernet:PORT<Pt>:SETTings:PLENenght?
Description	This query returns the expected preamble length at 1Gbps and lower speeds.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SETT:PLEN? → 8
Note	

12.7.7 EThernet:PORT<Pt>:SETTings:IPViolations

Syntax	EThernet:PORT<Pt>:SETTings:IPViolations <enable>
Description	This command sets ignore preamble violations.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SETT:IPV ON
Note	

Syntax	EThernet:PORT<Pt>:SETTings:IPViolations?
Description	This query returns ignore preamble violations.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:IPV? → 1
Note	

12.7.8 EThernet:PORT<Pt>:SETTings:ILThreshold

Syntax	EThernet:PORT<Pt>:SETTings:ILThreshold <length>
Description	This command sets the IFG lower threshold.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum = 8, MAXimum = 35, DEFault = 12</i>
Response	None.
Example	ETH:PORT1:SETT:ILT 12
Note	

Syntax	EThernet:PORT<Pt>:SETTings:ILThreshold?
Description	This query returns the IFG lower threshold.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SETT:ILT? → 12
Note	

12.7.9 EThernet:PORT<Pt>:SETTings:FIViolations

Syntax	EThernet:PORT<Pt>:SETTings:FIViolations <enable>
Description	This command enables or disables filter IFG violations caused by master/slave clock synchronization.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:PORT1:SETT:FIV ON
Note	

Syntax	EThernet:PORT<Pt>:SETTings:FIViolations?
Description	This query returns whether the filter IFG violations caused by master/slave clock synchronization is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:FIV? → 1
Note	

12.7.10 ETHernet:PORT<Pt>:SETTings:JFSize

Syntax	ETHernet:PORT<Pt>:SETTings:JFSize <length>
Description	This command sets the jumbo frame size upper limit.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum = 1518, MAXimum = 16000, DEFault = 9018</i>
Response	None.
Example	ETH:PORT1:SETT:JFS 9018
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:JFSize?
Description	This query returns the jumbo frame size upper limit.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SETT:JFS? → 9018
Note	

12.7.11 ETHernet:PORT<Pt>:SETTings:FECDeGrade:ENABle

Syntax	ETHernet:PORT<Pt>:SETTings:FECDeGrade:ENABle <enable>
Description	This command enables or disables FEC Degrade SER Detection.
Parameters	<Pt> = Port number <enable> = <BOOLEAN RESPONSE DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SETT:FECDeGrade:ENAB ON
Note	This parameter can be used on 400G.

Syntax	ETHernet:PORT<Pt>:SETTings:FECDeGrade:ENABle?
Description	This query returns whether FEC Degrade SER Detection is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:FECDeGrade:ENAB? → 1
Note	This parameter can be used on 400G.

12.7.12 ETHernet:PORT<Pt>:SETTings:FECDeGrade:INTerval

Syntax	ETHernet:PORT<Pt>:SETTings:FECDeGrade:INTerval <value>
Description	This command sets the FEC Degrade Interval.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 2, MAXimum = 65534, DEFault = 8192</i>
Response	None.
Example	ETH:PORT1:SETT:FECDeGrade:INT 2
Note	This parameter can be used on 400G.

Syntax	ETHernet:PORT<Pt>:SETTings:FECDeGrade:INTerval?
Description	This query returns the FEC Degrade Interval.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SETT:FECDeGrade:INT? → 2
Note	This parameter can be used on 400G.

12.7.13 ETHernet:PORT<Pt>:SETTings:FECDeGrade:ACTivate:THReshold

Syntax	ETHernet:PORT<Pt>:SETTings:FECDeGrade:ACTivate:THReshold <value>
Description	This command sets the FEC Degradе Activate Threshold.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 65535, DEFault = 2780</i>
Response	None.
Example	ETH:PORT1:SETT:FECD:ACT:THR 1
Note	This parameter can be used on 400G.

Syntax	ETHernet:PORT<Pt>:SETTings:FECDeGrade:ACTivate:THReshold?
Description	This query returns the FEC Degradе Activate Threshold.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SETT:FECD:ACT:THR? → 1
Note	This parameter can be used on 400G.

12.7.14 ETHernet:PORT<Pt>:SETTings:FECDeGrade:DEACTivate:THReshold

Syntax	ETHernet:PORT<Pt>:SETTings:FECDeGrade:DEACTivate:THReshold <value>
Description	This command sets the FEC Degradе Deactivate Threshold.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 65535, DEFault = 1390</i>
Response	None.
Example	ETH:PORT1:SETT:FECD:DEAC:THR 1
Note	This parameter can be used on 400G.

Syntax	ETHernet:PORT<Pt>:SETTings:FECDeGrade:DEACTivate:THReshold?
Description	This query returns the FEC Degradе Deactivate Threshold.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SETT:FECD:DEAC:THR? → 1
Note	This parameter can be used on 400G.

12.7.15 ETHernet:PORT<Pt>:SETTings:FECDeGrade:RDEGrade

Syntax	ETHernet:PORT<Pt>:SETTings:FECDeGrade:RDEGrade <enable>
Description	This command enables or disables respond to Remote Degradе signal.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SETT:FECD:RDEG ON
Note	This parameter can be used on 400G.

Syntax	ETHernet:PORT<Pt>:SETTings:FECDeGrade:RDEGrade?
Description	This query returns whether respond to Remote Degradе signal is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:FECD:RDEG? → 1
Note	This parameter can be used on 400G.

12.7.16 ETHernet:PORT<Pt>:SETTings:ERFault

Syntax	ETHernet:PORT<Pt>:SETTings:ERFault <enable>
Description	This command enables or disables remote fault detection in Autonegotiation.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>ON</i>
Response	None.
Example	ETH:PORT1:SETT:ERF ON
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:ERFault?
Description	This query returns whether remote fault detection in Autonegotiation is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:ERF? → 1
Note	

12.7.17 ETHernet:PORT<Pt>:SETTings:FRESults

Syntax	ETHernet:PORT<Pt>:SETTings:FRESults <format>
Description	This command sets the format of the results.
Parameters	<Pt> = Port number <format> = <CHARACTER PROGRAM DATA> SI: SI prefix notation ENG: Engineering exponent notation SCI: Scientific exponent notation UNF: Unformatted <i>DEFault</i> = <i>SI</i>
Response	None.
Example	ETH:PORT1:SETT:FRES ENG
Note	This only affects the GUI and reports. This setting applies to all ports.

Syntax	ETHernet:PORT<Pt>:SETTings:FRESults?
Description	This query returns the format of the results.
Parameter	<Pt> = Port number
Response	<format> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:SETT:FRES? → ENG
Note	This setting applies to all ports.

12.7.18 ETHernet:PORT<Pt>:SETTings:ACISetup

Syntax	ETHernet:PORT<Pt>:SETTings:ACISetup <enable>
Description	This command enables or disables allow changes to interface setup while a test is running.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	ETH:PORT1:SETT:ACIS ON
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:ACISetup?
Description	This query returns whether it is enabled or disabled to allow changes to interface setup while a test is running.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:ACIS? → 1
Note	

12.7.19 ETHernet:PORT<Pt>:SETTings:ASTGenerator

Syntax	ETHernet:PORT<Pt>:SETTings:ASTGenerator <enable>
Description	This command enables or disables automatically start the traffic generator when measurement is started.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SETT:ASTG ON
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:ASTGenerator?
Description	This query returns whether automatically start the traffic generator is enabled or disabled when measurement is started.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:ASTG? → 1
Note	

12.7.20 ETHernet:PORT<Pt>:SETTings:BER:OBAMeasuring

Syntax	ETHernet:PORT<Pt>:SETTings:BER:OBAMeasuring <enable>
Description	This command enables or disables "Only show BER Alarms when measuring".
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SETT:BER:OBAM ON
Note	This setting applies to all ports.

Syntax	ETHernet:PORT<Pt>:SETTings:BER:OBAMeasuring?
Description	This query returns whether "Only show BER Alarms when measuring" is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:BER:OBAM? → 1
Note	This setting applies to all ports.

12.7.21 ETHernet:PORT<Pt>:SETTings:BER:IAFFilter

Syntax	ETHernet:PORT<Pt>:SETTings:BER:IAFFilter <enable>
Description	This command enables or disables "Include addresses in frame filter on receiver".
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:PORT1:SETT:BER:IAFF OFF
Note	This setting applies to all ports.

Syntax	ETHernet:PORT<Pt>:SETTings:BER:IAFFilter?
Description	This query returns whether "Include addresses in frame filter on receiver" is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:BER:IAFF? → 0
Note	This setting applies to all ports.

12.7.22 ETHernet:PORT<Pt>:SETTings:BER:CLFrames

Syntax	ETHernet:PORT<Pt>:SETTings:BER:CLFrames <enable>
Description	This command enables or disables "Count lost frames as pattern errors".
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SETT:BER:CLF ON
Note	This setting applies to all ports.

Syntax	ETHernet:PORT<Pt>:SETTings:BER:CLFrames?
Description	This query returns whether "Count lost frames as pattern errors" is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:BER:CLF? → 1
Note	This setting applies to all ports.

12.7.23 ETHernet:PORT<Pt>:SETTings:BER:HIDeframeloss

Syntax	ETHernet:PORT<Pt>:SETTings:BER:HIDeframeloss <enable>
Description	This command enables or disables "Ignore the Frame/Pattern loss secs on BERT statistics".
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SETT:BER:HID ON
Note	This setting applies to all ports.

Syntax	ETHernet:PORT<Pt>:SETTings:BER:HIDeframeloss?
Description	This query returns whether "Ignore the Frame/Pattern loss secs on BERT statistics" is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:BER:HID? → 1
Note	This setting applies to all ports.

12.7.24 ETHernet:PORT<Pt>:SETTings:CINBand[:ENABLE]

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand[:ENABLE] <enable>
Description	This command enables or disables in-band control.
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SETT:CINB ON
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand[:ENABle]?
Description	This query returns whether in-band control is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:CINB? → 1
Note	

12.7.25 ETHernet:PORT<Pt>:SETTings:CINBand:PASSword[:ENABle]

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:PASSword[:ENABle] <enable>
Description	This command enables or disables password of in-band control.
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SETT:CINB:PASS ON
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:PASSword[:ENABle]?
Description	This query returns whether password of in-band control is enabled or disabled.
Parameter	<Pt> = Port number
Response	None.
Example	ETH:PORT1:SETT:CINB:PASS? → 1
Note	

12.7.26 ETHernet:PORT<Pt>:SETTings:CINBand:PASSword:VALue

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:PASSword:VALue <value>
Description	This command sets password value of in-band control.
Parameter	<Pt> = Port number <value> = <STRING RESPONSE DATA>
Response	None.
Example	ETH:PORT1:SETT:CINB:PASS:VAL "Anritsu"
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:PASSword:VALue?
Description	This query returns the password value of in-band control.
Parameter	<Pt> = Port number
Response	<value> = <STRING RESPONSE DATA>
Example	ETH:PORT1:SETT:CINB:PASS:VAL? → "Anritsu"
Note	

12.7.27 ETHernet:PORT<Pt>:SETTings:CINBand:MAC:SOURce

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:MAC:SOURce <address>
Description	This command sets the MAC source address of in-band control.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:SETT:CINB:MAC:SOUR "00-50-C2-35-D2-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:MAC:SOURce?
Description	This query returns the MAC source address of in-band control.
Parameters	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:SETT:CINB:MAC:SOUR? → "00-50-C2-35-D2-EF"
Note	

12.7.28 ETHernet:PORT<Pt>:SETTings:CINBand:MAC:DEFault

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:MAC:DEFault <enable>
Description	This command enables or disables use of the default source MAC address of in-band control.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	ETH:PORT1:SETT:CINB:MAC:DEF ON
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:MAC:DEFault?
Description	This query returns whether the default source MAC address of in-band control is enabled or disabled.
Parameters	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:CINB:MAC:DEF? → 1
Note	

12.7.29 ETHernet:PORT<Pt>:SETTings:CINBand:IPV4:SOURce

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:IPV4:SOURce <address>
Description	This command sets the IPv4 source address of in-band control.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:PORT1:SETT:CINB:IPV4:SOUR "172.29.2.36"
Note	Only the character '.' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:IPV4:SOURce?
Description	This query returns the IPv4 source address of in-band control.
Parameters	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:SETT:CINB:IPV4:SOUR? → "172.29.2.36"
Note	

12.7.30 ETHernet:PORT<Pt>:SETTings:CINBand:DHCP[:ENABle]

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:DHCP[:ENABle] <enable>
Description	This command enables or disables use of DHCP of in-band control.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	ETH:PORT1:SETT:CINB:DHCP ON
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:DHCP[:ENABle]?
Description	This query returns whether use of DHCP of in-band control is enabled or disabled.
Parameters	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:CINB:DHCP? → 1
Note	

12.7.31 ETHernet:PORT<Pt>:SETTings:CINBand:IPV4:NETMask

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:IPV4:NETMask <mask>
Description	This command sets the IPv4 netmask of in-band control.
Parameters	<Pt> = Port number <mask> = <STRING PROGRAM DATA> IPv4 netmask
Response	None.
Example	ETH:PORT1:SETT:CINB:IPV4:NETM "255.255.255.0"
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:IPV4:NETMask?
Description	This query returns the IPv4 netmask of in-band control.
Parameters	<Pt> = Port number
Response	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:SETT:CINB:IPV4:NETM? → "255.255.255.0"
Note	

12.7.32 ETHernet:PORT<Pt>:SETTings:CINBand:IPV4:GATeway[:ENABle]

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:IPV4:GATeway[:ENABle] <enable>
Description	This command enables or disables use of the IPv4 gateway of in-band control.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SETT:CINB:IPV4:GAT ON
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:IPV4:GATeway[:ENABle]?
Description	This query returns whether use of the IPv4 gateway of in-band control is enabled or disabled.
Parameters	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SETT:CINB:IPV4:GAT? → 1
Note	

12.7.33 ETHernet:PORT<Pt>:SETTings:CINBand:IPV4:GATeway:ADDRess

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:IPV4:GATeway:ADDRess <address>
Description	This command sets the IPv4 default gateway of in-band control.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:PORT1:SETT:CINB:IPV4:GAT:ADDR "172.29.2.36"
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:IPV4:GATeway:ADDRess?
Description	This query returns the IPv4 default gateway of in-band control.
Parameters	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:SETT:CINB:IPV4:GAT:ADDR? → "172.29.2.36"
Note	

12.7.34 ETHernet:PORT<Pt>:SETTings:CINBand:VLAN:LCount

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:VLAN:LCount <levels>
Description	This command sets the number of active VLAN levels of in-band control.
Parameters	<Pt> = Port number <levels> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=2, DEFault=0</i>
Response	None.
Example	ETH:PORT1:SETT:CINB:VLAN:LC 2
Note	

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:VLAN:LCount?
Description	This query returns the number of active VLAN levels of in-band control.
Parameters	<Pt> = Port number
Response	<levels> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SETT:CINB:VLAN:LC? → 2
Note	

12.7.35 ETHernet:PORT<Pt>:SETTings:CINBand:VLAN:LEVel<Lv>:ID

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:VLAN:LEVel<Lv>:ID <number>
Description	This command sets the VLAN ID of in-band control.
Parameters	<Pt> = Port number <Lv> = VLAN level (1-N ¹) <number> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=4095, DEFault=0</i>
Response	None.
Example	ETH:PORT1:SETT:CINB:VLAN:LEV1:ID 1024
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.7.34). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame).

Syntax	ETHernet:PORT<Pt>:SETTings:CINBand:VLAN:LEVel<Lv>:ID?
Description	This query returns the VLAN ID of in-band control.
Parameters	<Pt> = Port number <Lv> = VLAN level (1-N)
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SETT:CINB:VLAN:LEV1:ID? → 1024
Note	

12.8 Filter

Generally eight separate filters are available for each port of the instrument. In the following section these filters are identified using the :FILTer<Ft> program mnemonic, where <Ft> = Filter number (1-8).

12.8.1 EThernet:PORT<Pt>:FILTer[:ENABle]

Syntax	EThernet:PORT<Pt>:FILTer[:ENABle] <enable>
Description	This command enables or disables filtering.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:PORT1:FILT ON
Note	This is the default node for EThernet:PORT<Pt>:FILTer

Syntax	EThernet:PORT<Pt>:FILTer[:ENABle]?
Description	This query returns whether the filtering is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Examples	ETH:PORT1:FILT? → 1
Note	This is the default node for EThernet:PORT<Pt>:FILTer?

12.8.2 EThernet:PORT<Pt>:FILTer:RESet

Syntax	EThernet:PORT<Pt>:FILTer:RESet
Description	This command resets the filter settings to the default values.
Parameter	<Pt> = Port number
Response	None.
Example	ETH:PORT1:FILT:RES
Note	Note this does not change EThernet:PORT<Pt>:FILTer[:ENABle]

12.8.3 EThernet:PORT<Pt>:FILTer:ENCapsulation

Syntax	EThernet:PORT<Pt>:FILTer:ENCapsulation <ether-type>, <snap>, <llc>
Description	This command sets the allowed encapsulation types.
Parameters	<Pt> = Port number <ether-type> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i> <snap> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i> <llc> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:FILT:ENC ON, OFF, ON
Notes	Setting all off will disable the encapsulation filter. For the encapsulation filter to be active, at least one of the eight available general filters must be enabled. The general filters are enabled using the EThernet:PORT<Pt>:FILTer:FILTer<Ft>[:ENABle] command (see 12.8.5).

Syntax	ETHernet:PORT<Pt>:FILTer:ENCapsulation?
Description	This query returns the allowed encapsulation types.
Parameter	<Pt> = Port number
Response	<ether-type> = <BOOLEAN RESPONSE DATA>
	<snap> = <BOOLEAN RESPONSE DATA>
	<llc> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:FILT:ENC? → 1, 0, 1
Note	

12.8.4 ETHernet:PORT<Pt>:FILTer:PROTOcols

Syntax	ETHernet:PORT<Pt>:FILTer:PROTOcols <type>,<filter>[,<mask>]
Description	This commands enables or disables protocol type filters and masks.
Parameters	<Pt> = Port number
	<type> = <CHARACTER PROGRAM DATA> SMAC: Source MAC Address DMAC: Destination MAC Address EMSM: EoMPLS (MPLS-TP) Source MAC Address EMDM: EoMPLS (MPLS-TP) Destination MAC Address MIMSMAC: MiM (PBB) Source MAC Address MIMDMAC: MiM (PBB) Destination MAC Address BTAG: MiM (PBB) B-Tag ITAG: MiM (PBB) I-Tag SIV4: Source IPv4 DIV4: Destination IPv4 SIV6: Source IPv6 HIV6: Hop destination IPv6 FIV6: Final destination IPv6 SPOR: Source TCP/UDP port DPOR: Destination TCP/UDP port POFF: Pattern/Offset MPLSx: MPLS where x is the MPLS level (1-8) VLANx: VLAN ID where x is the VLAN level (1-8)
	<filter> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
	<mask> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Examples	ETH:PORT1:FILT:PROT MPLS4, ON
	ETH:PORT1:FILT:PROT MPLS4, ON, ON
Note	<mask> can only be enabled if <filter> is enabled.

Syntax	ETHernet:PORT<Pt>:FILTer:PROTOcols? <type>
Description	This query returns whether the protocol type filters and masks are enabled or disabled.
Parameters	<Pt> = Port number
	<type> = <CHARACTER PROGRAM DATA>
Response	<filter> = <BOOLEAN RESPONSE DATA>
	<mask> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:FILT:PROT? MPLS4 → 1, 1
Note	

12.8.5 EThernet:PORT<Pt>:FILTer:FILTer<Ft>[:ENABLE]

Syntax	EThernet:PORT<Pt>:FILTer:FILTer<Ft>[:ENABLE] <enable>
Description	This command enables or disables the specific filter.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8) (see 12.8)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1 ON
Note	This is the default node for EThernet:PORT<Pt>:FILTer:FILTer<Ft>

Syntax	EThernet:PORT<Pt>:FILTer:FILTer<Ft>[:ENABLE]?
Description	This query returns whether the specific filter is enabled or disabled.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Examples	ETH:PORT1:FILT:FILT1? → 1
Note	This is the default node for EThernet:PORT<Pt>:FILTer:FILTer<Ft>?

12.8.6 EThernet:PORT<Pt>:FILTer:FILTer<Ft>:SMAC

Syntax	EThernet:PORT<Pt>:FILTer:FILTer<Ft>:SMAC <filter>[,<mask>]
Description	This command sets the MAC source filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <STRING PROGRAM DATA>
	<mask> = <STRING PROGRAM DATA>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:SMAC "00-50-C2-35-D2-EF" ETH:PORT1:FILT:FILT1:SMAC "00-50-C2-35-D2-EF", "FF-FF-FF-FF-FF-FF"
Note	Only the character '-' is accepted as separator.

Syntax	EThernet:PORT<Pt>:FILTer:FILTer<Ft>:SMAC?
Description	This query returns the MAC source filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <STRING RESPONSE DATA>
	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:SMAC? → "00-50-C2-35-D2-EF", "FF-FF-FF-FF-FF-FF"
Note	

12.8.7 EThernet:PORT<Pt>:FILTer:FILTer<Ft>:DMAC

Syntax	EThernet:PORT<Pt>:FILTer:FILTer<Ft>:DMAC <filter>[,<mask>]
Description	This command sets the MAC destination filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <STRING PROGRAM DATA>
	<mask> = <STRING PROGRAM DATA>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:DMAC "00-50-C2-35-D2-EF" ETH:PORT1:FILT:FILT1:DMAC "00-50-C2-35-D2-EF", "FF-FF-FF-FF-FF-FF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:DMAC?
Description	This query returns the MAC destination filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <STRING RESPONSE DATA>
	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:DMAC? → "00-50-C2-35-D2-EF", "FF-FF-FF-FF-FF-FF"
Note	

12.8.8 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:EMSMac

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:EMSMac <filter>[,<mask>]
Description	This command sets the EoMPLS MAC source filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <STRING PROGRAM DATA>
	<mask> = <STRING PROGRAM DATA>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:EMSM "00-50-C2-35-D2-EF" ETH:PORT1:FILT:FILT1:EMSM "00-50-C2-35-D2-EF", "FF-FF-FF-FF-FF-FF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:EMSMac?
Description	This query returns the EoMPLS MAC source filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <STRING RESPONSE DATA>
	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:EMSM? → "00-50-C2-35-D2-EF", "FF-FF-FF-FF-FF-FF"
Note	

12.8.9 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:EMDMac

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:EMDMac <filter>[,<mask>]
Description	This command sets the EoMPLS MAC destination filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <STRING PROGRAM DATA>
	<mask> = <STRING PROGRAM DATA>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:EMDM "00-50-C2-35-D2-EF" ETH:PORT1:FILT:FILT1:EMDM "00-50-C2-35-D2-EF", "FF-FF-FF-FF-FF-FF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:EMDMac?
Description	This query returns the EoMPLS MAC destination filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <STRING RESPONSE DATA>
	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:EMDM? → "00-50-C2-35-D2-EF", "FF-FF-FF-FF-FF-FF"
Note	

12.8.10 ETHernet:PORT<Pt>:FILTer:POFFset

Syntax	ETHernet:PORT<Pt>:FILTer:POFFset <offset>
Description	This commands sets the pattern offset for the pattern filter.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 15956, DEFault = 2</i>
Response	None.
Example	ETH:PORT1:FILT:POFF 3
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:POFFset?
Description	This query returns the pattern offset for the pattern filter.
Parameter	<Pt> = Port number
Response	<offset> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:POFF? → 3
Note	

12.8.11 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:PATtern

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:PATtern <filter>[,<mask>]
Description	This command sets the Pattern filter and mask.
Parameters	<Pt> = Port number <Ft> = Filter number (1-8) <filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = $2^{32} - 1$, DEFault = 0</i> <mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = $2^{32} - 1$, DEFault = 0</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:PATT 170 ETH:PORT1:FILT:FILT1:PATT #HAA, #HFF
Note	If the pattern is shorter than 32 bit it will be padded with '0' until a length of 32 bit is reached. (e.i., "101" becomes "00000000000000000000000000000000101")

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:PATtern?
Description	This query returns the Pattern filter and mask.
Parameters	<Pt> = Port number <Ft> = Filter number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA> <mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:PATT? → 170, 256
Note	

12.8.12 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:SPORT

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:SPORT <filter>[,<mask>]
Description	This command sets the TCP/UDP source port filter and mask.
Parameters	<Pt> = Port number <Ft> = Filter number (1-8) <filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 65535, DEFault = 0</i> <mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 65535, DEFault = 65535</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:SPOR 81 ETH:PORT1:FILT:FILT1:SPOR 1, 1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:SPORt?
Description	This query returns the TCP/UDP source port filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:SPOR? → 1,1
Note	

12.8.13 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:DPORT

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:DPORT <filter>[,<mask>]
Description	This command sets the TCP/UDP destination port filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <NUMERIC PROGRAM DATA>
	<i>MINimum = 0, MAXimum = 65535, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA>
Response	<i>MINimum = 0, MAXimum = 65535, DEFault = 0</i>
	None.
Examples	ETH:PORT1:FILT:FILT1:DPOR 81
	ETH:PORT1:FILT:FILT1:DPOR 1,1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:DPORT?
Description	This query returns the TCP/UDP destination port filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:DPOR? → 1,1
Note	

12.8.14 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:SIV4

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:SIV4 <filter>[,<mask>]
Description	This command sets the IPv4 source filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <STRING PROGRAM DATA>
	<mask> = <STRING PROGRAM DATA>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:SIV4 "192.168.0.1"
	ETH:PORT1:FILT:FILT1:SIV4 "192.168.0.1", "255.255.0.0"
Note	Only the character '.' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:SIV4?
Description	This query returns the IPv4 source filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <STRING RESPONSE DATA>
	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:SIV4? → "192.168.0.1", "255.255.0.0"
Note	

12.8.15 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:DIV4

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:DIV4 <filter>[,<mask>]
Description	This command sets the IPv4 destination filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <STRING PROGRAM DATA>
	<mask> = <STRING PROGRAM DATA>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:DIV4 "192.168.0.1"
	ETH:PORT1:FILT:FILT1:DIV4 "192.168.0.1", "255.255.0.0"
Note	Only the character '.' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:DIV4?
Description	This query returns the IPv4 destination filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <STRING RESPONSE DATA>
	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:DIV4? → "192.168.0.1", "255.255.0.0"
Note	

12.8.16 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:SIV6

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:SIV6 <filter>[,<mask>]
Description	This command sets the IPv6 source filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <STRING PROGRAM DATA>
	<mask> = <STRING PROGRAM DATA>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:SIV6 "2002:0000:0000:0000:0000:0000:0000:001F"
	ETH:PORT1:FILT:FILT1:SIV6 "2002:0000:0000:0000:0000:0000:0000:0000", "FFFF:0000:0000:0000:0000:0000:0000:0000"
Note	Only the character ':' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:SIV6?
Description	This query returns the IPv6 source filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <STRING RESPONSE DATA>
	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:SIV6? → "2002:0000:0000:0000:0000:0000:0000:0000", "FFFF:0000:0000:0000:0000:0000:0000:0000"
Note	

12.8.17 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:HIV6

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:HIV6 <filter>[,<mask>]
Description	This command sets the IPv6 hop destination filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <STRING PROGRAM DATA>
	<mask> = <STRING PROGRAM DATA>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:HIV6 "2002:0000:0000:0000:0000:0000:0000:001F" ETH:PORT1:FILT:FILT1:HIV6 "2002:0000:0000:0000:0000:0000:0000:0000", "FFFF:0000:0000:0000:0000:0000:0000:0000"
Note	Only the character ':' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:HIV6?
Description	This query returns the IPv6 hop destination filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <STRING RESPONSE DATA>
	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:HIV6? → "2002:0000:0000:0000:0000:0000:0000:0000", "FFFF:0000:0000:0000:0000:0000:0000:0000"
Note	

12.8.18 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:FIV6

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:FIV6 <filter>[,<mask>]
Description	This command sets the IPv6 final destination filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <STRING PROGRAM DATA>
	<mask> = <STRING PROGRAM DATA>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:FIV6 "2002:0000:0000:0000:0000:0000:0000:001F" ETH:PORT1:FILT:FILT1:FIV6 "2002:0000:0000:0000:0000:0000:0000:0000", "FFFF:0000:0000:0000:0000:0000:0000:0000"
Note	Only the character ':' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:FIV6?
Description	This query returns the IPv6 final destination filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <STRING RESPONSE DATA>
	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:FIV6? → "2002:0000:0000:0000:0000:0000:0000:0000", "FFFF:0000:0000:0000:0000:0000:0000:0000"
Note	

12.8.19 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:LABel

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:LABel <filter>[,<mask>]
Description	This command sets the MPLS level filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1048575, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1048575, DEFault = 1048575</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MPLS1:LAB 10
	ETH:PORT1:FILT:FILT1:MPLS1:LAB 10, 10
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:LABel?
Description	This query returns the MPLS level filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MPLS1:LAB? → 10,10
Note	

12.8.20 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:EBITs

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:EBITs <filter>[,<mask>]
Description	This command sets the MPLS experimental bits filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 7</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MPLS1:EBIT 3
	ETH:PORT1:FILT:FILT1:MPLS1:EBIT 3, 1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:EBITs?
Description	This query returns the MPLS experimental bits filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MPLS1:EBIT? → 3,1
Note	

12.8.21 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:BOLStack

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:BOLStack <filter>[,<mask>]
Description	This command sets the MPLS bottom of label stack filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1, DEFault = 1</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MPLS1:BOLS 1
	ETH:PORT1:FILT:FILT1:MPLS1:BOLS 1, 1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:BOLStack?
Description	This query returns the MPLS bottom of label stack filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MPLS1:BOLS? → 1,1
Note	

12.8.22 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:TTL

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:TTL <filter>[,<mask>]
Description	This command sets the MPLS TTL filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 255, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 255, DEFault = 255</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MPLS1:TTL 3
	ETH:PORT1:FILT:FILT1:MPLS1:TTL 3, 1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MPLS<Lv>:TTL?
Description	This query returns the MPLS TTL filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MPLS1:TTL? → 3,1
Note	

12.8.23 EThernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:ID

Syntax	EThernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:ID <filter>[,<mask>]
Description	This command sets the VLAN ID filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 4095, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 4095, DEFault = 4095</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:VLAN1:ID 3
	ETH:PORT1:FILT:FILT1:VLAN1:ID 3, 1
Note	

Syntax	EThernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:ID?
Description	This query returns the VLAN ID filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:VLAN1:ID? → 3,1
Note	

12.8.24 EThernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:CFI

Syntax	EThernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:CFI <filter>[,<mask>]
Description	This command sets the VLAN CFI filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1, DEFault = 1</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:VLAN1:CFI 1
	ETH:PORT1:FILT:FILT1:VLAN1:CFI 1, 1
Note	¹ CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition.
	² This command is as same as EThernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:DEI.

Syntax	EThernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:CFI?
Description	This query returns the VLAN CFI filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:VLAN1:CFI? → 3,1
Note	¹ CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition.
	² This command is as same as EThernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:DEI?.

12.8.25 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:DEI

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:DEI <filter>[,<mask>]
Description	This command sets the VLAN DEI filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1, DEFault = 1</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:VLAN1:DEI 1 ETH:PORT1:FILT:FILT1:VLAN1:DEI 1, 1
Note	¹ CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition.
	² This command is as same as ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:CFI.

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:DEI?
Description	This query returns the VLAN DEI filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:VLAN1:DEI? → 3,1
Note	¹ CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition.
	² This command is as same as ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:CFI?.

12.8.26 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:PRiority

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:PRiority <filter>[,<mask>]
Description	This command sets the VLAN priority filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 7</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:VLAN1:PR 3 ETH:PORT1:FILT:FILT1:VLAN1:PR 3, 1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:VLAN<Lv>:PRiority?
Description	This query returns the VLAN priority filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<Lv> = Level number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:VLAN1:PR? → 3,1
Note	

12.8.27 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMSMac

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMSMac <filter>[,<mask>]
Description	This command sets the MiM source MAC address filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <STRING PROGRAM DATA>
	<mask> = <STRING PROGRAM DATA>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MMSM "00-50-C2-35-D2-EF" ETH:PORT1:FILT:FILT1:MMSM "00-50-C2-35-D2-EF", "FF-FF-FF-FF-FF-FF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMSMac?
Description	This query returns the MiM source MAC address filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <STRING RESPONSE DATA>
	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MMSM? → "00-50-C2-35-D2-EF", "FF-FF-FF-FF-FF-FF"
Note	

12.8.28 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMDMac

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMDMac <filter>[,<mask>]
Description	This command sets the MiM destination MAC filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <STRING PROGRAM DATA>
	<mask> = <STRING PROGRAM DATA>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MMDM "00-50-C2-35-D2-EF" ETH:PORT1:FILT:FILT1:MMDM "00-50-C2-35-D2-EF", "FF-FF-FF-FF-FF-FF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMDMac?
Description	This query returns the MiM destination MAC filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <STRING RESPONSE DATA>
	<mask> = <STRING RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MMDM? → "00-50-C2-35-D2-EF", "FF-FF-FF-FF-FF-FF"
Note	

12.8.29 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMBTAG:ID

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMBTAG:ID <filter>[,<mask>]
Description	This command sets the MiM B-Tag VLAN ID filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 4095, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 4095, DEFault = 4095</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MMBTAG:ID 3 ETH:PORT1:FILT:FILT1:MMBTAG:ID 3, 1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMBTAG:ID?
Description	This query returns the MiM B-Tag VLAN ID filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MMBTAG:ID? → 3,1
Note	

12.8.30 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMBTAG:PRiority

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMBTAG:PRiority <filter>[,<mask>]
Description	This command sets the MiM B-Tag Priority (PCP) filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 7</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MMBTAG:PR 3
	ETH:PORT1:FILT:FILT1:MMBTAG:PR 3, 1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMBTAG:PRiority?
Description	This query returns the MiM B-Tag Priority (PCP) filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MMBTAG:PR? → 3,1
Note	

12.8.31 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMBTAG:DEI

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMBTAG:DEI <filter>[,<mask>]
Description	This command sets the MiM B-Tag DEI filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1, DEFault = 1</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MMBTAG:DEI 1
	ETH:PORT1:FILT:FILT1:MMBTAG:DEI 1, 1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMBTAG:DEI?
Description	This query returns the MiM B-Tag DEI filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MMBTAG:DEI? → 1,1
Note	

12.8.32 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:ID

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:ID <filter>[,<mask>]
Description	This command sets the MiM I-Tag Service ID filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 16777215, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 16777215, DEFault = 16777215</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MMITAG:ID 3
	ETH:PORT1:FILT:FILT1:MMITAG:ID 3, 1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:ID?
Description	This query returns the MiM I-Tag Service ID filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MMITAG:ID? → 3,1
Note	

12.8.33 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:PRiority

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:PRiority <filter>[,<mask>]
Description	This command sets the MiM I-Tag Priority (PCP) filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 7</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MMITAG:PR 3
	ETH:PORT1:FILT:FILT1:MMITAG:PR 3, 1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:PRiority?
Description	This query returns the MiM I-Tag Priority (PCP) filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MMITAG:PR? → 3,1
Note	

12.8.34 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:DEI

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:DEI <filter>[,<mask>]
Description	This command sets the MiM I-Tag DEI filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1, DEFault = 1</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MMITAG:DEI 1
	ETH:PORT1:FILT:FILT1:MMITAG:DEI 1, 1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:DEI?
Description	This query returns the MiM I-Tag DEI filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MMITAG:DEI? → 1,1
Note	

12.8.35 ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:UCA

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:UCA <filter>[,<mask>]
Description	This command sets the MiM I-Tag UCA filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
	<filter> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1, DEFault = 0</i>
	<mask> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1, DEFault = 1</i>
Response	None.
Examples	ETH:PORT1:FILT:FILT1:MMITAG:UCA 1
	ETH:PORT1:FILT:FILT1:MMITAG:UCA 1, 1
Note	

Syntax	ETHernet:PORT<Pt>:FILTer:FILTer<Ft>:MMITAG:UCA?
Description	This query returns the MiM I-Tag UCA filter and mask.
Parameters	<Pt> = Port number
	<Ft> = Filter number (1-8)
Response	<filter> = <NR1 NUMERIC RESPONSE DATA>
	<mask> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:FILT:FILT1:MMITAG:UCA? → 1,1
Note	

12.9 Thresholds

12.9.1 EThernet:PORT<Pt>:THResholds[:ENABle]

Syntax	EThernet:PORT<Pt>:THResholds[:ENABle] <enable>
Description	This command enables or disables thresholds.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:PORT1:THR ON
Note	This is the default node for EThernet:PORT<Pt>:THResholds

Syntax	EThernet:PORT<Pt>:THResholds[:ENABle]?
Description	This query returns whether thresholds are enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Examples	ETH:PORT1:THR? → 1
Note	This is the default node for EThernet:PORT<Pt>:THResholds?

12.9.2 EThernet:PORT<Pt>:THResholds:SElect

Syntax	EThernet:PORT<Pt>:THResholds:SElect <type>, <enable>
Description	This command enables or disables the specific threshold type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> ALL: All thresholds UTIL: Utilization THR: Throughput ERR: Errored frames Measurement thresholds: COL: Collision rate UNI: Unicast frames MULTI: Multicast frames BROAD: Broadcast frames PAUSE: Pause frames FRAG: Fragmented frames UNDER: Undersized frames OVER: Oversized frames FCS: FCS errored frames IFG: IFG violations PRE: Preamble violations DIFF: Difference Tx-Rx DIFFO: Same as DIFF OVRFCSErr: Oversized & FCS Errored frames IPCHKSUM: IP checksum errored frames <i>DEFault = ALL</i> <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:THR:SEL UTIL, ON
Note	Measurement thresholds are only active when a measurement is running.

Syntax	ETHernet:PORT<Pt>:THResholds:SElect? <type>
Description	This query returns whether the specific threshold type is enabled or disabled.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA>
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:THR:SEL? UTIL → 1
Note	

12.9.3 ETHernet:PORT<Pt>:THResholds:VALue

Syntax	ETHernet:PORT<Pt>:THResholds:VALue <type>, <compare>, <value>
Description	This command sets the level for the specific threshold type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> UTIL: Utilization¹ THR: Throughput² ERR: Errored frames Measurement thresholds: COL: Collision rate UNI: Unicast frames MULTI: Multicast frames BROAD: Broadcast frames PAUSE: Pause frames FRAG: Fragmented frames UNDER: Undersized frames OVER: Oversized frames FCS: FCS errored frames IFG: IFG violations PRE: Preamble violations DIFF: Difference Tx-Rx³ DIFFO: Same as DIFF OVRFCSErr: Oversized & FCS Errored frames IPCHKSUM: IP checksum errored frames <compare> = <CHARACTER PROGRAM DATA> GT: Greater than LT: Less than GTEQ: Greater than or equal to LTEQ: Less than or equal to <i>DEFault = LT</i> <value> = <NUMERIC PROGRAM DATA> Absolute values: Decimals are rounded. Maximum is 4000000000 Percentage values: Allows one decimal, Maximum is 100.0 <i>DEFault = 0, MINimum = 0</i> <i>Allowed Suffixes = PCT</i>
Response	None.
Example	ETH:PORT1:THR:VAL UTIL, GT, 10.5PCT
Notes	Measurement thresholds are only active when a measurement is running. ¹ Utilization only supports percentage values. ² Throughput only supports absolute values, the unit is MBPS, and has one decimal. Maximum = 10000.0 ³ Difference only supports absolute count values.

Syntax	ETHernet:PORT<Pt>:THResholds:VALue? <type>
Description	This query returns the level for the specific threshold type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA>
Response	<compare> = <CHARACTER RESPONSE DATA> <value> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:THR:VAL? UTIL → GT, 10.5PCT
Note	

12.9.4 ETHernet:PORT<Pt>:THResholds:FEC:SYMbolerror:RATE

Syntax	ETHernet:PORT<Pt>:THResholds:FEC:SYMbolerror:RATE <ratio>
Description	This command sets the FEC symbol error rate thresholds.
Parameters	<Pt> = Port number <ratio> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.00, MAXimum = 1.00, DEFault = 0.00</i>
Response	None.
Example	ETH:PORT1:THR:FEC:SYM:RAT 0.000015 ETH:PORT1:THR:FEC:SYM:RAT 15e-06
Note	This parameter can be used on 400G.

Syntax	ETHernet:PORT<Pt>:THResholds:FEC:SYMbolerror:RATE?
Description	This query returns FEC symbol error rate thresholds.
Parameter	<Pt> = Port number <ratio> = <NR3 NUMERIC RESPONSE DATA> <i>MINimum = 0.00, MAXimum = 1.00, DEFault = 0.00</i>
Examples	ETH:PORT1:THR:FEC:SYM:RAT? → 15e-06
Note	

12.9.5 ETHernet:PORT<Pt>:THResholds:FEC:CW:DISTriBution

Syntax	ETHernet:PORT<Pt>:THResholds:FEC:CW:DISTriBution <value>
Description	This command sets the FEC CW Distribution thresholds.
Parameters	<Pt> = Port number <value> = <CHARACTER RESPONSE DATA> NONE: None. 1-15: Symbol Error Count (1 - 15). <i>DEFault = 10</i>
Response	None.
Example	ETH:PORT1:THR:FEC:CW:DIST 1
Note	This parameter can be used on 400G.

Syntax	ETHernet:PORT<Pt>:THResholds:FEC:CW:DISTriBution?
Description	This query returns FEC CW Distribution thresholds.
Parameter	<Pt> = Port number <value> = <CHARACTER RESPONSE DATA>
Examples	ETH:PORT1:THR:FEC:CW:DIST? → 1
Note	

12.10 SyncE

12.10.1 ETHernet:SYNCe:PTHRough:FCAPture

Syntax	ETHernet:SYNCe:PTHRough:FCAPture <enable>
Description	This command enables or disables SyncE frame capture when the ports are in pass-through mode.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:SYNC:PTHR:FCAP OFF
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:SYNCe:PTHRough:FCAPture?
Description	This query returns whether SyncE frame capture is enabled or disabled when the ports are in pass-through mode.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SYNC:PTHR:FCAP? → 0
Note	This command can be used in V2.00 or later.

12.10.2 ETHernet:PORT<Pt>:SYNCe:PTHRough:QLEVel[:ENABLE]

Syntax	ETHernet:PORT<Pt>:SYNCe:PTHRough:QLEVel[:ENABLE] <enable>
Description	This command enables or disables modification of quality level in SSM messages.
Parameters	<Pt> = Port number Port number 1 denotes messages passing from port 1 to port 2 Port number 2 denotes messages passing from port 2 to port 1 <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SYNC:PTHR:QLEV OFF
Note	This is the default node for ETHernet:PORT<Pt>:SYNCe:PTHRough:QLEVel This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:SYNCe:PTHRough:QLEVel[:ENABLE]?
Description	This query returns whether modification of quality level in SSM messages is enabled or disabled.
Parameter	<Pt> = Port number Port number 1 denotes messages passing from port 1 to port 2 Port number 2 denotes messages passing from port 2 to port 1
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SYNC:PTHR:QLEV? → 0
Note	This command can be used in V2.00 or later.

12.10.3 ETHernet:PORT<Pt>:SYNCe:PTHRough:QLEVel:USER

Syntax	ETHernet:PORT<Pt>:SYNCe:PTHRough:QLEVel:USER <level>
Description	This command sets the quality level to be inserted in SSM messages.
Parameters	<Pt> = Port number <level> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=15, DEFault=0</i>
Response	None.
Example	ETH:PORT1:SYNC:PTHR:QLEV:USER 0
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:SYNCe:PTHRough:QLEVel:USER?
Description	This query returns the quality level to be inserted in SSM messages.
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SYNC:PTHR:QLEV:USER? → 0
Note	This command can be used in V2.00 or later.

12.10.4 ETHernet:PORT<Pt>:SYNCe[:ENABLE]

Syntax	ETHernet:PORT<Pt>:SYNCe[:ENABLE] <enable>
Description	This command enables or disables SyncE.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SYNC ON
Note	This is the default node for ETHernet:PORT<Pt>:SYNCe

Syntax	ETHernet:PORT<Pt>:SYNCe[:ENABLE]?
Description	This query returns whether SyncE is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SYNC? → 1
Note	

12.10.5 ETHernet:PORT<Pt>:SYNCe:MODE

Syntax	ETHernet:PORT<Pt>:SYNCe:MODE <mode>
Description	This command sets the SyncE operation mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> MONitor : Non-synchronous/Monitor-only mode SYNCronous : Active synchronous mode <i>DEFault = MONitor</i>
Response	None.
Example	ETH:PORT1:SYNC:MODE MON
Note	

Syntax	ETHernet:PORT<Pt>:SYNCe:MODE?
Description	This query returns the SyncE operation mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:SYNC:MODE? → SYNC
Note	

12.10.6 ETHernet:PORT<Pt>:SYNCe:FCAPture

Syntax	ETHernet:PORT<Pt>:SYNCe:FCAPture <enable>
Description	This command enables or disables SyncE frame capture.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SYNC:FCAP OFF
Note	

Syntax	ETHernet:PORT<Pt>:SYNCe:FCAPture?
Description	This query returns whether SyncE frame capture is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SYNC:FCAP? → 1
Note	

12.10.7 ETHernet:PORT<Pt>:SYNCe:QLEVel

Syntax	ETHernet:PORT<Pt>:SYNCe:QLEVel <qualityLevel>
Description	This command sets the quality level of the transmitter clock.
Parameters	<Pt> = Port number <qualityLevel> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=15, DEFault=0</i>
Response	None.
Example	ETH:PORT1:SYNC:QLEV 0
Note	

Syntax	ETHernet:PORT<Pt>:SYNCe:QLEVel?
Description	This query returns configured clock quality level.
Parameter	<Pt> = Port number
Response	<qualityLevel> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SYNC:QLEV? → 0
Note	

12.10.8 ETHernet:PORT<Pt>:SYNCe:MAC

Syntax	ETHernet:PORT<Pt>:SYNCe:MAC <address>
Description	This command sets the MAC source address for transmitted ESMC messages.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:SYNC:MAC "00-50-C2-35-D2-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:SYNCe:MAC?
Description	This query returns the MAC source address for transmitted ESMC messages.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:SYNC:MAC? → "00-50-C2-35-D2-EF"
Note	

12.10.9 ETHernet:PORT<Pt>:SYNCe:MAC:AUTO

Syntax	ETHernet:PORT<Pt>:SYNCe:MAC:AUTO <automatic>
Description	This command enables or disables automatic generation of source MAC address.
Parameters	<Pt> = Port number <automatic> = <CHARACTER PROGRAM DATA> ON: Lock the MAC parameter to the value of default MAC source address. OFF: Unlock the MAC parameter value. <i>DEFault = ON</i>
Response	None.
Example	ETH:PORT1:SYNC:MAC:AUTO ON
Note	

Syntax	ETHernet:PORT<Pt>:SYNCe:MAC:AUTO?
Description	This query returns whether automatic generation of source MAC address is enabled or disabled.
Parameter	<Pt> = Port number
Response	<automatic> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:SYNC:MAC:AUTO? → ON
Note	

12.10.10 ETHernet:PORT<Pt>:SYNCe:EFLag

Syntax	ETHernet:PORT<Pt>:SYNCe:EFLag <behavior>
Description	This command sets the SyncE Event flag behavior.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> DYNAMIC : Event flag bit is dynamically set ST0 : Event flag bit is set to 0 ST1 : Event flag bit is set to 1 DEFAULT = DYNAMIC
Response	None.
Example	ETH:PORT1:SYNC:EFL DYN
Note	

Syntax	ETHernet:PORT<Pt>:SYNCe:EFLag?
Description	This query returns the SyncE Event flag behavior.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:SYNC:EFL? → DYN
Note	

12.10.11 ETHernet:PORT<Pt>:SYNCe:VLAN[:ENABLE]

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN[:ENABLE] <enable>
Description	This command enables or disables VLAN on SyncE.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> DEFAULT = OFF
Response	None.
Example	ETH:PORT1:SYNC:VLAN ON
Note	

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN[:ENABLE]?
Description	This query returns whether VLAN on SyncE is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:VLAN:SYNC? → 1
Note	

12.10.12 ETHernet:PORT<Pt>:SYNCe:VLAN:ETYPe

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:ETYPe <type>
Description	This command sets the MAC level Ethertype.
Parameters	<Pt> = Port number <type> = <NUMERIC PROGRAM DATA> Acceptable values: #H8100 #H88A8 #H9100 #H9200 <i>DEFault=#H8100</i>
Response	None.
Example	ETH:PORT1:SYNC:VLAN:ETYP #H8100
Note	This command can only be used when VLAN is enabled.

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:ETYPe?
Description	This query returns the MAC level Ethertype.
Parameters	<Pt> = Port number
Response	<type> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SYNC:VLAN:ETYP? → #H86DD
Note	This command can only be used when VLAN is enabled.

12.10.13 ETHernet:PORT<Pt>:SYNCe:VLAN:LCount

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:LCount <levels>
Description	This command sets the number of active VLAN levels.
Parameters	<Pt> = Port number <levels> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8, DEFault=1</i>
Response	None.
Example	ETH:PORT1:SYNC:VLAN:LC 2
Note	

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:LCount?
Description	This query returns the number of active VLAN levels.
Parameter	<Pt> = Port number
Response	<levels> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SYNC:VLAN:LC? → 2
Note	

12.10.14 ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:ID

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:ID <number>
Description	This command sets the VLAN ID.
Parameters	<Pt> = Port number <Lv> = VLAN level (1-N ¹) <number> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=4095, DEFault=0</i>
Response	None.
Example	ETH:PORT1:SYNC:VLAN:LEV1:ID 1024
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.10.13). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame).

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:ID?
Description	This query returns the VLAN ID.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N)
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SYNC:VLAN:LEV1:ID? → 1024
Note	

12.10.15 ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:CFI

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:CFI <enable>
Description	This command enables or disables the VLAN canonical format indicator.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N ¹)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SYNC:VLAN:LEV1:CFI 1
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.10.13). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame). ² CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition. ³ This command is as same as ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:DEI.

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:CFI?
Description	This query returns whether the VLAN canonical format indicator is enabled or disabled.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SYNC:VLAN:LEV1:CFI? → 1
Note	¹ CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition. ² This command is as same as ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:DEI?.

12.10.16 ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:DEI

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:DEI <enable>
Description	This command enables or disables the VLAN canonical format indicator.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N ¹)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:SYNC:VLAN:LEV1:DEI 1
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.10.13). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame). ² CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition. ³ This command is as same as ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:CFI.

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:DEI?
Description	This query returns whether the VLAN canonical format indicator is enabled or disabled.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SYNC:VLAN:LEV1:DEI? → 1
Note	¹ CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition. ² This command is as same as ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:CFI?.

12.10.17 ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:PRiority

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:PRiority <priority>
Description	This command sets the VLAN priority.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N ¹)
	<priority> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=0</i>
Response	None.
Example	ETH:PORT1:SYNC:VLAN:LEV1:PR 7
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.10.13). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame).

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:PRiority?
Description	This query returns the VLAN priority.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N)
Response	<priority> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SYNC:VLAN:LEV1:PR? → 7
Note	

12.10.18 ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:ETYPe

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:ETYPe <type>
Description	This command sets the VLAN Ethertype.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N) ¹
	<type> = <NUMERIC PROGRAM DATA> Acceptable values: #H8100 #H88A8 #H9100 #H9200 <i>DEFault=#H8100</i>
Response	None.
Example	ETH:PORT1:SYNC:VLAN:LEV1:ETYP #H8100
Notes	¹ It is only possible to use this command for levels (1-M), where M is the number of active VLAN Levels minus one(see section 12.10.13). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame). It is not possible to use this command for VLAN level N as Ethertype because this level is automatically set according to the selected higher-level protocol.

Syntax	ETHernet:PORT<Pt>:SYNCe:VLAN:LEVel<Lv>:ETYPe?
Description	This query returns the VLAN Ethertype.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N ¹)
Response	<type> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SYNC:VLAN:LEV1:ETYP? → #H86DD
Note	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.10.13).

12.11 Precision Time Protocol - IEEE 1588v2

12.11.1 EThernet:PORT<Pt>:PTP[:ENABLE]

Syntax	EThernet:PORT<Pt>:PTP[:ENABLE] <enable>
Description	This command enables or disables the Precision Time Protocol.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	ETH:PORT1:PTP ON
Note	This is the default node for EThernet:PORT<Pt>:PTP

Syntax	EThernet:PORT<Pt>:PTP[:ENABLE]?
Description	This query returns whether the Precision Time Protocol is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP? → 1
Note	

12.11.2 EThernet:PORT<Pt>:PTP:SONLy

Syntax	EThernet:PORT<Pt>:PTP:SONLy <enable>
Description	This command enables or disables slave only clock mode.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>ON</i>
Response	None.
Example	ETH:PORT1:PTP:SONL ON
Note	

Syntax	EThernet:PORT<Pt>:PTP:SONLy?
Description	This query returns whether slave only clock mode is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:SONL? → 1
Note	

12.11.3 EThernet:PORT<Pt>:PTP:CAST

Syntax	EThernet:PORT<Pt>:PTP:CAST <cast>
Description	This command sets the multicast/unicast mode.
Parameters	<Pt> = Port number <cast> = <CHARACTER PROGRAM DATA> MULTicast: Multicast mode UNICast: Unicast mode <i>DEFault</i> = <i>UNICast</i>
Response	None.
Example	ETH:PORT1:PTP:CAST DEF
Note	

Syntax	EThernet:PORT<Pt>:PTP:CAST?
Description	This query returns the multicast/unicast mode.
Parameter	<Pt> = Port number
Response	<cast> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:CAST? → MULT
Note	

12.11.4 EThernet:PORT<Pt>:PTP:UNEGotiate

Syntax	EThernet:PORT<Pt>:PTP:UNEGotiate <enable>
Description	This command enables or disables unicast negotiate mode.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT1:PTP:UNEG ON
Note	

Syntax	EThernet:PORT<Pt>:PTP:UNEGotiate?
Description	This query returns whether unicast negotiate mode is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:UNEG? → 1
Note	

12.11.5 EThernet:PORT<Pt>:PTP:PROFile

Syntax	EThernet:PORT<Pt>:PTP:PROFile <profile>
Description	This command sets the PTP profile.
Parameters	<Pt> = Port number <profile> = <CHARACTER PROGRAM DATA> UDEFined: User Defined G82651: G.8265.1 G82751: G.8275.1 G82752: G.8275.2 SMPTE: SMPTE 2059-2 <i>DEFault</i> = UDEFined
Response	None.
Example	ETH:PORT1:PTP:PROF G82651
Note	

Syntax	EThernet:PORT<Pt>:PTP:PROFile?
Description	This query returns the PTP profile.
Parameter	<Pt> = Port number
Response	<profile> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:PROF? → G82651
Note	

12.11.6 EThernet:PORT<Pt>:PTP:DOMain

Syntax	EThernet:PORT<Pt>:PTP:DOMain <domain>
Description	This command sets the PTP domain Id.
Parameters	<Pt> = Port number <domain> = <CHARACTER PROGRAM DATA> DEFault: Default domain for multicast ALT1: Alternate 1 for multicast ALT2: Alternate 2 for multicast ALT3: Alternate 3 for multicast UDEFault: Default domain for unicast 5..255 : Alternative domains
Response	None.
Example	ETH:PORT1:PTP:DOM DEF
Note	

Syntax	ETHernet:PORT<Pt>:PTP:DOMain?
Description	This query returns the PTP domain Id.
Parameter	<Pt> = Port number
Response	<domain> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:DOM? → DEF
Note	

12.11.7 ETHernet:PORT<Pt>:PTP:TPRotocol

Syntax	ETHernet:PORT<Pt>:PTP:TPRotocol <protocol>
Description	This command sets the transport protocol to use for PTP communication.
Parameters	<Pt> = Port number <protocol> = <CHARACTER PROGRAM DATA> IPV4: UDP IPv4 IPV6: UDP IPv6 IEEE: IEEE 802.3 <i>DEFault = IPV4</i>
Response	None.
Example	ETH:PORT1:PTP:TPR IPV6
Note	

Syntax	ETHernet:PORT<Pt>:PTP:TPRotocol?
Description	This query returns the transport protocol to use for PTP communication.
Parameter	<Pt> = Port number
Response	<protocol> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:TPR? → IPV6
Note	

12.11.8 ETHernet:PORT<Pt>:PTP:MAC[:SOURce]

Syntax	ETHernet:PORT<Pt>:PTP:MAC[:SOURce] <address>
Description	This command sets the PTP MAC source address.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:PTP:MAC "00-50-C2-35-D2-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:PTP:MAC[:SOURce]?
Description	This query returns the PTP MAC source address.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:MAC? → "00-50-C2-35-D2-EF"
Note	

12.11.9 ETHernet:PORT<Pt>:PTP:MAC:AUTO

Syntax	ETHernet:PORT<Pt>:PTP:MAC:AUTO <automatic>
Description	This command enables or disables automatic generation of PTP source MAC address.
Parameters	<Pt> = Port number <automatic> = <CHARACTER PROGRAM DATA> ON: Lock the MAC parameter to the value of default MAC source address. OFF: Unlock the MAC parameter value. <i>DEFault = ON</i>
Response	None.
Example	ETH:PORT1:PTP:MAC:AUTO ON
Note	

Syntax	ETHernet:PORT<Pt>:PTP:MAC:AUTO?
Description	This query returns whether automatic generation of PTP source MAC address is enabled or disabled.
Parameter	<Pt> = Port number
Response	<automatic> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:MAC:AUTO? → ON
Note	

12.11.10 ETHernet:PORT<Pt>:PTP:MAC:DESTination

Syntax	ETHernet:PORT<Pt>:PTP:MAC:DESTination <address>
Description	This command sets the PTP MAC destination address.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:PTP:MAC:DEST "00-50-C2-35-D2-EF"
Note	Only the character '-' is accepted as separator. This value is used when ETHernet:PORT<Pt>:PTP:SONLy is enabled and ETHernet:PORT<Pt>:PTP:CAST is set to UNICast.

Syntax	ETHernet:PORT<Pt>:PTP:MAC:DESTination?
Description	This query returns the PTP MAC destination address.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:MAC:DEST? → "00-50-C2-35-D2-EF"
Note	

12.11.11 ETHernet:PORT<Pt>:PTP:MAC:SMULticast

Syntax	ETHernet:PORT<Pt>:PTP:MAC:SMULticast <address type>
Description	This command sets multicast destination MAC addresses.
Parameters	<Pt> = Port number <address type> = <CHARACTER PROGRAM DATA> AUTO: Use default multicast addresses. Peer delay multicast address is set according to IEEE1588v2 standard one. NONForwardable: Use only non-forwardable multicast address 01-80-C2-00-00-0E. This parameter should be used for G.8275.1. FORWardable: Use only forwardable multicast address 01-1B-19-00-00-00. This parameter should be used for G.8275.1. <i>DEFault = AUTO</i>
Response	None.
Example	ETH:PORT1:PTP:MAC:SMUL NONF
Note	

Syntax	ETHernet:PORT<Pt>:PTP:MAC:SMULticast?
Description	This query returns PTP multicast destination MAC addresses
Parameter	<Pt> = Port number
Response	<address type> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:MAC:SMUL? → FORW
Note	

12.11.12 ETHernet:PORT<Pt>:PTP:MAC:ARP

Syntax	ETHernet:PORT<Pt>:PTP:MAC:ARP
Description	This command executes ARP for the MAC address used for PTP.
Parameters	<Pt> = Port number
Response	None.
Example	ETH:PORT1:PTP:MAC:ARP
Note	

12.11.13 ETHernet:PORT<Pt>:PTP:MAC:ARP:RESult?

Syntax	ETHernet:PORT<Pt>:PTP:MAC:ARP:RESult?
Description	This query returns whether ARP for the MAC address used for PTP was successful or timed out.
Parameters	<Pt> = Port number
Response	<result> = <CHARACTER RESPONSE DATA> SUCCESS: ARP lookup succeeded. TIMEOUT: ARP lookup timed out.
Example	ETH:PORT1:PTP:MAC:ARP:RES? → SUCCESS
Note	

12.11.14 ETHernet:PORT<Pt>:PTP:MAC:NDP

Syntax	ETHernet:PORT<Pt>:PTP:MAC:NDP
Description	This command executes NDP for the MAC address used for PTP.
Parameters	<Pt> = Port number
Response	None.
Example	ETH:PORT1:PTP:MAC:NDP
Note	

12.11.15 ETHernet:PORT<Pt>:PTP:MAC:NDP:RESult?

Syntax	ETHernet:PORT<Pt>:PTP:MAC:NDP:RESult?
Description	This query returns whether NDP for the MAC address used for PTP was successful or timed out.
Parameters	<Pt> = Port number
Response	<result> = <CHARACTER RESPONSE DATA> SUCCESS: NDP lookup succeeded. TIMEOUT: NDP lookup timed out.
Example	ETH:PORT1:PTP:MAC:NDP:RES? → SUCCESS
Note	

12.11.16 ETHernet:PORT<Pt>:PTP:PTYPE

Syntax	ETHernet:PORT<Pt>:PTP:PTYPE <payload type>
Description	This command sets payload type for IPv6 PTP.
Parameters	<Pt> = Port number <payload type> = <CHARACTER PROGRAM DATA> AUTO: IPv6 Payload length is set by auto. NULL: IPv6 Payload length is set 0. <i>DEFault = AUTO</i>
Response	None.
Example	ETH:PORT1:PTP:PTYP NULL
Note	

Syntax	ETHernet:PORT<Pt>:PTP:PTYPE?
Description	This query returns payload type for IPv6 PTP.
Parameter	<Pt> = Port number
Response	<address type> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:PTYP? → NULL
Note	

12.11.17 ETHernet:PORT<Pt>:PTP:EXT

Syntax	ETHernet:PORT<Pt>:PTP:EXT <enable>
Description	This command enables or disables the extended IPv6 header.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:EXT ON
Notes	

Syntax	ETHernet:PORT<Pt>:PTP:EXT?
Description	This query returns whether the extended IPv6 header is enabled or disabled.
Parameters	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:EXT? → 1
Note	

12.11.18 ETHernet:PORT<Pt>:PTP:EXT:TYPE

Syntax	ETHernet:PORT<Pt>:PTP:EXT:TYPE <type>
Description	This command sets the type of extension header for PTP. This command is only valid when IPv6 is selected on layer3.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> HOP: Hop-by-Hop Options ROUTing: Routing(Type 0) DESTination: Destination Options
Response	None.
Example	ETH:PORT1:PTP:EXT:TYPE HOP
Note	

Syntax	ETHernet:PORT<Pt>:PTP:EXT:TYPE?
Description	This query returns the type of extension header for PTP. This command is only valid when IPv6 is selected on layer3.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:EXT:TYPE? → HOP
Note	

12.11.19 ETHernet:PORT<Pt>:PTP:EXT:LENGth

Syntax	ETHernet:PORT<Pt>:PTP:EXT:LENGth <length>
Description	This command sets the length of extension header for PTP. This command is only valid when IPv6 is selected on layer3.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum=6, MAXimum=254, DEFault=6</i>
Response	None.
Example	ETH:PORT1:PTP:EXT:LENG 6
Note	

Syntax	ETHernet:PORT<Pt>:PTP:EXT:LENGth?
Description	This query returns the length of extension header for PTP. This command is only valid when IPv6 is selected on layer3.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:EXT:LENG? → 0
Note	

12.11.20 ETHernet:PORT<Pt>:PTP:EXT:DATA

Syntax	ETHernet:PORT<Pt>:PTP:EXT:DATA <data>
Description	This command sets the data of extension header for PTP. This command is only valid when IPv6 is selected on layer3.
Parameters	<Pt> = Port number <data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:PTP:EXT:DATA "0123456789AB"
Note	

Syntax	ETHernet:PORT<Pt>:PTP:EXT:DATA?
Description	This query returns the data of extension header for PTP. This command is only valid when IPv6 is selected on layer3.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:EXT:DATA? → "0123456789AB"
Note	

12.11.21 ETHernet:PORT<Pt>:PTP:IP:IPV4:SOURce

Syntax	ETHernet:PORT<Pt>:PTP:IP:IPV4:SOURce <address>
Description	This command sets the PTP IPv4 source address.
Parameters	<Pt> = Port number
	<address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:PORT1:PTP:IP:IPV4:SOUR "172.29.2.36"
Note	Only the character '.' is accepted as separator. This value is used when ETHernet:PORT<Pt>:PTP:TPRotocol is set to IPV4

Syntax	ETHernet:PORT<Pt>:PTP:IP:IPV4:SOURce?
Description	This query returns the PTP IPv4 source address.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:IP:IPV4:SOUR? → "172.29.2.36"
Note	

12.11.22 ETHernet:PORT<Pt>:PTP:IP:IPV4:DESTination

Syntax	ETHernet:PORT<Pt>:PTP:IP:IPV4:DESTination <address>
Description	This command sets the PTP IPv4 destination address. Used in unicast slave mode.
Parameters	<Pt> = Port number
	<address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:PORT1:PTP:IP:IPV4:DEST "172.29.2.36"
Note	Only the character '.' is accepted as separator. This value is used when ETHernet:PORT<Pt>:PTP:SONLy is enabled and ETHernet:PORT<Pt>:PTP:TPRotocol is set to IPV4 and ETHernet:PORT<Pt>:PTP:CAST is set to UNICast.

Syntax	ETHernet:PORT<Pt>:PTP:IP:IPV4:DESTination?
Description	This query returns the PTP IPv4 destination address.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:IP:IPV4:DEST? → "172.29.2.36"
Note	

12.11.23 ETHernet:PORT<Pt>:PTP:IPV4:IGMP[:ENABle]

Syntax	ETHernet:PORT<Pt>:PTP:IPV4:IGMP[:ENABle] <enable>
Description	This command enables or disables use of the PTP IGMP.
Parameters	<Pt> = Port number
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:IPV4:IGMP ON
Note	

Syntax	ETHernet:PORT<Pt>:PTP:IPV4:IGMP[:ENABle]?
Description	This query returns whether the PTP IGMP is enabled or disabled.
Parameters	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV4:IGMP? → 1
Note	

12.11.24 ETHernet:PORT<Pt>:PTP:IPV4:IGMP:VERSion

Syntax	ETHernet:PORT<Pt>:PTP:IPV4:IGMP:VERSion <version>
Description	This command sets the PTP IGMP version.
Parameters	<Pt> = Port number <version> = <CHARACTER PROGRAM DATA> V1: IGMPv1 V2: IGMPv2 V3: IGMPv3 DEFault = V2
Response	None.
Example	ETH:PORT1:PTP:IPV4:IGMP:VERS V1
Note	

Syntax	ETHernet:PORT<Pt>:PTP:IPV4:IGMP:VERSion?
Description	This query returns the PTP IGMP version.
Parameters	<Pt> = Port number
Response	<version> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV4:IGMP:VERS? → V2
Note	

12.11.25 ETHernet:PORT<Pt>:PTP:IP:IPV6:SOURce

Syntax	ETHernet:PORT<Pt>:PTP:IP:IPV6:SOURce <address>
Description	This command sets the PTP IPv6 source address.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> IPv6 address
Response	None.
Example	ETH:PORT1:PTP:IP:IPV6:SOUR "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	This value is used when ETHernet:PORT<Pt>:PTP:TPRotocol is set to IPV6

Syntax	ETHernet:PORT<Pt>:PTP:IP:IPV6:SOURce?
Description	This query returns the PTP IPv6 source address.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:IP:IPV6:SOUR? → "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	

12.11.26 ETHernet:PORT<Pt>:PTP:IP:IPV6:DESTination

Syntax	ETHernet:PORT<Pt>:PTP:IP:IPV6:DESTination <address>
Description	This command sets the PTP IPv6 destination address. Used in unicast slave mode.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> IPv6 address
Response	None.
Example	ETH:PORT1:PTP:IP:IPV6:DEST "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	This value is used when ETHernet:PORT<Pt>:PTP:SONLy is enabled and ETHernet:PORT<Pt>:PTP:TPRotocol is set to IPV6 and ETHernet:PORT<Pt>:PTP:CAST is set to UNICast.

Syntax	ETHernet:PORT<Pt>:PTP:IP:IPV6:DESTination?
Description	This query returns the PTP IPv6 destination address.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:IP:IPV6:DEST? → "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	

12.11.27 ETHernet:PORT<Pt>:PTP:IPV6:ADDRconfig

Syntax	ETHernet:PORT<Pt>:PTP:IPV6:ADDRconfig <mode>
Description	This command sets the PTP address configuration mode for IPv6.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> MANual: Manual SLEsS: Stateless DEFault = SLEsS
Response	None.
Example	ETH:PORT1:PTP:IPV6:ADDR SLES
Note	

Syntax	ETHernet:PORT<Pt>:PTP:IPV6:ADDRconfig?
Description	This query returns the PTP address configuration mode for IPv6.
Parameters	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV6:ADDR? → SLES
Note	

12.11.28 ETHernet:PORT<Pt>:PTP:IPV6:ADDRconfig:RESult?

Syntax	ETHernet:PORT<Pt>:PTP:IPV6:ADDRconfig:RESult?
Description	This query returns the PTP result of address config for IPv6.
Parameters	<Pt> = Port number
Response	<result> = <CHARACTER RESPONSE DATA> SUCCESS: Address configuration succeeded. TIMEOUT: Address configuration timed out.
Example	ETH:PORT1:PTP:IPV6:ADDR:RES? → TIMEOUT
Note	

12.11.29 ETHernet:PORT<Pt>:PTP:IPV6:SLEsS:IID

Syntax	ETHernet:PORT<Pt>:PTP:IPV6:SLEsS:IID <mode>
Description	This command sets the PTP interface ID for IPv6.
Parameters	<Pt> = Port number <id> = <STRING PROGRAM DATA> The interface ID string must consist of 16 hexadecimal digits.
Response	None.
Example	ETH:PORT1:PTP:IPV6:SLES:IID "00-00-00-00-00-00-00-00"
Note	

Syntax	ETHernet:PORT<Pt>:PTP:IPV6:SLEsS:IID?
Description	This query returns the PTP address configuration mode for IPv6.
Parameters	<Pt> = Port number
Response	<mode> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV6:SLES:IID? → "00-00-00-00-00-00-00-00"
Note	

12.11.30 EThernet:PORT<Pt>:PTP:IPV6:SLEs:IID:AUTO

Syntax	EThernet:PORT<Pt>:PTP:IPV6:SLEs:IID:AUTO <enable>
Description	This command enables or disables Interface ID for PTP.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEfault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:IPV6:SLEs:IID:AUTO ON
Note	

Syntax	EThernet:PORT<Pt>:PTP:IPV6:SLEs:IID:AUTO?
Description	This query returns whether Interface ID for PTP is enabled or disabled.
Parameters	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV6:SLEs:IID:AUTO? → 1
Note	

12.11.31 EThernet:PORT<Pt>:PTP:IPV6:SLEs:LINKlocal?

Syntax	EThernet:PORT<Pt>:PTP:IPV6:SLEs:LINKlocal?
Description	This query returns the PTP link local address.
Parameters	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV6:SLEs:LINK? → "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	

12.11.32 EThernet:PORT<Pt>:PTP:IPV6:SLEs:RAFLag?

Syntax	EThernet:PORT<Pt>:PTP:IPV6:SLEs:RAFLag?
Description	This query returns the PTP stateless RA flags.
Parameters	<Pt> = Port number
Response	<flags> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV6:SLEs:RAFL? → "0x00"
Note	

12.11.33 EThernet:PORT<Pt>:PTP:IPV6:SLEs:SRCMac?

Syntax	EThernet:PORT<Pt>:PTP:IPV6:SLEs:SRCMac?
Description	This query returns the PTP IPv6 stateless source MAC address.
Parameters	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV6:SLEs:SRCM? → "00-00-00-00-00-00"
Note	

12.11.34 EThernet:PORT<Pt>:PTP:IPV6:SLEs:PREFIX?

Syntax	EThernet:PORT<Pt>:PTP:IPV6:SLEs:PREFIX?
Description	This query returns the PTP IPv6 stateless prefix.
Parameters	<Pt> = Port number
Response	<prefix> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV6:SLEs:PREFIX? → "1234:5678:9ABC:DEF0:1234:5678:9ABC:DEF0"
Note	

12.11.35 ETHernet:PORT<Pt>:PTP:IPV6:SLEs:PRFLag?

Syntax	ETHernet:PORT<Pt>:PTP:IPV6:SLEs:PRFLag?
Description	This query returns the PTP IPv6 stateless prefix flags.
Parameters	<Pt> = Port number
Response	<flags> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV6:SLEs:PRFL? → "0x00"
Note	

12.11.36 ETHernet:PORT<Pt>:PTP:IPV6:SLEs:LTIMe?

Syntax	ETHernet:PORT<Pt>:PTP:IPV6:SLEs:LTIMe?
Description	This query returns the PTP IPv6 stateless life time.
Parameters	<Pt> = Port number
Response	<time> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV6:SLEs:LTIM? → "Fri Jan 8 14:24:44 2010"
Note	

12.11.37 ETHernet:PORT<Pt>:PTP:IPV6:SLEs:RENew

Syntax	ETHernet:PORT<Pt>:PTP:IPV6:SLEs:RENew
Description	This command executes PTP IPv6 stateless address configuration. This command valid only when IPv6 is selected on layer3.
Parameters	<Pt> = Port number
Response	None.
Example	ETH:PORT1:PTP:IPV6:SLEs:REN
Note	

12.11.38 ETHernet:PORT<Pt>:PTP:IPV6:MLD[:ENABle]

Syntax	ETHernet:PORT<Pt>:PTP:IPV6:MLD[:ENABle] <enable>
Description	This command enables or disables use of the PTP MLD.
Parameters	<Pt> = Port number
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:IPV6:MLD ON
Note	

Syntax	ETHernet:PORT<Pt>:PTP:IPV6:MLD[:ENABle]?
Description	This query returns whether the use of PTP MLD is enabled or disabled.
Parameters	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV6:MLD? → 1
Note	

12.11.39 EThernet:PORT<Pt>:PTP:IPV6:MLD:VERSion

Syntax	EThernet:PORT<Pt>:PTP:IPV6:MLD:VERSion <version>
Description	This command sets the PTP MLD version.
Parameters	<Pt> = Port number <version> = <CHARACTER PROGRAM DATA> V1: MLDv1 V2: MLDv2 <i>DEFault</i> = V1
Response	None.
Example	ETH:PORT1:PTP:IPV6:MLD:VERS V1
Note	

Syntax	EThernet:PORT<Pt>:PTP:IPV6:MLD:VERSion?
Description	This query returns the PTP MLD version.
Parameters	<Pt> = Port number
Response	<version> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:IPV6:MLD:VERS? → V2
Note	

12.11.40 EThernet:PORT<Pt>:PTP:IP:DSCP:EVENT

Syntax	EThernet:PORT<Pt>:PTP:IP:DSCP:EVENT <value>
Description	This command sets the DSCP value to use for PTP event messages.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =0, <i>MAXimum</i> =63, <i>DEFault</i> =0
Response	None.
Example	ETH:PORT1:PTP:IP:DSCP:EVEN 0
Note	This value is used when EThernet:PORT<Pt>:PTP:TPRotocol is set to IPV4 or IPV6.

Syntax	EThernet:PORT<Pt>:PTP:IP:DSCP:EVENT?
Description	This query returns the DSCP value to use for PTP event messages.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:IP:DSCP:EVEN? → 0
Note	

12.11.41 EThernet:PORT<Pt>:PTP:IP:DSCP:NORMal

Syntax	EThernet:PORT<Pt>:PTP:IP:DSCP:NORMal <value>
Description	This command sets the DSCP value to use for normal PTP messages (not PTP events).
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =0, <i>MAXimum</i> =63, <i>DEFault</i> =0
Response	None.
Example	ETH:PORT1:PTP:IP:DSCP:NORM 0
Note	This value is used when EThernet:PORT<Pt>:PTP:TPRotocol is set to IPV4 or IPV6.

Syntax	EThernet:PORT<Pt>:PTP:IP:DSCP:NORMal?
Description	This query returns the DSCP value to use for normal PTP messages (not PTP events).
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:IP:DSCP:NORM? → 0
Note	

12.11.42 ETHernet:PORT<Pt>:PTP:TUNNeling

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling <tunneling>
Description	This command sets the tunneling mode to use for PTP communication.
Parameters	<Pt> = Port number <tunneling> = <CHARACTER PROGRAM DATA> NONE: No tunneling VLAN: VLAN MPLS: MPLS <i>DEFault = NONE</i>
Response	None.
Example	ETH:PORT1:PTP:TUNN NONE
Note	

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling?
Description	This query returns the tunneling protocol to use for PTP communication.
Parameter	<Pt> = Port number
Response	<tunneling> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:TUNN? → NONE
Note	

12.11.43 ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LCount

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LCount <levels>
Description	This command sets the number of active VLAN levels.
Parameters	<Pt> = Port number <levels> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8, DEFault=1</i>
Response	None.
Example	ETH:PORT1:PTP:TUNN:VLAN:LC 2
Note	

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LCount?
Description	This query returns the number of active VLAN levels.
Parameter	<Pt> = Port number
Response	<levels> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:TUNN:VLAN:LC? → 2
Note	

12.11.44 ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:ID

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:ID <number>
Description	This command sets the VLAN ID.
Parameters	<Pt> = Port number <Lv> = VLAN level (1-N ¹) <number> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=4095, DEFault=0</i>
Response	None.
Example	ETH:PORT1:PTP:TUNN:VLAN:LEV1:ID 1024
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.6.36). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame).

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:ID?
Description	This query returns the VLAN ID.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N)
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:TUNN:VLAN:LEV1:ID? → 1024
Note	

12.11.45 ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:CFI

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:CFI <enable>
Description	This command enables or disables the VLAN canonical format indicator.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N ¹)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:TUNN:VLAN:LEV1:CFI 1
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.6.36). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame). ² CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition. ³ This command is as same as ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:DEI.

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:CFI?
Description	This query returns whether the VLAN canonical format indicator is enabled or disabled.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:TUNN:VLAN:LEV1:CFI? → 1
Note	¹ CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition. ² This command is as same as ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:DEI?.

12.11.46 ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:DEI

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:DEI <enable>
Description	This command enables or disables the VLAN canonical format indicator.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N ¹)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:TUNN:VLAN:LEV1:DEI 1
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.6.36). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame). ² CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition. ³ This command is as same as ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:CFI.

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:DEI?
Description	This query returns whether the VLAN canonical format indicator is enabled or disabled.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:TUNN:VLAN:LEV1:DEI? → 1
Note	¹ CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition. ² This command is as same as ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:CFI?.

12.11.47 ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:PRiority

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:PRiority <priority>
Description	This command sets the VLAN priority.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N ¹)
	<priority> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=0</i>
Response	None.
Example	ETH:PORT1:PTP:TUNN:VLAN:LEV1:PR 7
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.6.36). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame).

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:PRiority?
Description	This query returns the VLAN priority.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N)
Response	<priority> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:TUNN:VLAN:LEV1:PR? → 7
Note	

12.11.48 ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:ETYPe

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:ETYPe <type>
Description	This command sets the VLAN Ethertype.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N) ¹
	<type> = <NUMERIC PROGRAM DATA> Acceptable values: #H8100 #H88A8 #H9100 #H9200 <i>DEFault=#H8100</i>
Response	None.
Example	ETH:PORT1:PTP:TUNN:VLAN:LEV1:ETYP #H8100
Notes	¹ It is only possible to use this command for levels (1-M), where M is the number of active VLAN Levels minus one(see section 12.6.36). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame). It is not possible to use this command for VLAN level N as Ethertype because this level is automatically set according to the selected higher-level protocol.

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:VLAN:LEVel<Lv>:ETYPe?
Description	This query returns the VLAN Ethertype.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N ¹)
Response	<type> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:TUNN:VLAN:LEV1:ETYP? → #H86DD
Note	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.6.36).

12.11.49 ETHernet:PORT<Pt>:PTP:TUNNeling:MPLS:LCount

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:MPLS:LCount <levels>
Description	This command sets the number of active MPLS levels.
Parameters	<Pt> = Port number <levels> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8, DEFault=1</i>
Response	None.
Example	ETH:PORT1:PTP:TUNN:MPLS:LC 2
Note	

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:MPLS:LCount?
Description	This query returns the number of active MPLS levels.
Parameter	<Pt> = Port number
Response	<levels> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:TUNN:MPLS:LC? → 2
Note	

12.11.50 ETHernet:PORT<Pt>:PTP:TUNNeling:MPLS:LEVel<Lv>:LABel

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:MPLS:LEVel<Lv>:LABel <label>
Description	This command sets the MPLS label.
Parameters	<Pt> = Port number <Lv> = MPLS level (1-N ¹) <label> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1048575, DEFault=0</i>
Response	None.
Example	ETH:PORT1:PTP:TUNN:MPLS:LEV1:LAB 1048575
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active MPLS Levels (see section 12.6.15). Level 1 corresponds to the level at the top of the label stack and N is the level at the bottom of the stack (bottom of stack flag set).

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:MPLS:LEVel<Lv>:LABel?
Description	This query returns the MPLS label.
Parameters	<Pt> = Port number <Lv> = MPLS level (1-N)
Response	<label> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:TUNN:MPLS:LEV1:LAB? → 1048575
Note	

12.11.51 ETHernet:PORT<Pt>:PTP:TUNNeling:MPLS:LEVel<Lv>:EBITs

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:MPLS:LEVel<Lv>:EBITs <value>
Description	This command sets the MPLS experimental bits.
Parameters	<Pt> = Port number <Lv> = MPLS level (1-N ¹) <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=0</i>
Response	None.
Example	ETH:PORT1:PTP:TUNN:MPLS:LEV1:EBIT 5
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active MPLS Levels (see section 12.6.15). Level 1 corresponds to the level at the top of the label stack and N is the level at the bottom of the stack (bottom of stack flag set).

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:MPLS:LEVel<Lv>:EBITs?
Description	This query returns the MPLS experimental bits.
Parameters	<Pt> = Port number
	<Lv> = MPLS level (1-N)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:TUNN:MPLS:LEV1:EBIT? → 5
Note	

12.11.52 ETHernet:PORT<Pt>:PTP:TUNNeling:MPLS:LEVel<Lv>:TTL

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:MPLS:LEVel<Lv>:TTL <value>
Description	This command sets the MPLS time to live.
Parameters	<Pt> = Port number
	<Lv> = MPLS level (1-N ¹)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=32</i>
Response	None.
Example	ETH:PORT1:PTP:TUNN:MPLS:LEV1:TTL 32
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active MPLS Levels (see section 12.6.15). Level 1 corresponds to the level at the top of the label stack and N is the level at the bottom of the stack (bottom of stack flag set).

Syntax	ETHernet:PORT<Pt>:PTP:TUNNeling:MPLS:LEVel<Lv>:TTL?
Description	This query returns the MPLS time to live.
Parameters	<Pt> = Port number
	<Lv> = MPLS level (1-N)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:TUNN:MPLS:LEV1:TTL? → 32
Note	

12.11.53 ETHernet:PORT<Pt>:PTP:FCAPture

Syntax	ETHernet:PORT<Pt>:PTP:FCAPture <enable>
Description	This command enables or disables PTP frame capture.
Parameters	<Pt> = Port number
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:FCAP OFF
Note	Only frames for the configured domain ID will be captured.

Syntax	ETHernet:PORT<Pt>:PTP:FCAPture?
Description	This query returns whether PTP frame capture is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:FCAP? → 1
Note	

12.11.54 ETHernet:PORT<Pt>:PTP:FCAPture:DIRecotry

Syntax	ETHernet:PORT<Pt>:PTP:FCAPture:DIRecotry <directory>
Description	This command sets the PTP frame capture directory.
Parameters	<Pt> = Port number <directory> = <CHARACTER PROGRAM DATA>
Response	None.
Example	ETH:PORT1:PTP:FCAP:DIR "Internal/pcapdir"
Note	There must be a connected application server for this command to be recognized as a legal command. The application server must be in the idle state. Directory must be selected to the Internal/ directory or a sub-directory hereof. When a USB storage device is mounted, files can stored via the Usb/ directory. If the USB storage is not accessible, directory will be "Internal/" even if "Usb/" is selected.

Syntax	ETHernet:PORT<Pt>:PTP:FCAPture:DIRecotry?
Description	This query returns the PTP frame capture directory.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:FCAP:DIR? → "Internal/pcapdir"
Note	

12.11.55 ETHernet:PORT<Pt>:PTP:ELOG

Syntax	ETHernet:PORT<Pt>:PTP:ELOG <enable>
Description	This command enables or disables Extended logging in the IEEE 1588 clock log. All received and transmitted PTP messages will be logged.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:PORT1:PTP:ELOG OFF
Note	Only frames for the configured domain ID will be captured.

Syntax	ETHernet:PORT<Pt>:PTP:ELOG?
Description	This query returns whether Extended logging in the IEEE 1588 clock log is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:ELOG? → 1
Note	

12.11.56 ETHernet:PORT<Pt>:PTP:SMODE

Syntax	ETHernet:PORT<Pt>:PTP:SMODE <mode>
Description	This command sets the PTP step mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> ONE: One step mode TWO: Two step mode <i>DEFault = ONE</i>
Response	None.
Example	ETH:PORT1:PTP:SMOD ON
Note	<mode> = ONE forces ETHernet:PORT<Pt>:PTP:DMEchanism to RRESPonse

Syntax	ETHernet:PORT<Pt>:PTP:SMODE?
Description	This query returns the PTP step mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:SMOD? → TW
Note	

12.11.57 ETHernet:PORT<Pt>:PTP:DMEChanism

Syntax	ETHernet:PORT<Pt>:PTP:DMEChanism <mechanism>
Description	This command sets the PTP delay mechanism.
Parameters	<Pt> = Port number <mechanism> = <CHARACTER PROGRAM DATA> RRESPonse: Request-Response delay mechanism PEER: Peer delay mechanism <i>DEFault = RRESPonse</i>
Response	None.
Example	ETH:PORT1:PTP:DMEC RRES
Note	<mechanism> = PEER forces ETHernet:PORT<Pt>:PTP:SMODE to TWO

Syntax	ETHernet:PORT<Pt>:PTP:DMEChanism?
Description	This query returns the PTP delay mechanism.
Parameter	<Pt> = Port number
Response	<mechanism> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:DMEC? → RRES
Note	

12.11.58 ETHernet:PORT<Pt>:PTP:CLOCK:SOURce

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:SOURce <source>
Description	This command sets the PTP clock source.
Parameters	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> INTernal: Use the internal instrument clock. GPS: Use the attach GPS device for time reference. <i>DEFault = INTernal</i>
Response	None.
Example	ETH:PORT1:PTP:CLOC:SOUR INT
Note	

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:SOURce?
Description	This query returns the PTP clock source.
Parameter	<Pt> = Port number
Response	<source> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:CLOC:SOUR? → INT
Note	

12.11.59 ETHernet:PORT<Pt>:PTP:CLOCK:IDENtity

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:IDENtity <id>
Description	This command sets the PTP clock identity.
Parameters	<Pt> = Port number <id> = <STRING PROGRAM DATA> The identity string must consist of 16 hexadecimal digits.
Response	None.
Example	ETH:PORT1:PTP:CLOC:IDEN "00-00-00-00-00-00-00-00"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:IDENtity?
Description	This query returns the PTP clock identity.
Parameter	<Pt> = Port number
Response	<id> = <STRING RESPONSE DATA>
Example	ETH:PORT1:PTP:CLOC:IDEN? → "00-00-00-00-00-00-00-00"
Note	

12.11.60 ETHernet:PORT<Pt>:PTP:CLOCK:IDENtity:AUTO

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:IDENtity:AUTO <automatic>
Description	This command enables or disables automatic generation of an identity from the PTP source MAC address.
Parameters	<Pt> = Port number <automatic> = <CHARACTER PROGRAM DATA> ON: Lock the identity parameter to the value of the PTP MAC source address. OFF: Unlock the identity parameter value. <i>DEFault = ON</i>
Response	None.
Example	ETH:PORT1:PTP:CLOC:IDEN:AUTO ON
Note	Auto generation is performed as described in IEEE 1588v2.

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:IDENtity:AUTO?
Description	This query returns whether automatic generation of an identity from the PTP source MAC address is enabled or disabled.
Parameter	<Pt> = Port number
Response	<automatic> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:CLOC:IDEN:AUTO? → ON
Note	

12.11.61 ETHernet:PORT<Pt>:PTP:CLOCK:P1

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:P1 <priority>
Description	This command sets the PTP clock "priority 1" priority .
Parameters	<Pt> = Port number <priority> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=255</i>
Response	None.
Example	ETH:PORT1:PTP:CLOC:P1 255
Note	

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:P1?
Description	This query returns the PTP clock "priority 1" priority.
Parameter	<Pt> = Port number
Response	<priority> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:CLOC:P1? → 255
Note	

12.11.62 ETHernet:PORT<Pt>:PTP:CLOCK:P2

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:P2 <priority>
Description	This command sets the PTP clock "priority 2" priority .
Parameters	<Pt> = Port number <priority> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=255</i>
Response	None.
Example	ETH:PORT1:PTP:CLOC:P2 255
Note	

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:P2?
Description	This query returns the PTP clock "priority 2" priority.
Parameter	<Pt> = Port number
Response	<priority> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:CLOC:P2? → 255
Note	

12.11.63 ETHernet:PORT<Pt>:PTP:CLOCK:CLASs

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:CLASs <class>
Description	This command sets the PTP clock class.
Parameters	<Pt> = Port number <class> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=255</i>
Response	None.
Example	ETH:PORT1:PTP:CLOC:CLAS 255
Note	

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:CLASs?
Description	This query returns the PTP clock class.
Parameter	<Pt> = Port number
Response	<class> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:CLOC:CLAS? → 255
Note	

12.11.64 ETHernet:PORT<Pt>:PTP:CLOCK:ACCuracy

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:ACCuracy <accuracy>
Description	This command sets the PTP clock accuracy.
Parameters	<Pt> = Port number <accuracy> = <CHARACTER PROGRAM DATA> NS25: 25 nano seconds NS100: 100 nano seconds NS250: 250 nano seconds US1: 1 micro second US2: 2.5 micro seconds US10: 10 micro seconds US25: 25 micro seconds US100: 100 micro seconds US250: 250 micro seconds MS1: 1 milli second MS2: 2.5 milli seconds MS10: 10 milli seconds MS25: 25 milli seconds MS100: 100 milli seconds MS250: 250 milli seconds S1: 1 second S10: 10 seconds PS10: Above 10 seconds UNKNown: Unknown accuracy USER: Use user defined value EPRTC: T-GM connected to a ePRTC in locked-mode ¹ CPRTC: T-GM connected to a PRTC in locked-mode ¹ NPRTC: T-GM not connected to a PRTC in locked-mode, or T-BC ¹ <i>DEFault = UNKNown</i>
Response	None.
Example	ETH:PORT1:PTP:CLOC:ACC UNKN
Note	¹ Only available when the Profile is G.8275.1 or G.8275.2.

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:ACCuracy?
Description	This query returns the PTP clock accuracy.
Parameter	<Pt> = Port number
Response	<accuracy> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:CLOC:ACC? → UNKN
Note	

12.11.65 ETHernet:PORT<Pt>:PTP:CLOCK:ACCuracy:USER

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:ACCuracy:USER <value>
Description	This command sets the user defined PTP clock accuracy.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=254</i>
Response	None.
Example	ETH:PORT1:PTP:CLOC:ACC:USER 0
Note	This value is used when ETHernet:PORT<Pt>:PTP:CLOCK:ACCuracy is set to USER.

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:ACCuracy:USER?
Description	This query returns the user defined PTP clock accuracy.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:CLOC:ACC:USER? → 254
Note	

12.11.66 ETHernet:PORT<Pt>:PTP:CLOCK:TSource

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:TSource <source>
Description	This command sets the PTP clock time source value.
Parameters	<Pt> = Port number <source> = <CHARACTER PROGRAM DATA> ATOMic: Atomicclock GPS: GPS clock TRADio: Terrestrial Radio PTP: PTP clock NTP: NTP clock HSET: Hand set OTHer: Other IOSCillator: Internal Oscillator SARB: SMPTE (ARB) SLOCal: SMPTE (Local) USER: Use user defined value <i>DEFault = IOSCillator</i>
Response	None.
Example	ETH:PORT1:PTP:CLOC:TSC IOSC
Note	

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:TSource?
Description	This query returns the PTP clock time source value.
Parameter	<Pt> = Port number
Response	<source> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:CLOC:TSC? → IOSC
Note	

12.11.67 ETHernet:PORT<Pt>:PTP:CLOCK:TSOource:USER

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:TSOource:USER <value>
Description	This command sets the user defined PTP clock time source value.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=160</i>
Response	None.
Example	ETH:PORT1:PTP:CLOC:TSO:USER 255
Note	This value is used when ETHernet:PORT<Pt>:PTP:CLOCK:TSOource is set to USER.

Syntax	ETHernet:PORT<Pt>:PTP:CLOCK:TSOource:USER?
Description	This query returns the user defined PTP clock time source value.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:CLOC:TSO:USER? → 255
Note	

12.11.68 ETHernet:PORT<Pt>:PTP:TIMing:AINterval

Syntax	ETHernet:PORT<Pt>:PTP:TIMing:AINterval <interval>
Description	This command sets the PTP timing announce interval.
Parameters	<Pt> = Port number <interval> = <CHARACTER PROGRAM DATA> FS8: 1/8 second FS4: 1/4 second FS2: 1/2 second S05: 1/2 second (for backward compatibility only) S1: 1 second S2: 2 seconds S4: 4 seconds S8: 8 seconds S16: 16 seconds S32: 32 seconds <i>DEFault = S2</i>
Response	None.
Example	ETH:PORT1:PTP:TIM:AIN T S2
Note	

Syntax	ETHernet:PORT<Pt>:PTP:TIMing:AINterval?
Description	This query returns the PTP timing announce interval.
Parameter	<Pt> = Port number
Response	<interval> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:TIM:AIN T? → S1
Note	

12.11.69 ETHernet:PORT<Pt>:PTP:TIMing:ATIMEout

Syntax	ETHernet:PORT<Pt>:PTP:TIMing:ATIMEout <intervals>
Description	This command sets the PTP timing announce timeout value. Unit: number of announce intervals.
Parameters	<Pt> = Port number <intervals> = <NUMERIC PROGRAM DATA> <i>MINimum=2, MAXimum=255, DEFault=3</i>
Response	None.
Example	ETH:PORT1:PTP:TIM:ATIM 3
Note	The actual timeout period will be ATIMEout multiplied by AINterval

Syntax	ETHernet:PORT<Pt>:PTP:TIMing:ATIMeout?
Description	This query returns the PTP timing announce timeout value. Unit: number of announce intervals.
Parameter	<Pt> = Port number
Response	<intervals> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:TIM:ATIM? → 3
Note	

12.11.70 ETHernet:PORT<Pt>:PTP:TIMing:UOFFset

Syntax	ETHernet:PORT<Pt>:PTP:TIMing:UOFFset <offset>
Description	This command sets the nominal offset between UTC time and PTP/TAI time. The value is used for conversion and comparison of UTC and PTP/TAI time.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> <i>MINimum=-32768, MAXimum=32767, DEFault=35</i>
Response	None.
Example	ETH:PORT1:PTP:TIM:UOFF 35
Note	

Syntax	ETHernet:PORT<Pt>:PTP:TIMing:UOFFset?
Description	This query returns the nominal offset between UTC time and PTP/TAI time.
Parameter	<Pt> = Port number
Response	<offset> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:TIM:UOFF? → 34
Note	

12.11.71 ETHernet:PORT<Pt>:PTP:TIMing:SINTerval

Syntax	ETHernet:PORT<Pt>:PTP:TIMing:SINTerval <interval>
Description	This command sets the PTP timing sync interval.
Parameters	<Pt> = Port number <interval> = <CHARACTER PROGRAM DATA> FS128: 1/128 second FS64: 1/64 second FS32: 1/32 second FS16: 1/16 second FS8: 1/8 second FS4: 1/4 second FS2: 1/2 second S05: 1/2 second (for backward compatibility only) S1: 1 second S2: 2 seconds S4: 4 seconds S8: 8 seconds S16: 16 seconds S32: 32 seconds <i>DEFault = S1</i>
Response	None.
Example	ETH:PORT1:PTP:TIM:SINT S1
Note	

Syntax	ETHernet:PORT<Pt>:PTP:TIMing:SINterval?
Description	This query returns the PTP timing sync interval.
Parameter	<Pt> = Port number
Response	<interval> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:TIM:SINT? → S1
Note	

12.11.72 ETHernet:PORT<Pt>:PTP:TIMing:DRINterval

Syntax	ETHernet:PORT<Pt>:PTP:TIMing:DRINterval <interval>
Description	This command sets the PTP timing delay request interval.
Parameters	<Pt> = Port number <interval> = <CHARACTER PROGRAM DATA> FS128: 1/128 second FS64: 1/64 second FS32: 1/32 second FS16: 1/16 second FS8: 1/8 second FS4: 1/4 second FS2: 1/2 second S05: 1/2 second (for backward compatibility only) S1: 1 second S2: 2 seconds S4: 4 seconds S8: 8 seconds S16: 16 seconds S32: 32 seconds DISabled: Use one-way-operation. (Disable delay requests/response) DEFault = S1
Response	None.
Example	ETH:PORT1:PTP:TIM:DRIN S1
Note	

Syntax	ETHernet:PORT<Pt>:PTP:TIMing:DRINterval?
Description	This query returns the PTP timing delay request interval.
Parameter	<Pt> = Port number
Response	<interval> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:TIM:DRIN? → S1
Note	

12.11.73 ETHernet:PORT<Pt>:PTP:TIMing:UDURation

Syntax	ETHernet:PORT<Pt>:PTP:TIMing:UDURation <timeout>
Description	This command sets the PTP timing unicast duration. Unit: Seconds.
Parameters	<Pt> = Port number <timeout> = <NUMERIC PROGRAM DATA> MINimum = 60, MAXimum = 1000, DEFault = 300
Response	None.
Example	ETH:PORT1:PTP:TIM:UDUR 300
Note	

Syntax	ETHernet:PORT<Pt>:PTP:TIMing:UDURation?
Description	This query returns the PTP timing unicast duration.
Parameter	<Pt> = Port number
Response	<duration> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:TIM:UDUR? → 300
Note	

12.11.74 EThernet:PORT<Pt>:PTP:TIMing:GCABle

Syntax	EThernet:PORT<Pt>:PTP:TIMing:GCABle <delay>
Description	This command sets the delay time of GPS antenna cable length. Unit: nano seconds.
Parameters	<Pt> = Port number <delay> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1000000000, DEFault=0</i>
Response	None.
Example	ETH:PORT1:PTP:TIM:GCAB 35
Note	

Syntax	EThernet:PORT<Pt>:PTP:TIMing:GCABle?
Description	This query returns the delay time of GPS antenna cable length.
Parameter	<Pt> = Port number
Response	<delay> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:TIM:GCAB? → 35
Note	

12.11.75 EThernet:PORT<Pt>:PTP:FFIeld?

Syntax	EThernet:PORT<Pt>:PTP:FFIeld?
Description	This query returns the flagField.
Parameter	<Pt> = Port number
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:PTP:FFI? → #H0000
Note	

12.11.76 EThernet:PORT<Pt>:PTP:FFIeld:AMFLag

Syntax	EThernet:PORT<Pt>:PTP:FFIeld:AMFLag <enable>
Description	This command sets the alternateMasterFlag of flagField.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:FFI:AMFL OFF
Note	

Syntax	EThernet:PORT<Pt>:PTP:FFIeld:AMFLag?
Description	This query returns the alternateMasterFlag of flagField.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:FFI:AMFL? → 0
Note	

12.11.77 EThernet:PORT<Pt>:PTP:FFIeld:L61

Syntax	EThernet:PORT<Pt>:PTP:FFIeld:L61 <enable>
Description	This command sets the leap61 of flagField.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:FFI:L61 OFF
Note	

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:L61?
Description	This query returns the leap61 of flagField.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:FFI:L61? → 0
Note	

12.11.78 ETHernet:PORT<Pt>:PTP:FFIeld:L59

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:L59 <enable>
Description	This command sets the leap59 of flagField.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:FFI:L59 OFF
Note	

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:L59?
Description	This query returns the leap59 of flagField.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:FFI:L59? → 0
Note	

12.11.79 ETHernet:PORT<Pt>:PTP:FFIeld:CUOValid

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:CUOValid <enable>
Description	This command sets the currentUtcOffsetValid of flagField.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:FFI:CUOV OFF
Note	

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:CUOValid?
Description	This query returns the currentUtcOffsetValid of flagField.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:FFI:CUOV? → 0
Note	

12.11.80 ETHernet:PORT<Pt>:PTP:FFIeld:PTIMescale

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:PTIMescale <enable>
Description	This command sets the ptpTimescale of flagField.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:FFI:PTIM OFF
Note	

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:PTIMescale?
Description	This query returns the ptpTimescale of flagField.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:FFI:PTIM? → 0
Note	

12.11.81 ETHernet:PORT<Pt>:PTP:FFIeld:TTRaceable

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:TTRaceable <enable>
Description	This command sets the timeTraceable of flagField.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:FFI:TTR OFF
Note	

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:TTRaceable?
Description	This query returns the timeTraceable of flagField.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:FFI:TTR? → 0
Note	

12.11.82 ETHernet:PORT<Pt>:PTP:FFIeld:FTRaceable

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:FTRaceable <enable>
Description	This command sets the frequencyTraceable of flagField.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:FFI:FTR OFF
Note	

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:FTRaceable?
Description	This query returns the frequencyTraceable of flagField.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:FFI:FTR? → 0
Note	

12.11.83 ETHernet:PORT<Pt>:PTP:FFIeld:SUNCertain

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:SUNCertain <enable>
Description	This command sets the synchronizationUncertain of flagField.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:FFI:SUNC OFF
Note	

Syntax	ETHernet:PORT<Pt>:PTP:FFIeld:SUNCertain?
Description	This query returns the synchronizationUncertain of flagField.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:FFI:SUNC? → 0
Note	

12.11.84 ETHernet:PORT<Pt>:PTP:POPTions:IRTLv

Syntax	ETHernet:PORT<Pt>:PTP:POPTions:IRTLv <enable>
Description	This command sets the PTP profile options INTERFACE RATE TLV.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:PTP:POPT:IRTL OFF
Note	

Syntax	ETHernet:PORT<Pt>:PTP:POPTions:IRTLv?
Description	This query returns the PTP profile options INTERFACE RATE TLV.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:PTP:POPT:IRTL? → 0
Note	

12.11.85 ETHernet:PORT<Pt>:PTP:POPTions:IRTLv:SPEed

Syntax	ETHernet:PORT<Pt>:PTP:POPTions:IRTLv:SPEed <speed>
Description	This command sets the PTP profile options INTERFACE RATE TLV Speed.
Parameters	<Pt> = Port number <speed> = <CHARACTER PROGRAM DATA> 10M: 10Mbps 100M: 100Mbps 1G: 1Gbps 10G: 10Gbps 25G: 25Gbps 40G: 40Gbps 100G: 100Gbps <i>DEFault = 10M</i>
Response	None.
Example	ETH:PORT1:PTP:POPT:IRTL:SPE 10G
Note	

Syntax	ETHernet:PORT<Pt>:PTP:POPTions:IRTLv:SPEed?
Description	This query returns the PTP profile options INTERFACE RATE TLV Speed.
Parameter	<Pt> = Port number
Response	<speed> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:PTP:POPT:IRTL:SPE? → 10G
Note	

12.11.86 ETHernet:PORT<Pt>:PTP:LOG?

Syntax	ETHernet:PORT<Pt>:PTP:LOG?
Description	This query returns a lists of logged PTP events.
Parameter	<Pt> = Port number
Response	<log> = <STRING RESPONSE DATA>
Example	<pre> ETH:PORT1:PTP:LOG? → " 10:25:26.729 IEEE1588v2 ENABLED 10:25:26.729 Wall Clock: 10:26:00.000099450 10:25:26.740 Master: 0050FFFE235D2E:0 10:25:26.740 Master: cls:255 acc:254 var:4d2c 10:25:26.740 Master: prio1:255 prio2:255 10:25:26.740 Clock State: LISTENING " </pre>
Note	If the list is empty an execution error will be reported.

12.12 Follow

12.12.1 ETHernet:FOLLow:TRAFfic

Syntax	ETHernet:FOLLow:TRAFfic <enable>
Description	This command sets traffic setup in Test-"Generator" for PORT2 to follow PORT1.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:FOLL:TRAF ON
Note	This command is compatible with CMA3000.

Syntax	ETHernet:FOLLow:TRAFfic?
Description	This query returns whether or not traffic setup in Test-"Generator" for PORT2 follows PORT1.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:FOLL:TRAF? → 1
Note	This command is compatible with CMA3000.

12.12.2 ETHernet:FOLLow:STReam<St>

Syntax	ETHernet:FOLLow:STReam<St> <enable>
Description	This command sets setup in "Stream - Profile" and "Stream - Measurement" for PORT2 stream <St> to follow PORT1 stream <St>.
Parameters	<St> = Stream number (1-16) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:FOLL:STR2 ON
Note	This command is compatible with CMA3000.

Syntax	ETHernet:FOLLow:STReam<St>?
Description	This query returns whether or not setup in "Stream - Profile" and "Stream - Measurement" for PORT2 stream <St> follows PORT1 stream <St>.
Parameter	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:FOLL:STR1? → 0
Note	This command is compatible with CMA3000.

12.12.3 ETHernet:FOLLow:GATeway<St>

Syntax	ETHernet:FOLLow:GATeway<St> <enable>
Description	This command sets gateway setup for PORT2 stream <St> to follow PORT1 stream <St>.
Parameters	<St> = Stream number (1-16) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:FOLL:GAT1 OFF
Note	This will only have an effect if ETHernet:FOLLow:STReam<St> is enabled. This command is compatible with CMA3000.

Syntax	ETHernet:FOLLow:GATeway<St>?
Description	This query returns whether or not gateway setup for PORT2 stream <St> follows PORT1 stream <St>.
Parameter	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:FOLL:GAT1? → 0
Note	This command is compatible with CMA3000.

12.12.4 ETHernet:FOLLow:SETTings

Syntax	ETHernet:FOLLow:SETTings <enable>
Description	This command sets settings setup (Incoming Frames, Receiver Setup, In-band Setup, and Miscellaneous) in SETUP screen for PORT2 to follow PORT1.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:FOLL:SETT ON
Note	This command is compatible with CMA3000.

Syntax	ETHernet:FOLLow:SETTings?
Description	This query returns whether or not settings setup (Incoming Frames, Receiver Setup, In-band Setup, and Miscellaneous) in SETUP screen for PORT2 follows PORT1.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:FOLL:SETT? → 1
Note	This command is compatible with CMA3000.

12.12.5 ETHernet:FOLLow:FILTer

Syntax	ETHernet:FOLLow:FILTer <enable>
Description	This command sets filter setup for PORT2 to follow PORT1.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:FOLL:FILT OFF
Note	This command is compatible with CMA3000.

Syntax	ETHernet:FOLLow:FILTer?
Description	This query returns whether or not filter setup for PORT2 follows PORT1.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:FOLL:FILT? → 0
Note	This command is compatible with CMA3000.

12.12.6 ETHernet:FOLLow:THResholds

Syntax	ETHernet:FOLLow:THResholds <enable>
Description	This command sets threshold setup for PORT2 to follow PORT1.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:FOLL:THR ON
Note	This command is compatible with CMA3000.

Syntax	ETHernet:FOLLow:THResholds?
Description	This query returns whether or not threshold setup for PORT2 follows PORT1.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:FOLL:THR? → 1
Note	This command is compatible with CMA3000.

12.12.7 ETHernet:FOLLow:SYNCe

Syntax	ETHernet:FOLLow:SYNCe <enable>
Description	This command sets SyncE setup for PORT2 to follow PORT1.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:FOLL:SYNC ON
Note	This command is compatible with CMA3000.

Syntax	ETHernet:FOLLow:SYNCe?
Description	This query returns whether or not SyncE setup for PORT2 follows PORT1.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:FOLL:SYNC? → 1
Note	This command is compatible with CMA3000.

12.12.8 ETHernet:FOLLow:PTP

Syntax	ETHernet:FOLLow:PTP <enable>
Description	This command sets Precision Time Protocol setup for PORT2 to follow PORT1.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:FOLL:PTP ON
Note	This command is compatible with CMA3000.

Syntax	ETHernet:FOLLow:PTP?
Description	This query returns whether or not Precision Time Protocol setup for PORT2 follows PORT1.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:FOLL:PTP? → 1
Note	This command is compatible with CMA3000.

12.12.9 ETHernet:PORT<Pt>:FOLLow:TRAFfic

Syntax	ETHernet:PORT<Pt>:FOLLow:TRAFfic <enable>
Description	This command sets traffic setup in Test-”Generator” for port <Pt> to follow PORT1.
Parameter	<Pt> = Port number (2-4) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:PORT2:FOLL:TRAF ON
Note	

Syntax	ETHernet:PORT<Pt>:FOLLow:TRAFfic?
Description	This query returns whether or not traffic setup in Test-”Generator” for port <Pt> follows PORT1.
Parameter	<Pt> = Port number (2-4)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT2:FOLL:TRAF? → 1
Note	

12.12.10 ETHernet:PORT<Pt>:FOLLow:STReam<St>

Syntax	ETHernet:PORT<Pt>:FOLLow:STReam<St> <enable>
Description	This command sets setup in ”Stream - Profile” and ”Stream - Measurement” for port <Pt> stream <St> to follow PORT1 stream <St>.
Parameter	<Pt> = Port number (2-4)
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:PORT2:FOLL:STR1 ON
Note	

Syntax	ETHernet:PORT<Pt>:FOLLow:STReam<St>?
Description	This query returns whether or not stream setup in ”Stream - Profile” and ”Stream - Measurement” for port <Pt> stream <St> follows PORT1 stream <St>.
Parameter	<Pt> = Port number (2-4)
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT2:FOLL:STR1? → 1
Note	

12.12.11 ETHernet:PORT<Pt>:FOLLow:GATeway<St>

Syntax	ETHernet:PORT<Pt>:FOLLow:GATeway<St> <enable>
Description	This command sets gateway setup for port <Pt> stream <St> to follow PORT1 stream <St>.
Parameter	<Pt> = Port number (2-4)
	<St> = Stream number (1-16)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:PORT2:FOLL:GAT1 OFF
Note	This will only have an effect if ETH:PORT<Pt>:FOLLow:STReam<St> is enabled.

Syntax	ETHernet:PORT<Pt>:FOLLow:GATeway<St>?
Description	This query returns whether or not gateway setup for port <Pt> stream <St> follows PORT1 stream <St>.
Parameter	<Pt> = Port number (2-4)
	<St> = Stream number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT2:FOLL:GAT1? → 0
Note	

12.12.12 ETHernet:PORT<Pt>:FOLLow:SETTings

Syntax	ETHernet:PORT<Pt>:FOLLow:SETTings <enable>
Description	This command sets settings setup (Incoming Frames, Receiver Setup, In-band Setup, and Miscellaneous) for port <Pt> to follow PORT1.
Parameter	<Pt> = Port number (2-4) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT2:FOLL:SETT ON
Note	

Syntax	ETHernet:PORT<Pt>:FOLLow:SETTings?
Description	This query returns whether or not settings setup (Incoming Frames, Receiver Setup, In-band Setup, and Miscellaneous) for port <Pt> follows PORT1.
Parameter	<Pt> = Port number (2-4)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT2:FOLL:SETT? → 1
Note	

12.12.13 ETHernet:PORT<Pt>:FOLLow:FILTer

Syntax	ETHernet:PORT<Pt>:FOLLow:FILTer <enable>
Description	This command sets filter setup for port <Pt> to follow PORT1.
Parameter	<Pt> = Port number (2-4) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT2:FOLL:FILT OFF
Note	

Syntax	ETHernet:PORT<Pt>:FOLLow:FILTer?
Description	This query returns whether or not filter setup for port <Pt> follows PORT1.
Parameter	<Pt> = Port number (2-4)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT2:FOLL:FILT? → 0
Note	

12.12.14 ETHernet:PORT<Pt>:FOLLow:THResholds

Syntax	ETHernet:PORT<Pt>:FOLLow:THResholds <enable>
Description	This command sets threshold setup for port <Pt> to follow PORT1.
Parameter	<Pt> = Port number (2-4) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT2:FOLL:THR ON
Note	

Syntax	ETHernet:PORT<Pt>:FOLLow:THResholds?
Description	This query returns whether or not threshold setup for port <Pt> follows PORT1.
Parameter	<Pt> = Port number (2-4)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT2:FOLL:THR? → 1
Note	

12.12.15 EThernet:PORT<Pt>:FOLLow:SYNCe

Syntax	EThernet:PORT<Pt>:FOLLow:SYNCe <enable>
Description	This command sets SyncE setup for port <Pt> to follow PORT1.
Parameter	<Pt> = Port number (2-4) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT2:FOLL:SYNC ON
Note	

Syntax	EThernet:PORT<Pt>:FOLLow:SYNCe?
Description	This query returns whether or not SyncE setup for port <Pt> follows PORT1.
Parameter	<Pt> = Port number (2-4)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT2:FOLL:SYNC? → 1
Note	

12.12.16 EThernet:PORT<Pt>:FOLLow:PTP

Syntax	EThernet:PORT<Pt>:FOLLow:PTP <enable>
Description	This command sets Precision Time Protocol (IEEE 1588v2) setup for port <Pt> to follow PORT1.
Parameter	<Pt> = Port number (2-4) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT2:FOLL:PTP ON
Note	

Syntax	EThernet:PORT<Pt>:FOLLow:PTP?
Description	This query returns whether or not Precision Time Protocol (IEEE 1588v2) setup for port <Pt> follows PORT1.
Parameter	<Pt> = Port number (2-4)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT2:FOLL:PTP? → 1
Note	

12.12.17 EThernet:PORT<Pt>:FOLLow:WAN

Syntax	EThernet:PORT<Pt>:FOLLow:WAN <enable>
Description	This command sets WAN setup for port <Pt> to follow PORT1.
Parameter	<Pt> = Port number (2-4) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:PORT2:FOLL:WAN ON
Note	This command can be used in V2.00 or later.

Syntax	EThernet:PORT<Pt>:FOLLow:WAN?
Description	This query returns whether or not WAN setup for port <Pt> follows PORT1.
Parameter	<Pt> = Port number (2-4)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT2:FOLL:WAN? → 1
Note	This command can be used in V2.00 or later.

12.13 Alarm/Error Insertion

12.13.1 ETHernet:PORT<Pt>:STIMuli:ALARm

Syntax	ETHernet:PORT<Pt>:STIMuli:ALARm <alarm>
Description	This command sets the type of alarm destination.
Parameters	<Pt> = Port number <alarm> = <CHARACTER PROGRAM DATA> NONE: No alarm LINK: No link REM: Remote fault LF: Local fault ¹ <i>DEFault = NONE</i>
Response	None.
Example	ETH:PORT1:STIM:ALAR LINK
Note	¹ Requires 10G as the active interface.

Syntax	ETHernet:PORT<Pt>:STIMuli:ALARm?
Description	This query returns the type of alarm destination.
Parameter	<Pt> = Port number
Response	<alarm> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STIM:ALAR? → LINK
Note	

12.13.2 ETHernet:PORT<Pt>:STIMuli:ERRor

Syntax	ETHernet:PORT<Pt>:STIMuli:ERRor <error>
Description	This command sets the type of error destination.
Parameters	<Pt> = Port number <error> = <CHARACTER PROGRAM DATA> NONE: No error IFG: IFG ¹ FCS: FCS PRE: Preamble PAUS: PAUSE frames IPCS: Wrong IP checksum FRAG: Fragmented IP L4CS: Wrong layer 4 checksum PRBS: PRBS bit error BSEQ: BERT sequence error SYMB: Error symbol / Invalid 10G block ² FSymb: FEC symbol error FSKIP: Frame skipped error <i>DEFault = NONE</i>
Response	None.
Example	ETH:PORT1:STIM:ERR L4CS
Note	¹ Not available when 10Gbps is enabled. ² When 10G is enabled, invalid 10G blocks are inserted instead of error symbols.

Syntax	ETHernet:PORT<Pt>:STIMuli:ERRor?
Description	This query returns the type of error destination.
Parameter	<Pt> = Port number
Response	<error> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STIM:ERR? → L4CS
Note	

12.13.3 ETHernet:PORT<Pt>:STIMuli:EINSerTion

Syntax	ETHernet:PORT<Pt>:STIMuli:EINSerTion <mode>
Description	This command sets the error insertion mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Error insertion disabled MANual B1: Burst every 1 second B10: Burst every 10 seconds BE2: Burst · 1E-02 BE3: Burst · 1E-03 BE4: Burst · 1E-04 BE5: Burst · 1E-05 BE6: Burst · 1E-06 BE7: Burst · 1E-07 DEFault = OFF
Response	None.
Example	ETH:PORT1:STIM:EINS MAN
Note	If insertion is set to MANual, errors are inserted with SYST:STIM:INS. See section 2.3.52. BE2-BE7 can only be used with PRBS bit error.

Syntax	ETHernet:PORT<Pt>:STIMuli:EINSerTion?
Description	This query returns the error insertion mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STIM:EINS? → MAN
Note	

12.13.4 ETHernet:PORT<Pt>:STIMuli:EBLength

Syntax	ETHernet:PORT<Pt>:STIMuli:EBLength <length>
Description	This command sets the error burst length.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> MINimum = 1¹, MAXimum = 65535¹, DEFault = 1¹
Response	None.
Example	ETH:PORT1:STIM:EBL 128
Note	¹ The following error types have other MINimum, MAXimum and DEFault values. IFG: MINimum = 2, MAXimum = 100, DEFault = 2 FRAG: MINimum = 2, MAXimum = 5, DEFault = 2 PRBS: MINimum = 1, MAXimum = 255, DEFault = 1 BSEQ: MINimum = 2, MAXimum = 2, DEFault = 2

Syntax	ETHernet:PORT<Pt>:STIMuli:EBLength?
Description	This query returns the error burst length.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STIM:EBL? → 128
Note	

12.13.5 ETHernet:PORT<Pt>:STIMuli:FEC:ERRor:LANE

Syntax	ETHernet:PORT<Pt>:STIMuli:FEC:ERRor:LANE <content>
Description	This command sets the lane number.
Parameters	<Pt> = Port number <content> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000, MAXimum=#B1111, DEFault=#B0000</i>
Response	None.
Example	ETH:PORT1:STIM:FEC:ERR:LANE #B1001 This command add error into lane 0 and 3.
Note	This command can be used on 100/400G.

Syntax	ETHernet:PORT<Pt>:STIMuli:FEC:ERRor:LANE?
Description	This query returns the lane number.
Parameter	<Pt> = Port number
Response	<content> = <BINARY NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STIM:FEC:ERR:LANE? → #B0000
Note	This command can be used on 100/400G.

12.13.6 ETHernet:PORT<Pt>:STIMuli:WAN:ALARm

Syntax	ETHernet:PORT<Pt>:STIMuli:WAN:ALARm <alarm>
Description	This command sets the type of WAN alarm destination.
Parameters	<Pt> = Port number <alarm> = <CHARACTER PROGRAM DATA> NONE: No alarm LOS: Loss of signal LOF: Loss of frame OOF: Out of frame STIM: Section/Mux section trace identifier mismatch LAIS: Line/Mux section - alarm indication signal LRDI: Line/Mux section - remote defect indicator PAIS: Path/Administrative unit - alarm indication signal PLOP: Path/Administrative unit - loss of pointer PTIM: Path/High-order path - trace identifier mismatch PPLM: Path/High-order path - payload label mismatch PUNEQ: Path/High-order path - unequipped PRDI: Path enhanced/High-order path - remote defect indicator LCD: Loss of code-group delineation <i>DEFault = NONE</i>
Response	None.
Example	ETH:PORT1:STIM:WAN:ALAR LOS
Note	This command can be used in V2.00 or later. ¹ Only available when the WAN terminology is SONET.

Syntax	ETHernet:PORT<Pt>:STIMuli:WAN:ALARm?
Description	This query returns the type of WAN alarm destination.
Parameter	<Pt> = Port number
Response	<alarm> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STIM:WAN:ALAR? → LOS
Note	This command can be used in V2.00 or later.

12.13.7 ETHernet:PORT<Pt>:STIMuli:WAN:ERRor

Syntax	ETHernet:PORT<Pt>:STIMuli:WAN:ERRor <error>
Description	This command sets the WAN error/violation destination.
Parameters	<Pt> = Port number <error> = <CHARACTER PROGRAM DATA> NONE: No error A1A2: Frame alignment word B1: B1 checksum byte B2: B2 checksum byte LREI: Line/Multiplex section - remote error indication B3: B3 checksum byte PREI: Path/High-order path - remote error indication <i>DEFault = NONE</i>
Response	None.
Example	ETH:PORT1:STIM:WAN:ERR B1
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:STIMuli:WAN:ERRor?
Description	This query returns the WAN error/violation destination.
Parameter	<Pt> = Port number
Response	<error> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STIM:WAN:ERR? → B1
Note	This command can be used in V2.00 or later.

12.13.8 ETHernet:PORT<Pt>:STIMuli:WAN:EINSection

Syntax	ETHernet:PORT<Pt>:STIMuli:WAN:EINSection <mode>
Description	This command sets the WAN error insertion mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Error insertion disabled MANual <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STIM:WAN:EINS MAN
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:STIMuli:WAN:EINSection?
Description	This query returns the WAN error insertion mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STIM:WAN:EINS? → MAN
Note	This command can be used in V2.00 or later.

12.13.9 ETHernet:PORT<Pt>:STIMuli:WAN:EBLength

Syntax	ETHernet:PORT<Pt>:STIMuli:WAN:EBLength <length>
Description	This command sets the WAN error burst length.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8000, DEFault = 1</i>
Response	None.
Example	ETH:PORT1:STIM:WAN:EBL 128
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:STIMuli:WAN:EBLength?
Description	This query returns the WAN error burst length.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STIM:WAN:EBL? → 128
Note	This command can be used in V2.00 or later.

12.13.10 ETHernet:PORT<Pt>:STIMuli:DEViation

Syntax	ETHernet:PORT<Pt>:STIMuli:DEViation <deviation>
Description	This command sets the amount of deviation to apply to the transmitted Ethernet signal. Unit: ppm.
Parameters	<Pt> = Port number <deviation> = <NUMERIC PROGRAM DATA> MT1000A: <i>MINimum</i> =-100, <i>MAXimum</i> =100, <i>DEFault</i> =0 MT1100A, MT1040A: <i>MINimum</i> =-200.0, <i>MAXimum</i> =200.0, <i>DEFault</i> = 0
Response	None.
Example	ETH:PORT1:STIM:DEV 0
Note	

Syntax	ETHernet:PORT<Pt>:STIMuli:DEViation?
Description	This query returns the amount of deviation to apply to the transmitted Ethernet signal.
Parameter	<Pt> = Port number
Response	MT1000A: <deviation> = <NR1 NUMERIC RESPONSE DATA> MT1100A, MT1040A: <deviation> = <NR2 NUMERIC RESPONSE DATA>
Example	MT1000A: ETH:PORT1:STIM:DEV? → 0 MT1100A, MT1040A: ETH:PORT1:STIM:DEV? → 0.0
Note	

12.13.11 ETHernet:PORT<Pt>:STIMuli:PCS:ALARm

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:ALARm <alarm>
Description	This command sets the type of PCS alarm destination.
Parameters	<Pt> = Port number <alarm> = <CHARACTER PROGRAM DATA> NONE: No alarm HIBER: High BER LOA: Loss of alignment HISER: High SER LDEG: Local Degrade RDEG: Remote Degrade <i>DEFault</i> = NONE
Response	None.
Example	ETH:PORT1:STIM:PCS:ALAR HIBER
Note	¹ Requires 10G as the active interface. This command can be used on 10/40/100/400G. HISER, LDEG and RDEG can be used on 400G.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:ALARm?
Description	This query returns the type of PCS alarm destination.
Parameter	<Pt> = Port number
Response	<alarm> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:ALAR? → HIBER
Note	This command can be used on 10/40/100/400G.

12.13.12 ETHernet:PORT<Pt>:STIMuli:PCS:ERRor

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:ERRor <error>
Description	This command sets the type of PCS error destination.
Parameters	<Pt> = Port number <error> = <CHARACTER PROGRAM DATA> NONE: No error INVBt00: INVBt2D: INVBt33: INVBt66: INVSH00: INVSH11: INVMARKER: BIP: FSYMBLANE: FEC symbol error (Per lane) FSYMBCW: FEC symbol error (CW) 66BE: 66B error <i>DEFault = NONE</i>
Response	None.
Example	ETH:PORT1:STIM:PCS:ERR NONE
Note	This command can be used on 10/40/100/400G. INVMARKER and BIP cannot be used on 10G. 66BE can be used on 400G.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:ERRor?
Description	This query returns the type of PCS error destination.
Parameter	<Pt> = Port number
Response	<error> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:ERR? → NONE
Note	This command can be used on 10/40/100/400G.

12.13.13 ETHernet:PORT<Pt>:STIMuli:PCS:ERRor:LANE

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:ERRor:LANE <content>
Description	This command sets the lane number.
Parameters	<Pt> = Port number <content> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000000000000000000, MAXimum=#B1111111111111111111, DE-Fault=#B1000000000000000000</i>
Response	None.
Example	ETH:PORT1:STIM:PCS:ERR:LANE #B1001000001 This command add error into lane 0, 3, and 9.
Note	This command can be used on 40/100/400G.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:ERRor:LANE?
Description	This query returns the lane number.
Parameter	<Pt> = Port number
Response	<content> = <BINARY NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:ERR:LANE? → #B10010000010000000000
Note	This command can be used on 40/100/400G.

12.13.14 ETHernet:PORT<Pt>:STIMuli:PCS:EINSection

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:EINSection <error>
Description	This command sets the PCS error insertion mode.
Parameters	<Pt> = Port number <error> = <CHARACTER PROGRAM DATA> OFF: Error insertion disabled MANual BURSt RATE ALTeRnate ALL <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:STIM:PCS:EINS MAN
Note	This command can be used on 10/40/100/400G.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:EINSection?
Description	This query returns the PCS error insertion mode.
Parameter	<Pt> = Port number
Response	<error> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:EINS? → MAN
Note	This command can be used on 10/40/100/400G.

12.13.15 ETHernet:PORT<Pt>:STIMuli:PCS:EBLength

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:EBLength <length>
Description	This command sets the PCS error burst length.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 8192, DEFault = 1</i>
Response	None.
Example	ETH:PORT1:STIM:PCS:EBL 128
Note	This command can be used on 10/40/100/400G.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:EBLength?
Description	This query returns the PCS error burst length.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:EBL? → 128
Note	This command can be used on 10/40/100/400G.

12.13.16 ETHernet:PORT<Pt>:STIMuli:PCS:ERATe

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:ERATe <rate>
Description	This command sets the PCS error rate.
Parameters	<Pt> = Port number <rate> = <NUMERIC PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STIM:PCS:ERAT 1E-8
Note	This command can be used on 10/40/100G.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:ERATe?
Description	This query returns the PCS error rate.
Parameter	<Pt> = Port number
Response	<rate> = <NR3 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:ERAT? → 1E-8
Note	This command can be used on 10/40/100G.

12.13.17 ETHernet:PORT<Pt>:STIMuli:PCS:EELength

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:EELength <length>
Description	This command sets the PCS alternate error length.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 256, DEFault = 1</i>
Response	None.
Example	ETH:PORT1:STIM:PCS:EEL 128
Note	This command can be used on 10/40/100G.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:EELength?
Description	This query returns the PCS alternate error length.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:EEL? → 128
Note	This command can be used on 10/40/100G.

12.13.18 ETHernet:PORT<Pt>:STIMuli:PCS:ENLength

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:ENLength <length>
Description	This command sets the PCS alternate normal length.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 3125000000, DEFault = 1</i>
Response	None.
Example	ETH:PORT1:STIM:PCS:ENL 128
Note	This command can be used on 10/40/100G.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:ENLength?
Description	This query returns the PCS alternate normal length.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:ENL? → 128
Note	This command can be used on 10/40/100G.

12.13.19 ETHernet:PORT<Pt>:STIMuli:PCS:ECOUNt

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:ECOUNt <count>
Description	This command sets the number of PCS error symbols.
Parameters	<Pt> = Port number <count> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 16, DEFault = 1</i>
Response	None.
Example	ETH:PORT1:STIM:PCS:ECOU 2
Note	This command can be used on 400G.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:ECOUnt?
Description	This query returns the number of PCS error symbols.
Parameter	<Pt> = Port number
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:ECOU? → 2
Note	This command can be used on 400G.

12.13.20 ETHernet:PORT<Pt>:STIMuli:PCS:CWRate

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:CWRate <rate>
Description	This command sets rate of the Codewords Symbol error.
Parameters	<Pt> = Port number <rate> = <CHARACTER PROGRAM DATA> R3: 1E-03 R4: 1E-04 R5: 1E-05 R6: 1E-06 R7: 1E-07 R8: 1E-08 R9: 1E-09 <i>DEFault = 1E-03</i>
Response	None.
Example	ETH:PORT1:STIM:PCS:CWR R3
Note	This command can be used on 400G. This command is valid only when inserting a FEC symbol error (CW) . Inserts the specified number of CW symbol errors at the rate set by this command. Refer to ETHernet:PORT<Pt>:STIMuli:PCS:ECOUnt for the setting of the number of CW symbol errors.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:CWRate?
Description	This query returns rate of the Codewords Symbol error.
Parameter	<Pt> = Port number
Response	<rate> = <CHARACTER PROGRAM DATA>
Example	ETH:PORT1:STIM:PCS:CWR? → R3
Note	This command can be used on 400G.

12.13.21 ETHernet:PORT<Pt>:STIMuli:PCS:SKEW:BIT

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:SKEW:BIT <bit>
Description	This command sets the PCS skew bit.
Parameters	<Pt> = Port number <bit> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 8448, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STIM:PCS:SKEW:BIT 128
Note	This command can be used on 40/100/400G.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:SKEW:BIT?
Description	This query returns the PCS skew bit.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:SKEW:BIT? → 128
Note	This command can be used on 40/100/400G.

12.13.22 ETHernet:PORT<Pt>:STIMuli:PCS:SKEW:TYPE

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:SKEW:TYPE <error>
Description	This command sets the PCS skew type.
Parameters	<Pt> = Port number <error> = <CHARACTER PROGRAM DATA> TXLANE: PCS skew type Tx lane PHYLANE: PCS skew type physical lane <i>DEFault = TXLANE</i>
Response	None.
Example	ETH:PORT1:STIM:PCS:SKEW:TYPE PHYLANE
Note	This command can be used on 40/100G.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:SKEW:TYPE?
Description	This query returns the PCS skew type.
Parameter	<Pt> = Port number
Response	<error> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:SKEW:TYPE? → PHYLANE
Note	This command can be used on 40/100G.

12.13.23 ETHernet:PORT<Pt>:STIMuli:PCS:SKEW:LANE

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:SKEW:LANE <content>
Description	This command sets the PCS skew lane number.
Parameters	<Pt> = Port number <content> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000000000000000000, MAXimum=#B11111111111111111111, DE-Fault=#B1000000000000000000</i>
Response	None.
Example	ETH:PORT1:STIM:PCS:SKEW:LANE #B1001000001 This command add error into lane 0, 3, and 9.
Note	This command can be used on 40/100/400G.

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:SKEW:LANE?
Description	This query returns the PCS skew lane number.
Parameter	<Pt> = Port number
Response	<content> = <BINARY NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:SKEW:LANE? → #B10010000010000000000
Note	This command can be used on 40/100/400G.

12.13.24 ETHernet:PORT<Pt>:STIMuli:PCS:SKEW:NS?

Syntax	ETHernet:PORT<Pt>:STIMuli:PCS:SKEW:NS?
Description	This query returns the PCS skew(ns).
Parameter	<Pt> = Port number
Response	<content> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STIM:PCS:SKEW:NS? → 819.2
Note	This command can be used on 40/100/400G.

12.14 Result

12.14.1 ETHernet:PORT<Pt>:IFETch?

Syntax	ETHernet:PORT<Pt>:IFETch? <parameter>
Description	This query fetches an Ethernet interval if available.
Parameters	<Pt> = Port number ({<parameter>} + {,}*) = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. Performance UTIL: Utilization. Response: <Min%>,<Max%>,<Avg%> THR: Throughput (bps). Response: <Min>,<Max>,<Avg> FRAT: Frame rate (fps). Response: <Min>,<Max>,<Avg> DEV: Deviation(ppm). Response: <Min>,<Max>,<Avg> Frame Stat TFR: Total frames. Response: <Count>,<Ratio> TGFR: Total good frames. Response: <Count>,<Ratio> UFR: Unicast frames. Response: <Count>,<Ratio> MFR: Multicast frames. Response: <Count>,<Ratio> BFR: Broadcast frames. Response: <Count>,<Ratio> PFR: Pause frames. Response: <Count>,<Ratio> MPLS Frame Stat MPFR: MPLS frames. Response: <Count>,<Ratio> MLM: MPLS level max. Response: <Count> MLMIN: MPLS level min. Response: <Count> EMFR: EoMPLS frames. Response: <Count>,<Ratio> LMPLS<Lv>: Last received MPLS Label, Priority and TTL. <Lv> = MPLS level. Response: <label>,<priority>,<TTL> VLAN Frame Stat VFR: VLAN frames. Response: <Count>,<Ratio> VLM: VLAN level max. Response: <Count> VLMIN: VLAN level min. Response: <Count> LVLAN<Lv>: Last received VLAN ID and priority. <Lv> = VLAN level. Response: <id>,<priority> MiM Frame Stat MIMFR: MiM frames. Response: <Count>,<Ratio> LBTAG: Last received B-TAG VLAN ID and priority Response: <id>,<priority> LITAG: Last received I-TAG service ID and priority Response: <id>,<priority> Frame Alarms & Errors TEFR: Total errored frames. Response: <Count>,<Ratio> FFR: Fragmented frames. Response: <Count>,<Ratio> UNFR: Undersized frames. Response: <Count>,<Ratio> OVFR: Oversized frames. Response: <Count>,<Ratio> FEFR: FCS errored frames. Response: <Count>,<Ratio> ESFR: Error symbol frames. Response: <Count>,<Ratio> OVRFCSErr: Oversized & FCS errored frames. Response: <Count>,<Ratio> IPCHKSUM: IP checksum errored frames. Response: <Count>,<Ratio> I10GB: Invalid 10G Blocks². Response: <Count>,<Ratio> COLL: Collisions. Response: <Count>,<Ratio> PV: Preamble violations. Response: <Count>,<Ratio> IV: IFG violations. Response: <Count>,<Ratio> LF: 10/40/100G Local Faults. Response: <Count>

continued on next page...

...continued from previous page

10GLF: Obsolete. For CMA 3000 backward compatibility only. Same as LF.
 RF: 10/40/100G Remote Faults. Response: <Count>
 10GRF: Obsolete. For CMA 3000 backward compatibility only. Same as RF.
 64B66B: 400G 64B/66B code violation. Response: <Count>

Frame difference

TFRD: Total frames difference (Tx-Rx<ref-port>)³.
 Response: <Count>

Burst Stat

BUFR: Bursted frames. Response: <Count>,<Ratio>
 NOB: Number of bursts. Response: <Count>
 AVGB: Average burst size. Response: <Count>,<Bytes>
 MAXB: Maximum burst size. Response: <Count>,<Bytes>
 MINB: Minimum burst size. Response: <Count>,<Bytes>

Size Distribution (Rx)

R46: 46-63⁴. Response: <Count>,<Ratio>
 R64: 64-127. Response: <Count>,<Ratio>
 R128: 128-255. Response: <Count>,<Ratio>
 R256: 256-511. Response: <Count>,<Ratio>
 R512: 512-1023. Response: <Count>,<Ratio>
 R1024: 1024-1518. Response: <Count>,<Ratio>
 RJUM: Jumbo frames. Response: <Count>,<Ratio>
 FSIZ: Frame size (bytes). Response: <Min>,<Max>,<Avg>

Transmit Stat(Tx)

TTFR: Total frames. Response: <Count>
 TTGB: Total good bytes (bytes). Response: <Count>
 TUFR: Unicast frames. Response: <Count>
 TMFR: Multicast frames. Response: <Count>
 TBFR: Broadcast frames. Response: <Count>
 TFE: FCS errors. Response: <Count>
 TTE: Total errors. Response: <Count>
 T46: 46-63⁴. Response: <Count>
 T64: 64-127. Response: <Count>
 T128: 128-255. Response: <Count>
 T256: 256-511. Response: <Count>
 T512: 512-1023. Response: <Count>
 T1024: 1024-1518. Response: <Count>
 TJUM: Jumbo frames. Response: <Count>

Transmit Stat(Rx)

RTGB: Total good bytes (bytes). Response: <Count>
 Each parameter of the following items is described on **Frame Stat**.
 - Total frames. → TFR
 - Unicast frames. → UFR
 - Multicast frames. → MFR
 - Broadcast frames. → BFR
 Each parameter of the following items is described on **Frame Alarms & Errors**.
 - Total errored. → TEFR
 - FCS errored. → FEFR
 Each parameter of the following items is described on **Size Distribution(Rx)**.
 - 46-63. → R46
 - 64-127. → R64
 - 128-255. → R128
 - 256-511. → R256

continued on next page...

...continued from previous page

- 512-1023. → R512
- 1024-1518. → R1024
- Jumbo frames. → RJUM

Multistream Transmit Stat

STFx: Stream x frames. Response: <CountTx>,<CountRx>

STBx: Stream x bytes (bytes). Response: <CountTx>,<CountRx>

x = Stream number (1-16)

Multistream Throughput Stat

SFPSx: Stream x frames per second (fps). Response: <CountTx>,<CountRx>

SBPSx: Stream x bits per seconds (bps). Response: <CountTx>,<CountRx>

x = Stream number (1-16)

Multistream Frame Loss

SFLx: Stream x frame loss. Response: <Count>,<Ratio>

x = Stream number (1-16)

Multistream Latency/JitterSLx: Latency (μ s). Response: <Min>,<Max>,<Avg>SJx: Jitter (μ s). Response: <Min>,<Max>,<Avg>

x = Stream number (1-16)

BER - Alarms & Errors

LOS: Loss of signal. Response: <Count>,<Ratio>

NLS: No link Seconds. Response: <Count>,<Ratio>

RFS: Remote fault seconds. Response: <Count>,<Ratio>

BPBC: Pattern bit count. Response: <Count>

BPE: Pattern errors. Response: <Count>,<Ratio>

PSA: PRBS Sync Alarm.⁶ Response: <Count>

BSE: Sequence errors. Response: <Count>

BSSNS: Seq. skipped errors. Response: <Count>

BSSL: Sequence sync. Lost. Response: <Count>

BFL: Frame loss. Response: <Count>

BFLS: Frame loss seconds. Response: <Count>

SDMD: Maximum disruption. Response: <Microseconds>

SDAD: Average disruption. Response: <Microseconds>,<Count>

MES: M.2100 ES. Response: <Seconds>,<Ratio>

MSES: M.2100 SES. Response: <Seconds>,<Ratio>

MALS: M.2100 ALS. Response: <Seconds>,<Ratio>

MUAT: M.2100 UAT. Response: <Seconds>,<Ratio>

MAVT: M.2100 AVT. Response: <Seconds>,<Ratio>

MEFS: M.2100 EFS. Response: <Seconds>,<Ratio>

TDL: Throughput Data Layer (bps). Response: <Min>,<Max>,<Avg>

TNL: Throughput Network Layer (bps). Response: <Min>,<Max>,<Avg>

TLL: Throughput Link Layer (bps). Response: <Min>,<Max>,<Avg>

TPPL: Throughput Physical Layer without Preamble (bps).

Response: <Min>,<Max>,<Avg>

TPL: Throughput Physical Layer (bps). Response: <Min>,<Max>,<Avg>

TUL: Throughput Utilization Layer (bps). Response: <Min>,<Max>,<Avg>

WAN - Alarms

WLOS: Loss of signal. Response: <Seconds>,<Ratio>

WLOF: Loss of frame. Response: <Seconds>,<Ratio>

WSEF: WSEF/OOF -Severely errored frame/Out of frame. Response: <Seconds>,<Ratio>

WSTIM: Section/Mux section - Trace identifier mismatch. Response: <Seconds>,<Ratio>

WLAIS: Line/Mux section - alarm indication signal. Response: <Seconds>,<Ratio>

continued on next page...

...continued from previous page

WLRDI: Line/Mux section - remote defect indicator. Response: <Seconds>,<Ratio>

WPAIS: Path/Administrative unit - alarm indication signal.

Response: <Seconds>,<Ratio>

WPLOP: Path/Administrative unit - loss of pointer. Response: <Seconds>,<Ratio>

WPTIM: Path/High-order path - trace Identifier mismatch.

Response: <Seconds>,<Ratio>

WPPLM: Path/High-order path - payload label mismatch. Response: <Seconds>,<Ratio>

WPUNEQ: Path/High-order path - unequipped. Response: <Seconds>,<Ratio>

WPRDI: Path/High-order path - remote defect indication.

Response: <Seconds>,<Ratio>

WPLCD: Loss of code-group delineation. Response: <Seconds>,<Ratio>

WAN - Errors

WA1A2: Response: <Count>,<Ratio>

WB1: Response: <Count>,<Ratio>

WB2: Response: <Count>,<Ratio>

WLREI: Line/Mux section - remote error indication. Response: <Count>,<Ratio>

WB3: Response: <Count>,<Ratio>

WPREI: Path/High-order path - remote error indication. Response: <Count>,<Ratio>

WAN - Mux quality

WMFES: Mux forward ES. Response: <Count>,<Ratio>

WMFSES: Mux forward SES. Response: <Count>,<Ratio>

WMFUNAV: Mux forward UNAV. Response: <Count>,<Ratio>

WMBES: Mux backward ES. Response: <Count>,<Ratio>

WMBSES: Mux backward SES. Response: <Count>,<Ratio>

WMBUNAV: Mux backward UNAV Response: <Count>,<Ratio>

WAN - SPE quality

WSFES: SPE forward ES. Response: <Count>,<Ratio>

WSFSES: SPE forward SES. Response: <Count>,<Ratio>

WSFUNAV: SPE forward UNAV. Response: <Count>,<Ratio>

WSBES: SPE backward ES. Response: <Count>,<Ratio>

WSBSES: SPE backward SES. Response: <Count>,<Ratio>

WSBUNAV: SPE backward UNAV Response: <Count>,<Ratio>

SyncE - Synchronous Ethernet

QLD: Quality level distribution. Response: A percentage value for each of the 16 QLs <Count>,...

QLR: Quality level reports. Response: <Count>,<Rate>

QLU: Quality level unavailable time (SSF). Response: <Seconds>,<Ratio>

QLT: Quality level transmission count. Response: <Count>,<Ratio>

IEEE1588v2 PTP - Precision Time Protocol

PAC: Announce count. Response: <CountTx>,<CountRx>

PSC: Sync count. Response: <CountTx>,<CountRx>

PFUC: Follow up count. Response: <CountTx>,<CountRx>

PDRC: Delay request count. Response: <CountTx>,<CountRx>

PDRESC: Delay response count. Response: <CountTx>,<CountRx>

PPDRC: Peer delay request count. Response: <CountTx>,<CountRx>

PPDRESC: Peer delay response count. Response: <CountTx>,<CountRx>

PPDFC: Peer delay follow-up count. Response: <CountTx>,<CountRx>

SIGN: Signalling messages count. Response: <CountTx>,<CountRx>

MGM: Management messages count. Response: <CountTx>,<CountRx>

PO: Offset. Unit: Nano seconds. Response: <Min>,<Max>,<Avg>

PAO: Absolute offset. Unit: Nano seconds. Response: <Min>,<Max>,<Avg>

POD: Offset deviation. Unit: Nano seconds. Response: <Min>,<Max>,<Avg>

continued on next page...

...continued from previous page

POV: Offset variance. Unit: (seconds)². Response: <Min>,<Max>,<Avg>
 PMPD: Mean path delay. Unit: Nano seconds. Response: <Min>,<Max>,<Avg>
 PMPDP: Peer mean path delay. Unit: Nano seconds. Response: <Min>,<Max>,<Avg>
 PPDV: Path delay variation. Unit: Nano seconds. Response: <Min>,<Max>,<Avg>
 PSIRCC: Signalling INTERFACE RATE TLV changed count. Response: <Count>
 PICST: IEEE Clock State Transitions. Response: <Count>
 PISTE: IEEE State Transition Events. Response: <Count>
 PIF: IEEE Faults. Response: <Count>
 PICGC: IEEE Changes in Grandmaster Clock. Response: <Count>
 PGW: GPS vs Wall clock. Unit: Nano seconds. Response: <Min>,<Max>,<Avg>

OAM 802.ah

OINF: Information count. Response: <CountTx>,<CountRx>
 OEVENT: Event count. Response: <CountTx>,<CountRx>
 OVREQ: Variable Request count. Response: <CountTx>,<CountRx>
 OVRES: Variable response count. Response: <CountTx>,<CountRx>
 OLBC: Loopback count. Response: <CountTx>,<CountRx>
 ODUP: Duplicate count. Response: <CountTx>,<CountRx>
 OUNS: Unsupported count. Response: <CountTx>,<CountRx>
 OORG: Organization count. Response: <CountTx>,<CountRx>

OAM 802.ag and Y.1731

OCCM: CCM count. Response: <CountTx>,<CountRx>
 OLBM: LBM count. Response: <CountTx>,<CountRx>
 OLBR: LBR count. Response: <CountTx>,<CountRx>
 OLTm: LTM count. Response: <CountTx>,<CountRx>
 OLTR: LTR count. Response: <CountTx>,<CountRx>
 OOTH: Other count. Response: <CountTx>,<CountRx>
 OTOT: Total count. Response: <CountTx>,<CountRx>

Sync Test

BRATE: Bitrate⁵. Unit: bps. Response: <Count>
 BRATED: Bitrate difference⁵. Unit: ppb. Response: <Count>
 PHASE: Phase error result⁵. Unit: Nano seconds. Response: <Seconds>
 PHASEAVG: Average phase error result⁵. Unit: Nano seconds. Response: <Seconds>
 PHASEMIN: Minimum phase error result⁵. Unit: Nano seconds. Response: <Seconds>
 PHASEMAX: Maximum phase error result⁵. Unit: Nano seconds. Response: <Seconds>
 FILTERED: Filtered TE (LF) result⁵. Unit: Nano seconds. Response: <Seconds>
 FILTEREDAVG: Average filtered TE (LF) result⁵. Unit: Nano seconds. Response: <Seconds>
 FILTEREDMIN: Minimum filtered TE (LF) result⁵. Unit: Nano seconds. Response: <Seconds>
 FILTEREDMAX: Maximum filtered TE (LF) result⁵. Unit: Nano seconds. Response: <Seconds>
 PPS: 1PPS deviation result⁵. Unit: Nano seconds. Response: <Seconds>
 PPSAVG: Average 1PPS deviation average result⁵. Unit: Nano seconds. Response: <Seconds>
 PPSMIN: Minimum 1PPS deviation result⁵. Unit: Nano seconds. Response: <Seconds>
 PPSMAX: Maximum 1PPS deviation result⁵. Unit: Nano seconds. Response: <Seconds>
 SYNCAVG: Average sync message one way delay time⁵. Unit: Nano seconds. Response: <Seconds>
 SYNCMIN: Minimum sync message one way delay time⁵. Unit: Nano seconds. Response: <Seconds>
 SYNCMAX: Maximum sync message one way delay time⁵. Unit: Nano seconds. Response: <Seconds>
 FOLLOWAVG: Average followup message one way delay time⁵. Unit: Nano seconds. Response: <Seconds>

continued on next page...

...continued from previous page

FOLLOWMIN: Minimum followup message one way delay time⁵. Unit: Nano seconds.
 Response: <Seconds>
 FOLLOWMAX: Maximum followup message one way delay time⁵. Unit: Nano seconds.
 Response: <Seconds>
 DELAYAVG: Average delay request Message one way delay time⁵. Unit: Nano seconds.
 Response: <Seconds>
 DELAYMIN: Minimum delay request Message one way delay time⁵. Unit: Nano seconds.
 Response: <Seconds>
 DELAYMAX: Maximum delay request Message one way delay time⁵. Unit: Nano seconds.
 Response: <Seconds>
 CTE: cTE result⁵. Unit: Nano seconds. Response: <Seconds>
 DTE: dTE result⁵. Unit: Nano seconds. Response: <Seconds>
 MAXTE: Maximum TE result⁵. Unit: Nano seconds. Response: <Seconds>
 CTE1: cTE1 result⁵. Unit: Nano seconds. Response: <Seconds>
 CTE4: cTE4 result⁵. Unit: Nano seconds. Response: <Seconds>
 MAXTE1: Max—TE1— result⁵. Unit: Nano seconds. Response: <Seconds>
 MAXTE4: Max—TE4— result⁵. Unit: Nano seconds. Response: <Seconds>
 TERR: Terr result⁵. Unit: Nano seconds. Response: <Seconds>
 TERRABSMAX: Absolute maximum Terr result⁵. Unit: Nano seconds. Response:
 <Seconds>
 TERRMIN: Minimum Terr result⁵. Unit: Nano seconds. Response: <Seconds>
 TERRMAX: Maximum Terr result⁵. Unit: Nano seconds. Response: <Seconds>

PCS Alarms & Errors

ISH: Invalid Sync Header. Response: <Lane>⁷,<Total>
 IAM: Invalid Alignment Marker. Response: <Lane>⁷,<Total>
 BIP: BIP Error. (bit) Response: <Lane>⁷,<Total>
 IBLOCK: Invalid Block. Response: <Count>
 HBER: High BER. Response: <Count>,<Ratio>
 HSER: High SER. Response: <Count>,<Ratio>
 FECDEGSR: FEC Degrade SER. Response: <Count>
 LOCALDEG: Local Degrade. Response: <Count>
 REMOTEDEG: Remote Degrade. Response: <Count>

PCS Status

SHLOCK: Sync header Lock.(LOBL) 0: No Alarm, 1: Alarm. <Lane>⁷
 AMLOCK: Align Marker Lock.(LOAML) 0: No Alarm, 1: Alarm. <Lane>⁷
 MMAP: Marker Map. <Lane>⁷
 RSKEW: Relative Skew. Unit: Nano seconds. <Lane>⁷
 ALIGN: Alignment Status.(LOA) <Lane>⁷

FEC Errors

FECCORCW: FEC Corrected Codewords. Response: <Count>
 FECUCORCW: FEC Uncorrected Codewords. Response: <Count>
 FECCORCWDISTRIUTION: FEC Corr. Codeword distribution. Response: <Count>
 FECSYMERR: FEC Symbol errors. Response: <Total>,<Lane>⁷
 FECSYMERRRATE: FEC Symbol errors rate. Response: <Total>,<Lane>⁷
 FECMAXSYMERRRATE: Max FEC Symbol errors rate. Response: <Total>,<Lane>⁷
 FECLOFA: Loss of Alignment. Response: <Count>
 FECMMAP: FEC Lane Marker. <Lane>⁷

Conditions

LOSTEXTREF: External reference 10MHz clock. Response: <Count>,<Ratio>
 LOSTREF1PPS: External 1PPS . Response: <Count>,<Ratio>
 LOSTGPS: GPS. Response: <Count>,<Ratio>

Transceiver

continued on next page...

...continued from previous page

	TRMEDLOLDEMODO: Media Rx Demodulator Loss of Lock. Response: <Seconds>,<Ratio> TRMEDLOLCDC: Media Rx Demodulator Loss of Lock. Response: <Seconds>,<Ratio> TRMEDLOA: Media Rx Loss of Alignment. Response: <Seconds>,<Ratio> TRMEDOOA: Media Rx Out of Alignment. Response: <Seconds>,<Ratio> TRMEDLOLDESKEW: Media Rx Deskew Loss of Lock. Response: <Seconds>,<Ratio> TRMEDFIFO: Media Rx FIFO Error. Response: <Seconds>,<Ratio> TRMEDFED: Media FED. Response: <Seconds>,<Ratio> TRMEDFDD: Media FDD. Response: <Seconds>,<Ratio> TRMEDRD: Media Remote Degrade. Response: <Seconds>,<Ratio> TRMEDLD: Media Local Degrade. Response: <Seconds>,<Ratio> TRMEDRPF: Media Remote Phy Fault. Response: <Seconds>,<Ratio> TRMEDBITS: Media Rx bits. Response: <Count> TRMEDCORRBITS: Media Corrected bits. Response: <Count>,<Ratio> TRMEDFRAMES: Media Rx frames. Response: <Count> TRMEDFRAMESUNCORRERR: Media Uncorrectable frames. Response: <Count> TRMEDCORRBITRATEMAX: Media Corrected Bitrate(Max). Response: <Ratio> TRMEDCD: Media Chromatic dispersion. Response: <Max>,<Avg> TRMEDOSNR: Media Optical Signal to Noise Ratio. Response: <Min>,<Avg> TRMEDSOPROC: Media State Of Polarization Rate Of Change. Response: <Max>,<Avg> TRMEDTXPW: Media Tx Power. Response: <Min>,<Max>,<Avg> TRMEDRXSIGPW: Media Rx Signal Power. Response: <Min>,<Max>,<Avg> TRMEDCFO: Media Carrier Frequency Offset. Response: <Min>,<Max>,<Avg>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Format: Numeric List Each result is formatted according to the specification in the parameter field. Values that are not relevant or applicable for the current measurement return NaN (<NR3 NUMERIC RESPONSE DATA>)
Examples	ETH:PORT1:IFET? (TGFR) → (6400,0.853) ETH:PORT1:IFET? (UFR,BFR) → (251923,0.900),(27992,0.100)
Notes	This command fetches the results from the interval selected using the MEASurement:SEtup:SElect command (see section 18.2.2). ¹ Results are only available when the WAN terminology is SONET. ² Results are only available at 10Gbps. ³ <ref-port> is set with the command ETH:PORT1:TFRD:PSEL ⁴ Result are only available at MPLS/IP over OTN. ⁵ Result are only available on the Sync Test application. ⁶ Result are only available when cross pattern by Frame by Frame is available. ⁷ <Lane> show the results of each lane. Example: 10GBE → (0), 40GBE → (0,0,0,0), 400GBE → (0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0) If the requested result is not available, NaN (<NR3 NUMERIC RESPONSE DATA>) is returned. If there is one or more results, the last ",," is always removed.

12.14.2 EThernet:PORT<Pt>:TFETch?

Syntax	EThernet:PORT<Pt>:TFETch? <parameter>
Description	This query fetches thresholds for a Ethernet interval if available.
Parameters	<Pt> = Port number ({<parameter>} + {,})* = <EXPRESSION PROGRAM DATA> Performance UTIL: Utilization. THR: Throughput. Frame Stat UFR: Unicast frames. MFR: Multicast frames.

continued on next page...

...continued from previous page

	BFR: Broadcast frames. PFR: Pause frames. FFR: Fragmented frames. UNFR: Undersized frames. OVFR: Oversized frames. FEFR: FCS errored frames. OVRFCSEERR: Oversized & FCS errored frames. IPCHKSUM: IP checksum errored frames. COLL: Collisions. PV: Preamble violations. IV: IFG violations. TEFR: Total errored frames. Transmit Stat TFRD: Total frames difference (Tx-Rx<ref-port>)¹. BER - Alarms & Errors BPE: Pattern errors. BSE: Sequence errors. BSSNS: Seq. skipped errors. SDMD: Maximum disruption. Multistream Frame Loss SFLx: Stream x frame loss. x = Stream number (1-16) Multistream Latency/Jitter SLx: Latency (μs). SJx: Jitter (μs). x = Stream number (1-16) Sync Test PHASE: 1PPS phase error². FILTERED: Filtered TE (LF)². PPS: 1PPS deviation². SYNC: Sync message transmission time². FOLLOW: Followup message transmission time². DELAY: Delay request message transmission time². FECSYMERRRATE: FEC Symbol errors rate. Response: <Total>,<Lane>³ FECCORCWDISTRIUTION: FEC Corr. Codeword distribution.
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Format: Numeric List <result> = <NR1 NUMERIC RESPONSE DATA> 0: Pass 1: Fail
Example	ETH:PORT1:TFET? (TEFR,UTIL,TFRD) → (1),(1),(1,0)
Note	This query fetches from the interval selected using the MEASurement:SEtup:SElect command (see section 18.2.2). ¹ <ref-port> is set with the command ETH:PORT1:TFRD:PSEL ² Result are only available on the Sync Test application. ³ <Lane> show the results of each lane. Example: 400GBE → (0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0)

12.14.3 EThernet:PORT<Pt>:TFRDiffrence:PSELection

Syntax	EThernet:PORT<Pt>:TFRDiffrence:PSELection <port>
Description	This command sets the Rx port number for total frames difference.
Parameters	<Pt> = Port number <port> = <CHARACTER PROGRAM DATA> PORTx: Rx port number x
Response	None.
Example	ETH:PORT1:TFRD:PSEL PORT1
Note	

Syntax	ETHernet:PORT<Pt>:TFRDiffrence:PSELection?
Description	This query returns the Rx port number for total frames difference.
Parameter	<Pt> = Port number
Response	<port> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:TFRD:PSEL? → PORT1
Note	

12.15 Status

12.15.1 EThernet:STATus:PORT<Pt>:AESummary[:EVENT]?

Syntax	EThernet:STATus:PORT<Pt>:AESummary[:EVENT]?
Description	This query returns the Ethernet alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of ETH:STAT:PORT<Pt>:ALAR1[:EVEN]? DB2 (2) = Summary bit of ETH:STAT:PORT<Pt>:ERR1[:EVEN]? DB3 (4) = Summary bit of ETH:STAT:PORT<Pt>:ALAR2[:EVEN]? WAN alarm 1 ¹ DB4 (8) = Summary bit of ETH:STAT:PORT<Pt>:ALAR3[:EVEN]? WAN alarm 2 ¹ DB5 (16) = Summary bit of ETH:STAT:PORT<Pt>:ERR2[:EVEN]? WAN error 1 ¹ DB6 (32) = Summary bit of ETH:STAT:PORT<Pt>:ALAR4[:EVEN]? PCS alarm DB7 (64) = Summary bit of ETH:STAT:PORT<Pt>:ERR3[:EVEN]? PCS error DB8 (128) = Summary bit of ETH:STAT:PORT<Pt>:ALAR5[:EVEN]? Sync Test alarm ² DB9 (256) = Summary bit of ETH:STAT:PORT<Pt>:ERR4[:EVEN]? FEC error ³ DB10 (512) = Summary bit of ETH:STAT:PORT<Pt>:ALAR6[:EVEN]? 400G ZR Transceiver alarm ⁴ DB11 (1024) = Summary bit of ETH:STAT:PORT<Pt>:ERR5[:EVEN]? 400G ZR Transceiver error ⁴ DB12 - DB16 = NOT USED
Example	ETH:STAT:PORT1:AES? → 1
Notes	¹ This is only available if WAN is enabled. ² This is only available in the Sync Test application. ³ This is only available if FEC is enabled. ⁴ This is only available if 400G ZR Transceiver is enabled.

12.15.2 EThernet:STATus:PORT<Pt>:AESummary:CONDition?

Syntax	EThernet:STATus:PORT<Pt>:AESummary:CONDition?
Description	This query returns the Ethernet alarms and errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as ETH:STAT:PORT<Pt>:AESummary[:EVEN]?
Example	ETH:STAT:PORT1:AES:COND? → 1
Note	

12.15.3 EThernet:STATus:PORT<Pt>:ALARm<section>[:EVENT]?

Syntax	EThernet:STATus:PORT<Pt>:ALARm<section>[:EVENT]?
Description	This query returns the alarms event register.
Parameters	<Pt> = Port number <section> = Ethernet(1), WAN Physical and Line/Mux(2), WAN Path/High-order(3), PCS(4), Sync Test(5), or 400G ZR Transceiver(6)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> <section> = 1: DB1 (1) = No link DB2 (2) = Remote fault DB3 (4) = Threshold(s) exceeded DB4 (8) = BER alarms DB5 (16) = Loss of signal DB6 - DB8 = NOT USED DB9 (256) = SyncE Timeout alarm

continued on next page...

...continued from previous page

	DB10 (512) = PTP Synchronization Timeout alarm DB11 (1024) = Timing Source alarm DB12 - DB16 = NOT USED <section> = 2:¹ DB1 (1) = Loss of signal DB2 (2) = Loss of frame DB3 (4) = Severely errored frame/Out of frame DB4 (8) = Section/Mux section - trace identifier mismatch DB5 (16) = Line/Mux section - alarm indication signal DB6 (32) = Line/Mux section - remote defect indicator DB7 - DB16 = NOT USED <section> = 3:¹ DB1 (1) = Path/Administrative unit - alarm indication signal DB2 (2) = Path/Administrative unit - loss of pointer DB3 (4) = Path/High-order path - trace Identifier mismatch DB4 (8) = Path/High-order path - payload label mismatch DB5 (16) = Path/High-order path - unequipped DB6 (32) = Path/High-order path - remote defect indication DB7 (64) = Path - enhanced remote defect indication payload ² DB8 (128) = Path - enhanced remote defect indication server ² DB9 (256) = Path - enhanced remote defect indication connectivity ² DB10 (512) = Loss of code-group delineation DB11 (1024) = Loss of signal synchronization DB12 - DB16 = NOT USED <section> = 4: DB1 (1) = High BER DB2 (2) = Alignment Status DB3 (4) = High SER DB4 (8) = FEC Degraded SER DB5 (16) = Local Degrade DB6 (32) = Remote Degrade DB7 - DB16 = NOT USED <section> = 5:³ DB1 (1) = Ext.ref. clock DB2 (2) = Ext. ref. 1PPS DB3 (4) = 1PPS DB4 - DB16 = NOT USED <section> = 6:⁴ DB1 (1) = Rx Demodulator LOL DB2 (2) = Rx CDC LOL DB3 (4) = Rx Loss of Alignment DB4 (8) = Rx Out of Alignment DB5 (16) = Rx Deskew LOL DB6 (32) = Media FED DB7 (64) = Remote Degrade DB8 (128) = Local Degrade DB9 (256) = Remote Phy Fault DB10 - DB16 = NOT USED
Example	ETH:STAT:PORT1:ALAR1? → 1
Notes	¹ This is only available if WAN is enabled. ² This is only available if WAN terminology is SONET. ³ This is only available in Sync Test application. ⁴ This is only available if 400G ZR Transceiver is enabled.

12.15.4 ETHernet:STATus:PORT<Pt>:ALARm<section>:CONDition?

Syntax	ETHernet:STATus:PORT<Pt>:ALARm<section>:CONDition?
Description	This query returns the alarms condition register.
Parameters	<Pt> = Port number <section> = Ethernet(1) , WAN Physical and Line/Mux(2), WAN Path/High-order(3), PCS(4), Sync Test(5), or 400G ZR Transceiver(6)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as ETHernet:STATus:PORT<Pt>:ALARm<section>[:EVENT]?
Example	ETH:STAT:PORT1:ALAR1:COND? → 1
Note	

12.15.5 ETHernet:STATus:PORT<Pt>:ERRor<section>[:EVENT]?

Syntax	ETHernet:STATus:PORT<Pt>:ERRor<section>[:EVENT]?
Description	This query returns the errors event register.
Parameters	<Pt> = Port number <section> = Ethernet(1), WAN(2), PCS(3), FEC(4) or 400G ZR Transceiver(5)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> <section> = 1: DB1 (1) = Errored frames DB2 (2) = Multistream frame loss ¹ DB3 (4) = Bit errors DB4 - DB16 = NOT USED <section> = 2:² DB1 (1) = A1A2 DB2 (2) = B1 DB3 (4) = B2 DB4 (8) = Line/Mux section REI DB5 (16) = B3 DB6 (32) = Path/High-order path REI DB7 (64) = STS-192C/AU4-64C positive DB8 (128) = STS-192C/AU4-64C negative DB9 - DB16 = NOT USED <section> = 3: DB1 (1) = Invalid Sync header DB2 (2) = Invalid Align Marker DB3 (4) = Invalid Block DB4 (8) = BIP Error DB5 - DB16 = NOT USED <section> = 4:³ DB1 (1) = LOFA DB2 (2) = FEC Corrected Codewords DB3 (4) = FEC Uncorrected Codewords DB4 (8) = FEC Symbol Errors DB5 (16) = LOFAML DB6 - DB16 = NOT USED <section> = 5:⁴ DB1 (1) = Media Rx FIFO Error DB2 (2) = Media FDD DB3 - DB16 = NOT USED
Example	ETH:STAT:PORT1:ERR1? → 1
Notes	¹ This is only available in multistream frame loss is enabled and a measurement is running. ² This is only available if WAN is enabled. ³ This is only available if FEC is enabled. ⁴ This is only available if 400G ZR Transceiver is enabled.

12.15.6 ETHernet:STATus:PORT<Pt>:ERRor<section>:CONDition?

Syntax	ETHernet:STATus:PORT<Pt>:ERRor<section>:CONDition?
Description	This query returns the errors condition register.
Parameters	<Pt> = Port number <section> = Ethernet(1), WAN(2), PCS(3), FEC(4) or 400G ZR Transceiver(5)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as ETHernet:STATus:PORT<Pt>:ERRor<section>[:EVENT]?
Example	ETH:STAT:PORT1:ERR1:COND? → 1
Note	

12.15.7 ETHernet:STATus:PORT<Pt>:LINK?

Syntax	ETHernet:STATus:PORT<Pt>:LINK?
Description	This query returns whether the link is up.
Parameter	<Pt> = Port number
Response	<link> = <BOOLEAN RESPONSE DATA> 0 means link is down, 1 means link is up.
Example	ETH:STAT:PORT1:LINK? → 1
Note	

12.15.8 ETHernet:STATus:PORT<Pt>:INTerface?

Syntax	ETHernet:STATus:PORT<Pt>:INTerface?
Description	This query returns the current type of interface.
Parameter	<Pt> = Port number
Response	<interface> = <STRING RESPONSE DATA> "ELECTRICAL" "OPTICAL" "N/A": No link
Example	ETH:STAT:PORT1:INT? → "ELECTRICAL"
Note	

12.15.9 ETHernet:STATus:PORT<Pt>:FRAMes?

Syntax	ETHernet:STATus:PORT<Pt>:FRAMes?
Description	This query returns whether frames are present.
Parameter	<Pt> = Port number
Response	<frames> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:FRAM? → 1
Note	

12.15.10 ETHernet:STATus:PORT<Pt>:MPLS?

Syntax	ETHernet:STATus:PORT<Pt>:MPLS?
Description	This query returns whether any frames with MPLS and Ethernet over MPLS are present.
Parameter	<Pt> = Port number
Response	<mpls> = <NR1 NUMERIC RESPONSE DATA> <eompls> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:MPLS? → 1,1
Note	

12.15.11 EThernet:STaTus:PORT<Pt>:VLAN?

Syntax	EThernet:STaTus:PORT<Pt>:VLAN?
Description	This query returns whether any frames with VLAN are present.
Parameter	<Pt> = Port number
Response	<vlan> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:VLAN? → 1
Note	

12.15.12 EThernet:STaTus:PORT<Pt>:SPeed?

Syntax	EThernet:STaTus:PORT<Pt>:SPeed?
Description	This query returns the current speed. Unit: Mbps.
Parameter	<Pt> = Port number
Response	<speed> = <NR1 NUMERIC RESPONSE DATA> 0 means no link.
Example	ETH:STAT:PORT1:SP? → 100
Note	

12.15.13 EThernet:STaTus:PORT<Pt>:DUPLex?

Syntax	EThernet:STaTus:PORT<Pt>:DUPLex?
Description	This query returns the current duplex type.
Parameter	<Pt> = Port number
Response	<duplex> = <STRING RESPONSE DATA> "HDX": half duplex "FDX": full duplex "N/A": No link
Example	ETH:STAT:PORT1:DUPL? → "HDX"
Note	

12.15.14 EThernet:STaTus:PORT<Pt>:MDI?

Syntax	EThernet:STaTus:PORT<Pt>:MDI?
Description	This query returns the current MDI type.
Parameter	<Pt> = Port number
Response	<mdi> = <STRING RESPONSE DATA> "MDI" "MDIX" "N/A": No link
Example	ETH:STAT:PORT1:MDI? → "MDI"
Note	

12.15.15 EThernet:STaTus:PORT<Pt>:L10G?

Syntax	EThernet:STaTus:PORT<Pt>:L10G?
Description	Obsolete. For CMA 3000 backward compatibility only. Same as EThernet:STaTus:PORT<Pt>:LFS?
Parameter	<Pt> = Port number
Response	<lf> = <BOOLEAN RESPONSE DATA> <rf> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:L10G? → 1, 0
Note	

12.15.16 EThernet:STATus:PORT<Pt>:LFS?

Syntax	EThernet:STATus:PORT<Pt>:LFS?
Description	This query returns whether any Local faults or Remote faults are present.
Parameter	<Pt> = Port number
Response	<lf> = <BOOLEAN RESPONSE DATA>
	<rf> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:LFS? → 1, 0
Note	

12.15.17 EThernet:STATus:PORT<Pt>:ANComplete?

Syntax	EThernet:STATus:PORT<Pt>:ANComplete?
Description	This query returns whether auto negotiation is completed.
Parameter	<Pt> = Port number
Response	<ancomp> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:ANC? → 1
Note	

12.15.18 EThernet:STATus:PORT<Pt>:PCAPable?

Syntax	EThernet:STATus:PORT<Pt>:PCAPable?
Description	This query returns the Link Partner Ability - Pause Capable
Parameter	<Pt> = Port number
Response	<pcable> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:PCAP? → 1
Note	EThernet:STATus:PORT<Pt>:ANComplete? must be 1 before this query is valid.

12.15.19 EThernet:STATus:PORT<Pt>:APRequest?

Syntax	EThernet:STATus:PORT<Pt>:APRequest?
Description	This query returns the Link Partner Abilities - Asymmetric Pause Request
Parameter	<Pt> = Port number
Response	<apreq> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:APR? → 1
Note	EThernet:STATus:PORT<Pt>:ANComplete? must be 1 before this query is valid.

12.15.20 EThernet:STATus:PORT<Pt>:RFAult?

Syntax	EThernet:STATus:PORT<Pt>:RFAult?
Description	This query returns the Link Partner Abilities - Remote Fault
Parameter	<Pt> = Port number
Response	<rfault> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:RFA? → 1
Note	EThernet:STATus:PORT<Pt>:ANComplete? must be 1 before this query is valid.

12.15.21 EThernet:STATus:PORT<Pt>:LClock?

Syntax	EThernet:STATus:PORT<Pt>:LClock?
Description	This query returns the local clock status at electrical gigabit connection.
Parameter	<Pt> = Port number
Response	<interface> = <STRING RESPONSE DATA> "Slave" "Master" "Fault" "N/A": No link or not electrical gigabit connection.
Example	ETH:STAT:PORT1:LCL? → "Master"
Notes	EThernet:STATus:PORT<Pt>:ANComplete? must be 1 before this query is valid.

12.15.22 EThernet:STATus:PORT<Pt>:SADuplex?

Syntax	EThernet:STATus:PORT<Pt>:SADuplex?
Description	This query returns the Link partner ability - speed and duplex
Parameter	<Pt> = Port number
Response	{(<sad>),}* = <EXPRESSION RESPONSE DATA> 10MH: 10Mbps half duplex 10MF: 10Mbps full duplex 100MH: 100Mbps half duplex 100MF: 100Mbps full duplex 1GH: 1Gbps half duplex 1GF: 1Gbps full duplex
Example	ETH:STAT:PORT1:SAD? → (10MH,10MF,100MH,100MF)
Note	EThernet:STATus:PORT<Pt>:ANComplete? must be 1 before this query is valid.

12.15.23 EThernet:STATus:PORT<Pt>:UTILization?

Syntax	EThernet:STATus:PORT<Pt>:UTILization?
Description	This query returns the current utilization. Unit: %.
Parameter	<Pt> = Port number
Response	<util> = <NR2 NUMERIC RESPONSE DATA> <threshold> = <BOOLEAN RESPONSE DATA> 1: Threshold exceeded 0: Threshold not exceeded / disabled
Example	ETH:STAT:PORT1:UTIL? → 97.1, 0
Note	

12.15.24 EThernet:STATus:PORT<Pt>:THRoughput?

Syntax	EThernet:STATus:PORT<Pt>:THRoughput?
Description	This query returns the current throughput. Unit: bps.
Parameter	<Pt> = Port number
Response	<thr> = <NR2 NUMERIC RESPONSE DATA> <threshold> = <BOOLEAN RESPONSE DATA> 1: Threshold exceeded 0: Threshold not exceeded / disabled
Example	ETH:STAT:PORT1:THR? → 97100000, 0
Note	

12.15.25 ETHernet:STATus:PORT<Pt>:EFRames?

Syntax	ETHernet:STATus:PORT<Pt>:EFRames?
Description	This query returns the current amount of errored frames. Unit: %.
Parameter	<Pt> = Port number
Response	<errored> = <NR2 NUMERIC RESPONSE DATA> <threshold> = <BOOLEAN RESPONSE DATA> 1: Threshold exceeded 0: Threshold not exceeded / disabled
Example	ETH:STAT:PORT1:EFR? → 0.5, 0
Note	

12.15.26 ETHernet:STATus:PORT<Pt>:PCS:SHLock?

Syntax	ETHernet:STATus:PORT<Pt>:PCS:SHLock?
Description	This query returns whether or not 40/100G PCS sync header is locked.
Parameter	<Pt> = Port number
Response	<shlock> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:PCS:SHL? → 1
Note	This command can be used in V2.00 or later.

12.15.27 ETHernet:STATus:PORT<Pt>:PCS:AMLock?

Syntax	ETHernet:STATus:PORT<Pt>:PCS:AMLock?
Description	This query returns whether or not 40/100G PCS alignment marker is locked.
Parameter	<Pt> = Port number
Response	<shlock> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:PCS:AML? → 1
Note	This command can be used in V2.00 or later.

12.15.28 ETHernet:STATus:PORT<Pt>:TIMing?

Syntax	ETHernet:STATus:PORT<Pt>:TIMing?
Description	This query returns the timing status.
Parameter	<Pt> = Port number
Response	<bitRate> = <NR1 NUMERIC RESPONSE DATA> Unit: bps. <bitRateDeviation> = <NR1 NUMERIC RESPONSE DATA> Unit: ppb.
Example	ETH:STAT:PORT1:TIM? → 10000001000,100
Note	

12.15.29 ETHernet:STATus:PORT<Pt>:TIMing:SOURce?

Syntax	ETHernet:STATus:PORT<Pt>:TIMing:SOURce?
Description	This query returns the status of the timing source.
Parameter	<Pt> = Port number
Response	<timingSrcProblem> = <BOOLEAN RESPONSE DATA> 1 is returned if the timing signal is absent.
Example	ETH:STAT:PORT1:TIM:SOUR? → 0
Note	

12.15.30 ETHernet:STATus:PORT<Pt>:SYNCe?

Syntax	ETHernet:STATus:PORT<Pt>:SYNCe?
Description	This query returns the status of the SyncE.
Parameter	<Pt> = Port number
Response	<qualityLevel> = <NR1 NUMERIC RESPONSE DATA>
	<qlTimeout> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:SYNC? → 15,0
Note	

12.15.31 ETHernet:STATus:PORT<Pt>:PTP:LCLock?

Syntax	ETHernet:STATus:PORT<Pt>:PTP:LCLock?
Description	This query returns the status of the PTP clock.
Parameter	<Pt> = Port number
Response	<clockState> = <STRING RESPONSE DATA> "INITIALIZING", "FAULTY", "DISABLED", "LISTENING", "PRE_MASTER", "MASTER", "PASSIVE", "UNCALIBRATED" or "SLAVE".
	<offset> = <NR2 NUMERIC RESPONSE DATA> Unit: Seconds.
	<meanPathDelay> = <NR2 NUMERIC RESPONSE DATA> Unit: Seconds.
	<delayAsymmetry> = <NR2 NUMERIC RESPONSE DATA> Unit: Seconds.
Example	ETH:STAT:PORT1:PTP:LCL? → "Listening",0.001002003,0.123456789,0.000000100
Note	

12.15.32 ETHernet:STATus:PORT<Pt>:PTP:WCLock?

Syntax	ETHernet:STATus:PORT<Pt>:PTP:WCLock?
Description	This query returns the status of the PTP wall clock.
Parameter	<Pt> = Port number (1-2)
Response	<dateTime> = <STRING RESPONSE DATA> Format: "YYYY-MM-DDThh:mm:ss"
	<offset> = <NR1 NUMERIC RESPONSE DATA> Offset from UTC time given by an attached GPS receiver. Unit: Nano seconds.
Example	ETH:STAT:PORT1:PTP:WCL? → "2011-09-16T15:16:17",2345
Note	

12.15.33 ETHernet:STATus:PORT<Pt>:PTP:PCLock?

Syntax	ETHernet:STATus:PORT<Pt>:PTP:PCLock?
Description	This query returns the properties of the PTP parent clock.
Parameter	<Pt> = Port number
Response	<parentId> = <STRING RESPONSE DATA>
	<parentPort> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:STAT:PORT1:PTP:PCL? → "00-00-00-00-00-00-00-00",0
Note	

12.15.34 EThernet:STaTus:PORT<Pt>:PTP:GCLock?

Syntax	EThernet:STaTus:PORT<Pt>:PTP:GCLock?
Description	This query returns the properties of the grandmaster clock.
Parameter	<Pt> = Port number
Response	<clockId> = <STRING RESPONSE DATA> <class> = <NR1 NUMERIC RESPONSE DATA> <accuracy> = <NR1 NUMERIC RESPONSE DATA> <logVarianceOffsetAnnounced> = <NR3 NUMERIC RESPONSE DATA> <logVarianceOffsetObserved> = <NR3 NUMERIC RESPONSE DATA> <priority1> = <NR1 NUMERIC RESPONSE DATA> <priority2> = <NR1 NUMERIC RESPONSE DATA> <logVarianceOffsetAnnouncedRaw> = <NR1 NUMERIC RESPONSE DATA> <stepsRemoved> = <NR1 NUMERIC RESPONSE DATA> <timeSource> = <NR1 NUMERIC RESPONSE DATA> <utcOffset> = <NR1 NUMERIC RESPONSE DATA> <flagField> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:STAT:PORT1:PTP:GCL? → "00-00-00-00-00-00-00-00",255,254,1.23E-16,2.34E-16,255,255,22564,0,160,37, #H0000
Note	

12.15.35 EThernet:STaTus:PORT<Pt>:PTP:FMASters?

Syntax	EThernet:STaTus:PORT<Pt>:PTP:FMASters?
Description	This query returns a list of maximum five foreign masters and their properties.
Parameter	<Pt> = Port number
Response	{(<master>),}* = <EXPRESSION RESPONSE DATA> <master> is split into three separate results (<clockId>,<port>,<announceCount>): <clockId> = <STRING RESPONSE DATA> <port> = <NR1 NUMERIC RESPONSE DATA> <announceCount> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:STAT:PORT1:PTP:FMASt? → ("00-00-00-00-00-00-00-11",111,99), ("00-00-00-00-00-00-00-22",222,88)
Note	If the list is empty an execution error will be reported.

12.15.36 EThernet:STaTus:PORT<Pt>:WAN:CAPTure:SOH:TRACe?

Syntax	EThernet:STaTus:PORT<Pt>:WAN:CAPTure:SOH:TRACe?
Description	This query returns the section overhead trace (J0) for the latest captured frames.
Parameter	<Pt> = Port number
Response	<J0_trace> = <STRING RESPONSE DATA>
Example	ETH:STAT:PORT1:WAN:CAPT:SOH:TRAC? → "Message_Test_J0"
Notes	If one of the alarms LOS or LOF is present, an empty string is returned. New frames are captured every second. This command can be used in V2.00 or later.

12.15.37 EThernet:STaTus:PORT<Pt>:WAN:CAPTure<Frame>:SOH?

Syntax	EThernet:STaTus:PORT<Pt>:WAN:CAPTure<Frame>:SOH? <SOH-byte>
Description	This query returns the section overhead bytes from the selected frame.
Parameters	<Pt> = Port number <Frame> = Frame number (1-64) <SOH-byte> = <CHARACTER PROGRAM DATA> A1: Returns 3 bytes. A2: Returns 3 bytes.

continued on next page...

...continued from previous page

	J0: Returns 3 bytes. B1: Returns 3 bytes. E1: Returns 3 bytes. F1: Returns 3 bytes. D1: Returns 3 bytes. D2: Returns 3 bytes. D3: Returns 3 bytes. H1: Returns 3 bytes. H2: Returns 3 bytes. H3: Returns 3 bytes. B2: Returns 3 bytes. K1: Returns 3 bytes. K2: Returns 3 bytes. D4: Returns 3 bytes. D5: Returns 3 bytes. D6: Returns 3 bytes. D7: Returns 3 bytes. D8: Returns 3 bytes. D9: Returns 3 bytes. D10: Returns 3 bytes. D11: Returns 3 bytes. D12: Returns 3 bytes. S1: Returns 3 bytes. Z2: Returns 3 bytes. E2: Returns 3 bytes. M0: Returns 1 byte. M1: Returns 1 byte.
Response	<byte1>[,<byte2>[,<byte3>]] = <HEXADECIMAL NUMERIC RESPONSE DATA> Refer to <SOH-byte> parameter description above to see how many bytes this command returns.
Examples	ETH:STAT:PORT1:WAN:CAPT64:SOH? A1 → #HF6,#HF6,#HF6 ETH:STAT:PORT1:WAN:CAPT23:SOH? H1 → #H69,#H93,#H93 ETH:STAT:PORT1:WAN:CAPT1:SOH? M1 → #H00
Notes	If one of the alarms LOS or LOF is present NaN (<NR3 NUMERIC RESPONSE DATA>) is returned. 64 new frames are captured every second. This command can be used in V2.00 or later.

12.15.38 EThernet:STATus:PORT<Pt>:WAN:CAPTure:POH:TRACe?

Syntax	ETHeTnet:STATus:PORT<Pt>:WAN:CAPTure:POH:TRACe?
Description	This query returns the VC4 path overhead trace (J1) for the latest captured frames.
Parameter	<Pt> = Port number
Response	<J1_trace> = <STRING RESPONSE DATA>
Example	ETH:STAT:PORT1:WAN:CAPT:POH:TRAC? → "Message_Test_J1"
Notes	If one of the alarms LOS, LOF, UNEQ or LOP is present, an empty string is returned. New frames are captured every second. This command can be used in V2.00 or later.

12.15.39 ETHernet:STATus:PORT<Pt>:WAN:CAPTure<Frame>:POH?

Syntax	ETHernet:STATus:PORT<Pt>:WAN:CAPTure<Frame>:POH? <POH-byte>
Description	This query returns the VC4 path overhead bytes from the selected frame.
Parameters	<Pt> = Port number
	<Frame> = Frame number (1-64)
	<POH-byte> = <CHARACTER PROGRAM DATA> J1: J1 byte. B3: B3 byte. C2: C2 byte. G1: G1 byte. F2: F2 byte. H4: H4 byte. F3: F3 byte. K3: K3 byte. N1: N1 byte.
Response	<byte> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:STAT:PORT1:WAN:CAPT1:POH? H4 → #HFF
Notes	If one of the alarms LOS, LOF, UNEQ or LOP is present NaN (<NR3 NUMERIC RESPONSE DATA>) is returned. 64 new frames are captured every second. This command can be used in V2.00 or later.

12.15.40 ETHernet:STATus:PORT<Pt>:TSRC:R10M?

Syntax	ETHernet:STATus:PORT<Pt>:TSRC:R10M?
Description	This query returns whether external reference 10MHz(GPS) is available for timestamp source.
Parameter	<Pt> = Port number
Response	<timestamp source availability> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:TSRC:R10M? → 1
Note	This command is available if both of the following conditions are met: - ETHernet:PORT<Pt>:STReam<St>:LATency, ETHernet:PORT<Pt>:STReam<St>:JITTer, or ETHernet:PORT<Pt>:STReam1:BER:SDMeasure[:ENABled] are enabled. - ETHernet:PORT<Pt>:STReam:TSTamp:TSRC is set to R1PPS or RGPS.

12.15.41 ETHernet:STATus:PORT<Pt>:TSRC:RPPS?

Syntax	ETHernet:STATus:PORT<Pt>:TSRC:RPPS?
Description	This query returns whether external reference 1PPS is available for timestamp source.
Parameter	<Pt> = Port number
Response	<timestamp source availability> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:TSRC:RPPS? → 1
Note	This command is available if both of the following conditions are met: - ETHernet:PORT<Pt>:STReam<St>:LATency, ETHernet:PORT<Pt>:STReam<St>:JITTer, or ETHernet:PORT<Pt>:STReam1:BER:SDMeasure[:ENABled] are enabled. - ETHernet:PORT<Pt>:STReam:TSTamp:TSRC is set to R1PPS or RGPS.

12.15.42 ETHernet:STATus:PORT<Pt>:TSRC:GPS?

Syntax	ETHernet:STATus:PORT<Pt>:TSRC:GPS?
Description	This query returns whether GPS is available for timestamp source.
Parameter	<Pt> = Port number
Response	<timestamp source availability> = <BOOLEAN RESPONSE DATA>
Example	ETH:STAT:PORT1:TSRC:GPS? → 1
Note	This command is available if both of the following conditions are met: - ETHernet:PORT<Pt>:STReam<St>:LATency, ETHernet:PORT<Pt>:STReam<St>:JITTer, or ETHernet:PORT<Pt>:STReam1:BER:SDMeasure[:ENABled] are enabled. - ETHernet:PORT<Pt>:STReam:TSTamp:TSRC is set to GPS or RGPS.

12.16 Ping

12.16.1 ETHernet:PING:STARt

Syntax	ETHernet:PING:STARt
Description	This command starts the Ping test.
Parameter	None.
Response	None.
Example	ETH:PING:STAR
Note	

12.16.2 ETHernet:PING:STOP

Syntax	ETHernet:PING:STOP
Description	This command stops the Ping test.
Parameter	None.
Response	None.
Example	ETH:PING:STOP
Note	

12.16.3 ETHernet:PING:SETup:PORT<Pt>:DMODE

Syntax	ETHernet:PING:SETup:PORT<Pt>:DMODE <mode>
Description	This command sets the test mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> CONTinuous SECOnds REQuests <i>DEFault = REQuests</i>
Response	None.
Example	ETH:PING:SET:PORT1:DMOD SEC
Note	This setting applies to all ports.

Syntax	ETHernet:PING:SETup:PORT<Pt>:DMODE?
Description	This query returns the test mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PING:SET:PORT1:DMOD? → SEC
Note	This setting applies to all ports.

12.16.4 ETHernet:PING:SETup:PORT<Pt>:SDURation

Syntax	ETHernet:PING:SETup:PORT<Pt>:SDURation <seconds>
Description	This command sets the test duration. Unit: Seconds.
Parameters	<Pt> = Port number <seconds> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 2000000, DEFault = 30</i>
Response	None.
Example	ETH:PING:SET:PORT1:SDUR 5
Note	DMODE must be set to SECOnds for this command to have effect. This setting applies to all ports.

Syntax	ETHERnet:PING:SETup:PORT<Pt>:SDURation?
Description	This query returns the test duration. Unit: Seconds.
Parameter	<Pt> = Port number
Response	<seconds> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PING:SET:PORT1:SDUR? → 5
Note	This setting applies to all ports.

12.16.5 ETHERnet:PING:SETup:PORT<Pt>:RDURation

Syntax	ETHERnet:PING:SETup:PORT<Pt>:RDURation <requests>
Description	This command sets the test duration. Unit: Requests.
Parameters	<Pt> = Port number <requests> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 65000, DEFault = 10</i>
Response	None.
Example	ETH:PING:SET:PORT1:RDUR 5
Note	DMODE must be set to REQuests for this command to have effect. This setting applies to all ports.

Syntax	ETHERnet:PING:SETup:PORT<Pt>:RDURation?
Description	This query returns the test duration. Unit: Requests.
Parameter	<Pt> = Port number
Response	<requests> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PING:SET:PORT1:RDUR? → 5
Note	This setting applies to all ports.

12.16.6 ETHERnet:PING:SETup:PORT<Pt>:INTERval

Syntax	ETHERnet:PING:SETup:PORT<Pt>:INTERval <interval>
Description	This command sets the requests interval. Unit: Seconds.
Parameters	<Pt> = Port number <interval> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 60, DEFault = 4</i>
Response	None.
Example	ETH:PING:SET:PORT1:INT 5
Note	0 means that request are send as fast as possible. This setting applies to all ports.

Syntax	ETHERnet:PING:SETup:PORT<Pt>:INTERval?
Description	This query returns the requests interval. Unit: Seconds.
Parameter	<Pt> = Port number
Response	<seconds> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PING:SET:PORT1:INT? → 5
Note	This setting applies to all ports.

12.16.7 ETHERnet:PING:SETup:PORT<Pt>:FSIZE

Syntax	ETHERnet:PING:SETup:PORT<Pt>:FSIZE <size>
Description	This command sets the frame size. Unit: Bytes.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 70</i>
Response	None.
Example	ETH:PING:SET:PORT1:FSIZ 100
Notes	¹ The minimum allowed frame size varies depending on the stream frame setup. This setting applies to all ports.

Syntax	ETHernet:PING:SETup:PORT<Pt>:FSIZe?
Description	This query returns the frame size. Unit: Bytes.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PING:SET:PORT1:FSIZ? → 100
Note	This setting applies to all ports.

12.16.8 ETHernet:PING:SETup:PORT<Pt>:TOUT

Syntax	ETHernet:PING:SETup:PORT<Pt>:TOUT <timeout>
Description	This command sets the time out value. Unit: ms.
Parameters	<Pt> = Port number <timeout> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 15000, DEFault = 500</i>
Response	None.
Example	ETH:PING:SET:PORT1:TOUT 100
Note	This setting applies to all ports.

Syntax	ETHernet:PING:SETup:PORT<Pt>:TOUT?
Description	This query returns the time out value. Unit: ms.
Parameter	<Pt> = Port number
Response	<timeout> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PING:SET:PORT1:TOUT? → 100
Note	This setting applies to all ports.

12.16.9 ETHernet:PING:RESults:SUMMary?

Syntax	ETHernet:PING:RESults:SUMMary?
Description	This query returns the result summary.
Parameter	None.
Response	<sent> = <NR1 NUMERIC RESPONSE DATA> Number of sent requests. <received> = <NR1 NUMERIC RESPONSE DATA> Number of received responses. <lost> = <NR1 NUMERIC RESPONSE DATA> Number of request time outs.
Example	ETH:PING:RES:SUMM? → 10,7,3
Note	

12.16.10 ETHernet:PING:RESults:RTT?

Syntax	ETHernet:PING:RESults:RTT?
Description	Returns round trip times. Unit: ms.
Parameter	None.
Response	<min> = <NR2 NUMERIC RESPONSE DATA> Minimum round trip time. <max> = <NR2 NUMERIC RESPONSE DATA> Maximum round trip time. <avg> = <NR2 NUMERIC RESPONSE DATA> Average round trip time.
Example	ETH:PING:RES:RTT? → 0.075,2.913,0.484
Note	

12.16.11 ETHernet:PING:RESults:NREQuests?

Syntax	ETHernet:PING:RESults:NREQuests?
Description	Returns the number of sent requests.
Parameter	None.
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PING:RES:NREQ? → 10
Note	

12.16.12 ETHernet:PING:RESults:SREQuest?

Syntax	ETHernet:PING:RESults:SREQuest? <index>
Description	Returns the result of a single request.
Parameter	{(<index>),}* = <EXPRESSION PROGRAM DATA> Expression format: Numeric List <i>MINimum</i> = 1
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA>
	<result> is split into 2 separate results (<rtt>,<seq-nr>):
	<rtt> = <NR2 NUMERIC RESPONSE DATA> Round trip time. Unit: ms. NaN (section 1.6.1) means time out.
	<seq-nr> = <NR1 NUMERIC RESPONSE DATA> Request sequence number.
Example	ETH:PING:RES:SREQ? (1,3:5) → (2.913,1),(1.236,3),(3.528,4),(0.879,5)
Notes	Use the NREQuests command above to get the maximum allowed index. Results are returned in the order they are entered in the <index> parameter.

12.17 Traceroute

12.17.1 ETHernet:TRACeroute:STARt

Syntax	ETHernet:TRACeroute:STARt
Description	This command starts the Traceroute test.
Parameter	None.
Response	None.
Example	ETH:TRAC:STAR
Note	

12.17.2 ETHernet:TRACeroute:STOP

Syntax	ETHernet:TRACeroute:STOP
Description	This command stops the Traceroute test.
Parameter	None.
Response	None.
Example	ETH:TRAC:STOP
Note	

12.17.3 ETHernet:TRACeroute:SETup:NATTempts

Syntax	ETHernet:TRACeroute:SETup:NATTempts <attempts>
Description	This command sets the number of attempts.
Parameter	<attempts> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 1000000, DEFault = 3</i>
Response	None.
Example	ETH:TRAC:SET:NATT 5
Note	

Syntax	ETHernet:TRACeroute:SETup:NATTempts?
Description	This query returns the number of attempts.
Parameter	None.
Response	<attempts> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TRAC:SET:NATT? → 5
Note	

12.17.4 ETHernet:TRACeroute:SETup:MNHops

Syntax	ETHernet:TRACeroute:SETup:MNHops <hops>
Description	This command sets the maximum number of hops.
Parameter	<hops> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 255, DEFault = 30</i>
Response	None.
Example	ETH:TRAC:SET:MNH 5
Note	

Syntax	ETHernet:TRACeroute:SETup:MNHops?
Description	This query returns the maximum number of hops.
Parameter	None.
Response	<hops> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TRAC:SET:MNH? → 5
Note	

12.17.5 ETHernet:TRACeroute:SETup:TOUT

Syntax	ETHernet:TRACeroute:SETup:TOUT <timeout>
Description	This command sets the time out value. Unit: ms.
Parameter	<timeout> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 15000, DEFault = 500</i>
Response	None.
Example	ETH:TRAC:SET:TOUT 100
Note	

Syntax	ETHernet:TRACeroute:SETup:TOUT?
Description	This query returns the time out value. Unit: ms.
Parameter	None.
Response	<timeout> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TRAC:SET:TOUT? → 100
Note	

12.17.6 ETHernet:TRACeroute:SETup:NTPHosts

Syntax	ETHernet:TRACeroute:SETup:NTPHosts <pings>
Description	This command sets the number of times to ping a host.
Parameter	<pings> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1000000, DEFault = 3</i>
Response	None.
Example	ETH:TRAC:SET:NTPH 5
Note	

Syntax	ETHernet:TRACeroute:SETup:NTPHosts?
Description	This query returns the number of times to ping a host.
Parameter	None.
Response	<pings> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TRAC:SET:NTPH? → 5
Note	

12.17.7 ETHernet:TRACeroute:RESults:NHOPs?

Syntax	ETHernet:TRACeroute:RESults:NHOPs?
Description	Returns the number of found hops.
Parameter	None.
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TRAC:RES:NHOP? → 10
Note	

12.17.8 ETHernet:TRACeroute:RESults:HOP?

Syntax	ETHernet:TRACeroute:RESults:HOP? <index>
Description	Returns the result from a single hop.
Parameter	{(<index>),}* = <EXPRESSION PROGRAM DATA> Expression format: Numeric List <i>MINimum = 1</i>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> <result> is split into 5 separate results (<host>,<minrtt>,<maxrtt>,<avgtrt>,<timeouts>): <host> = <STRING RESPONSE DATA> Host IP address. ”(d)” at the end of the string means that this is the destination.

continued on next page...

...continued from previous page

	"<timeout>" means that an IP address was unattainable. <minrtt> = <NR2 NUMERIC RESPONSE DATA> Minimum Round trip time. Unit: ms. NaN (section 1.6.1) means no ping replies. <maxrtt> = <NR2 NUMERIC RESPONSE DATA> Maximum Round trip time. Unit: ms. NaN (section 1.6.1) means no ping replies. <avgrtt> = <NR2 NUMERIC RESPONSE DATA> Average Round trip time. Unit: ms. NaN (section 1.6.1) means no ping replies. <timeouts> = <NR1 NUMERIC RESPONSE DATA> Number of ping timeouts. NaN (section 1.6.1) means no ping requests sent.
Example	ETH:TRAC:RES:HOP? (1:2) → ("192.168.1.1",0.7888,0.8278,0.8078,0), ("192.168.2.1(d)",0.5263,0.6689,0.591667,0)
Notes	Use NHOPs to get the maximum allowed index. Results are return in the order they are entered in the <index> parameter.

12.18 RFC2544

12.18.1 ETHernet:RFC:STARt

Syntax	ETHernet:RFC:STARt
Description	This command starts the RFC2544 test.
Parameter	None.
Response	None.
Example	ETH:RFC:STAR
Note	

12.18.2 ETHernet:RFC:STOP

Syntax	ETHernet:RFC:STOP
Description	This command stops the RFC2544 test.
Parameter	None.
Response	None.
Example	ETH:RFC:STOP
Note	

12.18.3 ETHernet:RFC:SETup:GENeral:MODE

Syntax	ETHernet:RFC:SETup:GENeral:MODE <mode>
Description	This command sets the RFC2544 test mode.
Parameter	<mode> = <CHARACTER PROGRAM DATA> SRouter: Switch/Router RLatency: Router latency SENetwork: Single ended network E2End: End to end network <i>DEFault = SR</i>
Response	None.
Examples	ETH:RFC:SET:GEN:MODE SR ETH:RFC:SET:GEN:MODE E2E
Note	

Syntax	ETHernet:RFC:SETup:GENeral:MODE?
Description	This query returns the RFC2544 test mode.
Parameter	None.
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:GEN:MODE? → SEN
Note	

12.18.4 ETHernet:RFC:SETup:GENeral:TSElection

Syntax	ETHernet:RFC:SETup:GENeral:TSElection <test>
Description	This command sets the RFC2544 tests to be executed.
Parameter	({<test>} * {,}*) = <EXPRESSION PROGRAM DATA> THR: Throughput FLOS: Frame loss TAFL: Throughput and Frame loss LAT: Latency/Jitter BURS: Burst
Response	None.
Example	ETH:RFC:SET:GEN:TSEL (FLOS,LAT,BURS)
Note	THR or FLOS can not be selected with TAFL. Setting no parameters will clear the test selection.

Syntax	ETHernet:RFC:SETup:GENeral:TSElection?
Description	This query returns the RFC2544 test that will be executed.
Parameter	None.
Response	{(<test>),}* = <EXPRESSION RESPONSE DATA>
Example	ETH:RFC:SET:GEN:TSEL? → (FLOS,LAT,BUR)
Note	

12.18.5 ETHernet:RFC:SETup:GENeral:E2E:OWAY

Syntax	ETHernet:RFC:SETup:GENeral:E2E:OWAY <enable>
Description	This command sets One Way testing for End to End network test.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:RFC:SET:GEN:E2E:OWAY ON
Note	

Syntax	ETHernet:RFC:SETup:GENeral:E2E:OWAY?
Description	This query returns the state of End to End One Way testing.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:GEN:E2E:OWAY? → 1
Note	

12.18.6 ETHernet:RFC:SETup:GENeral:E2E:ADDRess

Syntax	ETHernet:RFC:SETup:GENeral:E2E:ADDRess <enable>
Description	This command enables or disables use of local source addresses for destination on remote side for End to End Network test.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:RFC:SET:GEN:E2E:ADDR ON
Note	

Syntax	ETHernet:RFC:SETup:GENeral:E2E:ADDRess?
Description	This query returns whether use of local source addresses for destination on remote side is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:GEN:E2E:ADDR? → 1
Note	

12.18.7 ETHernet:RFC:SETup:GENeral:E2E:TDIRection

Syntax	ETHernet:RFC:SETup:GENeral:E2E:TDIRection <dir>
Description	This command sets the End to End One Way transmission direction.
Parameter	<dir> = <CHARACTER PROGRAM DATA> MASTer: Local to remote SLAVE: Remote to local <i>DEFault = SLAVE</i>
Response	None.
Example	ETH:RFC:SET:GEN:E2E:TDIR MAST
Note	

Syntax	ETHernet:RFC:SETup:GENeral:E2E:TDIRection?
Description	This query returns the End to End One Way transmission direction.
Parameter	None.
Response	<dir> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:GEN:E2E:TDIR? → MAST
Note	

12.18.8 ETHernet:RFC:SETup:GENeral:E2E:SSTore

Syntax	ETHernet:RFC:SETup:GENeral:E2E:SSTore <enable>
Description	This commands enables or disables storing of results on the remote side for End to End Network test.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:RFC:SET:GEN:E2E:SST OFF
Note	

Syntax	ETHernet:RFC:SETup:GENeral:E2E:SSTore?
Description	This query returns whether storing results on remote side for End to End Network test is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:GEN:E2E:SST? → 0
Note	

12.18.9 ETHernet:RFC:SETup:GENeral:TLFrames

Syntax	ETHernet:RFC:SETup:GENeral:TLFrames <enable>
Description	This command enables or disables transmission of learning frames prior to test.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:RFC:SET:GEN:TLF OFF
Note	

Syntax	ETHernet:RFC:SETup:GENeral:TLFrames?
Description	This query returns whether transmission of learning frames prior to test is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:GEN:TLF? → 0
Note	

12.18.10 ETHernet:RFC:SETup:GENeral:IAFFilter

Syntax	ETHernet:RFC:SETup:GENeral:IAFFilter <enable>
Description	This command selects if addresses should be included in frame filter on receiver.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:RFC:SET:GEN:IAFF OFF
Note	

Syntax	ETHernet:RFC:SETup:GENeral:IAFFilter?
Description	This query returns whether or not addresses are included in frame filter on receiver.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:GEN:IAFF? → 0
Note	

12.18.11 ETHernet:RFC:SETup:GENeral:JITTer

Syntax	ETHernet:RFC:SETup:GENeral:JITTer <enable>
Description	This command enables or disables jitter measurement with latency test.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:RFC:SET:GEN:JITT ON
Note	

Syntax	ETHernet:RFC:SETup:GENeral:JITTer?
Description	This query returns whether jitter measurement with latency test is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:GEN:JITT? → 1
Note	

12.18.12 ETHernet:RFC:SETup:GENeral:ACCumulate

Syntax	ETHernet:RFC:SETup:GENeral:ACCumulate <enable>
Description	This command sets if repeated steps should be accumulated.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:RFC:SET:GEN:ACC OFF
Note	

Syntax	ETHernet:RFC:SETup:GENeral:ACCumulate?
Description	This query returns whether or not repeated steps are accumulated.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:GEN:ACC? → 0
Note	

12.18.13 ETHernet:RFC:SETup:GENeral:TCLayer

Syntax	ETHernet:RFC:SETup:GENeral:TCLayer <layer>
Description	This command selects the throughput calculation layer.
Parameter	<layer> = <CHARACTER PROGRAM DATA> UTIL: Utilization PHYP: Physical with preamble PHYS: Physical without preamble LINK: Link NETWork: Network DATA: Data <i>DEFault = PHYS</i>
Response	None.
Example	ETH:RFC:SET:GEN:TCL LINK
Note	

Syntax	ETHernet:RFC:SETup:GENeral:TCLayer?
Description	This query returns the throughput calculation layer.
Parameter	None.
Response	<layer> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:GEN:TCL? → LINK
Note	

12.18.14 ETHernet:RFC:SETup:GENeral:TTYPe

Syntax	ETHernet:RFC:SETup:GENeral:TTYPe <layer>
Description	This command sets the throughput calculation type.
Parameter	<type> = <CHARACTER PROGRAM DATA> AVG: Average MAX: Maximum <i>DEFault</i> = <i>MAX</i>
Response	None.
Example	ETH:RFC:SET:GEN:TTYP AVG
Note	

Syntax	ETHernet:RFC:SETup:GENeral:TTYPe?
Description	This query returns the throughput calculation type.
Parameter	None.
Response	<layer> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:GEN:TTYP? → AVG
Note	

12.19 RFC2544 - Throughput

12.19.1 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:MODE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:MODE <mode>
Description	This command sets the RFC2544 throughput frame size mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> USER: User defined STEPped: Stepped CONStant: Constant FLEXible: Flexible DEFault = USER
Response	None.
Example	ETH:RFC:SET:PORT1:THR:FSIZ:MODE CONS
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:MODE?
Description	This query returns the RFC2544 throughput frame size mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:FSIZ:MODE? → CONS
Note	

12.19.2 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:USER

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:USER {<size>}*
Description	This command sets the RFC2544 throughput user defined frame size(s).
Parameters	<Pt> = Port number {(<size>)* {,}*} = <EXPRESSION PROGRAM DATA> 64: 64 bytes 128: 128 bytes 256: 256 bytes 512: 512 bytes 768: 768 bytes 1024: 1024 bytes 1280: 1280 bytes 1518: 1518 bytes JUMB: Jumbo frame size use :JUMBo to define.
Response	None.
Example	ETH:RFC:SET:PORT1:THR:FSIZ:USER (64,256,JUMB)
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:USER?
Description	This query returns the RFC2544 throughput user defined frame size(s).
Parameter	<Pt> = Port number
Response	{(<size>),}* = <EXPRESSION RESPONSE DATA> <size> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:FSIZ:USER? → (64,256,JUMB)
Note	

12.19.3 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:JUMBo

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:JUMBo <size>
Description	This command sets the RFC2544 throughput jumbo frame size.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1519, MAXimum = 16000, DEFault = 1582</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:FSIZ:JUMB 6000
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:JUMBo?
Description	This query returns the RFC2544 throughput jumbo frame size.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:FSIZ:JUMB? → 6000
Note	

12.19.4 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:BEGin

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:BEGin <size>
Description	This command sets the RFC2544 throughput begin frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:FSIZ:BEG 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:BEGin?
Description	This query returns the RFC2544 throughput begin frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:FSIZ:BEG? → 128
Note	

12.19.5 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:END

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:END <size>
Description	This command sets the RFC2544 throughput end frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 256</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:FSIZ:END 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:END?
Description	This query returns the RFC2544 throughput end frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:FSIZ:END? → 128
Note	

12.19.6 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:STEP <size>
Description	This command sets the RFC2544 throughput step frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:FSIZ:STEP 128
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:STEP?
Description	This query returns the RFC2544 throughput step frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:FSIZ:STEP? → 128
Note	

12.19.7 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:CONStant

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:CONStant <size>
Description	This command sets the RFC2544 throughput frame size for constant mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 256</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:FSIZ:CONS 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:CONStant?
Description	This query returns the RFC2544 throughput frame size for constant mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:FSIZ:CONS? → 128
Note	

12.19.8 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:FLEXible:COUNt

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:FLEXible:COUNt <count>
Description	This command sets the RFC2544 throughput frame count for flexible mode.
Parameters	<Pt> = Port number <count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=10, DEFault=1</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:FSIZ:FLEX:COUN 3
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:FLEXible:COUNt?
Description	This query returns the RFC2544 throughput frame count for flexible mode.
Parameter	<Pt> = Port number
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:FSIZ:FLEX:COUN? → 3
Note	

12.19.9 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:FLEXible<Count>:SIZE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:FLEXible<Count>:SIZE <size>
Description	This command sets the RFC2544 throughput frame size for flexible mode.
Parameters	<Pt> = Port number
	<Count> = Flexible frame number (1-10)
	<size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:FSIZ:FLEX1:SIZE 384
Notes	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:FSIZe:FLEXible<Count>:SIZE?
Description	This query returns the RFC2544 throughput frame size for flexible mode.
Parameter	<Pt> = Port number
	<Count> = Flexible frame number (1-10)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:FSIZ:FLEX1:SIZE? → 384
Note	

12.19.10 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:STOP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:STOP <enable>
Description	This command enables or disables stop on no frame loss at maximum utilization.
Parameters	<Pt> = Port number
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:LL:STOP ON
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:STOP?
Description	This query returns whether stop on no frame lost at maximum utilization is enabled or disable.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:LL:STOP? → 1
Note	

12.19.11 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:MINimum

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:MINimum <load>
Description	This command sets the minimum line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0008, MAXimum = 100.0000, DEFault = 1.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:LL:MIN 10
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT. :MINimum must be smaller or equal to :MAXimum.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:MINimum? [<suffix>]
Description	This query returns the minimum line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:LL:MIN? → 10
Note	

12.19.12 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:MAXimum

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:MAXimum <load>
Description	This command sets the maximum line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0008, MAXimum = 100.0000, DEFault = 100.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:LL:MAX 10
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT. :MAXimum must be larger or equal to :MINimum.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:MAXimum? [<suffix>]
Description	This query returns the maximum line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:LL:MAX? → 10
Note	

12.19.13 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:STEP <load>
Description	This command sets the step line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0001, MAXimum = 100.0000, DEFault = 10.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:LL:STEP 10
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:STEP? [<suffix>]
Description	This query returns the step line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:LL:STEP? → 10
Note	

12.19.14 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch[:ENABLE]

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch[:ENABLE] <enable>
Description	This command enables or disables the line load Auto Search.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:RFC:SET:PORT1:THR:LL:ASE ON
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch[:ENABLE]?
Description	This query returns whether the line load Auto Search is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:LL:ASE? → 1
Note	

12.19.15 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:MODE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:MODE <mode>
Description	This command sets the auto search mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> SMART BINary <i>DEFault = SMART</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:LL:ASE:MODE BIN
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:MODE?
Description	This query returns the auto search mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:LL:ASE:MODE? → BIN
Note	

12.19.16 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:RESolution

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:RESolution <res>
Description	This command sets the auto search resolution.
Parameters	<Pt> = Port number <res> = <CHARACTER PROGRAM DATA> 01: 0.1% 1: 1% 10: 10% <i>DEFault = 01</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:LL:ASE:RES 10
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:RESolution?
Description	This query returns the auto search resolution.
Parameter	<Pt> = Port number
Response	<res> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:LL:ASE:RES? → 10
Note	

12.19.17 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:DURation:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:DURation:STEP <step>
Description	This command sets the step duration. Unit: seconds.
Parameters	<Pt> = Port number <step> = <NUMERIC PROGRAM DATA> <i>MINimum = 3, MAXimum = 1000000000, DEFault = 10</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:DUR:STEP 5
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:DURation:STEP?
Description	This query returns the step duration. Unit: Seconds. Unit: seconds.
Parameter	<Pt> = Port number
Response	<step> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:DUR:STEP? → 5
Note	

12.19.18 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:DURation:REPeats

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:DURation:REPeats <rep>
Description	This command sets the number of repeats.
Parameters	<Pt> = Port number <rep> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1000, DEFault = 0</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:DUR:REP 5
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:DURation:REPeats?
Description	This query returns the number of repeats.
Parameter	<Pt> = Port number
Response	<rep> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:DUR:REP? → 5
Note	

12.19.19 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:THReshold:ENABled

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:THReshold:ENABled <enable>
Description	This command enables or disables the throughput threshold.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:RFC:SET:PORT1:THR:THR:ENAB ON
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:THReshold:ENABled?
Description	This query returns whether the throughput threshold is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:THR:ENAB? → 1
Note	

12.19.20 ETHernet:RFC:SETup:PORT<Pt>:THRoughput:THReshold

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:THReshold <threshold>
Description	This command sets the throughput threshold. Unit: Mbps.
Parameters	<Pt> = Port number <threshold> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 100000.000, DEFault = 1000.000</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:THR 95000
Note	The maximum allowed threshold depends on the interface setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:THRoughput:THReshold?
Description	This query returns the throughput threshold. Unit: Mbps.
Parameters	<Pt> = Port number
Response	<threshold> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:THR? → 95000.000
Note	

12.19.21 EThernet:RFC:SETup:PORT<Pt>:THRoughput:LOSTorelance:ENABled

Syntax	EThernet:RFC:SETup:PORT<Pt>:THRoughput:LOSTorelance:ENABled <enable>
Description	This command enables or disables the frame loss tolerance on throughput measurement.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:RFC:SET:PORT1:THR:LOST:ENAB ON
Note	

Syntax	EThernet:RFC:SETup:PORT<Pt>:THRoughput:LOSTorelance:ENABled?
Description	This query returns whether the frame loss tolerance on throughput measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:LOST:ENAB? → 1
Note	

12.19.22 EThernet:RFC:SETup:PORT<Pt>:THRoughput:LOSTorelance

Syntax	EThernet:RFC:SETup:PORT<Pt>:THRoughput:LOSTorelance <tolerance>
Description	This command sets the frame loss tolerance on throughput measurement. Unit: percent.
Parameters	<Pt> = Port number <tolerance> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.00000, MAXimum = 100.00000, DEFault = 0.00000</i>
Response	None.
Example	ETH:RFC:SET:PORT1:THR:LOST 0.00005
Note	

Syntax	EThernet:RFC:SETup:PORT<Pt>:THRoughput:LOSTorelance?
Description	This query returns the frame loss tolerance on throughput measurement. Unit: percent.
Parameters	<Pt> = Port number
Response	<threshold> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:THR:LOST? → 0.00005
Note	

12.20 RFC2544 - Frame Loss

12.20.1 ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:MODE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:MODE <mode>
Description	This command sets the RFC2544 frame loss frame size mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> USER: User defined STEPped: Stepped CONStant: Constant FLEXible: Flexible <i>DEFault = USER</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:MODE CONS
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:MODE?
Description	This query returns the RFC2544 frame loss frame size mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:MODE? → CONS
Note	

12.20.2 ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:USER

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:USER {<size>}*
Description	This command sets the RFC2544 frame loss user defined frame size(s) for user defined mode.
Parameters	<Pt> = Port number ({<size>} * {,}*) = <EXPRESSION PROGRAM DATA> 64: 64 bytes 128: 128 bytes 256: 256 bytes 512: 512 bytes 768: 768 bytes 1024: 1024 bytes 1280: 1280 bytes 1518: 1518 bytes JUMB: Jumbo frame size use :JUMBo to define.
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:USER (64,256,JUMB)
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:USER?
Description	This query returns the RFC2544 frame loss user defined frame size(s) for user defined mode.
Parameter	<Pt> = Port number
Response	{(<size>),}* = <EXPRESSION RESPONSE DATA> <size> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:USER? → (64,256,JUMB)
Note	

12.20.3 ETHernet:RFC:SETup:PORT<Pt>:FLOsS:FSIZe:JUMBo

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOsS:FSIZe:JUMBo <size>
Description	This command sets the RFC2544 frame loss jumbo frame size for user defined mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1519, MAXimum = 16000, DEFault = 1582</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:JUMB 6000
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOsS:FSIZe:JUMBo?
Description	This query returns the RFC2544 frame loss jumbo frame size for user defined mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:JUMB? → 6000
Note	

12.20.4 ETHernet:RFC:SETup:PORT<Pt>:FLOsS:FSIZe:BEGin

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOsS:FSIZe:BEGin <size>
Description	This command sets the RFC2544 frame loss begin frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:BEG 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOsS:FSIZe:BEGin?
Description	This query returns the RFC2544 frame loss begin frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:BEG? → 128
Note	

12.20.5 ETHernet:RFC:SETup:PORT<Pt>:FLOsS:FSIZe:END

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOsS:FSIZe:END <size>
Description	This command sets the RFC2544 frame loss end frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 256</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:END 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:END?
Description	This query returns the RFC2544 frame loss end frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:END? → 128
Note	

12.20.6 ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:STEP <size>
Description	This command sets the RFC2544 frame loss step frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:STEP 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:STEP?
Description	This query returns the RFC2544 frame loss step frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:STEP? → 128
Note	

12.20.7 ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:CONStant

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:CONStant <size>
Description	This command sets the RFC2544 frame loss frame size for constant mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 256</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:CONS 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:CONStant?
Description	This query returns the RFC2544 frame loss frame size for constant mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:CONS? → 128
Note	

12.20.8 ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:FLEXible:COUNt

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:FLEXible:COUNt <count>
Description	This command sets the RFC2544 frame loss frame count for flexible mode.
Parameters	<Pt> = Port number <count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=10, DEFault=1</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:FSIZ:FLEX:COUN 3
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:FLEXible:COUnT?
Description	This query returns the RFC2544 frame loss frame count for flexible mode.
Parameter	<Pt> = Port number
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLos:FSIZ:FLEX:COUn? → 3
Note	

12.20.9 ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:FLEXible<Count>:SIZE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:FLEXible<Count>:SIZE <size>
Description	This command sets the RFC2544 frame loss frame size for flexible mode.
Parameters	<Pt> = Port number <Count> = Flexible frame number (1-10) <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLos:FSIZ:FLEX1:SIZE 384
Notes	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:FSIZe:FLEXible<Count>:SIZE?
Description	This query returns the RFC2544 frame loss frame size for flexible mode.
Parameter	<Pt> = Port number <Count> = Flexible frame number (1-10)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLos:FSIZ:FLEX1:SIZE? → 384
Note	

12.20.10 ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:STOP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:STOP <enable>
Description	This command enables or disables stop on no frame loss at maximum utilization.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLos:LL:STOP ON
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:STOP?
Description	This query returns whether stop on no frame loss at maximum utilization is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLos:LL:STOP? → 1
Note	

12.20.11 ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:MINimum

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:MINimum <load>
Description	This command sets the minimum line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0008, MAXimum = 100.0000, DEFault = 1.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:LL:MIN 10
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT. :MINimum must be smaller or equal to :MAXimum.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:MINimum? [<suffix>]
Description	This query returns the minimum line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:LL:MIN? → 10
Note	

12.20.12 ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:MAXimum

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:MAXimum <load>
Description	This command sets the maximum line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0008, MAXimum = 100.0000, DEFault = 100.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:LL:MAX 10
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT. :MAXimum must be larger or equal to :MINimum.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:MAXimum? [<suffix>]
Description	This query returns the maximum line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:LL:MAX? → 10
Note	

12.20.13 ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:STEP <load>
Description	This command sets the step line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0001, MAXimum = 100.0000, DEFault = 10.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:LL:STEP 10
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:STEP? [<suffix>]
Description	This query returns the step line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:LL:STEP? → 10
Note	

12.20.14 ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:ASEarch[:ENABLE]

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:ASEarch[:ENABLE] <enable>
Description	This command enables or disables the line load Auto Search.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:RFC:SET:PORT1:FLOS:LL:ASE ON
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:ASEarch[:ENABLE]?
Description	This query returns whether the line load Auto Search is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:LL:ASE? → 1
Note	

12.20.15 ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:ASEarch:MODE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:ASEarch:MODE <mode>
Description	This command sets the auto search mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> SMARt BINary <i>DEFault = SMARt</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:LL:ASE:MODE BIN
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:ASEarch:MODE?
Description	This query returns the auto search mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:LL:ASE:MODE? → BIN
Note	

12.20.16 ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:ASEarch:RESolution

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:ASEarch:RESolution <res>
Description	This command sets the auto search resolution.
Parameters	<Pt> = Port number <res> = <CHARACTER PROGRAM DATA> 01: 0.1% 1: 1% 10: 10% <i>DEFault = 01</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:LL:ASE:RES 10
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:LLoad:ASEarch:RESolution?
Description	This query returns the auto search resolution.
Parameter	<Pt> = Port number
Response	<res> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:LL:ASE:RES? → 10
Note	

12.20.17 ETHernet:RFC:SETup:PORT<Pt>:FLOs:DURation:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:DURation:STEP <step>
Description	This command sets the step duration. Unit: Seconds.
Parameters	<Pt> = Port number <step> = <NUMERIC PROGRAM DATA> <i>MINimum = 3, MAXimum = 1000000000, DEFault = 10</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:DUR:STEP 5
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:DURation:STEP?
Description	This query returns the step duration. Unit: Seconds.
Parameter	<Pt> = Port number
Response	<step> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:DUR:STEP? → 5
Note	

12.20.18 ETHernet:RFC:SETup:PORT<Pt>:FLOs:DURation:REPeats

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:DURation:REPeats <rep>
Description	This command sets the number of repeats.
Parameters	<Pt> = Port number <rep> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1000, DEFault = 0</i>
Response	None.
Example	ETH:RFC:SET:PORT1:FLOS:DUR:REP 5
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:FLOs:DURation:REPeats?
Description	This query returns the number of repeats.
Parameter	<Pt> = Port number
Response	<rep> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:FLOS:DUR:REP? → 5
Note	

12.21 RFC2544 - Throughput and Frame Loss

12.21.1 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:MODE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:MODE <mode>
Description	This command sets the RFC2544 throughput and frame loss frame size mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> USER: User defined STEPped: Stepped CONStant: Constant FLEXible: Flexible <i>DEFault = USER</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:MODE CONS
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:MODE?
Description	This query returns the RFC2544 throughput and frame loss frame size mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:MODE? → CONS
Note	

12.21.2 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:USER

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:USER {<size>}*
Description	This command sets the RFC2544 throughput and frame loss user defined frame size(s) for user defined mode.
Parameters	<Pt> = Port number ({<size>} * {,}*) = <EXPRESSION PROGRAM DATA> 64: 64 bytes 128: 128 bytes 256: 256 bytes 512: 512 bytes 768: 768 bytes 1024: 1024 bytes 1280: 1280 bytes 1518: 1518 bytes JUMB: Jumbo frame size use :JUMBo to define.
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:USER (64,256,JUMB)
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:USER?
Description	This query returns the RFC2544 throughput and frame loss user defined frame size(s) for user defined mode.
Parameter	<Pt> = Port number
Response	{(<size>),}* = <EXPRESSION RESPONSE DATA> <size> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:USER? → (64,256,JUMB)
Note	

12.21.3 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:JUMBo

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:JUMBo <size>
Description	This command sets the RFC2544 throughput and frame loss jumbo frame size for user defined mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1519, MAXimum = 16000, DEFault = 1582</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:JUMB 6000
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:JUMBo?
Description	This query returns the RFC2544 throughput and frame loss jumbo frame size for user defined mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:JUMB? → 6000
Note	

12.21.4 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:BEGin

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:BEGin <size>
Description	This command sets the RFC2544 throughput and frame loss begin frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:BEG 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:BEGin?
Description	This query returns the RFC2544 throughput and frame loss begin frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:BEG? → 128
Note	

12.21.5 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:END

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZE:END <size>
Description	This command sets the RFC2544 throughput and frame loss end frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 256</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:END 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:END?
Description	This query returns the RFC2544 throughput and frame loss end frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:END? → 128
Note	

12.21.6 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:STEP <size>
Description	This command sets the RFC2544 step frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:STEP 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:STEP?
Description	This query returns the RFC2544 step frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:STEP? → 128
Note	

12.21.7 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:CONStant

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:CONStant <size>
Description	This command sets the RFC2544 frame size for constant mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 256</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:CONS 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:CONStant?
Description	This query returns the RFC2544 frame size for constant mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:CONS? → 128
Note	

12.21.8 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:FLEXible:COUNt

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:FLEXible:COUNt <count>
Description	This command sets the RFC2544 frame count for flexible mode.
Parameters	<Pt> = Port number <count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=10, DEFault=1</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:FLEX:COUN 3
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:FLEXible:COUNT?
Description	This query returns the RFC2544 frame count for flexible mode.
Parameter	<Pt> = Port number
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:FLEX:COUN? → 3
Note	

12.21.9 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:FLEXible<Count>:SIZE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:FLEXible<Count>:SIZE <size>
Description	This command sets the RFC2544 frame size for flexible mode.
Parameters	<Pt> = Port number <Count> = Flexible frame number (1-10) <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:FLEX1:SIZE 384
Notes	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:FSIZe:FLEXible<Count>:SIZE?
Description	This query returns the RFC2544 frame size for flexible mode.
Parameter	<Pt> = Port number <Count> = Flexible frame number (1-10)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:FSIZ:FLEX1:SIZE? → 384
Note	

12.21.10 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:STOP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:STOP <enable>
Description	This command enables or disables stop on no frame loss at maximum utilization.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:LL:STOP ON
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:STOP?
Description	This query returns whether stop on no frame loss at maximum utilization is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:LL:STOP? → 1
Note	

12.21.11 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:MINimum

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:MINimum <load>
Description	This command sets the minimum line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0008, MAXimum = 100.0000, DEFault = 1.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:LL:MIN 10
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT. :MINimum must be smaller or equal to :MAXimum.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:MINimum? [<suffix>]
Description	This query returns the minimum line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:LL:MIN? → 10
Note	

12.21.12 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:MAXimum

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:MAXimum <load>
Description	This command sets the maximum line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0008, MAXimum = 100.0000, DEFault = 100.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:LL:MAX 10
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT. :MAXimum must be larger or equal to :MINimum.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:MAXimum? [<suffix>]
Description	This query returns the maximum line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:LL:MAX? → 10
Note	

12.21.13 EThernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:STEP <load>
Description	This command sets the step line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0001, MAXimum = 100.0000, DEFault = 10.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:LL:STEP 10
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:STEP? [<suffix>]
Description	This query returns the step line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:LL:STEP? → 10
Note	

12.21.14 EThernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:ASearch[:ENABLE]

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:ASearch[:ENABLE] <enable>
Description	This command enables or disables the line load Auto Search.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:RFC:SET:PORT1:TAFL:LL:ASE ON
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:ASearch[:ENABLE]?
Description	This query returns whether the line load Auto Search is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:LL:ASE? → 1
Note	

12.21.15 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:ASEarch:MODE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:ASEarch:MODE <mode>
Description	This command sets the auto search mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> SMARt BINary <i>DEFault = SMARt</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:LL:ASE:MODE BIN
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:ASEarch:MODE?
Description	This query returns the auto search mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:LL:ASE:MODE? → BIN
Note	

12.21.16 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:ASEarch:RESolution

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:ASEarch:RESolution <res>
Description	This command sets the auto search resolution.
Parameters	<Pt> = Port number <res> = <CHARACTER PROGRAM DATA> 01: 0.1% 1: 1% 10: 10% <i>DEFault = 01</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:LL:ASE:RES 10
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:LLoad:ASEarch:RESolution?
Description	This query returns the auto search resolution.
Parameter	<Pt> = Port number
Response	<res> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:LL:ASE:RES? → 10
Note	

12.21.17 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:DURation:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:DURation:STEP <step>
Description	This command sets the step duration. Unit: Seconds.
Parameters	<Pt> = Port number <step> = <NUMERIC PROGRAM DATA> <i>MINimum = 3, MAXimum = 1000000000, DEFault = 10</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:DUR:STEP 5
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:DURation:STEP?
Description	This query returns the step duration. Unit: Seconds.
Parameter	<Pt> = Port number
Response	<step> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:DUR:STEP? → 5
Note	

12.21.18 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:DURation:REPeats

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:DURation:REPeats <rep>
Description	This command sets the number of repeats.
Parameters	<Pt> = Port number <rep> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1000, DEFault = 0</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:DUR:REP 5
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:DURation:REPeats?
Description	This query returns the number of repeats.
Parameter	<Pt> = Port number
Response	<rep> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:DUR:REP? → 5
Note	

12.21.19 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:THReshold:ENABLEd

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:THReshold:ENABLEd <enable>
Description	This command enables or disables the throughput threshold.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:RFC:SET:PORT1:TAFL:THR:ENAB ON
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:THReshold:ENABLEd?
Description	This query returns whether the throughput threshold is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:THR:ENAB? → 1
Note	

12.21.20 ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:THReshold

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:THReshold <threshold>
Description	This command sets the throughput threshold. Unit: Mbps.
Parameters	<Pt> = Port number <threshold> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 100000.000, DEFault = 1000.000</i>
Response	None.
Example	ETH:RFC:SET:PORT1:TAFL:THR 95000
Note	The maximum allowed threshold depends on the interface setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:TAFLoss:THReshold?
Description	This query returns the throughput threshold. Unit: Mbps.
Parameters	<Pt> = Port number
Response	<threshold> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:TAFL:THR? → 95000.000
Note	

12.22 RFC2544 - Latency

12.22.1 ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:MODE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:MODE <mode>
Description	This command sets the RFC2544 latency frame size mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> USER: User defined STEPped: Stepped CONStant: Constant FLEXible: Flexible DEFault = USER
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:MODE CONS
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:MODE?
Description	This query returns the RFC2544 latency frame size mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:MODE? → CONS
Note	

12.22.2 ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:USER

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:USER {<size>}*
Description	This command sets the RFC2544 latency user defined frame size(s) for user defined mode.
Parameters	<Pt> = Port number {(<size>)* {,}*} = <EXPRESSION PROGRAM DATA> 64: 64 bytes 128: 128 bytes 256: 256 bytes 512: 512 bytes 768: 768 bytes 1024: 1024 bytes 1280: 1280 bytes 1518: 1518 bytes JUMB: Jumbo frame size use :JUMBo to define.
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:USER (64,256,JUMB)
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:USER?
Description	This query returns the RFC2544 latency user defined frame size(s) for user defined mode.
Parameter	<Pt> = Port number
Response	{(<size>),}* = <EXPRESSION RESPONSE DATA> <size> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:USER? → (64,256,JUMB)
Note	

12.22.3 ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:JUMBo

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:JUMBo <size>
Description	This command sets the RFC2544 latency the jumbo frame size for user defined mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1519, MAXimum = 16000, DEFault = 1582</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:JUMB 6000
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:JUMBo?
Description	This query returns the RFC2544 latency jumbo frame size for user defined mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:JUMB? → 6000
Note	

12.22.4 ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:BEGin

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:BEGin <size>
Description	This command sets the RFC2544 latency begin frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:BEG 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:BEGin?
Description	This query returns the RFC2544 latency begin frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:BEG? → 128
Note	

12.22.5 ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:END

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZE:END <size>
Description	This command sets the RFC2544 latency end frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 256</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:END 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZe:END?
Description	This query returns the RFC2544 latency end frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:END? → 128
Note	

12.22.6 ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZe:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZe:STEP <size>
Description	This command sets the RFC2544 latency step frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:STEP 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZe:STEP?
Description	This query returns the RFC2544 latency step frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:STEP? → 128
Note	

12.22.7 ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZe:CONStant

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZe:CONStant <size>
Description	This command sets the RFC2544 latency frame size for constant mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 256</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:CONS 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZe:CONStant?
Description	This query returns the RFC2544 latency frame size for constant mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:CONS? → 128
Note	

12.22.8 ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZe:FLEXible:COUNt

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:FSIZe:FLEXible:COUNt <count>
Description	This command sets the RFC2544 latency frame count for flexible mode.
Parameters	.
Parameters	<Pt> = Port number <count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=10, DEFault=1</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:FLEX:COUN 3
Note	

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:LATency:FSIZe:FLEXible:COUNt?
Description	This query returns the RFC2544 latency frame count for flexible mode.
Parameter	<Pt> = Port number
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:FLEX:COUN? → 3
Note	

12.22.9 ETHernet:RFC:SEtup:PORT<Pt>:LATency:FSIZe:FLEXible<Count>:SIZE

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:LATency:FSIZe:FLEXible<Count>:SIZE <size>
Description	This command sets the RFC2544 latency frame size for flexible mode.
Parameters	<Pt> = Port number <Count> = Flexible frame number (1-10) <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:FLEX1:SIZE 384
Notes	

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:LATency:FSIZe:FLEXible<Count>:SIZE?
Description	This query returns the RFC2544 latency frame size for flexible mode.
Parameter	<Pt> = Port number <Count> = Flexible frame number (1-10)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:FSIZ:FLEX1:SIZE? → 384
Note	

12.22.10 ETHernet:RFC:SEtup:PORT<Pt>:LATency:LLoad:MINimum

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:LATency:LLoad:MINimum <load>
Description	This command sets the minimum line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0008, MAXimum = 100.0000, DEFault = 1.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:LL:MIN 10
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. In Router Latency Mode the maximum allowed line load is 1Mbps. MINimum, MAXimum and DEFault are all in PCT. :MINimum must be smaller or equal to :MAXimum.

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:LATency:LLoad:MINimum? [<suffix>]
Description	This query returns the minimum line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:LL:MIN? → 10
Note	

12.22.11 ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:MAXimum

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:MAXimum <load>
Description	This command sets the maximum line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0008, MAXimum = 100.0000, DEFault = 100.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:LL:MAX 10
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. In Router Latency Mode the maximum allowed line load is 1Mbps. MINimum, MAXimum and DEFault are all in PCT. :MAXimum must be larger or equal to :MINimum.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:MAXimum? [<suffix>]
Description	This query returns the maximum line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:LL:MAX? → 10
Note	

12.22.12 ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:STEP <load>
Description	This command sets the step line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0001, MAXimum = 100.0000, DEFault = 10.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:LL:STEP 10
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. In Router Latency Mode the maximum allowed line load is 1Mbps. MINimum, MAXimum and DEFault are all in PCT.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:STEP? [<suffix>]
Description	This query returns the step line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:LL:STEP? → 10
Note	

12.22.13 ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:ONLY

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:ONLY <enable>
Description	This command selects whether or not only to run steps where other test passed.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:LL:ONLY ON
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:ONLY?
Description	This query returns 1 if only steps are run where other test passed.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:LL:ONLY? → 1
Note	

12.22.14 ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:OTEST

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:OTEST <test>
Description	This command selects the other test to follow.
Parameters	<Pt> = Port number <test> = <CHARACTER PROGRAM DATA> THRoughput: Throughput FLOSs: Frame loss TAFLoss: Throughput and frame Loss <i>DEFault</i> = <i>THR</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:LL:OTES FLOS
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:OTEST?
Description	This query returns the test followed.
Parameter	<Pt> = Port number
Response	<test> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:LL:OTES? → FLOS
Note	

12.22.15 ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:TLEVel

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:TLEVel <tol>
Description	This command sets the Tolerance level percentage (Utilization multiplier). Unit: percentage.
Parameters	<Pt> = Port number <tol> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =0, <i>MAXimum</i> =100, <i>DEFault</i> =100
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:LL:TLEV 85
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LLoad:TLEVel?
Description	This query returns the Tolerance level percentage (Utilization multiplier).
Parameter	<Pt> = Port number
Response	<tol> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:LL:TLEV? → 85
Note	

12.22.16 ETHernet:RFC:SETup:PORT<Pt>:LATency:DURation:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:DURation:STEP <step>
Description	This command sets the step duration. Unit: Seconds.
Parameters	<Pt> = Port number <step> = <NUMERIC PROGRAM DATA> <i>MINimum = 3, MAXimum = 1000000000, DEFault = 10</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:DUR:STEP 5
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:DURation:STEP?
Description	This query returns the step duration. Unit: Seconds.
Parameter	<Pt> = Port number
Response	<step> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:DUR:STEP? → 5
Note	

12.22.17 ETHernet:RFC:SETup:PORT<Pt>:LATency:DURation:REPeats

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:DURation:REPeats <rep>
Description	This command sets the number of repeats.
Parameters	<Pt> = Port number <rep> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1000, DEFault = 0</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:DUR:REP 5
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:DURation:REPeats?
Description	This query returns the number of repeats.
Parameter	<Pt> = Port number
Response	<rep> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:DUR:REP? → 5
Note	

12.22.18 ETHernet:RFC:SETup:PORT<Pt>:LATency:LTHReshold:ENABLEd

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LTHReshold:ENABLEd <enable>
Description	This command enables or disables the latency threshold.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:RFC:SET:PORT1:LAT:LTHR:ENAB ON
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LTHReshold:ENABled?
Description	This query returns whether the latency threshold is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:LTHR:ENAB? → 1
Note	

12.22.19 ETHernet:RFC:SETup:PORT<Pt>:LATency:LTHReshold

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LTHReshold <threshold>
Description	This command sets the latency threshold. Unit: us.
Parameters	<Pt> = Port number <threshold> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 99.999, DEFault = 0.000</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:LTHR 0.005
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:LTHReshold?
Description	This query returns the latency threshold. Unit: us.
Parameters	<Pt> = Port number
Response	<threshold> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:LTHR? → 0.005
Note	

12.22.20 ETHernet:RFC:SETup:PORT<Pt>:LATency:JTHReshold:ENABled

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:JTHReshold:ENABled <enable>
Description	This command enables or disables the jitter threshold.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Examples	ETH:RFC:SET:PORT1:LAT:JTHR:ENAB ON
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:JTHReshold:ENABled?
Description	This query returns whether the jitter threshold is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:JTHR:ENAB? → 1
Note	

12.22.21 ETHernet:RFC:SETup:PORT<Pt>:LATency:JTHReshold

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:JTHReshold <threshold>
Description	This command sets the jitter threshold. Unit: us.
Parameters	<Pt> = Port number <threshold> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 99.999, DEFault = 0.000</i>
Response	None.
Example	ETH:RFC:SET:PORT1:LAT:JTHR 0.005
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:LATency:JTHReshold?
Description	This query returns the jitter threshold. Unit: us.
Parameters	<Pt> = Port number
Response	<threshold> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:LAT:JTHR? → 0.005
Note	

12.23 RFC2544 - Burst

12.23.1 ETHernet:RFC:SEtup:PORT<Pt>:BURSt:MODE

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:BURSt:MODE <mode>
Description	This command sets the RFC2544 burst mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> FPBurst: Based on frame SPBurst: Based on seconds <i>DEFault = FPBurst</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:MODE SPB
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:BURSt:MODE?
Description	This query returns the RFC2544 burst mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:MODE? → SPB
Note	

12.23.2 ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FSIZe:MODE

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FSIZe:MODE <mode>
Description	This command sets the RFC2544 burst frame size mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> USER: User defined STEPped: Stepped CONStant: Constant FLEXible: Flexible <i>DEFault = USER</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:MODE CONS
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FSIZe:MODE?
Description	This query returns the RFC2544 burst frame size mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:MODE? → CONS
Note	

12.23.3 ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FSIZe:USER

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FSIZe:USER {<size>}*
Description	This command sets the RFC2544 burst user defined frame size(s) for user defined mode.
Parameters	<Pt> = Port number ({<size>} * {,}*) = <EXPRESSION PROGRAM DATA> 64: 64 bytes 128: 128 bytes 256: 256 bytes 512: 512 bytes

continued on next page...

...continued from previous page

	768: 768 bytes 1024: 1024 bytes 1280: 1280 bytes 1518: 1518 bytes JUMB: Jumbo frame size use :JUMBo to define.
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:USER (64,256,JUMB)
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:USER?
Description	This query returns the RFC2544 burst user defined frame size(s) for user defined mode.
Parameter	<Pt> = Port number
Response	{(<size>),}* = <EXPRESSION RESPONSE DATA> <size> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:USER? → (64,256,JUMB)
Note	

12.23.4 ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:JUMBo

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:JUMBo <size>
Description	This command sets the RFC2544 burst jumbo frame size for user defined mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1519, MAXimum = 16000, DEFault = 1582</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:JUMB 6000
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:JUMBo?
Description	This query returns the RFC2544 burst jumbo frame size for user defined mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:JUMB? → 6000
Note	

12.23.5 ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:BEGin

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:BEGin <size>
Description	This command sets the RFC2544 burst begin frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44¹, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:BEG 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:BEGin?
Description	This query returns the RFC2544 burst begin frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:BEG? → 128
Note	

12.23.6 ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:END

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:END <size>
Description	This command sets the RFC2544 burst end frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 44 ¹ , <i>MAXimum</i> = 16000, <i>DEFault</i> = 256
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:END 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:END?
Description	This query returns the RFC2544 burst end frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:END? → 128
Note	

12.23.7 ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:STEP <size>
Description	This command sets the RFC2544 burst step frame size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 1, <i>MAXimum</i> = 16000, <i>DEFault</i> = 64
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:STEP 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:STEP?
Description	This query returns the RFC2544 burst step frame size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:STEP? → 128
Note	

12.23.8 ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:CONStant

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:CONStant <size>
Description	This command sets the RFC2544 burst frame size for constant mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 44 ¹ , <i>MAXimum</i> = 16000, <i>DEFault</i> = 256
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:CONS 128
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. ¹ The minimum allowed frame size varies depending on the stream frame setup.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:CONStant?
Description	This query returns the RFC2544 burst frame size for constant mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:CONS? → 128
Note	

12.23.9 ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:FLEXible:COUNT

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:FLEXible:COUNT <count>
Description	This command sets the RFC2544 burst frame count for flexible mode.
Parameters	<Pt> = Port number <count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=10, DEFault=1</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:FLEX:COUN 3
Note	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:FLEXible:COUNT?
Description	This query returns the RFC2544 burst frame count for flexible mode.
Parameter	<Pt> = Port number
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:FLEX:COUN? → 3
Note	

12.23.10 ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:FLEXible<Count>:SIZE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:FLEXible<Count>:SIZE <size>
Description	This command sets the RFC2544 burst frame size for flexible mode.
Parameters	<Pt> = Port number <Count> = Flexible frame number (1-10) <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 44, MAXimum = 16000, DEFault = 64</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:FLEX1:SIZE 384
Notes	

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FSIZe:FLEXible<Count>:SIZE?
Description	This query returns the RFC2544 burst frame size for flexible mode.
Parameter	<Pt> = Port number <Count> = Flexible frame number (1-10)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FSIZ:FLEX1:SIZE? → 384
Note	

12.23.11 ETHernet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:MODE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:MODE <mode>
Description	This command sets the RFC2544 frames per burst mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> STEPped: Stepped CONStant: Constant DEFault = STEPped
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FPB:MODE CONS
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:MODE?
Description	This query returns the RFC2544 frames per burst mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FPB:MODE? → CONS
Note	

12.23.12 ETHernet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:BEGin

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:BEGin <size>
Description	This command sets the RFC2544 burst begin size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> MINimum = 1, MAXimum = 300000000, DEFault = 100
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FPB:BEG 10
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:BEGin?
Description	This query returns the RFC2544 burst begin size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FPB:BEG? → 10
Note	

12.23.13 ETHernet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:END

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:END <size>
Description	This command sets the RFC2544 burst end size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> MINimum = 1, MAXimum = 300000000, DEFault = 2000
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FPB:END 20
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FPBurst:END?
Description	This query returns the RFC2544 burst end size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FPB:END? → 20
Note	

12.23.14 ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FPBurst:STEP

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FPBurst:STEP <size>
Description	This command sets the RFC2544 burst step size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 300000000, DEFault = 100</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FPB:STEP 5
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FPBurst:STEP?
Description	This query returns the RFC2544 burst step size.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FPB:STEP? → 5
Note	

12.23.15 ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FPBurst:CONStant

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FPBurst:CONStant <size>
Description	This command sets the RFC2544 burst size for constant mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 300000000, DEFault = 2000</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FPB:CONS 500
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FPBurst:CONStant?
Description	This query returns the RFC2544 burst size for constant mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FPB:CONS? → 500
Note	

12.23.16 ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FPBurst:STOP

Syntax	ETHernet:RFC:SEtup:PORT<Pt>:BURSt:FPBurst:STOP <enable>
Description	This command enables or disables stop on no frame loss at maximum burst size.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FPB:STOP ON
Note	This setting is used in Switch/Router and Single ended network mode.

Syntax	ETHernet:RFC:SEtUp:PORT<Pt>:BURSt:FPBurst:STOP?
Description	This query returns whether stop on no frame loss at maximum burst size is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SEt:PORT1:BURSt:FPB:STOP? → 1
Note	

12.23.17 ETHernet:RFC:SEtUp:PORT<Pt>:BURSt:FPBurst:ASEarch[:ENABle]

Syntax	ETHernet:RFC:SEtUp:PORT<Pt>:BURSt:FPBurst:ASEarch[:ENABle] <enable>
Description	This command enables or disables auto search when Burst Mode is Based on frames.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:RFC:SEt:PORT1:BURSt:FPB:ASE ON
Note	This setting is used in Switch/Router and Single ended network mode. In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SEtUp:PORT<Pt>:BURSt:FPBurst:ASEarch[:ENABle]?
Description	This query returns whether auto search is enabled or disabled when Burst Mode is Based on frames.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:RFC:SEt:PORT1:BURSt:FPB:ASE? → 0
Note	

12.23.18 ETHernet:RFC:SEtUp:PORT<Pt>:BURSt:FPBurst:ASEarch:MODE

Syntax	ETHernet:RFC:SEtUp:PORT<Pt>:BURSt:FPBurst:ASEarch:MODE <mode>
Description	This command sets the frames per burst auto search mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> SMARt: Smart search BINary: Binary search <i>DEFault = SMARt</i>
Response	None.
Example	ETH:RFC:SEt:PORT1:BURSt:FPB:ASE:MODE SMAR
Note	This setting is used when ETH:RFC:SEt:PORT1:BURSt:FPB:ASE is enabled.

Syntax	ETHernet:RFC:SEtUp:PORT<Pt>:BURSt:FPBurst:ASEarch:MODE?
Description	This query returns the frames per burst auto search mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SEt:PORT1:BURSt:FPB:ASE:MODE? → SMAR,BIN
Note	

12.23.19 ETHernet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:RESolution

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:RESolution <resolution>
Description	This command sets the frames per burst auto search resolution.
Parameters	<Pt> = Port number <resolution> = <CHARACTER PROGRAM DATA> PM1: 1 per mille (0.1%) PM10: 10 per mille (1.0%) PM100: 100 per mille (10.0%) <i>DEFault = PM1</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:FPB:ASE:RES PM10
Note	This setting is used when ETH:RFC:SET:PORT1:BURS:FPB:ASE is enabled.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:RESolution?
Description	This query returns the frames per burst auto search resolution.
Parameter	<Pt> = Port number
Response	<resolution> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:FPB:ASE:RES? → PM10
Note	

12.23.20 ETHernet:RFC:SETup:PORT<Pt>:BURSt:SPBurst:SEConds

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:SPBurst:SEConds <seconds>
Description	This command sets the seconds per burst (Burst length).
Parameters	<Pt> = Port number <seconds> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.001, MAXimum = 8.000, DEFault = 1.000</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:SPB:SEC 2.000
Notes	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:SPBurst:SEConds?
Description	This query returns the seconds per burst (Burst length).
Parameter	<Pt> = Port number
Response	<seconds> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:SPB:SEC? → 10
Note	

12.23.21 ETHernet:RFC:SETup:PORT<Pt>:BURSt:SPBurst:ASEarch:MODE

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:SPBurst:ASEarch:MODE <mode>
Description	This command sets the seconds per burst auto search mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> SMART: Smart search BINary: Binary search <i>DEFault = SMART</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:SPB:ASE:MODE SMAR
Note	This setting is used when ETH:RFC:SET:PORT1:BURS:SPB:ASE is enabled.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:SPBurst:ASEarch:MODE?
Description	This query returns the seconds per burst auto search mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:SPB:ASE:MODE? → SMAR,BIN
Note	

12.23.22 ETHernet:RFC:SETup:PORT<Pt>:BURSt:SPBurst:ASEarch:RESolution

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:SPBurst:ASEarch:RESolution <resolution>
Description	This command sets the seconds per burst auto search resolution.
Parameters	<Pt> = Port number <resolution> = <CHARACTER PROGRAM DATA> PM01: 0.1 per mille (0.01%) PM1: 1 per mille (0.1%) PM10: 10 per mille (1.0%) PM100: 100 per mille (10.0%) <i>DEFault = PM1</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:SPB:ASE:RES PM10
Note	This setting is used when ETH:RFC:SET:PORT1:BURS:SPB:ASE is enabled.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:SPBurst:ASEarch:RESolution?
Description	This query returns the seconds per burst auto search resolution.
Parameter	<Pt> = Port number
Response	<resolution> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:SPB:ASE:RES? → PM10
Note	

12.23.23 ETHernet:RFC:SETup:PORT<Pt>:BURSt:DURation:STEP

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:DURation:STEP <step>
Description	This command sets the RFC2544 burst step duration. Unit: Seconds.
Parameters	<Pt> = Port number <step> = <NUMERIC PROGRAM DATA> <i>MINimum = 3, MAXimum = 1000000000, DEFault = 10</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:DUR:STEP 5
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:DURation:STEP?
Description	This query returns the step duration. Unit: Seconds.
Parameter	<Pt> = Port number
Response	<step> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:DUR:STEP? → 5
Note	

12.23.24 ETHernet:RFC:SETup:PORT<Pt>:BURSt:DURation:REPeats

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:DURation:REPeats <rep>
Description	This command sets the number of repeats.
Parameters	<Pt> = Port number <rep> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1000, DEFault = 0</i>
Response	None.
Example	ETH:RFC:SET:PORT1:BURS:DUR:REP 5
Note	In Switch/Router mode PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	ETHernet:RFC:SETup:PORT<Pt>:BURSt:DURation:REPeats?
Description	This query returns the number of repeats.
Parameter	<Pt> = Port number
Response	<rep> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:SET:PORT1:BURS:DUR:REP? → 5
Note	

12.24 RFC2544 - Result

12.24.1 ETHernet:RFC:RESult:TEST

Syntax	ETHernet:RFC:RESult:TEST <test>
Description	This command selects the test to fetch results from.
Parameter	<test> = <CHARACTER PROGRAM DATA> LATency: Latency test THROughput: Throughput test FLOs: Frame loss test TAFloss: Throughput and frame loss test BURSt: Burst test <i>DEFault = LATency</i>
Response	None.
Example	ETH:RFC:RES:TEST LAT
Note	This setting is not stored as part of a settings- or result file.

Syntax	ETHernet:RFC:RESult:TEST?
Description	This query returns the selected test to fetch results from.
Parameter	None.
Response	<test> = <CHARACTER RESPONSE DATA>
Example	ETH:RFC:RES:TEST? → LAT
Note	

12.24.2 ETHernet:RFC:RESult:PORT<Pt>:NSTep?

Syntax	ETHernet:RFC:RESult:PORT<Pt>:NSTep? <dir>
Description	This query returns the number of steps for a given port/direction for the selected test type.
Parameters	<Pt> = Port number <dir> = <CHARACTER PROGRAM DATA> TX = Transmitter TXR = Transmitter Remote (only E2E test mode) RX = Receiver RXR = Receiver Remote (only E2E test mode) <i>DEFault = TX</i>
Response	<steps> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:RES:PORT1:NST? RX → 6
Note	Can only be used while a RFC test is in memory.

12.24.3 ETHernet:RFC:RESult:PORT<Pt>:SElect

Syntax	ETHernet:RFC:RESult:PORT<Pt>:SElect <dir>, <step>
Description	This command selects the direction and step to fetch results from.
Parameters	<Pt> = Port number <dir> = <CHARACTER PROGRAM DATA> TX = Transmitter TXR = Transmitter Remote (only E2E test mode) RX = Receiver RXR = Receiver Remote (only E2E test mode) <i>DEFault = TX</i> <step> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, DEFault = 1</i>
Response	None.
Example	ETH:RFC:RES:PORT1:SEL TX, 2
Note	Use the ETHernet:RFC:RESult:PORT<Pt>:NSTep? command (see section 12.24.2) to get the number of steps. This setting is not stored as part of a settings- or result file.

Syntax	ETHernet:RFC:RESult:PORT<Pt>:SElect?
Description	This query returns the selected direction and step to fetch results from.
Parameter	<Pt> = Port number
Response	<dir> = <CHARACTER RESPONSE DATA>
	<step> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:RFC:RES:PORT1:SEL? → TX, 2
Note	

12.24.4 ETHernet:RFC:RESult:PORT<Pt>:FETCh?

Syntax	ETHernet:RFC:RESult:PORT<Pt>:FETCh? <parameters>
Description	This query fetches the RFC2544 results.
Parameters	<Pt> = Port number ({<parameter>} + {,})* = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. Common REP: Repeat. Response: <NR1> STEP: Step. Response: <NR1> TFR: Total frames. Response: <NR1> FSIZ: Frame size. Unit: bytes. Response: <NR1> FRAT: Frame rate¹ (only TX). Unit: fps. Response: <NR1> LL: Line load¹ (only TX). Unit: Mbps². Response: <NR2> LLA: Actual line load¹ (only TX). Unit: Mbps². Response: <NR2> THR: Throughput¹ (only RX). Unit: Mbps². Response: <NR2> UTIL: Utilization¹ (only RX). Unit: %. Response: <NR2> Latency LJIT: Latency/Jitter⁴ (Min,Max,Avg) (only RX). Unit: us. Response: <NR2> LAT: Latency (Min,Max,Avg) (only RX). Unit: us. Response: <NR2> JIT: Jitter (Min,Max,Avg) (only RX). Unit: us. Response: <NR2> Throughput FLOS: Frames lost³ (only RX). Response: <NR2> LRAT: Loss rate³ (only RX). Unit: %. Response: <NR2> Frame Loss FLOS: Frames lost³ (only RX). Response: <NR2> LRAT: Loss rate³ (only RX). Unit: %. Response: <NR2> Throughput and Frame Loss FLOS: Frames lost³ (only RX). Response: <NR2> LRAT: Loss rate³ (only RX). Unit: %. Response: <NR2> Burst BSIZ: Burst size. Response: <NR1> BSEC: Burst seconds. Response: <NR2> FLOS: Frames lost³ (only RX). Response: <NR2>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Expression format: Numeric List Each result is formatted according to the specification in the parameter field.
Example	ETH:RFC:RES:PORT1:FETC? (REP,FSIZ,LL) → (0), (64), (90.0000)
Notes	This query fetches the result from the test, direction and step selected by the ETHernet:RFC:RESult:TEST command (see section 12.24.1) and ETHernet:RFC:RESult:PORT<Pt>:SELEct command (see section 12.24.3). If a requested result is not available, NaN (section 1.6.1) is returned. If there is one or more results, the last ",," is always removed. ¹ Not available for Burst Test. ² When running a Router Latency Test the unit is kbps. ³ When Accumulate repeated steps is enabled, see ETHernet:RFC:SEtup:GENeral:ACCumulate, three values are returned: (Min,Max,Avg). ⁴ Whether to take latency or jitter is specified by ETHernet:RFC:SEtup:GENeral:JITTer.

12.25 Y.1564 Service Activation Test

12.25.1 ETHernet:SATest:STARt

Syntax	ETHernet:SATest:STARt
Description	This command starts a service activation test (described in ITU-T Y.1564).
Parameter	None.
Response	None.
Example	ETH:SAT:STAR
Note	

12.25.2 ETHernet:SATest:STOP

Syntax	ETHernet:SATest:STOP
Description	This command stops the service activation test.
Parameter	None.
Response	None.
Example	ETH:SAT:STOP
Note	

12.25.3 ETHernet:SATest:SETup:TMODe

Syntax	ETHernet:SATest:SETup:TMODe <mode>
Description	This command sets the service activation test mode.
Parameters	<mode> = <CHARACTER PROGRAM DATA> OWAY: One-way testing RTRip: Round-trip testing <i>DEFault</i> = <i>RTRip</i>
Response	None.
Example	ETH:SAT:SET:TMOD OWA
Note	For round-trip testing the test setup is done using the local-to-remote commands with the ":LTRemote" node, while the test result is retrieved using the remote-to-local commands with the "RTLocal" node.

Syntax	ETHernet:SATest:SETup:TMODe?
Description	This query returns the service activation test mode.
Parameter	None.
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:TMOD? → OW
Note	

12.25.4 ETHernet:SATest:SETup:OWTest:LTRemote[:ENABle]

Syntax	ETHernet:SATest:SETup:OWTest:LTRemote[:ENABle] <enable>
Description	This command enables or disables the one-way test in the local to remote direction.
Parameters	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>ON</i>
Response	None.
Example	ETH:SAT:SET:OWT:LTR ON
Note	

Syntax	ETHernet:SATest:SETup:OWTest:LTRemote[:ENABle]?
Description	This query returns whether the one-way test in local to remote direction is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SAT:SET:OWT:LTR? → 1
Note	

12.25.5 ETHernet:SATest:SETup:OWTest:RTLocal[:ENABle]

Syntax	ETHernet:SATest:SETup:OWTest:RTLocal[:ENABle] <enable>
Description	This command enables or disables the one-way test in the remote to local direction.
Parameters	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>ON</i>
Response	None.
Example	ETH:SAT:SET:OWT:RTL ON
Note	

Syntax	ETHernet:SATest:SETup:OWTest:RTLocal[:ENABle]?
Description	This query returns whether the one-way test in remote to local direction is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SAT:SET:OWT:RTL? → 1
Note	

12.25.6 ETHernet:SATest:SETup:OWTest:BSYMMetry

Syntax	ETHernet:SATest:SETup:OWTest:BSYMMetry <symmetry>
Description	This command sets the one-way test bandwidth symmetry.
Parameters	<symmetry> = <CHARACTER PROGRAM DATA> SYMMetric: Symmetric bandwidth ASYMMetric: Asymmetric bandwidth <i>DEFault</i> = <i>SYMMetric</i>
Response	None.
Example	ETH:SAT:SET:OWT:BSYM SYMM
Note	The value is significant only for bi-directional one-way tests (both ETHernet:SATest:SETup:OWTest:RTLocal and ETHernet:SATest:SETup:OWTest:LTRemote are enabled). For bi-directional one-way tests using SYMMetric bandwidth setup, it is the ETHernet:SATest:SETup:SERVice<no>[:LTRemote] node that are used to define the traffic in both directions.

Syntax	ETHernet:SATest:SETup:OWTest:BSYMMetry?
Description	This query returns the bandwidth symmetry parameter.
Parameter	None.
Response	<symmetry> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:OWT:BSYM? → SYMM
Note	

12.25.7 ETHernet:SATest:SETup:OWTest:SYNChronization

Syntax	ETHernet:SATest:SETup:OWTest:SYNChronization <mode>
Description	This command sets the one-way test time synchronization mode.
Parameters	<mode> = <CHARACTER PROGRAM DATA> PRETest: Pre-test synchronization GPS: GPS. <i>DEFault = PRETest</i>
Response	None.
Example	ETH:SAT:SET:OWT:SYNC PRET
Note	

Syntax	ETHernet:SATest:SETup:OWTest:SYNChronization?
Description	This query returns the time synchronization mode.
Parameter	None.
Response	<symmetry> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:OWT:SYNC? → GPS
Note	

12.25.8 ETHernet:SATest:SETup:OWTest:TLSAddresses[:ENABle]

Syntax	ETHernet:SATest:SETup:OWTest:TLSAddresses[:ENABle] <enable>
Description	This command enables or disables transfer of local source addresses to be used as destination addresses on remote side.
Parameters	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:SAT:SET:OWT:TLISA ON
Note	

Syntax	ETHernet:SATest:SETup:OWTest:TLSAddresses[:ENABle]?
Description	This query returns whether transfer of local source addresses to be used as destination addresses on remote side is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SAT:SET:OWT:TLISA? → 1
Note	

12.25.9 ETHernet:SATest:SETup:CCFC

Syntax	ETHernet:SATest:SETup:CCFC <enable>
Description	This command enables or disables compatible configuration frames with CMA3000 and V2.X or older.
Parameters	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:SAT:SET:CCFC ON
Note	

Syntax	ETHernet:SATest:SETup:CCFC?
Description	This query returns whether compatible configuration frames with CMA3000 and V2.X or older is enabled or disabled.
Parameter	None
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SAT:SET:CCFC? → 1
Note	

12.25.10 ETHernet:SATest:SETup:CBRate

Syntax	ETHernet:SATest:SETup:CBRate <unit>
Description	This command sets the calculated bit rate base.
Parameters	<unit> = <CHARACTER PROGRAM DATA> IRATe: Information rate ULRate: Utilized line rate <i>DEFault = IRATe</i>
Response	None.
Example	ETH:SAT:SET:CBR IRAT
Note	

Syntax	ETHernet:SATest:SETup:CBRate?
Description	This query returns the calculated bit rate base.
Parameter	None.
Response	<unit> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:CBR? → IRAT
Note	

12.25.11 ETHernet:SATest:SETup:SPTDuration

Syntax	ETHernet:SATest:SETup:SPTDuration <duration>
Description	This command sets the service performance test duration.
Parameters	<duration> = <CHARACTER PROGRAM DATA> 15M: 15 minutes 2H: 2 hours 24H: 24 hours CUSTom: Use the custom value <i>DEFault = CUSTom</i>
Response	None.
Example	ETH:SAT:SET:SPTD 15M
Note	

Syntax	ETHernet:SATest:SETup:SPTDuration?
Description	This query returns the service performance test duration.
Parameter	None.
Response	<duration> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SPTD? → 15M
Note	

12.25.12 ETHernet:SATest:SETup:SPTDuration:CDURation

Syntax	ETHernet:SATest:SETup:SPTDuration:CDURation <hours>,<minutes>,<seconds>
Description	This command sets the service performance test custom duration.
Parameters	<hours> = <NUMERIC PROGRAM DATA> (0-23) <minutes> = <NUMERIC PROGRAM DATA> (0-1439) <seconds> = <NUMERIC PROGRAM DATA> (0-86399)
Response	None.
Example	ETH:SAT:SET:SPTD:CDUR 0,5,0
Note	The performance test custom duration cannot exceed 23 hours, 59 minutes and 59 seconds.

Syntax	ETHernet:SATest:SETup:SPTDuration:CDURation?
Description	This query returns the service performance test custom duration.
Parameter	None.
Response	<hours> = <NR1 NUMERIC RESPONSE DATA>
	<minutes> = <NR1 NUMERIC RESPONSE DATA>
	<seconds> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SPTD:CDUR? → 0,5,0
Note	

12.25.13 ETHernet:SATest:SETup:COFail

Syntax	ETHernet:SATest:SETup:COFail <enable>
Description	This command enables or disables the completing despite SAC violation. When enabled, all the service configuration tests are performed despite violation of the service acceptance criteria.
Parameters	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	ETH:SAT:SET:COF OFF
Note	Service performance test is never performed if the service acceptance criteria is exceeded.

Syntax	ETHernet:SATest:SETup:COFail?
Description	This query returns whether the completing despite SAC violation is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SAT:SET:COF? → 0
Note	

12.25.14 ETHernet:SATest:SETup:GENeral:IAFFilter

Syntax	ETHernet:SATest:SETup:GENeral:IAFFilter
Description	This command enables or disables including addresses in frame filter on receiver.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>ON</i>
Response	None.
Example	ETH:SAT:SET:GEN:IAFF ON
Note	

Syntax	ETHernet:SATest:SETup:GENeral:IAFFilter?
Description	This query returns whether the including addresses in frame filter on receiver is enabled or disabled.
Parameter	None.
Response	<enable> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:GEN:IAFF? → 1
Note	

12.25.15 ETHernet:SATest:SETup:SERVice<no>[:ENABle]

Syntax	ETHernet:SATest:SETup:SERVice<no>[:ENABle] <enable>
Description	This command enables or disables a service.
Parameters	<no> = Service number (1-8) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	ETH:SAT:SET:SERV OFF
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>[:ENABle]?
Description	This query returns whether a service is enabled or disabled.
Parameter	<no> = Service number (1-8)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SAT:SET:SERV? → 0
Note	

12.25.16 ETHernet:SATest:SETup:SERVice<no>:NAME

Syntax	ETHernet:SATest:SETup:SERVice<no>:NAME <name>
Description	This command changes the name of a service.
Parameters	<no> = Service number (1-8) <name> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:SAT:SET:SERV1:NAME "Video"
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>:NAME?
Description	This query returns the name of a service.
Parameter	<no> = Service number (1-8)
Response	<name> = <STRING RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:NAME? → "Video"
Note	

12.25.17 ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate] <rate>
Description	This command sets the committed information rate for the specified service in the local to remote direction. Unit: Mbps.
Parameters	<no> = Service number (1-8) <rate> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = see note¹, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:CIRate 1.12
Note	If set to zero, the CIR test steps are excluded. This value is automatically calculated when the profile is Video or Voice. ¹ Maximum value depends on the current frame size setup.

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]?
Description	This query returns the committed information rate for the specified service in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<rate> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:CIRate? → 1.12
Note	

12.25.18 ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate] <rate>
Description	This command sets the committed information rate for the specified service in the remote to local direction. Unit: Mbps.
Parameters	<no> = Service number (1-8) <rate> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = see note¹, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL 1.12
Note	If set to zero, the CIR test steps are excluded. This value is automatically calculated when the profile is Video or Voice. ¹ Maximum value depends on the current frame size setup.

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]?
Description	This query returns the committed information rate for the specified service in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<rate> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL? → 1.12
Note	

12.25.19 ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:PROFile

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:PROFile <profile>
Description	This command sets the stream Profile in the local to remote direction.
Parameters	<no> = Service number (1-8) <profile> = <CHARACTER PROGRAM DATA> DATA: Data VIDeo: Video VOICe: Voice DEFault = DATA
Response	None.
Example	ETH:SAT:SET:SERV1:PROF VID
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:PROFile?
Description	This query returns the stream Profile in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<profile> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:PROF? → VID
Note	

12.25.20 ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:PROFile

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:PROFile <profile>
Description	This command sets the stream Profile in the remote to local direction.
Parameters	<no> = Service number (1-8) <profile> = <CHARACTER PROGRAM DATA> DATA: Data VIDeo: Video VOICe: Voice DEFault = DATA
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:PROF VID
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:PROFile?
Description	This query returns the stream Profile in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<profile> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:PROF? → VID
Note	

12.25.21 ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:ENCoding:VIDeo

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:ENCoding:VIDeo <encoding>
Description	This command sets the stream Encoding Video in the local to remote direction.
Parameters	<no> = Service number (1-8) <encoding> = <CHARACTER PROGRAM DATA> SDMPEG2: SDTV (MPEG2) HDMPEG2: HDTV (MPEG2) HDMPEG4: MPEG4 (H.264) SD <i>DEFault = SDMPEG2</i>
Response	None.
Example	ETH:SAT:SET:SERV1:ENC:VID HDMPEG2
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:ENCoding:VIDeo?
Description	This query returns the stream Encoding Video in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<encoding> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:ENC:VID? → HDMPEG2
Note	

12.25.22 ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:ENCoding:VIDeo

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:ENCoding:VIDeo <encoding>
Description	This command sets the stream Encoding Video in the remote to local direction.
Parameters	<no> = Service number (1-8) <encoding> = <CHARACTER PROGRAM DATA> SDMPEG2: SDTV (MPEG2) HDMPEG2: HDTV (MPEG2) HDMPEG4: MPEG4 (H.264) SD <i>DEFault = SDMPEG2</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:ENC:VID HDMPEG2
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:ENCoding:VIDeo?
Description	This query returns the stream Encoding Video in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<encoding> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:ENC:VID? → HDMPEG2
Note	

12.25.23 ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:ENCoding:VOICe

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:ENCoding:VOICe <encoding>
Description	This command sets the stream Encoding Voice in the local to remote direction.
Parameters	<no> = Service number (1-8) <encoding> = <CHARACTER PROGRAM DATA> G711: VoIP G.711 G7231: VoIP G.723.1 G729: VoIP G.729

continued on next page...

...continued from previous page

	<i>DEFault = G711</i>
Response	None.
Example	ETH:SAT:SET:SERV1:ENC:VOIC G7231
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:ENCoding:VOICe?
Description	This query returns the stream Encoding Voice in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<encoding> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:ENC:VOIC? → G7231
Note	

12.25.24 ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:ENCoding:VOICe

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:ENCoding:VOICe <encoding>
Description	This command sets the stream Encoding Voice in the remote to local direction.
Parameters	<no> = Service number (1-8) <encoding> = <CHARACTER PROGRAM DATA> G711: VoIP G.711 G7231: VoIP G.723.1 G729: VoIP G.729 <i>DEFault = G711</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:ENC:VOIC G7231
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:ENCoding:VOICe?
Description	This query returns the stream Encoding Voice in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<encoding> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:ENC:VOIC? → G7231
Note	

12.25.25 ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:NCHannels

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:NCHannels <channel>
Description	This command sets the number of channels in the local to remote direction.
Parameters	<no> = Service number (1-8) <channel> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 100000, DEFault = 1</i>
Response	None.
Example	ETH:SAT:SET:SERV1:NCH 3
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote][:CIRate]:NCHannels?
Description	This query returns the number of channels in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<channel> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:NCH? → 3
Note	

12.25.26 ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:NCHannels

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:NCHannels <channel>
Description	This command sets the number of channels in the remote to local direction.
Parameters	<no> = Service number (1-8) <channel> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 100000, DEFault = 1</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:NCH 3
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal[:CIRate]:NCHannels?
Description	This query returns the number of channels in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<channel> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:NCH? → 3
Note	

12.25.27 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:EIRate

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:EIRate <rate>
Description	This command sets the excess information rate for the specified service in the local to remote direction. Unit: Mbps.
Parameters	<no> = Service number (1-8) <rate> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = see note¹, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:EIR 0.10
Note	If set to zero, the EIR test steps are excluded. ¹ Maximum value depends on the current frame size setup.

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:EIRate?
Description	This query returns the excess information rate for the specified service in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<rate> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:EIR? → 0.12
Note	

12.25.28 ETHernet:SATest:SETup:SERVice<no>:RTLocal:EIRate

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:EIRate <rate>
Description	This command sets the excess information rate for the specified service in the remote to local direction. Unit: Mbps.
Parameters	<no> = Service number (1-8) <rate> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = see note¹, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:EIR 0.12
Note	If set to zero, the EIR test steps are excluded. ¹ Maximum value depends on the current frame size setup.

Syntax	ETHernet:SAtest:SETup:SERVice<no>:RTLocal:EIRate?
Description	This query returns the excess information rate for the specified service in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<rate> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:EIR? → 0.12
Note	

12.25.29 ETHernet:SAtest:SETup:SERVice<no>[:LTRemote]:TPOLicing[:ENABLE]

Syntax	ETHernet:SAtest:SETup:SERVice<no>[:LTRemote]:TPOLicing[:ENABLE] <enable>
Description	This command enables or disables the traffic policing test steps in the local to remote direction.
Parameters	<no> = Service number (1-8) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:SAT:SET:SERV1:TPOL OFF
Note	

Syntax	ETHernet:SAtest:SETup:SERVice<no>[:LTRemote]:TPOLicing[:ENABLE]?
Description	This query returns whether the traffic policing test steps in the local to remote direction is enabled or disabled.
Parameter	<no> = Service number (1-8)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:TPOL? → 0
Note	

12.25.30 ETHernet:SAtest:SETup:SERVice<no>:RTLocal:TPOLicing[:ENABLE]

Syntax	ETHernet:SAtest:SETup:SERVice<no>:RTLocal:TPOLicing[:ENABLE] <enable>
Description	This command enables or disables the traffic policing test steps in the remote to local direction.
Parameters	<no> = Service number (1-8) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:TPOL OFF
Note	

Syntax	ETHernet:SAtest:SETup:SERVice<no>:RTLocal:TPOLicing[:ENABLE]?
Description	This query returns whether the traffic policing test steps in the remote to local direction is enabled or disabled.
Parameter	<no> = Service number (1-8)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:TPOL? → 0
Note	

12.25.31 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:TPOLicing:MARGin

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:TPOLicing:MARGin <margin>
Description	This command sets the acceptable traffic policing margin in the local to remote direction. Unit: Mbps.
Parameters	<no> = Service number (1-8) <margin> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = see note¹, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:TPOL:MARG 10
Note	The minimum possible margin is 0.01 Mbps for line speeds up to 1Gbps. The minimum possible margin is 0.10 Mbps for 10Gbps line speeds. ¹ Maximum value depends on the current frame size setup.

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:TPOLicing:MARGin?
Description	This query returns the acceptable traffic policing margin in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<margin> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:TPOL:MARG? → 10.15
Note	

12.25.32 ETHernet:SATest:SETup:SERVice<no>:RTLocal:TPOLicing:MARGin

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:TPOLicing:MARGin <margin>
Description	This command sets the acceptable traffic policing margin in the remote to local direction. Unit: Mbps.
Parameters	<no> = Service number (1-8) <margin> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = see note¹, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:TPOL:MARG 10
Note	The minimum possible margin is 0.01 Mbps for line speeds up to 1Gbps. The minimum possible margin is 0.10 Mbps for 10Gbps line speeds. ¹ Maximum value depends on the current frame size setup.

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:TPOLicing:MARGin?
Description	This query returns the acceptable traffic policing margin in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<margin> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:TPOL:MARG? → 10.15
Note	

12.25.33 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CBSize

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CBSize <size>
Description	This command sets the committed burst size for the specified service in the local to remote direction. Unit: Bytes.
Parameters	<no> = Service number (1-8) <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1000000000, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:CBS 10000
Note	If set to zero, the CBS test is excluded. If set to a value greater than zero but below the MTU size then the MTU size will be applied.

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CBSize?
Description	This query returns the committed burst size for the specified service in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:CBS? → 10000
Note	

12.25.34 ETHernet:SATest:SETup:SERVice<no>:RTLocal:CBSize

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:CBSize <size>
Description	This command sets the committed burst size for the specified service in the remote to local direction. Unit: Bytes.
Parameters	<no> = Service number (1-8) <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1000000000, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:CB 10000
Note	If set to zero, the CBS test is excluded. If set to a value greater than zero but below the MTU size then the MTU size will be applied.

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:CBSize?
Description	This query returns the committed burst size for the specified service in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:CB? → 10000
Note	

12.25.35 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:EBSize

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:EBSize <size>
Description	This command sets the excess burst size for the specified service in the local to remote direction. Unit: Bytes.
Parameters	<no> = Service number (1-8) <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1000000000, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:EBS 10000
Note	If set to zero, the EBS test is excluded. If set to a value greater than zero but below the MTU size then the MTU size will be applied.

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:EBSize?
Description	This query returns the excess burst size for the specified service in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:EBS? → 1
Note	

12.25.36 ETHernet:SATest:SETup:SERVice<no>:RTLocal:EBSize

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:EBSize <size>
Description	This command sets the excess burst size for the specified service in the remote to local direction. Unit: Bytes.
Parameters	<no> = Service number (1-8) <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 1000000000, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:EBS 1
Note	If set to zero, the EBS test is excluded. If set to a value greater than zero but below the MTU size then the MTU size will be applied.

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:EBSize?
Description	This query returns the excess burst size for the specified service in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:EBS? → 1
Note	

12.25.37 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CAVare[:ENABLE]

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CAVare[:ENABLE] <enable>
Description	This command enables or disables the color awareness of a service in the local to remote direction.
Parameters	<no> = Service number (1-8) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:SAT:SET:SERV1:CAV OFF
Note	When disabled the color mode is colorblind.

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CAVare[:ENABLE]?
Description	This query returns whether the color awareness of a service in the local to remote direction is enabled or disabled.
Parameter	<no> = Service number (1-8)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:CAV? → 0
Note	

12.25.38 ETHernet:SATest:SETup:SERVice<no>:RTLocal:CAVare[:ENABLE]

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:CAVare[:ENABLE] <enable>
Description	This command enables or disables the color awareness of a service in the remote to local direction.
Parameters	<no> = Service number (1-8) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:CAV OFF
Note	When disabled the color mode is colorblind.

Syntax	ETHernet:SAtest:SETup:SERvice<no>:RTLocal:CAVare[:ENABLE]?
Description	This query returns whether the color awareness of a service in the remote to local direction is enabled or disabled.
Parameter	<no> = Service number (1-8)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:CAV? → 0
Note	

12.25.39 ETHernet:SAtest:SETup:SERvice<no>[:LTRemote]:CAVare:CMETHod

Syntax	ETHernet:SAtest:SETup:SERvice<no>[:LTRemote]:CAVare:CMETHod <method>
Description	This command sets the color method for the specified service in the local to remote direction.
Parameters	<no> = Service number (1-8) <method> = <CHARACTER PROGRAM DATA> DSCP: Differentiated Services Code Point PCP: Priority Code Point <i>Default = DSCP</i>
Response	None.
Example	ETH:SAT:SET:SERV1:CAV:CMET DSCP
Note	

Syntax	ETHernet:SAtest:SETup:SERvice<no>[:LTRemote]:CAVare:CMETHod?
Description	This query returns the color method for the specified service in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<method> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:CAV:CMET? → DSCP
Note	

12.25.40 ETHernet:SAtest:SETup:SERvice<no>:RTLocal:CAVare:CMETHod

Syntax	ETHernet:SAtest:SETup:SERvice<no>:RTLocal:CAVare:CMETHod <method>
Description	This command sets the color method for the specified service in the remote to local direction.
Parameters	<no> = Service number (1-8) <method> = <CHARACTER PROGRAM DATA> DSCP: Differentiated Service Code Point PCP: Priority Code Point <i>Default = DSCP</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:CAV:CMET DSCP
Note	

Syntax	ETHernet:SAtest:SETup:SERvice<no>:RTLocal:CAVare:CMETHod?
Description	This query returns the color method for the specified service in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<method> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:CAV:CMET? → DSCP
Note	

12.25.41 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CAVare:DSCP:GREen

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CAVare:DSCP:GREen <value>
Description	This command sets the green value for the DSCP color method for the specified service in the local to remote direction.
Parameters	<no> = Service number (1-8) <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 63, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:CAV:DSCP:GRE 1
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CAVare:DSCP:GREen?
Description	This query returns the green value for the DSCP color method for the specified service in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:CAV:DSCP:GRE? → 1
Note	

12.25.42 ETHernet:SATest:SETup:SERVice<no>:RTLocal:CAVare:DSCP:GREen

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:CAVare:DSCP:GREen <value>
Description	This command sets the green value for the DSCP color method for the specified service in the remote to local direction.
Parameters	<no> = Service number (1-8) <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 63, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:CAV:DSCP:GRE 1
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:CAVare:DSCP:GREen?
Description	This query returns the green value for the DSCP color method for the specified service in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:CAV:DSCP:GRE? → 1
Note	

12.25.43 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CAVare:DSCP:YELLow

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CAVare:DSCP:YELLow <value>
Description	This command sets the yellow value for the DSCP color method for the specified service in the local to remote direction.
Parameters	<no> = Service number (1-8) <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 63, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:CAV:DSCP:YELL 1
Note	

Syntax	ETHernet:SAtest:SETup:SERVice<no>[:LTRemote]:CAVare:DSCP:YELLow?
Description	This query returns the yellow value for the DSCP color method for the specified service in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:CAV:DSCP:YELL? → 1
Note	

12.25.44 ETHernet:SAtest:SETup:SERVice<no>:RTLocal:CAVare:DSCP:YELLow

Syntax	ETHernet:SAtest:SETup:SERVice<no>:RTLocal:CAVare:DSCP:YELLow <value>
Description	This command sets the yellow value for the DSCP color method for the specified service in the remote to local direction.
Parameters	<no> = Service number (1-8) <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 63, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:CAV:DSCP:YELL 1
Note	

Syntax	ETHernet:SAtest:SETup:SERVice<no>:RTLocal:CAVare:DSCP:YELLow?
Description	This query returns the yellow value for the DSCP color method for the specified service in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:CAV:DSCP:YELL? → 1
Note	

12.25.45 ETHernet:SAtest:SETup:SERVice<no>[:LTRemote]:CAVare:PCP:GREen

Syntax	ETHernet:SAtest:SETup:SERVice<no>[:LTRemote]:CAVare:PCP:GREen <value>
Description	This command sets the green value for the PCP color method for the specified service in the local to remote direction.
Parameters	<no> = Service number (1-8) <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:CAV:PCP:GRE 1
Note	

Syntax	ETHernet:SAtest:SETup:SERVice<no>[:LTRemote]:CAVare:PCP:GREen?
Description	This query returns the green value for the PCP color method for the specified service in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:CAV:PCP:GRE? → 1
Note	

12.25.46 ETHernet:SATest:SETup:SERVice<no>:RTLocal:CAVare:PCP:GREen

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:CAVare:PCP:GREen <value>
Description	This command sets the green value for the PCP color method for the specified service in the remote to local direction.
Parameters	<no> = Service number (1-8) <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:CAV:PCP:GRE 1
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:CAVare:PCP:GREen?
Description	This query returns the green value for the PCP color method for the specified service in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:CAV:PCP:GRE? → 1
Note	

12.25.47 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CAVare:PCP:YELLow

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CAVare:PCP:YELLow <value>
Description	This command sets the yellow value for the PCP color method for the specified service in the local to remote direction.
Parameters	<no> = Service number (1-8) <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:CAV:PCP:YELL 1
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CAVare:PCP:YELLow?
Description	This query returns the yellow value for the PCP color method for the specified service in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:CAV:PCP:YELL? → 1
Note	

12.25.48 ETHernet:SATest:SETup:SERVice<no>:RTLocal:CAVare:PCP:YELLow

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:CAVare:PCP:YELLow <value>
Description	This command sets the yellow value for the PCP color method for the specified service in the remote to local direction.
Parameters	<no> = Service number (1-8) <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 0</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:CAV:PCP:YELL 1
Note	

Syntax	ETHernet:SAtest:SETup:SERVice<no>:RTLocal:CAVare:PCP:YELLow?
Description	This query returns the yellow value for the PCP color method for the specified service in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:CAV:PCP:YELL? → 1
Note	

12.25.49 ETHernet:SAtest:SETup:SERVice<no>[:LTRemote]:SACRiteria:FTDelay

Syntax	ETHernet:SAtest:SETup:SERVice<no>[:LTRemote]:SACRiteria:FTDelay <delay>
Description	This command sets the acceptable frame transfer delay value in the local to remote direction. Unit: ms.
Parameters	<no> = Service number (1-8) <delay> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 2000.000, DEFault = 0.500</i>
Response	None.
Example	ETH:SAT:SET:SERV1:SACR:FTD 1.100
Note	The precision is three decimals.

Syntax	ETHernet:SAtest:SETup:SERVice<no>[:LTRemote]:SACRiteria:FTDelay?
Description	This query returns the acceptable frame transfer delay value in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<delay> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:SACR:FTD? → 10.000
Note	

12.25.50 ETHernet:SAtest:SETup:SERVice<no>:RTLocal:SACRiteria:FTDelay

Syntax	ETHernet:SAtest:SETup:SERVice<no>:RTLocal:SACRiteria:FTDelay <delay>
Description	This command sets the acceptable frame transfer delay value in the remote to local direction. Unit: ms.
Parameters	<no> = Service number (1-8) <delay> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 2000.000, DEFault = 0.500</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:SACR:FTD 10.000
Note	

Syntax	ETHernet:SAtest:SETup:SERVice<no>:RTLocal:SACRiteria:FTDelay?
Description	This query returns the acceptable frame transfer delay value in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<delay> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:SACR:FTD? → 10.000
Note	

12.25.51 EThernet:SATest:SETup:SErvice<no>[:LTRemote]:SACriteria:FDVariation

Syntax	ETHerNet:SATest:SETup:SErvice<no>[:LTRemote]:SACriteria:FDVariation <variation>
Description	This command sets the acceptable frame delay variation value in the local to remote direction. Unit: ms.
Parameters	<no> = Service number (1-8) <variation> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 2000.000, DEFault = 0.050</i>
Response	None.
Example	ETH:SAT:SET:SERV1:SACR:FDV 20.000
Note	

Syntax	ETHerNet:SATest:SETup:SErvice<no>[:LTRemote]:SACriteria:FDVariation?
Description	This query returns the acceptable frame delay variation value in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<variation> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:SACR:FDV? → 20.000
Note	

12.25.52 EThernet:SATest:SETup:SErvice<no>:RTLocal:SACriteria:FDVariation

Syntax	ETHerNet:SATest:SETup:SErvice<no>:RTLocal:SACriteria:FDVariation <variation>
Description	This command sets the acceptable frame delay variation value in the remote to local direction. Unit: ms.
Parameters	<no> = Service number (1-8) <variation> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 2000.000, DEFault = 0.050</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:SACR:FDV 20.000
Note	

Syntax	ETHerNet:SATest:SETup:SErvice<no>:RTLocal:SACriteria:FDVariation?
Description	This query returns the acceptable frame delay variation value in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<variation> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:SACR:FDV? → 20.000
Note	

12.25.53 EThernet:SATest:SETup:SErvice<no>[:LTRemote]:SACriteria:FLRatio

Syntax	ETHerNet:SATest:SETup:SErvice<no>[:LTRemote]:SACriteria:FLRatio <ratio>
Description	This command sets the acceptable frame loss ratio in the local to remote direction.
Parameters	<no> = Service number (1-8) <ratio> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.00, MAXimum = 1.00, DEFault = 0.00</i>
Response	None.
Example	ETH:SAT:SET:SERV1:SACR:FLR 0.000015 ETH:SAT:SET:SERV1:SACR:FLR 15e-06
Note	

Syntax	ETHerNet:SATest:SETup:SErvice<no>[:LTRemote]:SACriteria:FLRatio?
Description	This query returns the acceptable frame loss ratio in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<ratio> = <NR3 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:SACR:FLR? → 1.50e-05
Note	

12.25.54 ETHernet:SATest:SETup:SERVice<no>:RTLocal:SACRiteria:FLRatio

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:SACRiteria:FLRatio <ratio>
Description	This command sets the acceptable frame loss ratio in the remote to local direction.
Parameters	<no> = Service number (1-8) <ratio> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.00, MAXimum = 1.00, DEFault = 0.00</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:SACR:FLR 0.000015 ETH:SAT:SET:SERV1:RTL:SACR:FLR 15e-06
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:SACRiteria:FLRatio?
Description	This query returns the acceptable frame loss ratio in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<ratio> = <NR3 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:SACR:FLR? → 1.50e-05
Note	

12.25.55 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:SACRiteria:AVAILability

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:SACRiteria:AVAILability <value>
Description	This command sets the acceptable availability in the local to remote direction. Unit: percentage.
Parameters	<no> = Service number (1-8) <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0.0000, MAXimum=100.0000, DEFault=100.0000</i>
Response	None.
Example	ETH:SAT:SET:SERV1:SACR:AVA 99.0000
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:SACRiteria:AVAILability?
Description	This query returns the acceptable availability in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:SACR:AVA? → 99.0000
Note	

12.25.56 ETHernet:SATest:SETup:SERVice<no>:RTLocal:SACRiteria:AVAILability

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:SACRiteria:AVAILability <value>
Description	This command sets the acceptable availability in the remote to local direction. Unit: percentage.
Parameters	<no> = Service number (1-8) <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0000, MAXimum = 100.0000, DEFault = 100.0000</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:SACR:AVA 99.0000
Note	

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:SACRiteria:AVAILability?
Description	This query returns the acceptable availability in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:SACR:AVA? → 99.0000
Note	

12.25.57 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:FSMode

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:FSMode <mode>
Description	This command sets the configured frame size mode in the local to remote direction.
Parameters	<no> = Service number (1-8) <mode> = <CHARACTER PROGRAM DATA> CONSTant: Fixed frame size ¹ EMIX: A mix of frame sizes ² <i>DEFault = CONSTant</i>
Response	None.
Example	ETH:SAT:SET:SERV1:FSM CONS
Note	¹ Uses the frame size defined by the command: ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:FSIZE. ² Uses the frame sizes defined by the command: ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:EMIX.

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:FSMode?
Description	This query returns the configured frame size in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:FSM? → CONS
Note	

12.25.58 ETHernet:SATest:SETup:SERVice<no>:RTLocal:FSMode

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:FSMode <mode>
Description	This command sets the configured frame size mode in the remote to local direction.
Parameters	<no> = Service number (1-8) <mode> = <CHARACTER PROGRAM DATA> CONSTant: Fixed frame size ¹ EMIX: A mix of frame sizes ² <i>DEFault = CONSTant</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:FSM CONS
Note	¹ Uses the frame size defined by the command: ETHernet:SATest:SETup:SERVice<no>:RTLocal:FSIZE. ² Uses the frame sizes defined by the command: ETHernet:SATest:SETup:SERVice<no>:RTLocal:EMIX.

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:FSMode?
Description	This query returns the configured frame size in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:FSM? → CONS
Note	

12.25.59 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CFSize

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CFSize <size>
Description	This command sets the constant frame size in the local to remote direction.
Parameters	<no> = Service number (1-8) <size> = <CHARACTER PROGRAM DATA> 64: 64 bytes 128: 128 bytes 256: 256 bytes 512: 512 bytes

continued on next page...

...continued from previous page

	1024: 1024 bytes 1280: 1280 bytes 1518: 1518 bytes MTU: Use the MTU value ¹ USER: Use the user defined value ² <i>DEFault = 512</i>
Response	None.
Example	ETH:SAT:SET:SERV1:CFS 256
Note	¹ The MTU value is modified by the command: ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:MTU. ² The user defined value is modified by the command: ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:UDFSize.

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:CFSsize?
Description	This query returns the constant frame size in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<size> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:CFS? → 256
Note	

12.25.60 ETHernet:SATest:SETup:SERVice<no>:RTLocal:CFSsize

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:CFSsize <size>
Description	This command sets the constant frame size in the remote to local direction.
Parameters	<no> = Service number (1-8) <size> = <CHARACTER PROGRAM DATA> 64: 64 bytes 128: 128 bytes 256: 256 bytes 512: 512 bytes 1024: 1024 bytes 1280: 1280 bytes 1518: 1518 bytes MTU: Use the MTU value ¹ USER: Use the user defined value ² <i>DEFault = 512</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:CFS 256
Note	¹ The MTU value is modified by the command: ETHernet:SATest:SETup:SERVice<no>:RTLocal:MTU. ² The user defined value is modified by the command: ETHernet:SATest:SETup:SERVice<no>:RTLocal:UDFSize.

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:CFSsize?
Description	This query returns the constant frame size in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<size> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:CFS? → 256
Note	

12.25.61 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:EMIX

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:EMIX <mix>
Description	This command defines the EMIX sequence in the local to remote direction.

continued on next page...

...continued from previous page

Parameters	<code><no></code> = Service number (1-8) <code><mix></code> = <code><STRING PROGRAM DATA></code> This quoted string defines the EMIX sequence by a sequence of the letters 'a'-'h' or 'u'. Specify: 'a' for a 64 bytes frame 'b' for a 128 bytes frame 'c' for a 256 bytes frame 'd' for a 512 bytes frame 'e' for a 1024 bytes frame 'f' for a 1280 bytes frame 'g' for a 1518 bytes frame 'h' for a MTU sized frame ¹ 'u' for a user defined sized frame ² <i>DEFAULT</i> = "abcegh"
Response	None.
Example	ETH:SAT:SET:SERV1:EMIX "ababccdddhu"
Note	Illegal characters are removed from the EMIX string and if the string is more than 16 characters long, the string will be truncated. ¹ The MTU value is modified by the command: ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:MTU. ² The user defined value is modified by the command: ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:UDFSize.

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:EMIX?
Description	This query returns the EMIX sequence in the local to remote direction.
Parameter	<code><no></code> = Service number (1-8)
Response	<code><emix></code> = <code><STRING RESPONSE DATA></code>
Example	ETH:SAT:SET:SERV1:EMIX? → "ababccdddhu"
Note	

12.25.62 ETHernet:SATest:SETup:SERVice<no>:RTLocal:EMIX

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:EMIX <mix>
Description	This command defines the EMIX sequence in the remote to local direction.
Parameters	<code><no></code> = Service number (1-8) <code><mix></code> = <code><STRING PROGRAM DATA></code> This quoted string defines the EMIX sequence by a sequence of the letters 'a'-'h' or 'u'. Specify: 'a' for a 64 bytes frame 'b' for a 128 bytes frame 'c' for a 256 bytes frame 'd' for a 512 bytes frame 'e' for a 1024 bytes frame 'f' for a 1280 bytes frame 'g' for a 1518 bytes frame 'h' for a MTU sized frame ¹ 'u' for a user defined sized frame ² <i>DEFAULT</i> = "abcegh"
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:EMIX "ababccdddhu"
Note	Illegal characters are removed from the EMIX string and if the string is more than 16 characters long, the string will be truncated. ¹ The MTU value is modified by the command: ETHernet:SATest:SETup:SERVice<no>:RTLocal:MTU. ² The user defined value is modified by the command: ETHernet:SATest:SETup:SERVice<no>:RTLocal:UDFSize.

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:EMIX?
Description	This query returns the EMIX sequence in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<emix> = <STRING RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:EMIX? → "ababccddhu"
Note	

12.25.63 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:MTU

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:MTU <value>
Description	This command sets the MTU value in the local to remote direction. Unit: bytes.
Parameters	<no> = Service number (1-8) <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 1518, MAXimum = 16000, DEFault = 1518</i>
Response	None.
Example	ETH:SAT:SET:SERV1:MTU 10101

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:MTU?
Description	This query returns the MTU value in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:MTU? → 10101
Note	

12.25.64 ETHernet:SATest:SETup:SERVice<no>:RTLocal:MTU

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:MTU <value>
Description	This command sets the MTU value in the remote to local direction. Unit: bytes.
Parameters	<no> = Service number (1-8) <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 1518, MAXimum = 16000, DEFault = 1518</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:MTU 10101

Syntax	ETHernet:SATest:SETup:SERVice<no>:RTLocal:MTU?
Description	This query returns the MTU value in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:MTU? → 10101
Note	

12.25.65 ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:UDFSize

Syntax	ETHernet:SATest:SETup:SERVice<no>[:LTRemote]:UDFSize <size>
Description	This command sets the user defined frame size in the local to remote direction.
Parameters	<no> = Service number (1-8) <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 46¹, MAXimum = 16000, DEFault = 512</i>
Response	None.
Example	ETH:SAT:SET:SERV1:UDFS 111
Note	¹ The minimum allowed frame size varies depending on the frame content setup.

Syntax	ETHernet:SAtest:SETup:SERVice<no>[:LTRemote]:UDFSize?
Description	This query returns the user defined frame size in the local to remote direction.
Parameter	<no> = Service number (1-8)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:UDFS? → 111
Note	

12.25.66 ETHernet:SAtest:SETup:SERVice<no>:RTLocal:UDFSize

Syntax	ETHernet:SAtest:SETup:SERVice<no>:RTLocal:UDFSize <size>
Description	This command sets the user defined frame size in the remote to local direction.
Parameters	<no> = Service number (1-8) <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 46¹, MAXimum = 16000, DEFault = 512</i>
Response	None.
Example	ETH:SAT:SET:SERV1:RTL:UDFS 111
Note	¹ The minimum allowed frame size varies depending on the frame content setup.

Syntax	ETHernet:SAtest:SETup:SERVice<no>:RTLocal:UDFSize?
Description	This query returns the user defined frame size in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:RTL:UDFS? → 111
Note	

12.25.67 ETHernet:SAtest:SETup:SERVice<no>:SCTSteps:SDURation

Syntax	ETHernet:SAtest:SETup:SERVice<no>:SCTSteps:SDURation <duration>
Description	This command sets the service configuration test steps duration. Unit: seconds.
Parameters	<no> = Service number (1-8) <duration> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 60, DEFault = 3</i>
Response	None.
Example	ETH:SAT:SET:SERV1:SCTS:SDUR 5
Note	

Syntax	ETHernet:SAtest:SETup:SERVice<no>:SCTSteps:SDURation?
Description	This query returns the service configuration test steps duration.
Parameter	<no> = Service number (1-8)
Response	<duration> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:SCTS:SDUR? → 5
Note	

12.25.68 ETHernet:SAtest:SETup:SERVice<no>:SCTSteps:NSTep

Syntax	ETHernet:SAtest:SETup:SERVice<no>:SCTSteps:NSTep <duration>
Description	This command sets the service configuration test number of steps.
Parameters	<no> = Service number (1-8) <steps> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 10, DEFault = 4</i>
Response	None.
Example	ETH:SAT:SET:SERV1:SCTS:NST 2
Note	

Syntax	ETHernet:SAtest:SETup:SERVice<no>:SCTSteps:NSTep?
Description	This query returns the service configuration test number of steps.
Parameter	<no> = Service number (1-8)
Response	<steps> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:SCTS:NST? → 2
Note	

12.25.69 ETHernet:SAtest:SETup:SERVice<no>:SCTSteps:SLOPe

Syntax	ETHernet:SAtest:SETup:SERVice<no>:SCTSteps:SLOPe <slope>
Description	This command sets the service configuration test slope.
Parameters	<no> = Service number (1-8) <slope> = <CHARACTER PROGRAM DATA> ASCending: Use an ascending slope (lowest rate first) DESCending: Use a descending slope (CIR rate first) <i>DEFault = ASCending</i>
Response	None.
Example	ETH:SAT:SET:SERV1:SCTS:SLOP ASC
Note	

Syntax	ETHernet:SAtest:SETup:SERVice<no>:SCTSteps:SLOPe?
Description	This query returns the service configuration test slope.
Parameter	<no> = Service number (1-8)
Response	<slope> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:SERV1:SCTS:SLOP? → ASC
Note	

12.25.70 ETHernet:SAtest:SETup:VERCompati

Syntax	ETHernet:SAtest:SETup:VERCompati <version>
Description	This command sets the resolution of latency.
Parameters	<version> = <CHARACTER PROGRAM DATA> V1002: V10.02 or older. ¹ V1003: V10.03 or later. <i>DEFault = V1002</i>
Response	None.
Example	ETH:SAT:SET:VERC V1002
Note	¹ Compatible with V10.02 or older.

Syntax	ETHernet:SAtest:SETup:VERCompati?
Description	This query returns the resolution of latency.
Response	<version> = <CHARACTER RESPONSE DATA>
Example	ETH:SAT:SET:VERC? → V1003
Note	

12.25.71 ETHernet:SATest:RESult:TSYNchronization?

Syntax	ETHernet:SATest:RESult:TSYNchronization?
Description	Returns the status of the timing synchronization during the service activation test period. For one-way testing the signals from the GPS system are needed to achieve the required accuracy of the frame transfer delay measurement.
Parameter	None.
Response	<local-status> = <STRING RESPONSE DATA> "Pending" or "Fail" or "Pass" denotes the synchronization status on the local side.
	<remote-status> = <STRING RESPONSE DATA> "Pending" or "Fail" or "Pass" denotes the synchronization status on the remote side.
Example	ETH:SAT:RES:TSYN? → Pass,Fail
Note	

12.25.72 ETHernet:SATest:RESult:SCTest[:LTRemote]?

Syntax	ETHernet:SATest:RESult:SCTest[:LTRemote]?
Description	Returns the overall result of all service configuration tests in the local to remote direction.
Parameter	None.
Response	<status> = <STRING RESPONSE DATA> "Pending" or "Fail" or "Pass" denotes the status of the test step.
Example	ETH:SAT:RES:SCT? → Pass
Note	

12.25.73 ETHernet:SATest:RESult:SCTest:RTLocal?

Syntax	ETHernet:SATest:RESult:SCTest:RTLocal?
Description	Returns the overall result of all service configuration tests in the remote to local direction.
Parameter	None.
Response	<status> = <STRING RESPONSE DATA> "Pending" or "Fail" or "Pass" denotes the status of the test step.
Example	ETH:SAT:RES:SCT:RTL? → Pass
Note	

12.25.74 ETHernet:SATest:RESult:SCTest:SERVICE<no>[:LTRemote]:CIRate?

Syntax	ETHernet:SATest:RESult:SCTest:SERVICE<no>[:LTRemote]:CIRate? <step>
Description	Returns the results of the specified step of a service configuration test.
Parameters	<no> = Service number (1-8)
	<step> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 10, DEFault = 1</i>
Response	<status> = <STRING RESPONSE DATA> "Fail" or "Pass" denotes the status of the test step.
	<IR-min> = <NR2 NUMERIC RESPONSE DATA> Minimum information rate. Unit: Mbps.
	<IR-avg> = <NR2 NUMERIC RESPONSE DATA> Average information rate. Unit: Mbps.
	<IR-max> = <NR2 NUMERIC RESPONSE DATA> Maximum information rate. Unit: Mbps.
	<FL-count> = <NR1 NUMERIC RESPONSE DATA> Frame loss. Unit: Frames.
	<FL-rate> = <NR3 NUMERIC RESPONSE DATA> Frame loss ratio.
	<FTD-min> = <NR1 NUMERIC RESPONSE DATA> Minimum frame transfer delay. Unit: ms.
	<FTD-avg> = <NR1 NUMERIC RESPONSE DATA> Average frame transfer delay. Unit: ms.

continued on next page...

... continued from previous page

	<FTD-max> = <NR1 NUMERIC RESPONSE DATA> Maximum frame transfer delay. Unit: ms.
	<FDV-min> = <NR1 NUMERIC RESPONSE DATA> Minimum frame delay variation. Unit: ms.
	<FDV-avg> = <NR1 NUMERIC RESPONSE DATA> Average frame delay variation. Unit: ms.
	<FDV-max> = <NR1 NUMERIC RESPONSE DATA> Maximum frame delay variation. Unit: ms.
Example	ETH:SAT:RES:SCT:SERV1:CIR? 1 → Pass,1.00,2.00,3.00,0,0.00E+00,1,2,3,1,2,3
Note	

12.25.75 ETHernet:SATest:RESult:SCTest:SERVice<no>:RTLocal:CIRate?

Syntax	ETHernet:SATest:RESult:SCTest:SERVice<no>:RTLocal:CIRate? <step>
Description	Returns the results of the specified step of a service configuration test.
Parameters	<no> = Service number (1-8) <step> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 10, DEFault = 1</i>
Response	The same response parameters as for the command: ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:CIRate
Example	ETH:SAT:RES:SCT:SERV1:RTL:CIR? 1 → Pass,1.00,2.00,3.00,0,0.00E+00,1,2,3,1,2,3
Note	

12.25.76 ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:EIRate?

Syntax	ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:EIRate? [<color>]
Description	Returns the results of the specified excess information rate test.
Parameters	<no> = Service number (1-8) <color> = <CHARACTER PROGRAM DATA> GREen: Green color counters YELLow: Yellow color counters TOTAl: In color blind mode this is the only result available. Sum of green and yellow color counters when color aware. <i>DEFault = TOTAl</i>
Response	The same response parameters as for the command: ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:CIRate
Example	ETH:SAT:RES:SCT:SERV1:EIR? GRE → Pass,1.00,2.00,3.00,0,0.00E+00,1,2,3,1,2,3
Note	

12.25.77 ETHernet:SATest:RESult:SCTest:SERVice<no>:RTLocal:EIRate?

Syntax	ETHernet:SATest:RESult:SCTest:SERVice<no>:RTLocal:EIRate? [<color>]
Description	Returns the results of the specified excess information rate test.
Parameters	<no> = Service number (1-8) <color> = <CHARACTER PROGRAM DATA> GREen: Green color counters YELLow: Yellow color counters TOTAl: In color blind mode this is the only result available. Sum of green and yellow color counters when color aware. <i>DEFault = TOTAl</i>
Response	The same response parameters as for the command: ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:CIRate
Example	ETH:SAT:RES:SCT:SERV1:RTL:EIR? GRE → Pass,1.00,2.00,3.00,0,0.00E+00,1,2,3,1,2,3
Note	

12.25.78 ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:TPOLicing?

Syntax	ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:TPOLicing? [<color>]
Description	Returns the results of the specified traffic policing test.
Parameters	<no> = Service number (1-8) <color> = <CHARACTER PROGRAM DATA> GREen: Green color counters YELLow: Yellow color counters TOTAl: In color blind mode this is the only result available. Sum of green and yellow color counters when color aware. <i>DEFault = TOTAl</i>
Response	The same response parameters as for the command: ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:CIRate
Example	ETH:SAT:RES:SCT:SERV1:TPOL? GRE → Pass,1.00,2.00,3.00,0,0.00E+00,1,2,3,1,2,3
Note	

12.25.79 ETHernet:SATest:RESult:SCTest:SERVice<no>:RTLocal:TPOLicing?

Syntax	ETHernet:SATest:RESult:SCTest:SERVice<no>:RTLocal:TPOLicing? [<color>]
Description	Returns the results of the specified traffic policing test.
Parameters	<no> = Service number (1-8) <color> = <CHARACTER PROGRAM DATA> GREen: Green color counters YELLow: Yellow color counters TOTAl: In color blind mode this is the only result available. Sum of green and yellow color counters when color aware. <i>DEFault = TOTAl</i>
Response	The same response parameters as for the command: ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:CIRate
Example	ETH:SAT:RES:SCT:SERV1:RTL:TPOL? GRE → Pass,1.00,2.00,3.00,0,0.00E+00,1,2,3,1,2,3
Note	

12.25.80 ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:CBSize?

Syntax	ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:CBSize?
Description	Returns the results of the committed burst size test.
Parameter	<no> = Service number (1-8)
Response	The same response parameters as for the command: ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:CIRate
Example	ETH:SAT:RES:SCT:SERV1:CBS? → Pass,1.00,2.00,3.00,0,0.00E+00,1,2,3,1,2,3
Note	

12.25.81 ETHernet:SATest:RESult:SCTest:SERVice<no>:RTLocal:CBSize?

Syntax	ETHernet:SATest:RESult:SCTest:SERVice<no>:RTLocal:CBSize?
Description	Returns the results of the committed burst size test.
Parameter	<no> = Service number (1-8)
Response	The same response parameters as for the command: ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:CIRate
Example	ETH:SAT:RES:SCT:SERV1:RTL:CBS? → Pass,1.00,2.00,3.00,0,0.00E+00,1,2,3,1,2,3
Note	

12.25.82 ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:EBSize?

Syntax	ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:EBSize? [<color>]
Description	Returns the results of the excess burst size test.
Parameters	<no> = Service number (1-8) <color> = <CHARACTER PROGRAM DATA> GREen: Green color counters YELLow: Yellow color counters TOTal: In color blind mode this is the only result available. Sum of green and yellow color counters when color aware. <i>DEFault = TOTal</i>
Response	The same response parameters as for the command: ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:CIRate
Example	ETH:SAT:RES:SCT:SERV1:EBS? GRE → Pass,1.00,2.00,3.00,0,0.00E+00,1,2,3,1,2,3
Note	

12.25.83 ETHernet:SATest:RESult:SCTest:SERVice<no>:RTLcal:EBSize?

Syntax	ETHernet:SATest:RESult:SCTest:SERVice<no>:RTLcal:EBSize? [<color>]
Description	Returns the results of the excess burst size test.
Parameters	<no> = Service number (1-8) <color> = <CHARACTER PROGRAM DATA> GREen: Green color counters YELLow: Yellow color counters TOTal: In color blind mode this is the only result available. Sum of green and yellow color counters when color aware. <i>DEFault = TOTal</i>
Response	The same response parameters as for the command: ETHernet:SATest:RESult:SCTest:SERVice<no>[:LTRemote]:CIRate
Example	ETH:SAT:RES:SCT:SERV1:RTL:EBS? GRE → Pass,1.00,2.00,3.00,0,0.00E+00,1,2,3,1,2,3
Note	

12.25.84 ETHernet:SATest:RESult:SPTest[:LTRemote]?

Syntax	ETHernet:SATest:RESult:SPTest[:LTRemote]?
Description	Returns the overall result of all service performance tests in the local to remote direction.
Parameter	None.
Response	<status> = <STRING RESPONSE DATA> "Pending" or "Fail" or "Pass" denotes the status of the test step.
Example	ETH:SAT:RES:SPT? → Pass
Note	

12.25.85 ETHernet:SATest:RESult:SPTest:RTLocal?

Syntax	ETHernet:SATest:RESult:SPTest:RTLocal?
Description	Returns the overall result of all service performance tests in the remote to local direction.
Parameter	<no> = Service number (1-8)
Response	<status> = <STRING RESPONSE DATA> "Pending" or "Fail" or "Pass" denotes the status of the test step.
Example	ETH:SAT:RES:SPT:RTL? → Pass
Note	

12.25.86 ETHernet:SATest:RESult:SPTest:SERVICE<no>[:LTRemote]?

Syntax	ETHernet:SATest:RESult:SPTest:SERVICE<no>[:LTRemote]?
Description	Returns the results of a service performance test of a service.
Parameter	<no> = Service number (1-8)
Response	<status> = <STRING RESPONSE DATA> "Fail" or "Pass" denotes the status of the test step. <IR-min> = <NR2 NUMERIC RESPONSE DATA> Minimum information rate. Unit: Mbps. <IR-avg> = <NR2 NUMERIC RESPONSE DATA> Average information rate. Unit: Mbps. <IR-max> = <NR2 NUMERIC RESPONSE DATA> Maximum information rate. Unit: Mbps. <FL-count> = <NR1 NUMERIC RESPONSE DATA> Frame loss. Unit: Frames. <FL-rate> = <NR3 NUMERIC RESPONSE DATA> Frame loss ratio. <FTD-min> = <NR1 NUMERIC RESPONSE DATA> Minimum frame transfer delay. Unit: ms. <FTD-avg> = <NR1 NUMERIC RESPONSE DATA> Average frame transfer delay. Unit: ms. <FTD-max> = <NR1 NUMERIC RESPONSE DATA> Maximum frame transfer delay. Unit: ms. <FDV-min> = <NR1 NUMERIC RESPONSE DATA> Minimum frame delay variation. Unit: ms. <FDV-avg> = <NR1 NUMERIC RESPONSE DATA> Average frame delay variation. Unit: ms. <FDV-max> = <NR1 NUMERIC RESPONSE DATA> Maximum frame delay variation. Unit: ms. <Availability> = <NR2 NUMERIC RESPONSE DATA> Availability (link). Unit: percentage. <Unavailable> = <NR1 NUMERIC RESPONSE DATA> Unavailable time. Unit: seconds.
Example	ETH:SAT:RES:SPT:SERV1? → Pass,1.00,2.00,3.00,0,0.00E+00,1,2,3,1,2,3,100.00,0
Note	

12.25.87 ETHernet:SATest:RESult:SPTest:SErvice<no>:RTLocal?

Syntax	ETHernet:SATest:RESult:SPTest:SErvice<no>:RTLocal?
Description	Returns the results of a service performance test of a service.
Parameter	<no> = Service number (1-8)
Response	The same response parameters as for the command: ETHernet:SATest:RESult:SPTest:SErvice<no>[:LTRemote]?
Example	ETH:SAT:RES:SPT:SERV1:RTL? → Pass,1.00,2.00,3.00,0,0.00E+00,1,2,3,1,2,3,100.00,0
Note	

12.26 Cable Test

 
 
12.26.1 EThernet:CABLe:STARt

Syntax	EThernet:CABLe:STARt
Description	This command starts the cable test.
Parameter	None.
Response	None.
Example	ETH:CABL:STAR
Note	

12.26.2 EThernet:CABLe:STOP

Syntax	EThernet:CABLe:STOP
Description	This command stops the cable test.
Parameter	None.
Response	None.
Example	ETH:CABL:STOP
Note	

12.26.3 EThernet:CABLe:CCStandard

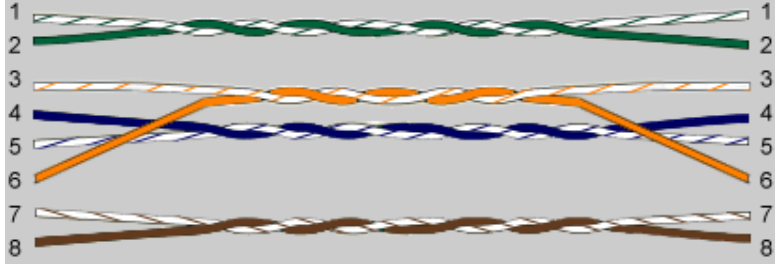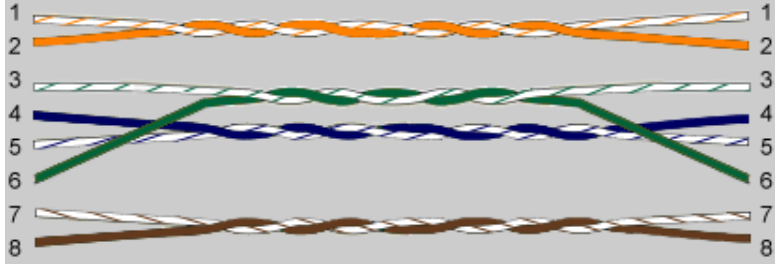Syntax	EThernet:CABLe:CCStandard <ccs>
Description	This command sets the color coding standard.
Parameter	<port> = <CHARACTER PROGRAM DATA> T568A: CAT5 T568B: CAT5E T568BCAT6: CAT6, CAT6A <i>DEFault = T568A</i>
Response	None.
Example	ETH:CABL:CCS T568B
Notes	T568A:  Pair 1: Pin 4,5 Pair 2: Pin 3,6 Pair 3: Pin 1,2 Pair 4: Pin 7,8 T568B, T568BCAT6:  Pair 1: Pin 4,5

continued on next page...

...continued from previous page

	Pair 2: Pin 1,2 Pair 3: Pin 3,6 Pair 4: Pin 7,8
--	---

Syntax	ETHernet:CABLe:CCStandard?
Description	This query returns the color coding standard.
Parameter	None.
Response	<ccs> = <CHARACTER RESPONSE DATA>
Example	ETH:CABL:CCS? → T568B
Note	

12.26.4 ETHernet:CABLe:RESults:PAIR<Pr>?

Syntax	ETHernet:CABLe:RESults:PAIR<Pr>?
Description	This query returns the status of a pair.
Parameter	<Pr> = Pair number (1-4)
Response	<status> = <CHARACTER RESPONSE DATA> OK: Pair is ok SHRT: Pair is shorted OPEN: Pair is open FAIL: Pair is fail(Pair Busy/Invalid) NA: Status not available <distance> = <NR2 NUMERIC RESPONSE DATA> Distance to fault. Unit: Meters. If there is no fault it will return 0.0.
Examples	ETH:CABL:RES:PAIR1? → OK,0.0 ETH:CABL:RES:PAIR2? → SHRT,20.6 ETH:CABL:RES:PAIR3? → OPEN,2.4
Note	Results cannot be obtained during testing.

12.27 IP Channel Statistics

12.27.1 ETHernet:CStat:START

Syntax	ETHernet:CStat:START
Description	This command starts the IP Channel Statistics test.
Parameter	None.
Response	None.
Example	ETH:CST:STAR
Note	This command will make the PHY reset, which will results in link loss for a couple of seconds. This command can be used in V2.00 or later.

12.27.2 ETHernet:CStat:STOP

Syntax	ETHernet:CStat:STOP
Description	This command stops the IP Chanel Statistics test.
Parameter	None.
Response	None.
Example	ETH:CST:STOP
Note	This command will make the phy reset, which will results in link loss for a couple of seconds. This command can be used in V2.00 or later.

12.27.3 ETHernet:CStat:SETup:FOLLow

Syntax	ETHernet:CStat:SETup:FOLLow <enable>
Description	This command enables or disables PORT2 follow PORT1.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:CST:SET:FOLL OFF
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:CStat:SETup:FOLLOW?
Description	This query returns whether it is enabled or disabled that PORT2 follows PORT1.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:CST:SET:FOLL? → 0
Note	This command can be used in V2.00 or later.

12.27.4 ETHernet:CStat:SETup:PORT<Pt>:FOLLow

Syntax	ETHernet:CStat:SETup:PORT<Pt>:FOLLow <enable>
Description	This command sets CStat setup for port <Pt> to follow PORT1.
Parameter	<Pt> = Port number (2-4) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:CST:SET:PORT2:FOLL ON
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:CStat:SETup:PORT<Pt>:FOLLOW?
Description	This query returns whether or not CStat setup for port <Pt> follows PORT1.
Parameter	<Pt> = Port number (2-4)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:CST:SET:PORT2:FOLL? → 1
Note	This command can be used in V2.00 or later.

12.27.5 ETHernet:CStat:SEtup:PORT<Pt>:CDEFinitions

Syntax	ETHernet:CStat:SEtup:PORT<Pt>:CDEFinitions <definitions>
Description	This command sets the active channel definitions.
Parameters	<Pt> = Port number ({<definitions>} + {,})* = <EXPRESSION PROGRAM DATA> SMAC: Source MAC address DMAC: Destination MAC address PINF: Protocol information VLAN: VLAN MPLS: MPLS SIP: Source IP address DIP: Destination IP address IPNH: IP next header SPOR: Source TCP/UDP port DPOR: Destination TCP/UDP port
Response	None.
Example	ETH:CST:SET:PORT1:CDEF (SMAC,SPOR)
Note	Changing the channel definitions while a test is running will reset the results for both ports. This command can be used in V2.00 or later.

Syntax	ETHernet:CStat:SEtup:PORT<Pt>:CDEFinitions?
Description	This query returns the active channel definitions.
Parameter	<Pt> = Port number
Response	{(<definition>),}* = <EXPRESSION RESPONSE DATA> <definition> = <CHARACTER RESPONSE DATA>
Example	ETH:CST:SET:PORT1:CDEF? → (SMAC,SPOR)
Note	This command can be used in V2.00 or later.

12.27.6 ETHernet:CStat:SEtup:PORT<Pt>:MERGe

Syntax	ETHernet:CStat:SEtup:PORT<Pt>:MERGe <definition>
Description	This command sets which channel definition to merge.
Parameters	<Pt> = Port number <definition> = <CHARACTER PROGRAM DATA> SMAC: Source MAC address DMAC: Destination MAC address PINF: Protocol information VLAN: VLAN MPLS: MPLS SIP: Source IP address DIP: Destination IP address IPNH: IP next header SPOR: Source TCP/UDP port DPOR: Destination TCP/UDP port SDMP: Source and destination MAC address pairs OFF: Undo merge. <i>DEFault = OFF</i>
Response	None.
Example	ETH:CST:SET:PORT1:MERG SMAC
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:CStat:SEtup:PORT<Pt>:MERGe?
Description	This query returns the currently merged channel definition.
Parameter	<Pt> = Port number
Response	<definition> = <CHARACTER RESPONSE DATA>
Example	ETH:CST:SET:PORT1:MERG? → SMAC
Note	This command can be used in V2.00 or later.

12.27.7 ETHernet:CStat:SEtup:PORT<Pt>:FREsults

Syntax	ETHernet:CStat:SEtup:PORT<Pt>:FREsults <format>
Description	This command sets the format of the IP Channel Statistics test results.
Parameters	<Pt> = Port number <format> = <CHARACTER PROGRAM DATA> UNF: Unformatted SI: SI prefix notation ENG: Engineering exponent notation HEX: Hexadecimal notation <i>DEFault = SI</i>
Response	None.
Example	ETH:CST:SET:PORT1:FRES ENG
Note	This only affects the GUI and reports. This command can be used in V2.00 or later.

Syntax	ETHernet:CStat:SEtup:PORT<Pt>:FREsults?
Description	This query returns the format of the IP Channel Statistics test results.
Parameter	<Pt> = Port number
Response	<format> = <CHARACTER RESPONSE DATA>
Example	ETH:CST:SET:PORT1:FRES? → ENG
Note	This command can be used in V2.00 or later.

12.27.8 ETHernet:CStat:RESults:PORT<Pt>:NCHannels?

Syntax	ETHernet:CStat:RESults:PORT<Pt>:NCHannels?
Description	This query returns the maximum number of channels.
Parameter	<Pt> = Port number
Response	<max> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:CST:RES:PORT1:NCH? → 3
Note	If no channels are available NaN (section 1.6.1) is returned. This command can be used in V2.00 or later.

12.27.9 ETHernet:CStat:RESults:PORT<Pt>:DFRames?

Syntax	ETHernet:CStat:RESults:PORT<Pt>:DFRames?
Description	This query returns the number of discarded frames.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:CST:RES:PORT1:DFR? → 3
Note	On high speed links the Channel Statistics may sometimes discard frames due to overload. When this happens, the number of frames discarded can be read using this command. This command can be used in V2.00 or later.

12.27.10 ETHernet:CStat:RESults:PORT<Pt>:FETCh?

Syntax	ETHernet:CStat:RESults:PORT<Pt>:FETCh? <number>, <parameter>
Description	This query returns Channel Stat results.
Parameters	<Pt> = Port number <number> = <NUMERIC PROGRAM DATA> The channel number from which to fetch results from. <i>MINimum = 1, DEFault = 1</i> ({<parameter>} + {,}*) = <EXPRESSION PROGRAM DATA> Channel Definitions SMAC: Source MAC address DMAC: Destination MAC address

continued on next page...

...continued from previous page

	PINF: Protocol information VLAN: VLAN MPLS: MPLS SIP: Source IP address DIP: Destination IP address IPNH: IP next header SPOR: Source TCP/UDP port DPOR: Destination TCP/UDP port Frame Statistics FCT: Frame count FRAT: Frame rate BCT: Byte count THR: Throughput OFR: Over Frames UFR: Under Frames Size Distribution Statistics S64: 64-127 S128: 128-255 S256: 256-511 S512: 512-1023 S1024: 1024-1518 S1519: Above 1519 MPLS Statistics MPLSF: MPLS frames MPLSB: MPLS bytes IP Statistics IPP: IP packets IPPR: IP packet rate IPB: IP bytes IPTH: IP throughput IPHB: IP header bytes IPF: IP fragments TTLV: TTL violations IPv4 Statistics IP4P: IPv4 packets IP4PR: IPv4 packet rate IP4B: IPv4 bytes IP4TH: IPv4 Throughput IP4HB: IPv4 header bytes IP4HE: IPv4 header errors IPv6 Statistics IP6P: IPv6 packets IP6PR: IPv6 packet rate IP6B: IPv6 bytes IP6TH: IPv6 throughput IP6HB: IPv6 header bytes TCP Statistics TPAC: TCP packets TBYT: TCP bytes TPR: TCP packet rate
--	--

continued on next page...

...continued from previous page

	TTHR: TCP throughput UDP Statistics UPAC: UDP packets UBYT: UDP bytes UPR: UDP packet rate UTHR: UDP throughput TUEF: TCP/UDP errored frames
Response	{{(<result>, }+), }* = <EXPRESSION RESPONSE DATA> Channel Definitions <result> = <STRING RESPONSE DATA> Statistics <result> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:CST:RES:PORT1:FETC? 1, (SMAC, S64) → ("00-00-91-E2-15-01"), (45)
Note	Use NChannels? to get the maximum channel number. It is not possible to get results from definitions not enabled by the CDEFinitions command. This command can be used in V2.00 or later.

12.27.11 ETHernet:CStat:REsults:RESet

Syntax	ETHernet:CStat:REsults:RESet
Description	This command resets the IP Channel Statistics test.
Parameter	None.
Response	None.
Example	ETH:CST:RES:RES
Note	This command can be used in V2.00 or later.

12.28 Monitor Generator

12.28.1 ETHernet:MONGen:SETup:GENeral:IAFFilter

Syntax	ETHernet:MONGen:SETup:GENeral:IAFFilter
Description	This command selects if addresses should be included in frame filter on receiver.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:MONG:SET:GEN:IAFF ON
Note	

Syntax	ETHernet:MONGen:SETup:GENeral:IAFFilter?
Description	This query returns addresses should be included in frame filter on receiver.
Parameter	None.
Response	<enable> = <CHARACTER RESPONSE DATA>
Example	ETH:MONG:SET:GEN:IAFF? → 1
Note	

12.29 Sync Test

The commands in this section available only be used with MT1000A.

12.29.1 EThernet:SYNTest:SETup:MPERiod

Syntax	EThernet:SYNTest:SETup:MPERiod <period>
Description	This command select the measurement period.
Parameter	<period> = <CHARACTER PROGRAM DATA> DUR100S: 100 seconds DUR1000S: 1000 seconds USERDEFINE: User define
Response	None.
Example	ETH:SYNT:SET:MPER DUR100S
Note	

Syntax	EThernet:SYNTest:SETup:MPERiod?
Description	This query returns the measurement period.
Parameter	None.
Response	<period> = <CHARACTER RESPONSE DATA>
Example	ETH:SYNT:SET:MPER? → DUR100S
Note	

12.29.2 EThernet:SYNTest:SETup:MPERiod:USERdefined

Syntax	EThernet:SYNTest:SETup:MPERiod:USERdefined <period>
Description	This command select the measurement period in seconds unit.
Parameter	<duration> = <NUMERIC PROGRAM DATA> <i>MINimum = 100, MAXimum = 259200, DEFault = 100</i>
Response	None.
Example	ETH:SYNT:SET:MPER:USER 0
Note	This parameter is used only when MPERiod is USERDEFINE.

Syntax	EThernet:SYNTest:SETup:MPERiod:USERdefined?
Description	This query returns the measurement period in seconds unit.
Parameter	None.
Response	<period> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SYNT:SET:MPER:USER? → 0
Note	This parameter is used only when MPERiod is USERDEFINE.

12.29.3 EThernet:SYNTest:SETup:MPERiod:USERdefined:TIME

Syntax	EThernet:SYNTest:SETup:MPERiod:USERdefined:TIME <days>, <hours>, <minutes>, <seconds>
Description	This command select the measurement period.
Parameters	<days> = <NUMERIC PROGRAM DATA> <hours> = <NUMERIC PROGRAM DATA> <minutes> = <NUMERIC PROGRAM DATA> <seconds> = <NUMERIC PROGRAM DATA>
Response	None.
Example	ETH:SYNT:SET:MPER:USER:TIM 0,0,1,40
Note	This parameter is used only when MPERiod is USERDEFINE.

Syntax	ETHernet:SYNTest:SETup:MPERiod:USERdefined:TIME?
Description	This query returns the measurement period.
Parameter	None.
Response	<days> = <NR1 NUMERIC RESPONSE DATA> <hours> = <NR1 NUMERIC RESPONSE DATA> <minutes> = <NR1 NUMERIC RESPONSE DATA> <seconds> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SYNT:SET:MPER:USER:TIM? → 0,0,1,40
Note	This parameter is used only when MPERiod is USERDEFINE.

12.29.4 ETHernet:SYNTest:SETup:PPS:MODE[:ENABLE]

Syntax	ETHernet:SYNTest:SETup:PPS:MODE[:ENABLE] <enable>
Description	This command sets the 1PPS mode.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:SYNT:SET:PPS:MODE ON
Note	

Syntax	ETHernet:SYNTest:SETup:PPS:MODE[:ENABLE]?
Description	This query returns the 1PPS mode.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SYNT:SET:PPS:MODE? → 0
Note	

12.29.5 ETHernet:SYNTest:SETup:PPS:CABLEcorrection

Syntax	ETHernet:SYNTest:SETup:PPS:CABLEcorrection <correction>
Description	This command sets the 1PPS cable correction.
Parameter	<correction> = <NUMERIC PROGRAM DATA> <i>MINimum = -100000000, MAXimum = 100000000, DEFault = 0</i>
Response	None.
Example	ETH:SYNT:SET:PPS:CABL 0
Note	

Syntax	ETHernet:SYNTest:SETup:PPS:CABLEcorrection?
Description	This query returns the 1PPS cable correction.
Parameter	None.
Response	<correction> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SYNT:SET:PPS:CABL? → 0
Note	

12.29.6 ETHernet:SYNTest:SETup:PACKet:CABLEcorrection

Syntax	ETHernet:SYNTest:SETup:PACKet:CABLEcorrection <correction>
Description	This command sets the Ethernet cable correction.
Parameter	<correction> = <NUMERIC PROGRAM DATA> <i>MINimum = -100000000, MAXimum = 100000000, DEFault = 0</i>
Response	None.
Example	ETH:SYNT:SET:PACK:CABL 0
Note	

Syntax	ETHernet:SYNTest:SETup:PACKet:CABLeCorrection?
Description	This query returns the Ethernet cable correction.
Parameter	None.
Response	<correction> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:SYNT:SET:PACK:CABL? → 0
Note	

12.29.7 ETHernet:SYNTest:SETup:PPS:MEASurement[:ENABLE]

Syntax	ETHernet:SYNTest:SETup:PPS:MEASurement[:ENABLE] <enable>
Description	This command enables or disables the 1PPS Measurement.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:SYNT:SET:PPS:MEAS OFF
Note	

Syntax	ETHernet:SYNTest:SETup:PPS:MEASurement[:ENABLE]?
Description	This query returns whether the 1PPS Measurement is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SYNT:SET:PPS:MEAS? → 0
Note	

12.29.8 ETHernet:SYNTest:SETup:SYNCe:WANDer[:ENABLE]

Syntax	ETHernet:SYNTest:SETup:SYNCe:WANDer[:ENABLE] <enable>
Description	This command enables or disables the SyncE wander measurement.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:SYNT:SET:SYNC:WAND ON
Note	

Syntax	ETHernet:SYNTest:SETup:SYNCe:WANDer[:ENABLE]?
Description	This query returns whether the SyncE wander measurement is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SYNT:SET:SYNC:WAND? → 0
Note	

12.29.9 ETHernet:SYNTest:SETup:PTP:ANALysis[:ENABLE]

Syntax	ETHernet:SYNTest:SETup:PTP:ANALysis[:ENABLE] <enable>
Description	This command enables or disables the IEEE1588 analysis measurement.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:SYNT:SET:PTP:ANAL ON
Note	

Syntax	ETHernet:SYNTest:SETup:PTP:ANALysis[:ENABle]?
Description	This query returns whether the IEEE1588 analysis measurement is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SYNT:SET:PTP:ANAL? → 0
Note	

12.29.10 ETHernet:THResholds:PPS:PHASe[:ENABle]

Syntax	ETHernet:THResholds:PPS:PHASe[:ENABle] <enable>
Description	This command enables or disables the 1PPS phase error thresholds.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:THR:PPS:PHAS OFF
Note	

Syntax	ETHernet:THResholds:PPS:PHASe[:ENABle]?
Description	This query returns whether the 1PPS phase error thresholds are enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:THR:PPS:PHAS? → 0
Note	

12.29.11 ETHernet:THResholds:PPS:PHASe:MINValue

Syntax	ETHernet:THResholds:PPS:PHASe:MINValue <value>
Description	This command sets the minimum 1PPS phase error threshold.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = -1500000000, MAXimum = 1500000000, DEFault = 0</i>
Response	None.
Example	ETH:THR:PPS:PHAS:MINV 0
Note	

Syntax	ETHernet:THResholds:PPS:PHASe:MINValue?
Description	This query returns the minimum 1PPS phase error threshold.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:THR:PPS:PHAS:MINV? → 0
Note	

12.29.12 ETHernet:THResholds:PPS:PHASe:MAXValue

Syntax	ETHernet:THResholds:PPS:PHASe:MAXValue <value>
Description	This command sets the maximum 1PPS phase error threshold.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = -1500000000, MAXimum = 1500000000, DEFault = 0</i>
Response	None.
Example	ETH:THR:PPS:PHAS:MAXV 0
Note	

Syntax	ETHernet:THResholds:PPS:PHASe:MAXValue?
Description	This query returns the maximum 1PPS phase error threshold.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:THR:PPS:PHAS:MAXV? → 0
Note	

12.29.13 ETHernet:THResholds:PPS:FILTered[:ENABle]

Syntax	ETHernet:THResholds:PPS:FILTered[:ENABle] <enable>
Description	This command enables or disables the 1PPS filtered TE (LF) thresholds.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:THR:PPS:FILT OFF
Note	

Syntax	ETHernet:THResholds:PPS:FILTered[:ENABle]?
Description	This query returns whether the 1PPS filtered TE (LF) thresholds are enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:THR:PPS:FILT? → 0
Note	

12.29.14 ETHernet:THResholds:PPS:FILTered:MINValue

Syntax	ETHernet:THResholds:PPS:FILTered:MINValue <value>
Description	This command sets the minimum 1PPS filtered TE (LF) threshold.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = -1500000000, MAXimum = 1500000000, DEFault = 0</i>
Response	None.
Example	ETH:THR:PPS:FILT:MINV 0
Note	

Syntax	ETHernet:THResholds:PPS:FILTered:MINValue?
Description	This query returns the minimum 1PPS filtered TE (LF) threshold.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:THR:PPS:FILT:MINV? → 0
Note	

12.29.15 ETHernet:THResholds:PPS:FILTered:MAXValue

Syntax	ETHernet:THResholds:PPS:FILTered:MAXValue <value>
Description	This command sets the maximum 1PPS filtered TE (LF) threshold.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = -1500000000, MAXimum = 1500000000, DEFault = 0</i>
Response	None.
Example	ETH:THR:PPS:FILT:MAXV 0
Note	

Syntax	ETHernet:THResholds:PPS:FILTered:MAXValue?
Description	This query returns the maximum 1PPS filtered TE (LF) threshold.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:THR:PPS:FILT:MAXV? → 0
Note	

12.29.16 ETHernet:THResholds:PPS:DEViation[:ENABle]

Syntax	ETHernet:THResholds:PPS:DEViation[:ENABle] <enable>
Description	This command enables or disables the 1PPS deviation thresholds.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:THR:PPS:DEV OFF
Note	

Syntax	ETHernet:THResholds:PPS:DEViation[:ENABle]?
Description	This query returns whether the 1PPS deviation thresholds are enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:THR:PPS:DEV? → 0
Note	

12.29.17 ETHernet:THResholds:PPS:DEViation:MINValue

Syntax	ETHernet:THResholds:PPS:DEViation:MINValue <value>
Description	This command sets the minimum 1PPS deviation threshold.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = -1500000000, MAXimum = 1500000000, DEFault = 0</i>
Response	None.
Example	ETH:THR:PPS:DEV:MINV 0
Note	

Syntax	ETHernet:THResholds:PPS:DEViation:MINValue?
Description	This query returns the minimum 1PPS deviation threshold.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:THR:PPS:DEV:MINV? → 0
Note	

12.29.18 ETHernet:THResholds:PPS:DEViation:MAXValue

Syntax	ETHernet:THResholds:PPS:DEViation:MAXValue <value>
Description	This command sets the maximum 1PPS deviation threshold.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = -1500000000, MAXimum = 1500000000, DEFault = 0</i>
Response	None.
Example	ETH:THR:PPS:DEV:MAXV 0
Note	

Syntax	ETHernet:THResholds:PPS:DEViation:MAXValue?
Description	This query returns the maximum 1PPS deviation threshold.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:THR:PPS:DEV:MAXV? → 0
Note	

12.29.19 ETHernet:THResholds:OWD:SYNC[:ENABLE]

Syntax	ETHernet:THResholds:OWD:SYNC[:ENABLE] <enable>
Description	This command enables or disables the Sync message one way delay thresholds.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:THR:OWD:SYNC OFF
Note	

Syntax	ETHernet:THResholds:OWD:SYNC[:ENABLE]?
Description	This query returns whether the Sync message one way delay thresholds are enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:THR:OWD:SYNC? → 0
Note	

12.29.20 ETHernet:THResholds:OWD:SYNC:MINValue

Syntax	ETHernet:THResholds:OWD:SYNC:MINValue <value>
Description	This command sets the minimum Sync message one way delay threshold.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = -1000000000, MAXimum = 1000000000, DEFault = 0</i>
Response	None.
Example	ETH:THR:OWD:SYNC:MINV 0
Note	

Syntax	ETHernet:THResholds:OWD:SYNC:MINValue?
Description	This query returns the minimum Sync message one way delay threshold.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:THR:OWD:SYNC:MINV? → 0
Note	

12.29.21 ETHernet:THResholds:OWD:SYNC:MAXValue

Syntax	ETHernet:THResholds:OWD:SYNC:MAXValue <value>
Description	This command sets the maximum Sync message one way delay threshold.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = -1000000000, MAXimum = 1000000000, DEFault = 0</i>
Response	None.
Example	ETH:THR:OWD:SYNC:MAXV 0
Note	

Syntax	ETHernet:THResholds:OWD:SYNC:MAXValue?
Description	This query returns the maximum Sync message one way delay threshold.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:THR:OWD:SYNC:MAXV? → 0
Note	

12.29.22 ETHernet:THResholds:OWD:FOLLow[:ENABle]

Syntax	ETHernet:THResholds:OWD:FOLLow[:ENABle] <enable>
Description	This command enables or disables the Follow up message one way delay thresholds.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:THR:OWD:FOLL:ENAB OFF
Note	

Syntax	ETHernet:THResholds:OWD:FOLLow[:ENABle]?
Description	This query returns whether the Follow up message one way delay thresholds are enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:THR:OWD:FOLL:ENAB? → 0
Note	

12.29.23 ETHernet:THResholds:OWD:FOLLow:MINValue

Syntax	ETHernet:THResholds:OWD:FOLLow:MINValue <value>
Description	This command sets the minimum Follow up message one way delay threshold.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = -1000000000, MAXimum = 1000000000, DEFault = 0</i>
Response	None.
Example	ETH:THR:OWD:FOLL:MINV 0
Note	

Syntax	ETHernet:THResholds:OWD:FOLLow:MINValue?
Description	This query returns the minimum Follow up message one way delay threshold.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:THR:OWD:FOLL:MINV? → 0
Note	

12.29.24 ETHernet:THResholds:OWD:FOLLow:MAXValue

Syntax	ETHernet:THResholds:OWD:FOLLow:MAXValue <value>
Description	This command sets the maximum Follow up message one way delay threshold.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = -1000000000, MAXimum = 1000000000, DEFault = 0</i>
Response	None.
Example	ETH:THR:OWD:FOLL:MAXV 0
Note	

Syntax	ETHernet:THResholds:OWD:FOLLow:MAXValue?
Description	This query returns the maximum Follow up message one way delay threshold.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:THR:OWD:FOLL:MAXV? → 0
Note	

12.29.25 ETHernet:THResholds:OWD:DElay[:ENABle]

Syntax	ETHernet:THResholds:OWD:DElay[:ENABle] <enable>
Description	This command enables or disables the Delay request message one way delay thresholds.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:THR:OWD:DEL:ENAB OFF
Note	

Syntax	ETHernet:THResholds:OWD:DElay[:ENABle]?
Description	This query returns whether the Delay request message one way delay thresholds are enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:THR:OWD:DEL:ENAB? → 0
Note	

12.29.26 ETHernet:THResholds:OWD:DElay:MINValue

Syntax	ETHernet:THResholds:OWD:DElay:MINValue <value>
Description	This command sets the minimum Delay request message one way delay threshold.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = -1000000000, MAXimum = 1000000000, DEFault = 0</i>
Response	None.
Example	ETH:THR:OWD:DEL:MINV 0
Note	

Syntax	ETHernet:THResholds:OWD:DElay:MINValue?
Description	This query returns the minimum Delay request message one way delay threshold.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:THR:OWD:DEL:MINV? → 0
Note	

12.29.27 ETHernet:THResholds:OWD:DElay:MAXValue

Syntax	ETHernet:THResholds:OWD:DElay:MAXValue <value>
Description	This command sets the maximum Delay request message one way delay threshold.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum = -1000000000, MAXimum = 1000000000, DEFault = 0</i>
Response	None.
Example	ETH:THR:OWD:DEL:MAXV 0
Note	

Syntax	ETHernet:THResholds:OWD:DElay:MAXValue?
Description	This query returns the maximum Delay request message one way delay threshold.
Parameter	None.
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:THR:OWD:DEL:MAXV? → 0
Note	

12.29.28 ETHernet:PORT<Pt>:SYNTest:ADVanced:ADAPte[:ENABLE]

Syntax	ETHernet:PORT<Pt>:SYNTest:ADVanced:ADAPte[:ENABLE] <enable>
Description	This command enables or disables "Add a delay a asymmetry factor to PacketTE".
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = OFF
Response	None.
Example	ETH:PORT1:SYNT:ADV:ADAP ON
Note	

Syntax	ETHernet:PORT<Pt>:SYNTest:ADVanced:ADAPte[:ENABLE]?
Description	This query returns whether "Add delay a asymmetry factor to PacketTE" is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:SYNT:ADV:ADAP? → 0
Note	

12.29.29 ETHernet:SYNTest:SETup:ADVanced:FOLLow

Syntax	ETHernet:SYNTest:SETup:ADVanced:FOLLow <enable>
Description	This command sets SyncTest setup advanced for PORT2 to follow PORT1.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None.
Example	ETH:SYNT:SET:ADV:FOLL ON
Note	

Syntax	ETHernet:SYNTest:SETup:ADVanced:FOLLow?
Description	This query returns whether or not SyncTest setup advanced for PORT2 follows PORT1.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:SYNT:SET:ADV:FOLL? → 1
Note	

12.29.30 ETHernet:PORT<Pt>:SYNCtest:RESults:BOUNds?

Syntax	ETHernet:PORT<Pt>:SYNCtest:RESults:BOUNds?
Description	Returns the number of result index lower and upper bounds.
Parameter	<Pt> = Port number
Response	Format: (lower,upper) <lower> = <NR1 NUMERIC RESPONSE DATA> <upper> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:SYNC:RES:BOUN? → (1,50)
Note	

12.29.31 ETHernet:SYNCtest:1PPS:RESults?

Syntax	ETHernet:SYNCtest:1PPS:RESults? <index>
Description	Returns the number of the 1PPS result data(Phase error, Filtered TE (LF), Deviation). Unit: nano seconds.
Parameter	None. <index> = <NR1 NUMERIC RESPONSE DATA>
Response	{(<result>)}* = <EXPRESSION RESPONSE DATA> Format: (<Phase error result>),(Filtered TE (LF) result>),(Deviation result>)
Example	ETH:SYNC:1PPS:RES? 10 → (1.0),(2.0),(3.0)
Note	

12.29.32 ETHernet:PORT<Pt>:SYNCtest:OWD:RESults?

Syntax	ETHernet:PORT<Pt>:SYNCtest:OWD:RESults? <index>
Description	Returns the number of the OWD result data(Sync, Follow up, Delay req.). Unit: nano seconds.
Parameter	<Pt> = Port number <index> = <NR1 NUMERIC RESPONSE DATA>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Format: (<Sync result>),(<Follow up result>),(<Delay req. result>) (<Sync result>) = (Sync min,Sync max,Sync avg) (<Follow up result>) = (Follow up min,Follow up max,Follow up avg) (<Delay req. result>) = (Delay req. min,Delay req. max,Delay req. avg)
Example	ETH:PORT1:SYNC:OWD:RES? 10 → (1.0,2.0,3.0),(1.1,2.1,3.1),(1.3,2.3,3.3)
Note	

12.29.33 ETHernet:PORT<Pt>:SYNCtest:TERR:RESults?

Syntax	ETHernet:PORT<Pt>:SYNCtest:TERR:RESults? <index>
Description	Returns the number of the Terr result data(TE1, TE4, Terr). Unit: nano seconds.
Parameter	<Pt> = Port number <index> = <NR1 NUMERIC RESPONSE DATA>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Format: (<TE1 result>),(<TE4 result>),(<Terr result>) (<TE1 result>) = (TE1 min,TE1 max,TE1 avg) (<TE4 result>) = (TE4 min,TE4 max,TE4 avg) (<Terr result>) = (Terr min,Terr max,Terr avg)
Example	ETH:PORT1:SYNC:TERR:RES? 10 → (1.0,2.0,3.0),(1.1,2.1,3.1),(1.3,2.3,3.3)
Note	

12.29.34 ETHernet:PORT<Pt>:SYNTTest:RESults:SYNCe:WANDer:STORe

Syntax	ETHernet:PORT<Pt>:SYNTTest:RESults:SYNCe:WANDer:STORe [<file>]
Description	This command stores the SyncE wander measurement result data.
Parameter	<Pt> = Port number <file> = <STRING PROGRAM DATA> The path and name of the file to store the data.
Response	None.
Example	ETH:PORT1:SYNT:RES:SYNC:WAND:STOR "Internal/SyncEWander.tie"
Note	The application server must be in the idle state. Files must be saved to the Internal/ directory or a sub-directory hereof. When a USB storage device is mounted, files can stored via the Usb/ directory. Default File Path is Internal/ .

12.29.35 ETHernet:SYNTTest:RESults:PPS:STORe

Syntax	ETHernet:SYNTTest:RESults:PPS:STORe [<file>]
Description	This command stores the 1PPS TE Wander Analysis measurement result data.
Parameter	<file> = <STRING PROGRAM DATA> The path and name of the file to store the data.
Response	None.
Example	ETH:SYNT:RES:PPS:STOR "Internal/1PPSTeWander.pps"
Note	The application server must be in the idle state. Files must be saved to the Internal/ directory or a sub-directory hereof. When a USB storage device is mounted, files can stored via the Usb/ directory. Default File Path is Internal/ .

12.29.36 ETHernet:PORT<Pt>:SYNTest:RESults:PTP:PDVFpp:STORe

Syntax	ETHernet:PORT<Pt>:SYNTest:RESults:PTP:PDVFpp:STORe [<file>]
Description	This command stores the IEEE1588v2 Analysis (PDV/FPP) measurement result data.
Parameter	<Pt> = Port number <file> = <STRING PROGRAM DATA> The path and name of the file to store the data.
Response	None.
Example	ETH:PORT1:SYNT:RES:PTP:PDVF:STOR "Internal/PDVFPP.owd"
Note	This command is the same as for ETHernet:PORT<Pt>:SYNTest:RESults:PTP:ANALysis:STORe.

12.29.37 ETHernet:PORT<Pt>:SYNTest:RESults:PTP:ANALysis:STORe

Syntax	ETHernet:PORT<Pt>:SYNTest:RESults:PTP:ANALysis:STORe [<file>]
Description	This command stores the results of the IEEE1588v2 analysis measurement (PDV/FPP/Wander/PacketSelectedTE).
Parameter	<Pt> = Port number <file> = <STRING PROGRAM DATA> The path and name of the file to store the data.
Response	None.
Example	ETH:PORT1:SYNT:RES:PTP:ANAL:STOR "Internal/IEEE1588v2Analysis.owd"
Note	The application server must be in the idle state. Files must be saved to the Internal/ directory or a sub-directory hereof. When a USB storage device is mounted, files can stored via the Usb/ directory. Default File Path is Internal/.

12.30 Frame Capture**12.30.1 ETHernet:PORT<Pt>:CAPTure:STARt**

Syntax	ETHernet:PORT<Pt>:CAPTure:STARt
Description	This command starts the frame capture.
Parameter	<Pt> = Port number
Response	None.
Example	ETH:PORT1:CAPT:STAR
Note	This command can be used in V2.00 or later.

12.30.2 ETHernet:PORT<Pt>:CAPTure:STOP

Syntax	ETHernet:PORT<Pt>:CAPTure:STOP
Description	This command stops the frame capture.
Parameter	<Pt> = Port number
Response	None.
Example	ETH:PORT1:CAPT:STOP
Note	This command can be used in V2.00 or later.

12.30.3 ETHernet:PORT<Pt>:CAPTure:STATus?

Syntax	ETHernet:PORT<Pt>:CAPTure:STATus?
Description	This query returns the current status of the frame capture.
Parameter	<Pt> = Port number
Response	<status> = <CHARACTER RESPONSE DATA> IDLE WAITING: Waiting for Trigger CAPTURING FINISHED_CAPTURE SAVING FINISHED_SAVE
Example	ETH:PORT1:CAPT:STAT? → IDLE
Note	This command can be used in V2.00 or later.

12.30.4 ETHernet:PORT<Pt>:CAPTure:BUFSize

Syntax	ETHernet:PORT<Pt>:CAPTure:BUFSize <size>
Description	This command sets the capture buffer size.
Parameters	<Pt> = Port number <size> = <CHARACTER PROGRAM DATA> KB512: 512 Kbyte MB1: 1 Mbyte MB2: 2 Mbyte MB4: 4 Mbyte MB8: 8 Mbyte MB16: 16 Mbyte MB32: 32 Mbyte MB64: 64 Mbyte MB128: 128 Mbyte <i>DEFault = MB1</i>
Response	None.
Example	ETH:PORT1:CAPT:BUFS MB1
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:CAPTure:BUFSize?
Description	This query returns the capture buffer size.
Parameter	<Pt> = Port number
Response	<size> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:CAPT:BUFS? → MB1
Note	This command can be used in V2.00 or later.

12.30.5 ETHernet:PORT<Pt>:CAPTure:SLICing

Syntax	ETHernet:PORT<Pt>:CAPTure:SLICing <type>
Description	This command sets the frame slicing type.
Parameters	<type> = <CHARACTER PROGRAM DATA> NONE: Whole frame B64: Top 64 byte B128: Top 128 byte <i>DEFault = NONE</i>
Response	None.
Example	ETH:PORT1:CAPT:SLIC B64
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:CAPTure:SLICing?
Description	This query returns the frame slicing type.
Parameter	None.
Response	<type> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:CAPT:SLIC? → B64
Note	This command can be used in V2.00 or later.

12.30.6 ETHernet:PORT<Pt>:CAPTure:ALOCation

Syntax	ETHernet:PORT<Pt>:CAPTure:ALOCation <type>
Description	This command sets the buffer handling allocation type.
Parameters	<type> = <CHARACTER PROGRAM DATA> STOP: Stop when full WRAP: Overwrite <i>DEFault = STOP</i>
Response	None.
Example	ETH:PORT1:CAPT:ALOC WRAP
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:CAPTure:ALOCation?
Description	This query returns the buffer handling allocation type.
Parameter	None.
Response	<type> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:CAPT:ALOC? → WRAP
Note	This command can be used in V2.00 or later.

12.30.7 ETHernet:PORT<Pt>:CAPTure:TXFRame

Syntax	ETHernet:PORT<Pt>:CAPTure:TXFRame <enable>
Description	This command enables or disables capturing transmitted frames.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:CAPT:TXFR ON
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:CAPTure:TXFRame?
Description	This query returns whether capturing transmitted frames is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:PORT1:CAPT:TXFR? → 1
Note	This command can be used in V2.00 or later.

12.30.8 ETHernet:PORT<Pt>:CAPTure:TRIGger:TYPE

Syntax	ETHernet:PORT<Pt>:CAPTure:TRIGger:TYPE <type>
Description	This command sets the capture trigger type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> MANual ERRor PATtern: Field match <i>DEFault = MANual</i>
Response	None.
Example	ETH:PORT1:CAPT:TRIG:TYPE MAN
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:CAPTure:TRIGger:TYPE?
Description	This query returns the capture trigger type.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:CAPT:TRIG:TYPE? → MAN
Note	This command can be used in V2.00 or later.

12.30.9 ETHernet:PORT<Pt>:CAPTure:TRIGger:POSition

Syntax	ETHernet:PORT<Pt>:CAPTure:TRIGger:POSition <position>
Description	This command sets the capture trigger position.
Parameters	<Pt> = Port number <position> = <CHARACTER PROGRAM DATA> TOP MIDDLE <i>DEFault = TOP</i>
Response	None.
Example	ETH:PORT1:CAPT:TRIG:POS MIDDLE
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:CAPTure:TRIGger:POSition?
Description	This query returns the capture trigger position.
Parameter	<Pt> = Port number
Response	<position> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:CAPT:TRIG:POS? → MIDDLE
Note	This command can be used in V2.00 or later.

12.30.10 ETHernet:PORT<Pt>:CAPTure:TRIGger:ERRor

Syntax	ETHernet:PORT<Pt>:CAPTure:TRIGger:ERRor <type>
Description	This command sets the error type of capture trigger.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> ANY: Any type FRAGMENT: Fragment OVERUNDER: Oversized or undersized OVER: Oversized UNDER: Undersized FCSERR: FCS error OVRFCSErr: Oversized & FCS Error IPCHKSUM: IP checksum error <i>DEFault = ANY</i>
Response	None.
Example	ETH:PORT1:CAPT:TRIG:ERR ANY
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:CAPTure:TRIGger:ERRor?
Description	This query returns the error type of capture trigger.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:CAPT:TRIG:ERR? → ANY
Note	This command can be used in V2.00 or later.

12.30.11 ETHernet:PORT<Pt>:CAPTure:TRIGger:OFFSet

Syntax	ETHernet:PORT<Pt>:CAPTure:TRIGger:OFFSet <offset>
Description	This command sets the pattern offset for the capture trigger.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 15999, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:CAPT:TRIG:OFFS 12
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:CAPTure:TRIGger:OFFSet?
Description	This query returns the pattern offset for the capture trigger.
Parameter	<Pt> = Port number
Response	<offset> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:CAPT:TRIG:OFFS? → 12
Note	This command can be used in V2.00 or later.

12.30.12 ETHernet:PORT<Pt>:CAPTure:TRIGger:PATtern

Syntax	ETHernet:PORT<Pt>:CAPTure:TRIGger:PATtern <pattern>
Description	This command sets the pattern for the capture trigger.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 32 characters (one byte resolution).
Response	None.
Example	ETH:PORT1:CAPT:TRIG:PATT "0800"
Note	This command can be used in V2.00 or later.

Syntax	ETHernet:PORT<Pt>:CAPTure:TRIGger:PATtern?
Description	This query returns the pattern for the capture trigger.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	ETH:PORT1:CAPT:TRIG:PATT? → "0800"
Note	This command can be used in V2.00 or later.

12.30.13 ETHernet:PORT<Pt>:CAPTure:STORe

Syntax	ETHernet:PORT<Pt>:CAPTure:STORe [<file>]
Description	This command stores the current capture data to a given file on the instrument.
Parameter	<Pt> = Port number <file> = <STRING PROGRAM DATA> The path and name of the file to store the data.
Response	None.
Example	ETH:PORT1:CAPT:STOR "Internal/my-frame-capture.pcap"
Note	This command can be used in V2.00 or later. The application server must be in the idle state. Files must be saved to the Internal/ directory or a sub-directory hereof. When a USB storage device is mounted, files can stored via the Usb/ directory. Default File Path is Internal/.

12.30.14 ETHernet:PORT<Pt>:CAPTure:BUFFer?

Syntax	ETHernet:PORT<Pt>:CAPTure:BUFFer?
Description	This query returns the buffer usage percentage (0-100).
Parameter	<Pt> = Port number
Response	<percentage> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:CAPT:BUFF? → 30
Note	This command can be used in V2.00 or later.

12.31 Discovery

Please refer to Example Scripts for how to create Discovery Test programs (see section [A.8](#)).

12.31.1 ETHernet:DISCcovery:SETup:TYPE

Syntax	ETHernet:DISCcovery:SETup:TYPE <mode>
Description	This command sets the search mode.
Parameter	<mode> = <CHARACTER RESPONSE DATA> MULTI: Inside local IP network (multicast search) UNI: Any IP address (unicast search) <i>DEFault = MULTI</i>
Response	None.
Example	ETH:DISC:SET:TYPE MULTI
Note	

Syntax	ETHernet:DISCcovery:SETup:TYPE?
Description	This query returns the search mode.
Parameter	None.
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:DISC:SET:TYPE? → MULTI
Note	

12.31.2 ETHernet:DISCcovery:SETup:TARGet:COUNT

Syntax	ETHernet:DISCcovery:SETup:TARGet:COUNT <number>
Description	This command sets the search range.
Parameters	<number> = <NR1 NUMERIC RESPONSE DATA> <i>MINimum = 1, MAXimum = 255, DEFault = 1</i>
Response	None.
Example	ETH:DISC:SET:TARG:COUN 100
Note	

Syntax	ETHernet:DISCcovery:SETup:TARGet:COUNT?
Description	This query returns the search range.
Parameter	None.
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:DISC:SET:TARG:COUN? → 100
Note	

12.31.3 ETHernet:DISCcovery:SETup:TARGet:IPV4[:BEGin]

Syntax	ETHernet:DISCcovery:SETup:TARGet:IPV4[:BEGin] <address>
Description	This command sets the IP address of the starting point of the search.
Parameter	<address> = <STRING RESPONSE DATA>
Response	None.
Example	ETH:DISC:SET:TARG:IPV4 "172.29.2.36"
Note	

Syntax	ETHernet:DISCcovery:SETup:TARGet:IPV4[:BEGin]?
Description	This query returns the IP address of the starting point of the search.
Parameter	None.
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:DISC:SET:TARG:IPV4? → "172.29.2.36"
Note	

12.31.4 ETHernet:DISCcovery:RESults:NREQuest?

Syntax	ETHernet:DISCcovery:RESults:NREQuest?
Description	This query returns the number of detected Network Master.
Parameter	None.
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:DISC:RES:NREQ? → 1
Note	

12.31.5 ETHernet:DISCcovery:RESults:SREQuest?

Syntax	ETHernet:DISCcovery:RESults:SREQuest? <index>
Description	This query returns the result of selected Network Master.
Parameter	<index> = <NR1 NUMERIC RESPONSE DATA> <i>MINimum = 1, DEFault = 1</i>
Response	<result> = <EXPRESSION RESPONSE DATA> Format: String List Items in the list are as follows. Nickname, Board number, Port number, MAC address of in-band control, IP address of in-band control, IPv4 netmask of in-band control, IPv4 gateway of in-band control, IPv4 default gateway address of in-band control, VLAN levels of in-band control, VLAN ID1 of in-band control, VLAN ID2 of in-band control, In-band control TCP port, Controller serial number, Controller type, Module type, Software version, Current application of in-band control, Password lock state of in-band control
Example	ETH:DISC:RES:SREQ? 1 → NetworkMaster,1,1,00-50-C2-35-D2-EF,172.29.2.36,255.255.255.0,1,172.29.2.1,0,0,0,56002,1234567890,MT1000A,MU100010A,7.0,RFC2544,0
Note	

12.31.6 ETHernet:DISCcovery:RESults:SREQuest:DETail?

Syntax	ETHernet:DISCcovery:RESults:SREQuest:DETail? <index>,(<parameter>)
Description	This query returns the detailed result of selected Network Master.
Parameter	<index> = <NR1 NUMERIC RESPONSE DATA> <i>MINimum = 1, DEFault = 1</i> (<parameter>) = <STRING RESPONSE DATA> NICN: Nickname BOARD: Board number PORT: Port number MAC: MAC address of in-band control IPV4: IP address of in-band control NMV4: IPv4 netmask of in-band control GWV4E: IPv4 gateway of in-band control GWV4: IPv4 default gateway address of in-band control VLAN: The number of active VLAN levels of in-band control VLAN1: VLAN ID1 of in-band control VLAN2: VLAN ID2 of in-band control TCPPOINT: In-band control TCP port SEID: Controller serial number MODEL: Controller type MODULE: Module type SVER: Software version CAPP: Current application of in-band control LOCK: Password lock state of in-band control
Response	<result> is the following format. NICN: <CHARACTER RESPONSE DATA>

continued on next page...

...continued from previous page

	BOARD: <NR1 NUMERIC RESPONSE DATA> PORT: <NR1 NUMERIC RESPONSE DATA> MAC: MAC address with no quotes IPV4: IPv4 address with no quotes NMV4: IPv4 netmask with no quotes GWV4E: <BOOLEAN RESPONSE DATA> GWV4: IPv4 address with no quotes VLAN: <NR1 NUMERIC RESPONSE DATA> VLAN1: <NR1 NUMERIC RESPONSE DATA> VLAN2: <NR1 NUMERIC RESPONSE DATA> TCPPORT: <NR1 NUMERIC RESPONSE DATA> SEID: <NR1 NUMERIC RESPONSE DATA> MODEL: Model name. Example: MT1000A, MT1040A MODULE: Module name. Example: MU100010A, MU100011A, MU104014A SVER: String of (Major version number).(Minor version number) CAPP: Any string of RFC 2544, RFC 6349, SAT (Y.1564)", BERT, Mon./Gen., Reflector, Channel Stat., Ping, Traceroute, Sync Test, Discovery LOCK: <BOOLEAN RESPONSE DATA>
Example	ETH:DISC:RES:SREQ:DET? 1, (MAC) → 00-50-C2-35-D2-EF
Note	

12.31.7 ETHernet:DISCcovery:RESults:UPDate

Syntax	ETHernet:DISCcovery:RESults:UPDate <index>
Description	This command updates the result.
Parameter	<index> = <NR1 NUMERIC RESPONSE DATA>
Response	None.
Example	ETH:DISC:RES:UPD 1
Note	

12.31.8 ETHernet:DISCcovery:RESults:UPDate:RESult?

Syntax	ETHernet:DISCcovery:RESults:UPDate:RESult?
Description	This query returns the last update condition.
Response	<status> = <CHARACTER RESPONSE DATA> SUCCESS: Update succeeded. TIMEOUT: Update timed out.
Example	ETH:DISC:RES:UPD:RES? → SUCCESS
Note	

12.31.9 ETHernet:DISCcovery:CAPplication[:EXECute]

Syntax	ETHernet:DISCcovery:CAPplication[:EXECute] <index>
Description	This command executes the application change.
Parameter	<index> = <NR1 NUMERIC RESPONSE DATA>
Response	None.
Example	ETH:DISC:CAPP 1
Note	

12.31.10 ETHernet:DISCcovery:CAPplication:PASSword

Syntax	ETHernet:DISCcovery:CAPplication:PASSword <value>
Description	This command sets the password in application change dialog.
Parameter	<value> = <STRING RESPONSE DATA>
Response	None.
Example	ETH:DISC:CAPP:PASS "Anritsu"
Note	

Syntax	ETHernet:DISCcovery:CAPplication:PASSword?
Description	This query returns the password in application change dialog.
Parameter	None.
Response	<value> = <STRING RESPONSE DATA>
Example	ETH:DISC:CAPP:PASS? → "Anritsu"
Note	

12.31.11 ETHernet:DISCcovery:CAPplication:SAPplication

Syntax	ETHernet:DISCcovery:CAPplication:SAPplication <app name>
Description	This command sets the application name to be changed in application change dialog.
Parameter	<value> = <STRING RESPONSE DATA> RFC: Ethernet RFC-2544 test application. SAT: Ethernet Service Activation Test application. RFC6349: Ethernet RFC-6349 test application. REFL: Ethernet reflector application. DISC: Ethernet discovery application. <i>DEFault = RFC</i>
Response	None.
Example	ETH:DISC:CAPP:SAPP RFC
Note	

Syntax	ETHernet:DISCcovery:CAPplication:SAPplication?
Description	This query returns the application name to be changed in application change dialog.
Parameter	None.
Response	<app name> = <STRING RESPONSE DATA>
Example	ETH:DISC:CAPP:SAPP? → RFC
Note	

12.31.12 ETHernet:DISCcovery:CAPplication:TARGet:MAC:SOURce

Syntax	ETHernet:DISCcovery:CAPplication:TARGet:MAC:SOURce <address>
Description	This command sets the MAC source address in application change dialog.
Parameters	<address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:DISC:CAPP:TARG:MAC:SOUR "00-50-C2-35-D2-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:DISCcovery:CAPplication:TARGet:MAC:SOURce?
Description	This query returns the MAC source address in application change dialog.
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:DISC:CAPP:TARG:MAC:SOUR? → "00-50-C2-35-D2-EF"
Note	

12.31.13 ETHernet:DISCcovery:CAPplication:TARGet:IPV4:SOURce

Syntax	ETHernet:DISCcovery:CAPplication:TARGet:IPV4:SOURce <address>
Description	This command sets the IPv4 source address in application change dialog.
Parameters	<address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:DISC:CAPP:TARG:IPV4:SOUR "172.29.2.36"
Note	Only the character '.' is accepted as separator.

Syntax	ETHernet:DISCovery:CAPplication:TARGet:IPV4:SOURce?
Description	This query returns the IPv4 source address in application change dialog.
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:DISC:CAPP:TARG:IPV4:SOUR? → "172.29.2.36"
Note	

12.31.14 ETHernet:DISCovery:CAPplication:TARGet:IPV4:DESTination

Syntax	ETHernet:DISCovery:CAPplication:TARGet:IPV4:DESTination <address>
Description	This command sets the IPv4 destination address in application change dialog.
Parameters	<address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:DISC:CAPP:TARG:IPV4:DEST "172.29.2.36"
Note	

Syntax	ETHernet:DISCovery:CAPplication:TARGet:IPV4:DESTination?
Description	This query returns the IPv4 destination address in application change dialog.
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:DISC:CAPP:TARG:IPV4:DEST? → "172.29.2.36"
Note	

12.31.15 ETHernet:DISCovery:CAPplication:TARGet:IPV4:NETMask

Syntax	ETHernet:DISCovery:CAPplication:TARGet:IPV4:NETMask <address>
Description	This command sets the IPv4 netmask in application change dialog.
Parameters	<mask> = <STRING PROGRAM DATA> IPv4 netmask
Response	None.
Example	ETH:DISC:CAPP:TARG:IPV4:NETM "255.255.255.0"
Note	

Syntax	ETHernet:DISCovery:CAPplication:TARGet:IPV4:NETMask?
Description	This query returns the IPv4 netmask in application change dialog.
Response	<mask> = <STRING RESPONSE DATA>
Example	ETH:DISC:CAPP:TARG:IPV4:NETM? → "255.255.255.0"
Note	

12.31.16 ETHernet:DISCovery:CAPplication:TARGet:IPV4:GATeway[:ENABle]

Syntax	ETHernet:DISCovery:CAPplication:TARGet:IPV4:GATeway[:ENABle] <enable>
Description	This command sets the IPv4 gateway in application change dialog.
Parameters	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:DISC:CAPP:TARG:IPV4:GAT ON
Note	

Syntax	ETHernet:DISCovery:CAPplication:TARGet:IPV4:GATeway[:ENABle]?
Description	This query returns the IPv4 gateway in application change dialog.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:DISC:CAPP:TARG:IPV4:GAT? → 1
Note	

12.31.17 ETHernet:DISCovery:CAPplication:TARGet:IPV4:GATeway:ADDRess

Syntax	ETHernet:DISCovery:CAPplication:TARGet:IPV4:GATeway:ADDRess <address>
Description	This command sets the IPv4 default gateway in application change dialog.
Parameters	<address> = <STRING PROGRAM DATA> IPv4 address
Response	None.
Example	ETH:DISC:CAPP:TARG:IPV4:GAT:ADDR "172.29.2.36"
Note	

Syntax	ETHernet:DISCovery:CAPplication:TARGet:IPV4:GATeway:ADDRess?
Description	This query returns the IPv4 default gateway in application change dialog.
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:DISC:CAPP:TARG:IPV4:GAT:ADDR? → "172.29.2.36"
Note	

12.31.18 ETHernet:DISCovery:CAPplication:TARGet:VLAN:LCount

Syntax	ETHernet:DISCovery:CAPplication:TARGet:VLAN:LCount <levels>
Description	This command sets the number of active VLAN levels in application change dialog.
Parameters	<levels> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8, DEFault=1</i>
Response	None.
Example	ETH:DISC:CAPP:TARG:VLAN:LC 2
Note	

Syntax	ETHernet:DISCovery:CAPplication:TARGet:VLAN:LCount?
Description	This query returns the number of active VLAN levels in application change dialog.
Response	<levels> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:DISC:CAPP:TARG:VLAN:LC? → 2
Note	

12.31.19 ETHernet:DISCovery:CAPplication:TARGet:VLAN:LEVel<Lv>:ID

Syntax	ETHernet:DISCovery:CAPplication:TARGet:VLAN:LEVel<Lv>:ID <number>
Description	This command sets the VLAN ID in application change dialog.
Parameter	<Lv> = VLAN level (1-N ¹) <number> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=4095, DEFault=0</i>
Response	None.
Example	ETH:DISC:CAPP:TARG:VLAN:LEV1:ID 1024
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.7.34). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame).

Syntax	ETHernet:DISCovery:CAPplication:TARGet:VLAN:LEVel<Lv>:ID?
Description	This query returns the VLAN ID in application change dialog.
Parameter	<Lv> = VLAN level (1-N)
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:DISC:CAPP:TARG:VLAN:LEV1:ID? → 1024
Note	

12.31.20 ETHernet:DISCoverY:CAPPLication:IMULti:MAC:SOURce

Syntax	ETHernet:DISCoverY:CAPPLication:IMULti:MAC:SOURce <enable>
Description	This command enables or disables use of the setting to increment MAC source address of all streams.
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:DISC:CAPP:IMUL:MAC:SOUR ON
Note	

Syntax	ETHernet:DISCoverY:CAPPLication:IMULti:MAC:SOURce?
Description	This query returns whether the use of setting to increment MAC source address of all streams is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	ETH:DISC:CAPP:IMUL:MAC:SOUR? → ON
Note	

12.31.21 ETHernet:DISCoverY:CAPPLication:IMULti:IPV4:SOURce

Syntax	ETHernet:DISCoverY:CAPPLication:IMULti:IPV4:SOURce <enable>
Description	This command enables or disables use of the setting to increment IPv4 source address of all streams.
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:DISC:CAPP:IMUL:IPV4:SOUR ON
Note	

Syntax	ETHernet:DISCoverY:CAPPLication:IMULti:IPV4:SOURce?
Description	This query returns whether the use of setting to increment IPv4 source address of all streams is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	ETH:DISC:CAPP:IMUL:IPV4:SOUR? → ON
Note	

12.31.22 ETHernet:DISCoverY:CAPPLication:IMULti:VLAN:LEVel<Lv>:ID

Syntax	ETHernet:DISCoverY:CAPPLication:IMULti:VLAN:LEVel<Lv>:ID <enable>
Description	This command enables or disables use of the setting to increment the VLAN ID of all streams.
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:DISC:CAPP:IMUL:VLAN:LEV1:ID ON
Note	

Syntax	ETHernet:DISCovery:CAPPlIcation:IMULti:VLAN:LEVel<Lv>:ID?
Description	This query returns whether the use of setting to increment the VLAN ID of all streams is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	ETH:DISC:CAPP:IMUL:VLAN:LEV1:ID? → ON
Note	

12.32 OAM

The commands in this section is available to all Ethernet applications but the following: Cable Test, Reflector and Pass Through.

Use the general `ETHernet:PORT<Pt>:IFETch?` command to retrieve OAM results.

12.32.1 ETHernet:PORT<Pt>:OAM:PROTocol

Syntax	ETHernet:PORT<Pt>:OAM:PROTocol <protocol>
Description	This command sets the OAM protocol to use.
Parameters	<Pt> = Port number <protocol> = <CHARACTER PROGRAM DATA> AH: OAM according to IEEE 802.3ah AG: OAM according to IEEE 802.1AG Y: OAM according to IEEE Y.1731 <i>DEFault = AH</i>
Response	None.
Example	ETH:PORT1:OAM:PROT AH
Note	

Syntax	ETHernet:PORT<Pt>:OAM:PROTocol?
Description	This query returns the OAM protocol setting.
Parameter	<Pt> = Port number
Response	<protocol> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:PROT? → AH
Note	

12.32.2 ETHernet:PORT<Pt>:OAM:SMAC

Syntax	ETHernet:PORT<Pt>:OAM:SMAC <address>
Description	This command sets the OAM source MAC address.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:OAM:SMAC "00-50-C2-35-D2-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:OAM:SMAC?
Description	This query returns the OAM source MAC address.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:SMAC? → "00-50-C2-35-D2-EF"
Note	

12.32.3 ETHernet:PORT<Pt>:OAM:MAC:ETYPe

Syntax	ETHernet:PORT<Pt>:OAM:MAC:ETYPe <type>
Description	This command sets the encapsulated customer Ethernet Type.
Parameters	<Pt> = Port number <type> = <NUMERIC PROGRAM DATA> Acceptable values: #H8100 #H88A8 #H9100 #H9200
Response	None.
Example	ETH:PORT1:OAM:MAC:ETYP #H8100
Note	This setting is used when ETH:PORT1:OAM:VLAN is enabled only.

Syntax	ETHernet:PORT<Pt>:OAM:MAC:ETYPe?
Description	This query returns the encapsulated customer Ethernet Type.
Parameters	<Pt> = Port number
Response	<type> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MAC:ETYP? → #H8100
Note	

12.32.4 ETHernet:PORT<Pt>:OAM:AH:DISCcovery[:ENABLE]

Syntax	ETHernet:PORT<Pt>:OAM:AH:DISCcovery[:ENABLE] <enable>
Description	This command enables or disables IEEE 802.3ah protocol activity.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:AH:DISC OFF
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AH:DISCcovery[:ENABLE]?
Description	This query returns whether IEEE 802.3ah protocol activity is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AH:DISC? → 0
Note	

12.32.5 ETHernet:PORT<Pt>:OAM:AH:DISCcovery:LMODe

Syntax	ETHernet:PORT<Pt>:OAM:AH:DISCcovery:LMODe <mode>
Description	This command sets the link mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> PASSive: ACTive: <i>DEFault = PASSive</i>
Response	None.
Example	ETH:PORT1:OAM:AH:DISC:LMOD PASS
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AH:DISCover:LMODE?
Description	This query returns the link mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:AH:DISC:LMOD? → PASS
Note	

12.32.6 ETHernet:PORT<Pt>:OAM:AH:DISCover:VOUI

Syntax	ETHernet:PORT<Pt>:OAM:AH:DISCover:VOUI <value>
Description	This command sets the vendor OUI.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=16777215, DEFault=145</i>
Response	None.
Example	ETH:PORT1:OAM:AH:DISC:VOUI #H91
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AH:DISCover:VOUI?
Description	This query returns the vendor OUI.
Parameter	<Pt> = Port number
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AH:DISC:VOUI? → 145
Note	

12.32.7 ETHernet:PORT<Pt>:OAM:AH:DISCover:VSInfo

Syntax	ETHernet:PORT<Pt>:OAM:AH:DISCover:VSInfo <value>
Description	This command sets the vendor specific information.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=268435455, DEFault=0</i>
Response	None.
Example	ETH:PORT1:OAM:AH:DISC:VSIN 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AH:DISCover:VSInfo?
Description	This query returns the vendor specific information.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AH:DISC:VSIN? → 1
Note	

12.32.8 ETHernet:PORT<Pt>:OAM:AH:DISCover:UNIDirectional

Syntax	ETHernet:PORT<Pt>:OAM:AH:DISCover:UNIDirectional <enable>
Description	This command enables or disables unidirectional operation.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:AH:DISC:UNID OFF
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AH:DISCcovery:UNIDirectional?
Description	This query returns whether unidirectional operation is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AH:DISC:UNID? → 0
Note	

12.32.9 ETHernet:PORT<Pt>:OAM:AH:DISCcovery:VRETrival

Syntax	ETHernet:PORT<Pt>:OAM:AH:DISCcovery:VRETrival <enable>
Description	This command enables or disables variable retrieval.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:AH:DISC:VRET OFF
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AH:DISCcovery:VRETrival?
Description	This query returns whether variable retrieval is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AH:DISC:VRET? → 0
Note	

12.32.10 ETHernet:PORT<Pt>:OAM:AH:LDEFects:LFAults

Syntax	ETHernet:PORT<Pt>:OAM:AH:LDEFects:LFAults <enable>
Description	This command enables or disables detection of local link faults.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:AH:LDEF:LFA OFF
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AH:LDEFects:LFAults?
Description	This query returns whether detection of local link faults is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AH:LDEF:LFA? → 0
Note	

12.32.11 ETHernet:PORT<Pt>:OAM:AH:LDEFects:DGASp

Syntax	ETHernet:PORT<Pt>:OAM:AH:LDEFects:DGASp <enable>
Description	This command enables or disables detection of dying gasp.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:AH:LDEF:DGAS OFF
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AH:LDEFects:DGASp?
Description	This query returns whether detection of dying gasp is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AH:LDEF:DGAS? → 0
Note	

12.32.12 ETHernet:PORT<Pt>:OAM:AH:LDEFects:CEvent

Syntax	ETHernet:PORT<Pt>:OAM:AH:LDEFects:CEvent <enable>
Description	This command enables or disables detection of critical events.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:AH:LDEF:CE OFF
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AH:LDEFects:CEvent?
Description	This query returns whether detection of critical events is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AH:LDEF:CE? → 0
Note	

12.32.13 ETHernet:PORT<Pt>:OAM:AG[:ENABLE]

Syntax	ETHernet:PORT<Pt>:OAM:AG[:ENABLE] <enable>
Description	This command enables or disables IEEE 802.1ah protocol activity.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:AG OFF
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AG[:ENABLE]?
Description	This query returns whether IEEE 802.1ah protocol activity is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AG? → 0
Note	

12.32.14 ETHernet:PORT<Pt>:OAM:AG:MEPid

Syntax	ETHernet:PORT<Pt>:OAM:AG:MEPid <id>
Description	This command sets the management end point ID.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:AG:MEP 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AG:MEPid?
Description	This query returns the management end point ID.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AG:MEP? → 1
Note	

12.32.15 ETHernet:PORT<Pt>:OAM:AG:MDLevel

Syntax	ETHernet:PORT<Pt>:OAM:AG:MDLevel <level>
Description	This command sets the maintenance domain level.
Parameters	<Pt> = Port number <level> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:AG:MDL 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AG:MDLevel?
Description	This query returns the maintenance domain level.
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AG:MDL? → 1
Note	

12.32.16 ETHernet:PORT<Pt>:OAM:AG:DOMain

Syntax	ETHernet:PORT<Pt>:OAM:AG:DOMain <name>
Description	This command sets the domain name.
Parameters	<Pt> = Port number <name> = <STRING PROGRAM DATA> Domain name string.
Response	None.
Example	ETH:PORT1:OAM:AG:DOM "Domain"
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AG:DOMain?
Description	This query returns the domain name.
Parameter	<Pt> = Port number
Response	<name> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:AG:DOM? → "Domain"
Note	

12.32.17 ETHernet:PORT<Pt>:OAM:AG:MAIDentifier

Syntax	ETHernet:PORT<Pt>:OAM:AG:MAIDentifier <name>
Description	This command sets the maintenance association identifier.
Parameters	<Pt> = Port number <name> = <STRING PROGRAM DATA> Association string.
Response	None.
Example	ETH:PORT1:OAM:AG:MAID "Anritsu"
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AG:MAIDentifier?
Description	This query returns the maintenance association identifier.
Parameter	<Pt> = Port number
Response	<name> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:AG:MAID? → "Anritsu"
Note	

12.32.18 ETHernet:PORT<Pt>:OAM:AG:CCM:INTerval

Syntax	ETHernet:PORT<Pt>:OAM:AG:CCM:INTerval <interval>
Description	This command sets the continuity check message interval.
Parameters	<Pt> = Port number <interval> = <CHARACTER PROGRAM DATA> MS10: 10 milli seconds MS100: 100 milli seconds S1: 1 second S10: 10 seconds S60: 1 minute S600: 10 minutes <i>DEFault = S1</i>
Response	None.
Example	ETH:PORT1:OAM:AG:CCM:INT S1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AG:CCM:INTerval?
Description	This query returns the continuity check message interval.
Parameter	<Pt> = Port number
Response	<interval> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:AG:CCM:INT? → S1
Note	

12.32.19 ETHernet:PORT<Pt>:OAM:AG:LBM:OTLV

Syntax	ETHernet:PORT<Pt>:OAM:AG:LBM:OTLV <tlv>
Description	This command sets the loop-back message optional TLV type.
Parameters	<Pt> = Port number <tlv> = <CHARACTER PROGRAM DATA> NONE: No TLV DATA: Data TLV TEST: Test TLV <i>DEFault = NONE</i>
Response	None.
Example	ETH:PORT1:OAM:AG:LBM:OTLV NONE
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AG:LBM:OTLV?
Description	This query returns the loop-back message optional TLV type.
Parameter	<Pt> = Port number
Response	<tlv> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:AG:LBM:OTLV? → NONE
Note	

12.32.20 ETHernet:PORT<Pt>:OAM:AG:LBM:TLVLength

Syntax	ETHernet:PORT<Pt>:OAM:AG:LBM:TLVLength <length>
Description	This command sets the loop-back message TLV length.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum=32, MAXimum=1480, DEFault=32</i>
Response	None.
Example	ETH:PORT1:OAM:AG:LBM:TLVL 60
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AG:LBM:TLVLength?
Description	This query returns the loop-back message TLV length.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AG:LBM:TLVL? → 60
Note	

12.32.21 ETHernet:PORT<Pt>:OAM:AG:LBM:DTLV:VALue

Syntax	ETHernet:PORT<Pt>:OAM:AG:LBM:DTLV:VALue <value>
Description	This command sets the data loop-back message TLV value.
Parameters	<Pt> = Port number <value> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:OAM:AG:LBM:DTLV:VAL ""
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AG:LBM:DTLV:VALue?
Description	This query returns the data loop-back message TLV value.
Parameter	<Pt> = Port number
Response	<value> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:AG:LBM:DTLV:VAL? → ""
Note	

12.32.22 ETHernet:PORT<Pt>:OAM:AG:LBM:TTLV:VALue

Syntax	ETHernet:PORT<Pt>:OAM:AG:LBM:TTLV:VALue <value>
Description	This command sets the loop-back message test TLV value.
Parameters	<Pt> = Port number <value> = <CHARACTER PROGRAM DATA> ZERos: Zeros without CRC-32 ZCRC: Zeros with CRC-32 <i>DEFault = ZERos</i>
Response	None.
Example	ETH:PORT1:OAM:AG:LBM:TTLV:VAL ZER
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AG:LBM:TTLV:VALue?
Description	This query returns the loop-back message test TLV value.
Parameter	<Pt> = Port number
Response	<value> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:AG:LBM:TTLV:VAL? → ZER
Note	

12.32.23 ETHernet:PORT<Pt>:OAM:AG:LTM:TTL

Syntax	ETHernet:PORT<Pt>:OAM:AG:LTM:TTL <ttl>
Description	This command sets the link trace message TTL.
Parameters	<Pt> = Port number <ttl> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=255, DEFault=65</i>
Response	None.
Example	ETH:PORT1:OAM:AG:LTM:TTL 65
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AG:LTM:TTL?
Description	This query returns the link trace message TTL.
Parameter	<Pt> = Port number
Response	<ttl> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AG:LTM:TTL? → 65
Note	

12.32.24 ETHernet:PORT<Pt>:OAM:AG:LTM:TID

Syntax	ETHernet:PORT<Pt>:OAM:AG:LTM:TID <id>
Description	This command sets the link trace message transmission ID.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=65535, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:AG:LTM:TID 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:AG:LTM:TID?
Description	This query returns the link trace message transmission ID.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:AG:LTM:TID? → 1
Note	

12.32.25 ETHernet:PORT<Pt>:OAM:AG:MEPList:ADD

Syntax	ETHernet:PORT<Pt>:OAM:AG:MEPList:ADD <mepId>,<mac>[,<level>[,<association>[,<domain>]]]
Description	This command adds a management end point to the MEP list.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i> <mac> = <STRING PROGRAM DATA> <level> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=0</i> <association> = <STRING PROGRAM DATA> <domain> = <STRING PROGRAM DATA>
Response	None
Example	ETH:PORT1:OAM:AG:MEPL:ADD 234,"00-00-00-00-00-11"
Note	

12.32.26 ETHernet:PORT<Pt>:OAM:AG:MEPList:DElete[:MEP]

Syntax	ETHernet:PORT<Pt>:OAM:AG:MEPList:DElete[:MEP] <mepId>
Description	This command deletes a management end point from the MEP list.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None
Example	ETH:PORT1:OAM:AG:MEPL:DEL 234
Note	

12.32.27 ETHernet:PORT<Pt>:OAM:AG:MEPList:CATalog?

Syntax	ETHernet:PORT<Pt>:OAM:AG:MEPList:CATalog?
Description	This query returns the items on the management end point list.
Parameter	<Pt> = Port number
Response	{(<endPoint>),}* = <EXPRESSION RESPONSE DATA> <endPoint> is split into five separate results: (<mepId>,<mac>,<level>,<association>,<domain>)
Example	ETH:PORT1:OAM:AG:MEPL:CAT? → (234,00-00-00-00-00-11,1,Association-A,Domain1), (345,00-00-00-00-00-22,1,Association-B,Domain2)
Note	If the list is empty an execution error will be reported.

12.32.28 ETHernet:PORT<Pt>:OAM:Y[:ENABLE]

Syntax	ETHernet:PORT<Pt>:OAM:Y[:ENABLE] <enable>
Description	This command enables or disables Y.1731 protocol activity.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFAULT = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:Y OFF
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y[:ENABLE]?
Description	This query returns whether Y.1731 protocol activity is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y? → 0
Note	

12.32.29 ETHernet:PORT<Pt>:OAM:Y:MEPid

Syntax	ETHernet:PORT<Pt>:OAM:Y:MEPid <id>
Description	This command sets the MEP ID (management end point ID).
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191, DEFAULT=1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:MEP 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:MEPid?
Description	This query returns the MEP ID (management end point ID).
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:MEP? → 1
Note	

12.32.30 ETHernet:PORT<Pt>:OAM:Y:MEGid

Syntax	ETHernet:PORT<Pt>:OAM:Y:MEGid <id>
Description	This command sets the MEG ID (Maintenance Entity Group ID).
Parameters	<Pt> = Port number <id> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:OAM:Y:MEG "A"
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:MEGid?
Description	This query returns the MEG ID (Maintenance Entity Group ID).
Parameter	<Pt> = Port number
Response	<id> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:MEG? → "A"
Note	

12.32.31 ETHernet:PORT<Pt>:OAM:Y:MEGLevel

Syntax	ETHernet:PORT<Pt>:OAM:Y:MEGLevel <level>
Description	This command sets the MEG level.
Parameters	<Pt> = Port number <level> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:MEGL 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:MEGLevel?
Description	This query returns the MEG level.
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:MEGL? → 1
Note	

12.32.32 ETHernet:PORT<Pt>:OAM:Y:CCM:INTerval

Syntax	ETHernet:PORT<Pt>:OAM:Y:CCM:INTerval <interval>
Description	This command sets the CCM (continuity check messages) interval.
Parameters	<Pt> = Port number <interval> = <CHARACTER PROGRAM DATA> MS10: 10 milli seconds MS100: 100 milli seconds S1: 1 second S10: 10 seconds S60: 1 minute S600: 10 minutes <i>DEFault = S1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:CCM:INT S1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:CCM:INTerval?
Description	This query returns the CCM (continuity check messages) interval.
Parameter	<Pt> = Port number
Response	<interval> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:CCM:INT? → S1
Note	

12.32.33 ETHernet:PORT<Pt>:OAM:Y:LBM:OTLV

Syntax	ETHernet:PORT<Pt>:OAM:Y:LBM:OTLV <tlv>
Description	This command sets the LBM (loop-back message) optional TLV type.
Parameters	<Pt> = Port number <tlv> = <CHARACTER PROGRAM DATA> NONE: No TLV DATA: Data TLV TEST: Test TLV <i>DEFault = NONE</i>
Response	None.
Example	ETH:PORT1:OAM:Y:LBM:OTLV NON
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:LBM:OTLV?
Description	This query returns the LBM (loop-back message) optional TLV type.
Parameter	<Pt> = Port number
Response	<tlv> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:LBM:OTLV? → NON
Note	

12.32.34 ETHernet:PORT<Pt>:OAM:Y:LBM:TLVLength

Syntax	ETHernet:PORT<Pt>:OAM:Y:LBM:TLVLength <length>
Description	This command sets the LBM (loop-back message) TLV length.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum=32, MAXimum=1480, DEFault=32</i>
Response	None.
Example	ETH:PORT1:OAM:Y:LBM:TLVL 60
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:LBM:TLVLength?
Description	This query returns the LBM (loop-back message) TLV length.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:LBM:TLVL? → 60
Note	

12.32.35 ETHernet:PORT<Pt>:OAM:Y:LBM:DTLV:VALue

Syntax	ETHernet:PORT<Pt>:OAM:Y:LBM:DTLV:VALue <value>
Description	This command sets the LBM (loop-back message) data TLV value.
Parameters	<Pt> = Port number <value> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:OAM:Y:LBM:DTLV:VAL ""
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:LBM:DTLV:VALue?
Description	This query returns the LBM (loop-back message) data TLV value.
Parameter	<Pt> = Port number
Response	<value> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:LBM:DTLV:VAL? → ""
Note	

12.32.36 ETHernet:PORT<Pt>:OAM:Y:LBM:TTLV:VALue

Syntax	ETHernet:PORT<Pt>:OAM:Y:LBM:TTLV:VALue <value>
Description	This command sets the LBM (loop-back message) test TLV value.
Parameters	<Pt> = Port number <value> = <CHARACTER PROGRAM DATA> ZERos: Zeros without CRC-32 ZCRC: Zeros with CRC-32 <i>DEFault</i> = <i>ZERos</i>
Response	None.
Example	ETH:PORT1:OAM:Y:LBM:TTLV:VAL ZER
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:LBM:TTLV:VALue?
Description	This query returns the LBM (loop-back message) test TLV value.
Parameter	<Pt> = Port number
Response	<value> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:LBM:TTLV:VAL? → ZER
Note	

12.32.37 ETHernet:PORT<Pt>:OAM:Y:LTM:TTL

Syntax	ETHernet:PORT<Pt>:OAM:Y:LTM:TTL <ttl>
Description	This command sets the LTM (link trace message) TTL.
Parameters	<Pt> = Port number <ttl> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =1, <i>MAXimum</i> =255, <i>DEFault</i> =65
Response	None.
Example	ETH:PORT1:OAM:Y:LTM:TTL 65
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:LTM:TTL?
Description	This query returns the LTM (link trace message) TTL.
Parameter	<Pt> = Port number
Response	<tll> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:LTM:TTL? → 65
Note	

12.32.38 ETHernet:PORT<Pt>:OAM:Y:LTM:TID

Syntax	ETHernet:PORT<Pt>:OAM:Y:LTM:TID <id>
Description	This command sets the LTM (link trace message) transaction ID.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=65535, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:LTM:TID 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:LTM:TID?
Description	This query returns the LTM (link trace message) transaction ID.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:LTM:TID? → 1
Note	

12.32.39 ETHernet:PORT<Pt>:OAM:Y:TST:FTSend

Syntax	ETHernet:PORT<Pt>:OAM:Y:TST:FTSend <count>
Description	This command sets the number of test frames to send.
Parameters	<Pt> = Port number <count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=100, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:TST:FTS 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:TST:FTSend?
Description	This query returns the number of test frames to send.
Parameter	<Pt> = Port number
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:TST:FTS? → 1
Note	

12.32.40 ETHernet:PORT<Pt>:OAM:Y:TST:RATE

Syntax	ETHernet:PORT<Pt>:OAM:Y:TST:RATE <interval>
Description	This command sets the test rate.
Parameters	<Pt> = Port number <interval> = <CHARACTER PROGRAM DATA> MS100: 100 milli seconds S1: 1 second S10: 10 seconds <i>DEFault = S1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:TST:RATE S1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:TST:RATE?
Description	This query returns the test rate.
Parameter	<Pt> = Port number
Response	<interval> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:TST:RATE? → S1
Note	

12.32.41 ETHernet:PORT<Pt>:OAM:Y:TST:OTLV

Syntax	ETHernet:PORT<Pt>:OAM:Y:TST:OTLV <tlv>
Description	This command sets the test optional TLV type.
Parameters	<Pt> = Port number <tlv> = <CHARACTER PROGRAM DATA> NONE: No TLV TEST: Test TLV <i>DEFault = NONE</i>
Response	None.
Example	ETH:PORT1:OAM:Y:TST:OTLV NONE
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:TST:OTLV?
Description	This query returns the test optional TLV type.
Parameter	<Pt> = Port number
Response	<tlv> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:TST:OTLV? → NONE
Note	

12.32.42 ETHernet:PORT<Pt>:OAM:Y:TST:TLVLength

Syntax	ETHernet:PORT<Pt>:OAM:Y:TST:TLVLength <length>
Description	This command sets the test TLV length.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum=32, MAXimum=1480, DEFault=32</i>
Response	None.
Example	ETH:PORT1:OAM:Y:TST:TLVL 0
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:TST:TLVLength?
Description	This query returns the test TLV length.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:TST:TLVL? → 0
Note	

12.32.43 ETHernet:PORT<Pt>:OAM:Y:TST:TTLV:VALue

Syntax	ETHernet:PORT<Pt>:OAM:Y:TST:TTLV:VALue <value>
Description	This command sets the test TLV value.
Parameters	<Pt> = Port number <value> = <CHARACTER PROGRAM DATA> ZERos: Zeros without CRC-32 ZCRC: Zeros with CRC-32 <i>DEFault = ZERos</i>
Response	None.
Example	ETH:PORT1:OAM:Y:TST:TTLV:VAL ZER
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:TST:TTLV:VALue?
Description	This query returns the test TLV value.
Parameter	<Pt> = Port number
Response	<value> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:TST:TTLV:VAL? → ZER
Note	

12.32.44 ETHernet:PORT<Pt>:OAM:Y:MCC:OUI

Syntax	ETHernet:PORT<Pt>:OAM:Y:MCC:OUI <value>
Description	This command sets the MCC (Maintenance communication channel) OUI.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=16777215, DEFault=145</i>
Response	None.
Example	ETH:PORT1:OAM:Y:MCC:OUI #H91
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:MCC:OUI?
Description	This query returns the MCC (Maintenance communication channel) OUI.
Parameter	<Pt> = Port number
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:MCC:OUI? → 145
Note	

12.32.45 ETHernet:PORT<Pt>:OAM:Y:MCC:DATA

Syntax	ETHernet:PORT<Pt>:OAM:Y:MCC:DATA <pattern>
Description	This command sets the MCC (Maintenance communication channel) data.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:OAM:Y:MCC:DATA "12345AB"
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:MCC:DATA?
Description	This query returns the MCC (Maintenance communication channel) data.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:MCC:DATA? → "12345AB"
Note	

12.32.46 ETHernet:PORT<Pt>:OAM:Y:LCK:CMEG

Syntax	ETHernet:PORT<Pt>:OAM:Y:LCK:CMEG <level>
Description	This command sets the lock condition client MEG level.
Parameters	<Pt> = Port number <level> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=0</i>
Response	None.
Example	ETH:PORT1:OAM:Y:LCK:CMEG 0
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:LCK:CMEG?
Description	This query returns the lock condition client MEG level
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:LCK:CMEG? → 0
Note	

12.32.47 ETHernet:PORT<Pt>:OAM:Y:LCK:RATE

Syntax	ETHernet:PORT<Pt>:OAM:Y:LCK:RATE <rate>
Description	This command sets the lock condition rate.
Parameters	<Pt> = Port number <rate> = <CHARACTER PROGRAM DATA> S1: 1 second S60: 1 minute <i>DEFault = S1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:LCK:RATE S1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:LCK:RATE?
Description	This query returns the lock condition rate.
Parameter	<Pt> = Port number
Response	<rate> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:LCK:RATE? → S1
Note	

12.32.48 ETHernet:PORT<Pt>:OAM:Y:AIS:CMEG

Syntax	ETHernet:PORT<Pt>:OAM:Y:AIS:CMEG <level>
Description	This command sets the AIS (alarm indication signal) client MEG level.
Parameters	<Pt> = Port number <level> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=0</i>
Response	None.
Example	ETH:PORT1:OAM:Y:AIS:CMEG 0
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:AIS:CMEG?
Description	This query returns the AIS (alarm indication signal) client MEG level.
Parameter	<Pt> = Port number
Response	<level> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:AIS:CMEG? → 0
Note	

12.32.49 ETHernet:PORT<Pt>:OAM:Y:AIS:RATE

Syntax	ETHernet:PORT<Pt>:OAM:Y:AIS:RATE <rate>
Description	This command sets the AIS (alarm indication signal) rate.
Parameters	<Pt> = Port number <rate> = <CHARACTER PROGRAM DATA> S1: 1 second S60: 1 minute <i>DEFault = S1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:AIS:RATE S1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:AIS:RATE?
Description	This query returns the AIS (alarm indication signal) rate.
Parameter	<Pt> = Port number
Response	<rate> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:AIS:RATE? → S1
Note	

12.32.50 ETHernet:PORT<Pt>:OAM:Y:DMONe:TYPE

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:TYPE <mode>
Description	This command sets the 1DM (one-way delay measurement) mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> ODEMAND: On-demand mode PROactive: Proactive mode <i>DEFAULT = PROactive</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMON:TYPE PRO
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:TYPE?
Description	This query returns the 1DM (one-way delay measurement) mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMON:TYPE? → PR
Note	

12.32.51 ETHernet:PORT<Pt>:OAM:Y:DMONe:RATE

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:RATE <interval>
Description	This command sets the 1DM (one-way delay measurement) rate.
Parameters	<Pt> = Port number <interval> = <CHARACTER PROGRAM DATA> MS100: 100 milli seconds S1: 1 second S10: 10 seconds <i>DEFAULT = S1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMON:RATE S1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:RATE?
Description	This query returns the 1DM (one-way delay measurement) rate.
Parameter	<Pt> = Port number
Response	<interval> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMON:RATE? → S1
Note	

12.32.52 ETHernet:PORT<Pt>:OAM:Y:DMONe:FTSend

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:FTSend <count>
Description	This command sets the number of 1DM (one-way delay measurement) frames to send.
Parameters	<Pt> = Port number <count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=1000, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMON:FTS 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:FTSend?
Description	This query returns the number of 1DM (one-way delay measurement) frames to send.
Parameter	<Pt> = Port number
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMON:FTS? → 1
Note	

12.32.53 ETHernet:PORT<Pt>:OAM:Y:DMONe:OTLV

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:OTLV <tlv>
Description	This command sets the 1DM (one-way delay measurement) optional TLV type.
Parameters	<Pt> = Port number <tlv> = <CHARACTER PROGRAM DATA> NONE: No TLV DATA: Data TLV TEST: Test TLV <i>DEFault = NONE</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMON:OTLV NONE
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:OTLV?
Description	This query returns the 1DM (one-way delay measurement) optional TLV type.
Parameter	<Pt> = Port number
Response	<tlv> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMON:OTLV? → NONE
Note	

12.32.54 ETHernet:PORT<Pt>:OAM:Y:DMONe:TLVLength

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:TLVLength <length>
Description	This command sets the 1DM (one-way delay measurement) TLV length.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum=32, MAXimum=1480, DEFault=32</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMON:TLVL 0
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:TLVLength?
Description	This query returns the 1DM (one-way delay measurement) TLV length.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMON:TLVL? → 0
Note	

12.32.55 ETHernet:PORT<Pt>:OAM:Y:DMONe:DTLV:VALue

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:DTLV:VALue <value>
Description	This command sets the data TLV value.
Parameters	<Pt> = Port number <value> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:OAM:Y:DMON:DTLV:VAL ""
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:DTLV:VALue?
Description	This query returns the data TLV value.
Parameter	<Pt> = Port number
Response	<value> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMON:DTLV:VAL? → ""
Note	

12.32.56 ETHernet:PORT<Pt>:OAM:Y:DMONe:TTLV:VALue

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:TTLV:VALue <value>
Description	This command sets the test TLV value.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=500, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMON:TTLV:VAL 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMONe:TTLV:VALue?
Description	This query returns the test TLV value.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMON:TTLV:VAL? → 1
Note	

12.32.57 ETHernet:PORT<Pt>:OAM:Y:DMM:TYPE

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:TYPE <mode>
Description	This command sets the DDM (delay measurement message) type.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> ODEMand: On-demand mode PROactive: Proactive mode <i>DEFault = PROactive</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMM:TYPE PRO
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:TYPE?
Description	This query returns the DDM (delay measurement message) type.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMM:TYPE? → PR
Note	

12.32.58 ETHernet:PORT<Pt>:OAM:Y:DMM:RATE

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:RATE <interval>
Description	This command sets the DDM (delay measurement message) rate.
Parameters	<Pt> = Port number <interval> = <CHARACTER PROGRAM DATA> MS100: 100 milli seconds S1: 1 second S10: 10 seconds <i>DEFault = S1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMM:RATE S1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:RATE?
Description	This query returns the DDM (delay measurement message) rate.
Parameter	<Pt> = Port number
Response	<interval> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMM:RATE? → S1
Note	

12.32.59 ETHernet:PORT<Pt>:OAM:Y:DMM:FTSend

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:FTSend <count>
Description	This command sets the number of DDM (delay measurement message) frames to send.
Parameters	<Pt> = Port number <count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=1000, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMM:FTS 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:FTSend?
Description	This query returns the number of DDM (delay measurement message) frames to send.
Parameter	<Pt> = Port number
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMM:FTS? → 1
Note	

12.32.60 ETHernet:PORT<Pt>:OAM:Y:DMM:FVTHreshold

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:FVTHreshold <count>
Description	This command sets the DDM (delay measurement message) frame variation threshold.
Parameters	<Pt> = Port number <count> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100, DEFault=0</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMM:FVTH 0
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:FVTHreshold?
Description	This query returns the DDM (delay measurement message) frame variation.
Parameter	<Pt> = Port number
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMM:FVTH? → 0
Note	

12.32.61 ETHernet:PORT<Pt>:OAM:Y:DMM:OTLV

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:OTLV <tlv>
Description	This command sets the DDM (delay measurement message) optional TLV type.
Parameters	<Pt> = Port number <tlv> = <CHARACTER PROGRAM DATA> NONE: No TLV DATA: Data TLV TEST: Test TLV <i>DEFault = NONE</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMM:OTLV NONE
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:OTLV?
Description	This query returns the DDM (delay measurement message) optional TLV type.
Parameter	<Pt> = Port number
Response	<tlv> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMM:OTLV? → NONE
Note	

12.32.62 ETHernet:PORT<Pt>:OAM:Y:DMM:TLVLength

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:TLVLength <length>
Description	This command sets the DDM (delay measurement message) TLV length.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> <i>MINimum=32, MAXimum=1480, DEFault=32</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMM:TLVL 0
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:TLVLength?
Description	This query returns the DDM (delay measurement message) TLV length.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMM:TLVL? → 0
Note	

12.32.63 ETHernet:PORT<Pt>:OAM:Y:DMM:DTLV:VALue

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:DTLV:VALue <value>
Description	This command sets the DDM (delay measurement message) data TLV value.
Parameters	<Pt> = Port number <value> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:OAM:Y:DMM:DTLV:VAL ""
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:DTLV:VALue?
Description	This query returns the DDM (delay measurement message) data TLV value.
Parameter	<Pt> = Port number
Response	<value> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMM:DTLV:VAL? → ""
Note	

12.32.64 ETHernet:PORT<Pt>:OAM:Y:DMM:TTLV:VALue

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:TTLV:VALue <value>
Description	This command sets the DDM (delay measurement message) test TLV value.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=500, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:DMM:TTLV:VAL 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:DMM:TTLV:VALue?
Description	This query returns the DDM (delay measurement message) test TLV value.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:DMM:TTLV:VAL? → 1
Note	

12.32.65 ETHernet:PORT<Pt>:OAM:Y:LMM:RATE

Syntax	ETHernet:PORT<Pt>:OAM:Y:LMM:RATE <interval>
Description	This command sets the LMM (loss measurement message) interval length.
Parameters	<Pt> = Port number <interval> = <CHARACTER PROGRAM DATA> MS100: 100 milli seconds S1: 1 second S10: 10 seconds <i>DEFault = S1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:LMM:RATE S1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:LMM:RATE?
Description	This query returns the LMM (loss measurement message) interval length.
Parameter	<Pt> = Port number
Response	<interval> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:LMM:RATE? → S1
Note	

12.32.66 ETHernet:PORT<Pt>:OAM:Y:LMM:FTSend

Syntax	ETHernet:PORT<Pt>:OAM:Y:LMM:FTSend <count>
Description	This command sets the number of LMM (loss measurement message) frames to send.
Parameters	<Pt> = Port number <count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=1000, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:LMM:FTS 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:LMM:FTSend?
Description	This query returns the number of LMM (loss measurement message) frames to send.
Parameter	<Pt> = Port number
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:LMM:FTS? → 1
Note	

12.32.67 EThernet:PORT<Pt>:OAM:Y:LMM:FLTHreshold

Syntax	EThernet:PORT<Pt>:OAM:Y:LMM:FLTHreshold <threshold>
Description	This command sets the LMM (loss measurement message) frame loss threshold.
Parameters	<Pt> = Port number <threshold> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=5, DEFault=0</i>
Response	None.
Example	ETH:PORT1:OAM:Y:LMM:FLTH 0
Note	

Syntax	EThernet:PORT<Pt>:OAM:Y:LMM:FLTHreshold?
Description	This query returns the LMM (loss measurement message) frame loss threshold.
Parameter	<Pt> = Port number
Response	<threshold> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:LMM:FLTH? → 0
Note	

12.32.68 EThernet:PORT<Pt>:OAM:Y:SLM:RATE

Syntax	EThernet:PORT<Pt>:OAM:Y:SLM:RATE <interval>
Description	This command sets the synthetic loss measurement rate.
Parameters	<Pt> = Port number <interval> = <CHARACTER PROGRAM DATA> MS100: 100 milli seconds S1: 1 second S10: 10 seconds <i>DEFault = S1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:SLM:RATE S1
Note	

Syntax	EThernet:PORT<Pt>:OAM:Y:SLM:RATE?
Description	This query returns the synthetic loss measurement rate.
Parameter	<Pt> = Port number
Response	<interval> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:SLM:RATE? → S1
Note	

12.32.69 EThernet:PORT<Pt>:OAM:Y:SLM:FTSend

Syntax	EThernet:PORT<Pt>:OAM:Y:SLM:FTSend <count>
Description	This command sets the number of synthetic loss measurement frames to send.
Parameters	<Pt> = Port number <count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=1000, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:Y:SLM:FTS 1
Note	

Syntax	EThernet:PORT<Pt>:OAM:Y:SLM:FTSend?
Description	This query returns the number of synthetic loss measurement frames to send.
Parameter	<Pt> = Port number
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:SLM:FTS? → 1
Note	

12.32.70 ETHernet:PORT<Pt>:OAM:Y:SLM:FLTHreshold

Syntax	ETHernet:PORT<Pt>:OAM:Y:SLM:FLTHreshold <threshold>
Description	This command sets the synthetic loss measurement frame loss threshold.
Parameters	<Pt> = Port number <threshold> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=5, DEFault=0</i>
Response	None.
Example	ETH:PORT1:OAM:Y:SLM:FLTH 0
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:SLM:FLTHreshold?
Description	This query returns the frame loss threshold.
Parameter	<Pt> = Port number
Response	<threshold> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:SLM:FLTH? → 0
Note	

12.32.71 ETHernet:PORT<Pt>:OAM:Y:EXM:DATA

Syntax	ETHernet:PORT<Pt>:OAM:Y:EXM:DATA <pattern>
Description	This command sets the experimental message data.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:OAM:Y:EXM:DATA "12345AB"
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:EXM:DATA?
Description	This query returns the experimental message data.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:EXM:DATA? → "12345AB"
Note	

12.32.72 ETHernet:PORT<Pt>:OAM:Y:VSM:DATA

Syntax	ETHernet:PORT<Pt>:OAM:Y:VSM:DATA <pattern>
Description	This command sets the vendor specific message data.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:OAM:Y:VSM:DATA "12345AB"
Note	

Syntax	ETHernet:PORT<Pt>:OAM:Y:VSM:DATA?
Description	This query returns the vendor specific message data.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:Y:VSM:DATA? → "12345AB"
Note	

12.32.73 EThernet:PORT<Pt>:OAM:Y:MEPList:ADD

Syntax	EThernet:PORT<Pt>:OAM:Y:MEPList:ADD <mepId>,<mac>[,<level>[,<megId>]]
Description	This command adds a management end point to the Y.1732 MEP list.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i> <mac> = <STRING PROGRAM DATA> <level> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=0</i> <association> = <STRING PROGRAM DATA> <domain> = <STRING PROGRAM DATA>
Response	None
Example	ETH:PORT1:OAM:Y:MEPL:ADD 234,"00-00-00-00-00-11"
Note	

12.32.74 EThernet:PORT<Pt>:OAM:Y:MEPList:DELeTe[:MEP]

Syntax	EThernet:PORT<Pt>:OAM:Y:MEPList:DELeTe[:MEP] <mepId>
Description	This command deletes a management end point from the Y.1732 MEP list.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None
Example	ETH:PORT1:OAM:Y:MEPL:DEL 234
Note	

12.32.75 EThernet:PORT<Pt>:OAM:Y:MEPList:CATalog?

Syntax	EThernet:PORT<Pt>:OAM:Y:MEPList:CATalog?
Description	This query returns the items on the management end point list.
Parameter	<Pt> = Port number
Response	{(<endPoint>),}* = <EXPRESSION RESPONSE DATA> <endPoint> is split into five separate results: (<mepId>,<mac>,<level>,<association>,<domain>)
Example	ETH:PORT1:OAM:Y:MEPL:CAT? → (234,00-00-00-00-00-11,1,Association-A,Domain1), (345,00-00-00-00-00-22,1,Association-B,Domain2)
Note	If the list is empty an execution error will be reported.

12.32.76 EThernet:PORT<Pt>:OAM:DISCovey:TYPE

Syntax	EThernet:PORT<Pt>:OAM:DISCovey:TYPE <mode>
Description	This command sets the discovery type.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> CCM: LBM: <i>DEFault = CCM</i>
Response	None.
Example	ETH:PORT1:OAM:DISC:TYPE CCM
Note	This setting applies to the 802.1ag and Y.1731 protocols.

Syntax	ETHernet:PORT<Pt>:OAM:DISCcovery:TYPE?
Description	This query returns the discovery type.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:DISC:TYPE? → CCM
Note	

12.32.77 ETHernet:PORT<Pt>:OAM:DISCcovery:INTerval

Syntax	ETHernet:PORT<Pt>:OAM:DISCcovery:INTerval <interval>
Description	This command sets the discovery interval.
Parameters	<Pt> = Port number <interval> = <CHARACTER PROGRAM DATA> S5: 5 seconds S15: 15 seconds S60: 1 minute <i>DEFault = S5</i>
Response	None.
Example	ETH:PORT1:OAM:DISC:INT S5
Note	This setting applies to the 802.1ag and Y.1731 protocols.

Syntax	ETHernet:PORT<Pt>:OAM:DISCcovery:INTerval?
Description	This query returns the discovery interval.
Parameter	<Pt> = Port number
Response	<interval> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:DISC:INT? → S5
Note	

12.32.78 ETHernet:PORT<Pt>:OAM:DISCcovery:DMAX

Syntax	ETHernet:PORT<Pt>:OAM:DISCcovery:DMAX <value>
Description	This command sets the maximum number of devices to discover.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=32, DEFault=10</i>
Response	None.
Example	ETH:PORT1:OAM:DISC:DMAX 1
Note	This setting applies to the 802.1ag and Y.1731 protocols.

Syntax	ETHernet:PORT<Pt>:OAM:DISCcovery:DMAX?
Description	This query returns the maximum number of devices to discover.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:DISC:DMAX? → 1
Note	

12.32.79 ETHernet:PORT<Pt>:OAM:DISCover:CATalog?

Syntax	ETHernet:PORT<Pt>:OAM:DISCover:CATalog?
Description	This query returns the list of discovered OAM MEPs.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Response	{(<endPoint>),}* = <EXPRESSION RESPONSE DATA> <endPoint> is split into five separate results: (<mepId>,<mac>,<level>,<associationOrMeg>,<domain>)
Example	ETH:PORT1:OAM:DISC:CAT? → (234,00-00-00-00-00-11,1,Association-A,Domain1), (345,00-00-00-00-00-22,1,Association-B,Domain2)
Note	The <domain> string is not returned when Y.1731 is active. The time for this command to return can extend to the value in the ETH:PORT1:OAM:DISC:INT setting.

12.32.80 ETHernet:PORT<Pt>:OAM:MPLS[:ENABLE]

Syntax	ETHernet:PORT<Pt>:OAM:MPLS[:ENABLE] <enable>
Description	This command enables or disables MPLS.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:MPLS ON
Note	

Syntax	ETHernet:PORT<Pt>:OAM:MPLS[:ENABLE]?
Description	This query returns whether the MPLS is enabled or disabled.
Parameters	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MPLS? → 1
Note	

12.32.81 ETHernet:PORT<Pt>:OAM:MPLS:LCOunt

Syntax	ETHernet:PORT<Pt>:OAM:MPLS:LCOunt <levels>
Description	This command sets the number of active MPLS levels.
Parameters	<Pt> = Port number <levels> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:MPLS:LCO 2
Note	

Syntax	ETHernet:PORT<Pt>:OAM:MPLS:LCOunt?
Description	This query returns the number of active MPLS levels.
Parameters	<Pt> = Port number
Response	<levels> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MPLS:LCO? → 2
Note	

12.32.82 ETHernet:PORT<Pt>:OAM:MPLS:LEVel<Lv>:LABel

Syntax	ETHernet:PORT<Pt>:OAM:MPLS:LEVel<Lv>:LABel <label>
Description	This command sets the MPLS label.
Parameters	<Pt> = Port number
	<Lv> = MPLS level (1-N ¹)
	<label> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1048575, DEFault=0</i>
Response	None.
Example	ETH:PORT1:OAM:MPLS:LEV1:LAB 1048575
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active MPLS Levels. Level 1 corresponds to the level at the top of the label stack and N is the level at the bottom of the stack (bottom of stack flag set).

Syntax	ETHernet:PORT<Pt>:OAM:MPLS:LEVel<Lv>:LABel?
Description	This query returns the MPLS label.
Parameters	<Pt> = Port number
	<Lv> = MPLS level (1-N)
Response	<label> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MPLS:LEV1:LAB? → 1048575
Note	

12.32.83 ETHernet:PORT<Pt>:OAM:MPLS:LEVel<Lv>:TCLass

Syntax	ETHernet:PORT<Pt>:OAM:MPLS:LEVel<Lv>:TCLass <value>
Description	This command sets the MPLS traffic class.
Parameters	<Pt> = Port number
	<Lv> = MPLS level (1-N ¹)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=0</i>
Response	None.
Example	ETH:PORT1:OAM:MPLS:LEV1:TCL 5
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active MPLS Levels. Level 1 corresponds to the level at the top of the label stack and N is the level at the bottom of the stack (bottom of stack flag set).

Syntax	ETHernet:PORT<Pt>:OAM:MPLS:LEVel<Lv>:TCLass?
Description	This query returns the MPLS traffic class.
Parameters	<Pt> = Port number
	<Lv> = MPLS level (1-N)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MPLS:LEV1:TCL? → 5
Note	

12.32.84 ETHernet:PORT<Pt>:OAM:MPLS:LEVel<Lv>:TTL

Syntax	ETHernet:PORT<Pt>:OAM:MPLS:LEVel<Lv>:TTL <value>
Description	This command sets the MPLS time to live.
Parameters	<Pt> = Port number
	<Lv> = MPLS level (1-N ¹)
	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=32</i>
Response	None.
Example	ETH:PORT1:OAM:MPLS:LEV1:TTL 32
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active MPLS Levels. Level 1 corresponds to the level at the top of the label stack and N is the level at the bottom of the stack (bottom of stack flag set).

Syntax	ETHernet:PORT<Pt>:OAM:MPLS:LEVel<Lv>:TTL?
Description	This query returns the MPLS time to live.
Parameters	<Pt> = Port number
	<Lv> = MPLS level (1-N)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MPLS:LEV1:TTL? → 32
Note	

12.32.85 ETHernet:PORT<Pt>:OAM:MPLS:TPRofile[:ENABle]

Syntax	ETHernet:PORT<Pt>:OAM:MPLS:TPRofile[:ENABle] <enable>
Description	This command enables or disables MPLS transport profile.
Parameters	<Pt> = Port number
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:MPLS:TPR ON
Note	

Syntax	ETHernet:PORT<Pt>:OAM:MPLS:TPRofile[:ENABle]?
Description	This query returns whether the MPLS transport profile is enabled or disabled.
Parameters	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MPLS:TPR? → 1
Note	

12.32.86 ETHernet:PORT<Pt>:OAM:MIM[:ENABle]

Syntax	ETHernet:PORT<Pt>:OAM:MIM[:ENABle] <enable>
Description	This command enables or disables MAC in MAC (alias PBB).
Parameters	<Pt> = Port number
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:OAM:MIM ON
Note	

Syntax	ETHernet:PORT<Pt>:OAM:MIM[:ENABle]?
Description	This query returns whether MAC in MAC is enabled or disabled.
Parameters	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MIM? → 1
Note	

12.32.87 ETHernet:PORT<Pt>:OAM:MIM:BTAG:DEI

Syntax	ETHernet:PORT<Pt>:OAM:MIM:BTAG:DEI <enable>
Description	This command sets the B-TAG DEI bit.
Parameters	<Pt> = Port number
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:OAM:MIM:BTAG:DEI ON
Note	

Syntax	ETHernet:PORT<Pt>:OAM:MIM:BTAG:DEI?
Description	This query returns the B-TAG DEI bit.
Parameters	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MIM:BTAG:DEI? → 1
Note	

12.32.88 ETHernet:PORT<Pt>:OAM:MIM:BTAG:PRIority

Syntax	ETHernet:PORT<Pt>:OAM:MIM:BTAG:PRIority <priority>
Description	This command sets the B-TAG Priority (PCP).
Parameters	<Pt> = Port number <priority> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:OAM:MIM:BTAG:PRI 7
Note	

Syntax	ETHernet:PORT<Pt>:OAM:MIM:BTAG:PRIority?
Description	This query returns the B-TAG Priority (PCP).
Parameters	<Pt> = Port number
Response	<priority> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MIM:BTAG:PRI? → 7
Note	

12.32.89 ETHernet:PORT<Pt>:OAM:MIM:BTAG:VID

Syntax	ETHernet:PORT<Pt>:OAM:MIM:BTAG:VID <vid>
Description	This command sets the B-TAG Backbone VLAN ID.
Parameters	<Pt> = Port number <vid> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 4095, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:OAM:MIM:BTAG:VID 1024
Note	

Syntax	ETHernet:PORT<Pt>:OAM:MIM:BTAG:VID?
Description	This query returns the B-TAG Backbone VLAN ID.
Parameters	<Pt> = Port number
Response	<vid> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MIM:BTAG:VID? → 1024
Note	

12.32.90 ETHernet:PORT<Pt>:OAM:MIM:ITAG:UCA

Syntax	ETHernet:PORT<Pt>:OAM:MIM:ITAG:UCA <enable>
Description	This command sets the I-TAG UCA bit.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:OAM:MIM:ITAG:UCA ON
Note	

Syntax	ETHernet:PORT<Pt>:OAM:MIM:ITAG:UCA?
Description	This query returns the I-TAG UCA bit.
Parameters	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MIM:ITAG:UCA? → 1
Note	

12.32.91 ETHernet:PORT<Pt>:OAM:MIM:ITAG:DEI

Syntax	ETHernet:PORT<Pt>:OAM:MIM:ITAG:DEI <enable>
Description	This command sets the I-TAG DEI bit.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault=OFF</i>
Response	None.
Example	ETH:PORT1:OAM:MIM:ITAG:DEI ON
Note	

Syntax	ETHernet:PORT<Pt>:OAM:MIM:ITAG:DEI?
Description	This query returns the I-TAG DEI bit.
Parameters	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MIM:ITAG:DEI? → 1
Note	

12.32.92 ETHernet:PORT<Pt>:OAM:MIM:ITAG:PRIority

Syntax	ETHernet:PORT<Pt>:OAM:MIM:ITAG:PRIority <priority>
Description	This command sets the I-TAG Priority (PCP).
Parameters	<Pt> = Port number <priority> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 7, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:OAM:MIM:ITAG:PRI 7
Note	

Syntax	ETHernet:PORT<Pt>:OAM:MIM:ITAG:PRIority?
Description	This query returns the I-TAG Priority (PCP).
Parameters	<Pt> = Port number
Response	<priority> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MIM:ITAG:PRI? → 7
Note	

12.32.93 ETHernet:PORT<Pt>:OAM:MIM:ITAG:SID

Syntax	ETHernet:PORT<Pt>:OAM:MIM:ITAG:SID <sid>
Description	This command sets the I-TAG SID.
Parameters	<Pt> = Port number <sid> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 16777215, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:OAM:MIM:ITAG:SID 1
Note	

Syntax	ETHernet:PORT<Pt>:OAM:MIM:ITAG:SID?
Description	This query returns the I-TAG SID.
Parameters	<Pt> = Port number
Response	<sid> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:MIM:ITAG:SID? → 1
Note	

12.32.94 ETHernet:PORT<Pt>:OAM:MIM:SMAC

Syntax	ETHernet:PORT<Pt>:OAM:MIM:SMAC <address>
Description	This command sets the MAC in MAC source MAC address.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:OAM:MIM:SMAC "00-50-C2-35-D2-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:OAM:MIM:SMAC?
Description	This query returns the MAC in MAC source MAC address.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:MIM:SMAC? → "00-50-C2-35-D2-EF"
Note	

12.32.95 ETHernet:PORT<Pt>:OAM:MIM:ETHernet:DMAC

Syntax	ETHernet:PORT<Pt>:OAM:MIM:ETHernet:DMAC <address>
Description	This command sets the MAC in MAC destination MAC address.
Parameters	<Pt> = Port number <address> = <STRING PROGRAM DATA> MAC address
Response	None.
Example	ETH:PORT1:OAM:MIM:ETH:DMAC "00-50-C2-35-D2-EF"
Note	Only the character '-' is accepted as separator.

Syntax	ETHernet:PORT<Pt>:OAM:MIM:ETHernet:DMAC?
Description	This query returns the MAC in MAC destination MAC address.
Parameter	<Pt> = Port number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:MIM:ETH:DMAC? → "00-50-C2-35-D2-EF"
Note	

12.32.96 ETHernet:PORT<Pt>:OAM:VLAN[:ENABLE]

Syntax	ETHernet:PORT<Pt>:OAM:VLAN[:ENABLE] <enable>
Description	This command enables or disables VLAN.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:VLAN ON
Note	

Syntax	ETHernet:PORT<Pt>:OAM:VLAN[:ENABle]?
Description	This query returns whether VLAN is enabled or disabled.
Parameters	<Pt> = Port number
Response	<boolean> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:VLAN? → 1
Note	

12.32.97 ETHernet:PORT<Pt>:OAM:VLAN:LCOunt

Syntax	ETHernet:PORT<Pt>:OAM:VLAN:LCOunt <levels>
Description	This command sets the number of active VLAN levels.
Parameters	<Pt> = Port number <levels> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8, DEFault=1</i>
Response	None.
Example	ETH:PORT1:OAM:VLAN:LCO 2
Note	

Syntax	ETHernet:PORT<Pt>:OAM:VLAN:LCOunt?
Description	This query returns the number of active VLAN levels.
Parameters	<Pt> = Port number
Response	<levels> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:VLAN:LCO? → 2
Note	

12.32.98 ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:ID

Syntax	ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:ID <number>
Description	This command sets the VLAN ID.
Parameters	<Pt> = Port number <Lv> = VLAN level (1-N ¹) <number> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=4095, DEFault=0</i>
Response	None.
Example	ETH:PORT1:OAM:VLAN:LEV1:ID 1024
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels. Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame).

Syntax	ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:ID?
Description	This query returns the VLAN ID.
Parameters	<Pt> = Port number <Lv> = VLAN level (1-N)
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:VLAN:LEV1:ID? → 1024
Note	

12.32.99 ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:CFI

Syntax	ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:CFI <enable>
Description	This command enables or disables the VLAN canonical format indicator.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N ¹)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:VLAN:LEV1:CFI ON
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels. Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame).
	² CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition
	³ This command is as same as ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:DEI

Syntax	ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:CFI?
Description	This query returns whether the VLAN canonical format indicator is enabled or disabled.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N)
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:VLAN:LEV1:CFI? → 1
Note	¹ CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition
	² This command is as same as ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:DEI?

12.32.100 ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:DEI

Syntax	ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:DEI <enable>
Description	This command enables or disables the VLAN canonical format indicator.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N ¹)
	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:VLAN:LEV1:DEI ON
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels. Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame).
	² CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition
	³ This command is as same as ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:CFI

Syntax	ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:DEI?
Description	This query returns whether the VLAN canonical format indicator is enabled or disabled.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N)
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:VLAN:LEV1:DEI? → 1
Note	¹ CFI bit in the VLAN tag was renamed to 'DEI' in IEEE802.1Q 2014 edition
	² This command is as same as ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:CFI?

12.32.101 ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:PRIority

Syntax	ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:PRIority <priority>
Description	This command sets the VLAN priority.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N ¹)
	<priority> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=7, DEFault=0</i>
Response	None.
Example	ETH:PORT1:OAM:VLAN:LEV1:PRI 7
Notes	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels (see section 12.32.97). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame).

Syntax	ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:PRIority?
Description	This query returns the VLAN priority.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N)
Response	<priority> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:VLAN:LEV1:PRI? → 7
Note	

12.32.102 ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:ETYPe

Syntax	ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:ETYPe <type>
Description	This command sets the VLAN Ethertype.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N) ¹
	<type> = <NUMERIC PROGRAM DATA> Acceptable values: #H8100 #H88A8 #H9100 #H9200 <i>DEFault=#H8100</i>
Response	None.
Example	ETH:PORT1:OAM:VLAN:LEV1:ETYP #H8100
Notes	¹ It is only possible to use this command for levels (1-M), where M is the number of active VLAN Levels minus one (see section 12.32.97). Level 1 corresponds to the outer tag (closest to the Ethernet header) and N is the inner tag (closest to the payload portion of the frame). It is not possible to use this command for VLAN level N because Ethertype at this level is automatically set. MAC level Ethertype is set by :ETH:PORT1:OAM:MAC:ETYPe command.

Syntax	ETHernet:PORT<Pt>:OAM:VLAN:LEVel<Lv>:ETYPe?
Description	This query returns the OAM VLAN Ethertype.
Parameters	<Pt> = Port number
	<Lv> = VLAN level (1-N ¹)
Response	<type> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:VLAN:LEV1:ETYP? → #H8100
Note	¹ It is only possible to use this command for levels 1-N, where N is the number of active VLAN Levels.

12.32.103 ETHernet:PORT<Pt>:OAM:OUTPut:ULBM

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:ULBM <mepId>
Description	This command activates U-LBM (unicast loop-back message) event.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:ULBM 10
Note	Only used when 802.ag or Y.1731 is active.

12.32.104 ETHernet:PORT<Pt>:OAM:OUTPut:MLBM

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:MLBM <mepId>
Description	This command activates M-LBM (multicast loop-back message) event.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:MLBM 10
Note	Only used when 802.ag or Y.1731 is active.

12.32.105 ETHernet:PORT<Pt>:OAM:OUTPut:LTM

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:LTM <mepId>
Description	This command activates the LTM (link trace message) event.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:LTM 10
Note	Only used when 802.ag or Y.1731 is active.

12.32.106 ETHernet:PORT<Pt>:OAM:OUTPut:MCC

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:MCC <mepId>
Description	This command activates the MCC (Maintenance communication channel) event.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:MCC 10
Note	Only used when Y.1731 is active.

12.32.107 ETHernet:PORT<Pt>:OAM:OUTPut:EXM

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:EXM <mepId>
Description	This command activates the EXM (experimental OAM message) event.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:EXM
Note	Only used when Y.1731 is active.

12.32.108 ETHernet:PORT<Pt>:OAM:OUTPut:VSM

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:VSM <mepId>
Description	This command activates the VSM (vendor specific OAM message) event.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:VSM 10
Note	Only used when Y.1731 is active.

12.32.109 ETHernet:PORT<Pt>:OAM:OUTPut:TST

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:TST <mepId>
Description	This command activates the TST (OAM test) event.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:TST 10
Note	Only used when Y.1731 is active.

12.32.110 ETHernet:PORT<Pt>:OAM:OUTPut:LMM

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:LMM <mepId>
Description	This command activates the LMM (loss measurement message) event.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:LMM 10
Note	Only used when Y.1731 is active.

12.32.111 ETHernet:PORT<Pt>:OAM:OUTPut:SLM

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:SLM <mepId>
Description	This command activates the SLM (synthetic loss measurement) event.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:SLM 10
Note	Only used when Y.1731 is active.

12.32.112 ETHernet:PORT<Pt>:OAM:OUTPut:DMONe

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:DMONe <mepId>
Description	This command activates the 1DM (one-way delay measurement) event.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:DMON 10
Note	Only used when Y.1731 is active.

12.32.113 ETHernet:PORT<Pt>:OAM:OUTPut:DMM

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:DMM <mepId>
Description	This command activates the DMM (delay measurement message) event.
Parameters	<Pt> = Port number <mepId> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=8191</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:DMM 10
Note	Only used when Y.1731 is active.

12.32.114 ETHernet:PORT<Pt>:OAM:OUTPut:CCM

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:CCM <enable>
Description	This command enables or disables CCM (continuity check messages).
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:CCM OFF
Note	Only used when 802.ag or Y.1731 is active.

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:CCM?
Description	This query returns whether CCM (continuity check messages) is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:OUTP:CCM? → 0
Note	

12.32.115 ETHernet:PORT<Pt>:OAM:OUTPut:AIS

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:AIS <enable>
Description	This command enables or disables AIS (alarm indication signal) alarm.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:AIS OFF
Note	Only used when Y.1731 is active.

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:AIS?
Description	This query returns whether AIS (alarm indication signal) alarm is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:OUTP:AIS? → 0
Note	

12.32.116 ETHernet:PORT<Pt>:OAM:OUTPut:LCK

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:LCK <enable>
Description	This command enables or disables LCK (lock condition).
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:LCK OFF
Note	Only used when Y.1731 is active.

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:LCK?
Description	This query returns whether LCK (lock condition) is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:OUTP:LCK? → 0
Note	

12.32.117 ETHernet:PORT<Pt>:OAM:OUTPut:LOOP

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:LOOP <enable>
Description	This command enables or disables 802.3ah loop.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:PORT1:OAM:OUTP:LOOP OFF
Note	Only used when 802.3ah is active.

Syntax	ETHernet:PORT<Pt>:OAM:OUTPut:LOOP?
Description	This query returns whether 802.3ah loop is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:OUTP:LOOP? → 0
Note	

12.32.118 ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:MODE?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:MODE?
Description	This query returns the remote mode string.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:REM:MODE? → "N/A"
Note	

12.32.119 ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:PARSer?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:PARSer?
Description	This query returns the remote parser string.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:REM:PARS? → "N/A"
Note	

12.32.120 ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:MUXer?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:MUXer?
Description	This query returns the remote muxer string.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:REM:MUX? → "N/A"
Note	

12.32.121 ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:OUI?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:OUI?
Description	This query returns the remote OUI string.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:REM:OUI? → "N/A"
Note	

12.32.122 ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:VSI?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:VSI?
Description	This query returns the remote VSI string.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:REM:VSI? → "N/A"
Note	

12.32.123 ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:UNIDirectional?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:UNIDirectional?
Description	This query returns the remote unidirectional support status.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:REM:UNID? → "N/A"
Note	

12.32.124 ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:LEVents?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:LEVents?
Description	This query returns the remote link events support status.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:REM:LEV? → "Supported"
Note	

12.32.125 ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:LBACk?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:LBACk?
Description	This query returns the remote loop-back support status.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:REM:LBAC? → "Unsupported"
Note	

12.32.126 ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:VRETrieval?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:VRETrieval?
Description	This query returns the remote variable retrieval support status.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:REM:VRET? → "N/A"
Note	

12.32.127 ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:REVisIon?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:REVisIon?
Description	This query returns the remote revision number.
Parameter	<Pt> = Port number
Response	<NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:REM:REV? → 0
Note	

12.32.128 ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:MAC?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:MAC?
Description	This query returns the remote MAC address.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:REM:MAC? → "N/A"
Note	

12.32.129 ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:MPDU?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:REMOte:MPDU?
Description	This query returns the remote maximum PDU size.
Parameter	<Pt> = Port number
Response	<NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:REM:MPDU? → 0
Note	

12.32.130 ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:MODE?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:MODE?
Description	This query returns the local mode string.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:LOC:MODE? → "N/A"
Note	

12.32.131 ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:PARSer?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:PARSer?
Description	This query returns the local parser string.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:LOC:PARS? → "N/A"
Note	

12.32.132 ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:MUXer?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:MUXer?
Description	This query returns the local muxer string.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:LOC:MUX? → "N/A"
Note	

12.32.133 ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:UNIDirectional?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:UNIDirectional?
Description	This query returns the local unidirectional support status.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:LOC:UNID? → "N/A"
Note	

12.32.134 ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:LEVents?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:LEVents?
Description	This query returns the local link events support status.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:LOC:LEV? → "Supported"
Note	

12.32.135 ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:LBACk?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:LBACk?
Description	This query returns the local loop-back support status.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:LOC:LBAC? → "Unsupported"
Note	

12.32.136 ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:VREtrieval?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:VREtrieval?
Description	This query returns the local variable retrieval support status.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:LOC:VRET? → "N/A"
Note	

12.32.137 ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:REVisiOn?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:REVisiOn?
Description	This query returns the local revision number.
Parameter	<Pt> = Port number
Response	<NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:LOC:REV? → 0
Note	

12.32.138 ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:MPDU?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:MPDU?
Description	This query returns the local maximum PDU size.
Parameter	<Pt> = Port number
Response	<NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:LOC:MPDU? → 0
Note	

12.32.139 ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:STATe?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:LOCal:STATe?
Description	This query returns the local state string.
Parameter	<Pt> = Port number
Response	<STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:LOC:STAT? → "N/A"
Note	

12.32.140 ETHernet:PORT<Pt>:OAM:STATus:AH:VARiable:REQuest

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:VARiable:REQuest <variable>
Description	This command requests the specified variable from the remote side.
Parameters	<Pt> = Port number <variable> = <CHARACTER PROGRAM DATA> TUCodes: Tx Unsupported codes RUCodes: Rx Unsupported codes TINformation: Tx Information RINformation: Rx Information TUEVent: Tx Unique Event RUEVent: Rx Unique Event TDEVent: Tx Duplicate Event RDEVent: Rx Duplicate Event TLBControl: Tx Loop-back control RLBControl: Rx Loop-back control TVREquest: Tx Variable request RVREquest: Rx Variable request TVResponse: Tx Variable response RVResponse: Rx Variable response TOSpecific: Tx Organizational specific ROSPecific: Rx Organizational specific LSYConfig: Local errored symbol config LSYevent: Local errored symbol event LFConfig: Local errored frame config LFEVent: Local errored frame event LPConfig: Local errored period config LPEVent: Local errored period event LSConfig: Local errored seconds config LSEVent: Local errored seconds event RSYevent: Remote errored symbol event RFEVent: Remote errored frame event RPEVent: Remote errored period event RSEVent: Remote errored seconds event FLOerror: Frames lost to OAM error <i>DEFault = TUC</i>
Response	None.
Example	ETH:PORT1:OAM:STAT:AH:VAR:REQ TUC
Note	The requested parameter is fetched with the command ETH:PORT1:OAM:STAT:AH:VAR:RESP? I may take a few seconds before the response is obtainable.

12.32.141 ETHernet:PORT<Pt>:OAM:STATus:AH:VARiable:RESPonse?

Syntax	ETHernet:PORT<Pt>:OAM:STATus:AH:VARiable:RESPonse?
Description	This command fetches the latest variable response from the remote side.
Parameters	<Pt> = Port number
Response	<variable> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:OAM:STAT:AH:VAR:RESP? → "Unsupported Codes Tx : 0"
Note	

12.32.142 ETHernet:PORT<Pt>:OAM:LOG?

Syntax	ETHernet:PORT<Pt>:OAM:LOG?
Description	This query returns a lists of logged OAM events.
Parameter	<Pt> = Port number
Response	<log> = <STRING RESPONSE DATA>
Example	ETH:PORT1:OAM:LOG? → "16:15:54 LTM transaction ID 1 passed 16:16:01 MCC message sent "
Note	

12.33 TCP Throughput Test - RFC-6349

The SCPI commands in this section are available in the following application:

- TP-RFC6349-ETH: Ethernet RFC-6349 test application.

This applications supports one port only.

12.33.1 ETHernet:TTTest:SETup:TCPPort

Syntax	ETHernet:TTTest:SETup:TCPPort <port>
Description	This command sets the TCP port number.
Parameter	<port> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=65535, DEFault=5001</i>
Response	None.
Example	ETH:TTT:SET:TCPP 5001
Note	

Syntax	ETHernet:TTTest:SETup:TCPPort?
Description	This query returns the TCP port number.
Parameter	None.
Response	<port> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:TCPP? → 5001
Note	

12.33.2 ETHernet:TTTest:SETup:FATSequence

Syntax	ETHernet:TTTest:SETup:FATSequence <enable>
Description	This command enables or disables full auto test sequence.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:FATS OFF
Note	

Syntax	ETHernet:TTTest:SETup:FATSequence?
Description	This query returns whether full auto test sequence is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:FATS? → 0
Note	

12.33.3 ETHernet:TTTest:SETup:CIPerf

Syntax	ETHernet:TTTest:SETup:CIPerf <enable>
Description	This command enables or disables connection to iPerf server.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:TTT:SET:CIP OFF
Note	

Syntax	ETHernet:TTTest:SETup:CIPerf?
Description	This query returns whether connection to iPerf server is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:CIP? → 0
Note	

12.33.4 ETHernet:TTTest:SETup:SLSName

Syntax	ETHernet:TTTest:SETup:SLSName <name>
Description	This command sets the short local site name.
Parameter	<name> = <STRING PROGRAM DATA> The supplied name is truncated to a maximum of 4 characters.
Response	None.
Example	ETH:TTT:SET:SLSN "LOC"
Note	

Syntax	ETHernet:TTTest:SETup:SLSName?
Description	This query returns the short local site name.
Parameter	None.
Response	<name> = <STRING RESPONSE DATA>
Example	ETH:TTT:SET:SLSN? → "LOC"
Note	

12.33.5 ETHernet:TTTest:SETup:LLSName

Syntax	ETHernet:TTTest:SETup:LLSName <name>
Description	This command sets the long local site name.
Parameter	<name> = <STRING PROGRAM DATA> The supplied name is truncated to a maximum of 12 characters.
Response	None.
Example	ETH:TTT:SET:LLSN "LOCAL"
Note	

Syntax	ETHernet:TTTest:SETup:LLSName?
Description	This query returns the long local site name.
Parameter	None.
Response	<name> = <STRING RESPONSE DATA>
Example	ETH:TTT:SET:LLSN? → "LOCAL"
Note	

12.33.6 ETHernet:TTTest:SETup:SRSName

Syntax	ETHernet:TTTest:SETup:SRSName <name>
Description	This command sets the short remote site name.
Parameter	<name> = <STRING PROGRAM DATA> The supplied name is truncated to a maximum of 4 characters.
Response	None.
Example	ETH:TTT:SET:SRSN "S123"
Note	

Syntax	ETHernet:TTTest:SETup:SRSName?
Description	This query returns the short remote site name.
Parameter	None.
Response	<name> = <STRING RESPONSE DATA>
Example	ETH:TTT:SET:SRSN? → "S123"
Note	

12.33.7 ETHernet:TTTest:SETup:LRSName

Syntax	ETHernet:TTTest:SETup:LRSName <name>
Description	This command sets the long remote site name.
Parameter	<name> = <STRING PROGRAM DATA> The supplied name is truncated to a maximum of 12 characters.
Response	None.
Example	ETH:TTT:SET:LRSN "SITE-1-23"
Note	

Syntax	ETHernet:TTTest:SETup:LRSName?
Description	This query returns the long remote site name.
Parameter	None.
Response	<name> = <STRING RESPONSE DATA>
Example	ETH:TTT:SET:LRSN? → "SITE-1-23"
Note	

12.33.8 ETHernet:TTTest:SETup:TDLR

Syntax	ETHernet:TTTest:SETup:TDLR <enable>
Description	This command enables or disables the "Local->Remote" of Test Directions Setup.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:TDLR ON
Note	

Syntax	ETHernet:TTTest:SETup:TDLR?
Description	This query returns whether the "Local->Remote" of Test Directions Setup is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:TDLR? → 1
Note	

12.33.9 ETHernet:TTTest:SETup:TDRL

Syntax	ETHernet:TTTest:SETup:TDRL <enable>
Description	This command enables or disables the "Remote->Local" of Test Directions Setup.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:TTT:SET:TDRL OFF
Note	

Syntax	ETHernet:TTTest:SETup:TDRL?
Description	This query returns whether the "Remote->Local" of Test Directions Setup is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:TDRL? → 0
Note	

12.33.10 ETHernet:TTTest:SETup:TDSimultaneos

Syntax	ETHernet:TTTest:SETup:TDSimultaneos <enable>
Description	This command enables or disables the "Simultaneous in Both Directions" of Test Directions Setup.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:TTT:SET:TDS OFF
Note	

Syntax	ETHernet:TTTest:SETup:TDSimultaneos?
Description	This query returns whether the "Simultaneous in Both Directions" of Test Directions Setup is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:TDS? → 0
Note	

12.33.11 ETHernet:TTTest:SETup[:LTRemote]:CIRate

Syntax	ETHernet:TTTest:SETup[:LTRemote]:CIRate <rate>
Description	This command sets the upstream CIR rate in the local to remote direction. Unit: Mbps.
Parameter	<rate> = <NUMERIC PROGRAM DATA> <i>MINimum=0.010, MAXimum=10000, DEFault=1000</i>
Response	None.
Example	ETH:TTT:SET:CIR 1000
Note	

Syntax	ETHernet:TTTest:SETup[:LTRemote]:CIRate?
Description	This query returns the upstream CIR rate in the local to remote direction.
Parameter	None.
Response	<rate> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:CIR? → 1000
Note	

12.33.12 ETHernet:TTTest:SETup[:LTRemote]:MTUSize

Syntax	ETHernet:TTTest:SETup[:LTRemote]:MTUSize <size>
Description	This command sets the MTU size in local to remote direction.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum=64, MAXimum=15982, DEFault=1500</i>
Response	None.
Example	ETH:TTT:SET:MTUS 1500
Note	This MTU size is used when ETHernet:TTTest:SETup:PMTU:DISCover:ENABle is disabled.

Syntax	ETHernet:TTTest:SETup[:LTRemote]:MTUSize?
Description	This query returns the MTU size in the local to remote direction.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:MTUS? → 1500
Note	

12.33.13 ETHernet:TTTest:SETup:RTLocal:CIRate

Syntax	ETHernet:TTTest:SETup:RTLocal:CIRate <rate>
Description	This command sets the downstream CIR rate in the remote to local direction. Unit: Mbps.
Parameter	<rate> = <NUMERIC PROGRAM DATA> <i>MINimum=0.010, MAXimum=10000, DEFault=1000</i>
Response	None.
Example	ETH:TTT:SET:RTL:CIR 1000
Note	

Syntax	ETHernet:TTTest:SETup:RTLocal:CIRate?
Description	This query returns the downstream CIR rate in the remote to local direction.
Parameter	None.
Response	<rate> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:RTL:CIR? → 1000
Note	

12.33.14 ETHernet:TTTest:SETup:RTLocal:MTUSize

Syntax	ETHernet:TTTest:SETup:RTLocal:MTUSize <size>
Description	This command sets the MTU size in the remote to local direction.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum=64, MAXimum=15982, DEFault=1500</i>
Response	None.
Example	ETH:TTT:SET:RTL:MTUS 1500
Note	This MTU size is used when ETHernet:TTTest:SETup:PMTU:DISCover:ENABLE is disabled.

Syntax	ETHernet:TTTest:SETup:RTLocal:MTUSize?
Description	This query returns the MTU size in the remote to local direction.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:RTL:MTUS? → 1500
Note	

12.33.15 ETHernet:TTTest:SETup:PMTU:DISCover[:ENABLE]

Syntax	ETHernet:TTTest:SETup:PMTU:DISCover[:ENABLE] <enable>
Description	This command enables or disables path MTU discovery.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:PMTU:DISC ON
Note	

Syntax	ETHernet:TTTest:SETup:PMTU:DISCover[:ENABLE]?
Description	This query returns whether path MTU discovery is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:PMTU:DISC? → 1
Note	

12.33.16 ETHernet:TTTest:SETup:PMTU:DISCover:MINimum

Syntax	ETHernet:TTTest:SETup:PMTU:DISCover:MINimum <size>
Description	This command sets the path MTU discovery minimum size.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum=64, MAXimum=15982, DEFault=512</i>
Response	None.
Example	ETH:TTT:SET:PMTU:DISC:MIN 512
Note	

Syntax	ETHernet:TTTest:SETup:PMTU:DISCover:MINimum?
Description	This query returns the path MTU discovery minimum size.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:PMTU:DISC:MIN? → 512
Note	

12.33.17 ETHernet:TTTest:SETup:PMTU:DISCover:MAXimum

Syntax	ETHernet:TTTest:SETup:PMTU:DISCover:MAXimum <size>
Description	This command sets the path MTU discovery maximum size.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum=64, MAXimum=15982, DEFault=1500</i>
Response	None.
Example	ETH:TTT:SET:PMTU:DISC:MAX 1500
Note	

Syntax	ETHernet:TTTest:SETup:PMTU:DISCover:MAXimum?
Description	This query returns the path MTU discovery maximum size.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:PMTU:DISC:MAX? → 1500
Note	

12.33.18 ETHernet:TTTest:SETup:BR TT

Syntax	ETHernet:TTTest:SETup:BR TT <size>
Description	This command sets the baseline RTT. Unit: ms.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum=0.001, MAXimum=5000, DEFault=2</i>
Response	None.
Example	ETH:TTT:SET:BR TT 2
Note	This value is used when ETHernet:TTTest:SETup:BR TT:AUTO is disabled.

Syntax	ETHernet:TTTest:SETup:BR TT?
Description	This query returns the baseline RTT.
Parameter	None.
Response	<size> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:BR TT? → 0.020
Note	

12.33.19 ETHernet:TTTest:SETup:BRtt:AUTO

Syntax	ETHernet:TTTest:SETup:BRtt:AUTO <enable>
Description	This command enables or disables a test to determine the baseline RTT.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:BRtt:AUTO ON
Note	

Syntax	ETHernet:TTTest:SETup:BRtt:AUTO?
Description	This query returns whether the test to determine the baseline RTT is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:BRtt:AUTO? → 1
Note	

12.33.20 ETHernet:TTTest:SETup:BRtt:AUTO:DURation

Syntax	ETHernet:TTTest:SETup:BRtt:AUTO:DURation <duration>
Description	This command sets the duration of the RTT discovery test. Unit: seconds.
Parameter	<duration> = <NUMERIC PROGRAM DATA> <i>MINimum=5, MAXimum=86399, DEFault=10</i>
Response	None.
Example	ETH:TTT:SET:BRtt:AUTO:DUR 10
Note	

Syntax	ETHernet:TTTest:SETup:BRtt:AUTO:DURation?
Description	This query returns the RTT discovery test duration.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:BRtt:AUTO:DUR? → 10
Note	

12.33.21 ETHernet:TTTest:SETup:WSTTest[:ENABle]

Syntax	ETHernet:TTTest:SETup:WSTTest[:ENABle] <enable>
Description	This command enables or disables the window scan and throughput test.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:WSTT ON
Note	

Syntax	ETHernet:TTTest:SETup:WSTTest[:ENABle]?
Description	This query returns whether the window scan and throughput test is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:WSTT? → 1
Note	

12.33.22 ETHernet:TTTest:SETup:WSTTest:MODE

Syntax	ETHernet:TTTest:SETup:WSTTest:MODE <mode>
Description	This command sets the window scan and throughput test mode.
Parameter	<mode> = <CHARACTER PROGRAM DATA> AUTO: Scans the window size in four predefined steps. EXPert: Scans the window size in a number of user defined steps. <i>DEFault = AUTO</i>
Response	None.
Example	ETH:TTT:SET:WSTT:MODE AUTO
Note	

Syntax	ETHernet:TTTest:SETup:WSTTest:MODE?
Description	This query returns the window scan and throughput test mode.
Parameter	None.
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	ETH:TTT:SET:WSTT:MODE? → AUTO
Note	

12.33.23 ETHernet:TTTest:SETup:WSCan[:LTRemote]:SDURation

Syntax	ETHernet:TTTest:SETup:WSCan[:LTRemote]:SDURation <duration>
Description	This command sets the window scan step duration in the local to remote direction. Unit: seconds.
Parameter	<duration> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=86399, DEFault=10</i>
Response	None.
Example	ETH:TTT:SET:WSC:SDUR 10
Note	

Syntax	ETHernet:TTTest:SETup:WSCan[:LTRemote]:SDURation?
Description	This query returns the window scan step duration in the local to remote direction.
Parameter	None.
Response	<duration> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:WSC:SDUR? → 10
Note	

12.33.24 ETHernet:TTTest:SETup:WSCan[:LTRemote]:AMODE:MWSize

Syntax	ETHernet:TTTest:SETup:WSCan[:LTRemote]:AMODE:MWSize <size>
Description	This command sets the auto mode max window size in the local to remote direction.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum=16384, MAXimum=8388607, DEFault=65535</i>
Response	None.
Example	ETH:TTT:SET:WSC:AMOD:MWS 65535
Note	

Syntax	ETHernet:TTTest:SETup:WSCan[:LTRemote]:AMODE:MWSize?
Description	This query returns the auto mode max window size in the local to remote direction.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:WSC:AMOD:MWS? → 65535
Note	

12.33.25 ETHernet:TTTest:SETup:WSCan:RTLocal:SDURation

Syntax	ETHernet:TTTest:SETup:WSCan:RTLocal:SDURation <duration>
Description	This command sets the window scan step duration in the remote to local direction. Unit: seconds.
Parameter	<duration> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=86399, DEFault=10</i>
Response	None.
Example	ETH:TTT:SET:WSC:RTL:SDUR 10
Note	

Syntax	ETHernet:TTTest:SETup:WSCan:RTLocal:SDURation?
Description	This query returns the window scan step duration in the remote to local direction.
Parameter	None.
Response	<duration> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:WSC:RTL:SDUR? → 10
Note	

12.33.26 ETHernet:TTTest:SETup:WSCan:RTLocal:AMODE:MWSize

Syntax	ETHernet:TTTest:SETup:WSCan:RTLocal:AMODE:MWSize <size>
Description	This command sets the max window size in the remote to local direction when test mode is auto.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum=16384, MAXimum=8388607, DEFault=65535</i>
Response	None.
Example	ETH:TTT:SET:WSC:RTL:AMOD:MWS 65535
Note	

Syntax	ETHernet:TTTest:SETup:WSCan:RTLocal:AMODE:MWSize?
Description	This query returns the max window size in the remote to local direction when test mode is auto.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:WSC:RTL:AMOD:MWS? → 65535
Note	

12.33.27 ETHernet:TTTest:SETup:WSCan:AMODE[:LTRemote]:STEP<no>[:ENABLE]

Syntax	ETHernet:TTTest:SETup:WSCan:AMODE[:LTRemote]:STEP<no>[:ENABLE] <enable>
Description	This command enables or disables the steps in the local to remote direction when test mode is auto.
Parameters	<no> = Step number (1-3) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:WSC:AMOD:STEP1 ON
Note	

Syntax	ETHernet:TTTest:SETup:WSCan:AMODE[:LTRemote]:STEP<no>[:ENABLE]?
Description	This query returns whether the step is enabled or disabled in the local to remote direction when test mode is auto.
Parameter	<no> = Step number (1-3)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:WSC:AMOD:STEP1? → 1
Note	

12.33.28 ETHernet:TTTest:SETup:WSCan:AMODE:RTL:STEP<no>[:ENABle]

Syntax	ETHernet:TTTest:SETup:WSCan:AMODE:RTL:STEP<no>[:ENABle] <enable>
Description	This command enables or disables the steps in the remote to local direction when test mode is auto.
Parameters	<no> = Step number (1-3) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:WSC:AMOD:RTL:STEP1 ON
Note	

Syntax	ETHernet:TTTest:SETup:WSCan:AMODE:RTL:STEP<no>[:ENABle]?
Description	This query returns whether the step is enabled or disabled in the remote to local direction when test mode is auto.
Parameter	<no> = Step number (1-3)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:WSC:AMOD:RTL:STEP1? → 1
Note	

12.33.29 ETHernet:TTTest:SETup:WSCan:EMODE[:LTRemote]:STEP<no>[:ENABle]

Syntax	ETHernet:TTTest:SETup:WSCan:EMODE[:LTRemote]:STEP<no>[:ENABle] <enable>
Description	This command enables or disables the steps in the local to remote direction when test mode is expert.
Parameters	<no> = Step number (1-5) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:WSC:EMOD:STEP1 ON
Note	

Syntax	ETHernet:TTTest:SETup:WSCan:EMODE[:LTRemote]:STEP<no>[:ENABle]?
Description	This query returns whether the step is enabled or disabled in the local to remote direction when test mode is expert.
Parameter	<no> = Step number (1-5)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:WSC:EMOD:STEP1? → 1
Note	

12.33.30 ETHernet:TTTest:SETup:WSCan:EMODE[:LTRemote]:STEP<no>:WSIZe

Syntax	ETHernet:TTTest:SETup:WSCan:EMODE[:LTRemote]:STEP<no>:WSIZe <size>
Description	This command sets the window size step in the local to remote direction when test mode is expert.
Parameters	<no> = Step number (1-5) <size> = <NUMERIC PROGRAM DATA> <i>MINimum=8, MAXimum=8388607, DEFault=65535</i>
Response	None.
Example	ETH:TTT:SET:WSC:EMOD:STEP1:WSIZ 65535
Note	

Syntax	ETHernet:TTTest:SETup:WSCan:EMODe[:LTRemote]:STEP<no>:WSIZe?
Description	This query returns the window size step in the local to remote direction when test mode is expert.
Parameter	<no> = Step number (1-5)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:WSC:EMOD:STEP1:WSIZ? → 65535
Note	

12.33.31 ETHernet:TTTest:SETup:WSCan:EMODe[:LTRemote]:STEP<no>:CONNections

Syntax	ETHernet:TTTest:SETup:WSCan:EMODe[:LTRemote]:STEP<no>:CONNections <count>
Description	This command sets the connections count step in the local to remote direction when test mode is expert.
Parameters	<no> = Step number (1-5) <count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=16, DEFault=1</i>
Response	None.
Example	ETH:TTT:SET:WSC:EMOD:STEP1:CONN 1
Note	

Syntax	ETHernet:TTTest:SETup:WSCan:EMODe[:LTRemote]:STEP<no>:CONNections?
Description	This query returns the connections count step in the local to remote direction when test mode is expert.
Parameter	<no> = Step number (1-5)
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:WSC:EMOD:STEP1:CONN? → 1
Note	

12.33.32 ETHernet:TTTest:SETup:WSCan:EMODe:RTLocal:STEP<no>[:ENABle]

Syntax	ETHernet:TTTest:SETup:WSCan:EMODe:RTLocal:STEP<no>[:ENABle] <enable>
Description	This command enables or disables the steps in the remote to local direction when test mode is expert.
Parameters	<no> = Step number (1-5) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:WSC:EMOD:RTL:STEP1 ON
Note	

Syntax	ETHernet:TTTest:SETup:WSCan:EMODe:RTLocal:STEP<no>[:ENABle]?
Description	This query returns whether the step is enabled or disabled in the remote to local direction when test mode is expert.
Parameter	<no> = Step number (1-5)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:WSC:EMOD:RTL:STEP1? → 1
Note	

12.33.33 ETHernet:TTTest:SETup:WSCan:EMODE:RTLocal:STEP<no>:WSIZE

Syntax	ETHernet:TTTest:SETup:WSCan:EMODE:RTLocal:STEP<no>:WSIZE <size>
Description	This command sets the window size step in the remote to local direction when test mode is expert.
Parameters	<no> = Step number (1-5) <size> = <NUMERIC PROGRAM DATA> <i>MINimum=8, MAXimum=8388607, DEFault=65535</i>
Response	None.
Example	ETH:TTT:SET:WSC:EMOD:RTL:STEP1:WSIZ 65535
Note	

Syntax	ETHernet:TTTest:SETup:WSCan:EMODE:RTLocal:STEP<no>:WSIZE?
Description	This query returns the window size step in the remote to local direction when test mode is expert.
Parameter	<no> = Step number (1-5)
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:WSC:EMOD:RTL:STEP1:WSIZ? → 65535
Note	

12.33.34 ETHernet:TTTest:SETup:WSCan:EMODE:RTLocal:STEP<no>:CONNections

Syntax	ETHernet:TTTest:SETup:WSCan:EMODE:RTLocal:STEP<no>:CONNections <count>
Description	This command sets the connections count step in the remote to local direction when test mode is expert.
Parameters	<no> = Step number (1-5) <count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=16, DEFault=1</i>
Response	None.
Example	ETH:TTT:SET:WSC:EMOD:RTL:STEP1:CONN 1
Note	

Syntax	ETHernet:TTTest:SETup:WSCan:EMODE:RTLocal:STEP<no>:CONNections?
Description	This query returns the connections count step in the remote to local direction when test mode is expert.
Parameter	<no> = Step number (1-5)
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:WSC:EMOD:RTL:STEP1:CONN? → 1
Note	

12.33.35 ETHernet:TTTest:SETup:TTESt[:LTRemote]:THReshold[:ENABle]

Syntax	ETHernet:TTTest:SETup:TTESt[:LTRemote]:THReshold[:ENABle] <enable>
Description	This command enables or disables throughput test threshold in the local to remote direction.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:TTEs:THR ON
Note	

Syntax	ETHernet:TTTest:SETup:TTESt[:LTRemote]:THReshold[:ENABle]?
Description	This query returns whether throughput test threshold is enabled or disabled in the local to remote direction.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:TTESt:THR? → 1
Note	

12.33.36 ETHernet:TTTest:SETup:TTESt[:LTRemote]:THReshold:PERCentage

Syntax	ETHernet:TTTest:SETup:TTESt[:LTRemote]:THReshold:PERCentage <pct>
Description	This command sets the throughput test threshold value in the local to remote direction. Unit: percentage.
Parameter	<pct> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100.00, DEFault=95</i>
Response	None.
Example	ETH:TTT:SET:TTESt:THR:PERC 95
Note	

Syntax	ETHernet:TTTest:SETup:TTESt[:LTRemote]:THReshold:PERCentage?
Description	This query returns the throughput test threshold value in the local to remote direction.
Parameter	None.
Response	<pct> = <NR2 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:TTESt:THR:PERC? → 95.00
Note	

12.33.37 ETHernet:TTTest:SETup:TTESt[:LTRemote]:SDURation

Syntax	ETHernet:TTTest:SETup:TTESt[:LTRemote]:SDURation <duration>
Description	This command sets the throughput test step duration in the local to remote direction. Unit: seconds.
Parameter	<duration> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=86399, DEFault=10</i>
Response	None.
Example	ETH:TTT:SET:TTESt:SDUR 10
Note	

Syntax	ETHernet:TTTest:SETup:TTESt[:LTRemote]:SDURation?
Description	This query returns the throughput test step duration in the local to remote direction.
Parameter	None.
Response	<duration> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:TTESt:SDUR? → 10
Note	

12.33.38 ETHernet:TTTest:SETup:TTESt:RTLocal:THReshold[:ENABle]

Syntax	ETHernet:TTTest:SETup:TTESt:RTLocal:THReshold[:ENABle] <enable>
Description	This command enables or disables throughput test threshold in the remote to local direction.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:TTESt:RTL:THR ON
Note	

Syntax	ETHernet:TTTest:SETup:TTESt:RTLocal:THReshold[:ENABle]?
Description	This query returns whether throughput test threshold is enabled or disabled in the remote to local direction.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:TTESt:RTL:THR? → 1
Note	

12.33.39 ETHernet:TTTest:SETup:TTESt:RTLocal:THReshold:PERCentage

Syntax	ETHernet:TTTest:SETup:TTESt:RTLocal:THReshold:PERCentage <pct>
Description	This command sets the throughput test threshold value in the remote to local direction. Unit: percentage.
Parameter	<pct> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100.00, DEFault=95</i>
Response	None.
Example	ETH:TTT:SET:TTESt:RTL:THR:PERC 95
Note	

Syntax	ETHernet:TTTest:SETup:TTESt:RTLocal:THReshold:PERCentage?
Description	This query returns the throughput test threshold value in the remote to local direction.
Parameter	None.
Response	<pct> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:TTESt:RTL:THR:PERC? → 95
Note	

12.33.40 ETHernet:TTTest:SETup:TTESt:RTLocal:SDURation

Syntax	ETHernet:TTTest:SETup:TTESt:RTLocal:SDURation <duration>
Description	This command sets the throughput test step duration in the remote to local direction. Unit: seconds.
Parameter	<duration> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=86399, DEFault=10</i>
Response	None.
Example	ETH:TTT:SET:TTESt:RTL:SDUR 10
Note	

Syntax	ETHernet:TTTest:SETup:TTESt:RTLocal:SDURation?
Description	This query returns the throughput test step duration in the remote to local direction.
Parameter	None.
Response	<duration> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:TTESt:RTL:SDUR? → 10
Note	

12.33.41 ETHernet:TTTest:SETup:TTESt:EMODE[:LTRemote][:ENABle]

Syntax	ETHernet:TTTest:SETup:TTESt:EMODE[:LTRemote][:ENABle] <enable>
Description	This command enables or disables throughput test in the local to remote direction when test mode is expert.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:TTESt:EMOD ON
Note	

Syntax	ETHernet:TTTest:SETup:TTESt:EMODe[:LTRemote][:ENABLE]?
Description	This query returns whether throughput test is enabled or disabled in the local to remote direction when test mode is expert.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:TTESt:EMOD? → 1
Note	

12.33.42 ETHernet:TTTest:SETup:TTESt:EMODe[:LTRemote]:WSIZE

Syntax	ETHernet:TTTest:SETup:TTESt:EMODe[:LTRemote]:WSIZe <size>
Description	This command sets the throughput test window size in the local to remote direction when test mode is expert.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum=8, MAXimum=8388607, DEFault=65535</i>
Response	None.
Example	ETH:TTT:SET:TTESt:EMOD:WSIZ 65535
Note	

Syntax	ETHernet:TTTest:SETup:TTESt:EMODe[:LTRemote]:WSIZe?
Description	This query returns the throughput test window size in the local to remote direction when test mode is expert.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:TTESt:EMOD:WSIZ? → 65535
Note	

12.33.43 ETHernet:TTTest:SETup:TTESt:EMODe[:LTRemote]:CONNECTIONS

Syntax	ETHernet:TTTest:SETup:TTESt:EMODe[:LTRemote]:CONNECTIONS <count>
Description	This command sets the throughput test connection count in the local to remote direction when test mode is expert.
Parameter	<count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=16, DEFault=1</i>
Response	None.
Example	ETH:TTT:SET:TTESt:EMOD:CONN 1
Note	

Syntax	ETHernet:TTTest:SETup:TTESt:EMODe[:LTRemote]:CONNECTIONS?
Description	This query returns the throughput test connection count in the local to remote direction when test mode is expert.
Parameter	None.
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:TTESt:EMOD:CONN? → 1
Note	

12.33.44 ETHernet:TTTest:SETup:TTESt:EMODe:RTLLocal[:ENABLE]

Syntax	ETHernet:TTTest:SETup:TTESt:EMODe:RTLLocal[:ENABLE] <enable>
Description	This command enables or disables throughput test in the remote to local direction when test mode is expert.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None.
Example	ETH:TTT:SET:TTESt:EMOD:RTL ON
Note	

Syntax	ETHernet:TTTest:SETup:TTESt:EMODe:RTLocal[:ENABle]?
Description	This query returns whether throughput test is enabled or disabled in the remote to local direction when test mode is expert.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:TTESt:EMOD:RTL? → 1
Note	

12.33.45 ETHernet:TTTest:SETup:TTESt:EMODe:RTLocal:WSIZE

Syntax	ETHernet:TTTest:SETup:TTESt:EMODe:RTLocal:WSIZE <size>
Description	This command sets the throughput test window size in the remote to local direction when test mode is expert.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum=8, MAXimum=8388607, DEFault=65535</i>
Response	None.
Example	ETH:TTT:SET:TTESt:EMOD:RTL:WSIZ 65535
Note	

Syntax	ETHernet:TTTest:SETup:TTESt:EMODe:RTLocal:WSIZE?
Description	This query returns the throughput test window size in the remote to local direction when test mode is expert.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:TTESt:EMOD:RTL:WSIZ? → 65535
Note	

12.33.46 ETHernet:TTTest:SETup:TTESt:EMODe:RTLocal:CONNECTIONS

Syntax	ETHernet:TTTest:SETup:TTESt:EMODe:RTLocal:CONNECTIONS <count>
Description	This command sets the throughput test connection count in the remote to local direction when test mode is expert.
Parameter	<count> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=16, DEFault=1</i>
Response	None.
Example	ETH:TTT:SET:TTESt:EMOD:RTL:CONN 1
Note	

Syntax	ETHernet:TTTest:SETup:TTESt:EMODe:RTLocal:CONNECTIONS?
Description	This query returns the throughput test connection count in the remote to local direction when test mode is expert.
Parameter	None.
Response	<count> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:TTESt:EMOD:RTL:CONN? → 1
Note	

12.33.47 ETHernet:TTTest:SETup:MSERvice[:ENABle]

Syntax	ETHernet:TTTest:SETup:MSERvice[:ENABle] <enable>
Description	This command enables or disables multi service.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:TTT:SET:MSER OFF
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice[:ENABLE]?
Description	This query returns whether multi service is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:MSER? → 0
Note	

12.33.48 ETHernet:TTTest:SETup:MSERvice[:LTRemote]:TDURation

Syntax	ETHernet:TTTest:SETup:MSERvice[:LTRemote]:TDURation <duration>
Description	This command sets the multi service test duration in the local to remote direction. Unit: seconds.
Parameter	<duration> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=86399, DEFault=10</i>
Response	None.
Example	ETH:TTT:SET:MSER:TDUR 10
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice[:LTRemote]:TDURation?
Description	This query returns the multi service test duration in the local to remote direction. Unit: seconds.
Parameter	None.
Response	<duration> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:MSER:TDUR? → 10
Note	

12.33.49 ETHernet:TTTest:SETup:MSERvice[:LTRemote]:WSIZE

Syntax	ETHernet:TTTest:SETup:MSERvice[:LTRemote]:WSIZE <size>
Description	This command sets the multi service window size in the local to remote direction.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum=8, MAXimum=8388607, DEFault=65535</i>
Response	None.
Example	ETH:TTT:SET:MSER:WSIZ 65535
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice[:LTRemote]:WSIZE?
Description	This query returns the multi service window size in the local to remote direction.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:MSER:WSIZ? → 65535
Note	This value is used when ETHernet:TTTest:SETup:MSERvice[:LTRemote]:WSIZE:AUTO is disabled.

12.33.50 ETHernet:TTTest:SETup:MSERvice[:LTRemote]:WSIZE:AUTO

Syntax	ETHernet:TTTest:SETup:MSERvice[:LTRemote]:WSIZE:AUTO <enable>
Description	This command enables or disables multi service window size automatic calculation in the local to remote direction. The window size is calculated from the bandwidth delay product (BDP).
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:TTT:SET:MSER:WSIZ:AUTO OFF
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice[:LTRemote]:WSIZE:AUTO?
Description	This query returns whether multi service window size automatic calculation is enabled or disabled in the local to remote direction.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:MSER:WSIZ:AUTO? → 0
Note	

12.33.51 ETHernet:TTTest:SETup:MSERvice:RTLocal:TDURation

Syntax	ETHernet:TTTest:SETup:MSERvice:RTLocal:TDURation <duration>
Description	This command sets the multi service test duration in the remote to local direction. Unit: seconds.
Parameter	<duration> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=86399, DEFault=10</i>
Response	None.
Example	ETH:TTT:SET:MSER:RTL:TDUR 10
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice:RTLocal:TDURation?
Description	This query returns the multi service test duration in the remote to local direction. Unit: seconds.
Parameter	None.
Response	<duration> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:MSER:RTL:TDUR? → 10
Note	

12.33.52 ETHernet:TTTest:SETup:MSERvice:RTLocal:WSIZE

Syntax	ETHernet:TTTest:SETup:MSERvice:RTLocal:WSIZE <size>
Description	This command sets the multi service window size in the remote to local direction.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum=8, MAXimum=8388607, DEFault=65535</i>
Response	None.
Example	ETH:TTT:SET:MSER:RTL:WSIZ 65535
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice:RTLocal:WSIZE?
Description	This query returns the multi service window size in the remote to local direction.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:MSER:RTL:WSIZ? → 65535
Note	

12.33.53 ETHernet:TTTest:SETup:MSERvice:RTLocal:WSIZE:AUTO

Syntax	ETHernet:TTTest:SETup:MSERvice:RTLocal:WSIZE:AUTO <enable>
Description	This command enables or disables multi service window size automatic calculation in the remote to local direction. The window size is calculated from the BDP.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:TTT:SET:MSER:RTL:WSIZ:AUTO OFF
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice:RTLocal:WSIZE:AUtO?
Description	This query returns whether multi service window size automatic calculation is enabled or disabled in the remote to local direction.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:MSER:RTL:WSIZ:AUTO? → 0
Note	

12.33.54 ETHernet:TTTest:SETup:MSERvice:SERVice<no>[:ENABle]

Syntax	ETHernet:TTTest:SETup:MSERvice:SERVice<no>[:ENABle] <enable>
Description	This command enables or disables the specified multi service.
Parameters	<no> = Service number (1-16) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	ETH:TTT:SET:MSER:SERV1 OFF
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice:SERVice<no>[:ENABle]?
Description	This query returns whether a specific multi service is enabled or disabled.
Parameter	<no> = Service number (1-16)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	ETH:TTT:SET:MSER:SERV1? → 0
Note	

12.33.55 ETHernet:TTTest:SETup:MSERvice:SERVice<no>:DPORt

Syntax	ETHernet:TTTest:SETup:MSERvice:SERVice<no>:DPORt <no>
Description	This command sets the destination port of a specific service.
Parameters	<no> = Service number (1-16) <no> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=65535, DEFault=5001</i>
Response	None.
Example	ETH:TTT:SET:MSER:SERV1:DPOR 5001
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice:SERVice<no>:DPORt?
Description	This query returns the destination port of a specific service.
Parameter	<no> = Service number (1-16)
Response	<no> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:MSER:SERV1:DPOR? → 5001
Note	

12.33.56 ETHernet:TTTest:SETup:MSERvice:SERVice<no>:DOT

Syntax	ETHernet:TTTest:SETup:MSERvice:SERVice<no>:DOT <value>
Description	This command sets the DSCP or TOS value of a specific service.
Parameters	<no> = Service number (1-16) <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=0</i>
Response	None.
Example	ETH:TTT:SET:MSER:SERV1:DOT 0
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice:SERVice<no>:DOT?
Description	This query returns the DSCP or TOS value of a specific service.
Parameter	<no> = Service number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:MSER:SERV1:DOT? → 0
Note	

12.33.57 ETHernet:TTTest:SETup:MSERvice:SERVice<no>:TCLass

Syntax	ETHernet:TTTest:SETup:MSERvice:SERVice<no>:TCLass <value>
Description	This command sets the IPv6 traffic class value of a specific service.
Parameters	<no> = Service number (1-16) <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=0</i>
Response	None.
Example	ETH:TTT:SET:MSER:SERV1:TCL 0
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice:SERVice<no>:TCLass?
Description	This query returns the IPv6 traffic class value of a specific service.
Parameter	<no> = Service number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:MSER:SERV1:TCL? → 0
Note	

12.33.58 ETHernet:TTTest:SETup:MSERvice:SERVice<no>:FLABel

Syntax	ETHernet:TTTest:SETup:MSERvice:SERVice<no>:FLABel <value>
Description	This command sets the IPv6 flow label value of a specific service.
Parameters	<no> = Service number (1-16) <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1048575, DEFault=0</i>
Response	None.
Example	ETH:TTT:SET:MSER:SERV1:FLAB 0
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice:SERVice<no>:FLABel?
Description	This query returns the IPv6 flow label value of a specific service.
Parameter	<no> = Service number (1-16)
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:TTT:SET:MSER:SERV1:FLAB? → 0
Note	

12.33.59 ETHernet:TTTest:SETup:MSERvice:SERVice<no>:NAME

Syntax	ETHernet:TTTest:SETup:MSERvice:SERVice<no>:NAME <name>
Description	This command sets the name of a specific service.
Parameters	<no> = Service number (1-16) <name> = <STRING PROGRAM DATA> The supplied name is truncated to a maximum of 7 characters.
Response	None.
Example	ETH:TTT:SET:MSER:SERV1:NAME "Video"
Note	

Syntax	ETHernet:TTTest:SETup:MSERvice:SERvice<no>:NAME?
Description	This query returns the name of a specific service.
Parameter	<no> = Service number (1-16)
Response	<name> = <STRING RESPONSE DATA>
Example	ETH:TTT:SET:MSER:SERV1:NAME? → "Video"
Note	

12.33.60 ETHernet:TTTest:RESult:PARameters?

Syntax	ETHernet:TTTest:RESult:PARameters? <direction>
Description	Returns the result of measured parameter values during the test.
Parameter	<direction> = <CHARACTER PROGRAM DATA> LTRemote: Results for the local to remote direction. RTLLocal: Results for the remote to local direction. LTRBoth: Results of simultaneous test steps execution for the local to remote direction. RTLBoth: Results of simultaneous test steps execution for the remote to local direction. <i>DEFAULT = LTRemote</i>
Response	<mtu> = <NR1 NUMERIC RESPONSE DATA> MTU value. Unit: Octets. <rtt> = <NR2 NUMERIC RESPONSE DATA> RTT. Unit: ms. <bdp> = <NR1 NUMERIC RESPONSE DATA> Calculated BDP value. <cir0> = <NR1 NUMERIC RESPONSE DATA> Layer 0 CIR. Unit: Bytes. <cir4> = <NR1 NUMERIC RESPONSE DATA> Layer 4 CIR. Unit: Bytes.
Example	ETH:TTT:RES:PAR? RTL → 1500,0.005,261,1000000000,949284785
Note	

12.33.61 ETHernet:TTTest:RESult:WSCan?

Syntax	ETHernet:TTTest:RESult:WSCan? <direction>
Description	Returns the results of the window scan in the specified direction.
Parameter	<direction> = <CHARACTER PROGRAM DATA> LTRemote: Results for the local to remote direction. RTLLocal: Results for the remote to local direction. LTRBoth: Results for the local to remote direction in the simultaneous test step. RTLBoth: Results for the remote to local direction in the simultaneous test step. <i>DEFAULT = LTRemote</i>
Response	A list of results for all window scans and throughput steps. <status> = <STRING RESPONSE DATA> "Pending", "Done", "Pass" or "Fail" denotes the status of the test. <window-size> = <NR1 NUMERIC RESPONSE DATA> Window size. Unit: Bytes. <connections> = <NR1 NUMERIC RESPONSE DATA> Number of connections. <avg-throughput> = <NR1 NUMERIC RESPONSE DATA> Average throughput rate. Unit: bps. <ideal-throughput> = <NR1 NUMERIC RESPONSE DATA> Ideal throughput rate. Unit: bps. <avg-RTT> = <NR2 NUMERIC RESPONSE DATA> Average RTT. Unit: ms. <tcp-eff> = <NR2 NUMERIC RESPONSE DATA> TCP Efficiency. Unit: percentage.
Example	ETH:TTT:RES:WSC? RTL

continued on next page...

...continued from previous page

	→ (Pass,1460,1,419779200,94928478,0.002,100.00)
Note	There are no window scan results for LTRBoth and RTLBoth.

12.33.62 ETHernet:TTTest:RESult:THRoughput?

Syntax	ETHernet:TTTest:RESult:THRoughput? <direction>
Description	Returns the results of the throughput test in the specified direction.
Parameter	<direction> = <CHARACTER PROGRAM DATA> LTRemote: Results for the local to remote direction. RTLLocal: Results for the remote to local direction. LTRBoth: Results for the local to remote direction in the simultaneous test step. RTLBoth: Results for the remote to local direction in the simultaneous test step. <i>DEFault = LTRemote</i>
Response	<avg-throughput> = <NR1 NUMERIC RESPONSE DATA> Average throughput. Unit: bps. <ideal-throughput> = <NR1 NUMERIC RESPONSE DATA> Ideal throughput. Unit: bps. <act-time> = <NR1 NUMERIC RESPONSE DATA> Actual transfer time. Unit: seconds. <ideal-time> = <NR1 NUMERIC RESPONSE DATA> Ideal transfer time. Unit: seconds. <time-ratio> = <NR1 NUMERIC RESPONSE DATA> Transfer time ratio. <window-size> = <NR1 NUMERIC RESPONSE DATA> Window size. Unit: bytes. <service-no> = <NR1 NUMERIC RESPONSE DATA> Number of services/connections. <trans-bytes> = <NR1 NUMERIC RESPONSE DATA> Transmitted bytes. Unit: bytes. <retrans-bytes> = <NR1 NUMERIC RESPONSE DATA> Retransmitted bytes. Unit: bytes. <retrans-pct> = <NR1 NUMERIC RESPONSE DATA> Retransmitted percentage. <tcp-eff> = <NR1 NUMERIC RESPONSE DATA> TCP Efficiency. Unit: percentage. <base-RTT> = <NR1 NUMERIC RESPONSE DATA> Baseline RTT. Unit: ms. <min-RTT> = <NR1 NUMERIC RESPONSE DATA> Minimum RTT. Unit: ms. <avg-RTT> = <NR1 NUMERIC RESPONSE DATA> Average RTT. Unit: ms. <max-RTT> = <NR1 NUMERIC RESPONSE DATA> Maximum RTT. Unit: ms. <buffer-delay> = <NR1 NUMERIC RESPONSE DATA> Buffer delay. Unit: percentage.
Example	ETH:TTT:RES:THR? RTL → 4197792000,949284785,10.00,44.22,0.23,1460,1, 5247240000,0,0.00,100.00,0.002,0.002,0.002,0.002,0.00
Note	

12.33.63 ETHernet:TTTest:RESult:THRoughput:EXPort

Syntax	ETHernet:TTTest:RESult:THRoughput:EXPort <direction> <file> [<delimiter>]
---------------	---

continued on next page...

... continued from previous page

Description	This command writes the data of the throughput graph to the specified file in a CSV format. The file can be written to the internal disk or to a connected USB memory device. The specified delimiter is used as field delimiter. Lines are terminated with CR-LF (0x0d,0x10).
Parameters	<direction> = <CHARACTER PROGRAM DATA> LTRemote: Results for the local to remote direction. RTLlocal: Results for the remote to local direction. LTRBoth: Results for the local to remote direction in the simultaneous test step. RTLBoth: Results for the remote to local direction in the simultaneous test step. DEFAult = LTRemote <file> = <STRING PROGRAM DATA> The path and name of the file to store the data. <delimiter> = <CHARACTER PROGRAM DATA> COMMa: Use ',' as field separator. SEMicolon: Use ';' as field separator. TABulator: Use a tabulator character (0x09) as field separator. DEFAult = COMMa
Response	None.
Example	ETH:TTT:RES:THR:EXP RTL,"Internal/graph-data.csv",TAB
Note	Files must be saved to the Internal/ directory or a sub-directory hereof.
	When a USB storage device is mounted, files are stored via the Usb/ directory.

12.33.64 ETHernet:TTTest:RESult:MSERvice?

Syntax	ETHernet:TTTest:RESult:MSERvice? <direction>
Description	Returns the results of all multi service in the specified direction.
Parameter	<direction> = <CHARACTER PROGRAM DATA> LTRemote: Results for the local to remote direction. RTLlocal: Results for the remote to local direction. RTLBoth: Results for the remote to local direction in the simultaneous test step. RTLBoth: Results for the remote to local direction in the simultaneous test step. DEFAult = LTRemote
Response	A list of results for all services. <min-RTT> = <NR2 NUMERIC RESPONSE DATA> Minimum RTT. Unit: ms. <avg-RTT> = <NR2 NUMERIC RESPONSE DATA> Average RTT. Unit: ms. <max-RTT> = <NR2 NUMERIC RESPONSE DATA> Maximum RTT. Unit: ms. <avg-throughput> = <NR1 NUMERIC RESPONSE DATA> Average throughput rate. Unit: bps. <tcp-eff> = <NR2 NUMERIC RESPONSE DATA> TCP efficiency. Unit: percentage.
Example	ETH:TTT:RES:MSER? RTL → (0.010,0.020,0.050,10100,50.00),(0.010,0.020,0.040,20200,100.00)
Note	

12.33.65 ETHernet:TTTest:RESult:MSERvice:TOTal?

Syntax	ETHernet:TTTest:RESult:MSERvice:TOTal? <direction>
Description	Returns the result totals of all multi service in the specified direction.
Parameter	<direction> = <CHARACTER PROGRAM DATA> LTRemote: Results for the local to remote direction. RTLlocal: Results for the remote to local direction. LTRBoth: Results for the local to remote direction in the simultaneous test step. RTLBoth: Results for the remote to local direction in the simultaneous test step. DEFAult = LTRemote

continued on next page...

...continued from previous page

Response	A list results for all services.
	<min-RTT> = <NR2 NUMERIC RESPONSE DATA> Minimum RTT. Unit: ms.
	<avg-RTT> = <NR2 NUMERIC RESPONSE DATA> Average RTT. Unit: ms.
	<max-RTT> = <NR2 NUMERIC RESPONSE DATA> Maximum RTT. Unit: ms.
	<avg-throughput> = <NR1 NUMERIC RESPONSE DATA> Average throughput rate. Unit: bps.
	<tcp-eff> = <NR2 NUMERIC RESPONSE DATA> TCP efficiency. Unit: percentage.
Example	ETH:TTT:RES:MSER:TOT? RTL → (0.010,0.020,0.050,1.100,50.00),(0.010,0.020,0.040,2.200,100.00)
Note	

12.33.66 ETHernet:TTTest:RESult:MSERvice:EXPort

Syntax	ETHernet:TTTest:RESult:MSERvice:EXPort <direction> <file> [<delimiter>]
Description	This command writes the data of the multi service throughput graph to the specified file in a CSV format. The file can be written to the internal disk or to a connected USB memory device. The specified delimiter is used as field delimiter. Lines are terminated with CR-LF (0x0d,0x10).
Parameters	<direction> = <CHARACTER PROGRAM DATA> LTRemote: Results for the local to remote direction. RTLlocal: Results for the remote to local direction. LTRBoth: Results for the local to remote direction in the simultaneous test step. RTLBoth: Results for the remote to local direction in the simultaneous test step.
	<file> = <STRING PROGRAM DATA> The path and name of the file to store the data.
	<delimiter> = <CHARACTER PROGRAM DATA> COMMa: Use ',' as field separator. SEMicolon: Use ';' as field separator. TABulator: Use a tabulator character (0x09) as field separator. DEFault = COMMa
Response	None.
Example	ETH:TTT:RES:MSER:EXP RTL,"Internal/graph-data.csv",TAB
Note	Files must be saved to the Internal/ directory or a sub-directory hereof.
	When a USB storage device is mounted, files are stored via the Usb/ directory.

Chapter 13

eCPRI/RoE BERT

Almost all eCPRI/RoE BERT SCPI commands are same as Ethernet commands. This chapter only describes the differences from Ethernet. For the other commands, please refer to Ethernet.(see Chapter 12).

13.1 Port Setup

For detail of the SCPI command, please refer to Ethernet.(see section 12.1).

13.1.1 ETHernet:PORT<Pt>:DPIConstraint

Syntax	ETHernet:PORT<Pt>:DPIConstraint <interface>
Description	This command sets the dual port interface constraint.
Parameters	<Pt> = Port number <interface> = <CHARACTER PROGRAM DATA> 10G10G : Port1=10M-10G : Port2=10M-10G 10G25G : Port1=10M-10G : Port2=25G 25G10G : Port1=25G : Port2=10M-10G 25G25G : Port1=25G : Port2=25G <i>DEFault = 25G25G</i>
Response	None.
Example	ETH:PORT1:DPIC 10G10G
Note	This command can be used on eCPRI/RoE application with "25G eCPRI/RoE Dual Ability".

Syntax	ETHernet:PORT<Pt>:DPIConstraint?
Description	This query returns the dual port interface constraint.
Parameter	<Pt> = Port number
Response	<interface> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:DPIC? → 10G10G
Note	

13.2 PCS

For detail of the SCPI command, please refer to Ethernet.(see section 12.4).

13.3 Traffic

RoE BERT application uses stream number one only. Setting other streams has no effect in these applications. For detail of the SCPI command, please refer to Ethernet.(see section 12.5).

13.4 Settings

For detail of the SCPI command, please refer to Ethernet.(see section 12.7).

13.5 Thresholds

For detail of the SCPI command, please refer to Ethernet.(see section [12.9](#)).

13.6 SyncE

For detail of the SCPI command, please refer to Ethernet.(see section [12.10](#)).

13.7 Precision Time Protocol - IEEE 1588v2

For detail of the SCPI command, please refer to Ethernet.(see section [12.11](#)).

13.8 Follow

For detail of the SCPI command, please refer to Ethernet.(see section [12.12](#)).

13.9 Stimuli

For detail of the SCPI command, please refer to Ethernet.(see section [12.13](#)).

13.10 Result

For detail of the SCPI command, please refer to Ethernet.(see section [12.14](#)).

13.11 Status

For detail of the SCPI command, please refer to Ethernet.(see section [12.15](#)).

13.12 Frame Content

This section only describes the differences from Ethernet. For the other commands, please refer to Ethernet.(see section 12.6).

13.12.1 ETHernet:PORT<Pt>:STReam<St>:RFRame

Syntax	ETHernet:PORT<Pt>:STReam<St>:RFRame <mode>
Description	This command sets the Radio frame type.
Parameters	<Pt> = Port number
	<St> = Stream number
	<mode> = <CHARACTER PROGRAM DATA>
	ECPRI: eCPRI IEEE1914: IEEE 1914.3 <i>Default = ECPRI</i>
Response	None.
Example	ETH:PORT1:STR1:RFR ECPRI
Notes	

Syntax	ETHernet:PORT<Pt>:STReam<St>:RFRame?
Description	This command sets the Radio frame type
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<interface> = <CHARACTER RESPONSE DATA>
Example	ETH:PORT1:STR1:RFR? → ECPRI
Note	

13.12.2 ETHernet:PORT<Pt>:STReam<St>:ECPri:MESSage

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:MESSage <message>
Description	This command sets the Message type of eCPRI.
Parameters	<Pt> = Port number
	<St> = Stream number
	<message> = <CHARACTER PROGRAM DATA>
	IQD: IQ Data BITS: Bit Sequence RTCD: Real-Time Control Data GDT: Generic Data Transfer RMA: Remote Memory Access OWDM: One-way Delay Measurement RRST: Remote Reset EVIN: Event Indication UDEF: User Defined
Response	None.
Example	ETH:PORT1:STR1:ECPR:MESS IQD
Notes	

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:MESSage? <message>
Description	This query returns the Message type of eCPRI.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<message> = <CHARACTER PROGRAM DATA>
Example	ETH:PORT1:STR1:ECPR:MESS? → IQD
Note	

13.12.3 ETHernet:PORT<Pt>:STReam<St>:ECPRI:MVAL

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:MVAL <message>
Description	This command sets the Message type value of eCPRI.
Parameters	<Pt> = Port number
	<St> = Stream number
	<message> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 255, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:ECPR:MVAL 0
Notes	This command valid in Message Type is User defined.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:MVAL? <message>
Description	This query returns the Message type value of eCPRI.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<message> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:MVAL? → 0
Note	

13.12.4 ETHernet:PORT<Pt>:STReam<St>:ECPRI:LENGth

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:LENGth? <length>
Description	This query returns the Payload length of eCPRI.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:LENG? → 64
Note	

13.12.5 ETHernet:PORT<Pt>:STReam<St>:ECPRI:IQData:PCID

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:IQData:PCID <data>
Description	This command sets the PC_ID of IQ Data.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:IQD:PCID "0000"
Notes	2 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:IQData:PCID? <data>
Description	This query returns the PC_ID of IQ Data.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:IQD:PCID? → 0000
Note	2 bytes hex data.

13.12.6 ETHernet:PORT<Pt>:STReam<St>:ECPri:IQData:SEQId

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:IQData:SEQId <data>
Description	This command sets the SEQ_ID of IQ Data.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:IQD:SEQI "0000"
Notes	2 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:IQData:SEQId? <data>
Description	This query returns the SEQ_ID of IQ Data.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:IQD:SEQI? → 0000
Note	2 bytes hex data.

13.12.7 ETHernet:PORT<Pt>:STReam<St>:ECPri:BITSeq:PCID

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:BITSeq:PCID <data>
Description	This command sets the PC_ID of Bit Sequence.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:BITS:PCID "0000"
Notes	2 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:BITSeq:PCID? <data>
Description	This query returns the PC_ID of Bit Sequence.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:BITS:PCID? → 0000
Note	2 bytes hex data.

13.12.8 ETHernet:PORT<Pt>:STReam<St>:ECPri:BITSeq:SEQId

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:BITSeq:SEQId <data>
Description	This command sets the SEQ_ID of Bit Sequence.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:BITS:SEQI "0000"
Notes	2 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:BITSeq:SEQId? <data>
Description	This query returns the SEQ_ID of Bit Sequence.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:BITS:SEQI? → 0000
Note	2 bytes hex data.

13.12.9 ETHernet:PORT<Pt>:STream<St>:ECPri:RTCData:PCID

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:RTCData:PCID <data>
Description	This command sets the RTC_ID of Real-Time Control Data.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:RTCD:PCID "0000"
Notes	2 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:RTCData:PCID? <data>
Description	This query returns the RTC_ID of Real-Time Control Data.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:RTCD:PCID? → 0000
Note	2 bytes hex data.

13.12.10 ETHernet:PORT<Pt>:STream<St>:ECPri:RTCData:SEQId

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:RTCData:SEQId <data>
Description	This command sets the SEQ_ID of Real-Time Control Data.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:RTCD:SEQI "0000"
Notes	2 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:RTCData:SEQId? <data>
Description	This query returns the SEQ_ID of Real-Time Control Data.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:RTCD:SEQI? → 0000
Note	2 bytes hex data.

13.12.11 ETHernet:PORT<Pt>:STream<St>:ECPri:GDTRans:PCID

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:GDTRans:PCID <data>
Description	This command sets the PC_ID of Generic Data Transfer.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:GDTR:PCID "00000000"
Notes	4 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:GDTRans:PCID? <data>
Description	This query returns the PC_ID of Generic Data Transfer.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:GDTR:PCID? → 00000000
Note	4 bytes hex data.

13.12.12 ETHernet:PORT<Pt>:STReam<St>:ECPri:GDTRans:SEQId

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:GDTRans:SEQId <data>
Description	This command sets the SEQ_ID of Generic Data Transfer.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:GDTR:SEQI "00000000"
Notes	4 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:GDTRans:SEQId? <data>
Description	This query returns the SEQ_ID of Generic Data Transfer.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:GDTR:SEQI? → 00000000
Note	4 bytes hex data.

13.12.13 ETHernet:PORT<Pt>:STReam<St>:ECPri:RMACess:ACID

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:RMACess:ACID <data>
Description	This command sets the Remote Memory Access ID of Remote Memory Access
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:RMAC:ACID "00"
Notes	1 byte hex data.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:RMACess:ACID? <data>
Description	This query returns the Remote Memory Access ID of Remote Memory Access
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:RMAC:ACID? → 00
Note	1 byte hex data.

13.12.14 ETHernet:PORT<Pt>:STReam<St>:ECPri:RMACess:RW

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:RMACess:RW <data>
Description	This command sets the Read/Write of Remote Memory Access
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 15, DEFault = 0</i>
	0: Read 1: Write 2: Write No Resp Others: Reserved
Response	None.
Example	ETH:PORT1:STR1:ECPR:RMAC:RW 0
Notes	

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:RMACess:RW? <data>
Description	This query returns the Read/Write of Remote Memory Access
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <BINARY NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:RMAC:RW? → #B0
Note	

13.12.15 ETHernet:PORT<Pt>:STReam<St>:ECPRI:RMACess:RRESp

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:RMACess:RRESp <data>
Description	This command sets the Req/Resp of Remote Memory Access
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 15, DEFault = 0</i>
	0: Request 1: Response 2: Failure Others: Reserved
Response	None.
Example	ETH:PORT1:STR1:ECPR:RMAC:RRES 0
Notes	

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:RMACess:RRESp? <data>
Description	This query returns the Req/Resp of Remote Memory Access
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <BINARY NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:RMAC:RRES? → #B0
Note	

13.12.16 ETHernet:PORT<Pt>:STReam<St>:ECPRI:RMACess:ELID

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:RMACess:ELID <data>
Description	This command sets the Element ID of Remote Memory Access
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:RMAC:ELID "0000"
Notes	2 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:RMACess:ELID? <data>
Description	This query returns the Element ID of Remote Memory Access
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:RMAC:ELID? → 0000
Note	2 bytes hex data.

13.12.17 ETHernet:PORT<Pt>:STream<St>:ECPri:RMACess:ADDRess

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:RMACess:ADDRess <address>
Description	This command sets the Address of Remote Memory Access
Parameters	<Pt> = Port number
	<St> = Stream number
	<address> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:RMAC:ADDR "000000000000"
Notes	6 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:RMACess:ADDRess? <address>
Description	This query returns the Address of Remote Memory Access
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<address> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:RMAC:ADDR? → 000000000000
Note	6 bytes hex data.

13.12.18 ETHernet:PORT<Pt>:STream<St>:ECPri:RMACess:LENGth

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:RMACess:LENGth <length>
Description	This command sets the Length of Remote Memory Access
Parameters	<Pt> = Port number
	<St> = Stream number
	<length> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 65535, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:ECPR:RMAC:LENG 64
Notes	

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:RMACess:LENGth? <length>
Description	This query returns the Length of Remote Memory Access
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:RMAC:LENG? → 64
Note	

13.12.19 ETHernet:PORT<Pt>:STream<St>:ECPri:OWDMeas:MESId

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:OWDMeas:MESId <data>
Description	This command sets the Measurement ID of One-Way Delay Measurement
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:OWDM:MESI "00"
Notes	

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:OWDMeas:MESId? <data>
Description	This query returns the Measurement ID of One-Way Delay Measurement
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:OWDM:MESI? → 00
Note	

13.12.20 ETHernet:PORT<Pt>:STream<St>:ECPri:OWDMeas:ACTType

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:OWDMeas:ACTType <data>
Description	This command sets the Action Type of One-Way Delay Measurement
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 255, DEFault = 0</i> 0: Request 1: Request with Follow_Up 2: Response 3: Remote Request 4: Remote Request with Follow_Up 5: Follow_Up Others: Reserved
Response	None.
Example	ETH:PORT1:STR1:ECPR:OWDM:ACTT 0
Notes	

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:OWDMeas:ACTType? <data>
Description	This query returns the Action Type of One-Way Delay Measurement
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:OWDM:ACTT? → #H0
Note	

13.12.21 ETHernet:PORT<Pt>:STream<St>:ECPri:OWDMeas:TSTamp

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:OWDMeas:TSTamp <data>
Description	This command sets the TimeStamp of One-Way Delay Measurement
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:OWDM:TST "00000000000000000000"
Notes	10 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:OWDMeas:TSTamp? <data>
Description	This query returns the TimeStamp of One-Way Delay Measurement
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:OWDM:TST? → 00000000000000000000
Note	10 bytes hex data.

13.12.22 ETHernet:PORT<Pt>:STream<St>:ECPri:OWDMeas:CVALue

Syntax	ETHernet:PORT<Pt>:STream<St>:ECPri:OWDMeas:CVALue <data>
Description	This command sets the Compensation Value of One-Way Delay Measurement
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:OWDM:CVAL "0000000000000000"
Notes	8 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:OWDMeas:CVALue? <data>
Description	This query returns the Compensation Value of One-Way Delay Measurement
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:OWDM:CVAL? → 0000000000000000
Note	8 bytes hex data.

13.12.23 ETHernet:PORT<Pt>:STReam<St>:ECPri:RRESet:REID

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:RRESet:REID <data>
Description	This command sets the Reset ID of Remote Reset
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:RRES:REID "0000"
Notes	2 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:RRESet:REID? <data>
Description	This query returns the Reset ID of Remote Reset
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:RRES:REID? → 0000
Note	2 bytes hex data.

13.12.24 ETHernet:PORT<Pt>:STReam<St>:ECPri:RRESet:COption

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:RRESet:COption <data>
Description	This command sets the Reset Code Op of Remote Reset
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 255, DEFault = 0</i>
	1: Remote reset request 2: Remote reset response Others: Reserved
Response	None.
Example	ETH:PORT1:STR1:ECPR:RRES:COP 0
Notes	

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPri:RRESet:COption? <data>
Description	This query returns the Reset Code Op of Remote Reset
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:RRES:COP? → #H0
Note	

13.12.25 ETHernet:PORT<Pt>:STReam<St>:ECPRI:CDATa

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:CDATa <data>
Description	This command sets the Custom pattern data.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:CDAT "00001122"
Notes	

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:CDATa? <data>
Description	This query returns the Custom pattern data.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:CDAT? → 00001122
Note	

13.12.26 ETHernet:PORT<Pt>:STReam<St>:ECPRI:CLENgth

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:CLENgth <length>
Description	This command sets the Custom pattern length.
Parameters	<Pt> = Port number
	<St> = Stream number
	<length> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 256, DEFault = 1</i>
Response	None.
Example	ETH:PORT1:STR1:ECPR:CLEN 4
Notes	

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:CLENgth? <length>
Description	This query returns the Custom pattern length.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:ECPR:CLEN? → 4
Note	

13.12.27 ETHernet:PORT<Pt>:STReam<St>:ECPRI:CENable

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:CENable <enable>
Description	This command sets the Enable of Custom pattern.
Parameters	<Pt> = Port number
	<St> = Stream number
	<enable> = <BOOLEAN PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ECPR:CEN ON
Notes	

Syntax	ETHernet:PORT<Pt>:STReam<St>:ECPRI:CENable? <enable>
Description	This query returns the Enable of Custom pattern.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	ETH:PORT1:STR1:ECPR:CEN? → 1
Note	

13.12.28 ETHernet:PORT<Pt>:STReam<St>:ROE:SUBType

Syntax	ETHernet:PORT<Pt>:STReam<St>:ROE:SUBType <subtype>
Description	This command sets the Sub type of IEEE 1914.3.
Parameters	<Pt> = Port number
	<St> = Stream number
	<subtype> = <CHARACTER PROGRAM DATA>
	CONT: Control Sub type SAD: Structure-agnostic data sub type SACD: Structure-aware CPRI data sub type SCMC: Slow C&M CORI data sub type NTDD: Native time domain data sub type NFDD: Native frequency domain data sub type NPD: Native PRACH data sub type UDEF: User Defined
Response	None.
Example	ETH:PORT1:STR1:ROE:SUBT CONT
Notes	

Syntax	ETHernet:PORT<Pt>:STReam<St>:ROE:SUBType? <subtype>
Description	This query returns the Sub type of IEEE 1914.3.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<subtype> = <CHARACTER PROGRAM DATA>
Example	ETH:PORT1:STR1:ROE:SUBT? → CONT
Note	

13.12.29 ETHernet:PORT<Pt>:STReam<St>:ROE:SVALue

Syntax	ETHernet:PORT<Pt>:STReam<St>:ROE:SVALue <subtype>
Description	This command sets the Sub type value of IEEE 1914.4.
Parameters	<Pt> = Port number
	<St> = Stream number
	<subtype> = <NUMERIC PROGRAM DATA>
	<i>MINimum = 0, MAXimum = 255, DEFault = 0</i>
Response	None.
Example	ETH:PORT1:STR1:ROE:SVAL 0
Notes	This command valid when Sub type is User defined.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ROE:SVALue? <subtype>
Description	This query returns the Sub type value of IEEE 1914.4.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<subtype> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:ROE:SVAL? → 0
Note	

13.12.30 ETHernet:PORT<Pt>:STReam<St>:ROE:FLID

Syntax	ETHernet:PORT<Pt>:STReam<St>:ROE:FLID <data>
Description	This command sets the Flow ID of IEEE 1914.3.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ROE:FLID "00"
Notes	1 byte hex data.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ROE:FLID? <data>
Description	This query returns the Flow ID of IEEE 1914.3.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ROE:FLID? → 00
Note	1 byte hex data.

13.12.31 ETHernet:PORT<Pt>:STReam<St>:ROE:LENGth

Syntax	ETHernet:PORT<Pt>:STReam<St>:ROE:LENGth? <length>
Description	This query returns the Payload length of IEEE 1914.3.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:ROE:LENG? → 64
Note	

13.12.32 ETHernet:PORT<Pt>:STReam<St>:ROE:OINFo

Syntax	ETHernet:PORT<Pt>:STReam<St>:ROE:OINFo <data>
Description	This command sets the Ordering information of IEEE 1914.3.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ROE:OINF "00000000"
Notes	4 bytes hex data.

Syntax	ETHernet:PORT<Pt>:STReam<St>:ROE:OINFo? <data>
Description	This query returns the Ordering information of IEEE 1914.3.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ROE:OINF? → 00000000
Note	4 bytes hex data.

13.12.33 ETHernet:PORT<Pt>:STReam<St>:ROE:CONTRol:OPCode

Syntax	ETHernet:PORT<Pt>:STReam<St>:ROE:CONTRol:OPCode <data>
Description	This command sets the OpCode of Control sub type.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <NUMERIC PROGRAM DATA> MINimum = 0, MAXimum = 255, DEFault = 0
	#H00: RoE OAM TLV write #H01: CtrlAxC words #H02: VSD #H03: Timing control packet #H80: RoE OAM TLV read Others: Reserved
Response	None.
Example	ETH:PORT1:STR1:ROE:CONT:OPC #H0
Notes	

Syntax	ETHERnet:PORT<Pt>:STReam<St>:ROE:CONTRol:OPCode? <data>
Description	This query returns the OpCode of Control sub type.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:ROE:CONT:OPC? → #H0
Note	

13.12.34 ETHERnet:PORT<Pt>:STReam<St>:ROE:CDATa

Syntax	ETHERnet:PORT<Pt>:STReam<St>:ROE:CDATa <data>
Description	This command sets the Custom pattern data of IEEE 1914.3.
Parameters	<Pt> = Port number
	<St> = Stream number
	<data> = <STRING PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ROE:CDAT "00001122"
Notes	

Syntax	ETHERnet:PORT<Pt>:STReam<St>:ROE:CDATa? <data>
Description	This query returns the Custom pattern data of IEEE 1914.3.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<data> = <STRING RESPONSE DATA>
Example	ETH:PORT1:STR1:ROE:CDAT? → 00001122
Note	

13.12.35 ETHERnet:PORT<Pt>:STReam<St>:ROE:CLENgth

Syntax	ETHERnet:PORT<Pt>:STReam<St>:ROE:CLENgth <length>
Description	This command sets the Custom pattern length of IEEE 1914.3.
Parameters	<Pt> = Port number
	<St> = Stream number
	<length> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 256, DEFault = 1</i>
Response	None.
Example	ETH:PORT1:STR1:ROE:CLEN 4
Notes	

Syntax	ETHERnet:PORT<Pt>:STReam<St>:ROE:CLENgth? <length>
Description	This query returns the Custom pattern length of IEEE 1914.3.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	ETH:PORT1:STR1:ROE:CLEN? → 4
Note	

13.12.36 ETHERnet:PORT<Pt>:STReam<St>:ROE:CENable

Syntax	ETHERnet:PORT<Pt>:STReam<St>:ROE:CENable <enable>
Description	This command enables or disables Custom pattern of IEEE 1914.3.
Parameters	<Pt> = Port number
	<St> = Stream number
	<enable> = <BOOLEAN PROGRAM DATA>
Response	None.
Example	ETH:PORT1:STR1:ROE:CEN ON
Notes	

Syntax	ETHernet:PORT<Pt>:STReam<St>:ROE:CENable? <enable>
Description	This query returns whether the Custom pattern of IEEE 1914.3 is enabled or disabled.
Parameter	<Pt> = Port number
	<St> = Stream number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	ETH:PORT1:STR1:ROE:CEN? → 1
Note	

Chapter 14

Fibre Channel

14.1 Port

14.1.1 FCHannel:PORT<Pt>:MODE

Syntax	FCHannel:PORT<Pt>:MODE <mode>
Description	This command sets the port mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Port off FC100: 1Gb/s 100MBytes/s FC200: 2Gb/s 200MBytes/s FC400: 4Gb/s 400MBytes/s FC800: 8Gb/s 800MBytes/s FC1200: 10Gb/s 1200MBytes/s FC1600: 16Gb/s 1600MBytes/s <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT1:MODE FC100
Note	

Syntax	FCHannel:PORT<Pt>:MODE?
Description	This query returns the port mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	FCH:PORT1:MODE? → FC100
Note	

14.1.2 FCHannel:TX<Pt>:TIMing

Syntax	FCHannel:TX<Pt>:TIMing <timing>
Description	This command sets the timing source.
Parameters	<Pt> = Port number <timing> = <CHARACTER PROGRAM DATA> INTernal: Internal clock EXTernal: External clock GPS: GPS signal RX: Received clock <i>DEFault = INT</i>
Response	None
Example	FCH:TX1:TIM INT
Note	

Syntax	FCHannel:TX<Pt>:TIMing?
Description	This query returns the timing source.
Parameter	<Pt> = Port number
Response	<timing> = <CHARACTER RESPONSE DATA>
Example	FCH:TX1:TIM? → INT
Note	

14.2 Interface

14.2.1 FCHannel:PORT<Pt>:TOPology

Syntax	FCHannel:PORT<Pt>:TOPology <topology>
Description	This command sets the topology
Parameters	<Pt> = Port number <topology> = <CHARACTER PROGRAM DATA> PTPoint: Point to Point FABRic: Fabric EPORT: E-Port <i>DEFault = PTPoint</i>
Response	None.
Example	FCH:PORT1:TOP FABR
Note	

Syntax	FCHannel:PORT<Pt>:TOPology?
Description	This query returns the topology
Parameter	<Pt> = Port number
Response	<topology> = <CHARACTER RESPONSE DATA>
Example	FCH:PORT1:TOP? → FABR
Note	

14.2.2 FCHannel:PORT<Pt>:PTP:LOGin

Syntax	FCHannel:PORT<Pt>:PTP:LOGin <enable>
Description	This command enables or disables point to point login.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT1:PTP:LOG OFF
Note	

Syntax	FCHannel:PORT<Pt>:PTP:LOGin?
Description	This query returns whether point to point login is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:PTP:LOG? → 0
Note	

14.2.3 FCHannel:PORT<Pt>:FABRic:LOGin

Syntax	FCHannel:PORT<Pt>:FABRic:LOGin
Description	This command activates the fabric login.
Parameters	<Pt> = Port number
Response	None.
Example	FCH:PORT1:FABR:LOG
Note	

14.2.4 FCHannel:PORT<Pt>:EPORT:ELP

Syntax	FCHannel:PORT<Pt>:EPORT:ELP
Description	This command activates the ELP.
Parameters	<Pt> = Port number
Response	None.
Example	FCH:PORT1:EPORT:ELP
Note	

14.2.5 FCHannel:PORT<Pt>:FCONtrol[:ENABle]

Syntax	FCHannel:PORT<Pt>:FCONtrol[:ENABle] <enable>
Description	This command enables or disables flow control.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT1:FCON OFF
Note	

Syntax	FCHannel:PORT<Pt>:FCONtrol[:ENABle]?
Description	This query returns whether flow control is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:FCON? → 0
Note	

14.2.6 FCHannel:PORT<Pt>:FCONtrol:LCRedit

Syntax	FCHannel:PORT<Pt>:FCONtrol:LCRedit <credit>
Description	This command sets the local credit.
Parameters	<Pt> = Port number <credit> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=65535, DEFault=64</i>
Response	None.
Example	FCH:PORT1:FCON:LCR 64
Note	

Syntax	FCHannel:PORT<Pt>:FCONtrol:LCRedit?
Description	This query returns the local credit.
Parameter	<Pt> = Port number
Response	<credit> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:FCON:LCR? → 64
Note	

14.2.7 FCHannel:PORT<Pt>:FCONtrol:RCRedit

Syntax	FCHannel:PORT<Pt>:FCONtrol:RCRedit <credit>
Description	This command sets the remote credit.
Parameters	<Pt> = Port number <credit> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=65535, DEFault=64</i>
Response	None.
Example	FCH:PORT1:FCON:RCR 64
Note	

Syntax	FCHannel:PORT<Pt>:FCONtrol:RCredit?
Description	This query returns the remote credit.
Parameter	<Pt> = Port number
Response	<credit> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:FCON:RCR? → 64
Note	

14.2.8 FCHannel:PORT<Pt>:SOURce:WWN

Syntax	FCHannel:PORT<Pt>:SOURce:WWN <wwn>
Description	This command sets the source port WWN.
Parameters	<Pt> = Port number <wwn> = <STRING PROGRAM DATA> Port WWN
Response	None.
Example	FCH:PORT1:SOUR:WWN "00-00-00-00-00-00-00-00"
Note	Only the character '-' is accepted as separator.

Syntax	FCHannel:PORT<Pt>:SOURce:WWN?
Description	This query returns the source port WWN.
Parameter	<Pt> = Port number
Response	<wwn> = <STRING RESPONSE DATA>
Example	FCH:PORT1:SOUR:WWN? → "00-00-00-00-00-00-00-00"
Note	

14.2.9 FCHannel:PORT<Pt>:SOURce:WWN:DEFAult

Syntax	FCHannel:PORT<Pt>:SOURce:WWN:DEFAult <enable>
Description	This command enables or disables default port WWN.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFAult = ON</i>
Response	None.
Example	FCH:PORT1:SOUR:WWN:DEF ON
Note	

Syntax	FCHannel:PORT<Pt>:SOURce:WWN:DEFAult?
Description	This query returns whether default port WWN is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:SOUR:WWN:DEF? → 1
Note	

14.2.10 FCHannel:PORT<Pt>:SOURce:ID

Syntax	FCHannel:PORT<Pt>:SOURce:ID <id>
Description	This command sets the source ID.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=16777215, DEFAult=0</i>
Response	None.
Example	FCH:PORT1:SOUR:ID 0
Note	

Syntax	FCHannel:PORT<Pt>:SOURce:ID?
Description	This query returns the source ID.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:SOUR:ID? → 0
Note	

14.2.11 FCHannel:PORT<Pt>:DESTination:WWN

Syntax	FCHannel:PORT<Pt>:DESTination:WWN <wwn>
Description	This command sets the destination port WWN.
Parameters	<Pt> = Port number <wwn> = <STRING PROGRAM DATA> Port WWN
Response	None.
Example	FCH:PORT1:DEST:WWN "00-00-00-00-00-00-00-00"
Note	Only the character '-' is accepted as separator.

Syntax	FCHannel:PORT<Pt>:DESTination:WWN?
Description	This query returns the destination port WWN.
Parameter	<Pt> = Port number
Response	<wwn> = <STRING RESPONSE DATA>
Example	FCH:PORT1:DEST:WWN? → "00-00-00-00-00-00-00-00"
Note	

14.2.12 FCHannel:PORT<Pt>:DESTination:ID

Syntax	FCHannel:PORT<Pt>:DESTination:ID <id>
Description	This command sets the destination ID.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=16777215, DEFault=0</i>
Response	None.
Example	FCH:PORT1:DEST:ID 0
Note	

Syntax	FCHannel:PORT<Pt>:DESTination:ID?
Description	This query returns the destination ID.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:DEST:ID? → 0
Note	

14.2.13 FCHannel:PORT<Pt>:DESTination:LOGin

Syntax	FCHannel:PORT<Pt>:DESTination:LOGin
Description	This command activates port login.
Parameters	<Pt> = Port number
Response	None.
Example	FCH:PORT1:DEST:LOG
Note	

14.3 Frame

14.3.1 FChannel:PORT<Pt>:FRAME:FRAMing

Syntax	FChannel:PORT<Pt>:FRAME:FRAMing <type>
Description	This command sets the frame structure.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> FT0: SOF:Data:EOF FT1: SOF:Header:Data:CRC:EOF <i>DEFault = FT1</i>
Response	None.
Example	FCH:PORT1:FRAM:FRAM FT1
Note	

Syntax	FChannel:PORT<Pt>:FRAME:FRAMing?
Description	This query returns the frame structure.
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	FCH:PORT1:FRAM:FRAM? → FT1
Note	

14.3.2 FChannel:PORT<Pt>:FRAME:CONTent

Syntax	FChannel:PORT<Pt>:FRAME:CONTent <content>
Description	This command sets the data content.
Parameters	<Pt> = Port number <content> = <CHARACTER PROGRAM DATA> FOX 5555 PRBS9 PRBS11 PRBS15 PRBS20 PRBS23 PRBS29 PRBS31 BHFTest BCRPat BJTPat BSPat USER32BIT ZERO <i>DEFault = FOX</i>
Response	None.
Example	FCH:PORT1:FRAM:CONT 5555
Note	

Syntax	FChannel:PORT<Pt>:FRAME:CONTent?
Description	This query returns the data content.
Parameter	<Pt> = Port number
Response	<content> = <CHARACTER RESPONSE DATA>
Example	FCH:PORT1:FRAM:CONT? → 5555
Note	

14.3.3 FCHannel:PORT<Pt>:FRAMe:UP32

Syntax	FCHannel:PORT<Pt>:FRAMe:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when CONTent is USER32BIT .
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None.
Example	FCH:PORT1:FRAM:UP32 "0110"
Note	

Syntax	FCHannel:PORT<Pt>:FRAMe:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	FCH:PORT1:FRAM:UP32? → "0110"
Note	

14.3.4 FCHannel:PORT<Pt>:FRAMe:HEADer:SID

Syntax	FCHannel:PORT<Pt>:FRAMe:HEADer:SID <id>
Description	This command sets the Seq ID in the frame header.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=0</i>
Response	None.
Example	FCH:PORT1:FRAM:HEAD:SID #HAE FCH:PORT1:FRAM:HEAD:SID 174
Note	

Syntax	FCHannel:PORT<Pt>:FRAMe:HEADer:SID?
Description	This query returns the Seq ID in the frame header.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:FRAM:HEAD:SID? → 174
Note	

14.3.5 FCHannel:PORT<Pt>:FRAMe:HEADer:OID

Syntax	FCHannel:PORT<Pt>:FRAMe:HEADer:OID <id>
Description	This command sets the OX ID in the frame header.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=65535, DEFault=0</i>
Response	None.
Example	FCH:PORT1:FRAM:HEAD:OID #HAE FCH:PORT1:FRAM:HEAD:OID 174
Note	

Syntax	FCHannel:PORT<Pt>:FRAMe:HEADer:OID?
Description	This query returns the OX ID in the frame header.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:FRAM:HEAD:OID? → 174
Note	

14.3.6 FCHannel:PORT<Pt>:FRAME:HEADer:RID

Syntax	FCHannel:PORT<Pt>:FRAME:HEADer:RID <id>
Description	This command sets the Rx ID in the frame header.
Parameters	<Pt> = Port number <id> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=65535, DEFault=0</i>
Response	None.
Example	FCH:PORT1:FRAM:HEAD:RID #HAE FCH:PORT1:FRAM:HEAD:RID 174
Note	

Syntax	FCHannel:PORT<Pt>:FRAME:HEADer:RID?
Description	This query returns the Rx ID in the frame header.
Parameter	<Pt> = Port number
Response	<id> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:FRAM:HEAD:RID? → 174
Note	

14.4 Generator

14.4.1 FCHannel:PORT<Pt>:TRAFfic:DMODE

Syntax	FCHannel:PORT<Pt>:TRAFfic:DMODE <mode>
Description	This command sets the duration mode for the traffic generator.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> CONTInuous: Continuous FRAMes: Frames SECOnds: Seconds <i>DEFault = CONTInuous</i>
Response	None.
Example	FCH:PORT1:TRAF:DMOD CONT
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:DMODE?
Description	This query returns the duration mode for the traffic generator.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	FCH:PORT1:TRAF:DMOD? → CONT
Note	

14.4.2 FCHannel:PORT<Pt>:TRAFfic:DSEConds

Syntax	FCHannel:PORT<Pt>:TRAFfic:DSEConds <seconds>
Description	This command sets the duration for the traffic generator in seconds.
Parameters	<Pt> = Port number <seconds> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=2000000000, DEFault=1</i>
Response	None.
Example	FCH:PORT1:TRAF:DSEC 1
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:DSEConds?
Description	This query returns the duration for the traffic generator in seconds.
Parameter	<Pt> = Port number
Response	<seconds> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TRAF:DSEC? → 1
Note	

14.4.3 FCHannel:PORT<Pt>:TRAFfic:DFRames

Syntax	FCHannel:PORT<Pt>:TRAFfic:DFRames <frames>
Description	This command sets the duration for the traffic generator in number of frames.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=2000000000, DEFault=1</i>
Response	None.
Example	FCH:PORT1:TRAF:DFR 1
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:DFRames?
Description	This query returns the duration for the traffic generator in number of frames.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TRAF:DFR? → 1
Note	

14.4.4 FCHannel:PORT<Pt>:TRAFfic:ASTGenerator

Syntax	FCHannel:PORT<Pt>:TRAFfic:ASTGenerator <enable>
Description	This command enables or disables automatic start of the transmitter when running a BER measurement.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT1:TRAF:ASTG OFF
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:ASTGenerator?
Description	This query returns whether transmitter automatically starts is enabled or disabled when running a BER measurement.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:TRAF:ASTG? → 0
Note	

14.4.5 FCHannel:TRAFfic:GENerator:STARt

Syntax	FCHannel:TRAFfic:GENerator:STARt
Description	This command starts the traffic generator.
Parameters	<Pt> = Port number
Response	None.
Example	FCH:TRAF:GEN:STAR
Note	This command applies to all ports.

14.4.6 FCHannel:TRAFfic:GENerator:STOP

Syntax	FCHannel:TRAFfic:GENerator:STOP
Description	This command stops the traffic generator.
Parameters	<Pt> = Port number
Response	None.
Example	FCH:TRAF:GEN:STOP
Note	This command applies to all ports.

14.4.7 FCHannel:PORT<Pt>:TRAFfic:GENerator:START

Syntax	FCHannel:PORT<Pt>:TRAFfic:GENerator:START
Description	This command starts the traffic generator.
Parameters	<Pt> = Port number
Response	None.
Example	FCH:PORT1:TRAF:GEN:STAR
Note	This command requires that the Port is enabled (FCHannel:PORT<Pt>:MODE).

14.4.8 FCHannel:PORT<Pt>:TRAFfic:GENerator:STOP

Syntax	FCHannel:PORT<Pt>:TRAFfic:GENerator:STOP
Description	This command stops the traffic generator.
Parameters	<Pt> = Port number
Response	None.
Example	FCH:PORT1:TRAF:GEN:STOP
Note	

14.4.9 FCHannel:PORT<Pt>:TRAFfic:GENerator:STATus?

Syntax	FCHannel:PORT<Pt>:TRAFfic:GENerator:STATus?
Description	This query returns the current status of the traffic generator.
Parameter	<Pt> = Port number
Response	<stat> = <BOOLEAN RESPONSE DATA> 0: Traffic generator inactive 1: Traffic generator active
Example	FCH:PORT1:TRAF:GEN:STAT? → 0
Note	

14.5 Stream

14.5.1 FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:PROFile

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:PROFile <profile>
Description	This command sets the stream Line Load Profile.
Parameters	<Pt> = Port number <profile> = <CHARACTER PROGRAM DATA> CONStant: Constant line load profile RAMP: Ramp line load profile <i>DEFault = CONStant</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:LL:PROF RAMP
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:PROFile?
Description	This query returns the stream Line Load Profile.
Parameter	<Pt> = Port number
Response	<profile> = <CHARACTER RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:LL:PROF? → RAMP
Note	

14.5.2 FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad[:CONStant]

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad[:CONStant] <load>
Description	This command sets the stream Line Load in constant mode. Unit: Percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum=0.0000, MAXimum=100.0000, DEFault=100.0000</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:LL 50
Note	The minimum possible line load is 0.0008.

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad[:CONStant]?
Description	This query returns the stream Line Load in constant mode. Unit: Percentage.
Parameter	<Pt> = Port number
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:LL? → 50
Note	

14.5.3 FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP[:MODE]

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP[:MODE] <mode>
Description	This command sets the ramp mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> KEEPend: Maintain line load level at ramp end REPeat: Repeat ramp INVert: Invert ramp <i>DEFault = INVert</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:LL:RAMP KEEP
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP[:MODE]?
Description	This query returns the ramp mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:LL:RAMP? → KEEP
Note	

14.5.4 FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP:STARt

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP:STARt <load>
Description	This command sets the stream initial line load in ramp mode. Unit: Percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum=0.0000, MAXimum=100.0000, DEFault=0.0000</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:LL:RAMP:STAR 20
Note	The minimum possible line load is 0.0008.

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP:STARt?
Description	This query returns the stream initial line load in ramp mode. Unit: Percentage.
Parameter	<Pt> = Port number
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:LL:RAMP:STAR? → 20
Note	

14.5.5 FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP:END

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP:END <load>
Description	This command sets the stream end line load in ramp mode. Unit: Percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum=0.0000, MAXimum=100.0000, DEFault=0.0000</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:LL:RAMP:END 50
Note	The minimum possible line load is 0.0008.

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP:END?
Description	This query returns the stream end line load in ramp mode. Unit: Percentage.
Parameter	<Pt> = Port number
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:LL:RAMP:END? → 50
Note	

14.5.6 FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP:STEP

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP:STEP <load>
Description	This command sets the stream line load step size, in ramp mode. Unit: Percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum=0.0000, MAXimum=100.0000, DEFault=1.0000</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:LL:RAMP:STEP 2
Note	The minimum possible line load is 0.0008.

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP:STEP?
Description	This query returns the stream line load step size, in ramp mode. Unit: Percentage.
Parameter	<Pt> = Port number
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:LL:RAMP:STEP? → 2
Note	

14.5.7 FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP:DURation

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP:DURation <dur>
Description	This command sets the stream step line load duration in ramp mode. Unit: Seconds.
Parameters	<Pt> = Port number <dur> = <NUMERIC PROGRAM DATA> <i>MINimum=3, MAXimum=3600, DEFault=10</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:LL:RAMP:DUR 5
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LLoad:RAMP:DURation?
Description	This query returns the stream step line load duration in ramp mode. Unit: Seconds.
Parameter	<Pt> = Port number
Response	<dur> = <NR2 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:LL:RAMP:DUR? → 5
Note	

14.5.8 FCHannel:PORT<Pt>:TRAFfic:STReam:FSIZE

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:FSIZE <dur>
Description	This command sets the frame size. Unit: Bytes
Parameters	<Pt> = Port number <dur> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =8 ¹ , <i>MAXimum</i> =3240, <i>DEFault</i> =8
Response	None.
Example	FCH:PORT1:TRAF:STR:FSIZ 8
Note	The frame size must be a multiple of 4. ¹ The minimum allowed frame size varies depending on the port mode. FC400: <i>MINimum</i> = 64 FC800: <i>MINimum</i> = 256 FC1200: <i>MINimum</i> = 256

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:FSIZE?
Description	This query returns the frame size. Unit: Bytes
Parameter	<Pt> = Port number
Response	<dur> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:FSIZ? → 8
Note	

14.5.9 FCHannel:PORT<Pt>:TRAFfic:STReam:LATency[:ENABle]

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LATency[:ENABle] <enable>
Description	This command enables or disables stream latency measurement.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = OFF
Response	None.
Example	FCH:PORT1:TRAF:STR:LAT OFF
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LATency[:ENABle]?
Description	This query returns whether stream latency measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:LAT? → 0
Note	

14.5.10 FCHannel:PORT<Pt>:TRAFfic:STReam:LATency:THResholds[:ENABle]

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LATency:THResholds[:ENABle] <enable>
Description	This command enables or disables latency threshold.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = OFF
Response	None.
Example	FCH:PORT1:TRAF:STR:LAT:THR OFF
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LATency:THResholds[:ENABle]?
Description	This query returns whether latency threshold is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:LAT:THR? → 0
Note	

14.5.11 FCHannel:PORT<Pt>:TRAFfic:STReam:LATency:THResholds:VALue

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LATency:THResholds:VALue <value>
Description	This command sets the latency thresholds. Unit: μ s.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=429496729.5, DEFault=0</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:LAT:THR:VAL 10.5
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:LATency:THResholds:VALue?
Description	This query returns the latency thresholds. Unit: μ s.
Parameter	<Pt> = Port number
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:LAT:THR:VAL? → 10.5
Note	

14.5.12 FCHannel:PORT<Pt>:TRAFfic:STReam:JITTer[:ENABle]

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:JITTer[:ENABle] <enable>
Description	This command enables or disables stream jitter measurement.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:JITT OFF
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:JITTer[:ENABle]?
Description	This query returns whether stream jitter measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:JITT? → 0
Note	

14.5.13 FCHannel:PORT<Pt>:TRAFfic:STReam:JITTer:THResholds[:ENABle]

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:JITTer:THResholds[:ENABle] <enable>
Description	This command enables or disables jitter threshold.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:JITT:THR OFF
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:JITTer:THResholds[:ENABle]?
Description	This query returns whether jitter threshold is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:JITT:THR? → 0
Note	

14.5.14 FCHannel:PORT<Pt>:TRAFfic:STReam:JITTer:THResholds:VALue

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:JITTer:THResholds:VALue <value>
Description	This command sets the jitter threshold. Unit: μ s.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=429496792.5, DEFault=0</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:JITT:THR:VAL 10.5
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:JITTer:THResholds:VALue?
Description	This query returns the jitter threshold. Unit: μ s.
Parameter	<Pt> = Port number
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:JITT:THR:VAL? → 10.5
Note	

14.5.15 FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure[:ENABle]

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure[:ENABle] <enable>
Description	This command enables or disables Service Disruption Measurement.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:BER:SDM OFF
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure[:ENABle]?
Description	This query returns whether Service Disruption Measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:BER:SDM? → 0
Note	

14.5.16 FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure:MDISruption

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure:MDISruption <value>
Description	This command sets the Min Disruption Frames.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 5000, DEFault = 10</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:BER:SDM:MDIS 5
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure:MDISruption?
Description	This query returns the Min Disruption Frames.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:BER:SDM:MDIS? → 5
Note	

14.5.17 FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure:THResholds[:ENABLE]

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure:THResholds[:ENABLE] <enable>
Description	This command enables or disables Service Disruption threshold.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:BER:SDM:THR OFF
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure:THResholds[:ENABLE]?
Description	This query returns whether Service Disruption threshold is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:BER:SDM:THR? → 0
Note	

14.5.18 FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure:THResholds:VALue

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure:THResholds:VALue <value>
Description	This command sets the Service Disruption threshold value. Unit: μ s.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 5000000, DEFault = 50000</i>
Response	None.
Example	FCH:PORT1:TRAF:STR:BER:SDM:THR:VAL 10
Note	

Syntax	FCHannel:PORT<Pt>:TRAFfic:STReam:BER:SDMeasure:THResholds:VALue?
Description	This query returns the Service Disruption threshold value. Unit: μ s.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TRAF:STR:BER:SDM:THR:VAL? → 10
Note	This only applies to Ethernet and Fibre Channel.

14.6 Settings

14.6.1 FCHannel:PORT<Pt>:SETTings:BER:OBAMeasuring

Syntax	FCHannel:PORT<Pt>:SETTings:BER:OBAMeasuring <enable>
Description	This command enables or disables "Only show BER Alarms when measuring".
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	FCH:PORT1:SETT:BER:OBAM ON
Note	This setting applies to all ports.

Syntax	FCHannel:PORT<Pt>:SETTings:BER:OBAMeasuring?
Description	This query returns whether "Only show BER Alarms when measuring" is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:SETT:BER:OBAM? → 1
Note	This setting applies to all ports.

14.6.2 FCHannel:PORT<Pt>:SETTings:BER:IAFFilter

Syntax	FCHannel:PORT<Pt>:SETTings:BER:IAFFilter <enable>
Description	This command enables or disables "Include addresses in frame filter on receiver".
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>ON</i>
Response	None.
Example	FCH:PORT1:SETT:BER:IAFF OFF
Note	This setting applies to all ports.

Syntax	FCHannel:PORT<Pt>:SETTings:BER:IAFFilter?
Description	This query returns whether "Include addresses in frame filter on receiver" is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:SETT:BER:IAFF? → 0
Note	This setting applies to all ports.

14.6.3 FCHannel:PORT<Pt>:SETTings:BER:CLFrames

Syntax	FCHannel:PORT<Pt>:SETTings:BER:CLFrames <enable>
Description	This command enables or disables "Count lost frames as pattern errors".
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	FCH:PORT1:SETT:BER:CLF ON
Note	This setting applies to all ports.

Syntax	FCHannel:PORT<Pt>:SETTings:BER:CLFrames?
Description	This query returns whether "Count lost frames as pattern errors" is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:SETT:BER:CLF? → 1
Note	This setting applies to all ports.

14.6.4 FCHannel:PORT<Pt>:SETTings:BER:HIDeframeloss

Syntax	FCHannel:PORT<Pt>:SETTings:BER:HIDeframeloss <enable>
Description	This command enables or disables "Ignore the Frame/Pattern loss secs on BERT statistics".
Parameter	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT1:SETT:BER:HID ON
Note	This setting applies to all ports.

Syntax	FCHannel:PORT<Pt>:SETTings:BER:HIDeframeloss?
Description	This query returns whether "Ignore the Frame/Pattern loss secs on BERT statistics" is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:SETT:BER:HID? → 1
Note	This setting applies to all ports.

14.7 Thresholds

14.7.1 FCHannel:PORT<Pt>:THResholds[:ENABle]

Syntax	FCHannel:PORT<Pt>:THResholds[:ENABle] <enable>
Description	This command enables or disables thresholds.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT1:THR OFF
Note	

Syntax	FCHannel:PORT<Pt>:THResholds[:ENABle]?
Description	This query returns whether thresholds are enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:THR? → 0
Note	

14.7.2 FCHannel:PORT<Pt>:THResholds:SElect

Syntax	FCHannel:PORT<Pt>:THResholds:SElect <type>, <enable>
Description	This command enables or disables the specific threshold type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> ALL: All thresholds UTIL: Utilization THR: Throughput ERR: Errored frames UNDER: Undersized frames OVER: Oversized frames CRC: CRC errored frames IFG: IFG violations SYMBol: Symbol errors CRD: CRD errors <i>DEFault = ALL</i> <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT1:THR:SEL UTIL, ON
Note	

Syntax	FCHannel:PORT<Pt>:THResholds:SElect? <type>
Description	This query returns whether the specific threshold type is enabled or disabled.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA>
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT1:THR:SEL? UTIL → 1
Note	

14.7.3 FChannel:PORT<Pt>:THResholds:VALue

Syntax	FChannel:PORT<Pt>:THResholds:VALue <type>, <compare>, <value>
Description	This command sets the level for the specific threshold type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> UTIL: Utilization¹ THR: Throughput² ERR: Errored frames UNDER: Undersized frames OVER: Oversized frames CRC: CRC errored frames IFG: IFG violations SYMBOL: Symbol errors CRD: CRD errors <compare> = <CHARACTER PROGRAM DATA> GT: Greater than LT: Less than GTEQ: Greater than or equal to LTEQ: Less than or equal to <i>DEFault = LT</i> <value> = <NUMERIC PROGRAM DATA> Absolute values: Decimals are rounded. Maximum is 4000000000 Percentage values: Allows one decimal, Maximum is 100.0 <i>DEFault = 0, MINimum = 0</i> <i>Allowed Suffixes = PCT</i>
Response	None.
Example	FCH:PORT1:THR:VAL UTIL, GT, 10.5PCT
Note	¹ Utilization only supports percentage values. ² Throughput only supports absolute values, the unit is MBPS, and has one decimal. Maximum = 10000.0

Syntax	FChannel:PORT<Pt>:THResholds:VALue? <type>
Description	This query returns the level for the specific threshold type.
Parameter	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA>
Response	<compare> = <CHARACTER RESPONSE DATA> <value> = <NR2 NUMERIC RESPONSE DATA> Count or percentage.
Example	FCH:PORT1:THR:VAL? UTIL → GT, 10.5PCT
Note	

14.8 Follow

14.8.1 FChannel:PORT<Pt>:FOLLow:GENerator

Syntax	FChannel:PORT<Pt>:FOLLow:GENerator <enable>
Description	This command enables or disables generator setup for port <Pt> to follow PORT1.
Parameter	<Pt> = Port number (2-4) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT2:FOLL:GEN OFF
Note	

Syntax	FCHannel:PORT<Pt>:FOLLow:GENerator?
Description	This query returns whether it is enabled or disabled that generator setup for port <Pt> follows PORT1.
Parameter	<Pt> = Port number (2-4)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT2:FOLL:GEN? → 0
Note	

14.8.2 FCHannel:PORT<Pt>:FOLLow:THResholds

Syntax	FCHannel:PORT<Pt>:FOLLow:THResholds <enable>
Description	This command enables or disables thresholds setup for port <Pt> to follow PORT1.
Parameter	<Pt> = Port number (2-4) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT2:FOLL:THR OFF
Note	

Syntax	FCHannel:PORT<Pt>:FOLLow:THResholds?
Description	This query returns whether it is enabled or disabled that thresholds setup for port <Pt> follows PORT1.
Parameter	<Pt> = Port number (2-4)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT2:FOLL:THR? → 0
Note	

14.8.3 FCHannel:PORT<Pt>:FOLLow:FRAMe

Syntax	FCHannel:PORT<Pt>:FOLLow:FRAMe <enable>
Description	This command enables or disables frame setup for port <Pt> to follow PORT1.
Parameter	<Pt> = Port number (2-4) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT2:FOLL:FRAM OFF
Note	

Syntax	FCHannel:PORT<Pt>:FOLLow:FRAMe?
Description	This query returns whether it is enabled or disabled that frame setup for port <Pt> follows PORT1.
Parameter	<Pt> = Port number (2-4)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT2:FOLL:FRAM? → 0
Note	

14.8.4 FCHannel:PORT<Pt>:FOLLow:STReam

Syntax	FCHannel:PORT<Pt>:FOLLow:STReam <enable>
Description	This command enables or disables stream setup for port <Pt> to follow PORT1
Parameter	<Pt> = Port number (2-4) <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	FCH:PORT2:FOLL:STR OFF
Note	

Syntax	FCHannel:PORT<Pt>:FOLLow:STReam?
Description	This query returns whether it is enabled or disabled that stream setup for port <Pt> to follows PORT1.
Parameter	<Pt> = Port number (2-4)
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	FCH:PORT2:FOLL:STR? → 0
Note	

14.9 Stimuli

14.9.1 FCHannel:PORT<Pt>:STIMuli:ALARm

Syntax	FCHannel:PORT<Pt>:STIMuli:ALARm <alarm>
Description	This command sets the alarm type.
Parameters	<Pt> = Port number <alarm> = <CHARACTER PROGRAM DATA> NONE: No alarm LRESet: List reset LRResponse: List reset response NOPerational: Not operational OFFLine: Offline <i>DEFault = NONE</i>
Response	None.
Example	FCH:PORT1:STIM:ALAR LRES
Note	

Syntax	FCHannel:PORT<Pt>:STIMuli:ALARm?
Description	This query returns the alarm type.
Parameter	<Pt> = Port number
Response	<alarm> = <CHARACTER RESPONSE DATA>
Example	FCH:PORT1:STIM:ALAR? → LRES
Note	

14.9.2 FCHannel:PORT<Pt>:STIMuli:ERRor

Syntax	FCHannel:PORT<Pt>:STIMuli:ERRor <error>
Description	This command sets the error type.
Parameters	<Pt> = Port number <error> = <CHARACTER PROGRAM DATA> NONE: No error BIT: Bit SYMBol: Symbol RRDY: R_RDY CRC: CRC BLOCK: Block <i>DEFault = NONE</i>
Response	None.
Example	FCH:PORT1:STIM:ERR BIT
Note	

Syntax	FCHannel:PORT<Pt>:STIMuli:ERRor?
Description	This query returns the error type.
Parameter	<Pt> = Port number
Response	<error> = <CHARACTER RESPONSE DATA>
Example	FCH:PORT1:STIM:ERR? → BIT
Note	

14.9.3 FCHannel:PORT<Pt>:STIMuli:EINSerTion

Syntax	FCHannel:PORT<Pt>:STIMuli:EINSerTion <mode>
Description	This command sets the error insertion mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Error insertion disabled MANual B1: Burst every 1 second B10: Burst every 10 seconds BE2: Burst · 1E-02 BE3: Burst · 1E-03 BE4: Burst · 1E-04 BE5: Burst · 1E-05 BE6: Burst · 1E-06 BE7: Burst · 1E-07 DEFault = OFF
Response	None.
Example	FCH:PORT1:STIM:EINS MAN
Note	

Syntax	FCHannel:PORT<Pt>:STIMuli:EINSerTion?
Description	This query returns the error insertion mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	FCH:PORT1:STIM:EINS? → MAN
Note	

14.9.4 FCHannel:PORT<Pt>:STIMuli:EBLength

Syntax	FCHannel:PORT<Pt>:STIMuli:EBLength <length>
Description	This command sets the error burst length.
Parameters	<Pt> = Port number <length> = <NUMERIC PROGRAM DATA> MINimum = 1, MAXimum = 4000¹, DEFault = 1
Response	None.
Example	FCH:PORT1:STIM:EBL 128
Note	¹ The following error type have other MAXimum value. RRDY: MAXimum = 500 SYMBOL: MAXimum = 1000 BLOCK: MAXimum = 256

Syntax	FCHannel:PORT<Pt>:STIMuli:EBLength?
Description	This query returns the error burst length.
Parameter	<Pt> = Port number
Response	<length> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:STIM:EBL? → 128
Note	

14.9.5 FCHannel:PORT<Pt>:STIMuli:FOFFset

Syntax	FCHannel:PORT<Pt>:STIMuli:FOFFset <offset>
Description	This command sets the frequency offset for the clock source. Unit: ppm.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> MT1000A: <i>MINimum=-100, MAXimum=100, DEFault=0</i> MT1100A, MT1040A: <i>MINimum=-200.0, MAXimum=200.0, DEFault = 0</i>
Response	None
Example	FCH:PORT1:STIM:FOFF 0
Note	The offset is applied to the internal clock source only.

Syntax	FCHannel:PORT<Pt>:STIMuli:FOFFset?
Description	This query returns the frequency offset for the clock source. Unit: ppm.
Parameter	<Pt> = Port number
Response	MT1000A: <offset> = <NR1 NUMERIC RESPONSE DATA> MT1100A, MT1040A: <offset> = <NR2 NUMERIC RESPONSE DATA>
Example	MT1100A, MT1040A: FCH:PORT1:STIM:FOFF? → 0.0
Note	

14.10 Results

14.10.1 FCHannel:PORT<Pt>:IFETch?

Syntax	FCHannel:PORT<Pt>:IFETch? <parameter>
Description	This query fetches an Fibre Channel interval if available.
Parameters	<Pt> = Port number ({<parameter>} + {,}*) = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. BERT BPBC: Pattern bit count. Response: <Count> BPE: Pattern errors. Response: <Count>,<Ratio> BFL: Frame loss. Response: <Count> BFLS: Frame loss seconds. Response: <Count> BPLS: Pattern loss seconds. Response: <Count> BL: Latency (microseconds). Response: <Min>,<Max>,<Avg> BJ: Jitter (microseconds). Response: <Min>,<Max>,<Avg> BSD: Service disruption (microseconds). Response: <Max>,<Avg>,<Count> Reflector RFFRM: Reflected frames. Response: <Count>,<Ratio> RFBYT: Reflected bytes. Response: <Count> NRFFR: Not reflected frames. Response: <Count>,<Ratio> NRFBY: Not reflected bytes. Response: <Count> TOFRM: Total frames. Response: <Count>,<Ratio> TOBYT: Reflected bytes. Response: <Count> Link SER: Symbol errors. Response: <Count> BLER: Block errors. Response: <Count> RRDY: R_RDY. Response: <CountTx>,<CountRx> LR: Link reset. Response: <Count> LRR: Link reset response. Response: <Count> NOS: Not operational seconds. Response: <Count> OLS: Offline seconds. Response: <Count> Frame FRM: Frames. Response: <CountTx>,<CountRx> BYT: Bytes. Response: <CountTx>,<CountRx> IV: IFG violations. Response: <Count>,<Ratio> CRC: CRC errors. Response: <Count>,<Ratio> SEFR: Symbol error frames. Response: <Count>,<Ratio> CRD: CRD errors. Response: <Count>,<Ratio> TER: Terminate errors. Response: <Count>,<Ratio> EFRM: Errored frames. Response: <Count>,<Ratio> RFRM: Reflected frames. Response: <Count>,<Ratio> RBYT: Reflected bytes. Response: <Count> NRFRM: Not reflected frames. Response: <Count>,<Ratio> NRBYT: Not reflected bytes. Response: <Count> TFRM: Total frames. Response: <Count>,<Ratio> TBYT: Total bytes. Response: <Count> NCR: No credit. Response: <Count> Performance LRAT: Line rate (bps). Response: <Min>,<Max>,<Avg> FRAT: Frame rate (fps). Response: <Min>,<Max>,<Avg> UTIL: Utilization. Response: <Min%>,<Max%>,<Avg%> THR: Throughput (bps). Response: <Min>,<Max>,<Avg> Size Distribution UNFR: Undersized frames. Response: <Count>,<Ratio> R28: 28-196. Response: <Count>,<Ratio> R200: 200-396. Response: <Count>,<Ratio>

continued on next page...

...continued from previous page

	R400: 400-596. Response: <Count>,<Ratio> R600: 600-796. Response: <Count>,<Ratio> R800: 800-996. Response: <Count>,<Ratio> R1000: 1000-1196. Response: <Count>,<Ratio> R1200: 1200-1396. Response: <Count>,<Ratio> R1400: 1400-1596. Response: <Count>,<Ratio> R1600: 1600-1796. Response: <Count>,<Ratio> R1800: 1800-1996. Response: <Count>,<Ratio> R2000: 2000-2196. Response: <Count>,<Ratio> OVFR: Oversized frames. Response: <Count>,<Ratio> FSIZ: Frame size (bytes). Response: <Avg>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Expression format: Numeric List Each result is formatted according to the specification in the parameter field. Values that are not relevant or applicable for the current measurement return NaN (section 1.6.1).
Examples	FCH:PORT1:IFET? (UTIL) → (0.0000,50.0000,41.1117) FCH:PORT1:IFET? (BPE,BPLS) → (13944487,0.000979),(104)
Notes	This command fetches the results from the interval selected using the MEASurement:SEtup:SElect command (see section 18.2.2). If the requested result is not available, NaN (section 1.6.1) is returned. If there is one or more results, the last ", " is always removed.

14.10.2 FCHannel:PORT<Pt>:TFETch?

Syntax	FCHannel:PORT<Pt>:TFETch? <parameter>
Description	This query fetches thresholds for a Fibre Channel interval if available.
Parameters	<Pt> = Port number {(<parameter>)+{,*}} = <EXPRESSION PROGRAM DATA> Frame IV: IFG violations. CRC: CRC errors. SEFR: Symbol error frames. CRD: CRD errors. EFRM: Errored frames Performance UTIL: Utilization (pct). THR: Throughput (bps). Size Distribution UNFR: Undersized frames. OVFR: Oversized frames.
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Expression format: Numeric List <result> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PORT1:TFET? (UTIL,UNFR) → (1),(0)
Note	This query fetches from the interval selected using the MEASurement:SEtup:SElect command (see section 18.2.2).

14.11 Status

14.11.1 FCHannel:STATus:PORT<Pt>:AESummary[:EVENT]?

Syntax	FCHannel:STATus:PORT<Pt>:AESummary[:EVENT]?
Description	This query returns the Fibre Channel alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of FCH:STAT:PORT<Pt>:ALAR[:EVEN]? DB2 (2) = Summary bit of FCH:STAT:PORT<Pt>:ERR[:EVEN]? DB3 - DB16 = NOT USED
Example	FCH:STAT:PORT1:AES? → 1
Note	

14.11.2 FCHannel:STATus:PORT<Pt>:AESummary:CONDition?

Syntax	FCHannel:STATus:PORT<Pt>:AESummary:CONDition?
Description	This query returns the Fibre Channel alarms and errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as FCH:STAT:PORT<Pt>:AESummary[:EVEN]?
Example	FCH:STAT:PORT1:AES:COND? → 2
Note	

14.11.3 FCHannel:STATus:PORT<Pt>:ALARm[:EVENT]?

Syntax	FCHannel:STATus:PORT<Pt>:ALARm[:EVENT]?
Description	This query returns the alarms event register.
Parameters	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Signal Present DB2 (2) = Sync Acquired DB3 (4) = Link DB4 (8) = Fabric Login DB5 (16) = Port Login DB6 (32) = Pattern Sync DB7 (64) = ELP DB8 - DB16 = NOT USED
Example	FCH:STAT:PORT1:ALAR? → 2
Notes	

14.11.4 FChannel:STATus:PORT<Pt>:ALARm:CONDition?

Syntax	FChannel:STATus:PORT<Pt>:ALARm:CONDition?
Description	This query returns the alarms condition register.
Parameters	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Signal Present DB2 (2) = Sync Acquired DB3 (4) = Link DB4 (8) = Fabric Login DB5 (16) = Port Login DB6 (32) = Pattern Sync DB7 (64) = ELP DB8 - DB16 = NOT USED
Example	FCH:STAT:PORT1:ALAR:COND? → 4
Notes	

14.11.5 FChannel:STATus:PORT<Pt>:ERRor[:EVENT]?

Syntax	FChannel:STATus:PORT<Pt>:ERRor[:EVENT]?
Description	This query returns the errors event register.
Parameters	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Pattern error DB2 (2) = Traffic error DB3 - DB16 = NOT USED
Example	FCH:STAT:PORT1:ERR? → 1
Notes	

14.11.6 FChannel:STATus:PORT<Pt>:ERRor:CONDition?

Syntax	FChannel:STATus:PORT<Pt>:ERRor:CONDition?
Description	This query returns the errors condition register.
Parameters	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Pattern error DB2 (2) = Traffic error DB3 - DB16 = NOT USED
Example	FCH:STAT:PORT1:ERR:COND? → 1
Notes	

14.11.7 FChannel:STATus:PORT<Pt>:SID?

Syntax	FChannel:STATus:PORT<Pt>:SID?
Description	This query returns the source ID if Login is enabled.
Parameter	<Pt> = Port number
Response	<link> = <HEXADECIMAL NUMERIC RESPONSE DATA _i >
Example	FCH:STAT:PORT1:SID? → #H11
Note	NaN (section 1.6.1) is returned if Login is not enabled or port is off.

14.11.8 FChannel:STATus:PORT<Pt>:DID?

Syntax	FChannel:STATus:PORT<Pt>:DID?
Description	This query returns the destination ID if Login is enabled.
Parameter	<Pt> = Port number
Response	<link> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	FCH:STAT:PORT1:DID? → #H22
Note	NaN (section 1.6.1) is returned if Login is not enabled or port is off.

14.11.9 FCHannel:STATus:PORT<Pt>:PDEViation?

Syntax	FCHannel:STATus:PORT<Pt>:PDEViation?
Description	This query returns physical deviation. Units: ppm and bps.
Parameter	<Pt> = Port number
Response	<ppm> = <NR1 NUMERIC RESPONSE DATA>
	<bps> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:STAT:PORT1:PDEV? → 0, 0
Note	

14.12 Performance Test

14.12.1 FCHannel:PERF:STARt

Syntax	FCHannel:PERF:STARt
Description	This command starts the Performance Test measurement.
Parameter	None.
Response	None.
Example	FCH:PERF:STAR
Note	

14.12.2 FCHannel:PERF:STOP

Syntax	FCHannel:PERF:STOP
Description	This command stops the Performance Test measurement.
Parameter	None.
Response	None.
Example	FCH:PERF:STOP
Note	

14.12.3 FCHannel:PERF:SETup:GENeral:MODE

Syntax	FCHannel:PERF:SETup:GENeral:MODE <mode>
Description	This command sets the Performance Test test mode.
Parameter	<mode> = <CHARACTER PROGRAM DATA> PTP: Port-to-Port LOOP: Loopback <i>DEFault</i> = PTP
Response	None.
Examples	FCH:PERF:SET:GEN:MODE PTP FCH:PERF:SET:GEN:MODE LOOP
Note	

Syntax	FCHannel:PERF:SETup:GENeral:MODE?
Description	This query returns the Performance Test test mode.
Parameter	None.
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:GEN:MODE? → PTP
Note	

14.12.4 FCHannel:PERF:SETup:GENeral:TSElection

Syntax	FCHannel:PERF:SETup:GENeral:TSElection <test>
Description	This command sets the test selection to be executed.
Parameter	({<test>} * {,}*) = <EXPRESSION PROGRAM DATA> THRoughput: Throughput TRPRofile: Traffic Profile LATency: Latency BURSt: Burst CREdit: Credit
Response	None.
Example	FCH:PERF:SET:GEN:TSEL (THR,LAT,BURS)
Note	

Syntax	FCHannel:PERF:SETup:GENeral:TSElection?
Description	This query returns the test selection that will be executed.
Parameter	None.
Response	{(<test>),}* = <EXPRESSION RESPONSE DATA>
Example	FCH:PERF:SET:GEN:TSEL? → (THR,LAT,BURS)
Note	

14.12.5 FCHannel:PERF:SETup:GENeral:TCLayer

Syntax	FCHannel:PERF:SETup:GENeral:TCLayer <layer>
Description	This command selects the throughput calculation layer.
Parameter	<layer> = <CHARACTER PROGRAM DATA> LR: At line rate L1: At frame layer L2: At data layer <i>DEFault</i> = LR
Response	None.
Example	FCH:PERF:SET:GEN:TCL LR
Note	

Syntax	FCHannel:PERF:SETup:GENeral:TCLayer?
Description	This query returns the throughput calculation layer.
Parameter	None.
Response	<layer> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:GEN:TCL? → LR
Note	

14.12.6 FCHannel:PERF:SETup:GENeral:TTPe

Syntax	FCHannel:PERF:SETup:GENeral:TTPe <layer>
Description	This command sets the throughput type.
Parameter	<type> = <CHARACTER PROGRAM DATA> AVG: Average throughput MAX: Maximum throughput <i>DEFault</i> = MAX
Response	None.
Example	FCH:PERF:SET:GEN:TTP AVG
Note	

Syntax	FCHannel:PERF:SETup:GENeral:TTPe?
Description	This query returns the throughput type.
Parameter	None.
Response	<layer> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:GEN:TTP? → AVG
Note	

14.12.7 FChannel:PERF:SETup:FSIZe:MODE

Syntax	FChannel:PERF:SETup:FSIZe:MODE <mode>
Description	This command sets the Performance Test frame size mode.
Parameter	None. <mode> = <CHARACTER PROGRAM DATA> USER: User defined STEPped: Stepped CONStant: Constant <i>DEFault = USER</i>
Response	None.
Example	FCH:PERF:SET:FSIZ:MODE CONS
Note	

Syntax	FChannel:PERF:SETup:FSIZe:MODE?
Description	This query returns the Performance Test frame size mode.
Parameter	None.
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:FSIZ:MODE? → CONS
Note	

14.12.8 FChannel:PERF:SETup:FSIZe:USER

Syntax	FChannel:PERF:SETup:FSIZe:USER {<size>}*
Description	This command sets the Performance Test user defined frame size(s).
Parameter	({<size>} * {, }*) = <EXPRESSION PROGRAM DATA> 64: 64 bytes 128: 128 bytes 256: 256 bytes 512: 512 bytes 768: 768 bytes 1024: 1024 bytes 1280: 1280 bytes 2140: 2140 bytes JUMB: Jumbo frame size use :JUMBo to define.
Response	None.
Example	FCH:PERF:SET:FSIZ:USER (64,256,JUMB)
Note	

Syntax	FChannel:PERF:SETup:FSIZe:USER?
Description	This query returns the Performance Test user defined frame size(s).
Parameter	None.
Response	{(<size>),}* = <EXPRESSION RESPONSE DATA> <size> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:FSIZ:USER? → (64,256,JUMB)
Note	

14.12.9 FChannel:PERF:SETup:FSIZe:JUMBo

Syntax	FChannel:PERF:SETup:FSIZe:JUMBo <size>
Description	This command sets the Performance Test jumbo frame size.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum = 2168, MAXimum = 3240, DEFault = 2168</i>
Response	None.
Example	FCH:PERF:SET:FSIZ:JUMB 2168
Note	

Syntax	FCHannel:PERF:SETup:FSIZe:JUMBo?
Description	This query returns the Performance Test jumbo frame size.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:FSIZ:JUMB? → 2168
Note	

14.12.10 FCHannel:PERF:SETup:FSIZe:BEGin

Syntax	FCHannel:PERF:SETup:FSIZe:BEGin <size>
Description	This command sets the Performance Test begin frame size for stepped mode.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum = 40, MAXimum = 3240, DEFault = 64</i>
Response	None.
Example	FCH:PERF:SET:FSIZ:BEG 128
Note	

Syntax	FCHannel:PERF:SETup:FSIZe:BEGin?
Description	This query returns the Performance Test begin frame size for stepped mode.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:FSIZ:BEG? → 128
Note	

14.12.11 FCHannel:PERF:SETup:FSIZe:END

Syntax	FCHannel:PERF:SETup:FSIZe:END <size>
Description	This command sets the Performance Test end frame size for stepped mode.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum = 40, MAXimum = 3240, DEFault = 2140</i>
Response	None.
Example	FCH:PERF:SET:FSIZ:END 128
Note	

Syntax	FCHannel:PERF:SETup:FSIZe:END?
Description	This query returns the Performance Test end frame size for stepped mode.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:FSIZ:END? → 128
Note	

14.12.12 FCHannel:PERF:SETup:FSIZe:STEP

Syntax	FCHannel:PERF:SETup:FSIZe:STEP <size>
Description	This command sets the Performance Test step frame size for stepped mode.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 3240, DEFault = 256</i>
Response	None.
Example	FCH:PERF:SET:FSIZ:STEP 128
Note	

Syntax	FCHannel:PERF:SETup:FSIZe:STEP?
Description	This query returns the Performance Test step frame size for stepped mode.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:FSIZ:STEP? → 128
Note	

14.12.13 FCHannel:PERF:SETup:FSIZe:CONStant

Syntax	FCHannel:PERF:SETup:FSIZe:CONStant <size>
Description	This command sets the Performance Test frame size for constant mode.
Parameter	<size> = <NUMERIC PROGRAM DATA> <i>MINimum = 40, MAXimum = 3240, DEFault = 2140</i>
Response	None.
Example	FCH:PERF:SET:FSIZ:CONS 128
Note	

Syntax	FCHannel:PERF:SETup:FSIZe:CONStant?
Description	This query returns the Performance Test frame size for constant mode.
Parameter	None.
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:FSIZ:CONS? → 128
Note	

14.12.14 FCHannel:PERF:SETup:PORT<Pt>:THRoughput:LLoad:MAXimum

Syntax	FCHannel:PERF:SETup:PORT<Pt>:THRoughput:LLoad:MAXimum <load>
Description	This command sets the maximum line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0008, MAXimum = 100.0000, DEFault = 100.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	FCH:PERF:SET:PORT1:THR:LL:MAX 10
Notes	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT. :MAXimum must be larger or equal to :MINimum.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:THRoughput:LLoad:MAXimum? [<suffix>]
Description	This query returns the maximum line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:THR:LL:MAX? → 10
Note	

14.12.15 FCHannel:PERF:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:MODE

Syntax	FCHannel:PERF:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:MODE <mode>
Description	This command sets the auto search mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> SMARt: Smart search BINary: Binary search DEFault = SMARt
Response	None.
Example	FCH:PERF:SET:PORT1:THR:LL:ASE:MODE BIN
Note	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:MODE?
Description	This query returns the auto search mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:THR:LL:ASE:MODE? → BIN
Note	

14.12.16 FCHannel:PERF:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:RESolution

Syntax	FCHannel:PERF:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:RESolution <res>
Description	This command sets the auto search resolution.
Parameters	<Pt> = Port number <res> = <CHARACTER PROGRAM DATA> 01: 0.1% 1: 1% 10: 10% DEFault = 01
Response	None.
Example	FCH:PERF:SET:PORT1:THR:LL:ASE:RES 10
Note	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:THRoughput:LLoad:ASEarch:RESolution?
Description	This query returns the auto search resolution.
Parameter	<Pt> = Port number
Response	<res> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:THR:LL:ASE:RES? → 10
Note	

14.12.17 FCHannel:PERF:SETup:PORT<Pt>:THRoughput:DURation:STEP

Syntax	FCHannel:PERF:SETup:PORT<Pt>:THRoughput:DURation:STEP <step>
Description	This command sets the step duration. Unit: seconds.
Parameters	<Pt> = Port number <step> = <NUMERIC PROGRAM DATA> MINimum = 3, MAXimum = 100000000, DEFault = 10
Response	None.
Example	FCH:PERF:SET:PORT1:THR:DUR:STEP 5
Note	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:THRoughput:DURation:STEP?
Description	This query returns the step duration. Unit: Seconds.
Parameter	<Pt> = Port number
Response	<step> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:THR:DUR:STEP? → 5
Note	

14.13 Performance Test - Traffic Profile

14.13.1 FCHannel:PERF:SETup:PORT<Pt>:PROFile:LLoad:MINimum

Syntax	FCHannel:PERF:SETup:PORT<Pt>:PROFile:LLoad:MINimum <load>
Description	This command sets the minimum line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0008, MAXimum = 100.0000, DEFault = 10.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	FCH:PERF:SET:PORT1:PROF:LL:MIN 10
Notes	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT. :MINimum must be smaller or equal to :MAXimum.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:PROFile:LLoad:MINimum? [<suffix>]
Description	This query returns the minimum line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:PROF:LL:MIN? → 10
Note	

14.13.2 FCHannel:PERF:SETup:PORT<Pt>:PROFile:LLoad:MAXimum

Syntax	FCHannel:PERF:SETup:PORT<Pt>:PROFile:LLoad:MAXimum <load>
Description	This command sets the maximum line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0008, MAXimum = 100.0000, DEFault = 100.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	FCH:PERF:SET:PORT1:PROF:LL:MAX 10
Notes	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT. :MAXimum must be larger or equal to :MINimum.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:PROFile:LLoad:MAXimum? [<suffix>]
Description	This query returns the maximum line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:PROF:LL:MAX? → 10
Note	

14.13.3 FCHannel:PERF:SETup:PORT<Pt>:PROFile:LLoad:STEP

Syntax	FCHannel:PERF:SETup:PORT<Pt>:PROFile:LLoad:STEP <load>
Description	This command sets the step line load percentage.
Parameters	<Pt> = Port number <load> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0001, MAXimum = 100.0000, DEFault = 10.0000</i> <i>Allowed suffixes = PCT, MBPS, KBPS. Default = PCT</i>
Response	None.
Example	FCH:PERF:SET:PORT1:PROF:LL:STEP 10
Notes	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test. MINimum, MAXimum and DEFault are all in PCT.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:PROFile:LLoad:STEP? [<suffix>]
Description	This query returns the step line load percentage.
Parameters	<Pt> = Port number <suffix> = <CHARACTER PROGRAM DATA> PCT: Percent KBPS: Kilo bit per second MBPS: Mega bit per second <i>DEFault = PCT</i>
Response	<load> = <NR2 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:PROF:LL:STEP? → 10
Note	

14.13.4 FCHannel:PERF:SETup:PORT<Pt>:PROFile:DURation:STEP

Syntax	FCHannel:PERF:SETup:PORT<Pt>:PROFile:DURation:STEP <step>
Description	This command sets the step duration. Unit: Seconds.
Parameters	<Pt> = Port number <step> = <NUMERIC PROGRAM DATA> <i>MINimum = 3, MAXimum = 100000000, DEFault = 10</i>
Response	None.
Example	FCH:PERF:SET:PORT1:PROF:DUR:STEP 5
Note	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:PROFile:DURation:STEP?
Description	This query returns the step duration. Unit: Seconds.
Parameter	<Pt> = Port number
Response	<step> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:PROF:DUR:STEP? → 5
Note	

14.14 Performance Test - Latency

14.14.1 FCHannel:PERF:SETup:PORT<Pt>:LATency:DURation:STEP

Syntax	FCHannel:PERF:SETup:PORT<Pt>:LATency:DURation:STEP <step>
Description	This command sets the step duration. Unit: Seconds.
Parameters	<Pt> = Port number <step> = <NUMERIC PROGRAM DATA> <i>MINimum = 3, MAXimum = 100000000, DEFault = 10</i>
Response	None.
Example	FCH:PERF:SET:PORT1:LAT:DUR:STEP 5
Note	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:LATency:DURation:STEP?
Description	This query returns the step duration. Unit: Seconds.
Parameter	<Pt> = Port number
Response	<step> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:LAT:DUR:STEP? → 5
Note	

14.15 Performance Test - Burst

14.15.1 FChannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:MODE

Syntax	FChannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:MODE <mode>
Description	This command sets the decision method of Frames per Burst (Burst Length).
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> ASEarch: Auto Search STEPped: Stepped <i>DEFault</i> = <i>ASEarch</i>
Response	None.
Example	FCH:PERF:SET:PORT1:BURS:FPB:MODE ASE
Note	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	FChannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:MODE?
Description	This query returns the decision method of Frames per Burst (Burst Length).
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:BURS:FPB:MODE? → ASE
Note	

14.15.2 FChannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:BEGin

Syntax	FChannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:BEGin <size>
Description	This command sets the Performance Test burst begin size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 1, <i>MAXimum</i> = 2000000000, <i>DEFault</i> = 100
Response	None.
Example	FCH:PERF:SET:PORT1:BURS:FPB:BEG 10
Note	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	FChannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:BEGin?
Description	This query returns the Performance Test burst begin size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:BURS:FPB:BEG? → 10
Note	

14.15.3 FChannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:END

Syntax	FChannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:END <size>
Description	This command sets the Performance Test burst end size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = 1, <i>MAXimum</i> = 2000000000, <i>DEFault</i> = 2000
Response	None.
Example	FCH:PERF:SET:PORT1:BURS:FPB:END 20
Note	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:END?
Description	This query returns the Performance Test burst end size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:BURS:FPB:END? → 20
Note	

14.15.4 FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:STEP

Syntax	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:STEP <size>
Description	This command sets the Performance Test burst step size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 2000000000, DEFault = 100</i>
Response	None.
Example	FCH:PERF:SET:PORT1:BURS:FPB:STEP 5
Note	In Port-to-Port test PORT1 setup is used. PORT2 setup can be set but will be ignored during the test.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:STEP?
Description	This query returns the Performance Test burst step size.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:BURS:FPB:STEP? → 5
Note	

14.15.5 FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:MODE

Syntax	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:MODE <mode>
Description	This command sets the frames per burst auto search mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> SMART: Smart search BINary: Binary search <i>DEFault = SMART</i>
Response	None.
Example	FCH:PERF:SET:PORT1:BURS:FPB:ASE:MODE SMAR
Note	This setting is used when frames per burst mode is auto search.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:MODE?
Description	This query returns the frames per burst auto search mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:BURS:FPB:ASE:MODE? → SMAR
Note	

14.15.6 FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:RESolution

Syntax	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:RESolution <resolution>
Description	This command sets the frames per burst auto search resolution.
Parameters	<Pt> = Port number <resolution> = <CHARACTER PROGRAM DATA> PM1: 1 per mille (0.1%) PM10: 10 per mille (1.0%) PM100: 100 per mille (10.0%) <i>DEFault = PM1</i>
Response	None.
Example	FCH:PERF:SET:PORT1:BURS:FPB:ASE:RES PM10
Note	This setting is used when frames per burst mode is auto search.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:BURSt:FPBurst:ASEarch:RESolution?
Description	This query returns the frames per burst auto search resolution.
Parameter	<Pt> = Port number
Response	<resolution> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:BURS:FPB:ASE:RES? → PM10
Note	

14.16 Performance Test - Credit

14.16.1 FCHannel:PERF:SETup:PORT<Pt>:CREDit:MODE

Syntax	FCHannel:PERF:SETup:PORT<Pt>:CREDit:MODE <mode>
Description	This command sets the decision method of BB Credit Count.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> ASEarch: Auto Search STEPped: Stepped DEFault = ASEarch
Response	None.
Example	FCH:PERF:SET:PORT1:CRED:MODE ASE
Note	This setting is not available when Port-to-Port test selected.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:CREDit:MODE?
Description	This query returns the decision method of BB Credit Count.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:CRED:MODE? → ASE
Note	

14.16.2 FCHannel:PERF:SETup:PORT<Pt>:CREDit:BEGin

Syntax	FCHannel:PERF:SETup:PORT<Pt>:CREDit:BEGin <size>
Description	This command sets the Performance Test Start credit size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> MINimum = 1, MAXimum = 65535, DEFault = 1
Response	None.
Example	FCH:PERF:SET:PORT1:CRED:BEG 10
Note	This setting is not available when Port-to-Port test selected.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:CREDit:BEGin?
Description	This query returns the Performance Test Start credit size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:CRED:BEG? → 10
Note	

14.16.3 FCHannel:PERF:SETup:PORT<Pt>:CREDit:END

Syntax	FCHannel:PERF:SETup:PORT<Pt>:CREDit:END <size>
Description	This command sets the Performance Test End credit size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> MINimum = 1, MAXimum = 65535, DEFault = 2000
Response	None.
Example	FCH:PERF:SET:PORT1:CRED:END 20
Note	This setting is not available when Port-to-Port test selected.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:CREDit:END?
Description	This query returns the Performance Test End credit size for stepped mode.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:CRED:END? → 20
Note	

14.16.4 FChannel:PERF:SETup:PORT<Pt>:CREDit:STEP

Syntax	FChannel:PERF:SETup:PORT<Pt>:CREDit:STEP <size>
Description	This command sets the Performance Test Step credit size for stepped mode.
Parameters	<Pt> = Port number <size> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 65535, DEFault = 100</i>
Response	None.
Example	FCH:PERF:SET:PORT1:CRED:STEP 5
Note	This setting is not available when Port-to-Port test selected.

Syntax	FChannel:PERF:SETup:PORT<Pt>:CREDit:STEP?
Description	This query returns the Performance Test Step credit size.
Parameter	<Pt> = Port number
Response	<size> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:CRED:STEP? → 5
Note	

14.16.5 FChannel:PERF:SETup:PORT<Pt>:CREDit:ASEarch:MODE

Syntax	FChannel:PERF:SETup:PORT<Pt>:CREDit:ASEarch:MODE <mode>
Description	This command sets the credit auto search mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> SMARt: Smart search BINary: Binary search <i>DEFault = BINary</i>
Response	None.
Example	FCH:PERF:SET:PORT1:CRED:ASE:MODE SMAR
Notes	This setting is not available when Port-to-Port test selected. This setting is used when BB credit count is auto search.

Syntax	FChannel:PERF:SETup:PORT<Pt>:CREDit:ASEarch:MODE?
Description	This query returns the credit auto search mode.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:CRED:ASE:MODE? → SMAR
Note	

14.16.6 FChannel:PERF:SETup:PORT<Pt>:CREDit:ASEarch:RESolution

Syntax	FChannel:PERF:SETup:PORT<Pt>:CREDit:ASEarch:RESolution <resolution>
Description	This command sets the credit auto search resolution.
Parameters	<Pt> = Port number <resolution> = <CHARACTER PROGRAM DATA> 1: 1 credits 10: 10 credits 100: 100 credits <i>DEFault = 1</i>
Response	None.
Example	FCH:PERF:SET:PORT1:CRED:ASE:RES 1
Note	This setting is not available when Port-to-Port test selected.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:CREDit:ASEarch:RESolution?
Description	This query returns the credit auto search resolution.
Parameter	<Pt> = Port number
Response	<resolution> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:CRED:ASE:RES? → 1
Note	

14.16.7 FCHannel:PERF:SETup:PORT<Pt>:CREDit:DURation:STEP

Syntax	FCHannel:PERF:SETup:PORT<Pt>:CREDit:DURation:STEP <step>
Description	This command sets the credit step duration. Unit: Seconds.
Parameters	<Pt> = Port number <step> = <NUMERIC PROGRAM DATA> <i>MINimum = 3, MAXimum = 100000000, DEFault = 10</i>
Response	None.
Example	FCH:PERF:SET:PORT1:CRED:DUR:STEP 5
Note	This setting is not available when Port-to-Port test selected.

Syntax	FCHannel:PERF:SETup:PORT<Pt>:CREDit:DURation:STEP?
Description	This query returns the credit step duration. Unit: Seconds.
Parameter	<Pt> = Port number
Response	<step> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:SET:PORT1:CRED:DUR:STEP? → 5
Note	

14.17 Performance Test - Result

14.17.1 FCHannel:PERF:RESult:TEST

Syntax	FCHannel:PERF:RESult:TEST <test>
Description	This command selects the test to fetch results from.
Parameter	<test> = <CHARACTER PROGRAM DATA> THThroughput: Throughput test TRPRofile: Traffic Profile LATency: Latency test BURSt: Burst test CREDit: Credit test <i>DEFault = THThroughput</i>
Response	None.
Example	FCH:PERF:RES:TEST LAT
Note	This setting is not stored as part of a settings- or result file.

Syntax	FCHannel:PERF:RESult:TEST?
Description	This query returns the selected test to fetch results from.
Parameter	None.
Response	<test> = <CHARACTER RESPONSE DATA>
Example	FCH:PERF:RES:TEST? → LAT
Note	

14.17.2 FCHannel:PERF:RESult:PORT<Pt>:NSTep?

Syntax	FCHannel:PERF:RESult:PORT<Pt>:NSTep? <dir>
Description	This query returns the number of steps for a given port/direction for the selected test type.
Parameters	<Pt> = Port number <dir> = <CHARACTER PROGRAM DATA> TX = Transmitter RX = Receiver <i>DEFault = TX</i>
Response	<steps> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:RES:PORT1:NST? RX → 6
Note	Can only be used while a Performance test is in memory.

14.17.3 FCHannel:PERF:RESult:PORT<Pt>:SElect

Syntax	FCHannel:PERF:RESult:PORT<Pt>:SElect <dir>, <step>
Description	This command selects the direction and step to fetch results from.
Parameters	<Pt> = Port number <dir> = <CHARACTER PROGRAM DATA> TX = Transmitter RX = Receiver <i>DEFault = TX</i> <step> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, DEFault = 1</i>
Response	None.
Example	FCH:PERF:RES:PORT1:SEL TX, 2
Note	Use the FCHannel:PERF:RESult:PORT<Pt>:NSTep? command (see section 14.17.2) to get the number of steps. This setting is not stored as part of a settings- or result file.

Syntax	FCHannel:PERF:RESult:PORT<Pt>:SElect?
Description	This query returns the selected direction and step to fetch results from.
Parameter	<Pt> = Port number
Response	<dir> = <CHARACTER RESPONSE DATA>
	<step> = <NR1 NUMERIC RESPONSE DATA>
Example	FCH:PERF:RES:PORT1:SEL? → TX, 2
Note	

14.17.4 FCHannel:PERF:RESult:PORT<Pt>:FETCh?

Syntax	FCHannel:PERF:RESult:PORT<Pt>:FETCh? <parameters>
Description	This query fetches the Performance Test results.
Parameters	<Pt> = Port number
	{(<parameter>} + {,})* = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. Common STEP: Step. Response: <NR1> TFR: Total frames. Response: <NR1> FSIZ: Frame size. Unit: bytes. Response: <NR1> FRAT: Frame rate¹ (only TX). Unit: fps. Response: <NR1> LL: Line load¹ (only TX). Unit: Mbps. Response: <NR2> LLA: Actual line load¹ (only TX). Unit: Mbps. Response: <NR2> THR: Throughput¹ (only RX). Unit: Mbps. Response: <NR2> UTIL: Utilization¹ (only RX). Unit: %. Response: <NR2> Traffic Profile FLOS: Frames lost (only RX). Response: <NR2> LRAT: Loss Rate (only RX). Response: <NR2> Latency LAT: Latency (Min,Max,Avg) (only RX). Unit: us. Response: <NR2> JITT: Jitter (Min,Max,Avg) (only RX). Unit: us. Response: <NR2> Throughput FLOS: Frames lost (only RX). Response: <NR2> Burst BSIZ: Burst size: <NR1> FLOS: Frames lost (only RX). Response: <NR2> BPR: Back Pressure <CHAR> Credit CSIZ: Credit size: <NR1> FLOS: Frames lost (only RX). Response: <NR2>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Expression format: Numeric List Each result is formatted according to the specification in the parameter field.
Example	FCH:PERF:RES:PORT1:FETC? (REP,FSIZ,LL) → (0), (64), (90.0000)
Notes	This query fetches the result from the test, direction and step selected by the FCHannel:PERF:RESult:TEST command (see section 14.17.1) and FCHannel:PERF:RESult:PORT<Pt>:SElect command (see section 14.17.3). If a requested result is not available, NaN (section 1.6.1) is returned. If there is one or more results, the last ", " is always removed. ¹ Not available for Burst Test.

Chapter 15

OTN

15.1 Transmitter

15.1.1 OTN:TX<Pt>:INTerface

Syntax	OTN:TX<Pt>:INTerface <mode>
Description	This command sets the used interface of the transmitter.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> SFP: SFP/SFP+ optical interface QSFP: QSFP+ optical interface CFP: CFP optical interface CFP2: CFP2 optical interface CFP4: CFP4 optical interface QSFP28ADpt: CFP2-QSFP28 Adaptor interface QSFP28: QSFP28 optical interface <i>DEFault = SFP</i>
Response	None
Example	OTN:TX1:INT SFP
Note	

Syntax	OTN:TX<Pt>:INTerface?
Description	This query returns the used interface.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	OTN:TX1:INT? → SFP
Note	

15.1.2 OTN:TX<Pt>[:ENABled]

Syntax	OTN:TX<Pt>[:ENABled] <mode>
Description	This command sets the mode of the optical transmitters.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: OFF NORMal: Normal (Optical) THRough: Through Rx (pass through mode) OVERwrite: OH Overwrite <i>DEFault = OFF</i>
Response	None
Example	OTN:TX1 OFF
Note	

Syntax	OTN:TX<Pt>[:ENABled]?
Description	This query returns the mode of the optical transmitters.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	OTN:TX1? → OFF
Note	

15.1.3 OTN:TX<Pt>:TIMing

Syntax	OTN:TX<Pt>:TIMing <timing>
Description	This command sets the timing source.
Parameters	<Pt> = Port number <timing> = <CHARACTER PROGRAM DATA> INTernal: Internal clock EXTernal: External clock GPS: GPS signal RX: Received clock <i>DEFault = INT</i>
Response	None
Example	OTN:TX1:TIM INT
Note	

Syntax	OTN:TX<Pt>:TIMing?
Description	This query returns the timing source.
Parameter	<Pt> = Port number
Response	<timing> = <CHARACTER RESPONSE DATA>
Example	OTN:TX1:TIM? → INT
Note	

15.1.4 OTN:TX<Pt>:MAPPing:CSIGnal

Syntax	OTN:TX<Pt>:MAPPing:CSIGnal <signal>
Description	This command sets the expected client signal structure.
Parameters	<Pt> = Port number <signal> = <CHARACTER PROGRAM DATA> PRBS NUL STM256 STS768 STM64 STS192 STM16 STS48 STM4 STS12 STM1 STS3 STM64S STS192S STM16S STS48S PRBSTRANS NULLTRANS GBE100 GBE40 GBE10

continued on next page...

...continued from previous page

	GBE ETHERNET FC1200 FC800 FC400 FC200 FC100 10137M 9830M 6144M 4915M 3072M 2457M 1228M 614M MPLS IPV4PDU IPV6PDU <i>DEFault = PRBS</i>
Response	None
Example	OTN:TX2:MAPP:CSIG PRBS
Note	Available for SDH/SONET option: STM256/STS768 STM64/STM64S/STS192/STS192S/STM16/STM16S/STS48/STS48S STM4/STS12/STM1/STS3 PRBSTRANS/NULLTRANS Available for Ethernet option: GBE100/GBE40 GBE10/GBE Available for FC option: FC1200/FC800 FC400/FC200/FC100 Available for CPRI option: 10137M/9830M/6144M/4915M/3072M/2457M/1228M/614M
Syntax	OTN:TX<Pt>:MAPPING:CSIGnal?
Description	This query returns the expected client signal structure.
Parameter	<Pt> = Port number
Response	<signal> = <CHARACTER RESPONSE DATA>
Example	OTN:TX2:MAPP:CSIG? → PRBS
Note	

15.1.5 OTN:TX<Pt>:PATtern

Syntax	OTN:TX<Pt>:PATtern <pattern>
Description	This command sets the pattern type when CSIGNAL is PRBS.
Parameters	<Pt> = Port number <pattern> = <CHARACTER PROGRAM DATA> PRBS9:PRBS9 pattern PRBS11:PRBS11 pattern PRBS15:PRBS15 pattern PRBS20:PRBS20 pattern PRBS23:PRBS23 pattern PRBS29:PRBS29 pattern PRBS31:PRBS31 pattern USER32BIT: User Pattern (32bit) USER2048BIT: User Pattern (2048bit) <i>DEfault = PRBS31</i>
Response	None
Example	OTN:TX2:PATT PRBS31
Note	

Syntax	OTN:TX<Pt>:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<pattern> = <CHARACTER RESPONSE DATA>
Example	OTN:TX2:PATT? → PRBS31
Note	

15.1.6 OTN:TX<Pt>:PINversion

Syntax	OTN:TX<Pt>:PINversion <inverted>
Description	This command enables or disables PRBS Pattern Inversion.
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEfault = ON</i>
Response	None
Example	OTN:TX1:PINV ON
Note	

Syntax	OTN:TX<Pt>:PINversion?
Description	This query returns whether the PRBS Pattern Inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inverted> = <BOOLEAN RESPONSE DATA>
Example	OTN:TX1:PINV? → 1
Note	

15.1.7 OTN:TX<Pt>:UP32

Syntax	OTN:TX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATtern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None
Example	OTN:TX1:UP32 "01101"
Note	

Syntax	OTN:TX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	OTN:TX1:UP32? → "01101"
Note	

15.1.8 OTN:TX<Pt>:UP2K

Syntax	OTN:TX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	OTN:TX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when OTN:TX1:PATT is USER2048BIT

Syntax	OTN:TX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	OTN:TX1:UP2K? → "12DF"
Note	

15.1.9 OTN:TX<Pt>:MAPPING:OUTPutsignal

Syntax	OTN:TX<Pt>:MAPPING:OUTPutsignal <signal>
Description	This command sets OTN output signal.
Parameters	<Pt> = Port number <signal> = <CHARACTER PROGRAM DATA> OTU1 OTU2 OTU2EXTOPU2 OTU1E OTU2E OTU1F OTU2F OTU3 OTU3E1 OTU3E2 OTU4 <i>DEFault = OTU2</i>
Response	None
Example	OTN:TX1:MAPP:OUTP OTU2
Note	

Syntax	OTN:TX<Pt>:MAPPING:OUTPutsignal?
Description	This query returns OTN output signal.
Parameter	<Pt> = Port number
Response	<signal> = <CHARACTER RESPONSE DATA>
Example	OTN:TX1:MAPP:OUTP? → OTU2
Note	

15.1.10 OTN:TX<Pt>:FEC

Syntax	OTN:TX<Pt>:FEC <fec>
Description	This command sets OTU FEC control.
Parameters	<Pt> = Port number <fec> = <CHARACTER PROGRAM DATA> NOFec: No forward error correction RS: RS (255,239) <i>DEFault</i> = RS
Response	None
Example	OTN:TX1:FEC RS
Note	

Syntax	OTN:TX<Pt>:FEC?
Description	This query returns OTU FEC control.
Parameter	<Pt> = Port number
Response	<fec> = <CHARACTER RESPONSE DATA>
Example	OTN:TX1:FEC? → RS
Note	

15.1.11 OTN:TX<Pt>:MAPPING:MULTIplexing<stage>

Syntax	OTN:TX<Pt>:MAPPING:MULTIplexing<stage> <odutype>
Description	This command sets the ODU type of each multiplexing stage.
Parameters	<Pt> = Port number <stage> = Multiplexing stage (1-3) <odutype> = <CHARACTER PROGRAM DATA> NONE: None ODTU01: ODTU01 ODTU12PT20: ODTU12 (PT=20) ODTU12PT21: ODTU12 (PT=21) ODTU21: ODTU2.1 ODTU2TS: ODTU2.ts ODTU13PT20: ODTU13 (PT=20) ODTU13PT21: ODTU13 (PT=21) ODTU23PT20: ODTU23 (PT=20) ODTU23PT20EXTOPU2: ODTU23 (PT=20)(Ext. OPU2) ODTU23PT21: ODTU23 (PT=21) ODTU23PT21EXTOPU2: ODTU23 (PT=21)(Ext. OPU2) ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU2E3E1: ODTU2e3e1 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48ODU2: ODTU4.8 (ODU2) ODTU48EXTOPU2: ODTU4.8 (Ext. OPU2) ODTU48ODU2E: ODTU4.8 (ODU2e) ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts <i>DEFault</i> = NONE
Response	None
Example	OTN:TX1:MAPP:MULT1 NONE
Note	

Syntax	OTN:TX<Pt>:MAPPING:MULTIplexing<stage>?
Description	This query returns the ODU type of each multiplexing stage.
Parameters	<Pt> = Port number <stage> = Multiplexing stage (1-3)
Response	<odutype> = <CHARACTER RESPONSE DATA>
Example	OTN:TX1:MAPP:MULT1? → NONE
Note	

15.1.12 OTN:TX<Pt>:MAPPING:LANE

Syntax	OTN:TX<Pt>:MAPPING:LANE <value>
Description	This command sets the LLD lane marker assignment.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List List consist of the value of the lane marker. OTU3: 0 to 3 OTU4: 0 to 19
Response	None.
Example	OTN:TX1:MAPP:LANE (0,1,2,3) OTN:TX1:MAPP:LANE (0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19)
Note	This command can be used on 40/100G

Syntax	OTN:TX<Pt>:MAPPING:LANE?
Description	This query returns the LLD lane marker assignment.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION RESPONSE DATA> Format: Numeric List
Example	OTN:TX1:MAPP:LANE? → (0,1,2,3) → (0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19)
Note	This command can be used on 40/100G

15.1.13 OTN:TX<Pt>:COPY

Syntax	OTN:TX<Pt>:COPY <odutype>,<mode>
Description	This command sets the copy mode of dummy CH.
Parameters	<Pt> = Port number <odutype> = <CHARACTER PROGRAM DATA> ODTU01 ODTU12 ODTU21 ODTU2TS ODTU13 ODTU23 ODTU31 ODTU3E28 ODTU2E3E1 ODTU3TS ODTU41 ODTU42 ODTU48 ODTU431 ODTU4TS <mode> = <CHARACTER PROGRAM DATA> COPY

continued on next page...

...continued from previous page

	UNUSe <i>DEFault = COPY</i>
Response	None
Example	OTN:TX1:COPY ODTU01,COPY
Note	

Syntax	OTN:TX<Pt>:COPY? <odutype>
Description	This query returns the copy mode of dummy CH.
Parameters	<Pt> = Port number <odutype> = <CHARACTER PROGRAM DATA> ODTU01 ODTU12 ODTU21 ODTU2TS ODTU13 ODTU23 ODTU31 ODTU3E28 ODTU2E3E1 ODTU3TS ODTU41 ODTU42 ODTU48 ODTU431 ODTU4TS
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	OTN:TX1:COPY? ODTU01 → COPY
Note	

15.1.14 OTN:TX<Pt>:CSF

Syntax	OTN:TX<Pt>:CSF <csf>
Description	This command sets the insertion mode of CSF.
Parameters	<Pt> = Port number <csf> = <CHARACTER PROGRAM DATA> GFPT: GFP-T CSF Replacement ETHER: Ethernet Block Replacement <i>DEFault = ETH</i>
Response	None
Example	OTN:TX1:CSF ETH
Note	

Syntax	OTN:TX<Pt>:CSF?
Description	This query returns the insertion mode of CSF.
Parameter	<Pt> = Port number
Response	<csf> = <CHARACTER RESPONSE DATA>
Example	OTN:TX1:CSF? → ETH
Note	

15.1.15 OTN:TX<Pt>:FOLLow

Syntax	OTN:TX<Pt>:FOLLow <mode>
Description	This command sets the transmitter setup to follow another setup or not to follow.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> NONE: Do not follow. TX1: Follows setup of the Tx port1. <i>DEFault</i> = <i>NONE</i>
Response	None.
Example	OTN:TX1:FOLL NONE
Note	

Syntax	OTN:TX<Pt>:FOLLow?
Description	This query returns the transmitter setup to follow another setup or not to follow.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	OTN:TX1:FOLL? → NONE
Note	

15.1.16 OTN:OH:TX<Pt>:OTN:OH

Syntax	OTN:OH:TX<Pt>:OTN:OH <odutype>,<row>,<column>,<data>
Description	This command sets the value of the specified bytes in the OH.
Parameters	<Pt> = Port number <odutype> = <CHARACTER PROGRAM DATA> ODU2: ODU2 ODU1: ODU1 ODU0: ODU0 ODU2E: ODU2e ODU1E: ODU1e ODU2F: ODU2f ODU1F: ODU1f ODUFLEX: ODUFlex ODU3: ODU3 ODU3E1: ODU3e1 ODU3E2: ODU3e2 ODU4: ODU4 ODUC: ODUC <row> = <NUMERIC PROGRAM DATA> OH Row Number (1-4) <column> = <NUMERIC PROGRAM DATA> OH Column Number (1-16) <data> = <NUMERIC PROGRAM DATA> Hexadecimal format Multi frame sequence data. Data length depends on the position of OH. The pattern is padded with zeros until multi frame sequence data length.
Response	None
Example	OTN:OH:TX1:OTN:OH ODU2,3,3,#H1
Note	The parameter error will occur when you specify a position that can not overwrite.

Syntax	OTN:OH:TX<Pt>:OTN:OH? <odutype>,<row>,<column>
Description	This query returns the value of the specified bytes in the OH.
Parameters	<Pt> = Port number <odutype> = <CHARACTER PROGRAM DATA> ODU2: ODU2 ODU1: ODU1 ODU0: ODU0 ODU2E: ODU2e ODU1E: ODU1e ODU2F: ODU2f ODU1F: ODU1f ODUFLEX: ODUFlex ODU3: ODU3 ODU3E1: ODU3e1 ODU3E2: ODU3e2 ODU4: ODU4 ODUC: ODUC <row> = <NUMERIC PROGRAM DATA> OH Row Number (1-4) <column> = <NUMERIC PROGRAM DATA> OH Column Number (1-16)
Response	<data> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	OTN:OH:TX1:OTN:OH? ODU2,3,3 → #1
Note	

15.1.17 OTN:OH:TX<Pt>:OTN:OH:DEFault

Syntax	OTN:OH:TX<Pt>:OTN:OH:DEFault <route>
Description	This command sets all overhead bytes to their default value.
Parameters	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODU2: ODU2 ODU1: ODU1 ODU0: ODU0 ODU1E: ODU1e ODU2E: ODU2e ODU1F: ODU1f ODU2F: ODU2f ODUFLEX: ODUFlex ODU3: ODU3 ODU3E1: ODU3e1 ODU3E2: ODU3e2 ODU4: ODU4 ODUC: ODUC
Response	None
Example	OTN:OH:TX1:OTN:OH:DEF ODU2
Note	

15.1.18 OTN:TX<Pt>:TP

Syntax	OTN:TX<Pt>:TP <route>,<tp>
Description	This command sets the TP to be used as the main transmission channel.
Parameters	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODTU01: ODTU01 ODTU12: ODTU12 ODTU21: ODTU2.1 ODTU2TS: ODTU2.ts ODTU13: ODTU13

continued on next page...

...continued from previous page

	ODTU23: ODTU23 ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU2E3E1: ODTU2e3e1 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48: ODTU4.8 ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts <i>DEFault</i> = <i>ODTU21</i>
	<tp> = <NUMERIC PROGRAM DATA> ODTU01: TP: 1-2 ODTU12(Pt=0x20) TP: 1-4 ODTU12(Pt=0x21) TP: 1-4 ODTU21 TP: 1-8 ODTU2TS TP: 1-8 ODTU13(Pt=0x20) TP: 1-16 ODTU13(Pt=0x21) TP: 1-16 ODTU23(Pt=0x20) TP: 1-4 ODTU23(Pt=0x21) TP: 1-4 ODTU31 TP: 1-32 ODTU3E28 TP: 1-32 ODTU2E3E1 TP: 1-4 ODTU3TS TP: 1-32 ODTU41 TP: 1-80 ODTU42 TP: 1-80 ODTU48 TP: 1-80 ODTU431 TP: 1-80 ODTU4TS TP: 1-80
Response	None
Example	OTN:TX1:TP ODTU01,1
Note	

Syntax	OTN:TX<Pt>:TP? <route>
Description	This query returns the TP to be used as the main transmission channel.
Parameter	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODTU01: ODTU01 ODTU12: ODTU12 ODTU21: ODTU2.1 ODTU2TS: ODTU2.ts ODTU13: ODTU13 ODTU23: ODTU23 ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU2E3E1: ODTU2e3e1 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48: ODTU4.8 ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts
Response	<tp> = <NUMERIC PROGRAM DATA>
Example	OTN:TX1:TP? ODTU01 → 1
Note	

15.1.19 OTN:TX<Pt>:TS

Syntax	OTN:TX<Pt>:TS <route>,<ts>
Description	This command sets a set of TS(s) to be used as the main transmission channel.
Parameters	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODTU01: ODTU01 ODTU12: ODTU12 ODTU21: ODTU2.1 ODTU2TS: ODTU2.ts ODTU13: ODTU13 ODTU23: ODTU23 ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU2E3E1: ODTU2e3e1 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48: ODTU4.8 ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts <i>DEFault</i> = <i>ODTU21</i> (<ts> {,<ts>}) = <EXPRESSION PROGRAM DATA> The format is listed for each parameter.
Response	None
Example	OTN:TX1:TS ODTU12,(1,2)
Note	ODTU01 TS: will become the same value as TP. ODTU12 (PT=0x20) TS: will become the same value as TP. ODTU12 (PT=0x21) TS1: 1-8, TS2: 1-8. Two different TS numbers must be specified. The two values should not overlap. ODTU2.1 TS: 1-8 ODTU2TS TS: 1-8 ODTU13(PT=0x20) TS: will become the same value as TP. ODTU13(PT=0x21) TS: 1-32 ODTU23(PT=0x20) TS: 1-16 ODTU23(PT=0x21) TS: 1-32 ODTU31 TS: 1-32 ODTU3E28 TS: 1-32 ODTU2E3E1 TS: 1-16 ODTU3TS TS: 1-32 ODTU41 TS: 1-80 ODTU42 TS: 1-80 ODTU48 TS: 1-80 ODTU431 TS: 1-80 ODTU4TS TS: 1-80

Syntax	OTN:TX<Pt>:TS? <route>
Description	This command returns a set of TS(s) to be used as the main transmission channel.
Parameters	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODTU01: ODTU01 ODTU12: ODTU12 ODTU21: ODTU2.1 ODTU2TS: ODTU2.ts ODTU13: ODTU13 ODTU23: ODTU23 ODTU31: ODTU3.1

continued on next page...

...continued from previous page

	ODTU3E28: ODTU3e2.8 ODTU2E3E1: ODTU2e3e1 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48: ODTU4.8 ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts
Response	(<ts> {,<ts>}) = <EXPRESSION RESPONSE DATA> The response format is listed for each parameter.
Example	OTN:TX1:TS? ODTU12 → (1)
Note	

15.1.20 OTN:TX<Pt>:ODUflex:TS

Syntax	OTN:TX<Pt>:ODUflex:TS <ts>
Description	This command sets the size of a TS set to be used in ODUflex.
Parameters	<Pt> = Port number <ts> = <NUMERIC PROGRAM DATA> ODTU2.ts - PRBS/Ethernet: 1-8 ODTUK.ts - FC400: 4 ODTUK.ts - FC800: 7 ODTUK.ts - 3072M: 3 ODTUK.ts - 4915M: 4 ODTUK.ts - 6144M: 5 ODTUK.ts - 9830M: 8 ODTU3.ts - PRBS: 1-32 ODTU4.ts - PRBS: 1-80 ODTU3.ts - Ethernet: 1-32 ODTU4.ts - Ethernet: 1-80 ODTU3.ts - 10137M: 9 ODTU4.ts - 10137M: 8
Response	None
Example	OTN:TX1:ODUF:TS 1

Syntax	OTN:TX<Pt>:ODUflex:TS?
Description	This command returns the size of a TS set to be used in ODUflex.
Parameter	<Pt> = Port number
Response	<ts> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:TX1:ODUF:TS? → 1
Note	

15.1.21 OTN:TX<Pt>:ALlocated

Syntax	OTN:TX<Pt>:ALlocated <route>,<allocated>
Description	This command sets the channel allocation.
Parameters	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODTU12: ODTU12 ODTU21: ODTU2.1 ODTU1321: ODTU13 (PT=0x21) ODTU2320: ODTU23 (PT=0x20) ODTU2321: ODTU23 (PT=0x21) ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48: ODTU4.8 ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts <allocated> = <STRING PROGRAM DATA> "0" : All Allocated "80" : CH1 Unallocated "40" : CH2 Unallocated "20" : CH3 Unallocated "10" : CH4 Unallocated "8" : CH5 Unallocated "4" : CH6 Unallocated "2" : CH7 Unallocated "1" : CH8 Unallocated <i>DEFault = 0</i>
Response	None
Example	OTN:TX1:ALL ODTU12,"0"
Note	

Syntax	OTN:TX<Pt>:ALlocated? <route>
Description	This query returns the channel allocation.
Parameters	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODTU12: ODTU12 ODTU21: ODTU2.1 ODTU1321: ODTU13 (PT=0x21) ODTU2320: ODTU23 (PT=0x20) ODTU2321: ODTU23 (PT=0x21) ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48: ODTU4.8 ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts
Response	<allocated> = <STRING RESPONSE DATA>
Example	OTN:TX1:ALL? ODTU12 → "0"
Note	

15.1.22 OTN:TX<Pt>:GFP:PTI

Syntax	OTN:TX<Pt>:GFP:PTI <pti>
Description	This command sets GFP-F Payload Type Identifier.
Parameters	<Pt> = Port number <pti> = <NUMERIC PROGRAM DATA> <i>MINimum=#B000, MAXimum=#B111, DEFault=#B000</i>
Response	None
Example	OTN:TX1:GFP:PTI #B000
Note	This command can be used in V2.00 or later

Syntax	OTN:TX<Pt>:GFP:PTI?
Description	This query returns GFP-F Payload Type Identifier.
Parameters	<Pt> = Port number
Response	<pti> = <BINARY NUMERIC RESPONSE DATA>
Example	OTN:TX1:GFP:PTI? → #B000
Note	This command can be used in V2.00 or later

15.1.23 OTN:TX<Pt>:GFP:PFI

Syntax	OTN:TX<Pt>:GFP:PFI <pfi>
Description	This command sets GFP-F Payload Frame check sequence Indicator.
Parameters	<Pt> = Port number <pfi> = <BOOLEAN PROGRAM DATA> <i>DEFault=0</i>
Response	None
Example	OTN:TX1:GFP:PFI 0
Note	This command can be used in V2.00 or later

Syntax	OTN:TX<Pt>:GFP:PFI?
Description	This query returns GFP-F Payload Frame check sequence Indicator.
Parameters	<Pt> = Port number
Response	<pfi> = <BOOLEAN RESPONSE DATA>
Example	OTN:TX1:GFP:PFI? → 0
Note	This command can be used in V2.00 or later

15.1.24 OTN:TX<Pt>:GFP:EXI

Syntax	OTN:TX<Pt>:GFP:EXI <exi>
Description	This command sets GFP-F Extension header Identifier.
Parameters	<Pt> = Port number <exi> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000, MAXimum=#B0001, DEFault=#B0000</i>
Response	None
Example	OTN:TX1:GFP:EXI #B0000
Note	This command can be used in V2.00 or later

Syntax	OTN:TX<Pt>:GFP:EXI?
Description	This query returns GFP-F Extension header Identifier.
Parameters	<Pt> = Port number
Response	<exi> = <BINARY NUMERIC RESPONSE DATA>
Example	OTN:TX1:GFP:EXI? → #B0000
Note	This command can be used in V2.00 or later

15.1.25 OTN:TX<Pt>:GFP:UPI

Syntax	OTN:TX<Pt>:GFP:UPI <upi>
Description	This command sets GFP-F User Payload Identifier.
Parameters	<Pt> = Port number <upi> = <NUMERIC PROGRAM DATA> <i>MINimum=#B00000000, MAXimum=#B11111111, DEFault=#B00000001</i>
Response	None
Example	OTN:TX1:GFP:UPI #B00000001
Note	This command can be used in V2.00 or later

Syntax	OTN:TX<Pt>:GFP:UPI?
Description	This query returns GFP-F User Payload Identifier.
Parameters	<Pt> = Port number
Response	<upi> = <BINARY NUMERIC RESPONSE DATA>
Example	OTN:TX1:GFP:UPI? → #B00000001
Note	This command can be used in V2.00 or later

15.1.26 OTN:TX<Pt>:GFP:EXTHHeader:CID

Syntax	OTN:TX<Pt>:GFP:EXTHHeader:CID <cid>
Description	This command sets Channel ID of GFP-F extension header.
Parameters	<Pt> = Port number <cid> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=0</i>
Response	None
Example	OTN:TX1:GFP:EXTH:CID 0
Note	This command can be used in V2.00 or later

Syntax	OTN:TX<Pt>:GFP:EXTHHeader:CID?
Description	This query returns Channel ID of GFP-F extension header.
Parameters	<Pt> = Port number
Response	<cid> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:TX1:GFP:EXTH:CID? → 0
Note	This command can be used in V2.00 or later

15.1.27 OTN:TX<Pt>:GFP:EXTHHeader:SPARe

Syntax	OTN:TX<Pt>:GFP:EXTHHeader:SPARe <spare>
Description	This command sets spare field of GFP-F extension header.
Parameters	<Pt> = Port number <spare> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=255, DEFault=0</i>
Response	None
Example	OTN:TX1:GFP:EXTH:SPAR 0
Note	This command can be used in V2.00 or later

Syntax	OTN:TX<Pt>:GFP:EXTHHeader:SPARe?
Description	This query returns spare field of GFP-F extension header.
Parameters	<Pt> = Port number
Response	<spare> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:TX1:GFP:EXTH:SPAR? → 0
Note	This command can be used in V2.00 or later

15.1.28 OTN:TX<Pt>:GFP:PTIMes

Syntax	OTN:TX<Pt>:GFP:PTIMes <ptimes>
Description	This command sets GFP-F cHEC Presync Times.
Parameters	<Pt> = Port number <ptimes> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=14, DEFault=1</i>
Response	None
Example	OTN:TX1:GFP:PTIM 1
Note	This command can be used in V2.00 or later

Syntax	OTN:TX<Pt>:GFP:PTIMes?
Description	This query returns GFP-F cHEC Presync Times.
Parameters	<Pt> = Port number
Response	<ptimes> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:TX1:GFP:PTIM? → 1
Note	This command can be used in V2.00 or later

15.2 Receiver

15.2.1 OTN:RX<Pt>:INTerface

Syntax	OTN:RX<Pt>:INTerface <mode>
Description	This command sets the used interface or switches off the receiver.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> OFF: Off SFP: SFP / SFP+ optical interface QSFP: QSFP+ optical interface CFP: CFP optical interface CFP2: CFP2 optical interface CFP4: CFP4 optical interface QSFP28ADpt: CFP2-QSFP28 Adaptor interface QSFP28: QSFP28 optical interface <i>DEFault = OFF</i>
Response	None
Example	OTN:RX1:INT OFF
Note	

Syntax	OTN:RX<Pt>:INTerface?
Description	This query returns the mode of the optical receiver.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	OTN:RX1:INT? → OFF
Note	

15.2.2 OTN:RX<Pt>:MAPPING:CSIGNAL

Syntax	OTN:RX<Pt>:MAPPING:CSIGNAL <signal>
Description	This command sets the client signal.
Parameters	<Pt> = Port number <signal> = <CHARACTER PROGRAM DATA> PRBS NUL STM256 STS768 STM64 STS192 STM16 STS48 STM4 STS12 STM1 STS3 STM64S STS192S STM16S STS48S PRBSTRANS NULLTRANS GBE100 GBE40 GBE10 GBE ETHERNET

continued on next page...

...continued from previous page

	FC1200 FC800 FC400 FC200 FC100 10137M 9830M 6144M 4915M 3072M 2457M 1228M 614M MPLS IPV4PDU IPV6PDU <i>DEFault = PRBS</i>
Response	None
Example	OTN:RX1:MAPP:CSIG PRBS
Note	Available for SDH/SONET option: STM256/STS768 STM64/STM64S/STS192/STS192S/STM16/STM16S/STS48/STS48S STM4/STS12/STM1/STS3 PRBSTRANS/NULLTRANS Available for Ethernet option: GBE100/GBE40 GBE10/GBE Available for FC option: FC1200/FC800 FC400/FC200/FC100 Available for CPRI option: 10137M/9830M/6144M/4915M/3072M/2457M/1228M/614M

Syntax	OTN:RX<Pt>:MAPPING:CSIGnal?
Description	This query returns the client signal.
Parameter	<Pt> = Port number
Response	<signal> = <CHARACTER RESPONSE DATA>
Example	OTN:RX1:MAPP:CSIG? → PRBS
Note	

15.2.3 OTN:RX<Pt>:PATtern

Syntax	OTN:RX<Pt>:PATtern <pattern>
Description	This command sets the pattern type when CSIGNAL is PRBS.
Parameters	<Pt> = Port number <pattern> = <CHARACTER PROGRAM DATA> PRBS9:PRBS9 pattern PRBS11:PRBS11 pattern PRBS15:PRBS15 pattern PRBS20:PRBS20 pattern PRBS23:PRBS23 pattern PRBS29:PRBS29 pattern PRBS31:PRBS31 pattern USER32BIT: User Pattern (32bit) USER2048BIT: User Pattern (2048bit) <i>DEfault = PRBS31</i>
Response	None
Example	OTN:RX1:PATT PRBS31
Note	

Syntax	OTN:RX<Pt>:PATtern?
Description	This query returns the pattern type.
Parameter	<Pt> = Port number
Response	<pattern> = <CHARACTER RESPONSE DATA>
Example	OTN:RX1:PATT? → PRBS31
Note	

15.2.4 OTN:RX<Pt>:PINVersion

Syntax	OTN:RX<Pt>:PINVersion <inverted>
Description	This command enables or disables PRBS Pattern Inversion.
Parameters	<Pt> = Port number <inverted> = <BOOLEAN PROGRAM DATA> <i>DEfault = ON</i>
Response	None
Example	OTN:RX1:PINV ON
Note	

Syntax	OTN:RX<Pt>:PINVersion?
Description	This query returns whether the PRBS Pattern Inversion is enabled or disabled.
Parameter	<Pt> = Port number
Response	<inverted> = <BOOLEAN RESPONSE DATA>
Example	OTN:RX1:PINV? → 1
Note	

15.2.5 OTN:RX<Pt>:UP32

Syntax	OTN:RX<Pt>:UP32 <pattern>
Description	This command sets the 32 bit wide variable length user defined pattern used when PATtern is USER32BIT.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use binary digits '0' and '1' to describe the pattern. The string must consist of 1 to 32 characters (one bit resolution).
Response	None
Example	OTN:RX1:UP32 "01101"
Note	

Syntax	OTN:RX<Pt>:UP32?
Description	This query returns the 32 bit wide user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	OTN:RX1:UP32? → "01101"
Note	

15.2.6 OTN:RX<Pt>:UP2K

Syntax	OTN:RX<Pt>:UP2K <pattern>
Description	This command sets the 2048 bit wide user defined pattern.
Parameters	<Pt> = Port number <pattern> = <STRING PROGRAM DATA> Use hexadecimal upper or lower case. The string must consist of 2 to 512 characters (one byte resolution).
Response	None.
Example	OTN:RX1:UP2K "12DF"
Notes	The pattern is padded with zeros until it is a multiple of eight bits long. In effect when OTN:RX1:PATT is USER2048BIT

Syntax	OTN:RX<Pt>:UP2K?
Description	This query returns the 2048 bit user defined pattern.
Parameter	<Pt> = Port number
Response	<pattern> = <STRING RESPONSE DATA>
Example	OTN:RX1:UP2K? → "12DF"
Note	

15.2.7 OTN:RX<Pt>:MAPPING:INPutsignal

Syntax	OTN:RX<Pt>:MAPPING:INPutsignal <signal>
Description	This command sets OTN input signal.
Parameters	<Pt> = Port number <signal> = <CHARACTER PROGRAM DATA> OTU1 OTU2 OTU2EXTOPU2 OTU1E OTU2E OTU1F OTU2F OTU3 OTU3E1 OTU3E2 OTU4 <i>DEFault = OTU2</i>
Response	None
Example	OTN:RX1:MAPP:INP OTU2
Note	

Syntax	OTN:RX<Pt>:MAPPING:INPutsignal?
Description	This query returns OTN input signal.
Parameter	<Pt> = Port number
Response	<signal> = <CHARACTER RESPONSE DATA>
Example	OTN:RX1:MAPP:INP? → OTU2
Note	

15.2.8 OTN:RX<Pt>:MAPPING:MULTiplexing<stage>

Syntax	OTN:RX<Pt>:MAPPING:MULTiplexing<stage> <odutype>
Description	This command sets the ODU type of each multiplexing stage.
Parameters	<Pt> = Port number <stage> = Multiplexing stage (1-3) <odutype> = <CHARACTER PROGRAM DATA> NONE: None ODTU01: ODTU01 ODTU12PT20: ODTU12 (PT=20) ODTU12PT21: ODTU12 (PT=21) ODTU21: ODTU2.1 ODTU2TS: ODTU2.ts ODTU13PT20: ODTU13 (PT=20) ODTU13PT21: ODTU13 (PT=21) ODTU23PT20: ODTU23 (PT=20) ODTU23PT20EXTOPU2: ODTU23 (PT=20)(Ext. OPU2) ODTU23PT21: ODTU23 (PT=21) ODTU23PT21EXTOPU2: ODTU23 (PT=21)(Ext. OPU2) ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU2E3E1: ODTU2e3e1 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48ODU2: ODTU4.8 (ODU2) ODTU48EXTOPU2: ODTU4.8 (Ext. OPU2) ODTU48ODU2E: ODTU4.8 (ODU2e) ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts <i>DEFault = NONE</i>
Response	None
Example	OTN:RX1:MAPP:MULT1 NONE
Note	

Syntax	OTN:RX<Pt>:MAPPING:MULTiplexing<stage>?
Description	This query returns the ODU type of each multiplexing stage.
Parameter	<Pt> = Port number <stage> = Multiplexing stage (1-3)
Response	<odutype> = <CHARACTER RESPONSE DATA>
Example	OTN:RX1:MAPP:MULT1? → NONE
Note	

15.2.9 OTN:RX<Pt>:FEC

Syntax	OTN:RX<Pt>:FEC <fec>
Description	This command sets OTU FEC control.
Parameters	<Pt> = Port number <fec> = <CHARACTER PROGRAM DATA> NOFec: No FEC RS: RS(255,239) <i>DEFault = RS</i>
Response	None
Example	OTN:RX1:FEC RS
Note	

Syntax	OTN:RX<Pt>:FEC?
Description	This query returns OTU FEC control.
Parameter	<Pt> = Port number
Response	<fec> = <CHARACTER RESPONSE DATA>
Example	OTN:RX1:FEC? → RS
Note	

15.2.10 OTN:RX<Pt>:FOLLow

Syntax	OTN:RX<Pt>:FOLLow <follow>
Description	This command sets the receiver setup to follow another setup or not to follow.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> NONE: Do not follow. TX: Follows setup of the Tx port. RX1: Follows setup of the Rx port1. <i>DEFault = TX</i>
Response	None.
Example	OTN:RX1:FOLL TX
Note	

Syntax	OTN:RX<Pt>:FOLLow?
Description	This query returns the receiver setup to follow another setup or not to follow.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	OTN:RX1:FOLL? → TX
Note	

15.2.11 OTN:RX<Pt>:TP

Syntax	OTN:RX<Pt>:TP <route>,<tp>
Description	This command sets the TP to be used as the main received channel.
Parameters	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODTU01: ODTU01 ODTU12: ODTU12 ODTU21: ODTU2.1 ODTU2TS: ODTU2.ts ODTU13: ODTU13 ODTU23: ODTU23 ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU2E3E1: ODTU2e3e1 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48: ODTU4.8 ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts <tp> = <NUMERIC PROGRAM DATA> ODTU01: TP: 1-2 ODTU12(Pt=0x20) TP: 1-4 ODTU12(Pt=0x21) TP: 1-4 ODTU21: TP: 1-8 ODTU2TS: TP: 1-8 ODTU13(Pt=0x20) TP: 1-16

continued on next page...

... continued from previous page

	ODTU13(Pt=0x21) TP: 1-16 ODTU23(Pt=0x20) TP: 1-4 ODTU23(Pt=0x21) TP: 1-4 ODTU31 TP: 1-32 ODTU3E28 TP: 1-4 ODTU2E3E1 TP: 1-32 ODTU3TS TP: 1-32 ODTU41 TP: 1-80 ODTU42 TP: 1-80 ODTU48 TP: 1-80 ODTU431 TP: 1-80 ODTU4TS TP: 1-80
Response	None
Example	OTN:RX1:TP ODTU01,1
Note	

Syntax	OTN:RX<Pt>:TP? <route>
Description	This query returns the TP to be used as the main received channel.
Parameters	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODTU01: ODTU01 ODTU12: ODTU12 ODTU21: ODTU2.1 ODTU2TS: ODTU2.ts ODTU13: ODTU13 ODTU23: ODTU23 ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU2E3E1: ODTU2e3e1 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48: ODTU4.8 ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts
Response	<tp> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:RX1:TP? ODTU01 → 1
Note	

15.2.12 OTN:RX<Pt>:TS

Syntax	OTN:RX<Pt>:TS <route>,<ts>
Description	This command sets a set of TS(s) to be used as the main received channel.
Parameters	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODTU01: ODTU01 ODTU12: ODTU12 ODTU21: ODTU2.1 ODTU2TS: ODTU2.ts ODTU13: ODTU13 ODTU23: ODTU23 ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU2E3E1: ODTU2e3e1 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1

continued on next page...

...continued from previous page

	ODTU42: ODTU4.2 ODTU48: ODTU4.8 ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts (<ts> {,<ts>}) = <EXPRESSION PROGRAM DATA> The format is listed for each parameter.
Response	None
Example	OTN:RX1:TS ODTU12, (1,2)
Note	ODTU01 TS : 1-2 will become the same value as TP. ODTU12 (PT=0x20) TS : 1-4 will become the same value as TP. ODTU12 (PT=0x21) TS1: 1-8, TS2: 1-8 TS2 must not overlap and TS1. ODTU2.1 TS: 1-8 ODTU2TS TS: 1-8 ODTU13(PT=0x20) TS: will become the same value as TP. ODTU13(PT=0x21) TS: 1-32 ODTU23(PT=0x20) TS: 1-16 ODTU23(PT=0x21) TS: 1-32 ODTU31 TS: 1-32 ODTU3E28 TS: 1-32 ODTU2E3E1 TS: 1-16 ODTU3TS TS: 1-32 ODTU41 TS: 1-80 ODTU42 TS: 1-80 ODTU48 TS: 1-80 ODTU431 TS: 1-80 ODTU4TS TS: 1-80

Syntax	OTN:RX<Pt>:TS? <route>
Description	This command returns a set of TS(s) to be used as the main received channel.
Parameters	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODTU01: ODTU01 ODTU12: ODTU12 ODTU21: ODTU2.1 ODTU2TS: ODTU2.ts ODTU13: ODTU13 ODTU23: ODTU23 ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU2E3E1: ODTU2e3e1 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48: ODTU4.8 ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts
Response	(<ts> {,<ts>}) = <EXPRESSION RESPONSE DATA> The response format is listed for each parameter.
Example	OTN:RX1:TS? ODTU12 → 1,2
Note	

15.2.13 OTN:RX<Pt>:ODUFlex:TS

Syntax	OTN:RX<Pt>:ODUFlex:TS <ts>
Description	This command sets the size of a TS set to be used in ODUFlex.
Parameters	<Pt> = Port number

continued on next page...

...continued from previous page

	<ts> = <NUMERIC PROGRAM DATA> ODTU2.ts: PRBS/Ethernet: 1-8 ODTUk.ts: FC400: 4 ODTUk.ts: FC800: 7 ODTUk.ts - 3072M: 3 ODTUk.ts - 4915M: 4 ODTUk.ts - 6144M: 5 ODTUk.ts - 9830M: 8 ODTU3.ts - PRBS: 1-32 ODTU4.ts - PRBS: 1-80 ODTU3.ts - Ethernet: 1-32 ODTU4.ts - Ethernet: 1-80 ODTU3.ts - 10137M: 9 ODTU4.ts - 10137M: 8
Response	None
Example	OTN:RX1:ODUF:TS 1
Note	

Syntax	OTN:RX<Pt>:ODUflex:TS?
Description	This command returns the size of a TS set to be used in ODUflex.
Parameter	<Pt> = Port number
Response	<ts> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:RX1:ODUF:TS? → 1
Note	

15.2.14 OTN:RX<Pt>:TPTS:DETect

Syntax	OTN:RX<Pt>:TPTS:DETect <route>,<mode>
Description	This commands sets the TP and TS detection mode.
Parameters	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODTU01: ODTU01 ODTU12: ODTU12 ODTU21: ODTU2.1 ODTU2TS: ODTU2.ts ODTU13: ODTU13 ODTU23: ODTU23 ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU2E3E1: ODTU2e3e1 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48: ODTU4.8 ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts <mode> = <CHARACTER PROGRAM DATA> MANual: Manual TPDetect: Auto Detect TP TSDetect: Auto Detect TS <i>DEFault = MANual</i>
Response	None
Example	OTN:RX1:TPTS:DET ODTU12,MAN
Note	

Syntax	OTN:RX<Pt>:TPTS:DETect? <route>
Description	This query returns the TP and TS detection mode.
Parameters	<Pt> = Port number <route> = <CHARACTER PROGRAM DATA> ODTU01: ODTU01 ODTU12: ODTU12 ODTU21: ODTU2.1 ODTU2TS: ODTU2.ts ODTU13: ODTU13 ODTU23: ODTU23 ODTU31: ODTU3.1 ODTU3E28: ODTU3e2.8 ODTU2E3E1: ODTU2e3e1 ODTU3TS: ODTU3.ts ODTU41: ODTU4.1 ODTU42: ODTU4.2 ODTU48: ODTU4.8 ODTU431: ODTU4.31 ODTU4TS: ODTU4.ts
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	OTN:RX1:TPTS:DET? ODTU12 → MAN
Note	

15.2.15 OTN:RX<Pt>:MEAS:TTI:DET

Syntax	OTN:RX<Pt>:MEAS:TTI:DET <type>,<detection>
Description	This command sets TTI detection type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> SM PM TCM1 TCM2 TCM3 TCM4 TCM5 TCM6 <detection> = <CHARACTER PROGRAM DATA> OFF: OFF SAPI: SAPI DAPI: DAPI SDAPI: SAPI and DAPI ALL: SAPI, DAPI and Operator Code <i>DEFault = OFF</i>
Response	None
Example	OTN:RX1:MEAS:TTI:DET TCM1,SDAPI
Note	

Syntax	OTN:RX<Pt>:MEAS:TTI:DET? <type>
Description	This query returns TTI detection type.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> SM PM TCM1 TCM2 TCM3 TCM4 TCM5 TCM6
Response	<detection> = <CHARACTER RESPONSE DATA>
Example	OTN:RX1:MEAS:TTI:DET? TCM1 → SDAPI
Note	

15.3 Measurement Setup

15.3.1 OTN:TX<Pt>:MEAS:TTI:ENCoding

Syntax	OTN:TX<Pt>:MEAS:TTI:ENCoding <encoding>
Description	This command sets the TTI encoding standard.
Parameters	<Pt> = Port number <encoding> = <CHARACTER PROGRAM DATA> ITUT: ITU-T ANSI: ANSI <i>DEFault = ITUT</i>
Response	None
Example	OTN:TX1:MEAS:TTI:ENC ITUT
Note	

Syntax	OTN:TX<Pt>:MEAS:TTI:ENCoding?
Description	This query returns the TTI encoding standard.
Parameter	<Pt> = Port number
Response	<encoding> = <CHARACTER PROGRAM DATA>
Example	OTN:TX1:MEAS:TTI:ENC? → ITUT
Note	

15.3.2 OTN:RX<Pt>:MEAS:TCM:ENABle

Syntax	OTN:RX<Pt>:MEAS:TCM:ENABle <enable>
Description	This command enables or disables TCM measurement.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = ON</i>
Response	None
Example	OTN:RX1:MEAS:TCM:ENAB ON
Note	

Syntax	OTN:RX<Pt>:MEAS:TCM:ENABle?
Description	This query returns whether TCM measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	OTN:RX1:MEAS:TCM:ENAB? → 1
Note	

15.3.3 OTN:RX<Pt>:MEASurement:PLM

Syntax	OTN:RX<Pt>:MEASurement:PLM <enable>
Description	This command enables or disables PLM measurement.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = ON
Response	None
Example	OTN:RX1:MEAS:PLM ON
Note	

Syntax	OTN:RX<Pt>:MEASurement:PLM?
Description	This query returns whether PLM measurement is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	OTN:RX1:MEAS:PLM? → 1
Note	

15.3.4 MEASurement:SETup:OTN:RX<Pt>:MSIMdetection<stage>:SETup

Syntax	MEASurement:SETup:OTN:RX<Pt>:MSIMdetection<stage>:SETup <type>
Description	This command sets the MSIM detection type.
Parameters	<Pt> = Port number <stage> = Multiplexing stage (1-3) <type> = <CHARACTER PROGRAM DATA> NONE: None TXDATA: Use Tx OH preset PSI data RECEIVED: Use received PSI data <i>DEFault</i> = NONE
Response	None
Example	MEAS:SET:OTN:RX1:MSIM1:SET NONE
Note	

Syntax	MEASurement:SETup:OTN:RX<Pt>:MSIMdetection<stage>:SETup?
Description	This query returns the MSIM detection type.
Parameters	<Pt> = Port number <stage> = Multiplexing stage (1-3)
Response	<type> = <CHARACTER PROGRAM DATA>
Example	MEAS:SET:OTN:RX1:MSIM1:SET? → NONE
Note	

15.3.5 MEASurement:SETup:OTN:RX<Pt>:MSIMdetection<stage>:MSIM?

Syntax	MEASurement:SETup:OTN:RX<Pt>:MSIMdetection<stage>:MSIM?
Description	This query returns the expected MSIM detection pattern.
Parameters	<Pt> = Port number <stage> = Multiplexing stage (1-3)
Response	<value> = <HEXADECIMAL NUMERIC RESPONSE DATA> The MSIM detection pattern varies depending on the :MSIMdetection<stage>:SETup and the ODU type. ODTU01: PSI[2:3] ODTU12(PT20): PSI[2:5] ODTU12(PT21): PSI[2:9] ODTU21: PSI[2:9] ODTU13(PT20): PSI[2:17] ODTU13(PT21): PSI[2:33] ODTU23(PT20): PSI[2:17] ODTU23(PT20): PSI[2:33] ODTU31: PSI[2:33] ODTU3E28: PSI[2:33] ODTU2E3E1: PSI[2:17] ODTU3TS: PSI[2:33] ODTU41: PSI[2:81] ODTU42: PSI[2:81] ODTU48: PSI[2:81] ODTU431: PSI[2:81] ODTU4TS: PSI[2:81]
Example	MEAS:SET:OTN:RX1:MSIM1:MSIM? → 0
Note	

15.3.6 MEASurement:SETup:PERformance:OTN:RX<Pt>:PARAmeter

Syntax	MEASurement:SETup:PERformance:OTN:RX<Pt>:PARAmeter <param>
Description	This command sets the performance parameter for OTN. This command enables or disables the G.8201 or M.2401 performance evaluation.
Parameters	<Pt> = Port number <param> = <CHARACTER PROGRAM DATA> G8201: G.8201 M2401: M.2401/M.2110 <i>Default = M2401</i>
Response	None
Example	MEAS:SET:PERF:OTN:RX1:PAR G8201
Note	

Syntax	MEASurement:SETup:PERformance:OTN:RX<Pt>:PARAmeter?
Description	This query returns the performance parameter for OTN.
Response	<param> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:PERF:OTN:RX1:PAR? → G8201
Note	

15.3.7 MEASurement:SETup:PERformance:OTN:RX<Pt>:ALLocation

Syntax	MEASurement:SETup:PERformance:OTN:RX<Pt>:ALLocation <path>,<percentage>
Description	This command sets the allocation percentage for M.2401/M.2110.
Parameters	<Pt> = Port number <path> = <CHARACTER PROGRAM DATA> OTU: ODU: TCMi: i = 1 - 6 <i>DEFault = OTU</i> <number> = <NUMERIC PROGRAM DATA> <i>MINimum=0.00, MAXimum=100.00, DEFault=100.00</i>
Response	None
Example	MEAS:SET:PERF:OTN:RX1:ALL OTU,0
Note	

Syntax	MEASurement:SETup:PERformance:OTN:RX<Pt>:ALLocation? <path>
Description	This query returns the allocation percentage for M.2401/M.2110.
Parameters	<Pt> = Port number <path> = <CHARACTER RESPONSE DATA>
Response	<percentage> = <NR2 NUMERIC RESPONSE DATA>
Example	MEAS:SET:PERF:OTN:RX1:ALL? OTU → 0.00
Note	

15.3.8 MEASurement:SETup:PERformance:OTN:TPERiod

Syntax	MEASurement:SETup:PERformance:OTN:TPERiod <period>
Description	This command sets the evaluation period for OTN. For M.2401/M.2110.
Parameter	<period> = <CHARACTER PROGRAM DATA> 15M: 15 minutes 1H: 1 hour 2H: 2 hours 24H: 24 hours 7D: 7 days <i>DEFault = 15M</i>
Response	None
Example	MEAS:SET:PERF:OTN:TPER 15M
Note	

Syntax	MEASurement:SETup:PERformance:OTN:TPERiod?
Description	This query returns the evaluation item for OTN. For M.2401/M.2110.
Response	<period> = <CHARACTER RESPONSE DATA> 15M: 15 minutes 1H: 1 hour 2H: 2 hours 24H: 24 hours 7D: 7 days
Example	MEAS:SET:PERF:OTN:TPER? → 15M
Note	

15.3.9 MEASurement:SETup:PERFormance:OTN:RX<Pt>:OBJectives

Syntax	MEASurement:SETup:PERFormance:OTN:RX<Pt>:OBJectives <sesr>,<bber>
Description	This command sets the Performance Objectives.
Parameters	<Pt> = Port number <sesr> = <NUMERIC PROGRAM DATA> 0.01E-8 to 9.99E-1, default is 1.00E-1 <bber> = <NUMERIC PROGRAM DATA> 0.01E-8 to 9.99E-1, default is 1.00E-1
Response	None
Example	MEAS:SET:PERF:OTN:RX1:OBJ 1.00E-1,1.00E-1
Note	

Syntax	MEASurement:SETup:PERFormance:OTN:RX<Pt>:OBJectives?
Description	This query returns the Performance Objectives.
Parameter	<Pt> = Port number
Responses	<sser> = <NR3 NUMERIC RESPONSE DATA> <bber> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:PERF:OTN:RX1:OBJ? → 1.00E-1,1.00E-1
Note	

15.4 Result

15.4.1 OTN:RX<Pt>:IFETch?

Syntax	OTN:RX<Pt>:IFETch? <parameter>
Description	This query returns the results of item specified by the parameter.
Parameters	<Pt> = Port number ({<parameter>} + {,}*) = <EXPRESSION PROGRAM DATA> The response format is listed for each parameter. LLD¹ LOFLLD: LOF Lane OOFLLD: OOF FASLLD: FAS LLD MFASLLD: MFAS LLD LLMLLD: LLM LLD LOR: LOR OOR: OOR OLA: OLA MMAP: Marker Map RSKEW: Relative Skew OTU LOS: LOS LOF: LOF LOM: LOM OOF: OOF FAS: FAS OOM: OOM MFAS: MFAS FECC: FEC-Correctable FECU: FEC-Uncorrectable SMTIM: SM-TIM SMBIAE: SM-BIAE SMBDI: SM-BDI SMIAE: SM-IAE SMBIP8: SM-BIP8 SMBEI: SM-BEI AIS: AIS Stage n ODU (n = 0-3) SnLOFLOM: Stage n LOFLOM ² SnOOF: Stage n OOF SnFAS: Stage n FAS SnOOM: Stage n OOM SnMFAS: Stage n MFAS SnAIS: Stage n AIS SnOCI: Stage n OCI SnLCK: Stage n LCK SnPMTIM: Stage n PM-TIM SnPMBDI: Stage n PM-BDI SnPMBIP8: Stage n PM-BIP8 SnPMBEI: Stage n PM-BEI SnPLM: Stage n PLM SnFSF: Stage n FSF SnFSD: Stage n FSD SnBSF: Stage n BSF SnBSD: Stage n BSD

continued on next page...

...continued from previous page

SnMSIM: Stage n MSIM ² Client AISC: Client-AIS CSF: CSF LSS: LSS PRBSBIT: PRBS Bit Error CFREQ: Client frequency COFFS: Client frequency offset High-order ODU TCM (i = 1-6) TCMiTIM: TCMi-TIM TCMiBIAE: TCMi-BIAE TCMiBDI: TCMi-BDI TCMiIAE: TCMi-IAE TCMiLTC: TCMi-LTC TCMiBIP8: TCMi-BIP8 TCMiBEI: TCMi-BEI Stage n Justification (n = 0-2) SnFREQ: Stage n Frequency deviation SnINC: Stage n Inc SnINC1: Stage n Inc >1 SnINC2: Stage n Inc >2 SnDEC: Stage n Dec SnDEC1: Stage n Dec >1 SnDEC2: Stage n Dec >2 SnINCO: Stage n Inc Over SnDECO: Stage n Dec Over SnCRC8: Stage n CRC8 Error SnCRC5: Stage n CRC5 Error SnCMMIN: Stage n Cm(t) Minimum SnCMMAX: Stage n Cm(t) Maximum SnPJC: Stage n PJC SnPJC2: Stage n 2PJC SnPJC3: Stage n 3PJC SnNJC: Stage n NJC SnNJC2: Stage n 2NJC GFP GTFR: GFP-F Total Frame GIFR: GFP-F Idle Frame GCFR: GFP-F Client Frame GSSF: GFP-F SSF GCMFSIG: GFP-F CMF Loss of Signal GCMFSYNC: GFP-F CMF Loss of Sync GFCS: GFP-F FCS Error GCHECC: GFP-F/T cHEC correctable errors GCHCEU: GFP-F/T cHEC uncorrectable errors GTHECC: GFP-F/T tHEC correctable errors GTHECU: GFP-F/T tHEC uncorrectable errors GEHECC: GFP-F eHEC correctable errors GEHECU: GFP-F eHEC uncorrectable errors GIGFR: GFP-T Invalid GFP Frame GSCRC: GFP-T Superblock CRC Error GCSFSIG: GFP-T CSF Signal GCSFSYNC: GFP-T CSF Sync	
--	--

continued on next page...

...continued from previous page

	GPTI: GFP-F PTI Mismatch GUPI: GFP-F UPI Mismatch GTTFR: GFP-F Tx Total Frame GTIFR: GFP-F Tx Idle Frame GTCFR: GFP-F Tx Client Frame GTCMF: GFP-F Tx CMF OTU Performance NSTAT, FSTAT: Near-end/Far-end Status. Response: <STRING> NSES, FSES: Near-end/Far-end SES. Response: <Count>,<Ratio%> NBBE, FBBE: Near-end/Far-end BBE. Response: <Count>,<Ratio%> NUAS, FUAS: Near-end/Far-end UAS. Response: <Count> Stage n ODU Performance (n = 0-3) SnNSTAT, SnFSTAT, SnBSTAT: Near-end/Far-end/Bidirectional Status. Response: <STRING> SnNSES, SnFSES, SnBSES: Near-end/Far-end/Bidirectional SES. Response: <Count>,<Ratio%> SnNBBE, SnFBBE, SnBBBE: Near-end/Far-end/Bidirectional BBE. Response: <Count>,<Ratio%> SnNUAS, SnFUAS, SnBUAS: Near-end/Far-end/Bidirectional UAS. Response: <Count> High-order ODU TCMi Performance (i = 1-6) TCMiNSTAT, TCMiFSTAT, TCMiBSTAT: Near-end/Far-end/Bidirectional Status. Response: <STRING> TCMiNSES, TCMiFSES, TCMiBSES: Near-end/Far-end/Bidirectional SES. Response: <Count>,<Ratio%> TCMiNBBE, TCMiFBBE, TCMiBBBE: Near-end/Far-end/Bidirectional BBE. Response: <Count>,<Ratio%> TCMiNUAS, TCMiFUAS, TCMiBUAS: Near-end/Far-end/Bidirectional UAS. Response: <Count>
Response	{(<result>),}* = <EXPRESSION RESPONSE DATA> Format: Numeric List Each result is formatted according to the specification in the parameter field. Values that are not relevant or applicable for the current measurement return NaN (section 1.6.1).
Example	OTN:RX1:IFET? (LOS,LOF,00F) → (3,0.00532),(4,0.00709),(5,0.00887)
Notes	This command fetches the results from the interval selected using the MEASurement:SEtup:SElect command (see section 18.2.2). ¹ Results are only available at OTU3/4. ² This parameter is not available at stage 0. If the requested result is not available, NaN (section 1.6.1) is returned. If there is one or more results, the last “,” is always removed.

15.5 Status

15.5.1 OTN:STATus:RX<Pt>:AESummary[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:AESummary[:EVENT]?
Description	This query returns the alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of OTN:STAT:RX1:ALAR1[:EVENT]? DB2 (2) = Summary bit of OTN:STAT:RX1:ALAR2[:EVENT]? DB3 (4) = Summary bit of OTN:STAT:RX1:ALAR3[:EVENT]? DB4 (8) = Summary bit of OTN:STAT:RX1:ALAR4[:EVENT]? DB5 (16) = Summary bit of OTN:STAT:RX1:ALAR5[:EVENT]? DB6 (32) = Summary bit of OTN:STAT:RX1:ALAR6[:EVENT]? DB7 (64) = Summary bit of OTN:STAT:RX1:ALAR7[:EVENT]? DB8 (128) = Summary bit of OTN:STAT:RX1:ALAR8[:EVENT]? DB9 (256) = Summary bit of OTN:STAT:RX1:ALAR9[:EVENT]? DB10 (512) = Summary bit of OTN:STAT:RX1:ALAR10[:EVENT]? DB11 (1024) = Summary bit of OTN:STAT:RX1:ERR1[:EVENT]? DB12 (2048) = Summary bit of OTN:STAT:RX1:ERR2[:EVENT]? DB13 (4096) = Summary bit of OTN:STAT:RX1:ERR3[:EVENT]? DB14 (8192) = Summary bit of OTN:STAT:RX1:ERR4[:EVENT]? DB15 (16384) = Summary bit of OTN:STAT:RX1:ERR5[:EVENT]? DB16 (32768) = Summary bit of OTN:STAT:RX1:ERR6[:EVENT]?
Example	OTN:STAT:RX1:AES? → 65
Note	This command is for compatibility of V2.xx or V1.xx. Following commands are endorsed in V3.00 or later. OTN:STATus:RX<Pt>:MSTage:AESummary[:EVENT]?

15.5.2 OTN:STATus:RX<Pt>:AESummary:CONDition?

Syntax	OTN:STATus:RX<Pt>:AESummary:CONDition?
Description	This query returns alarms and errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as OTN:STAT:RX<Pt>:AESummary[:EVENT]?
Example	OTN:STAT:RX1:AES:COND? → 1024
Note	This command is for compatibility of V2.xx or V1.xx. Following commands are endorsed in V3.00 or later. OTN:STATus:RX<Pt>:MSTage:AESummary:CONDition?

15.5.3 OTN:STATus:RX<Pt>:ALARm<section>[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:ALARm<section>[:EVENT]?
Description	This query returns the alarms event register.
Parameters	<Pt> = Port number <section> = Section number (1-10)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> See Table 15.18
Example	OTN:STAT:RX1:ALAR5? → 92
Note	This command is for compatibility of V2.xx or V1.xx. Following commands are endorsed in V3.00 or later. OTN:STATus:RX<Pt>:MSTage:AESummary[:EVENT]?

continued on next page...

... continued from previous page

	OTN:STATus:RX<Pt>:OTU:ASUMmary[:EVENT]? OTN:STATus:RX<Pt>:SONE:ASUMmary[:EVENT]? OTN:STATus:RX<Pt>:STWO:ASUMmary[:EVENT]? OTN:STATus:RX<Pt>:STHRee:ASUMmary[:EVENT]? OTN:STATus:RX<Pt>:CLient:ASUMmary[:EVENT]? OTN:STATus:RX<Pt>:OTU:ALARm<section>[:EVENT]? OTN:STATus:RX<Pt>:SONE:ALARm<section>[:EVENT]? OTN:STATus:RX<Pt>:STWO:ALARm<section>[:EVENT]? OTN:STATus:RX<Pt>:STHRee:ALARm<section>[:EVENT]? OTN:STATus:RX<Pt>:CLient:ALARm<section>[:EVENT]?
--	--

15.5.4 OTN:STATus:RX<Pt>:ALARm<section>:CONDition?

Syntax	OTN:STATus:RX<Pt>:ALARm<section>:CONDition?
Description	This query returns the alarms condition register query.
Parameters	<Pt> = Port number
	<section> = Section number (1-10)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> See Table 15.18
Example	OTN:STAT:RX1:ALAR5:COND? → 0
Note	This command is for compatibility of V2.xx or V1.xx. Following commands are endorsed in V3.00 or later. OTN:STATus:RX<Pt>:MSTage:AESummary:CONDition? OTN:STATus:RX<Pt>:OTU:ASUMmary:CONDition? OTN:STATus:RX<Pt>:SONE:ASUMmary:CONDition? OTN:STATus:RX<Pt>:STWO:ASUMmary:CONDition? OTN:STATus:RX<Pt>:STHRee:ASUMmary:CONDition? OTN:STATus:RX<Pt>:CLient:ASUMmary:CONDition? OTN:STATus:RX<Pt>:OTU:ALARm<section>:CONDition? OTN:STATus:RX<Pt>:SONE:ALARm<section>:CONDition? OTN:STATus:RX<Pt>:STWO:ALARm<section>:CONDition? OTN:STATus:RX<Pt>:STHRee:ALARm<section>:CONDition? OTN:STATus:RX<Pt>:CLient:ALARm<section>:CONDition?

15.5.5 OTN:STATus:RX<Pt>:ERRor<section>[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:ERRor<section>[:EVENT]?
Description	This query returns the errors event register.
Parameters	<Pt> = Port number
	<section> = Section number (1-6)
Response	<register>=<NR1 NUMERIC RESPONSE DATA> See Table 15.19
Response	
Example	OTN:STAT:RX1:ERR1? → 0
Note	This command is for compatibility of V2.xx or V1.xx. Following commands are endorsed in V3.00 or later. OTN:STATus:RX<Pt>:MSTage:AESummary[:EVENT]? OTN:STATus:RX<Pt>:OTU:ESUMmary[:EVENT]? OTN:STATus:RX<Pt>:SONE:ESUMmary[:EVENT]? OTN:STATus:RX<Pt>:STWO:ESUMmary[:EVENT]? OTN:STATus:RX<Pt>:STHRee:ESUMmary[:EVENT]? OTN:STATus:RX<Pt>:CLient:ESUMmary[:EVENT]? OTN:STATus:RX<Pt>:OTU:ERRor<section>[:EVENT]? OTN:STATus:RX<Pt>:SONE:ERRor<section>[:EVENT]? OTN:STATus:RX<Pt>:STWO:ERRor<section>[:EVENT]? OTN:STATus:RX<Pt>:STHRee:ERRor<section>[:EVENT]? OTN:STATus:RX<Pt>:CLient:ERRor<section>[:EVENT]?

Table 15.18: Alarm Items

OTU/ODU Section	1	2	3	4
DB1 (1)	LOS	TCM1-TIM	TCM5-BDI	Client-AIS
DB2 (2)	OTU-AIS	TCM2-TIM	TCM6-BDI	CSF
DB3 (4)	LOF	TCM3-TIM	TCM1-IAE	LSS
DB4 (8)	OOF	TCM4-TIM	TCM2-IAE	LOF-LLD
DB5 (16)	LOM	TCM5-TIM	TCM3-IAE	OOF-LLD
DB6 (32)	OOM	TCM6-TIM	TCM4-IAE	LOR-LLD
DB7 (64)	SM-TIM	TCM1-BIAE	TCM5-IAE	OOR-LLD
DB8 (128)	SM-BIAE	TCM2-BIAE	TCM6-IAE	Not used
DB9 (256)	SM-BDI	TCM3-BIAE	TCM1-LTC	Not used
DB10 (512)	SM-IAE	TCM4-BIAE	TCM2-LTC	Not used
DB11 (1024)	ODU-AIS	TCM5-BIAE	TCM3-LTC	Not used
DB12 (2048)	ODU-LCK	TCM6-BIAE	TCM4-LTC	Not used
DB13 (4096)	ODU-OCI	TCM1-BDI	TCM5-LTC	Not used
DB14 (8192)	PM-TIM	TCM2-BDI	TCM6-LTC	Not used
DB15 (16384)	PM-BDI	TCM3-BDI	PLM	Not used
DB16 (32768)		TCM4-BDI	MSIM	Not used
Stage 1 Section	5	6	7	
DB1 (1)	LOFLOM	TCM3-BIAE	TCM1-LTC	
DB2 (2)	OOF	TCM4-BIAE	TCM2-LTC	
DB3 (4)	OOM	TCM5-BIAE	TCM3-LTC	
DB4 (8)	ODU-AIS	TCM6-BIAE	TCM4-LTC	
DB5 (16)	ODU-LCK	TCM1-BDI	TCM5-LTC	
DB6 (32)	ODU-OCI	TCM2-BDI	TCM6-LTC	
DB7 (64)	PM-TIM	TCM3-BDI	PLM	
DB8 (128)	PM-BDI	TCM4-BDI	Client-AIS	
DB9 (256)	TCM1-TIM	TCM5-BDI	CSF	
DB10 (512)	TCM2-TIM	TCM6-BDI	MSIM	
DB11 (1024)	TCM3-TIM	TCM1-IAE	Not used	
DB12 (2048)	TCM4-TIM	TCM2-IAE	Not used	
DB13 (4096)	TCM5-TIM	TCM3-IAE	Not used	
DB14 (8192)	TCM6-TIM	TCM4-IAE	Not used	
DB15 (16384)	TCM1-BIAE	TCM5-IAE	Not used	
DB16 (32768)	TCM2-BIAE	TCM6-IAE	Not used	
Stage 2 Section	8	9	10	
DB1 (1)	LOFLOM	TCM3-BIAE	TCM1-LTC	
DB2 (2)	OOF	TCM4-BIAE	TCM2-LTC	
DB3 (4)	OOM	TCM5-BIAE	TCM3-LTC	
DB4 (8)	ODU-AIS	TCM6-BIAE	TCM4-LTC	
DB5 (16)	ODU-LCK	TCM1-BDI	TCM5-LTC	
DB6 (32)	ODU-OCI	TCM2-BDI	TCM6-LTC	
DB7 (64)	PM-TIM	TCM3-BDI	PLM	
DB8 (128)	PM-BDI	TCM4-BDI	Client-AIS	
DB9 (256)	TCM1-TIM	TCM5-BDI	CSF	
DB10 (512)	TCM2-TIM	TCM6-BDI	Not used	
DB11 (1024)	TCM3-TIM	TCM1-IAE	Not used	
DB12 (2048)	TCM4-TIM	TCM2-IAE	Not used	
DB13 (4096)	TCM5-TIM	TCM3-IAE	Not used	
DB14 (8192)	TCM6-TIM	TCM4-IAE	Not used	
DB15 (16384)	TCM1-BIAE	TCM5-IAE	Not used	
DB16 (32768)	TCM2-BIAE	TCM6-IAE	Not used	

15.5.6 OTN:STATus:RX<Pt>:ERRor<section>:CONDition?

Syntax	OTN:STATus:RX<Pt>:ERRor<section>:CONDition?
Description	This query returns the errors condition register query.
Parameters	<Pt> = Port number <section> = Section number (1-6)
Response	<register>=<NR1 NUMERIC RESPONSE DATA> See Table 15.19
Example	OTN:STAT:RX1:ERR1:COND? → 0
Note	This command is for compatibility of V2.xx or V1.xx. Following commands are endorsed in V3.00 or later. OTN:STATus:RX<Pt>:MSTage:AESummary:CONDition? OTN:STATus:RX<Pt>:OTU:ESUMmary:CONDition? OTN:STATus:RX<Pt>:SONE:ESUMmary:CONDition? OTN:STATus:RX<Pt>:STWO:ESUMmary:CONDition? OTN:STATus:RX<Pt>:STHRee:ESUMmary:CONDition? OTN:STATus:RX<Pt>:CLient:ESUMmary:CONDition? OTN:STATus:RX<Pt>:OTU:ERRor<section>:CONDition? OTN:STATus:RX<Pt>:SONE:ERRor<section>:CONDition? OTN:STATus:RX<Pt>:STWO:ERRor<section>:CONDition? OTN:STATus:RX<Pt>:STHRee:ERRor<section>:CONDition? OTN:STATus:RX<Pt>:CLient:ERRor<section>:CONDition?

15.5.7 OTN:STATus:RX<Pt>:MSTage:AESummary[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:MSTage:AESummary[:EVENT]?
Description	This query returns the alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of OTN:STAT:RX<Pt>:OTU:ASUM[:EVEN]? OTU Alarm DB2 (2) = Summary bit of OTN:STAT:RX<Pt>:SONE:ASUM[:EVEN]? Stage 1 Alarm DB3 (4) = Summary bit of OTN:STAT:RX<Pt>:STWO:ASUM[:EVEN]? Stage 2 Alarm DB4 (8) = Summary bit of OTN:STAT:RX<Pt>:STHR:ASUM[:EVEN]? Stage 3 Alarm DB5 - DB7 NOT USED DB8 (128) = Summary bit of OTN:STAT:RX<Pt>:CLI:ESUM[:EVEN]? Client Alarm DB9 (256) = Summary bit of OTN:STAT:RX<Pt>:OTU:ESUM[:EVEN]? OTU Error DB10 (512) = Summary bit of OTN:STAT:RX<Pt>:SONE:ESUM[:EVEN]? Stage 1 Error DB11 (1024) = Summary bit of OTN:STAT:RX<Pt>:STWO:ESUM[:EVEN]? Stage 2 Error DB12 (2048) = Summary bit of OTN:STAT:RX<Pt>:STHR:ESUM[:EVEN]? Stage 3 Error DB13 - DB15 NOT USED DB16 (32768) = Summary bit of OTN:STAT:RX<Pt>:CLI:ESUM[:EVEN]? Client Error summary
Example	OTN:STAT:RX1:MST:AES? → 65
Note	

15.5.8 OTN:STATus:RX<Pt>:MSTage:AESummary:CONDition?

Syntax	OTN:STATus:RX<Pt>:MSTage:AESummary:CONDition?
Description	This query returns alarms and errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as OTN:STATus:RX<Pt>:MSTage:AESummary[:EVEN]?
Example	OTN:STAT:RX1:MST:AES:COND? → 1024
Note	

Table 15.19: Error Items

OTU/ODU Section	1	2
DB1 (1)	FAS	TCM3-BEI
DB2 (2)	MFAS	TCM4-BEI
DB3 (4)	SM-BIP8	TCM5-BEI
DB4 (8)	SM-BEI	TCM6-BEI
DB5 (16)	FCE	CRC8 Error
DB6 (32)	FUEB	CRC5 Error
DB7 (64)	PM-BIP8	FAS-LLD
DB8 (128)	PM-BEI	ILA/OLA
DB9 (256)	TCM1-BIP8	MFAS LLD
DB10 (512)	TCM2-BIP8	LLM LLD
DB11 (1024)	TCM3-BIP8	Not used
DB12 (2048)	TCM4-BIP8	Not used
DB13 (4096)	TCM5-BIP8	Not used
DB14 (8192)	TCM6-BIP8	Not used
DB15 (16384)	TCM1-BEI	Not used
DB16 (32768)	TCM2-BEI	Not used
Stage 1 Section	3	4
DB1 (1)	FAS	CRC5 Error
DB2 (2)	PM-BIP8	Not used
DB3 (4)	PM-BEI	Not used
DB4 (8)	TCM1-BIP8	Not used
DB5 (16)	TCM2-BIP8	Not used
DB6 (32)	TCM3-BIP8	Not used
DB7 (64)	TCM4-BIP8	Not used
DB8 (128)	TCM5-BIP8	Not used
DB9 (256)	TCM6-BIP8	Not used
DB10 (512)	TCM1-BEI	Not used
DB11 (1024)	TCM2-BEI	Not used
DB12 (2048)	TCM3-BEI	Not used
DB13 (4096)	TCM4-BEI	Not used
DB14 (8192)	TCM5-BEI	Not used
DB15 (16384)	TCM6-BEI	Not used
DB16 (32768)	CRC8 Error	Not used
Stage 2 Section	5	6
DB1 (1)	FAS	cHEC correctable
DB2 (2)	PM-BIP8	cHEC uncorrectable
DB3 (4)	PM-BEI	tHEC correctable
DB4 (8)	TCM1-BIP8	tHEC uncorrectable
DB5 (16)	TCM2-BIP8	Invalid GFP Frame
DB6 (32)	TCM3-BIP8	Superblock CRC
DB7 (64)	TCM4-BIP8	CSF Signal
DB8 (128)	TCM5-BIP8	CSF Sync
DB9 (256)	TCM6-BIP8	Not used
DB10 (512)	TCM1-BEI	Not used
DB11 (1024)	TCM2-BEI	Not used
DB12 (2048)	TCM3-BEI	Not used
DB13 (4096)	TCM4-BEI	Not used
DB14 (8192)	TCM5-BEI	Not used
DB15 (16384)	TCM6-BEI	Not used
DB16 (32768)	PRBS Bit Error	Not used

15.5.9 OTN:STATus:RX<Pt>:OTU:ASUMmary[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:OTU:ASUMmary[:EVENT]?
Description	This query returns the OTU alarms summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of OTN:STAT:RX<Pt>:OTU:ALAR1:COND? DB2 (2) = Summary bit of OTN:STAT:RX<Pt>:OTU:ALAR2:COND? DB3 (4) = Summary bit of OTN:STAT:RX<Pt>:OTU:ALAR3:COND? DB4 (8) = Summary bit of OTN:STAT:RX<Pt>:OTU:ALAR4:COND? DB5 - DB8 NOT USED DB9 (256) = Summary bit of OTN:STATus:RX<Pt>:OTU:ALAR9:COND? DB10 - DB16 NOT USED
Example	OTN:STAT:RX1:OTU:ASUM? → 14
Note	

15.5.10 OTN:STATus:RX<Pt>:OTU:ASUMmary:CONDition?

Syntax	OTN:STATus:RX<Pt>:OTU:ASUMmary:CONDition?
Description	This query returns OTU alarms summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as OTN:STAT:RX<Pt>:OTU:ASUMmary[:EVENT]?
Example	OTN:STAT:RX1:OTU:ASUM:COND? → 12
Note	

15.5.11 OTN:STATus:RX<Pt>:OTU:ESUMmary[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:OTU:ESUMmary[:EVENT]?
Description	This query returns the OTU errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of OTN:STAT:RX<Pt>:OTU:ERR1:COND? DB2 (2) = Summary bit of OTN:STAT:RX<Pt>:OTU:ERR2:COND? DB3 - DB8 NOT USED DB9 (256) = Summary bit of OTN:STAT:RX<Pt>:OTU:ERR9:COND? DB10 - DB16 NOT USED
Example	OTN:STAT:RX1:OTU:ESUM? → 14
Note	

15.5.12 OTN:STATus:RX<Pt>:OTU:ESUMmary:CONDition?

Syntax	OTN:STATus:RX<Pt>:OTU:ESUMmary:CONDition?
Description	This query returns OTU errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as OTN:STAT:RX<Pt>:OTU:ESUMmary[:EVENT]?
Example	OTN:STAT:RX1:OTU:ESUM:COND? → 12
Note	

15.5.13 OTN:STATus:RX<Pt>:OTU:ALARm<section>[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:OTU:ALARm<section>[:EVENT]?
Description	This query returns the OTU alarms event register. The content of this register is summarized in DB1-DB4/DB9 of the OTN:STATus:RX<Pt>:OTU:ASUMmary:CONDition? register.
Parameters	<Pt> = Port number <section> = Section number (1-4,9)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> See Table 15.20
Example	OTN:STAT:RX1:OTU:ALAR5? → 92
Note	

15.5.14 OTN:STATus:RX<Pt>:OTU:ALARm<section>:CONDition?

Syntax	OTN:STATus:RX<Pt>:OTU:ALARm<section>:CONDition?
Description	This query returns the OTU alarms condition register query.
Parameters	<Pt> = Port number <section> = Section number (1-4,9)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> See Table 15.20
Response	<register>=<NR1 NUMERIC RESPONSE DATA>
Example	OTN:STAT:RX1:OTU:ALAR5:COND? → 0
Note	

Table 15.20: Alarm Items

OTU/ODU Section	1	2	3	4
DB1 (1)	LOS	TCM1-TIM	TCM5-BDI	FSF
DB2 (2)	OTU-AIS	TCM2-TIM	TCM6-BDI	FSD
DB3 (4)	LOF	TCM3-TIM	TCM1-IAE	BSF
DB4 (8)	OOF	TCM4-TIM	TCM2-IAE	BSD
DB5 (16)	LOM	TCM5-TIM	TCM3-IAE	Not used
DB6 (32)	OOM	TCM6-TIM	TCM4-IAE	Not used
DB7 (64)	SM-TIM	TCM1-BIAE	TCM5-IAE	Not used
DB8 (128)	SM-BIAE	TCM2-BIAE	TCM6-IAE	Not used
DB9 (256)	SM-BDI	TCM3-BIAE	TCM1-LTC	Not used
DB10 (512)	SM-IAE	TCM4-BIAE	TCM2-LTC	Not used
DB11 (1024)	ODU-AIS	TCM5-BIAE	TCM3-LTC	Not used
DB12 (2048)	ODU-LCK	TCM6-BIAE	TCM4-LTC	Not used
DB13 (4096)	ODU-OCI	TCM1-BDI	TCM5-LTC	Not used
DB14 (8192)	PM-TIM	TCM2-BDI	TCM6-LTC	Not used
DB15 (16384)	PM-BDI	TCM3-BDI	PLM	Not used
DB16 (32768)	Not used	TCM4-BDI	MSIM	Not used
OTL Section	5-8	9		
DB1 (1)	Not used	ILA/OLA		
DB2 (2)	Not used	LOF-OTL		
DB3 (4)	Not used	OOF-OTL		
DB4 (8)	Not used	LOR-OTL		
DB5 (16)	Not used	OOR-OTL		
DB6 (32)	Not used	Not used		
DB7 (64)	Not used	Not used		
DB8 (128)	Not used	Not used		
DB9 (256)	Not used	Not used		
DB10 (512)	Not used	Not used		
DB11 (1024)	Not used	Not used		
DB12 (2048)	Not used	Not used		
DB13 (4096)	Not used	Not used		
DB14 (8192)	Not used	Not used		
DB15 (16384)	Not used	Not used		
DB16 (32768)	Not used	Not used		

15.5.15 OTN:STATus:RX<Pt>:OTU:ERRor<section>[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:OTU:ERRor<section>[:EVENT]?
Description	This query returns the OTU errors event register. The content of this register is summarized in DB1/DB2/DB9 of the OTN:STATus:RX<Pt>:OTU:ESUMmary:CONDition? register.
Parameters	<Pt> = Port number <section> = Section number (1-2,9)
Response	<register>=<NR1 NUMERIC RESPONSE DATA> See Table 15.21
Response	
Example	OTN:STAT:RX1:OTU:ERR1? → 0
Note	

Table 15.21: Error Items

OTU/ODU Section	1	2
DB1 (1)	FAS	TCM3-BEI
DB2 (2)	MFAS	TCM4-BEI
DB3 (4)	SM-BIP8	TCM5-BEI
DB4 (8)	SM-BEI	TCM6-BEI
DB5 (16)	FEC Correctable	CRC8 Error
DB6 (32)	FEC Uncorrectable	CRC5 Error
DB7 (64)	PM-BIP8	Not used
DB8 (128)	PM-BEI	Not used
DB9 (256)	TCM1-BIP8	Not used
DB10 (512)	TCM2-BIP8	Not used
DB11 (1024)	TCM3-BIP8	Not used
DB12 (2048)	TCM4-BIP8	Not used
DB13 (4096)	TCM5-BIP8	Not used
DB14 (8192)	TCM6-BIP8	Not used
DB15 (16384)	TCM1-BEI	Not used
DB16 (32768)	TCM2-BEI	Not used
OTL Section	3-8	9
DB1 (1)	Not used	FAS-OTL
DB2 (2)	Not used	MFAS-OTL
DB3 (4)	Not used	LLM-OTL
DB4 (8)	Not used	Not used
DB5 (16)	Not used	Not used
DB6 (32)	Not used	Not used
DB7 (64)	Not used	Not used
DB8 (128)	Not used	Not used
DB9 (256)	Not used	Not used
DB10 (512)	Not used	Not used
DB11 (1024)	Not used	Not used
DB12 (2048)	Not used	Not used
DB13 (4096)	Not used	Not used
DB14 (8192)	Not used	Not used
DB15 (16384)	Not used	Not used
DB16 (32768)	Not used	Not used

15.5.16 OTN:STATus:RX<Pt>:OTU:ERRor<section>:CONDition?

Syntax	OTN:STATus:RX<Pt>:OTU:ERRor<section>:CONDition?
Description	This query returns the OTU errors condition register query.
Parameters	<Pt> = Port number <section> = Section number (1-2,9)
Response	<register>=<NR1 NUMERIC RESPONSE DATA> See Table 15.21
Example	OTN:STAT:RX1:OTU:ERR1:COND? → 0
Note	

15.5.17 OTN:STATus:RX<Pt>:SONE:ASUMmary[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:SONE:ASUMmary[:EVENT]?
Description	This query returns the stage1 ODU alarms summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of OTN:STATus:RX<Pt>:SONE:ALAR1[:EVENT]? DB2 (2) = Summary bit of OTN:STATus:RX<Pt>:SONE:ALAR2[:EVENT]? DB3 (4) = Summary bit of OTN:STATus:RX<Pt>:SONE:ALAR3[:EVENT]? DB4 (8) = Summary bit of OTN:STATus:RX<Pt>:SONE:ALAR4[:EVENT]? DB5 - DB16 NOT USED
Example	OTN:STAT:RX1:SONE:ASUM? → 6
Note	

15.5.18 OTN:STATus:RX<Pt>:SONE:ASUMmary:CONDition?

Syntax	OTN:STATus:RX<Pt>:SONE:ASUMmary:CONDition?
Description	This query returns stage1 ODU alarms summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as OTN:STAT:RX<Pt>:SONE:ASUMmary[:EVENT]?
Example	OTN:STAT:RX1:SONE:ASUM:COND? → 3
Note	

15.5.19 OTN:STATus:RX<Pt>:SONE:ESUMmary[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:SONE:ESUMmary[:EVENT]?
Description	This query returns the stage1 ODU errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of OTN:STATus:RX<Pt>:SONE:ERRor1:COND? DB2 (2) = Summary bit of OTN:STATus:RX<Pt>:SONE:ERRor2:COND? DB3 - DB16 NOT USED
Example	OTN:STAT:RX1:SONE:ESUM? → 6
Note	

15.5.20 OTN:STATus:RX<Pt>:SONE:ESUMmary:CONDition?

Syntax	OTN:STATus:RX<Pt>:SONE:ESUMmary:CONDition?
Description	This query returns stage1 ODU errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as OTN:STAT:RX<Pt>:SONE:ESUMmary[:EVENT]?
Example	OTN:STAT:RX1:SONE:ESUM:COND? → 3
Note	

Table 15.22: Alarm Items

ODU Section	1	2	3	4
DB1 (1)	Not used	Not used	Not used	FSF
DB2 (2)	Not used	Not used	Not used	FSD
DB3 (4)	LOFLOM	Not used	Not used	BSF
DB4 (8)	OOF	Not used	Not used	BSD
DB5 (16)	Not used	Not used	Not used	Not used
DB6 (32)	OOM	Not used	Not used	Not used
DB7 (64)	Not used	Not used	Not used	Not used
DB8 (128)	Not used	Not used	Not used	Not used
DB9 (256)	Not used	Not used	Not used	Not used
DB10 (512)	Not used	Not used	Not used	Not used
DB11 (1024)	ODU-AIS	Not used	Not used	Not used
DB12 (2048)	ODU-LCK	Not used	Not used	Not used
DB13 (4096)	ODU-OCI	Not used	Not used	Not used
DB14 (8192)	PM-TIM	Not used	Not used	Not used
DB15 (16384)	PM-BDI	Not used	PLM	Not used
DB16 (32768)	Not used	Not used	MSIM	Not used

15.5.21 OTN:STATus:RX<Pt>:SONE:ALARm<section>[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:SONE:ALARm<section>[:EVENT]?
Description	This query returns the stage1 ODU alarms event register. The content of this register is summarized in DB1-DB4 of the OTN:STATus:RX<Pt>:SONE:ASUMmary:CONDition? register.
Parameters	<Pt> = Port number <section> = Section number (1-4)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> See Table 15.22
Example	OTN:STAT:RX1:SONE:ALAR4? → 1
Note	

15.5.22 OTN:STATus:RX<Pt>:SONE:ALARm<section>:CONDition?

Syntax	OTN:STATus:RX<Pt>:SONE:ALARm<section>:CONDition?
Description	This query returns the stage1 ODU alarms condition register query.
Parameters	<Pt> = Port number <section> = Section number (1-4)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> See Table 15.22
Response	<register>=<NR1 NUMERIC RESPONSE DATA>
Example	OTN:STAT:RX1:SONE:ALAR5:COND? → 0
Note	

Table 15.23: Error Items

ODU Section	1	2
DB1 (1)	FAS	Not used
DB2 (2)	Not used	Not used
DB3 (4)	Not used	Not used
DB4 (8)	Not used	Not used
DB5 (16)	Not used	CRC8 Error
DB6 (32)	Not used	CRC5 Error
DB7 (64)	PM-BIP8	Not used
DB8 (128)	PM-BEI	Not used
DB9 (256)	Not used	Not used
DB10 (512)	Not used	Not used
DB11 (1024)	Not used	Not used
DB12 (2048)	Not used	Not used
DB13 (4096)	Not used	Not used
DB14 (8192)	Not used	Not used
DB15 (16384)	Not used	Not used
DB16 (32768)	Not used	Not used

15.5.23 OTN:STATus:RX<Pt>:SONE:ERRor<section>[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:SONE:ERRor<section>[:EVENT]?
Description	This query returns the stage1 ODU errors event register. The content of this register is summarized in DB1/DB2 of the OTN:STATus:RX<Pt>:SONE:ESUMmary:CONDition? register.
Parameters	<Pt> = Port number <section> = Section number (1-2)
Response	<register>=<NR1 NUMERIC RESPONSE DATA> See Table 15.23
Response	
Example	OTN:STAT:RX1:SONE:ERR1? → 0
Note	

15.5.24 OTN:STATus:RX<Pt>:SONE:ERRor<section>:CONDition?

Syntax	OTN:STATus:RX<Pt>:SONE:ERRor<section>:CONDition?
Description	This query returns the stage1 ODU errors condition register query.
Parameters	<Pt> = Port number <section> = Section number (1-2)
Response	<register>=<NR1 NUMERIC RESPONSE DATA> See Table 15.23
Example	OTN:STAT:RX1:SONE:ERR1:COND? → 0
Note	

15.5.25 OTN:STATus:RX<Pt>:STWO:ASUMmary[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:STWO:ASUMmary[:EVENT]?
Description	This query returns the stage2 ODU alarms summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of OTN:STAT:RX<Pt>:STWO:ALAR1[:EVENT]? DB2 (2) = Summary bit of OTN:STAT:RX<Pt>:STWO:ALAR2[:EVENT]? DB3 (4) = Summary bit of OTN:STAT:RX<Pt>:STWO:ALAR3[:EVENT]? DB4 (8) = Summary bit of OTN:STAT:RX<Pt>:STWO:ALAR4[:EVENT]? DB5 - DB16 NOT USED
Example	OTN:STAT:RX1:STWO:ASUM? → 6
Note	

15.5.26 OTN:STATus:RX<Pt>:STWO:ASUMmary:CONDition?

Syntax	OTN:STATus:RX<Pt>:STWO:ASUMmary:CONDition?
Description	This query returns stage2 ODU errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as OTN:STAT:RX<Pt>:STWO:ASUMmary[:EVENT]?
Example	OTN:STAT:RX1:STWO:ASUM:COND? → 3
Note	

15.5.27 OTN:STATus:RX<Pt>:STWO:ESUMmary[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:STWO:ESUMmary[:EVENT]?
Description	This query returns the stage2 ODU errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of OTN:STAT:RX<Pt>:STWO:ERR1[:EVENT]? DB2 (2) = Summary bit of OTN:STAT:RX<Pt>:STWO:ERR2[:EVENT]? DB3 - DB16 NOT USED
Example	OTN:STAT:RX1:STWO:ESUM? → 6
Note	

15.5.28 OTN:STATus:RX<Pt>:STWO:ESUMmary:CONDition?

Syntax	OTN:STATus:RX<Pt>:STWO:ESUMmary:CONDition?
Description	This query returns stage2 ODU errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as OTN:STAT:RX<Pt>:STWO:ESUMmary[:EVENT]?
Example	OTN:STAT:RX1:STWO:ESUM:COND? → 3
Note	

15.5.29 OTN:STATus:RX<Pt>:STWO:ALARm<section>[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:STWO:ALARm<section>[:EVENT]?
Description	This query returns the stage2 ODU alarms event register. The content of this register is summarized in DB1-DB4 of the OTN:STATus:RX<Pt>:STWO:ASUMmary:CONDition? register.
Parameters	<Pt> = Port number <section> = Section number (1-4)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> See Table 15.22
Example	OTN:STAT:RX1:STWO:ALAR5? → 92
Note	

15.5.30 OTN:STATus:RX<Pt>:STWO:ALARm<section>:CONDition?

Syntax	OTN:STATus:RX<Pt>:STWO:ALARm<section>:CONDition?
Description	This query returns the stage2 ODU alarms condition register query.
Parameters	<Pt> = Port number <section> = Section number (1-4)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> See Table 15.22
Response	<register>=<NR1 NUMERIC RESPONSE DATA>
Example	OTN:STAT:RX1:STWO:ALAR5:COND? → 0
Note	

15.5.31 OTN:STATus:RX<Pt>:STWO:ERRor<section>[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:STWO:ERRor<section>[:EVENT]?
Description	This query returns the stage2 ODU errors event register. The content of this register is summarized in DB1/DB2 of the OTN:STATus:RX<Pt>:STWO:ESUMmary:CONDition? register.
Parameters	<Pt> = Port number <section> = Section number (1-2)
Response	<register>=<NR1 NUMERIC RESPONSE DATA> See Table 15.23
Response	
Example	OTN:STAT:RX1:STWO:ERR1? → 0
Note	

15.5.32 OTN:STATus:RX<Pt>:STWO:ERRor<section>:CONDition?

Syntax	OTN:STATus:RX<Pt>:STWO:ERRor<section>:CONDition?
Description	This query returns the stage2 ODU errors condition register query.
Parameters	<Pt> = Port number <section> = Section number (1-2)
Response	<register>=<NR1 NUMERIC RESPONSE DATA> See Table 15.23
Example	OTN:STAT:RX1:STWO:ERR1:COND? → 0
Note	

15.5.33 OTN:STATus:RX<Pt>:STHRee:ASUMmary[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:STHRee:ASUMmary[:EVENT]?
Description	This query returns the stage3 ODU alarms summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of OTN:STAT:RX<Pt>:STHR:ALAR1[:EVEN]? DB2 (2) = Summary bit of OTN:STAT:RX<Pt>:STHR:ALAR2[:EVEN]? DB3 (4) = Summary bit of OTN:STAT:RX<Pt>:STHR:ALAR3[:EVEN]? DB4 (8) = Summary bit of OTN:STAT:RX<Pt>:STHR:ALAR4[:EVEN]? DB5 - DB16 NOT USED
Example	OTN:STAT:RX1:STHR:ASUM? → 6
Note	

15.5.34 OTN:STATus:RX<Pt>:STHRee:ASUMmary:CONDition?

Syntax	OTN:STATus:RX<Pt>:STHRee:ASUMmary:CONDition?
Description	This query returns stage3 ODU alarms summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as OTN:STAT:RX<Pt>:STHR:ASUMmary[:EVEN]?
Example	OTN:STAT:RX1:STHR:ASUM:COND? → 3
Note	

15.5.35 OTN:STATus:RX<Pt>:STHRee:ESUMmary[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:STHRee:ESUMmary[:EVENT]?
Description	This query returns the stage3 ODU errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of OTN:STAT:RX<Pt>:STHR:ERR1[:EVEN]? DB2 (2) = Summary bit of OTN:STAT:RX<Pt>:STHR:ERR2[:EVEN]? DB3 - DB16 NOT USED
Example	OTN:STAT:RX1:STHR:ESUM? → 6
Note	

15.5.36 OTN:STATus:RX<Pt>:STHRee:ESUMmary:CONDition?

Syntax	OTN:STATus:RX<Pt>:STHRee:ESUMmary:CONDition?
Description	This query returns stage3 ODU errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as OTN:STAT:RX<Pt>:STHR:ESUMmary[:EVEN]?
Example	OTN:STAT:RX1:STHR:ESUM:COND? → 3
Note	

15.5.37 OTN:STATus:RX<Pt>:STHRee:ALARm<section>[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:STHRee:ALARm<section>[:EVENT]?
Description	This query returns the stage3 ODU alarms event register. The content of this register is summarized in DB1-DB4 of the OTN:STATus:RX<Pt>:STHRee:ASUMmary:CONDition? register.
Parameters	<Pt> = Port number <section> = Section number (1-4)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> See Table 15.22
Example	OTN:STAT:RX1:STHR:ALAR5? → 92
Note	

15.5.38 OTN:STATus:RX<Pt>:STHRee:ALARm<section>:CONDition?

Syntax	OTN:STATus:RX<Pt>:STHRee:ALARm<section>:CONDition?
Description	This query returns the stage3 ODU alarms condition register query.
Parameters	<Pt> = Port number <section> = Section number (1-4)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> See Table 15.22
Response	<register>=<NR1 NUMERIC RESPONSE DATA>
Example	OTN:STAT:RX1:STHR:ALAR5:COND? → 0
Note	

15.5.39 OTN:STATus:RX<Pt>:STHRee:ERRor<section>[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:STHRee:ERRor<section>[:EVENT]?
Description	This query returns the stage3 ODU errors event register. The content of this register is summarized in DB1/DB2 of the OTN:STATus:RX<Pt>:STHRee:ESUMmary:CONDition? register.
Parameters	<Pt> = Port number <section> = Section number (1-2)
Response	<register>=<NR1 NUMERIC RESPONSE DATA> See Table 15.23
Response	<register>=<NR1 NUMERIC RESPONSE DATA>
Example	OTN:STAT:RX1:STHR:ERR1? → 0
Note	

15.5.40 OTN:STATus:RX<Pt>:STHRee:ERRor<section>:CONDition?

Syntax	OTN:STATus:RX<Pt>:STHRee:ERRor<section>:CONDition?
Description	This query returns the stage3 ODU errors condition register query.
Parameters	<Pt> = Port number <section> = Section number (1-2)
Response	<register>=<NR1 NUMERIC RESPONSE DATA> See Table 15.23
Example	OTN:STAT:RX1:STHR:ERR1:COND? → 0
Note	

15.5.41 OTN:STATus:RX<Pt>:CLient:ASUMmary[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:CLient:ASUMmary[:EVENT]?
Description	This query returns the client alarms summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of OTN:STAT:RX<Pt>:CLient:ALAR1[:EVENT]? DB2 - DB16 NOT USED
Example	OTN:STAT:RX1:CLI:ASUM? → 1
Note	

15.5.42 OTN:STATus:RX<Pt>:CLient:ASUMmary:CONDition?

Syntax	OTN:STATus:RX<Pt>:CLient:ASUMmary:CONDition?
Description	This query returns client alarms summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as OTN:STAT:RX<Pt>:CLI:ASUMmary[:EVENT]?
Example	OTN:STAT:RX1:CLI:ASUM:COND? → 1
Note	

15.5.43 OTN:STATus:RX<Pt>:CLient:ESUMmary[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:CLient:ESUMmary[:EVENT]?
Description	This query returns the client errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Summary bit of OTN:STAT:RX<Pt>:CLI:ERR1[:EVENT]? DB2 (2) = Summary bit of OTN:STAT:RX<Pt>:CLI:ERR2[:EVENT]? DB3 - DB16 NOT USED
Example	OTN:STAT:RX1:CLI:ESUM? → 2
Note	

15.5.44 OTN:STATus:RX<Pt>:CLient:ESUMmary:CONDition?

Syntax	OTN:STATus:RX<Pt>:CLient:ESUMmary:CONDition?
Description	This query returns client errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as OTN:STAT:RX<Pt>:CLI:ESUMmary[:EVENT]?
Example	OTN:STAT:RX1:CLI:ESUM:COND? → 3
Note	

Table 15.24: Alarm Items

Client Section	1
DB1 (1)	Client-AIS
DB2 (2)	CSF
DB3 (4)	LSS
DB4 (8)	Not used
DB5 (16)	Not used
DB6 (32)	Not used
DB7 (64)	Not used
DB8 (128)	Not used
DB9 (256)	Not used
DB10 (512)	Not used
DB11 (1024)	Not used
DB12 (2048)	Not used
DB13 (4096)	Not used
DB14 (8192)	Not used
DB15 (16384)	Not used
DB16 (32768)	Not used

15.5.45 OTN:STATus:RX<Pt>:CLient:ALARm<section>[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:CLient:ALARm<section>[:EVENT]?
Description	This query returns the client alarms event register. The content of this register is summarized in DB1 of the OTN:STATus:RX<Pt>:CLient:ASUMmary:CONDition? register.
Parameters	<Pt> = Port number <section> = Section number (1)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> See Table 15.24
Example	OTN:STAT:RX1:CLI:ALAR1? → 4
Note	

15.5.46 OTN:STATus:RX<Pt>:CLient:ALARm<section>:CONDition?

Syntax	OTN:STATus:RX<Pt>:CLient:ALARm<section>:CONDition?
Description	This query returns the client alarms condition register query.
Parameters	<Pt> = Port number <section> = Section number (1)
Response	<register> = <NR1 NUMERIC RESPONSE DATA> See Table 15.24
Response	<register>=<NR1 NUMERIC RESPONSE DATA>
Example	OTN:STAT:RX1:CLI:ALAR5:COND? → 6
Note	

Table 15.25: Error Items

Client Section	1	2
DB1 (1)	PRBS Bit Error	cHEC Correctable
DB2 (2)	Not used	cHEC Uncorrectable
DB3 (4)	Not used	tHEC Correctable
DB4 (8)	Not used	tHEC Uncorrectable
DB5 (16)	Not used	Invalid GFP Frame
DB6 (32)	Not used	Superblock CRC
DB7 (64)	Not used	CSF Signal
DB8 (128)	Not used	CSF Sync
DB9 (256)	Not used	FCS
DB10 (512)	Not used	eHEC Correctable
DB11 (1024)	Not used	eHEC Uncorrectable
DB12 (2048)	Not used	CMF Loss of Sync.
DB13 (4096)	Not used	CMF Loss of Signal
DB14 (8192)	Not used	SSF
DB15 (16384)	Not used	PTI Mismatch
DB16 (32768)	Not used	UPI Mismatch

15.5.47 OTN:STATus:RX<Pt>:CLient:ERRor<section>[:EVENT]?

Syntax	OTN:STATus:RX<Pt>:CLient:ERRor<section>[:EVENT]?
Description	This query returns the client errors event register. The content of this register is summarized in DB1/DB2 of the OTN:STATus:RX<Pt>:CLient:ESUMmary:CONDition? register.
Parameters	<Pt> = Port number <section> = Section number (1-2)
Response	<register>=<NR1 NUMERIC RESPONSE DATA> See Table 15.25
Response	<register>=<NR1 NUMERIC RESPONSE DATA>
Example	OTN:STAT:RX1:CLI:ERR1? → 0
Note	

15.5.48 OTN:STATus:RX<Pt>:CLient:ERRor<section>:CONDition?

Syntax	OTN:STATus:RX<Pt>:CLient:ERRor<section>:CONDition?
Description	This query returns the client errors condition register query.
Parameters	<Pt> = Port number <section> = Section number (1-2)
Response	<register>=<NR1 NUMERIC RESPONSE DATA> See Table 15.25
Example	OTN:STAT:RX1:CLI:ERR1:COND? → 0
Note	

15.5.49 OTN:STATus:RX<Pt>:PSLevel?

Syntax	OTN:STATus:RX<Pt>:PSLevel?
Description	This query returns the physical signal input level. Unit: dBm.
Parameter	<Pt> = Port number
Response	<signallevel> = <STRING RESPONSE DATA> " <power> dBm" : Min: "< -27 dBm" , Max: "Exceeds Level" "Module not ready" "Unknown module" "No module"
Example	OTN:STAT:RX1:PSL? → "-12 dBm"
Note	

15.5.50 OTN:STATus:TX<Pt>:PSLevel?

Syntax	OTN:STATus:TX<Pt>:PSLevel?
Description	This query returns the physical signal output level. Unit: dBm.
Parameter	<Pt> = Port number
Response	<signallevel> = <STRING RESPONSE DATA> "<power> dBm" : Min: "< -27 dBm" , Max: "Exceeds Level" "Module not ready" "Unknown module" "No module"
Example	OTN:STAT:TX1:PSL? → "-3 dBm"
Note	

15.5.51 OTN:STATus:RX<Pt>:FREQuency?

Syntax	OTN:STATus:RX<Pt>:FREQuency? <unit>
Description	This query returns the physical frequency error.
Parameters	<Pt> = Port number <unit> = <CHARACTER PROGRAM DATA> PPM = Parts per million HZ = Hz <i>DEFault = PPM</i>
Response	<signalfreq> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:STAT:RX1:FREQ? PPM → 3
Note	

15.5.52 OTN:STATus:TX<Pt>:FREQuency?

Syntax	OTN:STATus:TX<Pt>:FREQuency? <unit>
Description	This query returns the physical frequency error.
Parameters	<Pt> = Port number <unit> = <CHARACTER PROGRAM DATA> PPM = Parts per million HZ = Hz <i>DEFault = PPM</i>
Response	<signalfreq> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:STAT:TX1:FREQ? PPM → 3
Note	

15.5.53 OTN:STATus:RX<Pt>:CAPTure:OH?

Syntax	OTN:STATus:RX<Pt>:CAPTure:OH? <odutype>,<row>,<column>
Description	This query returns the multi frame sequence data of selected position of OH. Data length depends on the selected position of OH.
Parameters	<Pt> = Port number <odutype> = <CHARACTER PROGRAM DATA> ODU2: ODU2 ODU1: ODU1 ODU0: ODU0 ODU2E: ODU2e ODU1E: ODU1e ODU2F: ODU2f ODU1F: ODU1f ODUFLEX: ODUflex ODU3: ODU3 ODU3E1: ODU3e1 ODU3E2: ODU3e2 ODU4: ODU4 ODUC: ODUC <row> = OH row number(1-4) <column> = OH column number (1-16)
Response	<data> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	OTN:STAT:RX1:CAPT:OH? ODU2,2,16 → #H08
Note	When querying the row 4, columns 15 with this command, it always returns PSI[0].

15.6 Stimuli

15.6.1 OTN:STIMuli:TX<Pt>:TYPE

Syntax	OTN:STIMuli:TX<Pt>:TYPE <type>
Description	Choose the type of alarm/error that is inserted by the command SYSTem:STIMuli:INSert.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> AEINsert: Normal alarm/error GMP: GMP error GFP: GFP error FEC: FEC test error LLD: LLD error/alarm ¹ <i>DEFault = AEINsert</i>
Response	None
Example	OTN:STIM:TX1:TYPE AEIN
Note	¹ LLD error/alarm are only available at OTU3/4.

Syntax	OTN:STIMuli:TX<Pt>:TYPE?
Description	
Parameter	<Pt> = Port number
Response	<type> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:TYPE? → AEIN
Note	

15.6.2 OTN:STIMuli:TX<Pt>:AEINsert:LEVel

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:LEVel <odutype>
Description	This command sets the ODU type to insert the error or alarm.
Parameters	<Pt> = Port number <odutype> = <CHARACTER PROGRAM DATA> ODU2: ODU2 ODU1: ODU1 ODU0: ODU0 ODU2E: ODU2e ODU1E: ODU1e ODU2F: ODU2f ODU1F: ODU1f ODUFLEX: ODUFlex ODU3: ODU3 ODU3E1: ODU3e1 ODU3E2: ODU3e2 ODU4: ODU4 ODUC: ODUC <i>DEFault = ODU2</i>
Response	None
Example	OTN:STIM:TX1:AEIN:LEV ODU2
Note	

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:LEVel?
Description	This query returns the ODU type to insert the error or alarm.
Parameter	<Pt> = Port number
Response	<odutype> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:AEIN:LEV? → ODU2
Note	

15.6.3 OTN:STIMuli:TX<Pt>:AEINsert:TYPE

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:TYPE <aerrortype>
Description	This command sets the type to insert alarm/error.
Parameters	<Pt> = Port number <aerrortype> = <CHARACTER PROGRAM DATA> NONE: (None) BITALL: Bit All FAS: OTU-FAS MFAS: MFAS SMBIP8: SM-BIP8 SMBEI: SM-BEI PMBIP8: PM-BIP8 PMBEI: PM-BEI TCMiBIP8: TCMi-BIP8 (i = 1-6) TCMiBEI: TCMi-BEI (i = 1-6) FASODU: ODU-FAS PRBSBIT: PRBS Bit Error OOE: OTU-OOF/LOF OOM: OOM/LOM AISOTU: OTU-AIS SMTIM: SM-TIM SMBIAE: SM-BIAE SMBDI: SM-BDI SMIAE: SM-IAE AISODU: ODU-AIS OCI: ODU-OCI LCK: ODU-LCK PMTIM: PM-TIM PMBDI: PM-BDI TCMiTIM: TCMi-TIM (i = 1-6) TCMiBIAE: TCMi-BIAE (i = 1-6) TCMiIAE: TCMi-IAE (i = 1-6) TCMiBDI: TCMi-BDI (i = 1-6) TCMiLTC: TCMi-LTC (i = 1-6) OOFODU: ODU-OOF/LOF OOMODU: ODU-OOM/LOM AISC: Client-AIS CSF: CSF FSF: FSF FSD: FSD BSF: BSF BSD: BSD LOS: LOS <i>DEFault = NONE</i>
Response	None
Example	OTN:STIM:TX1:AEIN:TYPE OOF
Note	

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:TYPE?
Description	This query returns the alarm/error insertion type.
Parameter	<Pt> = Port number
Response	<aerrortype> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:AEIN:TYPE? → OOF
Note	

15.6.4 OTN:STIMuli:TX<Pt>:AEINsert:INSert

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:INSert <insertion>
Description	This command sets the method to insert alarm/error.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> SINGle BURSt ALTerdate RATE ALL <i>DEFault = SINGle</i>
Response	None
Example	OTN:STIM:TX1:AEIN:INS SING
Note	If insertion is set to SINGle, errors are inserted with SYST:STIM:INS. See section 2.3.52.

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:INSert?
Description	This query returns the alarm/error insertion method.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:AEIN:INS? → SING
Note	

15.6.5 OTN:STIMuli:TX<Pt>:AEINsert:BURSt

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:BURSt <frames>
Description	This command sets the alarm/error burst length to generate.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=4300000, DEFault=1</i>
Response	None
Example	OTN:STIM:TX1:AEIN:BURS 1
Note	

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:BURSt?
Description	This query returns the alarm/error burst length to generate.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:AEIN:BURS? → 1
Note	

15.6.6 OTN:STIMuli:TX<Pt>:AEINsert:AERRor

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:AERRor <frames>
Description	This command sets the alternate alarm/error length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=4300000, DEFault=0</i>
Response	None
Example	OTN:STIM:TX1:AEIN:AERR 0
Note	

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:AERRor?
Description	This query returns the alternate alarm/error length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:AEIN:AERR? → 0
Note	

15.6.7 OTN:STIMuli:TX<Pt>:AEINsert:NORMal

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:NORMal <frames>
Description	This command sets the alternate normal length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=4300000, DEFault=1</i> <i>DEFault = 1</i>
Response	None
Example	OTN:STIM:TX1:AEIN:NORM 1
Note	

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:NORMal?
Description	This query returns the alternate normal length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:AEIN:NORM? → 1
Note	

15.6.8 OTN:STIMuli:TX<Pt>:AEINsert:RATE

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:RATE <rate>
Description	This command sets the rate to insert errors.
Parameters	<Pt> = Port number <rate> = <CHARACTER PROGRAM DATA> R1E2: 1.0E-2 R1E3: 1.0E-3 R1E4: 1.0E-4 R1E5: 1.0E-5 R1E6: 1.0E-6 R1E7: 1.0E-7 R1E8: 1.0E-8 R1E9: 1.0E-9 R1E10: 1.0E-10 <i>DEFault = R1E9</i>
Response	None
Example	OTN:STIM:TX1:AEIN:RATE R1E9
Note	Available when the insertion mode is Rate. Not all error rates are available for all error types.

Syntax	OTN:STIMuli:TX<Pt>:AEINsert:RATE?
Description	This command returns the rate to insert errors.
Parameter	<Pt> = Port number
Response	<rate> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:AEIN:RATE? → R1E9
Note	

15.6.9 OTN:STIMuli:TX<Pt>:JUSTification:LEVel

Syntax	OTN:STIMuli:TX<Pt>:JUSTification:LEVel <odutype>
Description	This command sets the ODU type to adjust the pointer. Only OPUk those are mapped into AMP or BMP are available.
Parameters	<Pt> = Port number <odutype> = <CHARACTER PROGRAM DATA> ODU2: ODU2 ODU1: ODU1 ODU0: ODU0 ODU2E: ODU2e ODU3: ODU3 ODU3E1: ODU3e1 <i>DEFault = ODU2</i>
Response	None
Example	OTN:STIM:TX1:JUST:LEV ODU2
Note	

Syntax	OTN:STIMuli:TX<Pt>:JUSTification:LEVel?
Description	This query returns the ODU type to adjust the pointer.
Parameter	<Pt> = Port number
Response	<odutype> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:JUST:LEV? → ODU2
Note	

15.6.10 OTN:STIMuli:TX<Pt>:JUSTification:BURSt

Syntax	OTN:STIMuli:TX<Pt>:JUSTification:BURSt <frames>
Description	This command specifies the number of count to move the pointer in the direction over a time.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=100, DEFault=1</i>
Response	None
Example	OTN:STIM:TX1:JUST:BURS 1
Note	

Syntax	OTN:STIMuli:TX<Pt>:JUSTification:BURSt?
Description	This query returns the number of count to move the pointer in the direction over a time.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:JUST:BURS? → 1
Note	

15.6.11 OTN:STIMuli:TX<Pt>:JUSTification:MOVement

Syntax	OTN:STIMuli:TX<Pt>:JUSTification:MOVement <count>
Description	This command sets the OTN pointer movement sequence.
Parameters	<Pt> = Port number <count> = <CHARACTER PROGRAM DATA> POS1: Positive (+1) POS2: Positive (+2) POS3: Positive (+3) NEG1: Negative (-1) NEG2: Negative (-2) <i>DEFault = POS1</i>
Response	None
Example	OTN:STIM:TX1:JUST:MOV POS1
Note	

Syntax	OTN:STIMuli:TX<Pt>:JUSTification:MOVement?
Description	This query returns the OTN pointer movement sequence.
Parameter	<Pt> = Port number
Response	<count> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:JUST:MOV? → POS1
Note	

15.6.12 OTN:STIMuli:TX<Pt>:JMOVE

Syntax	OTN:STIMuli:TX<Pt>:JMOVE
Description	This command moves OTN pointer to instruct pointer.
Parameter	<Pt> = Port number
Response	None
Example	OTN:STIM:TX1:JMOV
Note	

15.6.13 OTN:STIMuli:TX<Pt>:FREQuency:OFFSet

Syntax	OTN:STIMuli:TX<Pt>:FREQuency:OFFSet <offset>
Description	This command sets the frequency offset for the clock source. Unit: ppm.
Parameters	<Pt> = Port number <offset> = <NUMERIC PROGRAM DATA> MT1000A: <i>MINimum=-50, MAXimum=50, DEFault=0</i> MT1100A, MT1040A: <i>MINimum=-200.0, MAXimum=200.0, DEFault = 0.0</i>
Response	None
Example	OTN:STIM:TX1:FREQ:OFFS 0
Note	The offset is applied to the internal clock source only.

Syntax	OTN:STIMuli:TX<Pt>:FREQuency:OFFSet?
Description	This query returns the frequency offset for the clock source. Unit: ppm.
Parameter	<Pt> = Port number
Response	MT1000A: <offset> = <NR1 NUMERIC RESPONSE DATA> MT1100A, MT1040A: <offset> = <NR2 NUMERIC RESPONSE DATA>
Example	MT1000A: OTN:STIM:TX1:FREQ:OFFS? → 0 MT1100A, MT1040A: OTN:STIM:TX1:FREQ:OFFS? → 0.0
Note	

15.6.14 OTN:STIMuli:TX<Pt>:PAYLoad:OFFSet<stage>

Syntax	OTN:STIMuli:TX<Pt>:PAYLoad:OFFSet<stage> <offset>
Description	This command sets the payload offset.
Parameters	<Pt> = Port number <stage> = Multiplexing stage (1-4) <offset> = <NUMERIC PROGRAM DATA> <i>MINimum=-150, MAXimum=150, DEFault=0</i> ODU2/ODU1: -65.6 to 65.6 step 0.1ppm ODTU12: -113.6 to 83.3 step 0.1ppm ODTU01: -131.3 to 65.0 step 0.1ppm ODTUk.xx (GMP): -150.0 to 150.0 step 0.1ppm ODU3: -65.6 to 65.6 step 0.1ppm ODTU23: -95.8 to 101.1 step 0.1ppm ODTU13: -96.3 to 101.3 step 0.1ppm <i>DEFault = 0</i>
Response	None
Example	OTN:STIM:TX1:PAYL:OFFS1 0
Note	This parameter is defined at each multiplexing stage where GMP or AMP is used.

Syntax	OTN:STIMuli:TX<Pt>:PAYLoad:OFFSet<stage>?
Description	This query returns the payload offset.
Parameter	<Pt> = Port number <stage> = Multiplexing stage (1-4)
Response	<offset> = <NR2 NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:PAYL:OFFS1? → 0
Note	

15.6.15 OTN:STIMuli:TX<Pt>:GMP:AEINsert:LEVel

Syntax	OTN:STIMuli:TX<Pt>:GMP:AEINsert:LEVel <stage>
Description	This command sets the multiplexing stage to insert the error. It can be select those have GMP on the current mapping path.
Parameters	<Pt> = Port number <stage> = <CHARACTER PROGRAM DATA> ODU2: ODU2 ODU1: ODU1 ODU0: ODU0 ODU3: ODU3 ODU3E2: ODU3e2 ODU4: ODU4 <i>DEFault = ODU2</i>
Response	None
Example	OTN:STIM:TX1:GMP:AEIN:LEV ODU2
Note	

Syntax	OTN:STIMuli:TX<Pt>:GMP:AEINsert:LEVel?
Description	This query returns the multiplexing stage to insert the error.
Parameter	<Pt> = Port number
Response	<stage> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:GMP:AEIN:LEV? → ODU2
Note	

15.6.16 OTN:STIMuli:TX<Pt>:GMP:AEINsert:TYPE

Syntax	OTN:STIMuli:TX<Pt>:GMP:AEINsert:TYPE <aerrortype>
Description	This command sets the method to insert errors.
Parameters	<Pt> = Port number <aerrortype> = <CHARACTER PROGRAM DATA> CRC8: CRC8 Error CRC5: CRC5 Error JC1: Invalid JC1 JC2: Invalid JC2 JC1JC2: Invalid JC1&JC2 <i>DEFault = CRC8</i>
Response	None
Example	OTN:STIM:TX1:GMP:AEIN:TYPE CRC8
Note	

Syntax	OTN:STIMuli:TX<Pt>:GMP:AEINsert:TYPE?
Description	This query returns the method to insert errors.
Parameter	<Pt> = Port number
Response	<aerrortype> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:GMP:AEIN:TYPE? → CRC8
Note	

15.6.17 OTN:STIMuli:TX<Pt>:GMP:AEINsert:INSert

Syntax	OTN:STIMuli:TX<Pt>:GMP:AEINsert:INSert <insertion>
Description	This command sets the stimuli error insertion mode.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> SINGle
Response	None
Example	OTN:STIM:TX1:GMP:AEIN:INS SING
Note	Currently only one insertion mode is available.

Syntax	OTN:STIMuli:TX<Pt>:GMP:AEINsert:INSert?
Description	This query returns the stimuli error insertion mode.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:GMP:AEIN:INS? → SING
Note	

15.6.18 OTN:STIMuli:TX<Pt>:GMP:AEINsert:EBITs

Syntax	OTN:STIMuli:TX<Pt>:GMP:AEINsert:EBITs <insertion>
Description	This command sets 16-bit value to specify which bits are affected. For some error items, only the lower bits are effective (for example, CRC5 will use lower 5 bits.) UPPER bits of the specified value will be ignored in such a case.
Parameters	<Pt> = Port number <insertion> = <NUMERIC PROGRAM DATA> <i>MINimum=#B0000000000000000, MAXimum=#B1111111111111111, DE-Fault=#B1111111111111111</i>
Response	None
Example	OTN:STIM:TX1:GMP:AEIN:EBIT #B1001000001 This command add error into bit 0, 3 and 9.
Note	

Syntax	OTN:STIMuli:TX<Pt>:GMP:AEINsert:EBITs?
Description	This query returns the 16-bit value to specify which bits are affected.
Parameter	<Pt> = Port number
Response	<insertion> = <BINARY NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:GMP:AEIN:EBIT? → #B1001000001000000
Note	

15.6.19 OTN:STIMuli:TX<Pt>:GFP:AEINsert:TYPE

Syntax	OTN:STIMuli:TX<Pt>:GFP:AEINsert:TYPE <aerrortype>
Description	This command sets the error type of GFP-T and GFP-F.
Parameters	<Pt> = Port number <aerrortype> = <CHARACTER PROGRAM DATA> OFF: Off CHEC: cHEC THEC: tHEC SCRC: Super block CRC (only GFP-T) EHEC: eHEC (only GFP-F) FCSE: FCS error (only GFP-F) CMFSIGNAL: CMF Signal (only GFP-F) CMFSYNC: CMF Sync (only GFP-F) <i>DEFault = OFF</i>
Response	None
Example	OTN:STIM:TX1:GFP:AEIN:TYPE OFF
Note	

Syntax	OTN:STIMuli:TX<Pt>:GFP:AEINsert:TYPE?
Description	This query returns the error type of GFP.
Parameter	<Pt> = Port number
Response	<aerrortype> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:GFP:AEIN:TYPE? → OFF
Note	

15.6.20 OTN:STIMuli:TX<Pt>:GFP:AEINsert:INSert

Syntax	OTN:STIMuli:TX<Pt>:GFP:AEINsert:INSert <insertion>
Description	This command sets the insertion mode of GFP Error.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> SINGLE BURSt ALL <i>DEFault = SINGLE</i>
Response	None
Example	OTN:STIM:TX1:GFP:AEIN:INS SING
Note	

Syntax	OTN:STIMuli:TX<Pt>:GFP:AEINsert:INSert?
Description	This query returns the insertion mode of GFP Error.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:GFP:AEIN:INS? → SING
Note	

15.6.21 OTN:STIMuli:TX<Pt>:GFP:AEINsert:EBITs

Syntax	OTN:STIMuli:TX<Pt>:GFP:AEINsert:EBITs <insertion>
Description	This command sets the 16-bit value to specify which bits are affected. For some error items, only the lower bits are effective (for example, CRC5 will use lower 5 bits.) UPPer bits of the specified value will be ignored in such a case.
Parameters	<Pt> = Port number <insertion> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =#B00000000000000000, <i>MAXimum</i> =#B1111111111111111, <i>DE-Fault</i> =#B1111111111111111
Response	None
Example	OTN:STIM:TX1:GFP:AEIN:EBIT #B1001000001
Note	

Syntax	OTN:STIMuli:TX<Pt>:GFP:AEINsert:EBITs?
Description	This query returns the 16-bit value to specify which bits are affected.
Parameter	<Pt> = Port number
Response	<insertion> = <BINARY NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:GFP:AEIN:EBIT? → #B1001000001000000
Note	

15.6.22 OTN:STIMuli:TX<Pt>:GFP:AEINsert:BURSt

Syntax	OTN:STIMuli:TX<Pt>:GFP:AEINsert:BURSt <frames>
Description	This command sets the alarm/error burst length to generate.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =0, <i>MAXimum</i> =4300000, <i>DEFault</i> =1
Response	None
Example	OTN:STIM:TX1:GFP:AEIN:BURS 1
Note	

Syntax	OTN:STIMuli:TX<Pt>:GFP:AEINsert:BURSt?
Description	This query returns the alarm/error burst length to generate.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:GFP:AEIN:BURS? → 1
Note	

15.6.23 OTN:STIMuli:TX<Pt>:GFP:AEINsert:CMF:INTerval

Syntax	OTN:STIMuli:TX<Pt>:GFP:AEINsert:CMF:INTerval <interval>
Description	This command sets the interval time of CMF insertion. Unit: ms.
Parameters	<Pt> = Port number <interval> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =10, <i>MAXimum</i> =2560, <i>DEFault</i> =10
Response	None
Example	OTN:STIM:TX1:GFP:AEIN:CMF:INT 10
Note	

Syntax	OTN:STIMuli:TX<Pt>:GFP:AEINsert:CMF:INTerval?
Description	This query returns the interval time of CMF insertion. Unit: ms.
Parameter	<Pt> = Port number
Response	<interval> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:GFP:AEIN:CMF:INT? → 10
Note	

15.6.24 OTN:STIMuli:TX<Pt>:FEC:AEINsert:TYPE

Syntax	OTN:STIMuli:TX<Pt>:FEC:AEINsert:TYPE <aerrortype>
Description	This command sets the error type inserted to FEC.
Parameters	<Pt> = Port number <aerrortype> = <CHARACTER PROGRAM DATA> OFF: Off 0182: 0.182 Poisson UNCORRECT: Uncorreticable Error CORRECT: Correctable Error <i>DEFault = OFF</i>
Response	None
Example	OTN:STIM:TX1:FEC:AEIN:TYPE 0182
Note	

Syntax	OTN:STIMuli:TX<Pt>:FEC:AEINsert:TYPE?
Description	This query returns the error type inserted to FEC.
Parameter	<Pt> = Port number
Response	<aerrortype> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:FEC:AEIN:TYPE? → 0182
Note	

15.6.25 OTN:STIMuli:TX<Pt>:FEC:AEINsert:INSert

Syntax	OTN:STIMuli:TX<Pt>:FEC:AEINsert:INSert?
Description	This query returns the insertion method of FEC error.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA> SINGLE RATE
Example	OTN:STIM:TX1:FEC:AEIN:INS? → RATE
Note	

15.6.26 OTN:STIMuli:TX<Pt>:FEC:AEINsert:RMANtissa

Syntax	OTN:STIMuli:TX<Pt>:FEC:AEINsert:RMANtissa <mantissa>
Description	This command sets the magnitude of the rate to insert errors.
Parameters	<Pt> = Port number <mantissa> = <NUMERIC PROGRAM DATA> 0.1-9.9 step 0.1 <i>MINimum=0.1, MAXimum=9.9, DEFault=1.0</i>
Response	None
Example	OTN:STIM:TX1:FEC:AEIN:RMAN 1.0
Note	

Syntax	OTN:STIMuli:TX<Pt>:FEC:AEINsert:RMANtissa?
Description	This query returns the magnitude of the rate to insert errors.
Parameter	<Pt> = Port number
Response	<mantissa> = <NR2 NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:FEC:AEIN:RMAN? → 1.0
Note	

15.6.27 OTN:STIMuli:TX<Pt>:FEC:AEINsert:REXPnent

Syntax	OTN:STIMuli:TX<Pt>:FEC:AEINsert:REXPnent <exponent>
Description	This command sets the exponential value of the rate to insert errors.
Parameters	<Pt> = Port number <exponent> = <CHARACTER PROGRAM DATA> R1E2: 1.0E-2 R1E3: 1.0E-3 R1E4: 1.0E-4 R1E5: 1.0E-5 R1E6: 1.0E-6 R1E7: 1.0E-7 R1E8: 1.0E-8 R1E9: 1.0E-9 R1E10: 1.0E-10 <i>DEFault = R1E9</i>
Response	None
Example	OTN:STIM:TX1:FEC:AEIN:REXP R1E9
Note	

Syntax	OTN:STIMuli:TX<Pt>:FEC:AEINsert:REXPnent?
Description	This query returns the exponential value of the rate to insert errors.
Parameter	<Pt> = Port number
Response	<exponent> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:FEC:AEIN:REXP? → R1E9
Note	

15.6.28 OTN:STIMuli:TX<Pt>:FEC:AEINsert:EFAS

Syntax	OTN:STIMuli:TX<Pt>:FEC:AEINsert:EFAS <insertion>
Description	This command specifies whether to include the error over the whole frame or exclude FAS fields.
Parameters	<Pt> = Port number <insertion> = <BOOLEAN PROGRAM DATA> ON: Includes FAS OFF: Excludes FAS <i>DEFault = OFF</i>
Response	None
Example	OTN:STIM:TX1:FEC:AEIN:EFAS OFF
Note	Available only when the error item is set to O.182 and the insertion mode is Rate. It takes effect when the rate is greater than or equal to 2.0E-3.

Syntax	OTN:STIMuli:TX<Pt>:FEC:AEINsert:EFAS?
Description	This query returns status of FAS fields (to include the error over the whole frame or exclude FAS fields)
Parameter	<Pt> = Port number
Response	<insertion> = <BOOLEAN RESPONSE DATA>
Example	OTN:STIM:TX1:FEC:AEIN:EFAS? → 0
Note	

15.6.29 OTN:STIMuli:TX<Pt>:FEC:AEINsert:SUBRow

Syntax	OTN:STIMuli:TX<Pt>:FEC:AEINsert:SUBRow <row>
Description	This command specifies the subrow inserting the alarm or the error.
Parameters	<Pt> = Port number <row> = <NUMERIC PROGRAM DATA> <i>MINimum=1, MAXimum=16, DEFault=1</i>
Response	None
Example	OTN:STIM:TX1:FEC:AEIN:SUBR 1
Note	

Syntax	OTN:STIMuli:TX<Pt>:FEC:AEINsert:SUBRow?
Description	This query returns the subrow inserting the alarm or the error.
Parameter	<Pt> = Port number
Response	<row> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:FEC:AEIN:SUBR? → 1
Note	

15.6.30 OTN:STIMuli:TX<Pt>:LLD:AEINsert:TYPE

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:TYPE <type>
Description	This command sets the type of LLD alarm/error insertion.
Parameter	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> NONE: No alarm or error ALARM: Insert alarm ERROR: Insert error <i>DEFault = NONE</i>
Response	None
Example	OTN:STIM:TX1:LLD:AEIN:TYPE ALARM
Note	This command can be used on 40/100G

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:TYPE?
Description	This query returns the type of LLD alarm/error insertion.
Parameter	<Pt> = Port number
Response	<row> = <CHARACTER PROGRAM DATA>
Example	OTN:STIM:TX1:LLD:AEIN:TYPE? → ALARM
Note	This command can be used on 40/100G

15.6.31 OTN:STIMuli:TX<Pt>:LLD:AEINsert:ALARm

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:ALARm <type>
Description	This command sets the type of the Alarm.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> OOFLLD: OOF/LOF OOR: OOR/LOR <i>DEFault = OOFLLD</i>
Response	None
Example	OTN:STIM:TX1:LLD:AEIN:ALAR OOFLLD
Note	This command can be used on 40/100G

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:ALARm?
Description	This query returns the type of the Alarm.
Parameter	<Pt> = Port number
Response	<row> = <CHARACTER PROGRAM DATA>
Example	OTN:STIM:TX1:LLD:AEIN:ALAR? → OOFLLD
Note	This command can be used on 40/100G

15.6.32 OTN:STIMuli:TX<Pt>:LLD:AEINsert:ERRor

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:ERRor <type>
Description	This command sets the type of the Error.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> FASLLD: FAS-LLD MFASLLD: MFAS-LLD LLMLLD: LLM-LLD <i>DEFault = FASLLD</i>
Response	None
Example	OTN:STIM:TX1:LLD:AEIN:ERR FASLLD
Note	This command can be used on 40/100G

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:ERRor?
Description	This query returns the type of the Error.
Parameter	<Pt> = Port number
Response	<CHARACTER PROGRAM DATA>
Example	OTN:STIM:TX1:LLD:AEIN:ERR? → FASLLD
Note	This command can be used on 40/100G

15.6.33 OTN:STIMuli:TX<Pt>:LLD:AEINsert:INSert

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:INSert <insertion>
Description	This command sets the mode of the insertion.
Parameters	<Pt> = Port number <insertion> = <CHARACTER PROGRAM DATA> BURSt ALternate ALL <i>DEFault = ALL</i>
Response	None
Example	OTN:STIM:TX1:LLD:AEIN:INS ALL
Note	This command can be used on 40/100G

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:INSert?
Description	This query returns the mode of the insertion.
Parameter	<Pt> = Port number
Response	<insertion> = <CHARACTER RESPONSE DATA>
Example	OTN:STIM:TX1:LLD:AEIN:INS? → ALL
Note	This command can be used on 40/100G

15.6.34 OTN:STIMuli:TX<Pt>:LLD:AEINsert:BURSt

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:BURSt <frames>
Description	This command sets the alarm/error burst length to generate.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> 1 to 215000 step 1
Response	None
Example	OTN:STIM:TX1:LLD:AEIN:BURS 1
Note	This command can be used on 40/100G

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:BURSt?
Description	This query returns the alarm/error burst length to generate.
Parameter	<Pt> = Port number
Response	<NUMERIC PROGRAM DATA>
Example	OTN:STIM:TX1:LLD:AEIN:BURS? → 1
Note	This command can be used on 40/100G

15.6.35 OTN:STIMuli:TX<Pt>:LLD:AEINsert:AERRor

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:AERRor <frames>
Description	This command sets the alternate alarm/error length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> 0 to 215000 step 1
Response	None
Example	OTN:STIM:TX1:LLD:AEIN:AERR 0
Note	This command can be used on 40/100G

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:AERRor?
Description	This query returns the alternate alarm/error length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:LLD:AEIN:AERR? → 0
Note	This command can be used on 40/100G

15.6.36 OTN:STIMuli:TX<Pt>:LLD:AEINsert:NORMal

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:NORMal <frames>
Description	This command sets the alternate normal length.
Parameters	<Pt> = Port number <frames> = <NUMERIC PROGRAM DATA> 1 to 215000 step 1
Response	None
Example	OTN:STIM:TX1:LLD:AEIN:NORM 1
Note	This command can be used on 40/100G

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:NORMal?
Description	This command returns the alternate normal length.
Parameter	<Pt> = Port number
Response	<frames> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:LLD:AEIN:NORM? → 1
Note	This command can be used on 40/100G

15.6.37 OTN:STIMuli:TX<Pt>:LLD:AEINsert:LANE

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:LANE <lane>
Description	This command sets the lane On/Off that bit corresponds lane.
Parameters	<Pt> = Port number <lane> = <NUMERIC PROGRAM DATA> <i>MINimum</i> = #B0000000000000000000, <i>MAXimum</i> = #B11111111111111111111, <i>DE-Fault</i> = #B10000000000000000000
Response	None
Example	OTN:STIM:TX1:LLD:AEIN:LANE #B1001000001 This command add error into lane 0, 3 and 9.
Note	This command can be used on 40/100G

Syntax	OTN:STIMuli:TX<Pt>:LLD:AEINsert:LANE?
Description	This command returns the lane On/Off that bit corresponds lane.
Parameter	<Pt> = Port number
Response	<lane> = <BINARY NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:LLD:AEIN:LANE? → #B10010000010000000000
Note	This command can be used on 40/100G

15.6.38 OTN:STIMuli:TX<Pt>:LLD:SKEW:LANE

Syntax	OTN:STIMuli:TX<Pt>:LLD:SKEW:LANE <lane>
Description	This command sets lane On/Off of the Tx Lane.
Parameters	<Pt> = Port number <lane> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =#B0000000000000000000, <i>MAXimum</i> =#B1111111111111111111, <i>DE-Fault</i> =#B10000000000000000000
Response	None
Example	OTN:STIM:TX1:LLD:SKEW:LANE #B1001000001 This command add skew into lane 0, 3 and 9.
Note	This command can be used on 40/100G

Syntax	OTN:STIMuli:TX<Pt>:LLD:SKEW:LANE?
Description	This command returns lane On/Off of the Tx Lane.
Parameter	<Pt> = Port number
Response	<lane> = <BINARY NUMERIC RESPONSE DATA>
Example	OTN:STIM:TX1:LLD:SKEW:LANE? → #B10010000010000000000
Note	This command can be used on 40/100G

15.6.39 OTN:STIMuli:TX<Pt>:LLD:SKEW:BIT

Syntax	OTN:STIMuli:TX<Pt>:LLD:SKEW:BIT <bit>
Description	This command sets the number of skew bit.
Parameters	<Pt> = Port number <bit> = <NUMERIC PROGRAM DATA> 0 to 32000 step 1
Response	None
Example	OTN:STIM:TX1:LLD:SKEW:BIT 0
Note	This command can be used on 40/100G

Syntax	OTN:STIMuli:TX<Pt>:LLD:SKEW:BIT?
Description	This command returns the number of skew bit.
Parameter	<Pt> = Port number
Response	<NUMERIC PROGRAM DATA>
Example	OTN:STIM:TX1:LLD:SKEW:BIT? → 0
Note	This command can be used on 40/100G

15.6.40 OTN:STIMuli:TX<Pt>:LLD:SKEW:TYPE

Syntax	OTN:STIMuli:TX<Pt>:LLD:SKEW:TYPE <type>
Description	This command sets the lane where errors are inserted.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> TXLANE: Tx Lane PHYSICALLANE: Physical Lane <i>DEFault = TXLANE</i>
Response	None
Example	OTN:STIM:TX1:LLD:SKEW:TYPE TXLANE
Note	This command can be used on 40/100G

Syntax	OTN:STIMuli:TX<Pt>:LLD:SKEW:TYPE?
Description	This command returns the lane where errors are inserted.
Parameter	<Pt> = Port number
Response	<CHARACTER PROGRAM DATA>
Example	OTN:STIM:TX1:LLD:SKEW:TYPE? → TXLANE
Note	This command can be used on 40/100G

15.7 Tributary Scan

15.7.1 OTN:TSCan:STARt

Syntax	OTN:TSCan:STARt
Description	This command starts the tributary scan test.
Parameter	None.
Response	None.
Example	OTN:TSC:STAR
Note	

15.7.2 OTN:TSCan:STOP

Syntax	OTN:TSCan:STOP
Description	This command stops the tributary scan test.
Parameter	None.
Response	None.
Example	OTN:TSC:STOP
Note	

15.7.3 OTN:TSCan:RX<Pt>:ODU2:NUMBer?

Syntax	OTN:TSCan:RX<Pt>:ODU2:NUMBer?
Description	This query returns the number of ODU2/ODU2e.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:TSC:RX1:ODU2:NUMB? → 1
Note	

15.7.4 OTN:TSCan:RX<Pt>:ODU2:GET?

Syntax	OTN:TSCan:RX<Pt>:ODU2:GET?
Description	This query returns the alarm and error information from a ODU2/ODU2e.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA> The values are presented in ascending order, meaning that ODU2 #1 is the rst on the list. 0: No alarms or errors. 1: Alarms or errors present.
Example	OTN:TSC:RX1:ODU2:GET? → 0
Note	

15.7.5 OTN:TSCan:RX<Pt>:ODU2:DETAILED?

Syntax	OTN:TSCan:RX<Pt>:ODU2:DETAILED? <number>
Description	This query returns the detailed alarm and error information from a ODU2/ODU2e.
Parameter	<Pt> = Port number <number> = ODU2 number MINimum=1, MAXimum=1
Response	<selected> = <STRING RESPONSE DAT> RXng {ODU2 Order}, separated by one space character. RXn = RX1 or RX2 ODU2-order = ODU2#1 (<alarmerrors>) = <STRING RESPONSE DATA> List of alarms and errors.
Example	OTN:TSC:RX1:ODU2:DET? 1 → "RX1 OTU2#1", ("PM-BDI", "ODU-AIS")
Note	

15.7.6 OTN:TSCan:RX<Pt>:ODU1:NUMBer?

Syntax	OTN:TSCan:RX<Pt>:ODU1:NUMBer?
Description	This query returns the number of ODU1/ODU1e.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:TSC:RX1:ODU1:NUMB? → 4
Note	

15.7.7 OTN:TSCan:RX<Pt>:ODU1:GET?

Syntax	OTN:TSCan:RX<Pt>:ODU1:GET?
Description	This query returns the state of ODU1/ODU1e.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA> The values are presented in ascending order, meaning that ODU1 #1 is the rst on the list. 0: No alarms or errors. 1: Alarms or errors present.
Example	OTN:TSC:RX1:ODU1:GET? → 1
Note	

15.7.8 OTN:TSCan:RX<Pt>:ODU1:SCANning

Syntax	OTN:TSCan:RX<Pt>:ODU1:SCANning <number>
Description	This command sets the ODU1/ODU1e for scanning.
Parameters	<Pt> = Port number <number> = High Order number MINimum=1, MAXimum=4 <i>MINimum=1, MAXimum=4, DEFault=1</i>
Response	None
Example	OTN:TSC:RX1:ODU1:SCAN 2
Note	

Syntax	OTN:TSCan:RX<Pt>:ODU1:SCANning?
Description	This query returns the ODU1/ODU1e for scanning.
Parameter	<Pt> = Port number
Response	<number>= High Order number (1-4)
Example	OTN:TSC:RX1:ODU1:SCAN? → 2
Note	

15.7.9 OTN:TSCan:RX<Pt>:ODU1:DETAILED?

Syntax	OTN:TSCan:RX<Pt>:ODU1:DETAILED? <number>
Description	This query returns the detailed alarm and error information from a ODU1/ODU1e.
Parameter	<Pt> = Port number <number> = ODU1 number MINimum=1, MAXimum=1
Response	<selected> = <STRING RESPONSE DATA> {RXng {ODU2 Order}, separated by one space character. RXn = RX1 or RX2 ODU2-order = ODU2#1 (<alarmerrors>) = <STRING RESPONSE DATA> List of alarms and errors.
Example	OTN:TSC:RX1:ODU1:DET? 1 → "RX1 OTU1#1",("PM-BDI","ODU-AIS")
Note	

15.7.10 OTN:TSCan:RX<Pt>:ODU0:NUMBer?

Syntax	OTN:TSCan:RX<Pt>:ODU0:NUMBer?
Description	This query returns the number of ODU0.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:TSC:RX1:ODU0:NUMB? → 2
Note	

15.7.11 OTN:TSCan:RX<Pt>:ODU0:GET?

Syntax	OTN:TSCan:RX<Pt>:ODU0:GET?
Description	This query returns the state of ODU0.
Parameter	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA> The values are presented in ascending order, meaning that ODU0 #1 is the rst on the list. 0: No alarms or errors. 1: Alarms or errors present.
Example	OTN:TSC:RX1:ODU0:GET? → (0,1,1,0)
Note	

15.7.12 OTN:TSCan:RX<Pt>:ODU0:DETAILED?

Syntax	OTN:TSCan:RX<Pt>:ODU0:DETAILED? <number>
Description	This query returns the detailed alarm and error information from a ODU0.
Parameter	<Pt> = Port number <number> = ODU0 number MINimum=1, MAXimum=1
Response	<selected> = <STRING RESPONSE DATA> {RXng {ODU0 Order}, separated by one space character. RXn = RX1 or RX2 ODU0-order = ODU0#1 (<alarmerrors>) = <STRING RESPONSE DATA> List of alarms and errors.
Example	OTN:TSC:RX1:ODU0:DET? 1 → "RX1 OTU2#:ODU1#1:ODU0#1", ("PM-BDI", "ODU-AIS")
Note	

15.8 APS

15.8.1 OTN:APS:RX<Pt>:BEVent

Syntax	OTN:APS:RX<Pt>:BEVent <event>
Description	This command sets the time reference begin (start) event.
Parameters	<Pt> = Port number <event> = <CHARACTER PROGRAM DATA> ANYERROR: Any errors LOS: Loss of Signal OTUAIS: OTU-AIS LOF: Loss of Frame OOF: Out of Frame LOM: LOM OOM: OOM SMBIAE: SM-BIAE SMBDI: SM-BDI SMIAE: SM-IAE ODUAIS: ODU-AIS ODUOCI: ODU-OCI ODULCK: ODU-LCK PMBDI: PM-BDI FAS: FAS MFAS: MFAS SMBIP8: SM-BIP8 SMBEI: SM-BEI PMBIP8: PM-BIP8 PMBEI: PM-BEI PERRor: Pattern error LOFLLD: LOF-OTL OOFLLD: OOF-OTL LORLLD: LOR-OTL OORLLD: OOR-OTL FASLLD: FAS-OTL MFASLLD: MFAS-OTL LLMLLD: LLM-OTL <i>DEFault = LOF</i>
Response	None
Example	OTN:APS:RX1:BEV LOF
Note	

Syntax	OTN:APS:RX<Pt>:BEVent?
Description	This query returns the time reference begin (start) event.
Parameter	<Pt> = Port number
Response	<event> = <CHARACTER RESPONSE DATA>
Example	OTN:APS:RX1:BEV? → LOF
Note	

15.8.2 OTN:APS:RX<Pt>:EEVent

Syntax	OTN:APS:RX<Pt>:EEVent <event>
Description	This command sets the time reference end (stop) event.
Parameters	<Pt> = Port number <event> = <CHARACTER PROGRAM DATA> ANYERROR: Any errors LOS: Loss of Signal OTUAIS: OTU-AIS LOF: Loss of Frame OOF: Out of Frame LOM: LOM OOM: OOM SMBIAE: SM-BIAE SMBDI: SM-BDI SMIAE: SM-IAE ODUAIS: ODU-AIS ODUOCI: ODU-OCI ODULCK: ODU-LCK PMBDI: PM-BDI FAS: FAS MFAS: MFAS SMBIP8: SM-BIP8 SMBEI: SM-BEI PMBIP8: PM-BIP8 PMBEI: PM-BEI PERRor: Pattern error LOFLLD: LOF-OTL OOFLLD: OOF-OTL LORLLD: LOR-OTL OORLLD: OOR-OTL FASLLD: FAS-OTL MFASLLD: MFAS-OTL LLMLLD: LLM-OTL <i>DEFault = LOF</i>
Response	None
Example	OTN:APS:RX1:EEV LOF
Note	

Syntax	OTN:APS:RX<Pt>:EEVent?
Description	This query returns the time reference end (stop) event.
Parameter	<Pt> = Port number
Response	<event> = <CHARACTER RESPONSE DATA>
Example	OTN:APS:RX1:EEV? → LOF
Note	

15.8.3 OTN:APS:RX<Pt>:PERiod

Syntax	OTN:APS:RX<Pt>:PERiod <period>
Description	This command sets the period that no error/alarm specified by the end event should not be detected.
Parameters	<Pt> = Port number <period> = <NUMERIC PROGRAM DATA> 1,10,100,200,300,400,500,600,700,800,900,1000 Unit ms <i>DEFault = 1</i>
Response	None
Example	OTN:APS:RX1:PER 1
Note	

Syntax	OTN:APS:RX<Pt>:PERiod?
Description	This query returns the period that no error/alarm specified by the end event should not be detected.
Parameter	<Pt> = Port number
Response	<period> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:APS:RX1:PER? → 1
Note	

15.8.4 OTN:APS:RX<Pt>:MLIMit

Syntax	OTN:APS:RX<Pt>:MLIMit <max>
Description	This command sets the time reference maximum limit. Unit: ms.
Parameters	<Pt> = Port number <max> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.000, MAXimum = 10000.000, DEFault = 50.000</i>
Response	None
Example	OTN:APS:RX1:MLIM 50.000
Note	

Syntax	OTN:APS:RX<Pt>:MLIMit?
Description	This query returns the time reference maximum limit. Unit: ms.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
Example	OTN:APS:RX1:MLIM? → 50.000
Note	

15.8.5 OTN:APS:START

Syntax	OTN:APS:START
Description	This command starts the APS (Automatic Protection Switching) measurement.
Parameter	None
Response	None
Example	OTN:APS:STAR
Note	

15.8.6 OTN:APS:STOP

Syntax	OTN:APS:STOP
Description	This command stops the APS (Automatic Protection Switching) measurement.
Parameter	None
Response	None
Example	OTN:APS:STOP
Note	

15.8.7 OTN:APS:RX<Pt>:NUMBer?

Syntax	OTN:APS:RX<Pt>:NUMBer?
Description	This query returns the number of times has measured.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:APS:RX1:NUMB? → 17
Note	

15.8.8 OTN:APS:RX<Pt>:MTIME?

Syntax	OTN:APS:RX<Pt>:MTIME?
Description	This query returns the maximum time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
	<limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	OTN:APS:RX1:MTIM? → 4.000,0
Note	The maximum measurable time is 10000 ms. The maximum measurable time will be responded if the result exceeds 10000 ms.

15.8.9 OTN:APS:RX<Pt>:LTIME?

Syntax	OTN:APS:RX<Pt>:LTIME?
Description	This query returns the least (minimum) time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	OTN:APS:RX1:LTIM? → 4.000
Note	The maximum measurable time is 10000 ms. The maximum measurable time will be responded if the result exceeds 10000 ms.

15.8.10 OTN:APS:RX<Pt>:ATIME?

Syntax	OTN:APS:RX<Pt>:ATIME?
Description	This query returns the average time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	OTN:APS:RX1:ATIM? → 4.000
Note	The maximum measurable time is 10000 ms. The maximum measurable time will be responded if the result exceeds 10000 ms.

15.8.11 OTN:APS:RX<Pt>:CTIME?

Syntax	OTN:APS:RX<Pt>:CTIME?
Description	This query returns the current time has measured. Unit: ms.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	OTN:APS:RX1:CTIM? → 4.000
Note	The maximum measurable time is 10000 ms. The maximum measurable time will be responded if the result exceeds 99999.999 ms.

15.9 RTD

This section document commands for the Round Trip Delay application.
Commands for general RTD settings are described in section 17.1 on page 1003.

15.9.1 OTN:RTD:RX<Pt>:MLIMit

Syntax	OTN:RTD:RX<Pt>:MLIMit <max>
Description	This command sets the time reference maximum limit. Unit: us.
Parameters	<Pt> = Port number <max> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0, MAXimum = 10000000.0, DEFault = MAXimum</i>
Response	None.
Example	OTN:RTD:RX1:MLIM 0.0
Note	

Syntax	OTN:RTD:RX<Pt>:MLIMit?
Description	This query returns the time reference maximum limit. Unit: us.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
Example	OTN:RTD:RX1:MLIM? → 0.0
Note	

15.9.2 OTN:RTD:RX<Pt>:NUMBer?

Syntax	OTN:RTD:RX<Pt>:NUMBer?
Description	This query returns the number of the RTD data.
Parameter	<Pt> = Port number
Response	<number> = <NR1 NUMERIC RESPONSE DATA>
Example	OTN:RTD:RX1:NUMB? → 2
Note	

15.9.3 OTN:RTD:RX<Pt>:ATIMe?

Syntax	OTN:RTD:RX<Pt>:ATIMe?
Description	This query returns the average time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<avg> = <NR2 NUMERIC RESPONSE DATA>
Example	OTN:RTD:RX1:ATIM? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

15.9.4 OTN:RTD:RX<Pt>:MTIMe?

Syntax	OTN:RTD:RX<Pt>:MTIMe?
Description	This query returns the maximum time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA> <limit exceeded> = <NR1 NUMERIC RESPONSE DATA> Returns 1, if the reference maximum limit has been exceeded.
Example	OTN:RTD:RX1:MTIM? → 1.0,0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

15.9.5 OTN:RTD:RX<Pt>:LTime?

Syntax	OTN:RTD:RX<Pt>:LTime?
Description	This query returns the least (minimum) time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	OTN:RTD:RX1:LTime? → 1.0
Note	The maximum measurable time will be responded if the result exceeds the maximum measurable time.

15.9.6 OTN:RTD:RX<Pt>:CTime?

Syntax	OTN:RTD:RX<Pt>:CTime?
Description	This query returns the current time of RTD. Unit: us.
Parameter	<Pt> = Port number
Response	<min> = <NR2 NUMERIC RESPONSE DATA>
Example	OTN:RTD:RX1:CTime? → 1.0
Note	The maximum measurable time will be responded if the result exceeds 99999999.9 us.

Chapter 16

Pluggable Module

16.1 Status

16.1.1 PMODule:STATus:PORT<Pt>:PRESent?

Syntax	PMODule:STATus:PORT<Pt>:PRESent?
Description	This query returns whether a pluggable module is present and ready.
Parameter	<Pt> = Port number
Response	<present> = <STRING RESPONSE DATA> "OK": Module is present and ready. "N/A": Port off, module not present or not ready.
Example	PMOD:STAT:PORT1:PRES? → "OK"
Note	

16.1.2 PMODule:STATus:PORT<Pt>:VENDor?

Syntax	PMODule:STATus:PORT<Pt>:VENDor?
Description	This query returns the pluggable module vendor name.
Parameter	<Pt> = Port number
Response	<vendor> = <STRING RESPONSE DATA>
Example	PMOD:STAT:PORT1:VEND? → "COMPANY"
Note	

16.1.3 PMODule:STATus:PORT<Pt>:WAVelength?

Syntax	PMODule:STATus:PORT<Pt>:WAVelength?
Description	This query returns the pluggable module laser wavelength.
Parameter	<Pt> = Port number
Response	<wavelength> = <STRING RESPONSE DATA> <wavelength max>,<wavelength min> = <STRING RESPONSE DATA>
Example	PMOD:STAT:PORT1:WAV? → "1310 nm" PMOD:STAT:PORT1:WAV? → "1310 nm,1295 nm"
Note	Response format depends on pluggable module. CFP, CFP2, CFP4: <wavelength max>,<wavelength min> Others: <wavelength>

16.1.4 PMODule:STATus:PORT<Pt>:BRATe?

Syntax	PMODule:STATus:PORT<Pt>:BRATe?
Description	This query returns the pluggable module bit rate.
Parameter	<Pt> = Port number
Response	<bitrate> = <STRING RESPONSE DATA>
Example	PMOD:STAT:PORT1:BRAT? → "2500 Mbps"
Note	

16.1.5 PMODule:STATus:PORT<Pt>:COMpliance?

Syntax	PMODule:STATus:PORT<Pt>:COMpliance?
Description	This query returns the pluggable module specification compliance.
Parameter	<Pt> = Port number
Response	<compliance> ,<compliance>* = <STRING RESPONSE DATA>
Example	PMOD:STAT:PORT1:COMP? → "10G Base-LR", "VSR2000-3R2", "VSR2000-3R2F"
Note	

16.1.6 PMODule:STATus:PORT<Pt>:PNUMber?

Syntax	PMODule:STATus:PORT<Pt>:PNUMber?
Description	This query returns the vendor part number.
Parameter	<Pt> = Port number
Response	<partnumber> = <STRING RESPONSE DATA>
Example	PMOD:STAT:PORT1:PNUM? → "ABC123"
Note	

16.1.7 PMODule:STATus:PORT<Pt>:REVision?

Syntax	PMODule:STATus:PORT<Pt>:REVision?
Description	This query returns the vendor revision level for part number.
Parameter	<Pt> = Port number
Response	<revision> = <STRING RESPONSE DATA> <MSA version>,<HW version>,<SW version> = <STRING RESPONSE DATA>
Example	PMOD:STAT:PORT1:REV? → "1A" PMOD:STAT:PORT1:REV? → "2.0,1.0,1.0"
Note	Response format depends on pluggable module. CFP, CFP2, CFP4: <MSA version>,<HW version>,<SW version> Others: <revision>

16.1.8 PMODule:STATus:PORT<Pt>:SNUMber?

Syntax	PMODule:STATus:PORT<Pt>:SNUMber?
Description	This query returns the vendor serial number.
Parameter	<Pt> = Port number
Response	<serialnumber> = <STRING RESPONSE DATA>
Example	PMOD:STAT:PORT1:SNUM? → "ABC123"
Note	

16.1.9 PMODule:STATus:PORT<Pt>:DATE?

Syntax	PMODule:STATus:PORT<Pt>:DATE?
Description	This query returns the vendor date code.
Parameter	<Pt> = Port number
Response	<date> = <STRING RESPONSE DATA>
Example	PMOD:STAT:PORT1:DATE? → "2000-01-01"
Note	

16.1.10 PMODule:STATus:PORT<Pt>:LOT?

Syntax	PMODule:STATus:PORT<Pt>:LOT?
Description	This query returns the vendor specific lot code.
Parameter	<Pt> = Port number
Response	<lot> = <STRING RESPONSE DATA>
Example	PMOD:STAT:PORT1:LOT? → ""
Note	

16.1.11 PMODule:STATus:PORT<Pt>:TPOWer?

Syntax	PMODule:STATus:PORT<Pt>:TPOWer?
Description	This query returns the transmitter power.
Parameter	<Pt> = Port number
Response	<total_power>{,<lane_n_power>}* = <STRING RESPONSE DATA> <lane_n_power> will be responded when the optical module has multiple lanes.
Example	PMOD:STAT:PORT1:TPOW? → "-1.00dBm"
Note	

16.1.12 PMODule:STATus:PORT<Pt>:RPOWer?

Syntax	PMODule:STATus:PORT<Pt>:RPOWer?
Description	This query returns the receiver power.
Parameter	<Pt> = Port number
Response	<total_power>{,<lane_n_power>}* = <STRING RESPONSE DATA> <lane_n_power> will be responded when the optical module has multiple lanes.
Example	PMOD:STAT:PORT1:RPOW? → "-40.00dBm"
Note	

16.1.13 PMODule:STATus:PORT<Pt>:STATus?

Syntax	PMODule:STATus:PORT<Pt>:STATus?
Description	This query returns the Status of module.
Parameter	<Pt> = Port number
Response	<status> = <STRING RESPONSE DATA>
Example	PMOD:STAT:PORT1:STAT? → "Data Ready"
Note	

16.1.14 PMODule:STATus:PORT<Pt>:GALarm?

Syntax	PMODule:STATus:PORT<Pt>:GALarm?
Description	This query returns the Global Alarm of selected module.
Parameter	<Pt> = Port number
Response	<galarm> = <STRING RESPONSE DATA>
Example	PMOD:STAT:PORT1:GAL? → "0"
Note	This command can be used on CFP, CFP2, and CFP4.

16.1.15 PMODule:STATus:PORT<Pt>:PALarm?

Syntax	PMODule:STATus:PORT<Pt>:PALarm?
Description	This query returns the programmable alarm of selected module.
Parameter	<Pt> = Port number
Response	<palarm> = <STRING RESPONSE DATA>
Example	PMOD:STAT:PORT1:PAL? → "0,0,0"
Note	This command can be used on CFP, CFP2, and CFP4.

16.1.16 PMODule:STATus:PORT<Pt>:AESummary[:EVENT]?

Syntax	PMODule:STATus:PORT<Pt>:AESummary[:EVENT]?
Description	This query returns the pluggable module alarms and errors summary event register. This command detect the positive edge of the error and alarm event registers.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = summary of PMOD:STAT:PORT<Pt>:ALAR[:EVEN]? DB2 - DB16 = NOT USED
Example	PMOD:STAT:PORT1:AES? → 1
Note	This command can be used on CFP, CFP2, and CFP4.

16.1.17 PMODule:STATus:PORT<Pt>:AESummary:CONDition?

Syntax	PMODule:STATus:PORT<Pt>:AESummary:CONDition?
Description	This query returns the pluggable module alarms and errors summary condition register. This command is summary of the error and alarm event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> Same as PMOD:STAT:PORT<Pt>:AESummary[:EVENT]?
Example	PMOD:STAT:PORT1:AES:COND?
Note	This command can be used on CFP, CFP2, and CFP4.

16.1.18 PMODule:STATus:PORT<Pt>:ALARm[:EVENTt]?

Syntax	PMODule:STATus:PORT<Pt>:ALARm[:EVENTt]?
Description	This query returns the alarms event register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Module is not present DB2 (2) = NOT USED DB3 (4) = Global Alarm DB4 (8) = Programmable alarm 1 DB5 (16) = Programmable alarm 2 DB6 (32) = Programmable alarm 3 DB7 - DB16 = NOT USED
Example	PMOD:STAT:PORT1:ALAR?
Note	This command can be used on CFP, CFP2, and CFP4.

16.1.19 PMODule:STATus:PORT<Pt>:ALARm:CONDition?

Syntax	PMODule:STATus:PORT<Pt>:ALARm:CONDition?
Description	This query returns the alarms condition register.
Parameter	<Pt> = Port number
Response	<register> = <NR1 NUMERIC RESPONSE DATA> DB1 (1) = Module is not present DB2 (2) = NOT USED DB3 (4) = Global Alarm DB4 (8) = Programmable alarm 1 DB5 (16) = Programmable alarm 2 DB6 (32) = Programmable alarm 3 DB7 - DB16 = NOT USED
Example	PMOD:STAT:PORT1:ALAR:COND?
Note	This command can be used on CFP, CFP2, and CFP4.

16.2 MDIO

16.2.1 PMODule:PORT<Pt>:MDIO:WRITe

Syntax	PMODule:PORT<Pt>:MDIO:WRITe <addr>,<data>[,<trans>]
Description	MDIO write access.
Parameters	<Pt> = Port number <addr> = <HEXADECIMAL NUMERIC PROGRAM DATA> <i>MINimum=#H0000, MAXimum=#HFFFF, DEFault=#H0000</i> <data> = <HEXADECIMAL NUMERIC PROGRAM DATA> <i>MINimum=#H0000, MAXimum=#HFFFF, DEFault=#H0000</i> <trans> = <NUMERIC PROGRAM DATA> 0 : TX 1 : RX <i>DEFault = 0</i>
Example	PMOD:PORT1:MDIO:WRIT #H1234,#HFFFF
Note	This command can be used in V3.00 or later. This command support CFP, CFP2, and CFP4.

16.2.2 PMODule:PORT<Pt>:MDIO:READ?

Syntax	PMODule:PORT<Pt>:MDIO:READ? <addr>[,<trans>]
Description	MDIO read access.
Parameter	<Pt> = Port number <addr> = <HEXADECIMAL NUMERIC PROGRAM DATA> <i>MINimum=#H0000, MAXimum=#HFFFF, DEFault=#H0000</i> <trans> = <NUMERIC PROGRAM DATA> 0 : TX 1 : RX <i>DEFault = 0</i>
Response	<register> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	PMOD:PORT1:MDIO:READ? #H1234,0 → #HFFFF
Note	This command can be used in V3.00 or later. This command support CFP, CFP2, and CFP4.

16.3 I2C

16.3.1 PMODule:PORT<Pt>:I2C:WRITe

Syntax	PMODule:PORT<Pt>:I2C:WRITe <page>,<addr>,<data>[,<memory>]
Description	I2C write access.
Parameters	<Pt> = Port number <page> = <HEXADECIMAL NUMERIC PROGRAM DATA> <i>MINimum=#H00, MAXimum=#HFF, DEFault=#H00</i> <addr> = <HEXADECIMAL NUMERIC PROGRAM DATA> <i>MINimum=#H0000, MAXimum=#HFFFF, DEFault=#H0000</i> <data> = <HEXADECIMAL NUMERIC PROGRAM DATA> <i>MINimum=#H0000, MAXimum=#HFFFF, DEFault=#H0000</i> <i>DEFault = 0</i> <memory> = <NUMERIC PROGRAM DATA> #HA0 or #HA2 : SFP Memory Address. <i>DEFault = #A0</i>
Example	PMOD:PORT1:I2C:WRIT #H00,12,#HFF
Note	This command can be used in V7.02 or later. This command support SFP, SFP+, SFP28, QSFP+, QSFP28, and QSFP28 Adpt.

16.3.2 PMODule:PORT<Pt>:I2C:READ?

Syntax	PMODule:PORT<Pt>:I2C:READ? <page>,<addr>[,<memory>]
Description	I2C read access.
Parameter	<Pt> = Port number <addr> = <HEXADECIMAL NUMERIC PROGRAM DATA> <i>MINimum=#H0000, MAXimum=#HFFFF, DEFault=#H0000</i> <memory> = <NUMERIC PROGRAM DATA> #HA0 or #HA2 : SFP Memory Address. <i>DEFault = #HA0</i>
Response	<register> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	PMOD:PORT1:I2C:READ? #H00,12 → #HFFFF
Note	This command can be used in V7.02 or later. This command support SFP, SFP+, SFP28, QSFP+, QSFP28, and QSFP28 Adpt.

16.4 CFP2-QSFP28 Adaptor

16.4.1 PMODule:PORT<Pt>:MDIO:ADPT:WRITe

Syntax	PMODule:PORT<Pt>:MDIO:ADPT:WRITe <addr>,<data>
Description	MDIO write access in Adapter.
Parameters	<Pt> = Port number <addr> = <HEXADECIMAL NUMERIC PROGRAM DATA> <i>MINimum=#H0000, MAXimum=#HFFFF, DEFault=#H0000</i> <data> = <HEXADECIMAL NUMERIC PROGRAM DATA> <i>MINimum=#H0000, MAXimum=#HFFFF, DEFault=#H0000</i>
Example	PMOD:PORT1:MDIO:ADPT:WRIT #H8000,#HFFFF
Note	This command can be used with J1756A CFP2-QSFP28 Adaptor.

16.4.2 PMODule:PORT<Pt>:MDIO:ADPT:READ?

Syntax	PMODule:PORT<Pt>:MDIO:ADPT:READ? <addr>
Description	MDIO read access in Adapter.
Parameter	<Pt> = Port number <addr> = <HEXADECIMAL NUMERIC PROGRAM DATA> <i>MINimum=#H0000, MAXimum=#HFFFF, DEFault=#H0000</i>
Response	<register> = <HEXADECIMAL NUMERIC RESPONSE DATA>
Example	PMOD:PORT1:MDIO:ADPT:READ? #H8000 → #HFFFF
Note	This command can be used with J1756A CFP2-QSFP28 Adaptor.

16.5 Tx reference clock output

16.5.1 PMODule:TOUTput:PORT<Pt>[:ENABLE]

Syntax	PMODule:TOUTput:PORT<Pt>[:ENABLE] <enable>
Description	This command enables or disables Tx reference clock output.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	PMOD:TOUT:PORT1 ON
Note	Tx reference clock output can be enabled only one port on the same module. This command can be used on MT1100A.

Syntax	PMODule:TOUTput:PORT<Pt>[:ENABLE]?
Description	This query returns whether the state of the Tx reference clock output is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	PMOD:TOUT:PORT1? → 1
Note	This command can be used on MT1100A.

16.5.2 PMODule:TOUTput:PORT<Pt>:FREQuency

Syntax	PMODule:TOUTput:PORT<Pt>:FREQuency <frequency>
Description	This command sets the Tx reference clock output frequency on this module.
Parameters	<Pt> = Port number <frequency> = <CHARACTER PROGRAM DATA> DIV16: 1/16 (Tx clock frequency divided by 16) DIV64: 1/64 (Tx clock frequency divided by 64) <i>DEFault</i> = DIV16
Response	None.
Example	PMOD:TOUT:PORT1:FREQ DIV16
Note	This setting applies to all ports on the same module. This command can be used on MT1100A.

Syntax	PMODule:TOUTput:PORT<Pt>:FREQuency?
Description	This query returns the Tx reference clock output frequency on this module.
Parameter	<Pt> = Port number
Response	<frequency> = <CHARACTER RESPONSE DATA>
Example	PMOD:TOUT:PORT1:FREQ? → DIV16
Note	This command can be used on MT1100A.

16.5.3 PMODule:TOUTput:PORT<Pt>:SYNC:FREQuency

Syntax	PMODule:TOUTput:PORT<Pt>:SYNC:FREQuency <frequency>
Description	This command sets the sync clock output frequency on this module.
Parameters	<Pt> = Port number <frequency> = <CHARACTER PROGRAM DATA> Off DIV8: 1/8 (Sync clock frequency divided by 8) DIV16: 1/16 (Sync clock frequency divided by 64) <i>DEFault</i> = DIV16
Response	None.
Example	PMOD:TOUT:PORT1:SYNC:FREQ DIV8
Note	This command can be used on MU110013A, MU100011A, MU104014A, MU104015A or MU104011A. This command can be used when interface type is CFP2, QSFP28 Adpt., QSFP+, QSFP28, QSFP-DD or OSFP.

Syntax	PMODule:TOUTput:PORT<Pt>:SYNC:FREQuency?
Description	This query returns the sync clock output frequency on this module.
Parameter	<Pt> = Port number
Response	<frequency> = <CHARACTER RESPONSE DATA>
Example	PMOD:TOUT:PORT1:SYNC:FREQ? → DIV8
Note	This command can be used on MU110013A, MU100011A, MU104014A, MU104015A or MU104011A.

16.6 tunable SFP

16.6.1 PMODule:PORT<Pt>:TSFP:CHANnel

Syntax	PMODule:PORT<Pt>:TSFP:CHANnel <channel>
Description	This command sets the channel about tunable SFP.
Parameters	<Pt> = Port number <channel> = <NR1 NUMERIC RESPONSE DATA> <i>MINimum=1, MAXimum=65536, DEFault=1</i>
Example	PMOD:PORT1:TSFP:CHAN 10
Note	This command can be used in V7.03 or later.

16.6.2 PMODule:PORT<Pt>:TSFP:CHANnel?

Syntax	PMODule:PORT<Pt>:TSFP:CHANnel?
Description	This query returns the channel about the tunabel SFP.
Parameter	<Pt> = Port number
Response	<channel> = <NR1 NUMERIC RESPONSE DATA>
Example	PMOD:PORT1:TSFP:CHAN? → 10
Note	This command can be used in V7.03 or later.

16.6.3 PMODule:PORT<Pt>:TSFP:WLENgth

Syntax	PMODule:PORT<Pt>:TSFP:WLENgth <channel>
Description	This command sets the wavelength about the tunable SFP.
Parameters	<Pt> = Port number <channel> = <NR3 NUMERIC RESPONSE DATA> <i>MINimum=1, MAXimum=65536, DEFault=1</i>
Example	PMOD:PORT1:TSFP:WLEN 1556.55
Note	This command can be used in V7.03 or later.

16.6.4 PMODule:PORT<Pt>:TSFP:WLENgth?

Syntax	PMODule:PORT<Pt>:TSFP:WLENgth?
Description	This query returns the wavelength about the tunabel SFP.
Parameter	<Pt> = Port number
Response	<channel> = <NR3 NUMERIC RESPONSE DATA>
Example	PMOD:PORT1:TSFP:WLEN? → 1556.55
Note	This command can be used in V7.03 or later.

16.7 Transceiver settings - CFP2-QSFP28 Adaptor

16.7.1 PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:ATTN:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:ATTN:TRACking <enable>
Description	This command enables or disables the tracking for Tx attenuator.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:Q28A:TX:ATTN:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:ATTN:TRACking?
Description	This query returns whether the tracking for Tx attenuator is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:Q28A:TX:ATTN:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.7.2 PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:ATTN

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:ATTN <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command set the parameter for Tx attenuator .
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:Q28A:TX:ATTN (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:ATTN?
Description	This query returns the parameter for Tx attenuator.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:Q28A:TX:ATTN? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.7.3 PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:PRE:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:PRE:TRACking <enable>
Description	This command enables or disables the tracking for Tx Pre .
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:Q28A:TX:PRE:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:PRE:TRACking?
Description	This query returns whether the tracking for Tx Pre is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:Q28A:TX:PRE:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.7.4 PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:PRE

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:PRE <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command set the parameter for Tx PRE.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:Q28A:TX:PRE (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:PRE?
Description	This query returns the parameter for Tx PRE.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:Q28A:TX:PRE? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.7.5 PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:POST:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:POST:TRACking <enable>
Description	This command enables or disables the tracking for Tx POST.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:Q28A:TX:POST:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:POST:TRACking?
Description	This query returns whether the tracking for Tx POST is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:Q28A:TX:POST:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.7.6 PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:POST

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:POST <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command set the parameter for Tx POST.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:Q28A:TX:POST (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:TX:POST?
Description	This query returns the parameter for Tx POST.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:Q28A:TX:POST? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.7.7 PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:EAUTo

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:EAUTo <enable>
Description	This command enables or disables the Auto RX equalizer.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:Q28A:RX:EAUT OFF
Note	This command can be used in V7.05 or later. This command valid on MU110013A only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:EAUTo?
Description	This query returns whether the Auto RX equalizer is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:Q28A:RX:EAUT? → OFF
Note	This command can be used in V7.05 or later. This command valid on MU110013A only.

16.7.8 PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:EQUalizer:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:EQUalizer:TRACking <enable>
Description	This command enables or disables the tracking for Rx Equalizer.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:Q28A:RX:EQU:TRAC OFF
Note	This command can be used in V7.05 or later. This command valid on MU110013A only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:EQUalizer:TRACking?
Description	This query returns whether tracking for Rx Equalizer is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:Q28A:RX:EQU:TRAC? → OFF
Note	This command can be used in V7.05 or later. This command valid on MU110013A only.

16.7.9 PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:EQUalizer

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:EQUalizer <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command set the Rx equalizer value.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:Q28A:RX:EQU (0)
Note	This command can be used in V7.05 or later. This command valid on MU110013A only. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:EQUalizer?
Description	This query returns the Rx equalizer value.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:Q28A:RX:EQU? → (0)
Note	This command can be used in V7.05 or later. This command valid on MU110013A only. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.7.10 PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:REStore

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:REStore
Description	This command restore RX Equalizer.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:Q28A:RX:REST
Note	This command can be used in V7.05 or later.

16.7.11 PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:AUTotune

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:RX:AUTotune
Description	This command executes autotune for RX Equalizer.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:Q28A:RX:AUT
Note	This command can be used in V7.05 or later.

16.7.12 PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:DEFault

Syntax	PMODule:PORT<Pt>:TRANsceiver:Q28Adpt:DEFault
Description	This command restores default of Transceiver settings.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:Q28A:DEF
Note	This command can be used in V7.05 or later.

16.8 Transceiver settings - CFP2

16.8.1 PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:ATTN:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:ATTN:TRACking <enable>
Description	This command enables or disables the tracking for Tx attenuator.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP2:TX:ATTN:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:ATTN:TRACking?
Description	This query returns whether the tracking for Tx attenuator is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP2:TX:ATTN:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.8.2 PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:ATTN

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:ATTN <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx attenuator.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP2:TX:ATTN (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:ATTN?
Description	This query returns the parameter for Tx attenuator.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP2:TX:ATTN? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.8.3 PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:PRE:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:PRE:TRACking <enable>
Description	This command enables or disables the tracking for Tx Pre.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP2:TX:PRE:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:PRE:TRACking?
Description	This query returns whether the tracking for Tx Pre is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP2:TX:PRE:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.8.4 PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:PRE

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:PRE <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx PRE.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP2:TX:PRE (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:PRE?
Description	This query returns the parameter for Tx PRE.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP2:TX:PRE? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.8.5 PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:POST:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:POST:TRACking <enable>
Description	This command enables or disables the tracking for Tx POST.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP2:TX:POST:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:POST:TRACking?
Description	This query returns whether the tracking for Tx POST is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP2:TX:POST:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.8.6 PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:POST

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:POST <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx POST.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP2:TX:POST (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:TX:POST?
Description	This query returns the parameter for Tx POST.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP2:TX:POST? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.8.7 PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:EAUTo

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:EAUTo <enable>
Description	This command enables or disables the Auto RX equalizer.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP2:RX:EAUT OFF
Note	This command can be used in V7.05 or later. This command valid on MU110013A only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:EAUTo?
Description	This query returns whether the Auto RX equalizer is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP2:RX:EAUT? → OFF
Note	This command can be used in V7.05 or later. This command valid on MU110013A only.

16.8.8 PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:EQUalizer:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:EQUalizer:TRACking <enable>
Description	This command enables or disables the tracking for Rx Equalizer.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP2:RX:EQU:TRAC OFF
Note	This command can be used in V7.05 or later. This command valid on MU110013A only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:EQUalizer:TRACking?
Description	This query returns whether tracking for Rx Equalizer is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP2:RX:EQU:TRAC? → OFF
Note	This command can be used in V7.05 or later. This command valid on MU110013A only.

16.8.9 PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:EQUalizer

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:EQUalizer <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the Rx equalizer value.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP2:RX:EQU (0)
Note	This command can be used in V7.05 or later. This command valid on MU110013A only. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:EQUalizer?
Description	This query returns the Rx equalizer value.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP2:RX:EQU? → (0)
Note	This command can be used in V7.05 or later. This command valid on MU110013A only. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.8.10 PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:RESTore

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:RESTore
Description	This command restores RX Equalizer.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:CFP2:RX:REST
Note	This command can be used in V7.05 or later.

16.8.11 PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:AUTotune

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:RX:AUTotune
Description	This command executes autotune for RX Equalizer.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:CFP2:RX:AUT
Note	This command can be used in V7.05 or later.

16.8.12 PMODule:PORT<Pt>:TRANsceiver:CFP2:DEFault

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP2:DEFault
Description	This command restores default of Transceiver settings.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:CFP2:DEF
Note	This command can be used in V7.05 or later.

16.9 Transceiver settings - CXP

16.9.1 PMODule:PORT<Pt>:TRANsceiver:CXP:TX:VOD:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:VOD:TRACking <enable>
Description	This command enables or disables the tracking for Tx VOD.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CXP:TX:VOD:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:VOD:TRACking?
Description	This query returns whether the tracking for Tx attenuator is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CXP:TX:VOD:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.9.2 PMODule:PORT<Pt>:TRANsceiver:CXP:TX:VOD

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:VOD <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>,<Lane8 Data>,<Lane9 Data>]
Description	This command sets the parameter for Tx VOD .
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CXP:TX:VOD (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:VOD?
Description	This query returns the parameter for Tx VOD.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CXP:TX:VOD? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.9.3 PMODule:PORT<Pt>:TRANsceiver:CXP:TX:FIRSt:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:FIRSt:TRACking <enable>
Description	This command enables or disables the tracking for Tx First.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CXP:TX:FIRS:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:FIRSt:TRACking?
Description	This query returns whether the tracking for Tx First is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CXP:TX:FIRS:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.9.4 PMODule:PORT<Pt>:TRANsceiver:CXP:TX:FIRSt

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:FIRSt <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>,<Lane8 Data>,<Lane9 Data>]
Description	This command sets the parameter for Tx VOD .
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CXP:TX:FIRS (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:FIRSt?
Description	This query returns the parameter for Tx First.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CXP:TX:FIRS? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.9.5 PMODule:PORT<Pt>:TRANsceiver:CXP:TX:PRE:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:PRE:TRACking <enable>
Description	This command enables or disables the tracking for Tx PRE.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CXP:TX:PRE:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:PRE:TRACking?
Description	This query returns whether the tracking for Tx PRE is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CXP:TX:PRE:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.9.6 PMODule:PORT<Pt>:TRANsceiver:CXP:TX:PRE

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:PRE <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>,<Lane8 Data>,<Lane9 Data>]
Description	This command sets the parameter for Tx PRE .
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CXP:TX:PRE (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:PRE?
Description	This query returns the parameter for Tx PRE.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CXP:TX:PRE? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.9.7 PMODule:PORT<Pt>:TRANsceiver:CXP:TX:SECond:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:SECond:TRACking <enable>
Description	This command enables or disables the tracking for Tx Second.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CXP:TX:SEC:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:SECond:TRACking?
Description	This query returns whether the tracking for Tx Second is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CXP:TX:SEC:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.9.8 PMODule:PORT<Pt>:TRANsceiver:CXP:TX:SECond

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:SECond <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>,<Lane8 Data>,<Lane9 Data>]
Description	This command sets the parameter for Tx Second .
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CXP:TX:SEC (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:TX:SECond?
Description	This query returns the parameter for Tx Second.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CXP:TX:SEC? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.9.9 PMODule:PORT<Pt>:TRANsceiver:CXP:RX:CONTRol:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:RX:CONTRol:TRACking <enable>
Description	This command enables or disables the tracking for RX Control.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CXP:RX:CONT:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:RX:CONTrol:TRACking?
Description	This query returns whether the tracking for RX Control is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CXP:RX:CONT:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.9.10 PMODule:PORT<Pt>:TRANsceiver:CXP:RX:CONTrol

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:RX:CONTrol <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>,<Lane8 Data>,<Lane9 Data>]
Description	This command sets the parameter for RX Control .
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CXP:RX:CONT (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:RX:CONTrol?
Description	This query returns the parameter for RX Control.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CXP:RX:CONT? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.9.11 PMODule:PORT<Pt>:TRANsceiver:CXP:RX:DCGain:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:RX:DCGain:TRACking <enable>
Description	This command enables or disables the tracking for RX DC Gain.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> DEFault = OFF
Example	PMOD:PORT1:TRAN:CXP:RX:DCG:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:RX:DCGain:TRACking?
Description	This query returns whether the tracking for RX DC Gain is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CXP:RX:DCG:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.9.12 PMODule:PORT<Pt>:TRANsceiver:CXP:RX:DCGain

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:RX:DCGain <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>,<Lane8 Data>,<Lane9 Data>]
Description	This command set the parameter for RX DC Gain.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CXP:RX:DCG (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:RX:DCGain?
Description	This query returns the parameter for RX DC Gain.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CXP:RX:DCG? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.9.13 PMODule:PORT<Pt>:TRANsceiver:CXP:DEFault

Syntax	PMODule:PORT<Pt>:TRANsceiver:CXP:DEFault
Description	This command restores default of Transceiver settings.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:CXP:DEF
Note	This command can be used in V7.05 or later.

16.10 Transceiver settings - CFP

16.10.1 PMODule:PORT<Pt>:TRANsceiver:CFP:TX:VOD:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:VOD:TRACking <enable>
Description	This command enables or disables the tracking for Tx VOD.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFAult = OFF</i>
Example	PMOD:PORT1:TRAN:CFP:TX:VOD:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:VOD:TRACking?
Description	This query returns whether the tracking for Tx VOD is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP:TX:VOD:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.10.2 PMODule:PORT<Pt>:TRANsceiver:CFP:TX:VOD

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:VOD <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data> [,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>,<Lane8 Data>,<Lane9 Data>]]
Description	This command sets the parameter for Tx VOD.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP:TX:VOD (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes. The number of lanes depends on the traffic rate.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:VOD?
Description	This query returns the parameter for Tx VOD.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP:TX:VOD? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return. The number of lanes depends on the traffic rate.

16.10.3 PMODule:PORT<Pt>:TRANsceiver:CFP:TX:FIRSt:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:FIRSt:TRACking <enable>
Description	This command enables or disables the tracking for Tx First.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFAult = OFF</i>
Example	PMOD:PORT1:TRAN:CFP:TX:FIRS:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:FIRSt:TRACking?
Description	This query returns whether the tracking for Tx First is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP:TX:FIRS:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.10.4 PMODule:PORT<Pt>:TRANsceiver:CFP:TX:FIRSt

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:FIRSt <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data> [,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>,<Lane8 Data>,<Lane9 Data>]]
Description	This command sets the parameter for Tx VOD.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP:TX:FIRS (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes. The number of lanes depends on the traffic rate.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:FIRSt?
Description	This query returns the parameter for Tx First.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP:TX:FIRS? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return The number of lanes depends on the traffic rate.

16.10.5 PMODule:PORT<Pt>:TRANsceiver:CFP:TX:PRE:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:PRE:TRACking <enable>
Description	This command enables or disables the tracking for Tx PRE.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP:TX:PRE:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:PRE:TRACking?
Description	This query returns whether the tracking for Tx PRE is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP:TX:PRE:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.10.6 PMODule:PORT<Pt>:TRANsceiver:CFP:TX:PRE

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:PRE <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data> [,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>,<Lane8 Data>,<Lane9 Data>]]
Description	This command sets the parameter for Tx PRE.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP:TX:PRE (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes. The number of lanes depends on the traffic rate.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:PRE?
Description	This query returns the parameter for Tx PRE.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP:TX:PRE? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return. The number of lanes depends on the traffic rate.

16.10.7 PMODule:PORT<Pt>:TRANsceiver:CFP:TX:SECond:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:SECond:TRACking <enable>
Description	This command enables or disables the tracking for Tx Second.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP:TX:SEC:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:SECond:TRACking?
Description	This query returns whether the tracking for Tx Second is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP:TX:SEC:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.10.8 PMODule:PORT<Pt>:TRANsceiver:CFP:TX:SECond

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:SECond <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data> [,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>,<Lane8 Data>,<Lane9 Data>]]
Description	This command set the parameter for Tx Second.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP:TX:SEC (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes. The number of lanes depends on the traffic rate.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:TX:SECond?
Description	This query returns the parameter for Tx Second.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP:TX:SEC? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return. The number of lanes depends on the traffic rate.

16.10.9 PMODule:PORT<Pt>:TRANsceiver:CFP:RX:CONTrol:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:RX:CONTrol:TRACking <enable>
Description	This command enables or disables the tracking for RX Control.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP:RX:CONT:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:RX:CONTrol:TRACking?
Description	This query returns whether the tracking for RX Control is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP:RX:CONT:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.10.10 PMODule:PORT<Pt>:TRANsceiver:CFP:RX:CONTrol

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:RX:CONTrol <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data> [,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>,<Lane8 Data>,<Lane9 Data>]]
Description	This command sets the parameter for RX Control.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP:RX:CONT (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes. The number of lanes depends on the traffic rate.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:RX:CONTrol?
Description	This query returns the parameter for RX Control.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP:RX:CONT? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return. The number of lanes depends on the traffic rate.

16.10.11 PMODule:PORT<Pt>:TRANsceiver:CFP:RX:DCGain:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:RX:DCGain:TRACking <enable>
Description	This command enables or disables the tracking for RX DC Gain.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP:RX:DCG:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:RX:DCGain:TRACking?
Description	This query returns whether the tracking for RX DC Gain is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP:RX:DCG:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.10.12 PMODule:PORT<Pt>:TRANsceiver:CFP:RX:DCGain

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:RX:DCGain <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data> [,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>,<Lane8 Data>,<Lane9 Data>]]
Description	This command sets the parameter for RX DC Gain.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP:RX:DCG (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.. The number of lanes depends on the traffic rate.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:RX:DCGain?
Description	This query returns the parameter for RX DC Gain.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP:RX:DCG? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return. The number of lanes depends on the traffic rate.

16.10.13 PMODule:PORT<Pt>:TRANsceiver:CFP:DEFault

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP:DEFault
Description	This command restores default of Transceiver settings.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:CFP:DEF
Note	This command can be used in V7.05 or later.

16.11 Transceiver settings - QSFP

16.11.1 PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:VOD:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:VOD:TRACking <enable>
Description	This command enables or disables the tracking for Tx VOD.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QSFP:TX:VOD:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:VOD:TRACking?
Description	This query returns whether the tracking for Tx VOD is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:TX:VOD:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.11.2 PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:VOD

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:VOD <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx VOD.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QSFP:TX:VOD (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:VOD?
Description	This query returns the parameter for Tx VOD.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:TX:VOD? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.11.3 PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:FIRSt:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:FIRSt:TRACking <enable>
Description	This command enables or disables the tracking for Tx First.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QSFP:TX:FIRS:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:FIRSt:TRACking?
Description	This query returns whether the tracking for Tx First is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:TX:FIRS:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.11.4 PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:FIRSt

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:FIRSt <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx VOD.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QSFP:TX:FIRS (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:FIRSt?
Description	This query returns the parameter for Tx First.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:TX:FIRS? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.11.5 PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:PRE:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:PRE:TRACking <enable>
Description	This command enables or disables the tracking for Tx PRE.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QSFP:TX:PRE:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:PRE:TRACking?
Description	This query returns whether the tracking for Tx PRE is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:TX:PRE:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.11.6 PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:PRE

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:PRE <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx PRE.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QSFP:TX:PRE (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:PRE?
Description	This query returns the parameter for Tx PRE.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:TX:PRE? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.11.7 PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:SECond:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:SECond:TRACking <enable>
Description	This command enables or disables the tracking for Tx Second.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QSFP:TX:SEC:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:SECond:TRACking?
Description	This query returns whether the tracking for Tx Second is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:TX:SEC:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.11.8 PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:SECond

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:SECond <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command set the parameter for Tx Second.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QSFP:TX:SEC (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:SECond?
Description	This query returns the parameter for Tx Second.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:TX:SEC? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.11.9 PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:CONTRol:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:CONTRol:TRACking <enable>
Description	This command enables or disables the tracking for RX Control.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QSFP:RX:CONT:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:CONTRol:TRACking?
Description	This query returns whether the tracking for RX Control is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:RX:CONT:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.11.10 PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:CONTrol

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:CONTrol <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for RX Control.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QSFP:RX:CONT (0)
Note	This command can be used in V7.05 or later. If tracking is OFF, you should input the parameters for all lanes. if tracking is ON, you should input only first lane value.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:CONTrol?
Description	This query returns the parameter for RX Control.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:RX:CONT? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.11.11 PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DCGain:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DCGain:TRACking <enable>
Description	This command enables or disables the tracking for RX DC Gain.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QSFP:RX:DCG:TRAC OFF
Note	This command can be used in V7.05 or later.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DCGain:TRACking?
Description	This query returns whether the tracking for RX DC Gain is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:RX:DCG:TRAC? → OFF
Note	This command can be used in V7.05 or later.

16.11.12 PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DCGain

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DCGain <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for RX DC Gain.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QSFP:RX:DCG (0)
Note	This command can be used in V7.05 or later. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DCGain?
Description	This query returns the parameter for RX DC Gain.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:RX:DCG? → (0)
Note	This command can be used in V7.05 or later. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.11.13 PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:POST:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:POST:TRACking <enable>
Description	This command enables or disables the tracking for Tx POST.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QSFP:TX:POST:TRAC OFF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:POST:TRACking?
Description	This query returns whether the tracking for Tx POST is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:TX:POST:TRAC? → OFF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

16.11.14 PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:POST

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:POST <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx POST.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QSFP:TX:POST (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:TX:POST?
Description	This query returns the parameter for Tx POST.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:TX:POST? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.11.15 PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DFE:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DFE:TRACking <enable>
Description	This command enables or disables the tracking for Rx DFE.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QSFP:RX:DFE:TRAC OFF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DFE:TRACking?
Description	This query returns whether tracking for Rx DFE is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:RX:DFE:TRAC? → OFF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

16.11.16 PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DFE

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DFE <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the Rx DFE value.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QSFP:RX:DFE (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:RX:DFE?
Description	This query returns the Rx DFE value.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP:RX:DFE? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.11.17 PMODule:PORT<Pt>:TRANsceiver:QSFP:DEFault

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP:DEFault
Description	This command restores default of Transceiver settings.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:QSFP:DEF
Note	This command can be used in V7.05 or later.

16.12 Transceiver settings - SFP28

16.12.1 PMODule:PORT<Pt>:TRANsceiver:SFP28:TX:VOD

Syntax	PMODule:PORT<Pt>:TRANsceiver:SFP28:TX:VOD <Lane0 Data>
Description	This command sets the parameter for Tx VOD.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:SFP28:TX:VOD (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:SFP28:TX:VOD?
Description	This query returns the parameter for Tx VOD.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:SFP28:TX:VOD? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.12.2 PMODule:PORT<Pt>:TRANsceiver:SFP28:TX:PRE

Syntax	PMODule:PORT<Pt>:TRANsceiver:SFP28:TX:PRE <Lane0 Data>
Description	This command sets the parameter for Tx PRE.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:SFP28:TX:PRE (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:SFP28:TX:PRE?
Description	This query returns the parameter for Tx PRE.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:SFP28:TX:PRE? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.12.3 PMODule:PORT<Pt>:TRANsceiver:SFP28:TX:POST

Syntax	PMODule:PORT<Pt>:TRANsceiver:SFP28:TX:POST <Lane0 Data>
Description	This command sets the parameter for Tx POST.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:SFP28:TX:POST (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:SFP28:TX:POST?
Description	This query returns the parameter for Tx POST.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:SFP28:TX:POST? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.12.4 PMODule:PORT<Pt>:TRANsceiver:SFP28:RX:DFE

Syntax	PMODule:PORT<Pt>:TRANsceiver:SFP28:RX:DFE <Lane0 Data>
Description	This command sets the Rx DFE value.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:SFP28:RX:DFE (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:SFP28:RX:DFE?
Description	This query returns the Rx DFE value.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:SFP28:RX:DFE? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.12.5 PMODule:PORT<Pt>:TRANsceiver:SFP28:DEFault

Syntax	PMODule:PORT<Pt>:TRANsceiver:SFP28:DEFault
Description	This command restores default of Transceiver settings.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:SFP28:DEF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

16.13 Transceiver settings - CFP4

16.13.1 PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:VOD:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:VOD:TRACking <enable>
Description	This command enables or disables the tracking for Tx VOD.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP4:TX:VOD:TRAC OFF
Note	This command can be used in V8.00 or later and valid on MU100011A only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:VOD:TRACking?
Description	This query returns whether the tracking for Tx VOD is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP4:TX:VOD:TRAC? → OFF
Note	This command can be used in V8.00 or later and valid on MU100011A only.

16.13.2 PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:VOD

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:VOD <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx VOD.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP4:TX:VOD (0)
Note	This command can be used in V8.00 or later and valid on MU100011A only. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:VOD?
Description	This query returns the parameter for Tx VOD.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP4:TX:VOD? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A only. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.13.3 PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:PRE:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:PRE:TRACking <enable>
Description	This command enables or disables the tracking for Tx Pre.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP4:TX:PRE:TRAC OFF
Note	This command can be used in V8.00 or later and valid on MU100011A only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:PRE:TRACking?
Description	This query returns whether the tracking for Tx Pre is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP4:TX:PRE:TRAC? → OFF
Note	This command can be used in V8.00 or later and valid on MU100011A only.

16.13.4 PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:PRE

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:PRE <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx PRE.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP4:TX:PRE (0)
Note	This command can be used in V8.00 or later and valid on MU100011A only. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:PRE?
Description	This query returns the parameter for Tx PRE.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP4:TX:PRE? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A only. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.13.5 PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:POST:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:POST:TRACking <enable>
Description	This command enables or disables the tracking for Tx POST.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP4:TX:POST:TRAC OFF
Note	This command can be used in V8.00 or later and valid on MU100011A only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:POST:TRACking?
Description	This query returns whether the tracking for Tx POST is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP4:TX:POST:TRAC? → OFF
Note	This command can be used in V8.00 or later and valid on MU100011A only.

16.13.6 PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:POST

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:POST <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx POST.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP4:TX:POST (0)
Note	This command can be used in V8.00 or later and valid on MU100011A only. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:TX:POST?
Description	This query returns the parameter for Tx POST.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP4:TX:POST? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A only. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.13.7 PMODule:PORT<Pt>:TRANsceiver:CFP4:RX:DFE:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:RX:DFE:TRACking <enable>
Description	This command enables or disables the tracking for Rx DFE.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:CFP4:RX:DFE:TRAC OFF
Note	This command can be used in V8.00 or later and valid on MU100011A only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:RX:DFE:TRACking?
Description	This query returns whether tracking for Rx DFE is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP4:RX:DFE:TRAC? → OFF
Note	This command can be used in V8.00 or later and valid on MU100011A only.

16.13.8 PMODule:PORT<Pt>:TRANsceiver:CFP4:RX:DFE

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:RX:DFE <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the Rx DFE value.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:CFP4:RX:DFE (0)
Note	This command can be used in V8.00 or later and valid on MU100011A only. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:RX:DFE
Description	This query returns the Rx DFE value.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:CFP4:RX:DFE? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A only. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.13.9 PMODule:PORT<Pt>:TRANsceiver:CFP4:DEFault

Syntax	PMODule:PORT<Pt>:TRANsceiver:CFP4:DEFault
Description	This command restores default of Transceiver settings.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:CFP4:DEF
Note	This command can be used in V8.00 or later and valid on MU100011A only.

16.14 Transceiver settings - QSFP28

16.14.1 PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:VOD:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:VOD:TRACking <enable>
Description	This command enables or disables the tracking for Tx VOD.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QSFP28:TX:VOD:TRAC OFF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:VOD:TRACking?
Description	This query returns whether the tracking for Tx VOD is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP28:TX:VOD:TRAC? → OFF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

16.14.2 PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:VOD

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:VOD <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx VOD.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QSFP28:TX:VOD (0)
Note	This command can be used in VV8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:VOD?
Description	This query returns the parameter for Tx VOD.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP28:TX:VOD? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.14.3 PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:PRE:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:PRE:TRACking <enable>
Description	This command enables or disables the tracking for Tx Pre.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QSFP28:TX:PRE:TRAC OFF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:PRE:TRACking?
Description	This query returns whether the tracking for Tx Pre is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP28:TX:PRE:TRAC? → OFF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

16.14.4 PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:PRE

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:PRE <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx PRE.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QSFP28:TX:PRE (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:PRE?
Description	This query returns the parameter for Tx PRE.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP28:TX:PRE? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.14.5 PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:POST:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:POST:TRACking <enable>
Description	This command enables or disables the tracking for Tx POST.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QSFP28:TX:POST:TRAC OFF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:POST:TRACking?
Description	This query returns whether the tracking for Tx POST is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP28:TX:POST:TRAC? → OFF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

16.14.6 PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:POST

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:POST <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the parameter for Tx POST.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QSFP28:TX:POST (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:TX:POST?
Description	This query returns the parameter for Tx POST.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP28:TX:POST? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.14.7 PMODule:PORT<Pt>:TRANsceiver:QSFP28:RX:DFE:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:RX:DFE:TRACking <enable>
Description	This command enables or disables the tracking for Rx DFE.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QSFP28:RX:DFE:TRAC OFF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:RX:DFE:TRACking?
Description	This query returns whether tracking for Rx DFE is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP28:RX:DFE:TRAC? → OFF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

16.14.8 PMODule:PORT<Pt>:TRANsceiver:QSFP28:RX:DFE

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:RX:DFE <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>]
Description	This command sets the Rx DFE value.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QSFP28:RX:DFE (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:RX:DFE?
Description	This query returns the Rx DFE value.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QSFP28:RX:DFE? → (0)
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.14.9 PMODule:PORT<Pt>:TRANsceiver:QSFP28:DEFault

Syntax	PMODule:PORT<Pt>:TRANsceiver:QSFP28:DEFault
Description	This command restores default of Transceiver settings.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:QSFP28:DEF
Note	This command can be used in V8.00 or later and valid on MU100011A, MU104014A, MU104015A and MU104011A.

16.15 Transceiver settings - QSFP-DD

16.15.1 PMODule:PORT<Pt>:TRANsceiver:QDD:TX:VOD:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:VOD:TRACking <enable>
Description	This command enables or disables the tracking for Tx VOD.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QDD:TX:VOD:TRAC OFF
Note	This command can be used in V11.00 or later and valid on MU104014A only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:VOD:TRACking?
Description	This query returns whether the tracking for Tx VOD is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QDD:TX:VOD:TRAC? → OFF
Note	This command can be used in V11.00 or later and valid on MU104014A only.

16.15.2 PMODule:PORT<Pt>:TRANsceiver:QDD:TX:VOD

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:VOD <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>]
Description	This command sets the parameter for Tx VOD.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QDD:TX:VOD (0)
Note	This command can be used in V11.00 or later and valid on MU104014A only. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:VOD?
Description	This query returns the parameter for Tx VOD.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QDD:TX:VOD? → (0)
Note	This command can be used in V11.00 or later and valid on MU104014A only. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.15.3 PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE1:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE1:TRACking <enable>
Description	This command enables or disables the tracking for Tx Pre1.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QDD:TX:PRE1:TRAC OFF
Note	This command can be used in V11.00 or later and valid on MU104014A only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE1:TRACking?
Description	This query returns whether the tracking for Tx Pre1 is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QDD:TX:PRE1:TRAC? → OFF
Note	This command can be used in V11.00 or later and valid on MU104014A only.

16.15.4 PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE1

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE1 <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>]
Description	This command sets the parameter for Tx Pre1.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QDD:TX:PRE1 (0)
Note	This command can be used in V11.00 or later and valid on MU104014A only. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE1?
Description	This query returns the parameter for Tx Pre1.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QDD:TX:PRE1? → (0)
Note	This command can be used in V11.00 or later and valid on MU104014A only. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.15.5 PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE2:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE2:TRACking <enable>
Description	This command enables or disables the tracking for Tx Pre2.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QDD:TX:PRE2:TRAC OFF
Note	This command can be used in V11.00 or later and valid on MU104014A only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE2:TRACking?
Description	This query returns whether the tracking for Tx Pre2 is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QDD:TX:PRE2:TRAC? → OFF
Note	This command can be used in V11.00 or later and valid on MU104014A only.

16.15.6 PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE2

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE2 <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>]
Description	This command sets the parameter for Tx Pre2.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QDD:TX:PRE2 (0)
Note	This command can be used in V11.00 or later and valid on MU104014A only. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRE2?
Description	This query returns the parameter for Tx Pre2.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QDD:TX:PRE2? → (0)
Note	This command can be used in V11.00 or later and valid on MU104014A only. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.15.7 PMODule:PORT<Pt>:TRANsceiver:QDD:TX:POST:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:POST:TRACking <enable>
Description	This command enables or disables the tracking for Tx POST.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:QDD:TX:POST:TRAC OFF
Note	This command can be used in V11.00 or later and valid on MU104014A only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:POST:TRACking?
Description	This query returns whether the tracking for Tx POST is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QDD:TX:POST:TRAC? → OFF
Note	This command can be used in V11.00 or later and valid on MU104014A only.

16.15.8 PMODule:PORT<Pt>:TRANsceiver:QDD:TX:POST

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:POST <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>]
Description	This command sets the parameter for Tx POST.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:QDD:TX:POST (0)
Note	This command can be used in V11.00 or later and valid on MU104014A only. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:POST?
Description	This query returns the parameter for Tx POST.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:QDD:TX:POST? → (0)
Note	This command can be used in V11.00 or later and valid on MU104014A only. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.15.9 PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRECoding

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRECoding <enable>
Description	This command enables or disables precoding of the transceiver.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	PMOD:PORT1:TRAN:QDD:TX:PREC ON
Note	This command can be used in V11.00 or later and valid on MU104014A Ethernet applications only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:TX:PRECoding?
Description	This query returns whether precoding of the transceiver is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Note	This command can be used in V11.00 or later
Example	PMOD:PORT1:TRAN:OSFP:TX:PREC? → 1 and valid on MU104014A Ethernet applications only.

16.15.10 PMODule:PORT<Pt>:TRANsceiver:QDD:DEFault

Syntax	PMODule:PORT<Pt>:TRANsceiver:QDD:DEFault
Description	This command restores default of Transceiver settings.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:QDD:DEF
Note	This command can be used in V11.00 or later and valid on MU104014A only.

16.15.11 PMODule:PORT<Pt>:CMIS:TUNing:GRDSpacing

Syntax	PMODule:PORT<Pt>:CMIS:TUNing:GRDSpacing <grid>
Description	This command sets the grid spacing.
Parameters	<Pt> = Port number <grid> = <CHARACTER PROGRAM DATA> 3P125G: 3.125G 6P25G : 6.25G 12P5G : 12.5G 25G : 25G 50G : 50G 100G : 100G 33G : 33G 75G : 75G <i>DEFault = 3P125G</i>
Example	PMOD:PORT1:CMIS:TUN:GRDS 6P25G
Note	This command can be used in V12.05 or later.

16.15.12 PMODule:PORT<Pt>:CMIS:TUNing:GRDSpacing?

Syntax	PMODule:PORT<Pt>:CMIS:TUNing:GRDSpacing?
Description	This query returns the grid spacing.
Parameter	<Pt> = Port number
Response	<grid> = <CHARACTER RESPONSE DATA>
Example	PMOD:PORT1:CMIS:TUN:GRDS? → 100G
Note	This command can be used in V12.05 or later.

16.15.13 PMODule:PORT<Pt>:CMIS:TUNing:CHANnel

Syntax	PMODule:PORT<Pt>:CMIS:TUNing:CHANnel <channel>
Description	This command sets the channel.
Parameters	<Pt> = Port number <channel> = <NR1 NUMERIC RESPONSE DATA> <i>MINimum=-32768, MAXimum=32767, DEFault=0</i>
Example	PMOD:PORT1:CMIS:TUN:CHAN 10
Note	This command can be used in V12.05 or later.

16.15.14 PMODule:PORT<Pt>:CMIS:TUNing:CHANnel?

Syntax	PMODule:PORT<Pt>:CMIS:TUNing:CHANnel?
Description	This query returns the channel.
Parameter	<Pt> = Port number
Response	<channel> = <NR1 NUMERIC RESPONSE DATA>
Example	PMOD:PORT1:CMIS:TUN:CHAN? → 10
Note	This command can be used in V12.05 or later.

16.15.15 PMODule:PORT<Pt>:CMIS:TUNing:FINe

Syntax	PMODule:PORT<Pt>:CMIS:TUNing:FINe <enable>
Description	This command enables or disables the "Fine-tuning enable".
Parameters	<Pt> = Port number <enable> = <CHARACTER PROGRAM DATA> ON: Enable OFF: Disable <i>DEFault = GRID</i>
Example	PMOD:PORT1:CMIS:TUN:FIN ON
Note	This command can be used in V12.05 or later.

16.15.16 PMODule:PORT<Pt>:CMIS:TUNing:FINe?

Syntax	PMODule:PORT<Pt>:CMIS:TUNing:FINe?
Description	This query returns whether "Fine-tuning enable" is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <CHARACTER PROGRAM DATA>
Example	PMOD:PORT1:CMIS:TUN:FIN? → 1
Note	This command can be used in V12.05 or later.

16.15.17 PMODule:PORT<Pt>:CMIS:TUNing:FINe:OFFSet

Syntax	PMODule:PORT<Pt>:CMIS:TUNing:FINe:OFFSet <numeric>
Description	This command sets the frequency offset. Unit: GHz
Parameters	<Pt> = Port number <numeric> = <NR3 NUMERIC RESPONSE DATA> <i>MINimum=-32.768, MAXimum=32.767, DEFault=0</i>
Example	PMOD:PORT1:CMIS:TUN:FIN:OFFS 10.000
Note	This command can be used in V12.05 or later.

16.15.18 PMODule:PORT<Pt>:CMIS:TUNing:FINe:OFFSet?

Syntax	PMODule:PORT<Pt>:CMIS:TUNing:FINe:OFFSet?
Description	This query returns the frequency offset. Unit: GHz
Parameter	<Pt> = Port number
Response	<numeric> = <NR3 NUMERIC RESPONSE DATA>
Example	PMOD:PORT1:CMIS:TUN:FIN:OFFS? → 10.000
Note	This command can be used in V12.05 or later.

16.15.19 PMODule:PORT<Pt>:CMIS:TUNing:FINe:RESolution?

Syntax	PMODule:PORT<Pt>:CMIS:TUNing:FINe:RESolution?
Description	This query returns the frequency resolution. Unit: GHz
Parameter	<Pt> = Port number
Response	<numeric> = <NR3 NUMERIC RESPONSE DATA>
Example	PMOD:PORT1:CMIS:TUN:FIN:RES? → 0.001
Note	This command can be used in V12.05 or later.

16.15.20 PMODule:PORT<Pt>:CMIS:TUNing:FREQuency?

Syntax	PMODule:PORT<Pt>:CMIS:TUNing:FREQuency?
Description	This query returns the frequency. Unit: THz
Parameter	<Pt> = Port number
Response	<numeric> = <NR3 NUMERIC RESPONSE DATA>
Example	PMOD:PORT1:CMIS:TUN:FREQ? → 193.1000
Note	This command can be used in V12.05 or later.

16.15.21 PMODule:PORT<Pt>:CMIS:TUNing:WAVelength?

Syntax	PMODule:PORT<Pt>:CMIS:TUNing:WAVelength?
Description	This query returns the wavelength. Unit: nm
Parameter	<Pt> = Port number
Response	<numeric> = <NR3 NUMERIC RESPONSE DATA>
Example	PMOD:PORT1:CMIS:TUN:WAV? → 1552
Note	This command can be used in V12.05 or later.

16.16 Transceiver settings - OSFP

16.16.1 PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:VOD:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:VOD:TRACking <enable>
Description	This command enables or disables the tracking for Tx VOD.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:OSFP:TX:VOD:TRAC OFF
Note	This command can be used in V11.00 or later and valid on MU104015A.

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:VOD:TRACking?
Description	This query returns whether the tracking for Tx VOD is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:OSFP:TX:VOD:TRAC? → OFF
Note	This command can be used in V11.00 or later and valid on MU104015A.

16.16.2 PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:VOD

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:VOD <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>]
Description	This command sets the parameter for Tx VOD.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:OSFP:TX:VOD (0)
Note	This command can be used in V11.00 or later and valid on MU104015A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:VOD?
Description	This query returns the parameter for Tx VOD.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:OSFP:TX:VOD? → (0)
Note	This command can be used in V11.00 or later and valid on MU104015A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.16.3 PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE1:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE1:TRACking <enable>
Description	This command enables or disables the tracking for Tx Pre1.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:OSFP:TX:PRE1:TRAC OFF
Note	This command can be used in V11.00 or later and valid on MU104015A.

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE1:TRACking?
Description	This query returns whether the tracking for Tx Pre1 is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:OSFP:TX:PRE1:TRAC? → OFF
Note	This command can be used in V11.00 or later and valid on MU104015A.

16.16.4 PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE1

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE1 <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>]
Description	This command sets the parameter for Tx Pre1.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:OSFP:TX:PRE1 (0)
Note	This command can be used in V11.00 or later and valid on MU104015A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE1?
Description	This query returns the parameter for Tx Pre1.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:OSFP:TX:PRE1? → (0)
Note	This command can be used in V11.00 or later and valid on MU104015A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.16.5 PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE2:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE2:TRACking <enable>
Description	This command enables or disables the tracking for Tx Pre2.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:OSFP:TX:PRE2:TRAC OFF
Note	This command can be used in V11.00 or later and valid on MU104015A.

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE2:TRACking?
Description	This query returns whether the tracking for Tx Pre2 is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:OSFP:TX:PRE2:TRAC? → OFF
Note	This command can be used in V11.00 or later and valid on MU104015A.

16.16.6 PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE2

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE2 <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>]
Description	This command sets the parameter for Tx Pre2.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:OSFP:TX:PRE2 (0)
Note	This command can be used in V11.00 or later and valid on MU104015A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRE2?
Description	This query returns the parameter for Tx Pre2.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:OSFP:TX:PRE2? → (0)
Note	This command can be used in V11.00 or later and valid on MU104015A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.16.7 PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:POST:TRACking

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:POST:TRACking <enable>
Description	This command enables or disables the tracking for Tx POST.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Example	PMOD:PORT1:TRAN:OSFP:TX:POST:TRAC OFF
Note	This command can be used in V11.00 or later and valid on MU104015A.

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:POST:TRACking?
Description	This query returns whether the tracking for Tx POST is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN PROGRAM DATA>
Example	PMOD:PORT1:TRAN:OSFP:TX:POST:TRAC? → OFF
Note	This command can be used in V11.00 or later and valid on MU104015A.

16.16.8 PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:POST

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:POST <Lane0 Data> [,<Lane1 Data>,<Lane2 Data>,<Lane3 Data>,<Lane4 Data>,<Lane5 Data>,<Lane6 Data>,<Lane7 Data>]
Description	This command sets the parameter for Tx POST.
Parameters	<Pt> = Port number {(<value>),}* = <EXPRESSION PROGRAM DATA> Format: Numeric List
Example	PMOD:PORT1:TRAN:OSFP:TX:POST (0)
Note	This command can be used in V11.00 or later and valid on MU104015A. If tracking is ON, you should input only first lane value. If tracking is OFF, you should input the parameters for all lanes.

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:POST?
Description	This query returns the parameter for Tx POST.
Parameter	<Pt> = Port number
Response	{(<value>),}* = <EXPRESSION PROGRAM DATA>
Example	PMOD:PORT1:TRAN:OSFP:TX:POST? → (0)
Note	This command can be used in V11.00 or later and valid on MU104015A. If tracking is ON, the first lane value will return. If tracking is OFF, the parameters for all lanes will return.

16.16.9 PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRECoding

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRECoding <enable>
Description	This command enables or disables precoding of the transceiver.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	PMOD:PORT1:TRAN:OSFP:TX:PREC ON
Note	This command can be used in V11.00 or later and valid on MU104015A Ethernet applications only.

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:TX:PRECoding?
Description	This query returns whether precoding of the transceiver is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Note	This command can be used in V11.00 or later and valid on MU104015A Ethernet applications only.

16.16.10 PMODule:PORT<Pt>:TRANsceiver:OSFP:DEFault

Syntax	PMODule:PORT<Pt>:TRANsceiver:OSFP:DEFault
Description	This command restores default of Transceiver settings.
Parameters	<Pt> = Port number
Example	PMOD:PORT1:TRAN:OSFP:DEF
Note	This command can be used in V11.00 or later and valid on MU104015A.

16.16.11 PMODule:PORT<Pt>:TRANsceiver:DISTurbance

Syntax	PMODule:PORT<Pt>:TRANsceiver:DISTurbance <mode>
Description	This command sets disturbance response of the transceiver to normal or expand.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> NORMal : Normal EXPand : Expand <i>DEFault = NORMal</i>
Example	PMOD:PORT1:TRAN:DIST NORMal
Note	This command can be used in V12.04 or later and valid on MU104014A, MU104015A, or MU104011A.

Syntax	PMODule:PORT<Pt>:TRANsceiver:DISTurbance?
Description	This query returns whether disturbance response of the transceiver is normal or expand.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	PMOD:PORT1:TRAN:DIST? → 1
Note	This command can be used in V12.04 or later and valid on MU104014A, MU104015A, or MU104011A.

Chapter 17

Common Application Settings

17.1 RTD

The following commands are valid for all Round Trip Delay applications unless otherwise noted.

17.1.1 RTD:MODE

Syntax	RTD:MODE <mode>
Description	This command sets the measurement mode.
Parameters	<mode> = <CHARACTER PROGRAM DATA> SINGle REPeat <i>DEFault = REPeat</i>
Response	None.
Example	RTD:MODE REP
Note	

Syntax	RTD:MODE?
Description	This query returns the measurement mode.
Parameter	None.
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	RTD:MODE? → REP
Note	

17.1.2 RTD:PERiod

Syntax	RTD:PERiod <period>
Description	This command sets the measurement period.
Parameters	<period> = <CHARACTER PROGRAM DATA> MS500: 500 milli seconds SEC1: 1 second SEC2: 2 seconds SEC5: 5 seconds SEC10: 10 seconds <i>DEFault = SEC1</i>
Response	None.
Example	RTD:PER SEC1
Note	

Syntax	RTD:PERiod?
Description	This query returns the measurement period.
Parameter	None.
Response	<period> = <CHARACTER RESPONSE DATA>
Example	RTD:PER? → SEC1
Note	

17.1.3 RTD:IFMDData

Syntax	RTD:IFMDData <ignore>
Description	This command enables or disables "Ignore the first measurement data".
Parameters	<ignore> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	RTD:IFMD OFF
Note	

Syntax	RTD:IFMDData?
Description	This query returns whether "Ignore the first measurement data" is enabled or disabled.
Parameter	None.
Response	<ignore> = <BOOLEAN RESPONSE DATA>
Example	RTD:IFMD? → 0
Note	

17.1.4 RTD:PDH:RX<Pt>:MLIMit

Syntax	RTD:PDH:RX<Pt>:MLIMit <max>
Description	This command sets the time reference maximum limit for all PDH interfaces. Unit: us.
Parameters	<Pt> = Port number <max> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.0, MAXimum = 10000000.0, DEFault = MAXimum</i>
Response	None.
Example	RTD:PDH:RX1:MLIM 0.0
Note	This command is not valid for a RTD_OTN application.

Syntax	RTD:PDH:RX<Pt>:MLIMit?
Description	This query returns the time reference maximum limit for all PDH interfaces. Unit: us.
Parameter	<Pt> = Port number
Response	<max> = <NR2 NUMERIC RESPONSE DATA>
Example	RTD:PDH:RX1:MLIM? → 0.0
Note	This command is not valid for a RTD_OTN application.

17.2 Hierarchy

17.2.1 HIERarchy:PORT<Pt>:OTN:TX

Syntax	HIERarchy:PORT<Pt>:OTN:TX <enable>
Description	This command enables or disables the OTN Tx hierarchy. 
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	HIER:PORT1:OTN:TX ON
Note	

Syntax	HIERarchy:PORT<Pt>:OTN:TX?
Description	This query returns whether OTN Tx hierarchy is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	HIER:PORT1:OTN:TX? → 1
Note	

17.2.2 HIERarchy:PORT<Pt>:OTN:RX

Syntax	HIERarchy:PORT<Pt>:OTN:RX <enable>
Description	This command enables or disables the OTN Rx hierarchy. 
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	HIER:PORT1:OTN:RX ON
Note	

Syntax	HIERarchy:PORT<Pt>:OTN:RX?
Description	This query returns whether OTN Rx hierarchy is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	HIER:PORT1:OTN:RX? → 1
Note	

17.2.3 HIERarchy:PORT<Pt>:SDH:TX

Syntax	HIERarchy:PORT<Pt>:SDH:TX <enable>
Description	This command enables or disables the SDH Tx hierarchy.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	HIER:PORT1:SDH:TX ON
Note	

 
Syntax	HIERarchy:PORT<Pt>:SDH:TX?
Description	This query returns whether SDH Tx hierarchy is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	HIER:PORT1:SDH:TX? → 1
Note	

17.2.4 HIERarchy:PORT<Pt>:SDH:RX

Syntax	HIERarchy:PORT<Pt>:SDH:RX <enable>
Description	This command enables or disables the SDH Rx hierarchy.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	HIER:PORT1:SDH:RX ON
Note	

Syntax	HIERarchy:PORT<Pt>:SDH:RX?
Description	This query returns whether SDH Rx hierarchy is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	HIER:PORT1:SDH:RX? → 1
Note	

17.2.5 HIERarchy:PORT<Pt>:PDH:TX

Syntax	HIERarchy:PORT<Pt>:PDH:TX <enable>
Description	This command enables or disables the PDH Tx hierarchy. 
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	HIER:PORT1:PDH:TX ON
Note	

Syntax	HIERarchy:PORT<Pt>:PDH:TX?
Description	This query returns whether PDH Tx hierarchy is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	HIER:PORT1:PDH:TX? → 1
Note	

17.2.6 HIERarchy:PORT<Pt>:PDH:RX

Syntax	HIERarchy:PORT<Pt>:PDH:RX <enable>
Description	This command enables or disables the PDH Rx hierarchy. 
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	HIER:PORT1:PDH:RX ON
Note	

Syntax	HIERarchy:PORT<Pt>:PDH:RX?
Description	This query returns whether PDH Rx hierarchy is enabled is disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Example	HIER:PORT1:PDH:RX? → 1
Note	

Chapter 18

Measurement

18.1 Application, Start and Stop

18.1.1 MEASurement:APPLication?

Syntax	MEASurement:APPLication?
Description	This query returns the application server type.
Parameter	None.
Response	<application> = <CHARACTER RESPONSE DATA> TP-APS-OTN: OTN Automatic Protection Switching application. TP-APS-SDHPDH: SDH/PDH Automatic Protection Switching application. TP-APS-SDHPDH-OTN: SDH/PDH over OTN Automatic Protection Switching application. TP-BERT-CPRI: CPRI Bit Error Rate Test application. TP-BERT-CPRI-OTN: CPRI over OTN Bit Error Rate Test application. TP-BERT-ETH: Ethernet Bit Error Rate Test application. TP-BERT-ETH-OTN: Ethernet over OTN Bit Error Rate Test application. TP-BERT-FC: Fibre Channel Bit Error Rate Test application. TP-BERT-FC-OTN: Fibre Channel over OTN Bit Error Rate Test application. TP-BERT-OTN: OTN Bit Error Rate Test application. TP-BERT-SDHPDH: PDH/SDH Bit Error Rate Test application. TP-BERT-SDHPDH-OTN: PDH/SDH over OTN Bit Error Rate Test application. TP-BERT-ROE: eCPRI/RoE Bit Error Rate Test application. TP-NPBERT-ETH: Ethernet N-Port BERT application. TP-CABLE-ETH: Ethernet cable test application. TP-CHSTAT-ETH: Ethernet channel statistics application. TP-DISC-ETH: Ethernet discovery application. TP-MONGEN-ETH: Ethernet monitor/generate application. TP-MONGEN-ETH-OTN: Ethernet over OTN monitor/generate application. TP-NOFRAME-DEVICE: No frame device test (Unframed Bit Error Rate Test) application. TP-PASS-CPRI: CPRI pass-through application. TP-PASS-ETH: Ethernet pass-through application. TP-PERF-FC: Fibre Channel performance test application. TP-PERF-FC-OTN: Fibre Channel over OTN performance test application. TP-PING-ETH: Ethernet ICMP ping application. TP-REFL-ETH: Ethernet reflector application. TP-REFL-ETH-OTN: Ethernet over OTN reflector application. TP-REFL-FC: Fibre Channel reflector application. TP-REFL-FC-OTN: Fibre Channel over OTN reflector application. TP-RFC-ETH: Ethernet RFC-2544 test application. TP-RFC-ETH-OTN: Ethernet over OTN RFC-2544 test application. TP-RFC6349-ETH: Ethernet RFC-6349 test application. TP-RTD-OTN: OTN Round Trip Delay test application. TP-RTD-SDHPDH: SDH/PDH Round Trip Delay test application. TP-RTD-SDHPDH-OTN: SDH/PDH Round Trip Delay test application. TP-SAT-ETH: Ethernet Service Activation Test application. TP-SAT-ETH-OTN: Ethernet over OTN Service Activation Test application. TP-SYNCTEST-ETH: Ethernet sync test application. TP-TRACE-ETH: Ethernet trace-route application.
Example	MEAS:APPL? → TP-BERT-ETH
Note	

18.1.2 MEASurement:STARt

Syntax	MEASurement:STARt
Description	This command starts a measurement. Same as pressing the START () button on the GUI.
Parameter	None.
Response	None.
Example	MEAS:STAR
Note	

18.1.3 MEASurement:STOP

Syntax	MEASurement:STOP
Description	This command stops an ongoing measurement. Same as pressing the STOP button (■) on the GUI.
Parameter	None.
Response	None.
Example	MEAS:STOP
Note	

18.2 Setup

18.2.1 MEASurement:SETup:PORT<Pt>:TERMinology

Syntax	MEASurement:SETup:PORT<Pt>:TERMinology <mode>
Description	This command sets the SDH/SONET terminology.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> SONet SDH <i>DEFault = SDH</i>
Response	None.
Example	MEAS:SET:PORT1:TERM SDH
Note	

Syntax	MEASurement:SETup:PORT<Pt>:TERMinology?
Description	This query returns the SDH/SONET terminology.
Parameter	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:PORT1:TERM? → SDH
Note	

18.2.2 MEASurement:SETup:SElect

Syntax	MEASurement:SETup:SElect <interval>
Description	This command selects which interval to fetch. After setting this command, the :IFETch on the respective interfaces should be performed.
Parameter	<interval> = <CHARACTER PROGRAM DATA> TOTAl: Total CURRent: Current Or the index number of the interval. With the first index number being 0. <i>DEFault = TOTAl</i>
Response	None.
Example	MEAS:SET:SEL 5
Note	Use MEAS:INFO:IFIR? and MEAS:INFO:ILAS? to get the minimum and maximum interval number. The MEAS:INFO:IMIN? and MEAS:INFO:IMAX? queries are kept for maintenance purpose. Recommend using MEAS:INFO:IFIR? and MEAS:INFO:ILAS? queries instead of MEAS:INFO:IMIN? and MEAS:INFO:IMAX?, because they return +1 larger value than recommended queries. This setting is not stored as part of a settings- or result file.

Syntax	MEASurement:SETup:SElect?
Description	This query returns the selected interval.
Parameter	None.
Response	<interval> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:SEL? → 5
Note	

18.2.3 MEASurement:SETup:ILENgtH

Syntax	MEASurement:SETup:ILENgtH <length>
Description	This command sets the interval length.
Parameter	<length> = <CHARACTER PROGRAM DATA> 1S: 1 second 2S: 2 seconds 5S: 5 seconds 10S: 10 seconds 15S: 15 seconds 30S: 30 seconds 1M: 1 minute 5M: 5 minutes 10M: 10 minutes 15M: 15 minutes 30M: 30 minutes 1H: 1 hour 2H: 2 hours 4H: 4 hours 6H: 6 hours 12H: 12 hours NONE: No intervals <i>DEFault = 5S</i>
Response	None.
Example	MEAS:SET:ILEN 1S
Note	

Syntax	MEASurement:SETup:ILENgtH?
Description	This query returns the interval length.
Parameter	None.
Response	<action> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:ILEN? → 1S
Note	

18.2.4 MEASurement:SETup:STARt

Syntax	MEASurement:SETup:STARt <action>
Description	This command sets how the measurement should start.
Parameter	<action> = <CHARACTER PROGRAM DATA> IMMediate: Start measurement immediate. SAT: Start measurement at a specific time. <i>DEFault = IMMediate</i>
Response	None.
Example	MEAS:SET:STAR SAT
Note	Use the MEASurement:SETup:STAT command to set the specific start time.

Syntax	MEASurement:SETup:STARt?
Description	This query returns how the measurement starts.
Parameter	None.
Response	<action> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:STAR? → SAT
Note	

18.2.5 MEASurement:SETup:STAT

Syntax	MEASurement:SETup:STAT <year>,<month>,<day>,<hour>,<minute>,<second>
Description	This command sets the start time for the MEASurement:SETup:STARt SAT command.
Parameters	<year> = <NUMERIC PROGRAM DATA> <i>MINimum = 1997, MAXimum = 2036</i> <month> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 12</i> <day> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 31</i> <hour> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 23</i> <minute> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 59</i> <second> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 59</i>
Response	None.
Example	MEAS:SET:STAT 2015,7,16,10,11,39
Note	

Syntax	MEASurement:SETup:STAT?
Description	This query returns the start time for the MEASurement:SETup:STARt SAT command
Parameter	None.
Response	<year> = <NR1 NUMERIC RESPONSE DATA> <month> = <NR1 NUMERIC RESPONSE DATA> <day> = <NR1 NUMERIC RESPONSE DATA> <hour> = <NR1 NUMERIC RESPONSE DATA> <minute> = <NR1 NUMERIC RESPONSE DATA> <second> = <NR1 NUMERIC RESPONSE DATA>
Example	MEAS:SET:STAT? → 2015,7,16,10,11,39
Note	If the SAT parameter is not set in the MEASurement:SETup:STARt command, this query returns NaN (section 1.6.1).

18.2.6 MEASurement:SETup:STOP

Syntax	MEASurement:SETup:STOP <action>
Description	This command sets how the measurement should stop.
Parameter	<action> = <CHARACTER PROGRAM DATA> MANual: Manual stop the measurement. SAT: Stop measurement at a specific time. DURation: Stop measurement after a specific duration. <i>DEFault = MANual</i>
Response	None.
Example	MEAS:SET:STOP DUR
Note	To set the specific stop time, use the MEASurement:SETup:SPAT command.

Syntax	MEASurement:SETup:STOP?
Description	This query returns how the measurement stops.
Parameter	None.
Response	<action> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:STOP? → DUR
Note	

18.2.7 MEASurement:SETup:SPAT

Syntax	MEASurement:SETup:SPAT <year>,<month>,<day>,<hour>,<minute>,<second>
Description	This command sets the stop time for the MEASurement:SETup:STOP SAT command
Parameters	<year> = <NUMERIC PROGRAM DATA> <i>MINimum = 1997, MAXimum = 2036</i> <month> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 12</i> <day> = <NUMERIC PROGRAM DATA> <i>MINimum = 1, MAXimum = 31</i> <hour> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 23</i> <minute> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 59</i> <second> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 59</i>
Response	None.
Example	MEAS:SET:SPAT 2015,7,16,10,12,39
Note	

Syntax	MEASurement:SETup:SPAT?
Description	This query returns the stop time for the MEASurement:SETup:STOP SAT command
Parameter	None.
Response	<year> = <NR1 NUMERIC RESPONSE DATA> <month> = <NR1 NUMERIC RESPONSE DATA> <day> = <NR1 NUMERIC RESPONSE DATA> <hour> = <NR1 NUMERIC RESPONSE DATA> <minute> = <NR1 NUMERIC RESPONSE DATA> <second> = <NR1 NUMERIC RESPONSE DATA>
Example	MEAS:SET:SPAT? → 2015,7,16,10,12,39
Note	If the SAT parameter is not set in the MEASurement:SETup:STOP command, this query returns NaN (section 1.6.1).

18.2.8 MEASurement:SETup:SDURation

Syntax	MEASurement:SETup:SDURation <days>,<hours>,<minutes>,<seconds>
Description	This command sets the duration time for the MEASurement:SETup:STOP DUR command.
Parameters	<days> = <NUMERIC PROGRAM DATA> <hours> = <NUMERIC PROGRAM DATA> <minutes> = <NUMERIC PROGRAM DATA> <seconds> = <NUMERIC PROGRAM DATA>
Response	None.
Example	MEAS:SET:SDUR 16,0,0,0
Note	

Syntax	MEASurement:SETup:SDURation?
Description	This query returns the duration time for the MEASurement:SETup:STOP DUR command
Parameter	None.
Response	<days> = <NR1 NUMERIC RESPONSE DATA>
	<hours> = <NR1 NUMERIC RESPONSE DATA>
	<minutes> = <NR1 NUMERIC RESPONSE DATA>
	<seconds> = <NR1 NUMERIC RESPONSE DATA>
Example	MEAS:SET:SDUR? → 16,0,0,0
Note	If not defined or the DUR parameter is not set in the MEASurement:SETup:STOP command, this query returns NaN (section 1.6.1).

18.2.9 MEASurement:SETup:MALLocation

Syntax	MEASurement:SETup:MALLocation <mode>
Description	This command sets the memory allocation.
Parameter	<mode> = <CHARACTER PROGRAM DATA> CONTinuous: When storage space runs out old intervals will be overwritten. ALL: Uses all available storage space and then stops the measurement. <i>DEFault = CONTinuous</i>
Response	None.
Example	MEAS:SET:MALL CONT
Note	

Syntax	MEASurement:SETup:MALLocation?
Description	This query returns the type of memory allocation.
Parameter	None.
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:MALL? → CONT
Note	

18.2.10 MEASurement:SETup:PERformance:TMBPs:PARAmeter

Syntax	MEASurement:SETup:PERformance:TMBPs:PARAmeter <param>
Description	This command sets the performance parameter for 2 Mbps and V-Series.
Parameter	<param> = <CHARACTER PROGRAM DATA> G821: G.821 G826: G.826 M2100: M.2100 G821E: G.821 (expired revision) <i>DEFault = M2100</i>
Response	None.
Example	MEAS:SET:PERF:TMBP:PAR G826
Note	

Syntax	MEASurement:SETup:PERformance:TMBPs:PARAmeter?
Description	This query returns the performance parameter for 2 Mbps and V-Series.
Parameter	None.
Response	<param> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:PERF:TMBP:PAR? → G826
Note	

18.2.11 MEASurement:SETup:PERformance:T1:PARameter

Syntax	MEASurement:SETup:PERformance:T1:PARameter <param>
Description	This command sets the performance parameter for 2 Mbps and V-Series.
Parameter	<param> = <CHARACTER PROGRAM DATA> G821: G.821 G826: G.826 M2100: M.2100 G821E: G.821 (expired revision) <i>DEFault = M2100</i>
Response	None.
Example	MEAS:SET:PERF:T1:PAR G826
Note	

Syntax	MEASurement:SETup:PERformance:T1:PARameter?
Description	This query returns the performance parameter for 2 Mbps and V-Series.
Parameter	None.
Response	<param> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:PERF:T1:PAR? → G826
Note	

18.2.12 MEASurement:SETup:PERformance:E3:PARameter

Syntax	MEASurement:SETup:PERformance:E3:PARameter <param>
Description	This command sets the performance parameter for E3.
Parameter	<param> = <CHARACTER PROGRAM DATA> G826: G.826 M2100: M.2100 <i>DEFault = M2100</i>
Response	None.
Example	MEAS:SET:PERF:E3:PAR M2100
Note	

Syntax	MEASurement:SETup:PERformance:E3:PARameter?
Description	This query returns the performance parameter for E3.
Parameter	None.
Response	<param> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:PERF:E3:PAR? → M2100
Note	

18.2.13 MEASurement:SETup:PERformance:T3:PARameter

Syntax	MEASurement:SETup:PERformance:T3:PARameter <param>
Description	This command sets the performance parameter for E3.
Parameter	<param> = <CHARACTER PROGRAM DATA> G826: G.826 M2100: M.2100 <i>DEFault = M2100</i>
Response	None.
Example	MEAS:SET:PERF:T3:PAR M2100
Note	

Syntax	MEASurement:SETup:PERformance:T3:PARAmeter?
Description	This query returns the performance parameter for E3.
Parameter	None.
Response	<param> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:PERF:T3:PAR? → M2100
Note	

18.2.14 MEASurement:SETup:PERformance:E4:PARAmeter

Syntax	MEASurement:SETup:PERformance:E4:PARAmeter <param>
Description	This command sets the performance parameter for E4.
Parameter	<param> = <CHARACTER PROGRAM DATA> G826: G.826 M2100: M.2100 <i>DEFAULT = M2100</i>
Response	None.
Example	MEAS:SET:PERF:E4:PAR M2100
Note	

Syntax	MEASurement:SETup:PERformance:E4:PARAmeter?
Description	This query returns the performance parameter for E4.
Parameter	None.
Response	<param> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:PERF:E4:PAR? → M2100
Note	

18.2.15 MEASurement:SETup:PERformance:SDH:PARAmeter

Syntax	MEASurement:SETup:PERformance:SDH:PARAmeter <param>
Description	This command sets the performance parameter for SDH.
Parameter	<param> = <CHARACTER PROGRAM DATA> G826: G.826 G828: G.828+G.829 M2101: M.2101.1(M.2100) <i>DEFAULT = M2101</i>
Response	None.
Example	MEAS:SET:PERF:SDH:PAR M2101
Note	

Syntax	MEASurement:SETup:PERformance:SDH:PARAmeter?
Description	This query returns the performance parameter for SDH.
Parameter	None.
Response	<param> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:PERF:SDH:PAR? → M2101
Note	

18.2.16 MEASurement:SETup:PERformance:SDH:MUX

Syntax	MEASurement:SETup:PERformance:SDH:MUX <value>
Description	This command sets the MUX allocation in percentage.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0.00, MAXimum=100.00, DEFAULT=0</i>
Response	None.
Example	MEAS:SET:PERF:SDH:MUX 10.00
Note	

Syntax	MEASurement:SETup:PERformance:SDH:MUX?
Description	This query returns the MUX allocation in percentage.
Parameter	None.
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	MEAS:SET:PERF:SDH:MUX? → 10.00
Note	

18.2.17 MEASurement:SETup:PERformance:SDH:VC4

Syntax	MEASurement:SETup:PERformance:SDH:VC4 <value>
Description	This command sets the VC4 allocation in percentage.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0.00, MAXimum=100.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:PERF:SDH:VC4 10.00
Note	

Syntax	MEASurement:SETup:PERformance:SDH:VC4?
Description	This query returns the VC4 Allocation in percentage.
Parameter	None.
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	MEAS:SET:PERF:SDH:VC4? → 10.00
Note	

18.2.18 MEASurement:SETup:PERformance:SDH:VC3

Syntax	MEASurement:SETup:PERformance:SDH:VC3 <value>
Description	This command sets the VC3 allocation in percentage.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0.00, MAXimum=100.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:PERF:SDH:VC3 10.00
Note	

Syntax	MEASurement:SETup:PERformance:SDH:VC3?
Description	This query returns the VC3 allocation in percentage.
Parameter	None.
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	MEAS:SET:PERF:SDH:VC3? → 10.00
Note	

18.2.19 MEASurement:SETup:PERformance:SDH:VC12

Syntax	MEASurement:SETup:PERformance:SDH:VC12 <value>
Description	This command sets the VC12 allocation in percentage.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0.00, MAXimum=100.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:PERF:SDH:VC12 10.00
Note	

Syntax	MEASurement:SETup:PERFormance:SDH:VC12?
Description	This query returns the VC12 allocation in percentage.
Parameter	None.
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	MEAS:SET:PERF:SDH:VC12? → 10.00
Note	

18.2.20 MEASurement:SETup:PERFormance:SDH:TPERiod

Syntax	MEASurement:SETup:PERFormance:SDH:TPERiod <period>
Description	This command sets the evaluation item for SDH.
Parameter	<period> = <CHARACTER PROGRAM DATA> 15M: 15 minutes 1H: 1 hour 2H: 2 hours 24H: 24 hours 7D: 7 days <i>DEFAULT = 15M</i>
Response	None.
Example	MEAS:SET:PERF:SDH:TPER 1H
Note	Only valid when the SDH performance parameter is M.2101.1.

Syntax	MEASurement:SETup:PERFormance:SDH:TPERiod?
Description	This query returns the evaluation item for SDH.
Parameter	None.
Response	<period> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:PERF:SDH:TPER? → 1H
Note	

18.2.21 MEASurement:SETup:PERFormance:SONet:PARameter

Syntax	MEASurement:SETup:PERFormance:SONet:PARameter <param>
Description	This command sets the performance parameter for SDH.
Parameter	<param> = <CHARACTER PROGRAM DATA> G826: G.826 G828: G.828+G.829 M2101: M.2101.1(M.2100) <i>DEFAULT = M2101</i>
Response	None.
Example	MEAS:SET:PERF:SON:PAR M2101
Note	

Syntax	MEASurement:SETup:PERFormance:SONet:PARameter?
Description	This query returns the performance parameter for SONET.
Parameter	None.
Response	<param> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:PERF:SON:PAR? → M2101
Note	

18.2.22 MEASurement:SETup:PERformance:SONet:MUX

Syntax	MEASurement:SETup:PERformance:SONet:MUX <value>
Description	This command sets the MUX allocation in percentage.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0.00, MAXimum=100.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:PERF:SON:MUX 10.00
Note	

Syntax	MEASurement:SETup:PERformance:SONet:MUX?
Description	This query returns the MUX allocation in percentage.
Parameter	None.
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	MEAS:SET:PERF:SON:MUX? → 10.00
Note	

18.2.23 MEASurement:SETup:PERformance:SONet:STS3

Syntax	MEASurement:SETup:PERformance:SONet:STS3 <value>
Description	This command sets the STS3 allocation in percentage.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0.00, MAXimum=100.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:PERF:SON:STS3 10.00
Note	

Syntax	MEASurement:SETup:PERformance:SONet:STS3?
Description	This query returns the STS3 allocation in percentage.
Parameter	None.
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	MEAS:SET:PERF:SON:STS3? → 10.00
Note	

18.2.24 MEASurement:SETup:PERformance:SONet:STS1

Syntax	MEASurement:SETup:PERformance:SONet:STS1 <value>
Description	This command sets the STS1 allocation in percentage.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0.00, MAXimum=100.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:PERF:SON:STS1 10.00
Note	

Syntax	MEASurement:SETup:PERformance:SONet:STS1?
Description	This query returns the STS1 allocation in percentage.
Parameter	None.
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	MEAS:SET:PERF:SON:STS1? → 10.00
Note	

18.2.25 MEASurement:SETup:PERformance:SONet:VT2

Syntax	MEASurement:SETup:PERformance:SONet:VT2 <value>
Description	This command sets the VC12 allocation in percentage.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0.00, MAXimum=100.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:PERF:SON:VT2 10.00
Note	

Syntax	MEASurement:SETup:PERformance:SONet:VT2?
Description	This query returns the VT2 allocation in percentage.
Parameter	None.
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	MEAS:SET:PERF:SON:VT2? → 10.00
Note	

18.2.26 MEASurement:SETup:PERformance:SONet:TPERiod

Syntax	MEASurement:SETup:PERformance:SONet:TPERiod <period>
Description	This command sets the evaluation item for SONET.
Parameter	<period> = <CHARACTER PROGRAM DATA> 15M: 15 minutes 1H: 1 hour 2H: 2 hours 24H: 24 hours 7D: 7 days <i>DEFault = 15M</i>
Response	None.
Example	MEAS:SET:PERF:SON:TPER 1H
Note	Only valid when the SDH performance parameter is M.2101.1.

Syntax	MEASurement:SETup:PERformance:SONet:TPERiod?
Description	This query returns the evaluation item for SONET.
Parameter	None.
Response	<period> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:PERF:SON:TPER? → 1H
Note	

18.2.27 MEASurement:SETup:PERformance:WAN:PARameter

Syntax	MEASurement:SETup:PERformance:WAN:PARameter <param>
Description	This command sets the performance parameter for 10G WAN.
Parameter	<param> = <CHARACTER PROGRAM DATA> G826: G.826 G828: G.828+G.829 M2101: M.2101.1(M.2100) <i>DEFault = G826</i>
Response	None.
Example	MEAS:SET:PERF:WAN:PAR M2101
Note	This command can be used in V2.00 or later.

Syntax	MEASurement:SETup:PERFormance:WAN:PARAmeter?
Description	This query returns the performance parameter for 10G WAN.
Parameter	None.
Response	<param> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:PERF:WAN:PAR? → M2101
Note	This command can be used in V2.00 or later.

18.2.28 MEASurement:SETup:EVALuation:RX<Pt>[:ENABLE]

Syntax	MEASurement:SETup:EVALuation:RX<Pt>[:ENABLE] <enable>
Description	This command enables or disables the transport evaluation.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> DEFault = OFF
Response	None.
Examples	MEAS:SET:EVAL:RX ON
Note	

Syntax	MEASurement:SETup:EVALuation:RX<Pt>[:ENABLE]?
Description	This query returns whether the transport evaluation is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <NR1 NUMERIC RESPONSE DATA>
Examples	MEAS:SET:EVAL:RX? → 1
Note	

18.2.29 MEASurement:SETup:EVALuation:RX<Pt>:INTERface

Syntax	MEASurement:SETup:EVALuation:RX<Pt>:INTERface <interface>
Description	This command sets the transport evaluation interface type.
Parameters	<Pt> = Port number <interface> = <CHARACTER PROGRAM DATA> E1 E3 DS1 DS3 E4 SDH OTN CPRI The selectable interface type varies depending on the interface configuration.
Response	None.
Example	MEAS:SET:EVAL:RX:INT SDH
Note	

Syntax	MEASurement:SETup:EVALuation:RX<Pt>:INTERface?
Description	This query returns the transport evaluation interface type.
Parameter	<Pt> = Port number
Response	<interface> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:RX:INT? → SDH
Note	

18.2.30 MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:ITEM

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:ITEM <item>
Description	This commands sets the evaluation item for CPRI.

continued on next page...

...continued from previous page

Parameters	<Pt> = Port number
	<item> = <CHARACTER PROGRAM DATA> ANY: Any Alarm or Error ALARm: Alarm ERRor: Error <i>DEFault</i> = <i>ANY</i>
Response	None.
Example	MEAS:SET:EVAL:CPRI:PORT1:ITEM ANY
Note	None.

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:ITEM?
Description	This query returns the evaluation item for CPRI.
Parameter	<Pt> = Port number
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:CPRI:PORT1:ITEM? → ANY
Note	

18.2.31 MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:ITEM:ALARm

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:ITEM:ALARm <item>
Description	This commands sets the evaluation alarm item for CPRI.
Parameters	<Pt> = Port number
	<item> = <CHARACTER PROGRAM DATA> SLOS: Optical Loss of signal OPL: SLOS LOS: Loss of Signal LOF: Loss of Frame PSL: PSL L1LOS: Remote LOS L1LOF: Remote LOF RAI: RAI SDI: SDI <i>DEFault</i> = <i>SLOS</i>
Response	None.
Example	MEAS:SET:EVAL:CPRI:PORT1:ITEM:ALAR SLOS
Note	None.

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:ITEM:ALARm?
Description	This query returns the evaluation alarm item for CPRI.
Parameter	<Pt> = Port number
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:CPRI:PORT1:ITEM:ALAR? → LOS
Note	

18.2.32 MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:ITEM:ERRor

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:ITEM:ERRor <item>
Description	This commands sets the evaluation errors item for CPRI.
Parameters	<Pt> = Port number
	<item> = <CHARACTER PROGRAM DATA> LCV: LCV SHV: SHV

continued on next page...

...continued from previous page

	K307: K30.7 PATT: Pattern Error <i>DEFault</i> = <i>LCV</i>
Response	None.
Example	MEAS:SET:EVAL:CPRI:PORT1:ITEM:ERR LCV
Note	None.

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:ITEM:ERRor?
Description	This query returns the evaluation errors item for CPRI.
Parameter	<Pt> = Port number
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:CPRI:PORT1:ITEM:ERR? → LCV
Note	

18.2.33 MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:TYPE

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:TYPE <type>
Description	This commands sets the evaluation type for CPRI.
Parameters	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> CNT: Count RATio: Ratio <i>DEFault</i> = <i>CNT</i>
Response	None.
Example	MEAS:SET:EVAL:CPRI:PORT1:TYPE CNT
Note	None.

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:TYPE?
Description	This query returns the evaluation type for CPRI.
Parameter	<Pt> = Port number
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:CPRI:PORT1:TYPE? → CNT
Note	

18.2.34 MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:CNT:PASS

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:CNT:PASS <value>
Description	This command sets the count for the CPRI PASS limit. <Pt> = Port number
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =0, <i>MAXimum</i> =100000, <i>DEFault</i> =0
Response	None.
Example	MEAS:SET:EVAL:CPRI:PORT1:CNT:PASS 10
Note	This setting applies when :TYPE is CNT, ESCount or SESCount. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:CNT:PASS?
Description	This query returns the count for the CPRI PASS limit.
Parameter	<Pt> = Port number
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:CPRI:PORT1:CNT:PASS? → 10
Note	

18.2.35 MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:CNT:FAIL

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:CNT:FAIL <value>
Description	This command sets the count for the CPRI fail limit.
Parameter	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100000, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:CPRI:PORT1:CNT:FAIL 10
Note	This setting applies when :TYPE is CNT, ESCount or SESCount. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:CNT:FAIL?
Description	This query returns the count for the CPRI fail limit.
Parameter	<Pt> = Port number
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:CPRI:PORT1:CNT:FAIL? → 10
Note	

18.2.36 MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:RATio:PASS

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:RATio:PASS <value>
Description	This command sets the ratio for the CPRI pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:CPRI:PORT1:RAT:PASS 0.00
Note	This setting applies when :TYPE is RATio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:RATio:PASS?
Description	This query returns the ratio for the CPRI pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:CPRI:PORT1:RAT:PASS? → 1.00E-01
Note	

18.2.37 MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:RATio:FAIL

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:RATio:FAIL <value>
Description	This command sets the ratio for the CPRI fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:CPRI:PORT1:RAT:FAIL 0.00
Note	This setting applies when :TYPE is RATio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:CPRI:PORT<Pt>:RATio:FAIL?
Description	This query returns the ratio for the CPRI fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:CPRI:PORT1:RAT:FAIL? → 1.00E-01
Note	

18.2.38 MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:ITEM

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:ITEM <item>
Description	This command sets the evaluation item for 2 Mbps.
Parameter	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> ANY: Any error or alarm PATtern: Payload Pattern FAS: FAS CRC: CRC-4 EBIT: E-bit <i>DEFault = ANY</i>
Response	None.
Example	MEAS:SET:EVAL:TMBP:RX1:ITEM PATT
Note	Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:ITEM?
Description	This query the evaluation item for 2 Mbps.
Parameter	None.
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:TMBP:RX1:ITEM? → PATT
Note	

18.2.39 MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:TYPE

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:TYPE <type>
Description	This command sets the evaluation type for 2 Mbps.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> CNT: Error Count RATio: Error Ratio EPCT: Error percentage ESCount: ES error count ESRatio: ES error ratio ESPCt: ES error percentage SESCount: SES error count SESPct: SES error percentage HRPct: HR% HRPBis: HR% BIS <i>DEFault = CNT</i>
Response	None.
Example	MEAS:SET:EVAL:TMBP:RX1:TYPE ERAT
Note	Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:TYPE?
Description	This query returns the evaluation type for 2 Mbps.
Parameter	None.
Response	<type> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:TMBP:RX1:TYPE? → ERAT
Note	

18.2.40 MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:CNT:PASS

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:CNT:PASS <value>
Description	This command sets the error count for the 2Mbps pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100000, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:TMBP:RX1:CNT:PASS 10
Note	This setting applies when :TYPE is CNT, ESCount or SESCount. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:CNT:PASS?
Description	This query returns the error count for the 2Mbps pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:TMBP:RX1:CNT:PASS? → 10
Note	

18.2.41 MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:CNT:FAIL

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:CNT:FAIL <value>
Description	This command sets the error count for the 2Mbps fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100000, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:TMBP:RX1:CNT:FAIL 10
Note	This setting applies when :TYPE is CNT, ESCount or SESCount. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:CNT:FAIL?
Description	This query returns the error count for the 2Mbps fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:TMBP:RX1:CNT:FAIL? → 10
Note	

18.2.42 MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:RATio:PASS

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:RATio:PASS <value>
Description	This command sets the ratio for the 2Mbps pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:TMBP:RX1:RAT:PASS 10.00
Note	This setting applies when :TYPE is RATio or ESRatio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:RATio:PASS?
Description	This query returns the ratio for the 2Mbps pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:TMBP:RX1:RAT:PASS? → 1.00E-01
Note	

18.2.43 MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:RATio:FAIL

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:RATio:FAIL <value>
Description	This command sets the ratio for the 2Mbps fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:TMBP:RX1:RAT:FAIL 10.00
Note	This setting applies when :TYPE is RATio or ESRatio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:RATio:FAIL?
Description	This query returns the ratio for the 2Mbps fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:TMBP:RX1:RAT:FAIL? → 1.00E-01
Note	

18.2.44 MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:PCT:PASS

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:PCT:PASS <value>
Description	This command sets the percentage for the 2 Mbps pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:TMBP:RX1:PCT:PASS 10
Note	This setting applies when :TYPE is EPCT, ESPCt or SESPct. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:PCT:PASS?
Description	This query returns the percentage for the 2 Mbps pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:TMBP:RX1:PCT:PASS? → 10
Note	

18.2.45 MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:PCT:FAIL

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:PCT:FAIL <value>
Description	This command sets the percentage for the 2 Mbps fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:TMBP:RX1:PCT:FAIL 10
Note	This setting applies when :TYPE is EPCT, ESPCt or SESPct. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:PCT:FAIL?
Description	This query returns the percentage for the 2 Mbps fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:TMBP:RX1:PCT:FAIL? → 10
Note	

18.2.46 MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:HREference

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:HREference <percent>
Description	This command sets the HR%.
Parameter	<Pt> = Port number <percent> = <NUMERIC PROGRAM DATA> <i>MINimum=0.00, MAXimum=100.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:TMBP:RX1:HREF 10.00
Note	This setting applies when :TYPE is HRPcT or HRPBis. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:TMBPs:RX<Pt>:HREference?
Description	This query returns the HR%.
Parameter	None.
Response	<percent> = <NR2 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:TMBP:RX1:HREF? → 10.00
Note	

18.2.47 MEASurement:SETup:EVALuation:E3:RX<Pt>:ITEM

Syntax	MEASurement:SETup:EVALuation:E3:RX<Pt>:ITEM <item>
Description	This command sets the evaluation item for E3.
Parameters	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> ANY: Any error or alarm NSIGnal: No signal AIS: Alarm Indication Signal NFRame: No frame DISTant: Distant NSYNc: No sync FASWords: FAS words FASBits: FAS bits CODE: Code PATtern: Pattern PSLips: Pattern slips BLOCK: Block <i>DEFault = ANY</i>
Response	None.
Example	MEAS:SET:EVAL:E3:RX1:ITEM NSIG
Note	Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:E3:RX<Pt>:ITEM?
Description	This query returns the evaluation item for E3.
Parameter	<Pt> = Port number
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:E3:RX1:ITEM? → NSIG
Note	

18.2.48 MEASurement:SETup:EVALuation:E3:RX<Pt>:TYPE

Syntax	MEASurement:SETup:EVALuation:E3:RX<Pt>:TYPE <type>
Description	This command sets the evaluation type for E3.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> CNT: Count RATio: Ratio <i>DEFault</i> = CNT
Response	None.
Example	MEAS:SET:EVAL:E3:RX1:TYPE RAT
Note	Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:E3:RX<Pt>:TYPE?
Description	This query returns the evaluation type for E3.
Parameter	None.
Response	<type> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:E3:RX1:TYPE? → RAT
Note	

18.2.49 MEASurement:SETup:EVALuation:E3:RX<Pt>:CNT:PASS

Syntax	MEASurement:SETup:EVALuation:E3:RX<Pt>:CNT:PASS <value>
Description	This command sets the error count for the E3 pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =0, <i>MAXimum</i> =100000, <i>DEFault</i> =0
Response	None.
Example	MEAS:SET:EVAL:E3:RX1:CNT:PASS 10
Note	This setting applies when :TYPE is CNT. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:E3:RX<Pt>:CNT:PASS?
Description	This query returns the error count for the E3 pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:E3:RX1:CNT:PASS? → 10
Note	

18.2.50 MEASurement:SETup:EVALuation:E3:RX<Pt>:CNT:FAIL

Syntax	MEASurement:SETup:EVALuation:E3:RX<Pt>:CNT:FAIL <value>
Description	This command sets the error count for the E3 fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =0, <i>MAXimum</i> =100000, <i>DEFault</i> =0
Response	None.
Example	MEAS:SET:EVAL:E3:RX1:CNT:FAIL 10
Note	This setting applies when :TYPE is CNT. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:E3:RX<Pt>:CNT:FAIL?
Description	This query returns the error count for the E3 fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:E3:RX1:CNT:FAIL? → 10
Note	

18.2.51 MEASurement:SETup:EVALuation:E3:RX<Pt>:RATio:PASS

Syntax	MEASurement:SETup:EVALuation:E3:RX<Pt>:RATio:PASS <value>
Description	This command sets the ratio for the E3 pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:E3:RX1:RAT:PASS 10.00
Note	This setting applies when :TYPE is RATio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:E3:RX<Pt>:RATio:PASS?
Description	This query returns the ratio for the E3 pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:E3:RX1:RAT:PASS? → 1.00E-01
Note	

18.2.52 MEASurement:SETup:EVALuation:E3:RX<Pt>:RATio:FAIL

Syntax	MEASurement:SETup:EVALuation:E3:RX<Pt>:RATio:FAIL <value>
Description	This command sets the ratio for the E3 fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:E3:RX1:RAT:FAIL 10.00
Note	This setting applies when :TYPE is RATio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:E3:RX<Pt>:RATio:FAIL?
Description	This query returns the ratio for the E3 fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:E3:RX1:RAT:FAIL? → 1.00E-01
Note	

18.2.53 MEASurement:SETup:EVALuation:E4:RX<Pt>:ITEM

Syntax	MEASurement:SETup:EVALuation:E4:RX<Pt>:ITEM <item>
Description	This command sets the evaluation item for E4.
Parameters	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> ANY: Any error or alarm NSIGnal: No signal AIS: Alarm Indication Signal NFRame: No frame DISTant: Distant NSYNc: No sync FASWords: FAS words FASBits: FAS bits CODE: Code PATtern: Pattern PSLips: Pattern slips PBLOCK: Pattern block FBLOCK: Frame block <i>DEFAULT = ANY</i>
Response	None.
Example	MEAS:SET:EVAL:E4:RX1:ITEM NSIG
Note	Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:E4:RX<Pt>:ITEM?
Description	This query returns the evaluation item for E4.
Parameter	<Pt> = Port number
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:E4:RX1:ITEM? → NSIG
Note	

18.2.54 MEASurement:SETup:EVALuation:E4:RX<Pt>:TYPE

Syntax	MEASurement:SETup:EVALuation:E4:RX<Pt>:TYPE <type>
Description	This command sets the evaluation type for E4.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> CNT: Count RATio: Ratio <i>DEFAULT = CNT</i>
Response	None.
Example	MEAS:SET:EVAL:E4:RX1:TYPE RAT
Note	Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:E4:RX<Pt>:TYPE?
Description	This query returns the evaluation type for E4.
Parameter	None.
Response	<type> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:E4:RX1:TYPE? → RAT
Note	

18.2.55 MEASurement:SETup:EVALuation:E4:RX<Pt>:CNT:PASS

Syntax	MEASurement:SETup:EVALuation:E4:RX<Pt>:CNT:PASS <value>
Description	This command sets the error count for the E4 pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100000, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:E4:RX1:CNT:PASS 10
Note	This setting applies when :TYPE is CNT. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:E4:RX<Pt>:CNT:PASS?
Description	This query returns the error count for the E4 pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:E4:RX1:CNT:PASS? → 10
Note	

18.2.56 MEASurement:SETup:EVALuation:E4:RX<Pt>:CNT:FAIL

Syntax	MEASurement:SETup:EVALuation:E4:RX<Pt>:CNT:FAIL <value>
Description	This command sets the error count for the E4 fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100000, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:E4:RX1:CNT:FAIL 10
Note	This setting applies when :TYPE is CNT. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:E4:RX<Pt>:CNT:FAIL?
Description	This query returns the error count for the E4 fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:E4:RX1:CNT:FAIL? → 10
Note	

18.2.57 MEASurement:SETup:EVALuation:E4:RX<Pt>:RATio:PASS

Syntax	MEASurement:SETup:EVALuation:E4:RX<Pt>:RATio:PASS <value>
Description	This command sets the ratio for the E4 pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:E4:RX1:RAT:PASS 10.00
Note	This setting applies when :TYPE is RATio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:E4:RX<Pt>:RATio:PASS?
Description	This query returns the ratio for the E4 pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:E4:RX1:RAT:PASS? → 1.00E-01
Note	

18.2.58 MEASurement:SETup:EVALuation:E4:RX<Pt>:RATio:FAIL

Syntax	MEASurement:SETup:EVALuation:E4:RX<Pt>:RATio:FAIL <value>
Description	This command sets the ratio for the E4 fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:E4:RX1:RAT:FAIL 10.00
Note	This setting applies when :TYPE is RATio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:E4:RX<Pt>:RATio:FAIL?
Description	This query returns the ratio for the E4 fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:E4:RX1:RAT:FAIL? → 1.00E-01
Note	

18.2.59 MEASurement:SETup:EVALuation:SDH:RX<Pt>:ITEM

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:ITEM <item>
Description	This command sets the evaluation item for SDH.
Parameter	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> ANY: Any error or alarm ALARm: An alarm defined by MEAS:SET:EVAL:SDH:RX<Pt>:ITEM:ALAR ERRor: An error defined by MEAS:SET:EVAL:SDH:RX<Pt>:ITEM:ERR <i>DEFault = ANY</i>
Response	None.
Example	MEAS:SET:EVAL:SDH:RX1:ITEM ALAR
Note	Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:ITEM?
Description	This query the evaluation item for 2 Mbps.
Parameter	None.
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:SDH:RX1:ITEM? → PATT
Note	

18.2.60 MEASurement:SETup:EVALuation:SDH:RX<Pt>:ITEM:ALARm

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:ITEM:ALARm <item>
Description	This commands sets the evaluation item for SDH.
Parameters	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> LOS: LOS LOF: LOF OOF: OOF MSAIS: MS-AIS MSRDI: MS-RDI AUAIS: AU-AIS AULOP: AU-LOP HPTIM: HP-TIM HPPLM: HP-PLM HPUNEQ: HP-UNEQ HPRDI: HP-RDI TUAIS: TU-AIS TULOP: TU-LOP TULOM: TU-LOM LPTIM: LP-TIM LPUNEQ: LP-UNEQ LPRDI: LP-RDI LSS: LSS LPPLM: LP-PLM TCUNEQ: TC-UNEQ TCLTC: TC-LTC TCTIM: TC-TIM TCAIS: TC-AIS TCRDI: TC-RDI TCODI: TC-ODI GAIS: G-AIS <i>DEFault = LOS</i>
Response	None.
Example	MEAS:SET:EVAL:SDH:RX1:ITEM:ALAR LOS
Note	This setting applies when :ITEM is ALARm. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:ITEM:ALARm?
Description	This query returns the evaluation item for SDH.
Parameter	<Pt> = Port number
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:SDH:RX1:ITEM:ALAR? → LOS
Note	

18.2.61 MEASurement:SETup:EVALuation:SDH:RX<Pt>:ITEM:ERRor

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:ITEM:ERRor <item>
Description	This commands sets the evaluation item for SDH.
Parameters	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> A1A2: A1A2 B1: B1-BIP B2: B2-BIP MSREI: MS-REI B3: B3-BIP HPREI: HP-REI V5LP: V5/LP-B3 LPREI: LP-REI TUNDF: TU-NDF AUNDF: AU-NDF APS: Switch APS TUMN: TU-MVT-Negative TUMP: TU-MVT-Positive AUMN: AU-MVT-Negative AUMP: AU-MVT-Positive TCIEC: TC-IEC TCBIP: TC-BIP-2 TCREI: TC-REI TCOEI: TC-OEI <i>DEFault = A1A2</i>
Response	None.
Example	MEAS:SET:EVAL:SDH:RX1:ITEM:ERR A1A2
Note	This setting applies when :ITEM is ERRor. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:ITEM:ERRor?
Description	This query returns the evaluation item for SDH.
Parameter	<Pt> = Port number
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:SDH:RX1:ITEM:ERR? → A1A2
Note	

18.2.62 MEASurement:SETup:EVALuation:SDH:RX<Pt>:TYPE

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:TYPE <type>
Description	This command sets the evaluation type for SDH.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> CNT: Count RATio: Ratio <i>DEFault = CNT</i>
Response	None.
Example	MEAS:SET:EVAL:SDH:RX1:TYPE RAT
Note	Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:TYPE?
Description	This query returns the evaluation type for SDH.
Parameter	None.
Response	<type> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:SDH:RX1:TYPE? → RAT
Note	

18.2.63 MEASurement:SETup:EVALuation:SDH:RX<Pt>:CNT:PASS

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:CNT:PASS <value>
Description	This command sets the error count for the SDH pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100000, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:SDH:RX1:CNT:PASS 10
Note	This setting applies when :TYPE is CNT. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:CNT:PASS?
Description	This query returns the error count for the SDH pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:SDH:RX1:CNT:PASS? → 10
Note	

18.2.64 MEASurement:SETup:EVALuation:SDH:RX<Pt>:CNT:FAIL

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:CNT:FAIL <value>
Description	This command sets the error count for the SDH fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100000, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:SDH:RX1:CNT:FAIL 10
Note	This setting applies when :TYPE is CNT. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:CNT:FAIL?
Description	This query returns the error count for the SDH fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:SDH:RX1:CNT:FAIL? → 10
Note	

18.2.65 MEASurement:SETup:EVALuation:SDH:RX<Pt>:RATio:PASS

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:RATio:PASS <value>
Description	This command sets the ratio for the SDH pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:SDH:RX1:RAT:PASS 10.00
Note	This setting applies when :TYPE is RATio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:RATio:PASS?
Description	This query returns the ratio for the SDH pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:SDH:RX1:RAT:PASS? → 1.00E-01
Note	

18.2.66 MEASurement:SETup:EVALuation:SDH:RX<Pt>:RATio:FAIL

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:RATio:FAIL <value>
Description	This command sets the ratio for the SDH fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:SDH:RX1:RAT:FAIL 10.00
Note	This setting applies when :TYPE is RATio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SDH:RX<Pt>:RATio:FAIL?
Description	This query returns the ratio for the SDH fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:SDH:RX1:RAT:FAIL? → 1.00E-01
Note	

18.2.67 MEASurement:SETup:EVALuation:SONet:RX<Pt>:ITEM

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:ITEM <item>
Description	This command sets the evaluation item for SDH.
Parameter	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> ANY: Any error or alarm ALARm: An alarm defined by MEAS:SET:EVAL:SON:RX<Pt>:ITEM:ALAR ERRor: An error defined by MEAS:SET:EVAL:SON:RX<Pt>:ITEM:ERR <i>DEFault = ANY</i>
Response	None.
Example	MEAS:SET:EVAL:SON:RX1:ITEM ALAR
Note	Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:ITEM?
Description	This query the evaluation item for 2 Mbps.
Parameter	None.
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:SON:RX1:ITEM? → PATT
Note	

18.2.68 MEASurement:SETup:EVALuation:SONet:RX<Pt>:ITEM:ALARm

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:ITEM:ALARm <item>
Description	This commands sets the evaluation item for SDH.
Parameters	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> LOS: LOS LOF: LOF OOF: OOF AISL: MS-AIS RDIL: MS-RDI AISP: AU-AIS LOPP: AU-LOP TIMP: HP-TIM PLMP: HP-PLM UNEQP: HP-UNEQ RDIP: HP-RDI AISV: TU-AIS LOPV: TU-LOP LOMV: TU-LOM TIMV: LP-TIM UNEQV: LP-UNEQ RDIV: LP-RDI LSS: LSS PLMV: LP-PLM TCUNEQ: TC-UNEQ TCLTC: TC-LTC TCTIM: TC-TIM TCAIS: TC-AIS TCRDI: TC-RDI TCODI: TC-ODI GAIS: G-AIS <i>DEFault = LOS</i>
Response	None.
Example	MEAS:SET:EVAL:SON:RX1:ITEM:ALAR LOS
Note	This setting applies when :ITEM is ALARm. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:ITEM:ALARm?
Description	This query returns the evaluation item for SDH.
Parameter	<Pt> = Port number
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:SON:RX1:ITEM:ALAR? → LOS
Note	

18.2.69 MEASurement:SETup:EVALuation:SONet:RX<Pt>:ITEM:ERRor

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:ITEM:ERRor <item>
Description	This commands sets the evaluation item for SDH.
Parameters	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> A1A2: A1A2 B1: B1-BIP B2: B2-BIP REIL: MS-REI B3: B3-BIP REIP: HP-REI V5LP: V5/LP-B3 REIV: LP-REI VTNDF: TU-NDF STSNDF: AU-NDF APS: Switch APS TUMN: TU-MVT-Negative TUMP: TU-MVT-Positive AUMN: AU-MVT-Negative AUMP: AU-MVT-Positive TCIEC: TC-IEC TCBIP: TC-BIP-2 TCRI: TC-REI TCOEI: TC-OEI <i>DEFault = A1A2</i>
Response	None.
Example	MEAS:SET:EVAL:SON:RX1:ITEM:ERR A1A2
Note	This setting applies when :ITEM is ERRor. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:ITEM:ERRor?
Description	This query returns the evaluation item for SDH.
Parameter	<Pt> = Port number
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:SON:RX1:ITEM:ERR? → A1A2
Note	

18.2.70 MEASurement:SETup:EVALuation:SONet:RX<Pt>:TYPE

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:TYPE <type>
Description	This command sets the evaluation type for SDH.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> CNT: Count RATio: Ratio <i>DEFault = CNT</i>
Response	None.
Example	MEAS:SET:EVAL:SON:RX1:TYPE RAT
Note	Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:TYPE?
Description	This query returns the evaluation type for SDH.
Parameter	None.
Response	<type> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:SON:RX1:TYPE? → RAT
Note	

18.2.71 MEASurement:SETup:EVALuation:SONet:RX<Pt>:CNT:PASS

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:CNT:PASS <value>
Description	This command sets the error count for the SDH pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100000, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:SON:RX1:CNT:PASS 10
Note	This setting applies when :TYPE is CNT. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:CNT:PASS?
Description	This query returns the error count for the SDH pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:SON:RX1:CNT:PASS? → 10
Note	

18.2.72 MEASurement:SETup:EVALuation:SONet:RX<Pt>:CNT:FAIL

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:CNT:FAIL <value>
Description	This command sets the error count for the SDH fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100000, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:SON:RX1:CNT:FAIL 10
Note	This setting applies when :TYPE is CNT. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:CNT:FAIL?
Description	This query returns the error count for the SDH fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:SON:RX1:CNT:FAIL? → 10
Note	

18.2.73 MEASurement:SETup:EVALuation:SONet:RX<Pt>:RATio:PASS

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:RATio:PASS <value>
Description	This command sets the ratio for the SDH pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:SON:RX1:RAT:PASS 10.00
Note	This setting applies when :TYPE is RATio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:RATio:PASS?
Description	This query returns the ratio for the SDH pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:SON:RX1:RAT:PASS? → 1.00E-01
Note	

18.2.74 MEASurement:SETup:EVALuation:SONet:RX<Pt>:RATio:FAIL

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:RATio:FAIL <value>
Description	This command sets the ratio for the SDH fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:SON:RX1:RAT:FAIL 10.00
Note	This setting applies when :TYPE is RATio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:SONet:RX<Pt>:RATio:FAIL?
Description	This query returns the ratio for the SDH fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:SON:RX1:RAT:FAIL? → 1.00E-01
Note	

18.2.75 MEASurement:SETup:EVALuation:OTN:RX<Pt>:ITEM

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:ITEM <item>
Description	This command sets the evaluation item for OTN.
Parameter	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> ANY: Any error or alarm AL1: An alarm at level 1 defined by MEAS:SET:EVAL:OTN:RX<Pt>:ITEM:ALAR AL2: An alarm at level 1 defined by MEAS:SET:EVAL:OTN:RX<Pt>:ITEM:ALAR AL3: An alarm at level 1 defined by MEAS:SET:EVAL:OTN:RX<Pt>:ITEM:ALAR EL1: An error at level 1 defined by MEAS:SET:EVAL:OTN:RX<Pt>:ITEM:ERR EL2: An error at level 1 defined by MEAS:SET:EVAL:OTN:RX<Pt>:ITEM:ERR EL3: An error at level 1 defined by MEAS:SET:EVAL:OTN:RX<Pt>:ITEM:ERR <i>DEFault = ANY</i>
Response	None.
Example	MEAS:SET:EVAL:OTN:RX1:ITEM PATT
Note	Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:ITEM?
Description	This query the evaluation item for 2 Mbps.
Parameter	None.
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:OTN:RX1:ITEM? → PATT
Note	

18.2.76 MEASurement:SETup:EVALuation:OTN:RX<Pt>:ITEM:ALARm

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:ITEM:ALARm <item>
Description	This commands sets the evaluation item for OTN.
Parameters	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> LOS: LOS OTU AIS: OTU-AIS LOF: LOF LOFLOM: LOFLOM OOF: OOF LOM: LOM OOM: OOM

continued on next page...

...continued from previous page

	SMTIM: SM-TIM SMBIAE: SM-BIAE SMBDI: SM-BDI SMIAE: SM-IAE ODUAIS: ODU-AIS ODULCK: ODU-LCK ODUOCI: ODU-OCI PMTIM: PM-TIM PMBDI: PM-BDI TCM1TIM: TCM1-TIM TCM1BIAE: TCM1-BIAE TCM1BDI: TCM1-BDI TCM1IAE: TCM1-IAE TCM1LTC: TCM1-LTC TCM2TIM: TCM2-TIM TCM2BIAE: TCM2-BIAE TCM2BDI: TCM2-BDI TCM2IAE: TCM2-IAE TCM2LTC: TCM2-LTC TCM3TIM: TCM3-TIM TCM3BIAE: TCM3-BIAE TCM3BDI: TCM3-BDI TCM3IAE: TCM3-IAE TCM3LTC: TCM3-LTC TCM4TIM: TCM4-TIM TCM4BIAE: TCM4-BIAE TCM4BDI: TCM4-BDI TCM4IAE: TCM4-IAE TCM4LTC: TCM4-LTC TCM5TIM: TCM5-TIM TCM5BIAE: TCM5-BIAE TCM5BDI: TCM5-BDI TCM5IAE: TCM5-IAE TCM5LTC: TCM5-LTC TCM6TIM: TCM6-TIM TCM6BIAE: TCM6-BIAE TCM6BDI: TCM6-BDI TCM6IAE: TCM6-IAE TCM6LTC: TCM6-LTC PLM: PLM MSIM: MSIM AISC: CI-AIS CSF: CSF LSS: LSS <i>DEFault = LOS</i>
Response	None.
Example	MEAS:SET:EVAL:OTN:RX1:ITEM:ALAR LOS
Note	This setting applies when :ITEM is AL1, AL2 or AL3. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:ITEM:ALARm?
Description	This query returns the evaluation item for OTN.
Parameter	<Pt> = Port number
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:OTN:RX1:ITEM:ALAR? → LOS
Note	

18.2.77 MEASurement:SETup:EVALuation:OTN:RX<Pt>:ITEM:ERRor

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:ITEM:ERRor <item>
Description	This commands sets the evaluation item for OTN.
Parameters	<Pt> = Port number <item> = <CHARACTER PROGRAM DATA> FAS: FAS MFAS: MFAS SMBIP: SM-BIP8 SMBEI: SM-BEI FCE: FCE FUEB: FUEB PMBIP: PM-BIP8 PMBEI: PM-BEI TCM1BIP: TCM1-BIP8 TCM1BEI: TCM1-BEI TCM2BIP: TCM2-BIP8 TCM2BEI: TCM2-BEI TCM3BIP: TCM3-BIP8 TCM3BEI: TCM3-BEI TCM4BIP: TCM4-BIP8 TCM4BEI: TCM4-BEI TCM5BIP: TCM5-BIP8 TCM5BEI: TCM5-BEI TCM6BIP: TCM6-BIP8 TCM6BEI: TCM6-BEI CHECCO: ECTABLE CHECUNCO: cHEC-UNCORRECTABLE THECCOR: tHEC-CORRECTABLE THECUNCO: tHEC-UNCORRECTABLE IGFPFRAME: INVALID-GFP-FRAME SBLOCKCRC: SUPERBLOCK-CRC CSFSIGNAL: CSF-SIGNAL CSFSYNC: CSF-SYNC CRC8: CRC8 CRC5: CRC5 FCS: FCS <i>DEFault = FAS</i>
Response	None.
Example	MEAS:SET:EVAL:OTN:RX1:ITEM:ERR FAS
Note	This setting applies when :ITEM is EL1, EL2 or EL3. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:ITEM:ERRor?
Description	This query returns the evaluation item for OTN.
Parameter	<Pt> = Port number
Response	<item> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:OTN:RX1:ITEM:ERR? → LOS
Note	

18.2.78 MEASurement:SETup:EVALuation:OTN:RX<Pt>:TYPE

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:TYPE <type>
Description	This command sets the evaluation type for OTN.
Parameters	<Pt> = Port number <type> = <CHARACTER PROGRAM DATA> CNT: Count RATio: Ratio <i>DEFault = CNT</i>
Response	None.
Example	MEAS:SET:EVAL:OTN:RX1:TYPE RAT
Note	Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:TYPE?
Description	This query returns the evaluation type for OTN.
Parameter	None.
Response	<type> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:OTN:RX1:TYPE? → RAT
Note	

18.2.79 MEASurement:SETup:EVALuation:OTN:RX<Pt>:CNT:PASS

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:CNT:PASS <value>
Description	This command sets the error count for the OTN pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100000, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:OTN:RX1:CNT:PASS 10
Note	This setting applies when :TYPE is CNT. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:CNT:PASS?
Description	This query returns the error count for the OTN pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:OTN:RX1:CNT:PASS? → 10
Note	

18.2.80 MEASurement:SETup:EVALuation:OTN:RX<Pt>:CNT:FAIL

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:CNT:FAIL <value>
Description	This command sets the error count for the OTN fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=100000, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:OTN:RX1:CNT:FAIL 10
Note	This setting applies when :TYPE is CNT. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:CNT:FAIL?
Description	This query returns the error count for the OTN fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:OTN:RX1:CNT:FAIL? → 10
Note	

18.2.81 MEASurement:SETup:EVALuation:OTN:RX<Pt>:RATio:PASS

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:RATio:PASS <value>
Description	This command sets the ratio for the OTN pass limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:OTN:RX1:RAT:PASS 10.00
Note	This setting applies when :TYPE is RATio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:RATio:PASS?
Description	This query returns the ratio for the OTN pass limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:OTN:RX1:RAT:PASS? → 1.00E-01
Note	

18.2.82 MEASurement:SETup:EVALuation:OTN:RX<Pt>:RATio:FAIL

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:RATio:FAIL <value>
Description	This command sets the ratio for the OTN fail limit.
Parameter	<value> = <NUMERIC PROGRAM DATA> <i>MINimum=0, MAXimum=1.00, DEFault=0</i>
Response	None.
Example	MEAS:SET:EVAL:OTN:RX1:RAT:FAIL 10.00
Note	This setting applies when :TYPE is RATio. Command is valid for BERT applications only.

Syntax	MEASurement:SETup:EVALuation:OTN:RX<Pt>:RATio:FAIL?
Description	This query returns the ratio for the OTN fail limit.
Parameter	None.
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:OTN:RX1:RAT:FAIL? → 1.00E-01
Note	

18.2.83 MEASurement:SETup:EVALuation:BER:OBAMeasuring

Syntax	MEASurement:SETup:EVALuation:BER:OBAMeasuring <enable>
Description	This command enables or disables "Only show BER Alarms when measuring".
Parameters	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	MEAS:SET:EVAL:BER:OBAM ON
Note	This setting applies to all ports. This only applies to Ethernet and Fibre Channel.

Syntax	MEASurement:SETup:EVALuation:BER:OBAMeasuring?
Description	This query returns whether "Only show BER Alarms when measuring" is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	MEAS:SET:EVAL:BER:OBAM? → 1
Note	This setting applies to all ports. This only applies to Ethernet and Fibre Channel.

18.2.84 MEASurement:SETup:EVALuation:BER:IAFFilter

Syntax	MEASurement:SETup:EVALuation:BER:IAFFilter <enable>
Description	This command enables or disables "Include addresses in frame filter on receiver".
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>ON</i>
Response	None.
Example	MEAS:SET:EVAL:BER:IAFF OFF
Note	This setting applies to all ports. This only applies to Ethernet and Fibre Channel.

Syntax	MEASurement:SETup:EVALuation:BER:IAFFilter?
Description	This query returns whether "Include addresses in frame filter on receiver" is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	MEAS:SET:EVAL:BER:IAFF? → 0
Note	This setting applies to all ports. This only applies to Ethernet and Fibre Channel.

18.2.85 MEASurement:SETup:EVALuation:BER:CLFrames

Syntax	MEASurement:SETup:EVALuation:BER:CLFrames <enable>
Description	This command enables or disables "Count lost frames as pattern errors".
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Example	MEAS:SET:EVAL:BER:CLF ON
Note	This setting applies to all ports. This only applies to Ethernet and Fibre Channel.

Syntax	MEASurement:SETup:EVALuation:BER:CLFrames?
Description	This query returns whether "Count lost frames as pattern errors" is enabled or disabled.
Parameter	None.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	MEAS:SET:EVAL:BER:CLF? → 1
Note	This setting applies to all ports. This only applies to Ethernet and Fibre Channel.

18.2.86 MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds[:ENABLE]

Syntax	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds[:ENABLE] <enable>
Description	This command enables or disables BER Pattern errors threshold.
Parameters	<Pt> = Port number <enable> = <BOOLEAN PROGRAM DATA> <i>DEFault</i> = <i>OFF</i>
Response	None.
Examples	MEAS:SET:EVAL:BER:PORT1:PTHR ON
Note	

Syntax	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds[:ENABLE]?
Description	This query returns whether Pattern errors threshold is enabled or disabled.
Parameter	<Pt> = Port number
Response	<enable> = <BOOLEAN RESPONSE DATA>
Examples	MEAS:SET:EVAL:BER:PORT1:PTHR? → 1
Note	

18.2.87 MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:MODE

Syntax	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:MODE <mode>
Description	This command sets the Pattern errors threshold mode.
Parameters	<Pt> = Port number <mode> = <CHARACTER PROGRAM DATA> COUNT: Count RATE: Rate PERCENT: Rate Percent <i>DEFault = COUNT</i>
Response	None.
Example	MEAS:SET:EVAL:BER:PORT1:PTHR:MODE COUNT
Note	

Syntax	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:MODE?
Description	This query returns the Pattern errors threshold mode.
Parameters	<Pt> = Port number
Response	<mode> = <CHARACTER RESPONSE DATA>
Example	MEAS:SET:EVAL:BER:PORT1:PTHR:MODE? COUNT
Note	

18.2.88 MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:COUNt

Syntax	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:COUNt <value>
Description	This command sets the Pattern errors threshold count value.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0, MAXimum = 4294967295, DEFault = 0</i>
Response	None.
Example	MEAS:SET:EVAL:BER:PORT1:PTHR:COUN 100
Note	

Syntax	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:COUNt?
Description	This query returns the Pattern errors threshold count value.
Parameters	<Pt> = Port number
Response	<value> = <NR1 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:BER:PORT1:PTHR:COUN? → 100
Note	

18.2.89 MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:RATio

Syntax	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:RATio <ratio>
Description	This command sets the Pattern errors threshold ratio value.
Parameters	<Pt> = Port number <ratio> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.00, MAXimum = 1.00, DEFault = 0.00</i>
Response	None.
Example	MEAS:SET:EVAL:BER:PORT1:PTHR:RAT 1.50E-01
Note	

Syntax	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:RATio?
Description	This query returns the Pattern errors threshold ratio value.
Parameters	<Pt> = Port number
Response	<value> = <NR3 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:BER:PORT1:PTHR:RAT? → 1.50E-01
Note	

18.2.90 MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:PERCent

Syntax	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:PERCent <value>
Description	This command sets the Pattern errors threshold percentage value.
Parameters	<Pt> = Port number <value> = <NUMERIC PROGRAM DATA> <i>MINimum = 0.00000, MAXimum = 100.00000, DEFault = 0.00000</i>
Response	None.
Example	MEAS:SET:EVAL:BER:PORT1:PTHR:PERC 10.00000
Note	

Syntax	MEASurement:SETup:EVALuation:BER:PORT<Pt>:PTHResholds:PERCent?
Description	This query returns the Pattern errors threshold percentage value.
Parameters	<Pt> = Port number
Response	<value> = <NR2 NUMERIC RESPONSE DATA>
Example	MEAS:SET:EVAL:BER:PORT1:PTHR:PERC? → 10.00000
Note	

18.2.91 MEASurement:SETup:POINtermovement:SDH:MODE

Syntax	MEASurement:SETup:POINtermovement:SDH:MODE <enable>
Description	This command enables or disables pointer movement measurement.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	MEAS:SET:POIN:SDH:MODE ON
Note	This setting applies to all ports.

Syntax	MEASurement:SETup:POINtermovement:SDH:MODE?
Description	This query returns whether pointer movement is enabled or disabled.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	MEAS:SET:POIN:SDH:MODE? → 1
Note	This setting applies to all ports.

18.2.92 MEASurement:SETup:POINtermovement:SONet:MODE

Syntax	MEASurement:SETup:POINtermovement:SONet:MODE <enable>
Description	This command enables or disables pointer movement measurement.
Parameter	<enable> = <BOOLEAN PROGRAM DATA> <i>DEFault = OFF</i>
Response	None.
Example	MEAS:SET:POIN:SON:MODE ON
Note	This setting applies to all ports.

Syntax	MEASurement:SETup:POINtermovement:SONet:MODE?
Description	This query returns whether pointer movement is enabled or disabled.
Response	<enable> = <BOOLEAN RESPONSE DATA>
Example	MEAS:SET:POIN:SON:MODE? → 1
Note	This setting applies to all ports.

18.3 Information

18.3.1 MEASurement:INFO:TBEGin?

Syntax	MEASurement:INFO:TBEGin?
Description	This query returns the start time of the measurement.
Parameter	None.
Response	<datetime> = <STRING RESPONSE DATA> Format: YYYY-MM-DD HH:MM:SS
Example	MEAS:INFO:TBEG? → "2014-07-17 11:26:11"
Note	Only possible if a measurement is in the memory.

18.3.2 MEASurement:INFO:TEND?

Syntax	MEASurement:INFO:TEND?
Description	This query returns the stop time of the measurement.
Parameter	None.
Response	<datetime> = <STRING RESPONSE DATA> Format: YYYY-MM-DD HH:MM:SS
Example	MEAS:INFO:TEND? → "2014-07-17 11:26:21"
Note	Only possible if a measurement is in the memory and a measurement is not running.

18.3.3 MEASurement:INFO:MDURation?

Syntax	MEASurement:INFO:MDURation?
Description	This query returns the measurement duration.
Parameter	None.
Response	<duration> = <STRING RESPONSE DATA> Format: DD-HH:MM:SS
Example	MEAS:INFO:MDUR? → "01-00:03:23"
Note	Only possible if a measurement is in the memory.

18.3.4 MEASurement:INFO:STATus<Pt>?

Syntax	MEASurement:INFO:STATus<Pt>?
Description	This query returns the alarm/error status of all active interfaces and the state of the evaluation limits.
Parameter	<Pt> = Port number
Response	<status> = <STRING RESPONSE DATA> "No Trouble" "Alarms" "Errors" "Alarms and Errors" "N/A": Data not available <state> = <STRING RESPONSE DATA> "Disabled / Not Supported" "Below Limits" "Within Limits" "Exceed Limits" "N/A": Data not available
Example	MEAS:INFO:STAT1? → "Errors","Within Limits"
Note	Only possible if a measurement is in the memory.

18.3.5 MEASurement:INFO:IMIN?

Syntax	MEASurement:INFO:IMIN?
Description	This query returns the value by adding +1 to minimum index of statistics intervals.
Parameter	None
Response	<intervalindex> = <NR1 NUMERIC RESPONSE DATA>
Example	MEAS:INFO:IMIN? → 1
Note	If no intervals are available the NaN (section 1.6.1) is returned. This query is kept for maintenance purpose. Please see MEAS:SET:SEL for details.

18.3.6 MEASurement:INFO:IMAX?

Syntax	MEASurement:INFO:IMAX?
Description	This query returns the value by adding +1 to maximum index of statistics intervals.
Parameter	None
Response	<intervalindex> = <NR1 NUMERIC RESPONSE DATA>
Example	MEAS:INFO:IMAX? → 16
Note	If no intervals are available the NaN (section 1.6.1) is returned. This query is kept for maintenance purpose. Please see MEAS:SET:SEL for details.

18.3.7 MEASurement:INFO:IFIRst?

Syntax	MEASurement:INFO:IFIRst?
Description	This query returns the minimum index of statistics intervals.
Parameter	None
Response	<intervalindex> = <NR1 NUMERIC RESPONSE DATA>
Example	MEAS:INFO:IFIR? → 0
Note	If no intervals are available the NaN (section 1.6.1) is returned.

18.3.8 MEASurement:INFO:ILASt?

Syntax	MEASurement:INFO:ILASt?
Description	This query returns the maximum index of statistics intervals.
Parameter	None
Response	<intervalindex> = <NR1 NUMERIC RESPONSE DATA>
Example	MEAS:INFO:ILAS? → 15
Note	If no intervals are available the NaN (section 1.6.1) is returned.

18.4 Event Log

18.4.1 MEASurement:ELOG:MINimum?

Syntax	MEASurement:ELOG:MINimum?
Description	This query returns the first index present in the event log.
Parameter	None
Response	<index> = <NR1 NUMERIC RESPONSE DATA>
Example	MEAS:ELOG:MIN? → 1
Note	

18.4.2 MEASurement:ELOG:MAXimum?

Syntax	MEASurement:ELOG:MAXimum?
Description	This query returns the last or the latest index present in the event log.
Parameter	None
Response	<index> = <NR1 NUMERIC RESPONSE DATA>
Example	MEAS:ELOG:MAX? → 321
Note	

18.4.3 MEASurement:ELOG:FETCh?

Syntax	MEASurement:ELOG:FETCh? [<i><index></i> [, <i><count></i>]]
Description	This query returns a number of log entries starting from the specified index.
Parameters	<i><index></i> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =1, <i>MAXimum</i> =64000, <i>DEFault</i> =1
	<i><count></i> = <NUMERIC PROGRAM DATA> <i>MINimum</i> =1, <i>MAXimum</i> =400, <i>DEFault</i> =20
Response	The result is returned as a list of result items. A result item has the format: (<i><index></i> , <i><dateTime></i> , <i><portNo></i> , <i><type></i> , <i><source></i> , <i><description></i> , <i><countDuration></i>) The <i><portNo></i> field is '0' when the event is not related to a specific port. The <i><countDuration></i> is an error counter for errors and a duration in seconds for alarms.
Example	MEAS:ELOG:FETC? → (1,"2015-01-09 16:20:45",0,"Test","SYST","Started",0), (2,"2015-01-09 16:20:47",1,"Error","ETH","Pattern errors",5), (3,"2015-01-09 16:20:50",0,"Test","SYST","Stopped",0)
Note	The Cable Test and the No Frame (MT1100A or MT1040A) applications have no event log feature.

18.4.4 MEASurement:ELOG:FETCh:NEXT?

Syntax	MEASurement:ELOG:FETCh:NEXT?
Description	This query returns a number of log entries starting from where the previous :FETCh or :FETCh:NEXT stopped.
Parameters	None
Response	The response is similar to the response of the MEASurement:ELOG:FETCh? command.
Example	MEAS:ELOG:FETC:NEXT?
Note	

18.4.5 MEASurement:ELOG:EXPort

Syntax	MEASurement:ELOG:EXPort <i><file></i> [<i><delimiter></i>]
Description	This command writes the complete event log to the specified file in a CSV format. The file can be written to the internal disk or to a connected USB memory device. The specified delimiter is used as field delimiter. Lines are terminated with CR-LF (0x0d,0x10).
Parameters	<i><file></i> = <STRING PROGRAM DATA> The path and name of the file to store the data.
	<i><delimiter></i> = <CHARACTER PROGRAM DATA> COMMA: Use ',' as field separator. SEMICOLON: Use ';' as field separator. TABULATOR: Use a tabulator character (0x09) as field separator. <i>DEFault</i> = COMMA
Response	None.
Example	MEAS:ELOG:EXP "Internal/my-log-data.csv"
Note	Files must be saved to the Internal/ directory or a sub-directory hereof.
	When a USB storage device is mounted, files are stored via the Usb/ directory.

18.5 Result

18.5.1 MEASurement:RESult:SUMMARY?

Syntax	MEASurement:RESult:SUMMARY?
Description	This query returns the measurement result.
Response	<result> = <CHARACTER RESPONSE DATA> Pass Trouble Warning N/A
Example	MEAS:RES:SUMM? → Pass
Note	

18.5.2 MEASurement:RESult:SUMMARY:STATistics:PORT<Pt>?

Syntax	MEASurement:RESult:SUMMARY:STATistics:PORT<Pt>?
Description	This query returns the measurement result of statistics.
Response	<result> = <CHARACTER RESPONSE DATA> Pass Trouble Warning N/A
Example	MEAS:RES:SUMM:STAT:PORT1? → PASS
Note	

Appendix A

Example Scripts

This chapter shows various example scripts for all interfaces which are remote controllable.

A.1 Hints

To ensure that the instrument always start from a well defined state, it is in general a good idea to begin all scripts with the following command. It will terminate all application servers (virtual instruments).

```
*RST
```

A.2 2 Mbps BERT

This example runs a BER test. It requires an unbalanced cable to be connected from TX1 to RX1. It configures TX1 and sets RX1 to follow TX1. TX2 and RX2 are switched off. Stimuli is set to generate pattern errors with a rate of $1 \cdot 10^{-4}$. A Statistics measurement is set to run for 10 seconds and it finally reads the measured pattern errors from the total interval.

The expected execution of the last query is TMBP:RX1:IFET? (PATT) $\rightarrow$ (1024,0.0001)

```
*RST
INST:STAR TP-BERT-SDHPDH,1-PORT1

TMBP:TX1 ON
TMBP:TX1:CONN UNB; DINS OFF; CSO INT; FOFF 0; CODE HDB3; PCMF ON; CRC4 ON
TMBP:TX1:SAB #B11111,#B11111,#B11111,#B11111
TMBP:TX1:PATT PRBS11; PINV OFF; PTSL (1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16)
TMBP:TX1:UTSL #B01010101
TMBP:TX1:CAS OFF

TMBP:RX1:ENAB ON; FOLL TX

TMBP:STIM:TX1:ERR PATT; EINS B04; EBL 1
SYST:WAIT:DUR 3

MEAS:SET:ILEN 5S; STAR IMM; STOP DUR; SDUR 0,0,0,10
MEAS:STAR
SYST:WAIT:IDLE

MEAS:SET:SEL TOT
TMBP:RX1:IFET? (PATT)
MEAS:SET:SEL 0
TMBP:RX1:IFET? (PATT)
MEAS:SET:SEL 1
TMBP:RX1:IFET? (PATT)

SYST:ERR?
INST:TERM
```

A.3 2 Mbps Status & Stimuli

This example demonstrates status and stimuli. It requires 2Mbps interface and a loopback cable from TX1 to RX1. The functionality is as following:

- reset to factory default, enable device dependent status and clear status
- setup interface and read status
- clear status, set AIS alarm and read status
- clear status, insert one pattern error and read status

Input script	→	Output
<pre> *RST INST:STAR TP-BERT-SDHPDH,1-PORT1 STAT:PRES STAT:PORT:ENAB 1-PORT1,1; PTR 1-PORT1,1; NTR 1-PORT1,0 TMBP:TX1 ON; RX1 ON TMBP:RX1:FOLL TX SYST:WAIT:DUR 3 *CLS *STB?; STAT:PORT:EVEN? 1-PORT1; COND? 1-PORT1 STAT:INT:PORT1:EVEN?; COND? TMBP:STAT:RX1:AES:EVEN?; COND? TMBP:STAT:RX1:ALAR:EVEN?; COND? TMBP:STIM:TX1:ALAR AIS SYST:WAIT:DUR 2 *STB?; STAT:PORT:EVEN? 1-PORT1; COND? 1-PORT1 STAT:INT:PORT1:EVEN?; COND? TMBP:STAT:RX1:AES:EVEN?; COND? TMBP:STAT:RX1:ALAR:EVEN?; COND? TMBP:STIM:TX1:ALAR NAL SYST:WAIT:DUR 2 *CLS TMBP:STIM:TX1:EINS MAN; EBL 1; ERR PATT SYST:STIM:INS SYST:WAIT:DUR 3 STAT:INT:PORT1:EVEN?; COND? TMBP:STAT:RX1:AES:EVEN?; COND? TMBP:STAT:RX1:ERR:EVEN?; COND? SYST:ERR? INST:TERM </pre>		<pre> 0;0;0 0;0 0;0 0;0 1;1;1 1;1 1;1 64;64 1;1 2;2 2;0 0,"No error" </pre>

A.4 E3 BERT

This example runs a BER test. It requires a cable to be connected from TX1 to RX1. It configures TX1 and sets RX1 to follow TX1. TX2 and RX2 are switched off. Stimuli is set to generate pattern errors with a rate of $1 \cdot 10^{-3}$. A Statistics measurement is set to run for 10 seconds and it finally reads the measured pattern errors from the total interval.

The expected execution of the last query is `TMBP:RX1:IFET? (PATT) → (343680,0.001)`

```
*RST
INST:STAR TP-BERT-SDHPDH,1-PORT1

*CLS
STAT:PRES

E3:TX1:ENAB ON
E3:TX1:CSO INT
E3:TX1:FOFF 0
E3:TX1:PCMF OFF
E3:TX1:PATT PRBS11
E3:TX1:PINV ON

E3:RX1:ENAB ON
E3:RX1:FOLL TX

E3:STIM:TX1:ERR PATT
E3:STIM:TX1:EINS B03
E3:STIM:TX1:EBL 1

MEAS:SET:ILEN 5S
MEAS:SET:STAR IMM
MEAS:SET:STOP DUR
MEAS:SET:SDUR 0, 0, 0, 10
MEAS:STAR

SYST:WAIT:IDLE

MEAS:SET:SEL TOT
E3:RX1:IFET? (PATT)
```

A.5 E4 BERT

This example runs a BER test. It requires a cable to be connected from TX1 to RX1. It configures TX1 and sets RX1 to follow TX. Stimuli is set to generate pattern errors with a rate of $1 \cdot 10^{-3}$. A Statistics measurement is set to run for 11 seconds and it finally reads the measured pattern errors and pattern slips from the total interval.

The expected execution of the last two queries are `E4:RX<Rx>:IFET? (PATT) → (1392640,0.001)`

```
*RST
INST:STAR TP-BERT-SDHPDH,1-PORT1,1-PORT2
```

```
*CLS
STAT:PRES
```

```
E4:TX:ENAB ON
E4:TX:CSO INT
E4:TX:FOFF 0
E4:TX:PCMF OFF
E4:TX:PATT PRBS11
E4:TX:PINV ON
```

```
E4:RX1:ENAB ON
E4:RX1:FOLL TX
```

```
E4:RX2:ENAB ON
E4:RX2:FOLL TX
```

```
E4:STIM:TX:ERR PATT
E4:STIM:TX:EINS B03
E4:STIM:TX:EBL 1
```

```
MEAS:SET:ILEN 5S
MEAS:SET:STAR IMM
MEAS:SET:STOP DUR
MEAS:SET:SDUR 0, 0, 0, 11
MEAS:STAR
```

```
SYST:WAIT:IDLE
```

```
MEAS:SET:SEL TOT
E4:RX1:IFET? (PATT,PSL)
E4:RX2:IFET? (PATT,PSL)
```

```
SYST:ERR?
INST:TERM
```

A.6 SDH BERT

This example runs a BER test. It requires a cable to be connected from TX1 to RX1. It configures TX1 and sets RX1 to follow TX. Stimuli is set to generate pattern errors with a rate of $1 \cdot 10^{-7}$. A Statistics measurement is set to run for 10 seconds and it finally reads the measured pattern errors from the total interval.

The expected execution of the last two queries are `SDH:RX<Rx>:IFET? (ERRPRBS) → (150,1E-07)`

```
*RST
INST:STAR TP-BERT-SDHPDH,1-PORT1,1-PORT2

SDH:TX:ELEC NORM

SDH:RX1:INT ELEC
SDH:RX1:FOLL TX

SDH:RX2:INT ELEC
SDH:RX2:FOLL TX

SDH:STIM:TX:ERR PRBS
SDH:STIM:TX:EINS B07
SDH:STIM:TX:EBL 1

MEAS:SET:ILEN 5S
MEAS:SET:STAR IMM
MEAS:SET:STOP DUR
MEAS:SET:SDUR 0, 0, 0, 10
MEAS:STAR

SYST:WAIT:IDLE

MEAS:SET:SEL TOT
SDH:RX1:IFET? (ERRPRBS)
SDH:RX2:IFET? (ERRPRBS)

SYST:ERR?
INST:TERM
```

A.7 Ethernet BERT

This example runs a BER test. It requires a cable from Port 1 to Port 2 (PORT1 to PORT2). It configures PORT1 and set PORT2 to follow PORT1. Stimuli is set to generate pattern errors with a rate of $1 \cdot 10^{-7}$. A Statistics measurement is set to run for 10 seconds and it finally reads the measured pattern errors from the total interval.

The expected execution of the last two queries are approximately `ETH:PORT<Pt>:IFET? (BPE) → (20,1E-07)`.

```
*RST
INST:STAR TP-BERT-ETH,1-PORT1,1-PORT2

ETH:PORT1:MODE ANEG
ETH:PORT2:MODE ANEG
ETH:PORT1:ANEG (100MF)
ETH:PORT2:ANEG (100MF)
SYST:WAIT:DUR 4

ETH:FOLL:STR ON
ETH:FOLL:TRAF ON

ETH:PORT1:STR1:PAYL PRBS11

ETH:PORT1:TRAF:DMOD CONT
ETH:PORT1:TRAF:STR1:LL:PROF CONS
ETH:PORT1:TRAF:STR1:LL 100 PCT

ETH:PORT1:STIM:ERR PRBS
ETH:PORT2:STIM:ERR PRBS
ETH:PORT1:STIM:EINS BE7
ETH:PORT2:STIM:EINS BE7

MEAS:SET:ILEN 5S
MEAS:SET:STAR IMM
MEAS:SET:STOP DUR
MEAS:SET:SDUR 0, 0, 0, 10

ETH:PORT1:TRAF:GEN:STAR
ETH:PORT2:TRAF:GEN:STAR
SYST:WAIT:DUR 2

MEAS:STAR
SYST:WAIT:IDLE

ETH:PORT1:TRAF:GEN:STOP
ETH:PORT2:TRAF:GEN:STOP

MEAS:SET:SEL TOT
ETH:PORT1:IFET? (BPE)
ETH:PORT2:IFET? (BPE)

SYST:ERR?
INST:TERM
```

A.8 Ethernet Discovery

This section describes how to create Discovery Test programs. To discover the Network Masters, it is necessary to enable the Allow In-band control function of the application running on the target Network Master(s).

1. Specify the search type and perform a measurement.

```
ETH:DISC:SET:TYPE MULTI
MEAS:STAR
SYST:WAIT:IDLE
```

2. Query the number of the Network Masters discovered over a network.

```
ETH:DISC:RES:NREQ?
```

3. Query the detailed information about the Network Master where you want to switch the application. For example, the following command queries the name of the Network Master No.1.

```
ETH:DISC:RES:SREQ:DET? 1,(NICN)
```

4. Specify the application to be switched and its settings on the Application Change function. For example, the following commands specify RFC2544 as the application to be switched, and specify the each setting required for the measurement.

```
ETH:DISC:CAPP:SAPP RFC
ETH:DISC:CAPP:TARG:MAC:SOUR "00-50-C2-35-D2-EF"
ETH:DISC:CAPP:TARG:IPV4:SOUR "172.29.2.36"
ETH:DISC:CAPP:TARG:IPV4:DEST "172.29.2.37"
```

5. Apply the specified application to the target Network Master. For example, the following command applies the specified application to the Network Master No.1.

```
ETH:DISC:CAPP 1
```

6. Update the specified settings to the target Network Master, and query the result of updating repeatedly until “SUCCESS” is returned. For example, the following commands update information about the Network Master No.1 and query the result of updating.

```
ETH:DISC:RES:UPD 1
ETH:DISC:RES:UPD:RES?
```

7. Confirm whether the application has switched to the specified one. For example, the following command queries the application name of the Network Master No.1.

```
ETH:DISC:RES:SREQ:DET? 1,(CAPP)
```


A.9 Fibre Channel BERT

This example runs a BER test. It requires a cable from PORT1 to PORT2. It configures PORT1 and set PORT2 to follow PORT1. Stimuli is set to generate pattern errors with a rate of $1 \cdot 10^{-7}$. A Statistics measurement is set to run for 10 seconds and it finally reads the measured pattern errors from the total interval.

The expected execution of the last two queries are approximately `FCH:PORT<Pt>:IFET? (PERR) → (567,1E-07)`.

```
*RST
INST:STAR TP-BERT-FC,1-PORT1,1-PORT2

FCH:PORT1:MODE FC400
FCH:PORT2:MODE FC400

FCH:PORT1:TOP PTP; :FCH:PORT1:PTP:LOG ON
FCH:PORT2:TOP PTP; :FCH:PORT2:PTP:LOG ON
FCH:PORT1:DEST:LOG
SYST:WAIT:DUR 2

FCH:PORT2:FOLL:FRAM 1
FCH:PORT1:FRAM:FRAM FT1
FCH:PORT1:FRAM:CONT PRBS23

FCH:PORT2:FOLL:GEN 1; STR 1
FCH:PORT1:TRAF:STR:LL 50.0

FCH:PORT1:STIM:ERR BIT; EINS BE7; EBL 1
FCH:PORT2:STIM:ERR BIT; EINS BE7; EBL 1

FCH:TRAF:GEN:STAR
SYST:WAIT:DUR 2

MEAS:SET:ILEN 5S
MEAS:SET:STAR IMM
MEAS:SET:STOP DUR
MEAS:SET:SDUR 0, 0, 0, 10
MEAS:STAR

SYST:WAIT:IDLE

MEAS:SET:SEL TOT
FCH:PORT1:IFET? (BPE)
FCH:PORT2:IFET? (BPE)

SYST:ERR?

INST:TERM
```

A.10 OTN BERT

This example runs a BER test. It requires a cable to be connected from TX1 to RX1. It configures TX1 and sets RX1 to follow TX. Stimuli is set to generate pattern errors with a rate of $1 \cdot 10^{-7}$. A Statistics measurement is set to run for 10 seconds and it finally reads the measured pattern errors from the total interval.

The expected execution of the last two queries are OTN:RX<Rx>:IFET? (PRBSBIT) → (9995,1E-07)

```
*RST
INST:STAR TP-BERT-OTN,1-PORT1,1-PORT2
```

```
OTN:TX1:ENAB NORM
OTN:TX1:MAPP:OUTP OTU2
OTN:TX1:MAPP:CSIG PRBS
```

```
OTN:TX2:FOLL TX1
```

```
OTN:RX1:INT SFP
OTN:RX1:FOLL TX
```

```
OTN:RX2:INT SFP
OTN:RX2:FOLL TX
```

```
OTN:STIM:TX1:TYPE AEIN
OTN:STIM:TX1:AEIN:LEV ODU2
OTN:STIM:TX1:AEIN:TYPE PRBSBIT
OTN:STIM:TX1:AEIN:INS RATE
OTN:STIM:TX1:AEIN:RATE R1E7
```

```
OTN:STIM:TX2:TYPE AEIN
OTN:STIM:TX2:AEIN:LEV ODU2
OTN:STIM:TX2:AEIN:TYPE PRBSBIT
OTN:STIM:TX2:AEIN:INS RATE
OTN:STIM:TX2:AEIN:RATE R1E7
```

```
MEAS:SET:ILEN 5S
MEAS:SET:STAR IMM
MEAS:SET:STOP DUR
MEAS:SET:SDUR 0, 0, 0, 10
MEAS:STAR
```

```
SYST:WAIT:IDLE
```

```
MEAS:SET:SEL TOT
OTN:RX1:IFET? (PRBSBIT)
OTN:RX2:IFET? (PRBSBIT)
```

```
SYST:ERR?
INST:TERM
```

A.11 CPRI BERT

This example runs a BER test. It requires a cable from PORT1 to PORT2. It configures PORT1 and set PORT2 to follow PORT1. Stimuli is set to generate pattern errors with a rate of $1 \cdot 10^{-4}$. A Statistics measurement is set to run for 10 seconds and it finally reads the measured pattern errors from the total interval.

The expected execution of the last two queries are approximately CPRI:PORT<Pt>:IFET? (PE) → (7372800,0.0001).

```
*RST
INST:STAR TP-BERT-CPRI,1-PORT1,1-PORT2

CPRI:PORT1:MODE NORM
CPRI:PORT2:MODE NORM

CPRI:PORT1:LRAT 9830M
CPRI:PORT2:LRAT 9830M

CPRI:PORT1:CONT LINK
CPRI:PORT2:CONT LINK
SYST:WAIT:DUR 2

CPRI:PORT2:SET:FOLL ON
CPRI:PORT1:PATT PRBS15

CPRI:PORT1:STIM:ERR PE; EINS B04
CPRI:PORT2:STIM:ERR PE; EINS B04

MEAS:SET:ILEN 5S
MEAS:SET:STAR IMM
MEAS:SET:STOP DUR
MEAS:SET:SDUR 0, 0, 0, 10
MEAS:STAR

SYST:WAIT:IDLE

MEAS:SET:SEL TOT
CPRI:PORT1:IFET? (PE)
CPRI:PORT2:IFET? (PE)

SYST:ERR?

INST:TERM
```

A.12 Sending an HTTP GET request

This example sends an HTTP GET request and receives a response.

Input script	→	Output
<pre>SYST:NCON:COM:AUTH:TYPE BASIC SYST:NCON:COM:BAS "id","password" SYST:NCON:COM:SET "https://sample.net/config?argument=sample" SYST:NCON:COM:LRET:RST? SYST:WAIT:DUR 5 SYST:NCON:COM:LRET:RST? SYST:NCON:COM:LRET:ERR? SYST:NCON:COM:LRET:RRES?</pre>		<pre>0 1 0,"No error." {"key","Value"}</pre>

A.13 Setting parameters for uploading scenario results

This example sets parameters for uploading scenario results.

```
SYST:NCON:COM:AUTH:TYPE BASIC  
SYST:NCON:COM:BAS "id","password"  
SYST:NCON:COM:TUR "https://sample.net/upload"
```

Abbreviations

1DM	One-way delay measurement
AISL	Line Alarm Indication Signal
AISP	STS Path Alarm Indication Signal
AISV	Virtual Tributary Alarm Indication Signal
ALS	Alarm Seconds
AMI	Alternate Mark Inversion
APS	Automatic Protection Switching
ARP	Address Resolution Protocol
AU	Administrative Unit
AU-AIS	Administrative Unit Alarm Indication Signal
AU-LOP	Administrative Unit Loss Of Pointer
AU-NDF	Administrative Unit New Data Flag
AVT	Available Time
B-TAG	Backbone VLAN tag
B8ZS	Bipolar 8-zero substitution (<i>code with a maximum of 7 consecutive zeroes</i>)
BBE	Background Block Error
BDP	Bandwidth Delay Product
BER	Bit Error Ratio
BERT	Bit Error Rate Test
BIS	Bringing Into Service
BPV	Bipolar Violation
C-bits	Bit stuffing control bits
CAS	Channel Associated Signaling
CCM	Continuity Check Message
CRC	Cyclic Redundancy Check
DEI	Drop Eligible Indicator
DMM	Delay Measurement Message
DNS	Domain Name System
DSCP	Differentiated Services Code Point
EFS	Error Free Seconds

ABBREVIATIONS

EoMPLS	Ethernet over MPLS
ES	Errored Second
ESF	Extended superframe
ESMC	Ethernet Synchronization Messaging Channel
EXM	Experimental OAM Message
EXZ	Excessive Zeroes
F-bits	Framing bits
FDL	Facility Data Link
fps	frames per second
fps	frames per second
HDB3	High Density Bipolar 3 (<i>code with a maximum of 3 consecutive zeroes</i>)
HP	High-order Path
HP-PLM	High-order Path Payload Label Mismatch
HP-RDI	High-order Path Remote Defect Indicator
HP-REI	High-order Path Remote Error Indication
HP-TIM	High-order Path Trace Identifier Mismatch
HP-UNEQ	High-order Path Unequipped
HR	Hypothetical Reference allocation
IEEE	Institute of Electrical and Electronic Engineers
IFG	InterFrame Gap
ILA	In-Lane Alignment
IP	Internet Protocol
ISDN	Integrated Services Digital Network
LAN	Local Area Network
LAN	Local Area Network
LBM	Loop-back Message
LBR	Loop-back Response
LFS	Link Fault Signaling
LMM	Loss Measurement Message
LMP	Link Management Protocol
LOF	Loss Of Frame
LOMV	Virtual Tributary Loss Of Multiframe
LOPP	STS Path Loss Of Pointer
LOPV	Virtual Tributary Loss Of Pointer
LOR	Loss Of Recovery
LOS	Loss Of Signal

LP	Low-order Path
LP-PLM	Low-order Path Payload Label Mismatch
LP-RDI	Low-order Path Remote Defect Indicator
LP-REI	Low-order Path Remote Error Indication
LP-TIM	Low-order Path Trace Identifier Mismatch
LP-UNEQ	Low-order Path Unequipped
LSS	Loss of Signal Synchronization
LTM	Link Trace Message
MAC	Media Access Control
Mbps	Mega bit per second
MCC	Maintenance Communications Channel
ME	Maintenance Entity
MEG	Maintenance Entity Group
MEP	Management End Point
MF	Multi Frame
MFAS	Multi Frame Alignment Signal
MiM	MAC-in-MAC
MPLS	Multiprotocol Label Switching
MS	Multiplex Section
MS-AIS	Multiplex Section Alarm Indication Signal
MS-RDI	Multiplex Section Remote Defect Indication
MS-REI	Multiplex Section Remote Error Indication
MSS	Maximum Segment Size
MTU	Maximum Transmission Unit
MUX	Multiplex
NDF	New Data Flag
NFAS	Non Frame Alignment Signal
NTP	Network Time Protocol
OAM	Operation, Administration and Maintenance
OC-N	Optical Carrier at level N (N = 1, 3, 12, 24, 48, 192 or 768)
OLA	Out of Lane Alignment
OOF	Out Of Frame
OOR	Out Of Recovery
OUI	Organizationally Unique Identifier
P-bits	Parity bits
PBB	Provider Backbone Bridges, known as "MAC-in-MAC" (MiM)

ABBREVIATIONS

PCP	Priority Code Point
PDH	Plesiochronous Digital Hierarchy
PLMP	High-order Path Payload Label Mismatch
PLMV	Low-order Path Payload Label Mismatch
POH	Path Overhead
ppb	parts per billion
PRBS	Pseudo Random Binary Sequence
QL	Quality Level
QRSS	Quasi Random Signal Source
RAI	Remote Alarm Indication
RDI	Remote Defect Indication
RDIL	Line Remote Defect Indication
RDIP	High-order Path Remote Defect Indicator
RDIV	Low-order Path Remote Defect Indicator
REI	Remote Error Indication
REIL	Line Remote Error Indication
REIP	STS Path Remote Error Indication
REIV	Virtual Tributary Remote Error Indication
RPM	Real-time Performance Monitoring
RTT	Round-Trip Time
Rx	Receiver
SDH	Synchronous Digital Hierarchy
SES	Severely Errored Second
SF	Superframe
SID	Backbone Service Instance Identifier
SLM	Synthetic (frame-) Loss Measurement
SOH	Section Overhead
SONET	Synchronous Optical NETwork
SSF	Server Signal Fail
STAT	Status
STL	Synchronous Transport Lane
STM	Synchronous Transport Module
STS	Synchronous Transport Signal
TAI	Time, Atomic International
TC	Tandem Connection
TC-AIS	Tandem Connection Alarm Indication Signal

TC-BIP2	Tandem Connection Bit Interleaved Parity-2
TC-IEC	Tandem Connection Incoming Error Count
TC-LTC	Tandem Connection Loss of Tandem Connection
TC-ODI	Tandem Connection Outgoing Defect Indicator
TC-OEI	Tandem Connection Outgoing Error Indication
TC-RDI	Tandem Connection Remote Defect Indicator
TC-REI	Tandem Connection Remote Error Indication
TC-TIM	Tandem Connection Trace Identifier Mismatch
TC-UNEQ	Tandem Connection Unequipped
TCM	Tandem Connection Monitoring
TCP	Transmission Control Protocol
TIM	Trace Identifier Mismatch
TIMP	High-order Path Trace Identifier Mismatch
TIMV	Low-order Path Trace Identifier Mismatch
TLV	Type, Length, Value encoding
TOH	Transport Overhead
TP	Tributary Port
TRAU	Transcoder and Rate Adaptation Unit
TS	Tributary Slot
TTL	Time To Live (hop limit)
TU	Tributary Unit
TU-AIS	Tributary Unit Alarm Indication Signal
TU-LOM	Tributary Unit Loss Of Multiframe
TU-LOP	Tributary Unit Loss Of Pointer
TU-NDF	Tributary Unit New Data Flag
TUG	Tributary Unit Group
Tx	Transmitter
UAT	Unavailable Time
UCA	Use Customer Address
UDP	User Datagram Protocol
UNAV	Unavailable
UNEQP	High-order Path Unequipped
UNEQV	Low-order Path Unequipped
UTC	Universal Time Coordinated
VC	Virtual Container
VLAN	Virtual Local Area Network

ABBREVIATIONS

VSM	Vendor Specific OAM Message
VT	Virtual Tributary
WAN	Wide Area Network
WWN	Worldwide Name