

Waveform File for Short Range Wireless Operation Manual

15th Edition

- For safety and warning information, please read this manual before attempting to use the equipment.
- Additional safety and warning information is provided within the MT8870A Universal Wireless Test Set Operation Manual. Please also refer to it before using the equipment.
- Keep this manual with the equipment.

ANRITSU CORPORATION

Safety Symbols

To prevent the risk of personal injury or loss related to equipment malfunction, Anritsu Corporation uses the following safety symbols to indicate safety-related information. Ensure that you clearly understand the meanings of the symbols BEFORE using the equipment. Some or all of the following symbols may be used on all Anritsu equipment. In addition, there may be other labels attached to products that are not shown in the diagrams in this manual.

Symbols used in manual



DANGER

This indicates a very dangerous procedure that could result in serious injury or death if not performed properly.



WARNING

This indicates a hazardous procedure that could result in serious injury or death if not performed properly.



CAUTION

This indicates a hazardous procedure or danger that could result in light-to-severe injury, or loss related to equipment malfunction, if proper precautions are not taken.

Safety Symbols Used on Equipment and in Manual

The following safety symbols are used inside or on the equipment near operation locations to provide information about safety items and operation precautions. Ensure that you clearly understand the meanings of the symbols and take the necessary precautions BEFORE using the equipment.



This indicates a prohibited operation. The prohibited operation is indicated symbolically in or near the barred circle.



This indicates an obligatory safety precaution. The obligatory operation is indicated symbolically in or near the circle.



This indicates a warning or caution. The contents are indicated symbolically in or near the triangle.



This indicates a note. The contents are described in the box.



These indicate that the marked part should be recycled.

Waveform File for Short Range Wireless
Operation Manual

21 August 2012 (First Edition)

14 February 2023 (15th Edition)

Copyright © 2012-2023, ANRITSU CORPORATION.

All rights reserved. No part of this manual may be reproduced without the prior written permission of the publisher.

The operational instructions of this manual may be changed without prior notice.

Printed in Japan

Equipment Certificate

Anritsu Corporation guarantees that this equipment was inspected at shipment and meets the published specifications.

Anritsu Warranty

- During the warranty period, Anritsu Corporation will repair or exchange this software free-of-charge if it proves defective when used as described in the operation manual.
- The warranty period is 6 months from the purchase date.
- The warranty period after repair or exchange will remain 6 months from the original purchase date, or 30 days from the date of repair or exchange, depending on whichever is longer.
- This warranty does not cover damage to this software caused by Acts of God, natural disasters, and misuse or mishandling by the customer.

In addition, this warranty is valid only for the original equipment purchaser. It is not transferable if the equipment is resold.

Anritsu Corporation shall assume no liability for damage or financial loss of the customer due to the use of or a failure to use this equipment, unless the damage or loss is caused due to Anritsu Corporation's intentional or gross negligence.

Anritsu Corporation Contact

In the event of this equipment malfunctions, please contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

Also, the Anritsu website provides you with contact information and a contact form.

Notes On Export Management

- We assume no responsibility if this product is re-exported and used without our approval since it may not comply with the safety standards, etc., of specific countries.
- This product and its manuals may require an Export License/Approval by the Government of the product's country of origin for re-export from your country.

Before re-exporting the product or manuals, please contact us to confirm whether they are export-controlled items or not.

For more details, visit

<https://www.anritsu.com/support/export-procedures>.

When you dispose of the products or manuals subject to export control, they must be physically destroyed or shredded so as not to be unlawfully used for military purpose.

Software End-User License Agreement (EULA)

Please carefully read and accept this Software End-User License Agreement (hereafter this EULA) before using (includes executing, copying, installing, registering, etc.) this Software (includes programs, databases, scenarios, etc., used to operate, set, etc., Anritsu electronic equipment, etc.). By using this Software, you shall be deemed to have agreed to be bound by the terms of this EULA, and Anritsu Corporation (hereafter Anritsu) hereby grants you the right to use this Software with the Anritsu specified equipment (hereafter Equipment) for the purposes set out in this EULA.

Article 1. Grant of License and Limitations

1. You may not sell, transfer, rent, lease, lend, disclose, sublicense, or otherwise distribute this Software to third parties, whether or not paid therefor.
2. You may make one copy of this Software for backup purposes only.
3. You are not permitted to reverse engineer, disassemble, decompile, modify or create derivative works of this Software.
4. This EULA allows you to install one copy of this Software on one piece of Equipment.

Article 2. Disclaimers

To the extent not prohibited by law, in no event shall Anritsu be liable for direct, or any incidental, special, indirect or consequential damages whatsoever, including, without limitation, damages for loss of profits, loss of data, business interruption or any other commercial damages or losses, and damages claimed by third parties, arising out of or related to your use or inability to use this Software, unless the damages are caused due to Anritsu's intentional or gross negligence.

Article 3. Limitation of Liability

1. If a fault (bug) is discovered in this Software, making this Software unable to operate as described in the operation manual or specifications even though you have used this Software as described in the manual, Anritsu shall at its own discretion, fix the bug, or replace the software, or suggest a workaround, free-of-charge, provided, however, that the faults caused by the following items and any of your lost or

damaged data whatsoever shall be excluded from repair and the warranty.

- i) If this Software is deemed to be used for purposes not described in the operation manual or specifications.
 - ii) If this Software has been used in conjunction with other non-Anritsu-approved software.
 - iii) If this Software or the Equipment has been modified, repaired, or otherwise altered without Anritsu's prior approval.
 - iv) For any other reasons out of Anritsu's direct control and responsibility, such as but not limited to, natural disasters, software virus infections, or any devices other than this Equipment, etc.
2. Expenses incurred for transport, hotel, daily allowance, etc., for on-site repairs or replacement by Anritsu engineers necessitated by the above faults shall be borne by you.
 3. The warranty period for faults listed in Section 1 of this Article shall be either 6 months from the date of purchase of this Software or 30 days after the date of repair or replacement, whichever is longer.

Article 4. Export Restrictions

You shall not use or otherwise export or re-export directly or indirectly this Software except as authorized by the laws and regulations of Japan and the United States, etc. In particular, this Software shall not be exported or re-exported (a) into any Japan or US embargoed countries or (b) to anyone restricted by the Japanese export control regulations, or the US Treasury Department's list of Specially Designated Nationals or the US Department of Commerce Denied Persons List or Entity List. In using this Software, you warrant that you are not located in any such embargoed countries or on any such lists. You also agree that you will not use or otherwise export or re-export this Software for any purposes prohibited by the Japanese and US laws and regulations, including, without limitation, the development, design and manufacture or production of missiles or nuclear, chemical or biological weapons of mass destruction, and conventional weapons.

Article 5. Change of Terms

Anritsu may change without your approval the terms of this EULA if the changes are for the benefit of general customers, or are reasonable in light of the purpose of this EULA and circumstances of the changes. At the time of change, Anritsu will inform you of those changes and its effective date, as a general rule 45 days, in advance on its website, or in writing or by e-mail.

Article 6. Termination

1. Anritsu may terminate this EULA immediately if you violate any conditions described herein. This EULA shall also be terminated immediately by Anritsu if there is any good reason that it is deemed difficult to continue this EULA, such as your violation of Anritsu copyrights, patents, etc. or any laws and ordinances, or if it turns out that you belong to an antisocial organization

or has a socially inappropriate relationship with members of such organization.

2. You and Anritsu may terminate this EULA by a written notice to the other party 30 days in advance.

Article 7. Damages

If Anritsu suffers any damages or loss, financial or otherwise, due to your violation of the terms of this EULA, Anritsu shall have the right to seek proportional damages from you.

Article 8. Responsibility after Termination

Upon termination of this EULA in accordance with Article 6, you shall cease all uses of this Software immediately and shall as directed by Anritsu either destroy or return this Software and any backup copies, full or partial, to Anritsu.

Article 9. Negotiation for Dispute Resolution

If matters of interpretational dispute or items not covered under this EULA arise, they shall be resolved by negotiations in good faith between you and Anritsu.

Article 10. Governing Law and Court of Jurisdiction

This EULA shall be governed by and interpreted in accordance with the laws of Japan without regard to the principles of the conflict of laws thereof, and any disputes arising from or in relation to this EULA that cannot be resolved by negotiation described in Article 9 shall be subject to and be settled by the exclusive agreed jurisdiction of the Tokyo District Court of Japan.

Revision History:

February 29th, 2020
December 17th, 2021

Cautions Against Computer Virus Infection

- Copying files and data
Only files that have been provided directly from Anritsu or generated using Anritsu equipment should be copied to the instrument.
All other required files should be transferred by means of USB flash drive or CompactFlash media after undergoing a thorough virus check.
- Adding software
Do not download or install software that has not been specifically recommended or licensed by Anritsu.
- Network connections
Ensure that the network has sufficient anti-virus security protection in place.


About This Manual

This manual mainly describes the operation of the Waveform File for Short Range Wireless (SRW).

Products relevant to the MT8870A Universal Wireless Test Set include:

- MT8870A Universal Test Set (main unit)
- Modules installed in the MT8870A
- Application software installed in the MT8870A
- Control software installed in a PC to control the MT8870A remotely

These products are referred to as the "Universal Wireless Test Set Series". The operation manuals of the Universal Wireless Test Set Series consist of separate documents for the main unit, module(s), application software, and control software, as shown below.  indicates this manual.

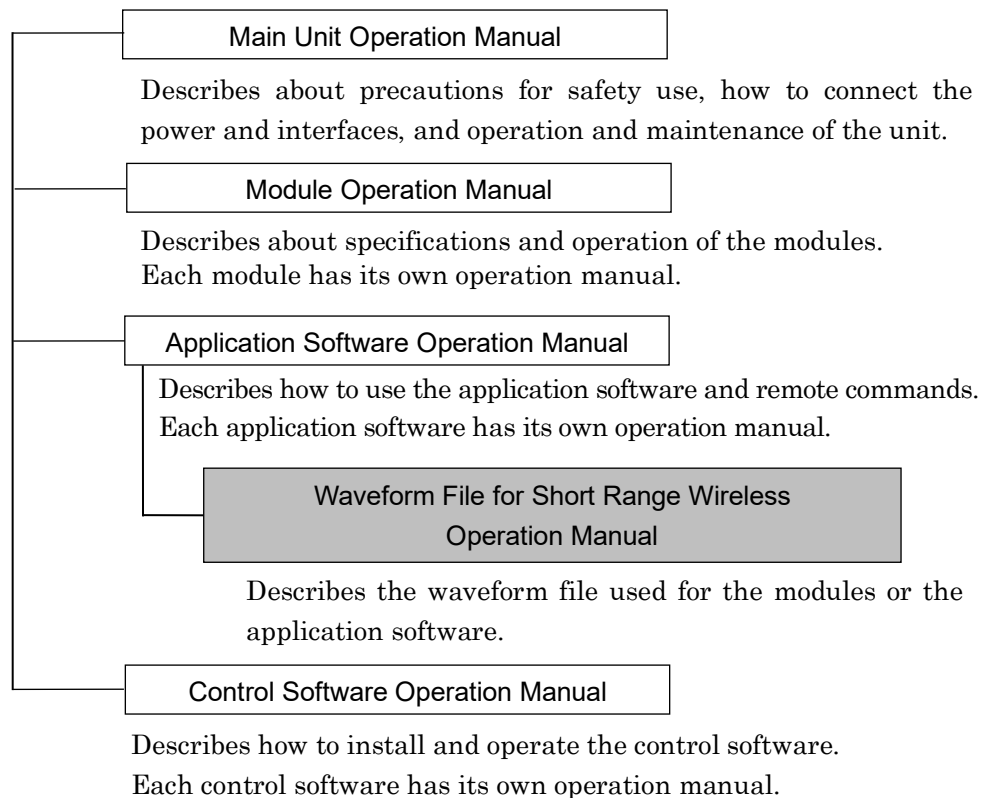

Convention Used in This Manual

Except where there is a good reason to do otherwise, this manual assumes the use of MT8870A and MU887000A.

Note that the descriptions in this manual also apply to MT8872A, MU887001A, or MU887002A. MU887000A/01A means the MU887000A or MU887001A.

Additionally, the Anritsu management code of the options described in this manual is “0” unless there is a reason.

The option number: The option number is indicated by three digits.

MU88700XA- x x x

 


Table of Contents

About This Manual	I
Chapter 1 General Information.....	1-1
1.1 About this Manual.....	1-2
1.2 SRW Receiver Testing	1-3
Chapter 2 Using the CombiView VSG Tool.....	2-1
2.1 Receiver Testing	2-2
2.2 Configuring and Running Receiver Tests	2-3
2.3 Calculating the Error Rate.....	2-4
Chapter 3 Using Remote Commands.....	3-1
3.1 Overview	3-2
3.2 Calculating the Error Rate.....	3-3
Chapter 4 Waveform Files	4-1
4.1 802.11a/b/g/n Waveform Patterns (MV887030A)	4-2
4.2 802.11ac Waveform Patterns (MV887031A)	4-5
4.3 802.11p Waveform Patterns (MV887032A).....	4-7
4.4 802.11ax Waveform Patterns (MV887033A)	4-8
4.5 802.11be Waveform Patterns (MV887034A).....	4-10
4.6 WLAN Packet Definition	4-12
4.7 <i>Bluetooth</i> Waveform Patterns (MV887040A).....	4-13
4.8 <i>Bluetooth</i> Packet Definition	4-16
4.9 Zero Waveform Patterns.....	4-17
Appendix A Specifications	A-1

1

2

3


4

Appendix

Chapter 1 General Information

This chapter outlines the short range wireless (SRW) waveform files.

1.1	About this Manual.....	1-2
1.2	SRW Receiver Testing	1-3

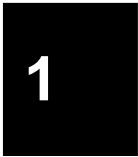

1.1 About this Manual

This manual provides details of the short range wireless (SRW) waveforms for use with the MT8870A Universal Wireless Test Set.

The waveform files can be transmitted from the MT8870A to the device under test (DUT) for use in SRW receiver testing.

There are following SRW waveform packages:

- WLAN 802.11a/b/g/n (MV887030A)
- WLAN 802.11ac (MV887031A)
- WLAN 802.11p (MV887032A)
- WLAN 802.11ax (MV887033A)
- WLAN 802.11be (MV887034A)
- *Bluetooth* BR/EDR/LE (MV887040A,
MV887040A-001 (in case of more than 37 bytes payload))
- *Bluetooth* 2LE (MV887040A, MV887040A-002,
MV887040A-001 (in case of more than 37 bytes payload))
- *Bluetooth* LR (MV887040A, MV887040A-003,
MV887040A-001 (in case of more than 37 bytes payload))
- *Bluetooth* LE AoA/AoD (MV887040A, MV887040A-002, MV887040A-004,
MV887040A-001 (in case of more than 37 bytes payload))

Each package contains a selection of waveform files that have been pre-configured at differing standards, data rates, and modulation patterns.

1.2 SRW Receiver Testing

Waveform file selection and transmission to the DUT can be performed in two ways:

- Using Vector Signal Generator (VSG) tool within CombiView. Refer to chapter 2 for details.
- Using remote SCPI commands to directly control the vector signal generator application within the MT8870A module. Refer to chapter 3 for details.

In both cases, the receiver sensitivity of the DUT is calculated using the chipset vendor's host control software to read the number of received packets.

Chapter 2 Using the CombiView VSG Tool

This chapter explains Configuring and Running Receiver Tests, and the calculating the error rate.

2.1	Receiver Testing	2-2
2.2	Configuring and Running Receiver Tests	2-3
2.3	Calculating the Error Rate.....	2-4
2.3.1	Bluetooth Measurements	2-4
2.3.2	WLAN Measurements.....	2-4



2.1 Receiver Testing

CombiView includes the vector signal generator (VSG) to provide receiver testing functionality for the CW, wireless LAN, and *Bluetooth* standards.

To use the VSG you must purchase and register the appropriate MV8870xxA waveform option. The following options are available:

- Option MV887030A: Waveform files for WLAN 802.11b/g/n/a
- Option MV887031A: Waveform files for WLAN 802.11ac
- Option MV887032A: Waveform files for WLAN 802.11p
- Option MV887033A: Waveform files for WLAN 802.11ax
- Option MV887034A: Waveform files for WLAN 802.11be
- Option MV887040A: Waveform files for *Bluetooth*

To use *Bluetooth* Low Energy signal more than 37 bytes payload, you also must purchase the option below:

- Option MV887040A-001: Waveform files for *Bluetooth* LE more than 37 bytes payload

To use *Bluetooth* Low Energy 2 Mbps (2LE) signal, you also must purchase the option below:

- Option MV887040A-002: Waveform files for *Bluetooth* 2LE

To use *Bluetooth* Low Energy Long Range (BLR) signal, you also must purchase the option below:

- Option MV887040A-003: Waveform files for *Bluetooth* LR

To use *Bluetooth* Low Energy AoA/AoD signal, you also must purchase the option below:

- Option MV887040A-004: Waveform files for *Bluetooth* LE AoA/AoD

Each optional package contains a selection of waveform files that have been pre-configured at differing standards, data rates, and modulation patterns.

Note:

A full list of the waveform files provided with each SRW option is provided in chapter 4.

During receiver testing, the Vector Signal Generator tool is used to select a waveform file and to transmit a defined sequence of packets to the DUT receiver.

The receiver sensitivity is calculated using the chipset vendor's software to count the number of frames or packets received in comparison to the number sent.

2.2 Configuring and Running Receiver Tests

1. Within CombiView, at **VSG**, select the port being used to connect to the DUT.
2. Select **VSG > Configure VSG** to open the VSG Settings window shown below.

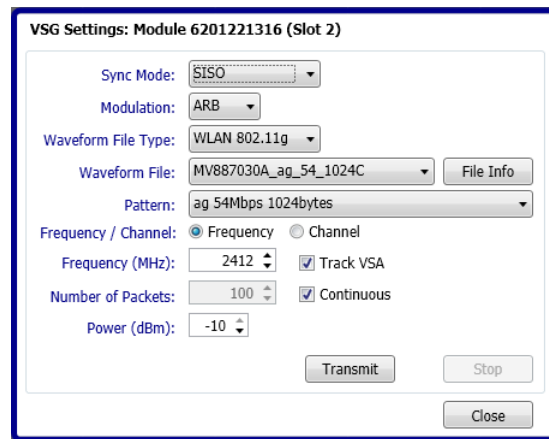


Figure 2.2-1 VSG Settings

3. At **Sync Mode** select **SISO** unless doing true MIMO testing. Refer to the CombiView Operation Manual for full details.
4. At **Modulation** select **ARB**.
5. At **Waveform File Type**, select the wireless standard.
6. At **Waveform File**, select the waveform to be transmitted.
7. At **Pattern**, set the data pattern.

Note:

Most waveform files for SRW applications contain only one pattern. However files designed for MIMO testing may contain two or more patterns that correspond to the spatial streams comprising the MIMO signal. To transmit this kind of signal you use the same waveform file on each module (spatial stream) and select a different pattern on each module's VSG. For True MIMO receiver testing, the VSGs must be synchronized. See Chapter 10 of the *MX880052A CombiView Short Range Wireless Applet Operation Manual* for details.

8. Set **Frequency** or **Channel**.
9. If required, select **Track VSA**. If selected, changes to the VSG frequency are communicated to the VSA, and changes to the VSA frequency are communicated to the VSG. If cleared, the VSA and VSG frequency settings are independent. Note that the VSA cannot be set to frequencies below 1.9 GHz when no MX887032A license.
10. Set a specific **Number of Packets** to be transmitted or select **Continuous** to play the waveform repeatedly until you click **Stop**.
11. Set the transmission **Power**.
12. Click **Transmit** to start transmission of the waveform to the DUT.

2.3 Calculating the Error Rate

Receiver sensitivity is calculated by using the chipset vendor's software to count the number of packets or bits received in comparison to the number sent.

2.3.1 *Bluetooth* Measurements

The receiver sensitivity for *Bluetooth* basic rate and enhanced data rate signals is based on the calculation of Bit Error Rate (BER). BER is an expression of the number of bits that were received in error and is calculated using the formula below:

$$(1 - (\text{Number of bits correctly received} / \text{Number of bits sent})) \times 100 \%$$

The receiver sensitivity for *Bluetooth* Low Energy signals is based on the calculation of Packet Error Rate (PER). PER is an expression of the number of packets that were received in error and is calculated using the formula below:

$$(1 - (\text{Number of packets correctly received} / \text{Number of packets sent})) \times 100 \%$$

2.3.2 WLAN Measurements

DUT receiver measurements are based on the calculation of Packet Error Rate (PER) or Frame Reception Rate (FRR). PER is an expression of the number of packets that were received in error and is calculated using the formula below:

$$(1 - (\text{Number of packets correctly received} / \text{Number of packets sent})) \times 100 \%$$

FRR is an expression of the number of packets that were successfully received. FRR is specified by the CTIA and Wi-Fi Alliance in the CWG Test Plan used to evaluate the RF Performance of Wi-Fi Mobile Converged Devices. FRR is calculated using the formula below:

$$(\text{Number of packets correctly received} / \text{Number of packets sent}) \times 100 \%$$

Chapter 3 Using Remote Commands

This chapter explains the using SCPI remote commands and calculating the error rate.

3.1	Overview	3-2
3.2	Calculating the Error Rate.....	3-3
3.2.1	<i>Bluetooth</i> Measurements	3-3
3.2.2	WLAN Measurements.....	3-3

3.1 Overview

Receiver tests can be performed using remote SCPI commands to control the vector signal generator application within the MT8870A module.

The example below shows how to select a *Bluetooth* waveform file (provided with MV887040A) and output it from port 1 at –70 dBm on a frequency of 2402 MHz.

Note:

Further details on the vector signal generator application and the modes of operation can be found in the *MU887000A TRX Test Module Operation Manual*.

1. Set the VSG operation mode to “normal” for use with remote commands.
:SOURce:GPRF:GENerator:MODE NORmal
2. Set the frequency to 2402 MHz.
:SOURce:GPRF:GENerator:RFSetting:FREQuency 2402MHz
3. Set the level to –70 dBm.
:SOURce:GPRF:GENerator:RFSettings:LEVel -70
4. Turn on modulation.
:SOURce:GPRF:GENerator:BBMode ARB
5. Load the waveform file to memory.
:SOURce:GPRF:GENerator:ARB:FILE:LOAD "MV887040A_DH3_3SlotOff"
6. Select port 1 as the output port.
:ROUte:PORT:CONNect:DIRection PORT2, PORT1
7. Turn on signal output.
:SOURce:GPRF:GENerator:STATe ON
8. Check that the output level is within acceptable limits.
:SOURce:GPRF:GENerator:RFSettings:LEVel:SETTing?
9. Stop the signal output.
:SOURce:GPRF:GENerator:STATe OFF

Note:

Refer to the *MU887000A TRX Test Module Operation Manual* and *MX880054A Signal Generator Application Applet Operation Manual* for further information about controlling the VSG application.

3.2 Calculating the Error Rate

Receiver sensitivity is calculated by using the chipset vendor's software to count the number of packets or bits received in comparison to the number sent.

3.2.1 Bluetooth Measurements

The receiver sensitivity for *Bluetooth* basic rate and enhanced data rate signals is based on the calculation of Bit Error Rate (BER). BER is an expression of the number of bits that were received in error and is calculated using the formula below:

$$(1 - (\text{Number of bits correctly received} / \text{Number of bits sent})) \times 100 \%$$

The receiver sensitivity for *Bluetooth* Low Energy signals is based on the calculation of Packet Error Rate (PER). PER is an expression of the number of packets that were received in error and is calculated using the formula below:

$$(1 - (\text{Number of packets correctly received} / \text{Number of packets sent})) \times 100 \%$$

3.2.2 WLAN Measurements

DUT receiver measurements are based on the calculation of Packet Error Rate (PER) or Frame Reception Rate (FRR). PER is an expression of the number of packets that were received in error and is calculated using the formula below:

$$(1 - (\text{Number of packets correctly received} / \text{Number of packets sent})) \times 100 \%$$

FRR is an expression of the number of packets that were successfully received. FRR is specified by the CTIA and Wi-Fi Alliance in the CWG Test Plan used to evaluate the RF Performance of Wi-Fi Mobile Converged Devices. FRR is calculated using the formula below:

$$(\text{Number of packets correctly received} / \text{Number of packets sent}) \times 100 \%$$

Chapter 4 Waveform Files

This chapter explains the Waveform files.

4.1	802.11a/b/g/n Waveform Patterns (MV887030A)	4-2
4.1.1	802.11b	4-2
4.1.2	802.11a/g	4-3
4.1.3	802.11n	4-4
4.2	802.11ac Waveform Patterns (MV887031A)	4-5
4.2.1	802.11ac	4-5
4.3	802.11p Waveform Patterns (MV887032A)	4-7
4.3.1	802.11p	4-7
4.4	802.11ax Waveform Patterns (MV887033A)	4-8
4.4.1	802.11ax	4-8
4.5	802.11be Waveform Patterns (MV887034A)	4-10
4.5.1	802.11be	4-10
4.6	WLAN Packet Definition	4-12
4.7	Bluetooth Waveform Patterns (MV887040A)	4-13
4.7.1	Bluetooth	4-13
4.8	Bluetooth Packet Definition	4-16
4.9	Zero Waveform Patterns	4-17
4.9.1	Zero	4-17

4.1 802.11a/b/g/n Waveform Patterns (MV887030A)

Notes:

- All 802.11a/b/g/n waveforms are prefixed with MV887030A_.
- Waveforms ending in “_Q” are customer-variant files.

4.1.1 802.11b

Table 4.1.1-1 802.11b WLAN Waveforms

Waveform	Data rates / modulation	Bandwidth (MHz)	Packet length (byte)	Broadcast / Unicast	Preamble / Guard Interval	Nss
b_11_1024L	11		1024	b	Long	-
b_5P5_1024L	5.5		1024	b	Long	-
b_5P5_100L	5.5		100	b	Long	-
b_2_100L	2		100	b	Long	-
b_2_1024L /	2		1024	b	Long	-
b_1_100L	1		100	b	Long	-
b_1_1024L /	1		1024	b	Long	-
b_2_100S_Q	2		100	b	Short	-
b_2_1024S_Q	2		1024	b	Short	-
b_5P5_100S_Q	5.5		100	b	Short	-
b_5P5_1024S_Q	5.5		1024	b	Short	-
b_11_100S_Q	11		100	b	Short	-
b_11_1024S_Q	11		1024	b	Short	-

4.1.2 802.11a/g

Table 4.1.2-1 802.11a/g WLAN Waveforms

Waveform	Data rates / modulation	Bandwidth (MHz)	Packet length (byte)	Broadcast / Unicast	Preamble / Guard Interval	Nss
ag_54_1024	54		1024	b	-	-
ag_54_1000	54		1000	b	-	-
ag_48_1000	48		1000	b	-	-
ag_36_1000	36		1000	b	-	-
ag_24_1000	24		1000	b	-	-
ag_18_1000	18		1000	b	-	-
ag_12_1000	12		1000	b	-	-
ag_9_100	9		100	b	-	-
ag_9_1000	9		1000	b	-	-
ag_6_100	6		100	b	-	-
ag_6_1000	6		1000	b	-	-

4.1.3 802.11n

Table 4.1.3-1 802.11n WLAN Waveforms

Waveform	Data rates / modulation	Bandwidth (MHz)	Packet length (byte)	Broadcast / Unicast	Preamble / Guard Interval	Nss
n_MCS7_20_4096L	MCS7	20	4096	b	Long	-
n_MCS7_20_4096S	MCS7	20	4096	b	Short	-
n_MCS7_20_1024L	MCS7	20	1024	b	Long	-
n_MCS7_40_4096L	MCS7	40	4096	b	Long	-
n_MCS7_40_4096S	MCS7	40	4096	b	Short	-
n_MCS7_40_1024L	MCS7	40	1024	b	Long	-
n_MCS6_20_4096L	MCS6	20	4096	b	Long	-
n_MCS6_40_4096L	MCS6	40	4096	b	Long	-
n_MCS5_20_4096L	MCS5	20	4096	b	Long	-
n_MCS5_40_4096L	MCS5	40	4096	b	Long	-
n_MCS4_20_4096L	MCS4	20	4096	b	Long	-
n_MCS4_20_500L	MCS4	20	500	b	Long	-
n_MCS4_40_4096L	MCS4	40	4096	b	Long	-
n_MCS4_40_500L	MCS4	40	500	b	Long	-
n_MCS3_20_4096L	MCS3	20	4096	b	Long	-
n_MCS3_20_500L	MCS3	20	500	b	Long	-
n_MCS3_40_4096L	MCS3	40	4096	b	Long	-
n_MCS3_40_500L	MCS3	40	500	b	Long	-
n_MCS2_20_4096L	MCS2	20	4096	b	Long	-
n_MCS2_20_500L	MCS2	20	500	b	Long	-
n_MCS2_40_4096L	MCS2	40	4096	b	Long	-
n_MCS2_40_500L	MCS2	40	500	b	Long	-
n_MCS1_20_4096L	MCS1	20	4096	b	Long	-
n_MCS1_20_500L	MCS1	20	500	b	Long	-
n_MCS1_40_4096L	MCS1	40	4096	b	Long	-
n_MCS1_40_500L	MCS1	40	500	b	Long	-
n_MCS0_20_4096L	MCS0	20	4096	b	Long	-
n_MCS0_20_500L	MCS0	20	500	b	Long	-
n_MCS0_40_4096L	MCS0	40	4096	b	Long	-
n_MCS0_40_500L	MCS0	40	500	b	Long	-
n_MCS32_40_4096L	MCS32	40	4096	b	Long	-

4.2 802.11ac Waveform Patterns (MV887031A)

Note:

All 802.11ac waveforms are prefixed with MV887031A_.

4.2.1 802.11ac

Table 4.2.1-1 802.11ac WLAN Waveforms

Waveform	Data rates / modulation	Bandwidth (MHz)	Packet length (byte)	Broadcast / Unicast	Preamble / Guard Interval	Nss
ac_MCS9_40_4096L	MCS9	40	4096	b	Long	1
ac_MCS9_40_1024L	MCS9	40	1024	b	Long	1
ac_MCS9_80_4096L	MCS9	80	4096	b	Long	1
ac_MCS9_80_1024L	MCS9	80	1024	b	Long	1
ac_MCS9_160_4096L	MCS9	160	4096	b	Long	1
ac_MCS8_20_4096L	MCS8	20	4096	b	Long	1
ac_MCS8_20_1024L	MCS8	20	1024	b	Long	1
ac_MCS8_40_4096L	MCS8	40	4096	b	Long	1
ac_MCS8_40_1024L	MCS8	40	1024	b	Long	1
ac_MCS8_80_4096L	MCS8	80	4096	b	Long	1
ac_MCS8_80_1024L	MCS8	80	1024	b	Long	1
ac_MCS8_160_4096L	MCS8	160	4096	b	Long	1
ac_MCS7_20_4096L	MCS7	20	4096	b	Long	1
ac_MCS7_40_4096L	MCS7	40	4096	b	Long	1
ac_MCS7_80_4096L	MCS7	80	4096	b	Long	1
ac_MCS7_160_4096L	MCS7	160	4096	b	Long	1
ac_MCS6_20_4096L	MCS6	20	4096	b	Long	1
ac_MCS6_40_4096L	MCS6	40	4096	b	Long	1
ac_MCS6_80_4096L	MCS6	80	4096	b	Long	1
ac_MCS6_160_4096L	MCS6	160	4096	b	Long	1
ac_MCS5_20_4096L	MCS5	20	4096	b	Long	1
ac_MCS5_40_4096L	MCS5	40	4096	b	Long	1
ac_MCS5_80_4096L	MCS5	80	4096	b	Long	1
ac_MCS5_160_4096L	MCS5	160	4096	b	Long	1
ac_MCS4_20_4096L	MCS4	20	4096	b	Long	1
ac_MCS4_20_500L	MCS4	20	500	b	Long	1
ac_MCS4_40_4096L	MCS4	40	4096	b	Long	1
ac_MCS4_40_500L	MCS4	40	500	b	Long	1
ac_MCS4_80_4096L	MCS4	80	4096	b	Long	1
ac_MCS4_80_500L	MCS4	80	500	b	Long	1
ac_MCS4_160_4096L	MCS4	160	4096	b	Long	1

Table 4.2.1-1 802.11ac WLAN Waveforms (Cont'd)

Waveform	Data rates / modulation	Bandwidth (MHz)	Packet length (byte)	Broadcast / Unicast	Preamble / Guard Interval	Nss
ac_MCS4_160_500L	MCS4	160	500	b	Long	1
ac_MCS3_20_4096L	MCS3	20	4096	b	Long	1
ac_MCS3_20_500L	MCS3	20	500	b	Long	1
ac_MCS3_40_4096L	MCS3	40	4096	b	Long	1
ac_MCS3_40_500L	MCS3	40	500	b	Long	1
ac_MCS3_80_4096L	MCS3	80	4096	b	Long	1
ac_MCS3_80_500L	MCS3	80	500	b	Long	1
ac_MCS3_160_4096L	MCS3	160	4096	b	Long	1
ac_MCS3_160_500L	MCS3	160	500	b	Long	1
ac_MCS2_20_4096L	MCS2	20	4096	b	Long	1
ac_MCS2_20_500L	MCS2	20	500	b	Long	1
ac_MCS2_40_4096L	MCS2	40	4096	b	Long	1
ac_MCS2_40_500L	MCS2	40	500	b	Long	1
ac_MCS2_80_4096L	MCS2	80	4096	b	Long	1
ac_MCS2_80_500L	MCS2	80	500	b	Long	1
ac_MCS2_160_4096L	MCS2	160	4096	b	Long	1
ac_MCS2_160_500L	MCS2	160	500	b	Long	1
ac_MCS1_20_4096L	MCS1	20	4096	b	Long	1
ac_MCS1_20_500L	MCS1	20	500	b	Long	1
ac_MCS1_40_4096L	MCS1	40	4096	b	Long	1
ac_MCS1_40_500L	MCS1	40	500	b	Long	1
ac_MCS1_80_4096L	MCS1	80	4096	b	Long	1
ac_MCS1_80_500L	MCS1	80	500	b	Long	1
ac_MCS1_160_4096L	MCS1	160	4096	b	Long	1
ac_MCS1_160_500L	MCS1	160	500	b	Long	1
ac_MCS0_20_4096L	MCS0	20	4096	b	Long	1
ac_MCS0_20_500L	MCS0	20	500	b	Long	1
ac_MCS0_40_4096L	MCS0	40	4096	b	Long	1
ac_MCS0_40_500L	MCS0	40	500	b	Long	1
ac_MCS0_80_4096L	MCS0	80	4096	b	Long	1
ac_MCS0_80_500L	MCS0	80	500	b	Long	1
ac_MCS0_160_4096L	MCS0	160	4096	b	Long	1
ac_MCS0_160_500L	MCS0	160	500	b	Long	1

4.3 802.11p Waveform Patterns (MV887032A)

Note:

All 802.11p waveforms are prefixed with MV887032A_.

4.3.1 802.11p

Table 4.3.1-1 802.11p WLAN Waveforms

Waveform	Data rates / modulation	Bandwidth (MHz)	Packet length (byte)	Broadcast / Unicast	Preamble / Guard Interval	Nss
p_54_20_1000	54	20	1000	b	-	-
p_48_20_1000	48	20	1000	b	-	-
p_36_20_1000	36	20	1000	b	-	-
p_24_20_1000	24	20	1000	b	-	-
p_18_20_1000	18	20	1000	b	-	-
p_12_20_1000	12	20	1000	b	-	-
p_9_20_1000	9	20	1000	b	-	-
p_6_20_1000	6	20	1000	b	-	-
p_27_10_1000	27	10	1000	b	-	-
p_24_10_1000	24	10	1000	b	-	-
p_18_10_1000	18	10	1000	b	-	-
p_12_10_1000	12	10	1000	b	-	-
p_9_10_1000	9	10	1000	b	-	-
p_6_10_1000	6	10	1000	b	-	-
p_4p5_10_1000	4.5	10	1000	b	-	-
p_3_10_1000	3	10	1000	b	-	-
p_13p5_5_1000	13.5	5	1000	b	-	-
p_12_5_1000	12	5	1000	b	-	-
p_9_5_1000	9	5	1000	b	-	-
p_6_5_1000	6	5	1000	b	-	-
p_4p5_5_1000	4.5	5	1000	b	-	-
p_3_5_1000	3	5	1000	b	-	-
p_2p25_5_1000	2.25	5	1000	b	-	-
p_1p5_5_1000	1.5	5	1000	b	-	-

4.4 802.11ax Waveform Patterns (MV887033A)

Note:

All 802.11ax waveforms are prefixed with MV887033A_.

4.4.1 802.11ax

Table 4.4.1-1 802.11ax WLAN Waveforms

Waveform	PPDU format	Data rate / modulation	Bandwidth (MHz)	PDSU length (Octet)	FEC encoders	DCM	Nss
ax_SU_MCS11_160_4096_08LTFx2L*	HE-SU	MCS11	160	4096	LDPC	Off	1
ax_SU_MCS10_160_4096_08LTFx2L*	HE-SU	MCS10	160	4096	LDPC	Off	1
ax_SU_MCS9_160_4096_08LTFx2L*	HE-SU	MCS9	160	4096	LDPC	Off	1
ax_SU_MCS8_160_4096_08LTFx2L*	HE-SU	MCS8	160	4096	LDPC	Off	1
ax_SU_MCS7_160_4096_08LTFx2L*	HE-SU	MCS7	160	4096	LDPC	Off	1
ax_SU_MCS6_160_4096_08LTFx2L*	HE-SU	MCS6	160	4096	LDPC	Off	1
ax_SU_MCS5_160_4096_08LTFx2L*	HE-SU	MCS5	160	4096	LDPC	Off	1
ax_SU_MCS4_160_4096_08LTFx2L*	HE-SU	MCS4	160	4096	LDPC	Off	1
ax_SU_MCS3_160_4096_08LTFx2L*	HE-SU	MCS3	160	4096	LDPC	Off	1
ax_SU_MCS2_160_4096_08LTFx2L*	HE-SU	MCS2	160	4096	LDPC	Off	1
ax_SU_MCS1_160_4096_08LTFx2L*	HE-SU	MCS1	160	4096	LDPC	Off	1
ax_SU_MCS0_160_4096_08LTFx2L*	HE-SU	MCS0	160	4096	LDPC	Off	1
ax_SU_MCS11_80_4096_08LTFx2L*	HE-SU	MCS11	80	4096	LDPC	Off	1
ax_SU_MCS10_80_4096_08LTFx2L*	HE-SU	MCS10	80	4096	LDPC	Off	1
ax_SU_MCS9_80_4096_08LTFx2L*	HE-SU	MCS9	80	4096	LDPC	Off	1
ax_SU_MCS8_80_4096_08LTFx2L*	HE-SU	MCS8	80	4096	LDPC	Off	1
ax_SU_MCS7_80_4096_08LTFx2L*	HE-SU	MCS7	80	4096	LDPC	Off	1
ax_SU_MCS6_80_4096_08LTFx2L*	HE-SU	MCS6	80	4096	LDPC	Off	1
ax_SU_MCS5_80_4096_08LTFx2L*	HE-SU	MCS5	80	4096	LDPC	Off	1
ax_SU_MCS4_80_4096_08LTFx2L*	HE-SU	MCS4	80	4096	LDPC	Off	1
ax_SU_MCS3_80_4096_08LTFx2L*	HE-SU	MCS3	80	4096	LDPC	Off	1
ax_SU_MCS2_80_4096_08LTFx2L*	HE-SU	MCS2	80	4096	LDPC	Off	1
ax_SU_MCS1_80_4096_08LTFx2L*	HE-SU	MCS1	80	4096	LDPC	Off	1
ax_SU_MCS0_80_4096_08LTFx2L*	HE-SU	MCS0	80	4096	LDPC	Off	1

Table 4.4.1-1 802.11ax WLAN Waveforms (Cont'd)

Waveform	PPDU format	Data rate / modulation	Bandwidth (MHz)	PDSU length (Octet)	FEC encoders	DCM	Nss
ax_SU_MCS11_40_4096_08LTFx2L*	HE-SU	MCS11	40	4096	LDPC	Off	1
ax_SU_MCS10_40_4096_08LTFx2L*	HE-SU	MCS10	40	4096	LDPC	Off	1
ax_SU_MCS9_40_4096_08LTFx2L*	HE-SU	MCS9	40	4096	LDPC	Off	1
ax_SU_MCS8_40_4096_08LTFx2L*	HE-SU	MCS8	40	4096	LDPC	Off	1
ax_SU_MCS7_40_4096_08LTFx2L*	HE-SU	MCS7	40	4096	LDPC	Off	1
ax_SU_MCS6_40_4096_08LTFx2L*	HE-SU	MCS6	40	4096	LDPC	Off	1
ax_SU_MCS5_40_4096_08LTFx2L*	HE-SU	MCS5	40	4096	LDPC	Off	1
ax_SU_MCS4_40_4096_08LTFx2L*	HE-SU	MCS4	40	4096	LDPC	Off	1
ax_SU_MCS3_40_4096_08LTFx2L*	HE-SU	MCS3	40	4096	LDPC	Off	1
ax_SU_MCS2_40_4096_08LTFx2L*	HE-SU	MCS2	40	4096	LDPC	Off	1
ax_SU_MCS1_40_4096_08LTFx2L*	HE-SU	MCS1	40	4096	LDPC	Off	1
ax_SU_MCS0_40_4096_08LTFx2L*	HE-SU	MCS0	40	4096	LDPC	Off	1
ax_SU_MCS11_20_4096_08LTFx2L*	HE-SU	MCS11	20	4096	LDPC	Off	1
ax_SU_MCS10_20_4096_08LTFx2L*	HE-SU	MCS10	20	4096	LDPC	Off	1
ax_SU_MCS11_20_4096_08LTFx2B*	HE-SU	MCS11	20	4096	BCC	Off	1
ax_SU_MCS10_20_4096_08LTFx2B*	HE-SU	MCS10	20	4096	BCC	Off	1
ax_SU_MCS9_20_4096_08LTFx2B*	HE-SU	MCS9	20	4096	BCC	Off	1
ax_SU_MCS8_20_4096_08LTFx2B*	HE-SU	MCS8	20	4096	BCC	Off	1
ax_SU_MCS7_20_4096_08LTFx2B*	HE-SU	MCS7	20	4096	BCC	Off	1
ax_SU_MCS6_20_4096_08LTFx2B*	HE-SU	MCS6	20	4096	BCC	Off	1
ax_SU_MCS5_20_4096_08LTFx2B*	HE-SU	MCS5	20	4096	BCC	Off	1
ax_SU_MCS4_20_4096_08LTFx2B*	HE-SU	MCS4	20	4096	BCC	Off	1
ax_SU_MCS3_20_4096_08LTFx2B*	HE-SU	MCS3	20	4096	BCC	Off	1
ax_SU_MCS2_20_4096_08LTFx2B*	HE-SU	MCS2	20	4096	BCC	Off	1
ax_SU_MCS1_20_4096_08LTFx2B*	HE-SU	MCS1	20	4096	BCC	Off	1
ax_SU_MCS0_20_4096_08LTFx2B*	HE-SU	MCS0	20	4096	BCC	Off	1

*: non-STBC mode, 800 ns GI, 2x HE-LTF.

4.5 802.11be Waveform Patterns (MV887034A)

Note:

All 802.11be waveforms are prefixed with MV887034A_.

4.5.1 802.11be

Table 4.5.1-1 802.11be WLAN Waveforms

Waveform	PPDU format	Data rate / modulation	Band-width (MHz)	PDSU length (Octet)	FEC en-coders	DCM	Nss	EHT-SIG Data rate / modulation
be_SU_MCS0_20_4096_08LTFx2B*	EHT-MU	MCS0	20	4096	BCC	Off	1	MCS0
be_SU_MCS0_40_4096_08LTFx2L*	EHT-MU	MCS0	40	4096	LDPC	Off	1	MCS0
be_SU_MCS0_80_4096_08LTFx2L*	EHT-MU	MCS0	80	4096	LDPC	Off	1	MCS0
be_SU_MCS0_160_4096_08LTFx2L*	EHT-MU	MCS0	160	4096	LDPC	Off	1	MCS0
be_SU_MCS1_20_4096_08LTFx2B*	EHT-MU	MCS1	20	4096	BCC	Off	1	MCS0
be_SU_MCS1_40_4096_08LTFx2L*	EHT-MU	MCS1	40	4096	LDPC	Off	1	MCS0
be_SU_MCS1_80_4096_08LTFx2L*	EHT-MU	MCS1	80	4096	LDPC	Off	1	MCS0
be_SU_MCS1_160_4096_08LTFx2L*	EHT-MU	MCS1	160	4096	LDPC	Off	1	MCS0
be_SU_MCS2_20_4096_08LTFx2B*	EHT-MU	MCS2	20	4096	BCC	Off	1	MCS0
be_SU_MCS2_40_4096_08LTFx2L*	EHT-MU	MCS2	40	4096	LDPC	Off	1	MCS0
be_SU_MCS2_80_4096_08LTFx2L*	EHT-MU	MCS2	80	4096	LDPC	Off	1	MCS0
be_SU_MCS2_160_4096_08LTFx2L*	EHT-MU	MCS2	160	4096	LDPC	Off	1	MCS0
be_SU_MCS3_20_4096_08LTFx2B*	EHT-MU	MCS3	20	4096	BCC	Off	1	MCS0
be_SU_MCS3_40_4096_08LTFx2L*	EHT-MU	MCS3	40	4096	LDPC	Off	1	MCS0
be_SU_MCS3_80_4096_08LTFx2L*	EHT-MU	MCS3	80	4096	LDPC	Off	1	MCS0
be_SU_MCS3_160_4096_08LTFx2L*	EHT-MU	MCS3	160	4096	LDPC	Off	1	MCS0
be_SU_MCS4_20_4096_08LTFx2B*	EHT-MU	MCS4	20	4096	BCC	Off	1	MCS0
be_SU_MCS4_40_4096_08LTFx2L*	EHT-MU	MCS4	40	4096	LDPC	Off	1	MCS0
be_SU_MCS4_80_4096_08LTFx2L*	EHT-MU	MCS4	80	4096	LDPC	Off	1	MCS0
be_SU_MCS4_160_4096_08LTFx2L*	EHT-MU	MCS4	160	4096	LDPC	Off	1	MCS0
be_SU_MCS5_20_4096_08LTFx2B*	EHT-MU	MCS5	20	4096	BCC	Off	1	MCS0
be_SU_MCS5_40_4096_08LTFx2L*	EHT-MU	MCS5	40	4096	LDPC	Off	1	MCS0
be_SU_MCS5_80_4096_08LTFx2L*	EHT-MU	MCS5	80	4096	LDPC	Off	1	MCS0
be_SU_MCS5_160_4096_08LTFx2L*	EHT-MU	MCS5	160	4096	LDPC	Off	1	MCS0

Table 4.5.1-1 802.11be WLAN Waveforms (Cont'd)

Waveform	PPDU format	Data rate / modulation	Bandwidth (MHz)	PDSU length (Octet)	FEC encoders	DCM	Nss	EHT-SIG Data rate / modulation
be_SU_MCS6_20_4096_08LTFx2B*	EHT-MU	MCS6	20	4096	BCC	Off	1	MCS0
be_SU_MCS6_40_4096_08LTFx2L*	EHT-MU	MCS6	40	4096	LDPC	Off	1	MCS0
be_SU_MCS6_80_4096_08LTFx2L*	EHT-MU	MCS6	80	4096	LDPC	Off	1	MCS0
be_SU_MCS6_160_4096_08LTFx2L*	EHT-MU	MCS6	160	4096	LDPC	Off	1	MCS0
be_SU_MCS7_20_4096_08LTFx2B*	EHT-MU	MCS7	20	4096	BCC	Off	1	MCS0
be_SU_MCS7_40_4096_08LTFx2L*	EHT-MU	MCS7	40	4096	LDPC	Off	1	MCS0
be_SU_MCS7_80_4096_08LTFx2L*	EHT-MU	MCS7	80	4096	LDPC	Off	1	MCS0
be_SU_MCS7_160_4096_08LTFx2L*	EHT-MU	MCS7	160	4096	LDPC	Off	1	MCS0
be_SU_MCS8_20_4096_08LTFx2B*	EHT-MU	MCS8	20	4096	BCC	Off	1	MCS0
be_SU_MCS8_40_4096_08LTFx2L*	EHT-MU	MCS8	40	4096	LDPC	Off	1	MCS0
be_SU_MCS8_80_4096_08LTFx2L*	EHT-MU	MCS8	80	4096	LDPC	Off	1	MCS0
be_SU_MCS8_160_4096_08LTFx2L*	EHT-MU	MCS8	160	4096	LDPC	Off	1	MCS0
be_SU_MCS9_20_4096_08LTFx2B*	EHT-MU	MCS9	20	4096	BCC	Off	1	MCS0
be_SU_MCS9_40_4096_08LTFx2L*	EHT-MU	MCS9	40	4096	LDPC	Off	1	MCS0
be_SU_MCS9_80_4096_08LTFx2L*	EHT-MU	MCS9	80	4096	LDPC	Off	1	MCS0
be_SU_MCS9_160_4096_08LTFx2L*	EHT-MU	MCS9	160	4096	LDPC	Off	1	MCS0
be_SU_MCS10_20_4096_08LTFx2L*	EHT-MU	MCS10	20	4096	LDPC	Off	1	MCS0
be_SU_MCS10_40_4096_08LTFx2L*	EHT-MU	MCS10	40	4096	LDPC	Off	1	MCS0
be_SU_MCS10_80_4096_08LTFx2L*	EHT-MU	MCS10	80	4096	LDPC	Off	1	MCS0
be_SU_MCS10_160_4096_08LTFx2L*	EHT-MU	MCS10	160	4096	LDPC	Off	1	MCS0
be_SU_MCS11_20_4096_08LTFx2L*	EHT-MU	MCS11	20	4096	LDPC	Off	1	MCS0
be_SU_MCS11_40_4096_08LTFx2L*	EHT-MU	MCS11	40	4096	LDPC	Off	1	MCS0
be_SU_MCS11_80_4096_08LTFx2L*	EHT-MU	MCS11	80	4096	LDPC	Off	1	MCS0
be_SU_MCS11_160_4096_08LTFx2L*	EHT-MU	MCS11	160	4096	LDPC	Off	1	MCS0
be_SU_MCS12_20_4096_08LTFx2L*	EHT-MU	MCS12	20	4096	LDPC	Off	1	MCS0
be_SU_MCS12_40_4096_08LTFx2L*	EHT-MU	MCS12	40	4096	LDPC	Off	1	MCS0
be_SU_MCS12_80_4096_08LTFx2L*	EHT-MU	MCS12	80	4096	LDPC	Off	1	MCS0
be_SU_MCS12_160_4096_08LTFx2L*	EHT-MU	MCS12	160	4096	LDPC	Off	1	MCS0
be_SU_MCS13_20_4096_08LTFx2L*	EHT-MU	MCS13	20	4096	LDPC	Off	1	MCS0
be_SU_MCS13_40_4096_08LTFx2L*	EHT-MU	MCS13	40	4096	LDPC	Off	1	MCS0
be_SU_MCS13_80_4096_08LTFx2L*	EHT-MU	MCS13	80	4096	LDPC	Off	1	MCS0
be_SU_MCS13_160_4096_08LTFx2L*	EHT-MU	MCS13	160	4096	LDPC	Off	1	MCS0

*: MU (non-OFDMA), 800 ns GI, 2x EHT-LTF.

4.6 WLAN Packet Definition

Idle time before rising edge (μ s): 0

Idle time after falling edge (μ s): 30*

3 MAC addresses: ff:ff:ff:ff:ff:ff

20:22:22:22:22:02

50:55:55:55:55:05

Payload type: PN9

Scrambled: yes

b Filter type: Gaussian BT = 0.5

n PPDU format: mixed

Broadcast: yes

*: For all the WLAN waveforms in Table 4.1.1-1 through Table 4.5.1-1, the idle time is 30 (μ s).

4.7 Bluetooth Waveform Patterns (MV887040A)

Notes:

- All *Bluetooth* waveforms are prefixed with MV887040A.
- Waveforms ending in “_Q” are customer-variant files.

4.7.1 Bluetooth

Table 4.6.1-1 Bluetooth Waveforms

Waveform	Data rate (Mbps)	Modulation	Filter	Packet type
DH1* ¹	1	GFSK* ⁴	Gaussian* ⁵	DH1
DH3* ¹	1	GFSK* ⁴	Gaussian* ⁵	DH3
DH5* ¹	1	GFSK* ⁴	Gaussian* ⁵	DH5
2-DH1* ¹	2	$\pi/4$ -DQPSK	Root Nyquist* ⁶	2-DH1
2-DH3* ¹	2	$\pi/4$ -DQPSK	Root Nyquist* ⁶	2-DH3
2-DH5* ¹	2	$\pi/4$ -DQPSK	Root Nyquist* ⁶	2-DH5
3-DH1* ¹	3	8-DPSK	Root Nyquist* ⁶	3-DH1
3-DH3* ¹	3	8-DPSK	Root Nyquist* ⁶	3-DH3
3-DH5* ¹	3	8-DPSK	Root Nyquist* ⁶	3-DH5
GFSK-PN15* ³	1	GFSK* ⁴	Gaussian* ⁵	No packet format
PI_4_DQPSK- PN15* ³	2	$\pi/4$ -DQPSK	Root Nyquist* ⁶	No packet format
8DPSK-PN15* ³	3	8DPSK	Root Nyquist* ⁶	No packet format
BLE* ¹	1	GFSK* ⁹	Gaussian* ⁵	BLE Reference Signal
BLE_CRC_corrupted* ⁷	1	GFSK* ⁹	Gaussian* ⁵	BLE Reference Signal
BLE_CRC_corrupted_255* ¹³	2	GFSK* ⁹	Gaussian* ⁵	BLE Payload 255 bytes
BLE_255* ¹⁰	1	GFSK* ⁹	Gaussian* ⁵	BLE Payload 255 bytes
2LE_37* ¹¹	2	GFSK* ⁹	Gaussian* ⁵	2LE Payload 37 bytes
2LE_255* ^{10,*11}	2	GFSK* ⁹	Gaussian* ⁵	2LE Payload 255 bytes
BLR_S2_37* ¹²	1	GFSK* ⁹	Gaussian* ⁵	BLR Payload 37 bytes
BLR_S2_255* ^{10,*12}	1	GFSK* ⁹	Gaussian* ⁵	BLR Payload 255 bytes
BLR_S8_37* ¹²	1	GFSK* ⁹	Gaussian* ⁵	BLR Payload 37 bytes
BLR_S8_255* ^{10,*12}	1	GFSK* ⁹	Gaussian* ⁵	BLR Payload 255 bytes
2LE_CRC_corrupted 37* ¹⁴	2	GFSK* ⁹	Gaussian* ⁵	2LE Payload 37 bytes

Table 4.6.1-1 Bluetooth Waveforms (Cont'd)

Waveform	Data rate (Mbps)	Modulation	Filter	Packet type
2LE_CRC_corrupted_255* ¹⁴	2	GFSK* ⁹	Gaussian* ⁵	2LE Payload 255 bytes
BLR_S2_CRC_corrupted_37* ¹⁵	1	GFSK* ⁹	Gaussian* ⁵	BLR Payload 37 bytes
BLR_S2_CRC_corrupted_255* ¹⁵	1	GFSK* ⁹	Gaussian* ⁵	BLR Payload 255 bytes
BLR_S8_CRC_corrupted_37* ¹⁶	1	GFSK* ⁹	Gaussian* ⁵	BLR Payload 37 bytes
BLR_S8_CRC_corrupted_255* ¹⁶	1	GFSK* ⁹	Gaussian* ⁵	BLR Payload 255 bytes
GFSK-PN15_BLE* ³	1	GFSK* ⁹	Gaussian* ⁵	No packet format
2-DH1C_Q	2	$\pi/4$ -DQPSK	Root Nyquist* ⁶	2-DH1
2-DH3C_Q	2	$\pi/4$ -DQPSK	Root Nyquist* ⁶	2-DH3
2-DH5C_Q	2	$\pi/4$ -DQPSK	Root Nyquist* ⁶	2-DH5
3-DH1C_Q	3	8-DPSK	Root Nyquist* ⁶	3-DH1
3-DH3C_Q	3	8-DPSK	Root Nyquist* ⁶	3-DH3
3-DH5C_Q	3	8-DPSK	Root Nyquist* ⁶	3-DH5
BLE_Q	1	GFSK* ⁹	Gaussian* ⁵	BLE Reference Signal
DH1C_Q	1	GFSK* ⁴	Gaussian* ⁵	DH1
DH3C_Q	1	GFSK* ⁴	Gaussian* ⁵	DH3
DH5C_Q	1	GFSK* ⁴	Gaussian* ⁵	DH5
BLE_AoA_37* ¹⁷	1	GFSK* ⁹	Gaussian* ⁵	BLE AoA Payload 37 bytes* ¹⁸
BLE_AoA_255* ^{10,*17}	1	GFSK* ⁹	Gaussian* ⁵	BLE AoA Payload 255 bytes* ¹⁸
BLE_AoD1_0* ¹⁷	1	GFSK* ⁹	Gaussian* ⁵	BLE AoD with 1 μ s slots Payload 0 bytes* ¹⁸
BLE_AoD1_255* ^{10,*17}	1	GFSK* ⁹	Gaussian* ⁵	BLE AoD with 1 μ s slots Payload 255 bytes* ¹⁸
BLE_AoD2_0* ¹⁷	1	GFSK* ⁹	Gaussian* ⁵	BLE AoD with 2 μ s slots Payload 0 bytes* ¹⁸
BLE_AoD2_255* ^{10,*17}	1	GFSK* ⁹	Gaussian* ⁵	BLE AoD with 2 μ s slots Payload 255 bytes* ¹⁸
2LE_AoA_37* ^{11,*17}	2	GFSK* ⁹	Gaussian* ⁵	2LE AoA Payload 37 bytes* ¹⁸
2LE_AoA_255* ^{10,*11,*17}	2	GFSK* ⁹	Gaussian* ⁵	2LE AoA Payload 255 bytes* ¹⁸
2LE_AoD1_0* ^{11,*17}	2	GFSK* ⁹	Gaussian* ⁵	2LE AoD with 1 μ s slots Payload 0 bytes* ¹⁸
2LE_AoD1_255* ^{10,*11,*17}	2	GFSK* ⁹	Gaussian* ⁵	2LE AoD with 1 μ s slots Payload 255 bytes* ¹⁸
2LE_AoD2_0* ^{11,*17}	2	GFSK* ⁹	Gaussian* ⁵	2LE AoD with 2 μ s slots Payload 0 bytes* ¹⁸
2LE_AoD2_255* ^{10,*11,*17}	2	GFSK* ⁹	Gaussian* ⁵	2LE AoD with 1 μ s slots Payload 255 bytes* ¹⁸

*1: PN9 data is inserted into the payload body.

*2: PN9 data is inserted to all areas that do not have a packet format.

- *3: PN15 data is inserted to all areas that do not have a packet format.
- *4: Modulation index = 0.32
- *5: Bandwidth time (BT) = 0.5
- *6: Roll-off rate β = 0.4
- *7: Use in RF-PHY.TS/4.0.0 RCV-LE/CA/07-C (PER Report Integrity)
with intentional CRC errors in every other packet is assumed.
- *8: Not used.
- *9: Modulation index = 0.5
- *10: MV887040A-001 is needed.
- *11: MV887040A-002 is needed.
- *12: MV887040A-003 is needed.
- *13: Use in RF-PHY.TS/5.0.1 RCV-LE/CA/BV-07-C
[PER Report Integrity, uncoded data at 1Ms/s] with intentional.
- *14: Use in RF-PHY.TS/5.0.1 RCV-LE/CA/BV-13-C
[PER Report Integrity at 2Ms/s] with intentional.
- *15: Use in RF-PHY.TS/5.0.1 RCV-LE/CA/BV-30-C
[PER Report Integrity, LE Coded (S=2)] with intentional.
- *16: Use in RF-PHY.TS/5.0.1 RCV-LE/CA/BV-31-C
[PER Report Integrity, LE Coded (S=8)] with intentional.
- *17: MV887040A-004 is needed.
- *18: CTE Time = 20

4.8 **Bluetooth Packet Definition**

Am_addr:	7 (standard waveforms), 0 (Q waveforms)
Flow:	1
Arqn:	0
Seqn:	0
Uap:	0x6b
Lap:	0xc6967e
Logical channel:	0
Logical flow:	0

4.9 Zero Waveform Patterns

Note:

The zero waveform is included in all of the SRW waveform packages.

4.9.1 Zero

Table 4.8.1-1 Zero Waveforms

Waveform	Output	Pattern Length
ZERO_200000000Hz_100000p	No signal	500 μ s

Appendix A Specifications

This appendix describes the specifications.

(Nominal): Nominal indicates the design value and is not guaranteed.

A.1 MV887030A

Name

WLAN 802.11b/g/a/n waveforms

Structure

The items below are provided on the product DVD etc. The waveform files are also preinstalled on the MU887000A TRX Test Module.

WLAN 802.11b/g/a/n Waveforms files: 56

WLAN 802.11b/g/a/n Waveforms license files: 1

Operation Manual: 1

EVM

802.11b

Packet Length: 1024 byte
Frequency: 2402 to 2484 MHz
Gaussian filter: BT 0.5
EVM: ≤ -38 dB rms

802.11g

Packet Length: 1000 byte
Frequency: 2402 to 2484 MHz
Operating temperature: 20 to 30 °C
EVM: ≤ -40 dB rms

802.11a

Packet Length: 1000 byte
Frequency: 4920 to 5825 MHz
Operating temperature: 20 to 30 °C
EVM: ≤ -38 dB rms

802.11n (2402 to 2484 MHz)

Packet Length: 4096 byte
Guard Interval: Long
Channel bandwidth: 40 MHz
Operating temperature: 20 to 30 °C
EVM: ≤ -40 dB rms

802.11n (4920 to 5825 MHz)

Packet Length: 4096 byte
Guard Interval: Long
Channel bandwidth: 40 MHz
Operating temperature: 20 to 30 °C
EVM: ≤ -38 dB rms

A.2 MV887031A

Name

WLAN 802.11ac waveforms

Structure

The items below are provided on the product DVD etc. The waveform files are also preinstalled on the MU887000A TRX Test Module.

WLAN 802.11ac Waveforms files:	65
WLAN 802.11ac Waveforms license files:	1
Operation Manual:	1

A.3 MV887032A

Name

WLAN 802.11p waveforms

Structure

The items below are provided on the product DVD etc. The waveform files are also preinstalled on the MU887000A TRX Test Module.

WLAN 802.11p Waveforms files:	25
WLAN 802.11p Waveforms license files:	1
Operation Manual:	1

A.4 MV887033A

Name

WLAN 802.11ax waveforms

Structure

The items below are provided on the product DVD etc. The waveform files are also pre-installed on the MU887000A TRX Test Module.

WLAN 802.11ax Waveforms files: 50
 WLAN 802.11ax Waveforms license files: 1
 Operation Manual: 1

Maximum Output Level

MU887000A:

–10 dBm (Test Port 1/2, 2412 MHz ≤ Frequency ≤ 2484 MHz)
 –18 dBm (Test Port 1/2, 4920 MHz ≤ Frequency ≤ 5825 MHz)
 0 dBm (Test Port 3/4, 2412 MHz ≤ Frequency ≤ 2484 MHz)
 –8 dBm (Test Port 3/4, 4920 MHz ≤ Frequency ≤ 5825 MHz)

MU887001A:

–10 dBm (Test Port 1/2/3/4, 2412 MHz ≤ Frequency ≤ 2484 MHz)
 –18 dBm (Test Port 1/2/3/4, 4920 MHz ≤ Frequency ≤ 5825 MHz)

MU887002A:

–5 dBm (TRX1/2 Test Port 1 to 12, 2412 MHz ≤ Frequency ≤ 2484 MHz)
 –8 dBm (TRX1/2 Test Port 1 to 12, 4920 MHz ≤ Frequency ≤ 5825 MHz)
 –10 dBm (With MU887002A-007, TRX1/2 Test Port 5 to 12,
 5900 MHz ≤ Frequency ≤ 7215 MHz, and Channel Edge ≤ 7215 MHz)

EVM

Packet Length 4096 byte, Guard Interval 0.8 μs, Channel Bandwidth 80 MHz,
 Average of 20 Packets, 20 to 30 °C

MU887002A:

≤ –43 dB (Nominal) (With MU887002A-007, TRX1/2 Test Port 5 to 12,
 5900 MHz ≤ Frequency ≤ 7175 MHz)

A.5 MV887034A

Name

WLAN 802.11be waveforms

Structure

The items below are provided on the product DVD etc. The waveform files are also pre-installed on the MU887002A TRX Test Module.

WLAN 802.11be Waveforms files:	56
WLAN 802.11be Waveforms license files:	1
Operation Manual:	1

Maximum Output Level

MU887002A:

-5 dBm	(TRX1/2 Test Port 1 to 12, $2412\text{ MHz} \leq \text{Frequency} \leq 2484\text{ MHz}$)
-8 dBm	(TRX1/2 Test Port 1 to 12, $4920\text{ MHz} \leq \text{Frequency} \leq 5825\text{ MHz}$)
-10 dBm	(With MU887002A-007, TRX1/2 Test Port 5 to 12, $5900\text{ MHz} \leq \text{Frequency} \leq 7215\text{ MHz}$, and Channel Edge $\leq 7215\text{ MHz}$)

EVM

Packet Length 4096 byte, Guard Interval 0.8 μs , Channel Bandwidth 80 MHz,
Average of 20 Packets, 20 to 30 °C

MU887002A:

$\leq -43\text{ dB (Nominal)}$	(With MU887002A-007, TRX1/2 Test Port 5 to 12, $5900\text{ MHz} \leq \text{Frequency} \leq 7175\text{ MHz}$)
--------------------------------	--

A.6 MV887040A

Name

Bluetooth waveforms

Structure

The items below are provided on the product DVD etc. The waveform files are also pre-installed on the MU887000A TRX Test Module.

Bluetooth waveforms files: 52
(including two files for MV887040A-001, four files for MV887040A-002,
eight files for MV887040A-003, and twelve files for MV887040A-004)

Bluetooth waveforms license files: 1

Operation Manual: 1

Deviation

Frequency: 2402 to 2480 MHz

Modulation: GFSK

Deviation: 1 % ($\pm 0.01 \times$ deviation Hz) (Nominal)

DEVM

Frequency: 2402 to 2480 MHz

Modulation: $\pi/4$ -DQPSK or 8-DPSK

DEVM: < 5 % rms

