Network Master Series MU909014A/A1/B/B1/C/C6 MU909015A6/B/B1/C/C6 μOTDR Module Operation Manual

25th Edition

- \bullet This document explains the operation of the MT9090A main frame, MU909014A/A1/B/B1/C/C6, MU909015A6/B/B1/C/C6 $_{\mu}$ OTDR modules.
- For safety and warning information, please read this manual before attempting to use the equipment.
- Keep this manual with the equipment.

ANRITSU CORPORATION

Document No.: M-W3586AE-25.0

Safety Symbols

To prevent the risk of personal injury or loss related to equipment malfunction, Anritsu Corporation uses the following safety symbols to indicate safety-related information. Ensure that you clearly understand the meanings of the symbols BEFORE using the equipment. Some or all of the following symbols may be used on all Anritsu equipment. In addition, there may be other labels attached to products that are not shown in the diagrams in this manual.

Symbols used in manual



↑ DANGER

This indicates a very dangerous procedure that could result in serious injury or death if not performed properly.



↑ WARNING

This indicates a hazardous procedure that could result in serious injury or death if not performed properly.



CAUTION

This indicates a hazardous procedure or danger that could result in light-to-severe injury, or loss related to equipment malfunction, if proper precautions are not taken.

Safety Symbols Used on Equipment and in Manual

The following safety symbols are used inside or on the equipment near operation locations to provide information about safety items and operation precautions. Ensure that you clearly understand the meanings of the symbols and take the necessary precautions BEFORE using the equipment.



This indicates a prohibited operation. The prohibited operation is indicated symbolically in or near the barred circle.



This indicates an obligatory safety precaution. The obligatory operation is indicated symbolically in or near the circle.



This indicates a warning or caution. The contents are indicated symbolically in or near the triangle.



This indicates a note. The contents are described in the box.





These indicate that the marked part should be recycled.

Network Master Series MU909014A/A1/B/B1/C/C6, MU909015A6/B/B1/C/C6 μOTDR Module **Operation Manual**

January 2012 (First Edition) 2022 (25th Edition) 14 February

Copyright © 2012-2022, ANRITSU CORPORATION.

All rights reserved. No part of this manual may be reproduced without the prior written permission of the

The operational instructions of this manual may be changed without prior notice. Printed in Japan



DANGER

Replacing Battery



Battery Disposal

- When replacing the battery, use the specified battery and insert it with the correct polarity. If the wrong battery is used, or if the battery is inserted with reversed polarity, there is a risk of explosion causing severe injury or death.
- DO NOT expose batteries to heat or fire. This is dangerous and can result in explosions or fire. Heating batteries may cause them to leak or explode.



WARNING



- ALWAYS refer to the operation manual when working near locations at which the alert mark shown on the left is attached. If the advice in the operation manual is not followed, there is a risk of personal injury or reduced equipment performance. The alert mark shown on the left may also be used with other marks and descriptions to indicate other dangers.
- Overvoltage Category
 This equipment complies with overvoltage category II defined in IEC
 61010. DO NOT connect this equipment to the power supply of overvoltage category III or IV.
- Laser radiation warning
 - NEVER look directly into the cable connector on the equipment nor into the end of a cable connected to the equipment. There is a risk of injury if laser radiation enters the eye.
 - The Laser Safety label is attached to the equipment for safety use as indicated in "Laser Safety" later in this section.
- Repair



Only qualified service personnel with a knowledge of electrical fire and shock hazards should service this equipment. This equipment cannot be repaired by the operator. DO NOT attempt to remove the equipment covers or unit covers or to disassemble internal components. There are high-voltage parts in this equipment presenting a risk of severe injury or fatal electric shock to untrained personnel. In addition, there is a risk of damage to precision components.



WARNING

Calibration



• The performance-guarantee seal verifies the integrity of the equipment. To ensure the continued integrity of the equipment, only Anritsu service personnel, or service personnel of an Anritsu sales representative, should break this seal to repair or calibrate the equipment. Be careful not to break the seal by opening the equipment or unit covers. If the performance-guarantee seal is broken by you or a third party, the performance of the equipment cannot be guaranteed.

Battery Fluid

 DO NOT short the battery terminals and never attempt to disassemble the battery or dispose of it in a fire. If the battery is damaged by any of these actions, the battery fluid may leak.

This fluid is poisonous.

DO NOT touch the battery fluid, ingest it, or get in your eyes. If it is accidentally ingested, spit it out immediately, rinse your mouth with water and seek medical help. If it enters your eyes accidentally, do not rub your eyes, rinse them with clean running water and seek medical help. If the liquid gets on your skin or clothes, wash it off carefully and thoroughly with clean water.

LCD

This equipment uses a Liquid Crystal Display (LCD). DO NOT subject
the equipment to excessive force or drop it. If the LCD is subjected to
strong mechanical shock, it may break and liquid may leak.
This liquid is very caustic and poisonous.

DO NOT touch it, ingest it, or get in your eyes. If it is ingested accidentally, spit it out immediately, rinse your mouth with water and seek medical help. If it enters your eyes accidentally, do not rub your eyes, rinse them with clean running water and seek medical help. If the liquid gets on your skin or clothes, wash it off carefully and thoroughly with soap and water.

High temperature

 Turn off the unit and allow alkaline batteries to cool before touching or removing. The temperature of batteries may rise by approximately +20°C if used continuously for an extended period of time.

Laser Safety

Class 1, 1M and 3R indicate the danger degree of the laser radiation specified below according to IEC 60825-1:2007.

Class 1: Lasers that are safe under reasonably foreseeable conditions of operation, including the use of optical instruments for intrabeam viewing.

Class 1M: Lasers emitting in the wavelength range from 302.5 to 4000 nm that are safe under reasonably foreseeable conditions of operation, but may be hazardous if the user employs optics within the beam. Two conditions apply:

- a) for diverging beams, if the user views the laser output with certain optical instruments (for example, eye loupes, magnifiers and microscopes) within a distance of 100 mm; or
- b) for collimated beams, if the user views the laser output with certain optical instruments (for example, telescopes and binoculars).

Class 3R: Lasers that emit in the wavelength range from 302.5 to 10⁶ nm where direct intrabeam viewing is potentially hazardous but the risk is lower than for Class 3B lasers.



Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

The use of optical instruments with this product will increase eye hazard.

\wedge

WARNING

Laser Safety

Before using this instrument, always ensure that the warning light is lit when the optical output switch is turned on. If this warning light does not turn on, the equipment may be faulty and for safety reasons should be returned to an Anritsu service center or representative for repair.

The laser in this equipment is classified as Class 1, 1M, or 3R according to the IEC 60825-1: 2007 standard.

Never use optical instruments to directly view Class 1M laser products. Doing so may result in serious damage to the eyes.

Table 1 Laser Safety Classifications Based on IEC 60825-1:2007

| Model Name | Class | Max. Optical Output Power (W)* | Pulse Width(s)/ Repetition Rate | Emitted Wavelength (nm) | Beam Divergence (deg) | Incorporated Laser Specification (refer to Table 2) | Laser Aperture |
|------------------------|-------|--|--|-------------------------------|-----------------------------|---|-------------------|
| MU909014A -053/063 | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1625 | 11.5 | d) | Figure 1, [1] |
| MU909014A1 | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1625 | 11.5 | d) | Figure 2, [1] |
| -053/063 | 3R | 0.003 | CW | 650 | 11.5 | f) | Figure 2, [2] |
| MU909014A -054/064 | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1650 | 11.5 | e) | Figure 1, [1] |
| MU909014A1 | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1650 | 11.5 | e) | Figure 2, [1] |
| -054/064 | 3R | 0.003 | CW | 650 | 11.5 | f) | Figure 2, [2] |
| MU909015A6- 053/063 | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1625 | 11.5 | d) | Figure 1, [1] |
| MU909015A6- 054/064 | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1650 | 11.5 | e) | Figure 1, [1] |
| MU909014B MU909015B | 1M | 0.15 | 20×10 ⁻⁶ / 0.015 | 1310 | 11.5 | a) | Figure 1, [1] |
| -056/066 | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1550 | 11.5 | c) | Figure 1, [1] |

Table 1 Laser Safety Classifications Based on IEC 60825-1:2007 (Continued)

| | | | , | | | • | , |
|--|-------|--|--|-------------------------------|-----------------------------|---|-------------------|
| Model Name | Class | Max. Optical Output Power (W)* | Pulse Width(s)/ Repetition Rate | Emitted Wavelength (nm) | Beam Divergence (deg) | Incorporated Laser Specification (refer to Table 2) | Laser Aperture |
| | 1M | 0.15 | 20×10 ⁻⁶ / 0.015 | 1310 | 11.5 | a) | Figure 2, [1] |
| MU909014B1 MU909015B1 -056/066 | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1550 | 11.5 | c) | Figure 2, [1] |
| | 3R | 0.003 | CW | 650 | 11.5 | f) | Figure 2, [2] |
| | 1M | 0.15 | 20×10 ⁻⁶ / 0.015 | 1310 | 11.5 | a) | Figure 3, [1] |
| MU909014C/C6 MU909015C/C6 -057/067 | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1550 | 11.5 | c) | Figure 3, [1] |
| | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1625 | 11.5 | d) | Figure 3, [2] |
| | 1M | 0.15 | 20×10 ⁻⁶ / 0.015 | 1310 | 11.5 | a) | Figure 3, [1] |
| MU909014C/C6 MU909015C/C6 -058/068 | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1550 | 11.5 | c) | Figure 3, [1] |
| | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1650 | 11.5 | e) | Figure 3, [2] |
| | 1M | 0.15 | 20×10 ⁻⁶ / 0.015 | 1310 | 11.5 | a) | Figure 1, [1] |
| MU909015C -059/069 | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1490 | 11.5 | b) | Figure 1, [1] |
| | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1550 | 11.5 | c) | Figure 1, [1] |
| | 1M | 0.15 | 20×10 ⁻⁶ / 0.015 | 1310 | 11.5 | a) | Figure 3, [1] |
| MU909015C6 -059/069 | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1490 | 11.5 | b) | Figure 3, [1] |
| | 1 | 0.15 | 20×10 ⁻⁶ / 0.009 | 1550 | 11.5 | c) | Figure 3, [1] |

^{*:} Indicates the possible optical output power when each and every reasonably foreseeable single-fault condition is included.

Table 2 Incorporated Laser Specifications

| Incorpor ated Laser | Max. Optical Output Power (W)*1 | Pulse Width (s)/Repetition Rate | Emitted Wavelength (nm) | Beam Divergence (deg) *2 |
|---------------------------|---------------------------------------|---------------------------------------|----------------------------|--------------------------------|
| a) | 0.3 | 20×10 ⁻⁶ /0.015 | 1310 | 11.5 |
| b) | 0.3 | 20×10 ⁻⁶ /0.009 | 1490 | 11.5 |
| c) | 0.3 | 20×10 ⁻⁶ /0.009 | 1550 | 11.5 |
| d) | 0.3 | 20×10 ⁻⁶ /0.009 | 1625 | 11.5 |
| e) | 0.3 | 20×10 ⁻⁶ /0.009 | 1650 | 11.5 |
| f) | 0.003 | CW | 650 | 11.5 |

^{*1:} Maximum output power is the estimated value when something breaks down.

^{*2:} This product incorporates a laser diode module with optical fiber output.

Table 3 Labels on Product

| | Туре | Label | Affixed to: | Model Name |
|---|----------------|---|----------------|--|
| 1 | Explanation | IEC 60825-1:2007 CLASS 1 LASER PRODUCT | Figure 4, A | MU909014A MU909015A6 |
| 2 | Explanation | IEC 60825-1:2007 INVISIBLE LASER RADIATION DO NOT VIEW DIRECTORY WITH OPTICAL INSTRUMENTS (MAX OUTPUT POWER) (PULSE DURATION) (WAVELENGTH) 150mW ≤20 s 1310rm CLASS 1M LASER PRODUCT | Figure 4, B | MU909014B/C/C6 MU909015B/C/C6 |
| 3 | Explanation | IEC 60825-1:2007 VISIVLE LASER RADIATION AVOID DIRECT EYE EXPOSURE (MAX OUTPUT POWER) (PULSE DURATION) (WAVELENGTH) CW 650rm CLASS 3R LASER PRODUCT | Figure 4, C | MU909014A1/ MU909014B1/ MU909015B1 |
| 4 | Certification | THIS PRODUCT COMPLIES WITH 21 CFR 1040. 10 AND 1040. 11 EXCEPT FOR DEVIATIONS PURSUANT TO LASER NOTICE NO. 50 DATED JUNE 24, 2007 | Figure 4, | All models |
| 5 | Identification | ANRITSU CORP. 5-1-1, ONNA, ATSUGI-SHI,KANAGAWA 243-8555, JAPAN Manufactured by : UP September . 2010 | Figure 4, E | All models |
| 6 | Warning | | Figure 4, | MU909014A1/ MU909014B1/ MU909015B1 |
| 7 | Aperture | Laser aperture | Figure 4, G | MU909014A1/ MU909014B1/ MU909015B1 |

Laser Radiation Markings

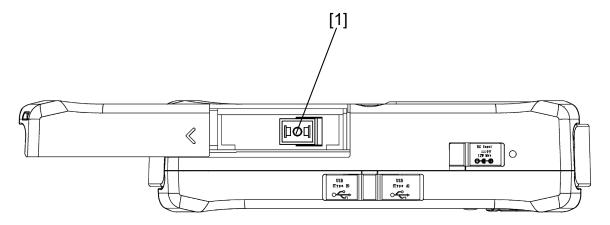


Figure 1 Locations of Laser Beam Apertures (MU909014A/B MU909015A6/B and MU909015C-059/069)

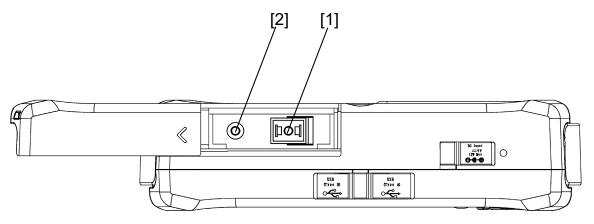


Figure 2 Locations of Laser Beam Apertures (MU909014A1/B1 and MU909015B1)


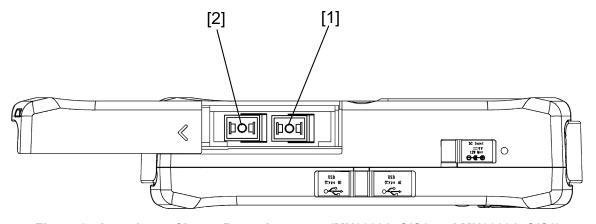


Figure 3 Locations of Laser Beam Apertures (MU909014C/C6 and MU909015C/C6)



FOR U.S. CUSTOMERS Please Recycle.

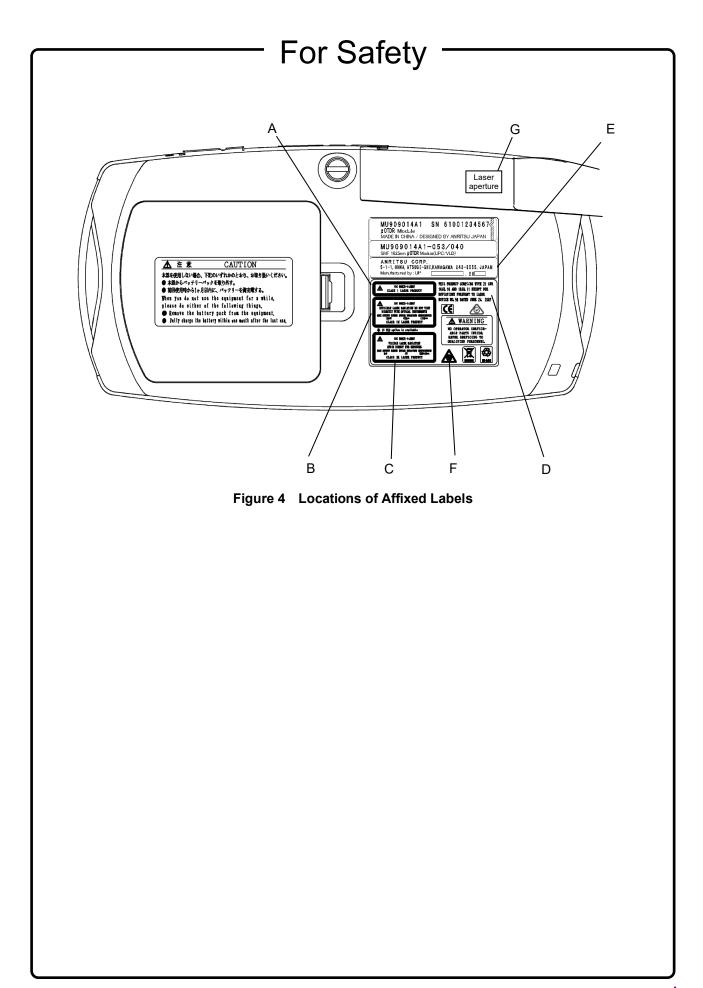

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Before disposing of this product, discharge the battery and mail it to your Anritsu Service or Sales office.

- 1. Attach the battery pack to the product.
- 2. Disconnect the AC adapter, if used.
- 3. Turn the power switch to on.
- 4. Set Auto Backlight to Off and Auto Power Off to Off.
- 5. Leave the product on until the power indicator goes off; the battery is now discharged.
- 6. Remove the battery.
- 7. Insulate the battery terminals with adhesive tape.
- 8. Mail it to your Anritsu Service or Sales office, or to the following address.

ANRITSU COMPANY 490 Jarvis Drive, Morgan Hill, CA 95037-2809, U.S.A.

FOR EU & EFTA CUSTOMERS Please Recycle.





Read the following when using products to which the mark shown on the above is attached.

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste. Check with your local solid-waste disposal officials for details of recycling options or proper disposal in your area.

Before disposing of this product, discharge the battery and mail it to your Anritsu Service or Sales office.

- 1. Disconnect the AC adapter, if used.
- 2. Turn the power switch to on.
- 3. Leave the product on until the power indicator goes off; the battery is now discharged.
- 4. Remove the battery.
- 5. Insulate the battery terminals with adhesive tape.
- 6. Please recycle in accordance with your national or regional legislation.

Nach Gebrauch der Ver Kaufsstelle Zurückgeben.

Après usage à rapporter au point de vente.



CAUTION

External Storage Media

This equipment uses a USB flash drive as external storage media for storing data and programs. If this media is mishandled or becomes faulty, important data may be lost.

It is recommended to periodically back up all important data and programs to protect them from being lost accidentally.

Anritsu will not be held responsible for lost data.

Pay careful attention to the following points.

- Never remove the USB flash drive from the equipment while it is being accessed.
- The USB flash drive may be damaged by static electric charges.
- Anritsu has thoroughly tested all external storage media shipped with this equipment. Users should note that external storage media not shipped with this equipment may not have been tested by Anritsu, thus Anritsu cannot guarantee the performance or suitability of such media.

Hard disk

The equipment is uses internal flash memory for storing data and programs. If this media is mishandled or becomes faulty, important data may be lost. It is recommended to periodically back up all important data and programs to protect them from being lost accidentally.

Anritsu will not be held responsible for lost data.

To reduce the possibility of data loss, particular attention should be given to the following points.

- The equipment should only be used within the recommend temperature range, and should not be used in locations where the temperature may fluctuate suddenly.
- Exercise care not to bang or shake the equipment whilst the power is on.

Use in a Residential Environment

This equipment is designed for an industrial environment.

In a residential environment, this equipment may cause radio interference in which case the user may be required to take adequate measures.

Use in Corrosive Atmospheres

Exposure to corrosive gases such as hydrogen sulfide, sulfurous acid, and hydrogen chloride will cause faults and failures.

Note that some organic solvents release corrosive gases.

Equipment Certificate

Anritsu Corporation certifies that this equipment was tested before shipment using calibrated measuring instruments with direct traceability to public testing organizations recognized by national research laboratories, including the National Institute of Advanced Industrial Science and Technology, and the National Institute of Information and Communications Technology, and was found to meet the published specifications.

Anritsu Warranty

Anritsu Corporation will repair this equipment free-of-charge if a malfunction occurs within one year after shipment due to a manufacturing fault, and software bug fixes will be performed in accordance with the separate Software End-User License Agreement, provide, however, that Anritsu Corporation will deem this warranty void when:

- The fault is outside the scope of the warranty conditions separately described in the operation manual.
- The fault is due to mishandling, misuse, or unauthorized modification or repair of the equipment by the customer.
- The fault is due to severe usage clearly exceeding normal usage.
- The fault is due to improper or insufficient maintenance by the customer.
- The fault is due to natural disaster, including fire, wind or flood, earthquake, lightning strike, or volcanic ash, etc.
- The fault is due to damage caused by acts of destruction, including civil disturbance, riot, or war, etc.
- The fault is due to explosion, accident, or breakdown of any other machinery, facility, or plant, etc.
- The fault is due to use of non-specified peripheral or applied equipment or parts, or consumables, etc.
- The fault is due to use of a non-specified power supply or in a non-specified installation location.
- The fault is due to use in unusual environments(Note).
- The fault is due to activities or ingress of living organisms, such as insects, spiders, fungus, pollen, or seeds.

In addition, this warranty is valid only for the original equipment purchaser. It is not transferable if the equipment is resold.

Anritsu Corporation shall assume no liability for damage or financial loss of the customer due to the use of or a failure to use this equipment, unless the damage or loss is caused due to Anritsu Corporation's intentional or gross negligence.

Note:

For the purpose of this Warranty, "unusual environments" means use:

- In places of direct sunlight
- In dusty places
- In liquids, such as water, oil, or organic solvents, and medical fluids, or places where these liquids may adhere
- In salty air or in place chemically active gases (sulfur dioxide, hydrogen sulfide, chlorine, ammonia, nitrogen dioxide, or hydrogen chloride etc.) are present
- In places where high-intensity static electric charges or electromagnetic fields are present
- In places where abnormal power voltages (high or low) or instantaneous power failures occur
- In places where condensation occurs
- In the presence of lubricating oil mists
- In places at an altitude of more than 2,000 m
- In the presence of frequent vibration or mechanical shock, such as in cars, ships, or airplanes

Anritsu Corporation Contact

In the event of this equipment malfunctions, please contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

Notes On Export Management

This product and its manuals may require an Export License/Approval by the Government of the product's country of origin for re-export from your country.

Before re-exporting the product or manuals, please contact us to confirm whether they are export-controlled items or not.

When you dispose of export-controlled items, the products/manuals need to be broken/shredded so as not to be unlawfully used for military purpose.

Crossed-out Wheeled Bin Symbol

Equipment marked with the Crossed-out Wheeled Bin Symbol complies with council directive 2012/19/EU (the "WEEE Directive") in European Union.



For Products placed on the EU market after August 13, 2005, please contact your local Anritsu representative at the end of the product's useful life to arrange disposal in accordance with your initial contract and the local law.

Software End-User License Agreement (EULA)

Please carefully read and accept this Software End-User License Agreement (hereafter this EULA) before using (includes executing, copying, installing, registering, etc.) this Software (includes programs, databases, scenarios, etc., used to operate, set, etc., Anritsu electronic equipment, etc.). By using this Software, you shall be deemed to have agreed to be bound by the terms of this EULA, and Anritsu Corporation (hereafter Anritsu) hereby grants you the right to use this Software with the Anritsu specified equipment (hereafter Equipment) for the purposes set out in this EULA.

Article 1. Grant of License and Limitations

- You may not sell, transfer, rent, lease, lend, disclose, sublicense, or otherwise distribute this Software to third parties, whether or not paid therefor.
- 2. You may make one copy of this Software for backup purposes only.
- 3. You are not permitted to reverse engineer, disassemble, decompile, modify or create derivative works of this Software.
- 4. This EULA allows you to install one copy of this Software on one piece of Equipment.

Article 2. Disclaimers

To the extent not prohibited by law, in no event shall Anritsu be liable for direct, or any incidental, special, indirect or consequential damages whatsoever, including, without limitation, damages for loss of profits, loss of data, business interruption or any other commercial damages or losses, and damages claimed by third parties, arising out of or related to your use or inability to use this Software, unless the damages are caused due to Anritsu's intentional or gross negligence.

Article 3. Limitation of Liability

1. If a fault (bug) is discovered in this Software, making this Software unable to operate as described in the operation manual or specifications even though you have used this Software as described in the manual, Anritsu shall at its own discretion, fix the bug, or replace the software, or suggest a workaround, free-of-charge, provided, however, that the faults caused by the following items and any of your lost or

damaged data whatsoever shall be excluded from repair and the warranty.

- If this Software is deemed to be used for purposes not described in the operation manual or specifications.
- ii) If this Software has been used in conjunction with other non-Anritsu-approved software.
- iii) If this Software or the Equipment has been modified, repaired, or otherwise altered without Anritsu's prior approval.
- iv) For any other reasons out of Anritsu's direct control and responsibility, such as but not limited to, natural disasters, software virus infections, or any devices other than this Equipment, etc.
- 2. Expenses incurred for transport, hotel, daily allowance, etc., for on-site repairs or replacement by Anritsu engineers necessitated by the above faults shall be borne by you.
- 3. The warranty period for faults listed in Section 1 of this Article shall be either 6 months from the date of purchase of this Software or 30 days after the date of repair or replacement, whichever is longer.

Article 4. Export Restrictions

You shall not use or otherwise export or re-export directly or indirectly this Software except as authorized by the laws and regulations of Japan and the United States, etc. In particular, this Software shall not be exported or re-exported (a) into any Japan or US embargoed countries or (b) to anyone restricted by the Japanese export control regulations, or the US Treasury Department's list of Specially Designated Nationals or the US Department of Commerce Denied Persons List or Entity List. In using this Software, you warrant that you are not located in any such embargoed countries or on any such lists. You also agree that you will not use or otherwise export or re-export this Software for any purposes prohibited by the Japanese and US laws and regulations, including, without limitation, the development, design and manufacture or production of missiles or nuclear, chemical or biological weapons of mass destruction, and conventional weapons.

Article 5. Change of Terms

Anritsu may change without your approval the terms of this EULA if the changes are for the benefit of general customers, or are reasonable in light of the purpose of this EULA and circumstances of the changes. At the time of change, Anritsu will inform you of those changes and its effective date, as a general rule 45 days, in advance on its website, or in writing or by e-mail.

Article 6. Termination

1. Anritsu may terminate this EULA immediately if you violate any conditions described herein. This EULA shall also be terminated immediately by Anritsu if there is any good reason that it is deemed difficult to continue this EULA, such as your violation of Anritsu copyrights, patents, etc. or any laws and ordinances, or if it turns out that you belong to an antisocial organization

- or has a socially inappropriate relationship with members of such organization.
- 2. You and Anritsu may terminate this EULA by a written notice to the other party 30 days in advance.

Article 7. Damages

If Anritsu suffers any damages or loss, financial or otherwise, due to your violation of the terms of this EULA, Anritsu shall have the right to seek proportional damages from you.

Article 8. Responsibility after Termination

Upon termination of this EULA in accordance with Article 6, you shall cease all uses of this Software immediately and shall as directed by Anritsu either destroy or return this Software and any backup copies, full or partial, to Anritsu.

Article 9. Negotiation for Dispute Resolution

If matters of interpretational dispute or items not covered under this EULA arise, they shall be resolved by negotiations in good faith between you and Anritsu.

Article 10. Governing Law and Court of Jurisdiction

This EULA shall be governed by and interpreted in accordance with the laws of Japan without regard to the principles of the conflict of laws thereof, and any disputes arising from or in relation to this EULA that cannot be resolved by negotiation described in Article 9 shall be subject to and be settled by the exclusive agreed jurisdiction of the Tokyo District Court of Japan.

Revision History:

February 29th, 2020 December 17th, 2021

Cautions Against Computer Virus Infection

- Copying files and data
 - Only files that have been provided directly from Anritsu or generated using Anritsu equipment should be copied to the instrument.

 All other required files should be transferred by means of USB flash drive or CompactFlash media after undergoing a thorough virus check.
- Adding software
 Do not download or install software that has not been specifically recommended or licensed by Anritsu.
- Network connections
 Ensure that the network has sufficient anti-virus security protection in place.

Protection Against Computer Virus Infections

Prior to the software installation

Before installing this software or any other software recommended or approved by Anritsu, run a virus scan on your computer, including removable media (e.g. USB flash drive and CF memory card) you want to connect to your computer.

When using this software and connecting with the measuring instrument

- Copying files and data
 - On your computer, do not save any copies other than the following:
 - Files and data provided by Anritsu
 - Files created by this software
 - Files specified in this document
 Before copying these files and/or data, run a virus scan, including removable media (e.g. USB flash drive and CF memory card).
- Connecting to network
 Connect your computer to the network that provides adequate protection against computer viruses.

Cautions on Proper Operation of Software

This software may not operate normally if any of the following operations are performed on your computer:

- Simultaneously running any software other than that recommended or approved by Anritsu
- Closing the lid (Laptop computer)
- Turning on the screen saver function
- Turning on the battery-power saving function (Laptop computer)

For how to turn off the functions, refer to the operation manual that came with your computer.

CE Conformity Marking

Anritsu affixes the CE conformity marking on the following products in accordance with the Decision 768/2008/EC to indicate that they conform to the EMC, LVD, and RoHS directive of the European Union (EU).

CE marking



1. Product Model Model:

| MT9090A | Main frame |
|------------|-------------------|
| MU909014A1 | μ OTDR Module |
| MU909014B | μ OTDR Module |
| MU909014B1 | μ OTDR Module |
| MU909014C | μ OTDR Module |
| MU909014C6 | μ OTDR Module |
| MU909015A6 | μ OTDR Module |
| MU909015B | μ OTDR Module |
| MU909015B1 | μ OTDR Module |
| MU909015C | μ OTDR Module |
| MU909015C6 | μ OTDR Module |

2. Applied Directive

EMC: Directive 2014/30/EU LVD: Directive 2014/35/EU

RoHS: Directive 2011/65/EU, (EU) 2015/863

3. Applied Standards

EMC: Emission: EN 61326-1: 2013 (Class A)
 Immunity: EN 61326-1: 2013 (Table 2)

| | Performance Criteria* |
|------------------------------|-----------------------|
| IEC 61000-4-2 (ESD) | В |
| IEC 61000-4-3 (EMF) | Α |
| IEC 61000-4-4 (Burst) | В |
| IEC 61000-4-5 (Surge) | В |
| IEC 61000-4-6 (CRF) | Α |
| IEC 61000-4-8 (RPFMF) | Α |
| IEC 61000-4-11 (V dip/short) | B, C |

*: Performance Criteria

- A: The equipment shall continue to operate as intended during and after the test. No degradation of performance or loss of function is allowed below a performance level specified by the manufacturer, when the equipment is used as intended.

 The performance level may be replaced by a permissible loss of performance. If the minimum performance level or the permissible performance loss is not specified by the manufacturer, either of these may be derived from the product description and documentation and what the user may reasonably expect from the equipment if used as intended.
- B: The equipment shall continue to operate as intended after the test. No degradation of performance or loss of function is allowed below a performance level specified by the manufacturer, when the equipment is used as intended. The performance level may be replaced by a permissible loss of performance. During the test, degradation of performance is however allowed. No change of actual operating state or stored data is allowed. If the minimum performance level or the permissible performance loss is not specified by the manufacturer, either of these may be derived from the product description and documentation and what the user may reasonably expect from the equipment if used as intended.
- C: Temporary loss of function is allowed, provided the function is self-recoverable or can be restored by the operation of the controls.

Harmonic current emissions:

EN 61000-3-2: 2014 (Class A equipment)

No limits apply to this equipment with an active input power under 75 W.


• LVD: EN 61010-1: 2010 +A1: 2019 (Pollution Degree 2)

• RoHS: EN IEC 63000: 2018 (Category 9)

If the third digit of the serial number is "7", the product complies with Directive 2011/65/EU as amended by (EU) 2015/863.

(Pb,Cd,Cr6+,Hg,PBB,PBDE,DEHP,BBP,DBP,DIBP) If the third digit of the serial number is "6", the product complies with Directive 2011/65/EU.

(Pb,Cd,Cr6+,Hg,PBB,PBDE)

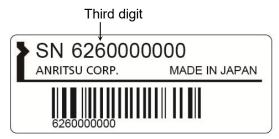

Serial number example

4. Contact

Name: Anritsu GmbH

Address, city: Nemetschek Haus, Konrad-Zuse-Platz 1

81829 München,

Country: Germany

UKCA Marking

Anritsu affixes the UKCA marking on the following products in accordance with the guidance to indicate that they conform to the EMC, LVD, and RoHS regulations in the United Kingdom.

UKCA marking



1. Product Model Model:

MT9090A Main frame MU909014A μOTDR Module MU909014A1 μOTDR Module MU909014B μOTDR Module MU909014B1 μOTDR Module MU909014C μOTDR Module MU909014C6 μOTDR Module MU909015A6 μOTDR Module MU909015B μOTDR Module MU909015B1 μOTDR Module MU909015C μOTDR Module MU909015C6 μOTDR Module

2. Applied Regulations

EMC: S.I. 2016 No. 1091 LVD: S.I. 2016 No. 1101 RoHS: S.I. 2012 No. 3032

3. Applied Standards

• EMC: Emission: EN 61326-1: 2013 (Class A)

Immunity: EN 61326-1: 2013 (Table 2)

• LVD: EN 61010-1: 2010 +A1:2019 (Pollution Degree 2)

• RoHS: EN IEC 63000: 2018 (Category 9)

4. Contact

Name: ANRITSU EMEA Ltd.

Address, city: 200 Capability Green, Luton

Bedfordshire, LU1 3LU

Country: United Kingdom

RCM Conformity Marking

Anritsu affixes the RCM mark on the following products in accordance with the regulation to indicate that they conform to the EMC framework of Australia/New Zealand.

RCM marking



1. Product Model Model:

| Main frame |
|-------------------|
| μ OTDR Module |
| |

2. Applied Standards

EMC: Emission: EN 61326-1: 2013 (Class A equipment)

About This Manual

This document explains the methods for operating, calibrating, and maintaining the MT9090A Network Master main frame and following $\mu OTDR$ modules.

- MU909014A/A1
- MU909014B/B1
- MU909014C/C6
- MU909015A6
- MU909015B/B1
- MU909015C/C6

In particular, make sure you read Chapter 1 "Overview" so you have a clear understanding of the basic functions and operations. The other chapters provide more details; use them in conjunction with the glossary at the back of the manual to quickly find what you need.

Refer to the figure in Section 4.1 "Measurement Procedure" for a quick summary of the operation flow.

Table of Contents

| For Safe | ety | iii |
|----------|---|------|
| About T | his Manual | I |
| Chaptei | r 1 Outline | 1-1 |
| 1.1 | Overview of µOTDR | 1-2 |
| 1.2 | Application | 1-11 |
| 1.3 | Terminology | 1-12 |
| Chaptei | r 2 Preparation | 2-1 |
| 2.1 | Product Configuration | 2-2 |
| 2.2 | Name of Each Part | |
| 2.3 | Basic Notes on Use | 2-12 |
| 2.4 | Supplying Power | 2-13 |
| 2.5 | Using Ni-MH Battery Pack | 2-14 |
| 2.6 | Connecting Fiber to Measurement Port | 2-18 |
| 2.7 | Cleaning optical connector and adapter | 2-19 |
| 2.8 | Cautions on Handling Optical Fiber Cables | 2-23 |
| 2.9 | Changing Optical Connector | 2-25 |
| 2.10 | Connecting Peripheral Devices | 2-27 |
| 2.11 | Changing Test Module | 2-30 |
| Chaptei | r 3 General Operation and System | |
| | Setups | 3-1 |
| 3.1 | Powering Up and Down | 3-2 |
| 3.2 | Titles of Screen Parts | 3-4 |
| 3.3 | Changing General Settings | 3-6 |
| 3.4 | Managing Files – Mass Storage | 3-18 |
| 3.5 | Capturing Screen Images | 3-27 |
| 3.6 | Using Softkey Board | 3-28 |
| 3.7 | Using Help Function | 3-30 |
| 3.8 | Confirming Version Information | 3-31 |
| 3.9 | Setting Screen Displayed after Power-Up | 3-33 |

| 4.1 Measurement Procedure 4-2 4.2 Setting Parameters and Preferences 4-3 4.3 Starting Measurement 4-19 4.4 Viewing Trace 4-22 4.5 Analyzing Trace 4-33 4.6 Setting header to trace 4-42 4.7 Saving trace manually 4-44 4.8 Loading Trace Data (Mass Storage-Load) 4-47 4.9 Restoring Defaults (All Defaults) 4-49 4.10 Calculation Method 4-50 4.11 Using VFL (Visual Fault Locator) 4-58 4.12 Measuring with Fiber Visualizer 4-59 4.13 Creating a Summary 4-72 Chapter 5 Locating Drop Cable Faults 5-1 5.1 Models That Support the DCFL Function 5-2 5.2 Measuring a Drop Cable 5-4 5.3 Measuring a Drop Cable 5-4 5.4 Viewing Trace 5-11 5.5 Saving Trace Data 5-11 5.6 Loading Trace Data 5-11 5.0 Loading Trace Data 5-11 | hapte | r 4 Locating Fiber Faults4-1 |
|---|--------|--|
| 4.3 Starting Measurement. 4-19 4.4 Viewing Trace 4-22 4.5 Analyzing Trace 4-33 4.6 Setting header to trace 4-42 4.7 Saving trace manually 4-44 4.8 Loading Trace Data (Mass Storage-Load) 4-47 4.9 Restoring Defaults (All Defaults) 4-49 4.10 Calculation Method 4-50 4.11 Using VFL (Visual Fault Locator) 4-58 4.12 Measuring with Fiber Visualizer 4-59 4.13 Creating a Summary 4-72 Chapter 5 Locating Drop Cable Faults 5-1 5.1 Models That Support the DCFL Function 5-2 5.2 Measurement Procedure 5-3 5.3 Measuring a Drop Cable 5-4 5.4 Viewing Trace 5-11 5.5 Saving Trace Data 5-11 5.6 Loading Trace Data 5-11 Chapter 6 Measuring Optical Power of PON System 6-1 6.1 Using PON Power Meter 6-2 Chapter 7 | _ | _ |
| 4.4 Viewing Trace | 4.2 | Setting Parameters and Preferences4-3 |
| 4.5 Analyzing Trace | 4.3 | - |
| 4.6 Setting header to trace | 4.4 | - |
| 4.7 Saving trace manually | 4.5 | Analyzing Trace4-33 |
| 4.8 Loading Trace Data (Mass Storage-Load) | 4.6 | Setting header to trace4-42 |
| 4.9 Restoring Defaults (All Defaults) | 4.7 | Saving trace manually4-44 |
| 4.10 Calculation Method | 4.8 | Loading Trace Data (Mass Storage-Load)4-47 |
| 4.11 Using VFL (Visual Fault Locator) | 4.9 | Restoring Defaults (All Defaults)4-49 |
| 4.12 Measuring with Fiber Visualizer | 4.10 | Calculation Method4-50 |
| ### Chapter 5 Locating Drop Cable Faults | 4.11 | Using VFL (Visual Fault Locator)4-58 |
| ### Shapter 5 Locating Drop Cable Faults | 4.12 | Measuring with Fiber Visualizer4-59 |
| 5.1 Models That Support the DCFL Function | 4.13 | Creating a Summary4-72 |
| 5.1 Models That Support the DCFL Function | Shante | r 5 Locating Drop Cable Faults 5-1 |
| 5.2 Measurement Procedure 5-3 5.3 Measuring a Drop Cable 5-4 5.4 Viewing Trace 5-11 5.5 Saving Trace Data 5-11 5.6 Loading Trace Data 5-11 Chapter 6 Measuring Optical Power of PON System 6-1 6.1 Using PON Power Meter 6-2 Chapter 7 Checking Fiber Connection End (Optical Fiber Identification) 7-1 7.1 Confirming Fiber Connection End (Optical Fiber Identification) 7-2 7.2 Using Light Source 7-3 7.3 Measuring Optical Power 7-5 Chapter 8 Measuring Loss of Optical Parts 8-1 8.1 Measuring Optical Loss 8-2 | - | |
| 5.3 Measuring a Drop Cable .5-4 5.4 Viewing Trace .5-11 5.5 Saving Trace Data .5-11 5.6 Loading Trace Data .5-11 Chapter 6 Measuring Optical Power of PON System .6-1 6.1 Using PON Power Meter .6-2 Chapter 7 Checking Fiber Connection End .6-2 Chapter 7 Checking Fiber Connection End .6-2 Chapter 8 Using Light Source .7-3 7.3 Measuring Optical Power .7-5 Chapter 8 Measuring Loss of Optical Parts .8-1 8.1 Measuring Optical Loss .8-2 | _ | • • |
| 5.4 Viewing Trace | _ | |
| 5.5 Saving Trace Data | | |
| Chapter 6 Measuring Optical Power of PON System | _ | |
| Chapter 6 Measuring Optical Power of PON System | | |
| System | 5.0 | Loading Trace Data5-11 |
| 6.1 Using PON Power Meter | hapte | r 6 Measuring Optical Power of PON |
| 6.1 Using PON Power Meter | | System 6-1 |
| 7.1 Confirming Fiber Connection End (Optical Fiber Identification) | 6.1 | - |
| 7.1 Confirming Fiber Connection End (Optical Fiber Identification) | `hanto | r 7 Chacking Fiber Connection End 7-1 |
| (Optical Fiber Identification) | - | _ |
| 7.2 Using Light Source | 7.1 | <u> </u> |
| 7.3 Measuring Optical Power | 7.0 | • |
| Chapter 8 Measuring Loss of Optical Parts 8-1 8.1 Measuring Optical Loss8-2 | | |
| 8.1 Measuring Optical Loss8-2 | 7.3 | Measuring Optical Power7-5 |
| 8.1 Measuring Optical Loss8-2 | hante | r 8 Measuring Loss of Optical Parts 8-1 |
| | - | |
| | | |

11

12

0

Index

| Chapter | 9 Inspecting Fiber Surface | 9-1 |
|------------------|--|------------|
| 9.1 | Types of VIPs | 9-2 |
| 9.2 | Connecting VIP | 9-3 |
| 9.3 | Using VIP | 9-5 |
| 9.4 | Analyzing VIP Images | 9-11 |
| 9.5 | Creating a Report | 9-13 |
| 9.6 | Working with VIP Image Files | 9-18 |
| Chapter | 10 Remote GUI and Folder Sharing. | 10-1 |
| 10.1 | Configuring the Network Settings for µOTDR | 10-2 |
| 10.2 | Setting the Remote GUI Password1 | 0-18 |
| 10.3 | File Sharing Setting1 | 0-19 |
| 10.4 | Using the Remote GUI1 | 0-23 |
| Chapter | 11 Performance Test and Calibratio | n11-1 |
| 11.1 | Performance Test | 11-2 |
| 11.2 | Calibration1 | 1-32 |
| 11.3 | Performance Test Result Sheet1 | 1-33 |
| Chapter | 12 Maintenance | 12-1 |
| . 12.1 | Daily Maintenance | |
| 12.2 | Updating Firmware | |
| | Notes On Storage | |
| 12.4 | Transporting and Disposal | |
| A ppendi | ix A Specifications | A-1 |
| Append i | ix B Default Value | B-1 |
| Append i | ix C Software License | C-1 |
| Index | Ind | lex-1 |

This chapter describes the functional overview, application, and terminology of the MT9090A Network Master.

| 1.1 | Overvi | ew of µOTDR | 1-2 |
|-----|---------|---|------|
| | 1.1.1 | OTDR Function | 1-4 |
| | 1.1.2 | Connection Verification Function | 1-6 |
| | 1.1.3 | Live Communications Detection Function. | 1-6 |
| | 1.1.4 | Visual Fault Locator (VFL) Option | 1-6 |
| | 1.1.5 | PON Power Meter Function | 1-7 |
| | 1.1.6 | Light Source Function | 1-7 |
| | 1.1.7 | Optical Power Meter Function | 1-8 |
| | 1.1.8 | Optical Loss Measurement Function | 1-8 |
| | 1.1.9 | DCFL Function | 1-9 |
| | 1.1.10 | Fiber Surface Inspection Function | 1-10 |
| 1.2 | Applica | ation | 1-11 |
| 1.3 | Termin | ology | 1-12 |
| | 1.3.1 | Explanation of Terms | 1-12 |
| | 1.3.2 | Abbreviations | 1-14 |

1.1 Overview of µOTDR

The main frame of the MT9090A Network Master series is a multi-platform instrument that supports various measurement functions according to installed modules.

This manual describes how to operate the MT9090A main frame (the main frame hereafter) and fiber maintenance tester (the modules hereafter).



Figure 1.1-1 Front Panel Layout

The MT9090A Network Master series fits easily in one hand and has an OTDR function for measuring loss and detecting fault points in optical fiber systems. Some models have the functions of the PON power meter, light source, visual fault locator (VFL) optical source, power meter and optical loss test addition to OTDR function.

By connecting the accessory fiberscope, the end surface of the fiber can be displayed on the module. This function allows the inspection of the end surface of the fiber for scratches, damage, and dirt.

Measured traces and screenshots can be captured on a PC via USB connection.

The MT9090A Network Master series include the following models which consist of different specifications and functions.

Function other than OTDR Spec. Trace (nm) Dynamic range (dB) Light source meter PON Power Meter Loss test Power r 1310 1490 1625 1650 1550 Æ Model *1 MU909014A 30 *1 *1 \checkmark / MU909014A1 30 ✓ ✓ ✓ MU909014B 30 MU909014B1 30 ✓ ✓ \checkmark MU909014C 30 *1 MU909014C6 *1 30 *1 *1 MU909015A6 35 \checkmark MU909015B \checkmark \checkmark 35 ✓ **√** MU909015B1 35 MU909015C \checkmark *1 √ *1 *1 \checkmark ✓ 35 *1 MU909015C6 35

Table 1.1-1 Model Name and Difference in Specifications

This document describes all functions above. Refer to the corresponding section of the function in your model.

You can see demonstration movies on the following homepages.

https://www.anritsu.com/en-US/test-measurement/video-gallery/mt9090aconnectorcare

(MT9090A Connector Care)

https://www.anritsu.com/en-US/test-measurement/video-gallery/mt9090a frompowerontotracesaving

(MT9090A From Power on to Trace Saving)

https://www.anritsu.com/en-US/test-measurement/video-gallery/mt9090amanualanalysisofcapturedtrace

(MT9090A Manual Analysis of Captured Trace)

https://www.anritsu.com/en-US/test-measurement/video-gallery/mt9090aotdrmeasurementapplicationedition

(MT9090A OTDR Measurement Application Edition)

https://www.anritsu.com/en-US/test-measurement/video-gallery/mt9090anonotdrmeasurementfunctions

(MT9090A Non OTDR Measurement Functions)

https://www.anritsu.com/en-us/test-measurement/video-gallery/fibervisualizer

(OTDR - Fiber Visualizer)

^{*1:} Select either one of wavelengths according to the module option.

1.1.1 OTDR Function

An OTDR (Optical Time Domain Reflectometer) measures the loss and reflection of an optical fiber.

The OTDR launches optical pulses into the optical fiber and also receives optical pulses that are returned by internal reflection in the optical fiber. The loss of the optical fiber is calculated by the OTDR from the measured received optical pulses. The elapsed time from when optical pulses are launched into the fiber until they return is used to calculate the distance to and loss of displayed faults in the fiber.

The loss and distance data is stored in memory and displayed as traces on the screen. For accurate measurement, an optical pulse launched into the fiber must reach the far end of the optical fiber and the backscattered light returned by the end surface must be returned to the OTDR before the next optical pulse is launched into the fiber. Consequently, a distance range corresponding to the length of the optical fiber being measured is specified by **Range** on the Test Setup screen. If **Range** and **Pulse width** are set to Auto, the OTDR determines the optimum values for these settings.

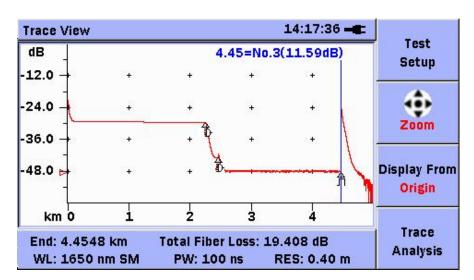


Figure 1.1.1-1 Example of OTDR Measurement Results

The OTDR has functions of detecting and analyzing points in the fiber where loss and reflected light occur using the measured results. These detected points are called 'events', which are displayed on the Trace Analysis screen.

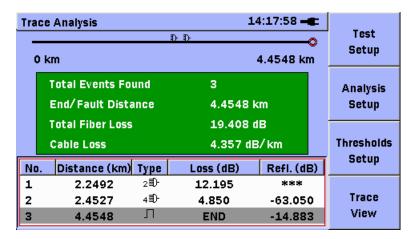


Figure 1.1.1-2 Example of Event Display

The MT9090A Network Master series has the Fiber Visualizer function to see the fiber status visually when measured by the OTDR. With the error points and connection conditions displayed graphically, the fiber statuses can be easily checked.

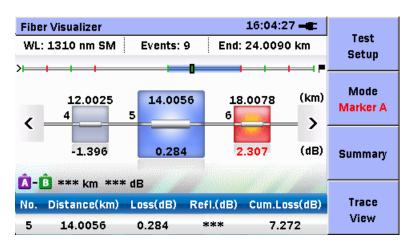


Figure 1.1.1-3 Example of Fiber Visualizer

1.1.2 Connection Verification Function

The connection verification function is used to verify that the optical fiber is connected correctly to the module before starting OTDR measurements.

The verification result is displayed as GOOD, FAIR, or POOR.

Refer to Section 4.3 "Starting Measurement" for more details.

1.1.3 Live Communications Detection Function

The live communications detection function detects the presence of optical signals used for live communications in the fiber before starting OTDR measurements.

A warning message is displayed if light with a wavelength of 1550 nm is detected.

Refer to Section 4.2.2 "Setting Measurement Method (Setup-Preferences)" for more details.

1.1.4 Visual Fault Locator (VFL) Option

It is a visible (red) light source. Since the light is visible, it is useful for locating faults in the dead zone by visually checking for diffuse escaping light.

Refer to Section 4.10 "Using VFL (Visual Fault Locator)" for more details.

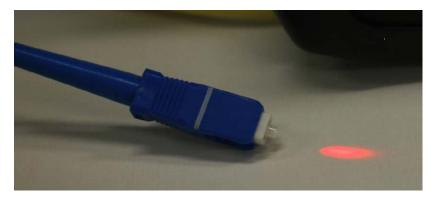


Figure 1.1.4-1 Visual Fault Locator (VFL)

1.1.5 PON Power Meter Function

The PON power meter function enables the simultaneous measurement of the optical power of two wavelengths used for the downstream signal of the Passive Optical Network (PON).

The optical power with wavelength of 1490 nm used for video communications and the optical power with wavelength of 1550 nm used for data communications are displayed.

Refer to Chapter 6 "Measuring Optical Power of PON System" for more details.

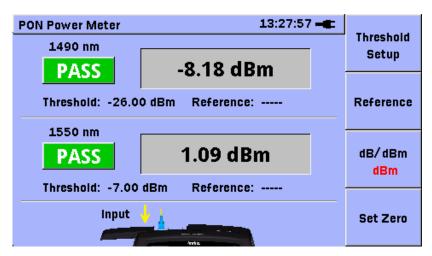


Figure 1.1.5-1 PON Power Meter Screen

1.1.6 Light Source Function

The light source function outputs continuous optical signals or modulated optical signals.

The fiber core contrast and loss can be measured with the combination of the light source function and optical power meter.

Refer to Section 7.2 "Using Light Source" for more details.

1.1.7 Optical Power Meter Function

The optical power meter function is used to detect the presence of an optical signal in the fiber cable and to confirm that the level of live communication signals meets the specified value.

Refer to Section 7.3 "Measuring Optical Power" for more details.



Figure 1.1.7-1 Optical Power Meter Screen

1.1.8 Optical Loss Measurement Function

The optical loss measurement function measures the optical loss of fibers and optical parts using the light source function and power meter function.

Refer to Chapter 8 "Measuring Loss of Optical Parts" for more details.

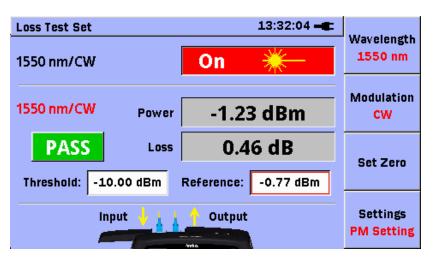


Figure 1.1.8-1 Loss Test Screen

1.1.9 DCFL Function

The DCFL function is a useful function to investigate faults occurring in a drop cable. It consists of the Power Meter function and OTDR function, so you are not required to switch measuring instruments or applications.

Refer to Chapter 5 "Investigating Fiber Abnormalities (Faults)" for more details.

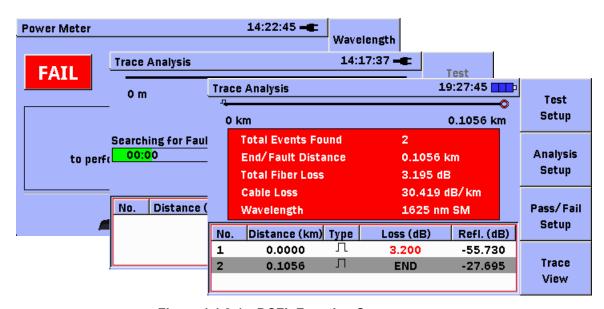


Figure 1.1.9-1 DCFL Function Screens

1.1.10 Fiber Surface Inspection Function

By connecting the accessory fiberscope to MT9090A, you can view magnified images of the surfaces of the optical I/O connector and the end surface of the connected optical fiber on the LCD of the MT9090A.

Check for scratches or dirt on the end surfaces of the optical I/O connector and the optical fiber, using the fiberscope.

Refer to Chapter 9 "Inspecting Fiber Surface" for more details.

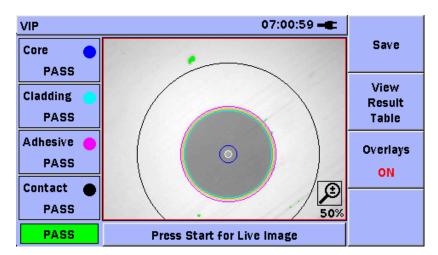


Figure 1.1.10-1 Fiber End Surface Display

1.2 Application

Finding Faults in Optical Fibers

The OTDR, PON power meter, power meter, and fiberscope functions of the MT9090A Network Master are used in a subscriber's home to troubleshoot faults in optical cables between the subscriber's home and carrier's office.

With the communication method called PON (Passive Optical Network), the optical signals at wavelength of 1310/1490/1550 nm are used for communications between the subscriber's home and carrier's office.

The μ OTDR modules find faults using optical signals at wavelengths of 1310 nm and 1550 nm. When optical signals at wavelengths of 1490 nm and 1550 nm are used for one optical fiber like the PON, it is difficult to measure the power at each wavelength using the optical power meter. The PON power meter function can identify which wavelength has the failure by measuring the optical power at each wavelength.

Since wavelengths of 1625 nm and 1650 nm are different from the wavelengths used for live optical communications, they have no impact on the live network. (Optical filter is required for ONU or OLT to block 1625/1650 nm light.)

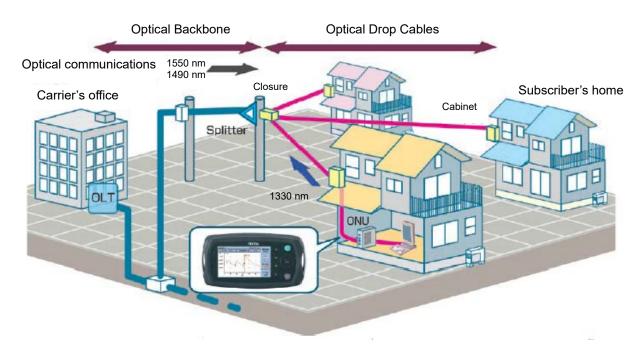


Figure 1.2-1 Finding Faults in Fiber from Each Subscriber's Home (Passive Optical Network Measurement)

1.3 Terminology

1.3.1 Explanation of Terms

This section describes the terms used in this manual.

BSC (Backscatter Coefficient)

The BSC is the proportion of reflected light to light propagating in the fiber during optical transmissions.

The BSC varies according to the fiber structure and materials.

BSL (Backscatter Level)

BSL is the level of the light reflected back to the module.

The BSL is proportional to the BSC and pulse width and inversely proportional to the Index of Refraction.

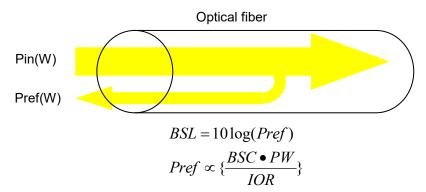


Figure 1.3.1-1 Definition of BSL

Dead Zone

The dead zone is a region of the optical fiber where BSL cannot be observed correctly due to traces caused by reflections.

The following diagram shows the dead zone as defined in Appendix A: Specifications.

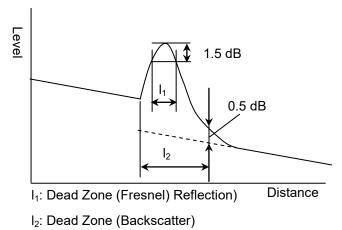


Figure 1.3.1-2 Dead Zone

Dynamic Range

The dynamic range is the ratio of the maximum and minimum measurable levels.

For an OTDR, it is the ratio of the level at the connection point of the measuring instrument and the noise level.

Refer to Section 11.1.4 "Dynamic range" for the dynamic range measurement method.

IOR (Index of Refraction)

This is the IOR of the optical fiber. The OTDR calculates distance using the time taken for the optical pulse launched into the fiber to return and the IOR.

Pulse Width

This is the width of the optical pulse launched into the fiber. A large pulse width increases the power of the optical signal returned by the fiber and faults in the fiber, so the dynamic range becomes wider. Conversely, the dead zone and resolution also become larger. Using a shorter pulse width reduces the dead zone and resolution.

Refer to Section 11.1.3 "Pulse Width" for more details about setting the pulse width measurement method.

1.3.2 Abbreviations

The following table lists the abbreviations used in this manual.

Table 1.3.2-1 List of Abbreviations

| Abbreviations | Full Term | |
|---------------|-----------------------------------|--|
| AC | Alternating Current | |
| AVG | Averaging | |
| BSC | Back Scattering Coefficient | |
| CW | Continuous Wave | |
| DC | Direct Current | |
| DCFL | Drop Cable Fault Locator | |
| IOR | Index of Refraction | |
| LS | Light Source | |
| LSA | Least Squares Approximation | |
| min | Minute | |
| MM | Multi Mode fiber | |
| MOD | Modulation | |
| N/A | Not Applicable | |
| ORL | Optical Return Loss | |
| OTDR | Optical Time Domain Reflectometer | |
| PM | Power Meter | |
| PON | Passive Optical Network | |
| Pt | Point | |
| PW | Pulse Width | |
| RES | Resolution | |
| sec | second | |
| SM | Single Mode fiber | |
| S/N | Signal to Noise Ratio | |
| TRT | Total Run Time | |
| UPC | Ultra Physical Contact | |
| USB | Universal Serial Bus | |
| VIP | Video Inspection Probe | |
| WL | Wavelength | |

Chapter 2 Preparation

This chapter describes the parts of the MU909014x/15x and the preparations before use.

| 2.1 | Product Configuration2-2 | | |
|------|---|---------------------------------------|------|
| | 2.1.1 | Standard configuration | 2-2 |
| | 2.1.2 | Options | 2-4 |
| 2.2 | Name | of Each Part | 2-6 |
| | 2.2.1 | Front Panel | 2-6 |
| | 2.2.2 | Top Connector Panel | 2-8 |
| | 2.2.3 | Back Panel | 2-10 |
| | 2.2.4 | Bottom Panel | 2-11 |
| 2.3 | Basic | Notes on Use | 2-12 |
| 2.4 | Supply | ring Power | 2-13 |
| 2.5 | Using Ni-MH Battery Pack2-14 | | |
| | 2.5.1 | Installing Ni-MH Battery Pack | 2-14 |
| | 2.5.2 | Battery Replacement – Battery pack to | |
| | | AA batteries | 2-16 |
| 2.6 | Conne | cting Fiber to Measurement Port | 2-18 |
| 2.7 | Cleaning optical connector and adapter2-19 | | |
| 2.8 | Cautions on Handling Optical Fiber Cables2-23 | | |
| 2.9 | Changing Optical Connector2-25 | | |
| 2.10 | Connecting Peripheral Devices2-27 | | |
| | 2.10.1 | Type A USB Port | 2-28 |
| | 2.10.2 | Type B USB Port | 2-29 |
| 2.11 | Chang | ing Test Module | 2-30 |

2.1 Product Configuration

2.1.1 Standard configuration

The parts included in the standard configuration are listed below. Contact your Anritsu Service and Sales Office or agent if any parts are missing or damaged.

Table 2.1.1-1 Standard Configuration

| Item | Model/Ordering Number | Name | Q'ty | Remarks |
|------------|--------------------------|--------------|------|---|
| Main frame | MT9090A | Main frame | 1 | |
| | MU909014A | μOTDR Module | 1 | Wavelength: 1625 nm or 1650 nm*2 |
| | MIT00001441 | μOTDR Module | -1 | VFL (Visual Fault Locator) |
| | MU909014A1 | | 1 | Wavelength: 1625 nm or 1650 nm*2 |
| | MU909014B | μOTDR Module | 1 | Wavelength: 1310 /1550 nm |
| | MC000014D | μοτοινισααιο | 1 | Dynamic range: 30 dB |
| | MII.00001 (D1 | μΟTDR Module | | VFL (Visual Fault Locator) |
| | MU909014B1 | | 1 | Wavelength: 1310 /1550 nm Dynamic range: 30 dB |
| | | μOTDR Module | | 3 wavelengths*2, |
| | MU909014C | | 1 | Dynamic range: 30 dB, |
| | W03030140 | | _ | Power meter |
| | MU909014C6 | μΟΤDR Module | | 3 wavelengths*2, |
| | | | 1 | Dynamic range: 30 dB, |
| | | | | Light source, Power meter, PON |
| | | | | power meter, Loss Test |
| Module*1 | MU909015A6 | μΟΤDR Module | | 1 wavelength*2, |
| | | | 1 | Dynamic range: 35 dB, |
| | | | | Light source, PON power meter, Power meter |
| | | μOTDR Module | | Wavelength: 1310/1550 nm |
| | MU909015B | | 1 | Dynamic range: 35 dB |
| | MU909015B1 | μOTDR Module | 1 | VFL (Visual Fault Locator) |
| | | | | Wavelength: 1310/1550 nm |
| | | | | Dynamic range: 35 dB |
| | MU909015C | μΟΤDR Module | | 3 wavelengths*2, |
| | | | 1 | Dynamic range: 35 dB, |
| | | | | Power meter |
| | MU909015C6 | μOTDR Module | | 3 wavelengths*2, |
| | | | 1 | Dynamic range: 35 dB, |
| | | | - | Light source, Power meter, PON |
| | | | | power meter, Loss Test |

^{*1:} Select either one

^{*2:} Specify the number of required wavelengths when purchasing modules.

Table 2.1.1-1 Standard Configuration (Cont'd)

| Item | Model/Ordering Number | Name | Q'ty | Remarks |
|-----------|--------------------------|--|------|---------------------------|
| | _ | Optical Connector | 1 | Select one option. |
| Accessory | W3585AE | MU909014A/A1/B/B1/C/C6, MU909015A6/B/B1/C/C6 μOTDR Module Quick Guide | 1 | English (Printed version) |
| | Z1579A | MU909014A/A1/B/B1/C/C6, MU909015A6/B/B1/C/C6 μOTDR Module Operation Manual (CD-R) | 1 | English, Quick Guide |

2.1.2 Options

The following options are available for use with the main frame. Select the required options as necessary. Refer to Appendix A "Specifications" for details on the specifications.

Table 2.1.2-1 Main frame Option

| Model | Name |
|-------------|----------------------------|
| MT9090A-001 | Dedicated for uOTDR Module |

Table 2.1.2-2 Module Options

| | |
|----------------|--|
| Model | Name |
| MU909014A-053 | SMF 1625nm μOTDR Module (UPC) |
| MU909014A1-053 | SMF 1625nm μOTDR Module (UPC/VLD) |
| MU909014A-054 | SMF 1650nm μOTDR Module (UPC) |
| MU909014A1-054 | SMF 1650nm μOTDR Module (UPC/VLD) |
| MU909014A-063 | SMF 1625nm µOTDR Module (APC) |
| MU909014A1-063 | SMF 1625nm µOTDR Module (APC/VLD) |
| MU909014A-064 | SMF 1650nm µOTDR Module (APC) |
| MU909014A1-064 | SMF 1650nm µOTDR Module (APC/VLD) |
| MU909014B-056 | SMF 1310/1550nm µOTDR Module (UPC) |
| MU909014B1-056 | SMF 1310/1550nm µOTDR Module (UPC/VLD) |
| MU909014B-066 | SMF 1310/1550nm µOTDR Module (APC) |
| MU909014B1-066 | SMF 1310/1550nm µOTDR Module (APC/VLD) |
| MU909014C-057 | SMF 1310/1550/1625nm μOTDR Module (UPC) |
| MU909014C6-057 | SMF 1310/1550/1625nm µOTDR Module (UPC/OPM/LS) |
| MU909014C-067 | SMF 1310/1550/1625nm μOTDR Module (APC) |
| MU909014C6-067 | SMF 1310/1550/1625nm µOTDR Module (APC/OPM/LS) |
| MU909014C-058 | SMF 1310/1550/1650nm μOTDR Module (UPC) |
| MU909014C6-058 | SMF 1310/1550/1650nm µOTDR Module (UPC/OPM/LS) |
| MU909014C-068 | SMF 1310/1550/1650nm μOTDR Module (APC) |
| MU909014C6-068 | SMF 1310/1550/1650nm µOTDR Module (APC/OPM/LS) |
| MU909015A6-053 | SMF 1625nm µOTDR Module (UPC/OPM/LS) |
| MU909015A6-063 | SMF 1625nm µOTDR Module (APC/OPM/LS) |
| MU909015A6-054 | SMF 1650nm µOTDR Module (UPC/OPM/LS) |
| MU909015A6-064 | SMF 1650nm µOTDR Module (APC/OPM/LS) |
| MU909015B-056 | SMF 1310/1550nm µOTDR Module (UPC) |
| MU909015B1-056 | SMF 1310/1550nm µOTDR Module (UPC/VLD) |
| MU909015B-066 | SMF 1310/1550nm µOTDR Module (APC) |
| MU909015B1-066 | SMF 1310/1550nm µOTDR Module (APC/VLD) |
| MU909015C-057 | SMF 1310/1550/1625nm μOTDR Module (UPC) |
| MU909015C6-057 | SMF 1310/1550/1625nm µOTDR Module (UPC/OPM/LS) |
| | |

Table 2.1.2-2 Module Options (Cont'd)

| Model | Name |
|----------------|--|
| MU909015C-067 | SMF 1310/1550/1625nm μOTDR Module (APC) |
| MU909015C6-067 | SMF 1310/1550/1625nm µOTDR Module (APC/OPM/LS) |
| MU909015C-058 | SMF 1310/1550/1650nm μOTDR Module (UPC) |
| MU909015C6-058 | SMF 1310/1550/1650nm µOTDR Module (UPC/OPM/LS) |
| MU909015C-068 | SMF 1310/1550/1650nm μOTDR Module (APC) |
| MU909015C6-068 | SMF 1310/1550/1650nm µOTDR Module (APC/OPM/LS) |
| MU909015C-059 | SMF 1310/1490/1550nm μOTDR Module (UPC) |
| MU909015C6-059 | SMF 1310/1490/1550nm µOTDR Module (UPC/OPM/LS) |
| MU909015C-069 | SMF 1310/1490/1550nm μOTDR Module (APC) |
| MU909015C6-069 | SMF 1310/1490/1550nm µOTDR Module (APC/OPM/LS) |

Table 2.1.2-3 Connector Option

| Model | Model |
|-------|----------------------------------|
| -037 | FC Connector |
| -039 | DIN 47256 Connector |
| -040 | SC Connector |
| -025 | FC-APC Connector key width 2.0mm |
| -026 | SC-APC Connector |

2.2 Name of Each Part

2.2.1 Front Panel

The front panel contains the controls, which operate unit, and the LCD display.

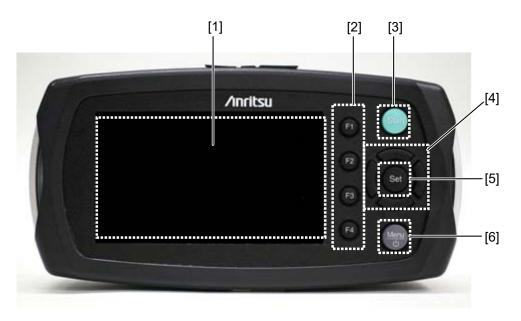


Figure 2.2.1-1 Front Panel

- [1] LCD display
- [2] F1 to F4 (Function key):

Each function key is designated depending on the current operating mode of the unit. You can find the function of each key to its immediately left in the display.

- [3] (Start key):
 - Press (Start) to start measurement.
 - Press during measurement to stops measurement.
- [4] 🖚 🕶 🕻 🕻 (Up, Down, Left, and Right keys):



- Waveform display screen—
 - Decrease the width of the trace or move the marker left.
- General Setups— Move the highlight left.



- Waveform display screen—
 Increase the width of the trace or move the marker right.
- General Setups—
 Move highlight right.
- key:
 - Waveform display screen—
 Increase the height of the trace or move the marker to the left event (Limited when Loss Mode is **Event**).
 - General Setups— Move up the highlight.



- Waveform display screen—
 Decrease the height of the trace or move the marker to the right event (Limited when Loss Mode is Event).
- General Setups—
 Move down the highlight.
- [5] Sot (Set key):
 Confirm the values entered and each selection.
- [6] (Menu/Power key):
 - Press Menu/Power key to power up the unit.
 - Press **Menu/Power** key to display the pop-up menu for the current screen if the unit is powered on.

2.2.2 Top Connector Panel

The top connector panel of the unit contains the measurement port, USB ports, DC Input port, and battery status LED.

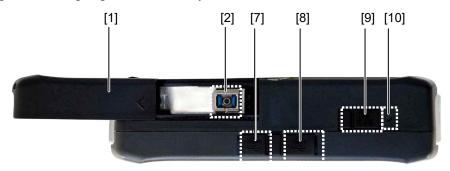


Figure 2.2.2-1 Top Connector Panel (MU909014A/B, MU909015A6/B and MU909015C-059/069)

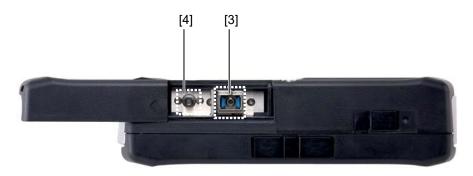


Figure 2.2.2-2 Top Connector Panel (MU909014A1/B1, MU909015B1)

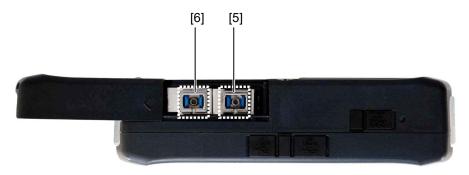


Figure 2.2.2-3 Top Connector Panel (MU909014C/C6, MU909015C/C6 and MU909015C6-059/069)

- [1] Slide Cover
- [2] Measurement Port $1625~\mathrm{nm}~\mathrm{or}~1650~\mathrm{nm}~\mathrm{OTDR}~\mathrm{(MU909014A,\,MU909015A6)}$

1310/1550 nm OTDR (MU909014B, MU909015B)

1310/1490/1550 nm OTDR (MU909015C-059/069)

- [3] Measurement Port
 1625 nm or 1650 nm OTDR (MU909014A1)
 1310/1550 nm OTDR (MU909014B1, MU909015B1)
- [4] Visual Fault Locator Port
- [5] Measurement Port
 1310/1550 nm OTDR (MU909014C/C6, MU909015C/C6)
 1310/1490/1550 nm OTDR (MU909015C6-059/069)
- [6] Measurement Port
 1625 nm or 1650 nm OTDR (MU909014C/C6, MU909015C/C6)
 Optical power meter (MU909015C6-059/069)
- [7] USB (Type B) Port
- [8] USB (Type A) Port
- [9] DC Input port
- [10] Battery Status LED

2.2.3 Back Panel

The back panel contains the battery compartment and a fastener that secures the test module to the Network Master main unit.

There are also various compliance and warning labels as well as the model and serial number label (item 3 in Figure 2.2.3-1).



Figure 2.2.3-1 Back Panel

- [1] Battery Compartment
- [2] Fastener
- [3] Model and serial number label
- [4] Compliance and warning labels

2.2.4 Bottom Panel

The bottom panel of the main frame is provided with the model and serial number label.

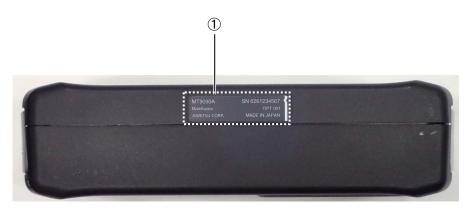


Figure 2.2.4-1 Bottom Panel

[1] Model and serial number label

2.3 Basic Notes on Use



CAUTION

Keep the measurement port cover closed except when a cable is connected. This cover prevents dust and other contaminants from collecting on the measurement port.

Condensation may occur on the inside surface of the unit when it is carried into a room (high temperature) from an outdoor location (low temperature), etc. If this occurs, allow the unit to dry out thoroughly before turning on the power. Water droplets and dust in the MT9090A, etc., can cause a short circuit, resulting in a fire, electric shock, or accident.

Use the unit within the operating temperature range (-10°C to +50°C) and storage temperature range (-30°C to +70°C). If the unit is placed in a car or other enclosed space for a long time, the ambient temperature may exceed the specified range, resulting in a unit malfunction.

Do not use any AC charger/adapter or Ni-MH battery pack other than the one supplied. Otherwise, the unit may be damaged due to nonconformity with specifications.

Never look directly into the cable connector on the equipment nor into the end of a cable connected to the equipment. If laser radiation enters the eye, there is a risk of injury.

In addition, the unit outputs high-power optical pulses. Remove the communication device from the optical fiber before measurement to prevent damage to the photo receiving circuit of the communication device connected to the optical fiber to be measured, Anritsu will take no responsibility for damage to the communication or any other device.

Anritsu recommends that the unit be inspected once a year at Anritsu Customer Services (a fee will be charged).



CAUTION (Continued)

For other notes on use, read the safety-related information in this manual thoroughly before use.

2.4 Supplying Power

Connecting AC charger/adapter

Use the AC charger/adapter provided as a standard accessory of the main

Using other AC adapters may result in damage to the unit and/or battery pack.



Figure 2.4-1 AC Adapter

- Open the DC Input connector cover (Figure 2.2.2-1) and plug the AC charger/adapter jack to the DC Input connector.
- Plug the AC charger/adapter's transformer into an AC outlet. 2.

2.5 Using Ni-MH Battery Pack

2.5.1 Installing Ni-MH Battery Pack

Follow the procedure below to install a Ni-MH battery pack.



CAUTION

Always power down the Network Master before removing the Ni-MH battery pack. The battery pack and/or the unit may be damaged when you remove the battery pack with the Network Master powered on.

Remove the Ni-MH battery pack to avoid damage to the battery pack and/or the unit when storing the Network Master for a long period of time (several months). Otherwise, be sure to recharge the unit periodically (every one or two months).

- 1. Power down the unit if operating. Disconnect the AC charger/adapter if connected.
- 2. Hold down the latch and lift the battery compartment cover (Figure 2.2.3-1) to open.
- 3. Remove batteries if installed.
- 4. Plug the battery pack connector into the battery pack plug of the module. The battery pack connector has an alignment tab to prevent reverse polarity connection. Align the connector tab with the plug slot to make the correct connection.



CAUTION

Correctly plug the three-pin battery pack connector into the battery plug. Wrong connection may damage the battery pack and main frame.

- 5. Slide the Ni-MH battery pack into the battery compartment, making sure the followings:
 - The battery release ribbon (red) is tucked underneath, leaving a certain amount exposed to use when removing the battery pack.
 - The THIS SIDE UP label is facing up.
- 6. Reattach the battery compartment cover.



Figure 2.5.1-1 Battery Compartment

- [1] Ni-MH battery pack plug
- [2] Module release latch
- [3] Ni-MH battery pack
- [4] Battery release ribbon (Red)

2.5.2 Battery Replacement – Battery pack to AA batteries

MT9090A can also be powered by AA Ni-MH or alkaline batteries. Follow the procedure below to replace the battery pack with AA batteries:



CAUTION

Always power down the unit before removing old AA batteries. Settings and data files may be lost if the batteries are removed with powered on.

If storing the unit for a long period of time (1 to 2 months), remove replaceable batteries from the unit. When periods without use in the Network Master, they may corrode or leak and damage the main frame.

Follow the instructions in the manual when using AA batteries.

When changing the batteries, always use new batteries of the same type of manufacturer and change all four batteries at a time. Wrong battery can cause the battery to overheat or damage the Network Master.

Take care not to get burned when replacing alkaline batteries with new ones. Temperature of alkaline batteries may increase by approximately 20°C after 2 hours of continuous measurement.

- 1. Power down the unit if operating. Disconnect the AC charger/adapter if connected.
- 2. Hold the latch and lift the battery compartment cover (Figure 2.2.3-1) to open.
- 3. Pull the battery release ribbon to lift the Ni-MH battery pack, and unplug it from its receptacle located next to the module release latch.
- 4. Insert 4 new AA batteries into the compartment in correct directions, referring to the polarity symbols marked next to the battery contacts.
- 5. Reattach the battery compartment cover.

Note:

The Network Master does not recharge AA Ni-MH batteries. Recharge them using a dedicated charger for Ni-MH batteries.

2.6 Connecting Fiber to Measurement Port

The measurement port is used to connect fiber for Fault Locate test applications.



CAUTION

Never force the connector ferrule or insert it at an angle into the adapter. Optical fibers are susceptible to loss from microbends or other stress. Position the patch cord to minimize mechanical strain.

Use a single mode fiber for the optical connector. If a multi-mode fiber is used by mistake, you cannot obtain accurate measurement values.

Connect the optical fiber cable to the port displayed on the screen. If the optical fiber cable is connected to a wrong port, you cannot obtain accurate measurement values.

- Slide and open the cover (Figure 2.2.2-1) on the Measurement Port. 1.
- Clean the surfaces of the connector and fiber before connecting the fiber. Refer to Section 2.7 "Cleaning optical connector and adapter" for details.
- Connect the fiber under test directly to the measurement port. 3.



Figure 2.6-1 Connecting Fiber to Measurement Port

2.7 Cleaning optical connector and adapter

Cleaning the end surface of the ferrule inside the MT9090A

Use the adapter cleaner, an applicable part for the MT9090A, to clean the ferrule inside the optical I/O connector of the MT9090A. Clean the ferrule periodically. The following shows how to clean an optical adapter, using an FC adapter as an example. Clean other types of optical adapters in the same manner. When the instrument is a model with a fixed SC connector, clean with the optical connector mounted in the module.



WARNING

Be sure to check that there is no light being emitted before cleaning and checking the ferrule end surface.



CAUTION

Performance will be unsatisfactory if the MT9090A is used with dust or dirt accumulated on the ferrule end surfaces. The ferrule end surfaces of the connected fibers and the MT9090A may burn if high-output lights are used with accumulated dust or dirt. Thoroughly clean the ferrule end surfaces of the connected fibers and the MT9090A before measurement.

1. Lift the adapter lever until the latch is released, and then gently pull out the adapter towards you.

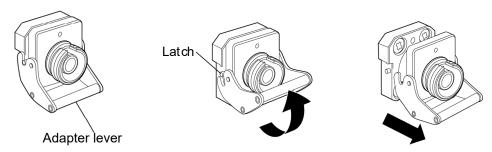


Figure 2.7-1 Cleaning of end surface of ferrule inside MT9090A - 1

2. Apply an alcohol-moistened adapter cleaner to the end surface and sides of the ferrule to clean it.

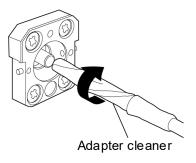


Figure 2.7-2 Cleaning of end surface of ferrule inside MT9090A - 2

3. Apply the tip of a new, dry adapter cleaner (not moistened with alcohol) to the end surface of the ferrule and wipe in one direction a few times.

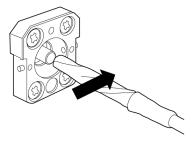


Figure 2.7-3 Cleaning of end surface of ferrule inside MT9090A - 3

- Clean inside the adapter using an adapter cleaner.
 (Refer to the optical adapter cleaning procedure in the next page.)
- 5. Attach the adapter in the reverse order or removal with care not to damage the end surface of the ferrule.

Cleaning the optical adapter

Use the adapter cleaner for the MT9090A to clean the optical adapter used for optical fiber cable connection. The following shows how to clean an optical adapter, using an FC adapter as an example. Clean other types of optical adapters in the same manner.

The following method should also be used for cleaning the adapter, which is removed before cleaning the end surface of the ferrule inside the MT9090A.

Insert an adapter cleaner into the split sleeve of the optical adapter, and rotate it in one direction while moving it back and forth.

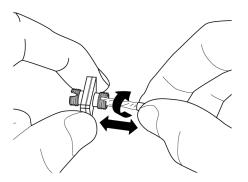


Figure 2.7-4 Cleaning of end surface of ferrule inside MT9090A - 4

Note:

Confirm the ferrule diameter, and use a 1.25-mm or 2.5-mm diameter dedicated adapter cleaner.

Cleaning the ferrule end surface of optical fiber cable

Use the ferrule cleaner, an applicable part for the MT9090A, to clean the ferrule end surface of an optical fiber cable. The following shows how to clean the ferrule end surface, using an FC connector as an example. Clean other types of optical connectors in the same manner.

1. Push the ferrule cleaner lever to show the cleaning face.

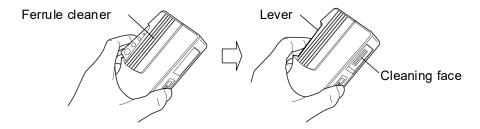


Figure 2.7-5 Cleaning of ferrule end surface of optical fiber - 1

2. While holding the lever in a depressed position, press the ferrule end surface of the optical connector against the cleaning face, and slide it in one direction.

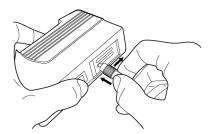



Figure 2.7-6 Cleaning of ferrule end surface of optical fiber - 2


Notes on cleaning

- Do not use a used adapter cleaner for cleaning, only use a new one.
- Do not use a cotton swab when finishing cleaning to prevent cotton fiber adhesion to the ferrule end surface.
- Fit caps on unused adapters.

2.8 Cautions on Handling Optical Fiber Cables

Optical fiber cables may degrade in performance or be damaged if handled improperly.

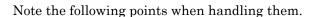

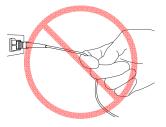



CAUTION

Do not pull the cable when removing the connector.

Doing so may either break the optical fiber inside the cable or strip the cable sheath from the optical connector.





CAUTION

Do not excessively bend, fold, or pinch an optical fiber cable.



Doing so may break the optical fiber inside the cable. Keep the bend radius of an optical fiber cable at 30 mm or more. If the radius is less, optical fiber cable loss will increase.





CAUTION



Do not excessively pull on or twist an optical fiber cable. Also, do not hang anything by using a cable.

Doing so may break the optical fiber inside the cable.





CAUTION

Be careful not to hit the end of an optical connector against anything hard such as the floor or a desk by dropping the optical fiber cable.

Doing so may damage the connector end and increase connection loss.





WARNING

Do not touch the end of a broken optical fiber cable.

The broken optical fiber may pierce the skin, causing injury.



CAUTION

Do not disassemble optical connectors.

Doing so may break the part or degrade the performance.

2.9 Changing Optical Connector

Lift the lever until the latch is released, and then pull out the optical connector. If the module is using a fixed SC connector, the optical connector cannot be changed.



WARNING

Never look directly into the cable connector on the equipment nor into the end of a cable connected to the equipment. If laser radiation enters the eye, there is a risk of injury.



CAUTION

When changing the optical connector, take care not to scratch the connector mating surfaces.

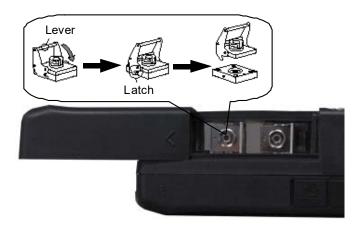


Figure 2.9-1 Changing Optical Connector

The connector types are shown below for reference.

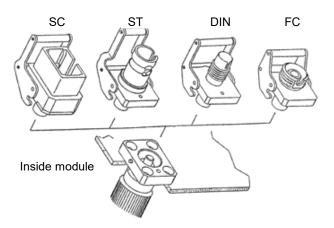


Figure 2.9-2 Types of Optical Connector

2.10 Connecting Peripheral Devices

The unit has two USB ports to which a USB device or personal computer (PC) can be connected. When a PC is connected via a USB cable, files saved in the Network Master can be transferred directly to the PC. Any PC running Windows 2000, Windows XP SP3 or Windows 7 (32 bit) can be connected via a USB cable to the Network Master.

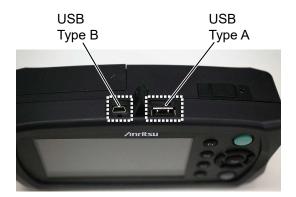


Figure 2.10-1 USB Port

2.10.1 Type A USB Port

The Type A USB port is provided for connecting a USB memory stick, USB Ethernet converter, USB Wi-Fi dongle or USB Bluetooth dongle.

Use USB devices conforming to USB 1.1. Not all commercially available USB devices are compatible with this port.

Contact Anritsu for information on USB devices that can be used.



Figure 2.10.1-1 Connecting USB memory



Never remove the USB memory stick when reading, saving, copying or deleting folders or files. Failure to do so may damage files or USB memory stick itself.

The following message dialog is displayed when USB memory is connected to the instrument.



Figure 2.10.1-2 USB Memory Detection Dialog Message

2.10.2 Type B USB Port

By using a USB cable to connect the Type B USB port of the unit to a personal computer, you can access the internal memory of the unit directly from the PC. Any PC running Windows 2000, Windows XP SP3 or Windows 7 (32 bit) can be connected via a USB cable to the Network

The Network Master cannot be operated when connected to a PC. Follow the procedure below to connect the Network Master and PC.



CAUTION

Always use the Safely Remove Hardware function of the PC before disconnecting the USB cable that connects the PC and instrument. Failure to do so may damage the internal memory.

- Close these screens before making a connection. The PC cannot be connected while the instrument File Utility or Settings screen is displayed.
- Remove a USB Ethernet converter or Video Inspection Probe, if connected.
- Connect one end of the USB cable to the Type B USB Port on the top of the instrument.
- Connect the other end of the cable to a USB port on the PC.



Figure 2.10.2-1 USB Cable Connection

2.11 Changing Test Module

Follow the procedure below to remove the current test module from the Network Master main frame and install a new test module.

- 1. Power down the unit if operating.
- 2. Disconnect the AC charger/adapter if connected.
- 3. Open the battery compartment and remove the battery pack or AA batteries if installed.
- 4. Loosen the mounting screws on the back of the main frame.
- 5. Pull forward on the Network Master main frame to separate it from the test module, holding down the module release latch (Figure 2.5.1-1).

Note:

Avoid damage to the cables when removing the main frame from the module since the Network Master main frame and test module fit together snugly.

- 6. Install the new test module, aligning two tabs on the back side of the Network Master main frame (the opposite end of the 100 pin connector) to two slots on the new test module.
- 7. Applying firm but gentle pressure, seat the Network Master mainframe onto the test module.
 - DO NOT force two sections together.
- 8. Tighten the mounting screws with a tightening torque of 0.5 Nm or less.
- 9. Reinstall the battery pack or AA batteries if removed in step 2. Reattach the battery compartment cover.

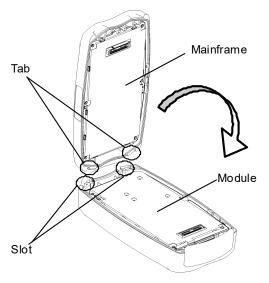


Figure 2.11-1 Alignment Tabs and Slots

Chapter 3 General Operation and System Setups

This chapter describes basic operations and system settings, such as power-on and file-related operations.

| 3.1 | Powering up and Down | | |
|-----|--------------------------------|---|--------|
| | 3.1.1 | Powering Up the Unit | 3-2 |
| | 3.1.2 | Powering Down the Unit | 3-3 |
| 3.2 | Titles of | of Screen Parts | 3-4 |
| 3.3 | Chang | ing General Settings | 3-6 |
| | 3.3.1 | General | 3-6 |
| | 3.3.2 | Preferences | . 3-10 |
| | 3.3.3 | Auto Save | . 3-15 |
| 3.4 | Manag | ing Files – Mass Storage | . 3-18 |
| | 3.4.1 | Creating New Folder | . 3-20 |
| | 3.4.2 | Deleting File or Folder | . 3-21 |
| | 3.4.3 | Copying File or Folder | . 3-22 |
| | 3.4.4 | Renaming File or Folder | . 3-24 |
| | 3.4.5 | Copying or Deleting Multiple Files or Folders | 3-25 |
| 3.5 | Captur | ring Screen Images | . 3-27 |
| 3.6 | Using | Softkey Board | . 3-28 |
| 3.7 | Using Help Function3 | | |
| 3.8 | Confirming Version Information | | |
| 3.9 | Setting | Screen Displayed after Power-Up | . 3-33 |
| | | | |

3.1 Powering Up and Down

3.1.1 Powering Up the Unit

- 1. Supply power to the main frame. Refer to Section 2.4 "Connecting Power" and 2.5 "Using Battery Pack" for more details.
- 2. Press Menu

The unit performs a self-test when the Anritsu splash screen is displayed, followed by the Network Master splash screen.

3. When the self-test passes, the Top Menu is displayed.

The message **Initialization Failed** is displayed if the power-up self-test fails.

Note:

If the Network Master splash screen does not appear after powering up, the unit may have failed in initialization or self-test. Run the unit through a power cycle (power down/power up). If the same problem occurs again after the unit has been run through a power cycle, it is likely the module has not been installed correctly to the main frame. Refer to Section 2.11 "Changing Modules", and retry to install the module correctly. If the problem persists, contact the Anritsu Technical Support Center or your local Anritsu representative.

To switch the screen displayed at step 3, refer to Section 3.9 "Setting Screen Displayed after Power-Up".



Do not use any AC charger/adapter other than one supplied with the Network Master. Failure to do so may result in damage to the unit and/or the Ni-MH battery pack.

3.1.2 Powering Down the Unit

- 1. Press (Menu/Power) key, and a pop-up menu appears.
- 2. Use and to select the **Power Down** selection in the menu. Then, press key.
- 3. The Power Down verification screen is displayed. Highlight **Yes** and then press see key.
- 4. Power to the main frame is cut.

Note:

You can perform a forced power down at any time by holding down key for 10 seconds.

3.2 Titles of Screen Parts

The titles of screen parts are shown below.

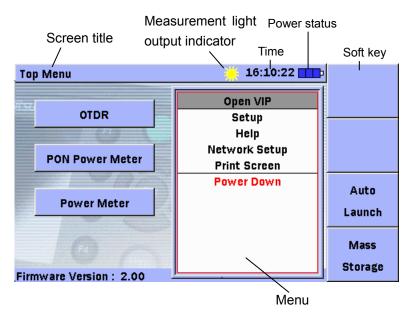


Figure 3.2-1 Names of Screen Items

Screen Title

Displays the title of the current screen.

Measurement light output

is displayed while light for performing measurement is being output.

Time

Displays the current time in a 24 hour format (hh:mm:ss).

Power status

Indicates that the unit is connected to an external power supply.

Indicates that the unit is operating on battery power. The amount of charge remaining in the battery is indicated in red.

Soft keys

This area presents the on-screen details for F1 through F4 keys.

Menu

Press key to display the pop-up menu for the current screen, if one is available. Press key to hide the pop-up menu while it is displayed.

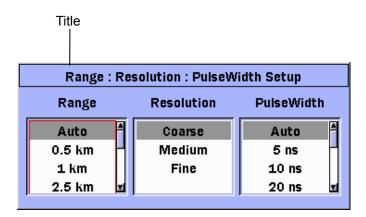


Figure 3.2-2 Pop-up Window Titles

Title

The titles of pop-up windows are displayed.

3.3 Changing General Settings

3.3.1 General

The General setups consist of basic settings for the unit: Date & Time, Language, and Auto Power Off.

- 1. Press key on the Top Menu screen to display the General Functions pop-up menu.
- 2. Use and to select **Setup**, and then press set key to display the Setup screen.
- 3. Press (General) key to display the Setup-General screen.

 The Setup-General screen consists of two tabs: Basic tab and Advanced tab.

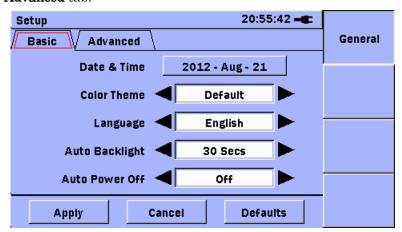


Figure 3.3.1-1 Setup-General Screen [Basic]

- 4. Use , , , and to select the Basic tab.
- 5. Use and to select the **Date & Time** field.
 - (1) Press set key, and the **Set Date And Time** screen appears.
 - (2) Use and to move the highlight to the desired selection.
 - (3) Use and to scroll to the desired setting.
 - (4) Repeat steps (2) and (3) until the desired date and time are displayed on the screen.
 - (5) Press [1] (OK) to accept the new Date & Time setting. To cancel, press [2] (Cancel).
- 6. Use and to scroll to the desired setting. Refer to Table 3.3.1-1 "Setting Items".
- 7. Use and to move the highlight to the desired selection.

- 8. Repeat steps 6 and 7 until the desired changes are made.
- 9. Use , , and to select the Advanced tab.

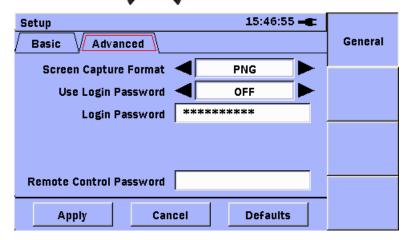


Figure 3.3.1-2 Setup-General Screen [Advanced]

10. Use and to select Screen Capture Format.

Refer to Table 3.3.1-1 "Setting Items".

Use and to change the setting contents.

11. Use and to select **Use Login Password**.

Refer to Table 3.3.1-1 "Setting Items".

Use I and I to change the setting contents.

- 12. If you want to use the Login Password, use and to select Login Password. Refer to Table 3.3.1-1 "Setting Items".
- 13. Press set to enter the password.

Note:

Use the AC charger/adapter when entering the password.

Please keep the password carefully. If you forget the password, you cannot login the unit.

The default of the login password is the serial number of the module.

- 14. Use and to select **Remote Control Password**. Refer to Table 3.3.1-1 "Setting Items".
- 15. Press set to enter the password.
- 16. When you have finished making the desired General setting, use



To restore the factory default settings, select Defaults, and then press $^{\text{sa}}$. Refer to Appendix B "Default Value" for more details.

17. The changes are reflected.

Table 3.3.1-1 Setting Items

| Item | Function | Available Options |
|----------------------------|---|---|
| Color Theme | Changes screen display colors. We recommend Outdoor White when using out of doors under blue sky. | Default, Outdoor White , Night, Orange Crush, Lush Green |
| Language | Switches the language of the on-screen characters. | English, Japanese, Chinese(T), Chinese(S)*1, French, German, Spanish(SP), Spanish(LA), Italian, Korean, Polish, Portuguese, Finnish, Danish, Swedish, Russian, Dutch |
| Auto Backlight off | The Auto Backlight Off setting turns off the LCD screen backlight when a set period of time passes without any key presses. When the time period elapses and the backlight goes out, pressing any key on the unit will restore the backlight. When the modules are operating with batteries and this setting is Off, the backlight goes low in 1 minute without any key presses. | Off, 30 Secs, 5 Mins, 10 Mins, 15 Mins, 20 Mins, 25 Mins, 30 Mins, 35 Mins, 40 Mins, 45 Mins, 50 Mins, 55 Mins, 60 Mins, |
| Auto Power Off | The Auto Power Off function shuts down the unit when the unit is inactive for a set period of time. | Off, 10 Mins, 30 Mins, 60 Mins, 90 Mins, 120 Mins |
| Screen Capture Format | Changes saved data format when Print Screen is selected from Menu. | BMP, JPEG, PNG |
| Use Login Password | While the Use Login Password is On, a password prompt is displayed when the power is turned On. The unit cannot be operated until the user logs in with the correct password. | Off, On |
| Login Password | Change a password for login. | Up to 12 characters The default is the last 4 digits of the serial number of the module. |
| Remote Control Password | Change a password for Remote Control. | Up to 12 characters |

^{*1:} Some symbols in "Chinese(S)" differ from those in other languages. For example, "\$" is displayed as " $\$ ".

3.3.2 Preferences

The Preferences setups can be selected only during OTDR function, Fiber Visualizer function or DCFL function.

- 1. Press the key to display the General Functions pop-up menu.
- 2. Press and to select **Setup**, and then press set key to display the Setup screen.
- 3. Press (Preferences) to display Setup-Preferences screen. The Setup screen consists of the tabs 1 2 and 3.
- 4. Use , , , and to select the tab 1.
- 5. Use and to scroll to the desired setting. Refer to Table 3.3.2-1.

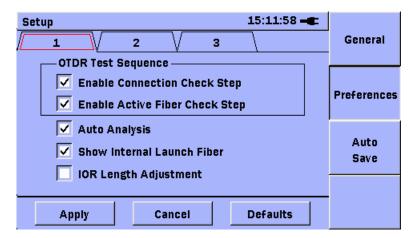


Figure 3.3.2-1 Setup-Preferences Screen (In case of OTDR function)

Note:

Enable Active Fiber Check Setup is not displayed for DCFL function.

Auto Analysis cannot be disabled for Fiber Visualizer function and DCFL function.

- 6. Press set to select the checkbox.
- 7. Repeat steps 5 and 6 until the desired changes are made.

15:12:08 -Setup General 3 Distance Units Kilometers **Saving Format** SOR Preferences Fiber Group1 **Fiber Group** Auto Save Apply Cancel Defaults

8. Use , , , and to select the tab 2.

Figure 3.3.2-2 Setup-Preferences Screen 2 (In case of OTDR or DCFL function)

Note:

Event icon movement and **End event for ORL** are displayed for Fiber Visualizer function.

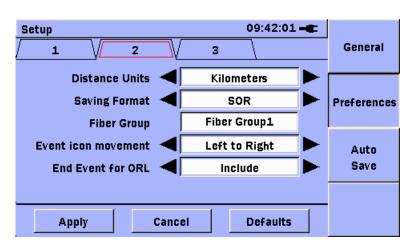


Figure 3.3.2-3 Setup-Preferences Screen 2 (In case of Fiber Visualizer function)

- 9. Use and to scroll to the desired setting. Refer to Table 3.3.2-1.
 - Use and to change the setting.
- 10. If you want to change the Fiber Group, use a and b to scroll Fiber Group, and then press set key. The Fiber Group screen is displayed.

11. Use and to select the type, and then use and to select the desired fiber group. You can change **Fiber Group 2** and **3** only.

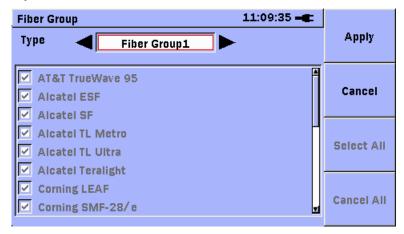


Figure 3.3.2-4 Fiber Group Screen

- 12. Use and to select the fiber type that you want to display in the IOR: BSC Setup dialog box. Then, press to check.
- 13. When the type is changed, press (Apply). To cancel, press (Cancel).
- 14. Repeat steps 10 and 13 until the desired changes are made.
- 15. Use , , and to select the tab 3.

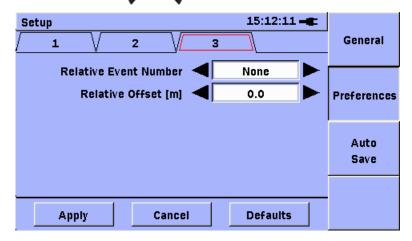


Figure 3.3.2-5 Settings Screen

16. Use and to scroll to the desired setting. Refer to Table 3.3.2-1.

Use and to change the setting.

17. When completed, use , , , and to select **Apply**, and then press key.

To cancel, select **Cancel**, and then press Set.



To restore the factory default settings, select **Defaults**, and then press Set. Refer to Appendix B "Default Value" for more details.

18. The changes are reflected.

Table 3.3.2-1 Setting Items (Preferences)

| Item | Function | Settings |
|-----------------------------------|---|---|
| Enable Connection Check Step | | |
| Enable Active Fiber Check Step | Selects whether or not to check for active (live) communications signal in connected fiber at measurement start. | Off, On |
| Auto Analysis | Selects whether or not to execute automatic trace analysis at measurement end. Note: Auto Analysis is always enabled for Fiber Visualizer | Off, On |
| Show Internal Launch Fiber | function. Selects whether or not to include trace display for main-frame built-in dummy fiber at Trace View screen. | Off, On |
| IOR Length Adjustment | Selects whether or not to display distance range for current cursor when setting IOR at Test Setup screen (Figure 3.3.2-6 and Figure 3.3.2-7). | Off, On |
| Distance Units | Selects units for distance range displayed at Test Setup and Trace View screens. | Kilometers, Meters, Kilofeet, Feet, Mile |
| Saving Format | Selects format of file for saving measured trace. The size of files saved in the XML and SOR&XML formats is relatively larger than files saved in the SOR format and such files take a longer time to complete save processing. If you select ZIP , multiple waveform files with different wavelengths are saved to a single file. | SOR, XML, SOR&XML, ZIP |
| Fiber Group | Selects a Fiber Type displayed at IOR:BSC Setup dialog box. Note: The Fiber Group1 cannot be changed. All Fiber types are displayed if you select. | Fiber Group1 Group2 Group3 |
| Event icon movement* | Selects the icon movement direction by pressing the arrow keys on Fiber Visualizer window. | Left to Right, Right to Left |
| End event for ORL* | Selects whether to include end event in calculation of the total optical return loss. | INCLUDE, OMIT |
| Relative measurement | Selects starting point of events. Select an event number as a starting point (zero position). The event positions located before the selected event are shown in minus values. Note: Select Offset when setting Relative distance (km). | None, 0 to 5, Offset |
| Relative distance (km) | Sets the distance to the starting point (zero position) in m unit. To activate the Relative distance, select the "Offset" in Relative measurement. | 0.0 to 10000.0 |

^{*:} Available only for Fiber Visualizer function.

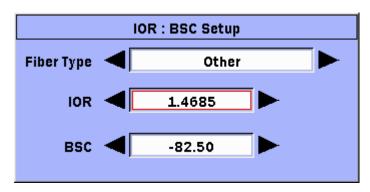


Figure 3.3.2-6 IOR:BSC Setup Screen (IOR Length Adjustment: Off)

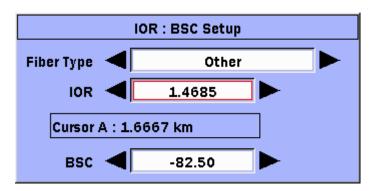


Figure 3.3.2-7 IOR:BSC Setup Screen (IOR Length Adjustment: On)

3.3.3 Auto Save

- 1. Press key on OTDR function to display the General Functions pop-up menu.
- 2. Press and to select **Setup**, and then press set key to display the Setup screen.
- 3. Press (3 (Auto Save) to display the Setup-Auto Save screen.
- 4. Use and to scroll to the desired setting. Refer to Table 3.3.3-1.

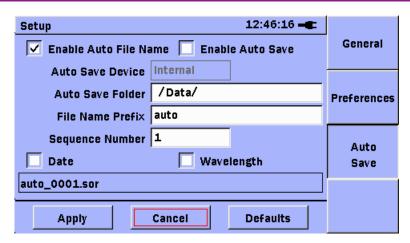


Figure 3.3.3-1 Setup- Auto Save Screen

- 5. Press set to select the checkbox.
- 6. To change the saving destination of the measurement results, select **Auto Save Folder** using and press to display folder selection screen.
- 7. Select the folder to save the measurement results and press (Setting).
- 8. To add a specific word string to the file name to save the measurement results, select **File Name Prefix** by using and press set to display the Character Input screen.
- 9. When editing is finished, press [4] (Apply).
- 10. To change the sequence number for file names, select **Sequence**Number using , and press to display the Character Input screen.
- 11. When editing is finished, press [4] (Apply).
- 12. When completed, use , , and to select **Apply**, and then press key.

To cancel, select **Cancel**, and then press [Set].

To restore the factory default settings, select **Defaults**, and then press Set. Refer to Appendix B "Default Value" for more details.

13. The changes are reflected.

Table 3.3.3-1 Setting Items (Auto Save)

| Item | Function | Settings |
|--------------------------|--|---|
| Enable Auto File Name | Appends Sequence Number to name set at Filename Prefix and creates file. Both Date and Wavelength information can be added. | Off, On |
| Enable Auto Save | Auto-saves trace file at measurement end. Cannot save at measurement end at real-time measurement. | Off, On |
| Auto Save Device | Displays a device to save files when Enable Auto Save is selected. | Internal memory or USB memory. Can only save to USB memory when USB memory stick is inserted. |
| Auto Save Folder | Set the saving destination of the measurement results. | Folder Name |
| File Name Prefix | Specifies save file name when Enable Auto File Name is selected. | Alphabet, Number, Symbol 21 alphanumeric characters max. |
| Sequence Number | Appends specified number to file names. Auto-increments the sequence number by one on save completion. | 0 to 9999 |
| Date | Appends date and time information to file names. | Off, On |
| Wavelength | Appends measurement wavelength data to file names. Note: When ZIP is selected as a format for saving waveforms, this item is fixed to Off. | Off, On |

The file naming rules are as follows.

When the SOR save format is selected, the file extension is .sor.

When the XML save format is selected, the file extension is .xml.

When the SOR&XML save format is selected, the file extension is .sor (xml)

When the ZIP save format is selected, the file extension is .zip.

Filename Prefix_Date_Wavelength_Sequence Number.sor

Example:

Filename Prefix auto

Date Oct/27/2011 Wavelength 1310 nm

Sequence Number 1

 $auto_27102011_1310nm_001.sor$

3.4 Managing Files - Mass Storage

Files can be saved to either built-in memory or USB memory stick. When copying either image files of screens saved to built-in memory or trace data files to USB memory, use the file management operations. The Mass Storage selection provides access to the following file operations:

- Creating a new folder
- Deleting files/folders
- Copying files/folders
- Renaming files/folders

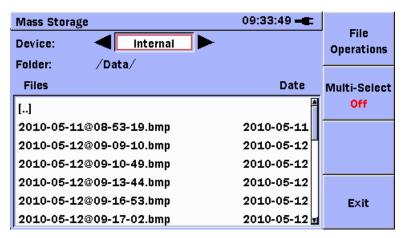


Figure 3.4-1 Mass Storage Screen

1. Press (Mass Storage) on the top menu to display the Mass Storage screen.

Pressing at any of the following screens displays the menu. Highlight Mass Storage using and and, and then press to display the Mass Storage screen.

The Mass Storage screen cannot be displayed during measurement or while verifying the connection.

- Connection Check screen
- Test Setup screen
- Trace Analysis screen
- Trace View screen

2. Pressing (Exit) when the file operation is complete closes the Mass Storage screen.

Notes:

- If there are files or folders using characters that cannot be set at the character input screen, the file or folder name cannot be displayed correctly. Read the name after changing it using a PC, etc. Refer to Section 3.6 "Using Softkey Board" for characters that can be displayed correctly by the main frame.
- The Logs, Properties, and Screen Captures folders stored in the built-in memory are system folders used by the main frame. Do not change system folders.

3.4.1 Creating New Folder

- 1. Access the Mass Storage File Operations screen.
- 2. Use and to select the mass storage device; **Internal** or **USB**.

Note:

If there is no USB device connected to the unit, **USB** cannot be selected.

- 3. Verify that **Multi-Select** is set to Off.
 When Off is set, **Multi-Select/Off** is displayed at **F2**. If **Multi-Select/On** is displayed, press **F2** to switch to Off.
- 4. Use and to select the directory or folder where the new folder is to be located, and then press set. Folders are displayed enclosed in brackets [].

 Repeat this operation to move to a folder two levels higher or lower

Repeat this operation to move to a folder two levels higher or lower than the current folder. To move to the higher level folder, select [..] and press [sa].

Note:

Selecting a folder containing 500 or more files will require a few seconds to display the folder contents on the Mass Storage screen.

- 5. Press (File Operations).
- 6. Use and to select New Folder, and then press set.
- $7. \hspace{0.5cm} \hbox{A folder named } \textbf{newFolder} \hbox{ is added to the current directory}.$

Note:

If there is already a file or folder with the same name, a number is appended after newFolder to create the file or folder without overwriting the existing one.

For example, when newFolder already exists, newFolder1 is created, and if newFolder1 already exists, newFolder2 is created.

3.4.2 Deleting File or Folder

- 1. Access the Mass Storage File Operations screen.
- 2. Use 1 and 2 to select the mass storage device to delete; Internal or USB.

Note:

If there is no USB memory stick attached to the unit, **USB** cannot be selected.

- 3. Verify that Multi-Select is set to Off.
 When Off is set, Multi-Select/Off is displayed at P2. If
 Multi-Select/On is displayed, press P2 to switch to Multi-Select/Off.
- 4. Use and to select the directory or folder to delete, and then press set. Folders are displayed enclosed in brackets []. Repeat this operation to move to a folder two levels higher or lower than the current folder. To move to the higher level folder, select [..] and press set.

Note:

Selecting a folder containing 500 or more files will require a few seconds to display the folder contents on the Mass Storage screen.

- 5. Use and to select the directory or folder to delete. The selected folder is displayed enclosed in brackets [].
- 6. Press (File Operations).
- 7. Use and to select **Delete**, and then press set. The following message appears.



The file folder displayed here will be deleted.

Figure 3.4.2-1 Confirm Delete screen

8. If the displayed folder name (file name) is correct, select **Yes** using \P



9. The selected folder or file is deleted.

3.4.3 Copying File or Folder

- 1. Access the Mass Storage File Operations screen.
- 2. Use and be to select the mass storage device to copy; Internal or USB.

Note:

If there is no USB device connected to the unit, **USB** cannot be selected.

- Verify that Multi-Select is set to Off.
 When Off is set, Multi-Select/Off is displayed at F2. If
 Multi-Select/On is displayed, press F2 to switch to Off.
- 4. Use and to select the directory or folder to copy, and then press . The selected folder is displayed enclosed in brackets [].

Repeat this operation to move to a folder two levels higher or lower than the current folder. To move to the higher level folder, select [..] and press [Set].

Note:


Selecting a folder containing 500 or more files will require a few seconds to display the folder contents on the Mass Storage screen.

- 5. Use and to select the directory or folder to copy. The selected folder is displayed enclosed in brackets [].
- 6. Press [1] (File Operations).
- 7. Use and to select **Copy**, and then press st. The Destination window is displayed over the Mass Storage File Operations screen.
- 8. Use and to select the mass storage device to copy; Internal or USB.

Note:

If there is no USB device connected to the unit, **USB** cannot be selected.

- 9. Use and to select the directory or folder to copy, and then press (Paste). Press (Cancel) to not perform copying.
- 10. If you select a folder or file that already exists in the copy destination, an overwrite confirmation message appears. If it is not displayed, proceed to step 12.
- 11. To overwrite a single file:

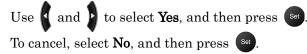

To overwrite multiple files (a file at a time):

Use and to select Yes, and then press to overwrite. To cancel, select No.

If a overwrite process is completed or canceled, a message confirming you to overwrite the next file appears. The message appears until all the selected files are processed.

To cancel, select **Cancel**, and then press so

To overwrite multiple files (all files at a time):

Use I and I to select All, and then press state to automatically overwrite all the files.

To cancel, select **Cancel**, and then press (set).

12. Confirm that the file or folder has been pasted to the desired location.

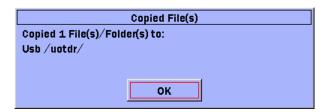


Figure 3.4.3-1 File(s) Copied Dialog

13. Press (set) to close the dialog and return to the Mass Storage screen.

3.4.4 Renaming File or Folder

- 1. Access the Mass Storage File Operations screen.
- 2. Use and to select the directory or folder to rename; **Internal** or **USB**.

Note:

If there is no USB memory stick connected to the unit, **USB** cannot be selected.

- 3. Verify that Multi-Select is set to Off.
 When Off is set, Multi-Select/Off is displayed at F2. If
 Multi-Select/On is displayed, press F2 to switch to Off.
- 4. Select the location of the folder or file for the name change using and and and press set. The selected folder is displayed enclosed in brackets [].

Repeat this operation to move to a folder two levels higher or lower than the current folder. To move to the higher level folder, select [..] and press [See].

Note:

Selecting a folder containing 500 or more files will require a few seconds to display the folder contents on the Mass Storage screen.

- 5. Use and to select the directory or folder to rename. The selected folder is displayed enclosed in brackets [].
- 6. Press [1] (File Operations).
- 7. Use and to select **Rename**, and then press so to display the SoftkeyBoard screen.
 - (1) Use , , and to highlight the desired letter in the character matrix.
 - (2) Press set key to add the highlighted letter to the name field.
 - (3) Repeat steps (1) and (2) to complete the file/folder name. Up to 23 characters can be used.
 - (4) When the file/folder name is completed, press (OK). To cancel, press (3) (Cancel).

Refer to Section 3.6 "Using Softkey Board" for details about character input.

8. The selected folder or file is changed to the input name.

If a file with the same name exists, the following message appears.

If you select **Yes**, the file will be overwritten.

If you select **No**, the file name change will not be overwritten.



Figure 3.4.4-1 Overwrite Existing File Dialog

Following message appears if same name folder exists. In this case, the folder name will not be changed.



Figure 3.4.4-2 Cannot Rename Directory Dialog

3.4.5 Copying or Deleting Multiple Files or Folders

Follow the following below to copy or delete multiple files or folders in one step.

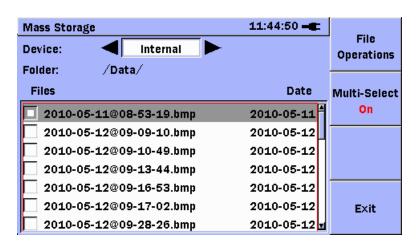


Figure 3.4.5-1 Mass Storage Screen (Multi-Select/On)

- 1. Access the Mass Storage File Operations screen.
- 2. Use and to select the mass storage device to copy or delete; Internal or USB.

Note:

If there is no USB device connected to the unit, **USB** cannot be selected.

3. Press (Multi-Select/Off), and the current setting value (red) on the softkey is switched to "On" and an empty checkbox is displayed in front of each filename in the current directory or folder.

Note:

When **Multi-Select** is set to On, you cannot access any folders higher or lower than the current folder.

4. Use and to select the first file or folder to copy/delete, and then press key. A check mark appears in the checkbox for the highlighted file. Pressing again clears the checkbox. The selected folder or file is the copy/delete target. The selected folder is displayed enclosed in brackets [].

To select all of the files in the current folder or all of the folders in the current directory; press [1] (File Operations), use and to select Select All, and then press [80] key.

To clear all of the files in the current folder or all of the folders in the current directory; press [5] (File Operations), use and to select Unselect All, and then press [50] key.

- 5. Press [1] (File Operations).
- 6. Use 🗪 and 🝑 to select **Delete** or **Copy**, and then press 🖭
- 7. Refer to Section 3.4.2 "Deleting File or Folder" or Section 3.4.3 "Copying File or Folder" for operations from hereon.

3.5 Capturing Screen Images

Use the Print Screen function to save images on test result screens and most setup screens in bmp, jpeg, or png format. Bmp files are saved to the Internal Data directory. However, menus and message dialogs cannot be saved.

Refer to 3.3.1 "General" for how to select the Screen Capture Format (BMP, JPEG, PNG).

- 1. Display the screen to save.
- 2. Press to display the General Functions pop-up menu.
- 3. Use and to select **Print Screen**, and then press set. The file is saved with the following name to the Data folder of the built-in memory.

yyyy-mm-dd@HH-MM-SS.bmp

yyyy: Gregorian year when screen saved

mm: Month when screen saved

dd: Day when screen saved

HH: Hour (24-h clock) when screen saved

MM: Minute when screen saved

SS: Second when screen saved

Note:

Files saved by the main frame cannot be displayed by it. Copy the saved file to a PC, etc., to display it.

4. The Print Screen Complete dialog box appears in about 2 to 3 seconds.



Figure 3.5-1 Print Screen Complete Dialog

5. Press st to close the dialog and return to the Mass Storage screen.

3.6 Using Softkey Board

This section describes how to input alphanumeric characters at the SoftkeyBoard screen. The SoftkeyBoard screen of the Network Master, contains only alphanumeric characters that you can input.

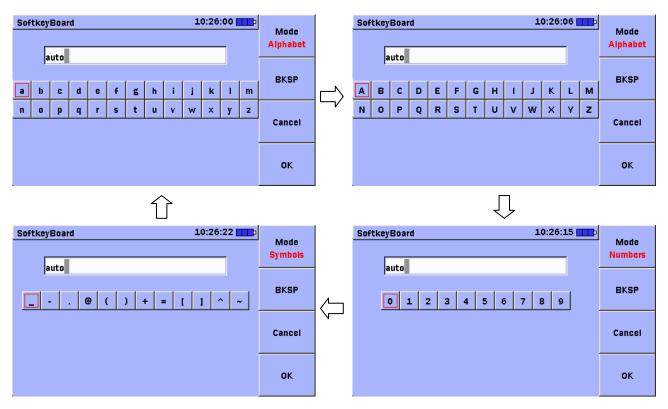


Figure 3.6-1 Input Character Transitions

You can input characters with the following buttons.

- Rename of [5] (File Operations) in Mass Storage
- Files in Mass Storage (Save)
- Filename Prefix or Sequence Number of (Auto save) in Setup screen
- Filename of (Save) in VIP screen
- Filename of Export PNG image screen
- 1. Execute one of the following operations.
 - Select **Rename** from **[5]** (**File Operations**) in Mass Storage, and press **[Sot**].
 - Select Filename Prefix from (Auto Save) in Setup screen, and press (Sat).
 - Select Sequence Number from (Auto Save) in Setup screen, and press (Sat).
 - Select Filename from (Save) in VIP screen, and press
 - Press in the VIP screen, select **Save As PNG Image**, and press **3.** Then, select **Filename** and press **3.**
 - Press in the VIP screen, select Create PDF Report, and press . Then, press (Create Report), select Filename, and press .
- 2. Each press of [5] switches the input character type. Select one from Alphabet, Numbers, and Symbols as shown in Figure 3.6-1. Press [5] to select the type of character input. The current character type is displayed in [5].
- 3. Use , , and to select the desired letter in the character matrix.
- 4. Press so key to add the highlighted letter to the name field. Press (BKSP) to clear the entry in the name field.
- 5. Repeat steps 1 to 3 over to input the required characters.
- 6. When the name is completed, press [64] (OK). Press [63] (Cancel) to cancel the input.

3.7 Using Help Function

- 1. Press 💮 key to display the General Functions pop-up menu.
- 2. Use and to select **Help**, and then press so key to display the help dialog box.

Note:

The **Help** menu is not displayed at the Mass Storage screen and Fiber Visualizer screen.

3. Press any of , , , and so to exit the help dialog box.

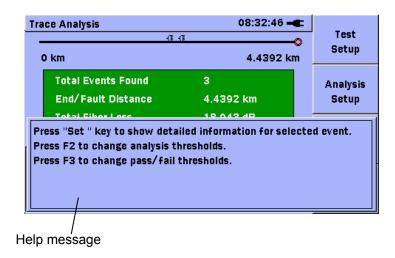


Figure 3.7-1 Example of Help Message

3.8 Confirming Version Information

The **About** function provides access to the Version/Serial Number Information window which lists the framework and test application software version levels, as well as the serial numbers for the main frame and module. The appearance of the Version screen depends on the installed modules and options.

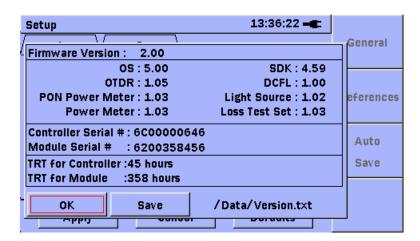


Figure 3.8-1 Version Screen

- 1. Press 😁 key to display the General Functions pop-up menu.
- 2. Press and to select **Setup**, and then press set key to display the Setup screen.
- 3. Press key to display the General Functions pop-up menu.
- 4. Use and to select **About**, and then press to display the Version/Serial Number information.

5. Select **OK** using and and and and then press to close the Version screen. Select **Save** and press to save the version information as a text file with the name Versions.txt in the Data folder of the internal memory.

Firmware Version 2.00

OS: 5.00 SDK: 4.59

OTDR :1.05 DCFL :1.00

PON Power Meter :1.03 Light Source :1.02 Power Meter :1.03 Loss Test Set :1.03

Controller Serial # 6C00000646 Module Serial # 6200358456

TRT for Controller 45 hours TRT for Module 358 hours

Figure 3.8-2 Example of Saved Version Information

Note:

The saved file cannot be displayed on this instrument. Use a PC to display the file.

3.9 Setting Screen Displayed after Power-Up

The screen to be displayed after power-up can be selected among the following: and the next screen can be changed.

- Top Menu
- OTDR
- Fiber Visualizer
- DCFL
- PON Power Meter*
- Light Source*
- Power Meter*
- Optical loss measurement*
- *: For the correspondence of functions to models that can be set, refer to Table 1.1-1.

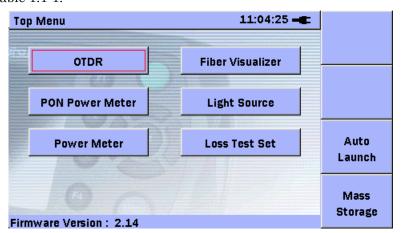


Figure 3.9-1 Top Menu (MU909014C6/15C6)

- 1. Press to display the General Functions pop-up menu.
- 2. Use and to highlight **Top Menu**, and then press sal.
- 3. A confirmation dialog appears. Use and to select **Yes**, and then press to display the Top Menu screen.
- 4. Press (Auto Launch).

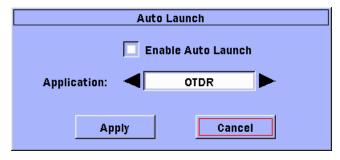


Figure 3.9-2 Auto Launch Pop-up Menu

- 5. When setting to Top Menu, use and to select **Enable**Auto Launch and press st to clear the checkbox.
- 6. When setting to Test Setup, use and to select **Enable**Auto Launch, and then press set to select the checkbox.
- 7. Use and to select Application.
- 8. When completed, use , , , and to select **Apply**, and then press key. To cancel, select **Cancel**, and then press .

Chapter 4 Locating Fiber Faults

This chapter explains the methods of fiber loss measurement and fault point detection using OTDR function or Fiber Visualizer function. Refer to Chapter 2 for the fiber connection method and precautions on handling.

When using Fiber Visualizer function, refer to Section 4.12 "Measuring with Fiber Visualizer".

| 4.1 | Meası | Measurement Procedure4 | | | | | |
|------|-------------------------------------|---|---------|--|--|--|--|
| 4.2 | Setting | g Parameters and Preferences | 4-2 | | | | |
| | 4.2.1 | Setting Measurement Conditions (Test Setu | ıp) 4-4 | | | | |
| | 4.2.2 | Setting Measurement Method | | | | | |
| | | (Setup-Preferences) | 4-13 | | | | |
| | 4.2.3 | Setting Auto Save Mode (Setup-Auto Save) | 4-16 | | | | |
| 4.3 | Startin | ng Measurement | 4-19 | | | | |
| | 4.3.1 | Checking Connection | 4-19 | | | | |
| | 4.3.2 | Operation Depending on Connection Check | (| | | | |
| | | Result | 4-21 | | | | |
| 4.4 | Viewir | ng Trace | 4-22 | | | | |
| | 4.4.1 | Trace View | 4-22 | | | | |
| | 4.4.2 | Using Cursor | 4-27 | | | | |
| | 4.4.3 | Zooming in and out Trace Display | 4-30 | | | | |
| | 4.4.4 | Swap Traces | 4-32 | | | | |
| 4.5 | Analyzing Trace 4-33 | | | | | | |
| | 4.5.1 | Trace analysis | 4-33 | | | | |
| | 4.5.2 | Setting event detection conditions | | | | | |
| | | (Analysis Setup) | 4-38 | | | | |
| | 4.5.3 | Setting OK/NG thresholds | | | | | |
| | | (Thresholds Setup) | 4-40 | | | | |
| 4.6 | Setting | g header to trace | 4-42 | | | | |
| 4.7 | Saving | g trace manually | 4-44 | | | | |
| 4.8 | Loadir | ng Trace Data (Mass Storage-Load) | 4-47 | | | | |
| 4.9 | Restoring Defaults (All Defaults)4- | | | | | | |
| 4.10 | Calcul | ation Method | 4-50 | | | | |
| | 4.10.1 | Loss measurements | 4-50 | | | | |
| | 4.10.2 | 2 Event Evaluation | 4-55 | | | | |
| 4.11 | Using | VFL (Visual Fault Locator) | 4-58 | | | | |
| 4.12 | Measu | uring with Fiber Visualizer | 4-59 | | | | |
| 4.13 | Creating a Summary4-72 | | | | | | |

4.1 Measurement Procedure

The following flowchart shows the procedure for measuring the loss and distance range of an optical fiber system by using OTDR function.

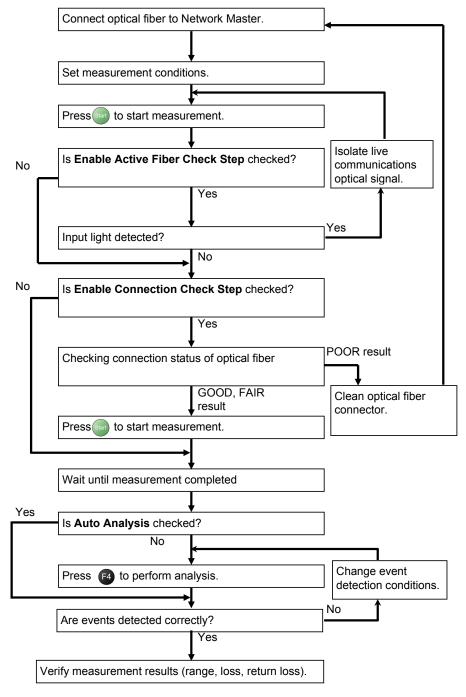


Figure 4.1-1 Optical Fiber System Measurement Procedure

4.2 Setting Parameters and Preferences

Set the following items before measurement.

• Measurement Conditions

Wavelength

Optical fiber characteristics (IOR, BSC)

Measurement conditions (measurement distance, resolution, pulse width, averaging time)

Loss measurement method

Measurement Methods

Whether or not to execute pre-measurement connection check. Whether or not to execute pre-measurement live communications signal check.

Whether or not to execute post-measurement trace analysis.

Measurement Results

Whether or not to display instrument internal fiber waveform. Whether or not to display cursor position when setting fiber characteristics (IOR, BSC).

Whether or not to set distance range units.

• Methods for Saving Measured Results

Whether or not to automatically save a file after measurement. Whether or not to automatically create a file name (character string, date, wavelength, start number).

4.2.1 Setting Measurement Conditions (Test Setup)

The following items are set in the Test Setup screen.

Table 4.2.1-1 Optical Fiber Test Setup Items

| Item | Function | Parameters | Default |
|--|--|---|---------|
| Full Auto | Distance Range, Resolution, Pulse width, and Averaging count are set automatically. Setting this function to ON sets Apply to All Wavelength to ON. | Off, On | On |
| Apply to All Wavelength | The following items are set to the same values for all wavelengths. Range, Resolution, Pulsewidth, Averaging | Off, On | On |
| Range*1, *2, *3, *4 | Sets maximum distance range. | [mi]: Auto, 0. 3, 0. 6, 1. 6, 3. 1, 6. 2, 15. 5, 31. 1, 46. 6, 77. 7, 155. 3 [ft]: Auto, 1640, 3281, 8202, 16404, 32808, 82021, 164042, 246063, 410105, 820210 [kf]: Auto, 1.64, 3.281, 8.202, 16.404, 32.808, 82.021, 164.042, 246.063, 410.105, 820.210 [m]: Auto, 500, 1000, 2500, 5000, 10000, 25000, 50000, 75000, 125000, 250000 [km]: Auto, 0.5, 1, 2.5, 5, 10, 25, 50, 75, 125, 250 | Auto*5 |
| Resolution*2 | Set the display resolution. | Coarse, Medium, Fine*1 | Medium |
| Pulsewidth*1, set the pulse width. "us" indicates microseconds (μs). | | Auto, 5 ns, 10 ns, 20 ns, 50 ns, 100 ns, 200 ns, 500 ns, 1 us, 2 us, 5 us, 10 us, 20 us*1 | Auto*5 |
| Averaging*2 | The averaging time is set when Test Mode is Average. | Auto, 1, 5, 10, 15, 30, 45, 60, 90, 120, 180, 360, 720 | Auto |

^{*1:} Refer to Table 4.2.1-2 for the combination of the distance range value and settable pulse width.

^{*2:} Available only when the **Full Auto** check box is not selected (Off).

^{*3:} Refer to Table 4.2.1-3 "Wavelength and Fiber Type Combination" for the combination of the OTDR wavelength and settable Fiber Type.

^{*4:} Auto or 0.5 to 10 km are available for DCFL.

^{*5: 1} km / 10ns for DCLF

Table 4.2.1-1 Optical Fiber Test Setup Items (Cont'd)

| Item | Function | Parameters | Default |
|-------------------------|--|---|--|
| Macro Bend Analysis | Enable the macrobend detection. This function can be used when the Test Mode is set to Dual WL. | Off, On | Off |
| PON | Set the numbers of "splitters" and "branches in each splitter", respectively. When each of Range, Pulsewidth and Averaging is set to Auto, it is set to the value appropriate for locating faults in the PON from the subscriber's home, according to the numbers of "splitters" and "branches in each splitter". • The number of splitters If Detection is selected, the number of splitters is detected automatically. • The number of branches in each splitter If 1x?? is selected, the number of branches is detected automatically. | The number of splitters: 1, 2, 3, Detection, None The number of branches in each splitter: 1x2, 1x4, 1x8, 1x16, 1x32, 1x64, 1x128, 2x8, 1x?? | None |
| Fiber Type*3 | Set the fiber cable type to be connected. | Refer to Table 4.2.1-3 "Wavelength and Fiber Type Combination". | Other |
| IOR | The connected fiber IOR is set. | 1.3000 to 1.7000 0.0001 steps | 1.4677*6 1.4680*7 1.4682*8 1.4685*9 |
| BSC | When using a special optical fiber, set the backscatter coefficient. This is not changed at normal fault detection. | -90.0 to -40.0 0.01 steps | -78.50*6 -81.10*7 -81.50*8 -82.50*9 |
| Loss Mode | Set the loss measurement methods displayed at the Trace View screen. | 2-Pt Loss, Splice Loss, dB/km Loss, dB/km LSA(A), dB/km LSA(B), ORL*10, Event | Event*11 2-Pt Loss*12 |
| Test Mode*15 | Set whether to use real time or averaging time. | Average, Real Time, Dual WL | Average |
| Wavelength *13, *14 *15 | Set the measurement wavelength. | 1310 nm, 1550 nm, 1625 nm, 1650 nm | 1310 nm |

^{*6:} Wavelength 1310 nm

^{*7:} Wavelength 1490 nm

^{*8:} Wavelength 1550 nm

^{*9}: Wavelength 1625 nm, 1650 nm

- *10: If the density of the resolution is ultra-high, it takes some times to measure the return loss.
- *11: When the Test Mode is Average.
- *12: When the Test Mode is **Real Time**.
- *13: Displayed on only two-wavelength or three-wavelength model.
- *14: Depends on the model, refer to Table 1.1-1
- *15: For DCFL, the setting can not be changed from the default.

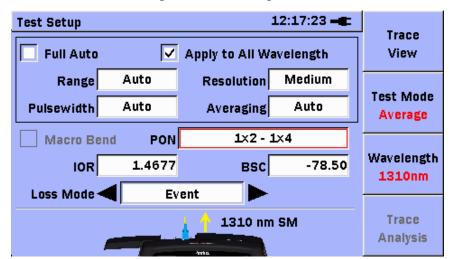


Figure 4.2.1-1 Test Setup Screen

Set the measurement conditions as follows.

- 1. Press (Test Setup) in any of the following screens.
 - Connection Check Step screen (when connection check stopped)
 - Trace Analysis screen
 - Trace View screen (when measurement stopped)
- 2. Set the measurement mode.

Press [2] (Test Mode) to select Average, Real Time, or Dual WL.

Note:

Set the wavelength to 1310 or 1550 nm when selecting **Dual WL**.

3. Press (Wavelength) to select wavelength.

In addition, an up arrow indicating optical connector, wavelength, optical fiber type to be used, and laser output is displayed at the bottom of the screen.

Note:

When **Dual WL** is selected, you can select the only 1310/1550 nm wavelength.

4. Use , , , and to select item.

5. Select the **Full Auto** check box when the following items are set to **Auto**

Press set to select the item(s).

- Range
- Resolution
- Pulsewidth
- Averaging
- Apply to All Wavelength

Note:

When the **Full Auto** check box is selected, the display of five items in the box changes as follows:

Range, Pulsewidth: Auto

Averaging: **Auto** when the Test Mode is Average or Dual WL **Real Time** when the Test Mode is Real Time

Resolution: When the Test Mode is Average or Dual WL,

- Medium if PON is set to None.
- · Coarse if PON is set to other than None.

Coarse when the Test Mode is Real Time.

Apply to All Wavelength: On

- 6. When each of the following items is set to **Auto**, set the splitter so that it is set to the value appropriate for locating faults in the PON from the subscriber's home.
 - Range
 - Pulsewidth
 - Averaging

Note:

Optimum auto-setting is applied only to items that are Auto.

(1) Use , , , and to select **PON**, press . A pop-up window to set PON appears.

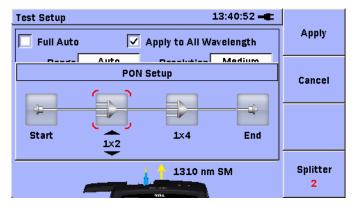


Figure 4.2.1-2 PON Setup pop-up window

- (2) Press (Splitter) to set the number of splitters.
- (3) Use 1 and 2 to select a splitter, and use and to set the number of branches.
- (4) Press Set.
- 7. When the **Full Auto** check box is not selected, make the following settings:
 - (1) Use , , and to select Range, Pulsewidth, or Resolution.
 - (2) Press Set. A pop-up window appears.

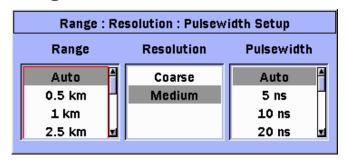


Figure 4.2.1-3 Range: Resolution: Pulsewidth Setup pop-up window

- (3) Use and to move the highlight to the desired selection.
- (4) Use and to move the highlight to the desired selection.
- (5) Repeat steps (3) through (4).
- (6) When the settings is complete, press
- (7) When the Test Mode is **Average**, use , , and to select **Averaging**.
- (8) Press set, and a pop-up window appears

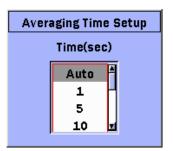


Figure 4.2.1-4 Averaging Time Setup pop-up window

- (9) Use and to change the desired setting. When Resolution is Fine, only Auto or values more than 30 can be selected.
- (10) When the settings is complete, press (set.
- (11) Use , , and to select Apply to All Wavelength.
- (12) To reflect the setting to all the wavelengths, press set to select the item.
- (13) Use , , and to select Macro Bend Analysis.
- (14) To detect the macrobend, press set to select the item.
- 8. Use , , , and b to select IOR or BSC, and then press

The IOR or BSC Setup pop-up window is displayed.

When the wavelength is 1310 nm, 1550 nm, or 1625 nm, Fiber Type can be selected. When Fiber is changed, the IOR and BSC values of the selected optical fiber cable are displayed.

When IOR Length Adjustment at the Setup-Preferences screen is selected, the position of the cursor selected at the Trace View screen is displayed.

When IOR is changed, the cursor position changes.

If the length of the fiber is known, align the cursor with the end of the fiber and set the IOR so that the cursor position matches the fiber length.

- (1) Use and to highlight the item.
- (2) Use and to change the setting.
- (3) Repeat steps (1) and (2).
- (4) When the setting is complete, press (Set).

Note:

When IOR and BSC are changed, the loss at the Trace View and Trace Analysis screens is recalculated.

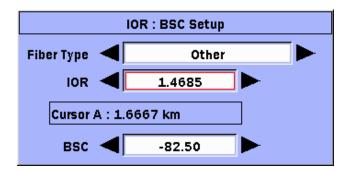


Figure 4.2.1-5 IOR BSC Setup Pop-up Window (with cursor)

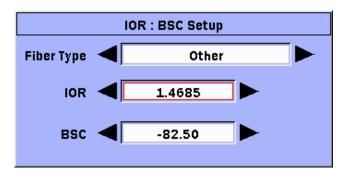


Figure 4.2.1-6 IOR: BSC Setup IOR BSC Setup Pop-up Window (without cursor)

- 9. Use and to select Loss Mode.
- 10. Use and to select the desired loss mode.

Table 4.2.1-2 Range, Resolution, and Pulse Width Combinations

| | | Range | | | | | | | | | |
|------------|--------|-------|----------|------|-------|----------|-------|--------|----------|----------|--------|
| | Mile | 0.3 | 0.6 | 1.6 | 3.1 | 6.2 | 15.5 | 31.1 | 46.6 | 77.7 | 155.3 |
| | ft | 1640 | 3281 | 8202 | 16404 | 32808 | 82021 | 164042 | 246063 | 410105 | 820210 |
| | km | 0.5 | 1 | 2.5 | 5 | 10 | 25 | 50 | 75 | 125 | 250 |
| | 5 ns | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| | 10 ns | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | √ | ✓ | ✓ |
| Pulsewidth | 20 ns | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| | 50 ns | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | √ | ✓ | ✓ |
| | 100 ns | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | √ | ✓ | ✓ |
| | 200 ns | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| nlse | 500 ns | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| ٦ | 1 us | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| | 2 us | | | | ✓ | ✓ | ✓ | ✓ | √ | ✓ | ✓ |
| | 5 us | | | | | | ✓ | ✓ | ✓ | ✓ | ✓ |
| | 10 us | | | | | | | | √ | ✓ | ✓ |
| | 20 us | | | | | | | | | ✓ | ✓ |

✓: Available

 Table 4.2.1-3
 Wavelength and Fiber Type Combination

| Files | Wavelength | | | | | |
|---------------------------|------------|------|----------|------|------|--|
| Fiber | 1310 | 1490 | 1550 | 1625 | 1650 | |
| AT&T TrueWave 95 | ✓ | | ✓ | | | |
| Alcatel ESF | ✓ | | ✓ | | | |
| Alcatel SF | ✓ | | ✓ | | | |
| Alcatel TL Metro | ✓ | | ✓ | | | |
| Alcatel TL Ultra | | | ✓ | | | |
| Alcatel Teralight | | | ✓ | | | |
| Corning LEAF | ✓ | | ✓ | ✓ | | |
| Corning SMF-28/e | ✓ | | ✓ | ✓ | | |
| Corning SUB SMF-ls | | | ✓ | | | |
| G.652 | ✓ | | ✓ | | ✓ | |
| G.653 | | | ✓ | | | |
| G.655 | | | ✓ | | | |
| IOR=1.48 | ✓ | | ✓ | ✓ | | |
| Lucent AllWave | ✓ | | ✓ | | | |
| Lucent TW 97 | ✓ | | ✓ | | | |
| Lucent TW RS 98 | ✓ | | ✓ | ✓ | | |
| Pirelli | | | ✓ | | | |
| SIECOR/Corning SMF-28e | √ | | √ | | | |
| Sumitomo PureGuide | | | ✓ | | | |
| Sumitomo SM OF SE-3 | ✓ | | ✓ | | | |
| Others | ✓ | ✓ | ✓ | ✓ | ✓ | |

✓: Available

4.2.2 Setting Measurement Method (Setup-Preferences)

The following items are set at the Setup-Preferences screen.

Table 4.2.2-1 Setup-Preferences Items

| Item | Function | Default |
|-----------------------------------|---|---------------|
| Enable Connection Check Step | Performs a connection check before the measurement start. | On |
| Enable Active Fiber Check Step | Performs a "live fiber" check on the currently connected fiber under test to check whether the fiber is carrying traffic before measurement. | On |
| Auto Analysis | Automatically performs OTDR trace analysis at the completion of data collection for the current fiber under test. If a trace is not detected, trace analysis cannot be performed. | On |
| | Note: Auto Analysis is always enabled for Fiber Visualizer function. | |
| Show Internal Launch Fiber | Displays the instrument internal fiber trace in the Trace View screen. | On |
| IOR Length Adjustment | Displays the cursor position in the IOR and BSC pop-up windows of the Test Setup screen. | Off |
| Distance Units | Sets the distance units displayed at Trace Analysis in the Trace View screen. Select from Miles, Feet, Kilofeet, Meters, and Kilometers. | Kilometers |
| Save Format | Selects a format for saving measured trace as a file. The size of files saved in the XML and SOR&XML formats is relatively larger than files saved in the SOR format and such files take a longer time to complete save processing. If you select ZIP, multiple waveform files with different wavelengths are saved to a single file. | SOR |
| Fiber Group | Selects Fiber Type is displayed on IOR:BSC Setup screen. Selected Fiber Type can be saved in Fiber Group2 or Fiber Group3. The Fiber Type of Fiber Group1 cannot change. | Fiber Group1 |
| Event icon movement* | Selects the icon movement direction by pressing the arrow keys on Fiber Visualizer screen. | Left to Right |
| End event for ORL* | Selects whether to include end event for calculation of the total optical return loss. | INCLUDE |

^{*:} Available only for Fiber Visualizer function.

- 1. Press 💮 to display the General Functions pop-up menu.
- 2. Press and to select **Setup**, and then press to display the Setup screen.

- 3. Press (Preferences) to display Setup-Preferences screen. There are the tabs 1 and 2 in the Set-up screen.
- 4. Use , , , and to select the tab 1.

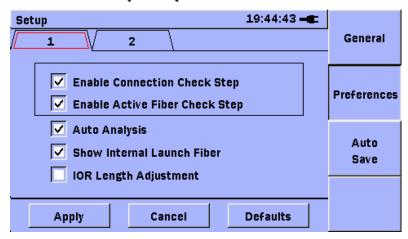


Figure 4.2.2-1 Setup-Preferences Screen 1

- 5. Use and to select the item.

 Press set to select or clear the item.
- 6. When the changes completed, use , , and to select the tab 2, and press .

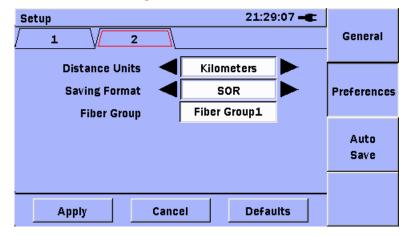


Figure 4.2.2-2 Setup-Preferences Screen 2

Note:

Event icon movement and **End event for ORL** are displayed for Fiber Visualizer function.

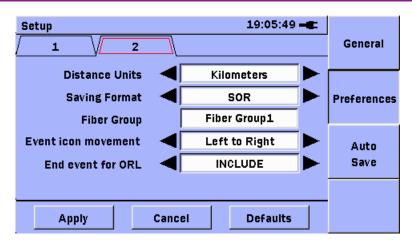


Figure 4.2.2-3 Setup-Preferences Screen 2

- 7. Use and to select **Distance Units**.
- 8. Use 4 and b to select the unit of distance listed in Table 4.2.2-1.
- 9. Use and to select Saving Format.
- 10. Use 1 and 1 to select the format.
- 11. Use and to select Fiber Group, and then press set to displays the Fiber Group screen.
- 12. Use and to select the Type.
- 13. Use and to select the Fiber Group.
- 14. Use and to select the desired Fiber Type, and then press to select (clear) the check box.
 - Press (53) to select all Fiber Type.
 - Press [4] not to select all Fiber Type.
- 15. Press to apply the changes.
 - Press (2) to close the Fiber Group screen.
- 16. Use and to select Event icon movement.
- 17. Use 1 and 1 to select the icon movement direction.
- 18. Use and to select **End event for ORL**.
- 19. Use 【 and 🤰 to select whether to include end event in calculation.
- 20. When completed, use , , , , and b to select Apply, and then press set. To cancel, select Cancel, and then press set.

 To restore default settings shown in Table 4.2.2-1, select Defaults, and then press set.

4.2.3 Setting Auto Save Mode (Setup-Auto Save)

The following items are set in the Setup-Auto Save screen.

Table 4.2.3-1 Setup-Auto Save Screen Items

| Item | Function | Default |
|---|---|---------|
| Enable Auto File Name Automatically generates the names of files to save. | | Off |
| Enable Auto Save | Automatically saves files upon completion of each measurement . | Off |
| Auto Save Device | Displays the device to which files will be saved. | * |
| Filename Prefix | Sets a character string to be appended to automatically generated file names. | auto |
| Date | Appends date to automatically generated file names. | Off |
| Wavelength | Appends wavelength to automatically generated file names. Note: When ZIP is selected as a format for saving waveforms, this item is fixed to Off. | Off |
| Sequence Number | Sets a start number of automatically generated file names. | 1 |

^{*:} Internal is displayed when the USB memory is not connected, and USB is displayed when the USB memory is connected.

Change the auto-save settings using the following procedure.

- 1. Press 💮 to display the General Functions pop-up menu.
- 2. Press and to select **Setup**, and then press to display the Setup screen.
- 3. Press (Auto Save) to display the Setup-Auto Save screen.

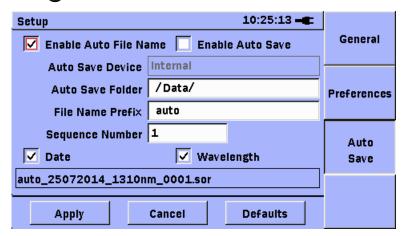


Figure 4.2.3-1 Setup-Auto Save screen

- 4. Use and to select **Enable Auto File Name**.
- 5. Press select the check box, and the file name will be automatically generated. If the check box is cleared, the file name

cannot be automatically generated.

If not selected, the file name can be input when saving a file.

- 6. Use and to select Enable Auto Save.
- 7. Auto Save is enabled when set is pressed to select the check box. If the check box is cleared, Auto Save is disabled.
- 8. Use and to select Auto Save Folder.
 - (1) Press set to display the Select Folder screen.
 - (2) Use , , , and to select a folder to save the measurement results.
 - (3) Press (Select) to set the selected folder and to close the folder selection screen.
 - (4) The selected folder path is displayed as **Auto Save Folder** on the setting screen.
- 9. Use and to select File Name **Prefix**.
 - (1) Press (Set) (**Title**) to display the entry screen for the character strings.
 - (2) Use , , , and to select the desired letter in the character matrix.
 - (3) Press set to add the selected letter to the name field.
 - (4) Repeat steps (2) and (3). Up to 21 characters can be used.
 - (5) When the name is completed, press [5] (OK). To cancel, press [6] (Cancel).

Refer to Section 3.6 "Using Softkey Board" for details about character input.

- 10. Use , , , and to select Date.
- 11. Press so to select the check box and append the date to the automatically generated file name. If the check box is cleared, the date cannot be appended to automatically generated file names.
- 12. Use , , , and to select Wavelength.
- 13. Press set to select the check box and append the wavelength to the automatically generated file name. If the check box is cleared, the wavelength cannot be appended to automatically generated file names.
- 14. Use and to select Sequence Number.
 - (1) Press set to display the numeric keypad.
 - (2) Use to set the starting sequence number for automatically-created file name as a number within 4 digits.
 - (3) Press set to input the number.

- 15. The name of the file that is automatically saved first is displayed in the frame.In Figure 4.2.3-1, it is auto_25072014_1310nm_0001.sor.
- 16. When completed, use , , , and to select Apply, and then press . To cancel, select Cancel, and then press .
 To restore the defaults as shown in Table 4.2.3-1, select Defaults, and then press .

4.3 Starting Measurement

Press (Start) at the next screen to start measurement.

- Connection Check screen
- Test Setup screen
- Trace Analysis screen
- Trace View screen

Select the **Enable Active Fiber Check Step** check box to check the existence of a live communications optical signal.

If a live communications optical signal is detected, a message is displayed and measurement is stopped.

Select the **Enable Connection Check Step** check box in the Measurement Function Settings screen to display the Connection Check screen.

4.3.1 Checking Connection



Figure 4.3.1-1 Connection Check Step screen

- [1] Connection status indicator

 Displays the status of the optical fiber cable connector as GOOD

 (green background), FAIR (yellow background), or POOR (red background).
- [2] Detailed connection status display field
 Displays the details of the current connector status.
- [3] (Test Setup)
 Displays the Test Setup screen.
- [4] **F2** (Stop)

Aborts connection check.

To resume connection check, press



[5] F3 (Continue)

Starts measurement after connection check result is displayed.

[6] Connection figure

Displays the wavelength port for measurement.

4.3.2 Operation Depending on Connection Check Result

Perform the following operation depending on the result of the connection check.

Note:

If the Dual WL is selected at Test Mode, Connection Check is measured with 1550 nm

• GOOD:

If the good status lasts for three seconds or more, the test will automatically advance and the Trace View screen is displayed. Press or (Continue) to immediately display the Trace View screen.

- FAIR:
 - Press or [3] (Continue) to display the Trace View screen.
- POOR:

Consider the following possible causes:

POOR connector connection status

There is a possibility that the connector connection status is bad. Press (Stop) to stop the connection check and clean the connector. After completing cleaning, press again and run the connection check.

Connection level is POOR.

Clean All Optical Connectors, Switch Ends

Of Patch Cord, or Use Another Patch Cord.

Figure 4.3.2-1 POOR connection status

Short optical fiber cable connection

There is a possibility that the connection check function does not work. In this case, press or (Continue) to start the measurement.

No fiber backscatter detected.

Either no fiber attached or fiber is too short.

Please Press Continue to Proceed...

Figure 4.3.2-2 Short optical fiber cable connection

Note:

This function checks the connection status of the optical fiber cable with no connectors for at least 50 m. Disable this function when connecting several short optical fiber cables, such as patch cords.

4.4 Viewing Trace

4.4.1 Trace View

When the measurement starts, the Trace View screen appears. To stop measurement, press (Start).

The Trace View screen can also be accessed by doing any of the following:

- Pressing (Trace View) in the Test Setup screen.
- Pressing [4] (Trace View) in the Test Analysis screen.

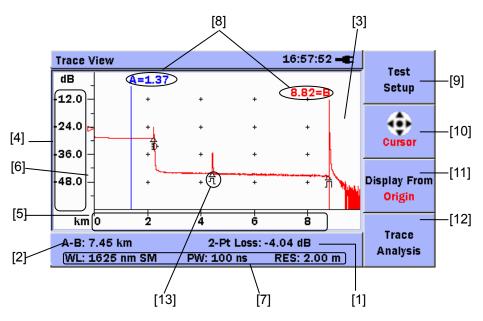


Figure 4.4.1-1 Trace View Screen (When Loss Mode is not Event)

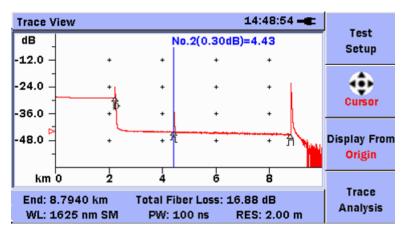


Figure 4.4.1-2 Trace View Screen (When Loss Mode is Event)

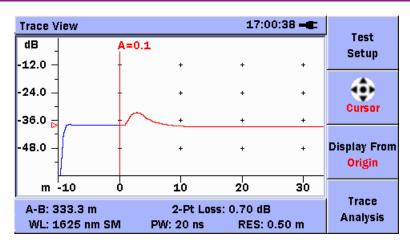


Figure 4.4.1-3 Trace View Screen (with internal fiber displayed)

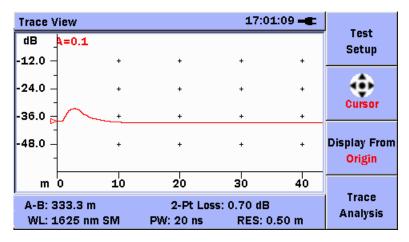


Figure 4.4.1-4 Trace View screen (without internal fiber displayed)

[1] Loss mode, measured loss value

The loss measurement method and measured loss are displayed in the following units.

[2-pt Loss], [Splice Loss], [ORL], [Event]: dB [dB/km Loss], [dB/km Loss LSA]: dB/km

There is no display during averaging measurement.

- [2] Cursor A-B Distance/Fiber Far End Display Field
 - When the Loss Mode is not Event, the distance between cursor A and cursor B is displayed in the distance units (km, m, ft, kf, mi) set in the Measurement Function Settings screen.
 - When the Loss Mode is Event, the far end of the optical fiber cable is displayed in the distance units set in the Measurement Functions Setting screen.
- [3] Trace graph
 Displays measured waveform.

- [4] Graph y-axis
 Displays trace level scale (dB).
- [5] Graph x-axisDisplays distance scale.Displays distance units (km, m, ft, kf, mi) set in the MeasurementFunction Settings screen.
- [6] Level indicator
 Displays level of trace selected by cursor at ▷ symbol on y-axis.
 Refer to item [8] for the cursor selection method.
- [7] Measurement conditions
 Displays following values:
 WL: Wavelength

PW: Pulse width SM: Single-mode fiber RES: Resolution

[8] Cursor A, Cursor B/Event Cursor

When the Loss Mode is not Event, Cursor A and Cursor B are displayed as vertical lines on the waveform trace; when Loss Mode is Event, the Event cursor is displayed as a vertical line on the waveform trace. The cursor position **distance from origin at 0 m or 0 ft** is displayed on the cursor. The loss value and cursor position are displayed above the event cursor. The distance units are the units set in the Test Setup screen (km, m, ft, kf, mi). The operation of cursor is described below.

Before operating cursors, verify that **Cursor** is displayed at **2**. If **Zoom** is displayed, press **2** to switch to the **Cursor** mode.

For the case of Cursor A and Cursor B

- The selected cursor is switched each time selected cursor is displayed in red and cleared cursors are displayed in blue.
- Press (and) to move the selected cursor left and right. Hold down (and) to move the cursor faster.

The movement of the cursor and trace in the trace display field when and are pressed differs according to the display origin setting. Refer to item [11] for the origin settings.

• Press and to move the selected cursor to the event position. Press to move the cursor from the current position to the event closest to the start of the trace (left side). Press to move the cursor to the event closest to the end of the trace (right side).

For the case of Event cursor

- The cursor is always blue and indicates the event position.
- Press and or and to move the cursor the adjacent event.
- Press or to move the cursor from the current position to the event closest to the start of the trace (left side).
- Press or to move the nearest event cursor in the end point direction (right).

Refer to section 4.4.2 "Using Cursor" for the cursor operation procedure.

[9] (Test Setup)

Press (Test Setup) to display the Test Setup screen.

Refer to section 4.2.1 "Setting Measurement Conditions (Test Setup)" for details.

[10] **F2** (Cursor), **F2** (Zoom)

Cursor and Zoom are switched each time [52] is pressed.

- [11] (Display From/Origin), (3 (Display From/A),
 - (Display From/B), [3] (Display From/Event)

The trace display origin is switched each time (53) is pressed. The contents of (53) are the current setting.

Refer to the following for the display origin setting and operation.

 Origin: The start point (left end) of the horizontal axis of the trace display field becomes the start point of the measured trace.

> When the internal fiber display is enabled, the start point of the horizontal axis of the trace display field becomes the start point of the internal fiber.

When the internal fiber display is disabled, the start point of the horizontal axis of the trace display field becomes the optical connector of the Network Master. Select the whole fiber or the part of the trace around the start to verify, etc.

• A: The center of the horizontal trace field is fixed at the position of cursor A.

When cursor A is selected in this condition and and are pressed, the entire measured trace can be shifted left or right.

Select the trace around cursor A to be verified.

• B: The center of the horizontal trace field is fixed at the position of cursor B.

When cursor B is selected in this condition and and are pressed, the entire measured trace can be shifted left or right.

Select this when you want to confirm the trace near cursor B.

• Event: The center of the horizontal trace field is fixed at the position of event cursor. Press and in this condition to move the event cursor to the left and right of the event. Select this when you want to confirm the trace near the event.

[12] [4 (Trace Analysis)/[4 (Mode)

At Average measurement, or when measurement is stopped: Press (Trace Analysis), and the Trace Analysis screen is displayed.

Refer to section 4.5 "Analyzing Trace" for the Trace Analysis screen.

At Real Time measurement:

Fast and High S/N are switched each time (Mode) is pressed.

The measurement speed is faster when Fast is set.

The noise is suppressed when High S/N is set.

[13] Event Marker

When an event is detected in the Trace Analysis screen, the corresponding event is displayed.

Refer to Table 4.5.1-1 "Event Type List" for details of events.

4.4.2 Using Cursor

Cursor mode

In the Cursor mode, cursors displayed on the trace display field can be moved. This is used to measure distance between cursors and for loss analysis. Combined use with the Zoom mode supports even finer analysis. Move the cursors as described in the following procedure.

- 1. Press [3] to switch the trace origin.
- 2. If **Zoom** is displayed at [2], press [52] to switch to the Cursor mode.
- 3. For cursor A and cursor B, press to select the cursor to move.

 The selected cursor is displayed in red. The Event cursor is always displayed in blue.
- 4. For cursor A and cursor B, press (and) to move the selected cursor left and right. Hold down (and) to move the cursor faster.

 For the Event cursor, press (and) to move the cursor left and right to the nearest event position.
- 5. Press and while cursor A or B is selected to move the cursor to the event position.

For the Event cursor, the cursor moves to the adjacent event.


The displayed cursor differs according to the Loss Mode setting.

Table 4.4.2-1 Trace View screen

| Loss Mode Cursor | 2-pt Loss | Splice Loss | dB/km Loss | dB/km Loss LSA | ORL | Event |
|------------------|--------------|----------------|---------------|----------------------|-----|-------|
| Cursor A | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Cursor B | ✓ | ✓ | ✓ | ✓ | ✓ | |
| LSA1 | | ✓ | | ✓ | | |
| LSA2 | | ✓ | | ✓ | | |
| LSA3 | | ✓ | | ✓ | | |
| LSA4 | | ✓ | | ✓ | | |
| Event | | | | | | ✓ |

^{✓:} Displayed cursor

The operation of the LSA1, LSA2, LSA3, and LSA4 cursors differs according to the Loss Mode.

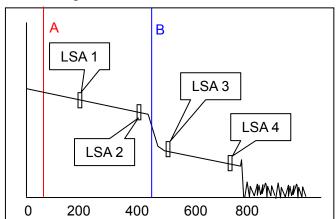

When Loss Mode is Splice Loss:

Figure 4.4.2-1 Splice Loss Cursor Display

Press so to select the cursor in the sequence of A, B, LSA 1, LSA 2, LSA 3, and LSA 4.


Cursors LSA 1 and LSA 2 are displayed in the left of Cursor B.

Cursor LSA 1 is displayed in the left of Cursor LSA 2.

Cursors LSA 3 and LSA 4 are displayed in the right of Cursor B.

Cursor LSA 3 is displayed in the left of Cursor LSA 4.

When Cursor B moves, Cursors LSA 1 to 4 move as well.

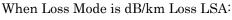

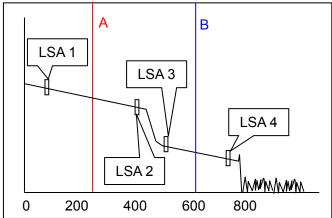


Figure 4.4.2-2 dB/km Loss LSA Cursor Display

Press st to select the cursor in the sequence of A, B, LSA 1, LSA 2, LSA 3, and LSA 4.

Cursors LSA 1 and LSA 2 are displayed in the left and right of Cursor A, respectively.

Cursor LSA 1 is displayed in the left of Cursor LSA 2.

Cursors LSA 3 and LSA 4 are displayed in the left and right of Cursor B, respectively.

Cursor LSA 3 is displayed in the left of Cursor LSA 4.

When Cursor A moves, Cursors LSA 1 and LSA 2 move as well.

When Cursor B moves, Cursors LSA 3 and LSA 4 move as well.

4.4.3 Zooming in and out Trace Display

Zoom mode

The Zoom mode enlarges and reduces (zooms in and out) the size of the trace in the trace display field. It is useful for verifying event details.

The appearance of the zoomed trace differs according to the display origin setting.

- A, B: The trace is zoomed in and out centered on the trace level and cursor position of the display origin selected by [3].
- Origin: The trace is zoomed in and out centered on the waveform start point and trace level 0 dB.
- Event: The trace is zoomed in and out centered on the trace level and event cursor position.

Zoom in and out the trace as described below.

When display origin is cursor A or B:

- 1. If **Cursor** is displayed at **[2]**, press **[2]** to switch to the Zoom mode.
- 2. Press [3] to switch the cursor used as the center of zooming in and out. When zooming in or out vertically, centering is performed on the trace level of the cursor for the display origin selected by [3]. When zooming in or out horizontally, centering is performed centered on the position of the cursor for the display origin selected by [5].
- 3. Press to select the same cursor as the cursor for the display origin selected by 53. The selected cursor is displayed in red.
- 4. Press to zoom out the trace horizontally, centering on the cursor for the display origin selected by 63.
 - Press to zoom in the trace horizontally, centering on the cursor for the display origin selected by [3].
 - Press to zoom in trace vertically, centering on the trace level of the cursor for the display origin selected by [3].

Press to zoom out the trace vertically, centering on the trace level of the cursor for the display origin selected by [3].

When the Loss Mode is Splice Loss or dB/km Loss LSA, the trace can be zoomed in and out, centering on the cursors LSA1 thru LSA4.

- 1. Press set to set the LSA cursor. The selected cursor is displayed in red.
- 2. Press , , , and to zoom in and out.

The following table shows the combination of LSA cursors that can be set to the center, Loss Mode, and display origin.

Table 4.4.3-1 LSA Cursor Combination Supporting Zoom-in/out around Center

| | | Display Origin | | | | | |
|--------------|--------------------|----------------|---------------------------|--|--|--|--|
| | | A B | | | | | |
| Loss Mode | Splice Loss LSA | - | LSA1, LSA2, LSA3, LSA4 | | | | |
| | dB/km Loss LSA | LSA1, LSA2 | LSA3, LSA4 | | | | |

When display origin is Origin:

- 1. If **Cursor** is displayed at [2], press [2] to switch to the Zoom mode.
- 2. Press (3) to switch to (5) (Display From/Origin).
- 3. Press to zoom out the trace horizontally, centering on the trace origin.

Press to zoom in the trace horizontally, centering on the trace origin.

Press to zoom in the trace vertically, centering on the trace level 0 dB.

Press to zoom out the trace vertically, centering on the trace level 0 dB.

When display origin is Event:

- 1. If **Cursor** is displayed at **[2]**, press **[2]** to switch to the Zoom mode.
- 2. Press (3) to switch to (5) (Display From/Origin).
- 3. Press to zoom out the trace horizontally, centering on the event cursor.

Press to zoom in the trace horizontally, centering on the event cursor.

Press to zoom in the trace vertically, centering on the waveform level of the event cursor.

Press to zoom out the trace vertically, centering on the waveform level of the event cursor.

4.4.4 Swap Traces

When the measurement starts with Dual WL, two waveforms are displayed in the Trace View screen. The current waveform can be switched between 1310 and 1550 nm waveforms.

To swap trace:

- 1. Press to display the General Functions pop-up menu.
- 2. Select **Swap Traces** with and and and then press set to switch current waveform.
- 3. The current waveform is displayed in red.

4.5 Analyzing Trace

Analysis of the measured trace detects points where loss and reflection occur as well as the far end of the fiber as events.

4.5.1 Trace analysis

When **Auto Analysis** is selected in the Setup-Preference screen, the trace is captured by Average measurement and displayed in the Trace Analysis screen.

Operate using any of the following:

- Pressing [4] (Trace Analysis) in the Test Setup screen.
- Pressing (Trace Analysis) in the Trace View screen.

Note:

The Trace Analysis screen is not displayed even if [4] (Trace Analysis) is pressed during measurement or when there is no trace.

The trace analysis results are displayed in the Trace Analysis screen.

Note:

The trace analysis results might not have fully covered all events on the fiber. It should be recommended to take a look at the OTDR trace at the end.

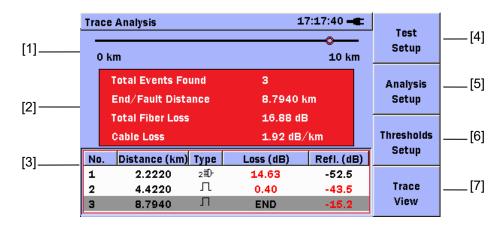


Figure 4.5.1-1 Trace Analysis Screen

[1] Optical fiber schematic

When fault detection is completed, all events are displayed in the event table. Additionally, if the selected event is other than the fiber far end, its position is indicated on the fiber schematic by the Δ symbol.

The far end or a break in the optical fiber cable is indicated by the

② symbol. This is displayed when the far end or out-of-range is detected.

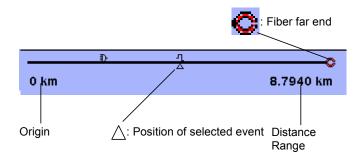


Figure 4.5.1-2 Fiber Schematic

- [2] Results display field
 - Displays the following analysis results:
 - Total Events Found
 - End/Fault Distance
 - Total Fiber Loss
 - Cable Loss: This is the total loss of the fiber divided by the distance to the fiber far end or fault point.
 - Wavelength

If the far end of the optical fiber is not detected, *** is displayed at Total Fiber Loss and Cable Loss.

[3] Event table

When trace analysis is completed, the event data for the optical fiber cable are displayed. "Splice points exceeding the set threshold value" and "the far end and breaks in the fiber" are displayed in tabulated format. Select the event using and and and then press to display the Event Description dialog box.



Figure 4.5.1-3 Event Description

Use a and b to select **OK**. Press **Set** to close the **Event Description** dialog box.

Use a and b to select **Auto Zoom**. Press set to display the Trace View with Auto Zoom for the selected Event.

The following information is displayed in the event table.

• No: Displays the number of the fault event counted from left end of the fiber schematic

• Distance: Displays the distance from the main frame optical

connector to the event

• Type: Displays the type of the event. The event types are

backscatter, non-backscatter, group, far end,

out-of-range, and Splitter. Any of the following icons $\,$

may be displayed, depending on the event.

Table 4.5.1-1 Event Type List

| Icon | Туре | Description |
|----------|---------------------|--|
| П | Reflective | Reflection from a splice point, such as a Fresnel reflection caused by a mechanical splice or connector. |
| | Non-Reflective | Non-reflective events include such low loss events as fusion splices and Macro Bends. If the loss is a negative value, the "rising to the right" icon is displayed. |
| M | Grouped | Events spaced too close to each other for Analysis to distinguish them as separate events are reported as Grouped events. |
| | Far End | Any event with a loss equal to or greater than the Fiber End threshold is reported as the Far End event. |
|]? | Questionable End | A Questionable End event is reported, instead of a Far End event, when an Out of Range or Out of Distance condition is encountered. Out of dynamic range If there is noise in the trace before the detected far end/break, the dynamic range is setting is incorrect. Out of Range is displayed at Loss in the event table. Out of distance range If the end of trace is reached before the detected far end/break, the distance range is incorrect. Out of Dist. is displayed at Loss in the event table. |
| 1 | Splitter | Loss due to presence of optical fiber cable splitter |
| M | Macro Bend | Reports as an event "Macro Bend" when the detected event exceeds the specified threshold for the Macro Bend. The loss calculated for the event is marked with an M. |

Loss: The Loss calculated for the event is displayed. When the event is at the far end or a break in the fiber cable,
 END is displayed.

Refl.: A reflectance value is displayed for all reflective events.
 *** is displayed for non-reflective events. In addition to the reflectance value, two other indicators may be present: S or >.

S:

Measurement cannot be performed correctly when the level of the reflective event is saturated.

>:

The level of the reflection point cannot be measured accurately because a large value is set for the dead zone display resolution.

Note:

If the measured value cannot be determined because the event is too close, *** is displayed. The event auto-detect function is a secondary function for simple measurement, so measured values are not assured. Sometimes, it will detect events incorrectly so perform final OK/NG evaluation of results by observing the trace.

- [4] (Test Setup)
 - Press (Test Setup) to display the Test Setup screen.
- [5] (Analysis Setup)

Press (Analysis Setup) to display the Analysis Setup screen.

[6] (Thresholds Setup)

Press [3] (Thresholds Setup) to display the Thresholds Setup screen.

[7] (Trace View)

Press (Trace View) to display the Trace View screen.

At this time, cursor A is positioned at 0 and cursor B is positioned at

the event selected in the event table. When Loss Mode is Event, an event cursor is positioned at the position of the selected event.

Note:

When changing from the Trace View screen to the Trace Analysis screen without changing the event selected in the event table and then redisplaying the Trace Views screen again, the positions of cursor A and cursor B and the graph display range do not change.

4.5.2 Setting event detection conditions (Analysis Setup)

The event detection conditions are set.

Table 4.5.2-1 Analysis Setup Screen Items

| Item | Function | Setting Range | Default |
|--------------|--|--|---------|
| End of Fiber | Sets loss evaluated as end of fiber. | 1 to 99 | 3 |
| Event Loss | Sets absolute loss evaluated as backscatter and non-backscatter events. | 0.01 to 9.99 | 0.05 |
| Reflectance | Sets return loss evaluated as reflectance. | -20.0 to -70.0 | -60.0 |
| Macro Bend* | Sets loss when evaluating as macro bends. Macro Bend is used when the Macro Bend Analysis is selected in the Test Setup screen. | | 0.3 |
| 1x2* | Sets the loss to be evaluated as a 1x2 branch splitter. | 0.1 to "Setting value of 1x4" -0.1 | 3.0 |
| 1x4* | Sets the loss to be evaluated as a 1x4 branch splitter. | Between the setting values of 1x2 +0.1 and 1x8 -0.1 | 6.0 |
| 1x8* | Sets the loss to be evaluated as a 1x8 branch splitter. | Between the setting values of 1x4 +0.1 and 1x16 -0.1 | 9.0 |
| 1x16* | Sets the loss to be evaluated as a 1x16 branch splitter. | Between the setting values of 1x8 +0.1 and 1x32 -0.1 | 12.0 |
| 1x32* | Sets the loss to be evaluated as a 1x32 branch splitter. | Between the setting values of 1x16 +0.1 and 1x64 -0.1 | 15.0 |
| 1x64* | Sets the loss to be evaluated as a 1x64 branch splitter. | Between the setting values of 1x32 +0.1 and 1x128 -0.1 | 18.0 |
| 1x128* | Sets the loss to be evaluated as a 1x128 branch splitter. | "Setting value of 1x64" +0.1 to 30.0 | 21.0 |
| 2x8* | Sets the loss to be evaluated as a 2x8 branch splitter. | +1.0 to 30.0 | 8.5 |

^{*:} This is not displayed by the DCFL function.

1. Press (Analysis Setup) in the Trace Analysis screen to display the Analysis Setup (1/3) screen.

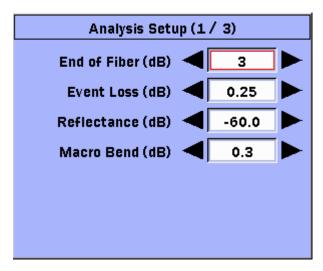


Figure 4.5.2-1 Analysis Setup Pop-up Screen (1/3)

- 2. Press and to select **End of Fiber**, and press and to set the loss evaluated as an end of fiber.
- 3. Press and to select **Event Loss**, and press and to set the loss evaluated as an event.
- 4. Press and to select **Reflectance**, and press and to set the return loss evaluated as reflectance.
- 5. Press and to select **Macro Bend**, and press and to set the loss evaluated as macro bend.
- 6. Press (Page (1/3)) in the Trace Analysis screen to display the Analysis Setup (2/3) screen.
 - Press again, Analysis Setup (3/3) screen is displayed.

| Analysis Setup (2 / 3) | | | |
|------------------------|--------------------|------|--|
| Branch | Splitter Loss (dB) | | |
| 1×2 | ■ | 4.0 | |
| 1×4 | ■ | 7.0 | |
| 1×8 | ■ | 10.0 | |
| 1×16 | ■ | 13.0 | |
| 1×32 | ■ | 16.0 | |
| 1×64 | ■ [| 19.0 | |
| 1×128 | ■ [| 22.0 | |

Figure 4.5.2-2 Analysis Setup Pop-up Screen (2/3)

- 7. Press and to select the number of branches, and press and to set the loss evaluated as a splitter event.
- 8. When the change is complete, press [6] (Apply). Trace analysis is executed and the results are updated.

Press (Cancel) to cancel the setting.

Press (Defaults) to return to the factory presets shown in Table 4.5.2-1.

4.5.3 Setting OK/NG thresholds (Thresholds Setup)

Set the OK/NG thresholds for evaluating loss and return loss.

Table 4.5.3-1 Thresholds Setup Screen Items

| Item | Function | Setting Range | Default |
|---|---|---------------|---------|
| Non-Reflective | Sets event loss evaluated as OK/NG. Non-backscatter event loss greater than this setting is displayed in red. | 0.05 to 30.00 | 0.20 |
| Reflective | Sets event return loss evaluated as OK/NG. Backscatter loss greater than this setting is displayed in red. | 0.05 to 30.00 | 0.50 |
| Splitter Loss*2 | Sets the value to make a pass-fail judgment of the event splitter. The splitter event loss is displayed in red, if it is greater than the analysis threshold plus the pass-fail threshold. | 0.1 to 20.0 | 3.0 |
| Reflectance | Sets event return loss evaluated as OK/NG. Event return loss greater than this setting is displayed in red. | | 20.0 |
| Sets loss evaluated as total fiber loss. Total Fiber Loss Total Fiber Loss is displayed in red when the total loss of the fiber is greater than this setting. | | 0.1 to 60.0 | 10.0 |
| ORL*1*2 Sets the total ORL (optical return loss) to evaluate the ORL of the entire fiber. If the total ORL is smaller than this value, the ORL is displayed in red. | | 0.0 to 60.0 | 27.0 |

^{*1:} This is not displayed by the OTDR functions.

^{*2:} This is not displayed by the DCFL functions.

1. Press (3 (Thresholds Setup) in the Trace Analysis screen to display the Thresholds Setup screen.

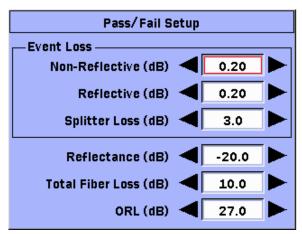


Figure 4.5.3-1 Thresholds Setup Pop-up Screen

- 2. Press and to select **Non-Reflective**, and press and to set the threshold for non-reflective event losses.
- 3. Press and to select **Reflective**, and press and to set the threshold for reflective event losses.
- 4. Press and to select **Splitter Loss**, and press and to set the threshold for splitter losses.
- 5. Press and to select **Reflectance**, and press and to set the threshold for event return loss evaluation value.
- 6. Press and to select **Total Fiber Loss**, and press and to set the threshold for total fiber loss.
- 7. Press and to select **ORL**, and press and to set the threshold for total ORL of events.
- 8. When the change is complete, press (Apply). When executing trace analysis and updating the trace analysis results press (Cancel) to cancel the setting.

 To restore the factory defaults as shown in Table 4.5.3-1, press (Defaults).

4.6 Setting header to trace

The header can be included in the trace file when saving measurement results.

Note:

- If trace data has been loaded, the header saved in the trace data appears on the header screen.
- Sequence Number will be set to 0 if the loaded trace file had been saved by the firmware version 2.22 or older.

| Item | Function | Setting Range | Default |
|-----------------|---|---------------------|---|
| Cable ID | Sets the measured ID of cable. | Up to 30 characters | Blank |
| Fiber ID | Sets the measured ID of fiber. | Up to 30 characters | Blank |
| Sequence Number | Sets Sequence Number setup in the Auto Save screen. | 0 to 9999 | Sequence Number setup in the Auto Save screen |
| Location A | Sets the location name at measurement start. | Up to 30 characters | Blank |
| Location B | Sets the location name at measurement end. | Up to 30 characters | Blank |
| Direction | Sets a direction to be measured. | Up to 30 characters | A->B |

Sets the measured person's name

Table 4.6-1 Header Screen Items

1. Press (Header) in the Save Trace As screen to display the Header screen.

Up to 30 characters

Blank

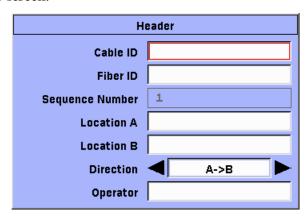


Figure 4.6-1 Header Pop-up Screen

2. Press and to select **Cable ID**, and then press display the SoftKeyboard (Character Input) screen.

Operator

- 3. Press , and to select the character for input, and press sel
- When the name is completed, press (OK). To cancel, press (Cancel).
 Refer to section 3.6 "Using Softkey Board" for details about character input.
- 5. Set Fiber ID, Location A, Location B, and Operator in the same manner.
- 6. Press and to select **Direction**, and press and to set A->B or B->A.
- 7. When the change is complete, press (Apply).

 To cancel, press (2 (Cancel) to cancel the setting.

 To restore the factory defaults as shown in Table 4.6-1, press (Defaults).

4.7 Saving trace manually

Measurement results can be saved as a trace file either to internal memory or to external USB memory. Use this function when wanting to keep the actual results.

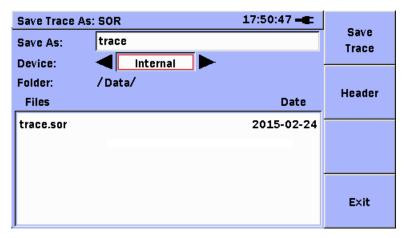


Figure 4.7-1 Save Trace As Screen

To manually save files:

- 1. In any of the following screen, press
 - Test Setup screen
 - Trace View screen
 - Trace Analysis screen
- 2. Use and to select **Save**, and then press to display the Save Trace As screen.

Note:

Save is not displayed either during measurement or when no trace is displayed.

The extension of saving file is displayed on the top of the screen. Saving format can be changed in the Setup-Preferences screen.

3. Select **Save As** and press so to display the SoftKeyboard (Character Input) screen.

If a file name is not determined, press and to select Save As.

- (1) Press , , , and to select the character for input.
- (2) Press set to add the highlighted letter to the name field.

- (3) Repeat steps (1) and (2). Up to 19 characters can be used. The file extension is automatically appended.
- (4) When the name is completed, press (OK). To cancel, press (Cancel).

Refer to section 3.6 "Using Softkey Board" for details about character input.

- Press and to select Device.
- 5. Press and be to select the device where the trace file will be saved. Either **Internal** or **USB** can be selected.

Note:

If there is no USB device connected to the unit, **USB** cannot be selected.

6. Press and to select the folder for saving the trace file, and press set. The selected folder is displayed enclosed in brackets [].

Repeat this operation to move to a folder two levels higher or lower than the current folder. To move to the higher level folder, select [..] and press [Set].

Notes:

- When saving the trace file to built-in memory, you can select only the Data folder or its subordinate folder as a save location.
- Selecting a folder containing 500 or more files will require a few seconds to display the folder contents on the Mass Storage screen.
- 7. Press (Header) to display the Header screen. Enter the header to save in Trace data.

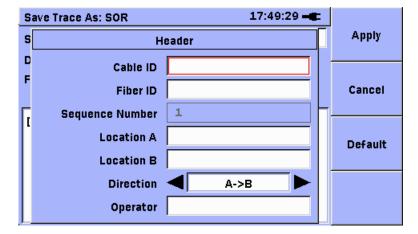


Figure 4.7-2 Header screen

- 8. When the change is complete, press (Apply).

 To cancel, press (Cancel) to cancel the setting.

 To restore the factory defaults as shown in Table 4.6-1, press (Defaults).
- 9. Press (Save Trace) to save the trace folder.
 To stop the file save, press (Exit).

If a file with the same name exists, the message below will be displayed.



Figure 4.7-3 Trace Save Error message

If you select **OK**, the file is overwritten. If you select **Cancel**, the trace is not saved.

Notes:

- If there are files or folders using characters that cannot be set at the character input screen, the file or folder name cannot be displayed correctly. Read the name after changing it using a PC, etc. Refer to section 3.6 "Using Softkey Board" for the characters that can be displayed correctly by the main frame.
- The Logs, Properties, and ScreenCaptures folders in the built-in memory are system folders. Do not change system folders.

4.8 Loading Trace Data (Mass Storage-Load)

Saved trace files can be loaded from built-in memory or USB memory. This is useful when you want to verify the trace of a previously measured fiber cable.

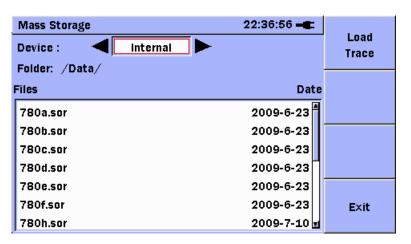


Figure 4.8-1 Mass Storage (Load) Screen

Load the trace file using the following procedure.

- 1. In any of the following screen, press
 - Test Setup screen
 - Connection Check Step screen
 - Trace View screen
 - Trace Analysis screen
- 2. Use and to select **Load**, and then press to display the Mass Storage (Load) screen.

Note:

Load is not displayed during measurement or the connection check.

3. Press and to select the memory where the trace file was saved. Either Internal or USB can be selected.

Note:

If there is no USB device connected to the unit, **USB** cannot be selected.

4. Press and to select the folder where the trace file was saved, and then press and The selected folder is displayed enclosed in brackets [].

Repeat this operation to move to a folder two levels higher or lower than the current folder. To move to the higher level folder, select [..] and press sel.

Note:

Selecting a folder containing 500 or more files will require a few seconds to display the folder contents on the Mass Storage screen.

5. Press and to select the trace file to load, and press (Load Trace). The trace is displayed on the Trace View screen and the trace file data is also applied to the Test Setup screen.

To stop loading the trace, press (Exit).

Note:

The following parameters in Trace View indicate the value of the loaded trace, not that of the current module.

- WL
- PW
- RES

The following items in Test Setup are replaced by the setting of the loaded trace.

- BSC
- IOR

Loss Mode is displayed as Event, if Load Trace is executed when the **Full Auto** check box is selected (On).

Only files saved by the following Anritsu models can be loaded:

- MU909014A
- MU909014A1
- MU909014B
- MU909014B1
- MU909014C
- MU909014C6
- MU909015A6
- MU909015B
- MU909015B1
- MU909015C
- MU909015C6

4.9 Restoring Defaults (All Defaults)

All general settings other than Date & Time, Color Theme, Language, Login Password, and Remote Control Password can be restored to the factory defaults.

Measured waveforms are deleted by restoring the factory defaults. Files saved to built-in memory are not deleted.

Table 4.9-1 Items initialized by All Defaults

| Initialized Item | Settings |
|--|---|
| Test Setup | Refer to Table 4.2.1-1 |
| Setup-General (Excluding Date & Time, Color Theme, Language, Screen Capture Format, Use Login Password, Login Password, and Remote Control Password) | Auto Backlight: 5 Mins Auto Power Off: 10 Mins |
| Setup-Preference | Refer to Table 4.2.2-1 |
| Setup-Auto Save | Refer to Table 4.2.3-1 |
| Trace View | F2: Zoom F3: Display From Origin F4: Fast* |
| Trace Analysis - Analysis Setup | Refer to Table 4.5.2-1 |
| Trace Analysis-Threshold Setup | Refer to Table 4.5.3-1 |
| Header | Refer to Table 4.6-1 |

- *: Displayed during measurement only when Test Mode is Real Time.
- 1. Press (Test Setup) at any of the following screens.
 - Connection Check Step screen (when connection check is stopped)
 - Trace Analysis screen
 - Trace View screen (when measurement is stopped)
- 2. Press 💮 to display the General Functions pop-up menu.
- 3. Use and to select **All Defaults**, and then press at A confirmation dialog appears when restoring the factory defaults.
- 4. Use and to select **Yes**, and press so to restore the factory defaults.

4.10 Calculation Method

4.10.1 Loss measurements

The loss displayed in the Trace View screen is calculated as follows.

2-pt Loss

The 2-Point Loss Measurement uses a data point at Cursor A and a data point at Cursor B to calculate the change in dB between the two points. Normally the Cursor A (Y-Axis) data is greater than the Cursor B (Y-Axis) data and a positive loss measurement is displayed.

$$Loss = L_A - L_B$$

Loss: Loss [dB]
LA: Level of Cursor A
LB: Level of Cursor B

When connecting a fiber with a different BSC, sometimes the loss value may become negative.

2pt-Loss is used to measure the loss between two points on the optical fiber.

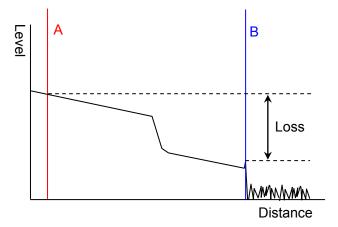


Figure 4.10.1-1 2-pt Loss Measurement Method

Splice Loss

Use Splice Loss mode to measure the optical power loss caused by connectors, splices, and couplers on a fiber optic cable.

The trace measured at a fiber splice looks like the solid line in the following diagram. The loss due to the pulse width and sample count occurring across distance ΔL is observed.

In fact, loss only occurs at the splice as shown by the dotted lines. Consequently, this loss cannot be measured using the 2-pt Loss mode.

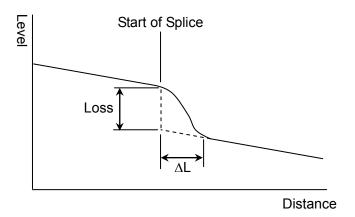


Figure 4.10.1-2 Fiber Splice Measurement

Using the Splice Loss mode, two linear approximations are generated from the LSA cursors using the least squares method. The level difference between the linear approximations at cursor B is the measured splice loss.

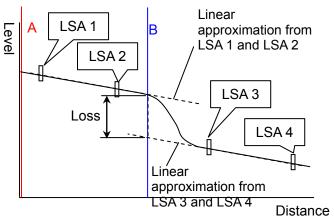


Figure 4.10.1-3 Splice Loss Measurement Method

dB/km Loss

dB/km Loss is found by dividing the 2pt Loss by the distance between the markers.

$$Loss = \frac{L_A - L_B}{D_B - D_A}$$

Loss: Loss (dB/km)

D_A: Distance of Cursor A (km)
D_B: Distance of Cursor B (km)

L_A: Level of Cursor A L_B: Level of Cursor B

dB/km Loss LSA

dB/km Loss LSA is found as the loss per kilometer using the same linear approximation as used for Splice Loss measurement.

$$Loss = \frac{L_A - L_B}{D_B - D_A}$$

Loss: Loss (dB/km)

D_A: Distance of Cursor A (km)
D_B: Distance of Cursor B (km)

LA: Cursor A linear approximation level L_B: Cursor B linear approximation level

The cursor A level is obtained by linear approximation from the trace between LSA 1 and LSA 2.

The cursor B level is obtained by linear approximation from the trace between LSA 3 and LSA 4.

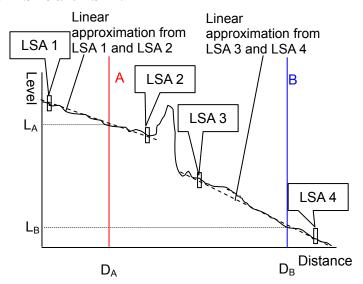


Figure 4.10.1-4 dB/km Loss LSA Measurement Method

ORL (Optical Return Loss)

ORL (Optical Return Loss) is the ratio of the level of the returned optical signal to the level at the position of cursor A. The level of the returned optical signal is the optical power returned from the trace between cursor A and cursor B.

ORL is displayed in dB units and the numerical value of ORL becomes larger as the returned level becomes smaller.

$$ORL = -10\log_{10}(\frac{ER}{Ein}) = -10\{\log_{10}(BSL) - \log_{10}(PW) + \log_{10}(\int_{a}^{b} R(t)dt)\}$$

$$ER = \int_{a}^{b} P(t)dt = BSL \times P_{a} \times \int_{a}^{b} R(t)dt$$

$$Ein = P_a \times PW$$

$$R(t) = \frac{P(t)}{BSL \times P_a}$$

$$BSL = \frac{BSC \times \alpha_R \times c \times PW}{2 \times IOR}$$

ORL: return loss (dB)

ER: Energy (J) of light returned between cursor A and cursor B

Ein: Energy (J) of light inserted at position of cursor A

BSL: backscatter coefficient level

PW: Pulse width of inserted light

P(t): Power (W) measured by OTDR after elapsed time (t) after pulse insertion

a: Time when OTDR receives light returned from cursor A

b: Time when OTDR receives light returned from cursor

Pa: Peak power of light pulse passing position of cursor A

R(t): Power (W) measured by OTDR normalized by backscatter level (W) at position of cursor A

BSC: backscatter coefficient

α_R: Rayleigh scattering loss

c: Speed of light 3×108 (m/s)

IOR: index of refraction

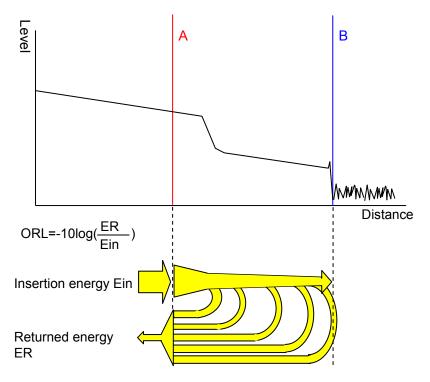


Figure 4.10.1-5 ORL Measurement Method

4.10.2 Event Evaluation

The causes of events displayed in the Trace Analysis screen are evaluated as follows.

Reflective

These are events caused by Fresnel reflection due to the presence of optical connectors, mechanical splices, etc.

Any of the following points are evaluated as reflective events:

- Points where measured reflectance exceeds Reflectance set in the Analysis Setup screen
- Points where loss measurement result exceeds Event Loss setting in the Analysis Setup screen

The event table Reflectance is measured as follows.

The trace peak level L_1 is detected.

The Rayleigh scattering level L_2 immediately before the peak level is measured.

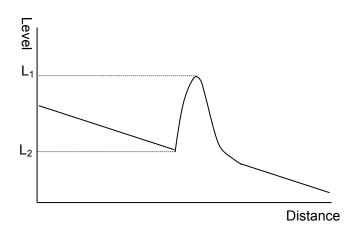


Figure 4.10.2-1 ORL Measurement Method

The ORL value is found from the following equation:

$$ORL = -10\{\log_{10}(BSL) + \log_{10}(10^{\frac{L_B - L_A}{5}} - 1)\}$$

$$BSL = \frac{BSC \times \alpha_R \times c \times PW}{2 \times IOR}$$

ORL: return loss (dB)

α_R: Rayleigh scattering loss

c: Speed of light 3×108 (m/s)

BSC: backscatter coefficient

IOR: index of refraction

PW: Pulse Width L₁: Peak level

L₂: Preceding Rayleigh scattering level

Non-Reflective

These are events where there is loss that is not due to Fresnel reflection, such as at fusion splices or where the fiber is bent.

The point where the measured loss exceeds the Event Loss set in the Analysis Setup screen is evaluated as a non-reflective event.

At non-reflective events, ORL is displayed as N/A.

Grouped

Multiple points where the measured losses are larger than the Event Loss set in the Analysis Setup screen and where separate losses cannot be measured individually because the interval between events is too short are evaluated as grouped events.

The measured loss is displayed as the total of the losses of the multiple points.

Sometimes, reducing the pulse width makes it possible to separate the events.

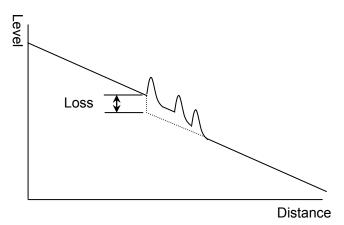


Figure 4.10.2-2 Group Event Loss

Far End

This event is either the far end of the fiber or a break in the fiber. The point at the noise level boundary is evaluated as the far end event.

Questionable End

In these events, either the fiber length or the loss is out of the screen range.

Events where no far end is displayed on the trace or where the noise level at the right end of the trace falls below the noise level are evaluated as Questionable End events.

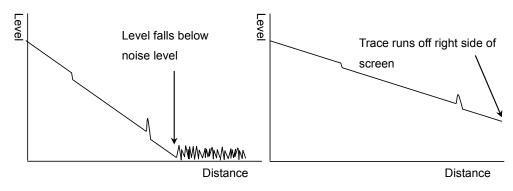


Figure 4.10.2-3 Questionable End Events

Splitter

The splitter event is where the fiber is divided using a splitter, etc. A point where the loss measurement result exceeds the Splitter setting in the Analysis Setup screen but that is not the noise level boundary is evaluated as a Splitter event.

4.11Using VFL (Visual Fault Locator)

The Visual Fault Locator (VFL) is a visible (red) light source. Since the light from the VFL is visible, it is useful for locating fault points in the dead zone by visually checking the diffusing light.

The VFL is an option – not all units are equipped with the VFL.

To use the Visual Fault Locator:

- 1. On the OTDR or Fiber Visualizer function screen, press ...
- 2. In the menu shown in Figure 4.11-1, select **VFL** with and and and then press set.

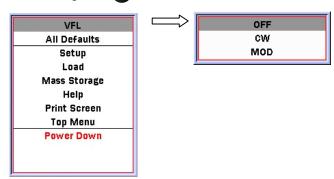


Figure 4.11-1 VFL Control Menu

3. In the VFL screen, select the desired item with and and and then press sat.

• OFF: Switches visible light source (VFL) off

CW: Switches VFL on MOD: Flashes VFL

4. When **CW** or **MOD** is selected, the flashing red VFL Laser On icon appears at the top of the screen when the VFL's visible laser diode is operating.

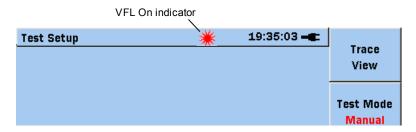


Figure 4.11-2 VFL Laser On indicator

4.12Measuring with Fiber Visualizer

With Fiber Visualizer, the connection conditions and fault points of the optical fiber can be easily checked by graphic icons.

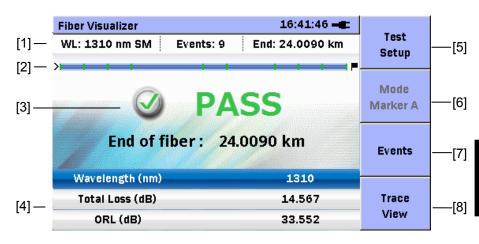


Figure 4.12-1 Fiber Visualizer Screen (Summary)

- [1] Wavelength, event number, far end display area

 The wavelength, event number, and far end position that were used
 for the measurement are displayed.
- [2] Fiber Schematic
 Shows event positions or event icon positions on display. The events
 that exceed the PASS/FAIL thresholds are displayed in red.
- [3] PASS/FAIL Result
 If all the PASS/FAIL thresholds are cleared, "PASS" is displayed.
 Even if only one item fails to clear the threshold, "FAIL" is displayed.
- [4] Total Results

 The values of the total loss and total optical return loss are displayed per wavelength.
- [5] (Test Setup)
 Displays the Test Setup screen.
- [6] (Mode)
 Switches the Event screen mode among Marker A, Marker B and Event Edit.
- [7] (Event)
 Displays the Event screen.
- [8] 64 (Trace View)
 Displays the Trace View screen...


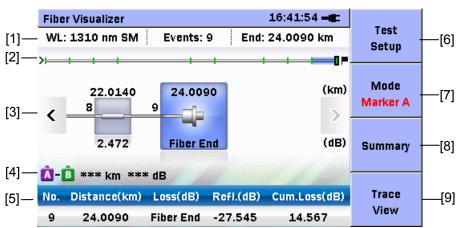


Figure 4.12-2 Fiber Visualizer Screen (Event)

- [1] Wavelength, event number, far end display area
 The wavelength, event number, and far end position that are used
 for the measurement are displayed.
- [2] Fiber schematic
 Shows event positions or event icon positions on display. The events
 that exceed the PASS/FAIL thresholds are displayed in red.
- [3] Event icon display area
 Analyzing the waveform automatically, fiber connection points,
 fusion points, and splitters are displayed in icons. The events that
 exceed the PASS/FAIL thresholds are displayed in red.
 Event icon details:

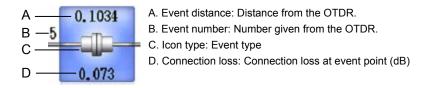

- [4] Distance between events and loss
 Displays the distance and loss between A-B events.
- [5] Total Results

 The values of the total loss and total optical return loss are displayed per wavelength.
- [6] (Test Setup)
 Displays the Test Setup screen.
- [7] (Mode)
 Switches the mode among Marker A, Marker B and Event Edit.
- [8] (Summary)
 Displays the Summary screen.

[9] (Trace View)

Displays the Trace View screen.

Perform the following steps to operate Fiber Visualizer.

- 1. Press to display the menu.
- 2. Use and to select **Top Menu**, and press to display the top menu screen.
- 3. Use and to select **Fiber Visualizer**. The Fiber Visualizer screen is displayed.

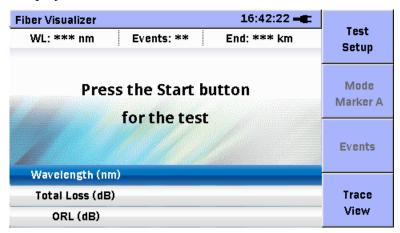


Figure 4.12-3 Fiber Visualizer Screen

4. Press start the measurement.

If the setting is still in factory default, the measurement is executed entirely by automatic setting.

To set the measurement conditions manually, refer to Section 4.2 "Setting Parameters and Preferences".

5. If the connection check is enabled, the connection check screen is displayed.

For details, refer to Section 4.3 "Starting Measurement".

6. When the measurement starts, the progress bar shows the current status.

Press (Start) to stop the measurement.

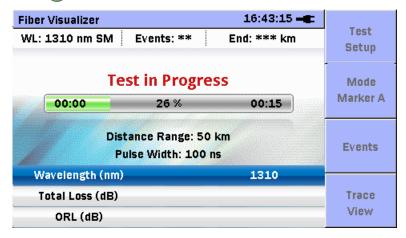


Figure 4.12-4 Measurement Screen


When the **Full Auto** check box is selected (On), events are detected more accurately by measuring with pulse width switched automatically. At the bottom of the screen, the event detection progress is indicated by icons.



Figure 4.12-5 Measurement Screen (When the Full Auto Check Box Is Selected)

Note:

Waveform analysis cannot be retried by loading the waveform file that is measured with the **Full Auto** check box selected.

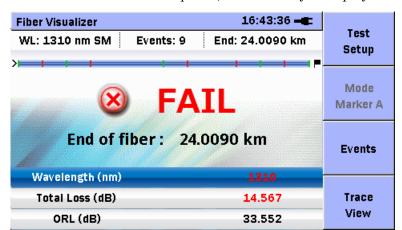

7. When the measurement completes, the summary is displayed.

Figure 4.12-6 Fiber Visualizer Screen (Summary)

8. If the result is "PASS": Go to Step 14 and output the measurement results on the report.

If the result is "FAIL": Press (Event).

9. The Event screen is displayed.

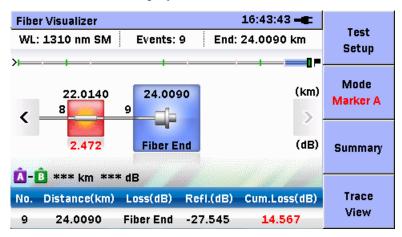


Figure 4.12-7 Fiber Visualizer Screen (Event)

There are 3 event icon types as below. The icon color changes according to the pass-fail threshold.

Blue icon: The icon is selected (positioned at the center of the screen) and its value is lower than the threshold.

Grey icon: The icon is not selected and its value is lower than the threshold.

Red icon: The value of the icon is higher than the threshold. Selected or not, it is always in red.

Table 4.12-1 Event Type List

| Icon | Туре | Description |
|----------------|------------------|--|
| | Reflective | Reflection from a splice point, such as a Fresnel reflection caused by a mechanical splice or connector. |
| | Non-Reflective | Non-reflective events include such low loss events as fusion splices and Macro Bends. If the loss is a negative value, the "rising to the right" icon is displayed. |
| | Grouped | Events spaced too close to each other for Analysis to distinguish them as separate events are reported as Grouped events. |
| | Far End | Any event with a loss equal to or greater than the Fiber End threshold is reported as the Far End event. |
| — ——— ? | Questionable End | A Questionable End event is reported, instead of a Far End event, when an Out of Range or Out of Distance condition is encountered. Out of dynamic range If there is noise in the trace before the detected far end/break, the dynamic range is setting is incorrect. Out of Range is displayed at Loss in the event table. Out of distance range If the end of trace is reached before the detected far end/break, the distance range is incorrect. Out of Dist. is displayed at Loss in the event table. |
| | Splitter | Loss due to presence of optical fiber cable splitter |
| | Macro Bend | Reports as an event "Macro Bend" when the detected event exceeds the specified threshold for the Macro Bend. |

10. Use and be to select the red event icon so that the event details are displayed at the bottom of the screen. The events that exceed the PASS/FAIL thresholds are displayed in red.

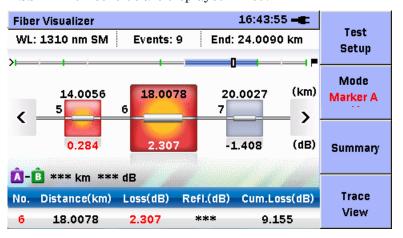


Figure 4.12-8 Fiber Visualizer Screen (Event)

- 11. To measure the loss and distance between the events, use and to select the event for setting the marker and press . Marker A and Marker B are switched by pressing (Mode).
- 12. Change the event type according to the following procedure:
 - (1) Press (2) (Mode) to switch to Event Edit.
 - (2) Use and to select an event you want to edit.
 - (3) Press of to view the list of events that can be edited.
 - (4) Use and to select an event type.
 - (5) Press set to apply the change.
- 13. Press (Trace View) to display the selected event waveform.

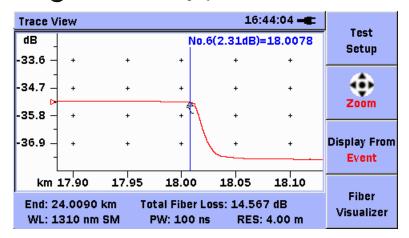


Figure 4.12-9 Fiber Visualizer Screen

- 14. To operate the Trace View screen, refer to Section 4.4 "Viewing Trace".
- 15. When all the events are PASS, output the measurement data in the report.
- 16. Press to display the menu.
- 17. Use and to select **Create PDF**, and press set.

 If there are no measurement results, **Create PDF** is not found in the menu.

18. The Create Report screen is displayed. When it is used for the first time, the **Contents** tab is displayed.

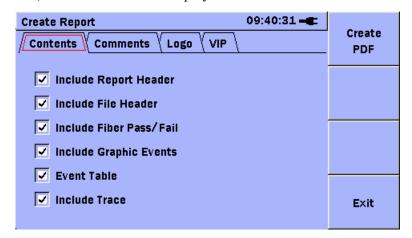


Figure 4.12-10 Create Report Screen (Contents Tab)

- 19. Use and to select the Contents tab.
- 20. Use and to select the items to output in the report and press set.

The checked items will be output.

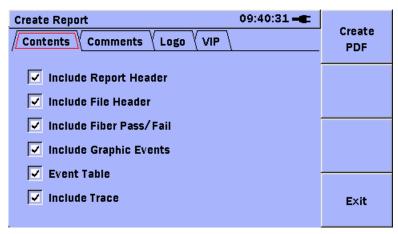


Figure 4.12-11 Create Report Screen (Contents Tab)

21. When finish the setting, use and to select the **Comments** tab.

If **Include Report Header** is checked, the contents setup on the **Comments** tab will be output.

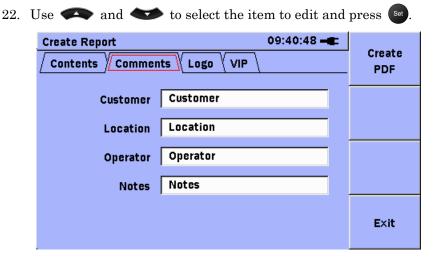


Figure 4.12-12 Create Report Screen (Comments Tab)

- 23. The entry screen for the character strings appears. For inputting characters, refer to Section 3.6 "Using Softkey Board".
- 24. When finish the setting, use and to select the **Log** tab.



Figure 4.12-13 Create Report Screen (Logo Tab)

- 25. To output the logo on the report, use and to select Include Logo, and press to select.
- 26. Use and to select Path and press so.

16:44:24 Select Logo File Load Device: Internal /Data/ Folder: Files Date 2013-08-30@12-19-07.png 2013-08-30 2013-08-30 2013-08-30@16-32-52.png 2013-08-30@16-41-23.png 2013-08-30 2013-08-30 2013-08-30@16-46-04.png 2013-08-30@16-53-40.png 2013-08-30 2013-08-31@11-22-39.png 2013-08-31 Exit

27. The Select Logo File screen will be displayed.

Figure 4.12-14 Select Log File Screen

- 28. Use and to select the logo file to output and press (Load).
- 29. The path of the selected logo is displayed.
- 30. To include an image(s) captured by the VIP in a report, use and to select the **VIP** tab.

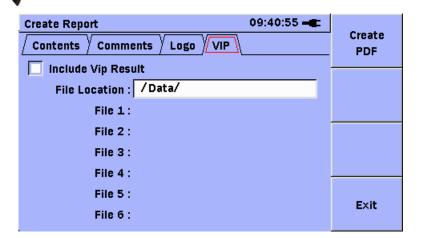


Figure 4.12-15 Create Report Screen (VIP Tab)

- 31. To output an image(s) captured by the VIP to a report, use and to move the focus to the **Include VIP Result** check box, and then press set to select it.
- 32. Use and to move the focus to the **File Location** box, and then press st.
- 33. The Select VIP Image screen is displayed.

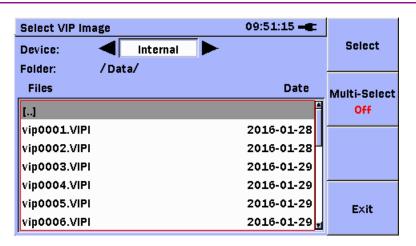


Figure 4.12-16 Select VIP Image Screen

34. Use and to move the focus to the VIPI file you want to output, and then press (Select) to select it.

Up to 6 VIPI files can be selected.

Note:

To select multiple files, press (Multi-Select) to set to On, and then select each file you want to output.

35. The selected file name(s) is/are displayed in the Create Report screen.

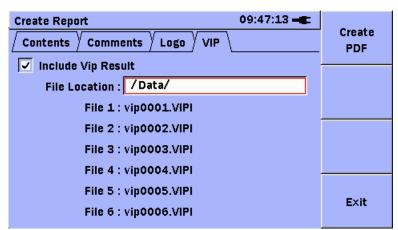


Figure 4.12-17 Select VIP Image Screen

- 36. When all the setting completes, press (Create PDF).
- 37. The Mass Storage screen is displayed.


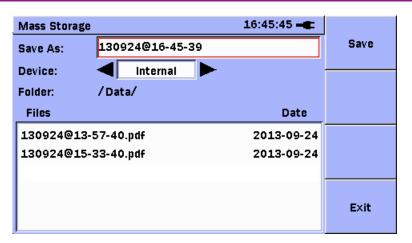



Figure 4.12-18 Mass Storage Screen


38. Set the file name and destination file and press (Save).

39. The PDF file with the set name is created.



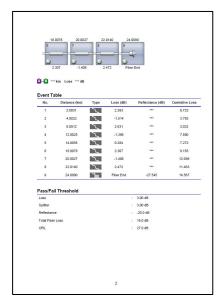

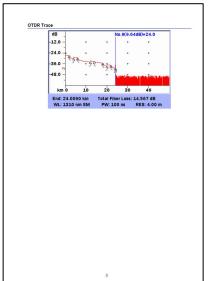

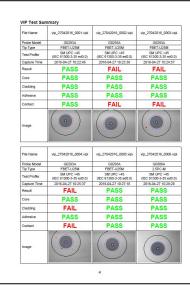

4.13Creating a Summary

The summary can be output in text format from the saved trace files (.sor).

Note:

The value of the Non-Reflective event which has the largest loss is output to Max Splice.

"---" is output when no Non-Reflective event exists.

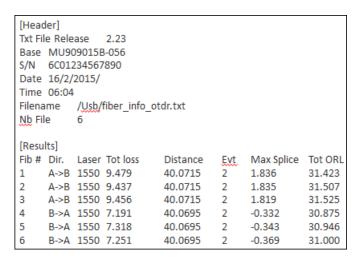


Figure 4.13-1 Summary

Creating a summary:

- 1. Press on Top Menu screen to display the General Functions pop-up menu.
- 2. Select Create Summary with and and and then press to display the Select Trace Files screen.
- 3. Select a desired trace file to create summary with and .

 To select multiple files, press (Multi-Select) to set Multi-Select to On. Then select trace files with and . Press to determine the selection.
- 4. To select all trace files in the folder, press (Multi-Select) to set Multi-Select to On. Then press (Select), select Select All with and , and press (Select UnSelect All to cancel the selection of all the files.
- Press (Create Summary), the Save Summary screen appears.
 If there is no trace data, (Create Summary) is dimmed.

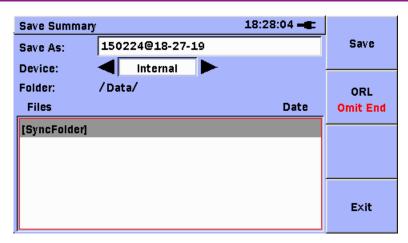


Figure 4.13-2 Save PDF Report Screen

- 6. To exclude the Far End from calculating the Total ORL (Tot ORL column) output to the summary, press (ORL) to set to Omit End.
 To include the Far End in the calculation, set to Include End.
- 7. Select a desired file with and and and press to enter the file name. The default file name is "DATE TIME".

 Refer to section 3.6 "Using Softkey Board" for details of character input.
- 8. Select a destination folder.
- 9. Press (Save) to save the summary in text file.
 Press (Exit) to exit without saving.

Chapter 5 Locating Drop Cable Faults

This chapter describes how to measure loss and locate faults in drop cables by using the DCFL (drop cable fault locator).

Refer to Chapter 2 for the fiber connection method and precautions on handling.

| 5.1 | Model | s That Support the DCFL Function | 5-2 |
|-----|--------|----------------------------------|------|
| 5.2 | Measu | rement Procedure | 5-3 |
| 5.3 | Measu | uring a Drop Cable | 5-4 |
| | 5.3.1 | 0Starting the DCFL function | 5-4 |
| | 5.3.2 | Checking the output power | 5-4 |
| | 5.3.3 | Performing OTDR measurement | 5-8 |
| 5.4 | Viewin | ng Trace | 5-11 |
| 5.5 | Saving | g Trace Data | 5-11 |
| 5.6 | Loadir | ng Trace Data | 5-11 |

5.1 Models That Support the DCFL Function

Only the following models support the DCFL function.

Table 5.1-1 Models That Support the DCFL Function

| Model | Remarks |
|---------------------|--|
| MU909014C6-057/-067 | Three-wavelength, Light Sourece, PON power meter, Optical Loss Test model |
| MU909014C6-058/-068 | Three-wavelength, Light Sourece, PON power meter, Optical Loss Test model |
| MU909015C6-057/-067 | Three-wavelength, Light Sourece, PON power meter, Optical Loss Test model |
| MU909015C6-058/-068 | Three-wavelength, Light Sourece, PON power meter, Optical Loss Test model |
| MU909015A6-053/-063 | One-wavelength, Light Sourece, PON power meter, Optical Loss Test model |
| MU909015A6-054/-064 | One-wavelength, Light Sourece, PON power meter, Optical Loss Test model |

Notes:

- The 1310/1490/1550 nm model with option -059/-069 cannot use the DCFL function.
- Models other than the above models do not display **DCFL** in the top menu screen.

5.2 Measurement Procedure

The following figure shows the flow of the procedure for measuring loss and locating faults in a drop cable by using the DCFL function. On the top menu, start the DCFL function, and perform measurement according to the following procedure.

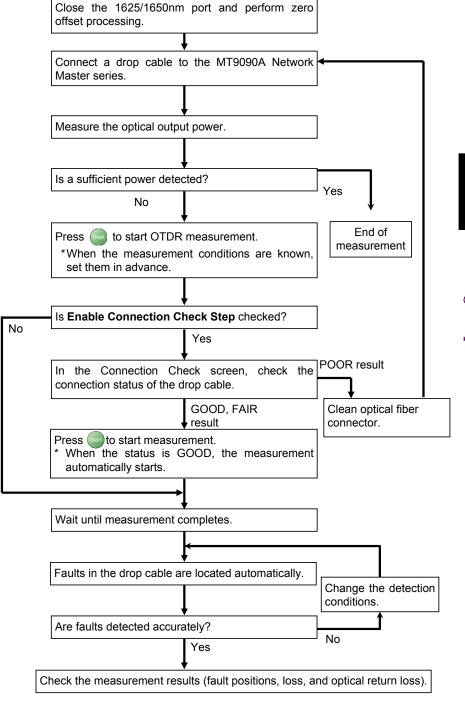


Figure 5.2-1 Drop Cable Measurement Procedure

5.3 Measuring a Drop Cable

The DCFL function easily locates faults in a drop cable that is used when leading an optical fiber from a telephone pole into the subscriber's home. This section describes how to locate faults occurring in a drop cable.

5.3.1 OStarting the DCFL function

Select DCFL in the top menu screen to start.

5.3.2 Checking the output power

When the DCFL function starts, the Power Meter screen appears. Check that a sufficient optical power is output from the drop cable.

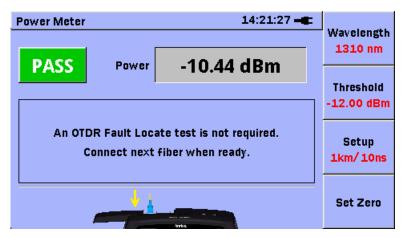


Figure 5.3.2-1 Power Meter Screen (DCFL)

You can set the following items in the Power Meter screen (DCFL).

| Item | Function | Setting Range | Default |
|------------|---|--|-----------------|
| Wavelength | Sets the wavelength band of optical signal to be measured (nm). | 1310, 1490, 1550, 1625, 1650 | 1310 |
| Threshold | Sets the threshold for a pass/fail evaluation of the input power (dBm). | -50.00 to 26.00 | Off (-26.00) |
| Setup | Sets the OTDR measurement conditions. | Refer to 4.2 "Setting Parameters and Preferences". | Refer to 4.2. |
| Set Zero | Performs zero offset processing. | None | None |

Table 5.3.2-1 Setting Items of Power Meter Screen (DCFL)

Power meter measured value

The measured optical power value is displayed by the absolute value (dBm) or difference value (dB). When the measured value is higher than the Max. measurement level, **Over Range** is displayed. On the other hand, when the measured value is lower than the Min. measurement level, **Under Range** is displayed.

Pass/Fail evaluation

The optical power measured value is compared with the threshold (dBm) for evaluation.

PASS: The optical power is equal to the threshold or more.

FAIL: The optical power is less than the threshold.

Zero level calibration

Before measurement start, calibrate the internal zero level of the unit.

- 1. Press of to display the menu.
- 2. Select **Top Menu** with and , and then press to display the top menu screen.
- 3. Select **DCFL** with and 3.
- 4. Press Set
- 5. Remove the optical fiber from the unit.
- 6. Close the slide cover.
- 7. Press [4] (Set Zero). The set zero confirmation screen is displayed.
- 8. Select **Start** with and , and then press set.

Zeroing... is displayed during set zero execution.

9. The set zero is finished when the following appear.

dBm: [Under Range]
dB: [----]

Only is available during zero level calibration. If the zero level calibration fails, the message below will be displayed.



When the set zero is re-executed, confirm the slide cover is firmly closed, and then select **Retry**. Press to start the set zero.

Select **OK**, and press to return to the PON Power Meter screen.

If the set zero fails repeatedly, contact Anritsu or our sales dealer.

1 0,

Power meter measurement condition setup

- 1. Start the DCFL function.
- 2. Press (Wavelength) to select the wavelength.

Threshold setup

When executing a pass/fail evaluation of the measured optical power value, set the threshold.

- 1. Start the DCFL function.
- 2. Press (Threshold value).



- 3. Select **Enable Threshold** with **and** and **.**
- 4. Select the check box with set.
- 5. Select threshold field with and .
- 6. Set the threshold level with and .
- 7. Press set to finish the threshold setup.
- 8. **PASS** or **FAIL** is displayed on the power meter screen.

Press to display the top menu to terminate the power meter.

When a sufficient output power is not detected, press (San) to start OTDR measurement.

5.3.3 Performing OTDR measurement

When a sufficient output power is not detected, press in the Power Meter screen to start OTDR measurement. OTDR measurement can check a drop cable for faults and cable loss that cannot be detected by the power meter.

Press in the Power Meter screen to display the Trace Analysis screen.

Note:

When **Enable Connection Check Step** is checked in the Setup-Preferences Screen 1, the Connection Check Step screen appears. For more information about the Connection Check Step screen, refer to 4.3.1, "Checking Connection".

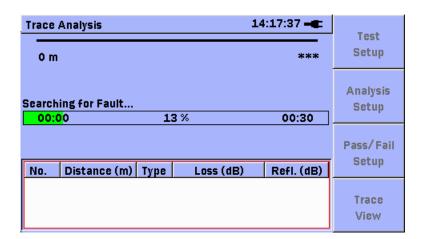


Figure 5.3.3-1 Trace Analysis Screen (DCFL)

You can set the following items in the Trace Analysis screen (DCFL).


Table 5.3.3-1 Setting Items of Trace Analysis Screen (DCFL)

| Item | Function | Setting Range | Default |
|-------------------|--|--|-----------------|
| Test Setup | Sets the OTDR measurement conditions. | Refer to 4.2 "Setting Parameters and Preferences" | Refer to 4.2. |
| Analysis Setup | Sets the threshold (dB) for fault detection. | Refer to 4.5.2 "Setting event detection conditions (Analysis Setup)" | Refer to 4.5.2. |
| Pass / Fail Setup | Sets the threshold (dB) for pass/fail evaluation of calculation results. | Refer to 4.5.3 "Setting OK/NG thresholds (Thresholds Setup)" | Refer to 4.5.3. |
| Trace View | Displays the measured trace. | None | None |

Setting the measurement conditions

- 1. Start the DCFL function.
- 2. Display the Test Setup screen by doing any of the following:
 - Pressing [3] (Test Setup) in the Power Meter screen
 - Pressing (Test Setup) in the Trace Analysis screen
 - Pressing (More) in the Trace View screen and select Test Setup.
- 3. Set the measurement conditions.

Refer to 4.2, "Setting Parameters and Preferences" for more details.

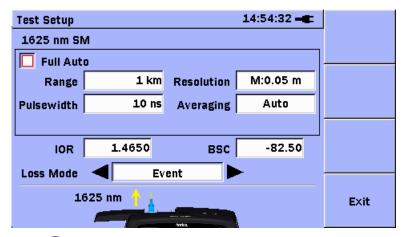

4. Press (Exit).

Starting OTDR measurement

- 1. Start the DCFL function.
- 2. Press in the Power Meter screen or Connection Check screen to display the Trace Analysis screen.
- 3. When the measurement completes, analysis results are displayed. Refer to 4.5, "Analyzing Trace" for more details.



Setting the threshold values for analysis

- When the measurement completes, display the Trace Analysis screen by doing any of the following:
 - Pressing (Analysis Setup) in the Trace Analysis screen.
 - Pressing and selecting Analysis Setup
 - Set the threshold values for detecting faults. Refer to 4.5.2, "Setting event detection conditions (Analysis Setup)" for more details.
- When the change is complete, press (Apply). Trace analysis is 3. executed and the results are updated.

Setting the threshold values for pass/fail evaluation

- When the measurement completes, display the Pass/Fail Setup screen by doing any of the following:
 - Pressing [5] (Pass/Fail Setup) in the Trace Analysis screen
 - Pressing and selecting Pass/Fail Setup
- 2.Set the threshold values for pass/fail evaluation items. Refer to 4.5.3, "Setting OK/NG thresholds (Thresholds Setup)" for more details.
- When the change is complete, press (Apply). Trace analysis is executed and the results are updated.

Starting real-time measurement

- When the measurement completes, press (A) (Trace View) in the Trace Analysis screen to display the Trace View screen.
- Press (Real Time) to start real-time measurement. 2.
- Press (Mode) during real-time measurement to switch the measurement mode between Fast and High S/N. When the measurement mode is set to High S/N, the noise gets suppressed but the measurement time becomes longer.
- Press (Start) to stop the measurement.

To terminate OTDR measurement, press (1971) to display the top menu.

To return to the Power Meter screen, press (Start).



5.4 Viewing Trace

If faults in a drop cable cannot be located accurately, the DCFL function checks the measured trace.

Refer to 4.4, "Viewing Trace" for more details.

5.5 Saving Trace Data

The DCFL function can save measurement results to a file. The power meter data at the time (sar) is pressed in the Power Meter screen is saved.

Note:

The MT9090A Network Master series cannot display saved power meter data.

For how to save trace data, refer to 4.6, "Saving trace manually".

5.6 Loading Trace Data

The DCFL function can load saved trace files (.sor).

Note:

The MT9090A Network Master series cannot display saved power meter data.

For how to load trace data, refer to 4.7, "Loading Trace Data (Mass Storage-Load)".

Chapter 6 Measuring Optical Power of PON System

This chapter describes how to use the PON power meter function for the Network Master.

6.1 Using PON Power Meter6-2

6.1 Using PON Power Meter

The PON power meter separates the wavelength of the downstream signal of the PON, and measures two powers simultaneously.

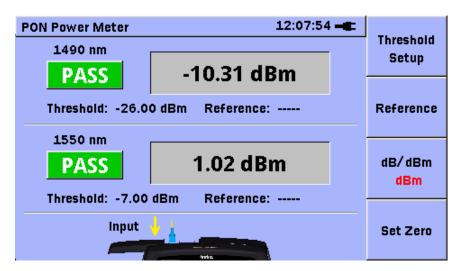


Figure 6.1-1 PON Power Meter Screen

Table 6.1-1 PON Power Meter Screen Setting Items

| Item | Function | Setting Range | Default |
|---|--|-----------------------------|---------|
| /Dl l l. l. ! | Threshold value for a pass/fail evaluation of the measured value (dBm) | 1490 nm: –50.00 to 13.00 | -26.00 |
| Threshold: | | 1550 nm: –50.00 to 26.00 | -7.00 |
| Enable Threshold | Evaluation result display setting | Off, On | Off |
| Reference level of difference value display (dBm) | | -99.9 to 99.9 | |
| dB/dBm | Absolute value (dBm)/relative value (dB) display switching | dB, dBm | dBm |

The measured optical power value of each wavelength is displayed as the absolute value (dBm) or difference value (dB). When the measured value is higher than the upper limit of the measurement level range, **Over Range** is displayed, and when it is lower than the lower limit, **Under Range** is displayed.

When the measured optical power value is higher than the set threshold, **PASS** is displayed, and when it is lower, **FAIL** is displayed.

- 1. Press or to display the menu.
- 2. Select **Top Menu** with and , and then press to display the top menu screen.
- 3. Select **PON Power Meter** with and . The PON Power Meter screen is displayed.

To terminate the PON power meter, press to display the top menu screen.

Zero level calibration

Before measurement start, calibrate the internal zero level of the unit.


- 1. Remove the optical fiber from the unit.
- 2. Close the slide cover.
- 3. Press (Set Zero). The set zero confirmation screen is displayed.
- 4. Select **Start** with 1 and 1, and then press sot.

Zeroing... is displayed during set zero execution.

5. The set zero is finished when the following appear.

dBm: [Under Range] dB: [----]

Only is available during zero level calibration. If the zero level calibration fails, the message below will be displayed.

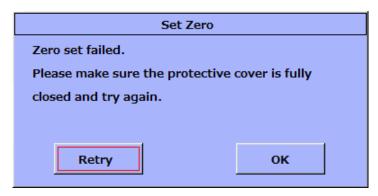

When the set zero is re-executed, confirm the slide cover is firmly closed, and then select **Retry**. Press set to start the set zero.


Select **OK**, and press set to return to the PON Power Meter screen.

If the set zero fails repeatedly, contact Anritsu or our sales dealer.

Threshold setup

When executing a pass/fail evaluation of the measured optical power value, set the threshold.

1. Press (Threshold value).

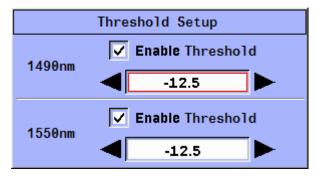

- 2. Select **Enable Threshold** for 1490 nm with **and** and
- 3. Select the check box with set.
- 4. Select **1490 nm** threshold field with **and** and **.**
- 5. Set the threshold level with $\mathbf{1}$ and $\mathbf{1}$.
- 6. Repeat Step 2 to 5 again for 1550 nm.
- 7. Press (Setup) to finish the threshold setup.
 To cancel the setup, press (Cancel).
 Press (Defaults) to restore the defaults in Table 6.1-1.
- 8. **PASS** or **FAIL** is displayed on the PON power meter screen.

Level difference

When displaying difference, set the reference value as 0 dB.

1. Press (Reference Value) to set the currently displayed optical power as the Reference value.

The set reference value is displayed on the screen.

However, the reference value is displayed in the following cases:

- When the measured optical power value is Over Range or Under Range
- When (Reference Value) has been pressed and the measured optical power value is Over Range or Under Range:
- 2. Press (dB/dBm) to select the dB.

The difference from the Reference value is displayed in the PON power meter screen. However, it is not displayed when the measured optical power value is **Over Range** or **Under Range**.

Chapter 7 Checking Fiber Connection End

This chapter describes how to confirm the destination of the fiber connection and how to use the optical source function and power meter.

| 7.1 | Confirming Fiber Connection End (Optical Fiber | |
|-----|--|-----|
| | Identification) | 7-2 |
| 7.2 | Using Light Source | 7-3 |
| 7.3 | Measuring Optical Power | 7-5 |

7.1 Confirming Fiber Connection End (Optical Fiber Identification)

Optical fiber cables are composed of many optical fibers.

Identifying which connector is connected to each end of a cable is called "Optical Fiber Identification".

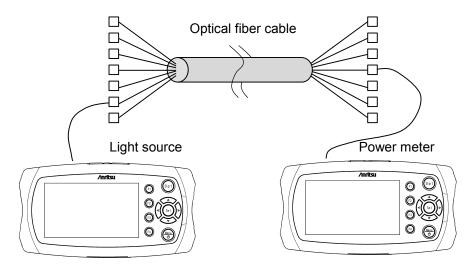


Figure 7.1-1 Connection Diagram for Optical Fiber Identification

The light source is connected to an optical fiber cable connector and the power meter is connected to a connector at the other end of the cable to detect the optical output from the light source.

Since there is also light used by the optical communications in the fiber, it is not possible to discriminate light received from the light source using optical fiber identification just by measuring the optical power with a power meter.

To identify the light using optical fiber identification, the optical signal from the light source must be modulated at any of 270 Hz, 1 kHz or 2 kHz. Optical fiber identification detects the light by measuring the power of the modulated light using the power meter.


7.2 Using Light Source

The light source outputs the optical signals of wavelength used in the OTDR continuously or modulated.


It can be used for identification and loss measurement for the optical fiber with the use of the optical power meter.

To use the Light Source:


- 1. Press to display the General Functions pop-up menu.
- 2. Select **Top Menu** with and and and then press to display the top menu screen.

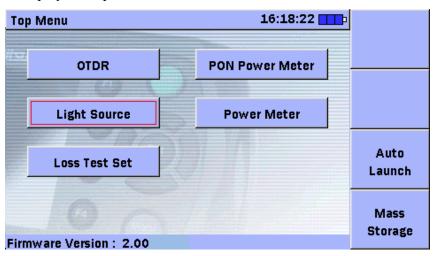

3. Select the Light Source with , , and , and then press to display the Light Source screen.

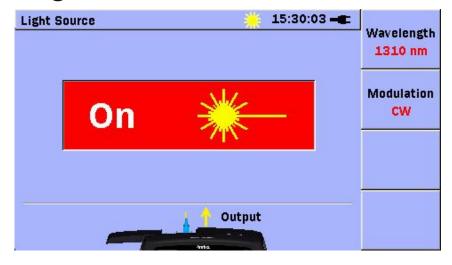

- 4. Press (Wavelength) to select the wavelength. An arrow is displayed on the image of the connector that outputs the optical signal.
- 5. Press (Modulation) to select the modulation frequency. When CW is selected, the signal to be output is not modulated.
- 6. Press to change the display to **On** and output the optical signal. Also the measurement optical signal output icon is displayed.

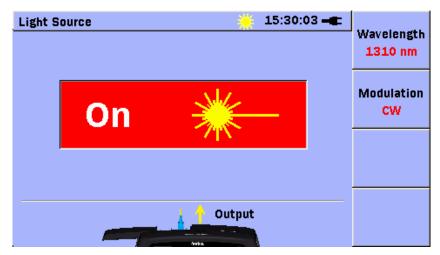

7. Press again to stop the optical signal output. The display changes to **Off**.

Table 7.2-1 Setting Items on Light Source Screen

| Item Name | Function | Setting Range | Default |
|------------|---|-----------------------|--------------------------|
| Wavelength | Wavelength band of optical signal to be output (nm) | Refer to Table 7.2-2. | Refer to Table 7.2-2. |
| Modulation | Modulation frequency | CW, 270, 1k, 2k | CW |

Note:

When turning off the power once, the modulation is set to CW.

Table 7.2-2 Wavelength Setting Item

| Model Name/Option | Setting Range | Default |
|----------------------|------------------|---------|
| MU909014C/C6-057/067 | 1310, 1550, 1625 | 1310 |
| MU909014C/C6-058/068 | 1310, 1550, 1650 | 1310 |
| MU909015A6-053/063 | 1625 | 1625 |
| MU909015A6-054/064 | 1650 | 1650 |
| MU909015C/C6-057/067 | 1310, 1550, 1625 | 1310 |
| MU909015C/C6-058/068 | 1310, 1550, 1650 | 1310 |
| MU909015C/C6-059/069 | 1310, 1490, 1550 | 1310 |

7.3 Measuring Optical Power

The power meter can measure the optical power of the wavelength from 1310 nm to 1650 nm. Also, it can measure the modulated optical power.

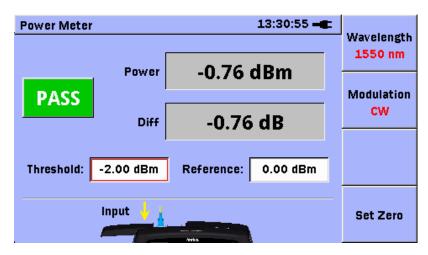


Figure 7.3-1 Power Meter Screen

| Item Name | Function | Setting Range | Default |
|-----------------|---|---------------------------------------|---------|
| Wavelength*1 | Wavelength band of optical signal to be measured (nm) | 1310, 1490, 1550, 1579, 1625, 1650 | 1310 |
| Modulation*2 | Optical modulation frequency | CW, 270 Hz, 1 kHz, 2 kHz | CW |
| Threshold value | Threshold for a pass/fail evaluation of the power or loss (dBm) | -50.00 to 26.00 | 0.00*3 |
| Reference value | Reference value of loss (dBm) | -50.00 to 26.00 | 0.00 |

^{*1:} The MU909014C and MU909015C cannot select 1625 and 1650. A, A1, B, and B1 type models can be selected 1579.

Power meter measured value

The measured optical power value is displayed by the absolute value (dBm) or difference value (dB). When the measured value is higher than the Max. measurement level, **Over Range** is displayed. On the other hand, when the measured value is lower than the Min. measurement level, **Under Range** is displayed.

^{*2:} The MU909014C and MU909015C cannot change the modulation.

^{*3:} The default value is -26.00 in DCFL application.

Level difference

The level difference for the reference value is displayed.

When the measured value is higher than the reference level, a positive value is displayed.

When the measured value is lower than the reference level, a negative value is displayed.

Pass/Fail evaluation

The optical power measured value is compared with the threshold (dBm) for evaluation.

PASS: The optical power is equal to the threshold or more.

FAIL: The optical power is less than the threshold.

Power meter measurement condition setup

- 1. Press to display the menu.
- 2. Select Top Menu with and and and then press so to display the **top menu** screen.
- 3. Select **Power Meter** with and .
- 4. Press Set
- 5. Press (Wavelength) to select the wavelength.
- 6. When using the MU909014C6/MU909015A6/C6, press (Modulation) to set the modulation frequency.

Press to display the top menu to terminate the power meter.

Zero level calibration

Before measurement start, calibrate the internal zero level of the unit.

- 1. Remove the optical fiber from the unit.
- 2. Close the slide cover.
- 3. Press [4] (Set Zero).


The Set Zero confirmation screen is displayed.

- 4. Select Start with and and and then press Set Zeroing... is displayed while executing the set zero.
- 5. The zero level calibration is finished when the following appears.

dBm: Under Range

dB: ----

Only is available while executing the Set Zero.

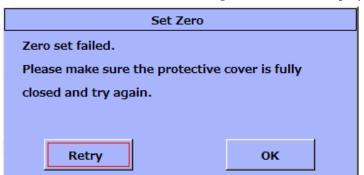

If the zero level calibration fails, the message below will be displayed.

When the set zero is re-executed, confirm the slide cover is firmly closed, and then select Retry.


Press set to execute the set zero.

Select **OK**, and press or to return to the PON Power Meter screen. If the set zero fails repeatedly, contact Anritsu or our sales dealer.

Threshold setup

When executing a pass/fail evaluation of the measured optical power value, set the threshold.

1. Select Threshold with and and and press set.

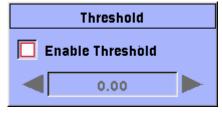


- 2. Select Enable Threshold with And and
- 3. Select the check box with
- 4. Select the threshold field with and said
- 5. Set the threshold level with and .
- 6. Press set to finish the threshold setup.
- 7. **PASS** or **FAIL** is displayed on the power meter screen.

Difference Setup

When displaying difference, set the reference value as 0 dB.

1. Select **Reference Value** with and and press set.

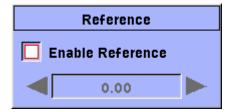

- 2. Select **Enable Reference Value** with **and** and **.**
- 3. Select the check box with set.
- 4. Select the reference field with and .
- Set the reference value with and .

Press (Paste) to set the currently displayed optical power as the Reference value.

- 64 is unavailable when Over Range or Under Range is displayed.
- 6. Press [1] (Setup) to finish the reference value setup.

 To cancel the setup, press [2] (Cancel).

 Press [3] (Defaults) to restore the defaults in Table 7.3-1.
- 7. The value that is obtained by subtracting the reference value from the measured value is displayed as the difference.

Chapter 8 Measuring Loss of Optical Parts

This chapter describes how to measure the loss of the optical parts using the optical loss measurement function.

| 8.1 | Measuring Optical Loss8-2 | 2 |
|-----|---|---|
| 8.2 | Measuring Procedures of Optical Loss8-7 | 7 |

8.1 Measuring Optical Loss

The optical loss test can measure the loss of the fiber and optical parts using the light source function and power meter function.

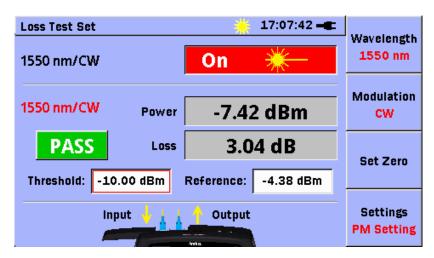


Figure 8.1-1 Loss Test Set Screen

Table 8.1-1 Setting Items of Loss Test Set Screen (Power Meter)

| Item Name | Function | Setting Range | Default |
|------------------------------|--|---------------------------------|---------|
| Wavelength | Wavelength band of optical signal to be measured (nm) | 1310, 1490, 1550, 1625, 1650 | 1310 |
| Modulation | Optical modulation frequency (Hz) | CW, 270, 1k, 2k | CW |
| Threshold value | Threshold for a pass/fail evaluation of the measured value (dBm) | -50.0 to 26.0 | -10.0 |
| Enable Threshold value | Evaluation result display setting | On, Off | On |
| Reference value | Reference level of optical loss measurement (dBm) | -50.0 to 26.0 | 0.00 |
| Enable Reference value | Evaluation result display setting | On, Off | On |

Table 8.1-2 Setting Items of Optical Loss Measurement Screen (Light Source)

| Item Name | Function | Setting Range | Default |
|-------------|---|------------------|---------|
| Wavelength* | Wavelength band of optical signal to be measured (nm) | 1310, 1490, 1550 | 1310 |
| Modulation | Optical modulation frequency (Hz) | CW, 270, 1k, 2k | CW |

^{*:} Depends on the model, refer to Table 1.1-1

Note:

When turning off the power once, the modulation is set to CW.

1. Press to display the menu.

measurement.


- 2. Select Top Menu with and and and then press so to display the top menu screen.
- Select Optical Loss Measurement with and b. The optical loss measurement screen is displayed.
 Press to display the top menu to terminate the optical loss

Setting Light Source

- 1. Press (Next) to display Setting Light Source.
- 2. Press (Wavelength) to select the wavelength of the light source.
- 3. Press (Modulation) to set the modulation frequency of the light source.
- 4. Press (start) to change the display to **On** and output the optical signal.
- 5. Press star again to stop the optical signal output. The display changes to **Off**.

To set power meter

1. Press [4] (Next) to display PM Setting.

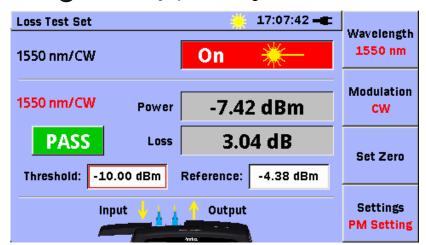

- 2. Press (Wavelength) to select the wavelength of the power meter.
- 3. Press (Modulation) to set the modulation frequency of the optical source.
- 4. Set the zero calibration, threshold value, and reference value of the power meter. For the setting method, refer to the following pages.

Zero level calibration

Before measurement start, calibrate the internal zero level of the unit.

- 1. Remove the optical fiber from the unit.
- 2. Close the slide cover.
- 3. Press [3] (Set Zero). The zero calibration confirmation screen is displayed.
- 4. Select Start with (1 and 1), and then press (set).

Zeroing... is displayed while executing the set zero.

5. The zero level calibration is finished when the following appears.

dBm: Under Range

Only ois available while executing the offset.

If the zero level calibration fails, the message below will be displayed.



When the set zero is re-executed, confirm the slide cover is firmly closed, and then select **Retry**. Pressing set executes the set zero.

Select **OK**, and press to return to the PON Power Meter screen. If the set zero fails repeatedly, contact Anritsu or our sales dealer.

Threshold setup

When executing a pass/fail evaluation of the measured optical power value, set the threshold.

1. Select Threshold with and and and press set.




- 2. Select **Enable Threshold** with **and** and **.**
- 3. Select the check box with set
- 4. Select to the threshold field with and and.
- 5. Set the threshold level with and
- 6. Press (Setup) to finish the threshold setup.
- 7. **PASS** or **FAIL** is displayed in the Power Meter screen.

Level difference setup

For the difference display, set the reference level of 0 dB

1. Select the reference value with and . Press Sol.

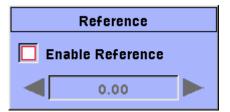

- 2. Select **Enable Reference Value** with **and** and **2**.
- 3. Select the check box with set
- 4. Select the reference field with and .
- 5. Set the reference value with and .

Press **[4]** (**Paste**) to set the currently displayed optical power as the Reference value.

- is unavailable when Over Range or Under Range is displayed.
- 6. Press **[1]** (**Setup**) to finish the reference setup.


To cancel the setup, press [52] (Cancel).

Press (Defaults) to restore the defaults in Table 8.1-1.


7. The value that is obtained by subtracting the reference value from the measured value is displayed as the difference.

8.2 Measuring Procedures of Optical Loss

- Connect a single-mode fiber to each of two optical connectors on the unit.
- 2. Use an optical adapter to connect two single-mode fibers.

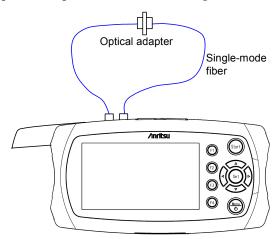

- 3. Press [4] (Setting) to display Setting Optical Source.
- 4. Press (Wavelength) to select the wavelength of the optical source.
- 5. Press (Modulation) to set the modulation frequency of the optical source.
- 6. Press start to output the light.
- 7. Press [4] (Setting) to display PM Setting.
- 8. Press (Wavelength) to select the wavelength of the power meter.
- 9. Press (Modulation) to set the modulation frequency of the power meter to the same frequency of the optical source. Check that neither Over Range nor Under Range is displayed at the power display.
- 10. Select Reference Value with \P and \P , and press \P .
- 11. Select **Enable Loss Measurement** with **and** and **.**
- 12. Select the check box with selected, *** is displayed at the loss display.
- 13. Select the loss input field with and .
- 14. Press **6**4 (**Paste**). However, **6**4 is unavailable when Over Range or Under Range is displayed. Use **1** and **2** to input the **Reference** Value.
- 15. Press [1] (Setting).
- 16. Remove the optical fiber connected at Step 2, and connect to the DUT.

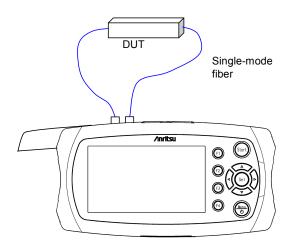

17. The loss of DUT is displayed.

Chapter 9 Inspecting Fiber Surface

The Video Inspection Probe (VIP) option is used to inspect fiber optic terminations.

This chapter describes how to use the VIP.

| 9.1 | Types of VIPs | 9-2 |
|-----|------------------------------|------|
| 9.2 | Connecting VIP | 9-3 |
| 9.3 | Using VIP | 9-5 |
| 9.4 | Analyzing VIP Images | 9-11 |
| 9.5 | Creating a Report | 9-13 |
| 9.6 | Working with VIP Image Files | 9-18 |

9.1 Types of VIPs

The following VIPs can be used together with the module.

| OPTION- 545 VIP | Magnification 200/400 |
|-----------------|-----------------------|
| G0293A | Magnification 400 |
| G0306A | Magnification 400 |
| G0306B | Magnification 400 |
| G0306C | Magnification 400 |



For details on the VIP, refer to the accompanying operation manual.

Note:

The 545VIP, G0293A, G0306A, and G0306B are discontinued models.

9.2 Connecting VIP

This section explains about the OPTION-545 VIP.

For other VIPs, refer to the corresponding operation manuals.

Attaching a Probe Tip

Use the following procedure to attach a probe tip to the VIP.

1. Remove the dust cap.

Refer to Figure 9.1-2 for the location of the dust cap. If a probe tip is already attached, loosen the front retaining nut until it slides freely on the Barrel assembly.

Note:

Do not touch the lens surface or separate the probe from the fiberscope main body. If the probe is removed by mistake, align the notch of the probe with the pin of the probe mounting screw of the fiberscope body and secure it by tightening the probe nut (at fiberscope side).

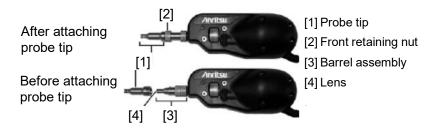


Figure 9.2-1 Probe Tips

2. Select the desired probe tip.

Make sure that the key (small set screw on the inside of the threaded end of the probe tip) aligns with the key channel on the barrel assembly and slide the probe tip into place. Refer to Figure 9.2-2 for details.

Note:

Do not adjust the set screw. The ø 1.25 mm and ø 2.5 mm Universal probe tips do not have keys.




Figure 9.2-2 Attaching a Probe Tip

3. Secure the probe tip in place with the front retaining nut.

Connecting the VIP to the USB Converter

For OPTION- 545 VIP, use the following procedure to connect the Video Inspection Probe to the USB converter.

- Align the VIP connector (curly cord side) to the receptacle on the USB converter. When properly aligned, the connector slides into the receptacle.
- 2. Use the retaining nut on the connector to secure it to the USB converter.

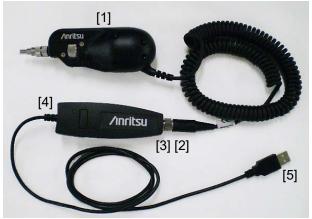

[1] VIP

- [2] Connector
- [3] Retaining nut
- [4] USB converter
- [5] USB connector

Figure 9.2-3 VIP Connected to USB Converter

Connecting the VIP to the Unit

Use the following procedure to connect the VIP to the Network Master.

- 1. Open the cover of the Type A USB port on the main frame. (Refer to Figure 2.2.2-1 for the location of the port.)
- 2. Insert the USB connector into the USB Type A port.

Note:

When the fiberscope is connected during measurement, the VIP screen is displayed.

9.3 Using VIP

Note:

When using the VIP function, do not turn off the VIP nor disconnect the USB connector.

Starting the VIP:

Operate the fiberscope using the following procedure. A captured image will look similar to the live image. If it is read from a file, a filename will be loaded and displayed on the screen title.

You can pan and zoom in and out the captured image using





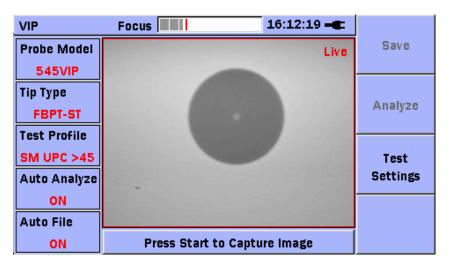


Figure 9.3-1 VIP Screen

- 1. Connect the USB connector of the VIP to the USB (Type A) port on the module.
- 2. Press 🐚 to display the General Functions pop-up menu.
- 3. Select Open VIP with and , and then press to display the VIP screen.
- 4. Connect the Probe to $\mu OTDR$, and then use the 200x/400x switch to set the desired magnification rate (as shown in Figure 8.1-2).
- 5. Use the Focus Control knob (as shown in Figure 8.1-2) to adjust the focus of the image, if the image is not in clear focus.
 When the image comes into clear focus, the grey focus indicator (at the top of the screen) overlaps the red best focus position bar.
- 6. If you want to change the Test Settings, press (Test Settings). It is needed to analyze correctly.
 - . Select the desired item with and and and and then press



- 8. When all the desired items are selected, press (sur) to capture image.
- 9. Press set to pan, and appears in the lower right corner of the screen.
- 10. Press , , and to move the image.
- 11. Press st to toggle the mode to Zoom, and papears in the lower right corner of screen.
- 12. Press to zoom in the image. The range is 50 to 200%.Press to zoom out the image.
- 13. If you want to view the captured image in full screen mode, press to display the General Functions pop-up menu.
- 14. Select View Full Screen with and and and, and then press to switch to full screen mode.
- 15. The captured image is displayed full screen.

You can pan and zoom in and out using , , and

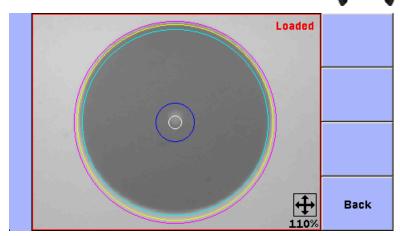


Figure 9.3-2 Full Screen

16. Press (Back) to exit full screen.

Setting the Probe Model:

- 1. Press (Test Settings) in the VIP screen, and the Test Settings menu appears.
- 2. Select **Probe Model** with and and and then press to display the Select Probe Model dialog box.

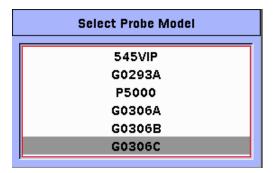


Figure 9.3-3 Select Probe Model screen

3. Select a probe with and and and then press to set the Probe Model.

Note:

Only the probes in the list can be used.

Setting the Tip Type:

- 1. Press (Test Settings) in the VIP screen, and the Test Settings menu appears.
- 2. Select Tip Type with and and, and then press to display the Select Tip Type dialog box.

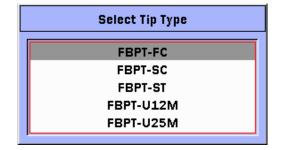


Figure 9.3-4 Select Tip Type (for 545VIP) screen

3. Select a tip with and and and then press to set the Tip Type.

Note:

Only the tips in the list can be used.

Setting the Test Profile (The kind of fiber to use):

- 1. Press (Test Settings) in the VIP screen, and the Test Settings menu appears.
- 2. Select Test Profile with and and, and then press set to display the Select Test Profile dialog box.

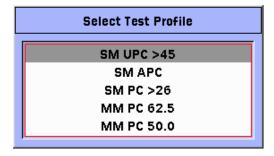


Figure 9.3-5 Select Test Profile screen

3. Select a profile with and and and, and then press st to set the Test Profile.

Setting the Auto Setup:

- 1. Press (Test Settings) in the VIP screen, and the Test Settings menu appears.
- 2. Select Auto Setup with and and and then press to display the Setup tab.

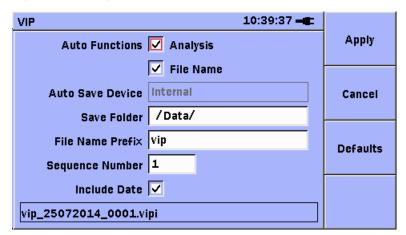


Figure 9.3-6 Setup Tab

3. Select Analysis with and and and then press so to select the check box. If you select the check box, Auto Analysis is performed after capturing an image.

- 4. Select File Name with and and and and then press to select the check box. If you select the checkbox, Auto File Name is performed after capturing an image.
 Go to step 14, if you do not select the File Name check box.
- 5. Use and to select Save Folder.
 - (1) Press st to display the Select Folder screen.
 - (2) Use , , and to select a folder to save the measurement results.
 - (3) Press [5] (Select) to set the selected folder and to close the folder selection screen.
 - (4) The selected folder path is displayed as **Auto Save Folder** on the setting screen.
- 6. Select File Name Prefix with and and, and then press to enter characters. The Softkey Board screen appears. (Refer to Section 3.6 "Using Softkey Board".)
- 7. Select the Sequence Number with and , and then press to enter numbers.
- 8. Use Softkey Board to establish a start number for the auto-increment section of the Auto-Filename. The setting range of the Sequence Number is from 0 to 9999, in increments of 1.
- 9. Select the Include Date with and and, and then press to select the check box. If you select the checkbox, the date when you save the file is included in a file name.

The file naming rules are as follows.

File Name Prefix_Date_Sequence Number.vipi

Example: vip_06082012_001.vipi

File extension vipi.

Directory Name Data

File Name Prefix vip

Date Aug 6, 2012

Sequence Number 1

10. When setting is completed, press (Apply) to apply the settings. Press (Back) to close the Setup tab and cancel the settings. If you want to restore the default settings, press (Defaults).

Exiting the VIP Mode

- 1. Press 💮 to display the General Functions pop-up menu.
- 2. Select Close VIP with and and and then press to close the VIP screen.

9.4 Analyzing VIP Images

Images captured by the VIP can be analyzed on the μOTDR.

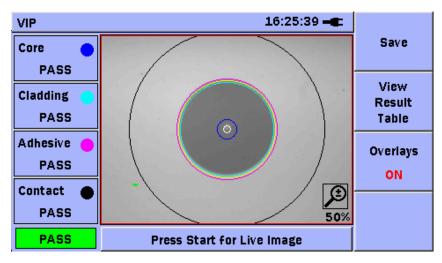


Figure 9.4-1 Analyzing a VIP Image

Analyzing a VIP image:

- 1. Capture the image or load a VIP image.
- 2. If you want to change the Test Settings, press (Test Settings) and change the settings.
- 3. Press (Analyze) to start analysis of the VIP image. The progress bar is displayed during analysis.
- 4. Circle of analysis range on the VIP image and PASS/FAIL indicator are displayed if analysis is normally completed.
- 5. Press (View Result Table) after analyzing, the analysis details table is displayed.

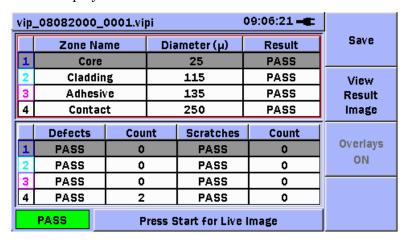


Figure 9.4-2 Analysis Details Table

If there are defects, whose size is not acceptable, found on the fiber, they are displayed in red which indicates they are Fail. The table shows the zone and area of each defect.



Figure 9.4-3 VIP Analysis Failed Pop-up

9.5 Creating a Report

Analysis results can be output as a PDF file to the µOTDR.

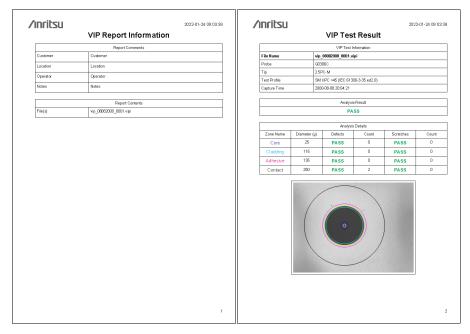


Figure 9.5-1 PDF Report

Notes:

- VIP image displayed at 100% scale in the VIP screen is output as a PDF file.
- Image saved as a VIPI file is output as a PDF file.

Creating a report:

- 1. Capture the image or load a VIP image.
- 2. Press to display the General Functions pop-up menu.
- 3. Select Create Report with and and and then press to display the VIP screen.
- 4. If you want to change the Report Settings, use , , and to select the desired tab, and then change the settings.

5. Press (Create PDF), the Save PDF Report screen appears.

If there is no VIP image, (Create PDF) is dimmed.

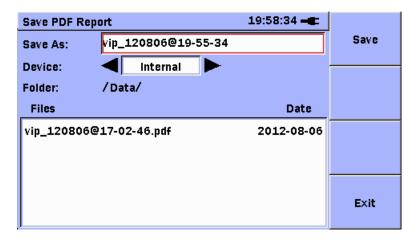


Figure 9.5-2 Save PDF Report Screen

Setting the VIP - General settings -:

- 1. Capture the image or load a VIP image.
- 2. Press to display the General Functions pop-up menu.
- 3. Select Create Report with and and and then press so to display the VIP screen.
- 4. Select the General tab with , , , and to change the General settings.

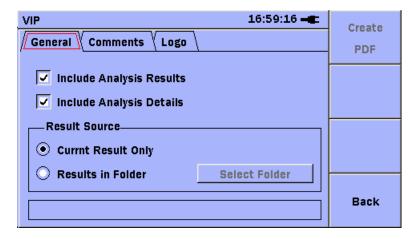


Figure 9.5-3 General Tab

5. Select Include Analysis Results with and and, and then press to select the check box. If you select the check box, Analysis results are included in a report.

- 6. Select Include Analysis Details with and and, and then press to select the check box. If you select the check box, the analysis details table is included in a report.
- 7. Select Result Source with and and, and then press set to select the radio button.

Current Result Only -

Includes only the results of the current analysis in a report.

Note:

If there is no captured or loaded image available, this button is disabled, and reports can only be made from previously saved test results.

Results in Folder -

Includes all the VIP results in the selected folder. When this button is selected, a default folder name will appear on the screen, and the Select Folder softkey will be enabled. Select the Select Folder with and and press and then the Select Folder with VIP Results screen that allows you to select a different file folder is displayed.

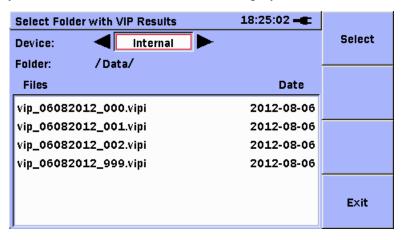


Figure 9.5-4 Analysis Details Table

Setting the VIP – Comments settings –:

Headers hold valuable information about the VIP Report files. You don't need to fill the header each time a new VIP image is analyzed.

Information entered in the VIP Create PDF screen is retained until the header requires editing.

- 1. Press to display the General Functions pop-up menu.
- 2. Select Create Report with and and and, and then press to display the VIP screen.
- 3. Select the Comments tab with , , and to edit the header.

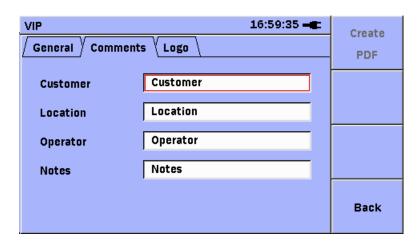


Figure 9.5-5 Comments Tab

- 4. Select the desired field with and and, and then press edit the field. Header consists of the following fields.
 - Refer to Section 3.6. "Using Softkey Board" for how to edit.
 - Customer: This field allows you to enter a customer name.
 - Location: This field allows you to enter a location, such as an address or city.
 - Operator: This field allows you to enter an operator name.
 - Notes: This field allows you to enter any notes that may be desired concerning the specific job.

Setting the VIP - Logo settings -:

The logo can be included in a report.

Note:

Only PNG format files can be used.

- 1. Press to display the General Functions pop-up menu.
- 2. Select Create Report with and and and, and then press st to display the VIP screen.
- 3. Select the Logo tab with , and to change the Logo.



Figure 9.5-6 Logo tab screen

- 4. Select the Include Logo with and and and, and then press to select the check box. If you select the check box, the logo is included in a report.
- 5. Select the Path with and and and then press to display the Load PDF Logo screen.
- 6. When you select a desired logo file, press (Load) to load the logo file.

Or

Press [4] (Exit) to not load the logo file.

9.6 Working with VIP Image Files

Images captured by the VIP can be saved as PNG or vipi files. You can view the saved images on the $\mu OTDR$ or analyze them using the VIP Analysis software on a PC.

Note:

The mass storage feature cannot be used from the PC when any of the following screens is displayed:

- Export PNG Image
- Save PDF Report
- Save VIP Image
- Load VIP Image
- Import PNG Image

Saving a VIP image as a vipi file:

Save a VIP image using the following procedure.

- 1. Display the desired image in the VIP screen.
- 2. Auto File Name is ON: Press (Save), and the VIP image is automatically saved as a vipi file.

Or –

Auto File Name is OFF: Press (Save), and the Save VIP Image screen appears. Continue from step 3.

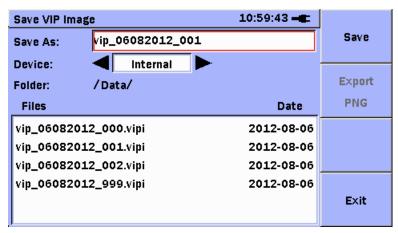


Figure 9.6-1 Save VIP Image Screen

Note:

The VIP image cannot be saved when there is no captured image or loaded image.

- 3. Select the Save As to enter file name, and then press The file name is entered automatically as "vip_DATE@TIME".
- 4. Edit a file name, referring to Section 3.6. "Using Softkey Board".
- 5. Select the desired directory or folder to save the file.
- 6. Press (Save) to save the VIP image as a vipi file.
 Press (Exit) not to save.

Saving a VIP image as PNG file:

Save a VIP image using the following procedure.

- 1. Display the desired image in the VIP screen.
- 2. Press to display the General Functions pop-up menu.
- 3. Select Export To PNG with and and and, and then press st to display the Export PNG Image screen.

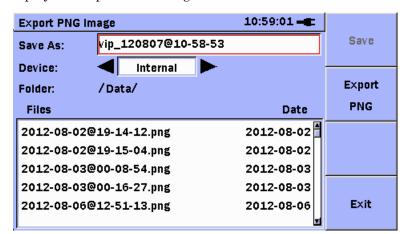


Figure 9.6-2 Export PNG Image Screen

Note:

The VIP image cannot be saved when there is no captured image or loaded image.

- 4. Select the Save As to enter file name, and then press sal.

 The file name is entered automatically as "vip_DATE@TIME".
- 5. Edit a file name using the softkey board.
- 6. Select the desired directory or folder to save the file.
- 7. Press (Export PNG) to save the VIP image as a PNG file. Press (Exit) not to save.

Loading a VIP Image from a vipi file

Display saved VIP images using the following procedure.

- 1. Press to display the General Functions pop-up menu.
- 2. Select Open VIP with and and and then press st to display the VIP screen.
- 3. Press to display the General Functions pop-up menu.
- 4. Select Load VIP Image with and and and then press to display the Load VIP Image screen.

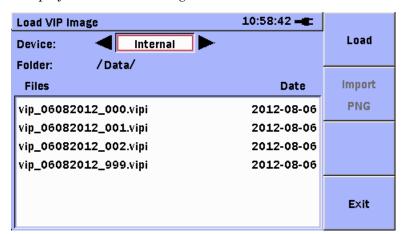


Figure 9.6-3 Load VIP Image Screen

- 5. Select the desired directory or folder from which a file is loaded, and then press set.
- 6. Press (Load) to read the VIP image from the vipi file.
 - Press [4] (Exit) not to read.

Loading a VIP Image from PNG file

Display saved VIP images using the following procedure.

- 1. Press to display the General Functions pop-up menu.
- 2. Select Open VIP with and and and then press so to display the VIP screen.
- 3. Press to display the General Functions pop-up menu.
- 4. Select Import From PNG with and and and then press to display the Import PNG Image screen.

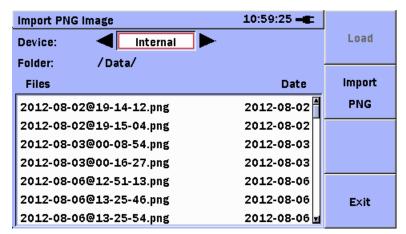


Figure 9.6-4 Import PNG Image Screen

- 5. Select the desired directory or folder from which a file is loaded, and then press sel.
- 6. Press (Import PNG) to read the VIP image from the PNG file.
 Press (Exit) not to read.

Chapter 10 Remote GUI and Folder Sharing

This chapter describes the remote GUI and folder sharing features. These features use an USB Ethernet converter, USB Wi-Fi dongle, or USB Bluetooth dongle.

Refer to the release note for the latest information on USB network devices that can be used with $\mu OTDR$.

Note:

USB hubs cannot be used.

The remote GUI feature provides the following capabilities:

- You can connect to μOTDR from a browser that supports Adobe Flash Player.
 - There is no need to install any application on the PC.
- Password authentication is available when connecting to μOTDR.
- The browser screen is updated in real time.
- The $\mu OTDR$ screen is displayed on the browser, allowing operation in the same way as on the main system.
- Files can be downloaded from μOTDR.
- Files can be uploaded from the PC.

The Shared folder includes the following features:

- There is no need to install any application on the PC.
- Folders can be shared between the PC and µOTDR.
- Password authentication is available when connecting to a shared folder.
- Folders can be copied, moved, deleted, and created.

| 10.1 | Configuring the Network Settings for µOTDR | 10-2 |
|------|--|-------|
| | 10.1.1 Configuring Ethernet settings | 10-4 |
| | 10.1.2 Configuring Wi-Fi settings | 10-8 |
| | 10.1.3 Configuring Bluetooth settings | 10-15 |
| 10.2 | Setting the Remote GUI Password | 10-18 |
| 10.3 | File Sharing Setting | 10-19 |
| 10 4 | Using the Remote GUI | 10-23 |

10.1 Configuring the Network Settings for µOTDR

 $\mu OTDR$ connects to the network via a USB Wi-Fi dongle or USB Bluetooth dongle.

The following table shows the list of USB network devices that can be used. Refer to the release note for the latest information.

Note:

They may not be used due to compatibility problems.

If this is the case, use USB network devices whose compatibility has been confirmed.

Also, multiple USB devices cannot be connected using a USB hub.

Table 10.1-1 List of Compatible USB Network Devices

| USB Ethernet Converter | | |
|------------------------|---------------|--|
| Planex | UE-100TX-G3 | |
| USB Wi-Fi dongle | | |
| BUFFALO | WLI-UC-GNM | |
| I•O DATA | WN-G300U | |
| Logitec | LAN-W150N/U2 | |
| | LAN-W300N/U2 | |
| Sitecom | WL-329 | |
| | WL-345 | |
| | WLA-4000 | |
| USB Bluetooth dongle | | |
| BUFFALO | BSHSBD04BK | |
| | BSHSBD05BK | |
| | BSHSBD08BK | |
| IOGEAR | GBU421 | |
| Logitec | LBT-UAN01C1 | |
| Planex | BT-Micro3H2X | |
| | BT-MicroEDR1X | |
| Sanwa Supply | MM-BTUD27 | |
| Targus | ACB20EU | |
| Technika | NBA111 | |

When you connect a USB network device, the Network Setup screen is displayed on the Top Menu screen.

You can also access the Network Setup screen by pressing on the Top Menu screen.

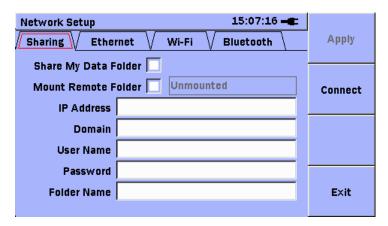


Figure 10.1-1 Network Setup Screen

Reconfigure the $\mu OTDR$ network settings according to the operating environment.

10.1.1 Configuring Ethernet settings

When using a USB Ethernet converter, set the following items on the **Ethernet** tab of the Network Setup screen.

Table 10.1.1-1 Setting Items (Ethernet Connection)

| Item | Function | Parameters | Default |
|------------------|--|----------------------------|---------------|
| DHCP | If this check box is ON, IP Address, Subnet Mask and Default Gateway are assigned automatically. | Off, On | On |
| IP Address* | Set IP Address. | 0.0.0.0 to 255.255.255.255 | 192.168.200.1 |
| Subnet Mask* | Set Subnet Mask. | 0.0.0.0 to 255.255.255.255 | 255.255.0.0 |
| Default Gateway* | Set the Default Gateway. | 0.0.0.0 to 255.255.255.255 | 0.0.0.0 |

^{*:} Set only when DHCP is set to "Off".

Setting the address (Automatic Assignment)

When not connected, continue to step 4.

If the network supports **DHCP**, an IP address will be assigned automatically by the network. To use **DHCP**, follow the steps below:

- Connect the USB Ethernet converter to the USB type A port of the controller on the Top Menu screen.
 If USB Ethernet converter is already connected, continue to step 2.
- 2. Press to display the General Functions pop-up menu on the Top Menu screen.
- 3. Press and to select **Network Setup**, and then press to access the Network Setup screen.
- 4. The **Ethernet** tab of the Network Setup screen is displayed.

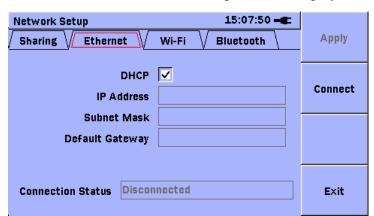


Figure 10.1.1-1 Ethernet Tab

5. Press and to select **DHCP**, and then press st to select the check box.

- 6. To use DHCP, press (Apply). To cancel, press (Apply).
- 7. Connect the RJ-45 connector of the Ethernet drop cable to Ethernet end of the USB Ethernet converter.
- 8. Press (Connect) to connect the network.

 If connection is completed, the address is displayed.

 If not, IP Address, Subnet Mask and Default Gateway are left blank.

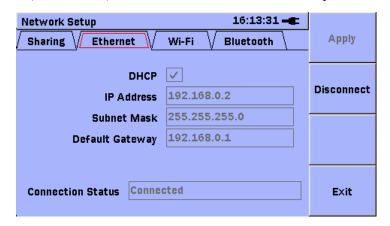


Figure 10.1.1-2 Screen for Successful DHCP Connection

Note:

If the DHCP request was not successful, please check your network. When you do not solve, please set an address manually.

- 9. If you want to disconnect the network, press (Disconnect) to disconnect the network.
- 10. Dismount the USB Ethernet converter.

Note:

Disconnect the network before dismount the USB Ethernet converter.

Setting the address (Manual Assignment)

If the network does not support **DHCP**, or manual assignment of an IP address is desired, follow the steps below:

- 1. Connect the USB Ethernet converter to the USB type A port of the controller on the Top Menu screen.
 - If USB Ethernet converter is already connected, continue to step 2. When not connected, continue to step 4.
- 2. Press to display the General Functions pop-up menu on the Top Menu screen.
- 3. Press and to select the Network Setup screen, and then press .
- 4. The **Ethernet** tab of the Network Setup screen is displayed.

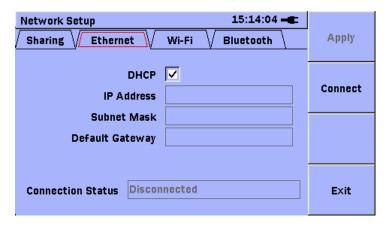


Figure 10.1.1-3 Ethernet tab Screen

- 5. Press and to select **DHCP**, and then press so to clear the check box.
- 6. Press and to select an item, and then press to edit the address.
- 7. The address screen appears.
- 8. Press 🗪, 🥌, 🐧 and 🕻 to specify each address.

Note:

Leave the **Default Gateway** box blank if a default gateway is not used.

- 9. To enable the new address, press (Set).
 To cancel, press (Cancel).
- 10. Repeat step 6 to 9.
- 11. After you set all the addresses, press (Set).

 To cancel, press (4) (Exit) and close the Network Setup screen.

- 12. Connect the LAN cable to the USB Ethernet converter.
- 13. Press (Connect) to connect to the network.

 Once a connection is established, "Connected" is displayed in the Connection Status box.

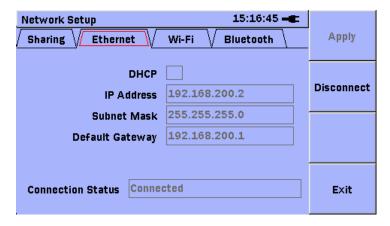


Figure 10.1.1-4 Screen for Successful Connection

- 14. If you want to disconnect the network, press (Disconnect) to disconnect the network.
- 15. Remove the USB Ethernet converter.

Note:

Disconnect from the network before removing the USB Ethernet converter.

10.1.2 Configuring Wi-Fi settings

When using a USB Wi-Fi dongle, set the following items on the **Wi-Fi** tab of the Network Setup screen.

Note:

Contact your network administrator for the access point to be connected.

Table 10.1.2-1 Setting Items (Wi-Fi Connection)

| Item | Function | Parameters | Default |
|----------------------|--|-------------------------------|---------|
| Target Device (SSID) | Sets the target access point. | Up to 32 characters | Blank |
| Security | Sets the encryption method. | None, WEP, WPA, WPA2 | None |
| Password | Set the password. | Up to 26 characters | Blank |
| DHCP | When this check box is selected, the IP address, subnet mask, and default gateway will be assigned automatically. | Off, On | On |
| IP address* | Set IP Address. | 0.0.0.0 to 255.255.255.255 | 0.0.0.0 |
| Subnet mask* | Set Subnet Mask. | 0.0.0.0 to 255.255.255.255 | 0.0.0.0 |
| Default Gateway* | Set the Default Gateway. | 0.0.0.0 to 255.255.255.255 | 0.0.0.0 |

^{*:} Set only when DHCP is set to "Off".

Automatically searching the target access point and connecting to it

- 1. Connect the USB Wi-Fi dongle to the USB-A port on the top connector panel.
 - If already connected, proceed to Step 2. If it is not yet connected, proceed to Step 4.
- 2. On the Top Menu screen, press (a) to access the menu.
- 3. Press and to select **Network Setup** to display the Network Setup screen is displayed.

15:18:28 🖛 Network Setup Apply Sharing Ethernet Wi-Fi Bluetooth Selected Network Connect MZK-MF150-0 Choose Network **Connection Status** Disconnected Exit

The Wi-Fi tab of the Network Setup screen is displayed. The target network that is found first is displayed.

Figure 10.1.2-1 Wi-Fi Tab

- To change the target network connection, press (Choose 5. Network).
- 6. Select the desired access point using and and and press

If the desired target network is not listed, press (Refresh).

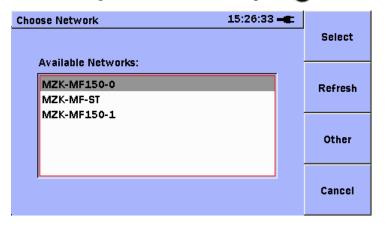


Figure 10.1.2-2 Choose Network Screen

Setup Network

Name

MZK-MF150-0

Cancel

Password

DHCP

IP Address

Subnet Mask

Default Gateway

7. Select the setting to be altered using and , and press

Figure 10.1.2-3 Network Setup Screen

- 8. Select the **Password** box using and and and press to display the Softkey Board screen. Enter the password for the access point.
 - Refer to section 3.6 "Using Softkey Board" for details on entering characters.
- 9. When using DHCP, press and to select **DHCP**, and then press to select the check box.

 If you prefer not to use DHCP, press and to select **DHCP**, and then press to clear the check box. You can now enter the IP address, subnet mask, and default gateway. Press and to select each item, and then press to access the address
- 10. After you complete all the settings, press (Set). To cancel the settings, press (Cancel).

input screen.

11. Check that the desired target access point has been selected, and press (Select).

12. Check that the selected access point is displayed in the Selected **Network** box on the **Wi-Fi** tab, and press (Connect). The IP address is displayed when successfully connected.

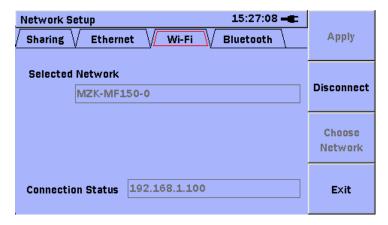


Figure 10.1.2-4 Screen For Successful Connection

Notes:

- Normally, you cannot connect to an access point with an invalid password. If the last access point to which you connected is valid, you are automatically connected to it.
- The history of connections to the access points is cleared when powering off the module or removing the USB Wi-Fi dongle from the module.
- 13. To disconnect from the network, press (Disconnect) on the Wi-Fi
- 14. Remove the USB Wi-Fi dongle.

Note:

Disconnect from the network before removing the USB Wi-Fi dongle.

Setting and connecting the target network manually **Note:**

Write down the SSID of the access point to which you want to connect.

- 1. Connect the USB Wi-Fi dongle to the USB-A port on the top connector panel.
 - If already connected, proceed to Step 2. If it is not yet connected, proceed to Step 4.
- 2. On the Top Menu screen, press () to access the menu.
- 3. Press and to select Network Setup to display the Network Setup screen is displayed.
- The Network Setup Wi-Fi tab is displayed.
 The target network that is found first is displayed.

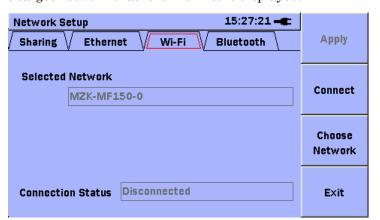


Figure 10.1.2-5 Wi-Fi Tab

- 5. Press (3 (Choose Network) to change the target network connection.
- 6. Press (Other).

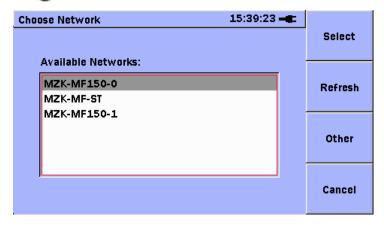


Figure 10.1.2-6 Target Device (SSID) Screen

7. Select the target network using and , and press to display the Softkey Board screen. Enter the SSID of the access point to which you want to connect.

Refer to section 3.6 "Using Softkey Board" for details on entering characters.

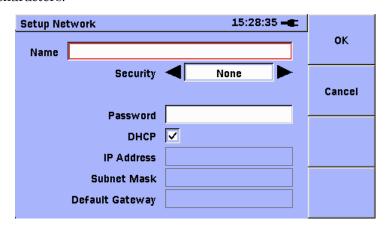


Figure 10.1.2-7 Network Setup Screen

- 8. Press and to select the type of security, and then press and to set up the security.
- 9. Press and to select the **Password** box, and then press to display the Softkey Board screen. Leave blank if a password is not used. Refer to section 3.6 "Using Softkey Board" for details on entering characters.
- 10. When using DHCP, press and to select DHCP, and then press to select the check box.

 If you prefer not to use DHCP, press and to select DHCP, and then press to clear the check box.

 The IP address, subnet mask, and default gateway can now be entered. Select the items using and and, and press to display the address input window.
- 11. Once all of the settings are complete, press (Set). To cancel the settings, press (Cancel).

Note:

An error message is displayed if the **Name** box is blank or if a name which exists on the list of detected access points is entered.

12. Check that the desired target access point has been selected, and press (Select).

13. Check that the access point selected is displayed in the **Selected Network** box on the **Wi-Fi** tab, and press (Connect). The IP address is displayed when successfully connected.

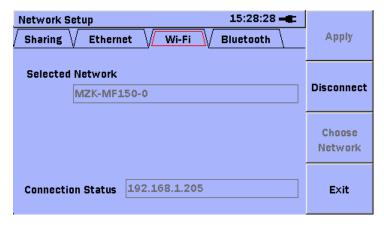


Figure 10.1.2-8 Screen For Successful Connection

Notes:

- Normally, you cannot connect to an access point with an invalid password. If the last access point to which you connected is valid, you are automatically connected to it.
- The history of connections to the access points is cleared when powering off the module or removing the USB Wi-Fi dongle from the module.
- 14. To disconnect from the network, press (Disconnect) on the Wi-Fi tab.
- 15. Remove the USB Wi-Fi dongle.

Note:

Disconnect from the network before removing the USB Wi-Fi dongle.

10.1.3 Configuring Bluetooth settings

When using a USB Bluetooth dongle, set the following items on the **Bluetooth** tab of the Network Setup screen.

Notes:

- For details of the target network Bluetooth settings, refer to the operation manual or website for the device to be used.
- FTP profile is required when sharing folders via Bluetooth. The Windows standard driver does not support USB Bluetooth dongles, so use the utility software and driver that come with your USB Bluetooth dongle.
- Use a USB Bluetooth dongle together with accompanying utility software and driver.

| Table 10.1.3-1 | Setting Items | (Bluetooth Connection) |
|----------------|---------------|------------------------|
|----------------|---------------|------------------------|

| Item | Function | Parameters | Default |
|----------------|--|---------------------|--|
| Device name | Specify the unit's Bluetooth interface name. | Up to 16 characters | uOTDR-xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx |
| PIN code | Sets the PIN code used for pairing. | Up to 16 characters | 123456 |

Establishing a connection

- 1. Connect a USB Bluetooth dongle in the USB port (A Type) on the top connector panel. If already connected, proceed to Step 2. If it is not yet connected, proceed to Step 4.
- 2. On the Top Menu screen, press 💮 to access the menu.
- 3. Press and to select **Network Setup**. The Network Setup screen is displayed.
- 4. The **Bluetooth** tab of the Network Setup screen is displayed.



Figure 10.1.3-1 Bluetooth Tab

- 5. Press and to select the **Device Name** box, and then press to display the Softkey Board screen.
- 6. Enter the device name. Refer to section 3.6 "Using Softkey Board" for details on entering characters.
- 7. Press and to select the **PIN Code** box, and then press to display the Softkey Board screen.
- 8. Enter the PIN code. Refer to section 3.6 "Using Softkey Board" for details on entering characters.
- 9. Press (Apply) to confirm the device name and PIN code.
- 10. Press (Search Device) to search for the device to be connected to. If the list is empty, the device search starts automatically.
- 11. To search manually, press (Refresh).

 Available Bluetooth devices detected in the vicinity are displayed on the list.
- 12. Select the desired device using and and and press (Select).

To cancel, press (Cancel).

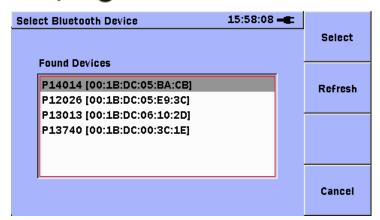


Figure 10.1.3-2 FTP Target Device Search Screen

- 13. Press (Set) to enable the new settings.
- 14. Press (Connect) to connect to the selected device.
- 15. If the connected device displays a message requesting you to enter a PIN code, enter the PIN code set in Step 8.

16. Once pairing is completed, the device is automatically connected. Once a connection is established, "Connected" is displayed in the **Connection Status** box.



Figure 10.1.3-3 Screen for Successful Connection

17. When successfully connected, Remote is displayed as media in the Mass Storage Screen or other screens, and the shared folders on the connected device can be accessed from the module.

In My Bluetooth Places on the PC, the internal media of the module is displayed.

Notes:

- For how to configure shared folders on the PC, refer to the instruction manual for your utility software.
- Read-only files cannot be overwritten from the module when connected via Bluetooth.
- Read-only files cannot be deleted from the module when connected via Bluetooth.
- 18. To disconnect from the network, press (Disconnect) on the Bluetooth tab.
- 19. Remove the USB Bluetooth dongle.

Note:

Disconnect from the network before removing the USB Bluetooth dongle.

10.2 Setting the Remote GUI Password

This section describes how to set the remote GUI password.

- 1. On the Top Menu screen, press 🜑 to access the menu.
- 2. Press to select **Setup**, and then press so to display the Setup screen.
- 3. Press 🗪 🕶 🚺 to select the Advanced tab.
- 4. Press and to select the Remote GUI Password box, and then press to display the Remote GUI Password Setup screen.
- 5. Set the password. Refer to section 3.6 "Using Softkey Board" for details on entering characters.

10.3 File Sharing Setting

To share files and folders, set the following items on the **Sharing** tab of the Network Setup screen.

Note:

When sharing files and folders, connect to the network via Ethernet or Wi-Fi.

The shared folders on the PC are displayed as "Remote" in the Device box on the Mass Storage screen. For details of the PC settings, refer to the Microsoft website.

Table 10.3-1 Setting Items

| Item | Function | Parameters | Default |
|--------------------------|---|----------------------------|---------|
| Share Internal Memory | When this check box is selected, the internal memory of the μ OTDR is shared. | Off, On | Off |
| Share PC Folder | When this check box is selected, the computer's shared folder is shared. | Off, On | Off |
| IP Address | Set the IP Address of PC. | 0.0.0.0 to 255.255.255.255 | Blank |
| Domain | Set the domain name of PC. | Up to 30 characters | Blank |
| Host name | Set the computer host name. | Up to 20 characters | Blank |
| Password | Set the password of PC. | Up to 20 characters | Blank |
| Folder Name | Set the folder name of PC. | Up to 30 characters | Blank |

Setting up a shared folder: Steps on a computer (Windows XP)

- 1. Create a folder directly in the C drive, and configure the folder as a shared folder.
- 2. Right-click the folder and click **Sharing and Security**.
- 3. On the **Sharing** tab, select **Share this folder**.
- 4. Check that the folder icon is changed as shown in Figure 10.3-1.



Figure 10.3-1 Shared Folder

Setting up a shared folder: Steps on the µOTDR

- 1. On the Top Menu screen, press 💮 to access the menu.
- 2. Press and to select Network Setup, and then press to access the Network Setup screen.





Figure 10.3-2 Sharing Tab

- Press and to move to the Share Internal Memory check box, and then press to select the check box.
 If you don't want to share the μOTDR internal memory, clear the check box.
- 5. Press and to move to the Share PC Folder check box, and then press to select the check box.

 If you don't want to share the shared folder on the PC, clear the check box.
- 6. Press and to select the IP Address box, and then press to display the address input screen.
- 7. Press , , and to enter the computer's IP address.
- 8. To set the address, press (Set). To cancel, press (Cancel).
- 9. Press and to select the Domain Name box, and then press to display the Softkey Board screen.
- 10. Press , , and to enter the computer's domain name.
- 11. For details on entering the domain name, refer to section 3.6 "Using Softkey Board".
- 12. Press and to select the Host Name box, and then press to display the Softkey Board screen.
- 13. Press , , , and b to enter the computer's user name.
- 14. For details on entering the host name, refer to section 3.6 "Using Softkey Board".

- 15. Press and to select the Password box, and then press to display the Softkey Board screen.
- 16. Press , , and to enter the computer's login password.
- 17. For details on entering the password, refer to section 3.6 "Using Softkey Board".
- 18. Press and to select the Folder Name box, and then press to display the Softkey Board screen.
- 19. Press , , and to enter the folder name. The folder name is specified as the folder name created by the PC settings.
- 20. For details on entering the folder name, refer to section 3.6 "Using Softkey Board".
- 21. When the setting has been completed, press (Apply) to confirm the sharing settings.

 To cancel setup, press (Close).

Once you have completed settings for sharing between the unit and a computer, refer to section 10.1.1 or 10.1.2 to establish a network connection. Once the connection is established and folders are successfully shared, "Mounted" is displayed in the Mount Remote Folder box on the **Sharing** tab.

Shared folders can be accessed from the Network Setup screen when "Mounted" is displayed.

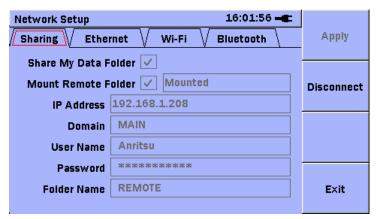


Figure 10.3-3 Sharing Tab (Folder Shared)

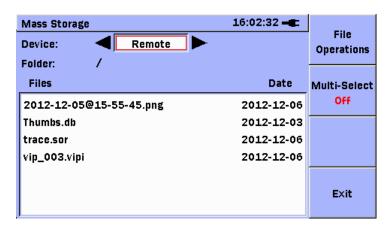


Figure 10.3-4 Mass Storage Screen (Folder Shared)

10.4 Using the Remote GUI

The following equipment and software is required when using the remote GUI.

Table 10.4-1 Required Equipment

| Equipment | Performance |
|-------------------|--|
| | Memory: 1 GB or more |
| PC | Free hard disk space: 5 GB or more |
| l rc | Ethernet: 10/100 BASE-T or wireless LAN |
| | Display: 1280 × 1024 or more |
| | Microsoft Internet Explorer 11 or later, |
| D | Google Chrome 66 or later, |
| Browser | Mozilla Firefox 59 or later, |
| | Safari 11 or later |
| USB Ethernet | USB1.1/2.0 support, 10/100 BASE-T |
| Converter* | |
| USB Wi-Fi dongle* | USB1.1/2.0 support, IEEE802.11b/g/n |

^{*:} Either one.

Notes:

- Refer to the release note for details of USB devices that can be used.
- USB hubs cannot be used.

After the network connection is established, use the remote GUI according to the following procedure.

- 1. Start the web browser on the PC.
- 2. In the address bar, enter http://xxx.xxx.xxx (xxx.xxx.xxx is the IP address assigned in 10.1.1 or 10.1.2).
- 3. The Network Master screen appears when successfully connected.

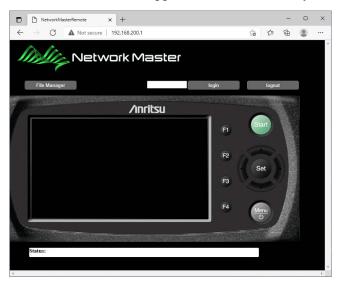


Figure 10.4-1 Remote GUI (before Login)

4. Enter the remote GUI password that was specified in 10.2, and then click the login. The μ OTDR screen appears upon successful login.

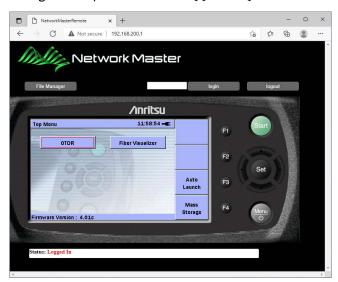


Figure 10.4-2 Remote GUI (After Login)

Remote GUI Functions

1. **Control** –

The remotely connected $\mu OTDR$ can be controlled via the screen displayed on the web browser.

2. File Manager -

The internal media of the remotely connected $\mu OTDR$ are displayed. The following functions are available on the File Manager screen.

- File Upload (from PC to $\mu OTDR$) Waveform files can be sent from the PC to $\mu OTDR$.
- File Download (from μOTDR to PC) Measurement data can be acquired from μOTDR.

Use the Control functions according to the following procedure.

1. A red circle appears when the mouse cursor is located over any of the graphic front-panel keys (F1, F2, F3, F4, Start, Set, Menu, Up, Down, Left, and Right) as shown in Figure 10.4-3.



Figure 10.4-3 Remote GUI (When F1 Key Selected)

2. Clicking when the red circle is displayed carries out the operation of the actual key on the device remotely connected.

Use the File Manager functions according to the following procedure.

- 1. Click the **File Manager** at the upper left of μ OTDR.
- 2. The file menu is displayed.



Figure 10.4-4 Remote GUI (File Menu)

3. To change a folder, click the name whose **Type** column shows "Folder". The file menu displays the selected folder as shown in Figure 10.4-5.

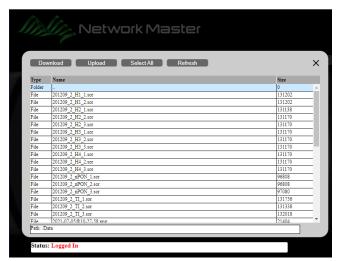


Figure 10.4-5 Remote GUI (Folder)

4. To download a file, click on the filename and click **Download** button (**Download**).

The file will be saved in the Downloads folder of the PC.

5. To upload a file, click **Upload** button (**Upload**). The Select File screen appears when clicked.

Notes:

- When uploaded, the file is saved in the folder currently displayed. A warning message will be displayed in the Status bar if no folder is being displayed.
- Files cannot be uploaded or downloaded unless there is at least 1 MB of free space on the internal memory.
- To abort downloading or uploading, click the **Cancel** button (Cancel).
- The Status bar also displays error messages as well as progress status and completion message as shown below.

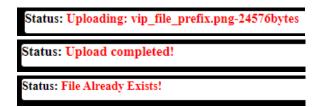


Figure 10.4-6 Status Messages

Exit the remote GUI according to the following procedure.

- 1. Click the **logout** at the upper right of μ OTDR.
- 2. Close the Web browser.

Note:

The remote connection may be broken if the web browser is closed before logging out. Always log out before exiting the remote GUI.

Chapter 11 Performance Test and Calibration

This chapter describes how to check the performance of the unit and calibrate measurement values. Contact Anritsu or our sales dealer when the performance test proves that the specifications are not satisfied. Provide the following information when requesting repairs.

- Device name and serial number.
- Description of the Failure conditions
- The name and contact information of the supervisor who understands the failure conditions clearly and should receive a notification at the completion of repairs.

| 11.1 | Perform | ance Test11-2 |
|------|----------|---|
| | 11.1.1 | Required instruments for performance test 11-7 |
| | 11.1.2 | Wavelength11-10 |
| | 11.1.3 | Pulse Width11-12 |
| | 11.1.4 | Dynamic range11-14 |
| | 11.1.5 | Distance Measurement Accuracy 11-17 |
| | 11.1.6 | Linearity11-19 |
| | 11.1.7 | Dead Zone11-23 |
| | 11.1.8 | Optical output power and wavelength of |
| | | Visual Fault Locator (VFL)11-26 |
| | 11.1.9 | Optical output power and wavelength of |
| | | Light Source11-28 |
| | 11.1.10 | Measurement accuracy of optical power |
| | | meter and PON power meter11-30 |
| 11.2 | Calibrat | ion11-32 |
| | 11.2.1 | Backscatter coefficient level calibration 11-32 |
| | 11.2.2 | Measurement accuracy of optical power |
| | | meter 11-32 |
| 11.3 | Perform | ance Test Result Sheet11-33 |

11.1 Performance Test

The following eight items are tested to check the performance of this instrument.

(Items 7 and 8 apply only to the units that are equipped with the optional VFL and OPM.)

- 1. Optical wavelength
- 2. Pulse width
- 3. Dynamic range (One-way back-scattered light dynamic range test)
- 4. Distance measurement accuracy
- 5. Linearity
- 6. Dead zone
- 7. Optical output power and wavelength of light source
- 8. Measurement accuracy of the power meter and PON power meter

Clean the optical connector before testing. The steps in this section are described based on conditions where the power is On and the MT9090A Series is activated.

Rated values for Each Test Item

Unless otherwise specified, the following rated values are guaranteed at a temperature of 25°C \pm 5°C.

Table 11.1-1 MU909014A/A1/B/B1, MU909015B/B1 OTDR Specifications

| Item | Rated values | Remarks |
|--------------------|------------------------------------|---------|
| | 1310 ±25 nm*1 | |
| Wavelength | 1550 ±25 nm*1 | |
| wavelength | 1625 ±15 nm*2 | |
| | 1650 ±15 nm*3 | |
| D-1 W. 141- ()*4 | 5, 10, 20, 50, 100 ns, | |
| Pulse Width (ns)*4 | 200, 500 ns, 1, 2, 5, 10, 20 µs | |
| | MU909014B/B1 | |
| | (1310/1550 nm) | |
| | 23.5/22 dB*6, | |
| | 31.5/30 dB*7 | |
| | MU909015B/B1 | |
| | (1310/1550 nm) | |
| | 27/25 dB*6 | |
| Dynamic Range | 36/35 dB* ⁷ | |
| (S/N=1)*5 | MU909014A/A1 | |
| | (1625 nm) | |
| | 23.5 dB*^{6} , | |
| | 31.5 dB*7 | |
| | MU909014A/A1 | |
| | (1650 nm) | |
| | 23 dB*6 | |
| | 31.5 dB*7 | |

- *1: MU909014B/MU909014B1, MU909015B/MU909015B1
- *2: MU909014A/MU909014A1-053, MU909014A/MU909014A1-063
- *3: MU909014A/MU909014A1-054, MU909014A/MU909014A1-064
- *4: Typical
- *5: S/N = 1 Dynamic range value applies +2.6 dB to the noise peak values.
 - At 25°C, 180 s of averaging, except during battery charging
- *6: Pulse width 500 ns
- *7: Pulse width 20 µs

Table 11.1-2 MU909014C/C6, MU909015A6/C/C6 OTDR Specifications

| Item | Specifications | | | | |
|-------------------------------------|--|--------------|----------------|--|--------------|
| | Mode | S | Specifications | | |
| | MU909014C/C6-057/067 MU909015C/C6-057/067 | | 1550 | 1310±25 nm 1550±25 nm 1625±15 nm | |
| Wavelength | MU909014C/C6-058/068 MU909015C/C6-058/068 | | 1310 1550 | 1310±25 nm 1550±25 nm | |
| | MU909015C/C6-059/069 | | 1310 1490 | 1650±15 nm 1310±25 nm 1490±25 nm 1550±25 nm | |
| | MU909015A6-0 | 53/063 | 1625 | ±5 nm | |
| | MU909015A6-0 | 54/064 | 1650 | ±15 nm | |
| Pulse Width*1 | 5, 10, 20, 50, 100, | 200, 500 1 | ns, 1, 2, 5 | , 10, 20 μs | 3 |
| | MU909014C/C6 | | | | |
| | Wavelength | 1310 nm | 1550 nm | 1625 nm*³ | 1650 nm*4 |
| | Pulse width | 11111 | 11111 | 11111 | 11111 - |
| | 500 ns | 24.5 | 23 | 24 | 23 |
| | 20 μs | 32.5 | 31 | 32.5 | 32.5 |
| | MU909015A6 Wavelength Pulse width 500 ns | 1625 nm*5 | 1650 nm*6 | | |
| | 20 μs | 35 | 35 | | |
| Dynamic Range (dB)(S/N=1)*1,*2 | MU909015C/C6-057/067/058/068 | | | | |
| | Wavelength Pulse width | 1310 nm | 1550 nm | 1625 nm* ³ | 1650 nm*4 |
| | 500 ns | 27 | 26 | 25 | 24 |
| | 20 μs | 38 | 37 | 35 | 35 |
| | MU909015C/C6-0 | 059/069 | | Γ | 1 |
| | Wavelength Pulse width | 1310 nm | 1490 nm | 1550 nm | |
| | 500 ns | 25 | 24 | 24 | - |
| | 20 μs | 36 | 35 | 35 | 1 |
| Distance Measurement Accuracy | ±1 m ±(3 m×dista However, exclude | _ | | | olution |

Table 11.1-2 MU909014C/C6, MU909015A6/C/C6 OTDR Specifications (Cont'd)

| Item | Specifications |
|---|---|
| Loss Measurement Accuracy (Linearity) | ± 0.05 dB/dB or ± 0.1 dB (Whichever greater) |
| Dead zone (Backscatter light) *1,*7,*8 | Wavelength 1310 nm: ≤ 4.0 m Wavelength 1490/1550/1625/1650 nm: ≤ 4.5 m |
| Dead zone (Fresnel reflection) *1,*7,*9 | ≤ 0.8 m |

- *1: Typical
- *2: S/N=1 Dynamic range value applies +2.6 dB to the noise peak values. At 25°C, 180 s of averaging, 125 km of distance range, except during battery charging
- *3: Option 057/067
- *4: Option 058/068
- *5: Option 053/063
- *6: Option 054/064
- *7: IOR=1.500000
- *8: 25°C, pulse width 5 ns, return loss 45 dB, deviation ± 0.5 dB, except during charging battery
- *9: 25°C, pulse width 5 ns, return loss 45 dB, width lower than the peak of reflected waveform by 1.5 dB, except during charging battery

Table 11.1-3 MU909014C6, MU909015A6/C6
Light Source Specifications

| Item | Specifications | | |
|----------------------|--|--------------|--|
| | Model | Rated values | |
| | MITOGORI (CO OFFICE | 1310±25 nm | |
| | MU909014C6-057/067 | 1550±25 nm | |
| | MU909015C6-057/067 | 1625±25 nm | |
| | MIJ000014CC-058/068 | 1310±25 nm | |
| Wavelength*1 | MU909014C6-058/068 MU909015C6-058/068 | 1550±25 nm | |
| wavelength | | 1650±25 nm | |
| | | 1310±25 nm | |
| | MU909015C6-059/069 | 1490±25 nm | |
| | | 1550±25 nm | |
| | MU909015A6-053/063 | 1625±25 nm | |
| | MU909015A6-054/064 | 1650±25 nm | |
| Optical output power | -5±1.5 dBm*1,*2 | | |

^{*1:} CW, 25°C

Table 11.1-4 MU909014A1/B1, MU909015B1 VFL Specifications

| Item | Rated values | Remarks |
|----------------------|--------------|---------|
| Center wavelength | 650 ±15 nm* | |
| Optical output power | 0 ±3 dBm* | |

^{*: 25°}C, CW

Table 11.1-5 MU909014A/A1/B/B1/C/C6, MU909015A6/B/B1/C/C6
Optical Power Meter Specifications

| Item | Rated values | Remarks |
|----------------|--------------|---------|
| Level accuracy | ±0.5 dB* | |

^{*:} Wavelength 1310/1490/1550 nm, -20 dBm (CW), 25±5°C, when using the master connector fiber and after executing the zero offset

^{*2:} Fiber length 2 m, after the warm-up time passes.

Table 11.1-6 MU909014C6, MU909015A6/C6 PON Power Meter Specifications

| Item | Rated values | Remarks |
|----------------|--------------|---------|
| Level accuracy | ±0.5 dB* | |

^{*:} Wavelength 1490/1550 nm, -20 dBm (CW), 25±5°C, when using the master connector fiber and after executing the zero offset

11.1.1 Required instruments for performance test

The following table shows the instruments and their performance required for the performance tests.

Table 11.1.1-1 Required Instruments for Performance Test

| ltem | Pe | Name of Recommended Device | | | |
|--|--------------------------|----------------------------------|--------------|--|--|
| Optical Spectrum | Wavelength: | 600 to 1650 nm -65 to +20 dBm | MS9740B | | |
| Analyzer | Level: Wavelength acc | (Anritsu) | | | |
| | Supported Sing Fiber | | | | |
| Variable Optical Attenuator | Wavelength: | 1200 to 1650 nm | 8163B+81570A | | |
| | Insertion loss: | 3 dB or less | (Keysight | | |
| | Attenuation: | Technologies) | | | |
| | Resolution: | $0.001~\mathrm{dB}$ or less | | | |
| Optical-to- Electrical Converter | Wavelength: | 1100 to 1650 nm | P6703B | | |
| | Rising/Falling: | 500 ps or lower | (Tektronix) | | |
| | Compatible fibe | | | | |
| Oscilloscope | Bandwidth: | DC to 1 GHz | TDS5104B | | |
| | | | (Tektronix) | | |
| SM Optical | Fiber length: | 2 km, one | | | |
| Fiber | | 20 km or longer, one | | | |
| | | 40 to 50 km, one | | | |
| | | 500 to 800 m, one | | | |
| | | 2 to 3 m, two | | | |

Table 11.1.1-1 Required Instruments for Performance Test (Cont'd)

| Item | Perfo | rmance | Name of Recommended Device | | | |
|----------------------|------------------|------------------------------|----------------------------------|--|--|--|
| Optical Coupler | Structure: | 1×2 | | | | |
| (1:1) | Coupling ratio: | 50%:50% | | | | |
| | Excess loss: | 1 dB or less | | | | |
| Optical Coupler | Type: | 1×2 | | | | |
| (10:1) | Splitting ratio: | 10%:90% | | | | |
| | Excess loss: | 1 dB max. | | | | |
| Optical Power | Wavelength: | 1000 to $1650~\mathrm{nm}$ | AQ2212+AQ2200-211 | | | |
| Meter | Level: | -50 to $+10$ dBm | (Yokogawa Meters & | | | |
| | Accuracy: | $\pm 0.2~\mathrm{dB}$ | Instruments | | | |
| | | | Corporation) | | | |
| Optical Power | Wavelength: | 650 nm | OPM37LAN | | | |
| Meter | Level: | –65 to +10 dBm | (Sanwa Electric | | | |
| (Wavelength: 650 nm) | Level accuracy: | ±0.3 dB | Instrument Co., Ltd.) | | | |
| Light Source | Wavelength: | 1310±5 nm | AQ2212+AQ2200-111 | | | |
| | Level: | +10 dBm or more | (Yokogawa Meters & | | | |
| | Level accuracy: | ±0.1 dB | Instruments | | | |
| | Compatible fiber | :Single mode | Corporation) | | | |
| | Wavelength: | 1490±5 nm | | | | |
| | Level: | +10 dBm or more | | | | |
| | Level accuracy: | ±0.1 dB | | | | |
| | Wavelength: | 1550±5 nm | | | | |
| | Level: | +10 dBm or more | | | | |
| | Level accuracy: | ±0.1 dB | | | | |

Table 11.1.1-2 Test Items/Measuring Instruments

| Test Items | Optical Pulse Test | | | | VFL | | Lig Sou | ght irce | Power Meter | PON Power Meter | | |
|--|--------------------|-------------|---------------|-------------------------------------|-----------|-----------|--------------|-------------|----------------|-----------------------|----------------|----------------|
| Measurement instrument and cable | Wavelength | Pulse Width | Dynamic range | Distance Measurement Accuracy | Linearity | Dead Zone | Output Power | Wavelength | Optical Output | Wavelength | Level Accuracy | Level Accuracy |
| Optical Spectrum Analyzer | √ | _ | _ | _ | _ | _ | _ | ✓ | _ | √ | _ | _ |
| Variable Optical Attenuator | ✓ | √ | √ | _ | _ | √ | _ | _ | _ | _ | √ | ✓ |
| Optical-to- Electrical Converter | _ | √ | _ | _ | - | _ | _ | _ | _ | _ | _ | _ |
| Oscilloscope | _ | ✓ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ |
| SM Optical Fiber Optical Fiber 2 km | _ | _ | _ | ✓ | _ | _ | _ | _ | _ | _ | _ | _ |
| SM Optical Fiber Optical Fiber 20 km | _ | _ | √ | _ | _ | _ | _ | _ | - | - | _ | - |
| SM Optical Fiber Optical Fiber 40 to 50 km | - | _ | √ | _ | √ | _ | _ | _ | | - | _ | - |
| Optical Coupler (1:1) | ı | _ | \ | _ | 1 | _ | _ | _ | ١ | ı | _ | _ |
| Optical Coupler (10:1) | _ | _ | _ | _ | _ | ✓ | _ | _ | _ | _ | _ | _ |
| Light Source (1310 nm) | ı | _ | ı | _ | 1 | _ | _ | _ | ĺ | l | ✓ | _ |
| Light Source (1490 nm) | _ | _ | _ | _ | | _ | _ | _ | _ | _ | ✓ | ✓ |
| Light Source (1550 nm) | _ | _ | √ | _ | ı | _ | _ | _ | _ | _ | _ | _ |
| Optical Power Meter | _ | _ | ✓ | | _ | _ | _ | _ | ✓ | _ | √ | ✓ |
| Optical Power Meter (650 nm) | _ | _ | _ | _ | _ | _ | √ | _ | _ | _ | _ | |
| Light Source | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | ✓ | |
| SM Optical Fiber 500 to 800 m | _ | _ | _ | _ | _ | ✓ | _ | _ | _ | _ | _ | _ |

11.1.2 Wavelength

Check that the center wavelength satisfies the specifications.

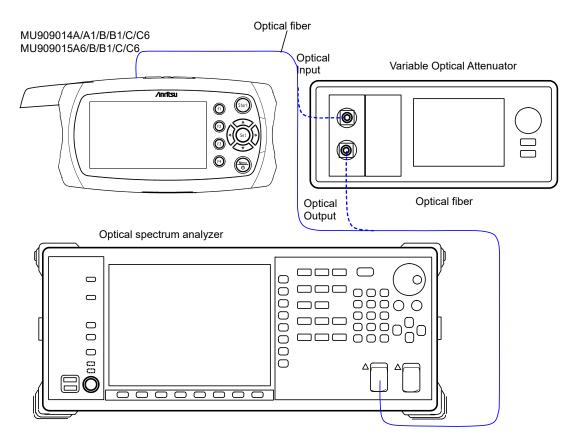


Figure 11.1.2-1 Wavelength Test - Connection Diagram

Test Procedure:

- 1. Connect the main frame and measuring instruments as shown in Figure 11.1.2-1.
- 2. Set the optical spectrum analyzer as follows:

Span: 50 nm Res: 0.05 nm VBW: 1 kHz

Sampling Point: 2001

Analysis: RMS K=1, S.Level: 20 dB

- 3. Set the wavelength of the main frame at Center of the spectrum analyzer.
- 4. Press [1] (**Test Setup**) in any of the following screens.
 - Trace Analysis screen
 - Trace View screen
- 5. Press **E** to select **Real Time**.
- 6. Set Pulse width to 1 μ s.

- 7. Press Start. Confirm that the measured light is displayed at the top of the screen.
- 8. Measure the optical pulse spectrum of the main frame with the spectrum analyzer.
- 9. If the waveform level measured by the spectrum analyzer is saturated, adjust the attenuation of the variable optical attenuator.
- 10. Record the center wavelength measured by the spectrum analyzer.
- 11. When using the MU909014B/B1 and MU909015B/B1, change the wavelength in the **Test Setup** screen and repeat steps 3 to 10 over.

11.1.3 Pulse Width

Check that the pulse width satisfies the specifications.

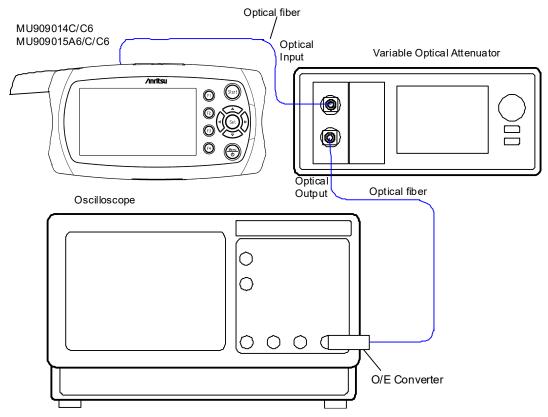


Figure 11.1.3-1 Pulse Width Test - Connection Diagram

- 1. Connect the main frame and measuring instruments as shown in Figure 11.1.3-1.
- 2. Press [1] (**Test Setup**) at any of the following screens.
 - Trace Analysis screen
 - Trace View screen
- 3. Clear Full Auto.
- 4. Press F2 to select Real Time.
- 5. Set Pulse width to 5 ns.
- 6. Press start. Confirm that the measured light is displayed at the top of the screen.
- 7. Adjust the oscilloscope trigger level, amplitude and time base scale to display the waveform in the oscilloscope. Adjust the optical variable attenuator to prevent the waveform monitor from becoming saturated.

- 8. Monitor the waveform with the oscilloscope and measure the pulse width at half the amplitude of the peak level as shown in Figure 10.1.3-2 and record the results.
- 9. Change **Pulse Width** as described in Step 5 and repeat steps 6 to 8 over.

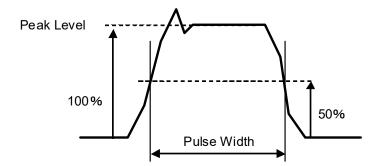


Figure 11.1.3-2 Example - Peak Level at Half Amplitude measurement

10. When using the MU909014B/B1 and MU909015B/B1, change the wavelength in the **Test Setup** screen and repeat steps 5 to 9 over.

11.1.4 Dynamic range

Check that the dynamic range (One-way back-scattered light dynamic range) satisfies the specification.

The measurement method depends on the model.

<MU909014A/A1, MU909015A6 Test Procedure>

At MU909014A/A1, MU909015A6 dynamic range measurement, background light is input using the light source.

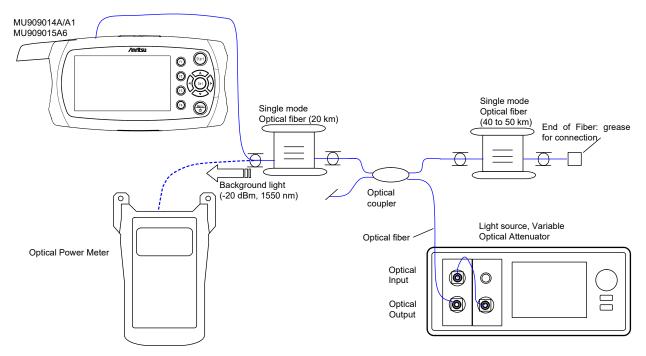


Figure 11.1.4-1 Dynamic Range Test - Connection Diagram (MU909014A/A1, MU909015A6)

- 1. Connect the light source, variable optical attenuator, optical coupler, single-mode fiber, and optical power meter as shown in Figure 11.1.4-1.
- 2. Set the power meter wavelength to 1550 nm.
- 3. Set the light source optical output to on.
- 4. Adjust the attenuation of the variable optical attenuator so the power meter displays -20 ± 0.1 dBm.
- 5. Disconnect the fiber connected to the power meter and connect to the main frame.
- 6. Press [1] (**Test Setup**) in any of the following screens.
 - Trace Analysis screen
 - Trace View screen
- 7. Clear Full Auto.

- 8. Press (2) to select Average.
- 9. Press (3) to set the wavelength to 1625 nm or 1650 nm.
- 10. Set Pulse width to 500 ns.
- 11. Set Resolution to Coarse.
- 12. Set Averaging to 180 s.
- 13. Set Loss Mode to 2-pt Loss.
- 14. Press Start. Confirm that the measured light is displayed at the top of the screen.
- 15. When measurement is completed, move cursor A to the position of the optical output connector (see Figure 11.1.4-2).
- 16. Move cursor B to the peak noise position and record the 2-pt Loss.
- 17. Add 2.6 dB to the value recorded at step 15. Record the measured result.
- 18. Set **Pulse Width** as described in step 10 to 20 μ s. Repeat steps 14 to 17 over.

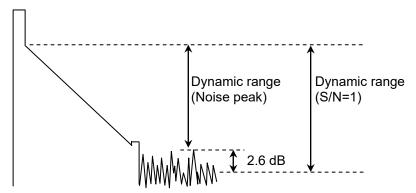


Figure 11.1.4-2 Dynamic Range Test - Connection Diagram

<MU909014B/B1/C/C6, MU909015B/B1/C/C6 Test Procedure>

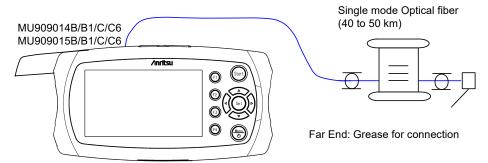


Figure 11.1.4-3 Dynamic Range Measurement Setup (MU909014B/B1/C/C6, MU909015B/B1/C/C6)

- 1. Connect the devices as shown in Figure 11.1.4-3.
- 2. Press (Test Setup) in any of the following screens.
 - Trace Analysis screen
 - Trace View screen
- 3. Clear Full Auto.
- 4. Press (F2) to select Average.
- 5. Press (53) to set Wavelength to 1310 nm.
- 6. Set Pulse width to **500 ns**.
- 7. Set Resolution to Coarse.
- 8. Set Averaging to 180 s.
- 9. Set Loss Mode to **2-pt Loss**.
- 10. Press Start. Confirm that the measured light is displayed at the top of the screen.
- 11. When measurement is completed, move cursor A to the position of the optical output connector (see Figure 11.1.4-2).
- 12. Move cursor B to the peak noise position and record the 2-pt Loss.
- 13. Add 2.6 dB to the value recorded at step 12. Record the measured result.
- 14. Set Pulse Width as described in step 6 to 20 μ s. Repeat steps 10 to 13 over.
- 15. Change the wavelength in the **Test Setup** screen and repeat steps 10 to 14 over.

11.1.5 Distance Measurement Accuracy

Measure the optical fiber whose length and refraction index are known, then perform a horizontal axis (i.e., measurement distance) accuracy test. This is not required for other ranges when this test is performed at a certain distance range.



Figure 11.1.5-1 Distance Measurement Accuracy Test - Connection Diagram

- 1. Connect the modules as shown in Figure 11.1.5-1.
- 2. Press (Test Setup) in any of the following screens.
 - Trace Analysis screen
 - Trace View screen
- 3. Clear Full Auto.
- 4. Press F2 to select Average.
- 5. Set Range to 5 km.
- 6. Set Pulse width to 10 ns.
- 7. Set Averaging to 180 s.
- 8. Set Loss Mode to **2-pt Loss**.
- 9. Set the optical fiber's index of refraction to IOR.
- 10. Press star. Confirm that the measured light is displayed at the top of the screen.
- 11. When the measurement is complete, press (2) to select Cursor.
- 12 Press set to select Cursor A. Move the cursor A to the 0 km position.
- 13. Press set to select Cursor B.
- 14. Move the cursor to the location of Fresnel reflection. (See Figure 11.1.5-2.)
- 15. Press (F3) to select **B**.
- 16. Press (E2) to select **Zoom**.
- 17. Press and set the horizontal-axis scale to 0.005 km/div.

- 18. Press [2] to select Cursor.
- 19. Align cursor B precisely with the rise point of the Fresnel reflection. Record the measured result.
- 20. For the MU909014C/C6/MU909015A6/C/C6, change the wavelength in the **Test Setup** screen and repeat over from step 5 to 19.

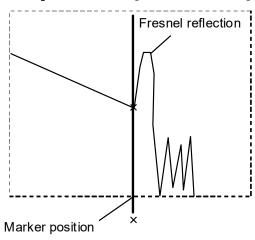


Figure 11.1.5-2 Waveform Measurement Position

11.1.6 Linearity

Confirm the accuracy (level measurement) of the vertical axis.

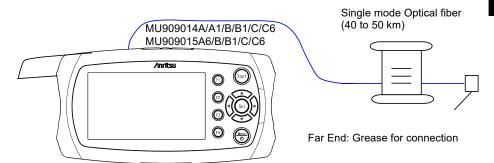


Figure 11.1.6-1 Linearity Measurement Connection Diagram

<Test procedure for one fiber setup>

- 1. Connect the modules as shown in Figure 11.1.6-1.
- 2. Press (Test Setup) in any of the following screens.
 - Trace Analysis screen
 - Trace View screen
- 3. Clear **Full Auto**.
- 5. Press F2 to select Average.
- 6. Set Pulse Width to 100 ns.
- 7. Set Averaging to **180 s**.
- 8. Set Loss Mode to dB/km LSA.
- 9. Press (start). Confirm that the measured light is displayed at the top of the screen.
- 10. When the measurement is complete, move the cursor A to the 0 km position.

For the wavelength 1625/1650 nm:

- 11. Move cursor B to the 4 km position and record the measured value.
- 12. Move cursor A to the 2 km position.
- 13. Move cursor B to the 6 km position and record the measured value.
- 14. Move cursor A and cursor B in 2-km increments until cursor B reaches the 30 km position and record the measured value (Figure 11.1.6-2).
- 15. Calculate the average of the values recorded from steps 11 to 14.
- 16. Calculate the difference between the value calculated in step 15 and the values recorded in steps 11 to 14 and multiply this value by 4.

For the wavelength 1310/1550 nm:

- 11. Move cursor B to the 3 km position and record the measured value.
- 12. Move cursor A to the 1.5 km position.
- 13. Move cursor B to the $4.5~\mathrm{km}$ position and record the measured value.
- 14. Move cursor A and cursor B in 1.5-km increments until cursor B reaches the 30 km position and record the measured value (Figure 11.1.6-2).
- 15. Calculate the average of the values recorded from steps 11 to 14.
- 16. Calculate the difference between the value calculated in step 15 and the values recorded in steps 11 to 14 and multiply this value by 3.

<Test Procedure for multi-fiber setup >

For the wavelength 1625/1650 nm:

- 1. Perform the same operations as described for <Test procedure for one fiber setup> up to step 11.
- 2. Move cursor B to the 4 km position and record the measured value.
- 3. With cursor B inside the connection point range, move cursor A and cursor B in 2-km increments and measure the measured value.
- 4. Calculate the average of the values recorded from steps 2 to 3.
- 5. Calculate the difference between the value calculated in step 15 and the values recorded in steps 2 to 3 and multiply this value by 4.
- 6. Move cursor A to a position that is a multiple of 2 km further than the connection point.
- 7. Move cursor B to a position 4 km from cursor A and record the dB/km LSA.
- 8. With cursor B inside the next connection point range, move cursor A and cursor B in 2-km increments and measure the measured value.
- 9. Calculate the average of the values recorded from steps 7 to 8.
- 10. Calculate the difference between the value calculated in step 9 and the values recorded in steps 7 to 8 and multiply this value by 4.
- 11. Move cursor B to a position 4 km from cursor A and record the measured value.
- 12. Repeat steps 6 to 10 until cursor B reaches the 30 km position.

<Test Procedure for multi-fiber setup> For the wavelength 1310/1550 nm

- 1. Perform the same operations as described for <Test procedure for one fiber setup> up to step 11.
- 2. Move cursor B to the 3 km position and record the measured value.
- 3. With cursor B inside the connection point range, move cursor A and cursor B in 1.5-km increments and measure the measured value.
- 4. Calculate the average of the values recorded from steps 2 to 3.
- 5. Calculate the difference between the value calculated in step 4 and the values recorded in steps 2 to 3 and multiply this value by 3.
- 6. Move cursor A to a position that is a multiple of 1.5 km further than the connection point.
- 7. Move cursor B to a position 3 km from cursor A and record the measured value.
- 8. With cursor B inside the next connection point range, move cursor A and cursor B in 1.5-km increments and measure the measured value.
- 9. Calculate the average of the values recorded from steps 7 to 8.
- 10. Calculate the difference between the value calculated in step 9 and the values recorded in steps 7 to 8 and multiply this value by 3.
- 11. Move cursor B to a position 3 km from cursor A and record the measured value.
- 12. Repeat steps 6 to 10 until cursor B reaches the 30 km position.

Example: When connecting fiber (16 km x 2) for the wavelength 1625 nm or 1650 nm

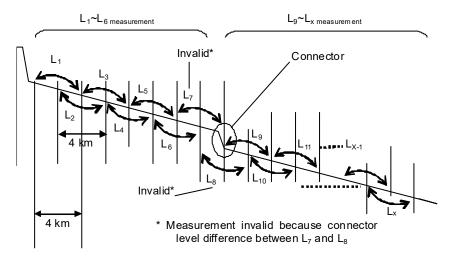


Figure 11.1.6-2 Loss Measurement Positions

```
\begin{split} L_1 \text{ to } L_6 \text{ Measurement} \\ \text{Mean value } L_{ave\_1} &= (L_1 + L_2 + L_3 + L_4 + L_5 + L_6)/6 \\ L_{diff\_1} &= (L_1 - L_{ave\_1}) \times 4 \\ L_{diff\_2} &= (L_2 - L_{ave\_1}) \times 4 \\ \dots \\ L_{diff\_6} &= (L_6 - L_{ave\_1}) \times 4 \\ L_9 \sim L_x \text{ Measurement} \\ \text{Mean value } L_{ave\_2} &= (L_9 + L_{10} + L_{11} + \dots + L_x)/(x - 9 + 1) \\ L_{diff\_9} &= (L_9 - L_{ave\_2}) \times 4 \\ L_{diff\_10} &= (L_{10} - L_{ave\_2}) \times 4 \\ \dots \\ L_{diff\_x} &= (L_x - L_{ave\_2}) \times 4 \\ \text{Confirm that } L_{diff\_n} \{L_{diff\_1}, L_{diff\_2}, \dots L_{diff\_6}, L_{diff\_9}, \dots L_{diff\_x} \} \text{ is within } \pm 0.1. \end{split}
```

11.1.7 Dead Zone

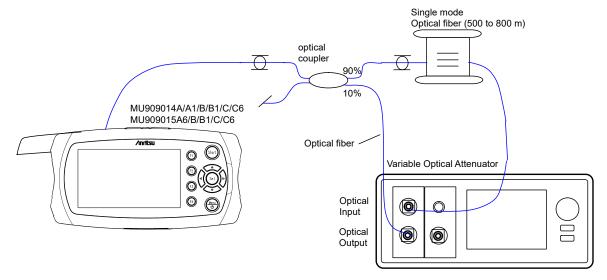


Figure 11.1.7-1 Dead Zone Measurement Setup

- 1. Connect the devices as shown in Figure 11.1.7-1.
- 2. Press (Test Setup) in any of the following screens.
 - Trace Analysis screen
 - Trace View screen
- 3. Clear Full Auto.
- 4. Press (2) to select Average.
- 5. When using other than the MU909014A/A1 and MU909015A6, press (Wavelength) to select 1310 nm.
- 6. Set Range to 25 km.
- 7. Set Resolution to Medium.
- 8. Set Pulse width to **500 ns**.
- 9. Set Averaging to 10 s.
- 10. Press start. Confirm that the measured light is displayed at the top of the screen.
- 11. After measurement is completed, press [F4] (Trace Analysis).
- 12. Confirm the Fresnel reflection return loss at the 300 to 400 m point in the event table.
- 13. Adjust the attenuation of the variable optical attenuator so the return loss becomes 45 ± 0.2 dB.

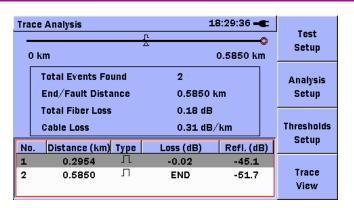


Figure 11.1.7-2 Return Loss Setup Example

- 14. Repeat steps 10 to 13 until the return loss in the event table becomes 45 ± 0.2 dB.
- 15. Press (Test Setup).
- 16. Set Range to 1 km.
- 17. Set Resolution to Medium.
- 18. Set Pulse width to 5 ns.
- 19. Set Averaging to 10 s.
- 20. Set Loss Mode to 2-pt Loss.
- 21. Press (sar). Confirm that the measured light is displayed at the top of the screen.
- 22. When the measurement is complete, press (22) to select Cursor.
- 23. Press set to select Cursor A.
- 24. Move cursor A to the position before the Fresnel reflection where the level is 1.5 dB lower than Fresnel reflection peak.
- 25. Press set to select Cursor B.
- 26. Move cursor B to the position after the Fresnel reflection where the level is 1.5 dB lower than the Fresnel reflection peak.

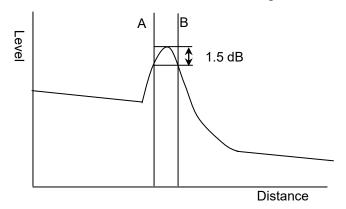


Figure 11.1.7-3 Cursor Position to Measure Fresnel Dead Zone

- 27. Record the difference in the position of cursor A and cursor B (Fresnel dead zone).
- 28. Move cursor B to a position 0.5 dB higher than the BSC level of the Fresnel reflection.
- 29. Press so to select Cursor A.
- 30. Move cursor A to the rising position of the Fresnel reflection.

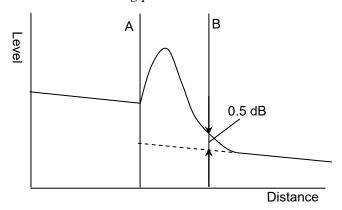


Figure 11.1.7-4 Cursor Position to Measure Backscatter coefficient Dead Zone

- 31. Record the difference in the position of cursor A and cursor B (backscatter coefficient dead zone)
- 32. For the MU909014B/B1 and MU909015B/B1, change the wavelength in the **Test Setup** screen and repeat over from step 5 to 31.

11.1.8 Optical output power and wavelength of Visual Fault Locator (VFL)

Check that the output power level and wavelength of the optional Visual Fault Locator (the VFL is a Visible Laser Diode) satisfy their respective specifications.

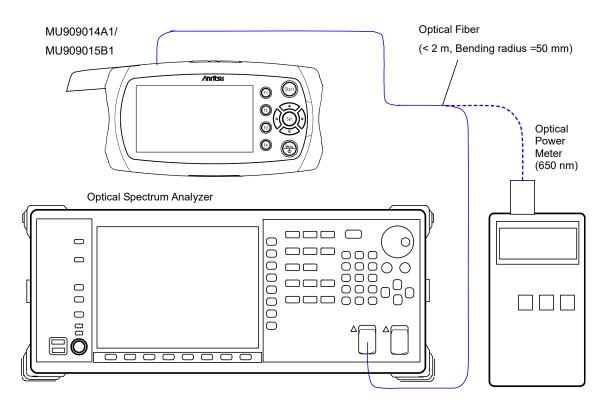


Figure 11.1.8-1 Optical Power Level and Wavelength of VFL Test - Connection Diagram

Test Procedure:

- 1. Connect the devices as shown in Figure 11.1.8-1.
- 2. Set the optical spectrum analyzer as follows:

Center: 650 nm Span: 50 nm Res: 0.05 nm VBW: 1 kHz

Sampling Point: 2001

Analysis: Threshold, Cut.Level: 3 dB

- 3. Press Menu
- 4. Highlight **VFL**, and then press set
- 5. Highlight CW, and then press (Set).
- 6. Measure the center wavelength of the spectrum analyzer and record the result.
- 7. Set the optical power meter wavelength to 650 nm.

- 8. Connect the VFL output of the main frame to the optical power meter as shown in Figure 11.1.8-1.
- 9. Measure the output level with the optical power meter and record the result.

Note:

Set VFL to \boldsymbol{CW} and test the wavelength and optical output performance.

Do not set VFL to \boldsymbol{MOD} when testing performance.

11.1.9 Optical output power and wavelength of Light Source

Confirm that the wavelength and optical output level of the light source satisfy their respective specifications.

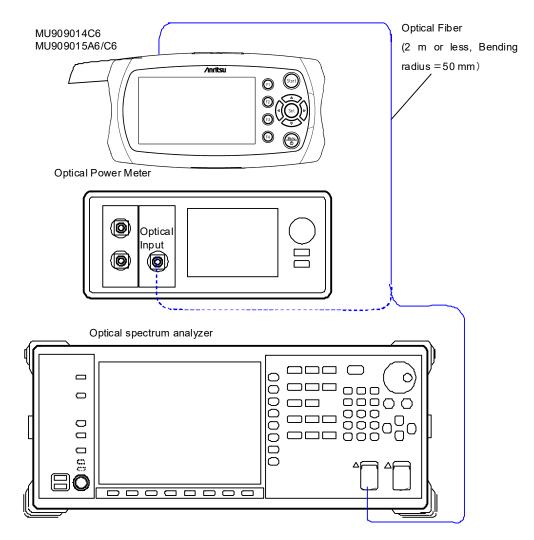


Figure 11.1.9-1 Light Source Test Connection Diagram

Test Procedure:

The test procedure is described below, taking the 1310-nm wavelength of MU909014C6 and MU909015C6 as an example. For the test for other wavelengths, change the waveform setting for the optical spectrum analyzer and optical power meter.

- 1. Connect the devices as shown in Figure 11.1.9-1.
- 2. Set the optical spectrum analyzer as follows:

Center: 1310 nm Span: 50 nm Res: 0.05 nm VBW: 1 kHz

Sampling Point: 2001

Analysis: Threshold, Cut.Level: 3 dB

3. Press Menu O.

5.

- 4. Highlight the top menu, and then press (Set).
 - Highlight Light Source, and then press [84].
- 6. Press [1] (Wavelength) to set Wavelength to 1310 nm.
- 7. Press (Modulation) to set to CW.
- 8. Press (start) to change the display to **On**.
- 9. Measure the center wavelength of the optical spectrum analyzer and record the result.
- 10. Connect the light source output of the unit to the optical power meter as shown in Figure 11.1.9-1.
- 11. Measure the optical output level with the optical power meter and record the result.

11.1.10 Measurement accuracy of optical power meter and PON power meter

Confirm that the measurement accuracy of the power meter satisfy the specifications. Be sure to execute the zero offset of the optical power meter before measurement.

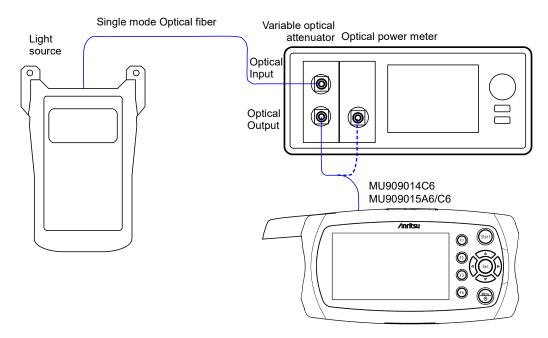


Figure 11.1.10-1 Optical Power Meter Measurement Accuracy Test Connection Diagram

Test Procedure:

The test procedure is described below, taking the 1550-nm wavelength of MU909014C6 and MU909015C6 as an example. For the test for other wavelengths, change the waveform setting for the light source and optical power meter.

- 1. Connect the light source and variable optical attenuator using optical fiber as shown in Figure 11.1.10-1.
- 2. Use an optical fiber to connect the output of the variable optical attenuator to the optical power meter.
- 3. Set the wavelength of the light source to 1550 nm and output the signal.
- 4. Set the wavelength of the optical power meter to 1550 nm.
- 5. Adjust the attenuation of the variable optical attenuator so that the optical power meter displays -20 ± 0.005 dBm. Record the level display of the optical power meter.

- Disconnect the fiber connected to the power meter and connect to the main frame.
- Press (Menu). 7.



Highlight **Top Menu**, and then press Set.



- Highlight **Power Meter**, and then press Set
- 10. Press (Wavelength) to select 1550 nm.
- 11. Press (Modulation) to set to CW.
- 12. Record the display of the unit.
- 13. Calculate the difference between the display levels recorded at steps 5 and 11.
- 14. For models with the PON power meter, press (Menu).



- 15. Select **Top Menu**, and then press (Set).
- 16. Select **PON Power Meter**, and then press (Set).
- 17. Press (Mode) to change the display to dBm.
- 18. Record the power display for 1550 nm.

11.2 Calibration

The parameters that can be calibrated are the Backscatter coefficient (BSC) level and the measurement accuracy of OPM (Optical Power Meter).

11.2.1 Backscatter coefficient level calibration

Table 11.2.1-1 Requirements for backscatter coefficient level calibration

| Item | Rated values | Quantity |
|-------------------|------------------------|----------|
| SM Optical Fiber | 5 km or longer | 2 |
| Optical Connector | With known return loss | 1 |

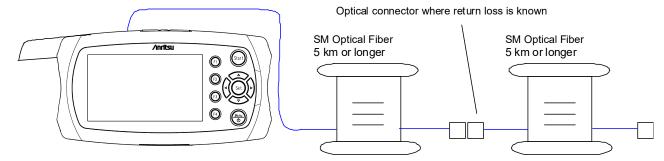


Figure 11.2.1-1 Backscatter Coefficient Level Calibration – Connection Diagram

Calibration Procedure:

- 1. Prepare an optical connector with a known return loss of R0 dB and connect it with an optical fiber to the main frame as shown in Figure 11.2.1-1.
- 2. Press (Start to start the measurement.
- 3. After measurement is completed, press [54] (**Trace Analysis**) in the Trace View Screen
- 4. Confirm that the connector event is displayed in the screen and record the return loss. This value is assumed to be R₁ dB.
- 5. Find the difference between this value and R_0 dB as $\Delta R = (R_1 R_0)$.
- 6. Press (Test Setup).
- 7. Set the sum of the currently set BSC value and ΔR .
- 8. Repeat steps 2 to 7 over; calibration is completed when the displayed return losses become the same as the value of R_0 .

11.2.2 Measurement accuracy of optical power meter

To maintain the performance of this power meter, we recommend that calibration be performed once or twice a year.

Please contact Anritsu for calibration of the OPM measurement accuracy.

11.3 Performance Test Result Sheet

| Document Numbe | <u>r:</u> | | | _ |
|-------------------|-----------|-----------|---------------|---|
| Test site: | | | | |
| Date: | | | | |
| Test supervisor: | | | | - |
| Equipment Name | : | | | - |
| Serial No.: | | | | - |
| Software version: | | | | |
| Option: | | | | |
| Ambient temperat | cure | °C | | |
| Relative humidity | 9 | <u>⁄6</u> | | |
| Equipment used: | Model | | Serial number | |
| | Model | | Serial number | |
| | Model | | Serial number | |
| | Model | | Serial number | |
| Remarks | | | | |
| | | | | |
| | | | | |

Table 11.3-1 Wavelength

| Wavelength Settings | Minimum Value | Measured Value | Maximum Value | Measurement Uncertainty | Pass/Fail |
|------------------------|------------------|-------------------|------------------|----------------------------|-----------|
| 1310 nm | 1285 nm | nm | 1335 nm | | Pass/Fail |
| 1490 nm | 1465 nm | nm | 1515 nm | | Pass/Fail |
| 1550 nm | 1525 nm | nm | 1575 nm | | Pass/Fail |
| 1625 nm | 1610 nm | nm | 1640 nm | | Pass/Fail |
| 1650 nm | 1635 nm | nm | 1665 nm | | Pass/Fail |

Table 11.3-2 Pulse Width (Wavelength 1310 nm)

| Pulsewidth Settings | Minimum Value | Measured Value | Maximum Value* | Measurement Uncertainty | Pass/Fail |
|------------------------|------------------|-------------------|-------------------|----------------------------|-----------|
| 5 ns | | ns | | | |
| 10 ns | 7 ns | ns | 13 ns | | Pass/Fail |
| 20 ns | 14 ns | ns | 26 ns | | Pass/Fail |
| 50 ns | 35 ns | ns | 65 ns | | Pass/Fail |
| 100 ns | 85 ns | ns | 115 ns | | Pass/Fail |
| 200 ns | 170 ns | ns | 230 ns | | Pass/Fail |
| 500 ns | 465 ns | ns | 535 ns | | Pass/Fail |
| 1 μs | 0.93 µs | μs | 1.07 µs | | Pass/Fail |
| 2 μs | 1.86 µs | μs | 2.14 µs | | Pass/Fail |
| 5 μs | 4.65 μs | μs | 5.35 μs | | Pass/Fail |
| 10 μs | 9.3 µs | μs | 10.7 μs | | Pass/Fail |
| 20 μs | 18.6 µs | μs | 21.4 μs | | Pass/Fail |

Table 11.3-3 Pulse Width (Wavelength 1490 nm)

| Pulsewidth Settings | Minimum Value | Measured Value | Maximum Value* | Measurement Uncertainty | Pass/Fail |
|------------------------|------------------|-------------------|-------------------|----------------------------|-----------|
| 5 ns | | ns | | | |
| 10 ns | 7 ns | ns | 13 ns | | Pass/Fail |
| 20 ns | 14 ns | ns | 26 ns | | Pass/Fail |
| 50 ns | 35 ns | ns | 65 ns | | Pass/Fail |
| 100 ns | 85 ns | ns | 115 ns | | Pass/Fail |
| 200 ns | 170 ns | ns | 230 ns | | Pass/Fail |
| 500 ns | 465 ns | ns | 535 ns | | Pass/Fail |
| 1 μs | 0.93 µs | μs | 1.07 µs | | Pass/Fail |
| 2 μs | 1.86 µs | μs | 2.14 µs | | Pass/Fail |
| 5 μs | 4.65 μs | μs | 5.35 µs | | Pass/Fail |
| 10 μs | 9.3 µs | μs | 10.7 μs | | Pass/Fail |
| 20 μs | 18.6 μs | μs | 21.4 μs | | Pass/Fail |

Table 11.3-4 Pulse Width (Wavelength 1550 nm)

| Pulsewidth Settings | Minimum Value | Measured Value | Maximum Value* | Measurement Uncertainty | Pass/Fail |
|------------------------|------------------|-------------------|-------------------|----------------------------|-----------|
| 5 ns | | ns | | | |
| 10 ns | 7 ns | ns | 13 ns | | Pass/Fail |
| 20 ns | 14 ns | ns | 26 ns | | Pass/Fail |
| 50 ns | 35 ns | ns | 65 ns | | Pass/Fail |
| 100 ns | 85 ns | ns | 115 ns | | Pass/Fail |
| 200 ns | 170 ns | ns | 230 ns | | Pass/Fail |
| 500 ns | 465 ns | ns | 535 ns | | Pass/Fail |
| 1 μs | 0.93 µs | μs | 1.07 µs | | Pass/Fail |
| 2 μs | 1.86 µs | μs | 2.14 μs | | Pass/Fail |
| 5 μs | 4.65 μs | μs | 5.35 µs | | Pass/Fail |
| 10 μs | 9.3 µs | μs | 10.7 μs | | Pass/Fail |
| 20 μs | 18.6 μs | μs | 21.4 µs | | Pass/Fail |

Table 11.3-5 Pulse Width (Wavelength 1625 nm)

| Pulsewidth Settings | Minimum Value | Measured Value | Maximum Value* | Measurement Uncertainty | Pass/Fail |
|------------------------|------------------|-------------------|-------------------|----------------------------|-----------|
| 5 ns | | ns | | | |
| 10 ns | 7 ns | ns | 13 ns | | Pass/Fail |
| 20 ns | 14 ns | ns | 26 ns | | Pass/Fail |
| 50 ns | 35 ns | ns | 65 ns | | Pass/Fail |
| 100 ns | 85 ns | ns | 115 ns | | Pass/Fail |
| 200 ns | 170 ns | ns | 230 ns | | Pass/Fail |
| 500 ns | 465 ns | ns | 535 ns | | Pass/Fail |
| 1 μs | 0.93 µs | μs | 1.07 µs | | Pass/Fail |
| 2 μs | 1.86 µs | μs | 2.14 μs | | Pass/Fail |
| 5 μs | 4.65 μs | μs | 5.35 μs | | Pass/Fail |
| 10 μs | 9.3 µs | μs | 10.7 μs | | Pass/Fail |
| 20 μs | 18.6 μs | μs | 21.4 μs | | Pass/Fail |

Table 11.3-6 Pulse Width (Wavelength 1650 nm)

| Pulsewidth Settings | Minimum Value | Measured Value | Maximum Value* | Measurement Uncertainty | Pass/Fail |
|------------------------|------------------|-------------------|-------------------|----------------------------|-----------|
| 5 ns | | ns | | | |
| 10 ns | 7 ns | ns | 13 ns | | Pass/Fail |
| 20 ns | 14 ns | ns | 26 ns | | Pass/Fail |
| 50 ns | 35 ns | ns | 65 ns | | Pass/Fail |
| 100 ns | 85 ns | ns | 115 ns | | Pass/Fail |
| 200 ns | 170 ns | ns | 230 ns | | Pass/Fail |
| 500 ns | 465 ns | ns | 535 ns | | Pass/Fail |
| 1 μs | 0.93 µs | μs | 1.07 µs | | Pass/Fail |
| 2 μs | 1.86 µs | μs | 2.14 μs | | Pass/Fail |
| 5 μs | 4.65 μs | μs | 5.35 μs | | Pass/Fail |
| 10 μs | 9.3 µs | μs | 10.7 μs | | Pass/Fail |
| 20 μs | 18.6 μs | μs | 21.4 μs | | Pass/Fail |

Table 11.3-7 Dynamic Range MU909014B/B1 (Wavelength 1310 nm)

| Pulsewidth Settings | Minimum Value | Measured Value | Measurement Uncertainty | Pass/Fail |
|------------------------|---------------|----------------|----------------------------|-----------|
| 500 ns | 23.5 dB | dB | | Pass/Fail |
| 20 μs | 31.5 dB | dB | | Pass/Fail |

Table 11.3-8 Dynamic Range MU909014B/B1 (Wavelength 1550 nm)

| Pulsewidth Settings | Minimum Value | Measured Value | Measurement Uncertainty | Pass/Fail |
|------------------------|---------------|----------------|----------------------------|-----------|
| 500 ns | 22 dB | dB | | Pass/Fail |
| 20 μs | 30 dB | dB | | Pass/Fail |

Table 11.3-9 Dynamic Range MU909015B/B1 (Wavelength 1310 nm)

| Pulsewidth Settings | Minimum Value | Measured Value | Measurement Uncertainty | Pass/Fail |
|------------------------|---------------|----------------|----------------------------|-----------|
| 500 ns | 27 dB | dB | | Pass/Fail |
| 20 μs | 36 dB | dB | | Pass/Fail |

Table 11.3-10 Dynamic Range MU909015B/B1 (Wavelength 1550 nm)

| Pulsewidth Settings | Minimum Value | Measured Value | Measurement Uncertainty | Pass/Fail |
|------------------------|---------------|----------------|----------------------------|-----------|
| 500 ns | 25 dB | dB | | Pass/Fail |
| 20 μs | 35 dB | dB | | Pass/Fail |

Table 11.3-11 Dynamic Range MU909014A/A1 (Wavelength 1625 nm)

| Pulsewidth Settings | Minimum Value | Measured Value | Measurement Uncertainty | Pass/Fail |
|------------------------|---------------|----------------|----------------------------|-----------|
| 500 ns | 23.5 dB | dB | | Pass/Fail |
| 20 μs | 31.5 dB | dB | | Pass/Fail |

Table 11.3-12 Dynamic Range MU909014A/A1 (Wavelength 1650 nm)

| Pulsewidth Settings | Minimum Value | Measured Value | Measurement Uncertainty | Pass/Fail |
|------------------------|---------------|----------------|----------------------------|-----------|
| 500 ns | 23 dB | dB | | Pass/Fail |
| 20 μs | 31.5 dB | dB | | Pass/Fail |

Table 11.3-13 Dynamic Range (MU909014C/C6-057/067/058/068)

| Wavelength | Pulsewidth Settings | Minimum Value | Measured Value | Measurement Uncertainty | Pass/Fail |
|------------|------------------------|--------------------|-------------------|----------------------------|-----------|
| 1310 nm | 500 ns | $23.5~\mathrm{dB}$ | dB | | Pass/Fail |
| | 20 μs | 31.5 dB | dB | | Pass/Fail |
| 1550 nm | 500 ns | 22 dB | dB | | Pass/Fail |
| | 20 μs | 30 dB | dB | | Pass/Fail |
| 1625 nm | 500 ns | 23 dB | dB | | Pass/Fail |
| | 20 μs | 31.5 dB | dB | | Pass/Fail |
| 1650 nm | 500 ns | 22 dB | dB | | Pass/Fail |
| | 20 μs | 31.5 dB | dB | | Pass/Fail |

Table 11.3-14 Dynamic Range (MU909015A6/C/C6-057/067/058/068)

| Wavelength | Pulsewidth Settings | Minimum Value | Measured Value | Measurement Uncertainty | Pass/Fail |
|------------|------------------------|------------------|-------------------|----------------------------|-----------|
| 1310 nm | 500 ns | 26 dB | dB | | Pass/Fail |
| | 20 μs | 37 dB | dB | | Pass/Fail |
| 1550 nm | 500 ns | 25 dB | dB | | Pass/Fail |
| | 20 μs | 36 dB | dB | | Pass/Fail |
| 1625 nm | 500 ns | 24 dB | dB | | Pass/Fail |
| | 20 μs | 34 dB | dB | | Pass/Fail |
| 1650 nm | 500 ns | 24 dB | dB | | Pass/Fail |
| | 20 μs | 34 dB | dB | | Pass/Fail |

Table 11.3-15 Dynamic Range (MU909015/C/C6-059/069)

| Wavelength | Pulsewidth Settings | Minimum Value | Measured Value | Measurement Uncertainty | Pass/Fail |
|------------|------------------------|------------------|-------------------|----------------------------|-----------|
| 1310 nm | 500 ns | 25 dB | dB | | Pass/Fail |
| | 20 μs | 36 dB | dB | | Pass/Fail |
| 1490 nm | 500 ns | 24 dB | dB | | Pass/Fail |
| | 20 μs | 35 dB | dB | | Pass/Fail |
| 1550 nm | 500 ns | 24 dB | dB | | Pass/Fail |
| | 20 μs | 35 dB | dB | | Pass/Fail |

Table 11.3-16 Distance Measurement Accuracy

| Length of Optical Fiber (km) | Measured Value (km) | Minimum Value (m) | Difference (m) | Maximum Value (m) | Pass/Fail |
|------------------------------------|------------------------|----------------------|-------------------|----------------------|-----------|
| | | -1.35 | | 1.35 | Pass/Fail |

Specifications: $\pm 1~\text{m} \pm (3~\text{m} \times \text{measured distance (m)} \times 10^{\text{-5}}) \pm \text{marker}$ resolution

When Range is 5 km and the horizontal scale is 0.005 km/div, the measurement range is 5000 m and the marker resolution is 0.2 m.

Table 11.3-17 Linearity (Wavelength 1625 nm, 1650 nm)

| | | | | Difference | | |
|---------------------------------|---------------------------------|-----------------|-----------------------|-------------------------------|-----------------------|-----------|
| Location of Cursor A (km) | Location of Cursor B (km) | Loss (dB/km) | Minimum Value (dB) | from Mean Loss x 4 (dB) | Maximum Value (dB) | Pass/Fail |
| 0 | 4 | | -0.1 | | 0.1 | Pass/Fail |
| 2 | 6 | | -0.1 | | 0.1 | Pass/Fail |
| 4 | 8 | | -0.1 | | 0.1 | Pass/Fail |
| 6 | 10 | | -0.1 | | 0.1 | Pass/Fail |
| 8 | 12 | | -0.1 | | 0.1 | Pass/Fail |
| 10 | 14 | | -0.1 | | 0.1 | Pass/Fail |
| 12 | 16 | | -0.1 | | 0.1 | Pass/Fail |
| 14 | 18 | | -0.1 | | 0.1 | Pass/Fail |
| 16 | 20 | | -0.1 | | 0.1 | Pass/Fail |
| 18 | 22 | | -0.1 | | 0.1 | Pass/Fail |
| 20 | 24 | | -0.1 | | 0.1 | Pass/Fail |
| 22 | 26 | | -0.1 | | 0.1 | Pass/Fail |
| 24 | 28 | | -0.1 | | 0.1 | Pass/Fail |
| 26 | 30 | | -0.1 | | 0.1 | Pass/Fail |

 Mean 1
 (dB/km)

 Mean 2
 (dB/km)

Table 11.3-18 Linearity (Wavelength 1310 nm)

| Location of Cursor A (km) | Location of Cursor B (km) | Loss (dB/km) | Minimum Value (dB) | Difference from Mean Loss x 3 (dB) | Maximum Value (dB) | Pass/Fail |
|---------------------------------|---------------------------------|-----------------|-----------------------|---|-----------------------|-----------|
| 0 | 3 | | -0.1 | | 0.1 | Pass/Fail |
| 1.5 | 4.5 | | -0.1 | | 0.1 | Pass/Fail |
| 3 | 6 | | -0.1 | | 0.1 | Pass/Fail |
| 4.5 | 7.5 | | -0.1 | | 0.1 | Pass/Fail |
| 6 | 9 | | -0.1 | | 0.1 | Pass/Fail |
| 7.5 | 10.5 | | -0.1 | | 0.1 | Pass/Fail |
| 9 | 12 | | -0.1 | | 0.1 | Pass/Fail |
| 10.5 | 13.5 | | -0.1 | | 0.1 | Pass/Fail |
| 12 | 15 | | -0.1 | | 0.1 | Pass/Fail |
| 13.5 | 16.5 | | -0.1 | | 0.1 | Pass/Fail |
| 15 | 18 | | -0.1 | | 0.1 | Pass/Fail |
| 16.5 | 19.5 | | -0.1 | | 0.1 | Pass/Fail |
| 18 | 21 | | -0.1 | | 0.1 | Pass/Fail |
| 19.5 | 22.5 | | -0.1 | | 0.1 | Pass/Fail |
| 21 | 24 | | -0.1 | | 0.1 | Pass/Fail |
| 22.5 | 25.5 | | -0.1 | | 0.1 | Pass/Fail |
| 24 | 27 | | -0.1 | | 0.1 | Pass/Fail |
| 25.5 | 28.5 | | -0.1 | | 0.1 | Pass/Fail |
| 27 | 30 | | -0.1 | | 0.1 | Pass/Fail |

Mean 1 (dB/km), Mean 2 (dB/km)

Table 11.3-19 Fresnel Dead Zone

| Wavelength (nm) | Measured Value | Maximum Value | Measurement Uncertainty | Pass/Fail |
|-----------------|-------------------|------------------|----------------------------|-----------|
| 1310 | m | 0.8 m | | Pass/Fail |
| 1490 | m | 0.8 m | | Pass/Fail |
| 1550 | m | 0.8 m | | Pass/Fail |
| 1625 | m | 0.8 m | | Pass/Fail |
| 1650 | m | 0.8 m | | Pass/Fail |

Table 11.3-20 MU909014A/A1/B/B1, MU909015B/B1 Backscatter Dead Zone

| Wavelength (nm) | Measured Value | Maximum Value | Measurement Uncertainty | Pass/Fail |
|-----------------|-------------------|------------------|----------------------------|-----------|
| 1310 | m | 5.0 m | | Pass/Fail |
| 1550 | m | 5.0 m | | Pass/Fail |
| 1625 | m | 5.0 m | | Pass/Fail |
| 1650 | m | 5.0 m | | Pass/Fail |

Table 11.3-21 MU909014C/C6, MU909015A6/C/C6
Backscatter Dead Zone

| Wavelength (nm) | Measured Value | Maximum Value | Measurement Uncertainty | Pass/Fail |
|-----------------|-------------------|------------------|----------------------------|-----------|
| 1310 | m | 4.0 m | | Pass/Fail |
| 1490 | m | 4.5 m | | Pass/Fail |
| 1550 | m | 4.5 m | | Pass/Fail |
| 1625 | m | 4.5 m | | Pass/Fail |
| 1650 | m | 4.5 m | | Pass/Fail |

Table 11.3-22 Light Source

| Item | Wavelength (nm) | Minimum Value | Measured Value | Maximum Value | Measurement Uncertainty | Pass/Fail |
|------------|-----------------|------------------|-------------------|------------------|----------------------------|-----------|
| Wavelength | 1310 nm | 1285 nm | nm | 1335 nm | | Pass/Fail |
| | 1490 nm | 1465 nm | nm | 1515 nm | | Pass/Fail |
| | 1550 nm | 1525 nm | nm | 1575 nm | | Pass/Fail |
| | 1625 nm | 1600 nm | nm | 1650 nm | | Pass/Fail |
| | 1650 nm | 1625 nm | nm | 1675 nm | | Pass/Fail |
| Level | 1310 nm | -6.5 dBm | dBm | -3.5 dBm | | Pass/Fail |
| | 1550 nm | -6.5 dBm | dBm | -3.5 dBm | | Pass/Fail |
| | 1625 nm | -6.5 dBm | dBm | -3.5 dBm | | Pass/Fail |
| | 1650 nm | -6.5 dBm | dBm | −3.5 dBm | | Pass/Fail |

Table 11.3-23 VFL

| Item | Minimum Value | Measured Value | Maximum Value | Measurement Uncertainty | Pass/Fail |
|------------|------------------|-------------------|------------------|----------------------------|-----------|
| Wavelength | 635 nm | nm | 665 nm | | Pass/Fail |
| Level | –2.5 dBm | dBm | 2.5 dBm | | Pass/Fail |

Table 11.3-24 Power Meter

| Item | Wavelength (nm) | Minimum Value | Measured Value | Maximum Value | Measurement Uncertainty | Pass/Fail |
|-------------------------|-----------------|------------------|-------------------|------------------|----------------------------|-----------|
| Measurement Accuracy | 1310 nm | -0.5 dB | dB | 0.5 dB | | Pass/Fail |
| | 1490 nm | -0.5 dB | dB | 0.5 dB | | Pass/Fail |
| | 1550 nm | -0.5 dB | dB | 0.5 dB | | Pass/Fail |

| Wavelength | OPM reading | $\mu \mathrm{OTDR}$ | Level Difference |
|------------|-------------|---------------------|------------------|
| 1310 nm | dBm | dBm | dB |
| 1490 nm | dBm | dBm | dB |
| 1550 nm | dBm | dBm | dB |

Table 11.3-25 PON Power Meter

| Item | Wavelength (nm) | Minimum Value | Measured Value | Maximum Value | Measurement Uncertainty | Pass/Fail |
|-------------------------|-----------------|------------------|-------------------|------------------|----------------------------|-----------|
| Measurement Accuracy | 1490 nm | -0.5 dB | dB | 0.5 dB | | Pass/Fail |
| | 1550 nm | −0.5 dB | dB | 0.5 dB | | Pass/Fail |

| Wavelength | OPM reading | $\mu OTDR$ | Level Difference |
|------------|-------------|------------|------------------|
| 1490 nm | dBm | dBm | dB |
| 1550 nm | dBm | dBm | dB |

Chapter 12 Maintenance

This chapter describes the daily maintenance of the Network Master as well as firmware upgrades, storage, and transport.

| 12.1 | Daily Maintenance | 12-2 |
|------|---------------------------------------|------|
| 12.2 | Updating Firmware | 12-3 |
| | 12.2.1 Summary | 12-3 |
| | 12.2.2 Preparing for Firmware Upgrade | 12-3 |
| | 12.2.3 Updating Firmware | 12-4 |
| 12.3 | Notes On Storage | 12-8 |
| 12.4 | Transporting and Disposal | 12-9 |

12.1 Daily Maintenance

Be sure to turn off the power before performing daily maintenance.

Panel surface dirt

When the external surfaces become dirty, or when using the Network Master in dusty locations, etc., or before long-term storage, clean off any soiling using a soft cloth slightly moistened with neutral detergent.

Screen surface dirt

NEVER clean with organic solvents, such as benzene, thinners, toluene, etc. Use a soft dry cloth or a cloth slightly moistened with ethanol to clean off any grease marks, fingerprints, etc.

Loose screws

Use a coin or flat-blade screwdriver to tighten screws.

12.2 Updating Firmware

12.2.1 Summary

The main frame has a firmware upgrade function to add new functions and resolve any software bugs. The firmware is updated by loading the released update using installer file.

The latest firmware update can be downloaded from the home page at https://www.anritsu.com/en-us/test-measurement/support/downloads.

For details, contact Anritsu Service or nearest representative.

12.2.2 Preparing for Firmware Upgrade

Copy the installer to USB flash drive using the following procedure.

- 1. Download the install file (.bbm extension) from the home page download site.
- 2. Copy the downloaded install file to the root folder of the USB flash drive.

Example:

Copy to D:\, when the USB flash drive is drive D:.

12.2.3 Updating Firmware



ALWAYS use the AC adapter when updating the firmware.

Update the firmware using the following procedure.

- 1. If operating, power down the unit.
- 2. Connect the USB flash drive that contains the copied install file to the main frame.
- 3. Connect the AC adapter to the main frame.
- 4. Hold down **f1** while powering up the unit (press **6**).
- 5. Firmware Update screen is displayed.

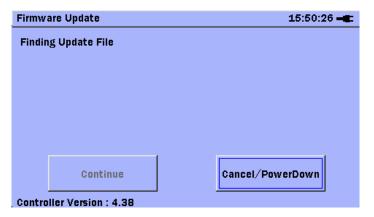


Figure 12.2.3-1 Initial Firmware Update Screen

6. When the USB flash drive contains several install files, the file selection screen is displayed. Press and to select the required install file and press set.


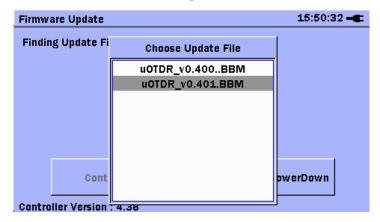


Figure 12.2.3-2 Install File Selection Screen

7. The install file is loaded to the main frame by pressing Continue as described below.

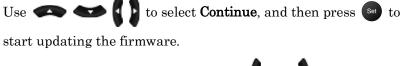

To cancel the update, use , , and to select Cancel/PowerDown, and then press .

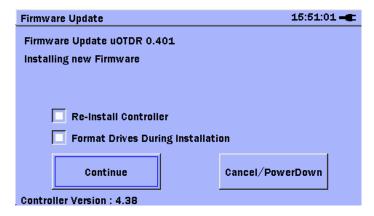


Figure 12.2.3-3 Starting Firmware Update

Select the firmware update options under the following circumstances:

- When the software does not start
- When data files cannot be read
- When Re-install Controller checked:
 Update the MT9099A main frame software before updating the firmware.
 - Press and to select **Re-install Controller**, and then press to update the firmware and bootloader contents.
- When Format Drives During Installation checked:
 Press and to select Format Drives During
 Installation, and then press to format the internal memory before updating the firmware.

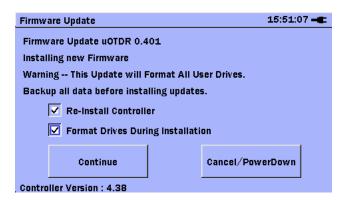


Figure 12.2.3-4 Firmware Update Options

Note:

When updating firmware after selecting Format Drives During Installation, all memory in the main frame, excluding USB flash drive, is formatted. Before updating the firmware, we strongly recommend making a backup of the contents of the internal memory first.



If power to the main frame is cut while updating the bootloader, the main frame may be left unable to boot. NEVER cut the power while updating the bootloader.

8. A progress bar is displayed while the firmware is updating. It shows the progress of the firmware update.

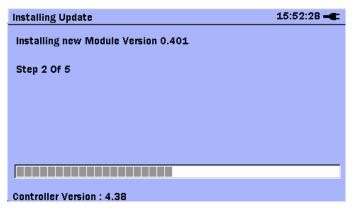


Figure 12.2.3-5 Firmware Update Progress Bar

9. **Finish** is displayed when the firmware update is completed. Press to finish the update and switch off the power to the main frame.



Figure 12.2.3-6 Firmware Update Completed

12.3 Notes On Storage

Remove any dust or dirt adhering to the equipment before storage.

Remove batteries from the Network Master.

Pack accessories, such as adapters and CD-ROM, etc., into the accessories box and store it with the main frame.

Avoid storing in these places:

- In direct sunlight
- Dusty places
- Damp places where condensation may occur on the equipment's surface
- Places with active/corrosive gases
- Places where the equipment may be oxidized
- Places where there is a risk of vibration or mechanical shock
- Places where there is a risk of packing boxes falling over
- Places where the temperature and humidity are as follows: Temperature: -30°C or lower, or 70°C or higher Humidity: 95% or higher

Recommended storage conditions

It is recommended that the equipment be stored in a place that meets the ambient conditions suggested above, plus the following conditions, if it is not to be used for a long period of time:

- Temperature: 5°C to 45°C
- Humidity: 40% to 80%
- Little temperature and humidity fluctuations within 1 day

12.4 Transporting and Disposal

This section describes the precautions to observe when transporting and disposing of the main frame at the end of its useful life.

Repackaging

Use the original shipping materials, or an approved optional transit case, when repacking the unit for transport. Repack according to the following procedure when the original shipping materials (or a transit case) are not available.

- 1. Procure a corrugated cardboard, wooden, or aluminum box large enough to pack in cushioning material around the unit.
- 2. Wrap the main frame in some material such as plastic sheeting that will prevent entry of dust and water.
- 3. Place the unit into the box.
- 4. Pack soft materials around the main frame so that it cannot slide around inside the packing box.
- 5. Secure the outside of the box with packaging cord, adhesive tape, bands, or other such implements.

Transporting

In addition to preventing vibration as much as possible, transport under conditions meeting the storage conditions outlined above.

Disposal

When the main frame has reached the end of its useful life, dispose of it in accordance with local environmental regulations.

Before disposal, dismantle or physically destroy any non-volatile memory media in the Network Master to ensure that data in memory cannot be recovered by third parties.

A.1 MT9090A Main Frame

Table A.1-1 Product Configuration

| Model | Name | Name | | |
|-------------|------------------------------|------|--|--|
| | - Main Frame - | | | |
| MT9090A | Main Frame | | | |
| | - Standard Accessories - | | | |
| B0601B | Standard soft case | 1 | | |
| G0202A*1 | NiMH battery pack | 1 | | |
| G0203A | AC Charger/Adapter | 1 | | |
| Z1023A | Strap | 1 | | |
| B0663A | Protector | 1 | | |
| | - Option - | | | |
| MT9090A-001 | Dedicated for µOTDR Module*2 | | | |

^{*1:} It can be charged by MT9090A main frame. There is no external charger.

Table A.1-2 Application Parts

| Model | Name | Remarks |
|-------------|------------------|---------|
| B0600B | Hard case | |
| B0602A | Deluxe soft case | |
| HR-3UTG-4BP | NiMH Battery | 4 pcs |
| NC-M58* | Battery charger | |
| J1402A | Car plug cord | |

Special dedicated nickel metal-hydride battery pack (HR-3UTG-4BP)

The NiMH battery pack (G0202A) cannot be recharged.

Table A.1-3 Specifications

| Item Specifications | | Remarks |
|--|-----------------------------|---------|
| Display 4.3-inch color TFT LCD (480×272 pixels, with LED backlight, transmissive) | | |
| Interfece | USB1.1, Type A×1 (Memory), | |
| Interface | Type B×1 (USB mass storage) | |
| Dimensions | 180 (W)×96 (H)×18 (D) mm | |

^{*2:} One G0202A NiMH battery pack is attached.

Table A.2-1 NiMH battery pack

| Item | Specifications | Remarks |
|-------------------|--------------------|---------|
| Battery type | Ni-MH Battery pack | |
| Voltage, Capacity | DC 4.8 V, 2700 mAh | |

Table A.1-2 AC Adapter

| Item | Specifications | Remarks |
|----------------|----------------------------|---------|
| AC rated input | AC 100 to 240 V, 50/60 Hz* | |
| DC rated input | DC 9 V | |

^{*:} Operating voltage: within the range of +10% to -10% from the rated voltage

A.2 µOTDR Module

A.2.1 Configuration

Table A.2.1-1 Product Configuration

| Model | Name | Remarks | | | |
|------------|---|--|--|--|--|
| | - Main Frame - | | | | |
| MU909014A | μOTDR Module | Specify wavelength as option. | | | |
| MU909014A1 | μOTDR Module | Specify visible light source and wavelength as option. | | | |
| MU909014B | μOTDR Module | Two wavelengths, Dynamic range 30 dB model | | | |
| MU909014B1 | μOTDR Module | Two wavelengths, Dynamic range 30 dB model | | | |
| MU909014C | μOTDR Module | Three wavelengths, Dynamic range 30 dB, Power meter | | | |
| MU909014C6 | μOTDR Module | Three wavelengths, Dynamic range 30 dB, light source, PON power meter, Loss Test | | | |
| MU909015A6 | μOTDR Module | One wavelength, Dynamic range 35 dB, Power meter, PON power meter | | | |
| MU909015B | μOTDR Module | Two wavelengths, Dynamic range 35 dB model | | | |
| MU909015B1 | μOTDR Module | Two wavelengths, Dynamic range 35 dB model | | | |
| MU909015C | μOTDR Module | Three wavelengths, Dynamic range 35 dB, Power meter | | | |
| MU909015C6 | μOTDR Module | Three wavelengths, Dynamic range 35 dB, light source, PON power meter, Loss Test | | | |
| | - Standard Accessories - | | | | |
| | Optical Connector | Specify type as option. | | | |
| W3585AE | Quick Guide | Printed version | | | |
| Z1579A | μOTDR Module Operation Manual (CD-R) | Operation manual, Quick guide | | | |
| | - Options - | | | | |
| -053 | 1625 nm, UPC | For MU909014A/A1, MU909015A6 | | | |
| -054 | 1650 nm, UPC | For MU909014A/A1, MU909015A6 | | | |
| -063 | 1625 nm, APC | For MU909014A/A1 | | | |
| -064 | 1650 nm, APC | For MU909014A/A1 | | | |
| -056 | 1310/1550 nm, UPC | For MU909014B/B1, MU909015B/B1 | | | |
| -066 | 1310/1550 nm, APC | For MU909014B/B1, MU909015B/B1 | | | |
| -057 | 1310/1550/1625 nm, UPC | For MU909014C/C6, MU909015C/C6 | | | |
| -067 | 1310/1550/1625 nm, APC | For MU909014C/C6, MU909015C/C6 | | | |
| -058 | 1310/1550/1650 nm, UPC | For MU909014C/C6, MU909015C/C6 | | | |
| -068 | 1310/1550/1650 nm, APC | For MU909014C/C6, MU909015C/C6 | | | |
| -059 | 1310/1490/1550 nm, UPC | For MU909015C/C6 | | | |
| -069 | 1310/1490/1550 nm, APC | For MU909015C/C6 | | | |

Table A.2.1-1 Product Configuration (Cont'd)

| Model | Name | Remarks | |
|-------|------------------------|---------|--|
| | - Connection Options - | | |
| -025 | FC-APC Connector | | |
| -026 | SC-APC Connector | | |
| -037 | FC Connector | | |
| -039 | DIN47256 Connector | | |
| -040 | SC Connector | | |

Table A.2.1-2 Applicable Parts

| Model | Name | |
|-----------------|---|--|
| FS-PT-USB-CASE | Hard case for VIP option | |
| OPTION- 545 VIP | Video Inspection Probe (x200/x400) | |
| G0293A | Video Inspection Probe Lite (x400) | |
| G0306A | Video Inspection Probe (x400) | |
| G0306B | Video Inspection Probe (x400) | |
| G0306C | Video Inspection Probe (x400) | |
| B0663A | Protector | |
| J0617B | Replaceable optical connector (FC-PC) | |
| J0618E | Replaceable optical connector (DIN) | |
| J0619B | Replaceable optical connector (SC) | |
| J0635x* | FC/PC patch cord (SM fiber) | |
| J0739A | Replaceable optical connector (FC-APC) | |
| J1480A | USB-Ethernet converter | |
| Z0284 | Adapter Cleaner | |
| Z0914A | Ferrule cleaner | |
| Z0915A | Replacement reel for Ferrule cleaner | |
| Z0916A | Ferrule side face cleaner, stick type | |
| Z1580A | Protector & softcase | |
| W3586AE | μOTDR Module Operation Manual (Printed) | |

^{*:} Use the following codes to specify the length (x) of the patch cord. A: 1 meter; B: 2 meters; C: 3 meters

A.2.2 Common Specifications

Table A.2.2-1 Specifications

| Item | Specifications |
|-------------------------------------|---|
| Measurement | |
| Condition Setup | |
| IOR | 1.3000 to 1.7000 (0.0001 step) |
| BSC | -90.0 to -40.0 (0.1 step) |
| Trace View | |
| Number of Sampling Points | Refer to Table A.2.2-2. |
| Sampling Resolution*1 | Refer to Table A.2.2-2. |
| Marker Resolution*1 | 0.02 to 400 m |
| | Displays events evaluated as faults in the order close to the near end. |
| Automoogynoment | Displays the distance of fault candidate, total loss or connection loss, event type, and return loss on the fault evaluation screen. |
| Auto measurement (fault evaluation) | * The auto measurement is a secondary function for simple measurement, and it does not assure the measurement values. The detection might be incorrect, so make a final pass/fail evaluation of the measurement results only after observing the waveform data. |
| Measurement Items | Distance of each event, connection loss, return loss, and event type (table display) |
| Emant Analonia | Splice loss: 0.01 to 9.99 dB (0.01 dB/ step) |
| Event Analysis Threshold value | Return loss: 20.0 to 70.0 dB (0.1 dB/ step) |
| Tillesilola value | Splitter: 1 to 40 dB (1 dB/ step) |
| Pass/Fail Evaluation | Splice loss: 0.10 to 30.00 dB (0.01 dB/ step) |
| Threshold Value | Return loss: 10.0 to 50.0 dB (0.1 dB/ step) |
| Timeshold value | Total loss: 0.1 to 60.0 dB (0.1 dB/ step) |
| Number of Detected Events: | Up to 99 |
| Connection Check | Checks the connection status of the optical connection |
| Manual Measurement | |
| Measurement Items | Loss and distance between two points |
| Real-time Sweep*2 | Sweep time: 1 sec or less |

^{*1:} IOR = 1.500000

^{*2:} When the resolution is standard, the design is assured.

Table A.2.2-1 Specifications (Cont'd)

| Item | Specifications | | | | |
|------------------------------------|---|--|--|--|--|
| Other functions | Loss measurement mode: 2pt-Loss, Splice Loss, dB/km LSA, dB/km, ORL, Event Date & Time display/setting Color Theme: Default, Lush Green, Night, Orange Crush, Outdoor White Language: English, Japanese, Chinese (Simplified), Chinese (Traditional), French, German, Spanish (Spain), Spanish (Latin America), Italian, Polish, Portuguese, Finnish, Korean, Danish, Swedish, Russian Auto Backlight OFF: 30 sec, OFF, 5 to 60 min (5 min step) Auto Power OFF: OFF, 30 to 120 min (30 min step) Dummy fiber display switch function Distance unit setting: Mile, Feet, Kilofeet, Meters, Kilometers Trace file:SR-4731 format Load Trace (Only trace files saved on same unit can be loaded) Save Trace (Manual save) Auto Save Mass Storage function Screen Capture: BMP, JPEG, PNG format Battery display Connector Video Inspection Probe (VIP option) Save function: PNG format Load function: PNG format Macrobend function (by using 1310 nm and 1550 nm) WiFi/Bluetooth connection Remote GUI function Fiber type list customize function Fiber Visualizer function DCFL function | | | | |
| Power Supply | Dedicated battery pack or 4 AA Ni-MH batteries AA Alkaline batteries DC: Rating 9 V AC: Rating 100 to 240 V, frequency: 50/60 Hz, (with dedicated AC adapter)*3 | | | | |
| Power consumption | 12 VA or less (including during charging battery) | | | | |
| Dedicated battery pack | Ni-MH (nickel-metal hydride) battery | | | | |
| Battery operating time | Operating time:8 hours*4, *5 | | | | |
| Battery charging time | 4 h*4,*6 | | | | |
| Dimensions (excluding protrusions) | 190(W) × 96(H) × 30(D) mm | | | | |
| Mass | $\leq 700 \text{ g}^{*7}$ | | | | |

- *3: Operating voltage: within the range of +10% to -10% from the rated voltage
- *4: Typical
- *5: Telcordia GR-196-CORE Issue 2, September 2010, automatic back light off: 30 sec, automatic power off: Disabled, 25°C, design assurance
- *6: Temperature range: +10° to +30°C With power off, temperature range for ≥90% charge
- *7: Total of MT9090A main frame, fiber maintenance tester, and dedicated battery pack

Table A.2.2-2 Sampling Resolution and Number of Sampling Points (MU909014A/A1/B/B1,MU909015B/B1)

| Distance | Standard | | High Resolution | | Super-high Resolution | |
|---------------|------------------|------------|------------------|------------|-----------------------|------------|
| Range (km) | Number of points | Resolution | Number of points | Resolution | Number of points | Resolution |
| 0.5 | 5001 | 10 cm | 10001 | 5 cm | | |
| 1 | 5001 | 20 cm | 20001 | 5 cm | | |
| 2.5 | 5001 | 50 cm | 25001 | 10 cm | | |
| 5 | 5001 | 1 m | 25001 | 20 cm | | |
| 10 | 5001 | 2 m | 20001 | 50 cm | | |
| 25 | 5001 | 5 m | 25001 | 1 m | | |
| 50 | 5001 | 10 m | 25001 | 2 m | | |
| 75 | 3751 | 20 m | 15001 | 5 m | | |
| 125 | 6251 | 20 m | 25001 | 5 m | 125001 | 1 m |
| 250 | 6251 | 40 m | 25001 | 10 m | 250001 | 1 m |

Table A.2.2-3 Sampling Resolution and Number of Sampling Points (MU909014C/C6,MU909015A6/C/C6)

| Distance | Standard | | High Resolution | | Super-high Resolution | |
|---------------|------------------|------------|------------------|------------|-----------------------|------------|
| Range (km) | Number of points | Resolution | Number of points | Resolution | Number of points | Resolution |
| 0.5 | 5001 | 10 cm | 10001 | 5 cm | 25001 | 2 cm |
| 1 | 5001 | 20 cm | 20001 | 5 cm | 50001 | 2 cm |
| 2.5 | 5001 | 50 cm | 12501 | 20 cm | 25001 | 10 cm |
| 5 | 5001 | 1 m | 12501 | 40 cm | 50001 | 10 cm |
| 10 | 5001 | 2 m | 20001 | 50 cm | 100001 | 10 cm |
| 25 | 5001 | 5 m | 12501 | 2 m | 25001 | 1 m |
| 50 | 5001 | 10 m | 12501 | 4 m | 50001 | 1 m |
| 75 | 7501 | 10 m | 15001 | 5 m | 75001 | 1 m |
| 125 | 6251 | 20 m | 12501 | 10 m | 125001 | 1 m |
| 250 | 6251 | 40 m | 12501 | 20 m | 250001 | 1 m |

Table A.2.2-4 Environment Conditions

| | Item | Specifications | |
|---|------------------------------------|--|--|
| Operating Temperature, | MU909014A/A1/B/B1, MU909015B/B1 | -5 °C to $+40$ °C, ≤ 80 %* (Battery charging, $+10$ ° to $+30$ °C, power off) | |
| Humidity | MU909014C/C6,MU909015A6/C/C6 | -10 °C to +50°C, \leq 95%* (Battery charging, +10°C to +30°C, power off) | |
| Storage MU909014A/A1/B/B1, Temperature, MU909015B/B1 | | -20°C to +60°C, ≤ 80%* | |
| Humidity | MU909014C/C6,MU909015A6/C/C6 | -30 °C to $+70$ °C, ≤ 95 %* | |
| Vibration | | MIL-T-28800E Class3 | |
| Shock | | MIL-T-28800E | |
| Drop | | MIL-T-28800E Style C (20.3 cm corner, surface; total 14 drops, power off) | |
| Bump | | IEC60068-2-29, JIS C60068-2-29 | |
| Shock-on-desk | | MIL-T-28800E (45° or 100 mm corner, edge total 4 drops, power on) | |
| Dust proof, water proof | | JIC C0920 IPX1 | |
| EMC | | EN61326-1 (Class A, Table 2) RN61000-3-2 (Class A) | |

^{*:} No condensation

A.2.3 MU909014A/A1B/B1, MU909015B/B1

Table A.2.3-1 Specifications

| Item | Specifications | | | | Remarks |
|--|---|--------------------------------|-----------------------------------|-----------|--------------|
| | Model Name/Option | n | Specifications | | |
| | MU909014A/A1-053 | | 1007 - 17 | | |
| | MU909014A/A1-063 | | $1625 \pm 15 \text{ nm}$ | | |
| | MU909014A/A1-054 | | 1050 15 222 | | Pulse width: |
| Wavelength*1 | MU909014A/A1-064 | | 1650 ±15 nm | | 1 μs |
| | MU909014B/B1-056 | | | 7 | Ι μο |
| | MU909014B/B1-066 | | $1310 \pm 25 \text{ nm},$ | | |
| | MU909015B/B1-056 | | $1550 \pm 25 \text{ nm}$ | | |
| | MU909015B/B1-066 | | | | |
| Fiber under test | 10/125 μm single mode fi | fiber (I' | TU-T G.652) | | |
| Pulse width | Auto, 5, 10, 20, 50, 100, 2 | 200, 50 | 00 ns, 1, 2, 5, 10, 20 | μs | |
| | Model Name/Option | | Specifications | | |
| | MU909014A/A1-053 | 24.5 | dB (Pulse width 50 | | |
| | MU909014A/A1-063 | 32.5 | dB (Pulse width 20 | | |
| | MU909014A/A1-054 | 4 24 dB (Pulse width 500 ns)*3 | | | |
| | MU909014A/A1-064 | 32.5 dB (Pulse width 20 μs)*3 | | | |
| | MU909014B/B1-056 24.5 dB (Pulse width 500 ns)*3,*4 | | | | |
| Dynamic range*1,*2 | | 23 d | 23 dB (Pulse width 500 ns)*3, *5 | | |
| | MU909014B/B1-066 | l l | 32.5 dB (Pulse width 20 μs)*3, *4 | | |
| | 14100000112/21 000 | 31 d | 31 dB (Pulse width 20 μs)*3, *5 | | |
| | MU909015B/B1-056 | 28 4 | lB (Pulse width 500 | ne)*3, *4 | |
| | MOAOAOTODIATIOO | l l | 26 dB (Pulse width 500 ns)*3, *5 | | |
| | | - | lB (Pulse width 20 μ | | |
| | MU909015B/B1-066 | | | | |
| Dead zone*1,*6 | Backscattered light: .≤ 5.0 m* ^{3, *7} | | | | |
| Dead zone", "0 | Fresnel reflection: $\leq 1.0 \text{ m*}_{3, *8}$ | | | | |
| | Auto, 0.5, 1, 2.5, 5, 10, 25, 50, 75, 125, 250 km/ | | | | |
| | Auto,1640, 3281, 8202, 16404, 32808, 82021, 164042, 246063, 410105, 820210 feet | | | | |
| Distance Measurement Accuracy | ±1 m ±(3 m×distance ran However, excludes uncer | _ | | ion | |
| Loss Measurement Accuracy (Linearity) | ±0.05 dB/dB or ±0.1 dB, | which | ever greater | | |

Table A.2.3-1 Specifications (Cont'd)

| Item | | Specifications | | | Remarks |
|--|---|---|----------------|--------------|---------|
| Optical output peak power | 150 mW max. (+2 | 150 mW max. (+21.76 dBm max.) | | | |
| Return Loss Measurement Accuracy | ±2 dB | $\pm 2~\mathrm{dB}$ Distance Range 25 km Pulse width: $2~\mu\mathrm{s}$ | | | |
| | | IE | C 60825-1:20 | 007 | |
| | Model | Class 1 | Class 1M | Class 3R | |
| | MU909014A | ✓ | | | |
| | MU909014A1 | ✓ | | ✓ | |
| Laser safety | MU909014B | ✓ | ✓ | | |
| Laser safety | MU909014B1 | ✓ | ✓ | ✓ | |
| | MU909015B | ✓ | ✓ | | |
| | MU909015B1 | ✓ | ✓ | ✓ | |
| | 21 CFR 1040.10 Except for deviat dated June 24 20 | | ant to Laser l | Notice No.50 | |

*1: 25°C

Except while charging battery

- *2: S/N=1, Averaging time 180 s
- *3: Typical
- *4: Wavelength 1310 nm
- *5: Wavelength: 1550 nm; 25°C
- *6: IOR=1.500000
- *7: Reflectance; 45 dB; Pulse Width: 5 ns; Deviation: ±0.5 dB
- *8: Reflectance 45 dB, Pulse width 5 ns (width at 1.5 dB below reflection peak level)

A.2.4 MU909014C/C6, MU909015C/C6

Table A.2.4-1 Specifications

| Item | Specifications | | | | | |
|-----------------------|--|--------------------------------------|-------------------------------|-------------------------------|-------------------------------|--|
| | Model Name/Option | | | | Specifications | |
| | MU909014C/C6-057/067/058/068 | | | 13 | 10±25 nm, | |
| | MU909015C | MU909015C/C6-057/067/058/068/059/069 | | | 50±25 nm, | |
| | | | | | 10±20 nm*3 | |
| *** | | | | | 50±20 nm*3 | |
| Wavelength*1,*2 | MU909015C | /C6-059/069 | | | 90±25 nm, | |
| | 3.57700001.40 | 100 05-100- | | 14 | 90±20 nm*3 | |
| | MU909014C | | | 16 | 25±15 nm | |
| | MU909015C | | | | | |
| | MU909014C MU909015C | | | 16 | 50±15 nm | |
| | | | | | | |
| Fiber under test | 10/125 μm sin | _ | | | | |
| Pulse width | Auto, 5, 10, 20 | 0, 50, 100, 20 | 00, 500 ns, 1, | 2, 5, 10, 20 | 0 μs | |
| Dynamic range*1,*3,*4 | subtracted. MU909014C/C Trace Pulse width 500 ns 20 µs MU909015C/C | 1310 nm 24.5 32.5 | 58/068 1550 nm 23 31 | 1625 nm*5,*7 24 32.5 | 1650 nm*6,*7 23 32.5 | |
| | Trace Pulse width | 1310 nm | 1550 nm | 1625 nm*5,*8 | 1650 nm*6,*8 | |
| | 500 ns | 27 | 26 | 25 | 24 | |
| | 20 μs | 38 | 37 | 35 | 35 | |
| | MU909015C/0 Trace Pulse width | C6-059/069 1310 nm | 1490 nm | 1550 nm | | |
| | 500 ns | 25 | 24 | 24 | | |
| | 20 μs | 36 | 35 | 35 | | |

- *1: 25°C, except while charging battery
- *2: Pulse width: $1 \mu s$
- *3: Typical
- *4: S/N=1, Averaging time: 180 seconds, distance range: 125 km
- *5: Option 057/067

*6: Option 058/068

*7: Specified with background light: 1310/1550 nm, -20 dBm(CW)

*8: Specified without background light.

Table A.2.4-1 Specifications (Cont'd)

| Item | Specifications | |
|---|---|--|
| Dead zone (BSL)*1, *3,*9,*10 | Wavelength 1310 nm:≤ 4.0 m Wavelength 1490/1550/1625/1650 nm:≤ 4.5 m | |
| Dead zone (Fresnel reflection)*1, *3,*9,*11 | ≤ 0.8 m | |
| Distance range*9 | Auto setup, 0.5, 1, 2.5, 5, 10, 25, 50, 75, 125, 250 km Auto setup 1640, 3281, 8202, 16404, 32808, 82021, 164042, 246063, 410105, 820210 feet | |
| Distance Measurement Accuracy | ±1 m ±(3 m×distance range×10 ⁻⁵) ±cursor resolution However, excludes uncertainty due to IOR | |
| Loss Measurement Accuracy (Linearity) | $\pm 0.05 \text{ dB/dB} \text{ or } \pm 0.1 \text{ dB (Whichever greater)}$ | |
| Optical output peak power*12 | 150 mW or less (+21.76 dBm or less) | |
| Return Loss Measurement Accuracy*12,*13 | 14.8±2 dB | |
| Auto measurement (Fault Locate test) | | |
| Active fiber check*14 | Detects active signal (-40 dBm or more) in fiber under test | |
| Laser safety IEC 60825-1:2007 Class 1, Class 1M 21CFR1040.10 and 1040.11 except for deviations pursuant to Laser N No.50 (dated June 24, 2007) | | |

*9: IOR=1.500000

*10: 25°C, Pulse width 5 ns, return loss 45 dB, Deviation ± 0.5 dB

*11: 25°C, Pulse width 5 ns, return loss 45 dB, Width at 1.5 dB below reflection peak level

*12: Design assurance

*13: Distance range: 25 km, Pulse width: 2μs, when the 20 km fiber opened end is measured, BSC: -78.5 (1310 nm), -80.1 (1490 nm), -81.5 (1550 nm), -82.5 (1625/1650 nm)

*14: Wavelength: only for 1310/1550 nm port

A.2.5 MU909015A6

Table A.2.5-1 Specifications

| Item | | | Specifications | |
|---|---|---------------------------------------|-------------------------------|----------------------------|
| | Model N | lame/Option | Specificatio | ns |
| Wavelength*1,*2 | MU909015A6-053/063 | | 1625±15 nm | |
| | MU909018 | 5A6-054/064 | 1650±15 nm | |
| Fiber under test | 10/125 μm six | ngle mode fiber | (ITU-T G.652) | |
| Pulse width | Auto, 5, 10, 2 | 20, 50, 100, 200, | 500 ns, 1, 2, 5, 1 | 0, 20 μs |
| Dynamic range*1,*3,*4,*7 | The guarante subtracted. Trace Pulse width 500 ns | eed values are v 1625 nm*5 25 | alues in the table 1650 nm*6 | e from which 1 dB is |
| | 20 μs | 35 | 35 | - |
| Dead zone (BSL)*1, *3,*8,*9 | ≤ 4.5 m | | | |
| Dead zone (Fresnel reflection)*1, *3,*8,*10 | ≤ 0.8 m | | | |
| Distance range*8 | Auto setup, | 10, 25, 50, 75, 1 3202, 16404, 328 | | 12, 246063, 410105, 820210 |

- *1: 25°C, except while charging battery
- *2: Pulse width:1 μs
- *3: Typical
- *4: S/N=1, Averaging time: 180 seconds, distance range: 125 km
- *5: Option 053/063
- *6: Option 054/064
- *7: Specified without background light.
- *8: IOR = 1.500000
- *9: 25°C, Pulse width 5 ns, return loss 45 dB, Deviation±0.5 dB
- *10: 25°C, Pulse width 5 ns, return loss 45 dB, Width at 1.5 dB below reflection peak level

Table A.2.5-1 Specifications (Cont'd)

| Item | Specifications | |
|---|---|--|
| Distance Measurement | ±1 m ±(3 m×distance range×10 ⁻⁵) ±cursor resolution | |
| Accuracy | However, excludes uncertainty due to IOR | |
| Loss Measurement Accuracy (Linearity) | ±0.05 dB/dB or ±0.1 dB (Whichever greater) | |
| Optical output peak power *11 | 150 mW or less (+21.76 dBm or less) | |
| Return Loss Measurement Accuracy*11,*12 | 14.8±2 dB | |
| Laser safety | IEC 60825-1:2007 Class1 21CFR1040.10 and 1040.11 except for deviations pursuant to Laser Notice No.50 (dated June 24, 2007) | |

^{*11:} Design assurance

^{*12:} Distance range: 25 km, Pulse width: 2µs, when the 20 km fiber opened end is measured, BSC: –82.5

A.2.6 Other Functions

Table A.2.6-1 VFL (MU909014A1/B1, MU909015B1)

| Item | Specifications | Remarks |
|--|-------------------|-------------|
| Supported fiber SM Fiber (ITU-T G.652) | | |
| Optical Connector | Universal ø2.5 mm | |
| Center wavelength | 650 ±15 nm* | |
| Output Level | 0 ±3 dBm* | 0.5 to 2 mW |
| Output Function | OFF, CW, MOD | |

^{*:} CW, 25°C

Table A.2.6-2 Light Source (MU909014C6, MU909015A6/C6)

| Item | Specifications | | | |
|----------------------|--|----------------|--|--|
| Supported Fiber | 10/125 μm Single Mode Fiber (ITU-T G.652) | | | |
| Optical Port | Shared with OTDR port of each wavelength | | | |
| Optical Connector | Shared with OTDR port | | | |
| | Model Name/Option | Specifications | | |
| | MU909014C6-057/067/058/068 | 1310±25 nm, | | |
| | MU909015C6-057/067/058/068/059/069 | 1550±25 nm | | |
| | MU909015C/C6-059/069 | 1490±25 nm | | |
| Wavelength*1 | MU909014C6-057/067 | | | |
| wavelength | MU909015A6-053/063 | 1625±25 nm | | |
| | MU909015C6-057/067 | | | |
| | MU909014C6-058/068 | | | |
| | MU909015A6-054/064 | 1650±25 nm | | |
| | MU909015C6-058/068 | | | |
| Optical Output Level | -5±1.5 dBm*1,*2 | | | |
| Instant Stability | $\leq 0.2 \text{ dB*}_3$ | | | |
| Light Emission Mode | CW, 270 Hz, 1 kHz, 2 kHz | | | |
| Warm-up time | 10 minutes (after optical output is turned (| ON) | | |

^{*1:} CW, 25°C

^{*2:} Fiber length 2 m, after the warm-up time passes

^{*3:} CW, ±1°C at one point within -10 to +50°C, difference between the maximum value and minimum value for one minute, single mode fiber 2 m, when the optical power meter with return loss of 40 dB or more is used, and after the warm-up time passes

Table A.2.6-3 Optical Power Meter (MU909014B/14B1/15B/15B1)

| Item | Specifications | Remarks |
|------------------------------------|----------------------------------|--------------------------------------|
| Compatible fiber | SM Fiber (ITU-T G.652) | |
| Optical Connector | Shared with Measurement Port | |
| Waveform Settings | 1310/1490/1550/1579/1625/1650 nm | |
| Optical power Measurement Range | −50 to −5 dBm | 10 nW to 0.3 mW |
| Measurement Accuracy | ±0.5 dB* | Measured with a master fiber (FC) |
| Absolute Max. Input | +10 dBm | 10 mW |

^{*: 1310/1490/1550} nm, CW, –20 dBm, 25°C ±3°C

Table A.2.6-4 Optical Power Meter (MU909014C/C6, MU909015A6/C/C6)

| Item | | Specif | fications | |
|---------------------|------------------------|-----------------------------|---|--|
| Supported Fiber | SM Fiber (ITU-T G.652) | | | |
| | Model | | Rated Value | |
| | MU909014C-057/067/0 | 058/068 | Shared with OTDR port | |
| | MU909015C-057/067/0 | 058/068 | (wavelength 1310/1550 nm) | |
| Measurement Port | MU909015C-059/069 | | Shared with OTDR port (wavelength 1310/1490/1550 nm) | |
| | MU909015A6-053/063 | /054/064 | Shared with OTDR port | |
| | MU909014C6-057/067 | /058/068 | Shared with OTDR port | |
| | MU909015C6-057/067 | /058/068 | (Wavelength 1625/1650 nm) | |
| | MU909015C6-059/069 | | Dedicated port | |
| Optical Connector | Shared with OTDR port | , Dedicated p | ort(059/069) | |
| | Model | Rated Value | | |
| | MU909014C | 1310/1490/1550 nm | | |
| W 1 1 C 11 | MU909015C | | | |
| Wavelength Settings | MU909014C6 | | | |
| | MU909015A6 | 1310/1490/1550/1625/1650 nm | | |
| | MU909015C6 | | | |
| | Model | | Rated Value | |
| | MU909014C | CITI | | |
| Measurement Mode | MU909015C | CW | | |
| mode are more mode | MU909014C6 | | | |
| | MU909015A6 | CW, 270 H | z, 1 kHz, 2 kHz | |
| | MU909015C6 | | | |

Table A.2.6-4 Optical Power Meter (MU909014C/C6, MU909015A6/C/C6) (Cont'd)

| Item | Specifications | | |
|----------------------|----------------|--|--|
| | Model | Rated Value | |
| Optical Power | MU909014C | 70 / 7 ID (OUI)*1 | |
| | MU909015C | -50 to -5 dBm (CW)*1 | |
| Measurement Range | MU909014C6 | 70 to 90 dD (CW)*1 | |
| | MU909015A6 | -50 to 26 dBm (CW)* ₁ -40 to 13 dBm (270 Hz, 1 kHz, 2 kHz)* ₁ | |
| | MU909015C6 | -40 to 13 dbm (270 Hz, 1 kHz, 2 kHz)**1 | |
| Measurement Accuracy | ±0.5 dB*2,*3 | | |

*1: 1550 nm

*2: 1310/1490/1550 nm

*3: CW, -20 dBm, 25°C, on master connector fiber (FC) use, after zero offset execution

Table A.2.6-5 PON Optical Power Meter (MU909014C6, MU909015A6/C6)

| Item | Specifications | |
|----------------------|--|---------------------------|
| Supported Fiber | SM Fiber (ITU-T G.652) | |
| | Model | Rated Value |
| | MU909014C6-057/067/058/068 | Shared with OTDR port |
| Measurement Port | MU909015C6-057/067/058/068 | (wavelength 1625/1650 nm) |
| | MU909015A6-053/063/054/064 | Shared with OTDR port |
| | MU909015C6-059/069 | Dedicated port |
| Optical Connector | Shared with OTDR port, Dedicated port(059/069) | |
| Wavelength | 1490/1550 nm | |
| Optical Power | 1490 nm: –50 to 13 dBm | |
| Measurement Range*1 | 1550 nm: –50 to 26 dBm | |
| Measurement Accuracy | ±0.5 dB*2 | |
| Taalatian *2 | 1490 nm:> 35 dB | |
| Isolation*3 | 1550 nm:> 50 dB | |

*1: CW

*2: 1490/1550 nm, CW, -20 dBm, 25°C, on master connector fiber (FC) use, after zero offset execution

*3: Design assurance

Table A.2.6-6 Optical Loss Measurement (MU909014C6, MU909015C6)

| Item | Specifications | |
|------------------------------------|--|--|
| Supported Fiber | SM Fiber (ITU-T G.652) | |
| Measurement Port | Light source: Model for 057/067/058/068: Shared with OTDR port (wavelength 1310/1550 nm) Model for 059/069: Shared with OTDR port (wavelength 1310/1490/1550 nm) | |
| | Optical power meter: Model for 057/067/058/068: Shared with OTDR port (wavelength 1625 or 1650 nm) Model for 059/069: Dedicated port | |
| Optical Connector | Shared with OTDR port(057/067/058/068), Dedicated port(059/069) | |
| Light Source | | |
| Wavelength | Model for 057/067/058/068: 1310±25 nm, 1550±25 nm Model for 059/069: 1310±25 nm, 1550±25 nm, 1490±25nm | |
| Optical Output Level | -5±1.5 dBm*1,*2 | |
| Instant Stability | $\leq 0.2 \text{ dB*}_3$ | |
| Light Emission Mode | CW, 270 Hz, 1 kHz, 2 kHz | |
| Warm-up Time | 10 minutes (after optical output is turned ON) | |
| Optical Power Meter | | |
| Wavelength Settings | 1310/1490/1550/1625/1650 nm | |
| Measurement mode | CW, 270 Hz, 1 kHz, 2 kHz | |
| Optical power Measurement Range | −50 to 26 dBm (CW) −40 to 13 dBm (270 Hz, 1 kHz, 2 kHz)*4 | |
| Measurement Accuracy | ±0.5 dB*5 | |

^{*1:} CW, 25°C

^{*2:} Fiber length 2 m, after the warm-up time passes

^{*3:} Wavelength 1310/1550 nm, CW, ±1°C at one point within -10 to +50°C, difference between the maximum value and minimum value for one minute, single mode fiber 2 m, when the optical power meter with return loss of 40 dB or more is used

^{*4: 1550} nm

^{*5: 1310/1490/1550} nm, CW, -20 dBm, 25°C, on master connector fiber (FC) use, after zero offset execution

Appendix B Default Value

Table B-1 Setup-General

| Item | Default |
|-------------------------|-------------------------|
| Auto Backlight | 5 minutes |
| Auto Power Off | 10 minutes |
| Screen Capture Format | PNG |
| Use Login Password | OFF |
| Login Password | Serial number of module |
| Remote Control Password | Blank |

Table B-2 Setup-Preferences

| Item | Default |
|--------------------------------|---------------|
| Enable Connection Check Step | On |
| Enable Active Fiber Check Step | On |
| Auto Analysis | On |
| Show Internal Launch Fiber | On |
| IOR Length Adjustment | Off |
| Distance Unit | Kilometers |
| Saving Format | SOR |
| Fiber Group | Fiber Group1 |
| Event icon movement | Left to Right |
| End event for ORL | OMIT |

Table B-3 Setup-Auto Save

| ltem | Default |
|-----------------------|---------|
| Enable Auto File Name | Off |
| Enable Auto Save | Off |
| Auto Save Folder | /Data/ |
| File Name Prefix | auto |
| Sequence Number | 1 |
| Date | Off |
| Wavelength | Off |

Table B-4 Test Setup

| Item | Default |
|---------------------------|---------------|
| Full Auto | On |
| PON (ONU to OLT) | Off |
| Range | Auto |
| Resolution | Medium |
| Pulse width | Auto |
| Averaging | Auto |
| Apply to All Wavelength*1 | On |
| Macro Bend Analysis | Off |
| IOR | 1.4677^{*2} |
| | 1.4682*3 |
| | 1.4685*4 |
| BSC | -78.5^{*2} |
| | -81.5*3 |
| | -82.5^{*4} |
| Loss mode | Event |
| F2 Test Mode | Average |
| F3 Wavelength*3 | 1310 nm*3 |

*1: Not displayed in MU909015A6

*2: Wavelength: 1310 nm*3: Wavelength: 1310 nm

*4: Wavelength: 1310/1550 nm

Table B-5 Trace View

| Item | Default |
|-----------------|---------|
| F2 | Zoom |
| F3 Display Form | Origin |
| F4 Mode* | Fast |

*: Displayed on OTDR only

Table B-6 Analysis-Setup

| Item | Default |
|---------------|----------|
| End of Fiber | 3 dB |
| Event Loss | 0.25 dB |
| Reflectance | -60.0 dB |
| Macro Bend | 0.3 dB |
| Branch | 1x8 |
| Splitter Loss | 10.0 dB |

B Appendit

Table B-7 Thresholds-Setup

| Item | Default |
|------------------|----------|
| Total Fiber Loss | 10.0 dB |
| Event Loss | 0.20 dB |
| Reflectance | -20.0 dB |
| Splitter Loss | 3.0 dB |
| ORL | 27.0 dB |

Table B-8 PON Power Meter

| Item | Default |
|-----------|---------|
| f3 dB/dBm | dBm |

Table B-9 PON Power Meter Pass/Fail Evaluation Threshold

| Item | Default |
|------------------|-----------------|
| Enable Threshold | 1490 nm: Off |
| | 1550 nm: Off |
| Threshold | 1490 nm: –26.00 |
| | 1550 nm: –7.00 |

Table B-10 Power Meter

| Item | Default |
|----------------|---------|
| 6 Wavelength | 1310 nm |
| F2 Modulation* | CW |

^{*:} Displayed on in MU909015A6

Table B-11 Power Meter-Reference

| Item | Default | |
|------------------------|-------------|--|
| Enable reference value | Off | |
| Reference value | 0.00 dBm*1 | |
| | -5.00 dBm*2 | |

^{*1:} MU909014C6, MU909015A6, MU909015C6

^{*2:} MU909014C, MU909015C

Table B-12 Power Meter Pass/Fail Evaluation Threshold

| Item | Default | |
|------------------|---------------------------|--|
| Enable Threshold | Off | |
| Threshold | 0.00 dBm*1 | |
| | $-5.00~\mathrm{dBm^{*2}}$ | |

*1: MU909014C6, MU909015A6, MU909015C6

*2: MU909014C, MU909015C

Table B-13 Light Source

| Item | Default |
|----------------|---------|
| F1 Wavelength* | 1310 nm |
| F2 Modulation | CW |

*: Not switched in MU909015A6

Table B-14 Optical Loss Measurement • Light Source

| Item | Default |
|----------------|---------|
| F1 Wavelength | 1310 nm |
| F2 Modulation | CW |
| Optical output | Off |

Table B-15 Optical Loss Measurement • Power Meter

| Item | Default | |
|------------------------|------------|--|
| F1 Wavelength | 1310 nm | |
| F2 Modulation | CW | |
| Enable reference value | Off | |
| Reference | 0.00 dBm | |
| Enable Threshold | On | |
| Threshold | -10.00 dBm | |

Appendix C Software License

This instrument comes with the package software as described in Table C-1. Note, however, that the package software is not covered by the Anritsu Software License Agreement.

Table C-1 Software License

| Package | License | Remarks |
|-------------------|---------------------|---|
| linux-2.6.35.14 | GPL(*1) | |
| busybox | GPL(*1) | |
| e2fsprogs | GPL(*1) | |
| sys5utils | GPL(*1) | |
| util-linux | GPL(*1) | |
| inetutils 1.5 | GPL(*1) | |
| freetype 2.1.7 | FTL(*2),GPL(*1) | |
| mtd-utils | GPL(*1) | |
| U-Boot 1.1.4 | GPL(*1) | |
| Microwindows | MPL(*3) | Microwindows was downloaded from CVS on 2 Aug 2006. |
| flnx 0.18 | LGPL+exceptions(*4) | |
| dosfstools 2.11 | GPL(*1) | |
| portman 5 beta | Other | |
| encoding-japanese | MIT(*5) | |
| jQuery | MIT(*6) | |

(*1) GPL:

GNU GENERAL PUBLIC LICENSE Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software-to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

O. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such

program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to b) You must cause any work that you distribute or say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

- 2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
- a) You must cause the modified files to carry prominent notices stating that you changed the

files and the date of any change.

- publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

- 3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code

distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

- 4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
- 5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
- 6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on

the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any pertinent obligations, then consequence you may not distribute Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly

clear what is believed to be a consequence of the rest of this License.

- 8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
- 9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

How to Apply These Terms to Your New Programs

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER **EXPRESSED** IMPLIED, INCLUDING, BUT NOT LIMITED IMPLIED WARRANTIES TO, THE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TOTHE **QUALITY** AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, INCIDENTAL SPECIAL, OR. CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief
idea of what it does.>

Copyright (C) < year > < name of author >

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type 'show w'.

This is free software, and you are welcome to redistribute it under certain conditions; type 'show c' for details.

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than 'show w' and 'show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989 Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.

(*2) FTL:

The FreeType Project LICENSE

2006-Jan-27

Copyright 1996-2002, 2006 by David Turner, Robert Wilhelm, and Werner Lemberg

Introduction

=========

The FreeType Project is distributed in several archive packages; some of them may contain, in addition to the FreeType font engine, various tools and contributions which rely on, or relate to, the FreeType Project.

This license applies to all files found in such packages, and which do not fall under their own explicit license. The license affects thus the FreeType font engine, the test programs, documentation and makefiles, at the very least.

This license was inspired by the BSD, Artistic, and IJG (Independent JPEG Group) licenses, which all encourage inclusion and use of free software in commercial and freeware products alike. As a consequence, its main points are that:

- o We don't promise that this software works. However, we will be interested in any kind of bug reports. (`as is' distribution)
- o You can use this software for whatever you want, in parts or full form, without having to pay us. (`royalty-free' usage)
- o You may not pretend that you wrote this software. If you use it, or only parts of it, in a program, you must acknowledge somewhere in your documentation that you have used the FreeType code. (`credits')

We specifically permit and encourage the inclusion of this software, with or without modifications, in commercial products. We disclaim all warranties covering The FreeType Project and assume no liability related to The FreeType Project.

Finally, many people asked us for a preferred form for a credit/disclaimer to use in compliance with this license. We thus encourage you to use the following text:

11 11 11

Portions of this software are copyright ©
year> The FreeType
Project (www.freetype.org). All rights reserved.

Please replace <pear> with the value from the FreeType version you actually use.

Legal Terms

========

0. Definitions

Throughout this license, the terms `package', `FreeType Project', and `FreeType archive' refer to the set of files originally distributed by the authors (David Turner, Robert Wilhelm, and Werner Lemberg) as the `FreeType Project', be they named as alpha, beta or final release.

`You' refers to the licensee, or person using the project, where `using' is a generic term including compiling the project's source code as well as linking it to form a `program' or `executable'. This program is referred to as `a program using the FreeType engine'.

This license applies to all files distributed in the original FreeType Project, including all source code, binaries and documentation, unless otherwise stated in the file in its original, unmodified form as distributed in the original archive. If you are unsure whether or not a particular file is covered by this license, you must contact us to verify this.

The FreeType Project is copyright (C) 1996-2000 by David Turner, Robert Wilhelm, and Werner Lemberg. All rights reserved except as specified below.

1. No Warranty

THE FREETYPE PROJECT IS PROVIDED `AS IS' WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL ANY OF THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY DAMAGES CAUSED BY THE USE OR THE INABILITY TO USE, OF THE FREETYPE PROJECT.

2. Redistribution

This license grants a worldwide, royalty-free, perpetual and irrevocable right and license to use, execute, perform, compile, display, copy, create derivative works of, distribute and sublicense the FreeType Project (in both source and object code forms) and derivative works thereof for any purpose; and to authorize others to exercise some or all of the rights granted herein, subject to the following conditions:

- o Redistribution of source code must retain this license file (`FTL.TXT') unaltered; any additions, deletions or changes to the original files must be clearly indicated in accompanying documentation. The copyright notices of the unaltered, original files must be preserved in all copies of source files.
- o Redistribution in binary form must provide a disclaimer that states that the software is based in part of the work of the FreeType Team, in the distribution documentation. We also encourage you to put an URL to the FreeType web page in your documentation, though this isn't mandatory.

These conditions apply to any software derived from or based on the FreeType Project, not just the unmodified files. If you use our work, you must acknowledge us. However, no fee need be paid to us.

3. Advertising

Neither the FreeType authors and contributors nor you shall use the name of the other for commercial, advertising, or promotional purposes without specific prior written permission.

We suggest, but do not require, that you use one or more of the following phrases to refer to this software in your documentation or advertising materials: `FreeType Project', `FreeType Engine', `FreeType library', or `FreeType Distribution'.

As you have not signed this license, you are not required to accept it. However, as the FreeType Project is copyrighted material, only this license, or another one contracted with the authors, grants you the right to use, distribute, and modify it. Therefore, by using, distributing, or modifying the FreeType Project, you indicate that you understand and accept all the terms of this license.

4. Contacts

There are two mailing lists related to FreeType:

o freetype@nongnu.org

Discusses general use and applications of FreeType, as well as future and wanted additions to the library and distribution. If you are looking for support, start in this list if you haven't found anything to help you in the documentation.

o freetype-devel@nongnu.org

Discusses bugs, as well as engine internals, design issues, specific licenses, porting, etc.

Our home page can be found at

https://www.freetype.org

(*3) MPL:

MOZILLA PUBLIC LICENSE Version 1.1

1. Definitions.

- 1.0.1. "Commercial Use" means distribution or otherwise making the Covered Code available to a third party.
- 1.1. "Contributor" means each entity that creates or contributes to the creation of Modifications.
- 1.2. "Contributor Version" means the combination of the Original Code, prior Modifications used by a Contributor, and the Modifications made by that particular Contributor.
- 1.3. "Covered Code" means the Original Code or Modifications or the combination of the Original Code and Modifications, in each case including portions thereof.
- 1.4. "Electronic Distribution Mechanism" means a mechanism generally accepted in the software development community for the electronic transfer of data.
- 1.5. "Executable" means Covered Code in any form other than Source Code.
- 1.6. "Initial Developer" means the individual or entity identified as the Initial Developer in the Source Code notice required by Exhibit A.
- 1.7. "Larger Work" means a work which combines Covered Code or portions thereof with code not governed by the terms of this License.
- 1.8. "License" means this document.
- 1.8.1. "Licensable" means having the right to grant, to the maximum extent possible, whether at the time of the initial grant or subsequently acquired, any and all of the rights conveyed herein.
- 1.9. "Modifications" means any addition to or deletion from the substance or structure of either the Original Code or any previous Modifications. When Covered Code is released

- as a series of files, a Modification is:
 - A. Any addition to or deletion from the contents of a file containing Original Code or previous Modifications.
 - B. Any new file that contains any part of the Original Code or previous Modifications.
- 1.10. "Original Code" means Source Code of computer software code which is described in the Source Code notice required by Exhibit A as Original Code, and which, at the time of its release under this License is not already Covered Code governed by this License.
- 1.10.1. "Patent Claims" means any patent claim(s), now owned or hereafter acquired, including without limitation, method, process, and apparatus claims, in any patent Licensable by grantor.
- 1.11. "Source Code" means the preferred form of the Covered Code for making modifications to it, including all modules it contains, plus any associated interface definition files, scripts used to control compilation and installation of an Executable, or source codedifferential comparisons against either the Original Code or another well known, available Covered Code of the Contributor's choice. The Source Code can be in a compressed or archival form, provided the appropriate decompression or de-archiving software is widely available for no charge.
- 1.12. "You" (or "Your") means an individual or a legal entity exercising rights under, and complying with all of the terms of, this License or a future version of this License issued under Section 6.1. For legal entities, "You" includes any entity which controls, is controlled by, or is under common control with You. For purposes of this definition, "control" means (a) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (b) ownership of more than fifty percent (50%) of the outstanding shares or beneficial ownership of such entity.

2. Source Code License.

2.1. The Initial Developer Grant.

The Initial Developer hereby grants You a world-wide, royalty-free, non-exclusive license, subject to third party intellectual property

claims:

- (a) under intellectual property rights (other than patent or trademark) Licensable by Initial Developer to use, reproduce, modify, display, perform, sublicense and distribute the Original Code (or portions thereof) with or without Modifications, and/or as part of a Larger Work; and
- (b) under Patents Claims infringed by the making, using or selling of Original Code, to make, have made, use, practice, sell, and offer for sale, and/or otherwise dispose of the Original Code (or portions thereof).
- (c) the licenses granted in this Section 2.1(a) and (b) are effective on the date Initial Developer first distributes Original Code under the terms of this License.
- (d) Notwithstanding Section 2.1(b) above, no patent license is granted: 1) for code that You delete from the Original Code; 2) separate from the Original Code; or 3) for infringements caused by: i) the modification of the Original Code or ii) the combination of the Original Code with other software or devices.

2.2. Contributor Grant.

Subject to third party intellectual property claims, each Contributor hereby grants You a world-wide, royalty-free, non-exclusive license

- (a) under intellectual property rights (other than patent or trademark) Licensable by Contributor, to use, reproduce, modify, display, perform, sublicense and distribute the Modifications created by such Contributor (or portions thereof) either on an unmodified basis, with other Modifications, as Covered Code and/or as part of a Larger Work; and
- (b) under Patent Claims infringed by the making, using, or selling of Modifications made by that Contributor either alone and/or in combination with its Contributor Version (or portions of such combination), to make, use, sell, offer for sale, have made, and/or otherwise dispose of: 1) Modifications made by that Contributor (or portions thereof); and 2) the combination of Modifications made by that Contributor with its Contributor Version (or portions of such

combination).

- (c) the licenses granted in Sections 2.2(a) and 2.2(b) are effective on the date Contributor first makes Commercial Use of the Covered Code.
- (d) Notwithstanding Section 2.2(b) above, no patent license is granted: 1) for any code that Contributor has deleted from the Contributor Version; 2) separate from the Contributor Version; 3) for infringements caused by: i) third party modifications of Contributor Version or ii) the combination of Modifications made by that Contributor with other software (except as part of the Contributor Version) or other devices; or 4) under Patent Claims infringed by Covered Code in the absence of Modifications made by that Contributor.

3. Distribution Obligations.

3.1. Application of License.

The Modifications which You create or to which You contribute are governed by the terms of this License, including without limitation Section 2.2. The Source Code version of Covered Code may be distributed only under the terms of this License or a future version of this License released under Section 6.1, and You must include a copy of this License with every copy of the Source Code You distribute. You may not offer or impose any terms on any Source Code version that alters or restricts the applicable version of this License or the recipients' rights hereunder. However, You may include an additional document offering the additional rights described in Section 3.5.

3.2. Availability of Source Code.

Any Modification which You create or to which You contribute must be made available in Source Code form under the terms of this License either on the same media as an Executable version or via an accepted Electronic Distribution Mechanism to anyone to whom you made an Executable version available; and if made available via Electronic Mechanism, Distribution must remain available for at least twelve (12) months after the date it initially became available, or at least six (6) months after a subsequent version of that particular Modification has been made available to such recipients. You are responsible

for ensuring that the Source Code version remains available even if the Electronic Distribution Mechanism is maintained by a third party.

3.3. Description of Modifications.

You must cause all Covered Code to which You contribute to contain a file documenting the changes You made to create that Covered Code and the date of any change. You must include a prominent statement that the Modification is derived, directly or indirectly, from Original Code provided by the Initial Developer and including the name of the Initial Developer in (a) the Source Code, and (b) in any notice in an Executable version or related documentation in which You describe the origin or ownership of the Covered Code.

3.4. Intellectual Property Matters

(a) Third Party Claims.

If Contributor has knowledge that a license under a third party's intellectual property rights is required to exercise the rights granted by such Contributor under Sections 2.1 or 2.2, Contributor must include a text file with the Source Code distribution titled "LEGAL" which describes the claim and the party making the claim in sufficient detail that a recipient will know whom to contact. If Contributor obtains such knowledge after the Modification is made available as described in Section 3.2, Contributor shall promptly modify the LEGAL file in all copies Contributor makes available thereafter and shall take other steps (such as notifying appropriate mailing lists or newsgroups) reasonably calculated to inform those who received the Covered Code that new knowledge has been obtained.

(b) Contributor APIs.

If Contributor's Modifications include an application programming interface and Contributor has knowledge of patent licenses which are reasonably necessary to implement that API, Contributor must also include this information in the LEGAL file.

(c) Representations.

Contributor represents that, except as disclosed pursuant to Section 3.4(a) above, Contributor believes that Contributor's Modifications are Contributor's original creation(s) and/or Contributor has sufficient

rights to grant the rights conveyed by this License.

3.5. Required Notices.

You must duplicate the notice in Exhibit A in each file of the Source Code. If it is not possible to put such notice in a particular Source Code file due to its structure, then You must include such notice in a location (such as a relevant directory) where a user would be likely to look for such a notice. If You created one or more Modification(s) You may add your name as a Contributor to the notice described in Exhibit A. You must also duplicate this License in any documentation for the Source Code where You describe recipients' rights or ownership rights relating to Covered Code. You may choose to offer, and to charge a fee for, warranty, support, indemnity or liability obligations to one or more recipients of Covered Code. However, You may do so only on Your own behalf, and not on behalf of the Initial Developer or any Contributor. You must make it absolutely clear than any such warranty, support, indemnity or liability obligation is offered by You alone, and You hereby agree to indemnify the Initial Developer and every Contributor for any liability incurred by the Initial Developer or such Contributor as a result of warranty, support, indemnity or liability terms You offer.

3.6. Distribution of Executable Versions.

You may distribute Covered Code in Executable form only if the requirements of Section 3.1-3.5 have been met for that Covered Code, and if You include a notice stating that the Source Code version of the Covered Code is available under the terms of this License, including a description of how and where You have fulfilled the obligations of Section 3.2. The notice must be conspicuously included in any notice in an Executable version, related documentation or collateral in which You describe recipients' rights relating to the Covered Code. You may distribute the Executable version of Covered Code or ownership rights under a license of Your choice, which may contain terms different from this License, provided that You are in compliance with the terms of this License and that the license for the Executable version does not attempt to limit or alter the recipient's rights in the Source Code version from the rights set forth in this License. If You distribute the Executable version under a different license

You must make it absolutely clear that any terms which differ from this License are offered by You alone, not by the Initial Developer or any Contributor. You hereby agree to indemnify the Initial Developer and every Contributor for any liability incurred by the Initial Developer or such Contributor as a result of any such terms You offer.

3.7. Larger Works.

You may create a Larger Work by combining Covered Code with other code not governed by the terms of this License and distribute the Larger Work as a single product. In such a case, You must make sure the requirements of this License are fulfilled for the Covered Code.

4. Inability to Comply Due to Statute or Regulation.

If it is impossible for You to comply with any of the terms of this License with respect to some or all of the Covered Code due to statute. judicial order, or regulation then You must: (a) comply with the terms of this License to the maximum extent possible; and (b) describe the limitations and the code they affect. Such description must be included in the LEGAL file described in Section 3.4 and must be included with all distributions of the Source Code. Except to the extent prohibited by statute or regulation, such description must sufficiently detailed for a recipient of ordinary skill to be able to understand it.

5. Application of this License.

This License applies to code to which the Initial Developer has attached the notice in Exhibit A and to related Covered Code.

6. Versions of the License.

6.1. New Versions.

Netscape Communications Corporation ("Netscape") may publish revised and/or new versions of the License from time to time. Each version will be given a distinguishing version number.

6.2. Effect of New Versions.

Once Covered Code has been published under a particular version of the License, You may always continue to use it under the terms of that version. You may also choose to use such Covered Code under the terms of any subsequent version of the License published by Netscape. No one other than Netscape has the right to modify the terms applicable to Covered Code created under this License.

6.3. Derivative Works.

If You create or use a modified version of this License (which you may only do in order to apply it to code which is not already Covered Code governed by this License), You must (a) rename Your license so that the phrases "Mozilla", "MOZILLAPL", "MOZPL", "Netscape", "MPL", "NPL" or any confusingly similar phrase do not appear in your license (except to note that your license differs from this License) and (b) otherwise make it clear that Your version of the license contains terms which differ from the Mozilla Public License and Netscape Public License. (Filling in the name of the Initial Developer, Original Code or Contributor in the notice described in Exhibit A shall not of themselves be deemed to be modifications of this License.)

7. DISCLAIMER OF WARRANTY.

COVERED CODE IS PROVIDED UNDER THIS LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTY OF ANY KIND, **EITHER EXPRESSED** OR IMPLIED, WITHOUT INCLUDING. LIMITATION. WARRANTIES THAT THE COVERED CODE IS FREE OF DEFECTS, MERCHANTABLE, FIT FOR A PARTICULAR PURPOSE OR NON-INFRINGING. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE COVERED CODE IS WITH YOU. SHOULD ANY COVERED CODE PROVE DEFECTIVE IN ANY RESPECT, YOU (NOT THE INITIAL DEVELOPER OR ANY OTHER CONTRIBUTOR) ASSUME THE COST OF ANY NECESSARY SERVICING, REPAIR OR CORRECTION. THIS DISCLAIMER WARRANTY CONSTITUTES AN ESSENTIAL PART OF THIS LICENSE. NO USE OF ANY COVERED CODE IS AUTHORIZED HEREUNDER **EXCEPT** UNDER THIS DISCLAIMER.

8. TERMINATION.

8.1. This License and the rights granted hereunder will terminate automatically if You fail to comply with terms herein and fail to cure

such breach within 30 days of becoming aware of the breach. All sublicenses to the Covered Code which are properly granted shall survive any termination of this License. Provisions which, by their nature, must remain in effect beyond the termination of this License shall survive.

- 8.2. If You initiate litigation by asserting a patent infringement claim (excluding declatory judgment actions) against Initial Developer or a Contributor (the Initial Developer or Contributor against whom You file such action is referred to as "Participant") alleging that:
- such Participant's Contributor Version directly or indirectly infringes any patent, then any and all rights granted by such Participant to You under Sections 2.1 and/or 2.2 of this License shall, upon 60 days notice from Participant terminate prospectively, unless if within 60 days after receipt of notice You either: (i) agree in writing to pay Participant a mutually agreeable reasonable royalty for Your past and future use of Modifications made by such Participant, or (ii) withdraw Your litigation claim with respect to the Contributor Version against such Participant. If within 60 days of notice, a reasonable royalty and payment arrangement are not mutually agreed upon in writing by the parties or the litigation claim is not withdrawn, the rights granted by Participant to You under Sections 2.1 and/or 2.2 automatically terminate at the expiration of the 60 day notice period specified above.
- (b) any software, hardware, or device, other than such Participant's Contributor Version, directly or indirectly infringes any patent, then any rights granted to You by such Participant under Sections 2.1(b) and 2.2(b) are revoked effective as of the date You first made, used, sold, distributed, or had made, Modifications made by that Participant.
- 8.3. If You assert a patent infringement claim against Participant alleging that such Participant's Contributor Version directly or indirectly infringes any patent where such claim is resolved (such as by license or settlement) prior to the initiation of patent infringement litigation, then the reasonable value of the licenses granted by such Participant under Sections 2.1 or 2.2 shall be taken into account in determining the amount

or value of any payment or license.

8.4. In the event of termination under Sections 8.1 or 8.2 above, all end user license agreements (excluding distributors and resellers) which have been validly granted by You or any distributor hereunder prior to termination shall survive termination.

9. LIMITATION OF LIABILITY.

UNDER NO CIRCUMSTANCES AND UNDER NO LEGAL THEORY. WHETHER TORT (INCLUDING NEGLIGENCE), CONTRACT, OR OTHERWISE, SHALL YOU, THE INITIAL DEVELOPER. ANY OTHER CONTRIBUTOR. OR ANY DISTRIBUTOR OF COVERED CODE, OR ANY SUPPLIER OF ANY OF SUCH PARTIES, BE LIABLE TO ANY PERSON FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OFCHARACTER INCLUDING, WITHOUT LIMITATION. DAMAGES FOR LOSS OF GOODWILL, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, OR ANY AND ALL OTHER COMMERCIAL DAMAGES OR LOSSES, EVEN IF SUCH PARTY SHALL **INFORMED** HAVE BEEN OF POSSIBILITY OF SUCH DAMAGES. THIS LIMITATION OF LIABILITY SHALL NOT APPLY TO LIABILITY FOR DEATH OR PERSONAL INJURY RESULTING FROM SUCH PARTY'S NEGLIGENCE TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH LIMITATION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF **INCIDENTAL** OR. CONSEQUENTIAL DAMAGES, SOTHIS EXCLUSION AND LIMITATION MAY NOT APPLY TO YOU.

10. U.S. GOVERNMENT END USERS.

The Covered Code is a "commercial item," as that term is defined in 48 C.F.R. 2.101 (Oct. 1995), consisting of "commercial computer software" and "commercial computer software documentation," as such terms are used in 48 C.F.R. 12.212 (Sept. 1995). Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7202-4 (June 1995), all U.S. Government End Users acquire Covered Code with only those rights set forth herein.

11. MISCELLANEOUS.

This License complete represents the agreement concerning subject matter hereof. If any provision of this License is held to be unenforceable, such provision shall be reformed only to the extent necessary to make it enforceable. This License shall be governed by California law provisions (except to the extent applicable law, if any, provides otherwise), excluding its conflict-of-law provisions. With respect to disputes in which at least one party is a citizen of, or an entity chartered or registered to do business in the United States of America, any litigation relating to this License shall be subject to the jurisdiction of the Federal Courts of the Northern District of California, with venue lying in Santa Clara County, California, with the losing party responsible for costs, including limitation, court costs and reasonable attorneys' fees and expenses. The application of the United Nations Convention on Contracts for the International Sale of Goods is expressly excluded. Any law or regulation which provides that the language of a contract shall be construed against the drafter shall not apply to this License.

12. RESPONSIBILITY FOR CLAIMS.

As between Initial Developer and the Contributors, each party is responsible for claims and damages arising, directly or indirectly, out of its utilization of rights under this License and You agree to work with Initial Developer and Contributors to distribute such responsibility on an equitable basis. Nothing herein is intended or shall be deemed to constitute any admission of liability.

13. MULTIPLE-LICENSED CODE.

Initial Developer may designate portions of the Covered Code as "Multiple-Licensed". "Multiple-Licensed" means that the Initial Developer permits you to utilize portions of the Covered Code under Your choice of the NPL or the alternative licenses, if any, specified by the Initial Developer in the file described in Exhibit A.

EXHIBIT A -Mozilla Public License.

"The contents of this file are subject to the Mozilla Public License Version 1.1 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at http://www.mozilla.org/MPL/

Software distributed under the License is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

| The Original Code is | |
|---|--------------|
| The Initial Developer of the Original Code is | \mathbf{s} |
| Portions created by are Copyright (C) | Э |
| All Rights Reserved. Contributor(s): | |
| Alternatively, the contents of this file may be | е |

used under the terms of the _____ license (the "[___] License"), in which case the provisions of [_____] License are applicable instead of those above. If you wish to allow use of your version of this file only under the terms of the [___] License and not to allow others to use your version of this file under the MPL, indicate your decision by deleting the provisions above and replace them with the notice and other provisions required by the [___] License. If you do not delete the provisions above, a recipient may use your version of this file under either the MPL or the [__] License."

[NOTE: The text of this Exhibit A may differ slightly from the text of the notices in the Source Code files of the Original Code. You should use the text of this Exhibit A rather than the text found in the Original Code Source Code for Your Modifications.]

(*4) LGPL + exceptions:

FLTK License Agreement - The Fast Light Toolkit Home Page[Home | Documentation | FAQ | Links/Bazaar | News | Newsgroups | Polls | Software | Support]

FLTK License Agreement

December 11, 2001

The FLTK library and included programs are provided under the terms of the GNU Library General Public License (LGPL) with the following exceptions:

Modifications to the FLTK configure script, config header file, and makefiles by themselves to support a specific platform do not constitute a modified or derivative work.

The authors do request that such modifications be contributed to the FLTK project - send all contributions to "fltk-bugs@fltk.org".

Widgets that are subclassed from FLTK widgets do not constitute a derivative work.

Static linking of applications and widgets to the FLTK library does not constitute a derivative work and does not require the author to provide source code for the application or widget, use the shared FLTK libraries, or link their applications or widgets against a user-supplied version of FLTK.

If you link the application or widget to a modified version of FLTK, then the changes to FLTK must be provided under the terms of the LGPL in sections 1, 2, and 4.

You do not have to provide a copy of the FLTK license with programs that are linked to the FLTK library, nor do you have to identify the FLTK license in your program or documentation as required by section 6 of the LGPL.

However, programs must still identify their use of FLTK. The following example statement can be included in user documentation to satisfy this requirement:

[program/widget] is based in part on the

work of the FLTK project (http://www.fltk.org).

GNU LIBRARY GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1991 Free Software Foundation, Inc. 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the library

GPL. It is

numbered 2 because it goes with version 2 of the ordinary GPL.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users.

This license, the Library General Public License, applies to some specially designated Free Software Foundation software, and to any other libraries whose authors decide to use it. You can use it for your libraries, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library, or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link a

program with the library, you must provide complete object files to the recipients so that they can relink them with the library, after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

Our method of protecting your rights has two steps: (1) copyright the library, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the library.

Also, for each distributor's protection, we want to make certain that everyone understands that there is no warranty for this free library. If the library is modified by someone else and passed on, we want its recipients to know that what they have is not the original version, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that companies distributing free software will individually obtain patent licenses, thus in effect transforming the program into proprietary software. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License, which was designed for utility programs. This license, the GNU Library General Public License, applies to certain designated libraries. This license is quite different from the ordinary one; be sure to read it in full, and don't assume that anything in it is the same as in the ordinary license.

The reason we have a separate public license for some libraries is that they blur the distinction we usually make between modifying or adding to a program and simply using it. Linking a program with a library, without changing the library, is in some sense simply using the library, and is analogous to running a utility program or application program. However, in a textual and legal sense, the linked executable is a combined work, a derivative of the original library, and the ordinary General Public License treats it as such.

Because of this blurred distinction, using the ordinary General Public License for libraries did not effectively promote software sharing, because most developers did not use the libraries. We concluded that weaker conditions might promote sharing better.

However, unrestricted linking of non-free programs would deprive the users of those programs of all benefit from the free status of the libraries themselves. This Library General Public License is intended to developers of non-free programs to use free libraries, while preserving your freedom as a user of such programs to change the free libraries that are incorporated in them. (We have not seen how to achieve this as regards changes in header files, but we have achieved it as regards changes in the actual functions of the Library.) The hope is that this will lead to faster development of free libraries.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, while the latter only works together with the library.

Note that it is possible for a library to be covered by the ordinary General Public License rather than by this special one.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Library General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). hether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

The modified work must itself be a software library.

You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.

You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.

If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful. (For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices. Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or

a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also compile or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with Library, with the the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution. If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.

Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the source code distributed need not include anything that is

normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.

Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

- 8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
- 9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its

terms and conditions for copying, distributing or modifying the Library or works based on it.

- 10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
- 11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under particular any circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Library General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. **EXCEPT** WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING,

BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF **MERCHANTABILITY** AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY **PROVE** DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY **COPYRIGHT** HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES. INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL ORCONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR USE THEINABILITY TO LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

All source and documentation © 1998-2003 Bill Spitzak and others. Send questions and comments concerning this site to "webmaster at fltk dot org". This library is free software; you can redistribute it and/or modify it under the terms of the FLTK License Agreement.

(*5) MIT:

Copyright (c) 2013-2018 polygon planet <polygon.planet.aqua@gmail.com>

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

(*6) MIT (JQuery):

Copyright JS Foundation and other contributors, https://js.foundation/

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

References are to page numbers.

Symbol and Numbers

| 2 | Default Gateway 10-4 |
|--------------------------------------|-------------------------------------|
| 9 Delet I | Delete |
| 2-Point Loss4-50 | DHCP |
| A | Direction |
| Abbreviations1-14 | Display From |
| About3-31 | Disposal |
| About This ManualI | Distance Range1-13, 4-4, 10-19 |
| All Defaults4-49 | Distance Units |
| Application | dynamic range11-14 |
| Apply to All Wavelength 4-4 | E |
| Auto Analysis | Enable Active Fiber Check Step 4-13 |
| Auto Backlight off | Enable Auto File Name |
| Auto Launch | Enable Auto Save 4-16 |
| Auto Power Off | Enable Connection Check Step |
| Auto Save Device4-16 | Enable Connection Check Step |
| Averaging | Event Loss 4-38 |
| Averaging Time Setup | Event Marker 4-26 |
| _ | Event table 4-34 |
| В | |
| BSC1-12, 4-5 | F |
| BSL1-12 | FAIR 4-21 |
| C | Far End4-36, 4-56, 4-64 |
| | Fast 4-26 |
| Cable ID4-42 | Fiber ID 4-42 |
| Cable Loss4-34 | fiber maintenance tester 1-2 |
| Calibration | Fiber Visualizer 4-59 |
| Color Theme | Fiberscope 1-10 |
| Connection Check4-19 | File Sharing Setting 10-19 |
| Connection Verification Function 1-6 | Filename Prefix 4-16 |
| Copy3-22 | Firmware |
| cursor4-25 | Firmware Update screen 12-4 |
| Cursor4-27 | Full Auto4-4, 10-19 |
| CW4-58 | G |
| D | |
| Daily Maintenance12-2 | GOOD |
| Date4-16 | Grouped4-36, 4-56, 4-64 |
| dB/km Loss | Н |
| dB/km Loss LSA | Header 4-45 |
| Dead Zone1-12 | Help |
| DefaultB-1 | High S/N 4-26 |

Index

| 1 | PON (ONU to OLT) 10-19 |
|--|--|
| install file12-3 | PON Setup4-7 |
| IOR1-13, 4-5 | POOR4-21 |
| IOR Length Adjustment4-13 | Power Down |
| IOR:BSC Setup4-10 | Power meter measured value 5-5, 7-5 |
| IP Address | Power status |
| | Print Screen3-27 |
| L | pulse width11-12 |
| Language3-9 | Pulse Width 1-13 |
| Live Communications Detection 1-6 | Pulsewidth4-4 |
| Live communications optical signal detection 1-7 | Q |
| Load4-47 | _, |
| Load Trace4-48 | Questionable End4-36, 4-57, 4-64 |
| Location A4-42 | R |
| Location B4-42 | Range:Resolution:Pulse Width setup 4-8 |
| M | Reflectance4-38, 4-40 |
| | Reflective |
| Macro Bend4-38 | Rename |
| Mass Storage3-18 | Repack |
| Measurement light output 3-4 | Resolution |
| Measurement Procedure 4-2, 5-3 | * |
| Menu | S |
| MOD4-58 | Save As 4-44 |
| Mode4-26 | Save Trace 4-46 |
| N | Screen Capture Format |
| N. I.G. W. A. OMDD | Screen Title |
| Network Settings for μOTDR10-2 | Sequence Number |
| New Folder | Sequence Number 4-16 |
| Non-Reflective4-36, 4-40, 4-56, 4-64 | Setting the Remote GUI Password 10-18 |
| 0 | Setup-Auto Save 4-16 |
| OFF4-58 | Setup-General |
| Optical fiber schematic4-33 | Setup-Preferences3-10, 4-13 |
| optical loss | Show Internal Launch Fiber 4-13 |
| Optical power meter | Soft keys |
| Origin | Software License |
| ORL | Splice Loss 4-51 |
| OTDR | Splitter4-36, 4-57, 4-64 |
| | Splitter Loss 4-40 |
| P | Storage |
| PC10-23 | Subnet Mask 10-4 |
| Performance Test11-2 | |
| Performance Test Result Sheet11-33 | |
| PON4-5 | |

| Test Setup | 4-4 |
|----------------------------|----------|
| Thresholds Setup screen4 | 41, 4-42 |
| time | 3-4 |
| To Power Down the unit | 3-3 |
| To Power Up the unit | 3-2 |
| Top Menu | 3-33 |
| Total Events Found | 4-34 |
| Total Fiber Loss4-3 | 34, 4-40 |
| Trace Analysis | 4-33 |
| Trace View4-: | 22, 4-32 |
| Transportation | 12-9 |
| Туре | 4-36 |
| U | |
| USB Ethernet Converter | 10-23 |
| Using the Remote GUI | 10-23 |
| V | |
| VFL | 4-58 |
| VIP tab | 4-68 |
| Visual Fault Locator11-20 | 6, 11-28 |
| Visual Fault Locator (VFL) | 4-58 |
| W | |
| wavelength | 11-10 |
| Wavelength | 4-16 |
| Z | |
| Zooming | 4-30 |