



## VP F-to-SMPM F Adapter (bullet) VP104F

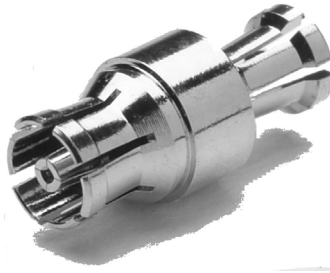


Figure 1. VP104F VP F-to-SMPM F Adapter

### 1. Tools and Materials

This tool is needed to install and remove the VP104F adapter.

Name	Vendor and Model/Part Number
Insertion and Removal Tool	Anritsu 01-501

### 2. Connecting to Shroud

- a. Grasp the center portion of the adapter with the 01-501 tool.
- b. Push the adapter into a shroud. There will be a click as it snaps into place.

### 3. Removing the Adapter from a Shroud

- a. Grasp the center portion of the adapter with the 01-501 tool.
- b. Gently pull the adapter until it disconnects from the shroud.



Figure 2. 01-501 Insertion and Removal Tool

### NOTES

**We strongly recommend using the 01-501 tool to both install and remove the adapter. This will assure the longest possible life for the adapter.**

**Take care when installing the VP104F as incorrect connector orientation can cause damage to the parts.**