



1-Port PIM Master™ Calibration Quick Reference Card



1. Connect Port 2 Out to Port 2 Return with supplied cable.
2. Connect a PIM Standard to the PIM Test Port.
3. Connect a low PIM Load device to the PIM Standard device.
4. Press Enter to calibrate, or Escape to exit calibration.

5. Remove the PIM Standard from the PIM Test Port.
6. Connect a low PIM Load device to the PIM Test Port.
7. Press Enter to calibrate, or Escape to exit calibration.

8. Remove Load device from instrument.
9. Leave PIM Test Port open.
10. Press Enter to calibrate, or Escape to exit calibration.

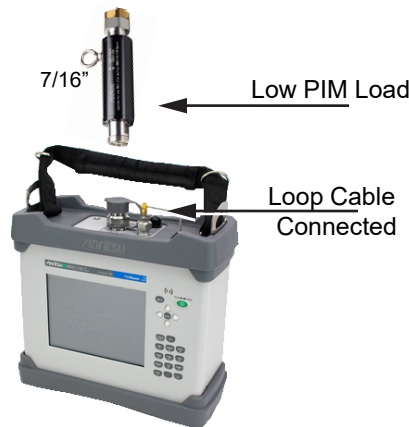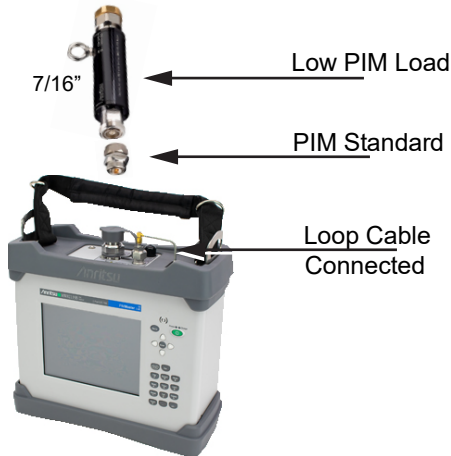

10580-00472 Rev. B

MW82119B-703 QRC

Copyright 2021 Anritsu Company. All rights reserved.


2-Port PIM Master™ Calibration Quick Reference Card



1. Connect Port 2 Out to Port 2 return with supplied cable
2. Connect a PIM Standard to the PIM Test Port.
3. Connect a low PIM Load device to the PIM Standard device.
4. Press Enter to calibrate, or Escape to exit calibration.

5. Remove the PIM Standard from the termination device and the PIM Test Port.
6. Remove the loop cable.
7. Connect a low PIM Load device to the PIM Test Port and to the Port 2 Out port.
8. Press Enter to calibrate, or Escape to exit calibration.

9. Remove Load devices from instrument.
10. Leave PIM Test Port open.
11. Press Enter to calibrate, or Escape to exit calibration.

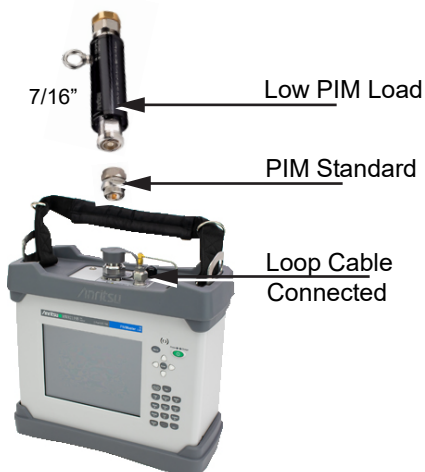

10580-00472



B