

General Caution

You must use Ethernet connection to perform any firmware updates.
Updating via USB may result in a failure to finish loading the OS and the unit will not reboot.

All is not lost, Recovery is possible using the Emergency Repair feature with Ethernet connection.

What will the Customer See in this release?

MP1026A Application Package V1.25 10/20/2008

General Features

- No Changes

Operating System

- No changes

Scope mode

Added support:

- Channel Math
- Mask Margin and more mask files
- Average Power unit selection (dBm or mW)
- Rise/Fall time threshold settings (10/90 or 20/80)
- Added SCPI support for 1 channel and 2 channel trace download

Performance enhancement:

- Faster responsiveness of trace display (in No Accumulation mode).
- Lower latency for measurement updates