

MX285051A-011/MX269051A-011
NR TDD sub-6GHz Downlink
MX285051A-021 NR TDD mmWave Downlink
MX285051A-061/MX269051A-061
NR TDD sub-6GHz Uplink
MX285051A-071 NR TDD mmWave Uplink
Operation Manual
Operation

Ninth Edition

- For safety and warning information, please read this manual before attempting to use the equipment.
- Additional safety and warning information is provided within the MS2850A Signal Analyzer Operation Manual (Mainframe Operation) or MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Mainframe Operation), and MX285051A/MX269051A 5G Standard Measurement Software (Base License) Operation Manual. Please also refer to them before using the equipment.
- Keep this manual with the equipment.

ANRITSU CORPORATION

Safety Symbols

To prevent the risk of personal injury or loss related to equipment malfunction, Anritsu Corporation uses the following safety symbols to indicate safety-related information. Ensure that you clearly understand the meanings of the symbols BEFORE using the equipment. Some or all of the following symbols may be used on all Anritsu equipment. In addition, there may be other labels attached to products that are not shown in the diagrams in this manual.

Symbols used in manual



DANGER

This indicates a very dangerous procedure that could result in serious injury or death if not performed properly.



WARNING

This indicates a hazardous procedure that could result in serious injury or death if not performed properly.



CAUTION

This indicates a hazardous procedure or danger that could result in light-to-severe injury, or loss related to equipment malfunction, if proper precautions are not taken.

Safety Symbols Used on Equipment and in Manual

The following safety symbols are used inside or on the equipment near operation locations to provide information about safety items and operation precautions. Ensure that you clearly understand the meanings of the symbols and take the necessary precautions BEFORE using the equipment.



This indicates a prohibited operation. The prohibited operation is indicated symbolically in or near the barred circle.



This indicates an obligatory safety precaution. The obligatory operation is indicated symbolically in or near the circle.



This indicates a warning or caution. The contents are indicated symbolically in or near the triangle.



This indicates a note. The contents are described in the box.



These indicate that the marked part should be recycled.

MX285051A-011/MX269051A-011 NR TDD sub-6GHz Downlink

MX285051A-021 NR TDD mmWave Downlink

MX285051A-061/MX269051A-061 NR TDD sub-6GHz Uplink

MX285051A-071 NR TDD mmWave Uplink

Operation Manual Operation

23 March 2018 (First Edition)

4 August 2023 (Ninth Edition)

Copyright © 2018-2023, ANRITSU CORPORATION.

All rights reserved. No part of this manual may be reproduced without the prior written permission of the publisher.

The operational instructions of this manual may be changed without prior notice.

Printed in Japan

Equipment Certificate

Anritsu Corporation guarantees that this equipment was inspected at shipment and meets the published specifications.

Anritsu Warranty

- During the warranty period, Anritsu Corporation will repair or exchange this software free-of-charge if it proves defective when used as described in the operation manual.
- The warranty period is 6 months from the purchase date.
- The warranty period after repair or exchange will remain 6 months from the original purchase date, or 30 days from the date of repair or exchange, depending on whichever is longer.
- This warranty does not cover damage to this software caused by Acts of God, natural disasters, and misuse or mishandling by the customer.

In addition, this warranty is valid only for the original equipment purchaser. It is not transferable if the equipment is resold.

Anritsu Corporation shall assume no liability for damage or financial loss of the customer due to the use of or a failure to use this equipment, unless the damage or loss is caused due to Anritsu Corporation's intentional or gross negligence.

Anritsu Corporation Contact

In the event of this equipment malfunctions, please contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

Also, the Anritsu website provides you with contact information and a contact form.

Notes On Export Management

- We assume no responsibility if this product is re-exported and used without our approval since it may not comply with the safety standards, etc., of specific countries.
- This product and its manuals may require an Export License/Approval by the Government of the product's country of origin for re-export from your country.

Before re-exporting the product or manuals, please contact us to confirm whether they are export-controlled items or not.

For more details, visit

<https://www.anritsu.com/support/export-procedures>.

When you dispose of the products or manuals subject to export control, they must be physically destroyed or shredded so as not to be unlawfully used for military purpose.

Software End-User License Agreement (EULA)

Please carefully read and accept this Software End-User License Agreement (hereafter this EULA) before using (includes executing, copying, installing, registering, etc.) this Software (includes programs, databases, scenarios, etc., used to operate, set, etc., Anritsu electronic equipment, etc.). By using this Software, you shall be deemed to have agreed to be bound by the terms of this EULA, and Anritsu Corporation (hereafter Anritsu) hereby grants you the right to use this Software with the Anritsu specified equipment (hereafter Equipment) for the purposes set out in this EULA.

Article 1. Grant of License and Limitations

1. You may not sell, transfer, rent, lease, lend, disclose, sublicense, or otherwise distribute this Software to third parties, whether or not paid therefor.
2. You may make one copy of this Software for backup purposes only.
3. You are not permitted to reverse engineer, disassemble, decompile, modify or create derivative works of this Software.
4. This EULA allows you to install one copy of this Software on one piece of Equipment.

Article 2. Disclaimers

To the extent not prohibited by law, in no event shall Anritsu be liable for direct, or any incidental, special, indirect or consequential damages whatsoever, including, without limitation, damages for loss of profits, loss of data, business interruption or any other commercial damages or losses, and damages claimed by third parties, arising out of or related to your use or inability to use this Software, unless the damages are caused due to Anritsu's intentional or gross negligence.

Article 3. Limitation of Liability

1. If a fault (bug) is discovered in this Software, making this Software unable to operate as described in the operation manual or specifications even though you have used this Software as described in the manual, Anritsu shall at its own discretion, fix the bug, or replace the software, or suggest a workaround, free-of-charge, provided, however, that the faults caused by the following items and any of your lost or

damaged data whatsoever shall be excluded from repair and the warranty.

- i) If this Software is deemed to be used for purposes not described in the operation manual or specifications.
 - ii) If this Software has been used in conjunction with other non-Anritsu-approved software.
 - iii) If this Software or the Equipment has been modified, repaired, or otherwise altered without Anritsu's prior approval.
 - iv) For any other reasons out of Anritsu's direct control and responsibility, such as but not limited to, natural disasters, software virus infections, or any devices other than this Equipment, etc.
2. Expenses incurred for transport, hotel, daily allowance, etc., for on-site repairs or replacement by Anritsu engineers necessitated by the above faults shall be borne by you.
 3. The warranty period for faults listed in Section 1 of this Article shall be either 6 months from the date of purchase of this Software or 30 days after the date of repair or replacement, whichever is longer.

Article 4. Export Restrictions

You shall not use or otherwise export or re-export directly or indirectly this Software except as authorized by the laws and regulations of Japan and the United States, etc. In particular, this Software shall not be exported or re-exported (a) into any Japan or US embargoed countries or (b) to anyone restricted by the Japanese export control regulations, or the US Treasury Department's list of Specially Designated Nationals or the US Department of Commerce Denied Persons List or Entity List. In using this Software, you warrant that you are not located in any such embargoed countries or on any such lists. You also agree that you will not use or otherwise export or re-export this Software for any purposes prohibited by the Japanese and US laws and regulations, including, without limitation, the development, design and manufacture or production of missiles or nuclear, chemical or biological weapons of mass destruction, and conventional weapons.

Article 5. Change of Terms

Anritsu may change without your approval the terms of this EULA if the changes are for the benefit of general customers, or are reasonable in light of the purpose of this EULA and circumstances of the changes. At the time of change, Anritsu will inform you of those changes and its effective date, as a general rule 45 days, in advance on its website, or in writing or by e-mail.

Article 6. Termination

1. Anritsu may terminate this EULA immediately if you violate any conditions described herein. This EULA shall also be terminated immediately by Anritsu if there is any good reason that it is deemed difficult to continue this EULA, such as your violation of Anritsu copyrights, patents, etc. or any laws and ordinances, or if it turns out

that you belong to an antisocial organization or has a socially inappropriate relationship with members of such organization.

2. You and Anritsu may terminate this EULA by a written notice to the other party 30 days in advance.

Article 7. Damages

If Anritsu suffers any damages or loss, financial or otherwise, due to your violation of the terms of this EULA, Anritsu shall have the right to seek proportional damages from you.

Article 8. Responsibility after Termination

Upon termination of this EULA in accordance with Article 6, you shall cease all uses of this Software immediately and shall as directed by Anritsu either destroy or return this Software and any backup copies, full or partial, to Anritsu.

Article 9. Negotiation for Dispute Resolution

If matters of interpretational dispute or items not covered under this EULA arise, they shall be resolved by negotiations in good faith between you and Anritsu.

Article 10. Governing Law and Court of Jurisdiction

This EULA shall be governed by and interpreted in accordance with the laws of Japan without regard to the principles of the conflict of laws thereof, and any disputes arising from or in relation to this EULA that cannot be resolved by negotiation described in Article 9 shall be subject to and be settled by the exclusive agreed jurisdiction of the Tokyo District Court of Japan.

Revision History:

February 29th, 2020

December 17th, 2021


Cautions Against Computer Virus Infection

- Copying files and data
Only files that have been provided directly from Anritsu or generated using Anritsu equipment should be copied to the instrument.
All other required files should be transferred by means of USB flash drive or CompactFlash media after undergoing a thorough virus check.
- Adding software
Do not download or install software that has not been specifically recommended or licensed by Anritsu.
- Network connections
Ensure that the network has sufficient anti-virus security protection in place.
- Protection against malware (malicious software such as viruses).
This equipment runs on Windows Operating System.
To connect this equipment to network, the following is advised.
 - Activate Firewall.
 - Install important updates of Windows.
 - Use antivirus software.

About This Manual

■ Configuration of Operation Manuals

The operation manuals for the
MX285051A-011/MX269051A-011 NR TDD sub-6GHz Downlink,
MX285051A-021 NR TDD mmWave Downlink,
MX285051A-061/MX269051A-061 NR TDD sub-6GHz Uplink,
and MX285051A-071 NR TDD mmWave Uplink
are configured as shown in the figure below.

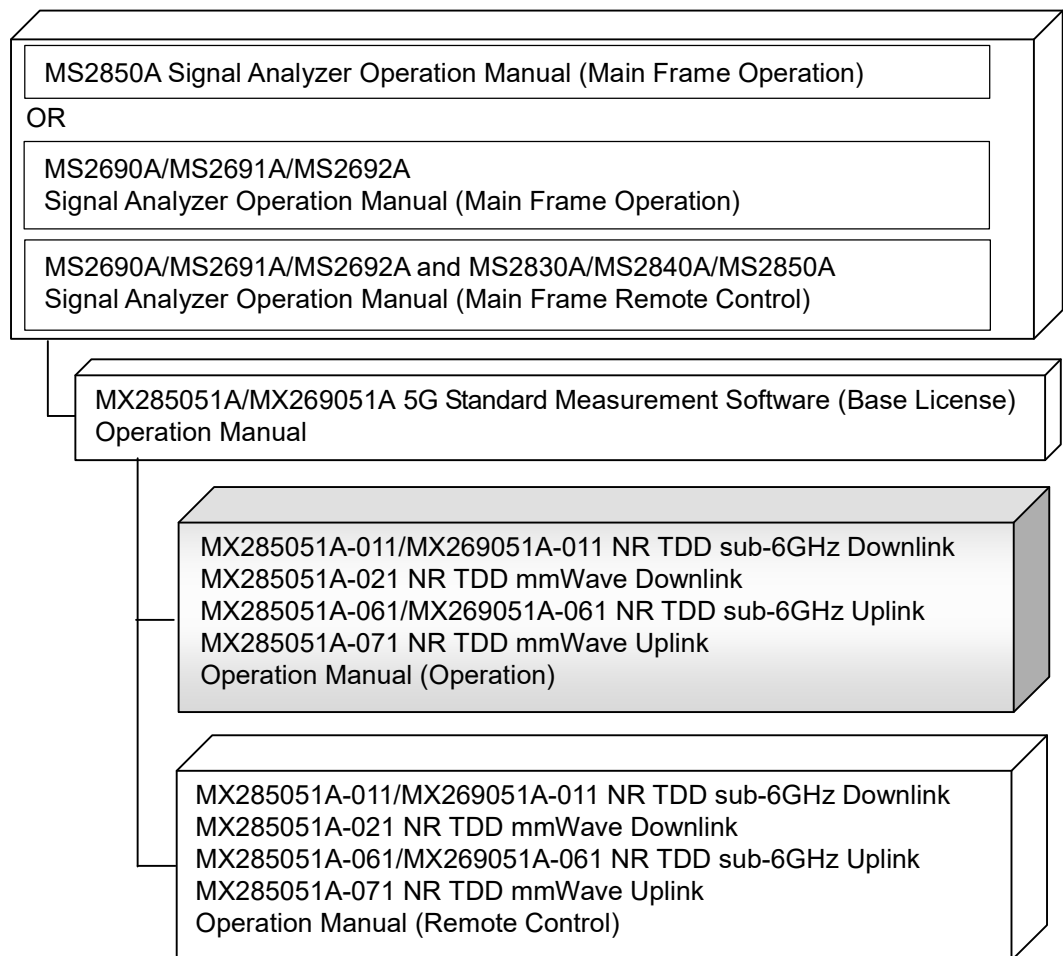

- Signal Analyzer Operation Manual (Mainframe Operation)
- Signal Analyzer Operation Manual (Mainframe Remote Control)

These manuals describe basic operating methods, maintenance procedures, common functions, and common remote control of the signal analyzer mainframe.

- 5G Standard Measurement Software (Base License) Operation Manual

This manual describes operating methods of the 5G Standard Measurement Software (Base License).

- MX285051A-011/MX269051A-011 NR TDD sub-6GHz Downlink
MX285051A-021 NR TDD mmWave Downlink
MX285051A-061/MX269051A-061 NR TDD sub-6GHz Uplink
MX285051A-071 NR TDD mmWave Uplink
Operation Manual (Operation) <This document>

This manual describes basic operating methods, and functions.

As for signal analyzer hardware and its basic functions and operation outline, refer to *MS2850A Signal Analyzer Operation Manual (Mainframe Operation)* or *MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Mainframe Operation)*.

- MX285051A-011/MX269051A-011 NR TDD sub-6GHz Downlink
MX285051A-021 NR TDD mmWave Downlink
MX285051A-061/MX269051A-061 NR TDD sub-6GHz Uplink
MX285051A-071 NR TDD mmWave Uplink
Operation Manual (Remote Control)

This manual describes remote control.

As for signal analyzer application's basic remote control functions and its definitions of common commands, refer to *MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Signal Analyzer Operation Manual (Mainframe Remote Control)*.

Convention Used in This Manual

Throughout this document, the use of MS2850A is assumed unless otherwise specified. If using MX269051A-011 or MX269051A-061 with MS2690A/MS2691A/MS2692A (hereinafter, MS269xA), change MS2850A to read MS269xA.

In this document,  indicates a panel key.

Table of Contents

About This Manual.....	I
Chapter 1 Overview.....	1-1
1.1 Product Overview	1-2
1.2 Product Configuration	1-3
1.3 Specifications	1-5
Chapter 2 Preparation.....	2-1
2.1 Signal Path Setup	2-2
2.2 Application Startup and Selection.....	2-4
2.3 Initialization and Calibration.....	2-5
Chapter 3 Measurement	3-1
3.1 Basic Operation	3-2
3.2 Frequency Function Menu	3-5
3.3 Amplitude Function Menu	3-6
3.4 Capture IQ Data Function Menu.....	3-8
3.5 5G Standard Setting	3-9
3.6 NR TDD sub-6GHz Downlink / NR TDD mmWave Downlink	3-10
3.7 NR TDD sub-6GHz Uplink / NR TDD mmWave Uplink.....	3-60
3.8 Setting Marker.....	3-77
3.9 Setting Trigger	3-81
3.10 EVM Display (Modulation Analysis).....	3-83
3.11 Constellation Display (Modulation Analysis).....	3-85
3.12 EVM vs Subcarrier Display (Modulation Analysis)	3-89
3.13 EVM vs Symbol Display (Modulation Analysis)	3-90
3.14 Spectral Flatness Display (Modulation Analysis).....	3-91
3.15 Power vs Resource Block Display (Modulation Analysis)..	3-92
3.16 EVM vs Resource Block Display (Modulation Analysis) ...	3-93
3.17 Summary Display (Modulation Analysis)	3-94
3.18 Power vs Resource Block Display (Carrier Aggregation)..	3-96
3.19 EVM vs Resource Block Display (Carrier Aggregation)....	3-98
3.20 Summary Display (Carrier Aggregation).....	3-100

1

2

3

4

5

6

Appendix

3.21	Summary Display (Power vs Time)	3-101
3.22	Block List Display (Power vs Time)	3-102
3.23	Main Trace Display (Power vs Time).....	3-106
3.24	Sub Trace Display (Power vs Time)	3-107
3.25	Spectrum Measurement	3-108

Chapter 4 Digitize Function..... 4-1

4.1	Saving IQ Data.....	4-2
4.2	Replay Function	4-7

Chapter 5 Performance Test 5-1

5.1	Overview of Performance Test	5-2
5.2	Performance Test Items	5-3

Chapter 6 Other Functions..... 6-1

6.1	Selecting Other Functions	6-2
6.2	Setting Title	6-2
6.3	Erasing Warmup Message	6-2

Appendix A Error Messages..... A-1

Appendix B Measurable Signal..... B-1

Appendix C Initial Value List C-1

Chapter 1 Overview

This chapter provides an overview and the product configuration of the MX285051A-011/MX269051A-011 NR TDD sub-6GHz Downlink, MX285051A-021 NR TDD mmWave Downlink, MX285051A-061/MX269051A-061 NR TDD sub-6GHz Uplink, and MX285051A-071 NR TDD mmWave Uplink.

1.1	Product Overview.....	1-2
1.2	Product Configuration	1-3
1.2.1	Standard configuration	1-3
1.2.2	Application parts	1-4
1.3	Specifications.....	1-5

1.1 Product Overview

The MS2850A or MS269xA Signal Analyzer enables high-speed, high-accuracy, and simple measurements of transmission characteristics of base stations and mobile stations for various mobile communications types. The MS2850A or MS269xA is equipped with high-performance signal analyzer and spectrum analyzer functions as standard, with optional measurement software allowing modulation analysis functionality supporting various digital modulation modes.

The MX285051A-011/MX269051A-011 NR TDD sub-6GHz Downlink, MX285051A-021 NR TDD mmWave Downlink, MX285051A-061/MX269051A-061 NR TDD sub-6GHz Uplink, and MX285051A-071 NR TDD mmWave Uplink (hereinafter, referred to as “MX285051A-011/021/061/071 and MX269051A-011/061”) are software options for measuring RF characteristics according to 5G NR Standard defined by 3GPP.

The MX285051A-011/021/061/071 and MX269051A-011/061 provides the following measurement features.

- Modulation accuracy measurement
- Carrier frequency measurement
- Transmitter power measurement

The MX285051A/MX269051A 5G Standard Measurement Software (Base License) is required to use the MX285051A-011/021/061/071 and MX269051A-011/061.

1.2 Product Configuration

1.2.1 Standard configuration

Table 1.2.1-1 to Table 1.2.1-6 list the standard configuration of the MX285051A-011/021/061/071 and MX269051A-011/061.

Table 1.2.1-1 MX285051A-011 NR TDD sub-6GHz Downlink Standard configuration

Item	Model	Product Name	Q'ty	Remarks
Application	MX285051A-011	NR TDD sub-6GHz Downlink	1	
Accessory	—	Installation CD-ROM	1	Application software, operation manual CD-ROM

Table 1.2.1-2 MX285051A-021 NR TDD mmWave Downlink Standard configuration

Item	Model	Product Name	Q'ty	Remarks
Application	MX285051A-021	NR TDD mmWave Downlink	1	
Accessory	—	Installation CD-ROM	1	Application software, operation manual CD-ROM

Table 1.2.1-3 MX285051A-061 NR TDD sub-6GHz Uplink Standard configuration

Item	Model	Product Name	Q'ty	Remarks
Application	MX285051A-061	NR TDD sub-6GHz Uplink	1	
Accessory	—	Installation CD-ROM	1	Application software, operation manual CD-ROM

Table 1.2.1-4 MX285051A-071 NR TDD mmWave Uplink Standard configuration

Item	Model	Product Name	Q'ty	Remarks
Application	MX285051A-071	NR TDD mmWave Uplink	1	
Accessory	—	Installation CD-ROM	1	Application software, operation manual CD-ROM

Table 1.2.1-5 MX269051A-011 NR TDD sub-6GHz Downlink Standard configuration

Item	Model	Product Name	Q'ty	Remarks
Application	MX269051A-011	NR TDD sub-6GHz Downlink	1	
Accessory	—	Installation CD-ROM	1	Application software, operation manual CD-ROM

Table 1.2.1-6 MX269051A-061 NR TDD sub-6GHz Uplink Standard configuration

Item	Model	Product Name	Q'ty	Remarks
Application	MX269051A-061	NR TDD sub-6GHz Uplink	1	
Accessory	—	Installation CD-ROM	1	Application software, operation manual CD-ROM

1.2.2 Application parts

Table 1.2.2-1 lists the application parts for the MX285051A-011/021/061/071 and MX269051A-011/061.

Table 1.2.2-1 Application parts

Model	Product Name	Remarks
W3963AE	MX285051A-011/MX269051A-011 NR TDD sub-6GHz Downlink MX285051A-021 NR TDD mmWave Downlink MX285051A-061/MX269051A-061 NR TDD sub-6GHz Uplink MX285051A-071 NR TDD mmWave Uplink Operation Manual (Operation)	English, printed version
W3964AE	MX285051A-011/MX269051A-011 NR TDD sub-6GHz Downlink MX285051A-021 NR TDD mmWave Downlink MX285051A-061/MX269051A-061 NR TDD sub-6GHz Uplink MX285051A-071 NR TDD mmWave Uplink Operation Manual (Remote Control)	English, printed version

1.3 Specifications

Table 1.3-1 shows the specifications for the MX285051A-011/021/061/071 and MX269051A-011/061.

Nominal values do not guarantee the performance as specifications.

Pre-Amp: Available when the option MS2850A-068/168 or MS269xA-008/108 is installed.

Table 1.3-1 Specifications

Item	Specification																																
MX285051A-011/MX269051A-011 NR TDD sub-6GHz Downlink																																	
Target signal	Downlink signals defined by TS 38.211. Subcarrier Spacing is 15 kHz, 30 kHz, or 60 kHz.																																
Channel bandwidth	<ul style="list-style-type: none">• For Subcarrier Spacing = 15 kHz, 5 MHz(25), 10 MHz(52), 15 MHz(79), 20 MHz(106), 25 MHz(133), 30 MHz(160)*¹, 40 MHz(216)*¹, 50 MHz(270) *¹• For Subcarrier Spacing = 30 kHz, 5 MHz(11), 10 MHz(24), 15 MHz(38), 20 MHz(51), 25 MHz(65), 30 MHz(78)*¹, 40 MHz(106)*¹, 50 MHz(133)*¹, 60 MHz(162)*², 70 MHz(189)*², 80 MHz(217)*², 90 MHz(245)*², 100 MHz(273)*²• For Subcarrier Spacing = 60 kHz, 10 MHz(11), 15 MHz(18), 20 MHz(24), 25 MHz(31), 30 MHz(38)*¹, 40 MHz(51)*¹, 50 MHz(65)*¹, 60 MHz(79)*², 70 MHz(93)*², 80 MHz(107)*², 90 MHz(121)*², 100 MHz(135)*² <p>*1: For MX269051A, this is available when MS269xA-077/177 is installed. *2: For MX269051A, this is available when MS269xA-078/178 is installed. Numbers in parentheses indicate the numbers of resource blocks.</p>																																
Number of carriers	MX285051A-011: 1 to 2 MX269051A-011: 1																																
Capture time	1, 2 Frame																																
Setting frequency range	<div>MX285051A-011 MS2850A-047: 100 MHz to 32 GHz MS2850A-046: 100 MHz to 44.5 GHz MX269051A-011</div> <table><tr><th>Option</th><th>077/177</th><th>078/178</th><th>067/167</th><th>Setting frequency range</th></tr><tr><td>MS2690A</td><td>✓/X</td><td>✓/X</td><td></td><td>100 MHz to 6 GHz</td></tr><tr><td rowspan="2">MS2691A</td><td>X</td><td>X</td><td></td><td>100 MHz to 13.5 GHz</td></tr><tr><td>✓</td><td>✓/X</td><td></td><td>100 MHz to 6 GHz</td></tr><tr><td rowspan="3">MS2692A</td><td>X</td><td>X</td><td>✓/X</td><td>100 MHz to 26.5 GHz</td></tr><tr><td>✓</td><td>✓/X</td><td>✓</td><td>100 MHz to 26.5 GHz</td></tr><tr><td>✓</td><td>✓/X</td><td>X</td><td>100 MHz to 6 GHz</td></tr></table> <div>✓: Installed X: Not installed ✓/X: Installed or Not installed</div>	Option	077/177	078/178	067/167	Setting frequency range	MS2690A	✓/X	✓/X		100 MHz to 6 GHz	MS2691A	X	X		100 MHz to 13.5 GHz	✓	✓/X		100 MHz to 6 GHz	MS2692A	X	X	✓/X	100 MHz to 26.5 GHz	✓	✓/X	✓	100 MHz to 26.5 GHz	✓	✓/X	X	100 MHz to 6 GHz
Option	077/177	078/178	067/167	Setting frequency range																													
MS2690A	✓/X	✓/X		100 MHz to 6 GHz																													
MS2691A	X	X		100 MHz to 13.5 GHz																													
	✓	✓/X		100 MHz to 6 GHz																													
MS2692A	X	X	✓/X	100 MHz to 26.5 GHz																													
	✓	✓/X	✓	100 MHz to 26.5 GHz																													
	✓	✓/X	X	100 MHz to 6 GHz																													
Measurement frequency range	MX285051A-011 800 MHz to 5 GHz MX269051A-011 600 MHz to 5 GHz																																

Table 1.3-1 Specifications (Cont'd)

Item	Specification												
MX285051A-011/MX269051A-011 NR TDD sub-6GHz Downlink (Cont'd)													
Measurement level range	MX285051A-011 -10 to +30 dBm (at Pre-Amp Off, or Pre-Amp not installed.) -30 to +10 dBm (at Pre-Amp On) MX269051A-011 -10 to +30 dBm (at Pre-Amp Off, or Pre-Amp not installed.) -25 to +10 dBm (at Pre-Amp On)												
Carrier frequency accuracy	When measuring in the following conditions at 18 to 28 °C, after CAL execution, • Measurement signal: EVM = 1 % (rms) of Downlink signal • Measurement time: 1 Frame • Either of the following single carrier signals output at the same frequency as the center frequency of the measuring instrument: Bandwidth 100 MHz (Subcarrier Spacing: 30 kHz) or Bandwidth 50 MHz (Subcarrier Spacing: 15 kHz) ± (accuracy of reference frequency × carrier frequency + 10 Hz)												
Residual EVM	When measuring in the following conditions at 18 to 28 °C, after CAL execution, • Measurement signal: Downlink signal • Measurement time: 1 Frame • Either of the following single carrier signals output at the same frequency as the center frequency of the measuring instrument: Bandwidth 100 MHz (Subcarrier Spacing: 30 kHz) or Bandwidth 50 MHz (Subcarrier Spacing: 15 kHz) ≤ 1.0 % (rms)												
Transmitter power accuracy	When measuring in the following conditions at 18 to 28 °C, after CAL execution, • Input attenuator ≥ 10 dB • Input signal: Within the range of measurement level and equal to input level or under • Single carrier signal output at the same frequency as the center frequency of the measuring instrument MX285051A-011:												
	<table><tr><th>Frequency range</th><th>Pre-Amp Off, or not installed</th><th>Pre-Amp On</th></tr><tr><td>800 MHz ≤ freq. < 4 GHz</td><td>±0.74 dB (Nominal)</td><td>±1.27 dB (Nominal)</td></tr><tr><td>4 GHz ≤ freq. < 4.2 GHz</td><td>±1.48 dB (Nominal)</td><td>±2.11 dB (Nominal)</td></tr><tr><td>4.2 GHz ≤ freq. ≤ 5 GHz</td><td>±1.45 dB (Nominal)</td><td>±1.94 dB (Nominal)</td></tr></table>	Frequency range	Pre-Amp Off, or not installed	Pre-Amp On	800 MHz ≤ freq. < 4 GHz	±0.74 dB (Nominal)	±1.27 dB (Nominal)	4 GHz ≤ freq. < 4.2 GHz	±1.48 dB (Nominal)	±2.11 dB (Nominal)	4.2 GHz ≤ freq. ≤ 5 GHz	±1.45 dB (Nominal)	±1.94 dB (Nominal)
	Frequency range	Pre-Amp Off, or not installed	Pre-Amp On										
	800 MHz ≤ freq. < 4 GHz	±0.74 dB (Nominal)	±1.27 dB (Nominal)										
	4 GHz ≤ freq. < 4.2 GHz	±1.48 dB (Nominal)	±2.11 dB (Nominal)										
	4.2 GHz ≤ freq. ≤ 5 GHz	±1.45 dB (Nominal)	±1.94 dB (Nominal)										
	MX269051A-011:												
<table><tr><th>Frequency range</th><th>Pre-Amp Off, or not installed</th><th>Pre-Amp On</th></tr><tr><td>600 MHz ≤ freq. < 5 GHz</td><td>±1.91 dB (Nominal)</td><td>±2.20 dB (Nominal)</td></tr></table>	Frequency range	Pre-Amp Off, or not installed	Pre-Amp On	600 MHz ≤ freq. < 5 GHz	±1.91 dB (Nominal)	±2.20 dB (Nominal)							
Frequency range	Pre-Amp Off, or not installed	Pre-Amp On											
600 MHz ≤ freq. < 5 GHz	±1.91 dB (Nominal)	±2.20 dB (Nominal)											
Transmitter power accuracy is calculated from an RSS (root summed square) error of the absolute amplitude accuracy and the in-band frequency characteristics.													

Table 1.3-1 Specifications (Cont'd)

Item	Specification
MX285051A-011/MX269051A-011 NR TDD sub-6GHz Downlink (Cont'd)	
Waveform display	MX285051A-011/MX269051A-011 When measuring the single carrier: <ul style="list-style-type: none"> • Constellation • EVM vs Symbol • Power vs Resource Block • Power vs Time • EVM vs Subcarrier • Spectral Flatness • EVM vs Resource Block MX285051A-011 When measuring the multi carrier: <ul style="list-style-type: none"> • Power vs Resource Block • EVM vs Resource Block
Power vs Time	
Function overview	Provides the Transmitter OFF Power, Time Mask, and Transmitter Transient Period measurement.
Display average noise	When measuring in the following conditions at 18 to 28 °C. Wide Dynamic Range = On, Noise Correction = Off, and Pre-Amp Mode = On. MX269051A-011: No signal input: –94 dBm/MHz (Nominal) MX285051A-011: No signal input: –95 dBm/MHz (Nominal)

Table 1.3-1 Specifications (Cont'd)

Item	Specification																														
MX285051A-021 NR TDD mmWave Downlink																															
Target signal	Downlink signals defined by TS 38.211. Subcarrier Spacing is 60 kHz or 120 kHz.																														
Channel bandwidth	• For Subcarrier Spacing = 60 kHz, 50 MHz(66), 100 MHz(132), 200 MHz(264) • For Subcarrier Spacing = 120 kHz, 50 MHz(32), 100 MHz(66), 200 MHz(132), 400 MHz(264)* *: Available when MS2850A-033/133/034/134 is installed. Numbers in parentheses indicate the numbers of resource blocks.																														
Number of carriers	<table><tr><th>Condition</th><th>Channel bandwidth</th><th>Maximum number of carriers</th></tr><tr><td rowspan="3">Without MS2850A-033/133</td><td>50 MHz</td><td>5</td></tr><tr><td>100 MHz</td><td>2</td></tr><tr><td>200 MHz</td><td>1</td></tr><tr><td rowspan="4">With MS2850A-033/133 or With MS2850A-034/134, and Center frequency < 4.2 GHz</td><td>50 MHz</td><td>8</td></tr><tr><td>100 MHz</td><td>5</td></tr><tr><td>200 MHz</td><td>2</td></tr><tr><td>400 MHz</td><td>1</td></tr><tr><td rowspan="4">With MS2850A-034/134 and Center frequency ≥ 4.2 GHz</td><td>50 MHz</td><td>8</td></tr><tr><td>100 MHz</td><td>8</td></tr><tr><td>200 MHz</td><td>4</td></tr><tr><td>400 MHz</td><td>2</td></tr></table>			Condition	Channel bandwidth	Maximum number of carriers	Without MS2850A-033/133	50 MHz	5	100 MHz	2	200 MHz	1	With MS2850A-033/133 or With MS2850A-034/134, and Center frequency < 4.2 GHz	50 MHz	8	100 MHz	5	200 MHz	2	400 MHz	1	With MS2850A-034/134 and Center frequency ≥ 4.2 GHz	50 MHz	8	100 MHz	8	200 MHz	4	400 MHz	2
Condition	Channel bandwidth	Maximum number of carriers																													
Without MS2850A-033/133	50 MHz	5																													
	100 MHz	2																													
	200 MHz	1																													
With MS2850A-033/133 or With MS2850A-034/134, and Center frequency < 4.2 GHz	50 MHz	8																													
	100 MHz	5																													
	200 MHz	2																													
	400 MHz	1																													
With MS2850A-034/134 and Center frequency ≥ 4.2 GHz	50 MHz	8																													
	100 MHz	8																													
	200 MHz	4																													
	400 MHz	2																													
Capture time	1, 2 Frame																														
Setting frequency range	MS2850A-047: 100 MHz to 32 GHz MS2850A-046: 100 MHz to 44.5 GHz																														
Measurement level range	-15 to +30 dBm (at Pre-Amp Off, or Pre-Amp not installed.) -30 to +10 dBm (at Pre-Amp On)																														
Carrier frequency accuracy	When measuring in the following conditions at 18 to 28 °C, after CAL execution, • Measurement signal: EVM = 2 % (rms) of Downlink signal • Measurement time: 1 Frame • The following single carrier signal output at the same frequency as the center frequency of the measuring instrument: Frequency 28 GHz, Bandwidth 100 MHz ± (accuracy of reference frequency × carrier frequency + 10 Hz) (Nominal)																														
Residual EVM	When measuring in the following conditions at 18 to 28 °C, after CAL execution, • Measurement signal: Downlink signal • Measurement time: 1 Frame • The following single carrier signal output at the same frequency as the center frequency of the measuring instrument: Frequency 28 GHz, Bandwidth 100 MHz ≤ 2.0 % (rms) (Nominal)																														

Table 1.3-1 Specifications (Cont'd)

Item	Specification		
MX285051A-021 NR TDD mmWave Downlink (Cont'd)			
Transmitter power accuracy	When measuring in the following conditions at 18 to 28 °C, after CAL execution, <ul style="list-style-type: none">• Input attenuator ≥ 10 dB• Input signal: Within the range of measurement level and equal to input level or under• The following single carrier signal output at the same frequency as the center frequency of the measuring instrument: Bandwidth 100 MHz		
	Frequency range	Pre-Amp Off, or not installed	Pre-Amp On
	26.5 GHz < freq. < 32 GHz	±2.54 dB (Nominal)	±3.74 dB (Nominal)
	Transmitter power accuracy is calculated from an RSS (root summed square) error of the absolute amplitude accuracy and the in-band frequency characteristics.		
Waveform display	When measuring the single carrier: <ul style="list-style-type: none">• Constellation• EVM vs Symbol• Power vs Resource Block• Power vs Time• EVM vs Subcarrier• Spectral Flatness• EVM vs Resource Block When measuring the multi carriers: <ul style="list-style-type: none">• Power vs Resource Block• EVM vs Resource Block		
Power vs Time			
Function overview	Provides the Transmitter OFF Power, Time Mask, and Transmitter Transient Period measurement.		
Display average noise	When measuring in the following conditions at 18 to 28 °C. Wide Dynamic Range = On, Noise Correction = Off, and Pre-Amp Mode = On. No signal input: −86.2 dBm/MHz (Nominal)		

Table 1.3-1 Specifications (Cont'd)

Item	Specification																																
MX285051A-061/MX269051A-061 NR TDD sub-6GHz Uplink																																	
Target signal	Uplink signals defined by TS 38.211. Subcarrier Spacing is 15 kHz, 30 kHz, or 60 kHz.																																
Channel bandwidth	<ul style="list-style-type: none">• For Subcarrier Spacing = 15 kHz, 5 MHz(25), 10 MHz(52), 15 MHz(79), 20 MHz(106), 25 MHz(133), 30 MHz(160)*¹, 40 MHz(216)*¹, 50 MHz(270)*¹• For Subcarrier Spacing = 30 kHz, 5 MHz(11), 10 MHz(24), 15 MHz(38), 20 MHz(51), 25 MHz(65), 30 MHz(78)*¹, 40 MHz(106)*¹, 50 MHz(133)*¹, 60 MHz(162)*², 70 MHz(189)*², 80 MHz(217)*², 90 MHz(245)*², 100 MHz(273)*²• For Subcarrier Spacing = 60 kHz, 10 MHz(11), 15 MHz(18), 20 MHz(24), 25 MHz(31), 30 MHz(38)*¹, 40 MHz(51)*¹, 50 MHz(65)*¹, 60 MHz(79)*², 70 MHz(93)*², 80 MHz(107)*², 90 MHz(121)*², 100 MHz(135)*² <p>*¹: For MX269051A, this is available when MS269xA-077/177 is installed. *²: For MX269051A, this is available when MS269xA-078/178 is installed. Numbers in parentheses indicate the numbers of resource blocks.</p>																																
Capture time	1, 2 Frame																																
Setting frequency range	<div>MX285051A-061 MS2850A-047: 100 MHz to 32 GHz MS2850A-046: 100 MHz to 44.5 GHz MX269051A-061</div> <table><tr><th>Option</th><th>077/177</th><th>078/178</th><th>067/167</th><th>Setting frequency range</th></tr><tr><td>MS2690A</td><td>✓/X</td><td>✓/X</td><td></td><td>100 MHz to 6 GHz</td></tr><tr><td rowspan="2">MS2691A</td><td>X</td><td>X</td><td></td><td>100 MHz to 13.5 GHz</td></tr><tr><td>✓</td><td>✓/X</td><td></td><td>100 MHz to 6 GHz</td></tr><tr><td rowspan="3">MS2692A</td><td>X</td><td>X</td><td>✓/X</td><td>100 MHz to 26.5 GHz</td></tr><tr><td>✓</td><td>✓/X</td><td>✓</td><td>100 MHz to 26.5 GHz</td></tr><tr><td>✓</td><td>✓/X</td><td>X</td><td>100 MHz to 6 GHz</td></tr></table> <div>✓ : Installed X : Not installed ✓/X : Installed or Not installed</div>	Option	077/177	078/178	067/167	Setting frequency range	MS2690A	✓/X	✓/X		100 MHz to 6 GHz	MS2691A	X	X		100 MHz to 13.5 GHz	✓	✓/X		100 MHz to 6 GHz	MS2692A	X	X	✓/X	100 MHz to 26.5 GHz	✓	✓/X	✓	100 MHz to 26.5 GHz	✓	✓/X	X	100 MHz to 6 GHz
Option	077/177	078/178	067/167	Setting frequency range																													
MS2690A	✓/X	✓/X		100 MHz to 6 GHz																													
MS2691A	X	X		100 MHz to 13.5 GHz																													
	✓	✓/X		100 MHz to 6 GHz																													
MS2692A	X	X	✓/X	100 MHz to 26.5 GHz																													
	✓	✓/X	✓	100 MHz to 26.5 GHz																													
	✓	✓/X	X	100 MHz to 6 GHz																													
Measurement frequency range	<div>MX285051A-061 800 MHz to 5 GHz MX269051A-061 600 MHz to 5 GHz</div>																																
Measurement level range	<div>MX285051A-061 −10 to +30 dBm (at Pre-Amp Off, or Pre-Amp not installed.) −30 to +10 dBm (at Pre-Amp On) MX269051A-061 −10 to +30 dBm (at Pre-Amp Off, or Pre-Amp not installed.) −25 to +10 dBm (at Pre-Amp On)</div>																																

Table 1.3-1 Specifications (Cont'd)

Item	Specification																		
MX285051A-061/MX269051A-061 NR TDD sub-6GHz Uplink (Cont'd)																			
Carrier frequency accuracy	<p>When measuring in the following conditions at 18 to 28 °C, after CAL execution,</p> <ul style="list-style-type: none">• Measurement signal: EVM = 1 % (rms) of Uplink signal• Measurement time: 1 Frame• Either of the following single carrier signals output at the same frequency as the center frequency of the measuring instrument: Bandwidth 100 MHz (Subcarrier Spacing: 30 kHz) or Bandwidth 50 MHz (Subcarrier Spacing: 15 kHz) $\pm (\text{accuracy of reference frequency} \times \text{carrier frequency} + 10 \text{ Hz})$																		
Residual EVM	<p>When measuring in the following conditions at 18 to 28 °C, after CAL execution,</p> <ul style="list-style-type: none">• Measurement signal: Uplink signal• Measurement time: 1 Frame• Either of the following single carrier signals output at the same frequency as the center frequency of the measuring instrument: Bandwidth 100 MHz (Subcarrier Spacing: 30 kHz) or Bandwidth 50 MHz (Subcarrier Spacing: 15 kHz) $\leq 1.0 \text{ \% (rms)}$																		
Transmitter power accuracy	<p>When measuring in the following conditions at 18 to 28 °C, after CAL execution,</p> <ul style="list-style-type: none">• Input attenuator $\geq 10 \text{ dB}$• Input signal: Within the range of measurement level and equal to input level or under• Single carrier signal output at the same frequency as the center frequency of the measuring instrument <p>MX285051A-061:</p> <table><tr><th>Frequency range</th><th>Pre-Amp Off, or not installed</th><th>Pre-Amp On</th></tr><tr><td>$800 \text{ MHz} \leq \text{freq.} < 4 \text{ GHz}$</td><td>$\pm 0.74 \text{ dB (Nominal)}$</td><td>$\pm 1.27 \text{ dB (Nominal)}$</td></tr><tr><td>$4 \text{ GHz} \leq \text{freq.} < 4.2 \text{ GHz}$</td><td>$\pm 1.48 \text{ dB (Nominal)}$</td><td>$\pm 2.11 \text{ dB (Nominal)}$</td></tr><tr><td>$4.2 \text{ GHz} \leq \text{freq.} \leq 5 \text{ GHz}$</td><td>$\pm 1.45 \text{ dB (Nominal)}$</td><td>$\pm 1.94 \text{ dB (Nominal)}$</td></tr></table> <p>MX269051A-061:</p> <table><tr><th>Frequency range</th><th>Pre-Amp Off, or not installed</th><th>Pre-Amp On</th></tr><tr><td>$600 \text{ MHz} \leq \text{freq.} < 5 \text{ GHz}$</td><td>$\pm 1.91 \text{ dB (Nominal)}$</td><td>$\pm 2.20 \text{ dB (Nominal)}$</td></tr></table> <p>Transmitter power accuracy is calculated from an RSS (root summed square) error of the absolute amplitude accuracy and the in-band frequency characteristics.</p>	Frequency range	Pre-Amp Off, or not installed	Pre-Amp On	$800 \text{ MHz} \leq \text{freq.} < 4 \text{ GHz}$	$\pm 0.74 \text{ dB (Nominal)}$	$\pm 1.27 \text{ dB (Nominal)}$	$4 \text{ GHz} \leq \text{freq.} < 4.2 \text{ GHz}$	$\pm 1.48 \text{ dB (Nominal)}$	$\pm 2.11 \text{ dB (Nominal)}$	$4.2 \text{ GHz} \leq \text{freq.} \leq 5 \text{ GHz}$	$\pm 1.45 \text{ dB (Nominal)}$	$\pm 1.94 \text{ dB (Nominal)}$	Frequency range	Pre-Amp Off, or not installed	Pre-Amp On	$600 \text{ MHz} \leq \text{freq.} < 5 \text{ GHz}$	$\pm 1.91 \text{ dB (Nominal)}$	$\pm 2.20 \text{ dB (Nominal)}$
Frequency range	Pre-Amp Off, or not installed	Pre-Amp On																	
$800 \text{ MHz} \leq \text{freq.} < 4 \text{ GHz}$	$\pm 0.74 \text{ dB (Nominal)}$	$\pm 1.27 \text{ dB (Nominal)}$																	
$4 \text{ GHz} \leq \text{freq.} < 4.2 \text{ GHz}$	$\pm 1.48 \text{ dB (Nominal)}$	$\pm 2.11 \text{ dB (Nominal)}$																	
$4.2 \text{ GHz} \leq \text{freq.} \leq 5 \text{ GHz}$	$\pm 1.45 \text{ dB (Nominal)}$	$\pm 1.94 \text{ dB (Nominal)}$																	
Frequency range	Pre-Amp Off, or not installed	Pre-Amp On																	
$600 \text{ MHz} \leq \text{freq.} < 5 \text{ GHz}$	$\pm 1.91 \text{ dB (Nominal)}$	$\pm 2.20 \text{ dB (Nominal)}$																	
Waveform display	<p>When measuring the single carrier:</p> <ul style="list-style-type: none">• Constellation• EVM vs Symbol• Power vs Resource Block• EVM vs Subcarrier• Spectral Flatness• EVM vs Resource Block																		

Table 1.3-1 Specifications (Cont'd)

Item	Specification		
MX285051A-071 NR TDD mmWave Uplink			
Target signal	Uplink signals defined by TS 38.211. Subcarrier Spacing is 60 kHz or 120 kHz.		
Channel bandwidth	• For Subcarrier Spacing = 60 kHz, 50 MHz(66), 100 MHz(132), 200 MHz(264) • For Subcarrier Spacing = 120 kHz, 50 MHz(32), 100 MHz(66), 200 MHz(132), 400 MHz(264)* *: Available when MS2850A-033/133/034/134 is installed. Numbers in parentheses indicate the numbers of resource blocks.		
Capture time	1, 2 Frame		
Setting frequency range	MS2850A-047: 100 MHz to 32 GHz MS2850A-046: 100 MHz to 44.5 GHz		
Measurement level range	-15 to +30 dBm (at Pre-Amp Off, or Pre-Amp not installed.) -30 to +10 dBm (at Pre-Amp On)		
Carrier frequency accuracy	When measuring in the following conditions at 18 to 28 °C, after CAL execution, • Measurement signal: EVM = 2 % (rms) of Uplink signal • Measurement time: 1 Frame • The following single carrier signal output at the same frequency as the center frequency of the measuring instrument: Frequency 28 GHz, Bandwidth 100 MHz ± (accuracy of reference frequency × carrier frequency + 10 Hz)		
Residual EVM	When measuring in the following conditions at 18 to 28 °C, after CAL execution, • Measurement signal: Uplink signal • Measurement time: 1 Frame • The following single carrier signal output at the same frequency as the center frequency of the measuring instrument: Frequency 28 GHz, Bandwidth 100 MHz ≤ 2.0 % (rms)		
Transmitter power accuracy	When measuring in the following conditions at 18 to 28 °C, after calibration. • Input attenuator ≥ 10 dB • Input signal: Within the range of measurement level and equal to input level or under • The following single carrier signal output at the same frequency as the center frequency of the measuring instrument: Bandwidth 100 MHz		
	Frequency range	Pre-Amp Off, or not installed	Pre-Amp On
	26.5 GHz < freq. < 32 GHz	±2.54 dB (Nominal)	±3.74 dB (Nominal)
Transmitter power accuracy is calculated from an RSS (root summed square) error of the absolute amplitude accuracy and the in-band frequency characteristics.			
Waveform display	When measuring the single carrier: • Constellation • EVM vs Subcarrier • EVM vs Symbol • Spectral Flatness • Power vs Resource Block • EVM vs Resource Block		

Table 1.3-1 Specifications (Cont'd)

Item	Specification
Common items for MX285051A-011/021/061/071 and MX269051A-011/061	
Digitize Function	
Function	Capable of outputting captured waveform data to internal storage or external storage.
Waveform Data	Format: I, Q (32 bit floating point binary format) Level: Assumes as $\sqrt{I^2 + Q^2} = 1$ for 0 dBm input Level accuracy: Same as the absolute amplitude accuracy and in-band frequency characteristics of the signal analyzer.
Replay Function	
Function	Analyzes traces of saved waveform data Format: I, Q (32 bit floating point binary format) Sampling rate: MS2850A When measuring the single carrier: Without MS2850A-033/133 Channel bandwidth ≤ 100 MHz: 162.5 MHz Channel bandwidth > 100 MHz: 325 MHz (MX285051A-021/071 only) With MS2850A-033/133 Channel bandwidth ≤ 100 MHz: 162.5 MHz Channel bandwidth > 100 MHz: 650 MHz (MX285051A-021/071 only) When measuring the multi carriers: When MX285051A-011 325 MHz When MX285051A-021 Without MS2850A-033/133: 325 MHz With MS2850A-033/133: 650 MHz With MS2850A-034/134: 1300 MHz MS269xA When measuring the single carrier: Without MS269xA-077/177: 50 MHz Only with MS269xA-077/177: 100 MHz With MS269xA-078/178: 200 MHz

Chapter 2 Preparation

This chapter describes the preparations required for using the MX285051A/MX269051A you are using.

Refer to *MS2850A Signal Analyzer Operation Manual (Mainframe Operation)* or *MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Mainframe Operation)* for common features, the panel keys, connectors used to connect external devices and general points of caution not included in this manual.

2.1	Signal Path Setup	2-2
2.2	Application Startup and Selection.....	2-4
	2.2.1 Launching application.....	2-4
	2.2.2 Selecting application	2-4
2.3	Initialization and Calibration.....	2-5
	2.3.1 Initialization	2-5
	2.3.2 Calibration.....	2-5

2.1 Signal Path Setup

As shown in Figure 2.1-1, connect the mainframe and the DUT using an RF cable, so that the signal to be tested is input to the RF Input connector.



CAUTION

Do not input a signal that has an excessive level to the RF Input connector.

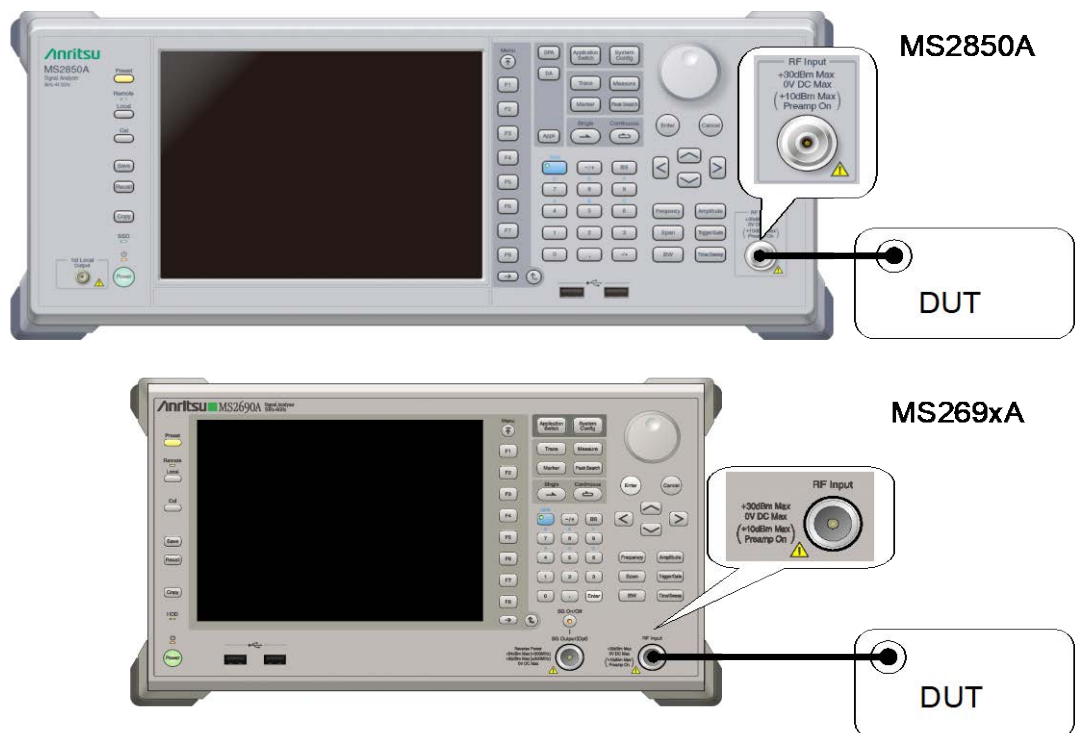


Figure 2.1-1 Signal path setup example

Set the reference signal from external sources, as required.

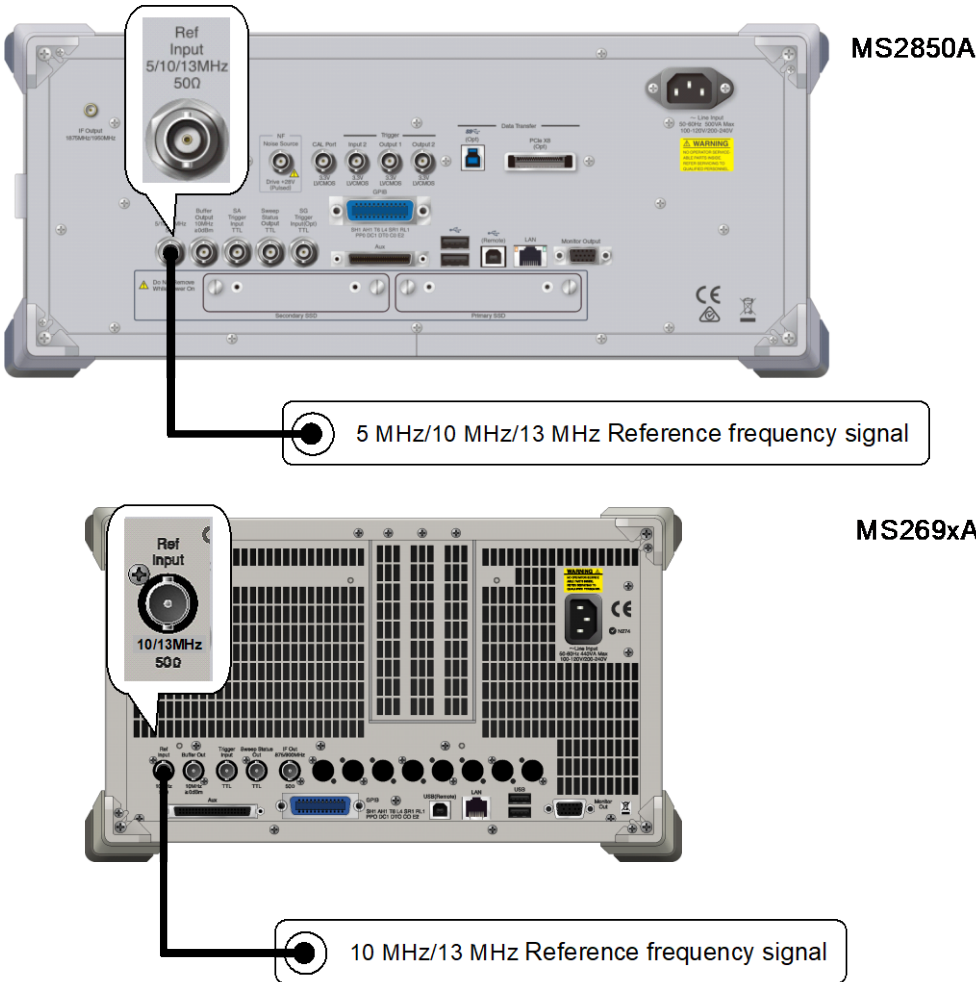


Figure 2.1-2 External reference signal input

2.2 Application Startup and Selection

To use the MX285051A/MX269051A, it is necessary to load (start up) and select the MX285051A/MX269051A.





2.2.1 Launching application

The MX285051A/MX269051A startup procedure is described below.

Note:

The XXX indicates the MX285051A/MX269051A name currently in use.


■ Procedure

1. Press  to display the Configuration screen.
2. Press  (Application Switch Settings) to display the Application Switch Registration screen.
3. Press  (Load Application Select), and move the cursor to “XXX” in the Unloaded Applications list.
 - If “XXX” is displayed in the **Loaded Applications** list, this means that the application is already loaded.
 - If “XXX” appears in neither the **Loaded Applications** nor **Unloaded Applications** list, this means that the application has not been installed.
4. Press  (Set) to load the application. If “XXX” is displayed in the **Loaded Applications** list, this means that the application is already loaded.

2.2.2 Selecting application

The selection procedure is described below.

■ Procedure

1. Press  to display the Application Switch menu.
2. Press the menu function key displaying “XXX”.
 - The application can also be selected with mouse, by clicking “XXX” on the task bar.

2.3 Initialization and Calibration



This section describes the parameter settings and the preparations required before starting measurement.

2.3.1 Initialization

After selecting the MX285051A/MX269051A, first perform initialization. Initialization should be performed in order to return the settable parameters to their default settings.

The initialization procedure is as follows.

■ Procedure

1. Press  to display the Preset function menu.
2. Press  (Preset).

2.3.2 Calibration

Perform calibration before measurement. Calibration sets the level accuracy frequency characteristics for the input level to flat, and adjusts level accuracy deviation caused by internal temperature fluctuations. Calibration should be performed when first performing measurement after turning on power, executes the performance test, or if beginning measurement when there is a difference in ambient temperature from the last time calibration was performed.

■ Procedure

1. Press  to display the Application Cal function menu.
2. Press  (SIGANA All).

For details on calibration functionality executable, refer to *MS2850A Signal Analyzer Operation Manual (Mainframe Operation)* or *MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Mainframe Operation)*.

Chapter 3 Measurement

This chapter describes the measurement function, the parameter contents and setting methods for the MX285051A-011/021/061/071 and MX269051A-011/061.

3.1	Basic Operation	3-2
3.1.1	Screen layout.....	3-2
3.1.2	Function menu.....	3-3
3.1.3	Performing measurement.....	3-4
3.2	Frequency Function Menu	3-5
3.3	Amplitude Function Menu	3-6
3.4	Capture IQ Data Function Menu.....	3-8
3.4.1	Setting capture time.....	3-8
3.4.2	Averaging IQ data.....	3-8
3.5	5G Standard Setting	3-9
3.6	NR TDD sub-6GHz Downlink / NR TDD mmWave Downlink	3-10
3.6.1	Modulation Analysis.....	3-11
3.6.2	Carrier Aggregation Analysis.....	3-34
3.6.3	Power vs Time.....	3-46
3.7	NR TDD sub-6GHz Uplink / NR TDD mmWave Uplink	3-60
3.7.1	Modulation Analysis.....	3-61
3.8	Setting Marker.....	3-77
3.9	Setting Trigger	3-81
3.10	EVM Display (Modulation Analysis).....	3-83
3.11	Constellation Display (Modulation Analysis).....	3-85
3.11.1	Constellation (EVM vs Subcarrier, EVM vs Symbol, Spectral Flatness).....	3-85
3.11.2	Constellation (Power vs RB, EVM vs RB).....	3-87
3.12	EVM vs Subcarrier Display (Modulation Analysis)	3-89
3.13	EVM vs Symbol Display (Modulation Analysis)	3-90
3.14	Spectral Flatness Display (Modulation Analysis).....	3-91
3.15	Power vs Resource Block Display (Modulation Analysis).....	3-92
3.16	EVM vs Resource Block Display (Modulation Analysis).....	3-93
3.17	Summary Display (Modulation Analysis)	3-94
3.18	Power vs Resource Block Display (Carrier Aggregation)	3-96
3.19	EVM vs Resource Block Display (Carrier Aggregation).....	3-98
3.20	Summary Display (Carrier Aggregation).....	3-100
3.21	Summary Display (Power vs Time)	3-101
3.22	Block List Display (Power vs Time)	3-102
3.23	Main Trace Display (Power vs Time).....	3-106
3.24	Sub Trace Display (Power vs Time)	3-107
3.25	Spectrum Measurement	3-108
3.25.1	Hand over parameter settings	3-109
3.25.2	Advanced Settings.....	3-110

3.1 Basic Operation

3.1.1 Screen layout

This section describes the screen layout for the MX285051A-011/021/061/071 and MX269051A-011/061.

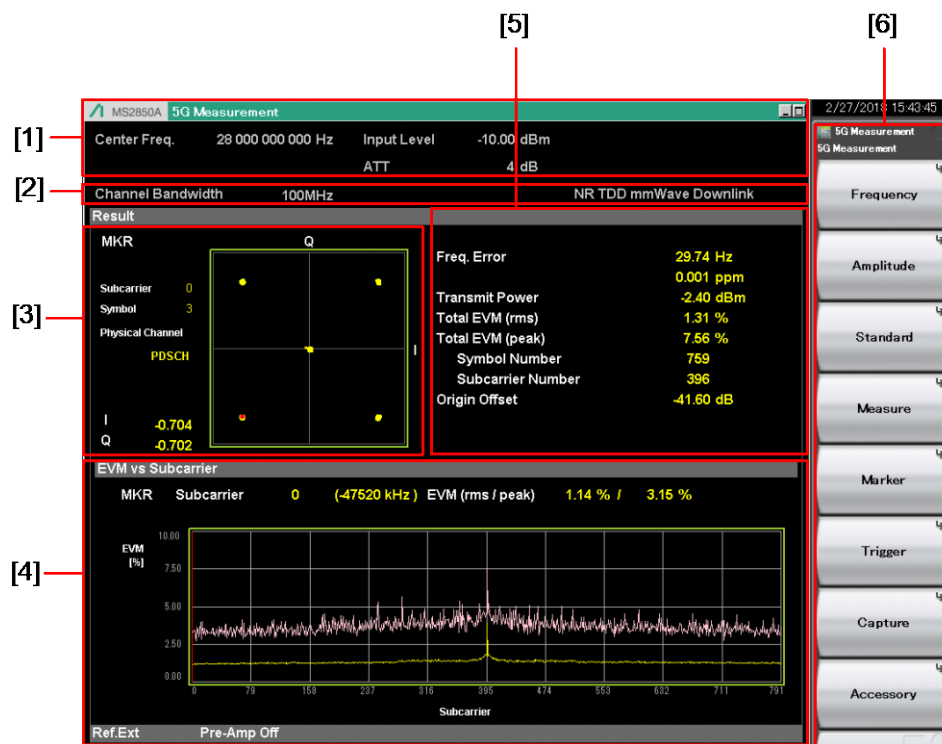


Figure 3.1.1-1 Screen Layout

- [1] Measurement parameter
Displays the set parameters.
- [2] Status message
Displays the status of signals.
- [3] Constellation
Displays a constellation of the selected symbol.
- [4] Graph window (Summary window)
Displays a graph of the measurement results.
- [5] Result window
Displays measurement results.
- [6] Function menu
Displays the functions executable with the function keys.

3.1.2 Function menu

This section describes the main function menu on the main screen.

Table 3.1.2-1 Main function menu

Function Key	Menu Display	Function
Page 1	5G Measurement	Press 5G Measurement to display.
F1	Frequency	Sets the frequency Refer to 3.2 “Frequency Function Menu”
F2	Amplitude	Sets the level and attenuator. Refer to 3.3 “Amplitude Function Menu”
F3	Standard	Selects the measurement signal. Refer to 3.5 “Standard Setting”
F4	Measure	Sets measurement items. Refer to 3.6 “NR TDD sub-6GHz Downlink / NR TDD mmWave Downlink,” 3.7 “NR TDD sub-6GHz Uplink / NR TDD mmWave Uplink”
F5	Marker	Sets a marker. Refer to 3.8 “Setting Maker”
F6	Trigger	Sets a trigger. Refer to 3.9 “Setting Trigger”
F7	Capture	Configures settings for IQ data capture. Refer to 3.4 “Capture IQ Data Function Menu”
F8	Accessory	Sets other functions. Refer to 5.1 “Selecting Other Functions”

3.1.3 Performing measurement

There are two measurement modes: single and continuous. Measurement is performed once in the single measurement mode, and continuously in the continuous measurement mode, respectively.

Single

Following capture of an input signal based on the settings of Capture Time, the selected measurement items are measured only for the measurement count (Storage Count) before measurement is stopped.

<Procedure>

1. Press .

Continuous

Following capture of an input signal based on the settings of Capture Time, the selected measurement items are continuously measured for the measurement count (Storage Count). Measurement will continue even if parameters are changed or the window display is changed. Measurement will be stopped if another application is selected or if the Replay function is executed.

<Procedure>

1. Press .

Note:

The two measurement modes are not available when the Replay function is executed. If the Replay function is executed, analysis is started when an IQ data file is specified.

Refer to 4.2 “Replay Function”

3.2 Frequency Function Menu

Configure the frequency settings in the Frequency function menu that is displayed by pressing **F1** (Frequency) on the main function menu. Also, press **Frequency** to display the Frequency function menu and open the Center Frequency dialog box.

Note:

You cannot set any frequency when the Replay function is executed.

■Center Frequency

Summary Sets the center frequency.

Setting range

MS2850A 100 MHz to the upper limit of the mainframe

MS269xA See the following table.

Option	077/177	078/178	067/167	Setting frequency range
MS2690A	✓/X	✓/X		100 MHz to 6 GHz
MS2691A	X	X		100 MHz to 13.5 GHz
	✓	✓/X		100 MHz to 6 GHz
MS2692A	X	X	✓/X	100 MHz to 26.5 GHz
	✓	✓/X	✓	100 MHz to 26.5 GHz
	✓	✓/X	X	100 MHz to 6 GHz

✓: Installed

X: Not installed

✓/X: Installed or Not installed



■RF Spectrum

Summary Sets whether to measure with IQ spectrum reversed.

Options Norm. Measures without IQ spectrum reversed.

Rvs. Measures with IQ spectrum reversed.

3.3 Amplitude Function Menu

Configure the level settings in the Amplitude function menu that is displayed by pressing  (Amplitude) on the main function menu. Also, press  to display the Amplitude function menu and open the Input Level dialog box.

Note:

You cannot set a level when the Replay function is executed.

■Input Level

Summary Sets the input level from the target DUT.

Range For Pre-Amp: On:
(-80.00 + Offset Value) to (10.00 + Offset Value) dBm
For Pre-Amp: Off:
(-60.00 + Offset Value) to (30.00 + Offset Value) dBm

■Attenuator (Auto/Manual)

Summary Selects automatic setting or manual setting of the input attenuator.

Options Auto The input attenuator is automatically set.
Manual The input attenuator is manually set.

■Attenuator

Summary Sets the input attenuator manually.

Range

**Table 3.3-1 Input attenuator setting range
(When Pre-amp is set to Off)**

Attenuator Manual	
Lower limit	Upper limit
Logic* ($\alpha = 0, \beta = 1, \gamma = 2$) The minimum value is 0 dB.	60 dB

**Table 3.3-2 Input attenuator setting range
(When Pre-amp is set to On)**

Attenuator Manual	
Lower limit	Upper limit
Logic* ($\alpha = 20, \beta = 21, \gamma = 22$) The minimum value is 20 dB	60 dB

*: The following rules apply:

- <1> If the reference level is 0 or if it is divisible by 2.
Attenuator (dB) = $RL^{*1} + \alpha$
- <2> Not <1>, and $INT(RL)^{*2}$ is an odd number.
Attenuator (dB) = $INT(RL)^{*2} + \beta$
- <3> Not <1>, and $INT(RL)$ is an even number.

$$\text{Attenuator (dB)} = \text{INT (RL)}^{*2} + \gamma$$

*1: Reference level (dBm)

*2: Maximum integer not exceeding reference level.

■Pre-Amp

Summary	Sets On/Off for the Pre-Amp function.	
Options	On	Enables the Pre-Amp function.
	Off	Disables the Pre-Amp function.

■Auto Range


Summary	Sets the input level and attenuator value so that the EVM measurement results are optimal according to the input level. On/Off for the Pre-Amp does not change from the setting value.
---------	--

■Offset

Summary	Sets On/Off for the Offset function.	
Options	On	Enables the offset function.
	Off	Disables the offset function.

■Offset Value

Summary	Sets the level offset coefficient.
Range	−99.99 to 99.99 dB
Setting example	

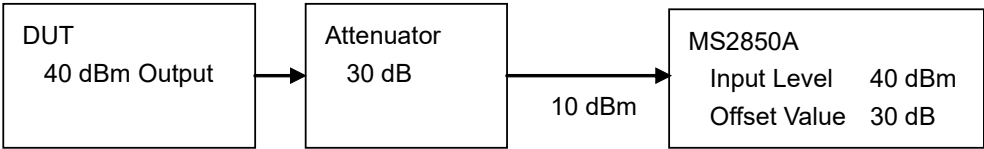

3.4 Capture IQ Data Function Menu


Configure the IQ data settings in the Capture function menu that is displayed by pressing  (Capture) on the main function menu.

Table 3.4-1 Capture function menu

Function Key	Menu Display	Function
Page 1	Capture	Press Capture to display.
F1	Capture Time	Switches between the two capture modes of IQ data. Options: Auto, Manual
F2	Capture Time Length	Sets the capture time length of IQ data in frame unit. Range: 1, 2 [frame]
F3	Save Captured Data	Saves the captured IQ data. Refer to Chapter 4 “Digitize Function”
F4	Replay	Replays the captured IQ data. Refer to Chapter 4 “Digitize Function”
F5	Stop Replaying	Stops replaying the captured IQ data. Refer to Chapter 4 “Digitize Function”

3.4.1 Setting capture time

The capture time is calculated by the following formula.

$$\text{Capture time [ms]} = (\text{Capture Time Length [frame]} + 1) \times 10 \text{ [ms]} + \alpha$$

α : Processing time margin for analysis

3.4.2 Averaging IQ data

The following is the method for averaging IQ data.

In the Auto mode, capture of one frame starts at the trigger timing. After the measurement is completed, capture of another frame starts at the next trigger timing. The average and maximum values are calculated from the measurement results at each storage count. The frames of multiple measurements are not necessarily consecutive.

The storage count and the capture count are the same in single measurement. In continuous measurement, the average and maximum values are calculated from the last data of the storage count after measurement has been performed the number of times corresponding to the storage count.

3.5 5G Standard Setting


Set the 5G Standard in the Standard function menu that is displayed by pressing  (Standard) on the main function menu.

Table 3.5-1 Standard function menu

Function Key	Menu Display	Function
Page 1	Standard	Press Standard to display.
F3	NR TDD sub-6GHz Downlink	Sets 5G Standard to NR TDD sub-6GHz Downlink. It is available when MX285051A-011/MX269051A-011 is installed.
F4	NR TDD mmWave Downlink	Sets 5G Standard to NR TDD mmWave Downlink. It is available when MX285051A-021 is installed.
F5	NR TDD sub-6GHz Uplink	Sets 5G Standard to NR TDD sub-6GHz Uplink. It is available when MX285051A-061/MX269051A-061 is installed.
F6	NR TDD mmWave Uplink	Sets 5G Standard to NR TDD mmWave Uplink. It is available when MX285051A-071 is installed.

3.6 NR TDD sub-6GHz Downlink / NR TDD mmWave Downlink





To set the measurement items, press  (Measure) on the main function menu or  to display the Measure function menu.

Table 3.6-1 Measure function menu
(NR TDD sub-6GHz Downlink / NR TDD mmWave Downlink)

Function Key	Menu Display	Function
Page 1	Measure	Press Measure to display.
F1	Modulation Analysis	Switches the measurement function to Modulation Analysis. It is available when MX285051A-011/MX269051A-011 or MX285051A-021 is installed.
F2	Carrier Aggregation Analysis	Switches the measurement function to Carrier Aggregation Analysis. It is available when MX285051A-011 or MX285051A-021 is installed.
F3	Power vs Time	Switches the measurement function to Power vs Time. It is available when MX285051A-011/MX269051A-011 or MX285051A-021 is installed.
F5	ACP (Swept)	Recalls the ACP function of the Spectrum Analyzer function. Refer to 3.25 "Spectrum Measurement"
F7	Channel Power (Swept)	Recalls the Channel Power function of the Spectrum Analyzer function. Refer to 3.25 "Spectrum Measurement"
Page 2	Measure	Press Measure and then  to display.
F1	Modulation Analysis	Same as F1 of Page 1
F2	Carrier Aggregation Analysis	Same as F2 of Page 1
F5	OBW (Swept)	Recalls the OBW function of the Spectrum Analyzer function. Refer to 3.25 "Spectrum Measurement"
F6	Spectrum Emission Mask (Swept)	Recalls the Spectrum Emission Mask function of the Spectrum Analyzer function. Refer to 3.25 "Spectrum Measurement"
F8	Advanced Settings	Display the Advanced Settings function menu. Refer to 3.25.2 "Advanced Settings"

3.6.1 Modulation Analysis

To set modulation analysis items, press  (Modulation Analysis) on the Measure function menu to display the Modulation Analysis function menu.



The Modulation Analysis function menu consists of two pages that are toggled by pressing .

Table 3.6.1-1 Modulation Analysis function menu

Function Key	Menu Display	Function
Page 1	Modulation Analysis	Press Modulation Analysis to display.
F1	Analysis Time	Sets measurement position. Refer to 3.6.1.1 "Analysis Time"
F2	Basic Settings	Sets the basic parameters for such as each channel and signal. Refer to 3.6.1.2 "Basic Settings"
F7	Advanced Settings	Sets the detailed parameters for modulation analysis. Refer to 3.6.1.3 "Advanced Settings"
Page 2	Modulation Analysis	Press Modulation Analysis and then  to display.
F1	Trace	Sets the trace. Refer to 3.6.1.4, 3.6.1.5, 3.6.1.6 "Trace"

3.6.1.1 Analysis Time


Set the measurement position in the Analysis Time function menu that is displayed by pressing  (Analysis Time) on page 1 of the Modulation Analysis function menu.

Table 3.6.1.1-1 Analysis Time function menu

Function Key	Menu Display	Function
Page 1	Analysis Time	Press Analysis Time to display.
F1	Starting Slot Number	Sets the starting slot number. It is fixed to 0 Slot in the MX285051A-011/MX269051A-011 and MX285051A-021.
F2	Measurement Interval	Sets the analysis slot length. Following values are fixed. For NR TDD sub-6GHz Downlink, Subcarrier Spacing = 15 kHz: 10 Slots Subcarrier Spacing = 30 kHz: 20 Slots Subcarrier Spacing = 60 kHz: 40 Slots For NR TDD mmWave Downlink, Subcarrier Spacing = 60 kHz: 40 Slots Subcarrier Spacing = 120 kHz: 80 Slots

The following table lists the slots per frame according to the Subcarrier Spacing.

Table 3.6.1.1-2 Number of Slots per Frame

Subcarrier Spacing	Slots/Frame
15 kHz	10
30 kHz	20
60 kHz	40
120 kHz	80

3.6.1.2 Basic Settings


Set the basic parameters for modulation analysis of such as each channel and signal. The Basic Settings function menu and a dialog box to set the parameters for each channel and signal are displayed by pressing  (Basic Settings) on page 1 of the Modulation Analysis function menu.

Table 3.6.1.2-1 Basic Settings function menu

Function Key	Menu Display	Function
Page 1	Basic Settings	Press Basic Settings to display.
F1	Frame Parameter	Displays a tab to set the parameters for Frame Parameter. Refer to Table 3.6.1.2-3 Frame Parameter
F2	Slot Parameter	Displays a tab to set the parameters for Slot Parameter of Test Model. (When Test Model is set to other than OFF.) Refer to Table 3.6.1.2-8 Slot Parameter
F2	SS-Block	Displays a tab to set the parameters for SS-Block. (When Test Model is set to OFF.) Refer to Table 3.6.1.2-5 SS-Block
F3	PDCCH/DM-RS	Displays a tab to set the parameters for PDCCH/DM-RS. (When Test Model is set to OFF.) Refer to Table 3.6.1.2-6 PDCCH/DM-RS
F4	PDSCH/DM-RS	Displays a tab to set the parameters for PDSCH/DM-RS. (When Test Model is set to OFF.) Refer to Table 3.6.1.2-7 PDSCH/DM-RS
F6	Restore Default Values	Restores the parameters in the dialog box to the default values. (When Test Model is set to OFF.)
F7	Set	Sets the parameters specified at the dialog box.
F8	Cancel	Cancels the parameters specified at the dialog box.

Table 3.6.1.2-2 Common Settings

Dialog Box	Function
Number of Carriers	Sets the number of carriers. Refer to “Number of Carriers” in 3.6.1.3 “Advanced Settings” for the range.
Reference Carrier	Sets the reference carrier for analysis. If the reference carrier is changed, the parameters displayed in the dialog box are also changed. Refer to “Reference Carrier” in 3.6.1.3 “Advanced Settings” for the range.
Carrier State	Displays whether to enable or disable Component Carrier.
Frequency Offset	Displays the frequency offset of Component Carrier. Refer to “Frequency Offset” in 3.6.1.3 “Advanced Settings” for the range.
Copy to All CC	Copies the parameter of Reference Carrier to other Component Carriers. However, the frequency offset is not copied.

Table 3.6.1.2-3 Frame Parameter

Dialog Box	Function
Test Model	Selects a Test Model compliant to TS38.141(2018-12). For NR TDD sub-6GHz Downlink, OFF, NR-FR1-TM1.1, NR-FR1-TM1.2, NR-FR1-TM2, NR-FR1-TM2a, NR-FR1-TM3.1, NR-FR1-TM3.1a, NR-FR1-TM3.2, NR-FR1-TM3.3 For NR TDD mmWave Downlink, OFF, NR-FR2-TM1.1, NR-FR2-TM2, NR-FR2-TM3.1
Test Model Version	Specifies the version of 3GPP TS38.141 when the input signal is the test model compliant to 3GPP TS38.141. Options: Auto, TS38.141 V15.1.0 (2019-03), TS38.141 V15.2.0 (2019-06)
Subcarrier Spacing	Sets the Subcarrier Spacing. For NR TDD sub-6GHz Downlink, Options: 15 kHz, 30 kHz, 60 kHz For NR TDD mmWave Downlink, Options: 60 kHz, 120 kHz
Number of RBs	Sets the Resource Block numbers of the target signal. Number of RBs is set to the default value when switching the Standard. For NR TDD sub-6GHz Downlink, Options: Subcarrier Spacing = 15 kHz: 25, 52, 79, 106, 133, 160, 216, 270 Subcarrier Spacing = 30 kHz: 11, 24, 38, 51, 65, 78, 106, 133, 162, 189, 217, 245, 273 Subcarrier Spacing = 60 kHz: 11, 18, 24, 31, 38, 51, 65, 79, 93, 107, 121, 135 For NR TDD mmWave Downlink, Options: Subcarrier Spacing = 60 kHz: 66, 132, 264 Subcarrier Spacing = 120 kHz: 32, 66, 132, 264
Channel Bandwidth	Displays the Channel Bandwidth of the target signal set by the Number of RBs.
Cell ID	Sets the Cell ID. Range: 0 to 1007

Table 3.6.1.2-3 Frame Parameter (Cont'd)

Dialog Box	Function
Synchronization Mode	<p>Sets the synchronized signal.</p> <p>Options: SS Sets Synchronization Signal for the synchronized signal.</p> <p>DM-RS for PDSCH Sets Demodulation Reference Signal for PDSCH for the synchronized signal.</p>
Phase Compensation	<p>Sets whether to enable or disable Phase Compensation.</p> <p>Phase Compensation sets whether to enable (ON) or disable (OFF) phase compensation during upconversion defined in the 3GPP NR standard (TS 38.211, V15.1.0 or later).</p> <p>Upconversion formula for ON: $\text{Re}\left\{s_l^{(p,\mu)}(t) \cdot e^{j2\pi f_0(t-t_{\text{start},J}^\mu - N_{\text{CP},J}^\mu T_c)}\right\}$</p> <p>Upconversion formula for OFF: $\text{Re}\left\{s_l^{(p,\mu)}(t) \cdot e^{j2\pi f_0 t}\right\}$</p> <p>For details, refer to 5.4 in TS 38.211 (V15.1.0 or later).</p>

The following table shows the relation between the Number of RBs setting and the Channel Bandwidth at each Subcarrier Spacing.

Table 3.6.1.2-4 Relationship Between Number of RBs and Channel Bandwidth

Subcarrier Spacing	Number of RBs	Channel Bandwidth
15 kHz	25	5 MHz
	52	10 MHz
	79	15 MHz
	106	20 MHz
	133	25 MHz
	160* ¹	30 MHz
	216* ¹	40 MHz
	270* ¹	50 MHz
30 kHz	11	5 MHz
	24	10 MHz
	38	15 MHz
	51	20 MHz
	65	25 MHz
	78* ¹	30 MHz
	106* ¹	40 MHz
	133* ¹	50 MHz
	162* ²	60 MHz
	189* ²	70 MHz
	217* ²	80 MHz
	245* ²	90 MHz
	273* ²	100 MHz
60 kHz (MX285051A-011/ MX269051A-011)	11	10 MHz
	18	15 MHz
	24	20 MHz
	31	25 MHz
	38* ¹	30 MHz
	51* ¹	40 MHz
	65* ¹	50 MHz
	79* ²	60 MHz
	93* ²	70 MHz
	107* ²	80 MHz
	121* ²	90 MHz
	135* ²	100 MHz
60 kHz (MX285051A-021)	66	50 MHz
	132	100 MHz
	264	200 MHz
120 kHz	32	50 MHz
	66	100 MHz
	132	200 MHz
	264* ³	400 MHz

*1: For MS269xA, this is available when MS269xA-077/177 is installed.

*2: For MS269xA, this is available when MS269xA-078/178 is installed.

*3: For MS2850A, this is available when MS2850A-033/133 is installed.

Table 3.6.1.2-5 SS-Block

Dialog Box	Function
Enable	Sets whether to enable or disable SS-Block. When set to disable, no measurement result of SS-Block is displayed. Fixed disable in the following condition. Number of RBs < 20, Subcarrier Spacing = 60 kHz
SS-Block Subcarrier Spacing	This parameter is fixed and cannot be changed. Displays the same value of the Subcarrier Spacing of the Frame Parameter.
SS-Block Candidate	Sets the position of the SS-Block in the time direction. For NR TDD sub-6GHz Downlink, Options: Subcarrier Spacing = 15 kHz: CaseA (L = 4), CaseA (L = 8) Subcarrier Spacing = 30 kHz: CaseB (L = 4), CaseB (L = 8), CaseC (L = 4), CaseC (L = 8) For NR TDD mmWave Downlink, Options: Subcarrier Spacing = 120 kHz: CaseD (L = 64)
Antenna Port	Sets the Antenna Port for SS-Block. It is fixed to 4000.
SSB Subcarrier Offset	Sets the Subcarrier Offset in the RB to map the SS-Block. Range: 0 to 11
SSB RB Offset	Sets the RB Offset to map the SS-Block. Range: 0 to Number of RBs – 20 (SSB Subcarrier Offset = 0) 0 to Number of RBs – 20 – 1 (SSB Subcarrier Offset > 0)
Delta SSB Center to CF	Displays the offset between the center of SS Block and the center of Carrier Frequency.
Periodicity	Sets the SS-Block Periodicity. Options: 10 ms 20 ms (Only when Capture Length is 2 Frames)
Analysis Frame Number	Sets the analysis target frame number in SS synchronization. The frame in which SS Block is mapped is numbered 0. Options: 0 1 (Only when SS-Block Periodicity is 20 ms)

Table 3.6.1.2-5 SS-Block (Cont'd)

Dialog Box	Function
P-SS Power Boosting (Auto/Manual)	Selects automatic detection and manual setting of the Primary Synchronization Signal power. Fixed to Auto.
P-SS Power Boosting	Sets the level of the Primary Synchronization Signal. This parameter is fixed and cannot be changed.
S-SS Power Boosting (Auto/Manual)	Selects automatic detection and manual setting of the Secondary Synchronization Signal power. Fixed to Auto.
S-SS Power Boosting	Sets the level of the Secondary Synchronization Signal. This parameter is fixed and cannot be changed.
PBCH Power Boosting (Auto/Manual)	Selects automatic detection and manual setting of the PBCH power. Fixed to Auto.
PBCH Power Boosting	Sets the PBCH level. This parameter is fixed and cannot be changed.
SS-Block Transmission	Enables or disables SS-Block by Index. Options: Enable, Disable For NR TDD mmWave Downlink, all indexes are fixed to Enable.

Table 3.6.1.2-6 PDCCH/DM-RS

Dialog Box	Function
Slot	<p>Selects the Slot number for which the parameter of PDCCH/DM-RS is to be set.</p> <p>For NR TDD sub-6GHz Downlink, Range: Subcarrier Spacing = 15 kHz: 0 to 9 Subcarrier Spacing = 30 kHz: 0 to 19 Subcarrier Spacing = 60 kHz: 0 to 39</p> <p>For NR TDD mmWave Downlink, Range: Subcarrier Spacing = 60 kHz: 0 to 39 Subcarrier Spacing = 120 kHz: 0 to 79</p>
Enable	<p>Enables or disables the PDCCH/DM-RS for the selected Slot.</p> <p>No measurement result of the PDDCH/DM-RS of the disabled Slot is displayed.</p>
Antenna Port	Sets the Antenna Port for PDCCH/DM-RS. It is fixed to 2000.
PDCCH Power Boosting (Auto/Manual)	Selects automatic detection and manual setting of the PDCCH power for DM-RS. Fixed to Auto.
PDCCH Power Boosting	<p>Sets the PDCCH level of the DM-RS.</p> <p>This parameter is fixed and cannot be changed.</p>
Number of Symbols	<p>This is the number of symbols for PDCCH.</p> <p>This parameter is fixed and cannot be changed.</p>
Copy to All Slot	Copies the setting of the selected Slot to all the Slots.

Table 3.6.1.2-7 PDSCH/DM-RS

Dialog Box	Function									
Slot	Selects the Slot number for which the parameter of PDSCH/DM-RS is to be set. For NR TDD sub-6GHz Downlink, Range: Subcarrier Spacing = 15 kHz: 0 to 9 Subcarrier Spacing = 30 kHz: 0 to 19 Subcarrier Spacing = 60 kHz: 0 to 39 For NR TDD mmWave Downlink, Range: Subcarrier Spacing = 60 kHz: 0 to 39 Subcarrier Spacing = 120 kHz: 0 to 79									
Enable	Enables or disables the PDSCH/DM-RS for the selected Slot. No measurement result of the PDSCH/DM-RS of the disabled Slot is displayed.									
Antenna Port	Sets the Antenna Port. Antenna Port settings are common to all Slots. Options: 1000, 1001, 1002, 1003									
Modulation Scheme	Selects the modulation scheme for the PDSCH. Options: QPSK, 16QAM, 64QAM, 256QAM, Auto									
PDSCH Mapping Type	Sets the Mapping Type of PDSCH. Options: typeA, typeB									
Start Symbol	Sets the Mapping Start Symbol of PDSCH. When the PDSCH Mapping Type is typeA Range: 0 to DMRS typeA pos When the PDSCH Mapping Type is typeB Range: 0 to 12									
Number of Symbols	Sets the number of symbols for PDSCH. Range: 2 to 14 – PDSCH Start Symbol									
PDSCH Power Boosting (Auto/Manual)	Selects automatic detection and manual setting of the PDSCH power for DM-RS. Options: Auto, Manual									
PDSCH Power Boosting	Sets the PDSCH level of the DM-RS. The following values are set when PDSCH Power Boosting is Auto. <table><tr><th>DMRS CDM Group without Data</th><th>DMRS Config Type</th><th>PDSCH Level (dB)</th></tr><tr><td>1</td><td>1</td><td>0.000</td></tr><tr><td>2</td><td>1</td><td>–3.000</td></tr></table>	DMRS CDM Group without Data	DMRS Config Type	PDSCH Level (dB)	1	1	0.000	2	1	–3.000
DMRS CDM Group without Data	DMRS Config Type	PDSCH Level (dB)								
1	1	0.000								
2	1	–3.000								
DM-RS typeA-pos	Sets the DM-RS typeA-pos. This parameter is settable only when PDSCH Mapping Type is typeA. Options: 2, 3									
DM-RS config-type	Sets the DM-RS config type. It is fixed to 1.									
DM-RS add-pos	Sets the DM-RS add-pos. Options: 0, 1, 2, 3									

Table 3.6.1.2-7 PDSCH/DM-RS (Cont'd)

Dialog Box	Function
CDM Group Without Data	Sets the DM-RS associated with PDSCH. Options: 1, 2 It is fixed to 2 when Antenna Port is 1002 or 1003.
PDSCH PT-RS	Enables or disables the PDSCH PT-RS.
PT-RS Time Density	Sets the PT-RS Time Density. Options: 1, 2, 4
PT-RS Freq. Density	Sets the PT-RS Freq. Density. Options: 2, 4
PT-RS RE Offset	Sets the PT-RS RE Offset. Options: 00, 01, 10, 11
PDSCH RBs Allocation Auto Detect	Enables or disables the auto detection of the RBs that are allocated to PDSCH. Options: Enable, Disable
PDSCH RBs Allocation Start RB	Sets the Start RB of the RBs that are allocated to PDSCH. Range: 0 to Number Of RBs – 1
PDSCH RBs Allocation Number of RBs	Sets the number of the RBs that are allocated to PDSCH. Range: 1 to Number Of RBs – PDSCH Allocation Start RB
Copy to All Slot	Copies the setting of selected Slot to all the Slots.

Table 3.6.1.2-8 Slot Parameter

Dialog Box	Function
TDD Configuration	Selects whether to detect TDD Configuration of the test model automatically. Options: Auto, Manual
DL Slot # for Synchronization	Sets the slot number for frame synchronization when TDD Configuration of the test model is set to Auto. NR TDD sub-6GHz Downlink Range: Subcarrier Spacing = 15 kHz: 0 to 9 Subcarrier Spacing = 30 kHz: 0 to 19 Subcarrier Spacing = 60 kHz: 0 to 39 NR TDD mmWave Downlink Range: Subcarrier Spacing = 60 kHz: 0 to 39 Subcarrier Spacing = 120 kHz: 0 to 79
Number Of DL Symbol in S	Sets the number of downlink symbols in Special Slots when TDD Configuration of the test model is set to Manual. Range: 1 to 14
Slot Types	Selects a slot type of each slot from D (Downlink), S (Special), or U (Uplink) when TDD Configuration of the test model is set to Manual. Range: D, S, U

3.6.1.3 Advanced Settings



Set the advanced parameters for modulation analysis. The Advanced Settings function menu is displayed by pressing  (Advanced Settings) on page 1 of the Modulation Analysis function menu.

Table 3.6.1.3-1 Advanced Settings function menu

Function Key	Menu Display	Function
Page 1	Advanced Settings	Press Advanced Settings to display.
F1	Equalizer Use data	Selects whether or not to include resource elements other than Reference Signal at calculation of the transmission path loss. Options: On Includes resource elements other than Reference Signal at calculation of the transmission path loss. Off Does not include resource elements other than Reference Signal at calculation of the transmission path loss.
F2	Amplitude Tracking	Selects On/Off for Amplitude Tracking. Options: On, Off
F3	Phase Tracking	Selects On/Off for Phase Tracking. Options: On, Off
F4	Timing Tracking	Selects On/Off for Timing Tracking. Options: On, Off
F6	Number of Carriers	Sets the number of carriers. Range: 1 to Table 3.6.2.2-3 for the maximum range value.
F7	Reference Carrier	Sets the reference carrier for analysis. Range: 0 to (Number of Carriers – 1)
F8	Frequency Offset	Displays the frequency offset of Component Carrier. Resolution: 1 Hz Range: $\pm(\text{Frequency Span} / 2)$ Refer to Table 3.6.1.3-2 for Frequency Span.

Table 3.6.1.3-1 Advanced Settings function menu (Cont'd)

Function Key	Menu Display	Function
Page 2	Advanced Settings	Press Advanced Settings and then  to display.
F1	Multicarrier Filter	When measuring the multicarrier signal, sets whether to filter the reference carrier. Options: On, Off It is fixed to On when Number of Carriers > 1.
F2	EVM Window	Turns On or Off the EVM Window. Options: On Displays the worst among the EVM High and EVM Low values as the measurement result. However, the EVM Mid result is displayed in graph. Off Displays the EVM Mid. Refer to Figure 3.6.1.3-1 "EVM Window"
F3	DC Cancellation	When performing the EVM measurement, select On/Off of this function that eliminates influences due to carrier leakage. Options: On, Off
F4	Phase Compensation Frequency Center	Selects whether to perform the phase compensation at the same frequency as the center frequency. Options: On, Off
F5	Phase Compensation Frequency Value	Sets the frequency for the phase compensation. This function is available when Phase Compensation Frequency Center is Off. When measuring multicarrier signals, the frequency for performing the phase compensation for each carrier is calculated using the following formula. $\text{PhaseCompensationFrequencyValue} + \text{FrequencyOffset}\#n$ n: Carrier Number (n = 0 to Number of Carriers – 1) Resolution: 1 Hz Range: Same as Center Frequency
F6	Post-FFT Equalisation interval	This command sets the averaging time for Post-FFT equalisation. Options: Slot, Frame However, fixed to Slot if Test Model = OFF. It is available only for MS2850A.
F7	Equalizer Freq. Moving Avg.	This command sets whether to perform frequency-direction smoothing in channel characteristic calculation. Options: On, Off However, fixed to Off if Test Model = OFF. It is available only for MS2850A.

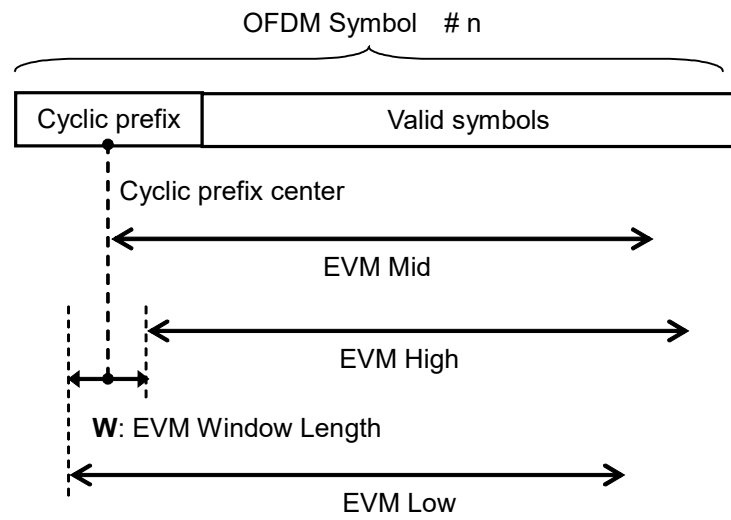




Figure 3.6.1.3-1 EVM Window

Table 3.6.1.3-2 How to Determine Frequency Span
 (“mmW” = NR TDD mmWave, “sub6” = NR TDD sub-6GHz, “DL” = Downlink, “UL” = Uplink)
 (✓: Installed, X: Not installed, –: Option, n/a: Not applicable)

Model Name	Standard		MS2850A		MS269xA		Number of Carriers	Channel Bandwidth [MHz]	Center Frequency [MHz]	Frequency Span [MHz]
			-033 /133	-034 /134	-077 /177	-078 /178				
MS2850A	mmW	DL	✓	✓	n/a	n/a	≥ 2	–	≥ 4200	1000
			✓	✓	n/a	n/a			< 4200	510
			✓	X	n/a	n/a			–	510
			X	X	n/a	n/a			–	255
		DL	✓	–	n/a	n/a	1	> 100	–	510
		UL					n/a			
		DL	X	X	n/a	n/a	1	> 100	–	255
		UL					n/a			
		DL	–	–	n/a	n/a	1	≤ 100	–	125
		UL					n/a			
	sub6	DL	–	–	n/a	n/a	2	–	–	255
		DL	–	–	n/a	n/a	1	–	≥ 800	125
		UL					n/a			
		DL	–	–	n/a	n/a	1	≥ 30	< 800	125
		UL					n/a			
		DL	–	–	n/a	n/a	1	< 30	< 800	31.25
		UL					n/a			
MS269xA	sub6	DL	n/a	n/a	✓	✓	1	–	–	125
		UL					n/a			
		DL	n/a	n/a	✓	X	1	–	–	62.5
		UL					n/a			
		DL	n/a	n/a	X	X	1	–	–	31.25
		UL					n/a			

3.6.1.4 Trace (EVM vs Subcarrier, EVM vs Symbol, Spectral Flatness)

Set Trace in the Trace function menu that is displayed by pressing  (Trace) on page 2 of the Modulation Analysis function menu or .

When EVM vs Subcarrier, EVM vs Symbol, or Spectral Flatness is selected by F1: Trace Mode, the function menu is as shown in the following table.

Table 3.6.1.4-1 Trace function menu

Function Key	Menu Display	Function
Page 1	Trace	Press Trace to display.
F1	Trace Mode	<p>Sets a graphical result in the graph window.</p> <p>Note: The Trace function menu configuration changes depending on the settings of this function.</p> <p>Options:</p> <ul style="list-style-type: none"> EVM vs Subcarrier Displays EVM vs Subcarrier in a graph window. EVM vs Symbol Displays EVM vs Symbol in a graph window. Spectral Flatness Displays Spectral Flatness in a graph window. Power vs RB Displays Power vs Resource Block in a graph window. EVM vs RB Displays EVM vs Resource Block in a graph window. Summary Displays EVM and power of each channel in a graph window.
F3	Scale	<p>Sets vertical scale of graphical result.</p> <p>Refer to Table 3.6.1.4-2 Scale function menu</p>
F4	Storage	<p>Sets storage method.</p> <p>Refer to Table 3.6.1.4-3 Storage function menu</p>
F6	Subcarrier Number	<p>Sets the subcarrier number of Marker position and EVM vs Symbol displayed.</p> <p>Range: 0 to (Number of RBs × 12 – 1)</p>
F7	Symbol Number	<p>Sets the symbol number of Marker position and EVM vs Subcarrier displayed.</p> <p>For NR TDD sub-6GHz Downlink, Range: Subcarrier Spacing = 15 kHz: 0 to 139 Subcarrier Spacing = 30 kHz: 0 to 279 Subcarrier Spacing = 60 kHz: 0 to 559</p> <p>For NR TDD mmWave Downlink, Range: Subcarrier Spacing = 60 kHz: 0 to 559 Subcarrier Spacing = 120 kHz: 0 to 1119</p>

Table 3.6.1.4-1 Trace function menu (Cont'd)

Function Key	Menu Display	Function
F8	EVM vs Subcarrier View	<p>Displayed when EVM vs Subcarrier is selected by F1: Trace Mode.</p> <p>Sets whether to enable averaging in EVM vs Subcarrier, and the display type.</p> <p>Options:</p> <ul style="list-style-type: none"> Each Symbol <ul style="list-style-type: none"> Displays EVM vs Subcarrier of Symbol set in Symbol Number when EVM vs Subcarrier is displayed. Averaged over all Symbols <ul style="list-style-type: none"> Displays EVM vs Subcarrier of the analysis slot length set in Measurement Interval. Graph View <ul style="list-style-type: none"> Selects a graph display type of EVM vs Subcarrier from the average (RMS), and the average value and peak value (RMS&Peak).
	EVM vs Symbol View	<p>Displayed when EVM vs Symbol is selected by F1: Trace Mode.</p> <p>Sets whether to enable averaging in EVM vs Symbol, and the display type.</p> <p>Options:</p> <ul style="list-style-type: none"> Each Subcarrier <ul style="list-style-type: none"> Displays EVM vs Symbol of Subcarrier set in Subcarrier Number when EVM vs Symbol is displayed. Averaged over all Subcarrier <ul style="list-style-type: none"> Displays EVM vs Symbol in all subcarriers. Graph View <ul style="list-style-type: none"> Selects a graph display type of EVM vs Subcarrier from the average (RMS), and the average value and peak value (RMS&Peak).
	Spectral Flatness Type	<p>Displayed when Spectral Flatness is selected by F1: Trace Mode.</p> <p>Sets type of Spectral Flatness displayed.</p> <p>Options:</p> <ul style="list-style-type: none"> Amplitude <ul style="list-style-type: none"> Displays Amplitude in Spectral Flatness. Phase <ul style="list-style-type: none"> Displays Phase in Spectral Flatness.



Table 3.6.1.4-2 Scale function menu

Function Key	Menu Display	Function
Page 1	Scale	Press Scale to display.
F1	EVM Unit	Sets the unit of EVM. Options: %, dB
F2	EVM Scale	Sets the upper limit for the EVM scale. Range: 2 %, 5 %, 10 %, 20 % (in %) -40 dB, -20 dB, 0 dB (in dB)
F3	Flatness Scale	Sets a scale of Spectral Flatness. Options: Amplitude Sets the upper and lower limit values of Amplitude in Spectral Flatness (± 10 dB, ± 3 dB, ± 1 dB). Phase Sets the upper and lower limit values of Phase in Spectral Flatness (± 60 deg, ± 20 deg, ± 6 deg).

Table 3.6.1.4-3 Storage function menu

Function Key	Menu Display	Function
Page 1	Storage	Press Storage to display.
F1	Mode	Sets the storage mode. Options: Off Updates data per measurement. Average Displays the average per measurement. Average & Max Displays the average and maximum values per measurement.
F2	Count	Sets the measurement count. Range: 2 to 9999

3.6.1.5 Trace (Power vs RB, EVM vs RB)

Set Trace in the Trace function menu that is displayed by pressing  (Trace) on page 2 of the Modulation Analysis function menu or .

When Power vs RB or EVM vs RB is selected by F1: Trace Mode, the function menu is as shown in the following table.



Table 3.6.1.5-1 Trace function menu

Function Key	Menu Display	Function
Page 1	Trace	Press Trace to display.
F1	Trace Mode	<p>Sets a graphical result in the graph window.</p> <p>Note: The Trace function menu configuration changes depending on the settings of this function.</p> <p>Options:</p> <ul style="list-style-type: none"> EVM vs Subcarrier Displays EVM vs Subcarrier in a graph window. EVM vs Symbol Displays EVM vs Symbol in a graph window. Spectral Flatness Displays Spectral Flatness in a graph window. Power vs RB Displays Power vs Resource Block in a graph window. EVM vs RB Displays EVM vs Resource Block in a graph window. Summary Displays EVM and power of each channel in a graph window.
F3	Scale	<p>Sets vertical scale of a graphical result.</p> <p>Refer to Table 3.6.1.5-2 Scale function menu</p>
F6	Slot Number	<p>Sets the slot number of Marker position, Power vs RB, and EVM vs RB displayed.</p> <p>For NR TDD sub-6GHz Downlink, Range: Subcarrier Spacing = 15 kHz: 0 to 9 Subcarrier Spacing = 30 kHz: 0 to 19 Subcarrier Spacing = 60 kHz: 0 to 39</p> <p>For NR TDD mmWave Downlink, Range: Subcarrier Spacing = 60 kHz: 0 to 39 Subcarrier Spacing = 120 kHz: 0 to 79</p>
F7	Resource Block Number	<p>Sets the resource block number of Marker position, Power vs RB, and EVM vs RB displayed.</p> <p>Range: 0 to Number of RBs – 1</p>

Table 3.6.1.5-2 Scale function menu

Function Key	Menu Display	Function
Page 1	Scale	Press Scale to display.
F1	EVM Unit	Sets the unit of EVM. Options: %, dB
F2	EVM Scale	Sets the upper limit for the EVM scale. Range: 2 %, 5 %, 10 %, 20 % (in %) -40 dB, -20 dB, 0 dB (in dB) Note: EVM Scale is valid only for EVM vs RB.

3.6.1.6 Trace (Summary)

Set Trace in the Trace function menu that is displayed by pressing  (Trace) on page 2 of the Modulation Analysis function menu or .

When Summary is selected by F1: Trace Mode, the function menu is as shown in the following table.

Table 3.6.1.6-1 Trace function menu

Function Key	Menu Display	Function
Page 1	Trace	Press Trace to display.
F1	Trace Mode	<p>Sets a graphical result in the graph window.</p> <p>Note: The Trace function menu configuration changes depending on the settings of this function.</p> <p>Options:</p> <ul style="list-style-type: none"> EVM vs Subcarrier Displays EVM vs Subcarrier in a graph window. EVM vs Symbol Displays EVM vs Symbol in a graph window. Spectral Flatness Displays Spectral Flatness in a graph window. Power vs RB Displays Power vs Resource Block in a graph window. EVM vs RB Displays EVM vs Resource Block in a graph window. Summary Displays EVM and power of each channel in a graph window.
F3	Scale	<p>Sets the unit of EVM measurement result.</p> <p>Refer to Table 3.6.1.6-2 Scale function menu</p>
F4	Storage	<p>Sets the storage mode.</p> <p>Refer to Table 3.6.1.6-3 Storage function menu</p>


Table 3.6.1.6-2 Scale function menu

Function Key	Menu Display	Function
Page 1	Scale	Press Scale to display.
F1	EVM Unit	Sets the unit of EVM. Options: %, dB

Table 3.6.1.6-3 Storage function menu

Function Key	Menu Display	Function
Page 1	Storage	Press Storage to display.
F1	Mode	Sets the storage mode. Options: Off Updates data per measurement. Average Displays the average per measurement. Average & Max Displays the average and maximum values per measurement.
F2	Count	Sets the measurement count. Range: 2 to 9999

3.6.2 Carrier Aggregation Analysis

To set modulation analysis items, press  (Carrier Aggregation Analysis) on the Measure function menu to display the Carrier Aggregation Analysis function menu.



The Carrier Aggregation Analysis function menu consists of two pages that are toggled by pressing .

Table 3.6.2-1 Carrier Aggregation Analysis function menu

Function Key	Menu Display	Function
Page 1	Carrier Aggregation Analysis	Press Carrier Aggregation Analysis to display.
F1	Analysis Time	Sets measurement position. Refer to 3.6.2.1 “Analysis Time”
F2	Basic Settings	Sets the basic parameters for such as each channel and signal. Refer to 3.6.2.2 “Basic Settings”
F7	Advanced Settings	Sets the detailed parameters for modulation analysis. Refer to 3.6.2.3 “Advanced Settings”
Page 2	Carrier Aggregation Analysis	Press Carrier Aggregation Analysis and then  to display.
F1	Trace	Sets the trace. Refer to 3.6.2.4, 3.6.2.5 “Trace”

3.6.2.1 Analysis Time



Set the measurement position in the Analysis Time function menu that is displayed by pressing  (Analysis Time) on page 1 of the Carrier Aggregation Analysis function menu.

Table 3.6.2.1-1 Analysis Time function menu

Function Key	Menu Display	Function
Page 1	Analysis Time	Press Analysis Time to display.
F1	Starting Slot Number	Sets the starting slot number. It is fixed to 0 Slot.
F2	Measurement Interval	Sets the analysis slot length. NR TDD sub-6GHz Downlink Subcarrier Spacing = 15 kHz: 10 Slot Subcarrier Spacing = 30 kHz: 20 Slot Subcarrier Spacing = 60 kHz: 40 Slot NR TDD mmWave Downlink Subcarrier Spacing = 60 kHz: 40 Slots Subcarrier Spacing = 120 kHz: 80 Slots

3.6.2.2 Basic Settings

Set basic parameters for modulation analysis, such as the number of Component Carriers, and parameters of channel and signal for each Component Carrier. The Basic Settings function menu and a dialog box to set the parameters for each channel and signal are displayed by pressing  (Basic Settings) on page 1 of the Carrier Aggregation Analysis function menu.

Menu and Dialog boxes

The menus and the dialog boxes displayed are the same as described in 3.6.1.2 “Basic Settings”.

Note:

If the firmware 14.00.00 or earlier is installed on the mainframe, the menus and dialog boxes shown in Table 3.6.2.2-1, Table 3.6.2.2-2, Table 3.6.2.2-4, and 3.6.2.2-5 are displayed.

Table 3.6.2.2-1 Basic Settings function menu

Function Key	Menu Display	Function
Page 1	Basic Settings	Press Basic Settings to display.
F1	Carrier Settings	Displays the Carrier Settings tab. Refer to Table 3.6.2.2-2 Carrier Settings
F2	Component Carrier Settings	Displays the Component Carrier Settings tab. Refer to Table 3.6.2.2-4 Component Carrier Settings
F3	Detail Settings	Displays the Detail Settings tab. Refer to Table 3.6.2.2-5 Detail Settings
F6	Restore Default Values	Restores the parameters in the dialog box to the default values.
F7	Set	Sets the parameters specified at the dialog box.
F8	Cancel	Cancels the parameters specified at the dialog box.

Table 3.6.2.2-2 Carrier Settings

Dialog Box	Function
Number of Carriers	Sets the number of carriers. Range: 0 to Refer to Table 3.6.2.2-3 for the maximum range value.
Reference Carrier	Sets the reference carrier for analysis. Range: 0 to (Number of Carriers – 1)
Phase Compensation	Sets whether to enable or disable Phase Compensation. Phase Compensation sets whether to enable (ON) or disable (OFF) phase compensation during upconversion defined in the 3GPP NR standard (TS 38.211, V15.1.0 or later). Upconversion formula for ON: $\text{Re}\left\{s_l^{(p,\mu)}(t) \cdot e^{j2\pi f_0(t-t_{\text{start},l}^{\mu}-N_{\text{CP},l}^{\mu}T_c)}\right\}$ Upconversion formula for OFF: $\text{Re}\left\{s_l^{(p,\mu)}(t) \cdot e^{j2\pi f_0 t}\right\}$ For details, refer to 5.4 in TS 38.211 (V15.1.0 or later).

The following table shows the maximum number of carriers.

Table 3.6.2.2-3 Maximum Number of Carriers

Standard	Option	Channel Bandwidth	Maximum Number of Carriers
NR TDD mmWave Downlink	Without MS2850A-033/133	50 MHz	5
		100 MHz	2
		200 MHz	1
	With MS2850A-033/133	50 MHz	8
		100 MHz	5
		200 MHz	2
		400 MHz	1
	With MS2850A-034/134	50 MHz	8
		100 MHz	8
		200 MHz	4
		400 MHz	2
NR TDD Sub6GHz Downlink	With MX285051A-011	—	2

Table 3.6.2.2-4 Component Carrier Settings

Dialog Box	Function
CC#0 to CC#7	Sets whether to enable or disable Component Carrier. The measurement results of the disabled Component Carriers are not displayed.
The following items are displayed for each CC.	
Frequency Offset	Displays the frequency offset of Component Carrier. It is calculated automatically using the following formula. $(\text{CC number} - ((\text{Number of Carriers} - 1) / 2)) \times \text{Carrier Spacing}$ The Carrier Spacing values applied to the formula are as below. Number of RB = 32: 49.92 MHz Number of RB = 66: 99.96 MHz Number of RB = 132: 199.92 MHz Number of RB = 264: 399.96 MHz
Subcarrier Spacing	Sets the Subcarrier Spacing Options: 120 kHz
Number of RBs	Sets the Resource Block numbers of the target signal. Number of RBs is set to the default value when switching the Standard. Options: Subcarrier Spacing = 120 kHz: 32, 66, 132, 264
Channel Bandwidth	Displays the Channel Bandwidth of the target signal set by the Number of RBs.
Cell ID	Sets the Cell ID. Range: 0 to 1007
Synchronization Mode	Sets the synchronized signal. Options: SS Sets Synchronization Signal for the synchronized signal. DM-RS for PDSCH Sets Demodulation Reference Signal for PDSCH for the synchronized signal.

Table 3.6.2.2-5 Detail Settings

Dialog Box	Function
The following items are displayed for each CC.	
SS-Block	
On/Off	Sets whether to enable or disable SS-Block.
SS-Block Subcarrier Spacing	This parameter is fixed and cannot be changed. Displays the same value of the Subcarrier Spacing of the Component Carrier Settings.
SS-Block Candidate	Sets the position of the SS-Block in the time direction. CaseD (L = 64) It is fixed.
Antenna Port	Sets the Antenna Port for SS-Block. It is fixed to 4000.
SSB Start RB Number	Sets the Resource Block to start the mapping of SS-Block. Calculated automatically from the Number of RBs of the Component Carrier Settings, and cannot be changed.
P-SS Power Boosting (Auto/Manual)	Selects automatic detection and manual setting of the Primary Synchronization Signal power. Fixed to Auto.
P-SS Power Boosting	Sets the level of the Secondary Synchronization Signal. This parameter is fixed and cannot be changed.
S-SS Power Boosting (Auto/Manual)	Selects automatic detection and manual setting of the Secondary Synchronization Signal power. Fixed to Auto.
S-SS Power Boosting	Sets the level of the Secondary Synchronization Signal. This parameter is fixed and cannot be changed.
PBCH Power Boosting (Auto/Manual)	Selects automatic detection and manual setting of the PBCH power. Fixed to Auto.
PBCH Power Boosting	Sets the PBCH level. This parameter is fixed and cannot be changed.
Slot	Selects the Slot where the PDCCH/DM-RS or PDSCH/DM-RS is to be set for the specified Component Carrier.
Copy to All Slots in this CC	Copies the Slot setting to all the Slots for the same Component Carrier.
Copy to All Slots in All CC	Copies the specified Slot setting to all Slots for all Component Carriers.
PDCCH/DM-RS	
On/Off	Sets whether to enable or disable PDCCH/DM-RS for the specified slot.
Antenna Port	Sets the Antenna Port for PDCCH/DM-RS. It is fixed to 2000.
PDCCH Power Boosting (Auto/Manual)	Selects automatic detection and manual setting of the PDCCH power for DM-RS. Fixed to Auto.
PDCCH Power Boosting	Sets the PDCCH level of the DM-RS. This parameter is fixed and cannot be changed.

Table 3.6.2.2-5 Detail Settings (Cont'd)

Dialog Box	Function
The following items are displayed for each CC.	
PDSCH/DM-RS	
On/Off	Sets whether to enable or disable PDSCH/DM-RS for the specified slot.
Antenna Port	Sets the Antenna Port. Antenna Port settings are common to all Slots. Options: 1000, 1001, 1002, 1003
Modulation Scheme	Selects the modulation scheme for the PDSCH. Options: QPSK, 16QAM, 64QAM, 256QAM, Auto
PDSCH Mapping Type	Sets the Mapping Type of PDSCH. Options: typeA, typeB
Start Symbol	Sets the Mapping Start Symbol of PDSCH. When the PDSCH Mapping Type is typeA, it is fixed to 2. When the PDSCH Mapping Type is typeB, it is fixed to 0.
End symbol	Sets the Mapping End Symbol for the PDSCH. It is fixed to 13.
DM-RS typeA-pos	Sets the DM-RS typeA-pos. It is fixed to 2.
DM-RS config-type	Sets the DM-RS config type. It is fixed to 1.
DM-RS add-pos	Sets the DM-RS add-pos. It is fixed to 0.
PDSCH Power Boosting (Auto/Manual)	Selects automatic detection and manual setting of the PDSCH power for DM-RS. Fixed to Manual.
PDSCH Power Boosting	Sets the PDSCH level of the DM-RS.
PDSCH PT-RS	Sets the DM-RS add-pos. It is fixed to 0.
PT-RS Time Density	Sets the PT-RS Time Density. It is fixed to 1.
PT-RS Freq. Density	Sets the PT-RS Freq. Density. It is fixed to 2.

3.6.2.3 Advanced Settings


Set the advanced parameters for modulation analysis. The Advanced Settings function menu is displayed by pressing  (Advanced Settings) on page 1 of the Carrier Aggregation Analysis function menu.

Table 3.6.2.3-1 Advanced Settings function menu





Function Key	Menu Display	Function
Page 1	Advanced Settings	Press Advanced Settings to display.
F1	Equalizer Use data	<p>Selects whether or not to include resource elements other than Reference Signal at calculation of the transmission path loss.</p> <p>Options:</p> <ul style="list-style-type: none"> On Includes resource elements other than Reference Signal at calculation of the transmission path loss. Off Does not include resource elements other than Reference Signal at calculation of the transmission path loss.
F2	Amplitude Tracking	<p>Selects On/Off for Amplitude Tracking.</p> <p>Options: On, Off</p>
F3	Phase Tracking	<p>Selects On/Off for Phase Tracking.</p> <p>Options: On, Off</p>
F4	Timing Tracking	<p>Selects On/Off for Timing Tracking.</p> <p>Options: On, Off</p>
Page 2	Advanced Settings	Press Advanced Settings and then  to display.
F1	Multicarrier Filter	<p>When measuring the multicarrier signal, sets whether to filter the reference carrier.</p> <p>Options: On, Off</p> <p>It is fixed to On when Number of Carriers > 1.</p>
F2	EVM Window	<p>Turns On or Off the EVM Window.</p> <p>Options: On Displays the worst among the EVM High and EVM Low values as the measurement result. However, the EVM Mid result is displayed in graph.</p> <p>Off Displays the EVM Mid.</p> <p>Refer to Figure 3.6.1.3-1 “EVM Window”</p>
F3	DC Cancellation	<p>When performing the EVM measurement, select On/Off of this function that eliminates influences due to carrier leakage.</p> <p>Options: On, Off</p>

Table 3.6.2.3-1 Advanced Settings function menu (Cont'd)

Function Key	Menu Display	Function
Page 2	Advanced Settings	Press Advanced Settings and then  to display.
F4	Phase Compensation Frequency Center	Selects whether to perform the phase compensation at the same frequency as the center frequency. Options: On, Off
F5	Phase Compensation Frequency Value	Sets the frequency for the phase compensation. This function is available when Phase Compensation Frequency Center is Off. When measuring multicarrier signals, the frequency for performing the phase compensation for each carrier is calculated using the following formula. $\text{PhaseCompensationFrequencyValue} + \text{FrequencyOffset}\#n$ n: Carrier Number (n = 0 to Number of Carriers – 1) Resolution: 1 Hz Range: Same as Center Frequency
F6	Post-FFT Equalisation interval	This command sets the averaging time for Post-FFT equalisation. Options: Slot, Frame However, fixed to Slot if Test Model = OFF.
F7	Equalizer Freq. Moving Avg.	This command sets whether to perform frequency-direction smoothing in channel characteristic calculation. Options: On, Off However, fixed to Off if Test Model = OFF.

3.6.2.4 Trace (Power vs RB, EVM vs RB)

Set Trace in the Trace function menu that is displayed by pressing  (Trace) on page 2 of the Carrier Aggregation Analysis function menu or .

When Power vs RB or EVM vs RB is selected by F1: Trace Mode, the function menu is as shown in the following table.



Table 3.6.2.4-1 Trace function menu

Function Key	Menu Display	Function
Page 1	Trace	Press Trace to display.
F1	Trace Mode	<p>Sets a graphical result in the graph window.</p> <p>Note:</p> <p>The Trace function menu configuration changes depending on the settings of this function.</p> <p>Options:</p> <p>Power vs RB Displays Power vs Resource Block in a graph window.</p> <p>EVM vs RB Displays EVM vs Resource Block in a graph window.</p> <p>Summary Displays EVM and power of each channel in a graph window.</p>
F3	Scale	<p>Sets vertical scale of a graphical result.</p> <p>Refer to Table 3.6.2.4-2 Scale function menu</p>
F5	Carrier Number	<p>Sets the carrier number</p> <p>Range: 0 to (Number of Carriers – 1)</p>
F6	Slot Number	<p>Sets the slot number of Marker position, Power vs RB, and EVM vs RB displayed.</p> <p>Range: Subcarrier Spacing = 60 kHz: 0 to 39 Subcarrier Spacing = 120 kHz: 0 to 79</p>
F7	Resource Block Number	<p>Sets the resource block number of Marker position, Power vs RB, and EVM vs RB displayed.</p> <p>Range: 0 to Number of RBs – 1</p>

Table 3.6.2.4-2 Scale function menu

Function Key	Menu Display	Function
Page 1	Scale	Press Scale to display.
F1	EVM Unit	Sets the unit of EVM. Options: %, dB
F2	EVM Scale	Sets the upper limit for the EVM scale. Range: 2 %, 5 %, 10 %, 20 % (in %) -40 dB, -20 dB, 0 dB (in dB) Note: EVM Scale is valid only for EVM vs RB.

3.6.2.5 Trace (Summary)

Set Trace in the Trace function menu that is displayed by pressing  (Trace) on page 2 of the Carrier Aggregation Analysis function menu or .

When Summary is selected by F1: Trace Mode, the function menu is as shown in the following table.


Table 3.6.2.5-1 Trace function menu

Function Key	Menu Display	Function
Page 1	Trace	Press Trace to display.
F1	Trace Mode	<p>Sets a graphical result in the graph window.</p> <p>Note: The Trace function menu configuration changes depending on the settings of this function.</p> <p>Options:</p> <p>Power vs RB Displays Power vs Resource Block in a graph window.</p> <p>EVM vs RB Displays EVM vs Resource Block in a graph window.</p> <p>Summary Displays EVM and power of each channel in a graph window.</p>
F3	Scale	<p>Sets the unit of EVM measurement result.</p> <p>Refer to Table 3.6.2.5-2 Scale function menu</p>

Table 3.6.2.5-2 Scale function menu

Function Key	Menu Display	Function
Page 1	Scale	Press Scale to display.
F1	EVM Unit	<p>Sets the unit of EVM.</p> <p>Options: %, dB</p>

3.6.3 Power vs Time

The Power vs Time graph window and Power vs Time function menu are displayed by pressing  (Power vs Time) on the Measure function menu.

Power vs Time shows the power change over time of the signal under measurement. On Power, Off Power, and Transient Period (Ramp up/down time) are measured.



Figure 3.6.3-1 Power vs Time Measurement Screen

■ Display of measurement status/result status

The Power vs Time measurement status and the result status are displayed on the Power vs Time title bar.



Figure 3.6.3-2 Power vs Time Title Bar

Table 3.6.3-1 Display Conditions of Power vs Time Measurement Status/Result Status

Display	Display Condition
	Displayed when Frame Sync is On. Refer to 3.6.3.6 Frame Sync
	Displayed when Wide Dynamic Range is On. Refer to 3.6.3.1 Wide Dynamic Range
	Displayed when Noise Correction related to Wide Dynamic Range is On. Refer to 3.6.3.1 Wide Dynamic Range
	Displayed when Pre-Amp Mode related to Wide Dynamic Range or Off Power Pre-Amp of Limiter Mode function is On. Refer to 3.6.3.1 Wide Dynamic Range Refer to 3.6.3.2 Limiter Mode
	Displayed when Limiter Mode is On. Refer to 3.6.3.2 Limiter Mode
	Displayed when the noise measurement result of the Off Power measurement path of the Limiter Mode function is retained. Refer to 3.6.3.2 Limiter Mode
	Displayed when the Off Power measurement result of the Limiter Mode function is retained. Refer to 3.6.3.2 Limiter Mode
	Displayed when the On Power measurement result of the Limiter Mode function is retained. Refer to 3.6.3.2 Limiter Mode

■Function Menu



Set the items of Power Analysis. The Power vs Time function menu is displayed by pressing  (Power vs Time) on the Measure function menu. The Power vs Time function menu consists of two pages

Table 3.6.3-2 Power vs Time function menu

Function Key	Menu Display	Function
Page 1	Power vs Time	Press Power vs Time to display.
F1	Wide Dynamic Range	Sets the Wide Dynamic Range. Refer to 3.6.3.1 Wide Dynamic Range
F2	Limiter Mode	Sets the Limiter Mode. Refer to 3.6.3.2 Limiter Mode
F4	Block Size Auto	Sets whether to detect block information automatically. Refer to 3.6.3.3 Block Size Auto
F5	Block Setup	Sets the block information manually. Refer to 3.6.3.4 Block Setup
F6	Mask Setup	Sets the judgment reference value. Refer to 3.6.3.5 Mask Setup
F7	Frame Sync	Sets whether to perform frame synchronization using modulation analysis. Refer to 3.6.3.6 Frame Sync
Page 2	Power vs Time	Press Power vs Time and then  to display.
F1	Trace	Sets the Trace. Refer to 3.6.3.7 Trace
F2	Basic Settings	Sets basic parameters for channels and signals, etc. Refer to 3.6.1.2 Basic Settings
F7	Filter	Sets the measurement filter. Refer to 3.6.3.8 Filter

3.6.3.1 Wide Dynamic Range

Set the functions of Wide Dynamic Range. The Wide Dynamic Range function menu is displayed by pressing  (Wide Dynamic Range) on page 1 of the Power vs Time function menu.


This function internally changes the measurement parameters to improve the dynamic range when measuring Off Power.

Table 3.6.3.1-1 Wide Dynamic Range Function Menu

Function Key	Menu Display	Function
Page 1	Wide Dynamic Range	Press Wide Dynamic Range to display.
F1	Wide Dynamic Range	Selects On/Off for Wide Dynamic Range. When it is On, the measurement parameters are internally changed to improve the dynamic range at Off Power measurement. Options: On, Off
F2	Noise Correction	Selects On/Off for Noise Correction. When it is On, executes noise correction inside the measuring instrument. Options: On, Off
F3	Pre-Amp Mode*	Selects On/Off for Pre-Amp Mode. When it is On, Pre-Amp is set to On at Off Power measurement. When it is On, a trigger must be input. Options: On, Off


*: Available for MS269xA only when MS269xA-008/108 is installed.
Available for MS2850A only when MS2850A-068/168 is installed.

3.6.3.2 Limiter Mode

The Limiter Mode function menu is displayed by pressing  (Limiter Mode) on page 1 of the Power vs Time function menu.


This function performs settings for switching measurement paths between On Power and Off Power measurements.

Table 3.6.3.2-1 Limiter Mode Function Menu

Function Key	Menu Display	Function
Page 1	Limiter Mode	Press Limiter Mode to display.
F1	Limiter Mode	Selects On/Off for Limiter Mode. When it is On, the measurement paths are switched between On Power and Off Power measurements. Options: On, Off
F3	Keep Results	Select whether to keep the measurement results already measured. When it is On, the measurement results of 1. Noise Calculate, 2. Off Power Calculate, and 3. On Power Calculate are kept. Options: On, Off
F4	1.Noise Calculate	Performs noise measurement on the Off Power measurement path.
F5	2.Off Power Calculate	Performs Off Power measurement.
F6	3.On Power Calculate	Performs On Power measurement.
Page 2	Limiter Mode	Press Limiter Mode and then  to display.
F1	Limiter Mode	Selects On/Off for Limiter Mode. When it is On, the measurement paths are switched between On Power and Off Power measurements. Options: On, Off
F2	Off Power ATT	Sets the attenuator for noise measurement and Off Power measurement. Range: 0 to 60 dB
F3	Off Power Pre-Amp*	Sets whether to use a preamplifier at Off Power measurement. Options: On, Off
F4	Off Power Offset	Sets whether to add an offset to the Off Power measurement result on the display. Options: On, Off
F5	Off Power Offset Value	Sets the value to be added as an offset to the Off Power measurement result on the display. Offset is the level increase or decrease due to the cable, attenuator, amplifier, etc. in the measurement path. Range: -99.99 to +99.99 dB

*: Available for MS269xA only when MS269xA-008/108 is installed.
Available for MS2850A only when MS2850A-068/168 is installed.

3.6.3.3 Block Size Auto

Set whether to set block information automatically. The Block Size Auto is set by pressing  (Block Size Auto) on page 1 of the Power vs Time function menu.

In the 5G NR specifications, On/Off is performed per symbol. In this measurement software, a continuous signal of one or more symbols that does not involve amplitude fluctuation is called a “block”.

This function calculates the symbol power for the input signal, searches for On symbol and Off symbol blocks, and automatically performs Block Setup.

Table 3.6.3.3-1 Block Size Auto

Dialog Box	Function
Block Size Auto	<p>Sets whether to set block information automatically.</p> <p>Options:</p> <ul style="list-style-type: none"> On Performs automatic setting. The symbols that exceed the “Minimum Symbol Power + 10 dB” are recognized as On symbols. Off Performs block setting according to Block Setup without performing automatic setting. <p>Notes:</p> <ul style="list-style-type: none"> When it is “On”, the Block Setup screen is invalid. When switching from “On” to “Off”, the automatically set value is reflected in Block Setup.

The following setting parameters must be set in advance.


[Basic Settings]

- Subcarrier Spacing
- Number of RBs

Automatic detection is performed according to the correct radio frame under either of the following conditions.

- Frame Sync: On
- Trigger Switch: On
(Input a frame trigger to the external trigger input terminal)

3.6.3.4 Block Setup

Set the block information manually. The Block Setup Dialog Box is displayed by pressing  (Block Setup) on page 1 of the Power vs Time function menu.

Note:

This function is available only when Block Size Auto is “Off”.

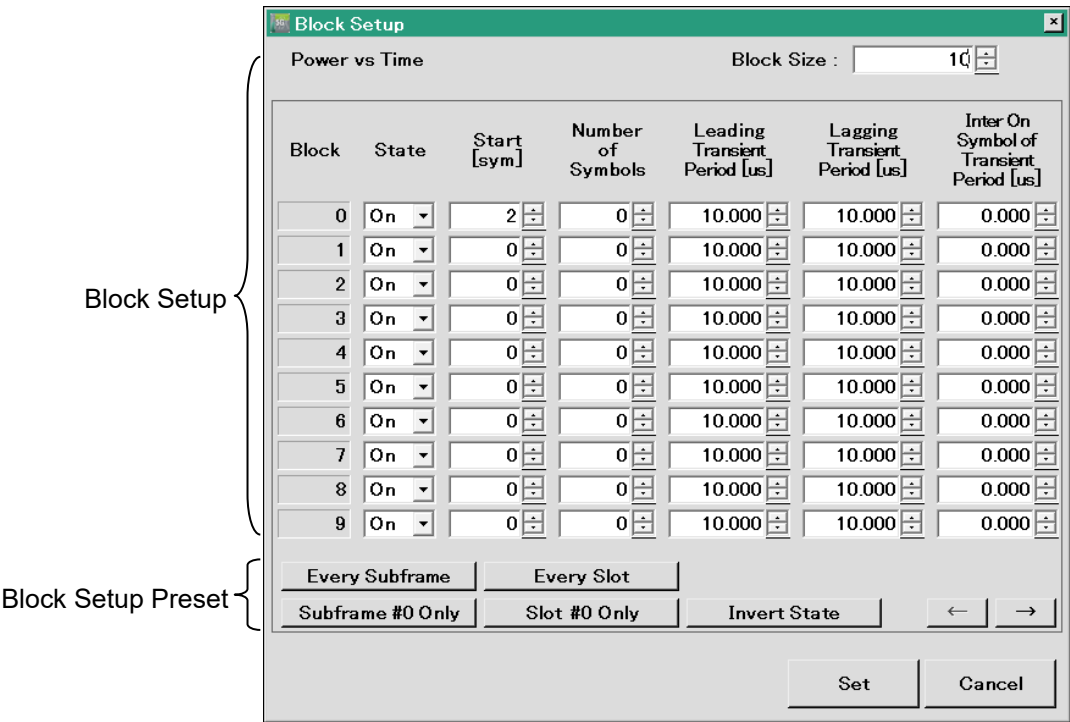


Figure 3.6.3.4-1 Block Setup Dialog Box

Table 3.6.3.4-1 Block Setup

Dialog Box	Function
Block Size	Set the number of valid block. Range: 1 to 80
Settings for Each Block	
State	Sets the On/Off state of block. Options: On Sets the block to On. Off Sets the block to Off.
Start	Sets the symbol number where the block starts. Range: 0 to Maximum symbol number – 1
Number of Symbols	Sets the number of symbols in the block. Range: 0 to Maximum symbol number
Leading Transient Period	Indicates the transient response time to be excluded from Power measurement at the beginning of the block. Range: 0.000 to 100.000 μ s
Lagging Transient Period	Indicates the transient response time to be excluded from Power measurement at the end of the block. Range: 0.000 to 100.000 μ s
Inter On Symbol of Transient Period	Indicates the transient response time to be excluded from Power measurement between symbols. Range: 0.000 to 100.000 μ s

The following preset items set the Block Setup collectively.

Table 3.6.3.4-2 Block Setup Preset

Dialog Box	Function
Every SubFrame	Sets blocks to On and Off by turns in SubFrame unit.
SubFrame #0 Only	Sets the block of SubFrame #0 only to On and the blocks of other SubFrames to Off.
Every Slot	Sets blocks to On and Off by turns in Slot unit.
Slot #0 Only	Sets the block of Slot #0 only to On and the blocks of other Slots to Off.
Invert State	Inverts the current On/Off states of blocks.

While the Block Setup dialog box is displayed, the Block Setup function menu is also displayed.

Table 3.6.3.4-3 Block Setup Function Menu

Function Key	Menu Display	Function
Page 1	Block Setup	Displayed while the Block Setup dialog box is displayed.
F1	Restore Default Values	Restores the parameters in the dialog box to their default values.
F4	Prev Page	Moves to the previous page.
F5	Next Page	Moves to the next page.
F7	Set	Sets the parameters specified in the dialog box.
F8	Cancel	Cancels the parameters specified in the dialog box.

3.6.3.5 Mask Setup


Set the Mask. The Mask Setup function menu is displayed by pressing  (Mask Setup) on page 1 of the Power vs Time function menu. This function sets the result judgment values.

Table 3.6.3.5-1 Mask Setup Function Menu

Function Key	Menu Display	Function
Page 1	Mask Setup	Press Mask Setup to display.
F1	Ramp up Limit	Sets the Ramp up Limit. If it is exceeded, the judgment result is "FAIL". Range: 0 to 100 μ s
F2	Ramp down Limit	Sets the Ramp down Limit. If it is exceeded, the judgment result is "FAIL". Range: 0 to 100 μ s
F3	Off Power Detector	Sets the Off Power detection method. This affects the power measurement when a block state is in "OFF" section. Options: Max Maximum instantaneous value within the Off Power calculation range. Ave Average value within the Off Power calculation range.
F4	Off Power Unit	Sets the display unit and judgment unit for Off Power. Options: dBm, dBm/MHz
F5	Off Power Limit	Sets the Off Power limit. If it is exceeded, the judgment result is "FAIL". Range: -200 to 200 dBm Note: When Off Power Unit is dBm/MHz, the unit is dBm/MHz.
F6	Load Standard Settings	Sets the judgment values to the following standard values collectively. Ramp up Limit: 10 μ s* ¹ Ramp down Limit: 10 μ s* ¹ Off Power Limit: -85.00 dBm/MHz* ²

*1: 3GPP TS 38.104 subclause 6.4.2.2

*2: 3GPP TS 38.104 subclause 6.4.1.2.

3.6.3.6 Frame Sync


Set the Frame Sync. The Frame Sync Dialog Box is displayed by pressing  (Frame Sync) on page 1 of the Power vs Time function menu. This function sets whether to use frame synchronization by modulation analysis when determining the analysis reference position.

Table 3.6.3.6-1 Frame Sync

Dialog Box	Function
Frame Sync	<p>Sets whether to perform analysis reference positioning using modulation analysis.</p> <p>Options:</p> <p>On Performs frame synchronization by modulation analysis and determines the analysis reference position.</p> <p>Off No frame synchronization is performed.</p> <p>Notes:</p> <ul style="list-style-type: none">• While this function is On, the measurement speed is slower than that in Off state.• The setting is invalid when Limiter Mode is On.

3.6.3.7 Trace


Set the Trace. The Trace function menu is displayed by pressing  (Trace) on page 1 of the Power vs Time function menu.

Table 3.6.3.7-1 Trace function menu

Function Key	Menu Display	Function
Page 1	Trace	Press Trace to display.
F3	Judge	Sets whether to perform the Pass/Fail judgment for the measurement result. Options: On Performs the judgment. Off Does not perform the judgment.
F4	Storage	Sets the result storage method. Refer to Table 3.6.3.7-2 Storage function menu
F5	Block Number	Sets the block number for the main trace analysis target. Varies depending on the Block Size Auto setting. Range: When Block Size Auto is Off: 0 to (Block Size – 1) Refer to 3.6.3.4-1 Block Size When Block Size Auto is On: Number of blocks automatically detected per measurement – 1
F7	Smoothing	Sets whether to perform smoothing on the waveform. Refer to Table 3.6.3.7-3 Smoothing function menu

Table 3.6.3.7-2 Storage function menu

Function Key	Menu Display	Function
Page 1	Storage	Press Storage to display.
F1	Mode	Sets the storage mode. Options: Off Updates data every time a measurement is performed. On Displays the average value for each measurement.
F2	Count	Sets the number of times a measurement is performed. Range: 2 to 9999

Table 3.6.3.7-3 Smoothing Function Menu

Function Key	Menu Display	Function
Page 1	Smoothing	Press Smoothing to display.
F1	Smoothing	Sets whether to perform smoothing on the waveform. Options: Off Does not perform smoothing. On Performs smoothing.
F2	Smoothing Length	Sets the smoothing length. Range: 1 to 90 [N μ s] N = Sub Carrier Spacing [kHz] / 15
F3	Smoothing Range	Sets the smoothing range. (Fixed to Mask) Options: Mask Off Power range Entire Whole waveform

3.6.3.8 Filter


Set the Filter. The Filter function menu is displayed by pressing  (Filter) on page 2 of the Power vs Time function menu.

Table 3.6.3.8-1 Filter Function Menu

Function Key	Menu Display	Function
Page 1	Filter	Press Filter to display.
F1	Type	Set the measurement filter type. (Fixed to Low Pass)
F2	Roll-off Factor	Displays the roll-off rate when the measurement filter type is “Nyquist / RootNyquist”. (Fixed to 1.00)
F3	BW	Sets the bandwidth when the measurement filter type is “Low Pass”. Maximum value: Affected by the mainframe analysis bandwidth.
F6	Load Standard Settings	Presets measurement filter settings. It is executed automatically when Channel Bandwidth is changed.

Table 3.6.3.8-2 Filter BW Preset Value

NR TDD sub-6GHz Downlink		NR TDD mmWave Downlink	
Channel Bandwidth (MHz)	Filter BW (MHz)	Channel Bandwidth (MHz)	Filter BW (MHz)
5	4.515	50	47.52
10	9.375	100	95.04
15	14.235	200	190.08
20	19.095	400	380.16
25	23.955	—	—
30	28.815	—	—
40	38.895	—	—
50	48.615	—	—
60	58.35	—	—
70	68.35	—	—
80	78.15	—	—
90	88.23	—	—
100	98.31	—	—

3.7 NR TDD sub-6GHz Uplink / NR TDD mmWave Uplink




To set the measurement items, press  (Measure) on the main function menu or  to display the Measure function menu.

Table 3.7-1 Measure function menu
(NR TDD sub-6GHz Uplink/NR TDD mmWave Uplink)

Function Key	Menu Display	Function
Page 1	Measure	Press Measure to display.
F1	Modulation Analysis	Switches the measurement function to Modulation Analysis. It is available when MX285051A-061/MX269051A-061 or MX285051A-071 is installed.

3.7.1 Modulation Analysis

To set modulation analysis items, press  (Modulation Analysis) on the Measure function menu to display the Modulation Analysis function menu.



The Modulation Analysis function menu consists of two pages that are toggled by pressing .

Table 3.7.1-1 Modulation Analysis function menu

Function Key	Menu Display	Function
Page 1	Modulation Analysis	Press Modulation Analysis to display.
F1	Analysis Time	Sets measurement position. Refer to 3.7.1.1 “Analysis Time”
F2	Basic Settings	Sets Basic parameters. Refer to 3.7.1.2 “Basic Settings”
F7	Advanced Settings	Sets the parameters for each channel and signal. Refer to 3.7.1.3 “Advanced Settings”
Page 2	Modulation Analysis	Press Modulation Analysis and then  to display.
F1	Trace	Sets the trace. Refer to 3.7.1.4, 3.7.1.5, 3.7.1.6 “Trace”

3.7.1.1 Analysis Time


Set the measurement position in the Analysis Time function menu that is displayed by pressing  (Analysis Time) on page 1 of the Modulation Analysis function menu.

Table 3.7.1.1-1 Analysis Time function menu

Function Key	Menu Display	Function
Page 1	Analysis Time	Press Analysis Time to display.
F1	Starting Slot Number	Sets the measurement start position. It is fixed to 0 slot in the MX285051A-061/MX269051A-061 and MX285051A-071.
F2	Measurement Interval	Sets the analysis slot length. It is fixed to the following values. For NR TDD sub-6GHz Uplink, Subcarrier Spacing = 15 kHz: 10 Slots Subcarrier Spacing = 30 kHz: 20 Slots Subcarrier Spacing = 60 kHz: 40 Slots For NR TDD mmWave Uplink, Subcarrier Spacing = 60 kHz: 40 Slots Subcarrier Spacing = 120 kHz: 80 Slots

The following table lists the slots per frame according to the Subcarrier Spacing.

Table 3.7.1.1-2 Number of Slots per Frame

Subcarrier Spacing	Slots/Frame
15 kHz	10
30 kHz	20
60 kHz	40
120 kHz	80

3.7.1.2 Basic Settings


Set the basic parameters for modulation analysis. The Basic Settings function menu is displayed by pressing  (Basic Settings) on page 1 of the Modulation Analysis function menu.

Table 3.7.1.2-1 Basic Settings function menu

Function Key	Menu Display	Function
Page 1	Basic Settings	Press Basic Settings to display.
F1	Frame Parameter	Displays a tab to set the parameters for Frame Parameter. Refer to Table 3.7.1.2-2 Frame Parameter
F2	PUSCH/DM-RS	Displays a tab to set the parameters for PUSCH/DM-RS. Refer to Table 3.7.1.2-4 PUSCH/DM-RS
F6	Restore Default Values	Restores the parameters in the dialog box to the default values.
F7	Set	Sets the parameters specified at the dialog box.
F8	Cancel	Cancels the parameters specified at the dialog box.

Table 3.7.1.2-2 Frame Parameter

Dialog Box	Function
Subcarrier Spacing	Sets the Subcarrier Spacing. For NR TDD sub-6GHz Uplink, Options: 15 kHz, 30 kHz, 60 kHz For NR TDD mmWave Uplink, Options: 60 kHz, 120 kHz
Number of RBs	Sets the number of the resource blocks for the target signal. Number of RBs is set to the default value when switching the Standard. For NR TDD sub-6GHz Uplink, Options: Subcarrier Spacing = 15 kHz: 25, 52, 79, 106, 133, 160, 216, 270 Subcarrier Spacing = 30 kHz: 11, 24, 38, 51, 65, 78, 106, 133, 162, 189, 217, 245, 273 Subcarrier Spacing = 60 kHz: 11, 18, 24, 31, 38, 51, 65, 79, 93, 107, 121, 135 For NR TDD mmWave Uplink, Options: Subcarrier Spacing = 60 kHz: 66, 132, 264 Subcarrier Spacing = 120 kHz: 32, 66, 132, 264
Channel Bandwidth	Displays the channel bandwidth of the target signal set by the Number of RBs.
Cell ID	Sets the Cell ID. Options: 0 to 1007
Phase Compensation	Sets whether to enable or disable Phase Compensation. Phase Compensation sets whether to enable (ON) or disable (OFF) phase compensation during upconversion defined in the 3GPP NR standard (TS 38.211, V15.1.0 or later). Upconversion formula for ON: $\text{Re}\left\{s_l^{(p,\mu)}(t) \cdot e^{j2\pi f_0(t-t_{\text{start},l}^\mu - N_{\text{CP},l}^\mu T_c)}\right\}$ Upconversion formula for OFF: $\text{Re}\left\{s_l^{(p,\mu)}(t) \cdot e^{j2\pi f_0 t}\right\}$ For details, refer to 5.4 in TS 38.211 (V15.1.0 or later).

The following table shows the relation between the Number of RBs setting and the Channel Bandwidth at each Subcarrier Spacing.

Table 3.7.1.2-3 Relationship Between Number of RBs and Channel Bandwidth

Subcarrier Spacing	Number of RBs	Channel Bandwidth
15 kHz	25	5 MHz
	52	10 MHz
	79	15 MHz
	106	20 MHz
	133	25 MHz
	160* ¹	30 MHz
	216* ¹	40 MHz
	270* ¹	50 MHz
30 kHz	11	5 MHz
	24	10 MHz
	38	15 MHz
	51	20 MHz
	65	25 MHz
	78* ¹	30 MHz
	106* ¹	40 MHz
	133* ¹	50 MHz
	162* ²	60 MHz
	189* ²	70 MHz
	217* ²	80 MHz
	245* ²	90 MHz
	273* ²	100 MHz
60 kHz (MX285051A-061 /MX269051A-061)	11	10 MHz
	18	15 MHz
	24	20 MHz
	31	25 MHz
	38* ¹	30 MHz
	51* ¹	40 MHz
	65* ¹	50 MHz
	79* ²	60 MHz
	93* ²	70 MHz
	107* ²	80 MHz
	121* ²	90 MHz
	135* ²	100 MHz
60 kHz (MX285051A-071)	66	50 MHz
	132	100 MHz
	264	200 MHz
120 kHz	32	50 MHz
	66	100 MHz
	132	200 MHz
	264* ³	400 MHz

*1: For MS269xA, this is available only when MS269xA-077/177 is installed.

*2: For MS269xA, this is available only when MS269xA-078/178 is installed.

*3: For MS2850A, this is available only when MS2850A-033/133 is installed.

Table 3.7.1.2-4 PUSCH/DM-RS

Dialog Box	Function
Multiplexing Scheme	Sets the Multiplexing Scheme of PUSCH. Options: CP-OFDM, DFT-s-OFDM It is fixed to CP-OFDM when Standard is NR TDD mmWave Uplink.
Group Hopping	Sets whether to use the Group Hopping of DM-RS for PUSCH.
Sequence Hopping	Sets whether to use the Sequence Hopping of DM-RS for PUSCH.
Slot	Selects the Slot number for which the parameters for the PUSCH/DM-RS is to be displayed. For NR TDD sub-6GHz Uplink, Range: Subcarrier Spacing = 15 kHz: 0 to 9 Subcarrier Spacing = 30 kHz: 0 to 19 Subcarrier Spacing = 60 kHz: 0 to 39 For NR TDD mmWave Uplink, Range: Subcarrier Spacing = 60 kHz: 0 to 39 Subcarrier Spacing = 120 kHz: 0 to 79
Enable	Enables or disables the PUSCH/DM-RS at the selected Slot. No measurement result of the PUSCH/DM-RS of the disabled Slot is displayed.
Antenna Port	Sets the Antenna Port. Antenna Port settings are common to all Slots. Options: 1000, 1001, 1002, 1003
Modulation Scheme	Selects the modulation scheme for the PUSCH. Options: PI/2 BPSK, QPSK, 16QAM, 64QAM, 256QAM, Auto When Multiplexing Scheme is CP-OFDM, PI/2 BPSK cannot be selected.
PUSCH Mapping Type	Sets the Mapping Type of PUSCH. Options: typeA, typeB
Start Symbol	Sets the Mapping Start Symbol of PUSCH. When the PUSCH Mapping Type is typeA, Range: 0 to DM-RS typeA-pos When the PUSCH Mapping Type is typeB, Range: 0 to 12.
Number of Symbols	Sets the number of symbols for PUSCH. Range: 2 to 14-PUSCH Start Symbols

Table 3.7.1.2-4 PUSCH/DM-RS (Cont'd)

Dialog Box	Function									
PUSCH Power Boosting (Auto/Manual)	Selects automatic detection and manual setting of the PUSCH Power of DM-RS. Options: Auto, Manual									
PUSCH Power Boosting	Sets the PUSCH level of the DM-RS. The following values are set when PUSCH Power Boosting is Auto. <table><tr><th>DMRS CDM Group without Data</th><th>DMRS Config Type</th><th>PUSCH Level (dB)</th></tr><tr><td>1</td><td>1</td><td>0.000</td></tr><tr><td>2</td><td>1</td><td>−3.000</td></tr></table>	DMRS CDM Group without Data	DMRS Config Type	PUSCH Level (dB)	1	1	0.000	2	1	−3.000
DMRS CDM Group without Data	DMRS Config Type	PUSCH Level (dB)								
1	1	0.000								
2	1	−3.000								
DM-RS typeA-pos	Sets the DM-RS typeA-pos. This parameter is settable only when PUSCH Mapping Type is typeA. Options: 2, 3									
DM-RS config-type	Sets the DM-RS config type. It is fixed to 1.									
DM-RS add-pos	Sets the DM-RS add-pos. Options: 0, 1, 2, 3									

Table 3.7.1.2-4 PUSCH/DM-RS (Cont'd)

Dialog Box	Function
CDM Group Without Data	Sets the DM-RS associated with PUSCH. Options: 1, 2 It is fixed to 2 when Antenna Port is 1002 or 1003.
PUSCH PT-RS	Enables or disables the PUSCH PT-RS. It is fixed to disable. Options: Enable, Disable When Multiplexing Scheme is DFT-s-OFDM, it is fixed to Disable.
PT-RS Time Density	Sets the PT-RS Time Density. Options: 1, 2, 4
PT-RS Freq. Density	Sets the PT-RS Freq. Density. Options: 2, 4
PT-RS RE Offset	Sets the PT-RS RE Offset. Options: 00, 01, 10, 11
PUSCH RBs Allocation Auto Detect	Enables or disables the auto detection of the RBs that are allocated to PUSCH. Options: Enable, Disable When Multiplexing Scheme is DFT-s-OFDM, it is fixed to Disable.
PUSCH RBs Allocation Start RB	Sets the Start RB of the RBs that are allocated to PUSCH. Range: 0 to Number Of RBs – 1
PUSCH RBs Allocation Number of RBs	Sets the number of the RBs that are allocated to PUSCH. Range: 1 to the following value When Multiplexing Scheme is CP-OFDM: Number Of RBs – PUSCH Allocation Start RB When Multiplexing Scheme is DFT-s-OFDM: PUSCH RBs Allocation Number of RBs $= 2^{\alpha_2} \cdot 3^{\alpha_3} \cdot 5^{\alpha_5} \leq \text{Number Of RBs} - \text{PUSCH Allocation Start RB}^*$ *: $\alpha_2, \alpha_3, \alpha_5$ is non-negative integer.
Copy to All Slot	Copies the setting of the selected Slot to all the Slots.

3.7.1.3 Advanced Settings





Set the advanced parameters for modulation analysis. The Advanced Settings function menu is displayed by pressing  (Advanced Settings) on page 1 of the Modulation Analysis function menu.

Table 3.7.1.3-1 Advanced Settings function menu

Function Key	Menu Display	Function
Page 1	Advanced Settings	Press Advanced Settings to display.
F1	Equalizer Use data	Selects whether or not to include resource elements other than Reference Signal at calculation of the transmission path loss. Options: On Includes resource elements other than Reference Signal at calculation of the transmission path loss. Off Does not include resource elements other than Reference Signal at calculation of the transmission path loss.
F2	Amplitude Tracking	Selects On/Off for Amplitude Tracking. Options: On, Off
F3	Phase Tracking	Selects On/Off for Phase Tracking. Options: On, Off
F4	Timing Tracking	Selects On/Off for Timing Tracking. Options: On, Off
Page 2	Advanced Settings	Press Advanced Settings and then  to display.
F1	Multicarrier Filter	When measuring the multicarrier signal, sets whether to filter the reference carrier. Options: On, Off
F2	EVM Window	Turns On or Off the EVM Window. Options: On Displays the worst among the EVM High and EVM Low values as the measurement result. However, the EVM Mid result is displayed in graph. Off Displays the EVM Mid. Refer to Figure 3.6.1.3-1 “EVM Window”
F3	DC Cancellation	When performing the EVM measurement, select On/Off of this function that eliminates influences due to carrier leakage. Options: On, Off
F4	Phase Compensation Frequency Center	Selects whether to perform the phase compensation at the same frequency as the center frequency. Options: On, Off
F5	Phase Compensation Frequency Value	Sets the frequency for the phase compensation. This function is available when Phase Compensation Frequency Center is Off. Resolution: 1 Hz Range: Same as Center Frequency

3.7.1.4 Trace (EVM vs Subcarrier, EVM vs Symbol, Spectral Flatness)

Set Trace in the Trace function menu that is displayed by pressing  (Trace) on page 2 of the Modulation Analysis function menu or .

When EVM vs Subcarrier, EVM vs Symbol, or Spectral Flatness is selected by F1: Trace Mode, the function menu is as shown in the following table.

Table 3.7.1.4-1 Trace function menu

Function Key	Menu Display	Function
Page 1	Trace	Press Trace to display.
F1	Trace Mode	<p>Sets a graphical result in the graph window.</p> <p>Note: The Trace function menu configuration changes depending on the settings of this function.</p> <p>Options:</p> <ul style="list-style-type: none"> EVM vs Subcarrier Displays EVM vs Subcarrier in a graph window. EVM vs Symbol Displays EVM vs Symbol in a graph window. Spectral Flatness Displays Spectral Flatness in a graph window. Power vs RB Displays Power vs Resource Block in a graph window. EVM vs RB Displays EVM vs Resource Block in a graph window. Summary Displays EVM and power of each channel in a graph window.
F3	Scale	<p>Sets vertical scale of graphical result.</p> <p>Refer to Table 3.7.1.4-2 Scale function menu</p>
F4	Storage	<p>Sets storage method.</p> <p>Refer to Table 3.7.1.4-3 Storage function menu</p>
F6	Subcarrier Number	<p>Sets the subcarrier number of Marker position and EVM vs Symbol displayed.</p> <p>Range: 0 to (Number of RBs × 12 – 1)</p>
F7	Symbol Number	<p>Sets the symbol number of Marker position and EVM vs Subcarrier displayed.</p> <p>For NR TDD sub-6GHz Uplink, Range: Subcarrier Spacing = 15 kHz: 0 to 139 Subcarrier Spacing = 30 kHz: 0 to 279 Subcarrier Spacing = 60 kHz: 0 to 559</p> <p>For NR TDD mmWave Uplink, Range: Subcarrier Spacing = 60 kHz: 0 to 559 Subcarrier Spacing = 120 kHz: 0 to 1119</p>

Table 3.7.1.4-1 Trace function menu (Cont'd)

Function Key	Menu Display	Function
F8	EVM vs Subcarrier View	<p>Displayed when EVM vs Subcarrier is selected by F1: Trace Mode.</p> <p>Sets whether to enable averaging in EVM vs Subcarrier, and the display type.</p> <p>Options:</p> <ul style="list-style-type: none"> Each Symbol <ul style="list-style-type: none"> Displays EVM vs Subcarrier of Symbol set in Symbol Number when EVM vs Subcarrier is displayed. Averaged over all Symbols <ul style="list-style-type: none"> Displays EVM vs Subcarrier of the analysis slot length set in Measurement Interval. Graph View <ul style="list-style-type: none"> Selects a graph display type of EVM vs Subcarrier from the average (RMS), and the average value and peak value (RMS&Peak).
	EVM vs Symbol View	<p>Displayed when EVM vs Symbol is selected by F1: Trace Mode.</p> <p>Sets whether to enable averaging in EVM vs Symbol, and the display type.</p> <p>Options:</p> <ul style="list-style-type: none"> Each Subcarrier <ul style="list-style-type: none"> Displays EVM vs Symbol of Subcarrier set in Subcarrier Number when EVM vs Symbol is displayed. Averaged over all Subcarriers <ul style="list-style-type: none"> Displays EVM vs Symbol in all subcarriers. Graph View <ul style="list-style-type: none"> Selects a graph display type of EVM vs Subcarrier from the average (RMS), and the average value and peak value (RMS&Peak).
	Spectral Flatness Type	<p>Displayed when Spectral Flatness is selected by F1: Trace Mode.</p> <p>Sets type of Spectral Flatness displayed.</p> <p>Options:</p> <ul style="list-style-type: none"> Amplitude <ul style="list-style-type: none"> Displays Amplitude in Spectral Flatness. Phase <ul style="list-style-type: none"> Displays Phase in Spectral Flatness.
	Page Number	<p>Displayed when Summary is selected by F1: Trace Mode.</p> <p>If there are multiple summary pages, use the rotary knob or the numeric keypad to go to the next or previous page.</p>



Table 3.7.1.4-2 Scale function menu

Function Key	Menu Display	Function
Page 1	Scale	Press Scale to display.
F1	EVM Unit	Sets the unit of EVM. Options: %, dB
F2	EVM Scale	Sets the upper limit for the EVM scale. Range: 2 %, 5 %, 10 %, 20 % (in %) -40 dB, -20 dB, 0 dB (in dB)
F3	Flatness Scale	Sets a scale of Spectral Flatness. Options: Amplitude Sets the upper and lower limit values of Amplitude in Spectral Flatness (± 10 dB, ± 3 dB, ± 1 dB). Phase Sets the upper and lower limit values of Phase in Spectral Flatness (± 60 deg, ± 20 deg, ± 6 deg).

Table 3.7.1.4-3 Storage function menu

Function Key	Menu Display	Function
Page 1	Storage	Press Storage to display.
F1	Mode	Sets the storage mode. Options: Off Updates data per measurement. Average Displays the average per measurement. Average & Max Displays the average and maximum values per measurement.
F2	Count	Sets the measurement count. Range: 2 to 9999

3.7.1.5 Trace (Power vs RB, EVM vs RB)

To set Trace, press  (Trace) on page 2 of the Modulation Analysis function menu or  to display the Trace function menu.

When Power vs RB or EVM vs RB is selected by F1: Trace Mode, the function menu is as shown in the following table.

Table 3.7.1.5-1 Trace function menu

Function Key	Menu Display	Function
Page 1	Trace	Press Trace to display.
F1	Trace Mode	<p>Sets a graphical result in the graph window.</p> <p>Note: The Trace function menu configuration changes depending on the settings of this function.</p> <p>Options:</p> <ul style="list-style-type: none"> EVM vs Subcarrier Displays EVM vs Subcarrier in a graph window. EVM vs Symbol Displays EVM vs Symbol in a graph window. Spectral Flatness Displays Spectral Flatness in a graph window. Power vs RB Displays Power vs Resource Block in a graph window. EVM vs RB Displays EVM vs Resource Block in a graph window. Summary Displays EVM and power of each channel in a graph window.
F3	Scale	<p>Sets vertical scale of a graphical result.</p> <p>Refer to Table 3.7.1.5-2 Scale function menu</p>
F6	Slot Number	<p>Sets the slot number of Marker position, Power vs RB, and EVM vs RB displayed.</p> <p>For NR TDD sub-6GHz Uplink, Range: Subcarrier Spacing = 15 kHz: 0 to 9 Subcarrier Spacing = 30 kHz: 0 to 19 Subcarrier Spacing = 60 kHz: 0 to 39</p> <p>For NR TDD mmWave Uplink, Range: Subcarrier Spacing = 60 kHz: 0 to 39 Subcarrier Spacing = 120 kHz: 0 to 79</p>
F7	Resource Block Number	<p>Sets the resource block number of Marker position, Power vs RB, and EVM vs RB displayed.</p> <p>Range: 0 to Number of RBs – 1</p>

Table 3.7.1.5-2 Scale function menu

Function Key	Menu Display	Function
Page 1	Scale	Press Scale to display.
F1	EVM Unit	Sets the unit of EVM. Options: %, dB
F2	EVM Scale	Sets the upper limit for the EVM scale. Range: 2 %, 5 %, 10 %, 20 % (in %) -40 dB, -20 dB, 0 dB (in dB) Note: EVM Scale is valid only for EVM vs RB.

3.7.1.6 Trace (Summary)



Set Trace in the Trace function menu that is displayed by pressing  (Trace) on page 2 of the Modulation Analysis function menu or . When Summary is selected by F1: Trace Mode, the function menu is as shown in the following table.

Table 3.7.1.6-1 Trace function menu

Function Key	Menu Display	Function
Page 1	Trace	Press Trace to display.
F1	Trace Mode	<p>Sets a graphical result in the graph window.</p> <p>Note: The Trace function menu configuration changes depending on the settings of this function.</p> <p>Options:</p> <ul style="list-style-type: none"> EVM vs Subcarrier Displays EVM vs Subcarrier in a graph window. EVM vs Symbol Displays EVM vs Symbol in a graph window. Spectral Flatness Displays Spectral Flatness in a graph window. Power vs RB Displays Power vs Resource Block in a graph window. EVM vs RB Displays EVM vs Resource Block in a graph window. Summary Displays EVM and power of each channel in a graph window. <p>Note: The constellation is not displayed when Trace Mode is set to Summary.</p>
F3	Scale	<p>Sets the unit of EVM measurement result.</p> <p>Refer to Table 3.7.1.6-2 Scale function menu</p>
F4	Storage	<p>Sets the storage mode.</p> <p>Refer to Table 3.7.1.6-3 Storage function menu</p>


Table 3.7.1.6-2 Scale function menu


Function Key	Menu Display	Function
Page 1	Scale	Press Scale to display.
F1	EVM Unit	Sets the unit of EVM. Options: %, dB

Table 3.7.1.6-3 Storage function menu

Function Key	Menu Display	Function
Page 1	Storage	Press Storage to display.
F1	Mode	Sets the storage mode. Options: Off Updates data per measurement. Average Displays the average per measurement. Average & Max Displays the average and maximum values per measurement.
F2	Count	Sets the measurement count. Range: 2 to 9999

3.8 Setting Marker

Configure the marker settings in the Marker function menu that is displayed by pressing  (Marker) on the main function menu or . Also, press  to display page 2 of the Marker function menu.

The Marker function menu consists of 2 pages that are toggled by pressing .

Note:
When Trace Mode is set to Summary, settings related to the marker function cannot be configured.

Table 3.8-1 Marker function menu

Function Key	Menu Display	Function
Page 1	Marker	Press Marker to display.
F1	Marker	Sets On/Off for the marker function. Option: On Enables the marker function. Off Disables the marker function.
F5	Constellation Marker Number	Displayed when Modulation Analysis is selected by the Measure function menu. Sets the position of the resource element targeted for the marker. Note: This setting is enabled only for Power vs RB and EVM vs RB. Range: Number of resource elements detected as 0 to PDSCH or PUSCH.
	Carrier Number	Displayed when Carrier Aggregation Analysis is selected by the Measure function menu. Sets the carrier number targeted for the marker. Note: This setting is enabled only for Power vs RB and EVM vs RB. Range: 0 to Number of Carriers – 1

Table 3.8-1 Marker function menu (Cont'd)

Function Key	Menu Display	Function
F6	Subcarrier Number	Displayed when Trace Mode is other than Power vs RB or EVM vs RB. Sets the position of the subcarrier targeted for the marker. Range: 0 to (Number of RBs \times 12 – 1)
	Slot Number	Displayed when Trace Mode is Power vs RB or EVM vs RB. Sets the slot number to be displayed. For NR TDD sub-6GHz Downlink or NR TDD sub-6GHz Uplink, Range: Subcarrier Spacing = 15 kHz: 0 to 9 Subcarrier Spacing = 30 kHz: 0 to 19 Subcarrier Spacing = 60 kHz: 0 to 39 For NR TDD mmWave Downlink or NR TDD mmWave Uplink, Range: Subcarrier Spacing = 60 kHz: 0 to 39 Subcarrier Spacing = 120 kHz: 0 to 79
F7	Symbol Number	Displayed when Trace Mode is other than Power vs RB or EVM vs RB. Sets the position of the symbol targeted for the marker. For NR TDD sub-6GHz Downlink or NR TDD sub-6GHz Uplink, Range: Subcarrier Spacing = 15 kHz: 0 to 139 Subcarrier Spacing = 30 kHz: 0 to 279 Subcarrier Spacing = 60 kHz: 0 to 559 For NR TDD mmWave Downlink or NR TDD mmWave Uplink, Range: Subcarrier Spacing = 60 kHz: 0 to 559 Subcarrier Spacing = 120 kHz: 0 to 1119
	Resource Block Number	Displayed when Trace Mode is Power vs RB or EVM vs RB. Sets the resource block number to be displayed. Range: 0 to Number of RBs – 1

Table 3.8-1 Marker function menu (Cont'd)



Function Key	Menu Display	Function
Page 2	Marker	Press Marker and then  to display.
F1	Peak Search	<p>Moves the marker to the maximum level point within the measurement range. When there are multiple maximum level points, the point corresponding to the smallest value (left side of the scale) on the horizontal axis (Subcarrier, Symbol, or Resource Block) is selected.</p> <p>Note:</p> <p>When Trace Mode is set to Power vs Resource Block and there are multiple maximum level points, the point corresponding to the smallest values on the horizontal and vertical (Slot) axes is selected.</p>
F2	Next Peak	<p>Moves the marker to the next largest level point after the current marker level within the measurement range. When there are multiple points, the point corresponding to the smallest value (left side of the scale) on the horizontal axis is selected. However, if the point is the same value as the marker level, the marker is moved to the next maximum point to the horizontal axis position of the marker.</p> <p>Note:</p> <p>When Trace Mode is set to Power vs Resource Block, the point corresponding to the smallest values on the horizontal and vertical axes is selected.</p>
F3	Dip Search	<p>Moves the marker to the minimum level position within the measurement range. When there are multiple minimum level points, the greatest point (right side of the scale) on the horizontal axis is selected.</p> <p>Note:</p> <p>When Trace Mode is set to Power vs Resource Block and there are multiple minimum level points, the greatest point on the horizontal axis and vertical axis is selected.</p>
F4	Next Dip	<p>Moves the marker to the minimum level point next to the current marker level within the measurement range. When there are multiple points, the greatest point (right side of the scale) on the horizontal axis is selected. However, if the point is the same value as the marker level, the marker is moved to the next minimum point to the horizontal axis position of the marker.</p> <p>Note:</p> <p>When Trace Mode is set to Power vs Resource Block, the greatest point on the horizontal axis and vertical axis is selected.</p>

Table 3.8-2 Marker Function Menu (Power vs Time)

Function Key	Menu Display	Function
Page 1	Marker	Press Marker to display.
F1	Marker	Sets On/Off for the marker function. Option: On Enables the marker function. Off Disables the marker function.
F2	Trace Select	Selects the Trace that activates the marker. Option: Main Activates the Main Trace marker. Sub Activates the Sub Trace marker.
F4	Marker1	Sets the Marker position. When Trace Select is Main: Range: #GapSize to (#FrameSize + #GapSize) [Ts] #FrameSize = Number of samples for 1 frame (10 ms) in Ts (Time per 1 sample) = 307200 [Ts] #GapSize = 7 [symbol] = 15360 [Ts] When Trace Select is Sub: Range: Number of slots in Frame 0 to $1 \times 14 - 1$ [Symbol] Refer to Table 3.6.1.1-2 for the number of slots in one frame.
F6	Block Number	Sets the target block number for the main trace analysis. Refer to 3.6.3.7 "Trace"

3.9 Setting Trigger

Configure the trigger settings in the Trigger function menu that is displayed by pressing  (Trigger) on the main function menu or



Note:

You cannot set a trigger when the Replay function is executed.

Refer to 4.2 “Replay Function”

Table 3.9-1 Trigger function menu

Function Key	Menu Display	Function
Page 1	Trigger	Press Trigger to display.
F1	Trigger Switch	Sets the trigger synchronization On/Off. Options: On Enables the trigger function. Off Disables the trigger function.
F2	Trigger Source	Sets the trigger source. Options: MS2850A External1 Starts measurement by the trigger input from an external trigger. External2 Starts measurement by the trigger input from an external trigger 2. Video Starts measurement by the video trigger. Wide IF Video An IF signal with a wide passing band of about 50 MHz or greater is detected, and capture starts in synchronization with either the rise or fall of the detected signal. Frame Starts measurement by the equipment-internal trigger. Frame Sync Setup Sets the Frame Trigger starting source if Frame is specified for Trigger Source. Frame Sync Setup function menu is displayed. Refer to Table 3.9-2 Frame Sync Setup function menu MS269xA External Starts measurement by the trigger input from an external trigger. SG Marker Starts measurement by the timing of the Vector Signal Generator option. Video Starts measurement by the video trigger. Wide IF Video An IF signal with a wide passing band of about 50 MHz or greater is detected, and capture starts in synchronization with either the rise or fall of the detected signal.

Table 3.9-1 Trigger function menu (Cont'd)

Function Key	Menu Display	Function
F3	Trigger Slope	Sets the trigger polarity. Options: Rise Synchronizes with rising edge of the trigger. Fall Synchronizes with falling edge of the trigger.
F4	Video Trigger Level	Sets the trigger level of the Video Trigger. Range: $(-150 \text{ dBm} + \text{Offset Value})$ to $(50 + \text{Offset Value}) \text{ dBm}$
F5	Wide IF Video Trigger Level	Sets the trigger level of the Wide IF Video Trigger. Range: -60 to 50 dBm
F8	Trigger Delay	Sets the trigger delay. Range: Refer to Table 3.9-3 Trigger Delay Range.


Table 3.9-2 Frame Sync Setup function menu

Function Key	Menu Display	Function
F1	Off	Captures waveforms according to the equipment-internal trigger signal.
F7	Frame Trigger Period	Sets the frame trigger signal period. Range: 10 ms fixed
F8	Frame Sync Offset	Sets the offset time from when a trigger signal (the equipment-internal trigger signal, Wide IF Video signal, or external trigger signal) is generated until a trigger actually occurs. Range: 0 s fixed

Table 3.9-3 Trigger Delay Range
(Refer to Table 3.6.1.3-2 for Frequency Span)

Model Name	Frequency Span [MHz]	Trigger Delay	
		Range [s]	Resolution [ns]
MS2850A	1000	± 1.6	10
	510	± 3.2	20
	255	± 6.4	40
	125	± 12.8	80
MS269xA	125	± 0.5	5
	62.5		10
	31.25	± 2	20

3.10 EVM Display (Modulation Analysis)

When pressing  (Modulation Analysis) on the Measure function menu, EVM analysis results are displayed on the right side of the Result window on the screen. When setting to Off, the analysis results are displayed every time. When setting to Average, the average values of analysis results are displayed. When setting to Average & Max, the average and maximum value of analysis results are displayed.

Refer to 3.6.1.4 “Trace”, 3.7.1.4 “Trace”

		Avg/Max
Frequency Error	-7.16 /	-7.44 Hz
	-0.001 /	-0.001 ppm
Transmit Power	-6.79 /	-6.78 dBm
Total EVM (rms)	0.90 /	0.91 %
Total EVM (peak)	4.32 /	4.57 %
Symbol Number		154
Subcarrier Number		131
Origin Offset	-46.51 /	-45.83 dB
Time Offset	-36.4 /	-39.2 ns

3

Measurement

Figure 3.10-1 Result window

■Frequency Error

Summary Displays the average frequency error in the range set in Starting Slot Number and Measurement Interval.

Refer to 3.6.1.4 “Trace”

■Transmit Power

Summary Displays the mean power value including Cyclic Prefix in the bandwidth defined by Channel Bandwidth in the range set in Starting Slot Number and Measurement Interval.

■Total EVM (rms)

Summary Displays the root mean square EVM of all subcarriers within the range determined by Starting Slot Number and Measurement Interval.
Switches between % and dB according to settings of EVM Unit.

Refer to 3.6.1.4 “Trace”

■Total EVM (peak)

Summary Displays the maximum EVM of all subcarriers and all symbols in the range set in Starting Slot Number and Measurement Interval.

Switches between % and dB according to the settings of the EVM Unit.

■Symbol Number

Summary Displays the symbol number of Total EVM (peak).

■Subcarrier Number

Summary Displays the subcarrier number of Total EVM (peak).

■Origin Offset

Summary Displays the average origin offset in the range set in Starting Slot Number and Measurement Interval.


■Time Offset

Summary Displays the time offset between the trigger input and the head of the frame.

This is enabled in the following situations:

- When Trigger Switch is On.
- When the Replay function is executed and when the Storage Mode is Off.

3.11 Constellation Display (Modulation Analysis)

When pressing  (Modulation Analysis) on the Measure function menu, the constellation is displayed on the left side of the Result window on the screen.

For the MX285051A-011/021/061/071 and MX269051A-011/061, the constellation parameters depend on the Trace Mode settings.

3.11.1 Constellation (EVM vs Subcarrier, EVM vs Symbol, Spectral Flatness)

When selecting EVM vs Subcarrier, EVM vs Symbol, or Spectral Flatness from the Trace Mode menu, the following constellation is displayed.

Refer to 3.6.1.4 "Trace", 3.7.1.4 "Trace"

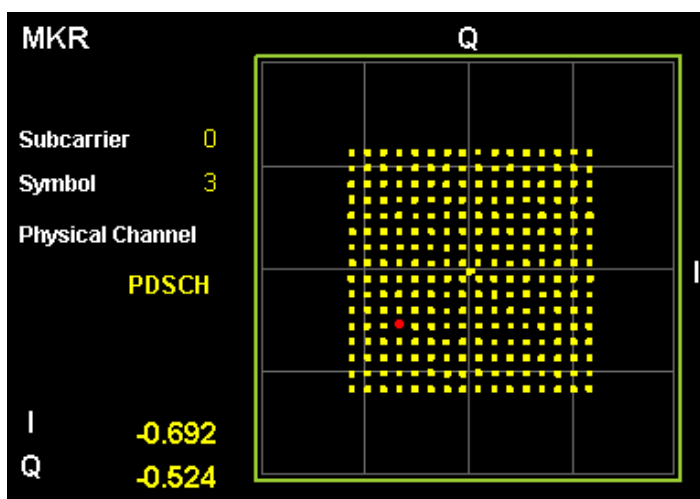


Figure 3.11.1-1 Constellation display

■ Graph display

Summary This graph shows a constellation for all subcarriers of the symbols specified by Symbol Number.

The marker-selected subcarrier is displayed in red.

■ MKR Subcarrier

Summary Displays the marker-selected subcarrier number. The marker can be moved with the cursor key or the rotary knob.

■MKR I/Q

Summary Displays the amplitude value of I/Q of the marker-selected subcarrier. The marker can be moved with the cursor key or the rotary knob.
The amplitude value is normalized in the value in which that of Reference Signal is set to 1.0.

■MKR Symbol

Summary Displays the symbol number set in Constellation Symbol Number.

■MKR Physical Channel

Summary Displays the type of physical channel for the resource element selected by the marker.

3.11.2 Constellation (Power vs RB, EVM vs RB)

When selecting Power vs RB or EVM vs RB from the Trace Mode menu, the PDSCH constellations specified by Slot Number or Resource Block Number are displayed.

Refer to 3.6.1.5 “Trace”, 3.7.1.5 “Trace”

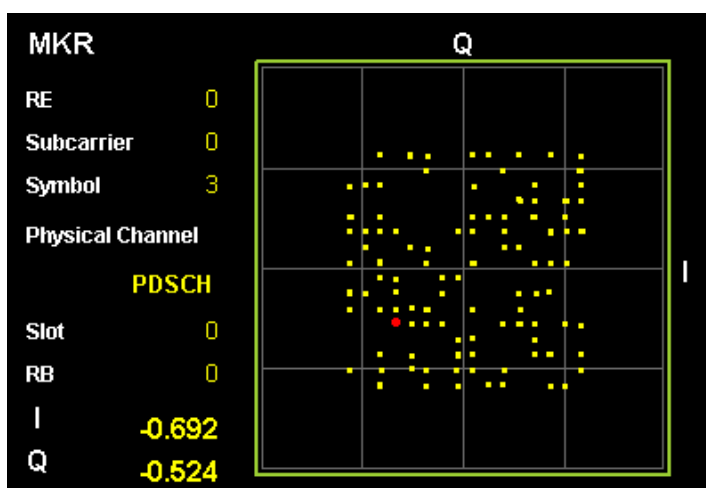


Figure 3.11.2-1 Constellation display

■Displaying Graph

Summary Displays overlapping the constellations of all resource elements of the resource block that is determined by the Slot Number and Resource Block Number settings. The resource element selected by the marker is displayed in red.

■MKR Resource Element Number (RE)

Summary Displays the number of the resource element selected by the marker. The marker can be moved by using the cursor keys or the rotary knob.

■MKR Subcarrier

Summary Displays the subcarrier number of the resource element selected by the marker. The marker can be moved by using the cursor keys or the rotary knob.

■MKR Symbol

Summary Displays the symbol number of the resource element selected by the marker. The marker can be moved by using the cursor keys or the rotary knob.

■MKR I/Q

Summary Displays the I/Q amplitude value of the resource element selected by the marker. The marker can be moved by using the cursor keys or the rotary knob.
The amplitude value is normalized to the value obtained by setting the amplitude value of Reference Signal to 1.0.

■MKR Physical Channel

Summary Displays the type of physical channel for the resource element selected by the marker.


■Slot Number

Summary Displays the slot number set by Slot Number.

■Resource Block Number (RB)

Summary Displays the resource block number set by Resource Block Number.

3.12 EVM vs Subcarrier Display (Modulation Analysis)

When pressing  (Modulation Analysis) on the Measure function menu, and selecting EVM vs Subcarrier from the Trace Mode menu, EVM for each subcarrier is displayed in the Graph window on the screen.
Refer to 3.6.1.4 "Trace", 3.7.1.4 "Trace"

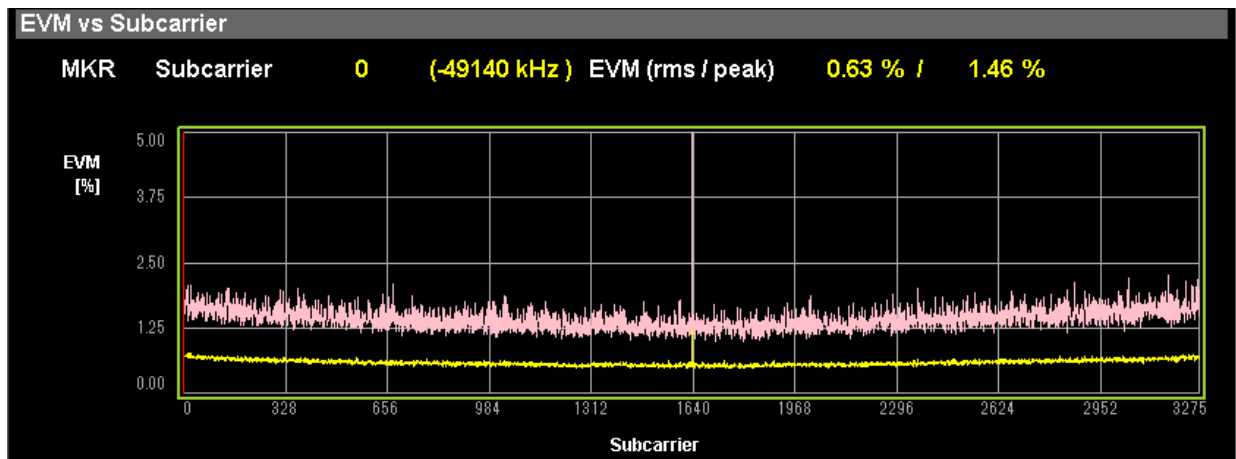


Figure 3.12-1 EVM vs Subcarrier display (Averaged over Symbols)

■ Graph display

Summary Displays EVM for each subcarrier. EVM for each subcarrier is based on settings of EVM vs Subcarrier View.
The marker-selected subcarrier is displayed in red.

■ MKR Subcarrier

Summary Displays the marker-selected subcarrier number. The marker can be moved with the cursor key or the rotary knob.

■ MKR EVM

Summary Displays EVM of the marker-selected subcarrier.
The EVM value is submitted to the settings of EVM vs Subcarrier View.


■ MKR Symbol

Summary Displays the symbol number set in EVM vs Subcarrier Symbol Number.

Note:

Displays it only when the settings of EVM vs Subcarrier View is Each Symbol.

3.13 EVM vs Symbol Display (Modulation Analysis)

When pressing  (Modulation Analysis) on the Measure function menu, and selecting EVM vs Symbol from the Trace Mode menu, EVM for each Symbol is displayed in the Graph window on the screen.

Refer to 3.6.1.4 “Trace”, 3.7.1.4 “Trace”

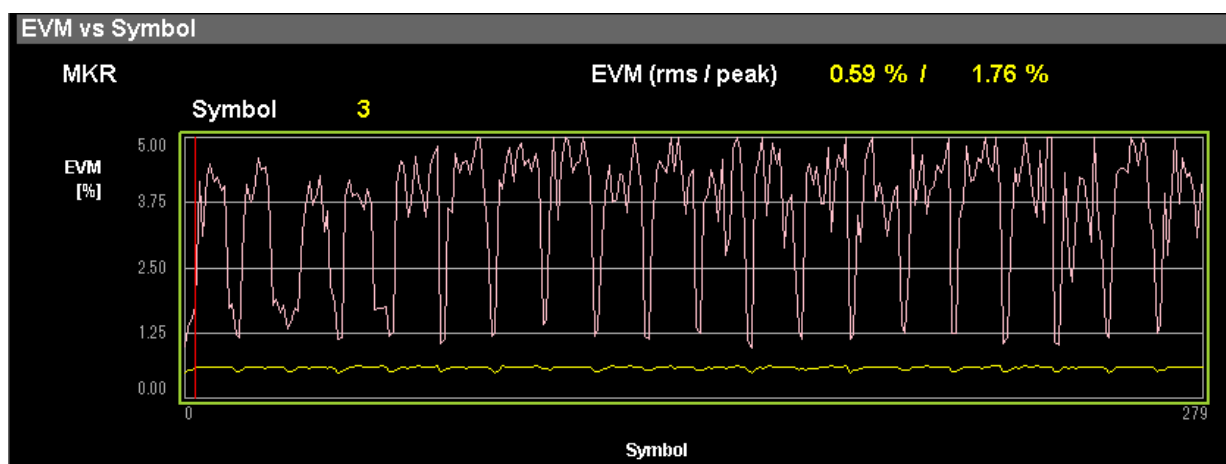


Figure 3.13-1 EVM vs Symbol display (Averaged over Subcarriers)

■Graph display

Summary Displays EVM for each symbol. EVM of each symbol is based on settings of EVM vs Symbol View.
The symbol selected by the marker is displayed in red.

■MKR Symbol

Summary Displays the marker-selected symbol number. The marker can be moved with the cursor key or the rotary knob.

■MKR EVM

Summary Displays the EVM of the marker-selected symbol. The EVM value is submitted to the settings of EVM vs Symbol View.


■MKR Subcarrier

Summary Displays the subcarrier number set in EVM vs Symbol Subcarrier Number.

Note:

Displays it only when the settings of EVM vs Symbol View are Each Subcarrier.

3.14 Spectral Flatness Display (Modulation Analysis)

When pressing  (Modulation Analysis) on the Measure function menu, and selecting Spectral Flatness from the Trace Mode menu, the measurement results of Spectral Flatness are displayed in the Graph window on the screen.

Refer to 3.6.1.4 "Trace", 3.7.1.4 "Trace"

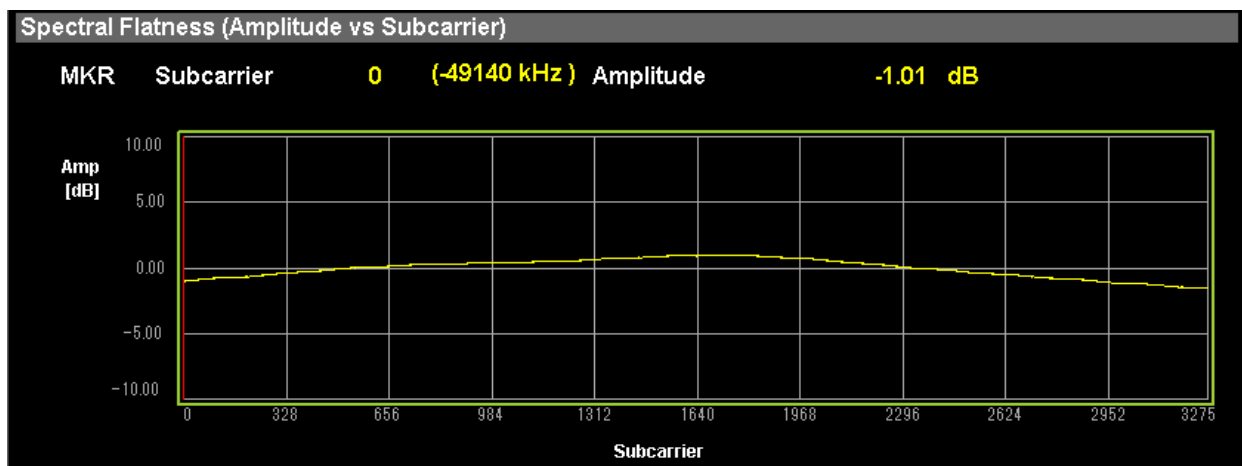


Figure 3.14-1 Amplitude of Spectral Flatness display

■Graph display

Summary Displays the Spectral Flatness value of an input signal. This Spectral Flatness value is based on the average in the range set in Starting Slot Number and Measurement Interval. The marker-selected subcarrier is displayed in red.

■MKR Subcarrier

Summary Displays the marker-selected subcarrier number. The marker can be moved with the cursor key or the rotary knob.


■MKR Amplitude

Summary Displays Amplitude of Spectral Flatness in the marker-selected subcarrier.

■MKR Phase

Summary Displays the Phase of Spectral Flatness in the marker-selected subcarrier.

3.15 Power vs Resource Block Display (Modulation Analysis)

When pressing  (Modulation Analysis) on the Measure function menu, and selecting the Power vs RB from the Trace Mode menu, the power for each resource block is displayed in the Graph window on the screen.

Refer to 3.6.1.5 “Trace”, 3.7.1.5 “Trace”



Figure 3.15-1 Power vs Resource Block display

■Displaying Graph

Summary Displays the power for each resource block.
The resource block selected by the marker is displayed in pink frame.

■MKR Slot

Summary Displays the number of the slot set by Slot Number.

■MKR Resource Block

Summary Displays the number of the resource block selected by the marker. The marker can be moved by using the cursor keys or the rotary knob.


■MKR Resource Block Power

Summary Displays the power of the resource block selected by the marker.


■MKR Resource Block Modulation Scheme

Summary Displays the Modulation Scheme of the resource block selected by the marker.

3.16 EVM vs Resource Block Display (Modulation Analysis)

When pressing  (Modulation Analysis) on the Measure function menu, and selecting the EVM vs RB from the Trace Mode menu, EVM for each resource block is displayed in the Graph window on the screen.

Refer to 3.6.1.5 "Trace", 3.7.1.5 "Trace"

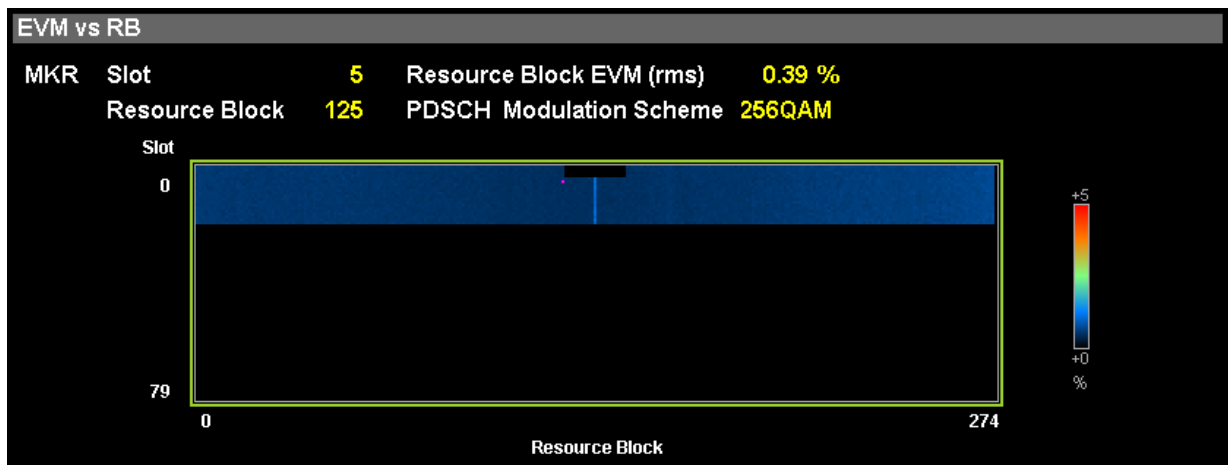

3

Measurement

Figure 3.16-1 EVM vs Resource Block display

■Displaying Graph

Summary Displays EVM for each resource block.

The symbol selected by the marker is displayed in a pink frame.

■MKR Slot

Summary Displays the number of the slot set by Slot Number.

■MKR Resource Block

Summary Displays the number of the resource block selected by the marker. The marker can be moved by using the cursor keys or the rotary knob.


■MKR Resource Block EVM

Summary Displays EVM of the resource block selected by the marker.

■MKR Resource Block Modulation Scheme

Summary Displays Modulation Scheme of the resource block selected by the marker.

3.17 Summary Display (Modulation Analysis)

When pressing  (Modulation Analysis) on the Measure function menu, and selecting Summary from the Trace Mode menu, the following results are displayed:

■Result window

Left side of the Result window:

Numeric results of EVM (rms) and EVM (peak)/Subcarrier/Symbol for each modulation analysis

PDSCH (QPSK•16QAM•64QAM•256QAM)

PUSCH ($\pi/2$ BPSK•QPSK•16QAM•64QAM•256QAM)

■Summary window (Graph window):

Channel Summary, Symbol Clock Error, ...

Refer to 3.6.1.4 “Trace”, 3.6.1.5 “Trace”, 3.7.1.4 “Trace”

• Channel Summary

Summary Displays the average EVM, average Power, and peak EVM of the input signal for each channel. The channels that are excluded in Advanced Setting are not displayed.

Avg EVM (rms): Average EVM

Max EVM (peak): Peak EVM and its Subcarrier, and Symbol

Avg Power: Average Power

Channel: Input signal channels

For NR TDD sub-6GHz Downlink or NR TDD mmWave Downlink,

P-SS

S-SS

PBCH

DM-RS (PBCH)

PDSCH

DM-RS (PDSCH)

PDCCH

DM-RS (PDCCH)

For NR TDD sub-6GHz Uplink or NR TDD mmWave Uplink,

PUSCH

DM-RS (PUSCH)

• Symbol Clock Error, IQ Skew, IQ Imbalance, IQ Quad Error

Summary Displays the symbol clock error, IQ skew, IQ imbalance, and IQ quadrature error.

NR TDD sub-6GHz Downlink or NR TDD mmWave Downlink

- Cell ID

Summary Displays the cell ID.

- OFDM Symbol Tx Power

Summary Displays OFDM Symbol Tx Power.

NR TDD sub-6GHz Uplink or NR TDD mmWave Uplink


- Frequency Error vs Slot

Summary Displays Frequency Error for each slot of the input signal.

- Origin Offset vs Slot


Summary Displays Origin Offset for each slot of the input signal.

Note:

If there are multiple summary pages, press the Trace function menu  (Page number) and specify the page to be displayed.

Refer to Table 3.7.1.4-1 Trace function menu

3.18 Power vs Resource Block Display (Carrier Aggregation)

When pressing  (Carrier Aggregation Analysis) on the Measure function menu, and selecting Power vs RB from the Trace Mode menu, the power for each resource block is displayed in the Result window on the screen.

Refer to 3.6.2.4 “Trace”

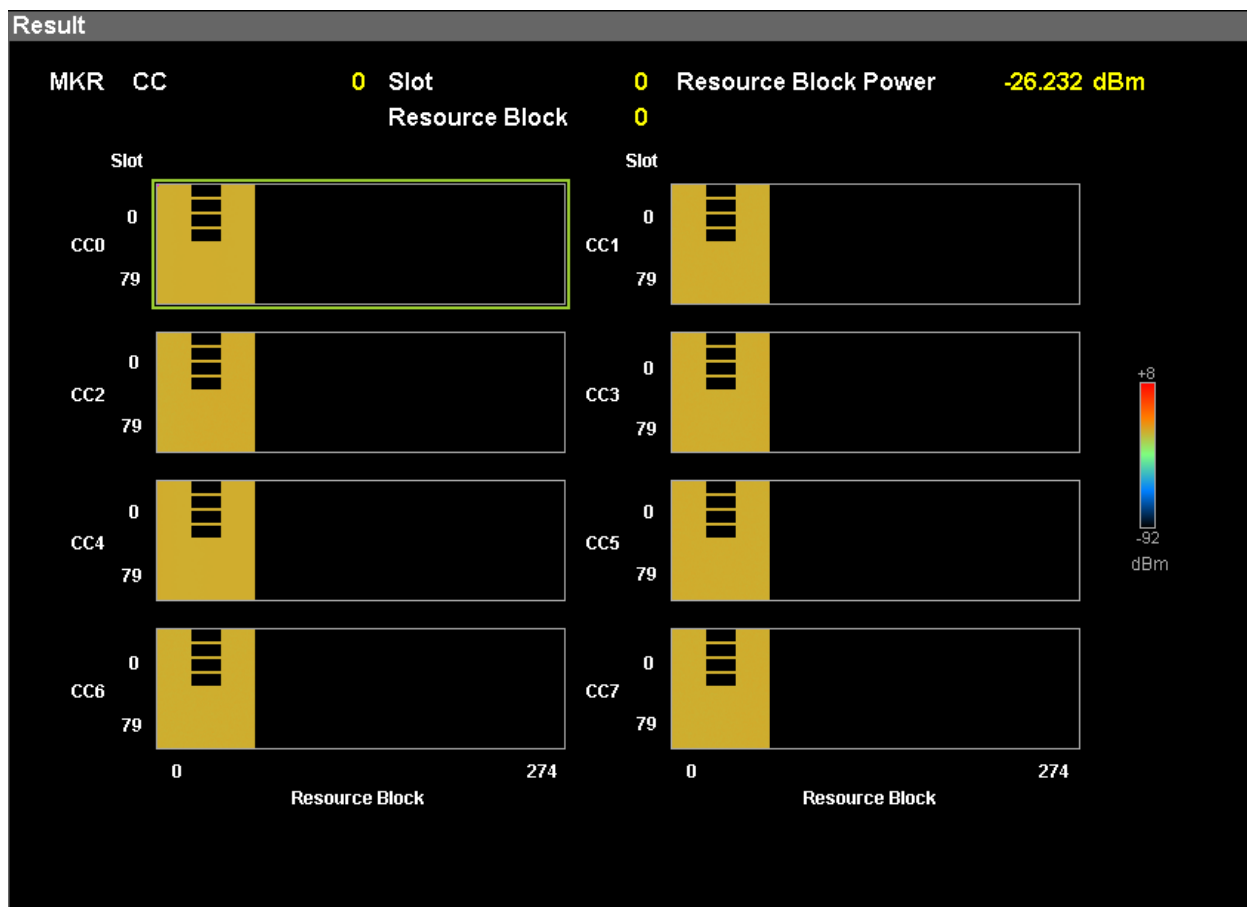


Figure 3.18-1 Power vs Resource Block display

■Displaying Graph

Summary Displays the power for each resource block.
The resource block selected by the marker is displayed in pink frame.

■MKR CC

Summary Displays the CC number set by Carrier Number.

■MKR Slot

Summary Displays the slot number set by Slot Number.

3.18 Power vs Resource Block Display (Carrier Aggregation)


■MKR Resource Block

Summary Displays the resource block number selected by the marker.
The marker can be moved by using the cursor keys or the rotary knob.

■MKR Resource Block Power

Summary Displays the power of the resource block selected by the marker.

3.19 EVM vs Resource Block Display (Carrier Aggregation)

When pressing  (Carrier Aggregation Analysis) on the Measure function menu, and selecting EVM vs RB from the Trace Mode menu, the EVM for each resource block is displayed in the Result window on the screen.

Refer to 3.6.2.4 “Trace”

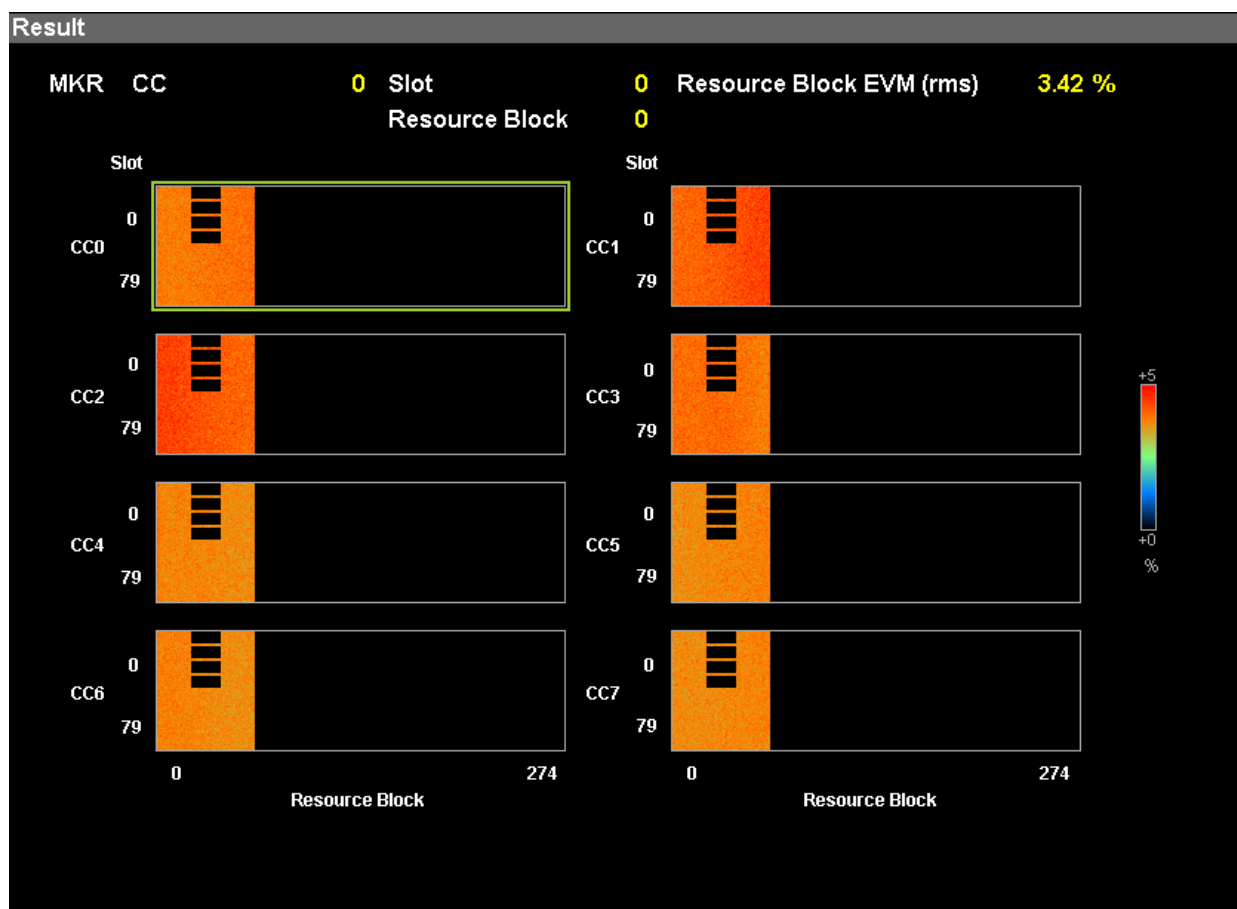


Figure 3.19-1 EVM vs Resource Block display

■Displaying Graph

Summary Displays EVM for each resource block.

The symbol selected by the marker is displayed in a pink frame.

■MKR CC

Summary Displays the CC number set by Carrier Number.

■MKR Slot

Summary Displays the slot number set by Slot Number.

3.19 EVM vs Resource Block Display (Carrier Aggregation)


■MKR Resource Block

Summary Displays the number of the resource block selected by the marker. The marker can be moved by using the cursor keys or the rotary knob.

■MKR Resource Block EVM

Summary Displays EVM of the resource block selected by the marker.

3.20 Summary Display (Carrier Aggregation)

When pressing  (Carrier Aggregation Analysis) on the Measure function menu, and select Summary from the Trace Mode menu, the following measurement values are displayed in the Result window on the screen.

Refer to 3.6.2.5 “Trace”

■Tx Total Power

Summary Displays the total Transmit power of all CCs.

■Tx Power Flatness

Summary Displays the difference between the maximum and minimum values of transmit power among CCs of the input signals.

■Frequency Error

■Transmit Power

■EVM (rms)

■EVM (peak)

■Timing Difference

3.21 Summary Display (Power vs Time)

This displays the measured values of all blocks in total.

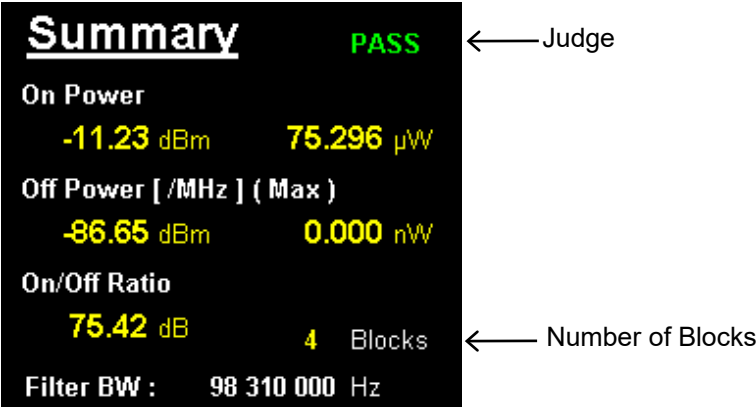


Figure 3.21-1 Summary Display

- On Power
Summary Displays the average power of blocks whose states are On.
- Off Power
Summary Displays the average power of blocks whose states are Off.
- On/Off Ratio
Summary Displays the difference between On Power and Off Power.
- Filter BW
Summary Displays the bandwidth of measurement filter.
Refer to 3.6.3.8 “Filter”
- Judge
Summary Displays the judgment of all blocks. If one or more “FAILs” are found, the total judgment is “FAIL”.
The judgment can be invalidated.
Refer to 3.6.3.7 “Trace”
- Number of Blocks
Summary Displays the number of target blocks.

3.22 Block List Display (Power vs Time)

This displays the measured value of each block.

Limit :			-85.00	10.000	10.000	1 / 1
Block	State	Symbol Start (Number)	Power [dBm]	Ramp up [us]	Ramp down [us]	Judge
0	ON	0 (104)	-11.23	***. ***	***. ***	PASS
1	OFF	104 (36)	-86.67	***. ***	***. ***	PASS
2	ON	140 (104)	-11.23	***. ***	***. ***	PASS
3	OFF	244 (36)	-86.65	***. ***	***. ***	PASS

Figure 3.22-1 Block List Display

■Block

Summary Displays the block number.

■State

Summary Indicates the On/Off state of the block. "On" indicates that valid power has been detected.

■Symbol Start (Number)

Summary Indicates the symbol position of the block.

Start: Start symbol number

Number: Number of Symbols

■Power

Summary Indicates the power of the block.

Refer to Figure 3.22-2 On Block Power Calculation Range

Refer to Figure 3.22-3 Off Block Power Calculation Range (1)

Refer to Figure 3.22-4 Off Block Power Calculation Range (2)

■Ramp up / Ramp down

Summary Indicates the time required for the block to rise and fall.

The Off Power Limit Threshold when calculating the rise/fall time is Off Power Limit [dBm]. "****. ****" is displayed when the block is Off or not detected.

Refer to Figure 3.22-5 Block Ramp up / Ramp down Calculation Range

■Judge

Summary Indicates the block judgment result. If any of the following results exceeds the limits, the judgment is "FAIL".

- Ramp up, Ramp down
- Power (only when State is Off)

Judgment can be invalidated.

Refer to 3.6.3.7 "Trace"

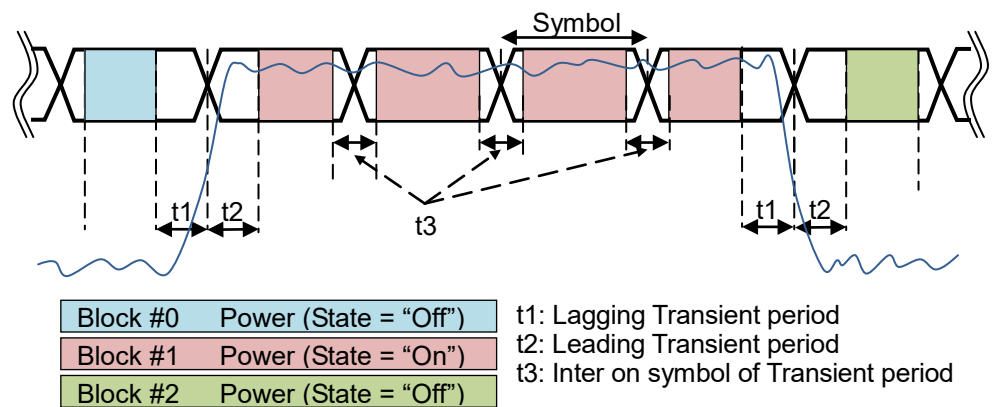


Figure 3.22-2 On Block Power Calculation Range

- Figure 3.22-2 shows the power calculation range for each block when the state of 6 symbols is "Off, On, On, On, On, Off".
- Symbol [0] is the last symbol of Block #0.
- Symbol [1 to 4] are On symbols that compose Block #1.
- Symbol [5] is the 1st symbol of Block #2.
- The measurement results of Block#0, #1, and #2 can be obtained.
- The following 3 parameters can be edited.
 - t1: Lagging Transient period
 - t2: Leading Transient period
 - t3: Inter on symbol of Transient period

Refer to 3.6.3.5 "Mask Setup"

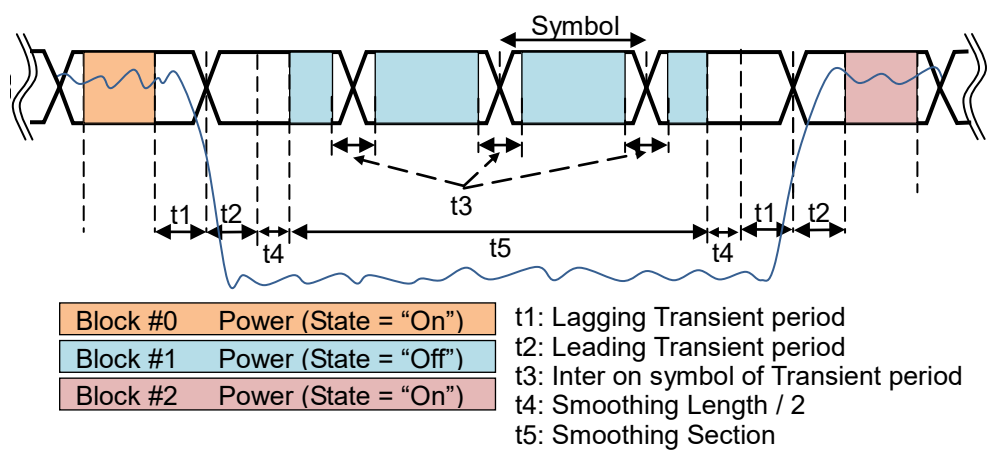


Figure 3.22-3 Off Block Power Calculation Range (1)

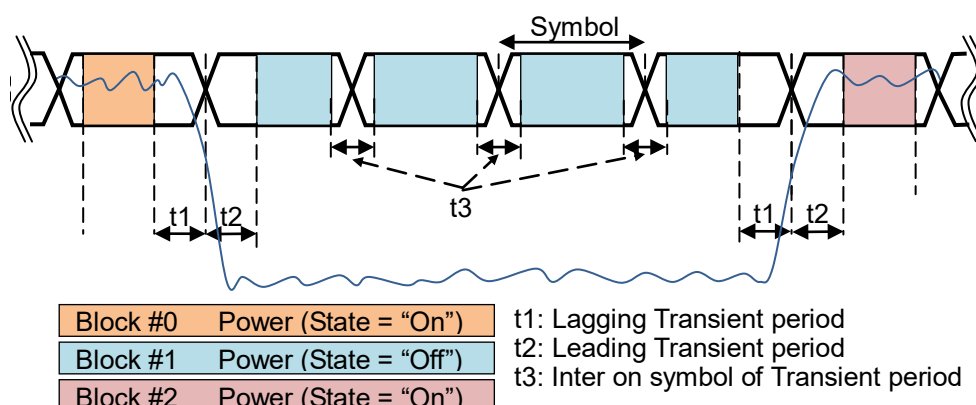


Figure 3.22-4 Off Block Power Calculation Range (2)

- Figure 3.22-3 Off Block Power Calculation Range (1):
Smoothing is set to On, and Smoothing Range is set to Mask.
- Figure 3.22-4 Off Block Power Calculation Range (2):
Other than above.

Refer to Table 3.6.3.7-3 Smoothing function menu

- Figure 3.22-3 and Figure 3.22-4 shows the power calculation range for each block when the state of 6 symbols is "On, Off, Off, Off, Off, On".
- Symbol [0] is the last symbol of Block #0.
- Symbol [1 to 4] are Off symbols that compose Block #1.
- Symbol [5] is the 1st symbol of Block #2.
- The measurement results of Block#0, #1, and #2 can be obtained.
- The following 4 parameters can be edited.

- t1: Lagging Transient period
- t2: Leading Transient period
- t3: Inter on symbol of Transient period

Refer to 3.6.3.5 "Mask Setup"

- t4: Smoothing Length

Refer to "3.6.3.7 Trace"

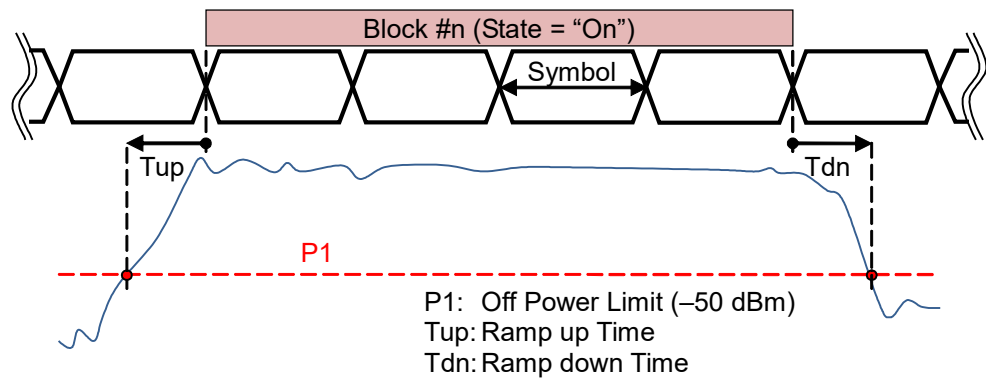


Figure 3.22-5 Block Ramp up / Ramp down Calculation Range

- Figure 3.22-5 shows the calculation range of Ramp up and Ramp down.
- Each reference position is a symbol boundary.
- Ramp up and Ramp down are calculated before and after the block whose state is "On".
- The Off Power Limit value can be edited.

Refer to 3.6.3.5 "Mask Setup"

3.23 Main Trace Display (Power vs Time)

This displays the power waveform before and after one block.

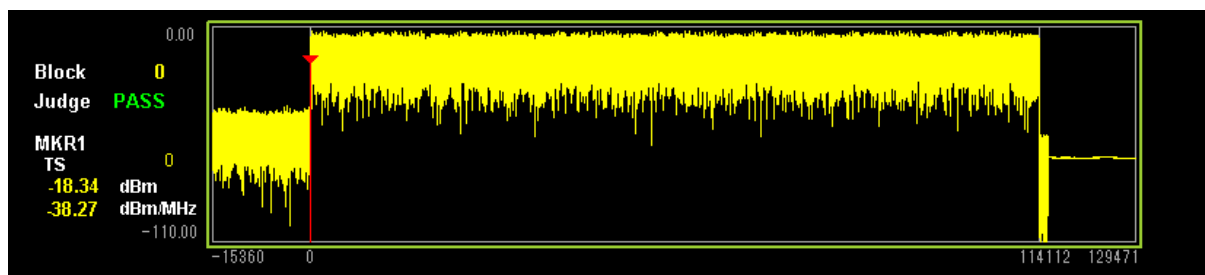


Figure 3.23-1 Power vs Time (Main Trace) Display

Table 3.23-1 Main Trace Display Specification

	Item	Setting Value
X-axis (Time)	Resolution	1 [Ts]
	Minimum value	#BlockStart – #GapSize
	Maximum value	#BlockEnd + #GapSize – 1
		#BlockStart [Ts]: Block start Ts number #BlockEnd [Ts]: Block end Ts number #GapSize = 7 [symbol] = 15360 [Ts]
Y-axis (Amplitude)	Maximum	Input Level + 10 [dB]
	Minimum	Max.value – 110 [dB]
Others	Block	Displays the target block number for the main trace analysis. Refer to Table 3.6.3.7-1 Trace Function Menu
	Judge	Displays the judgment result of the block number.
	MKR1 (Marker)	Displays the power at the marker indication position in dBm, dBm/MHz. “****. **” is displayed when the value is out of the display range.
	Ts	Sample point number set by the marker.

3.24 Sub Trace Display (Power vs Time)

Displays the power waveform for one frame in symbols.

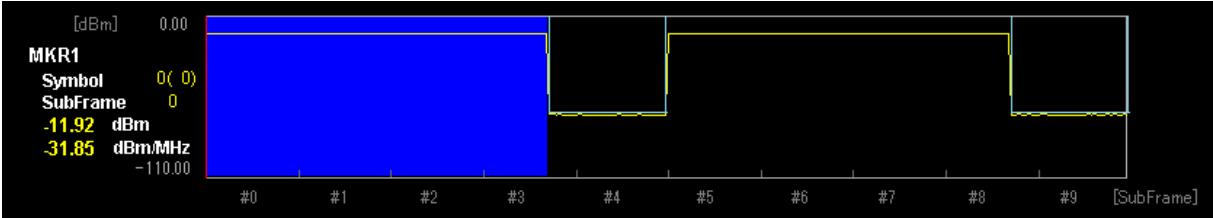


Figure 3.24-1 Power vs Time (Sub Trace) Display

Table 3.24-1 Sub Trace Display Specification

	Item	Setting Value	
X-axis (Time)	Resolution	1 [symbol]	
	Minimum value	0 [symbol]	
	Maximum value	#SymMax – 1 [symbol]	
	#SymMax: Max. symbol No. in one frame	Subcarrier spacing [kHz]	#SymMax [symbol]
		15	140
		30	280
		60	560
120		1120	
Y-axis (Amplitude)	Maximum value	Input Level [dBm] + 10 [dB]	
	Minimum value	Max. value on Y axis – 110 [dB]	
Others	MKR1 (Marker)	Displays the power at the marker indication position in dBm, dBm/MHz.	
	Symbol	Symbol number specified by the marker (symbol number in subframe)	
	SubFrame	Subframe number which the symbol specified by the marker belongs to.	
	Highlight	Highlights the block specified by Block Number. Refer to Table 3.6.3.7-1 Trace function menu	

Power calculation method
Calculate average power in 70 % of symbol interval.

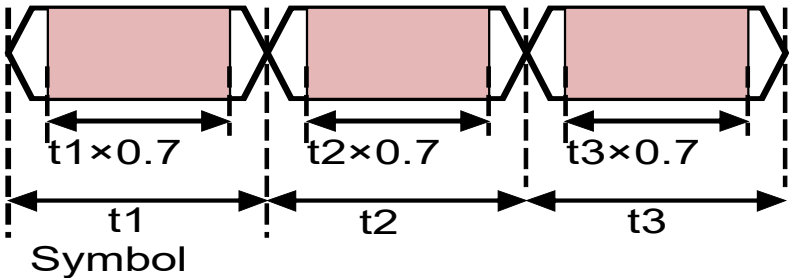




Figure 3.24-2 Symbol Power Calculation Range

3.25 Spectrum Measurement

When Standard is set to NR TDD sub-6GHz Downlink or NR TDD mmWave Downlink, Adjacent channel leakage power measurement (ACP), Channel Power measurement, Occupied bandwidth measurement (OBW), Spectrum Emission Mask measurement (SEM) of the Spectrum Analyzer function is available.

3.6.2 “Recalling parameters” of the *MS2850A Signal Analyzer Operation Manual (Mainframe Operation)*, or *MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Mainframe Operation)* cannot be executed when these function is being recalled.

To select the measurement items, press  (Measure) on the main function menu or  to display the Measure function menu.

■ACP (Swept)

Summary The ACP function of the Spectrum Analyzer function is recalled, and the adjacent channel leakage power is measured according to the handed over parameter settings.

■Channel Power (Swept)

Summary The Channel Power function of the Spectrum Analyzer function is recalled, and the channel power is measured according to the handed over parameter settings.

■OBW (Swept)

Summary The OBW function of the Spectrum Analyzer function is recalled, and the occupied bandwidth is measured according to the handed over parameter settings.

■Spectrum Emission Mask (Swept)

Summary The Spectrum Emission Mask function of the Spectrum Analyzer function is recalled, and the spectrum emission mask is measured according to the handed over parameter settings.

3.25.1 Hand over parameter settings

The Carrier Frequency, Input Level, Offset, Offset Value, and Pre-Amp settings are handed over automatically to the relevant parameter of Spectrum analyzer function.

The Trigger and Gate settings are automatically handed over according to Table 3.25.1-1.


The Gate Delay and Gate Length values must be measured by the Modulation Analysis measurement of this application before using the spectrum analyzer function.

Table 3.25.1-1 Handing over Trigger Settings of This Application to Spectrum Analyzer Function

Model Name	This application		Spectrum Analyzer function					
	Trigger Switch	Trigger Source	Trigger Switch	Trigger Source	Gate	Gate Source	Gate Delay	Gate Length
MS269xA	Off	-	Off	-	Off	-	-	-
MS2850A	Off	-			On	Frame	Results*	Results*
	On	Frame						
Common	On	Video			On	-	-	-
		Other than Frame and Video				Same as the trigger source of this application.	Results*	Results*

*: The measurement results by this application

3.25.2 Advanced Settings

Press  (Advanced Settings) on the second page of the Measure function menu to display the Advanced Settings function menu.

Specify the parameter type of the spectrum analyzer function where the parameters of this application are handed over in the following cases:

- Standard is set to NR TDD sub-6GHz Downlink.
- ACP (Swept), Channel Power (Swept), OBW (Swept), or Spectrum Emission Mask (Swept) of the Spectrum Analyzer function is selected.

Table 3.25.2-1 Advanced Settings function menu

Function Key	Menu Display	Function
F8	Standard	Specifies the parameter type of the spectrum analyzer function where the parameters of this application are handed over. Options: Cond. Uses the parameter “5G NR TDD DL (s6G)_Con” for Conducted. Rad. Uses the parameter “5G NR TDD DL (s6G)_Rad” for Radiated.

Chapter 4 Digitize Function

This chapter describes how to save IQ data to an external memory and replay the stored IQ data.

4.1	Saving IQ Data	4-2
4.1.1	Format of data information file	4-4
4.1.2	Format of data file	4-6
4.2	Replay Function	4-7
4.2.1	Starting Replay Function	4-8
4.2.2	Display During Replay Function Execution	4-8
4.2.3	Restriction During Replay Function Execution	4-9
4.2.4	Conditions for IQ Data Files That Can Be Replayed	4-10
4.2.5	Stopping Replay	4-10

4.1 Saving IQ Data



After pressing  (Capture) on the Main function menu, press  (Save Captured Data) to display the Save Captured Data function menu.






Table 4.1-1 Save Captured Data function menu

Function Key	Menu Display	Function
Page 1	Save Captured Data	Displayed by pressing Save Captured Data .
F1	Device	Selects the location of the file to be saved.
F2	File Name	Sets the name of the file to be saved.
F3	Output Rate	Sets the rate of the output data.
F7	Exec Digitize	Executes saving.
F8	Close	Closes the Save Captured Data function menu.

The IQ data stored in the internal memory at the time of execution of this function is saved to the external memory.

Example: To save IQ data

<Procedure>


1. Press  (Capture) on the main function menu.
2. Press  (Save Captured Data).
3. Press  (Device) on the Save Captured Data function menu to select a data file for saving the IQ data.
4. Press  (File Name) to set the file name.
5. Press  (Exec Digitize) to save the IQ data.

When save processing is executed, the following files are created.

- “[File Name].dgz” Data file (binary format)
- “[File Name].xml” Data information file (XML format)

The IQ data row is saved to the data file. The information on the saved data is saved to the data information file.

If a file name was not specified, the file is automatically named “Digitize *date_sequential number*”. The sequential number range is from 000 to 999.

Files are saved to the following directory of the target drive specified using  (Device).

\\Anritsu Corporation\\Signal Analyzer\\User Data\\Digitized Data\\5G Measurement

Up to 1000 files can be saved in a folder.

4.1.1 Format of data information file

The information on the saved IQ data is recorded in the data information file. Table 4.1.1-1 shows the details of the recorded parameters.

Table 4.1.1-1 Format of data information file

Item	Descriptions
CaptureDate	Day/Month/Year of the captured data in the “DD/MM/YYYY” format.
CaptureTime	Data captured time in “HH/MM/SS” format
FileName	Data file name
Format	Data format, fixed to “Float”
CaptureSample	Number of samples of the recorded data [Sample]
Condition	Error status of the recorded data “Normal”: No error “OverLoad”: Level over
TriggerPosition	Trigger occurrence position [Sample] The start point of the recorded data is 0.
CenterFrequency	Center frequency [Hz]
SpanFrequency	Frequency span [Hz]
SamplingClock	Sampling rate [Hz]
PreselectorBandMode	Frequency band switch mode “Normal”: Normal mode (fixed)
ReferenceLevel	Reference level [dBm] Note that this value does not include the reference level offset.
AttenuatorLevel	Attenuator value [dB]
InternalGain	Internal gain value [dB] This is an internal parameter.
PreAmp	Gain value obtained by PreAmp [dB]
IQReverse	IQ reverse setting, fixed to “Normal”
TriggerSwitch	Trigger On/Off setting “FreeRun”: Trigger is not used “Triggered”: Trigger is used

Table 4.1.1-1 Format of data information file (Cont'd)

Item	Descriptions
TriggerSource	Trigger source “External”: External trigger “External2”: External trigger 2 “SGMarker”: SG Marker trigger
TriggerLevel	Trigger level [dBm] Note that this value does not include the reference level offset. It is in dBm units, even if the scale mode is Lin.
TriggerDelay	Trigger delay time [s] It is the relative time from the trigger input position to the start point of the recorded data.
IQReference0dBm	Reference IQ amplitude value that indicates 0 dB Fixed to “1”.
ExternalReferenceDisp	Reference signal information “Ref.Int”: Internal reference signal “Ref.Ext”: External reference signal “Ref.Int Unlock”: Internal reference signal is unlocked. “Ref.Ext Unlock”: External reference signal is unlocked.
Correction Factor	Correction value of correction function [dB] The correction factor is added to the IQ data in a data file. 0.000 is automatically set when the Correction function is set to Off.
Terminal	Signal input terminal “RF”: RF terminal
ReferencePosition	0-second reference position Indicates the 0-second reference position using the digitized data point position. During Replay function execution, the reference position is displayed as 0 s.
Trigger Slope	Selects the edge where the trigger is generated (rise or fall). “Rise”: Rising edge “Fall”: Falling edge
5GMeasurement Standard	Standard “NRDownlinkSub6Ghz”: NR TDD sub-6GHz Downlink “NRDownlinkMmWave”: NR TDD mmWave Downlink “NRUplinkSub6Ghz”: NR TDD sub-6GHz Uplink “NRUplinkMmWave”: NR TDD mmWave Uplink
5GMeasurement AttenuatorLevel	Attenuator value [dB] when the attenuator is set to Manual.

4.1.2 Format of data file

The data file is created in binary format. From the beginning of the file, I-phase data and Q-phase data are recorded by 4 bytes. The I-phase data and Q-phase data are recorded as a float type (IEEE real*4).

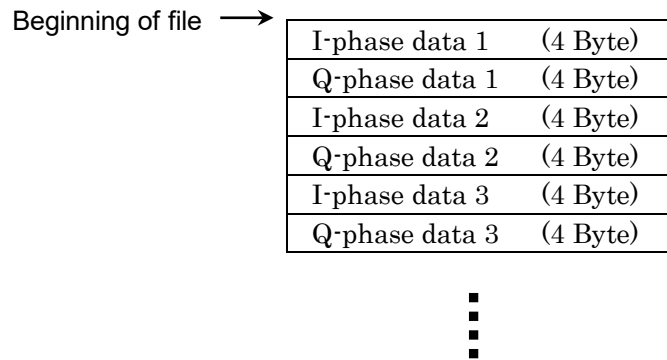


Figure 4.1.2-1 Format of data file

The IQ data can be converted to power based on the following formula:

$$P = 10 \log_{10} (I^2 + Q^2)$$

P: Power [dBm]

I: I-phase data

Q: Q-phase data

4.2 Replay Function



The Replay function enables the saved IQ data to be reanalyzed .After pressing  (Capture) on the main function menu, press  (Replay) to display the Replay function menu.






Table 4.2-1 Replay Function Menu

Function Key	Menu Display	Function
Page 1	Replay	Press Replay to display.
F1	Device	Selects the drive in which the target file is stored.
F2	Application	Selects the name of the application used to save the target file.
F7	Select File	Selects the target file. After selecting the file, the Replay function is executed.
F8	Close	Closes the Replay function menu.

4.2.1 Starting Replay Function

Start the Replay function using the following procedure:

<Procedure>

1. Press  (Capture) on the main function menu.
2. Press  (Replay) on the Capture function menu.
3. Press  (Device) on the Replay function menu and select the drive in which the target file is stored.
4. Press  (Application) and select the application used to save the target file.
5. Press  (Select File) to display the file selection dialog box. The Replay function starts after a file is selected. Then, **Replaying** is displayed on the screen.

Notes:

- MX285051A-011 performs the Replay function only for an IQ data file whose sampling rate is 162.5 MHz or 325 MHz.
- MX285051A-061 performs the Replay function only for an IQ data file whose sampling rate is 162.5 MHz.
- MX285051A-021 performs the Replay function only for an IQ data file whose sampling rate is 162.5 MHz, 325 MHz, 650 MHz, or 1300 MHz.
- MX285051A-071 performs the Replay function only for an IQ data file whose sampling rate is 162.5 MHz, 325 MHz, or 650 MHz.
- MX269051A-011/061 performs the Replay function only for an IQ data file whose sampling rate is 50 MHz, 100 MHz, or 200 MHz.
- Once Replay starts, the settings are initialized except for the parameters specified in Table 4.1.1-1.

4.2.2 Display During Replay Function Execution

Replay Error Info. is displayed if the target IQ data file meets the following conditions:

- Frequency reference is Unlocked when IQ data is saved.
- Level Over occurs when IQ data is saved.

4.2.3 Restriction During Replay Function Execution

The functions shown in Table 4.2.3-1 are disabled when Replay is executed.

Table 4.2.3-1 Functions Restricted During Replay

Function
Center Frequency
Input Level
Attenuator Auto/Manual
Attenuator
Pre Amp
Auto Range
Capture Time Auto/Manual
Capture Time
Trigger Switch
Trigger Source
Trigger Slope
Trigger Delay
ACP (Sweep)
Channel Power (Sweep)
OBW (Sweep)
Spectrum Emission Mask (Sweep)
Continuous Measurement
Single Measurement
Erase Warm Up Message

4.2.4 Conditions for IQ Data Files That Can Be Replayed

Table 4.2.4-1 shows the conditions for IQ data files for which replay analysis can be performed.



Table 4.2.4-1 IQ data file that can be replayed

Name	Value
Format	I, Q (32-bit Float Binary format)
Sampling rate	MX285051A-011 162.5 MHz, 325 MHz MX285051A-061 162.5 MHz MX269051A-011/061 200 MHz (With MS269xA-078/178) 100 MHz (Only with MS269xA-077/177) 50 MHz (Without MS269xA-077/177) MX285051A-021 162.5 MHz, 325 MHz, 650 MHz, (With MS2850A-033/133) 1300 MHz (With MS2850A-034/134) MX285051A-071 162.5 MHz, 325 MHz, 650 MHz, (With MS2850A-033/133)
Sample numbers	22.2 ms or more

4.2.5 Stopping Replay

Stop the Replay function using the following procedure:

<Procedure>

1. Press  (Capture) on the main function menu.
2. Press  (Stop Replaying) to stop the Replay function.

Chapter 5 Performance Test

This chapter describes measurement devices, setup methods, and performance test procedures required for performing performance tests as preventive maintenance.

- 5.1 Overview of Performance Test5-2
 - 5.1.1 Performance test.....5-2
 - 5.1.2 Instruments for Performance test.....5-2
- 5.2 Performance Test Items5-3
 - 5.2.1 Methods for testing
MX285051A-011/MX269051A-011 and
MX285051A-061/MX269051A-0615-3
 - 5.2.2 Methods for testing MX285051A-021 and
MX285051A-0715-14

5.1 Overview of Performance Test

5.1.1 Performance test

Performance tests are performed as part of preventive maintenance in order to prevent the performance of the MS2850A from being degraded before it occurs.

Use performance tests when required for acceptance inspection, routine inspection and performance verification after repairs. Perform items deemed critical at regular intervals as preventive maintenance. Perform the following performance tests for acceptance inspection, routine inspection and performance verification after repairs.

- Carrier frequency accuracy
- Residual EVM

Perform items deemed critical at regular intervals as preventive maintenance. A recommended cycle for routine tests of once or twice a year is desirable.

If items that do not meet the required level are detected during performance testing, contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

5.1.2 Instruments for Performance test

Table 5.1.2-1 lists measuring instruments for performance tests.

Table 5.1.2-1 List of measuring instruments for performance test

Required Performance	Recommended Instruments
<ul style="list-style-type: none"> • Frequency range: 800 MHz to 28 GHz (MX285051A) 600 MHz to 5 GHz (MX269051A) Resolution: 1 Hz available • Output level range: -30 to -10 dBm (MX285051A) -25 to -10 dBm (MX269051A) Resolution: 0.1 dB available • Modulation Bandwidth: more than 100 MHz 	Vector signal generator
<p>The output level of the vector signal generator is adjustable in the ranges below.</p> <p>MX285051A:</p> <ul style="list-style-type: none"> -30 dBm \pm 0.1 dB -15 dBm \pm 0.1 dB -10 dBm \pm 0.1 dB <p>MX269051A:</p> <ul style="list-style-type: none"> -25 dBm \pm 0.1 dB -10 dBm \pm 0.1 dB <p>Not required if the vector signal generator has the above transmission power accuracy.</p>	Power meter

5.2 Performance Test Items

Warm up the subject testing device and measuring instruments for at least 30 minutes except where directed, in order to stabilize them sufficiently before running performance tests. Demonstrating maximum measurement accuracy requires, in addition to the above, conducting performance tests under ambient temperatures, little AC power supply voltage fluctuations, as well as the absence of noise, vibrations, dust, humidity or other problems.

5.2.1 Methods for testing MX285051A-011/MX269051A-011 and MX285051A-061/MX269051A-061

- (1) Test target standards
 - Carrier frequency accuracy
 - Residual EVM
- (2) Measuring instrument for tests
 - Vector signal generator
 - Power meter
- (3) Setup

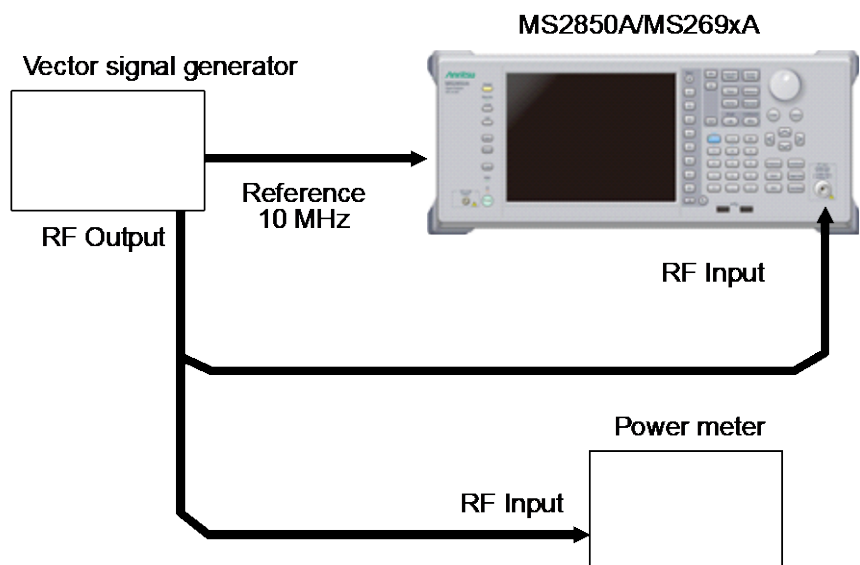


Figure 5.2.1-1 Performance test

(4) Test procedure

(a) Signal source adjustment

1. Input the 10 MHz reference signal output from the signal generator to the Reference Input connector.
2. Output the following signals from the vector signal generator.
For MX285051A-011/MX269051A-011, output the 5G NR downlink signals as below.

Subcarrier Spacing	15 kHz		30 kHz		
Channel Bandwidth	25 MHz	50 MHz	25 MHz	50 MHz	100 MHz
MX285051A-011	–	✓	–	–	✓
MX269051A-011					
Without MS269xA-077/177	✓	–	✓	–	–
Only with MS269xA-077/177	–	✓	–	✓	–
With MS269xA-078/178	–	✓	–	–	✓




























For MX285051A-061/MX269051A-061, output the 5G NR uplink signals as below.

Subcarrier Spacing	15 kHz		30 kHz		
Channel Bandwidth	25 MHz	50 MHz	25 MHz	50 MHz	100 MHz
MX285051A-061	–	✓	–	–	✓
MX269051A-061					
Without MS269xA-077/177	✓	–	✓	–	–
Only with MS269xA-077/177	–	✓	–	✓	–
With MS269xA-078/178	–	✓	–	–	✓

3. Input the vector signal generator output signal into the power meter, and adjust the generator's output level to the values below.
 - 10 dBm ± 0.1 dB (Pre-amp. turns off, or not installed)
 - 30 dBm ± 0.1 dB (Pre-amp. turns on, MX285051A)
 - 25 dBm ± 0.1 dB (Pre-amp. turns on, MX269051A)

(b) Settings of the MS2850A or MS269xA

1. Turn On the power switch on the front panel then wait until the internal temperature stabilizes.

2. Press , then press the menu function key displaying the character string “5G Measurement.”
3. Press  (Standard) and select the following 5G standards for testing.
 MX285051A-011/MX269051A-011:
 (NR TDD sub-6GHz Downlink)
 MX285051A-061/MX269051A-061:
 (NR TDD sub-6GHz Uplink)
4. Press .
5. Press  (Preset) to perform initialization.
6. Press  (Modulation Analysis) in the Measure Function menu and press  (Basic Settings) to display Basic Settings.
7. Press  (Frame Parameter) to display the Frame Parameter Setup tab. Then set the following parameters according to the signals output from vector signal generator.
 Subcarrier Spacing
 Number of RBs
8. Press .
9. Press  (SIGANA All) to perform calibration.
10. Press  (Close).
11. Press , enter the frequency output by the vector signal generator using the numeric keypad, then press .
12. If the Input Level dialog box is displayed when pressing , press  (Close) and then press  (Auto Range).
13. Press  then press  (Storage) and press  (Mode) to choose Average using the cursor key or the rotary knob, then press .
14. Press  (Count), enter the measurement count, using the numeric keypad, then press .
15. Press  to measure.
 When measuring the carrier frequency accuracy, select **Auto** for **Reference Signal**. When measuring the residual vector error, select **Fixed to Internal**.
 Press  (System Settings) after pressing  to display the System Settings screen. Select and set Reference Signal with cursor key, and then press  (Set).
16. Confirm whether the measured Frequency Error (carrier frequency accuracy) is within the specifications.
17. Confirm whether the measured EVM (residual vector error) value is within the specifications.

(5) Test Result

■MX285051A-011/061

Table 5.2.1-1 Carrier frequency accuracy (Pre-amp. turns off, or not installed.)

Frequency	Min. limit	Deviation (Hz)	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 50 MHz					
800 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
4199.999999 MHz					
4200 MHz					
5000 MHz					
Subcarrier Spacing 30 kHz, Channel Bandwidth 100 MHz					
800 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
4199.999999 MHz					
4200 MHz					
5000 MHz					

Table 5.2.1-2 Residual EVM (Pre-amp. turns off, or not installed.)

Frequency	Measured value [% (rms)]	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 50 MHz				
800 MHz		1.0 % (rms)	0.1 % (rms)	
4199.999999 MHz				
4200 MHz				
5000 MHz				
Subcarrier Spacing 30 kHz, Channel Bandwidth 100 MHz				
800 MHz		1.0 % (rms)	0.1 % (rms)	
4199.999999 MHz				
4200 MHz				
5000 MHz				

Table 5.2.1-3 Carrier frequency accuracy (Pre-amp. turns on.)

Frequency	Min. limit	Deviation (Hz)	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 50 MHz					
800 MHz	-10.0 Hz		+10.0 Hz	±1.0 Hz	
4199.999999 MHz					
4200 MHz					
5000 MHz					
Subcarrier Spacing 30 kHz, Channel Bandwidth 100 MHz					
800 MHz	-10.0 Hz		+10.0 Hz	±1.0 Hz	
4199.999999 MHz					
4200 MHz					
5000 MHz					

Table 5.2.1-4 Residual EVM (Pre-amp. turns on.)

Frequency	Measured value [% (rms)]	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 50 MHz				
800 MHz		1.0 % (rms)	0.1 % (rms)	
4199.999999 MHz				
4200 MHz				
5000 MHz				
Subcarrier Spacing 30 kHz, Channel Bandwidth 100 MHz				
800 MHz		1.0 % (rms)	0.1 % (rms)	
4199.999999 MHz				
4200 MHz				
5000 MHz				

■MX269051A-011/061

**Table 5.2.1-5 Carrier frequency accuracy (Without MS269xA-077/177,
and Pre-amp. turns off or not installed.)**

Frequency	Min. limit	Deviation (Hz)	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 25 MHz					
600 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
2399.999999 MHz					
2400 MHz					
3999.999999 MHz					
4000 MHz					
5000 MHz					
Subcarrier Spacing 30 kHz, Channel Bandwidth 25 MHz					
600 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
2399.999999 MHz					
2400 MHz					
3999.999999 MHz					
4000 MHz					
5000 MHz					

**Table 5.2.1-6 Residual EVM (Without MS269xA-077/177,
and Pre-amp. turns off or not installed.)**

Frequency	Measured value [% (rms)]	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 25 MHz				
600 MHz		1.0 % (rms)	0.1 % (rms)	
2399.999999 MHz				
2400 MHz				
3999.999999 MHz				
4000 MHz				
5000 MHz				
Subcarrier Spacing 30 kHz, Channel Bandwidth 25 MHz				
600 MHz		1.0 % (rms)	0.1 % (rms)	
2399.999999 MHz				
2400 MHz				
3999.999999 MHz				
4000 MHz				
5000 MHz				

Table 5.2.1-7 Carrier frequency accuracy (Without MS269xA-077/177 and Pre-amp. turns on.)

Frequency	Min. limit	Deviation (Hz)	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 25 MHz					
600 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
2399.999999 MHz					
2400 MHz					
3999.999999 MHz					
4000 MHz					
5000 MHz					
Subcarrier Spacing 30 kHz, Channel Bandwidth 25 MHz					
600 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
2399.999999 MHz					
2400 MHz					
3999.999999 MHz					
4000 MHz					
5000 MHz					

Table 5.2.1-8 Residual EVM (Without MS269xA-077/177 and Pre-amp. turns on.)

Frequency	Measured value [% (rms)]	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 25 MHz				
600 MHz		1.0 % (rms)	0.1 % (rms)	
2399.999999 MHz				
2400 MHz				
3999.999999 MHz				
4000 MHz				
5000 MHz				
Subcarrier Spacing 30 kHz, Channel Bandwidth 25 MHz				
600 MHz		1.0 % (rms)	0.1 % (rms)	
2399.999999 MHz				
2400 MHz				
3999.999999 MHz				
4000 MHz				
5000 MHz				

**Table 5.2.1-9 Carrier frequency accuracy (Only with MS269xA-077/177,
and Pre-amp. turns off or not installed.)**

Frequency	Min. limit	Deviation (Hz)	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 50 MHz					
600 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
2199.999999 MHz					
2200 MHz					
3999.999999 MHz					
4000 MHz					
5000 MHz					
Subcarrier Spacing 30 kHz, Channel Bandwidth 50 MHz					
600 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
2199.999999 MHz					
2200 MHz					
3999.999999 MHz					
4000 MHz					
5000 MHz					

**Table 5.2.1-10 Residual EVM (Only with MS269xA-077/177,
and Pre-amp. turns off or not installed.)**

Frequency	Measured value [% (rms)]	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 50 MHz				
600 MHz		1.0 % (rms)	0.1 % (rms)	
2199.999999 MHz				
2200 MHz				
3999.999999 MHz				
4000 MHz				
5000 MHz				
Subcarrier Spacing 30 kHz, Channel Bandwidth 50 MHz				
600 MHz		1.0 % (rms)	0.1 % (rms)	
2199.999999 MHz				
2200 MHz				
3999.999999 MHz				
4000 MHz				
5000 MHz				

Table 5.2.1-11 Carrier frequency accuracy (Only with MS269xA-077/177 and Pre-amp. turns on.)

Frequency	Min. limit	Deviation (Hz)	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 50 MHz					
600 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
2199.999999 MHz					
2200 MHz					
3999.999999 MHz					
4000 MHz					
5000 MHz					
Subcarrier Spacing 30 kHz, Channel Bandwidth 50 MHz					
600 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
2199.999999 MHz					
2200 MHz					
3999.999999 MHz					
4000 MHz					
5000 MHz					

Table 5.2.1-12 Residual EVM (Only with MS269xA-077/177 and Pre-amp. turns on.)

Frequency	Measured value [% (rms)]	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 50 MHz				
600 MHz		1.0 % (rms)	0.1 % (rms)	
2199.999999 MHz				
2200 MHz				
3999.999999 MHz				
4000 MHz				
5000 MHz				
Subcarrier Spacing 30 kHz, Channel Bandwidth 50 MHz				
600 MHz		1.0 % (rms)	0.1 % (rms)	
2199.999999 MHz				
2200 MHz				
3999.999999 MHz				
4000 MHz				
5000 MHz				

**Table 5.2.1-13 Carrier frequency accuracy (With MS269xA-078/178,
and Pre-amp. turns off or not installed.)**

Frequency	Min. limit	Deviation (Hz)	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 50 MHz					
600 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
2199.999999 MHz					
2200 MHz					
3999.999999 MHz					
4000 MHz					
5000 MHz					
Subcarrier Spacing 30 kHz, Channel Bandwidth 100 MHz					
600 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
2199.999999 MHz					
2200 MHz					
3999.999999 MHz					
4000 MHz					
5000 MHz					

**Table 5.2.1-14 Residual EVM (With MS269xA-078/178,
and Pre-amp. turns off or not installed.)**

Frequency	Measured value [% (rms)]	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 50 MHz				
600 MHz		1.0 % (rms)	0.1 % (rms)	
2199.999999 MHz				
2200 MHz				
3999.999999 MHz				
4000 MHz				
5000 MHz				
Subcarrier Spacing 30 kHz, Channel Bandwidth 100 MHz				
600 MHz		1.0 % (rms)	0.1 % (rms)	
2199.999999 MHz				
2200 MHz				
3999.999999 MHz				
4000 MHz				
5000 MHz				

Table 5.2.1-15 Carrier frequency accuracy (With MS269xA-078/178 and Pre-amp. turns on.)

Frequency	Min. limit	Deviation (Hz)	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 50 MHz					
600 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
2199.999999 MHz					
2200 MHz					
3999.999999 MHz					
4000 MHz					
5000 MHz					
Subcarrier Spacing 30 kHz, Channel Bandwidth 100 MHz					
600 MHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	
2199.999999 MHz					
2200 MHz					
3999.999999 MHz					
4000 MHz					
5000 MHz					

Table 5.2.1-16 Residual EVM (With MS269xA-078/178 and Pre-amp. turns on.)

Frequency	Measured value [% (rms)]	Max. limit	Uncertainty	Pass/Fail
Subcarrier Spacing 15 kHz, Channel Bandwidth 50 MHz				
600 MHz		1.0 % (rms)	0.1 % (rms)	
2199.999999 MHz				
2200 MHz				
3999.999999 MHz				
4000 MHz				
5000 MHz				
Subcarrier Spacing 30 kHz, Channel Bandwidth 100 MHz				
600 MHz		1.0 % (rms)	0.1 % (rms)	
2199.999999 MHz				
2200 MHz				
3999.999999 MHz				
4000 MHz				
5000 MHz				

5.2.2 Methods for testing MX285051A-021 and MX285051A-071

- (1) Test target standards
 - Carrier frequency accuracy
 - Residual EVM
- (2) Measuring instrument for tests
 - Vector signal generator
 - Power meter
- (3) Setup

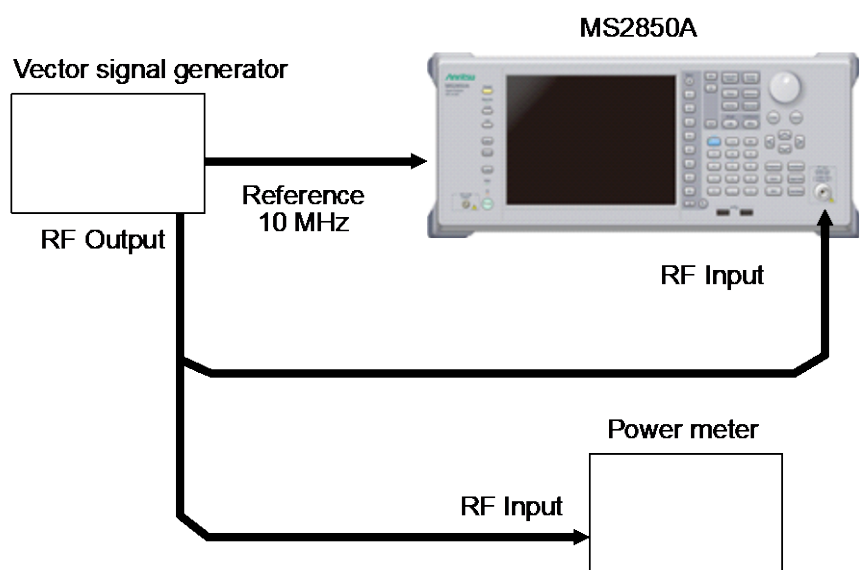


Figure 5.2.2-1 Performance test

(4) Test procedure

(a) Signal source adjustment

1. Input the 10 MHz reference signal output from the signal generator to the Reference Input connector.
2. Output the following signals from the vector signal generator.
For MX285051A-021, output the 5G NR downlink signals as below.

Subcarrier Spacing	Channel Bandwidth
120 kHz	100 MHz

For MX285051A-071, output the 5G NR uplink signals as below.









Subcarrier Spacing	Channel Bandwidth
120 kHz	100 MHz


3. Input the vector signal generator output signal into the power meter, and adjust the generator's output level to the values below.

–15 dBm \pm 0.1 dB (Pre-amp. turns off, or not installed)

–30 dBm \pm 0.1 dB (Pre-amp. turns on)
















(b) Settings of the MS2850A

1. Turn On the power switch on the front panel then wait until the internal temperature stabilizes.
2. Press , then press the menu function key displaying the character string “5G Measurement.”
3. Press  (Standard) and select the following 5G standards for testing.
MX285051A-021:  (NR TDD mmWave Downlink)
MX285051A-071:  (NR TDD mmWave Uplink)
4. Press .
5. Press  (Preset) to perform initialization.
6. Press  (Modulation Analysis) in the Measure Function menu and press  (Basic Settings) to display Basic Settings.




7. Press  (Frame Parameter) to display the Frame Parameter Setup tab. Then set the following parameters according to the signals output from vector signal generator.

Subcarrier Spacing

Number of RBs

8. Press .
9. Press  (SIGANA All) to perform calibration.
10. Press  (Close).
11. Press , enter the frequency output by the vector signal generator using the numeric keypad, then press .
12. If the Input Level dialog box is displayed when pressing , press  (Close) and then press  (Auto Range).
13. Press , then press  (Storage) and press  (Mode) to choose Average using the cursor key or the rotary knob, then press .
14. Press  (Count), enter the measurement count, using the numeric keypad, then press .
15. Press  to measure.

When measuring the carrier frequency accuracy, select **Auto** for **Reference Signal**. When measuring the residual vector error, select **Fixed to Internal**.

Press  (System Settings) after pressing  to display the System Settings screen. Select and set Reference Signal with cursor key, and then press  (Set).

16. Confirm whether the measured Frequency Error (carrier frequency accuracy) is within the specifications.
17. Confirm whether the measured EVM (residual vector error) value is within the specifications.

(5) Test Result

Table 5.2.2-1 Carrier frequency accuracy (Pre-amp. turns off or not installed.)

Frequency	Min. limit	Deviation (Hz)	Max. limit	Uncertainty	Pass/Fail
28 GHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	

Table 5.2.2-2 Residual EVM (Pre-amp. turns off or not installed.)

Frequency	Measured value [% (rms)]	Max. limit	Uncertainty	Pass/Fail
28 GHz		2.0 % (rms)	0.1 % (rms)	

Table 5.2.2-3 Carrier frequency accuracy (Pre-amp. turns on.)

Frequency	Min. limit	Deviation (Hz)	Max. limit	Uncertainty	Pass/Fail
28 GHz	−10.0 Hz		+10.0 Hz	±1.0 Hz	

Table 5.2.2-4 Residual EVM (Pre-amp. turns on.)

Frequency	Measured value [% (rms)]	Max. limit	Uncertainty	Pass/Fail
28 GHz		2.0 % (rms)	0.1 % (rms)	

Chapter 6 Other Functions

This chapter describes other functions of this application.

6.1	Selecting Other Functions	6-2
6.2	Setting Title.....	6-2
6.3	Erasing Warmup Message	6-2

6.1 Selecting Other Functions


Pressing  (Accessory) on the main function menu displays the Accessory function menu.






Table 6.1-1 Accessory function menu

Function Keys	Menu Display	Function
F1	Title	Sets the title character string.
F2	Title (On/Off)	Displays (On) or hides (Off) the title character string.
F4	Erase Warm Up Message	Erases the warmup message display.


6.2 Setting Title

A title of up to 32 characters can be displayed on the screen. (Character strings of up to 17 characters can be displayed on a function menu. The maximum number of characters to be displayed on the top of the function menu varies according to character string.)



<Procedure>

1. Press  (Accessory) on the main function menu.
2. Press  (Title) to display the character string input screen. Select a character using the rotary knob, and enter it by pressing .
Enter the title by repeating this operation. When the title is entered, press  (Set).
3. Press  (Title) and then select “Off” to hide the title.

6.3 Erasing Warmup Message

The warmup message (, which is displayed upon power-on and indicates that the level and frequency are not stable, can be deleted.

<Procedure>

1. Press  (Accessory) on the main function menu.
2. Press  (Erase Warm Up Message) to erase the warmup message.

Appendix A Error Messages

Table A-1 Error Messages

Message	Description
Out of range.	The settable range is exceeded.
Not available in Summary Trace.	This operation is invalid when Active Trace is in the Summary state.
No file to read.	There is no file that can be read.
File read error.	File reading has failed.
File format error.	The file format is invalid.
Write error.	File writing has failed.
Number of the letters over.	This operation is invalid because the maximum number of characters has been exceeded.
The model of the main instrument is different.	This operation is invalid because the specified model name does not match.
The option configuration is different.	This operation is invalid because the option configuration does not match.
File Open error.	Failed to open the specified file.
File Close error.	Failed to close the file.
Empty File Name	No character is entered.
Save File Limit < 100	The save destination contains the maximum number of files (100).
Cannot find device.	The specified device could not be found.
Search error	A search error has occurred.
Not available when Capture Time is set to Auto.	This operation is invalid when Capture Time is set to Auto.
File not found.	The specified file could not be found.
Cannot find device.	The specified device could not be found.
Selected item is empty.	The selected item (file, etc.) could not be found.

Table A-1 Error Messages (Cont'd)

Message	Description
Only available while replaying.	This operation is invalid when the Replay function is not executed.
Shortage of data samples in IQ data file.	Analysis cannot be performed because the number of data samples of the IQ data file is less than the minimum number of data samples required for analysis.
Unsupported SpanFrequency.	The frequency span is not supported.
Unsupported SamplingClock.	The sampling rate is not supported.
Not available if not re-capture after changing common parameter.	This operation is invalid when recapture is not executed after common parameter change.
Not available during measurement.	This operation is invalid during measurement.
Invalid character	—

Appendix B Measurable Signal

This appendix describes the configuration of the signal that can be measured by the MX285051A-011/021/061/071 and MX269051A-011/061.

B.1	Overview of Signal	B-2
-----	--------------------------	-----

B.1 Overview of Signal

Table B.1-1 and B.1-2 show the minimum requirements of the signals that the MX285051A-011/021/061/071 and MX269051A-011/061 can measure. To measure with the MX285051A-011/021/061/071 and MX269051A-011/061, check that the input signal satisfies the conditions in Table B.1-1 and B.1-2 and that the MX285051A-011/021/061/071 and MX269051A-011/061 settings match these conditions.

Table B.1-1 Signal measurable with the MX285051A-011/MX269051A-011/MX285051A-021 (Minimum requirements)

Item	Contents
Wireless Standard	3GPP TS 38.211 (2019-06)
Channel Bandwidth	MX285051A-011/MX269051A-011 <ul style="list-style-type: none"> • For Subcarrier Spacing = 15 kHz 5 MHz(25), 10 MHz(52), 15 MHz(79), 20 MHz(106), 25 MHz(133), 30 MHz(160), 40 MHz(216), 50 MHz(270) • For Subcarrier Spacing = 30 kHz 5 MHz(11), 10 MHz(24), 15 MHz(38), 20 MHz(51), 25 MHz(65), 30 MHz(78), 40 MHz(106), 50 MHz(133), 60 MHz(162), 70 MHz(189), 80 MHz(217), 90 MHz(245), 100 MHz(273) • For Subcarrier Spacing = 60 kHz 10 MHz(11), 15 MHz(18), 20 MHz(24), 25 MHz(31), 30 MHz(38), 40 MHz(51), 50 MHz(65), 60 MHz(79), 70 MHz(93), 80 MHz(107), 90 MHz(121), 100 MHz(135) MX285051A-021 <ul style="list-style-type: none"> • For Subcarrier Spacing = 60 kHz 50 MHz(66), 100 MHz(132), 200 MHz(264) • For Subcarrier Spacing = 120 kHz 50 MHz(32), 100 MHz(66), 200 MHz(132), 400 MHz(264) Numbers in parentheses indicate the numbers of resource blocks.
Subcarrier Spacing	MX285051A-011/MX269051A-011 15 kHz, 30 kHz, 60 kHz MX285051A-021 60 kHz, 120 kHz
Measurable Maximum Number of Carriers	MX285051A-011: 2 MX269051A-011: 1 MX285051A-021: 8 (when Channel Bandwidth is 100 MHz.)

**Table B.1-1 Signal measurable with the MX285051A-011/MX269051A-011/MX285051A-021
(Minimum requirements) (Cont'd)**

Item	Contents
Physical Channels	PBCH PDSCH PDCCH
Physical Signals	Primary synchronization signal Secondary synchronization signal Demodulation reference signals for PBCH Demodulation reference signals for PDSCH Demodulation reference signals for PDCCH
Others	<ul style="list-style-type: none">• Two or more slots should be mapped to measure PDSCH.• The following channels or signals must be mapped. PDSCH, Demodulation reference signals for PDSCH, or SS-Block

**Table B.1-2 Signal measurable with the MX285051A-061/MX269051A-061/MX285051A-071
(Minimum requirements)**

Item	Contents
Wireless Standard	3GPP TS 38.211 (2019-06)
Channel Bandwidth	MX285051A-061/MX269051A-061 <ul style="list-style-type: none"> • For Subcarrier Spacing = 15 kHz 5 MHz(25), 10 MHz(52), 15 MHz(79), 20 MHz(106), 25 MHz(133), 30 MHz(160), 40 MHz(216), 50 MHz(270) • For Subcarrier Spacing = 30 kHz 5 MHz(11), 10 MHz(24), 15 MHz(38), 20 MHz(51), 25 MHz(65), 30 MHz(78), 40 MHz(106), 50 MHz(133), 60 MHz(162), 70 MHz(189), 80 MHz(217), 90 MHz(245), 100 MHz(273) • For Subcarrier Spacing = 60 kHz 10 MHz(11), 15 MHz(18), 20 MHz(24), 25 MHz(31), 30 MHz(38), 40 MHz(51), 50 MHz(65), 60 MHz(79), 70 MHz(93), 80 MHz(107), 90 MHz(121), 100 MHz(135) MX285051A-071 <ul style="list-style-type: none"> • For Subcarrier Spacing = 60 kHz 50 MHz(66), 100 MHz(132), 200 MHz(264) • For Subcarrier Spacing = 120 kHz 50 MHz(32), 100 MHz(66), 200 MHz(132), 400 MHz(264) Numbers in parentheses indicate the numbers of resource blocks.
Subcarrier Spacing	MX285051A-061/MX269051A-061 15 kHz, 30 kHz, 60 kHz MX285051A-021 60 kHz, 120 kHz
Measurable Maximum Number of Carriers	1
Physical Channels	PUSCH
Physical Signals	Demodulation reference signals for PUSCH
Others	<ul style="list-style-type: none"> • For the PUSCH measurement, if DM-RS add-pos is 0, there must be at least two slots. • The following channels or signals must be mapped. PUSCH, Demodulation reference signals for PUSCH

Appendix C Initial Value List

C.1	Common Settings for Option 011/021/061/071.....	C-2
C.2	MX285051A-011/MX269051A-011	C-4
C.3	MX285051A-021	C-6
C.4	Common Settings for Option 011/021	C-9
C.5	MX285051A-061/MX269051A-061	C-11
C.6	MX285051A-071	C-12

C.1 Common Settings for Option 011/021/061/071

Frequency		
Center Frequency		28.00 GHz (MX285051A)
		3.75 GHz (MX269051A)
RF Spectrum		Normal
Amplitude		
Input Level		−10.00 dBm
Attenuator Auto/Manual		Auto
Attenuator Value		4 dB
Pre-Amp		Off
Offset		Off
Offset Value		0.00 dB
Advanced Settings		
Equalizer Use Data		Off
Amplitude Tracking		On
Phase Tracking		On
Timing Tracking		Off
Multicarrier Filter		On
EVM Window		Off
DC Cancellation		Off
Phase Compensation Frequency Center	On	
Phase Compensation Frequency Value	Same as Center Frequency	
Trace		
Trace Mode		EVM vs Subcarrier
Scale		
EVM Unit		%
EVM Scale		5 %
Flatness Scale		10 dB
Storage		
Mode		Off
Count		10
Subcarrier Number		0 Subcarrier
Symbol Number		3 Symbol
EVM vs Subcarrier View		Averaged over all Symbols
Graph View		RMS&Peak
EVM vs Symbol View		Averaged over all Subcarriers
Graph View		RMS&Peak
Spectral Flatness Type		Amplitude
Slot Number		0
Resource Block Number		0

Marker	
Marker	On
Subcarrier Number	0 Subcarrier
Symbol Number	3 Symbol
Trigger	
Trigger Switch	Off
Trigger Source	External
Trigger Slope	Rise
Trigger Delay	0 s
Accessory	
Title	On, “5G Measurement”

C.2 MX285051A-011/MX269051A-011

Modulation Analysis

Analysis Time

Starting Slot Number	0 Slot
Measurement Interval	20 Slot

Basic Settings

Frame Parameter

Test Model	Off
Test Model Version	Auto
Subcarrier Spacing	30 kHz
Number of RBs	273
Channel Bandwidth	100 MHz
Cell ID	0
Synchronization Mode	SS
Phase Compensation	On

SS Block

Enable	On
SS-Block Subcarrier Spacing	30 kHz
SS-Block Candidate	Case B (L = 8)
Antenna Port	4000
SSB Subcarrier Offset	6
SSB RB Offset	126
Periodicity	10 ms
Analysis Frame Number	0
P-SS Power Boosting	Auto
P-SS Power Boosting Value	0.000 dB
S-SS Power Boosting	Auto
S-SS Power Boosting Value	0.000 dB
PBCH Power Boosting	Auto
PBCH Power Boosting Value	0.000 dB
SS-Block Transmission	All On

PDCCH/DM-RS (all slots are set as below)

Enable	On
Antenna Port	2000
PDCCH Power Boosting	Auto
PDCCH Power Boosting Value	0.000 dB
Number of Symbols	2

PDSCH/DM-RS (all slots are set as below)

Enable	On
Antenna Port	1000
Modulation Scheme	Auto
PDSCH Mapping Type	type A

Start symbol	2
Number of Symbols	12
DM-RS typeA-pos	2
DM-RS config-type	1
DM-RS add-pos	0
DM-RS CDM Group Without Data	2
PDSCH Power Boosting	Auto
PDSCH Power Boosting Value	-3.000 dB
PDSCH PTRS	Off
PDSCH PTRS Time Density	1
PDSCH PTRS Freq. Density	2
PDSCH PTRS RE Offset	00
PDSCH RBs Allocation Auto Detect	Enable
PDSCH RBs Allocation Start RB	0
PDSCH RBs Allocation Number of RBs	273
Slot Parameter	
TDD Configuration	Auto
Slot # for Synchronization	0
Number of DL Symbols in S	6
Slot Type	DDDDDDDSUU
	DDDDDDDSUU
Advanced Settings (Measure)	
Standard	Conducted

C.3 MX285051A-021

Modulation Analysis

Analysis Time

Starting Slot Number	0 Slot
Measurement Interval	80 Slot

Basic Settings

Frame Parameter

Test Model	Off
Test Model Version	Auto
Subcarrier Spacing	120 kHz
Number of RBs	132
Channel Bandwidth	200 MHz
Cell ID	0
Synchronization Mode	SS
Phase Compensation	On

SS Block

Enable	On
SS-Block Subcarrier Spacing	120 kHz
SS-Block Candidate	Case D (L = 64)
Antenna Port	4000
SSB Subcarrier Offset	0
SSB RB Offset	56
Periodicity	10 ms
Analysis Frame Number	0
P-SS Power Boosting	Auto
P-SS Power Boosting Value	0.000 dB
S-SS Power Boosting	Auto
S-SS Power Boosting Value	0.000 dB
PBCH Power Boosting	Auto
PBCH Power Boosting Value	0.000 dB
SS-Block Transmission	All On

PDCCH/DM-RS (all slots are set as below)

Enable	On
Antenna Port	2000
PDCCH Power Boosting	Auto
PDCCH Power Boosting Value	0.000 dB
Number of Symbols	2

PDSCH/DM-RS (all slots are set as below)

Enable	On
Antenna Port	1000
Modulation Scheme	Auto
PDSCH Mapping Type	type A

Start symbol	2
Number of Symbols	12
DM-RS typeA-pos	2
DM-RS config-type	1
DM-RS add-pos	0
DM-RS CDM Group Without Data	2
PDSCH Power Boosting	Auto
PDSCH Power Boosting Value	-3.000 dB
PDSCH PTRS	Off
PDSCH PTRS Time Density	1
PDSCH PTRS Freq. Density	2
PDSCH PTRS RE Offset	00
PDSCH RBs Allocation Auto Detect	Enable
PDSCH RBs Allocation Start RB	0
PDSCH RBs Allocation Number of RBs	132
Slot Parameter	
TDD Configuration	Auto
Slot # for Synchronization	0
Number of DL Symbols in S	10
Slot Type	DDDDDDDSUU
	DDDDDDDSUU
	DDDDDDDSUU
	DDDDDDDSUU
	DDDDDDDSUU
	DDDDDDDSUU
	DDDDDDDSUU
	DDDDDDDSUU
Carrier Aggregation Analysis	
Analysis Time	
Starting Slot Number	0 Slot
Measurement Interval	80 Slot
Basic Settings	
Carrier Settings	
Number of Carriers	1
Reference Carrier	0
Phase Compensation	On
Component Carrier Settings	
Valid for CC #0 only	
Frequency Offset	0.000 MHz
Subcarrier Spacing	120 kHz
Number of RBs	132
Channel Bandwidth	200 MHz
Cell ID	0

Appendix C Initial Value List

Synchronization Mode	SS
Detail Settings	
SS Block	On
SS-Block Subcarrier Spacing	120 kHz
SS-Block Candidate	Case D (L = 64)
Antenna Port	4000
SSB Subcarrier Offset	0
SSB RB Offset	56
Periodicity	10 ms
Analysis Frame Number	0
P-SS Power Boosting	Auto
P-SS Power Boosting Value	0.000 dB
S-SS Power Boosting	Auto
S-SS Power Boosting Value	0.000 dB
PBCH Power Boosting	Auto
PBCH Power Boosting Value	0.000 dB
SS-Block Transmission	All On
PDCCH/DM-RS (All slots are set as below.)	
Enable	On
Antenna Port	2000
PDCCH Power Boosting	Auto
PDCCH Power Boosting Value	0.000 dB
Number of Symbols	2
PDSCH/DM-RS (All slots are set as below.)	
Enable	On
Antenna Port	1000
Modulation Scheme	Auto
PDSCH Mapping Type	type A
Start symbol	2
Number of Symbols	12
DM-RS typeA-pos	2
DM-RS config-type	1
DM-RS add-pos	0
DM-RS CDM Group Without Data	2
PDSCH Power Boosting	Auto
PDSCH Power Boosting Value	-3.000 dB
PDSCH PTRS	Off
PDSCH PTRS Time Density	1
PDSCH PTRS Freq. Density	2
PDSCH PTRS RE Offset	00
PDSCH RBs Allocation Auto Detect	Enable
PDSCH RBs Allocation Start RB	0
PDSCH RBs Allocation Number of RBs	132

C.4 Common Settings for Option 011/021

Power vs Time	
Wide Dynamic Range	
Wide Dynamic Range	Off
Noise Correction	Off
Pre-Amp Mode	Off
Limiter Mode	
Limiter Mode	Off
Keep Results	Off
Off Power ATT	2 dB
Off Power Pre-Amp	Off
Off Power Offset	Off
Off Power Offset Value	0.00 dB
Block Size Auto	On
Block Setup (#n = 0 to 79)	
Block Size	1
Block#n State	On
Block#n Start	0 symbol
Block#n Number of Symbols	0
Block#n Leading Transient Period	10 µs
Block#n Lagging Transient Period	10 µs
Block#n Inter On Symbol of Transient Period	0 µs
Mask Setup	
Ramp up Limit	10 µs
Ramp down Limit	10 µs
Off Power Detector	Max
Off Power Unit	dBm/MHz
Off Power Limit (dBm/MHz)	-85.00 dBm/MHz
Off Power Limit	-50.00 dBm
Frame Sync	Off
Trace	
Judge	On
Storage Mode	Off
Storage Count	10
Block Number	0
Smoothing	On
Smoothing Length	70/N µs
Smoothing Range	Mask
Filter	
Type	Low Pass
Roll-off Factor	1.00
BW (Initialized by Channel Bandwidth)	
Marker	

Appendix C Initial Value List

Marker	Off
Trace Select	Main
Marker1 (Main Trace)	0 Ts
Marker1 (Sub Trace)	0 symbol

C.5 MX285051A-061/MX269051A-061

Modulation Analysis

Analysis Time

Starting Slot Number	0 Slot
Measurement Interval	20 Slot

Basic Settings

Frame Parameter

Subcarrier Spacing	30 kHz
Number of RBs	273
Channel Bandwidth	100 MHz
Cell ID	0
Phase Compensation	On

PUSCH/DM-RS (all slots are set as below)

Multiplexing Scheme	CP-OFDM
Group Hopping	On
Sequence Hopping	Off
Enable	On
Antenna Port	1000
Modulation Scheme	Auto
PUSCH Mapping Type	type A
Start symbol	0
Number of Symbols	14
DM-RS typeA-pos	2
DM-RS config-type	1
DM-RS add-pos	0
DM-RS CDM Group Without Data	2
PUSCH Power Boosting	Auto
PUSCH Power Boosting Value	-3.000 dB
PUSCH PTRS	Off
PUSCH PTRS Time Density	1
PUSCH PTRS Freq. Density	2
PUSCH PTRS RE Offset	00
PUSCH RBs Allocation Auto Detect	Enable
PUSCH RBs Allocation Start RB	0
PUSCH RBs Allocation Number of RBs	273

C.6 MX285051A-071

Modulation Analysis

Analysis Time

Starting Slot Number	0 Slot
Measurement Interval	80 Slot

Basic Settings

Frame Parameter

Subcarrier Spacing	120 kHz
Number of RBs	132
Channel Bandwidth	200 MHz
Cell ID	0
Phase Compensation	On

PUSCH/DM-RS (all slots are set as below)

Multiplexing Scheme	CP-OFDM
Group Hopping	On
Sequence Hopping	Off
Enable	On
Antenna Port	1000
Modulation Scheme	Auto
PUSCH Mapping Type	type A
Start symbol	0
Number of Symbols	14
DM-RS typeA-pos	2
DM-RS config-type	1
DM-RS add-pos	0
DM-RS CDM Group Without Data	2
PUSCH Power Boosting	Auto
PUSCH Power Boosting Value	-3.000 dB
PUSCH PTRS	Off
PUSCH PTRS Time Density	1
PUSCH PTRS Freq. Density	2
PUSCH PTRS RE Offset	00
PUSCH RBs Allocation Auto Detect	Enable
PUSCH RBs Allocation Start RB	0
PUSCH RBs Allocation Number of RBs	132