## MT1100A Network Master Flex Operation Manual

## 29th Edition

For safety and warning information, please read this manual before attempting to use the equipment. Keep this manual with the equipment.

## **ANRITSU CORPORATION**

Document No. M-W3735AE-29.0

MT1100A Network Master Flex Operation Manual

1 October 2014 (First Edition) 18 December 2020 (29th Edition)

Copyright © 2014-2020, ANRITSU CORPORATION.

All rights reserved. No part of this manual may be reproduced without the prior written permission of the publisher.

The operational instructions of this manual may be changed without prior notice. Printed in Japan

2

## **About This Manual**

The documentation for MT1100A Network Master Flex applies to the instrument with the MU110010A, MU110011A, MU110012A, MU110013A Module and the MU110001A, MU110002A Power supply Module installed. This operation manual describes both the basic operation of the instrument as well as the operations available via interface options and predefined applications/tests.

#### MT1100A Network Master Flex Operation Manual (this manual)

Operations for the MT1100A Network Master Flex mainframe with Multirate Modules, Power Supply Modules are described.

#### MT1100A Network Master Flex Quick Reference Guide

A printed quick user's guide that introduces the basic operation of the instrument.

#### MT1000A Network Master Pro MT1100A Network Master Flex

**Remote Scripting Operation Manual** 

Operations of the command-based Remote Control function are described.

#### Manual structure

The contents of the manual are structured in the following way:

**Chapter 1 - Introduction** 

Chapter 2 - Configuration

Chapter 3 - Human-Machine-Interface

Chapter 4 - Graphical User Interface

Chapter 5 - SDH/SONET/PDH/DSn Applications

**Chapter 6 - Ethernet Application** 

**Chapter 7 - OTN Applications** 

**Chapter 8 - CPRI/OBSAI Applications** 

Chapter 9 - Fibre Channel (FC) Applications

**Chapter 10 - Device Test Applications** 

**Chapter 11 - Utility Applications** 

**Chapter 12 - Specifications** 

Chapter 13 - Support

Chapter 4 consists of a general introduction to the GUI. Chapters 5-11 contain descriptions of each screen, sub-screen and major dialog. The descriptions are provided in the following order:

Setup and result screens for each application. The applications are described in the same order as they appear on the application selector screen.

Ports setup screens and status information for each interface type.

Sub-screens and dialog boxes are described under the main screen from which they are activated/launched.

This operation manual assumes the reader has the following basic knowledge:

Ethernet, SDH/SONET, PDH/DSn, OTN, CPRI/OBSAI, Fibre Channel, handling optical parts

## **Table of Contents**

0 Table of Contents	4
1 Introduction 1.1 Mainframe 1.2 Modules 1.2.1 10G Multirate Module (MU110010A) 1.2.2 100G Multirate Module (MU110011A) 1.2.3 40/100G Module CFP2 (MU110012A) 1.2.4 40/100G Advanced Module (MU110013A) 1.2.5 Battery and AC Power Supply Module (MU110001A) 1.2.6 AC only High Power Supply Module (MU110002A) 1.3 Symbols and Conventions 1.3.1 Symbols Used in Manual 1.3.2 Safety Symbols Used on Equipment 1.3.3 Notes 1.3.4 Hints 1.3.5 Option 1.4 For Safety 1.4.1 Dangers 1.4.2 Warnings 1.4.2 Warnings 1.5.1 Cautions Against Computer Virus Infection 1.5 Precautions 1.5.1 Installation 1.5.2 Ventilation 1.5.3 ESD (Electrostatic Discharge) 1.5.4 Optical Surfaces 1.5.5 Cautions on Handling Optical Fiber Cables 1.5.6 Countries and Regions Permitting WLAN Use	11 12 13 13 13 13 13 14 15 15 15 16 16 17 17 17 18 19 20 20 20 21 22 22 24
<ul> <li>2 Configuration</li> <li>2.1 Delivered Accessories</li> <li>2.1.1 Standard Accessories</li> <li>2.1.2 Optional Accessories</li> <li>2.2 Rechargeable Battery</li> <li>2.2.1 Installing or Replacing Battery</li> <li>2.2.2 Charging Battery</li> <li>2.2.3 Battery Status Information</li> <li>2.3 Measurement Cables</li> <li>2.3.1 Connecting Measurement Cables</li> <li>2.4 Support Stand and Carrying Strap</li> <li>2.4.1 Support Stand</li> <li>2.4.2 Carrying Strap and Handle</li> <li>2.5 Replacing the Modules</li> </ul>	25 26 26 27 27 28 29 30 30 31 31 31
3 Human-Machine-Interface 3.1 Touch Screen Display 3.2 Key Operation 3.2.1 Power Button 3.3 Head Set 3.4 Connector Panel 3.4.1 Test Interfaces 3.4.2 Service Interfaces 3.5 Remote Operation 3.5.1 Installation of Control Software 3.5.2 Connection and Setup 3.5.3 Communication Ports	35 36 37 39 40 40 42 44 44 44

	3.5.4 Starting Control Software 3.5.5 Remote Upgrade 3.5.6 Remote Power Control 3.5.7 Remote Reset 3.5.8 Stand-alone Editor 3.6 Command-Based Remote Control 3.7 File Access via USB Interface 3.8 File Access via Ethernet Interface 3.8.1 Accessing files in Network Master from the PC 3.8.2 Mounting the Shared Folder of Networked PC to the Network Master	46 48 49 49 <b>51</b> <b>52</b> <b>53</b> 53
	3.9 GPS Receiver 3.9.1 G0325A GPS Receiver 3.9.2 Operating GPS Receiver 3.10 Remote Control via GPIB	<b>56</b> 56 56 <b>58</b>
4	Graphical User Interface 4.1 General Handling of the GUI 4.1.1 GUI Concept 4.1.2 Navigating in the GUI 4.1.3 Layout of the GUI Screens 4.1.4 Lamp Indication of Alarm/Error Status 4.1.5 Keypads for Entering Text in Fields 4.1.6 User Pattern Editor 4.1.7 Prompts to Confirm Dependencies 4.2 Toolbars 4.2.1 Instrument Toolbar 4.2.2 Application Toolbar 4.3 Startup and Switch-off Sequences 4.3.1 Instrument Startup 4.3.2 Application Startup 4.3.3 Accessing Previous Tests and Test Results 4.3.4 Closing an Application 4.3.5 Switching Off the Instrument	59 60 60 61 62 69 71 72 73 74 74 87 93 93 94 94
5	SDH/SONET/PDH/DSn Applications 5.1 SDH Setup and Status 5.1.1 Transmitter Setup 5.1.2 Receiver Setup 5.1.3 Status Information 5.1.4 Errors/Alarms Insertion 5.2 SONET Setup and Status 5.2.1 Transmitter Setup 5.2.2 Receiver Setup 5.2.3 Status Information 5.2.4 Errors/Alarms Insertion 5.3 E1 Setup and Status 5.3.1 Transmitter Setup 5.3.2 Receiver Setup 5.3.3 Status Information	97 98 99 105 106 113 117 118 124 125 128 129 136 140
	5.3.4 Errors/Alarms Insertion  5.4 DS1/J1 Setup and Status 5.4.1 Transmitter Setup 5.4.2 Receiver Setup 5.4.3 Status Information 5.4.4 Errors/Alarms Insertion  5.5 E3 Setup and Status 5.5.1 Transmitter Setup 5.5.2 Receiver Setup	147 149 149 154 157 160 161 164

5.5.3 Status Information 5.5.4 Errors/Alarms Insertion  5.6 DS3 Setup and Status 5.6.1 Transmitter Setup 5.6.2 Receiver Setup 5.6.3 Status Information 5.6.4 Errors/Alarms Insertion  5.7 E4 Setup and Status 5.7.1 Transmitter Setup 5.7.2 Receiver Setup 5.7.3 Status Information	165 167 <b>168</b> 168 172 174 177 <b>178</b> 178 180 181
5.7.4 Errors/Alarms Insertion 5.8 APS 5.8.1 Ports Setup and Status 5.8.2 Test Setup 5.8.3 Test Results 5.9 BERT 5.9.1 Ports Setup and Status	183 <b>184</b> 184 184 185 <b>189</b> 189
5.9.2 Test Setup 5.9.3 Test Results 5.10 RTD 5.10.1 Ports Setup and Status 5.10.2 Test Setup 5.10.3 Test Results	189 194 <b>206</b> 206 206 207
6.1 Ethernet Setup and Status 6.1.1 Physical Port Setup 6.1.2 Ethernet Frame Setup 6.1.3 Status Information 6.1.4 Errors/Alarms Insertion 6.1.4 Errors/Alarms Insertion 6.2 BERT 6.2.1 Ports Setup and Status 6.2.2 Test Setup 6.2.3 Test Results 6.3 Cable 6.3.1 Test Setup 6.4.1 Ports Setup and Status 6.4.2 Test Setup 6.4.3 Test Setup 6.4.3 Test Results 6.5 Mon/Gen 6.5.1 Ports Setup and Status 6.5.2 Test Setup 6.5.3 Test Results 6.6 Pass Through 6.6.1 Ports Setup and Status 6.6.2 Test Setup 6.6.3 Test Results 6.7 Ping 6.7.1 Ports Setup and Status 6.7.2 Test Setup 6.7.2 Test Setup 6.7.2 Test Setup 6.7.2 Test Setup	209 210 210 217 275 297 301 301 301 314 326 327 328 328 328 329 332 332 332 332 332 3345 345 346 347 348 348
6.7.3 Test Results 6.8 Reflector 6.8.1 Ports Setup and Status 6.8.2 Test Setup 6.8.3 Test Results 6.9 RFC 2544	349 <b>351</b> 351 352 353 <b>354</b>

	6.9.1 Ports Setup and Status	354
	6.9.2 Test Setup	355
	6.9.3 Test Results	369
	6.9.4 Throughput Calculation	374
	6.10 RFC 6349	376
	6.10.1 Ports Setup and Status	376
	6.10.2 Test Setup	377
	6.10.3 Test Results	382
	6.11 SAT 1564	387
	6.11.1 Ports Setup and Status	387
	6.11.2 Test Setup	387
	6.11.3 Test Results	397
	6.12 Traceroute	402
	6.12.1 Ports Setup and Status	402
	6.12.2 Test Setup	403
	6.12.3 Test Results	404
	6.13 Discovery	405
	6.13.1 Ports Setup and Status	406
	6.13.2 Test Setup 6.13.3 Test Results	406 407
	6.13.4 Procedure	407
	0.13.4 Flocedule	403
7	OTN Applications	413
	7.1 OTN Setup and Status	414
	7.1.1 Transmitter Setup	414
	7.1.2 Receiver Setup	431
	7.1.3 Status Information	436
	7.1.4 Error/Alarm Insertion	444
	7.1.5 Restrictions for using two ports	448
	7.2 APS	449
	7.2.1 Ports Setup and Status	449
	7.2.2 Test Setup 7.2.3 Test Results	449 450
	7.2.5 Test Results 7.3 BERT	450 453
	7.3.1 Ports Setup and Status	453
	7.3.2 Test Setup	453
	7.3.3 Test Results	457
	7.4 RTD	463
	7.4.1 Ports Setup and Status	463
	7.4.2 Test Setup	463
	7.4.3 Test Results	464
_	CAN LEL LA LE CE	467
ŏ	Mobile xHaul Applications	467
	8.1 CPRI/OBSAI Setup and Status 8.1.1 Physical Port Setup	<b>468</b> 469
	8.1.2 CPRI/OBSAI Frame Setup	471
	8.1.3 Status Information	474
	8.1.4 Error/Alarm Insertion	477
	8.2 CPRI/OBSAI BERT	479
	8.2.1 Ports Setup and Status	479
	8.2.2 Test Setup	479
	8.2.3 Test Results	483
	8.3 CPRI P. Through	488
	8.3.1 Ports Setup and Status	488
	8.3.2 Test Setup	488
	8.3.3 Test Results	489
	8.4 eCPRI/RoE BERT	490
	8.4.1 Ports Setup and Status	490
	8.4.2 Test Setup	496

8.4.3 Test Results	497
9 Fibre Channel (FC) Applications 9.1 Fibre Channel Setup and Status 9.1.1 Physical Port Setup 9.1.2 Fibre Channel Frame Setup 9.1.3 Status Information 9.1.4 Alarms/Errors Insertion 9.2 BERT 9.2.1 Ports Setup and Status 9.2.2 Test Setup 9.2.3 Test Results 9.3 Performance 9.3.1 Ports Setup and Status 9.3.2 Test Setup 9.3.3 Test Results 9.4 Reflector 9.4.1 Ports Setup and Status 9.4.2 Test Setup 9.4.3 Test Results	499 500 501 502 506 508 510 510 515 520 520 521 528 533 533 533
10 Device Test Applications 10.1 Device Test Setup and Status 10.1.1 Physical Port Setup 10.1.2 Status Information 10.1.3 Errors/Alarms Insertion 10.2 No Frame Test 10.2.1 Ports Setup and Status 10.2.2 Test Setup 10.2.3 Test Results	539 540 540 541 543 <b>545</b> 545 545
11. Utility Applications 11.1 Scenario 11.1.1 Scenario Manager 11.1.2 Running the Scenario 11.2 GPS 11.2.1 Test Setup 11.2.2 Test Results 11.3 PDF Viewer 11.4 VIP 11.4.1 Application Toolbar 11.4.2 Connecting the Video Inspection Probe 11.4.3 Test Setup 11.4.4 Test Results 11.5 Wireshark	549 550 550 552 554 554 557 558 558 558 559 562 564
12 Specifications 12.1 MT1100A 12.1.1 Configuration 12.1.2 Electrical Performance and Function 12.1.3 Environment Performance 12.1.4 Mechanical Performance 12.2 MU110001A, Battery and AC Power Supply Module 12.2.1 Configuration 12.2.2 Environment Performance 12.2.3 Mechanical Performance 12.3 MU110002A, AC only High Power Supply Module 12.3.1 Configuration 12.3.2 Environment Performance	567 568 568 569 569 570 571 571 572 572

12.3.3 Mechanical Performance 12.4 MU110010A, 10G Multirate Module 12.4.1 Configuration 12.4.2 Electrical Performance and Function 12.4.3 Environment Performance 12.4.4 Mechanical Performance 12.5 MU110011A, 100G Multirate Module 12.5.1 Configuration 12.5.2 Electrical Performance and Function 12.5.3 Environment Performance 12.5.4 Mechanical Performance 12.6 MU110012A, 40/100G Module CFP2 12.6.1 Configuration 12.6.2 Electrical Performance and Function 12.6.3 Environment Performance 12.6.4 Mechanical Performance 12.7 MU110013A, 40/100G Advanced Module 12.7.1 Configuration 12.7.2 Electrical Performance and Function 12.7.3 Environment Performance 12.7.4 Mechanical Performance 12.7.4 Mechanical Performance 12.8 Measurement Functionality 12.8.1 Ethernet Measurements 12.8.2 SDH/SONET/PDH/DSn 12.8.3 OTN 12.8.4 Fibre Channel 12.8.5 CPRI/OBSAI	572 573 573 574 578 579 580 584 585 586 588 588 589 590 592 592 593 605 616 627 628
12.8.6 Device Test 12.9 Optical Modules	630 <b>632</b>
13.1 Maintenance and Cleaning 13.1.1 Maintenance 13.1.2 Cleaning 13.1.3 Storage 13.2 Calibration 13.3 Formatting the data area in the Network Master 13.4 Upgrading the Software 13.4.1 Installation by using USB flash drive 13.4.2 Installation via Network 13.5 Support and Service Assistance 13.5.1 Before you obtain assistance 13.5.2 Data Backup 13.5.3 Obtaining Support or Service Assistance 13.6 Transporting and Disposal	635 636 636 636 638 639 640 640 641 641 641 641
13.6.1 Repackaging 13.6.2 Transporting 13.6.3 Disposal  13.7 Special Information 13.7.1 Equipment Certificate 13.7.2 Anritsu Warranty 13.7.3 Anritsu Corporation Contact 13.7.4 Licensing Information 13.7.5 Availability of Source Code 13.8 Software License Document 13.9 EULA License Document 13.10 CE Conformity Marking 13.10.1 Product Model	642 642 643 643 643 644 644 645 650 653

13.10.2 Applied Directive	653
13.10.3 Applied Standards	653
13.10.4 Contact	654
13.10.5 CE Declaration	655
13.11 RCM Conformity Marking	656
13.11.1 Product Model	656
13.11.2 Applied Standards	656
13.12 Laser Safety	657
13.12.1 Laser Safety Classifications	657
13.12.2 Indication Labels on Product	660
13.12.3 Laser Radiation Markings	660
13.13 Wireless Certification	662
13.13.1 Japan MIC	662
13.13.2 North America (USA FCC and Canada IC)	662
13.13.3 Europe CE	662
13.13.4 Mexico IFETEL	662
13.13.5 Singapore IMDA	663
13.14 Declarations	664
13.14.1 Notes on Export Management	664
13.14.2 Information for EU and EFTA Customers Only	664
13.14.3 Information for U.S. Customers Only	664
13.14.4 Information for the Chinese Market Only	665

# 1 Introduction

This chapter provides a general introduction to the MT1100A Network Master Flex, and explains the symbols and conventions used in this manual.

#### 1.1 Mainframe

The MT1100A Network Master Flex (hereafter called *the Network Master* and sometimes *the instrument*) is a multipurpose telecommunications test instrument up to 100 Gbit/s interfaces for field use. It is a tool for a wide range of applications from fast first-aid troubleshooting to comprehensive, in-depth analysis of transmission problems. The installed options enable the Network Master to be used both as a full-featured transmission line quality tester and as an advanced signaling analyzer.

The Network Master features a wide TFT LCD display with touch screen interface, where results are easily read and color coding and graphical symbols aid the users in system setup and results analysis. The Network Master also allows users to store applications settings to reduce time for future configurations. For fast and efficient data transfer and external communication, the Network Master houses LAN interface, WLAN interface, *Bluetooth*® and three USB ports.

Fault location is greatly facilitated by the high degree of portability of the robust Network Master, allowing measurements to be taken at any suitable measuring point. Accordingly, the Network Master can be powered either by a rechargeable and replaceable intelligent high-capacity Li-Ion battery, or via AC adapter for long-term measurements

Altogether, these features guarantee the supreme functionality of the Network Master, allowing both convenience and optimal user-friendly operation.

For latest information, refer to the homepage below. https://www.anritsu.com/en-us/test-measurement/products/mt1100a

#### 1.2 Modules

#### 1.2.1 10G Multirate Module (MU110010A)

The 10G Multirate module (MU110010A) allows the Network Master to test a large variety of interfaces and systems up to 10 Gbps, like OTN interfaces, Ethernet interfaces, SDH/SONET interfaces, Fibre Channel interfaces and PDH/DSn interfaces. The MU110010A can be configured to have two ports at all rates and interfaces. The instrument is thus ideal for both in-service and out-of-service transmission-quality measurement.

#### 1.2.2 100G Multirate Module (MU110011A)

The 100G Multirate module (MU110011A) has RJ-45 electrical interface and optical interfaces using SFP/SFP+, QSFP+ and CFP optical transceivers. These interfaces allow users to test wide bit rates from 10Mbit/s to 100Gbit/s. With the exception of the CFP interface which has 1 port, MU110011A can be configured to have 2 ports.

#### 1.2.3 40/100G Module CFP2 (MU110012A)

The 40/100G Module CFP2 (MU110012A) has connectors for QSFP+, CXP, and CFP2 optical transceivers. These interfaces allow users to test bit rates of 40Gbit/s and 100Gbit/s. The MU110012A can be configured to have two ports at all rates and interfaces.

#### 1.2.4 40/100G Advanced Module (MU110013A)

The 40/100G Advanced Module (MU110013A) has connectors for QSFP+, CXP, and CFP2 optical transceivers as same as MU110012A. The MU110013A also has Sync output connectors.

#### 1.2.5 Battery and AC Power Supply Module (MU110001A)

The Battery and AC Power Supply Module (MU110001A) provides the power to the Network Master and allows battery operation. The combination of the Multirate modules is shown in the following table.

		Module1				
		None	MU110010A	MU110011A	MU110012A	MU110013A
	None	N/A	<b>✓</b>	*	*	*
	MU110010A		✓	*	*	*
Module 2	MU110011A	*	*	-	-	-
	MU110012A	*	*	=	-	=
	MU110013A	*	*	-	-	-

<sup>✓:</sup> Operable

<sup>\*:</sup> Operable when AC power is supplied or two batteries are installed

<sup>:</sup> Inoperable

## 1.2.6 AC only High Power Supply Module (MU110002A)

The AC only High Power Supply Module (MU110002A) provides the power to the Network Master. Battery operation, however, is not allowed.

## 1.3 Symbols and Conventions

#### 1.3.1 Symbols Used in Manual

To prevent the risk of personal injury or loss related to equipment malfunction, Anritsu Corporation uses the following safety symbols to indicate safety-related information. Ensure that you clearly understand the meanings of the symbols BEFORE using the equipment. Some or all of the following symbols may be used on all Anritsu equipment. In addition, there may be other labels attached to products that are not shown in the diagrams in this manual.

**⚠** DANGER

This indicates a very dangerous procedure that could result in serious injury or death if not performed properly.



This indicates a hazardous procedure that could result in serious injury or death if not performed properly.



This indicates a hazardous procedure or danger that could result in light-tosevere injury, or loss related to equipment malfunction, if proper precautions are not taken.

#### 1.3.2 Safety Symbols Used on Equipment

The following safety symbols are used inside or on Anritsu equipment near operation locations to provide information about safety items and operation precautions. Ensure that you clearly understand the meanings of the symbols and take the necessary precautions BEFORE using the equipment.



This indicates a prohibited operation. The prohibited operation is indicated symbolically in or near the barred circle.



This indicates an obligatory safety precaution. The obligatory operation is indicated symbolically in or near the circle.



This indicates a warning or caution. The contents are indicated symbolically in or near the triangle.



This indicates a note. The contents are described in the box.





These indicate that the marked part should be recycled.

The following icons are used for easy spotting of information in this manual.

#### 1.3.3 Notes



The Note symbol indicates information, procedures or recommendations that need to be followed to make correct measurements etc. Note text is written in italics to separate the information from the other text elements on a page.

#### 1.3.4 Hints



The Hint symbol indicates information that should be treated as hints, suggestions, recommendations etc. Hint text is written in italics to separate the information from the other text elements on a page.

## 1.3.5 Option



The Option symbol indicates that the information described covers an option (hardware and software) and that this option must be installed before use. Text is written in italics to separate the information from the other text elements on a page.

### 1.4 For Safety

This section contains warnings which should be followed to avoid personal injury, product damage, as well as damage to the environment.

#### 1.4.1 Dangers

## **⚠** DANGER

#### **Replacing Battery**



• When replacing the battery, use the specified battery and insert it with the correct polarity. If the wrong battery is used, or if the battery is inserted with reversed polarity, there is a risk of explosion causing severe injury or death.

#### FOR CALIFORNIA USA ONLY

This product contains a CR Coin Lithium Battery which contains Perchlorate Material - special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate.

**Battery Disposal** 

• DO NOT expose batteries to heat or fire. This is dangerous and can result in explosions or fire. Heating batteries may cause them to leak or explode.

#### 1.4.2 Warnings





- ALWAYS refer to the operation manual when working near locations at which the alert mark shown on the left is attached. If the advice in the operation manual is not followed, there is a risk of personal injury or reduced equipment performance. The alert mark shown on the left may also be used with other marks and descriptions to indicate other dangers.
- Overvoltage Category
   This equipment complies with overvoltage category II defined in IEC 61010.
   DO NOT connect this equipment to the power supply of overvoltage category III or IV.
- Laser radiation warning NEVER look directly into the cable connector on the equipment nor into the end of a cable connected to the equipment. There is a risk of injury if laser radiation enters the eye.

The Laser Safety label is attached to the equipment for safety use as indicated in "Laser Safety".

Repair



 Only qualified service personnel with a knowledge of electrical fire and shock hazards should service this equipment. This equipment cannot be repaired by the operator. DO NOT attempt to remove the equipment covers or unit covers or to disassemble internal components. In addition, there is a risk of damage to precision components.

#### Calibration



#### Battery Fluid

• The performance-guarantee seal verifies the integrity of the equipment. To ensure the continued integrity of the equipment, only Anritsu service personnel, or service personnel of an Anritsu sales representative, should break this seal to repair or calibrate the equipment. Be careful not to break the seal by opening the equipment or unit covers. If the performance-guarantee seal is broken by you or a third party, the performance of the equipment cannot be guaranteed.

• DO NOT short the battery terminals and never attempt to disassemble the battery or dispose of it in a fire. If the battery is damaged by any of these actions, the battery fluid may leak.

This fluid is poisonous.

DO NOT touch the battery fluid, ingest it, or get in your eyes. If it is accidentally ingested, spit it out immediately, rinse your mouth with water and seek medical help. If it enters your eyes accidentally, do not rub your eyes, rinse them with clean running water and seek medical help. If the liquid gets on your skin or clothes, wash it off carefully and thoroughly with clean water.

**LCD** 

• This equipment uses a Liquid Crystal Display (LCD). DO NOT subject the equipment to excessive force or drop it. If the LCD is subjected to strong mechanical shock, it may break and liquid may leak.

This liquid is very caustic and poisonous. DO NOT touch it, ingest it, or get in your eyes.

If it is ingested accidentally, spit it out immediately, rinse your mouth with water and seek medical help. If it enters your eyes accidentally, do not rub your eyes, rinse them with clean running water and seek medical help. If the liquid gets on your skin or clothes, wash it off carefully and thoroughly with soap and water.

#### 1.4.3 Cautions



#### Replacing Memory Back-up Battery

This equipment uses a Manganese dioxide lithium battery to back up the memory. This battery must be replaced by service personnel when it has reached the end of its useful life; contact the Anritsu sales section or your nearest representative.

Note: The battery used in this equipment has a maximum useful life of 8 years. It should be replaced before this period has elapsed.

The life of the battery will vary depending on the length of equipment usage and the operating environment.

The following conditions may be observed if the battery has expired:

- When power to the equipment is supplied, the time display may no longer match the actual time.
- Parameter and data settings may not be retained when the power to the equipment is cut.

#### **External Storage**

This equipment uses a USB flash drive as external storage media for storing data and programs.

If this media is mishandled or becomes faulty, important data may be lost. It is recommended to periodically back up all important data and programs to protect them from being lost accidentally.

#### Anritsu will not be held responsible for lost data.

Pay careful attention to the following points:

- Never remove the USB flash drive from the equipment while it is being accessed.
- The USB flash drive may be damaged by static electric charges.
- Anritsu has thoroughly tested all external storage media shipped with this equipment. Users should note that external storage media not shipped with this equipment may not have been tested by Anritsu, thus Anritsu cannot guarantee the performance or suitability of such media.

#### Lifetime of Parts

The life span of certain parts used in this equipment is determined by the operating time or the power-on time. Due consideration should be given to the life spans of these parts when performing continuous operation over an extended period. The safety of the equipment cannot be guaranteed if component parts are used beyond their life spans. These parts must be replaced at the customer's expense even if within the guaranteed period described in Warranty at the end of this manual.

For details on life-span, refer to the corresponding section in this manual.

- LCD: Brightness at 50% after 40,000hrs
- Battery pack Capacity: 80% after 300 charge/discharge cycles

#### Use in Residential Environment

This equipment is designed for an industrial environment. In a residential environment, this equipment may cause radio interference in which case the user may be required to take adequate measures.

#### Use in Corrosive Atmospheres

Exposure to corrosive gases such as hydrogen sulfide, sulfurous acid, and hydrogen chloride will cause faults and failures.

Note that some organic solvents release corrosive gases.

#### 1.4.4 Cautions Against Computer Virus Infection

#### Copying files and data

Only files that have been provided directly from Anritsu or generated using Anritsu equipment should be copied to the instrument.

All other required files should be transferred by means of USB flash drive after undergoing a thorough virus check.

#### Adding software

Do not download or install software that has not been specifically recommended or licensed by Anritsu.

#### **Network connections**


Ensure that the network has sufficient anti-virus security protection in place.

#### 1.5 Precautions

This section contains some precautions which should be followed to avoid damage or malfunction due to incorrect use, handling and transportation of the Network Master.

#### 1.5.1 Installation

Install MT1100A horizontally in a stable place.

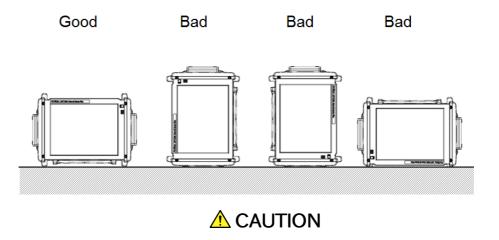

If the MT1100A is not installed in the "correct" orientation as above, a small shock may turn it over and harm the user.


#### 1.5.2 Ventilation

The Network Master has built-in fans, to prevent the temperature to rise inside the instrument.



#### Be sure not to block the ventilation holes.

Install the MT1100A in a location with the vents at least 10 cm away from walls, peripherals or other obstructions so as not to block the fan perimeter.

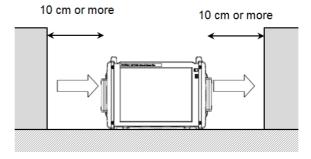

In this instrument, cooling air is taken in through the left side panel, and hot air is exhausted through the right side panel. When using two or more instruments side-by-side make sure that hot air exhausted from one unit is not taken into the adjacent unit, otherwise overheating may occur.

#### 1.5.3 ESD (Electrostatic Discharge)

Modules and options for the Network Master contain electronic devices that are sensitive to ESD (Electro Static Discharge). Therefore, all ESD sensitive items are delivered from Anritsu in antistatic shielding packages.

Electrostatic discharge during installation can result in destruction or degradation of these devices. The damage may lead to equipment failure later. When you install or remove modules, it is your responsibility to control ESD. To control ESD, take the issues described below into consideration.



#### Avoid build-up of electrostatic charge

• Keep your workplace clear of any item that can generate electrostatic charges, e.g. all items that are not made of antistatic materials.

#### Minimize the exposure to ESD

- Keep ESD sensitive items in antistatic shielding packaging as long as possible.
- Do not remove ESD sensitive items from equipment or the antistatic shielding packaging unless you are connected to the equipment with a grounding wrist strap (as described later).
- Return ESD sensitive items to antistatic shielding packaging.

## Keep equipment, the ESD sensitive items and yourself at the same static potential

- If your workplace is already prepared for handling ESD sensitive items, then follow your usual procedure. If not, you should follow the procedure below using a ground wrist strap.
- 1. Attach the wrist end of the wrist strap firmly around your wrist and the other end to the equipment chassis or ground plug.
- 2. Keep the wrist strap on while you install or remove ESD sensitive items. Do not remove the wrist strap until the ESD sensitive parts are either installed or returned to the antistatic shielding package.

#### 1.5.4 Optical Surfaces

The optical interfaces - transmitter as well as receiver - are very sensitive to contamination. Be aware that contamination of the optical surfaces may result in severe loss of signal.



To prevent contamination of the optical surfaces, mount protective caps to seal the transmitter/receiver connectors when no fiber optic cables are connected.

Correct functioning of the instrument can only be ensured if optical modules, supplied by Anritsu for the Network Master, are used.

#### 1.5.5 Cautions on Handling Optical Fiber Cables

Optical fiber cables may degrade in performance or be damaged if handled improperly. Note the following points when handling them.



#### Do not pull the cable when removing the connector.

Doing so may break the optical fiber inside the cable, or remove the cable sheath from the optical connector.




## **↑** CAUTION

#### Do not excessively bend, fold, or pinch an optical fiber cable.

Doing so may break the optical fiber inside the cable.

Keep the bend radius of an optical fiber cable at 30 mm or more. If the radius is less, optical fiber cable loss will increase.

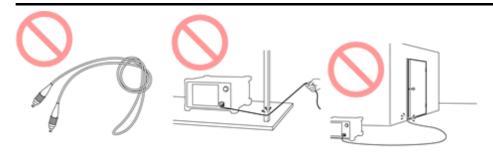

## **A** CAUTION

#### Do not excessively pull on or twist an optical fiber cable.

Also, do not hang anything by using a cable. Doing so may break the optical fiber inside the cable.



## **A** CAUTION

Be careful not to hit the end of an optical connector against anything hard such as the floor or a desk by dropping the optical fiber cable.

Doing so may damage the connector end and increase connection loss.



## **MARNING**

#### Do not touch the end of a broken optical fiber cable.

The broken optical fiber may pierce the skin, causing injury.





#### Do not disassemble optical connectors.

Doing so may cause Rubidium oscillator to break or the performance to degrade.

## 1.5.6 Countries and Regions Permitting WLAN Use

Use of WLAN is restricted in some countries and regions, and illegal use may be punishable under national or local regulations. To avoid violating WLAN regulations, visit the Anritsu website to check where use is allowed.

 $\frac{https://www.anritsu.com/ja-JP/test-}{measurement/support/downloads/brochures-datasheets-and-catalogs/dwl16690}$ 

Note that Anritsu cannot be held liable for any problem arising from WLAN use in other countries and regions.

# 2 Configuration

This chapter contains information about the included accessories as well as guidelines for charging the battery, and how to replace the modules.

## 2.1 Delivered Accessories

The instrument is delivered in a shipment container together with various accessories depending on the order. When unpacking the first time, it is recommended to check these accessories against the list(s) below.

#### 2.1.1 Standard Accessories

The following standard accessories are delivered with the instrument:

	MT1100A
	Shield Power Cord (13A)
B0699A	Soft case
Z1746A	Stylus
Z1861A	Carrying Strap
Z1862A	Module Combination Kit
Z1870A	Utilities ROM
W3734AE	Quick Reference Guide
	MU110001A
G0327A	Li-Ion Battery

## 2.1.2 Optional Accessories

One or more of the following optional accessories may be delivered with the instrument (if included in the order):

	MT1100A
B0692A	ESD box
B0697A	Hard case
G0306B	Video Inspection Probe
G0325A	GPS receiver
G0382A	Autofocus Video Inspection Probe
J1667A	GPIB-USB Converter
W3735AE	MT1100A Network Master Flex Operation Manual
W3736AE	MT1000A Network Master Pro/ MT1100A Network Master Flex
	Remote Scripting Operation Manual
Z1871A	Utilities in USB stick
	MU110001A
Z1860A	Battery Charger

## 2.2 Rechargeable Battery

The MU110001A Battery and AC Power Supply Module is delivered with a 14.4 V Intelligent Li-Ion rechargeable and replaceable battery.





Use only original batteries delivered from Anritsu, to prevent the risk of instrument damage or personal injury.

Battery should only be charged at room temperature.

Initial charging

The battery will normally be partially or fully discharged on delivery. It is recommended to charge the battery immediately after delivery and unpacking.

In Standby Mode, the power button will stop flashing when the battery is fully charged.



If the battery will not to be used for a long period of time, it is recommended that it contains at least 20% capacity. Charge the battery before storage, if necessary.

**Temperature** 

When charging is in process, the temperature of the battery will increase. When the battery temperature exceeds 40  $^{\circ}$ C, the Network Master automatically stops battery charging and displays following message.



In order to resume battery charging as soon as possible, use the Network Master in the environment with lower ambient temperature. Or, close the application and shut down the Network Master.



If the battery temperature reaches  $60^{\circ}\text{C}$  or over while Network Master is in battery operation, Network Master shuts down automatically. In this case, leave the Network Master for approximately one hour to cool itself at room temperature (around  $25^{\circ}\text{C}$ ) before using Network Master again.

#### 2.2.1 Installing or Replacing Battery

To install or replace the battery in the Network Master, follow the procedure below:

1. Disconnect the power cord if it is connected.

- 2. Switch the Network Master OFF.
- 3. Place the instrument on its back on a plain surface and loosen the lock screw of the battery compartment.
- 4. Remove the lid of the battery compartment.
- 5. Pull out the battery from the compartment.



- 6. When installing the battery, note the direction of the battery terminals. With the instrument placed on its back and the battery compartment in front of you the terminals should be in the upper left corner.
- 7. Re-install the battery compartment door and tighten the lock screw.


#### 2.2.2 Charging Battery

The battery automatically charges anytime the instrument is plugged in to a live AC power source using the power cord.

Battery power replenishes more quickly if the instrument is turned off (Standby mode).

## Indication during charging

When the power cord is connected and plugged in, the Power button flashes rapidly in orange while the instrument boots up. After approx. 30 seconds, the button then flashes slowly to indicate the battery is charging. Flashing stops when the charging is complete. If the battery is defective - the Power button will also light. Therefore, the best way to check the battery status is to switch on the Network Master and observe the battery information in the <a href="Instrument information">Instrument information</a> on Instrument toolbar.

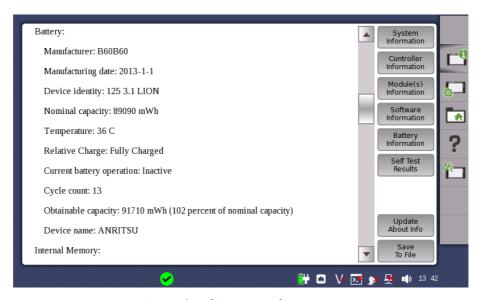

**Example of Battery Information** 

The battery status can be checked in the status bar if the battery indicator is displayed there. See the "Battery Status Information" section below.

#### 2.2.3 Battery Status Information

The battery icon is displayed in the status line at the bottom of the screen.

The following icons are used to indicate the current battery status:

The battery is fully charged. The AC power is fed to the Network Master.

There is no battery in the Network Master (or the battery is malfunctioning). The AC power is fed to the Network Master.

The Network Master is running on battery power. The power cord is not connected.

The battery is not charging due to ambient temperature out of the operating temperature range. The Network Master is using the AC power as power source.

Appears when using MU110002A.

There is a delay of several seconds before the battery status is updated.

In this manual, most of operation are described using the images of MT1000A screen. So the battery icon in screen image may be different from the actual screen.

More detailed battery status information is displayed when touching the battery icon. The example in the figure below shows the status screen of a battery fully charged.
















#### 2.3 Measurement Cables

When connecting the Network Master to the line to be tested or monitored, it is recommended always to use shielded cables of good quality, to avoid the possibility of corrupting the measuring results. For the same reason, the power cord, if used, should be connected to the instrument and switched on before starting the measurement.

For connection of the Network Master to different types of equipment, different cables are available. Please contact your Anritsu representative for information.

#### 2.3.1 Connecting Measurement Cables

Measurement cables are connected to the input and output connectors located on the connector panel of the instrument. Various electrical and optical connectors are available.

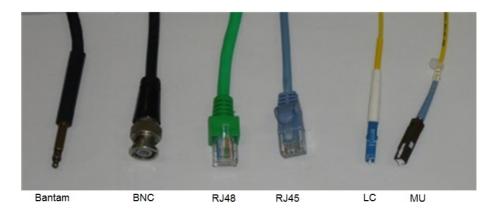

## 2.4 Support Stand and Carrying Strap

#### 2.4.1 Support Stand

The Network Master is equipped with a support stand keeping the instrument at a convenient angle during the operation. To extract the stand: pull out the metal bar on bottom of the Network Master - it automatically stays in the correct position.

Be sure to open a support stand fully. Otherwise, the Network Master will be more likely to tip over. Moreover, the air flow on bottom panel will be insufficient.



#### 2.4.2 Carrying Strap and Handle

The included carrying strap can easily be mounted for your convenience when transporting and/or using the Network Master.

The carrying strap is equipped with hooks for easy installation.



Use the Carrying Strap around your shoulder. Do not wrap the strap around your neck.

## 2.5 Replacing the Modules

The available modules depend on the Power Supply Module (MU110001A or MU110002A). Before replacing the modules, refer to the table in  $\underline{\text{Modules}}$  of "Introduction".



Replacing modules operation should be done on the table where antistatic measures are taken.

#### Detaching the modules

- 1. Before the detaching operation, disconnect the AC cable and remove the battery pack.
- 2. Switch the Network Master OFF.
- 3. Place the instrument on its front on a plain surface.



4. Insert Z1862A to holes (shown by the yellow circle) on rear side of the Power Supply Module.



5. Loosen the screws inside.



6. After loosing the four screws, lift up the Power Supply Module with holding both sides. You can see the side panel of the Multirate module as below.



To detach the Multirate module, do the same operation as detaching the Power Supply Module.

#### Attaching the modules

The operation attaching MU110011A and MU110001A to MT1100A is described as an example.

- 1. Place the instrument on its front on a plain surface.
- 2. Attach MU110011A to MT1100A. Place MU110011A on MT1100A so as to connect following pairs:


1 - 6, 2 - 8, 3 - 7, 4 - 10, 5 - 9.



Be careful not to bump the guide pins (4, 5, 7 and 8) against the connectors (1 and 6).

When attaching the module, make sure the four corners are aligned.

Failure to do so can cause damage to the connectors.

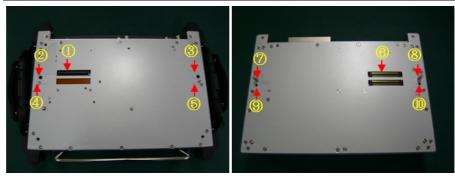



3. Tighten the four screws (shown in yellow circle) using Z1862A, with holding MU110011A by the other hand.

Tighten screws enough to prevent the module from dropping off.



4. Place MU110001A on MU110011A. The attaching procedure of MU110001A is the same as attaching MU110011A to MT1100A.



 $5.\,$  After attaching the modules, connect the AC cable or install the battery packs.

# 3 Human-Machine-Interface

 $Human-Machine-Interface \ (HMI) \ covers \ the \ relation \ between \ the \ user \ and \ the \ Network \ Master \ - \ in \ other \ words: \ the \ information \ you \ get \ from \ the \ Network \ Master \ combined \ with \ the \ action \ you \ add \ to \ the \ Network \ Master \ .$ 

The informative part is the color LCD, and the part susceptible to influence is the touch-active layer of the screen. Connections made to the input and output connectors are included in the HMI as well.

## 3.1 Touch Screen Display

The 12.1 inch active TFT display with SVGA resolution (800x600 pixels) is used for setups and for presentation of results (that is, for all interaction with the instrument). As the display includes touch screen functionality, it is possible to navigate and operate directly from it.

The touch screen display is constructed to be operated by the tip of your finger or by the included *Stylus* (Anritsu part No. Z1746A). The touch screen surface is made of delicate material and is easily scratched or damaged if handled incorrectly.



Never expose the touch screen to excessive pressure as this may damage its functionality.

Never use sharp objects (e.g. pens, paper clips etc.) to operate the touch screen, as this may damage the surface.

Only use a soft cloth moisturized with a mild detergent to clean the surface of the touch screen. Be sure to power off and disconnect power cord.

# 3.2 Key Operation

The only physical operator key (the Power button) is described in this section.

#### 3.2.1 Power Button



The Power button on the front panel of the instrument is used to switch power ON and OFF. In addition, the menu used for power-off also contains a few extra options (e.g. to lock the screen).



Gray: Power off



Orange flashing (fast): Booting in case of AC operation




Green flashing: Booting in case of the battery operation



(Only when the MU110001A is installed)



Orange flashing (slow): Charging





Orange: Stand by



Green: Operating

**Battery Operation** and "Charging state" described below are available only when the MU110001A is installed.

#### Switching power ON

# **AC** Operation

Connect the power cord to the Network Master. The Network Master flashes the power button in orange during booting. The power button lights in orange after booting.

To start your test, press the power button. The power button lights in green. After a model name is displayed, the Network Master enters Operating status and shows the Application Selector.

#### **Battery Operation**

Press the power button. The Network Master shows a model name and flashes the power button in green during booting.

Then, the Network Master enters Operating status and shows the Application Selector.

#### Switching power OFF

When you press the Power button, a pop-up menu containing **Shut Down** will appear.



Touch Shut Down and then confirm by touching Yes in a dialog box.

#### **AC Operation**

After you shut the Network Master down, the Network Master goes back to Stand by or Charging state.

The Network Master stays Stand by or Charging state until you disconnect the power cord.

#### **Battery Operation**

After you shut the Network Master down, the power goes off.

#### Forcing power OFF

If it is not possible to power down the Network Master using the power button menu, the following procedure can be used to make an emergency power down.

- 1. Disconnect power cord if it is connected.
- 2. Hold the Power button depressed for a couple of seconds.



Forcibly turning off the power may cause loss of measurement data or file corruption. It is not recommended to force a power-off except in emergencies.

#### Additional options in power button menu

#### Capture Screen

Saves a screen shot image in .PNG format. The image file will be saved in 'Internal/screens' folder or an attached USB flash drive.

#### Lock Screen

Locks or unlocks the screen.

# 3.3 Head Set

You can use the commercially available head set (3.5  $\phi$  CTIA), it is possible to listen speech in the audio channels available in E1 and T1 systems.

# **A** CAUTION

Do not operate for a long period of time at high volume level or at a level that is uncomfortable.

The volume is controlled from the **General** setup in 'Instrument Toolbar'.

The head set is connected to the socket marked with a head set symbol on the connector panel of the Network Master.



# 3.4 Connector Panel


All connections (both for *test interfaces* and for *service interfaces*) are placed on the connector panel of the Network Master.

The figure below shows the connector panel of the MT1100A and its modules.

#### 3.4.1 Test Interfaces

The connectors used for testing are placed on the module.


#### MU110010A

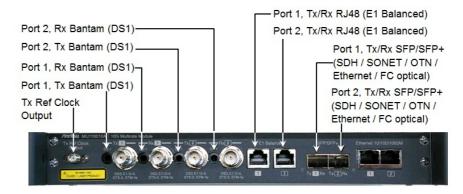





Tx Ref Clk Output: This connector is used for reference clock output.


#### MU110011A

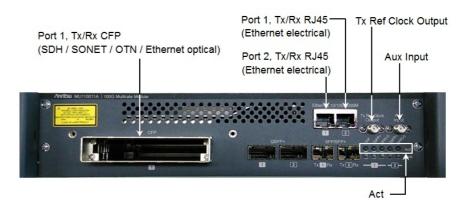

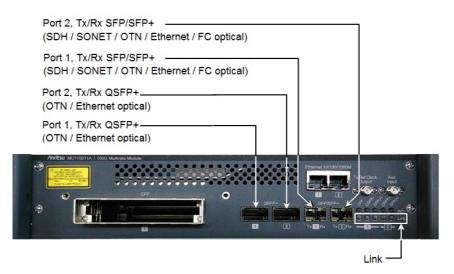



#### MU110012A

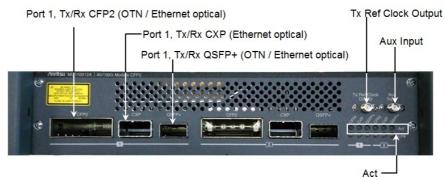

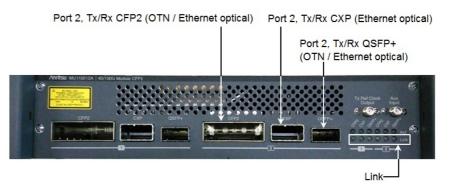

#### MU110013A

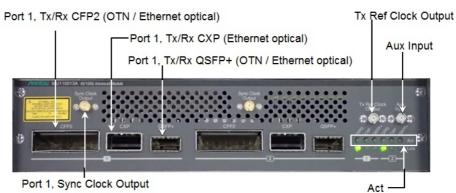

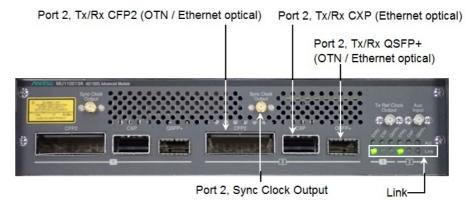

For MU110011A, MU110012A, and MU110013A:


Tx Ref Output	This connector is used for reference clock output of the transmitters.
AUX Input	This connector is reserved for the future use.
Act	Lights orange when the optical transceiver becomes activated.
Link	Lights green when connection status becomes Link Up.

For MU110013A:

Sync Clock	In case of 100G Ethernet or OTU4, this connector outputs the
Output	divided clock of the data rate which the CFP2 is transmitting.

# 3.4.2 Service Interfaces

The service interfaces used for the connection to other instruments, are placed on the MT1100A panel:

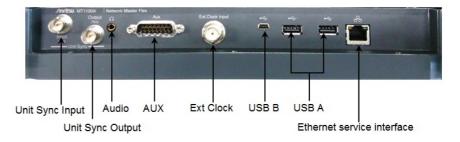

Unit Sync Input	This connector is reserved for the future use.
Unit Sync Output	This connector is reserved for the future use.
Audio	The audio connector is used for connecting to an optional head set.
AUX	The AUX connector is used for optional G0325A GPS Receiver.
Ext Clock Input	The Ext Clock Input connector is used for reference clock input.
USB B	The three USB connectors (two connectors type A and one
USB A	connector type B mini) can, for example, be used for connection with USB flash drive. This is convenient for the exchanging of information to other instrument.
Ethernet service interface	The Ethernet connector is used for connecting the Network Master to a Local Area Network, e.g. to remotely operate the instrument from a PC.  Active Link Active LED turns on orange while data are sent or received.  Link LED turns on green when Ethernet has been linked up and is able for the communication.



Network Master supports only USB flash drives formatted in FAT32. When multiple USB flash drives are connected to the Network Master, only the first connected USB flash drive is recognized.

For Wi-Fi dongles confirmed to work with the Network Master, please contact an Anritsu sales office.

# 3.5 Remote Operation

With the MX100001A MT1000A/MT1100A Control Software (hereafter, "Control Software") application installed, your PC is capable of supporting remote access to the Network Master. Control Software simulates the panel operation of the Network Master, allowing you to operate and view results on a PC through a LAN or Internet connection. If more Network Masters are linked to a network, they can be remotely controlled by the same PC, one at a time.

#### 3.5.1 Installation of Control Software

#### **Operation Environment**

OS	Windows 7/8.1/10 English/Japanese
Interface	Ethernet 100BASE-TX/1000BASE-T
Display	$800 \times 600$ dots or more

1. Copy the installer stored in the Network Master to your PC, by USB flash drive or the file sharing function.

File Name: MX100001A-Setup-x.xx-xxxxx.exe

"x"s in the file name mean numerics showing the version.

2. Double click the installer file.



- 3. If User Account Control dialog box appears, click Yes.
- 4. After the installation finishes, click **Close**.

Click **Start** > All Programs > Anritsu > MX100001A folder. Confirm that following programs appear. "V\*.\*\*" is replaced to the version name.

- MX100001A-V\*.\*\*-Editor
- MX100001A-V\*.\*\*-Remote
- MX100001A-V\*.\*\*-Viewer
- V\*.\*\*-Uninstall



When installing a new version of the Control Software, previous versions are not automatically uninstalled. To manually uninstall a Control Software version, execute "Uninstall" from the Control Software folder from the Start menu of Windows.

# 3.5.2 Connection and Setup

To make Remote Operation application communicate with Network Master:

- 1. Connect an Ethernet network cable to the LAN connector on your Network Master and link this to a Local Area Network.
- 2. Assign an IP address to the Network Master. This is done in the *Ethernet* setting available from the <u>Network</u> screen as described in the *Graphical User Interface* chapter.
- 3. Enable Allow remote PC in the Remote Control.
- 4. Display the  $\underline{\text{Resource Monitor}}$ . Confirm that the IP address and "running Tests and Views" appear.




5. Change the Network settings of the PC, so it can access the Network Master via Ethernet.

 $Select\ Control\ Panel\ ->\ Network\ and\ Internet\ ->\ Network\ Connection.$ 

Right-click the interface and click the Properties.

Select the properties of Internet Protocol Version 4 (TCP/IPv4) and click the Properties button.

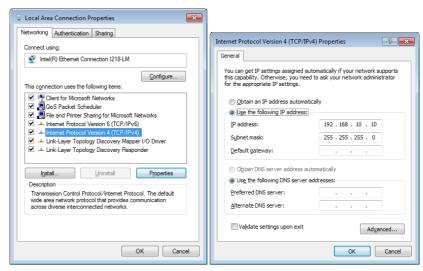

6. Execute Ping command on PC to confirm connection to the Network Master.

#### 3.5.3 Communication Ports

When using the Control Software with a Network Master connected behind a port restrictive firewall, to successfully communicate with the instrument, it is important to configure the firewall to allow communication on the following ports:

5555	Framework core communication port, fixed. Used by Control
	Software main GUI, including the Remote Upgrade function.
5650 to 5699	Application servers, fixed range. Used by Control Software Application GUIs.
5898	Unit reset port, fixed. Used by Control Software <u>Remote Reset</u> function.
58012	Remote wake-up port, fixed. Used by Control Software <u>Remote</u> <u>Wake Up</u> function.

In addition, the following ports are used for controlling the Network Master with a method other than using the Control Software:

56001 (default)	SCPI server port, user configurable. Used by remote SCPI clients. Refer to Remote Control section for details how to setup.
5900 (default)	VNC (TCP), user configurable. Used by remote VNC clients.
5800 (default)	VNC over HTTP, user configurable. Used by remote VNC over HTTP tunnel clients. Refer to <u>VNC</u> section for details how to setup VNC communication ports.
135, 137, 138, 139, 445	File Sharing, fixed ports.

# 3.5.4 Starting Control Software

- 1. Open Anritsu-MX100001A folder from Start menu.
- 2. Click MX100001A-V\*.\*\*-Remote.


If Windows Security Alert appeared, click Allow access.




Before connecting to the Network Master, confirm that the response from the Network Master is quick enough. If the response from Network Master via the Ethernet network is too late, a connection fails and the message "Network connection is too slow!" appears.

Executing Remote Operation on control PC:

1. If Control Software launched, the initial screen for remote operation appears as below.

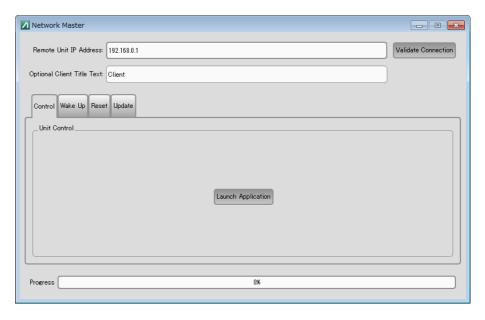

When two or more network interface cards are available, **Use Network Interface** selection appear. Click the field to select a interface.




2. Enter the IP address of the Network Master to Remote Unit IP Address.

3. In **Optional client Title Text**, enter the name of the Network Master. This text is displayed at the title bar of the Control Software and on the button in the <u>resource monitoring</u> screen.

For example, when you enter 'Anritsu', you will see 'Anritsu' on the button in the resource monitoring screen as shown in the figure below.



- 4. Click Validate Connection on the Control Software.
- 5. Clicking **Launch Application** in **Control** tab will display the Network Master screen.

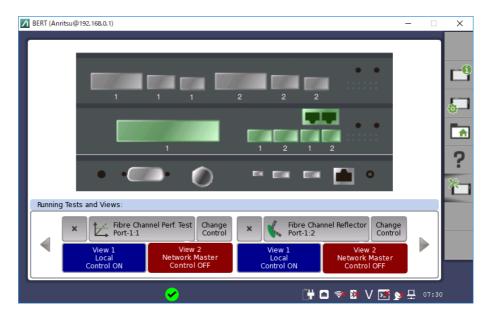




When **Optional client Title Text** is blank or set to the following text, the IP address of the control PC appears in Resource monitoring of the Network Master.

- Client
- ClientName
- Local
- This PC

To exit Control Software, click Close button at right hand top of the window. Power button menu appears, and click **Close**.

# 3.5.5 Remote Upgrade

If the Control Software version differs from that of Network Master, when clicking Launch Application, the software upgrading dialog appears. Upgrade Network Master Software to the version compatible with Control Software.

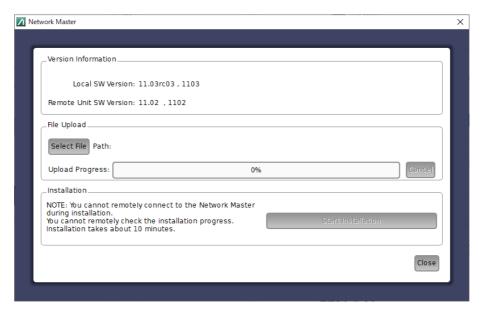

- 1. Click **Select File** to launch the dialog box.
- 2. Select the software file. When you select the folder where you unpacked the installer, the installer file will be selected automatically. Multiple files can be selected by selecting a file while holding down the **Ctrl** key.
- 3. Progress bar shows Upload Progress. Clicking **Cancel** aborts the file uploading.
- 4. After file uploading finishes, click **Start Installation**.



Clicking **Start Installation** will reboot the Network Master. You cannot remotely connect to the Network Master during installation.

You cannot remotely check the installation progress. Installation takes about 10 minutes.

#### 3.5.6 Remote Power Control

#### Power On

If Network Master is in Stand-by mode, it is possible to remotely get the unit into the Operation state.

- 1. Click **Start** > All Programs > Anritsu > MX100001A folder.
- 2. Click MX100001A-V\*.\*\*-Remote.
- 3. On the Control Software startup screen, enter the IP address of the Network Master in the Remote Unit IP Address field.
- 4. Click Start in Wake Up tab.
- 5. After the progress bar reaches 100%, click **OK** in the dialog box.

#### **Power Off**

If the **Allow remote PC shutdown** check box is selected in the <u>Remote Control</u> dialog box, you can remotely set Network Master in Stand-by mode.

1. In the upper-right corner of the MX100001A window, click the Close button.



2. Click Shut Down.

#### 3.5.7 Remote Reset

The Remote Reset function can be helpful if the unit is on a remote site and unexpectedly freezes or becomes unresponsive. The possibility to remotely reset an instrument can be disabled by unchecking the **Enable Remote Reset** check box in the <u>Remote Control</u> options.

To remotely force a reboot the Network Master, specify the Network Master using its serial number.

- 1. On the Control Software startup screen, enter the IP address of the Network Master in the **Remote Unit IP Address** field.
- 2. Enter the serial number in the **Controller SN** field on the **Reset** tab.
- 3. Click **Start** on the **Reset** tab.
- 4. After the progress bar reaches 100%, click **OK** in the dialog box.




Make sure to save measurements and settings before initiating Remote Reset function. The Reset will force the Network Master to reboot. All unsaved or ongoing measurements will be lost.

#### 3.5.8 Stand-alone Editor

MX100001A Editor allows users to load, edit, and save Setup files of any possible Network Master configuration, without connecting to an actual instrument.

- 1. Click **Start** > All Programs > Anritsu > MX100001A folder.
- 2. Click MX100001A-V\*.\*\*-Editor.

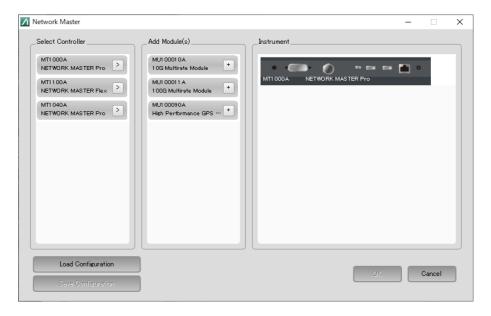

3. Set configuration of Network Master by clicking options in **Select Controller**, and **Add Module(s)**.

To save the configuration, click **Save Configuration**.

- 4. Click **OK**. After a while, the GUI of the selected Network Master configuration appears.
- 5. Select an application on Application Selector. Then, select port resources.
- 6. After the application screen has appeared, select configure settings and measurement parameters.
- 7. Once done, save the setup file by clicking **Load/Save** on <u>Application Toolbar</u>.

Load the Setup File (saved file at step 7 above) saved by the MX100001A Editor on the Network Master by clicking **Load/Save** button on the <u>Application Toolbar</u>. Alternatively, import the settings file as a Favorite, and launch the new application from the <u>Favorites</u> screen on the <u>Application Selector</u>.



If Ref.Port: of Clock Configuration of both Port1 and Port2 are set to "On" by MX100001A Editor, confirm the Ref.Port: setting after loading the Setup file on the Network Master. Actual Ref.Port: setting will be "On" to whichever of Port1 or Port2. Another port setting is changed to "Off".

# 3.6 Command-Based Remote Control

Using command-based scripts makes the Network Master a fully automated measurement instrument.

- The Network Master remote control functions support the built-in Ethernet service interface. Ethernet connectors of test interface do not support remote control functions.
- Software specifications are in conformity with the IEEE488.2 standard and SCPI version 1999 (Standard Commands for Programmable Instruments).

All commands are described in a separate document:

• MT1000A Network Master Pro MT1100A Network Master Flex Remote Scripting Operation Manual (M-W3736AE).



This icon on Status bar indicates whether the Network Master is controlled by the command-based scripts or not. If touching this icon, buttons appear.

Touching the Turn Off button will disconnect the SCPI connection. Use this button if disconnecting the Ethernet cable.


Touching the Enable Local Control button will allow the panel operation with keeping SCPI connection. This function is useful for debugging the control software.

# 3.7 File Access via USB Interface

You can access the mass storage of the Network Master by connecting the USB cable.

This function is useful to copy the files to PC, or confirm the test results.

- 1. Close all applications by touching **Close** icon on the Application Tool Bar.
- 2. Connect the USB cable between PC and USB type B connector of the Service Interface.
- 3. If PC has detected the Network Master, copy files or folders to PC using PC software (Explorer of Windows etc.).

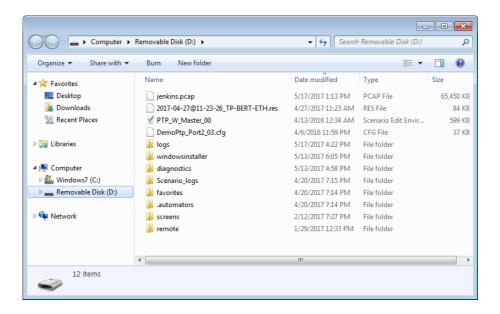




If applications are running on the Network Master, you cannot access the mass storage.

# 3.8 File Access via Ethernet Interface

# 3.8.1 Accessing files in Network Master from the PC

The mass storage of the Network Master can be shared with your PC via Ethernet interface.

- 1. Connect an Ethernet network cable to the LAN connector on your Network Master and link this to a Local Area Network.
- 2. Assign an IP address to the Network Master. This is done in the *Ethernet* available in the <u>Network</u> screen as described in the *Graphical User Interface* chapter.
- 3. Select **Share File System** in the <u>File Sharing</u> settings.
- 4. Start *Explorer* on your PC.
- 5. Enter the IP address of Network Master into the address bar. For example, enter like \\192.168.10.4\. The shared folder appears.

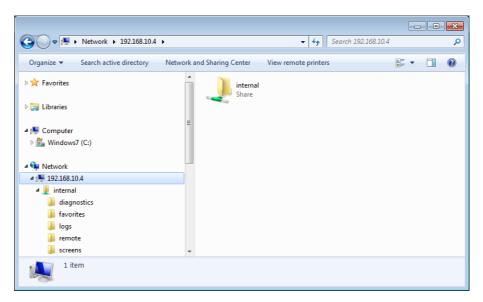




If applications are running on the Network Master, you cannot access the mass storage.


# 3.8.2 Mounting the Shared Folder of Networked PC to the Network Master

Network Master can mount the shared folder of the networked PC. The following procedure is explained, assuming "test" folder is created on the PC.


- 1. Create the folder in the PC.
- 2. Right-click on the folder and click Properties.
- 3. Click the Sharing tab, and click **Share** to set shared.

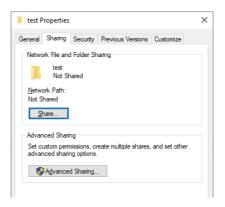

- 4. On the Windows Start menu, click Control Panel.
- 5. Click **System** and write down the domain name.

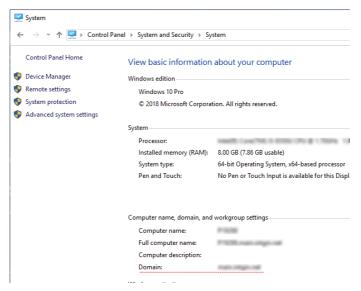


- 6. Click Control Panel Home and click Network and Sharing Center.
- 7. Click Change adapter settings.
- 8. Click the network icon and click View status of this connection.
- 9. In Status dialog box, click Details.
- 10. Record IPv4 address.

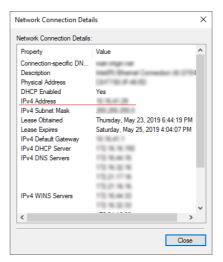


11. Connect an Ethernet network cable to the LAN connector on your Network Master and link this to a Local Area Network.

- 12. Assign an IP address to the Network Master. This is done in the **Ethernet** available in the <u>Network</u> screen as described in the *Graphical User Interface* chapter.
- 13. Select **Mount Remote Folder** in the <u>File Sharing</u> settings.
- 14. Enter the IP address (step 10), domain (step 5), user name, folder name and other information.

Note that enter User name of User Account of the PC.

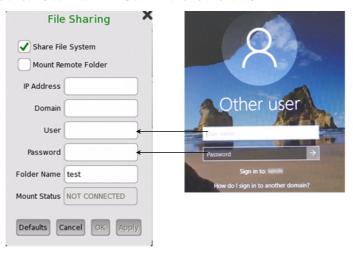

- 15. Touch **Apply**. If the remote folder has mounted successfully, you will see "CONNECTED" is shown at Mount Status. Touch  $\mathbf{OK}$  to close dialog box.
- 16. On Instruments Toolbar, touch File Manager ( ) icon. Now, you can see the shared folder is mounted to Internal\remote.

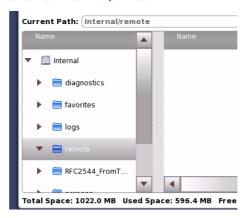

# 3.9 GPS Receiver

### 3.9.1 G0325A GPS Receiver

G0325A GPS Receiver contains GPS antenna and GPS receiver and is used by connecting to AUX connector of Network Master. The synchronization accuracy against UTC is  $\pm 1~\mu$  s or less.

The GPS receiver is used for:

- Precise time synchronization, when making one way Frame Transfer Delay measurements as part of the Ethernet Service Activation Test.
- Clock source in an IEEE 1588v2 system
- Timing source for synchronizing Ethernet transmitters



#### Activating the GPS receiver

The GPS receiver is activated automatically if it has connected to AUX of Network Master.

#### Using the GPS service


One purpose of the external GPS receiver is to provide for precise one way Frame Transfer Delay measurements as part of the Ethernet Service Activation Test.

When the GPS receiver is activated and the active interface is Ethernet, the Network Master will calibrate its internal time base to the ultra precise time signal from the GPS receiver. The calibration process takes approximately 1 minute.

# 3.9.2 Operating GPS Receiver

#### **GPS Icon**

An icon in the status bar will indicate the current GPS status. One of the following icons will be shown:



P GPS receiver is not connected.

Touching the icon will display an information pop-up dialog box.



The pop-up dialog box shows the current GPS status, and, for purely informational purposes, the number of satellites used for position fix, and the current geolocation of the GPS receiver, in degrees and decimal minutes format.

# 3.10 Remote Control via GPIB

Using a J1667A GPIB-USB Converter, an optional accessory, allows users to control Network Master via GPIB. GPIB address of Network Master can be set in the <u>Remote Control</u>.

<u>Command-Based Remote Control</u> is available via GPIB control. MX100001A MT1000A/MT1100A Control Software does not support operation via GPIB.

# 4 Graphical User Interface

This chapter provides a general introduction to the graphical user interface (GUI). The descriptions of the screens, sub-screens and major dialog boxes related to specific technologies and applications are placed in separate chapters.


# 4.1 General Handling of the GUI

The Network Master is equipped with a touch screen display, except for the key to switch the instrument on/off. The operating principle of the graphical user interface (GUI) presented on the touch screen display is that it guides you through all setup steps required for running a specific test and then finally presents you with the test results. You can also navigate back and forth between setup steps and result presentation to re-run a test with new parameter settings if required.

# 4.1.1 GUI Concept

The GUI can be split up into two functional spaces or levels: the *desktop* and the *workspace*.

- The *desktop* is the entry level which appears after the booting. It consists of the *application selector*, which allows you to start a new application, and the *result file browser*, which allows you to access previously created and stored test results.
- The *workspace* is where you work with a specific application (i.e. set up and run a test and inspect the test results). Your selection on the desktop creates the workspace and loads relevant data into it.

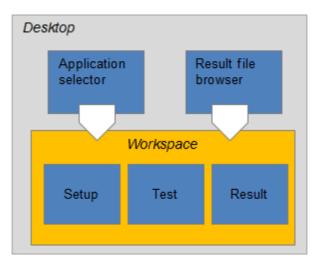

#### Application selector

The *application selector* loads a new application into the workspace. A new application can be either one of the standard applications provided with the instrument or a previously saved application with partial or full configuration of interface/test setup parameters.

#### Result file browser

The *result file browser* loads the results and configuration of a previous test into the workspace. This allows you to do following:

- Creating a report of the result file
- Performing the measurement with same settings as the result file
- Performing the measurement with modified settings from the result file




A specific set of resources (i.e. ports) are assigned to a workspace when it is created. More than one workspace can therefore exist at the same time, each assigned to different resources.

# 4.1.2 Navigating in the GUI

As shown in the figure of "General Handling of the GUI", you can navigate from the application selector to a specific application in the *workspace* vertically. You can navigate between the application selector and the result file browser in the *desktop* horizontally. In this way, you can switch screens in both horizontal and vertical navigation.

#### Horizontal navigation at desktop level

You can switch between the application selector and the result file browser by touching the tab displayed in the bottom right-hand corner and the bottom left-hand corner.




#### Horizontal navigation within a workspace

In the workspace you can step through the setup by touching the navigation tabs displayed in the bottom corners of the screen. The right-hand tab brings you to the next step in the setup, while the left-hand tab allows you to take a step backwards.

Alternatively, you can use the *screen indicator* at the bottom of the screen to switch between ports setup, test setup and test result.




It is also possible to loop back directly to the ports setup from the test result screen if you need to rerun the test with different settings.




#### Vertical navigation between desktop and workspace

When an application is currently running, the application selector screen will contain a tab at the bottom which allows you to go directly to the screen last displayed in the application's workspace. Similarly, the result file browser screen will contain a tab at the bottom which brings you to the test result screen of the running application.



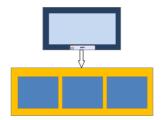


From a setup screen you can return to the application selector using the tab at the top of the screen. Test result screens contain a tab at the top which returns you to the result file browser.

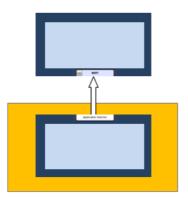

# 4.1.3 Layout of the GUI Screens

 $\textbf{Startup Splash Screen} \ \ \text{The Network Master starts up with a splash screen that shows the GUI concept}$ of desktop/workspace and the various screen types. It indicates both application selector and result file browser as entry points.

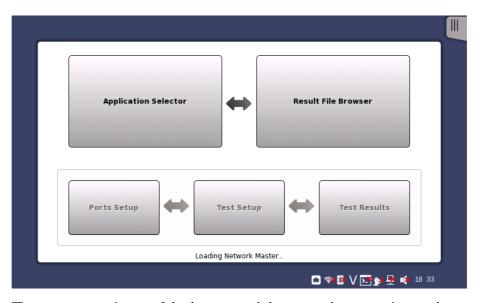

Status icons

There are status icons of the battery and the network connections at bottom of the screen. This blue area at bottom of screen is the "status bar".

When the network connection or the GPS is unusable, the red cross (X) appears on the icon.



Link status of Ethernet service interface



WLAN (when the MT1100A-x03 option is added or a Wi-Fi dongle is connected.)



Bluetooth (when the option is installed.)



VNC (Virtual Network Computing)



Controlled by the remote command



Connection status of GPS receiver



External PC status




Speaker On/Off status

#### 4.1.3.1 Starting the Application


#### **Application Selector**

The **Application Selector** screen is the main entry point after startup of the Network Master. From here you can choose which application/test to run: either one of the standard applications or a previously saved pre-configured application.

#### **Applications**

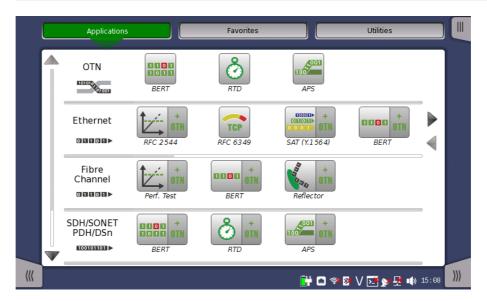







Touching + OTN adds OTN layer for SDH/SONET, Ethernet or Fibre Channel applications.

Aside from the application buttons, the application selector screen also contains a tab for showing/hiding the <u>Instrument toolbar</u> and a navigation tab to the <u>Result File Browser screen</u>.

#### **Favorites**

In Favorites, you can register an application with an associated set of port resources and specific settings. When launching an application registered in Favorites, the associated port resources are automatically allocated and the associated settings are subsequently loaded.

Favorites require a specific number of resources to run corresponding to the number of resources used when the Favorite was first created. If the resources of the Favorite are not available, user is prompted to select alternative port(s).

Touching Favorites button displays the screen below.



#### Creating favorites

- 1. Go to the workspace of the application you want to save as favorite.
  - Touch the **Applications** button and touch an icon to be registered.
  - Return to the workspace by touching the button at bottom.
- 2. Touch the Application toolbar tab.
- 3. Touch the **Load Save** icon.
- 4. Touch the File name field.
- 5. Enter the file name using the dialog box.
- 6. Select Add to Favorites in the Save/Load dialog box.



7. Touch the **Save settings** button.

On the Favorites screen a new favorite is now created containing the current application resources and settings.

#### **Deleting favorites**

1. Touch and hold an icon in Favorites screen until a pop-up menu appears.

- 2. Touch Delete Favorite.
- 3. Touch **Delete** if the confirmation dialog box appears.

#### Renaming favorites

- 1. Touch and hold an icon in Favorites screen until a pop-up menu appears.
- 2. Touch Rename Favorite.
- 3. Input a new name on the opening dialog box.

#### Importing favorites

Settings files (.cfg) can be registered to Favorites by using the File Manager.

- 1. Open File Manager from the Instrument Tool bar.
- 2. Select to the .cfg file to import as favorite.
- 3. Touch the "Add to Favorites" button ( ).



Favorites cannot have the same name. If conflicts occur, rename the .cfg file or the existing favorite before copying.

#### **Utilities**

Applications to view test results or a fiber edge surface are provided in Utilities application.

Touching Utilities button displays the screen below.



#### Scenario


- Scenario Mgr.: manages the scenario file which runs applications automatically. Parameters in the file can be edited.
- If the scenario files are loaded, the icons will appear in Scenario row.

#### Utility

- GPS: logs data from GPS receiver and shows the position of the satellites.
- PDF Viewer: to view PDF files created by Report.
- VIP: to view a fiber edge surface with the Video Inspection Probe (Optional Accessory). This icon appears when Video Inspection Probe is connected to a USB connector.
- Wireshark: to view capture files (pcap) saved by Frame Capture from Ethernet applications.

#### Result File Browser


The Result File Browser screen is the other entry point after startup of the Network Master. From here you can access the results of previous tests to view the statistics directly, to generate PDF reports or to do both. Refer to "Accessing Previous Tests and Test Results".

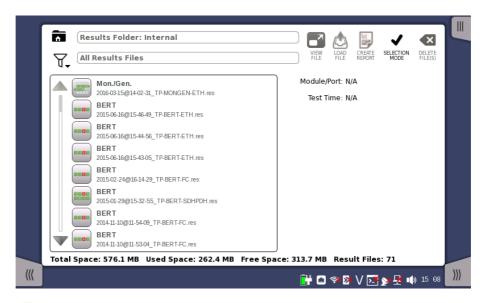





Loads the result and starts the application with view mode.



Creating the report from the result.

Selects single file.


Selects multiple files.

X Deletes the selected file(s).

In addition to the buttons for accessing and handling test results, the result file browser also contains a tab for showing/hiding the Instrument toolbar and a navigation tab to the Application Selector screen.

#### 4.1.3.2 Switching the Applications

Applications Switcher The application switcher area at the bottom of the screen shows the currently running applications and the port number which the application is occupying. You can switch the application to operate by touching the application buttons.

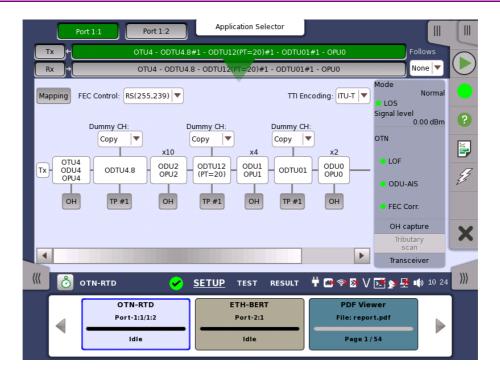

#### 4.1.3.3 Operating the Application

#### Ports Setup screen

The **Ports Setup** screen is the first screen in the workspace. It may contain one or more setup pages, with a row of buttons at the top of the screen allowing you to switch between the pages and between ports.

It consists of several "areas":



• The *navigation area* at the top of the screen contains a number of buttons representing a structure for the current interface, which allows you to select a specific port, transmitter/receiver and layer.

- The *setup area* (the main area of the screen) is where the parameters for setting up the interface are displayed. The contents of the area changes depending on what is currently selected in the navigation area.
- The *status area* (to the right of the setup area) shows status information for the currently selected port and layer. You can access more detailed status information from here by touching the area and icons.




In this manual, the application switcher area is omitted in each figure.

It may contain one or more setup pages, with a row of navigation buttons at the top of the screen allowing you to switch between the pages and between ports. In addition, the **Ports Setup** screen also contains the expandable <u>Application toolbar</u> and the navigation tabs for horizontal and vertical navigation.

**Test Setup screen** 

The **Test Setup** screen is the second screen in the workspace. It may contain one or more setup pages, with a row of navigation buttons at the top of the screen allowing you to switch between the pages and between ports.

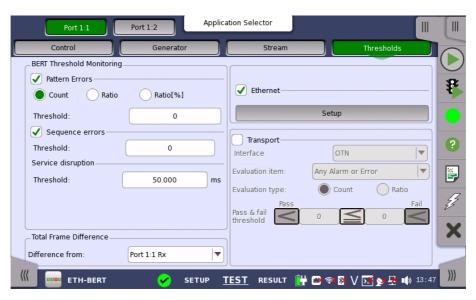


In addition to the various parameters, the **Test Setup** screen also contains the <u>Application toolbar</u> and the navigation tabs for horizontal and vertical navigation.

Test Results screen

The **Test Results** screen is the last screen in the workspace. It generally contains several pages, reflecting the progress of the test. Navigation buttons at the top of the screen will allow you to switch between the pages and between ports.



During a measurement, Measurement start time, Elapsed time, and Remaining time of measurement are displayed in Navigation area. Remaining time of measurement is not displayed if Stop function is set to **Manual stop** in Control screen.



Time display during a measurement

Once a measurement ended, Measurement end time appears right-hand in Navigation area.



Time display after a measurement ended

In addition to the results, whose presentation varies from application to application, the **Test results** screen also contains the <u>Application toolbar</u> and the navigation tabs for horizontal and vertical navigation.

# 4.1.4 Lamp Indication of Alarm/Error Status

Alarm and error status is indicated by colored Lamp icons. The following colors are used:



Red Lamp icon indicates that an alarm has appeared.

Yellow Lamp icon indicates that an error has appeared.

Green Lamp icon indicates a 'no trouble' situation.

Note that the same colors are also used for indication of status in other contexts, e.g. in the display of test results.

### Double-ringed icons with history information

The Lamp icons are double-ringed, with the inner ring indicating the current status and the outer ring showing history information (i.e. alarms and errors in the alarm trap since the last reset/clearing of history).

'Error' situation currently, but alarm recorded previously.

'No trouble' situation currently, but alarm recorded previously.

'No trouble' situation currently, but error recorded previously.

The example below shows the Lamp icons used in a screen displayed by selecting alarm and error status on the ports setup screen.




### 4.1.4.1 Test Status Summary

In the status bar, an icon indicates the summarized Test Status of every running test application excluding file viewers () or utilities. It is possible to show/hide the summarized Test Status, refer to Miscellaneous in "Instrument Toolbar" section. The Test Status for an application is a combination of the following items:

- Thresholds violations
- Alarms/Errors

The following lists the different icons of the summarized Test Status and the their meaning.





One or more applications have alarms, had alarms in the past or have failing thresholds.



One or more applications have errors or had errors in the past.




All applications are OK.



Test Status for an application is only updated during testing. When testing is stopped it will retain its status until testing is restarted or the application is closed.

Touching the summarized Test Status icon will open a dialog box showing the individual Test Status for every running applications. Touching an application on the summary dialog box will dismiss the dialog box and subsequently switch the GUI to the selected application.

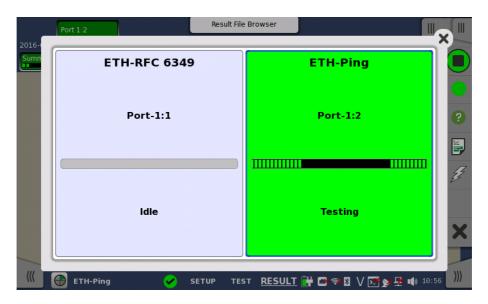

# 4.1.5 Keypads for Entering Text in Fields

Alphanumerical or purely numerical keypads are used to enter text in fields. By touching the field you launch the related keypad. The layout (i.e. type) of a specific keypad will depend on which type of text is required/valid for the field.




In general, a keypad consists of the character/number keys, a display field showing the current text/number entry, various editing-related keys. For number entries, the minimum and maximum values allowed are also shown. When you launch a keypad from a field, the current field value is shown in the keypad's display field.

Touch Ok to accept the new entry and close the keypad.

To close the keypad without accepting the change, touch **Cancel** or touch the "X" symbol in the upper right-hand corner of the keypad.

#### 4.1.6 User Pattern Editor

The 32-bits and 2048-bits user patterns are specified using the **Pattern Editor**. You can view the pattern in either Hexadecimal, Binary or ASCII format and use either a numpad, an ASCII table or a keyboard to set it up.

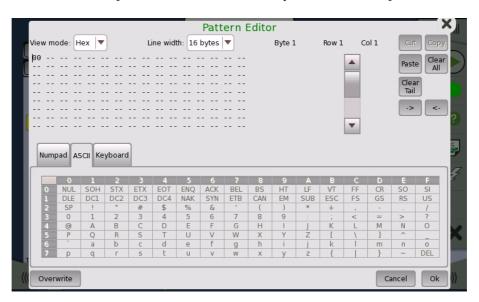


You use the numpad to edit the pattern in the *Hex* and *Bin* view modes, and use either the ASCII table or the keyboard to edit in *ASCII* view mode.

For 2048-bits user patterns, you can use the **Line Width** drop-down menu to specify how the pattern is displayed. The available values are: 2, 4, 8, 16, 32, 64 bytes.

# 4.1.7 Prompts to Confirm Dependencies

When a parameter change spawns changes elsewhere because of dependencies, you are prompted to accept or reject the change(s). A **Confirm Dependencies** dialog box is displayed, with information about the dependency-related changes.

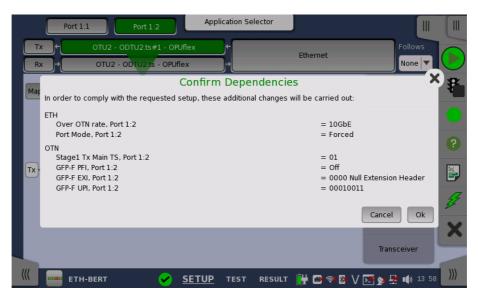

You can switch whether displaying the Confirm Dependencies dialog box. Refer to <u>Miscellaneous</u> in "Instrument Toolbar" section.


# 4.2 Toolbars

Two toolbars are available on the right-hand side of the screen: the desktop toolbar (called the *Instrument toolbar*) and the expandable workspace toolbar (called the *Application toolbar*).

- The <u>Instrument toolbar</u> contains general system functions and information (e.g. Instrument configuration, Battery time etc.). It is available directly on the screens related to the desktop, but can also be accessed on the workspacerelated screens as a "sub-toolbar" inside the application toolbar.
- The <u>Application toolbar</u> contains application-related functions and information (e.g. Start/Stop test, Error insertion etc.). It is available on the screens related to a specific application (i.e. all workspace-related screens), with the *Instrument toolbar* as a sub-toolbar.

# 4.2.1 Instrument Toolbar

The *Instrument toolbar* is shown in the figure below. When the toolbar is hidden, it is represented by its icon tab in the top right-hand corner of the screen.

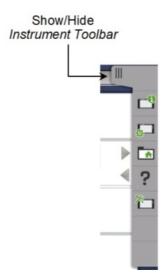


The *Instrument toolbar* contains the following functions/status:

- <u>Instrument Information</u>
- Configuration (General, Network)
- File Manager
- Help
- Resource monitoring

# Instrument information




The *Information* icon launches the **System Information** screen. Touch the **Update About Info** button to generate the instrument information.

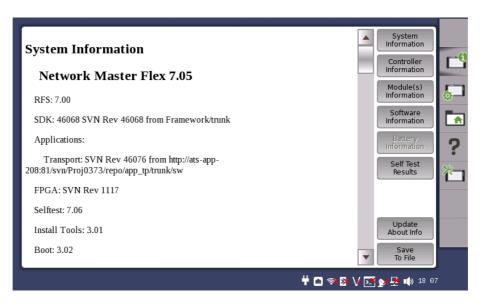

The following information is presented on the screen:

- System Information
- Controller Information
- Module(s) Information
- Software Information
- Battery Information
- Self Test Results

To save the instrument information in an HTML file, touch the **Save To File** button. This launches **Save System information** dialog box, where you can specify file name and location. For the icons, refer to "File Manager".

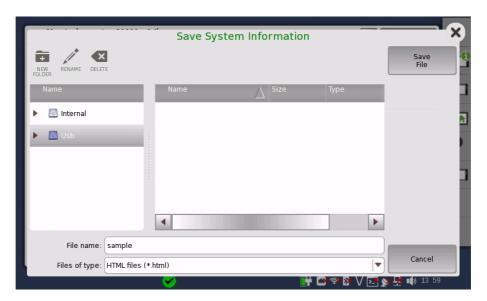



When there are "NG"s in the self test results, try to reboot Network Master. If "NG"s remain in the self test results, contact an Anritsu Service and Sales office.

# Configuration



The *Configuration* icon launches the *Global Configuration* screen. From this screen, it is possible to configure both the general instrument settings (such as date/time, password etc.) and various network settings.

#### General

The **General** screen contains the following configuration options:



#### **LCD Brightness**

Allows you to change the screen brightness by using the slide bar.

#### **Power**

Allows you to specify auto backlight duration and auto power-off time.



These settings are applied for the battery operation only. When Wireshark application is running, **Auto Backlight Off** does not work.

# **Touch Screen Calibration**

Allows you to calibrate the touch screen. Touch OK in the dialog box to start the calibration.





Save the measurement results or settings before the touch screen calibration. Network Master reboots after the touch screen calibration. The measurement data which is not saved will be lost.

When operating with the battery, Network Master does not reboot.

# Language

Allows you to select language for the screens, and the keypad layout.

#### Sound

Allows you to specify speaker and headphones on/off. Change the volume by using the slide bar.



- This icon indicates that the speaker is On.
- This icon indicates that the speaker is Off.

#### **Auto Save**

Allows you to specify saving method of the measurement results.

- Prompt: Confirms saving results or not after a test.
- On: Saves results to the file automatically without notification every time a test ends.
- None: Does not save results. The results data are discarded if you do not save the data manually.

# System Password

Allows you to enable/disable password protection and to specify a new password. When the password protection is enabled, starting applications and editing applications are protected.



To change/set the password, select the one or more check boxes and then touch the **OK** button. A numeric keypad is displayed.




To see the numbers as you type them on the keypad, select the **Display Password** check box.



The password is set to 0614 as factory default.

#### Date/Time

Allows you to change the system date and time. Select a part in **New Time** or **New Date** field and touch the up/down button.

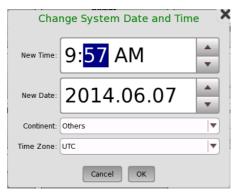

If touching **OK**, the dialog box confirming the reboot appears. Touch **Yes**.



At the battery operation, Network Master does not reboot. Date and Time will be changed when Network Master has booted by pressing the power button.

#### Miscellaneous

**Logging Level** allows you to specify the logging level. Select **Off** always. Other options are used for the service use.

**Show Confirmations** allows you to specify whether showing the prompts to confirm dependencies.

**Show Test Summary** allows you to specify whether to show the summarized Test Status in the Status Bar. Refer to <u>Test Status Summary</u> for more details.

**CSV Delimiter** allows you to specify the delimiter character to be used when generating output of Comma Separated Values.

**Performance Verification Period** is used to calculate the performance validation due dates. Due dates are note calculated if the period is set to zero.

**Enable Auto Power Up** controls whether the Network Master starts automatically when the external power is applied.



# **Restore Applications Defaults**

Touching **Restore Applications Defaults** restores each application settings to defaults.

# **Execute Self Test**

Touching Execute Self Test starts the self test.



Save the measurement results or settings of the running applications before executing the self test. Otherwise, the unsaved measurement data will be lost when Network Master reboots.

When operating with the battery, Network Master does not reboot.

#### **Erase Writable Partitions**

Occasionally it is required to remove all customer data from Network Master such as after instrument rental. Within the settings interface you can format the Network Master internal data area.

Touching **Erase Writable Partitions** erases all writable partitions<sup>\*1</sup> and Initialize to the unit back to factory default<sup>\*2</sup>.

- \*1: Erases all files under Internal folder including the following items.
  - Scenario files included at the time of shipment \*3
  - Scenario files created by users
  - MX100001A installer for Windows\*3
  - Wireshark lua files \*3
  - Screen capture files
- \*2: Initialization of application settings
  Initialization of configuration screen settings (General, Network)
- \*3: These files can be restored by re-installing the operation system installer. Refer to <u>Updating the Software</u> for information on installing the installer.

Network

The **Network** screen contains the following configuration options for the Network Master's network connection:



#### **Ethernet**

Allows the Network Master to be connected to the Ethernet either via dynamic addressing (*DHCP*) or via manual specification of IP address, subnet mask and default gateway. These settings are applied for the <u>Ethernet service interface</u>.




This icon on Status bar indicates the link status of the Ethernet service interface.

#### **WLAN**

Allows the Network Master to connect to a network via Wireless Local Area Network (WLAN). Note that if WLAN is enabled, the Network Master cannot connect to the Ethernet via the Ethernet setting mentioned above.

This feature requires an option (MT1100A-003) or a Wi-Fi dongle. Even with the option added, the built-in WLAN is not available when a Wi-Fi dongle is connected to the Network Master's USB port.

1. Touch the WLAN. WLAN Setup dialog box appears.

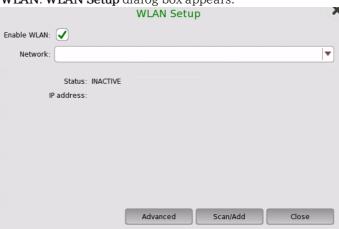


- 2. Touch the Scan/Add. Scan results are displayed.
- 3. Select the network from scan results and touch the **Add Network**.



4. Enter the password and touch the **OK** button. Use only ASCII characters in the SSID field.


Sample Network

SSID: Sample Network

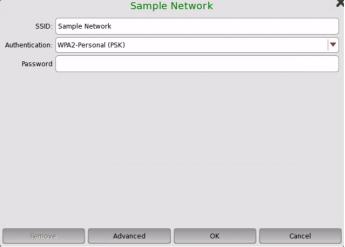

If backslashes (\) and double quotes (") are used in the SSID name, the **WLAN** Setup dialog box displays them with a backslash as  $\$  and  $\$ " respectively when the Network Master connects to the network.


5. Confirm that Status in WLAN Setup dialog box changes to COMPLETED.

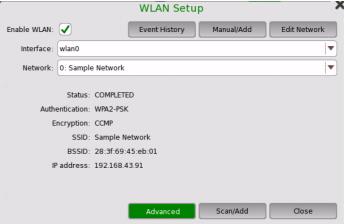

When the MT1100A-003 option is added or a Wi-Fi dongle is connected, the Status bar displays this icon, which shows the WLAN connection status.

To edit the settings of the current network, touch the **Edit Network** button.

Touch **Advanced** to check the parameters in details and edit the advanced settings such as encryption method.

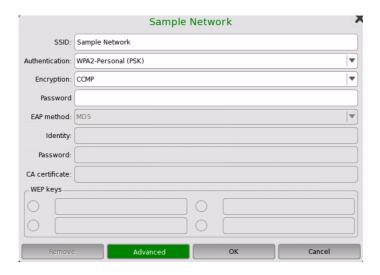

#### **Bluetooth**

Allows the Network Master to use a Bluetooth connection.




This feature requires an option (MT1100A-003). Even with the option added, Bluetooth is not available when a Wi-Fi dongle is connected to the Network Master's USB port.



- Enable Bluetooth: Enables using the Bluetooth.
- Make visible: Allows to discover Network Master from other Bluetooth devices.
- Share files using FTP: Allows to share files stored in Network Master via Bluetooth. Login account and password are not required for the FTP connection. Shared folder in Network Master is "/property/mnt/internal".
- When the option is installed, this icon on Status bar indicates whether the Bluetooth is enabled or disabled.

#### Remote Control

Allows you to change remote control options.

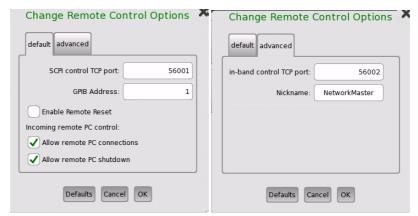


- **SCPI control TCP port**: Touch the field to set port number used for remote control via Ethernet <u>service interface</u>.
- **GPIB Address**: Touch the field to set General Purpose Interface Bus (GPIB) address.

- Enable Remote Reset: Selecting the check box allows users to reset the Network Master from remote PC.
- Allow remote PC connections: Selecting the check box allows users to control the Network Master via Ethernet from remote PC.
- Allow remote PC shutdown: Selecting the check box allows users to shut down the Network Master via Ethernet from remote PC.
- In-band control TCP port: Touch the field to set a port number used for the remote control via the <u>test interface</u>. Set a different number from the number set at SCPI control TCP port.
- **Nickname**: Touch the field to set a name of Network Master recognized by <u>Discovery</u> that is the Ethernet application.



#### **VNC**


Allows remote control of the Network Master via Virtual Network Computing (VNC).

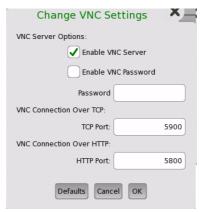

This icon on Status bar indicates whether the VNC is enabled or disabled. Touching this icon enables or disables the VNC alternately.

#### File Sharing

Select **Share File System** to allows to share the data folder on networked PC. Selecting **Mount Remote Folder** enables the parameter fields for mounting the folder of networked PC.

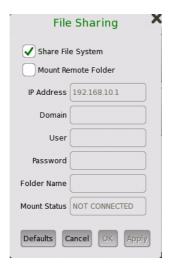

- IP Address: The IP address of the networked PC
- Domain: The domain name of the networked PC

- User: The username (account) of the networked PC
- Password: The password for account
- Folder Name: The name of the shared folder on the networked PC

After entering parameters, touch **Apply**. If mounting remote folder succeeded, "CONNECTED" will be shown in **Mount Status** field.



Only enter the name of the shared folder, not the entire path shown in Windows displays.

Procedure of creating the shared folder on the networked PC:

- 1. Create a folder on the PC.
- 2. Right-click on the folder and click Properties.
- 3. On the Sharing tab, click **Share** to share the folder.


The PC shared folder will be mounted to the Internal\remote folder of the Network Master.



File sharing may not be available if it is limited by Windows features settings for your PC.

For example, in case of Windows 10 Fall Creators Update (version 1709), the **Mount Remote Folder** check box is not available for security reasons. Though there is an increased security risk, you will be able to use the **Mount Remote Folder** feature according to the following procedure:

- 1. On the Windows Start menu, click **Control Panel**.
- 2. Click Programs and Features.
- 3. Click Turn Windows features on or off.
- 4. Select the SMB 1.0/CIFS File Sharing Support check box, and then click OK.

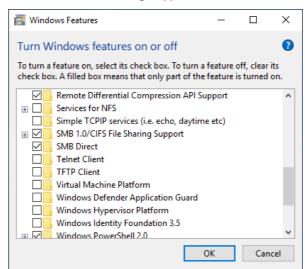


5. Restart Windows.

#### File Manager



The *File Manager* icon launches the file manager screen. From this screen it is possible to configure the instrument's internal file storage facility as well as to perform all kinds of file transactions, both internally and from/to any external file storage source (USB flash drive etc.).

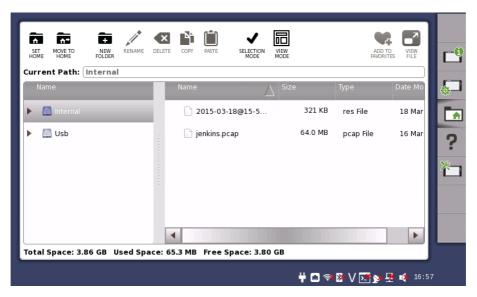

- Appears on the remote control application screen only. Displays the local folder of the control PC.
- Appears on the remote control application screen only. Displays the folder of the Network Master.
- Sets the current folder to the home folder.
- Moves to the home folder.
- Creates a new folder.
- Edits the file name or the folder name.
- Deletes the selected file(s) or folder(s).
- Copies the selected file(s) or folder(s).
- Pastes the file(s) or folder(s).
- Selects a file or a folder.
- Selects multiple files or folders.
- Switches the GUI layout.
- Adds the selected files (.cfg) to "Favorites".
- Shows contents of a text file.



#### Help

The *Help* icon launches the help screen with context-related help. You can search for specific words or phrases in the help and also step through previously displayed help topics.










Shows/hides the search box and buttons at bottom.

Searches backward.




When **Case Sensitive** is selected, searches distinguishing the upper case and the lower case.

# Resource monitoring



The **Resource monitoring** icon launches a screen showing which applications are currently activated and which ports on the connector panel are assigned to each of the applications.

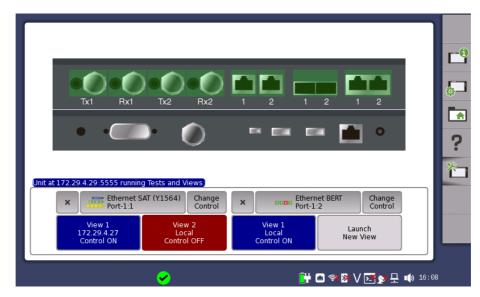


Each application is associated with up to two Views, Only one View can have control at a time. Having control gives user full access to all application functions, including modification of setting parameters, load and save functions, and running the test. Without control, users are only allowed to browse the current application settings and results.

- Touch Launch New View button to launch a new View.
- Touch the **Change Control** button to pass control between Views:
  - Red background indicates a View that does not have control.
  - Blue background indicates the View in control.
- Touching a View local to you, will automatically show the desktop of the associated application.
- Touch the 'X' to force termination of an application and its Views and the release of the associated port resources. This is the only way to terminate an application over which you do not have control.

When the Network Master is being controlled by Control Software, the text set in **Optional client Title Text** of the Control Software is displayed on the button.

# 4.2.2 Application Toolbar

The *Application toolbar* consists of two columns plus the *Instrument toolbar*. You can expand/collapse the toolbar as shown in the figure below. The leftmost column, which is always displayed, contains the most commonly used functions and status indicators.

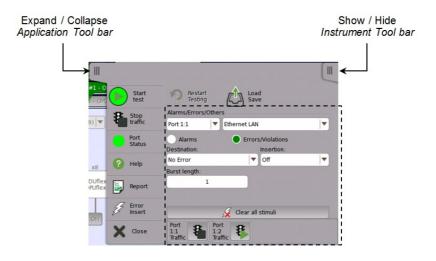

#### Left-most column

The left-most column contains the following functions and status indicators:

#### Start



Touch the **Start** icon to start the currently selected application/test. The icon changes to the **Stop** icon shown below, which can then be used to stop the test.

# Stop



Touch the **Stop** icon to stop the currently running application/test. The back color indicates the pass/fail status. When the test has stopped, the icon changes to the **Start** icon shown above.

# **Traffic Start**



This icon appears in case of applications having traffic generation. Touch the **Traffic Start** icon to start sending traffic of all ports under test. The icon changes to the **Traffic Stop** icon shown below.

#### **Traffic Stop**




This icon appears in case of applications having traffic generation. Touch the **Traffic Stop** icon to stop the traffic of all ports under test. When the traffic has stopped, the icon changes to the **Traffic Start** icon shown above.

#### **Port Status**



Shows the current pass/fail status of the test. *Green* means pass, *red* means fail.

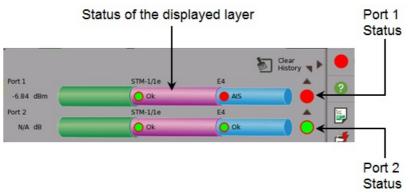


Port Status is the summary of all ports under test. If a failure occurs in any layer, Port Status turns into red.

#### Help



Touch this icon to access the online help for the currently displayed screen or dialog box. You can search for specific words or phrases in the help and also step through previously displayed help topics.

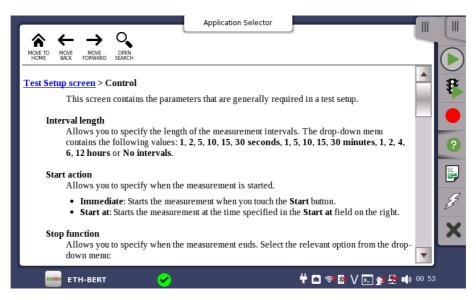



Moves to the topic when touching the help icon.



Back



Forward



Shows/hides the search box and buttons at bottom.



Searches backward.



Searches forward.

If **Case Sensitive** is selected, searches distinguishing the upper case and the lower case.

# Report




Touch this icon to create a report containing the current application results and settings.

1. Touch the **Select Format** field to select the format of the report file. The application name is shown in **Select Report** field.



- 2. Touch fields of **Customer**, **Project**, **Operator** and **Notes** to set strings. These contents are output in the report.
- 3. To print a logo in the report, select the **Include Logo** check box. Touching ... button launches the dialog box selecting a file.
- 4. Select **Include Performance Verification dates** check box to print Performance Verification dates in the report.
- 5. Touch **Next** button.

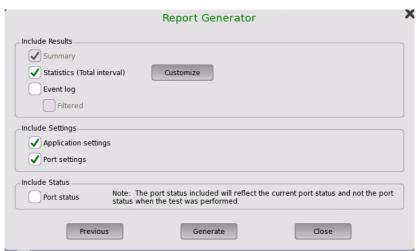

- 6. Select check boxes of items outputting to the report. Touching **Customize** button launches the dialog box selecting items of statistics.
- 7. Touching **Generate** button starts the report generation.



Adobe® Reader® is recommended as a PDF viewer to open or print out the report.

"Include Performance Verification dates" check box appears in version 3.01 or later. If the Performance Verification dates on PDF report are blank, execute Self Test on the General screen. Performance Verification dates will appear on the PDF report created after executing the self test.




Creating reports from the Result File Browser will not take up port resources on the system. From the Result File Browser, select the result file for which you want to create a report and touch the Report icon ( ).



The Report Generator will remember previous used setup parameters. The first page is common for all applications while setup parameters on subsequent pages are remembered on a per application basis.

#### Alarm/Error Insert



The color of the icon is coded according to the current level of stimuli inserted. The different levels are prioritized so that higher levels of stimuli overrule lower levels. The overall highest stimuli level (see the list below) for all ports included in the application is reflected.



Red: Alarms are currently being generated. (highest level)



Yellow: Errors are currently being generated.

Green: No alarms/error are automatically inserted.



Active stimuli require manual insertion by touching the **Alarm/Error Insert** 



Blue: Frequency, Pointer, or Payload offset stimulus is currently applied. (lowest level)



White: All stimulus is disabled.

# Close



Touch this icon to close the application.

# **Expanded Application toolbar**

The *Application toolbar* is expanded/collapsed by touching the tab placed above the left-most column. The column displayed in the expanded toolbar contains the following functions:

#### Restart Testing



Touch this icon to restart the current test.









#### **Load Save**

Touch this icon to open Load/Save dialog box. You can load or save Setup file or Result file. Only files matching the current application type are selectable for loading.

When loading setup files, the number of port resources enclosed in the file has to match that of the current application.

When loading result files, the exact physical ports enclosed in the file has to match that of the current application.

Apart from actual results, result files also contain settings sampled at the time the test was performed. When loading result files these settings will overwrite current application settings.


Loading result files into a viewer will not take up port resources on the system. This is practical if you only want to review previous results and don't need to run test again. From the Result File Browser, select the result file you want to view and touch the View icon ( $\square$ ) at right hand top of the screen.

#### Stimuli setup

Various fields and buttons are available for setting up a stimulus signal to provoke a special or abnormal situation during the test. When the signal has been specified, the stimulus is sent by touching the Alarm/Error Insert icon (



The stimulus signal is sent via the transmitter, and the received signal can simultaneously be inspected as a related status or result display. This allows to evaluate the behavior of the device under test.

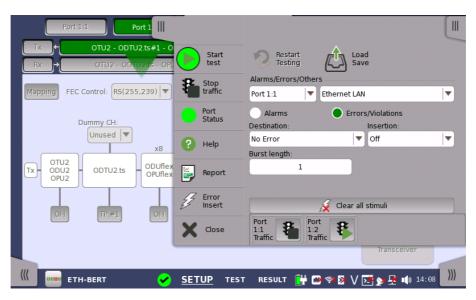

The setup options vary depending on the stimulus mode (i.e. the signal type). Common functions for all stimulus modes are the port selection and stimulus type drop-down menus. Touching the Clear all stimuli button clears/resets the current stimulus settings.

In case of applications having traffic generation, the Traffic start button or the Traffic stop button appears for each port.

# 4.3 Startup and Switch-off Sequences

This section describes what takes place when you switch the Network Master on and off as well as when you start up and close down an application.

# 4.3.1 Instrument Startup


When you turn on the Network Master, the first screen displayed is a splash screen - introducing you to the GUI concept of the *desktop/workspace* and the various screen types (see the figure in the *GUI Concept* section). Then the <u>Application Selector</u> screen is displayed.

# 4.3.2 Application Startup

When you touch an icon on the *Application Selector* screen to start an application, a *workspace* is created for that application and the relevant data is loaded into it. When the loading is complete, you are prompted to select the instrument resources (i.e. ports) that will be allocated to the application/test.



After the selection of resources, the *Ports Setup* screen is displayed, with the interface type(s) relevant for the selected application.





You can also start an application by selecting the result file on the *Report File Browser* screen. Refer to <u>Accessing Previous Tests and Test Results</u>.


#### **Enable two ports**

When you touch an icon of the application using OTN layer, the **Enable two ports** check box appears according to the module. Selecting the check box allows users to select both ports. However there are restrictions on the ports settings. For the details, refer to Restrictions for using two ports.



# 4.3.3 Accessing Previous Tests and Test Results

When you select test result files on the *Report File Browser* screen, you can choose to create either a report from the results or a *workspace* containing the test setup data and its results.

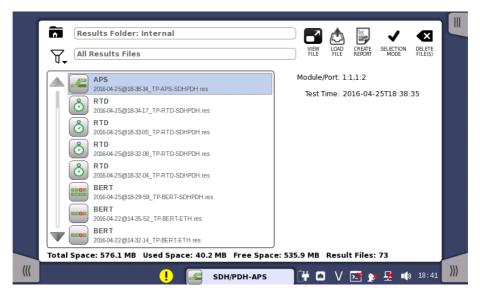

Creating a *workspace* for a previous test allows you to view the test results in the GUI and also to rerun the test if required (either with the same setup or with changed parameter settings). You are brought directly to the *Test Results* screen when you touch the **VIEW FILE/LOAD FILE** button, but can navigate to the other screens in the workspace from there.



When you touch the **VIEW FILE** button, an application starts in *Viewer* mode. In this mode, you cannot start measurement. This mode is used to view the test result.



When you touch the **LOAD FILE** button, an application starts using the setting in the file. If other application is using ports, the following message appears. You can start the application in *Viewer* mode by touching **Yes**.





When you touch the  $CREATE\ REPORT$  button, the file manager dialog box is displayed, allowing you to name and save the report (in PDF format).

# 4.3.4 Closing an Application

When you touch the **Close** icon ( in the *application toolbar*, you are prompted to confirm that you really want to close the current application. If you touch "Yes", the *application* is closed and you are returned to the *Application Selector* screen. The resources previously allocated to the application are freed to be used by another application.

# 4.3.5 Switching Off the Instrument

When you press the <u>Power button</u> on the front panel, the power-off menu is displayed. The menu contains the menu item **Shut Down**, and when you touch that, you are prompted to confirm that you really want to switch off the Network Master completely.

If you touch "Yes", the shutdown is announced, and then after a few moments the power is turned off.



If you have any applications still active when you switch off the Network Master, these applications will be closed automatically without any configuration data and test results being saved.

# 5 SDH/SONET/PDH/DSn Applications

This chapter describes the graphical user interface (i.e. screens, sub-screens and major dialogs) related to SDH/SONET/PDH/DSn applications.

The following settings and applications are available:

- SDH Setup and Status
- SONET Setup and Status
- E1 Setup and Status
- DS1/J1 Setup and Status
- E3 Setup and Status
- DS3 Setup and Status
- E4 Setup and Status
- APS
- BERT
- RTD



You can switch between SDH and SONET using the <u>'SDH/SONET switching'</u> drop-down menu on the SDH and SONET structure setup screens. 'SDH and SONET switching' also switches PDH and DSn.

# 5.1 SDH Setup and Status

An **STM-xx** button in the navigation area of the <u>Ports Setup</u> screen gives you access to the SDH setup for the transmitter and/or receiver of the currently selected port.

Refer to <u>SDH/SONET switching</u> for switching to SDH.

Synchronous Digital Hierarchy (SDH) is a standardized protocol that transfers digital signals over optical fiber using lasers. At low transmission rates data can also be transferred via an electrical interface.



The SDH interface uses the electrical BNC connectors and the optical ports.



MU110010A Connector Panel



MU110011A Connector Panel

For MU110012A and MU110013A, only the SDH applications over OTN are available. For usable connectors, refer to  $\underline{\text{OTN Setup and Status}}$  in "OTN Application".

# 5.1.1 Transmitter Setup

# 5.1.1.1 Physical Setup

When the transmitter is set up with an SDH interface, touching the Tx button in the navigation area will launch the following screen. (Note that the SDH Tx check box above the connector panel illustration is selected.)



This screen allows you to enable the optical or electrical interface of the SDH transmitter. It can also be used to confirm the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in "Status Summary".

#### Transmitter

Use the Transmitter drop-down menus to select to the transmitter.

# Mode


Use the Mode drop-down menus to select to the behavior of the transmitter.

#### OH overwrite position

Only enabled when the **OH overwrite** has been selected to the behavior of the transmitter. Use the drop-down menu to select the relevant overwrite position. The available values are:

- SOH
- A1/A2 byte
- K1/K2 byte
- S1 byte
- DCC1-3 byte
- DCC4-12 byte
- J0 byte
- 1 byte of SOH

When '1 byte of SOH' is selected, touch the Byte Pos button to launch the 1 Byte of SOH dialog box. Select the byte to overwrite in the dialog box.

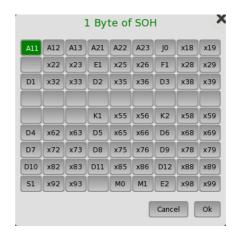

#### **Clock Configuration**

Use the drop-down menu to select the clock source. This is fixed to **Received** when the Port Mode is set to **Through** or **OH overwrite**.

#### **Timing Source**

Internal: Internal clock of the module
External: The clock input to the connector

Received: The clock generated from the received signal

Ref.Port

Switches the reference clock output on/off. If setting to **On**, the reference clock is output to "Tx Ref Output" connector on the module panel.

Rate

Switches the divide rate of the reference clock.



Under the following condition, Tx reference clock is not output to the panel connector.

- When STM-16 is selected and the Rate is set to 1/64
- When STM-1 or STM-4 is selected

When **External** or **Received** is set, the right hand lamp indicates whether clock is detected or not.

Transceiver


Displays the Transceiver information when the option except "Electrical" is selected to the transmitter.

Multi lane mapping

In case of STM-256, the **Lane Mapping** button appears. Refer to <u>Multi lane</u> mapping in "Ethernet Setup and Status".

# 5.1.1.2 SDH Frame Setup

Touching the navigation area button which represents the transmitter's SDH layer will launch the following screen.

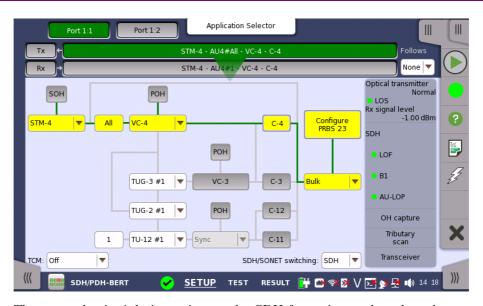

The general principle in setting up the SDH frame is to select the relevant values for the various containers in the multiplexing structure. This is done either via a drop-down menu or via a launched dialog box, by touching a drop-down menu or a button in the frame structure diagram.

Note that the currently 'active path' in the structure is highlighted. Note also that the changes you make will be reflected in the text displayed in the **STM-xx** button in the navigation area, if relevant.

**Follows** 

To make the Port 2 transmitter follow the Port 1 transmitter (i.e. copy its settings), touch the right-most button in the navigation area and select the Tx1 in the drop-down menu. The Port 2 settings continue to follow the Port 1 transmitter change. The default setting is **None**. Note that the Port 1 transmitter cannot follow the Port 2 transmitter.

When using two modules, the transceiver settings follows left Port 1 settings on the Navigation Area if selecting Tx1.

**TCM** 

Select the *TCM* (Tandem Connection Monitoring). The available TCM is decided by multiplex structure. If you select other TCM, the multiplex structure on the setup area will be changed.

The possible settings are:

Off

N1 (VC-4)

N1 (VC-3)

N2 (VC-12/11)

SDH/SONET switching

Allows you to switch between SDH and SONET.

**SOH Editor** 

You can configure the section overhead (SOH) in a special dialog box (SOH Editor), which is launched when you touch the SOH button.



The setup principle is the same in this editor dialog as in the SDH structure. Touching a button or opening a drop-down menu will open for new editor dialog boxes, new value selections etc.


- S1: Synchronization status
- **J0**: Regenerator section trace

  Idle Char is an ASCII code used for the padding.
- A1, A2: Framing

Defined A1 as F6h (1111011b), A2 as 28h (00101000b).\*

- B1: BIP-8 (Bit Interleaved Parity) This byte cannot be set.
- E1, E2: Orderwire E1 is part of the RSOH, E2 is part of the MSOH.
- F1: User channel
- D1-D3: RS (Regenerator Section) data communication channel (DCC<sub>R</sub>)
- D4-D12: MS (Multiplex Section) data communication channel (DCC<sub>M</sub>)
- **B2**: BIP-N×24 These bytes cannot be set.
- K1, K2(bit 1 to bit 5): Automatic protection switching (APS) channel
- **K2**(bit 6 to bit 8): MS-RDI (Multiplex Section Remote Defect Indication)
- MO, M1: MS-REI (Multiplex Section Remote Error Indication)
- **Z2**: Spare byte
- H1, H2, H3: AU-n pointer These bytes cannot be set.

This editor format is the same as SOH of STM-1. For STM-4/16/64, SOH bytes in other column are filled with value set by the editor. In case of STM-4 SOH in following figure, you can edit A1A2 bytes in thicker lines cell. The bytes in gray cell are filled with the value in left side cell in thicker lines.



\*: For STM-256, SOH Editor can edit each three bytes both side of the boundary of A1 bytes and A2 bytes. The other A1A2 bytes in gray cell are fixed to F6h or 28h.


•	2304 bytes															$\rightarrow$								
									A1		A1	A1	A1	<b>A1</b>	A2	A2	A2	A2	 A2					

#### **POH Editor**

Touching a **POH** button launches the **VC-x POH Editor** dialog box. The contents of the dialog box depends on which path overhead you are configuring.




- J1: Path Trace
  Idle Char is an ASCII code used for the padding.
- **B3**: Path BIP-8 This byte cannot be set.
- C2: Signal label
- G1: (bit 1 to 4) REI (bit 5) RDI (bit 6 and 7) Reserved (bit 8) Spare
- F2,F3: Path user channels
- **H4**: Multiframe indicator
- K3: (bit 1 to 4) Automatic protection switching (APS) channels (bit 5 and 6) Spare (bit 7 and 8) Data link
- N1: Network operator byte

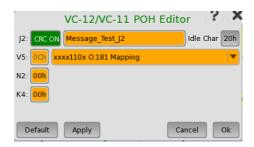

- J2: Path Trace
  Idle Char is an ASCII code used for the padding.
- V5: (bit 1 and 2) BIP-2 (bit 3) REI (bit 4) RFI (bit 5 to 7) Signal label (bit 8) RDI
- N2: Network operator byte
- **K4**: (bit 1) Extended signal label (bit 2) Low order virtual concatenation (bit 3 and 4) Automatic protection switching (APS) channels (bit 5 to 7) Reserved (bit 8) Data link

#### **Bulk Pattern**

To set up the bulk pattern, touch the **Configure xxxxx** button to launch the **Bulk Pattern** dialog box.

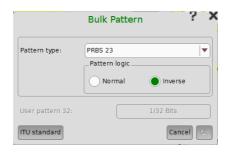

# Pattern type

Select a predefined pattern or define a user pattern.

- User [32] bit, User [2048] bit: 32 bits or 2048 bits length pattern. The field which shows bit length is enabled. Touch the field to launch the dialog box to define the bit pattern. Refer to <a href="The User Pattern Editor">The User Pattern Editor</a>.
- PRBS9 to PRBS31: Pseudo-random bit sequence. The number indicates the bit length of sequence.

For example, bit length of PRBS9 is  $2^9$ -1=511.

Pattern logic is enabled.

- All 0's, All 1's: All bits are 0, all bits are 1.
- Alternating 1:1, Alternating 1:3, Alternating 1:7: Bit pattern such as "010101...", "100010001000...", "1000000010000000...".
- 2 in 8: Bit pattern such as "010000100100001001000010...".

#### **ITU Standard**

Touching the 'ITU standard' button will apply standard recommended **Pattern type** for currently selected SDH frame.

- C-4 (STM-256): PRBS 31 Inverse
- C-4 (Except STM-256): PRBS 23 Inverse
- C-3 (VC-4): PRBS 23 Inverse
- C-3 (VC-3): PRBS 15 Inverse
- C-12: PRBS 15 Inverse
- C-11: PRBS 15 Inverse

# 5.1.2 Receiver Setup

# 5.1.2.1 Physical Setup

When the receiver is set up with an SDH interface, touching the Rx button in the navigation area will launch the following screen. (Note that the SDH Rx check box above the connector panel illustration is selected.)



This screen allows you to make the physical setup of the receiver in SDH mode. It can also be used to confirm the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

Receiver

Touch the button corresponding to the relevant interface type.

- Off: No interface
- SFP/SFP+: Optical interface
- Electrical: Electrical interface (BNC connector)
- CFP: Optical interface for STM-256 (MU110011A only)

# Receiver gain

Only relevant for electrical receivers. Select the attenuation and impedance mode from the drop-down menu.


- Terminate: Up to 12 dB cable attenuation, nominal impedance
- Monitor: 20 dB linear attenuation and up to 12 dB cable attenuation, nominal impedance.

#### **Transceiver**

Displays the Transceiver information when Optical Transmitter is selected.

#### 5.1.2.2 SDH Frame Setup

Touching the navigation area button which represents the receiver's SDH layer will launch the following screen.

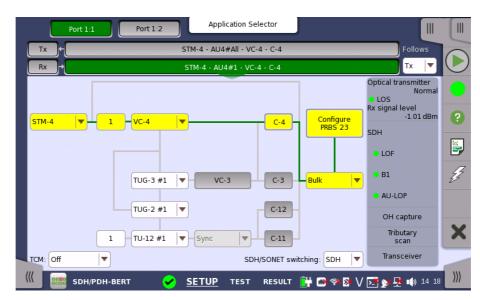

The manner of setting up the SDH interface of receiver is the same as that of transmitter. Refer to <u>SDH Frame Setup</u> in "Transmitter Setup".

**Follows** 

To make the currently selected receiver follow either the transmitter or Port 1 receiver (i.e. copy its settings), touch the right-most button in the navigation area and select the relevant value in the drop-down menu. The receiver settings continue to follow the change of either the transmitter or Port 1 receiver. The default setting is **None**. Note that the Port 1 receiver cannot follow the Port 2 receiver.

When using two modules, the receiver settings follows left Port 1 on the Navigation Area if selecting Rx1.

**TCM** 

Select the *TCM* (Tandem Connection Monitoring). The available TCM is decided by multiplex structure. If you select other TCM, the multiplex structure on the setup area will be changed.

The possible settings are:

Off

N1 (VC-4)

N1 (VC-3)

N2 (VC-12/11)

SDH/SONET switching

Allows you to switch between SDH and SONET.

#### 5.1.3 Status Information

This section describes the status information available for the SDH layer in the status area of the **Ports Setup** screen.

# 5.1.3.1 Status Summary

The status summary displayed for the SDH layer consists of the following information:

#### **Physical Status**

The topmost part of the status area gives you access to information about the current physical status of the selected interface. A summary consisting of the most relevant status indicators is displayed constantly. By touching the summary, you can launch a display that contains the detailed status information.

#### Alarm/Error Status

The middle part of the status area gives you access to alarm and error information for the selected interface. The status is indicated by the lamp color.

A summary consisting of the most relevant alarm/error indications is displayed constantly. By touching the summary, you can launch a display that contains all alarms/errors.

# Capture/Monitor Status

At the bottom of the status area are below buttons that give you access to various capture/monitor information. By touching a button, you can launch the corresponding information display.

- OH capture
- Tributary scan
- Transceiver

#### 5.1.3.2 Physical Details

Touching the topmost summary box in the status area of the **Ports Setup** screen launches the dialog box shown below.



This dialog box presents detailed information about the current physical status of the received signal at the STM-1/4/16/64/256 optical/electrical interface.

The physical status information consists of the following parameters.



When Receiver is set to OFF, 'N/A's are displayed.

#### Rx signal level

• Signal Level (Optical) shows the optical signal level in dBm.

• Signal Level (Electrical) shows the electrical signal level in dB.

'nan' is displayed when input level is too low to detect the signal level. The lamp indicates LOS status.

#### Deviation

This field shows the deviation from the relevant nominal bit rate:

- STM-1/1e: 155 520 000 bps
- STM-4: 622 080 000 bps
- STM-16: 2 488 320 000 bps
- STM-64: 9 953 280 000 bps
- STM-256: 39 813 120 000 bps

#### Bit rate

The current bit rate is shown (in bps).

#### Pattern bit rate

This field shows the effective bit rate of the patterns received (that is, the number of pattern bits received per second).

# Tx signal level

When optical is selected, this field shows the output power of the optical transmitter.

When electrical is selected, 'N/A' is displayed.

In case of STM-256, STL Alarms and STL Errors appear.

STL means Synchronous Transport Lane.

#### STL Alarms

- ILA/OLA: Shows the lane alignment process. Green indicates ILA (In-lane alignment). Red indicates OLA (Out of lane alignment).
- LOF(Second): Loss of frame is detected.
- OOF(Frame): Out of frame is detected.
- LOR(Second): Loss of recovery is detected.
- OOR(Frame): Out of recovery is detected.

# STL Errors

• A1A2-STL: Errors are detected in A1 bytes or A2 bytes of STL.

# 5.1.3.3 Alarms and Errors

Touching the middle summary box in the status area of the **Ports Setup** screen allows you to launch the display shown below.



This screen contains detailed alarm and error information related to the SDH interface. Status is indicated by the use of <u>colored Lamp icons</u>.

# Alarms

- LOS: Loss of Signal
- LOF: Loss of Frame
- OOF: Out of Frame
- MS-AIS: Multiplex Section Alarm Indication Signal
- MS-RDI: Multiplex Section Remote Defect Indication
- AU-AIS: Administrative Unit Alarm Indication Signal
- AU-LOP: Administrative Unit Loss of pointer
- HP-TIM: High order Path Trace Identifier Mismatch
- HP-PLM: High order Path Payload Mismatch
- HP-UNEQ: High order Path UNEQuipped
- HP-RDI: High order Path Remote Defect Indication
- TU-AIS: Tributary Unit Alarm Indication Signal
- TU-LOP: Tributary Unit Loss of pointer
- TU-LOM: Tributary Unit Loss of Multiframe
- LP-TIM: Low order Path Trace Identifier Mismatch
- LP-UNEQ: Low order Path UNEQuipped
- LP-RDI: Low order Path Remote Defect Indication
- LP-PLM: Low order Path Payload Mismatch
- LSS: Loss of Sequence Synchronization
- TC-UNEQ: Tandem Connection UNEQuipped
- TC-LTC: Tandem Connection Loss of Tandem Connection
- TC-TIM: Tandem Connection Trace Identifier Mismatch
- TC-AIS: Tandem Connection Alarm Indication Signal
- TC-RDI: Tandem Connection Remote Defect Indication
- TC-ODI: Tandem Connection Outgoing Defect Indication

## Errors

- A1A2: Bytes used for the frame synchronization
- B1: The byte of BIP-8 (Bit Interleaved Parity 8)
- **B2**: The bytes of BIP-N×24 (Bit Interleaved Parity N×24)
- MS-REI: Multiplex Section Remote Error Indication
- B3: The byte of BIP-8 (Bit Interleaved Parity 8)

- HP-REI: High order Path Remote Error Indication
- V5/B3: BIP-2 of VC-12/VC-11 or BIP-8 of Low order VC3
- LP-REI: Low order Path Remote Error Indication
- Pattern errors: Bit error detected in the payload
- AU-NDF: Administrative Unit New Data Flag
- TU-NDF: Tributary Unit New Data Flag
- Switch: APS switching occurred
- TC-IEC: Tandem Connection Incoming Error Count
- TC-BIP-2: Tandem Connection Bit Interleaved Parity-2
- TC-REI: Tandem Connection Remote Error Indication
- TC-OEI: Tandem Connection Outgoing Error Indication

#### Pointer Information

- AU-Positive: Administrative Unit Positive stuffing
- AU-Negative: Administrative Unit Negative stuffing
- TU-Positive: Tributary Unit Positive stuffing
- TU-Negative: Tributary Unit Negative stuffing

# 5.1.3.4 OH capture

Touching the **OH capture** button in the status area of the **Ports Setup** screen launches the screen shown below.



This screen shows SDH capture status information for one frame at a time. The frame number captured in one time is 64. Touch the frame selection buttons to select which frame to display.

The position of A1, A2 bytes in SOH for STM-4/16/64, refer to description in <u>SOH Editor</u>. For STM-256, each three bytes both side of the boundary of A1 and A2 bytes are displayed.

# Refreshing information

#### Refresh once

When touch the **Pause** button, the **Update** button is showed at left side of the **Pause** one and information is not updated. Touching the **Update** button will refresh the dialog information once.

# Refresh continuously

When the dialog is open and touch the Pause button at refresh once mode,

information is updated continuously.

# Displaying detailed information

Detailed overhead byte information can be accessed by touching a specific byte. This will launch a separate dialog containing a description of and details about the selected byte.



# 5.1.3.5 Tributary scan

Tributary scan is available except STM-256.

Touching the **Tributary scan** button in the status area of the **Ports Setup** screen displays the status shown below.




This screen allows to measure the alarms and errors of all VC-containers in the High order or the Low order at the same time. Note that the Low order scan is performed against the High order channel which you have selected.

# Scanning

This button appears when the Low order channel exists. In Scan Mode, touch the **Scan Start** button to start the scanning. To stop the scanning touch the **Scan Stop** button (same button, which toggles between the two functions).

#### **Details**

To view detailed information for a specific channel, touch the **Detail Mode** button and then touch the channel number.

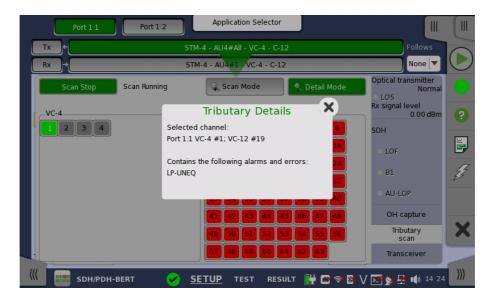

#### 5.1.3.6 Transceiver

Touching the **Transceiver** button in the status area of the **Ports Setup** screen launches the dialog shown below.



This dialog box presents status information about the optical transceiver.

When the optical transceiver is SFP or SFP+, <u>I2C analysis</u> appears. Refer to description of <u>Transceiver</u> in Ethernet Applications.

When the optical transceiver is CFP or CFP2, <u>MDIO analysis</u> and <u>Settings</u> appear.

When the optical transceiver is QSFP+ or QSFP28 Adpt., <u>I2C analysis</u> and <u>Settings</u> appear.

## **Module Present**

Green indicates that an optical transceiver is currently mounted.

# Transceiver Information


Select the information from pull down menu. **Alarm** and **Output control** appear in case of STM-256.

- Alarm shows the alarm status.
- Wavelength and bit rate shows the nominal wavelength and bit rate.
- Compliance shows the available standards.
- **Vendor information** shows the data stored in the optical transceiver.
- Output control allows to select lanes to insert alarm/errors.

# Tune wavelength

When the optical transceiver is a tunable SFP, following items are displayed for **Wavelength and bit rate**.

Bit rate, Channel, Wavelength, Frequency, First frequency, Last frequency, Grid spacing

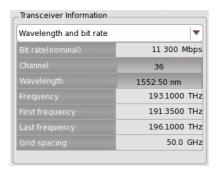

Touching **Channel** or **Wavelength** value opens the dialog box to set the wavelength.

#### Power monitor

The optical power read out from the transceiver is displayed.

The transmitting optical power or current is displayed in left column. The received optical power is displayed in right column.


In case of STM-256, the total optical power and the optical powers by each lane are displayed.



For description of MDIO analysis and Settings, refer to  $\underline{\text{Transceiver}}$  in Ethernet Applications.

# 5.1.4 Errors/Alarms Insertion

This section describes the errors or alarms insertion for the SDH layer on the <u>Application toolbar</u>.

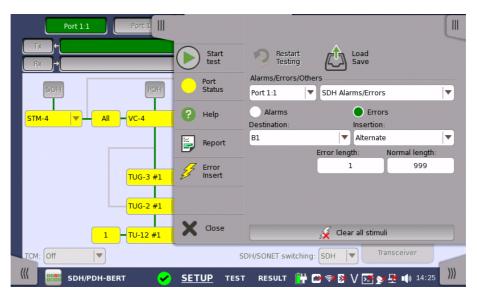

#### Alarms/Errors/ Others


Select the port to insert errors, and the stimuli type. The settings items vary depending on the selected stimulus type.

- SDH Alarm/Errors: Inserts errors or alarms related the SDH overhead or the pattern error.
- SDH frequency: Adds the frequency offset to the SDH bit rate.
- SDH pointer: Inserts specified pointer continuously.
- STL Alarm/Errors: Inserts alarms or errors to specified lanes.
- STL skew: Inserts skew between specified lanes.

STL Alarm/Errors and STL skew are available when Transmitter is set to CFP without OTN layer.

# 5.1.4.1 SDH Alarms/Errors

- 1. Select **Alarms** or **Errors** using the radio button.
- 2. Select the **Destination**.
- 3. Select the **Insertion**.
  - Off: Turns off inserting Alarms or Errors.
  - Manual: Inserts errors or alarms in the specified counts if you touch the Error Insert icon.
  - **Permanent**: Inserts errors or alarms in all SDH frame. The Error Insert icon shows only status.
  - Alternate: Repeats error/alarm insertion per specified number of frames. The Error Insert icon shows only status.
  - 1E-03 to 1E-10: Inserts errors in the specified rate continuously. For example, 1E-03 means  $10^{-3}$ . In this case, the error will be inserted in one frame per one thousand frames. The Error Insert icon shows only status.

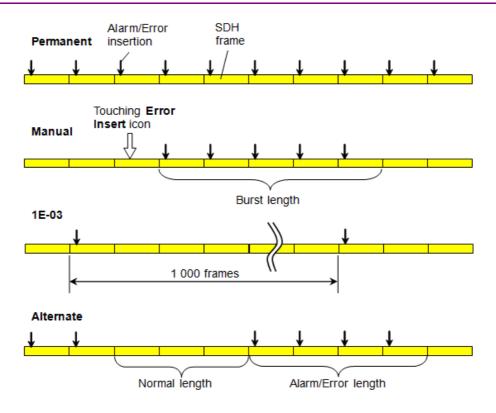

# 5.1.4.2 SDH frequency

Touch the field to set **Frequency Offset**. If setting a positive value, the frequency will shift higher side.

# Example:

If setting -50 ppm to the frequency offset for STM-16 output signal, the bit rate of output signal will be

 $2488320*(1-50*10^{-6}) = 2488195.584$  (kbit/s).

### 5.1.4.3 SDH pointer

- 1. Select  $AU^*$  or  $TU^*$  to insert the pointer.
- 2. Select the pointer type.
  - No test sequence: Does not insert pointers
  - Single alternating: Positive justification and negative justification
  - Regular + Double: Double positive justification
  - $\bullet \ \ Regular + Missing: Negative justification \\$
  - Double alternating: Double positive justification and double negative justification
- 3. Select the **Movement** or **Jump**.

**Movement** shifts the pointer value by specified value. **Jump** sets the specified value to the pointer.

- 4. Touch the field to set the pointer value. Then select one of followings.
  - Positive: Increases the pointer value.
  - Negative: Decreases the pointer value.
  - Incl. NDF: Sets NDF (New Data Flag) to enable ("1001").
  - Excl. NDF: Sets NDF to disable ("0110").
- 5. Touch the **Apply Movement** button or the **Apply Jump** button.

# 5.1.4.4 STL Alarms/Errors

- 1. Select the **Alarms** or **Errors**.
- 2. Select the **Destination** inserting the alarm or the error.
- 3. Select the **Insertion**.
- 4. Touch the buttons of **Lane**, the dialog box will appear.
- 5. Touch the buttons to select/clear lanes. The Alarms/Errors will be inserted to selected (orange) lanes.

# 5.1.4.5 STL skew

- 1. Touch the **Skew** field to set the number of skew bits. The calculated skew time is shown below the field.
- 2. Touch the buttons of **Skew Lane**, the dialog box will appear.
- 3. Touch the buttons to select/clear lanes. The skew will be inserted between selected (orange) lanes and non selected (gray) lanes.

Setting to "0" means that inserting no skew.

# 5.2 SONET Setup and Status

An OC-xx/STS-xx button in the navigation area of the <u>Ports Setup</u> screen gives you access to the SONET setup for the transmitter and/or receiver of the currently selected port.

Refer to SDH/SONET switching for switching to SONET.

Synchronous Optical Networking (SONET) refers to a standardized protocol that transfers digital signals over optical fiber using lasers. At low transmission rates data can also be transferred via an electrical interface.



The SONET interface uses the electrical BNC connectors and the optical ports.



MU110010A Connector Panel



MU110011A Connector Panel

For MU110012A, only the SONET applications over OTN are available. For usable connectors, refer to OTN Setup and Status in "OTN Application".

# 5.2.1 Transmitter Setup

# 5.2.1.1 Physical Setup

When the transmitter is set up with a SONET interface, selecting the Tx button in the navigation area will launch the following screen. (Note that the SONET Tx check box above the connector panel illustration is selected.)



This screen allows you to enable the optical or electrical interface of the SONET transmitter. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in "Status Summary".

#### Transmitter

Use the Transmitter drop-down menus to select to the transmitter.

# Mode


Use the Mode drop-down menus to select to the behavior of the transmitter.

#### OH overwrite position

Only enabled when the **OH overwrite** has been selected to the behavior of the transmitter. Use the drop-down menu to select the relevant overwrite position. The available values are:

- TOH
- A1/A2 byte
- K1/K2 byte
- S1 byte
- DCC1-3 byte
- DCC4-12 byte
- J0 byte
- 1 byte of TOH

When '1 byte of TOH' is selected, touch the  $Byte\ Pos$  button to launch the 1  $Byte\ of\ TOH$  dialog box. Select the relevant byte in the dialog.

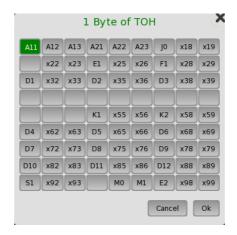

# **Clock Configuration**

Use the drop-down menu to select the clock source. This is fixed to **Received** when the Port Mode is set to **Through** or **OH overwrite**.

#### **Timing Source**

Internal: Internal clock of the module
External: The clock input to the connector

Received: The clock generated from the received signal

Ref.Port

Switches the reference clock output on/off. If setting to **On**, the reference clock is output to "Tx Ref Output" connector on the module panel.

Rate

Switches the divide rate of the reference clock.



Under the following condition, Tx reference clock is not output to the panel connector.

- When OC-48 is selected and the Rate is set to 1/64
- When OC-3 or OC-12 is selected

When **External** or **Received** is set, the right hand lamp indicates whether clock is detected or not.

**Transceiver** 


Displays the Transceiver information when the option except "Electrical" is selected to the transmitter.

Multi lane mapping

In case of OC-768, the **Lane Mapping** button appears. Refer to <u>Multi lane</u> mapping in "Ethernet Setup and Status".

# 5.2.1.2 SONET Frame Setup

Touching the navigation area button which represents the transmitter's SONET layer will launch the following screen.

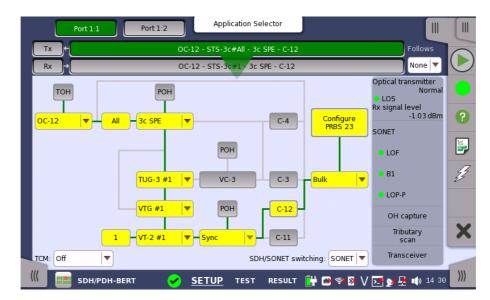

The general principle in setting up the SONET frame is to select the relevant values for the various containers in the multiplexing structure. This is done either via a drop-down menu or via a launched dialog box, by touching a drop-down menu or a button in the frame structure diagram.

Note that the currently 'active path' in the structure is highlighted. Note also that the changes you make will be reflected in the text displayed in the SONET button in the navigation area, if relevant.

**Follows** 

To make the Port 2 transmitter follow the Port 1 transmitter (i.e. copy its settings), touch the right-most button in the navigation area and select the Tx1 in the drop-down menu. The Port 2 settings continue to follow the Port 1 transmitter change. The default setting is **None**. Note that the Port 1 transmitter cannot follow the Port 2 transmitter.

When using two modules, the transceiver settings follows left Port 1 on the Navigation Area if selecting Tx1.

**TCM** 

Select the *TCM* (Tandem Connection Monitoring). The available TCM is decided by multiplex structure. If you select other TCM, the multiplex structure on the setup area will be changed.

The possible settings are:


Off Z5 (STS-3c) Z5 (STS-1) Z6 (VT-2/1.5)

SDH/SONET switching

Allows you to switch between SDH and SONET.

**TOH Editor** 

You can configure transport overhead (TOH) in a special dialog box (**TOH Editor**), which is launched when you touch the **TOH** button.

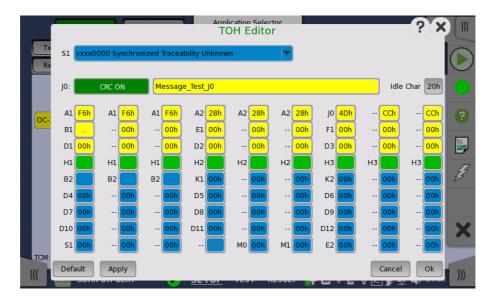

The setup principle is the same in this editor dialog box as in the SONET structure. Touching a button or opening a drop-down menu will open for new editor dialog boxes, new value selections etc.

- S1: Synchronization status
- **J0**: Regenerator section trace
  Idle Char is an ASCII code used for the padding.
- A1, A2: Framing

Defined A1 as F6h (1111011b), A2 as 28h (00101000b).\*

- B1: BIP-8 (Bit Interleaved Parity) This byte cannot be set.
- E1, E2: Orderwire

E1 is part of the Section Overhead, E2 is part of the Line Overhead.

- F1: User channel
- D1-D3: Section data communication channel (DCC<sub>R</sub>)
- $\bullet$  D4-D12: Line data communication channel (DCC<sub>M</sub>)
- **B2**: BIP-N $\times$ 24 These bytes cannot be set.
- K1, K2(bit 1 to bit 5): Automatic protection switching (APS) channel
- **K2**(bit 6 to bit 8): RDI-L (Line Remote Defect Indication)
- M0, M1: REI-L (Line Remote Error Indication)
- Z2: Spare byte
- H1, H2, H3:STS pointer These bytes cannot be set.

This editor format is the same as TOH of OC-3/STS-3. For OC-12/48/192, TOH bytes in other column are filled with value set by the editor. In case of OC-12 TOH in following figure, you can edit A1A2 bytes in thicker lines cell. The bytes in gray cell are filled with the value in left side cell in thicker lines.




\*: For OC-768, TOH Editor can edit each three bytes both side of the boundary of A1 byte and A2 bytes. The other A1A2 bytes in gray cell are fixed to F6h or 28h.


<b>←</b>	2304 bytes —															<b>-</b>									
										A1		A1	A1	<b>A</b> 1	A1	A2	A2	A2	A2	 A2					

#### **POH Editor**

Touching a POH button launches the STS-x POH Editor or VT-2/VT1.5 POH Editor dialog box. The contents of the dialog depends on which path overhead you are configuring.

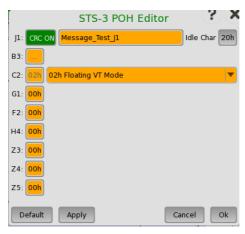


- J1: Path Trace
  Idle Char is an ASCII code used for the padding.
- B3: Path BIP-8 This byte cannot be set.
- C2: Signal label
- G1: (bit 1 to 4) REI (bit 5) RDI (bit 6 and 7) Reserved (bit 8) Spare
- F2,Z3: Path user channels
- **H4**: Multiframe indicator
- **Z4**: (bit 1 to 4) Automatic protection switching (APS) channels (bit 5 and 6) Spare (bit 7 and 8) Data link
- Z5: Network operator byte

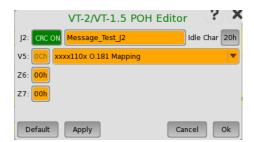

- **J2**: Path Trace
  Idle Char is an ASCII code used for the padding.
- V5: (bit 1 and 2) BIP-2 (bit 3) REI (bit 4) RFI (bit 5 to 7) Signal label (bit 8) RDI
- Z6: Network operator byte
- **Z7**: (bit 1) Extended signal label (bit 2) Low order virtual concatenation (bit 3 and 4) Automatic protection switching (APS) channels (bit 5 to 7) Reserved (bit 8) Data link

#### **Bulk Pattern**

To set up the bulk pattern, touch the **Configure xxxxx** button to launch the **Bulk Pattern** dialog box.

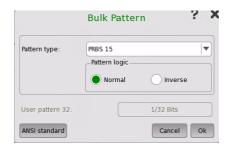

#### Pattern type

Select a predefined pattern or define a user pattern.

- User [32] bit, User [2048] bit: 32 bits or 2048 bits length pattern. The field which shows bit length is enabled. Touch the field to launch the dialog box to define the bit pattern. Refer to <a href="The User Pattern Editor">The User Pattern Editor</a>.
- PRBS9 to PRBS31: Pseudo-random bit sequence. The number indicates the bit length of sequence.

For example, bit length of PRBS9 is  $2^9$ -1=511.

Pattern logic is enabled.

- All 0's, All 1's: All bits are 0, all bits are 1.
- Alternating 1:1, Alternating 1:3, Alternating 1:7: Bit pattern such as "010101...", "100010001000...", "1000000010000000...".
- 2 in 8: Bit pattern such as "010000100100001001000010...".

#### **ANSI Standard**

Touching the 'ANSI standard' button will apply standard recommended **Pattern type** for currently selected SONET frame.

- C-4 (OC-768): PRBS 31 Inverse
- C-4 (Except OC-768): PRBS 23 Inverse
- C-3 (STS-3c SPE): PRBS 23 Inverse
- C-3 (STS-1 SPE): PRBS 15 Inverse
- C-12: PRBS 15 Inverse
- C-11: PRBS 15 Inverse

# 5.2.2 Receiver Setup

# 5.2.2.1 Physical Setup

When the receiver is set up with a SONET interface, touching the Rx button in the navigation area will launch the following screen. (Note that the SONET Rx check box above the connector panel illustration is selected.)



This screen allows you to make the physical setup of the receiver in SONET mode. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

### Receiver

Touch the button corresponding to the relevant interface type.

- Off: No interface
- SFP/SFP+: Optical interface
- Electrical: Electrical interface (BNC connector)
- CFP: Optical interface for STM-256/OC-768 (MU110011A only)

#### Receiver gain

Only relevant for electrical receivers. Select the attenuation and impedance mode from the drop-down menu.


- $\bullet\,$  Terminate: Up to 12.7 dB cable attenuation, nominal impedance
- Monitor: 20 dB linear attenuation and up to 12 dB cable attenuation, nominal impedance.

#### **Transceiver**

Displays the Transceiver information when Optical transmitter is selected.

# 5.2.2.2 SONET Frame Setup

Touching the navigation area button which represents the receiver's SONET layer will launch the following screen.

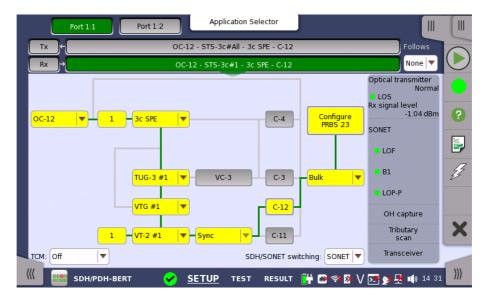

The manner of setting up the SONET interface of receiver is the same as that of transmitter. Refer to *SONET Frame Setup*.

**Follows** 

To make the currently selected receiver follow either the transmitter or Port 1 receiver (i.e. copy its settings), touch the right-most button in the navigation area and select the relevant value in the drop-down menu. The receiver settings continue to follow the change of either the transmitter or Port 1 receiver. The default setting is **None**. Note that the Port 1 receiver cannot follow the Port 2 receiver.

When using two modules, the receiver settings follows left Port 1 on the Navigation Area if selecting Rx1.

**TCM** 

Select the *TCM* (Tandem Connection Monitoring). The available TCM is decided by multiplex structure. If you select other TCM, the multiplex structure on the setup area will be changed.

The possible settings are:

Off

Z5 (STS-3c)

Z5 (STS-1)

Z6 (VT-2/1.5)

SDH/SONET switching

Allows you to switch between SDH and SONET.

# 5.2.3 Status Information

This section describes the status information available for the SONET layer in the status area of the **Ports Setup** screen.

#### 5.2.3.1 Status Summary

The status summary displayed for the SONET layer consists of the following information:

#### **Physical Status**

The topmost part of the status area gives you access to information about the current physical status of the selected interface. A summary consisting of the most relevant status indicators is displayed constantly. By touching the summary, you can launch a display that contains the detailed status information.

#### Alarm/Error Status

The middle part of the status area gives you access to alarm and error information for the selected interface. The status is indicated by the lamp color.

A summary consisting of the most relevant alarm/error indications is displayed constantly. By touching the summary, you can launch a display that contains all alarms/errors.

# Capture/Monitor Status

At the bottom of the status area are below buttons that give you access to various capture/monitor information. By touching a button, you can launch the corresponding information display.

- OH capture
- Tributary scan
- Transceiver

# 5.2.3.2 Physical Details

Refer to Physical Details in "SDH Setup and Status".

#### 5.2.3.3 Alarms and Errors

Touching the middle summary box in the status area of the **Ports Setup** screen allows you to launch the dialog box shown below.



This dialog box contains detailed alarm and error information related to the SONET interface. Status is indicated by the use of <u>colored Lamp icons</u>.

#### Alarms

- LOS: Loss of Signal
- LOF: Loss of Frame
- OOF: Out of Frame
- AIS-L: Line Alarm Indication Signal

- RDI-L: Line Remote Defect Indication
- AIS-P: Path Alarm Indication Signal
- LOP-P: Path Loss of pointer
- TIM-P: Path Trace Identifier Mismatch
- PLM-P: Path Payload Mismatch
- UNIQ-P: Path UNEQuipped
- RDI-P: Path Remote Defect Indication
- AIS-V: VT-Path Alarm Indication Signal
- LOP-V: VT-Path Loss of pointer
- LOM-V: VT-Path Loss of Multiframe
- TIM-V: VT-Path Trace Identifier Mismatch
- UNIQ-V: VT-Path UNEQuipped
- RDI-V: VT-Path Remote Defect Indication
- PLM-V: VT-Path Payload Mismatch
- LSS: Loss of Sequence Synchronization
- TC-UNEQ: Tandem Connection UNEQuipped
- TC-LTC: Tandem Connection Loss of Tandem Connection
- TC-TIM: Tandem Connection Trace Identifier Mismatch
- TC-AIS: Tandem Connection Alarm Indication Signal
- TC-RDI: Tandem Connection Remote Defect Indication
- TC-ODI: Tandem Connection Outgoing Defect Indication

#### Errors

- A1A2: Bytes used for the frame synchronization
- **B1**: The byte of BIP-8 (Bit Interleaved Parity-8)
- B2: The bytes of 24 parity bits
- REI-L: Line Remote Error Indication
- **B3**: The byte of BIP-8 (Bit Interleaved Parity-8)
- REI-P: Path Remote Error Indication
- **V5/B3**: BIP-2 of VT-2/VT-1.5 or BIP-8 of Low order VC-3
- REI-V: VT-Path Remote Error Indication
- Pattern errors: Bit error detected in the payload
- STS-NDF: Path New Data Flag
- VT-NDF: VT-Path New Data Flag
- Switch: APS switching occurred
- TC-IEC: Tandem Connection Incoming Error Count
- TC-BIP-2: Tandem Connection Bit Interleaved Parity-2
- TC-REI: Tandem Connection Remote Error Indication
- TC-OEI :Tandem Connection Outgoing Error Indication

# Pointer information

- STS-Positive: Synchronous Transport Signal Positive stuffing
- STS-Negative: Synchronous Transport Signal Negative stuffing
- VT-Positive: Virtual Tributary Positive stuffing
- VT-Negative: Virtual Tributary Negative stuffing

# 5.2.3.4 OH Capture

Refer to OH Capture in "SDH Setup and Status".

## 5.2.3.5 Tributary Scan

Tributary scan is available except OC-768.

Refer to Tributary Scan in "SDH Setup and Status".

# 5.2.3.6 Transceiver

Refer to **Transceiver** in "SDH Setup and Status".

# 5.2.4 Errors/Alarms Insertion

Refer to **Errors/Alarms Insertion** in SDH Setup and Status sub section.


# 5.3 E1 Setup and Status

*E1* represents the 2.048 Mbit/s PDH layer. The <u>Ports Setup</u> screen gives you access to the PDH layer setup for the transmitter and/or receiver of the currently selected port.

Plesiochronous Digital Hierarchy (PDH) refers to the technology originally used in telecommunications networks to transport data over digital transport equipment such as fiber optic systems.

E1 allows transmission of data streams that are nominally running at the same rate, however allowing for some variation in the speed around a nominal rate ( $\pm 125$  ppm variation around 2 Mbit/s).

The E1 frame has 32 time slots during  $125\,\mu$  s, and one time slot contains eight bits. The time slot 0 is used for multi frame.



E1 Frame structure



The E1 interface uses the electrical BNC connectors (unbalanced) or the electrical RJ48 connectors (balanced).



MU110010A Connector Panel

# 5.3.1 Transmitter Setup

## 5.3.1.1 Physical Setup

When the transmitter is set up with only an E1 interface, touching the Tx button in the navigation area will launch the following screen.



Switching between PDH Tx and DSn Tx is done in the SDH/SONET transmitter setup screen.

- 1. Select SDH Tx or SONET Tx check box.
- 2. Touch STM-xx, STS-xx, or OC-xx button in the navigation area.
- 3. Use drop down menu at right bottom to switch SDH or SONET. Selecting the SDH displays **PDH Tx** on **Tx** screen. Selecting the SONET displays **DSn Tx** on **Tx** screen
- 4. Touch Tx button in the navigation area.
- 5. Select PDH Tx or DSn Tx check box.
- 6. Clear SDH Tx or SONET Tx check box.
- 7. Touch **E1** radio button. Touching **Off** radio button disables the transmitter.

This screen allows you to make the physical setup of the PDH transmitter in E1 mode. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

Connector

Select the type of the connectors used for the test.

Unbalanced: BNC connectorsBalanced: RJ48 connectors

# Pin assignment of E1 Balanced Connectors

RJ-48 Pin		Signal
	1	RX, Ring
	2 RX, Tip	RX, Tip
	3	Ground
	4	TX, Ring
↑ ↑	5	TX, Tip
8 1	6	Ground
	7	No connect
	8	No connect

Be sure to confirm the cable type. For E1 cable, there are the straight cable and the cross cable.

# Drop and insert

Select the source for the transmitter.

On: transmits the received data which the data generated in the Network Master has added.

Off: transmits the data generated in the Network Master.

# **Timing Source**

Select the clock source.

Internal: Internal clock of the module

**External**: The clock provided from the Ext Clock connector **Received**: The clock generated from the received signal

When **External** or **Received** is set, the right hand lamp indicates whether clock is detected or not.

# 5.3.1.2 E1 Signal Setup

Touching the transmitter's E1 button in the navigation area will display the screen

### **Follows**

To make the Port 2 transmitter follow the Port 1 transmitter (i.e. copy its settings) when using Port 1 and Port 2, touch the drop-down menu in the navigation area and select the Tx1. The Port 2 settings continue to follow the Port 1 transmitter change. The default setting is **None**. Note that the Port 1 transmitter cannot follow the Port 2 transmitter.

#### Frame tab

The **Frame** tab contains the following parameters:



# Line code

Use the Line code radio buttons to select transmission line code.

- HDB3: High-Density Bipolar Order 3
- AMI: Alternate Mark Inversion

#### **PCM** frame

Use the **PCM frame** radio buttons to enable (**On**) or disable (**Off**) insertion of PCM frame in the transmitted signal.

PCM frame is formed by 16 E1 frames. Frame structure is shown below.

Frame	Bits 1 to 8 of the frame (Timeslot 0)											
number	1	2	3	4	5	6	7	8				
0	C1	0	0	1	1	0	1	1				
1	0	1	A	Sa	Sa	Sa	Sa	Sa				
2	C2	0	0	1	1	0	1	1				
3	0	1	Α	Sa	Sa	Sa	Sa	Sa				
4	C3	0	0	1	1	0	1	1				
5	1	1	Α	Sa	Sa	Sa	Sa	Sa				
6	C4	0	0	1	1	0	1	1				
7	0	1	Α	Sa	Sa	Sa	Sa	Sa				
8	C1	0	0	1	1	0	1	1				
9	1	1	Α	Sa	Sa	Sa	Sa	Sa				
10	C2	0	0	1	1	0	1	1				
11	1	1	Α	Sa	Sa	Sa	Sa	Sa				
12	C3	0	0	1	1	0	1	1				
13	E	1	Α	Sa	Sa	Sa	Sa	Sa				
14	C4	0	0	1	1	0	1	1				
15	E	1	Α	Sa	Sa	Sa	Sa	Sa				

Sub multiframe (SMF) I: Frame number 0 to 7, II: Frame number 8 to 15 E: CRC4 error indication bits (FEBE)

Sa: Spare bits

C1 to C4: Cyclic Redundancy Check-4 (CRC4) bits

A: Remote Alarm Indication (RAI)



When PCM frame is set to Off, many of the following transmitter parameters are insignificant.

#### CRC4

Use the **CRC4** radio buttons to enable (**On**) or disable (**Off**) CRC4 in the transmitted signal contained in the PCM Frame.



If you are uncertain whether the CRC4 should be selected or not, it is recommended to enable the CRC4.



If **Drop and Insert** of the total contents of a receiver is selected and the signal contains CRC4, it is possible to either Bypass or Insert Sa-Bits.

#### Sa-Bits

When Drop and insert is set to On, you can select Sa-bits of the frame.

- Insert Sa-Bits: inserts 16 bits set in the field below into Sa-bits.
- Bypass Sa-Bits: sends Sa-bits of the received frame as they are.


You can set the Sa-Bits value of the non-FAS words in the transmitted signal when containing PCM Frame/CRC4. Touch the **Sa-Bits** setup field to open the setup dialog box.



In the Sa-Bits dialog box, change the individual Sa-bits by touching on the relevant bit keys - this will toggle the bit key's binary value from logic 1 to 0 or vice versa. Touch Ok to accept the changes and close the dialog.

# Contents tab

The **Contents** tab contains the following parameters:

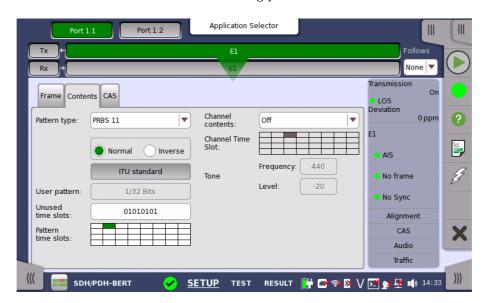

#### Pattern type

Select the pattern to be inserted in the transmitted signal.

- Off: Does not insert the pattern.
- User [32] bit, User [2048] bit: 32 bits or 2048 bits length pattern.
- PRBS 6 to PRBS 23: Pseudo-random bit sequence. The number indicates the bit length of sequence.

For example, bit length of PRBS 9 is  $2^9$ -1=511.

- QRSS 11, QRSS 20: Quasi-random signal source.

  The bit length of QRSS 11 is 2047, the length of QRSS 20 is 1 048 575.
- Fox Pattern 'THE QUICK BROWN FOX JUMPS OVER THE LAZY DOG 1234567890' in ASCII code
- Fox (CMA3000) The 'fox pattern' using for the combined test with CMA3000 (the previous model of Network Master)
- All 0's, All 1's: All bits are 0, all bits are 1.
- Alternating 1:1: Bit pattern that 1 and 0 are repeated such as "010101..."
- Alternating 1:3: Bit pattern that 1 and 000 are repeated such as "100010001000..."
- Alternating 1:7: Bit pattern that 1 and seven 0s are repeated such as "1000000100000000..."
- Alternating 3:24: A repeating 24-bit sequence that contains three ones, fifteen consecutive zeros and 12.5% average ones density.

Normal and Inverse are enabled except for User [32] bit and User [2048] bit.

Touching the 'ITU standard' button will apply ITU-T 0.150 recommended Pattern type for N x 64 kbps data rates (PRBS 11).

#### User pattern

User pattern field is enabled if Pattern type is set to **User [32] bit** or **User [2084]** bit. Touch the **User pattern** field and use the launched **Pattern Editor** dialog box to define the user pattern. Depending on the selected pattern type, different user pattern setup options will be available.

The length can be any length from 1 bit to 32 bits or from 1 bit to 2048 bits.

# Unused time slots

Touch the **Unused time slots** field and use the launched dialog box to define the unused time slots.



In the **Unused time slots** dialog box, change the individual bits by touching on the relevant bit keys - this will toggle the bit key's binary value from logic 1 to 0 or vice versa. Touch  $\mathbf{Ok}$  to accept the changes and close the dialog box.

#### Pattern time slots

Touch the **Pattern time slot** graphics and use the dialog box to select the timeslots in which the Pattern will be inserted. Set and clear timeslots as relevant.



#### Channel contents

Use the **Channel contents** drop-down menu to select the signal transmitting into the timeslot:

- Off: No channel content is selected.
- Tone: Tone with specified frequency and level.
- Transparent: Received content in the same channel time slot is used.
- **Speech**: Pre-programmed speech sequence. 'Drop and insert' on Tx screen will be switched to On.

#### **Channel Time Slot**

Touch the **Channel Time Slot** graphics and use the dialog box to select the channel timeslot. If Speech or Tone is selected audio is inserted in selected timeslot. If Transparent is selected, the destination for transparent errors is selected.



## Tone

Touch the **Tone Frequency** field and key in the frequency, using the numeric soft keys.

Touch the Level field and key in the level.

# CAS tab

The **CAS** tab contains the following parameters:



#### CAS


Use the **CAS** radio buttons to enable (**On**) or disable (**Off**) the insertion of a CAS (Channel Associated Signaling) signaling multiframe into time slot 30 of the transmitted signal.

Touch the **Channel**, **Bits** and **Other bits** fields to define the contents of a selectable CAS channel as well as the remaining channels.

# 5.3.2 Receiver Setup

# 5.3.2.1 Physical Setup

When the receiver is set up with only an E1 interface, selecting the Rx button in the navigation area will launch the following screen.

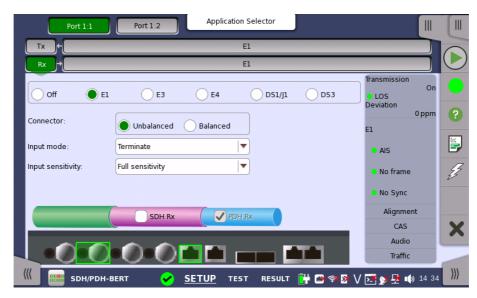

Switching between PDH Rx and DSn Rx is done in the SDH/SONET receiver setup screen.

- 1. Select SDH Rx or SONET Rx check box.
- 2. Touch STM-xx, STS-xx, or OC-xx button in the navigation area.
- 3. Use drop down menu at right bottom to switch SDH or SONET. Selecting the SDH displays **PDH Rx** on **Rx** screen. Selecting the SONET displays **DSn Rx** on **Rx** screen.
- 4. Touch **Rx** button in the navigation area.
- 5. Select PDH Rx or DSn Rx check box.
- 6. Clear SDH Rx or SONET Rx check box.
- 7. Touch **E1** radio button. Touching **Off** radio button disables the receiver.


This screen allows you to make the physical setup of the PDH receiver in E1 mode. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

#### Connector

Select the physical type of the relevant output connectors located on the back panel of the instrument. Choose **Unbalanced** to link to the corresponding unbalanced connector, or choose **Balanced** to link to the corresponding balanced connector. A balanced input is taken from RJ48 connector.

Pin assignment of E1 Balanced Connectors

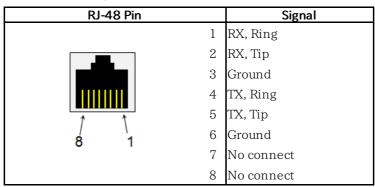

Be sure to confirm the cable type. For E1 cable, there are the straight cable and the cross cable.

## Input mode

Select the mode of input.

#### **Terminate**

Used when the instrument is used as a tester and the receiver is the only device connected to the line. The input impedance is nominal.

#### **Bridged**

Used when the receiver is connected directly in parallel to a line carrying live traffic. Please observe that this way of connecting may disturb the monitored line - connection through a protected monitor point, as well as using the input mode **Monitor**, is recommended instead.

### Monitor

Used when connecting to protected monitoring points. The input impedance is nominal.

# Input sensitivity

Set the sensitivity of the input. The available options are:

#### Full sensitivity

Signal levels down to the maximum sensitivity on the instrument are accepted.

# -20 dB

Input signal attenuated by -20 dB or more relative to the nominal level will be considered Loss Of Signal.

# $-33\,\mathrm{dB}$

Input signal attenuated by -33 dB or more relative to the nominal level will be considered Loss Of Signal.

# 5.3.2.2 E1 Signal Setup

Touching the receiver's E1 button in the navigation area will display the screen.

# **Follows**

To make the currently selected receiver follow either the transmitter or Port 1 receiver (i.e. copy its settings), touch the drop-down menu in the navigation area and select the relevant value. The receiver settings continue to follow the change of either the transmitter or Port 1 receiver. The default setting is **None**. Note that the Port 1 receiver cannot follow the Port 2 receiver.

### Frame tab

The **Frame** tab contains the following parameters:



#### Line code

Use the Line code radio buttons to select transmission line code HDB3 or AMI.



For normal 2 Mbps systems choose HDB3. AMI is for special applications only.

#### **PCM** frame

Use the **PCM frame** radio buttons to enable (**On**) or disable (**Off**) the status of the PCM frame.

# **CRC4** and E-bits

Use the CRC4 and E-bits radio buttons to enable (On) or disable (Off) the corresponding bit in the received signal. Use buttons in left frame for setting CRC4. Use buttons in right frame for setting E-Bit.



If it is uncertain whether the CRC4 and E-bits are supported in the monitor signal, it is recommended to select the Off mode.

# Contents tab

The **Contents** tab contains the following parameters:



### Pattern type

Select the requested pattern. Refer to <u>Pattern type</u> in "Transmitter Setup".

For testing of data rates from 64 kbps to 2 Mbps in a 2 Mbps line, ITU-T 0.150 recommends PBRS 11 to be used. For testing at the 2 Mbps rate, PRBS 15 is recommended in ITU-T 0.150.

Select 'Normal' or 'Inverse' pattern type.

Touching the 'ITU standard' button will apply ITU-T 0.150 recommended Pattern type for N x 64 kbps data rates (PRBS 11).

# User pattern

User pattern field is enabled if Pattern type is set to User [32] bit or User [2084] bit. Touch the User pattern field and use the launched Pattern Editor dialog box to define the user pattern. Depending on the selected pattern type, different user pattern setup options will be available.

The length can be any length from 1 bit to 32 bits or from 1 bit to 2048 bits.

#### Pattern time slots

Touch the **Pattern time slots** graphics and use the launched dialog box to select the timeslot which will receive the Channel Content signal. Set and clear timeslots as relevant.



# Audio

Use the **Audio** drop-down menu and select the features for the receiver decoding. Select **On** to enable the audio decoding or **Off** to disable.

#### Audio time slot


Touch the **Audio time slot** graphics and use the launched dialog box to select the timeslot.





# CAS tab

The **CAS** tab contains the following parameters:

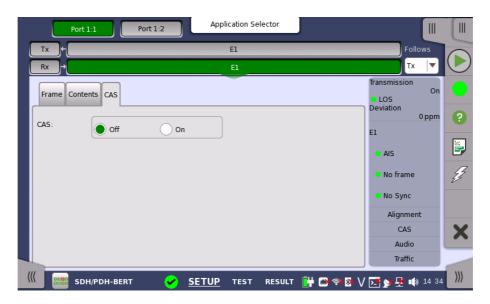

### CAS

Use the CAS radio buttons to enable (On) or disable (Off) the reception of a CAS (Channel Associated Signaling) signaling multiframe in time slot 16 of the received signal.

# 5.3.3 Status Information

This section describes the status information available for the E1 layer in the status area of the **Ports Setup** screen.

# 5.3.3.1 Status Summary

The status summary displayed for the E1 layer consists of the following information:

# **Physical Status**

The topmost part of the status area gives you access to information about the current physical status of the selected interface. A summary consisting of the most relevant status indicators is displayed constantly. By touching the topmost part, you can launch a display that contains the detailed status information.

# Alarm/Error Status

The second part of the status area gives you access to alarm and error information for the selected interface. The current status is indicated by the lamp color.

A summary consisting of the most relevant alarm/error indications is displayed constantly. By touching the second part, you can launch a display that contains all alarms/errors.

### **Monitor Buttons**

At the bottom of the status area are below buttons that give you access to various monitor information. By touching a button, you can launch the corresponding information display.

- Alignment
- CAS
- Audio
- Traffic

# 5.3.3.2 Physical Details

Touching the topmost summary box in the status area of the **Ports Setup** screen displays the status shown below.



This screen presents detailed information about the current physical status of the received signal at the 2 Mbps E1 layer.

The physical status information consists of the following parameters.

# Signal level

The Signal Level indicators show the attenuations (in dB) of the currently received signals compared to a nominal signal.

The nature of the levels depend on the Input Level setup for each receiver (Terminate or Monitor):

- In Terminate mode, the attenuation is assumed to be caused by a cable.
- In Monitor mode, linear attenuation is assumed.

# Deviation

The deviation from the nominal bit rate is shown for each receiver in both ppm and bps. The nominal bit rate is 2 048 000 bps.

#### Bit rate

The actual bit rate of each receiver is shown (in bps).

This field shows the effective bit rate of the patterns received (that is, the number of pattern bits received per second).

#### 5.3.3.3 Alarms and Errors

Touching the middle summary box in the status area of the **Ports Setup** screen displays the status shown below.



This screen contains detailed alarm and error information related to the E1 interface. Status is indicated by the use of <u>colored Lamp icons</u>.


### Alarms

- LOS: Loss of Signal
- AIS: Alarm Indication Signal
- No frame: No Frame
- No CRC4 MF: No Cyclic Redundancy Check 4 Multi Frames
- Distant: Distant
- No Sync: No Synchronization
- No CAS MF: No Channel-Associated Signaling Multi Frames
- Distant MF: Distant Multi Frames

#### Errors

- FAS: Frame Alignment Signal
- Pattern: Pattern
- CRC4: Cyclic Redundancy Check 4
- CRC4 MFAS: Cyclic Redundancy Check 4 Multiplex Frame Alignment Signal
- **E-Bit**: E-Bit Error
- Code : Code
- Pattern slip : Pattern slip
- Frame slip: Frame slip

# 5.3.3.4 Alignment





This screen provides information on the frame alignment when available. The frame alignment information includes the 16 first FAS/NFAS words of the CRC4 multiframe.


If multiframe is not available, the frame information will show 16 FAS/NFAS words in sequence.

The following color indicators are used:

- Green: Cyclic Redundancy Check bits
- Orange: Bits used to indicate received faulty sub-multiframes
- Purple: Remote alarm indication
- Yellow: Spare bits reserved for national use.

# 5.3.3.5 CAS

Touching the **CAS** button in the status area of the **Ports Setup** screen displays the status shown below.

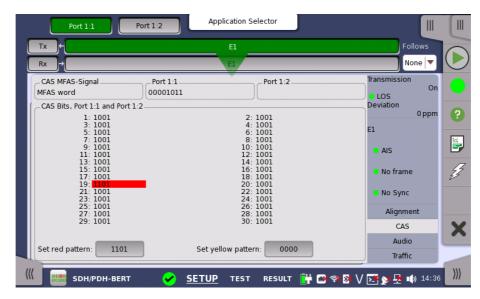

This screen gives information on the CAS (Channel Associated Signaling) signaling when available. It displays the state of the four signaling bits in both directions for all 30 channels. Activity is indicated with bold characters.

# **CAS MFAS-Signal**

This field shows the status of the CAS MFAS-Signal.

# Port1, Port2

This field shows the MFAS bits.

# CAS Bits, Port1 and Port2

This table shows the status of the CAS Bits in the two ports.

Use of colors


For easy recognition of special bit combinations, coloring is available. Use the **Set red pattern** and **Set yellow pattern** buttons to launch the respective setup dialog boxes.



The color pattern consists of four binary digits. The minimum and the maximum acceptable value is 0000 and 1111, respectively. Touch the digit buttons to set the relevant value and then touch  $\mathbf{Ok}$ .

To clear the whole word e.g. to make the line ready for new digit settings, touch the **Clear all** button.

### 5.3.3.6 Audio





This dialog box provides information about audio channels.

#### **Audio Channel**

#### Content

The received line content. For sub-rates this field shows the content of the subchannel.

## Content (inv.)

The received line content with even bits inverted. With A-law coded speech it is possible to observe the A-law code words before the even bit inverting.



DS1/J1 inverts all the bits.

## Peak (pos. and neg.)

The peak value of the signal. This only applies for A-law speech and it represents the largest received A-law coded value.

#### Leve

The level of the audio signal is shown here.

### Tone frequency

The frequency of the audio signal is shown here.

### Coder offset


The coder offset is presented if the time slot displayed is a normal 64 kbit/s time slot.

### Audio level


Two dBm meters show the volume of the currently selected audio channel (Port1 - Port2).

### 5.3.3.7 Traffic

Touching the **Traffic** button in the status area of the **Ports Setup** screen displays the status shown below.

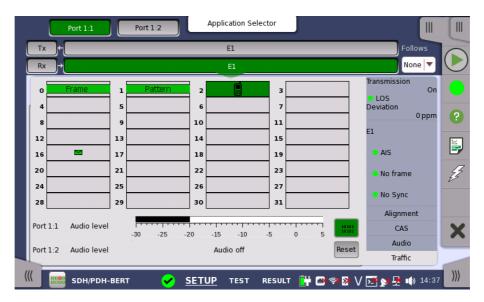

This screen shows the activity of the speech channels represented on the 2 Mbps line. You can switch between a traffic display and a view of the time slot content.

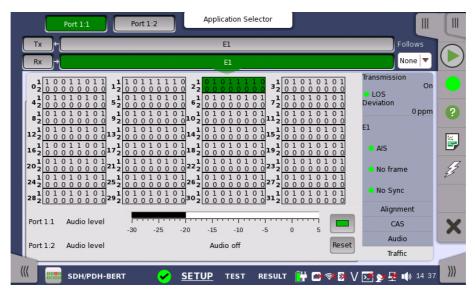

The busy / idle status of channel is displayed.


The current audio time slot is marked with an green highlighting. Select the relevant channel by touching it.



Audio Time Slots for all ports are marked, but it is only possible to change the time slots of the current port.

Touching this button will convert the table to display time slot content.

Touching this button will convert the graphic to display traffic.

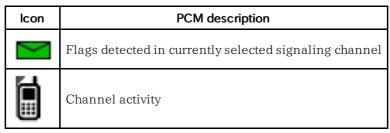

Touching Reset button will clear icons.

### Audio level

Two dBm meters show the volume of the currently selected audio channel (Port1 - Port2).

# 5.3.4 Errors/Alarms Insertion

This section describes the errors or alarms insertion for the PDH layer on the <u>Application toolbar</u>.



Alarms/Errors/ Others

Select the port to insert errors, and the stimuli type. The settings items vary depending on the selected stimulus type.

- PDH Alarm/Errors: Inserts errors or alarms related the PDH multi frame or the pattern error.
- PDH frequency: Adds the frequency offset to the PDH bit rate.

# 5.3.4.1 PDH Alarms/Errors

- 1. Select **Error insertion** or **Alarm** using the drop down menu. Alarm will be inserted continuously.
  - No error: Turns off inserting Alarms or Errors.
    - Manual: Inserts errors in the specified counts if you touch the Error Insert icon.
    - Burst\*1E-03 to Burst\*1E-07: Inserts errors of burst length in the specified rate continuously. For example, Error burst length is set to 5 and Burst\*1E-06 is selected, the errors will be inserted in five straight frames per one million frames. The Error Insert icon shows only status.
    - **ES**: Inserts one or more errors in one second (Errored Second). Insert icon shows only status.

- **SES**: Inserts 30% or less errors in one second (Severely Errored Second). The Error Insert icon shows only status.
- 2. Select the Error destination.
- 3. Touch the  ${\bf Error\ burst\ length\ field\ to\ set\ the\ errors\ insertion\ counts.}$

# 5.3.4.2 PDH frequency

PDH frequency is available when without SDH layer or SONET layer. Touch the field to set **Frequency Offset**. If setting a positive value, the frequency will shift higher side.

# Example:

If setting 20 ppm to the frequency offset for E1 output signal, the bit rate of output signal will be


 $2.048*(1+20*10^{-6}) = 2.048.041 \text{ (kbit/s)}.$ 

# 5.4 DS1/J1 Setup and Status

DS1/J1 represents the 1.544 Mbit/s PDH layer. The <u>Ports Setup</u> screen gives you access to the PDH layer setup for the transmitter and/or receiver of the currently selected port.

DS1/J1 allows transmission of data streams that are nominally running at the same rate, however allowing for some variation in the speed around a nominal rate ( $\pm 125$  ppm variation around 1.544 Mbit/s).

The DS1/J1 frame has one frame-bit and 24 channels during 125  $\,\mu$  s. A channel contains eight bits, so one DS1/J1 frame has 193 bits. The bits of channel 0 is used for multi frame.



DS1/J1 Frame structure



The DS1/J1 interface uses the electrical Bantam connectors.



MU110010A Connector Panel

# 5.4.1 Transmitter Setup

# 5.4.1.1 Physical Setup

When the transmitter is set up with only a DS1/J1 interface, touching the Tx button in the navigation area will launch the following screen.



For the switching method between PDH Tx and DSn Tx, refer to <u>Physical Setup</u> in "E1 Setup and Status". Touching **Off** radio button disables the transmitter.

This screen allows you to make the physical setup of the PDH transmitter in DS1/J1 mode. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in <u>Status Summary</u>.

The output signal goes to the corresponding Bantam connector.

# Input sensitivity - line buildout

Select the line build-out. The available values are:

- Rx short haul: Tx 1-133 ft
- Rx short haul; Tx 133-266 ft
- Rx short haul; Tx 266-399 ft
- Rx short haul; Tx 399-533 ft
- Rx short haul; Tx 533-655 ft
- Rx gain mode (Monitor)
- Rx long haul; Tx 0 db
- Rx long haul; Tx -7.5 db
- Rx long haul; Tx -15 db
- Rx long haul; Tx -22.5 db

### Drop and insert

Select the source for the transmitter.

On: transmits the received data which the data generated in the Network Master has added.

Off: transmits the data generated in the Network Master.

# Timing source

Select the clock source.

Internal: Internal clock of the module

**External**: The clock provided from the Ext Clock connector **Received**: The clock generated from the received signal

When **External** or **Received** is set, the right hand lamp indicates whether clock is detected or not.

# 5.4.1.2 DS1/J1 Signal Setup

Touching the transmitter's DS1/J1 button in the navigation area will display the screen.

# Follows

To make the Port 2 transmitter follow the Port 1 transmitter (i.e. copy its settings) when using Port 1 and Port 2, touch the drop-down menu in the navigation area and select the **Tx1**. The Port 2 settings continue to follow the Port 1 transmitter change. The default setting is **None**. Note that the Port 1 transmitter cannot follow the Port 2 transmitter.

### Frame tab

The **Frame** tab contains the following parameters:



### Line code

Use the **Line code** radio buttons to select transmission line code.

- AMI: Alternate Mark Inversion
- B8ZS: Bipolar Eight Zero Substitution

### **PCM** frame

Use the **PCM frame** radio buttons to enable (**On**) or disable (**Off**) insertion of PCM frame in the transmitted signal.


When PCM frame is set to Off, many of the following transmitter parameters are insignificant.

## Frame type

Use the **Frame type** radio buttons to select the relevant frame type: J1, ESF or SF/D4.

# Contents tab

The **Contents** tab contains the following parameters:

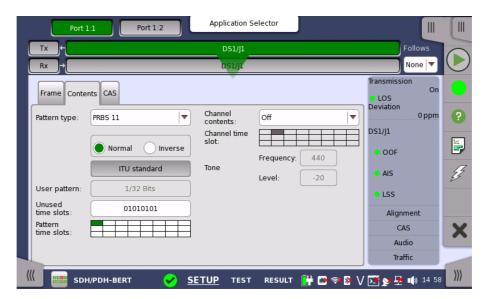



### Pattern type

Select the pattern to be inserted in the transmitted signal. Refer to <u>Pattern type</u> in "E1 Setup and Status". Available patterns are:

- Off
- User [32] bit, User [2048] bit
- PRBS 9 to PRBS 31
- QRSS 20
- Fox Pattern, Fox (CMA3000)
- All 0's, All 1's
- Alternating 1:1, Alternating 1:3, Alternating 1:7, Alternating 3:24

Touch 'Normal' or 'Inverse' pattern type.

Touching the 'ITU standard' button will apply ITU-T 0.150 recommended Pattern type for N x 64 kbps data rates (PRBS 11).

### User pattern

User pattern field is enabled if Pattern type is set to User [32] bit or User [2084] bit. Touch the User pattern field and use the launched Pattern Editor dialog box to define the user pattern. Depending on the selected pattern type, different user pattern setup options will be available.

The length can be any length from 1 bit to 32 bits or from 1 bit to 2048 bits.

#### Unused time slots

Touch the **Unused time slots** button and use the dialog box to define the unused time slots.



In the **Unused Time Slots** dialog box, change the individual bits by touching on the relevant bit keys - this will toggle the bit key's binary value from logic 1 to 0 or vice versa. Touch  $\mathbf{Ok}$  to accept the changes and close the dialog box.

### Pattern time slots

Touch the Pattern time slots graphics and use the dialog box to select the timeslots in which the pattern will be inserted. Set and clear timeslots as relevant.



### Channel contents

Use the top **Channel contents** drop-down menu to select where to transmit the previously defined signal in the timeslot. The signal can either be a speech sequence or a tone, as defined in the tone fields:

- Off: No channel content is selected.
- Tone: Tone with specified frequency and level.
- Transparent: Received content in the same channel time slot is used.
- **Speech**: Pre-programmed speech sequence. 'Drop and insert' on Tx screen will be switched to On.

### Channel time slot

Touch the **Channel time slot** graphics and use the launched dialog box to select the timeslot to insert the Audio signal.



#### **Tone**

Touch the **Frequency** field and use the launched dialog box to key in the frequency, using the numeric soft keys.

Touch the Level field and use the launched dialog box to key in the level.

### CAS tab

The CAS tab contains the following parameters:



### CAS

Use the **CAS** radio buttons to enable (**On**) or disable (**Off**) the insertion of a CAS (Channel Associated Signaling).

Touch the **Channel**, **Bits** and **Other bits** fields to define the contents of a selectable CAS channel as well as the remaining channels.

# 5.4.2 Receiver Setup

### 5.4.2.1 Physical Setup

When the receiver is set up with only a DS1/J1 interface, touching the Rx button in the navigation area will launch the following screen.



For the switching method between PDH Rx and DSn Rx, refer to <a href="Physical Setup">Physical Setup</a> in "E1 Setup and Status". Touch DS1/J1 radio button. Touching Off radio button disables the receiver.

This screen allows you to make the physical setup of the PDH receiver in DS1/J1 mode. It can also be used to inspect the current status of the selected port.

The input signal is taken form the corresponding Bantam connector.

# Input mode

Select the mode of input.

### Terminate

Used when the instrument is used as a tester and the receiver is the only device connected to the line. The input impedance is nominal.

## Bridged

Used when the receiver is connected directly in parallel to a line carrying live traffic. Please observe that this way of connecting may disturb the monitored line - connection through a protected monitor point, as well as using the input mode **Monitor**, is recommended instead.

### Monitor

Used when connecting to protected monitoring points. The input impedance is nominal.

## 5.4.2.2 DS1/J1 Signal Setup

Touching the receiver's DS1/J1 button in the navigation area will display the screen.

#### **Follows**

To make the currently selected receiver follow either the transmitter or Port 1 receiver (i.e. copy its settings), touch the drop-down menu in the navigation area and select the relevant value. The receiver settings continue to follow the change of either the transmitter or Port 1 receiver. The default setting is **None**. Note that the Port 1 receiver cannot follow the Port 2 receiver.

#### Frame tab

The **Frame** tab contains the following parameters:



### Line code

Use the Line code radio buttons to select transmission line code AMI or B8ZS.



For normal 1.544 Mbps systems choose B8ZS. AMI is for special applications only.

## **PCM** frame

Use the **PCM frame** radio buttons to enable (**On**) or disable (**Off**) the status of the PCM frame.

### Frame type

Select the relevant frame type: J1, ESF or SF/D4.

## Contents tab

The **Contents** tab contains the following parameters:



## Pattern type

Select the requested pattern. Available patterns are the same as the transmitter setup. Refer to <u>Pattern type</u> in "E1 Setup and Status".

Touch 'Normal' or 'Inverse' pattern type.

Touching the 'ITU standard' button will apply ITU-T 0.150 recommended Pattern type for N x 64 kbps data rates (PRBS 11).

### User pattern

User pattern field is enabled if Pattern type is set to **User [32] bit** or **User [2084]** bit. Touch the **User pattern** field and use the launched **Pattern Editor** dialog box to define the user pattern. Depending on the selected pattern type, different user pattern setup options will be available.

The length can be any length from 1 bit to 32 bits or from 1 bit to 2048 bits.

### Pattern time slots

Touch the Pattern time slots graphics and use the launched dialog box to select the timeslot which will receive the Channel Content signal. Set and clear timeslots as relevant.

### Audio


Use the **Audio** drop-down menu and select the features for the receiver decoding. Select On to enable the audio decoding or Off to disable.

### Audio time slot

Touch the **Audio time slot** button and use the launched dialog box to select the monitored audio timeslot.

### CAS tab

The **CAS** tab contains the following parameters:

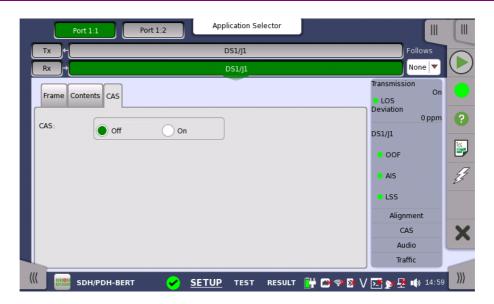

### CAS

Use the **CAS** radio buttons to enable (**On**) or disable (**Off**) the reception of a CAS (Channel Associated Signaling).

## 5.4.3 Status Information

This section describes the status information available for the DS1/J1 layer in the status area of the **Ports Setup** screen.

## 5.4.3.1 Status Summary

The status summary displayed for the DS1/J1 layer consists of the following information:

## **Physical Status**

The topmost part of the status area gives you access to information about the current physical status of the selected interface. A summary consisting of the most relevant status indicators is displayed constantly. By touching the topmost part, you can launch a display that contains the detailed status information.

### Alarm/Error Status

The second part of the status area gives you access to alarm and error information for the selected interface. The current status is indicated by the lamp color.

A summary consisting of the most relevant alarm/error indications is displayed constantly. By touching the second part, you can launch a display that contains all alarms/errors.

### **Monitor Buttons**

At the bottom of the status area are below buttons that give you access to various monitor information. By touching a button, you can launch the corresponding information display.

- Alignment
- CAS
- Audio
- Traffic

### 5.4.3.2 Physical Details

Refer to  $\underline{\text{Physical Details}}$  in "E1 Setup and Status". The nominal bit rate of DS1/J1 is 1 544 000 bps.

# 5.4.3.3 Alarms and Errors

Touching the middle summary box in the status area of the **Ports Setup** screen displays the status shown below.



This screen contains detailed alarm and error information related to the DS1/J1 interface. Status is indicated by the use of <u>colored Lamp icons</u>.

### Alarms


- LOS: Loss of Signal
- AIS: Alarm Indication Signal
- OOF: Out of Frame
- RAI: Remote Alarm Indication
- LSS: Link Status Signal

### **Errors**

- F-Bit: F-Bit Error
- Pattern: Pattern
- CRC-6: Cyclic Redundancy Check 6
- S-Bit: S-Bit Error
- BPV: Bipolar Violation
- Pattern Slip: Pattern slips
- EXZ : Excessive zeros

# 5.4.3.4 Alignment

Touching the **Alignment** button in the status area of the **Ports Setup** screen displays the status shown below.

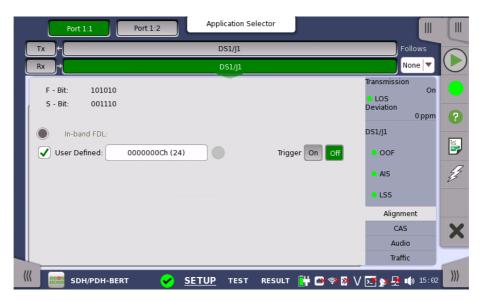

This screen provides information on the frame alignment when available.

F-Bit and M-bit are displayed when the frame type is J1 or ESF. F-Bit and S-bit are displayed when the frame type is SF/D4.

#### In-band FDL

Displays the In-band FDL (Facility Data Link) data.

# Trigger

Set **On** to hold displaying FDL if In-band FDL matches. If set **Off**, the latest Inband FDL is displayed.

### **User Defined**


Select the check box to edit the user defined inband code. Touching the field launches the pattern editor.



You can set the user defined inband code for the transmitter by the stimuli setup in Application Toolbar.

## 5.4.3.5 CAS

Touching the **CAS** button in the status area of the **Ports Setup** screen launches the status shown below.

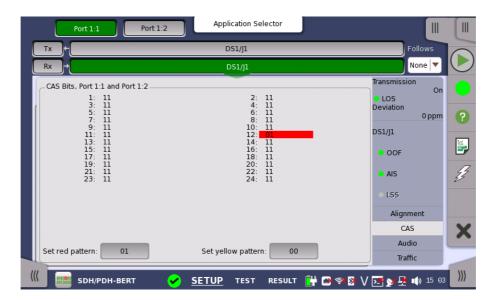

This screen gives information on the CAS (Channel Associated Signaling) signaling when available. It displays the state of the two signaling bits in both directions for all 24 channels. Activity is indicated with bold characters.

Use of colors

For easy recognition of special bit combinations, coloring is available. Use the **Set red pattern** and **Set yellow pattern** buttons to launch the respective setup dialog boxes.



The color pattern consists of four binary digits for ESF/J1 frame. For SF/D4 frame, it consists of two binary digits. The minimum acceptable value is 00 or 0000, and the maximum acceptable value is 11 or 1111. Touch the digit buttons to set the relevant value and then touch  $\mathbf{Ok}$ .

To clear the whole word e.g. to make the line ready for new digit settings, touch the **Clear all** button.

### 5.4.3.6 Audio

Refer to Audio in "E1 Setup and Status".

# 5.4.3.7 Traffic

Refer to  $\underline{\text{Traffic}}$  in "E1 Setup and Status". In DS1/J1 Traffic status screen, the 24 traffics are displayed.

# 5.4.4 Errors/Alarms Insertion


Refer to Errors/Alarms Insertion in E1 Setup and Status section.

# 5.5 E3 Setup and Status

E3 represents the 34.368 Mbit/s PDH layer. The <u>Ports Setup</u> screen gives you access to the PDH layer setup for the transmitter and/or receiver of the currently selected port.

E3 allows transmission of data streams that are nominally running at the same rate, however allowing for some variation in the speed around a nominal rate ( $\pm 125$  ppm variation around 34.368 Mbit/s).

E3 frame defined by ITU-T G.751 has 1536 bits during the period of 22.375 kHz. 12 bits are assigned to the overhead, and 4 bits parity are available as an option.



E3 Frame Structure



The E3 interface uses the electrical BNC connectors.



MU110010A Connector Panel

# 5.5.1 Transmitter Setup

# 5.5.1.1 Physical Setup

When the transmitter is set up with only an E3 interface, selecting the Tx button in the navigation area will launch the following screen.



For the switching method between PDH Tx and DSn Tx, refer to <u>Physical Setup</u> in "E1 Setup and Status". Touch **E3** radio button. Touching **Off** radio button disables the transmitter.

This screen allows you to make the physical setup of the PDH transmitter in E3 mode. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in <u>Status Summary</u>.

Timing source

Select the clock source.

Internal: Internal clock of the module

**External**: The clock provided from the Ext Clock connector **Received**: The clock generated from the received signal

When **External** or **Received** is set, the right hand lamp indicates whether clock is detected or not.

### 5.5.1.2 E3 Signal Setup

Touching the transmitter's **E3** button in the navigation area will display the screen shown below.



**Follows** 

To make the Port 2 transmitter follow the Port 1 transmitter (i.e. copy its settings) when using Port 1 and Port 2, touch the drop-down menu in the navigation area and select the Tx1. The Port 2 settings continue to follow the Port 1 transmitter change. The default setting is **None**. Note that the Port 1 transmitter cannot follow the Port 2 transmitter.

### PCM frame

Use the **PCM frame** radio buttons to enable (**On**) or disable (**Off**) insertion of PCM frame in the transmitted signal.

#### Pattern type

Select the pattern to be inserted in the transmitted signal. Available patterns are the same as the transmitter setup. Refer to <a href="Pattern type">Pattern type</a> in "E1 Setup and Status". Available patterns are:

- Off
- User [32] bit, User [2048] bit
- PRBS 9 to PRBS 31
- Fox Pattern, Fox (CMA3000)
- All 0's, All 1's
- Alternating 1:1, Alternating 1:3, Alternating 1:7, Alternating 3:24

Touch 'Normal' or 'Inverse' pattern type.

Touching the 'ITU standard' button will apply ITU-T 0.150 recommended Pattern type for 34 Mbit data rates (PRBS 23 Inverse).

# User pattern

User pattern field is enabled if Pattern type is set to User [32] bit or User [2084] bit. Touch the User pattern field and use the launched Pattern Editor dialog box to define the user pattern. Depending on the selected pattern type, different user pattern setup options will be available.

The length can be any length from 1 bit to 32 bits or from 1 bit to 2048 bits.

# 5.5.2 Receiver Setup

# 5.5.2.1 Physical Setup

When the receiver is set up with only an E3 interface, selecting the **Rx** button in the navigation area will launch the following screen.



For the switching method between PDH Rx and DSn Rx, refer to <u>Physical Setup</u> in "E1 Setup and Status". Touch **E3** radio button. Touching **Off** radio button disables the receiver.

This screen allows you to make the physical setup of the PDH receiver in E3 mode. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

# Input mode

Select the mode of input.

#### **Terminate**


Used when the instrument is used as a tester and the receiver is the only device connected to the line. The input impedance is nominal.

## Monitor

Used when connecting to protected monitoring points. The input impedance is nominal.

### 5.5.2.2 E3 Signal Setup

Touching the receiver's **E3** button in the navigation area will display the screen shown below.

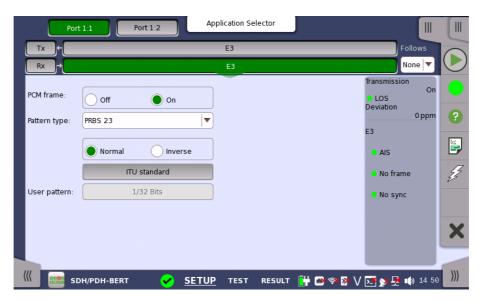

**Follows** 

To make the currently selected receiver follow either the transmitter or Port 1 receiver (i.e. copy its settings), touch the drop-down menu in the navigation area and select the relevant value. The receiver settings continue to follow the change of either the transmitter or Port 1 receiver. The default setting is **None**. Note that the Port 1 receiver cannot follow the Port 2 receiver.

### PCM frame

Use the **PCM frame** radio buttons to enable (**On**) or disable (**Off**) the status of the PCM frame.

### Pattern type

Select the requested pattern. Available patterns are the same as the transmitter setup. Refer to <a href="Pattern type">Pattern type</a> in "E1 Setup and Status".

Touch 'Normal' or 'Inverse' pattern type.

Touching the 'ITU standard' button will apply ITU-T 0.150 recommended Pattern type for 34 Mbit data rates (PRBS 23 Inverse).

### User pattern

User pattern field is enabled if Pattern type is set to **User [32] bit** or **User [2084]** bit. Touch the **User pattern** field and use the launched **Pattern Editor** dialog box to define the user pattern. Depending on the selected pattern type, different user pattern setup options will be available.

The length can be any length from 1 bit to 32 bits or from 1 bit to 2048 bits.

## 5.5.3 Status Information

This section describes the status information available for the E3 layer in the status area of the **Ports Setup** screen.

# 5.5.3.1 Status Summary

The status summary displayed for the E3 layer consists of the following information:

## **Physical Status**

The topmost part of the status area gives you access to information about the current physical status of the selected interface. A summary consisting of the most relevant status indicators is displayed constantly. By touching the topmost part, you can launch a display that contains the detailed status information.

### Alarm/Error Status

The second part of the status area gives you access to alarm and error information for the selected interface. The current status is indicated by the lamp color.


A summary consisting of the most relevant alarm/error indications is displayed constantly. By touching the second part, you can launch a display that contains all alarms/errors.

# 5.5.3.2 Physical Details

Refer to <u>Physical Details</u> in "E1 Setup and Status". The nominal bit rate of E3 is 34 368 000 bps.

#### 5.5.3.3 Alarms and Errors

Touching the middle summary box in the status area of the **Ports Setup** screen displays the status shown below.

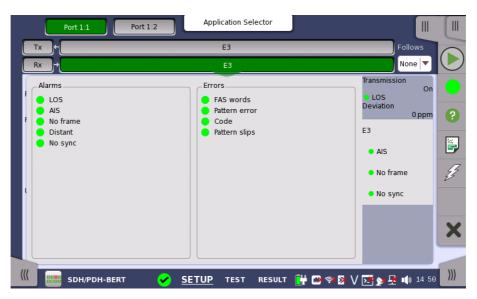

This screen contains detailed alarm and error information related to the E3 interface. Status is indicated by the use of <u>colored Lamp icons</u>.

### Alarms

• LOS: Loss of Signal

• AIS: Alarm Indication Signal

No frame: No frameDistant: Distant

• No sync: No synchronization

Errors

- FAS words: Received FAS pattern does not match to "1111010000".
- Pattern error: Received pattern does not match to specified pattern type.
- Code : Code
- Pattern slips : Pattern slips are occurring.

# 5.5.4 Errors/Alarms Insertion


Refer to Errors/Alarms Insertion in E1 Setup and Status section.

# 5.6 DS3 Setup and Status

*DS3* represents the 44.736 Mbit/s PDH layer. The <u>Ports Setup</u> screen gives you access to the PDH layer setup for the transmitter and/or receiver of the currently selected port.

DS3 allows transmission of data streams that are nominally running at the same rate, however allowing for some variation in the speed around a nominal rate ( $\pm 125$  ppm variation around 44.736 Mbit/s).

The DS3 frame has 56 bits of Overhead and 4704 bits of Payload, during the period of 9398.3 Hz. According to the overhead assignment, there are M13 frame and C-bit frame.

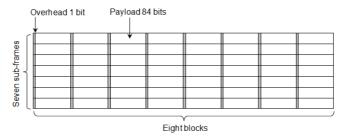

**DS3 Frame structure** 



The DS3 interface uses the electrical BNC connectors.



MU110010A Connector Panel

# 5.6.1 Transmitter Setup

# 5.6.1.1 Physical Setup

When the transmitter is set up with only a DS3 interface, selecting the Tx button in the navigation area will launch the following screen.



For the switching method between PDH Tx and DSn Tx, refer to <u>Physical Setup</u> in "E1 Setup and Status". Touch **DS3** radio button. Touching **Off** radio button disables the transmitter.

This screen allows you to make the physical setup of the PDH transmitter in DS3 mode. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in <u>Status Summary</u>.

Line buildout

Select the line build-out. The available values are:

- High-0 ft
- DSX-450 ft



To set transmission based on ITU-T G.703, select DSX - 450 ft.

Timing source

Select the clock source.

Internal: Internal clock of the module

**External**: The clock provided from the Ext Clock connector **Received**: The clock generated from the received signal

When **External** or **Received** is set, the right hand lamp indicates whether clock is detected or not.

### 5.6.1.2 DS3 Signal Setup

Touching the transmitter's **DS3** button in the navigation area will display the screen shown below.



**Follows** 

To make the Port 2 transmitter follow the Port 1 transmitter (i.e. copy its settings) when using Port 1 and Port 2, touch the drop-down menu in the navigation area and select the **Tx1**. The Port 2 settings continue to follow the Port 1 transmitter change. The default setting is **None**. Note that the Port 1 transmitter cannot follow the Port 2 transmitter.

#### PCM frame

Use the **PCM frame** radio buttons to enable (**On**) or disable (**Off**) insertion of PCM frame in the transmitted signal.

# Frame type

Use the **Frame type** radio buttons to specify either an M13 frame or a C-Bit frame.

M13 Frame Overhead

X	F1	C11	F0	C12	F0	C13	F1
X	F1	C21	F0	C22	F0	C23	F1
Р	F1	C31	F0	C32	F0	C33	F1
Р	F1	C41	F0	C42	F0	C43	F1
MO	F1	C51	F0	C52	F0	C53	F1
M1	F1	C61	F0	C62	F0	C63	F1
M0	F1	C71	F0	C72	F0	C73	F1

- X: Far-End Receive Failure
- P: Even-Parity
- M0: Multi-Framing Alignment 0
- M1: Multi-Framing Alignment 1
- F0,F1: Frame Alignment
- Cxx: Bit stuffing indication

### C-bit Frame Overhead

X	F1	AIC	F0	NA	F0	FEAC	F1
Χ	F1	UDL	F0	UDL	F0	UDL	F1
Р	F1	СР	F0	СР	F0	СР	F1
Р	F1	FEBE	F0	FEBE	F0	FEBE	F1
M0	F1	DL	F0	DL	F0	DL	F1
M1	F1	UDL	F0	UDL	F0	UDL	F1
M0	F1	UDL	F0	UDL	F0	UDL	F1

- AIC: Application Identification
- NA: Network Application
- FEAC: Far-End Alarm and Control
- UDL: User Data Link
- CP: C-bit Parity
- FEBE: Far-End Block Error
- DL: Data Link

### Pattern type

Select the pattern to be inserted in the transmitted signal. Refer to <u>Pattern type</u> in "E1 Setup and Status". Available patterns are:

- Off
- User [32] bit, User [2048] bit
- PRBS 9 to PRBS 31
- QRSS 20
- Fox Pattern, Fox (CMA3000)
- All 0's, All 1's
- Alternating 1:1, Alternating 1:3, Alternating 1:7, Alternating 3:24

Touch 'Normal' or 'Inverse' pattern type.

Touching the 'ANSI standard' button will apply ANSI/IEEE 1007 recommended **Pattern type** for 45 Mbit data rates (PRBS 23 Inverse).

## User pattern

User pattern field is enabled if Pattern type is set to **User [32] bit** or **User [2084]** bit. Touch the **User pattern** field and use the launched **Pattern Editor** dialog box to define the user pattern. Depending on the selected pattern type, different user pattern setup options will be available.

The length can be any length from 1 bit to 32 bits or from 1 bit to 2048 bits.

### **FEAC Code**

When 'Frame type' is set to **C-Bit**, allows you to specify the six bits of FEAC (Far-End Alarm and Control) channel code.

Option	Meaning	Cord Word
FEAC Off		-
DS3 EF	DS3 Equipment Failure Service Affecting	011001
DS3 LOF	DS3 Loss of Signal	001110
DS3 OOF	DS3 Out of Frame	000000
DS3 AIS	DS3 AIS Received	010110
DS3 Idle	DS3 Idle Signal Received	011010
DS3 EF NSA	DS3 Equipment Failure (Non-Service Affecting)	001111
DS3 CEF NSA	DS3 Common Equipment Failure (Non-Service Affecting)	011101
DS1 MLOS	Multiple DS1 LOS	010101
DS1 EF	DS1 Equipment Failure (Service Affecting)	000101
DS1 LOS	Single DS1 LOS	011110
DS1 EF NSA	DS1 Equipment Failure (Non Service Affecting)	000101
LL Active	Line Loopback Activate	000111
LL Deactive	Line Loopback De-activate	011100
User	User defined	-

## **USR FEAC code**

When 'FEAC Code' is set to **User**, touch the **USR FEAC code** button and use the launched dialog box to define the FEAC code.

# 5.6.2 Receiver Setup

# 5.6.2.1 Physical Setup

When the receiver is set up with only a DS3 interface, selecting the  $\mathbf{R}\mathbf{x}$  button in the navigation area will launch the following screen.



For the switching method between PDH Rx and DSn Rx, refer to <u>Physical Setup</u> in "E1 Setup and Status". Touch **DS3** radio button. Touching **Off** radio button disables the receiver.

This screen allows you to make the physical setup of the PDH receiver in DS3 mode. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

Input mode

Select the mode of input.

#### **Terminate**

Used when the instrument is used as a tester and the receiver is the only device connected to the line. The input impedance is nominal.

### Monitor

Used when connecting to protected monitoring points. The input impedance is nominal.

## 5.6.2.2 DS3 Signal Setup

Touching the receiver's **DS3** button in the navigation area will display the screen shown below.



Follows

To make the currently selected receiver follow either the transmitter or Port 1 receiver (i.e. copy its settings), touch the drop-down menu in the navigation area and select the relevant value. The receiver settings continue to follow the change of either the transmitter or Port 1 receiver. The default setting is **None**. Note that the Port 1 receiver cannot follow the Port 2 receiver.

## **PCM** frame

Use the **PCM frame** radio buttons to enable (**On**) or disable (**Off**) the status of the PCM frame.

## Frame type

Use the  $Frame\ type\ radio\ buttons\ to\ specify\ either\ an\ M13$  frame or a  $C ext{-Bit}$  frame.

# Pattern type

Select the requested pattern. Available patterns are the same as the transmitter setup. Refer to <u>Pattern type</u> in "E1 Setup and Status".

Touch 'Normal' or 'Inverse' pattern type.

Touching the 'ANSI standard' button will apply ANSI/IEEE 1007 recommended **Pattern type** for 45 Mbit data rates (PRBS 23 Inverse).

### User pattern

User pattern field is enabled if Pattern type is set to User [32] bit or User [2084] bit. Touch the User pattern field and use the launched Pattern Editor dialog box to define the user pattern. Depending on the selected pattern type, different user pattern setup options will be available.

The length can be any length from 1 bit to 32 bits or from 1 bit to 2048 bits.

# 5.6.3 Status Information

This section describes the status information available for the DS3 layer in the status area of the **Ports Setup** screen.

## 5.6.3.1 Status Summary

The status summary displayed for the DS3 layer consists of the following information:

### **Physical Status**

The topmost part of the status area gives you access to information about the current physical status of the selected interface. A summary consisting of the most relevant status indicators is displayed constantly. By touching the topmost part, you can launch a display that contains the detailed status information.

#### Alarm/Error Status

The second part of the status area gives you access to alarm and error information for the selected interface. The current status is indicated by the lamp color.

A summary consisting of the most relevant alarm/error indications is displayed constantly. By touching the second part, you can launch a display that contains all alarms/errors.

### **Monitor Button**

At the bottom of the status area are a number of buttons that give you access to various capture/monitor information. By touching a button, you can launch the corresponding information dialog.

# • Alignment

## 5.6.3.2 Physical Details

Refer to <u>Physical Details</u> in "E1 Setup and Status". The nominal bit rate of DS3 is 44 736 000 bps.

# 5.6.3.3 Alarms and Errors

Touching the middle summary box in the status area of the **Ports Setup** screen allows you to launch the screen shown below.



This dialog box contains detailed alarm and error information related to the DS3 interface. Status is indicated by the use of <u>colored Lamp icons</u>.

### Alarms

- LOS: Loss of Signal
- AIS: Alarm Indication Signal
- LOF: Loss of Frame
- RAI: Remote Alarm Indication
- IDLE: Idle Signal
- LSS: Link Status Signal

# Errors

• BPV Error: Bipolar Violation error

Pattern error: Pattern error
Pattern slips: Pattern slips
Parity error: Parity error

F-bit error: F-bit errorC-bit error: C-bit error


• FEBE: Far End Block Error

# 5.6.3.4 Alignment

Touching the **Alignment** button in the status area of the **Ports Setup** screen displays the status shown below.



Alignment status when the frame type is M13

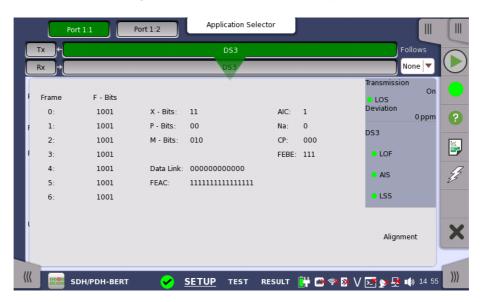

Alignment status when the frame type is C-bit

This screen provides information on the frame alignment when available. The frame alignment information includes the below bits contained in seven subframes.

- F-Bits: Framing bits
- Stuffing Bits: Bit stuffing control bits
- X-Bits: Message bits
- P-Bits: Parity bits
- M-Bits: Multiframing bits
- AIC: Application Identification Channel
- Na: Reserved Network Application bit
- CP: C-bit Parity
- FEBE: Far-End Block Error
- Data Link: Data links for application
- FEAC: Far-End Alarm and Control Channel
   The x of "0xxxxxx011111111" indicates <u>Code Word</u>.

Refer to M13 Frame Overhead and C-bit Frame Overhead.

# 5.6.4 Errors/Alarms Insertion


Refer to Errors/Alarms Insertion in E1 Setup and Status section.

# 5.7 E4 Setup and Status

E4 represents the 139.264 Mbit/s PDH layer. The <u>Ports Setup</u> screen gives you access to the PDH layer setup for the transmitter and/or receiver of the currently selected port.

E4 allows transmission of data streams that are nominally running at the same rate, however allowing for some variation in the speed around a nominal rate ( $\pm 125$  ppm variation around 139.264 Mbit/s).

 $\rm E4\ frame\ has\ 2988\ bits\ consisted\ 6\ sets\ of\ 488\ bits.\ FAS\ (Frame\ Alignment\ Signal)\ bits\ are\ located\ at\ top\ of\ E4\ frame.$ 

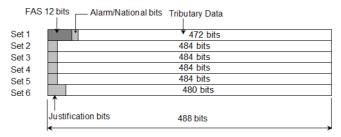

**E4 Frame Structure** 



The E4 interface uses the electrical BNC connectors.



MU110010A Connector Panel

# 5.7.1 Transmitter Setup

### 5.7.1.1 Physical Setup

When the transmitter is set up with only an E4 interface, selecting the Tx button in the navigation area will launch the following screen.



For the switching method between PDH Tx and DSn Tx, refer to <u>Physical Setup</u> in "E1 Setup and Status". Touch **E4** radio button. Touching **Off** radio button disables the transmitter.

This screen allows you to make the physical setup of the PDH transmitter in E4 mode. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in <u>Status Summary</u>.

Timing source

Select the clock source.

Internal: Internal clock of the module

**External**: The clock provided from the Ext Clock connector **Received**: The clock generated from the received signal

When **External** or **Received** is set, the right hand lamp indicates whether clock is detected or not.

# 5.7.1.2 E4 Signal Setup

Touching the transmitter's **E4** button in the navigation area will display the same screen as <u>E3 Signal Setup</u>.

**Follows** 

To make the Port 2 transmitter follow the Port 1 transmitter (i.e. copy its settings) when using Port 1 and Port 2, touch the drop-down menu in the navigation area and select the **Tx1**. The Port 2 settings continue to follow the Port 1 transmitter change. The default setting is **None**. Note that the Port 1 transmitter cannot follow the Port 2 transmitter.

### PCM frame

Use the **PCM frame** radio buttons to enable (**On**) or disable (**Off**) insertion of PCM frame in the transmitted signal.

### Pattern type

Select the pattern to be inserted in the transmitted signal. Refer to <u>Pattern type</u> in "E1 Setup and Status". Available patterns are:

- Off
- User [32] bit, User [2048] bit
- PRBS 9 to PRBS 31
- QRSS 20
- All 0's, All 1's
- Alternating 1:1, Alternating 1:3, Alternating 1:7, Alternating 3:24

Touch 'Normal' or 'Inverse' pattern type.

Touching the 'ITU standard' button will apply ITU-T 0.150 recommended **Pattern type** for 140 Mbit data rates (PRBS 23 Inverse).

# User pattern

User pattern field is enabled if Pattern type is set to User [32] bit or User [2084] bit. Touch the User pattern field and use the launched Pattern Editor dialog box to define the user pattern. Depending on the selected pattern type, different user pattern setup options will be available.

The length can be any length from 1 bit to 32 bits or from 1 bit to 2048 bits.

# 5.7.2 Receiver Setup

# 5.7.2.1 Physical Setup

When the receiver is set up with only an E4 interface, selecting the Rx button in the navigation area will launch the following screen.



For the switching method between PDH Rx and DSn Rx, refer to <u>Physical Setup</u> in "E1 Setup and Status". Touch **E4** radio button. Touching **Off** radio button disables the receiver.

This screen allows you to make the physical setup of the PDH receiver in E4 mode. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

#### Input mode

Select the mode of input.

#### **Terminate**

Used when the instrument is used as a tester and the receiver is the only device connected to the line. The input impedance is nominal.

#### Monitor

Used when connecting to protected monitoring points. The input impedance is nominal.

# 5.7.2.3 E4 Signal Setup

Touching the receiver's E4 button in the navigation area will display the same screen as E3 Signal Setup.

#### **Follows**

To make the currently selected receiver follow either the transmitter or Port 1 receiver (i.e. copy its settings), touch the drop-down menu in the navigation area and select the relevant value. The receiver settings continue to follow the change of either the transmitter or Port 1 receiver. The default setting is **None**. Note that the Port 1 receiver cannot follow the Port 2 receiver.

#### PCM frame

Use the **PCM frame** radio buttons to enable (**On**) or disable (**Off**) the status of the PCM frame.

# Pattern type

Select the pattern to be inserted in the transmitted signal. Available patterns are the same as the transmitter setup. Refer to <a href="Pattern type">Pattern type</a> in "E1 Setup and Status".

Touch 'Normal' or 'Inverse' pattern type.

Touching the 'ITU standard' button will apply ITU-T 0.150 recommended Pattern type for 140 Mbit data rates (PRBS 23 Inverse).

#### User pattern

User pattern field is enabled if Pattern type is set to **User [32] bit** or **User [2084]** bit. Touch the **User pattern** field and use the launched **Pattern Editor** dialog box to define the user pattern. Depending on the selected pattern type, different user pattern setup options will be available.

The length can be any length from 1 bit to 32 bits or from 1 bit to 2048 bits.

# 5.7.3 Status Information

This section describes the status information available for the E4 layer in the status area of the **Ports Setup** screen.

## 5.7.3.1 Status Summary

The status summary displayed for the E4 layer consists of the following information:

#### **Physical Status**

The topmost part of the status area gives you access to information about the current physical status of the selected interface. A summary consisting of the most relevant status indicators is displayed constantly. By touching the topmost part, you can launch a display that contains the detailed status information.

#### Alarm/Error Status

The second part of the status area gives you access to alarm and error information for the selected interface. The current status is indicated by the lamp color.

A summary consisting of the most relevant alarm/error indications is displayed constantly. By touching the second part, you can launch a display that contains all alarms/errors.

# 5.7.3.2 Physical Details

Refer to <u>Physical Details</u> in "E1 Setup and Status". The nominal bit rate of E4 is 139 264 000 bps.

#### 5.7.3.3 Alarms and Errors

Touching the middle summary box in the status area of the **Ports Setup** screen displays the status shown below.



This screen contains detailed alarm and error information related to the E4 interface. Status is indicated by the use of <u>colored Lamp icons</u>.

#### Alarms

• LOS: Loss of Signal

• AIS: Alarm Indication Signal

No frame: No frameDistant: Distant

• No Sync: No synchronization

Errors

• FAS words: Frame Alignment Signal words

Pattern error: Pattern errorPattern slips: Pattern slips

# 5.7.4 Errors/Alarms Insertion

Refer to  $\underline{\text{Errors/Alarms Insertion}}$  in E1 Setup and Status section.

# **5.8 APS**



The Automatic Protection Switching (APS) test described in this section is applicable for SDH/SONET/PDH/DSn interfaces.

For APS test of OTN interface, refer to APS in "OTN Application".

#### On SDH/SONET

K1,K2 protocol decoding is performed, as well as measurement of average and maximum duration of a specified reference event (alarm/error).

#### On PDH/DSn

The average and maximum duration of a specified reference event is measured, as is the number of events that have occurred.

# 5.8.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to each interface type are described in separate sections:


- SDH Setup and Status
- SONET Setup and Status
- E1 Setup and Status
- DS1/J1 Setup and Status
- E3 Setup and Status
- DS3 Setup and Status
- E4 Setup and Status
- OTN Setup and Status

Please refer to the sections relevant for your current port setup requirements.

# 5.8.2 Test Setup

# 5.8.2.1 Threshold

Touching the **Threshold** button in the navigation area displays the following screen.

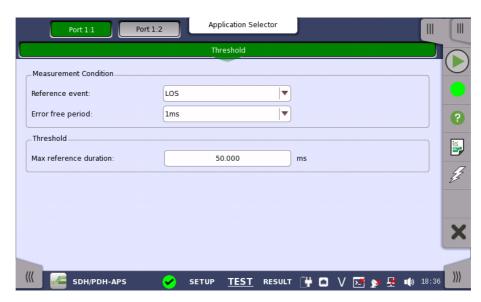

This screen contains the parameters for setting up the threshold values for alarms/errors and Pass/Fail status.

# Measurement Condition

#### Reference event

Use the drop-down menu(s) to select the relevant event (Any errors, LOS, LOF, OOF etc.).

If selecting **Any errors**, all alarms and errors displayed on the list are treated as the trigger.



LOS does not appear when using the electrical interface (STM-1e or STS-3). For the PDH interfaces the lists of relevant events are different.

The errors which can be set as Reference event do not contain all items listed in **Alarms** and **Errors** on Application Toolbar.

For example, LSS and TC-REI are not handled as a trigger even if **Any errors** is selected in case of SDH.

#### Error free period

Appears when SDH or SONET layer is present.

If a reference event is not generated within the time of this cycle, end the switching time measurement.

### Threshold

# Max reference duration

Allows you to specify the maximum duration of the selected reference event(s). Valid values are from 0.000~ms to 10000.000~ms for SDH/SONET and 0.000~ms to 4000.000~ms for PDH.




The setup of the protection and the requests used in an 'APS' test on SDH or SONET layer is done on the Test Results > Detailed screen.

# 5.8.3 Test Results

# 5.8.3.1 Summary

Touching the **Summary** button in the navigation area will display the screen shown below.

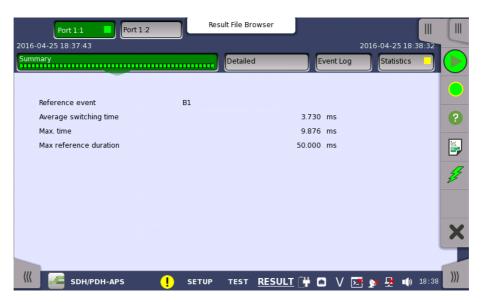


This screen presents a summary of the results of the APS test.

For each port the following information is displayed:

- Reference event
- Average switching time
- Max. time
- Max reference duration

#### 5.8.3.2 Details for APS

Touching the **Detailed** button will display the screen shown below.

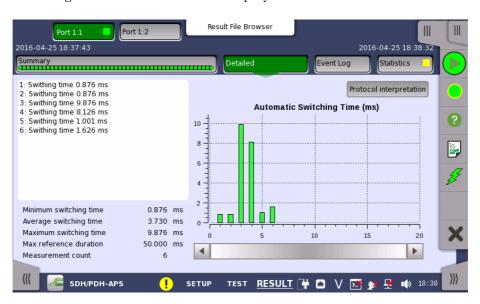

This screen shows the duration of all reference events, both in a list and in a graphic representation. This screen contains the summary field displayed below the list.

Summary field

Consists of the minimum, maximum, and average automatic switching times in milliseconds, the specified Max. reference duration value, the number of measurements.

List-form information

Presents the automatic switching times in list-form.

Graphical presentation

The graphical presentation consists of a bar diagram of the automatic switching times. Results may be affected by unexpected alarms/errors.


**Protocol interpretation** Shows the screen displaying the Protocol interpretation.



Protection interpolation button appears when SDH or SONET layer is present.

# 5.8.3.3 Protocol interpretation

Touching the **Protocol interpretation** button on the **Detailed** screen will display the following screen.

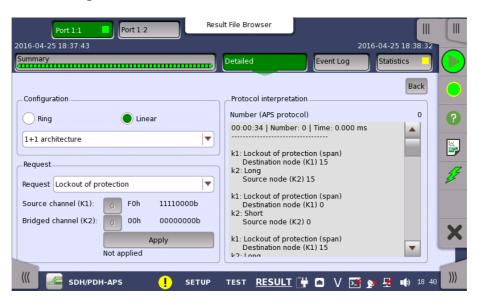

This screen shows a protocol interpretation for the selected port (i.e. detailed decoding information about K1 and K2 during the test). It also contains a set of parameters that allow you configure the requests used in the test.

# Configuration

Select the configuration from below.

- Ring: MS shared protection ring / BLSR (Bidirectional line switched ring)
- Linear: Linear VC trail protection / UPSR (Unidirectional path switched ring)
- Short path, Long path: Type of substitute path for Ring protection.
- 1+1 architecture, 1:n architecture: Type of the architecture for Liner protection.

# Request

#### Request

Use the drop-down menu to select the relevant request type (Forced switch, Signal fail etc.).

# Destination node / Source channel (K1)

Touch the field to set the channel number of the K1 byte (bits 5-8). Possible values are 0 to 15.

# Source node / Bridged channel (K2)

Touch the field to set the channel number of the K2 byte (bits 1-4). Possible values are  $\bf 0$  to  $\bf 15$ .

#### **Apply**

Touch the **Apply** button to apply the specified APS request to the SDH/SONET transmitter.

# 5.8.3.4 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to  $\underline{\text{Event Log}}$  of SDH/SONET/PDH/DSn BERT application.

# 5.8.3.5 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to <u>Statistics</u> of BERT for the operation.

# **5.9 BERT**



The Bit Error Rate Test (BERT) described in this section is applicable for SDH/SONET/PDH/DSn interfaces.

For BERT of OTN interface, refer to BERT in "OTN Application".



The interface settings on the Ports Setup screen determines whether the current application is SDH, SONET, PDH and/or DSn BERT.

# 5.9.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to each interface type are described in separate sections:


- SDH Setup and Status
- SONET Setup and Status
- E1 Setup and Status
- DS1/J1 Setup and Status
- E3 Setup and Status
- DS3 Setup and Status
- E4 Setup and Status
- OTN Setup and Status

Please refer to the sections relevant for your current port setup requirements.

# 5.9.2 Test Setup

# 5.9.2.1 Measurement Mode

Touching the **Measurement Mode** button in the navigation area displays the following screen.

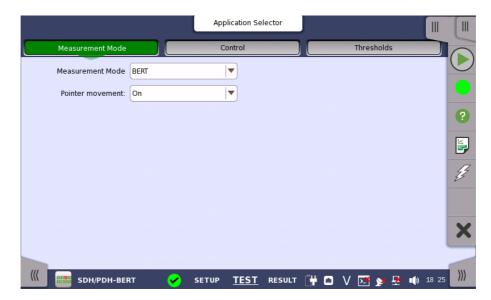

This screen allows users to switch the application.



**Measurement Mode** button appears in the Navigation area only when starting the BERT by Application selector.

#### Measurement Mode

Touch the field to select the application.

- BERT
- RTD
- APS

#### Pointer movement

Touch the field to select the **Pointer movement** button display in Result screen. Selecting **On** displays the **Pointer movement** button.

If selecting **Off**, **Pointer movement** button on Test screen is hidden. However, Estimate of test duration varies depending on the **Interval length** setting.

#### 5.9.2.2 Control

Touching the **Control** button in the navigation area displays the following screen.



This screen contains the parameters that are generally required in a BERT test setup.

#### Interval length

Allows you to specify the length of the measurement intervals.

# Start action

Allows you to specify when the measurement is started.

- $\bullet \;\; Immediate :$  Starts the measurement when you touch the Start button.
- **Start at**: Starts the measurement at the time specified in the **Start at** field on the right.

#### Stop function

Allows you to specify when the measurement ends.

• Manual stop: Stops the measurement immediately when you touch the Stop

button.

- **Stop at**: Stops the measurement at the time specified in the **Stop at** field on the right.
- **Duration**: Performs the measurement for the duration of time specified on the right.

#### Memory allocation

Allows you to specify how the measurement will be stored in the Network Master's memory.

- Use all storage: When Network Master's memory became full of measured data, the whole measurement is stopped.
- Continuous: When Network Master's memory became full of measured data, the oldest records in that memory will be overwritten.
   When the memory became full, it is recorded in <u>Event log</u>.

The Network Master's memory size (the file size of measurement results) is 64 Mbytes per one port. The result file size is less than 64 Mbytes because it is compressed when saving to the file.

#### Estimate of test duration

Contains an estimation of the time (in days, hours, minutes and seconds) before the whole memory will be filled out by the test. During an ongoing measurement, the estimate will be recalculated periodically.

#### Performance Parameters

The titles of ITU-T Recommendation are below.

- G.821 Error performance of an international digital connection operating at a bit rate below the primary rate and forming part of an Integrated Services Digital Network
- **G.826** End-to-end error performance parameters and objectives for international, constant bit-rate digital paths and connections
- **G.828** Error performance parameters and objectives for international, constant bit-rate synchronous digital paths
- G.829 Error performance events for SDH multiplex and regenerator sections
- **G.8201** Error performance parameters and objectives for multi-operator international paths within the Optical Transport Network (OTN)
- M.2100 Performance limits for bringing-into-service and maintenance of international multi-operator PDH paths and connections
- M.2101.1 Performance limits for bringing-into-service and maintenance of international SDH paths and multiplex sections
- M.2401 Error performance limits and procedures for bringing-into-service and maintenance of multi-operator international paths and sections within an optical transport network
- M.2110 Bringing into service international multi-operator paths, sections and transmission systems

The performance parameters vary depending on the selected standard.

#### **Performance Parameters**

	PDH			SDH, SONET	OTN
Parameter Name	G.821	G.826	M.2100	G.826, G.828+G.829, M.2101.1	G.8201,M.2401
ES	✓	✓	✓	✓	
SES	✓	✓	✓	✓	✓
BBE		✓		<b>✓</b>	✓
ALS	✓	✓	✓		
UAT	✓	✓	✓		✓*
UNAV				✓	
AVT	✓	✓	✓		
EFS	✓	✓	✓		

<sup>\*: &</sup>quot;UAS" is displayed.

#### OTN-related

These items appear if OTN Tx and OTN Rx are selected on Setup screen.

#### OTN

G.8201, M.2401 (M.2110)

#### Time period

15 minutes, 1 hour, 2 hours, 24 hours, 7 days

#### Allocation

Touching the **Setup** button launches the dialog box. Refer to <u>Performance Parameters</u> in "OTN Application" .

# SDH/SONET-related

These items appear if SDH Tx and SDH Rx, or SONET Tx and SONET Rx are selected on Setup screen.

# SDH/SONET

G.826, G.828+G.829, M.2101.1(M.2100)

# Time period

15 minutes, 1 hour, 2 hours, 24 hours, 7 days

# Allocation [%]

Set the allocation ratio of the performance objectives defined in ITU Recommendation.

For G.826 and G.828+G.829, the PO limits used for Pass/Fail judgement are calculated by multiplying the allocation by the performance objectives of ITU Recommendation.

For M2101.1(M.2100), the PO limits are calculated by multiplying the allocation and Time period (unit in seconds) by the performance objectives of ITU Recommendation.

# PDH/DSn-related

These items appear if PDH Tx and PDH Rx, or DSn Tx and DSn Rx are selected on Setup screen.

#### E1

G.821, G.826, M.2100, G.821 (expired)

#### **E3**

G.826, M.2100

#### **E4**

G.826, M.2100

#### DS1/J1

G.821, G.826, M.2100, G.821 (expired)

#### DS3


G.826, M.2100

Apply G.821 to the equipment designed prior to the adoption of revised ITU-T Recommendation G.826 on 14 December, 2002.

G.821(expired) is provided for backward compatibility to the previous model CMA3000. This standard is not recommended for normal use.

# 5.9.2.3 Thresholds

Touching the Thresholds in the navigation area displays the following screen.

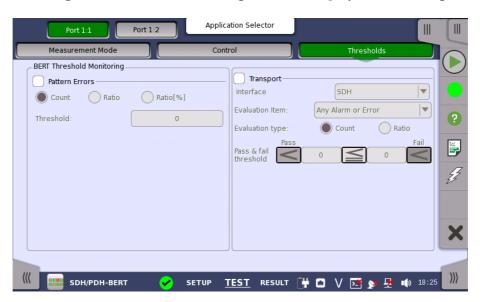

This screen contains the parameters for setting up the various threshold values (i.e. limits) for errors and Pass/Fail status that are used during the monitoring.

### **Pattern Errors**

Allows you to enable monitoring of pattern errors (i.e. bit errors) and to set up a threshold value for the bit error ratio.

Choose whether the threshold is specified as an absolute value or a percentage, using the Count, Ratio and Ratio [%] radio buttons, and then specify the value in the Threshold field.

# Transport

Select the check box to enable the transport-related parameters.

#### Interface

Select the item to evaluate from OTN, SDH, SONET, E4, E3, E1, DS3 or DS1/J1.

The **OTN** option appears if the OTN layer is added.

#### **Evaluation item**

Select the item to evaluate. If selecting other than Any Alarm or Error, another menu appears.

# **Evaluation type**

Select Count or Ratio.


# Pass & fail threshold

Touch the left-hand number to set the lower limit for "Warning". Touch the right-hand number to set the lower limit for "Fail". The lower limit of "Fail" must be equal to or greater than the lower limit of "Warning" (defining a "Within limits" range in between them).

# 5.9.3 Test Results

# 5.9.3.1 Summary

When you go to the test results of the SDH/SONET/PDH/DSn BERT application, the following screen is displayed.

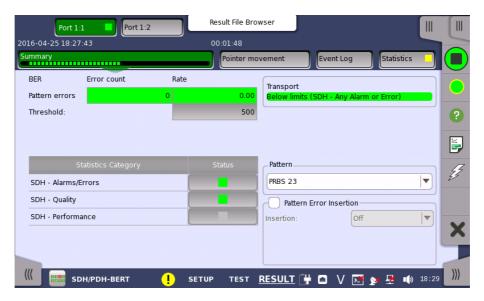

This screen contains a summary of OTN/SDH/SONET/PDH/DSn BERT results.

**Statistics Category** 

The lamp icon in Status column shows the Pass or Fail results for each category. Touching the Status column displays the statistics results.

**Transport** 

Displays the results of Transport test. This result appears if 'Transport' check box is selected in the Test Setup screen.

**Pattern** 

Select the pattern.

**Pattern Error Insertion** Select the check box to enable the pattern error insertion.

#### Insertion

Select the timing of the error insertion from the drop-down menu.

- Off: Stops the error insertion.
- Manual
- 1E-04 to 1E-10
- Alternate

#### **Burst length**

If 'Insertion' is set to Manual, touch the button and set the burst length to insert.

### Normal length


If 'Insertion' is set to Alternate, touch the button and set the normal length.

# **Error length**

If 'Insertion' is set to **Alternate**, touch the button and set the error length.

#### 5.9.3.2 Pointer Movement

Touching the **Pointer Movement** button in the navigation area displays the screen shown below.

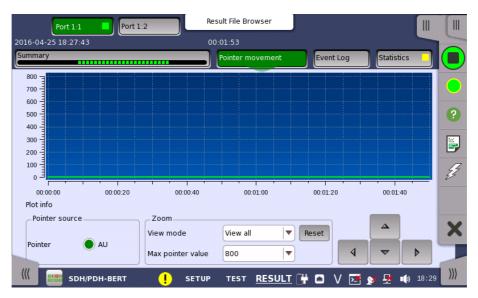

This screen presents a detailed analysis of pointer movements in the monitored signal. The results are displayed as a graph, showing the positions of a specific pointer over time.

Using the graph area itself and the controls displayed below the graph, you can specify which pointer's data is displayed as well as <u>zoom</u> in on specific details of the graph.



In general, you use direct touch-manipulation of the graph area to zoom in and use the controls to zoom out.

#### Pointer source

#### Pointer

Select the radio button corresponding to the pointer whose movements you want to monitor.

#### Zoom

To zoom in, select a zoom area directly in the graph area by drawing a rectangle with a finger or the stylus (delivered with the instrument).

When releasing the finger or stylus, the graph area zooms in to show the selected part of the graph.

To zoom out, use the view settings below the graph:

#### View mode

Used to set the x-scaling for the graph. The possible settings are:

- Last 24H to Last 5m: Shows a sliding graph area with max. width of 24 hours to 5 minutes.
- View all: Shows a graph area with a width as the duration of the test.
- **Custom**: This is automatically selected when the graph area is touch-manipulated.

# Max pointer value

Used to set the y-scaling of the view. The maximum amplitude of the plot always originates from the zero line.

# 5.9.3.3 Event Log


Touching the **Event Log** button in the navigation area displays the screen shown below.



# Event log display functions

The slide-out panel on the left-hand side of the screen contains the following event log functions:

- Define time format.
- Enabling event log filter.
- Event log filter configuration.
- Clear event log filter configuration.

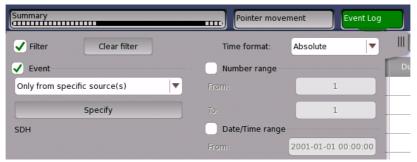

For an event to be displayed, it must pass the **Event** filter, the **Number range** filter and the **Date/Time range** filter if they are all enabled.

The **Event** filter has seven filter modes:

- Show events from specific sources only.
- Do not show events from specific sources.
- Show specific events from specific sources only.
- Do not show specific events from specific sources.
- Show specific types only.
- Do not show specific types.
- Show events where the source- or the description field matches a user specified text string only.

Choose the desired event filter mode and touch the **Specify** button in order to select the specific sources and events.



The test start event (Started) and stop event (Stopped) are always shown in the event log.

The **View** setting applies a port filter. A single port or all ports can be selected. Events with no port association will always pass.

The **CSV** export button is for writing all events (un-filtered) to a file in a CSV format (Comma Separated Values). The separator used can be configured in the <u>Instrument Toolbar</u> > Configuration > General menu screen, under **Miscellaneous**. It is not possible to export the file during a test.

#### The event log list

The events are displayed in a scrollable table. The content of the seven columns are:

No.

The index in the log.

Time

The time when the event was detected.

Port

Port number for events related to a port. Otherwise this field is blank. The port number is given by "module:port".

Type

Event type icon.

- Alarm events are indicated by a red icon.
- Error events are indicated by a yellow icon.
- Threshold events are indicated by either a red or yellow icon with a T in the middle.


Src.

The source of the event. This row denotes the originating interface/technology

or application.

#### Description

The event description. The alarms and errors in this column match those found in the **Statistics** screen.

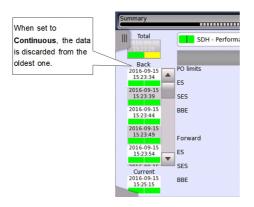

If "Memory for Statistics reached full!" is displayed, data is handled depending on the Memory allocation setting.

- Use all storage: Once the memory is full, the measurement stops. No data is discarded.
- Continuous: The measurement continues even if the memory is full. The saved data will be discarded from the oldest one. (Refer to left figure).

If "Event Log reached full!" is displayed, outputting the event stops. No event later than that will be recorded in the log.

# Dur./Count

For alarms, this is the alarm duration measured in seconds. An alarm event where the duration is not know yet, will show the text  $\mathbf{On}$ .

For errors, this is the number of errors in the errored second.

Event log and statistics can show different alarm duration and error count when values are summed up an compared. This is because statistics discards the last interval if it is not complete when the test is stopped. There will be no differences if the test duration is set to a multiple of the interval length or if intervals are disabled.

#### 5.9.3.4 Statistics

Touching the **Statistics** button in the navigation area displays the screen shown below.



This screen presents a detailed analysis of the test results. You can choose to view either the total results from measurement start or the results of a specific interval during the test. You can also zoom in on a specific result item. The results can be displayed either in table (list) form or as a graph.

# Selecting which results to view

# Selecting the interval time


Touch the **Total** button to switch the total values measured in all interval times. The start time of measurement is displayed on the button.

Touching the button in left side **Back** field shows the measured values in the interval time. The end time of the interval is displayed on the button.

**Current** button is displayed at left bottom when the measurement is running. Touching the **Current** button shows the measured values in the current interval time.

The slide-out panel on the left-hand side of the screen contains the following functions:

- Only show intervals that contains errors
- Time format





If you have stopped measurement during the interval time, the measurement results of the current interval are discarded. The log of the current interval is not displayed in **Back** field.

In this case, result data are re-calculated excluding the data of the current interval when the measurement is stopped. This causes that "Count" and "Ratio" displayed after the measurement will be different from that of during measurement. The sum of interval time (multiplied interval time by the number of back logs) may not match the differential time between displayed time at left top and right top after the measurement.

# Selecting type of results


Open the middle drop-down menu in the top row of buttons to select which results you want to display on the screen.

OTN	SDH, SONET	E1, E3, E4, DS1/J1, DS3	
Alarms/Errors	Alarms/Errors	Alarms/Errors	
Performance Quality		<u>Performance</u>	
	<u>Performance</u>		
	TCM		
	STL		

OTN options appear if the SDH/SONET signal is carried by OTN.

# Studying a specific result

Touch a specific cell in a result table to zoom in on the corresponding result item. The **Count** and **Ratio** fields are displayed on a **Zoom** tab page. A **Time vs. Statistics** tab page is also available. Touch the **Back** button to return to the statistics screen.

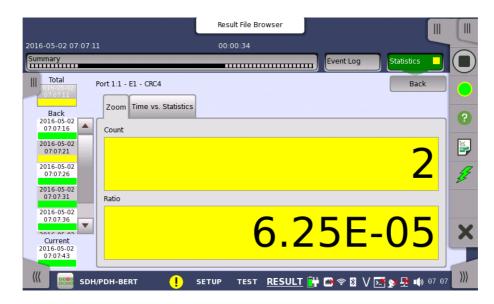

# Selecting how results are displayed

#### Selecting notation

Select the required notation for the results from the notation drop-down menu.

- **Unformatted** e.g. 71892
- SI prefix e.g. 71.892 k (k means "kilo")
- **Engineering** e.g. 71.892E3
- Scientific e.g. 7.1892E4

#### Results

SDH STL\*5

Results are displayed according to your choice. OTN appears when 'BERT on OTN' is running.

OTN Alarms/Errors Refer to **Results** in "OTN Application" **OTN** Performance Refer to **Results** in "OTN Application" OTN OTL Refer to **Results** in "OTN Application" SDH Alarms/Errors Alarms Errors SDH Quality Frequency\*1 MUX AU VC-4/3 TU VC-3 TU VC-12/11 Bulk **AU** Pointer TU Pointer Justification \*2 SDH Performance Frequency\*1 MUX AU VC-4/3 TU VC-3 TU VC-12/11 SDH TCM Alarms Errors

Alarms/Errors

ILA/OLA

Alignment marker

Lane skew

SONET Alarms/Errors Alarms

Errors

SONET Quality Frequency \*1

MUX STS-3c/1 TU VC-3 VT-2/1.5 Bulk

STS Pointer VT Pointer Justification  $^{*2}$ 

SONET Performance Frequency \*1

MUX STS-3c/1 TU VC-3 VT-2/1.5

SONET TCM Alarms

Errors

SONET STL\*<sup>5</sup> Alarms/Errors

ILA/OLA

Alignment marker

Lane skew

E1 Alarms/Errors Alarms

Errors

E1 Performance FAS errors

Pattern errors CRC4 errors E-Bit errors  $*^3$ 

E3 Alarms/Errors Alarms

Errors

E3 Performance FAS errors

Pattern errors

E4 Alarms/Errors Alarms

Errors

E4 Performance FAS errors

Pattern errors

DS1/J1 Alarms/Errors Alarms

Errors

DS1/J1 Performance FAS errors

Pattern errors CRC-6 errors \*4

DS3 Alarms/Errors Alarms

Errors

DS3 Performance FAS errors

Pattern errors

- \*1: Frequency results appear only when no OTN layer.
- \*2: Justification appears when 'PDH Rx' or 'DSn Rx' is selected.
- \*3: E-Bit errors appears when 'E-bit' is set to On in Frame tab of E1 receiver.
- \*4: CRC6 errors appears when 'ESF' or 'J1' is selected.
- \*5: STL appears when 'STM-256 or 'OC-768' is selected.

#### SDH/SONET Performance Measurement Items

This paragraph describes the performance result items.

EB (Errored Block) is defined as:

A block in which one or more errors occurred

# **SDH/SONET Performance Parameters**

Items	Definition					
ES	Errored Second Count: The number of seconds during which one or more EBs occurred or one or more alarms were detected. Ratio: Ratio of ES to total seconds in availability time (ESR: Errored Second Ratio)					
SES	Severely Errored Second Count: The number of seconds during which 30% or more EBs occurred or one or more alarms were detected.  Ratio: Ratio of SES to total seconds in availability time (SESR: Severely Errored Second Ratio)					
BBE	Background Block Error Count: EBs that occurred in non-SES. Ratio: Ratio of BBE to all blocks excluding blocks in SES (BBER: Background Block Error Ratio)					
UNAV	Unavailable Time When SES continues for ten seconds, UNAV starts from the beginning of the time. When items other than SES occur, UNAV ends at one second before the time.					

The following is the alarms which are counted as ES or SES:

SDH

MS-AIS, MS-RDI, AU-AIS, AU-LOP, HP-TIM, HP-UNEQ, HP-RDI, TU-AIS, TU-LOP, LP-TIM, LP-UNEQ, LP-RDI

**SONET** 

AIS-L, RDI-L, AIS-P, LOP-P, TIM-P, UNEQ-P, RDI-P, AIS-V, LOP-V, TIM-V, UNEQ-V, RDI-V

When the standard of Performance Parameters is set to G.826 or G.828+G829, PO (Performance Objective) limit is displayed for ES, SES, and BBE respectively. PO limit is the calculated value by multiplying allocation in Performance Parameters by the Performance Objective defined in ITU Recommendation.

When the measured value is equal to, or less than PO limit, the result is judged as Pass.

When the standard of Performance Parameters is set to M.2101.1, BIS (Bringing-Into-Service) limit is displayed as the Performance Objective.

# **BIS limit**

Items	Definition
S1-ES	The ES threshold for deciding Accepted
S2-ES	The ES threshold for deciding Unaccepted
S1-SES	The SES threshold for deciding Accepted
S2-SES	The SES threshold for deciding Unaccepted

S1-ES, S2-ES, S1-SES, and S2-SES are the calculated values according to ITU Recommendation, and vary depending on Allocation and Period of Performance Parameters. When the measured ES value is equal to or less than S2-ES or the measured SES value is equal to or less than S2-SES, the result is judged as Pass.

#### PDH Performance Measurement Items

This paragraph describes the performance result items. Measurement time definitions are as below.

 $S_{Total}$ 

Total measurement time. This is the total time of the measurement excluding the time of power failure.

 $S_{Avail}$ 

Available time of measurement. Calculated from the following formula:  $S_{Avail} = S_{Total} - S_{Unavail}$ 


SUnavail

Unavailable time of the measurement. Refer to UAT definition.

# **Performance Parameters**

Items	Definition
ES	Errored Second Within $S_{\text{Avail}}$ , the number of seconds during which one or more errors occurred.
SES	Severely Errored Second Within S <sub>Avail</sub> , the number of seconds during which any of the following is detected.  • 10 <sup>-3</sup> or more errors  • AIS  • LOS
BBE <sup>*</sup>	Background Block Error $ \label{eq:Background} Within  S_{Avail} \text{, the number of errors during which SES is not detected.} $
ALS	Alarm Second Within S <sub>Avail</sub> , the number of seconds during which any of the following is detected.  • AIS • LOS
UAT	Unavailable Time When SES or ALS continues for ten seconds, UAT starts from the beginning of the time. When items other than SES continues for ten seconds, UAT ends at one second before the time. Refer to the figure of <a href="Example of Unavailable Time Detection">Example of Unavailable Time Detection</a> .  First, the time (when determining the start of UAT) is not counted as UAT, and then if determined, the UAT is recounted.  First, the time (when determining the end of UAT) is counted as UAT, and then if determined, the UAT is recounted. In a word, the values of UAT may be reduced later. The same is applied to other items.
AVT	Available Time The available time of the measurement S <sub>Avail</sub> =S <sub>Total</sub> -S <sub>Unavail</sub>
EFS	Error Free Second Within S <sub>Avail</sub> , the number of seconds during which no errors occurred.

<sup>\*:</sup> Appears when the standard of Performance Parameters is set to G.826.

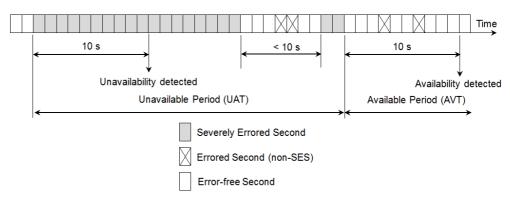

Example of Unavailable Time Detection

The performance objectives defined in ITU Recommendation are shown in the following table. When the measured value is equal to or less than these values, the cell is displayed in green.

# Performance Objectives

Items	G.821	G.826	M.2100
ES Ratio	0.08	0.04	0.02
SES Ratio	0.002	0.002	0.001

# 5.10 RTD



The Round-Trip Delay (RTD) test measures the time that the data which is transmitted by the transmitter returns to the receiver.

The RTD test described in this section is applicable for SDH/SONET/PDH/DSn interfaces.

For RTD test of OTN interface, refer to RTD in "OTN Application".

# 5.10.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to each interface type are described in separate sections:


- SDH Setup and Status
- SONET Setup and Status
- E1 Setup and Status
- DS1/J1 Setup and Status
- E3 Setup and Status
- DS3 Setup and Status
- E4 Setup and Status
- OTN Setup and Status

Please refer to the sections relevant for your current port setup requirements.

# 5.10.2 Test Setup

#### 5.10.2.1 Control

When you go to the test setup of the RTD application, the following screen is displayed.

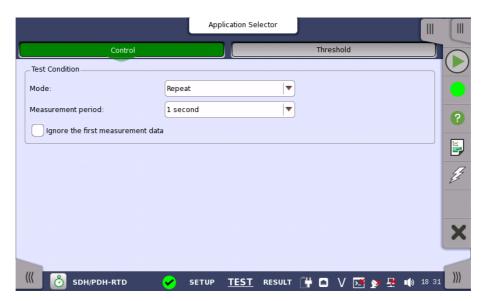

This screen allows you to configure the RTD test conditions for the currently selected port(s).

#### **Test Condition**

Allows you to define the test duration in one of two ways:

#### Mode

- Single Used to perform RTD test once.
- Repeat Used when a *persistent RTD test* is needed.

#### Measurement period

Select the measurement period from **0.5 seconds** to **10 seconds**.

#### Ignore the first measurement data

When the check box is selected, the delay time measured in first time is discarded, only delay times measured in second time or later are employed as results

When Mode is set to **Single**, the RTD is measured twice and the delay time measured in second time is employed as a result.

#### 5.10.2.2 Threshold

Touching the **Threshold** button in the navigation area displays the following items.

#### Threshold


#### **Maximum limit**

Allows you to specify a threshold value of RTD in micro seconds (  $\mu$  s).

#### 5.10.3 Test Results

# 5.10.3.1 Summary

Touching the **Summary** button in the navigation area will display the screen shown below.

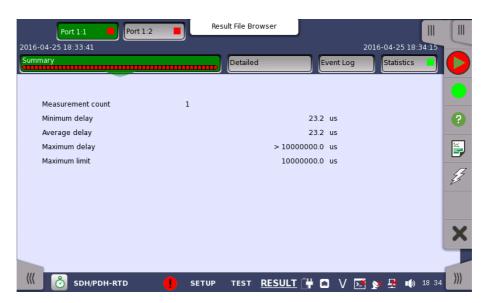


This screen presents a summary of the RTD test results, for all of the ports included in the test. For each port, the information consists of:

- Measurement count
- Minimum, average, and maximum round-trip delay times in micro seconds
- Threshold value

# 5.10.3.2 Detailed

Touching the **Detailed** button in the navigation area will display the screen shown below.

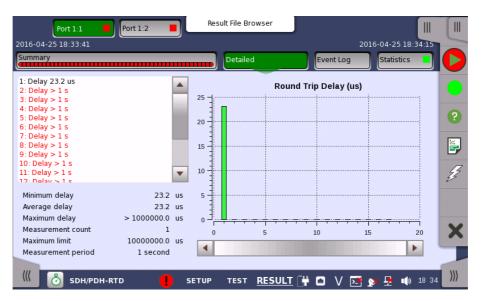

Buttons for selecting the relevant port are displayed at the top of the screen, with a color indication of the pass/fail status of the test.

This screen presents the detailed results of an RTD test. The result is shown in both list-form and in a graphical presentation. This screen contains the summary field displayed below the list.

# Summary field

Consists of the minimum, average, and maximum round-trip delay times in microseconds, the number of measurements, the specified threshold value and measurement period.

#### List-form information

Presents the results of an RTD test in list-form.

# Graphical presentation

The graphical presentation consists of a bar diagram of the round-trip delay times.

# 5.10.3.3 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

# 5.10.3.4 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to **Statistics** of BERT for the operation.

# **6 Ethernet Applications**

This chapter describes the graphical user interface (i.e. screens, sub-screens and major dialogs) related to Ethernet applications.

The following setting and applications are available:

- Ethernet Setup and Status
- BERT
- <u>Cable</u>
- Channel Statistics
- Mon/Gen
- Pass Through
- Ping
- Reflector
- RFC 2544
- RFC 6349
- <u>SAT 1564</u>
- <u>Traceroute</u>
- <u>Discovery</u>


# 6.1 Ethernet Setup and Status


Ethernet is globally used for data communication. Ethernet transmits variable length frames up to 1500 bytes in length, each containing a header with the source and destination addresses and a trailer that contains error correction data.

When setting an Ethernet application on OTN, in the navigation area of the **Ports Setup** screen, the Ethernet layer may initially be shown as a single **Ethernet** button which will change into a row of buttons when you touch it. Each button represents an aspect of Ethernet port setup and gives you access to the related setup options.



The Ethernet interface uses the Electrical RJ45 connectors or the optical ports.

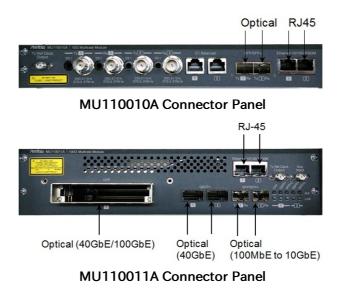




MU110012A Connector Panel

The connectors on MU110013A panel to be used are the same as those of MU110012A.

# 6.1.1 Physical Port Setup

When the port is set up with an Ethernet interface, touching the **Port** button in the navigation area will display the following screen.

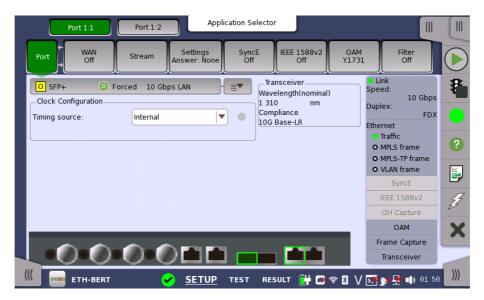

This screen allows you to specify the physical port configuration of the currently selected <u>Ethernet</u> port. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in <a href="Physical Details">Physical Details</a>.


# 6.1.1.1 Port configuration parameters

#### Port definition

You can use either a 'quick mode' or a 'detailed mode' to set up the port. Touching the long button at the top of the setup area will launch the <u>Port Setup</u> dialog box. Touching the right part of the button ( ) will open the quick setup menu.



The quick setup menu contains a number of predefined port configurations (e.g. **Electrical | Forced 100 Mbps FDX**). The detailed mode dialog allows you to specify the configuration yourself.

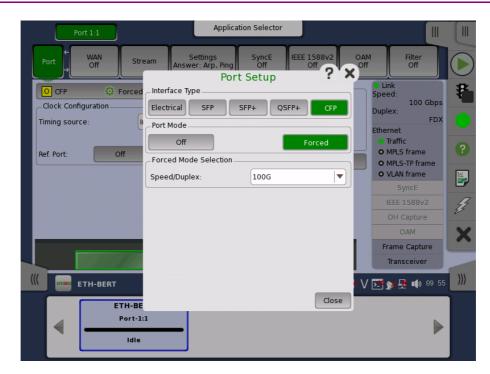

The detailed mode (**Port Setup**) dialog box is described in a separate section below.

#### **Clock Configuration**

#### Timing source

Select a source to synchronize all Ethernet transmitters to.

The possible sources are:

- Internal
- External
- GPS
- Received
- IEEE 1588v2

Received appears when the interface type is set to SFP, SFP+, QSFP+, CXP, CFP, CFP2 or QSFP28 Adpt.

IEEE 1588v2 appears when the interface type is set to Electrical SFP, or SFP+.

# Ref.Port

Switches the Tx reference clock output on/off. If setting to **On**, the reference clock is output to "Tx Ref Output" connector on the module panel.

Tx reference clock output can be enabled only one port on the same module.

# Rate

Switches the clock division ratio.

- 1/16: Divides the Tx Clock frequency by 16.
- 1/64: Divides the Tx Clock frequency by 64.

Under the following condition, Tx reference clock is not output to the panel connector.


- $\bullet$  When SFP forced 1000 FDX is selected and the Rate is set to 1/64
- When Electrical Interface or SFP forced 100 FDX is selected





This item appears when using MU110013A and Interface Type is set to CFP2 or QSFP28 Adpt. Selects the output of Sync Clock Output connector on MU110013A panel.

- Off: does not output the clock.
- 1/8: outputs 1/8 divided clock of the data synchronized clock (approximately 3.222 GHz).
- 1/16: outputs 1/16 divided clock of the data synchronized clock (approximately 1.611 GHz).

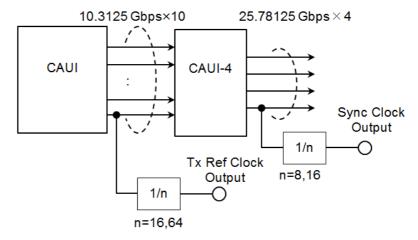

Block Diagram of MU110013A Tx Part

#### **FEC**

#### **FEC** enable

This setting appears when using MU110013A and Interface Type is set to CFP2 or QSFP28 Adpt.


- On: The calculated forward error correction data will be added to the 100G Ethernet frame.
- Off: FEC is not added to the 100G Ethernet frame.

# **Transceiver**

Displays the Transceiver information.

#### Multi lane mapping

In case of 40G or 100G interface, touching the **Lane Mapping** button launches the following dialog box.

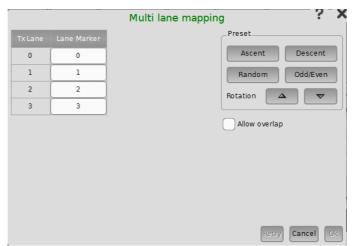

The number of lanes depends on the interface type. Touching Lane Marker field allows to set the PCS lane marker.

Use buttons in **Preset** frames to preset the lane markers.


# Allow overlap

If check box is selected, you can set overlapped number to the lane marker.

# 6.1.1.2 Port Setup (detailed mode)

The contents of the dialog box (i.e. which parameters are displayed) depends on your combined choice of **Interface Type** and **Port Mode**.

# MU110010A

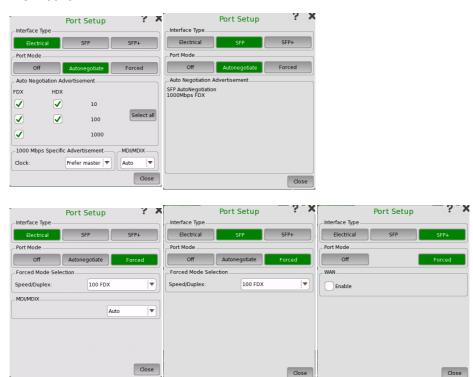

# MU110011A



#### MU110012A, MU110013A



Port Mode = Off

Selecting the **Off** port mode will shut down the Ethernet port and stop the physical link.

Electrical + Autonegotiate

Selecting the **Autonegotiate** port mode with interface type specified as **Electrical** will display the following parameters:

### **Auto Negotiation Advertisement**

Allows you to set the speed and duplex capabilities that are advertised to the link partner.

- FDX can be set to 10, 100 and 1000.
- HDX can be set to 10 and 100.

Using the Select all will automatically set check marks in every check box.



The selected negotiations are indicated by the icon on the button.

#### 1000 Mbps Specific Advertisement

Open the Clock drop-down menu to select one of the following settings:

Prefer master, Prefer slave, Master, or Slave.

#### MDI/MDIX

Set the pin assignment of the electrical port.

- Auto sets the pin assignment of the Network Master electrical port to MDI or MDIX automatically.
- MDI sets the electrical port to Medium Dependent Interface. Pin 1 and 2 of the electrical port on Network Master are used for the transmission, pin 3 and 6 are used for the reception.
- MDIX sets the electrical port to Medium Dependent Interface Crossover. Pin 3 and 6 of the electrical port on Network Master are used for the transmission, pin 1 and 2 are used for the reception.

Selecting **Auto** allows the Network Master to communicate not depending on the LAN cable type (straight cable or cross cable) connected to the DUT.

Electrical + Forced

Selecting the **Forced** port mode with interface type specified as **Electrical** will display the following parameters:

#### **Forced Mode Selection**

Allows you to select the **Forced** mode speed and duplex capabilities. Available choices are:

# 10 HDX, 10 FDX, 100 HDX, and 100 FDX



When autonegotiating with a port that is forced (i.e. not using **Autonegotiation**), the duplex for the port that is using autonegotiation will automatically be set to Half Duplex (**HDX**) and the speed to the speed used by the forced port. It is thus possible to have a duplex mismatch without knowing it.

#### MDI/MDIX

Set the pin assignment of the electrical port.

- **Auto** sets the pin assignment of the Network Master electrical port to MDI or MDIX automatically.
- MDI sets the electrical port to Medium Dependent Interface. Pin 1 and 2 of the electrical port on Network Master are used for the transmission, pin 3 and 6 are used for the reception.
- MDIX sets the electrical port to Medium Dependent Interface Crossover. Pin 3 and 6 of the electrical port on Network Master are used for the transmission, pin 1 and 2 are used for the reception.

Selecting **Auto** allows the Network Master to communicate not depending on the LAN cable type (straight cable or cross cable) connected to the DUT.

SFP + Autonegotiate

Selecting the **Autonegotiate** port mode with interface type specified as **SFP** will display the negotiated speed.

Only 1000Mbps FDX is supported by Autonegotiate function.

SFP + Forced

Selecting the **Forced** port mode with interface type specified as **SFP** allows you to select the forced mode speed. Available choices are:

# 100 FDX, 1000 FDX

SFP+

When running 10G only Forced mode is available.

#### WAN

Select the **Enable** check box to enable insertion of the WAN interface sublayer (WIS).



WAN interface sublayer is available for BERT application only.

**QSFP+** Only **Forced** mode is available.

**CFP** Only **Forced** mode is available. Select the forced mode speed. Available

choices are:

40G, 100G

CXP Only Forced mode is available.

CFP2 Only Forced mode is available.

QSFP28 Adpt. Select if J1686B CFP2 - QSFP28 Adaptor or J1756A CFP2 - QSFP28 Adaptor is

attached. The J1756A CFP2 - QSFP28 Adaptor works when the Network Master

software version is 9.0 or later. Only **Forced** mode is available.

# 6.1.2 Ethernet Frame Setup

### 6.1.2.1 WAN

Touching the **WAN** button in the navigation area will display the screen shown below.



This screen allows you to specify the configuration of a WAN interface sublayer for the currently selected Ethernet port. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

### **Terminology**

Allows you to select either **Sonet** or **SDH** notation for the naming of alarms, errors, and pointers on the WAN status and result pages.

# Follows

It is possible to let the Port 2 copy the setup from Port 1 by touching the **Follow** button. When this button is displayed in green, Port 2 continues to follow Port 1 change. This button appears when the Port 1 settings can be copy to Port 2.

Header

The buttons varies depending on "Terminology" selection. Touching the buttons launches the dialog box to set SOH, TOH or POH.

- SOH (Section OverHead) for SDH
- TOH (Transport OverHead) for Sonet
- POH (Path Overhead)

For the operation of dialog boxes, refer to the following sections.

SOH Editor in "SDH Setup and Status"

POH Editor in "SDH Setup and Status"

TOH Editor in "SONET Setup and Status"

POH Editor in "SONET Setup and Status"

### 6.1.2.2 Streams

Touching the **Streams** button in the navigation area will display a screen like the one shown below.



This screen contains the setup of the Ethernet frame content transmitted by the Network Master. The exact layout depends on the current selection of layers (i.e. the various encapsulation and protocol headers composing the Ethernet frame). Touching the button in the top left-hand part of the screen will display the dialog box to set options related to the layers.

Only the most important (i.e. most frequently used) configuration parameters are displayed here for each specified layer. To access all parameters, launch the frame composition 'Stream Setup' dialog box accessible via the button in the top left-hand part of the screen.




On the Ethernet application over OTN, following layers may not appear depending on the <u>Client signal</u> setting.


Custom, ETH (Ethernet), MPLS, MPLS-TP, PBB, VLAN, LLC1, SNAP

### Composing the Ethernet frame

The following headers/layers are available for the frame configuration:



You can use either a 'quick' mode or a 'detailed' mode to set up the selection of headers/layers. Touching the button at the top of the setup area will launch the *detailed mode* dialog box (the <u>Stream Setup dialog box</u>). Touching the arrow to the right of the button will open the *quick selection menu*.

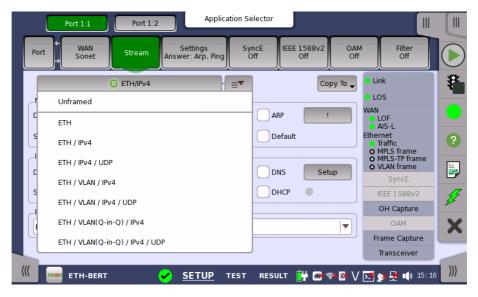

The quick selection menu contains a number of predefined frame configurations (e.g. ETH/VLAN/IPv4). The detailed mode dialog box allows you to specify the frame configuration yourself and also provides you with access to all configuration parameters available for the individual layers.

The detailed mode (Stream Setup) dialog box is described in detail below.

# Follow another port

It is possible to let the Port 2 copy the setup from Port 1 by touching the **Follow** button. When this button is displayed in green, Port 2 continues to follow Port 1 change. This button appears when the Port 1 settings can be copy to Port 2.

# Multistreams

Multistream setup is available in the following applications.

- Mon./Gen.
- SAT 1564
- Channel Stat.

When the Multistream is active, the screen contains a **Stream** slide-out, which allows you to select the relevant stream to view/configure. The name of the slide-out control indicates which stream is currently being displayed.


Follow



At the top of the slide-out list you can switch between MAC, IP, and VLAN information as stream identification.

# other stream(s)

Copy frame content to This feature allows you to copy the frame content of the stream that you are currently configuring to all streams in another port or to a single stream.



Touching the Copy To button opens a drop-down menu from which you can select the relevant port and all or a specific stream.

If selecting All streams, All Streams Copy dialog box appears.



When copying settings to all streams, it is available to change MAC or IP address with selecting Variable enable check box. If the check box is not selected, same address is copied to all streams.

It takes a few moments to copy settings to all streams.

Change range is:

LSB 8 bits for MAC address and IPv4 address LSB 16 bits for IPv6 address


Example is shown below:

When copied MAC address by	When copied IPv6 address by setting with
setting with Decrement	Increment
00-00-00-00-04	0000:0000:0000:0000:0000:0000:FFFF:FFFC
00-00-00-00-03	0000:0000:0000:0000:0000:0000:FFFF:FFFD
00-00-00-00-02	0000:0000:0000:0000:0000:0000:FFFF:FFE
00-00-00-00-01	0000:0000:0000:0000:0000:0000:FFFF:FFFF
00-00-00-00-00	0000:0000:0000:0000:0000:0000:FFFF:0000
00-00-00-00-FF	0000:0000:0000:0000:0000:0000:FFFF:0001
00-00-00-00-FE	0000:0000:0000:0000:0000:0000:FFFF:0002
00-00-00-00-FD	0000:0000:0000:0000:0000:0000:FFFF:0003
:	:

# Stream Setup (detailed mode dialog box)

This dialog box provides you with the advanced options for configuring the Ethernet frame content for a specific stream. Use the buttons in the following figure to select the stream.

The buttons on the left-hand side of the dialog box allow you to select the relevant layers. The current selection is shown at the top of the **Frame Content** area. Touching one of the layer buttons in the **Frame Content** area will display the setup parameters for that layer.

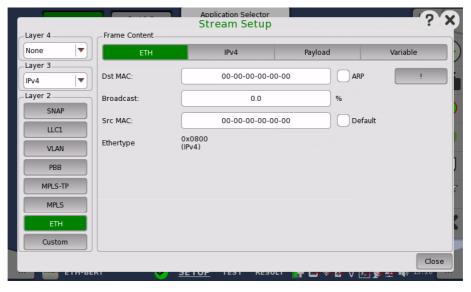

The layer buttons are arranged in order from bottom to top and from left to right. The TCP/UDP protocols are the uppermost layer and Ethernet the lowermost as depicted below compared to the OSI model.

#	OSI layer name	Protocol	
4	Transport	TCP, UDP	
3	Network	$IPv4^{(1)}$ , $IPv6^{(1)}$ , $ICMP^{(2)}$ , $ARP$	
2	Data Link	IEEE 802.2 LLC Type 1/ LLC1 + SNAP <sup>(1)</sup> , VLAN <sup>(1)</sup> , PBB, MPLS-TP, MPLS, Ethernet <sup>(1)</sup>	
1	Physical	Electrical, SFP, SFP28, QSFP+, QSFP28, CFP, CFP2, 10 Mbps, 100 Mbps, 1000 Mbps, 10 Gbps, 25 Gbps, 40 Gbps, 100 Gbps, FDX / HDX	

 $<sup>^{(1)}</sup>$  Protocols can be excluded and the content changed.



Encapsulation affects the Ping and RFC2544/Router Latency test, i.e. Ping replies will only be sent if the Ping request contains the same encapsulation as the one selected.

Touching **Close** will save your current settings and close the dialog. The settings done in dialog box will be reflected on the **Ports setup** screen.

### Layer configuration parameters


The settings related to each layer are described in detail below. The following layer buttons are available:

- <u>Custom</u> (Custom header)
- <u>Unframed</u>
- ETH (MAC header)
- MPLS
- MPLS-TP
- PBB
- VLAN
- LLC1
- SNAP
- <u>IPv4</u>
- IPv6
- UDP
- <u>TCP</u>
- Payload
- <u>Variable</u>

<sup>(2)</sup> ICMP appears in case of Ping application.

### Custom

Custom header can be set on BERT application, allows users to edit the specific area in the header. To set Custom header, touch the **Custom** button on gray in Layer 2 or select **Custom** in Layer 3.

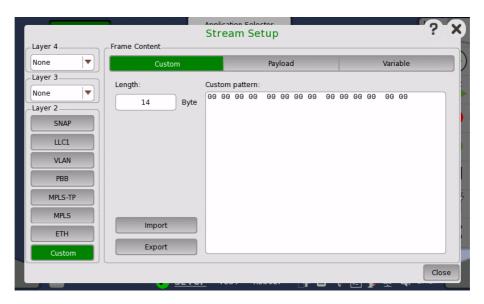



Custom appears for BERT application only.


### Length

Touch the field to set header length in bytes. The bit pattern with the specified length appears in the Custom pattern field.

Touching the Custom pattern field launches the Pattern Editor similar to that of dialog box.

To add the header corresponding to Ethernet header, enter 14 in Layer 2 Custom header.

To add the header corresponding to IPv4 header, enter 20 in layer 3 Custom header. Be sure to set **Ethertype** in <u>ETH</u> layer.



### Import

Touching this button launches the **Import Custom Header** dialog box. Select the header file (\*.txt), and touch **Import** button.

### **Export**

Touching this button launches the **Export Custom Header** dialog box. Enter the file name and touch **Export** button.

#### Unframed

Following operation on Steam Setup dialog box will display the parameter of the unframed stream. The frames of Unframed stream do not contain MAC header, but are consisted from the preamble and the payload pattern.

- Touching the ETH button on green in Layer 2
- $\bullet~$  Touching the  $\pmb{\text{Custom}}$  button on green in Layer 2






Custom button appears for BERT application only.

#### Frame Content

Touch the **Payload patten** field to set the pattern for the bit error rate test. Each frame consists of only preamble and payload pattern.

One byte for the sequence check will be appended by selecting **Enable** sequence checking on <u>Stream</u> screen of Test Setup.

Touching the ETH layer button displays the parameters available for the  $Ethernet\ header$ .

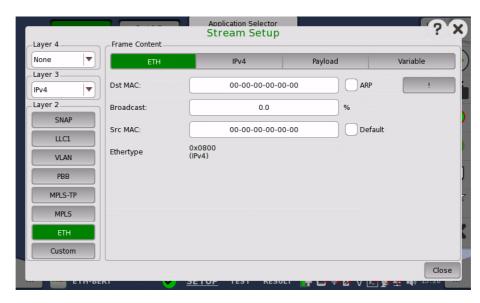

The Ethernet (MAC) header contains MAC addresses and Ethertype.

ETH

#### **Dst MAC**

The destination MAC address can either be specified manually. This can be decided based on an ARP lookup when IPv4 is set to Layer 3 or based on an NDP when IPv6 is set to Layer 3.

To enable ARP or NDP, select the **ARP** check box or the **NDP(NS/NA)** check box to the right of the **Dst MAC** field.

The ! button is an *instant* button which when touched will perform an ARP or NDP lookup immediately, instead of waiting until the transmitter starts.

#### **Broadcast**

The Broadcast Share control is used to set the ratio between Unicast and Broadcast frames transmitting.

#### Src MAC

The source MAC address can be specified manually, but the instrument comes with a default unique MAC address for each test interface port.

If the **Default** check box is selected, the default unique MAC address is used.

### Ethertype

When **IPv4** or **IPv6** is set to Layer 3, the **Ethertype** is automatically defined, based on the next protocol element. When **None** is set to Layer 3, it can be set between 0x05DD to 0xFFFF.

Touching the MPLS layer button displays the parameters available for the MPLS protocol layer.



# Level count

Up to eight levels of MPLS fields can be inserted in the frame. The number of MPLS fields is selected through the **Level count** drop-down menu, and each level is set up individually.

### Label

Allows you to set up a denoting of the MPLS.

**EXP** 

MPLS


Allows you to set up the 3 bit value EXP (Experimental - used in MPLS to support differentiated services (priority)).

### TTL

Allows you to set up the 8 bit value TTL (Time To Live).

MPLS-TP

Touching the MPLS-TP layer button displays the parameters available for the MPLS-TP protocol layer.

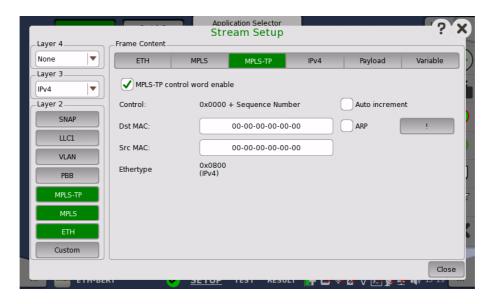

# MPLS-TP control word enable

When selecting the check box, a control word will be inserted in the frame.

### Auto increment

Selecting the **Auto increment** check box makes the sequence number in the RFC4448 control word increment automatically instead of being fixed to zero.


The remaining fields are described under the ETH layer.



When MPLS-TP is active the **ARP** button and **NDP(NS/NA)** button will be moved away from the <u>ETH</u> layer.

**PBB** 

Touching the PBB layer button displays the parameters available for the Provider Backbone Bridges (MAC-in-MAC) header.

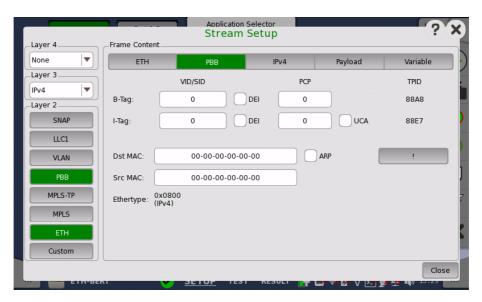

### **B-Tag**

Allows you to set a VLAN Identifier (VID), a Drop Eligible Indicator (DEI) and a Priority Code Point (PCP).

Displays a Tag Protocol Identifier (TPID).

### **I-Tag**

Allows you to set a VLAN Identifier (VID), a Drop Eligible Indicator (DEI), a Priority Code Point (PCP) and a User Customer Address (UCA). Displays a Tag Protocol Identifier (TPID).

# **Dst MAC**

The MAC-in-MAC destination address can either be specified manually, or be decided based on an ARP/NDP lookup.

When Layer 3 is set to IPv4, select the **ARP** check box to enable the ARP. When Layer 3 is set to IPv6, select the **NDP(NS/NA)** check box to enable the NDP.

The ! button is an **instant** button which when touched will perform an ARP or NDP lookup immediately, instead of waiting until the transmitter starts.

### Src MAC


Allows you to specify the MAC-in-MAC source address.

#### Ethertype

Shows the type automatically depending on layer configuration. If the value is selectable, select the value by touching the field.

#### **VLAN**

Touching the **VLAN** layer button displays the parameters available for the Virtual LAN protocol layer.

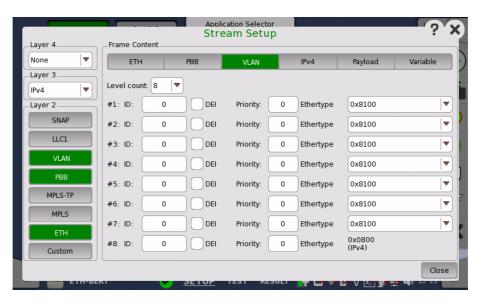

Virtual LAN (VLAN) is used to create independent logical networks within a physical network. When enabled, it adds a 16 bit IEEE 802.1Q field and a 16 bit Ethertype field to the header. The 802.1Q is separated into 3 parts.

VLAN affects the Ping and RFC2544/Router Latency test, i.e. when VLAN is enabled, the Network Master accepts only frames with VLAN tag. Furthermore, Ping replies will only be sent if the Ping request contains the same VLAN ID as the one selected.

#### Level count

Up to eight levels of VLAN can be inserted in the frame. The number of VLAN fields is selected through the **Level count** drop-down menu, and each level is set up individually.

For Ping application, the VLAN level count is supported up to 2. When the VLAN level count is 2, the two VLAN levels will be designated S-VLAN and C-VLAN. S-VLAN is short for Service provider VLAN and C-VLAN is short for Customer VLAN.







Touching the ID (VLAN ID) button launches a setup dialog box from which it is possible to set up a denoting of the virtual LAN.

#### DEI

Selecting the **DEI** check box sets a 1-bit flag denoting whether MAC addresses inside the frame are in canonical format.

### **Priority**


It is possible to set up the priority level of each frame.

### Ethertype

When the Level count is more than one, select the type from 0x8100, 0x88A8, 0x9100 or 0x9200.

When IPv4 or IPv6 is set to Layer 3, the Ethertype of the highest level is automatically defined, based on the layer 3 protocol. When None is set to Layer 3, it can be set between 0x05DD to 0xFFFF.

Touching the **LLC1** layer button displays the parameters available for the Logical Link Control protocol layer.

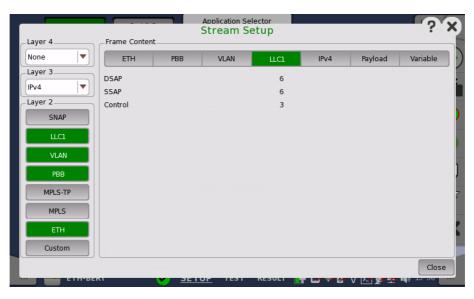


The DSAP, SSAP and Control fields are set automatically, based on the upper protocol layer.

- DSAP: Destination Service Access Point value (8 bits)
- SSAP: Source Service Access Point value (8 bits)
- Control: Control field value (8 bits or 16 bits)

LLC1

**SNAP** 

Touching the **SNAP** layer button displays the parameters available for the Sub Network Access Protocol protocol layer.

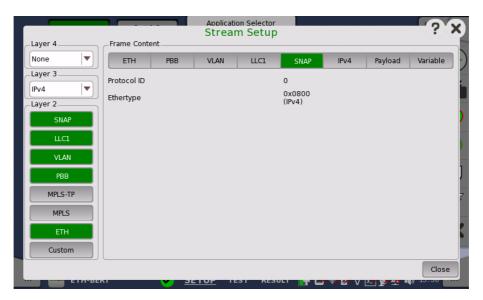


The **Protocol ID** is fixed to **0**, and the **Ethertype** field depends on the upper protocol layer.



**SNAP** is not possible without **LLC1**.

IPv4

Touching the **IPv4** layer button displays the parameters available for the Internet Protocol version 4 layer.

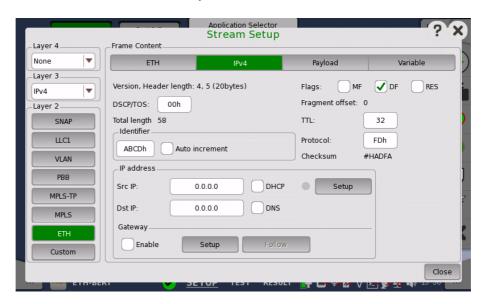

IPv4 header is defined in RFC 791 as below.

0	1	2	3		
0 1 2 3 4 5 6 7 8 9	0 1 2 3 4 5 6 7 8 9	0 1 2 3 4 5 6 7 8	9 0 1		
+-					
Version  IHL  Type	e of Service	Total Length	1		
+-					
Identifica	tion  Flags	Fragment Offse	t		
+-					
Time to Live	Protocol	Header Checksum	1		
+-					
Source Address					
+-					
Destination Address					
+-					
	Options	Paddin	g l		
+-					

### Version, Header length

Shows Version and Header length in the IPv4 header.

### DSCP/TOS

When changing the **DSCP/TOS** (Differentiated Service Code Point/Type of Service) setting, it is possible to define some handling characteristics of the datagram, originally defined in RFC 791. Other uses of the **DSCP/TOS** setting are VoIP, DiffServ and ECN.

### Total length

Shows Total length in the IPv4 header.

#### Identifier

The **Identifier** is mainly used for uniquely identifying fragments of an IP datagram. When the **Auto increment** check box is selected, the Identifier will be different for each sent frame.

# Flags

Selecting a check box sets its flag bit to "1".

- If the **MF** (More Fragments) flag is set: When a packet is fragmented, all fragments have the MF flag set except the last fragment.
- If the **DF** (Don't Fragment) flag is set: When fragmentation is required to route the packet, then the packet will be dropped.
- RES (Reserved) must be zero (i.e. not set).

### Fragment offset

Shows Fragment Offset value in the IPv4 header.

#### TTL

TTL (Time To Live) defines the number of 'hops' a datagram can do before it no longer is forwarded.


### Protocol

The **Protocol** field defines the upper/next layer protocol encapsulated in the IP datagram. Typical values in hex are: 1 = ICMP, 6 = TCP etc.

### Checksum

Shows a checksum.

#### IP address





When Multistream traffic is sent from one port to another, make sure that the source address on one port is the same as the destination address on the other port for each of the active streams. This applies both if the two ports are in one instrument and if they are in two different instruments.

The following addresses cannot be used for RFC 6349 application tests.

- All numbers are zero. (i.e, 0.0.0.0)
- Multicast address

Selecting the **DHCP** check box located next to the **Src IP** field will enable the Dynamic Host Configuration Protocol function.

Selecting the **DNS** check box located next to the **Dst IP** field changes the field name to **Hostname**, allowing you to specify the domain name server.

Touching the **Setup** button next to the virtual Lamp in the **Src IP** line will open the **DHCP/DNS Setup** dialog box.



- Selecting the **Renew lease when link is reestablished** check box enables the function that automatically renews the lease when the link is reestablished.
- Selecting the **Get gateway servers through DHCP** check box enables the function that automatically assigns the gateway.
- Selecting the **Get DNS setup through DHCP** check box enables the function that automatically assigns the DNS server.
- **Primary DNS** and **Secondary DNS** allow you to define these IPv4 addresses for the specific stream.
- When allocating IP addresses using DHCP, it is 'leased' for a certain period of time defined by the network. The time when the lease expires is indicated as *Current lease expire time*.
- Touching the **Renew now** button will renew the allocation of the IP address.
- Touching the Close button closes the dialog box.

#### Gateway

Select the **Enable** check box to enable the use of a gateway. When gateway is enabled and the destination address falls outside the network mask, an ARP lookup for the gateway IP address will be made. The resulting MAC address is used as destination. Gateway is usually used with ARP enabled as well.

Touching **Setup** next to the **Enable** check box will open the **Gateway Setup** dialog box.



- Default gateway: Set the IP address for the default gateway.
- **Network mask**: Set bits, which are used for network mask, to "1" consecutively from the first bit.

### Example


Default gateway 128.15.0.1

Network mask 255.255.0.0

In this example, the first eight bits (portion of 128.15) will be a network address.


When the <u>Follow</u> button is green on the Stream screen, the **Follow** button for Gateway is available. If you select the **Enable** check box when the **Follow** button is in green, **Follow** will be canceled. To set **Follow** again, close the Stream Setup dialog box and turn the **Follow** button in green.

Touching the IPv6 layer button displays the parameters available for the Internet Protocol version 6 layer.

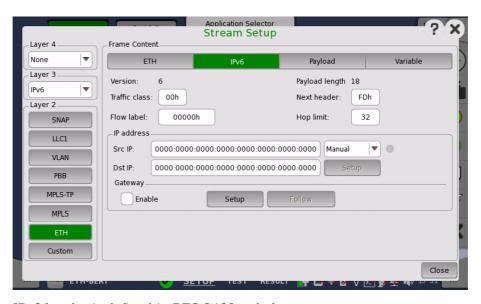

IPv6 header is defined in RFC 2460 as below.

IPv6

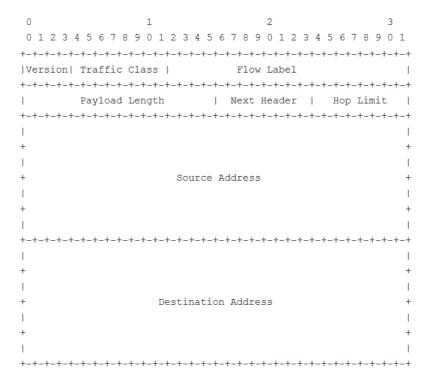

#### Version

Shows Version in the IPv6 header.

### Traffic class

**Traffic class** is similar to IPv4's **DSCP/TOS** and is used for the class and priority. This is defined in RFC 2474.

### Flow label

The Flow label indicates that the datagram belongs to a specific sequence of traffic between a source and destination. The default value is  $\mathbf{0}$ .

### Payload length

Shows Payload length in the IPv6 header. This value is calculated automatically.

#### Next header

The next header indicates the upper/next layer protocol encapsulated in the IP datagram. Typical values in hex are: 1 = ICMP, 6 = TCP etc.

### Hop limit

The **Hop limit** defines the number of 'hops' a datagram can do before it no longer is forwarded.

### IP address

#### Src IP

Select setting mode using drop-down menu.

- Manual: touch the field to enter 32 Hex values.
- Stateless: configures the address automatically. The lamp lit in green if the automatic configuration has succeeded.

This option is available when PBB nor MPLS-TP is not set to Layer 2.

Stateless IPv6 Setup Interface ID Link local address: FE80::200:FF:FE00:0 Router Advertisement Flags(RA) Source link-layer address Source MAC: Ν/Δ Prefix information Prefix N/A Flags(Prefix): N/A Life time N/A Close

Touching the **Setup** button next to the virtual Lamp in the **Src IP** line will open the **Stateless IPv6 Setup** dialog box.

Selecting the **Use src MAC** check box configures the interface ID from the MAC address.

When the check box is clear, touch the field to set the interface ID. Touching **Renew now** starts the source IP address configuration.



The measurement via routers by using a router advertising message is available for RFC 6349 application test. In that case, select **Stateless**.

#### **Dst IP**

Touch the field to enter 32 Hex values.



The following addresses cannot be used for RFC 6349 application tests.

- All numbers are zero. (i.e, ::)
- Multicast address

For link local addresses (First 16 bits of prefix is FE80), RFC 6349 application tests can be performed if the following requirements are met:

Requirement 1: Both Dst IP address and Src IP address are link local addresses. Requirement 2: Src IP address satisfies the followings.

- Prefix: FE80:0000:0000:0000
- Interface ID: Modified EUI-64 format generated from Src. MAC

### Gateway

Select the **Enable** check box to enable the use of a gateway. Packets whose destination IP address is not found in the network are forwarded to the default gateway address.

Touching Setup next to the Enable check box will open the Gateway Setup dialog box.




- **Default gateway**: Set the IP address for the default gateway.
- **Prefix mask**: Set bits, which are used for the prefix mask, to "1" consecutively from the first bit.

Example


When the <u>Follow</u> button is green on the **Stream** screen, the **Follow** button for Gateway is available. If you select the **Enable** check box when the **Follow** button is in green, **Follow** will be canceled. To set **Follow** again, close the Stream Setup dialog box and turn the **Follow** button in green.

Touching the UDP layer button displays the parameters available for the User Datagram Protocol layer.

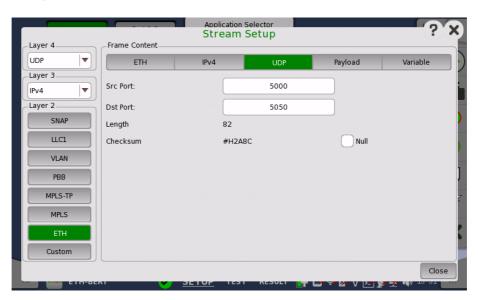

User Datagram Protocol is a core protocol of the Internet protocol suite. The UDP provides a minimal and simple interface between a network layer below and a session layer or application above. This protocol does not guarantee reliable and in-order delivery from sender to receiver.

UDP header is defined in RFC 768 as below.

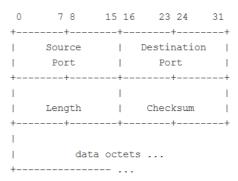

### Src Port

**Src Port** identifies the sending port and should be assumed to be the port to reply to if needed. If not used, then it should be zero.

### **Dst Port**

**Dst Port** identifies the destination port and the setting is required.

#### Length

Shows the sum of UDP header length and data length in bytes.


UDP

#### Checksum

**TCP** 

Optionally, the Checksum may be forced to zero, by selecting the  $\mathbf{Null}$  check box.


Touching the **TCP** layer button displays the parameters available for the Transmission Control Protocol layer.

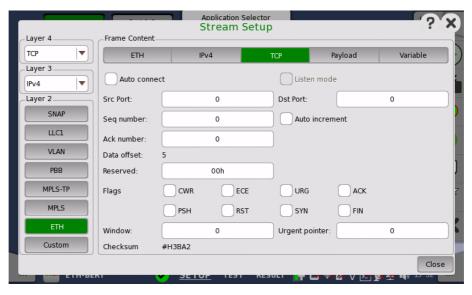

Transmission Control Protocol is a core protocol of the Internet protocol suite. It is the intermediate layer between the Internet Protocol below it and the application above it. This protocol guarantees reliable and in-order delivery from sender to receiver.

The Network Master supports sending frames that resemble TCP frames, but the traffic transmitted will not constitute a real TCP stream, as no handshake is performed.

TCP header is defined in RFC 793 as below.

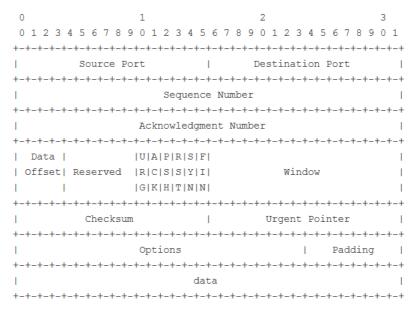

# Auto connect

By enabling **Auto connect**, it is possible to force the transmitter to establish a TCP connection before the actual traffic frames are sent. This makes it possible to pass a firewall/nat router from the inner side.

#### Listen mode

When **Listen mode** is enabled, the transmitter will await an external TCP connection before the actual traffic frames are sent. This makes it possible to pass a firewall/nat router from the other side (Remark: you must have something establishing the TCP connection from the inner side e.g. Network Master). In this mode the peers MAC, IP, and Port are taken from the incoming TCP connection.

#### Src Port

Src Port identifies the sending port.

#### **Dst Port**

Dst Port identifies the receiving port.

### Seq number

- If the **SYN** check box is selected, this value is set to the sequence number of SYN packet. The sequence number of the first TCP packet which follows SYN packet is this value plus 1.
- If the **SYN** check box is not selected, then this value is set to the sequence number of the first TCP packet to be sent.

The **Auto increment** check box may be selected in order for the Sequence number to follow the number of data bytes sent (Remark: the first data byte will be number zero in this mode, and not the number entered into the **Seq number** field).

### Ack number

If the ACK check box is selected, then the value of this field is the sequence number that the Network Master expects to receive in next TCP packet.

#### Data offset

Data offset specifies the size of the TCP header in 32-bit words. This is set automatically.

#### Reserved

Reserved for future use and should be set to zero.

### Flags

Contains 8 bit flags (control bits). The flags may be programmed individually, however when **Auto connect** check box is selected, most of the flags are controlled by the TCP state engine.

### Window

Specifies the size of the sliding window (i.e. the maximum receiver buffer). The **Window** defines the number of bytes that may be sent before waiting for an acknowledgement from the receiver.

### Checksum


The 16-bit checksum field is used for error-checking of the header and data.

### **Urgent pointer**

If the **URG** flag is set then this 16-bit field is an offset from the sequence number indicating the last urgent data byte.

**Payload** 

The Payload layer allows you to set the pattern of the Payload of the transmitted frames.

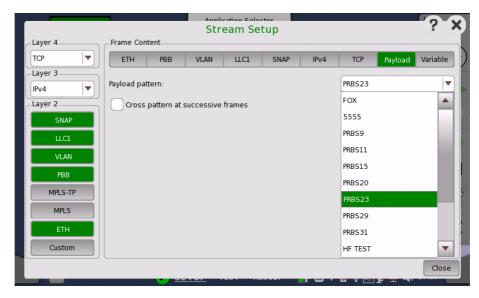

Open the Payload pattern drop-down menu to select the relevant pattern.

- FOX: ASCII code bit sequence of "THE QUICK BROWN FOX JUMPS OVER THE LAZY DOG".
- 5555: Repetition of "0101010101010101".
- PRBS9 to PRBS31: Pseudo-random bit sequence. For PRBS9, its bit length is  $511 (=2^9-1)$ .
- HF TEST: High frequency test pattern. (Defined in IEEE802.3 Annex 48A)
- CRPAT: Continuous random test pattern. (Defined in IEEE802.3 Annex 48A)
- JTPAT: Jitter tolerance test pattern.
- SPAT: Supply noise pattern.
- User 32 bit: Repetition of the user defined 32 bits.

If you select the **User 32 bit** pattern, a button appears with which you can open the <u>Pattern Editor</u> dialog box.


Selecting **Cross pattern at successive frames** sets the payload in Ethernet frames as successive payload pattern through multiple frames.



Cross pattern at successive frames is available for BERT application only.

Following is the explanation of an example when:


• Payload pattern is set to PRBS15. In this case, the pattern length is 32767 bit ( $\approx 4096$  byte).



ullet Frame size is set in Stream on  $\mathit{Test}$  setup screen so that the payload

length will be 1024 byte.

When the check box *is not* selected, Top of 1024 bytes in the payload pattern are set to the payload in Ethernet frames.



When the check box is selected, Payload pattern is divided and set to the payload in Ethernet frames so that the payload pattern is successive through Ethernet frames.






An identifier and time stamp (4 to 13 bytes) for the measurement are put at the head of the payload followed by the pattern specified for **Payload pattern**.


Header Identifier, Time stamp Pattern	FCS
---------------------------------------	-----

Variable

The Variable allows you to set variables in the transmitted frames.

• When ETH button in layer 2 is green.

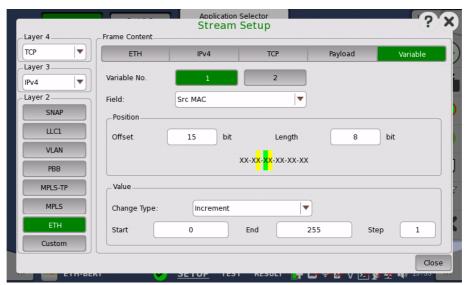

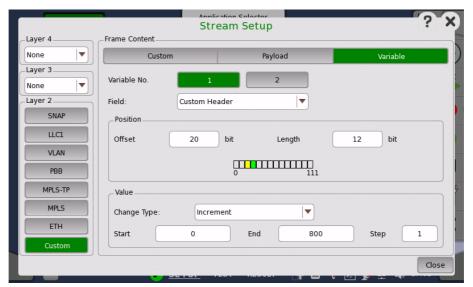

• When **Custom** button in layer 2 is green.

#### Variable No.

Select which of the two variables you want to define.

### **Field**

Use the drop-down menu to select the type of field. Note that the contents of the drop-down list depends on which protocol layers are currently chosen for the Ethernet frame.

# **Position**

Allows you to specify a bit position and bit length for the variable by **Offset** and **Length** field. The position of a variable is shown in green. 'X' means four bits. When Custom button in Layer 2 is green, row of boxes appears. A box indicates eight bits.

The part in green shows that all bits are variable. The part in yellow shows that partial bits are variable.

### Value

Use the **Change Type** drop-down menu to specify how the variable will change: **Increment**, **Decrement** or **Random**.

Specify **Start** and **End** values for the variable, as well as the number of **Steps**.

### 6.1.2.3 Swap

Touching the **Swap** button in the navigation area displays the following screen. **Swap** button appears in Reflector application.



This screen is where you configure the traffic loop by specifying how addresses and/or ports are to be swapped and reflected.


For MU110011A, MU110012A, and MU110013A, **Enable swap** check box appears. When selecting the check box, the swap setting will be enabled.

Selecting **Swap all MAC addresses** will transmit/reflect all received frames with their MAC addresses swapped. Use **Swap specific MAC address** to swap and reflect only the frames with a specific MAC address.

The IP addresses and UDP/TCP ports may also be swapped inside the reflected frames. Additionally, the ACK flag may be forced set inside reflected TCP frames.

#### 6.1.2.4 Settings

Touching the **Settings** button in the navigation area will display the screen shown below.

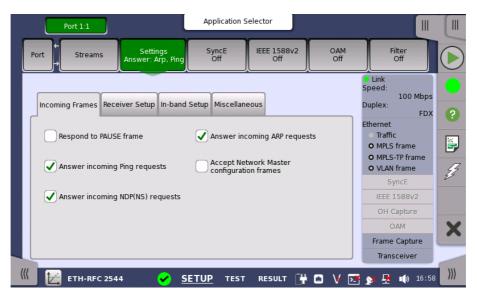

This screen allows you to specify how the Network Master handles incoming frames on the currently selected Ethernet port. It can also be used to inspect the current status of the selected port.

#### **Follows**

It is possible to let the Port 2 copy the setup from Port 1 by touching the **Follows** button. This button appears when you can copy the Port 1 settings to Port 2.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

### **Incoming Frames**

### Respond to PAUSE frame

Selecting this check box will force the transmitter to pause for a short period of time if a pause frame (defined in IEEE 802.3x) is received, e.g. in case of congestion of the foreign receiver.

#### **Answer incoming Ping requests**

When the check box is selected, the Network Master will reply to ping requests, using the Source MAC and IP addresses in the replies.

Note that when using the Ping application, this setting is ignored, and replies to Ping requests will always be sent - also from the passive port.

### Answer incoming NDP(NS) requests

When the check box is selected, the Network Master will reply to incoming NS (Neighbor Solicitation) requests, using the Source MAC and IP addresses in sending out replies.

NDP: Neighbor Discovery Protocol

Note that when using the Ping application, this setting is ignored, and replies to the NDP(NS) requests will always be sent - also from the passive port.

#### Answer incoming ARP requests

When the check box is selected, Network Master will reply to incoming ARP requests, using the Source MAC and IP addresses in sending out replies.

ARP: Address Resolution Protocol

Note that when using the Ping application, this setting is ignored, and replies to the ARP requests will always be sent - also from the passive port.

#### **Accept Network Master configuration frames**

This setting appears in the RFC2544 and SAT1564 applications. When the check box is selected, Network Master can be configured by another Network Master via test interface.

# **Receiver Setup**

The following items can be set when the bit rate is 10 Gbps or less.

- Expected preamble length
- Ignore preamble violations
- IFG lower threshold
- Filter IFG violations caused by master/slave clock synchronization

### Expected preamble length

Allows you to specify the preamble length that the receiver should consider as 'normal' that is, non-erroneous). The default setting is 8 bytes. The range is from 3 to 15 bytes.

### Ignore preamble violations

Select this check box if you want to ignore preamble violations.

### IFG lower threshold

Allows you to specify the minimum allowed receiver interframe gap. The default setting is 12 bytes. The range is from 8 to 15 bytes. In case of 40GbE or 100GbE, the length is fixed to 35.

#### Filter IFG violations caused by master/slave clock synchronization

Applies only to Gigabit mode, where the IFG will not be constant, which leads to a larger number of IFG violated frames than expected. Select this function to hide those violations.

### Jumbo frame size upper limit

Allows you to specify the size of the Jumbo frames (that is, Ethernet frames longer than 1518 that are not counted as oversized/erroneous). The default setting is 9018 bytes. The range is from 1519 to 16000 bytes.

# Enable remote fault detection in Autonegotiation

When the check box is selected, the remote fault detection is enabled if Interface type is **Electrical** or **SFP** and Port Mode is **Autonegotiate**. Remote fault status is displayed in <u>Link partner abilities</u> of status information.

### In-band Setup



This tab provides the settings for the remote control of another Network Master using commands via the test interface.

In-band control communication supports the following protocols.

- Ethernet/IPv4/TCP
- Ethernet/VLAN/IPv4/TCP

The TCP port number is set in Remote Control on the Instrument Tool bar.

#### Allow In-band control

Selecting the check box enables the remote control using commands via test interface.

Only one port is able to allow In-band control. When In-band control is allowed at another port, this setting cannot be made.

When Port Setup is set to 10Gbps WAN, In-band control is not performed. This tab is not displayed in the Cable, Pass Through, and Discovery applications. For the Discovery application, In-band control is allowed internally and the remote control via test interface is enabled.

For the Reflector application, selecting **Allow In-band control** selects the following settings in the <u>Swap</u> forcibly.

- Swap IP address
- Swap UDP/TCP ports

#### Src. MAC

Set a MAC address of the port used for the In-band control communication. Selecting **Default** check box uses the MAC address assigned to the port hardware.

Do not set the following MAC addresses. It is unable to search for Network Masters using one of these addresses in the Discovery application.

- Multicast MAC address (including FF-FF-FF-FF)
- 00-00-00-00-00

# Src. IP

Set an IP address of the port used for the In-band control communication. Selecting **DHCP** obtains an IP address automatically. Following setting values are fixed.

- DSCP/TOS: 0x00
- TTL: 20

Do not set the same address for **Src. IP** of Discovery application one in the application which is searched for.

The following addresses cannot be set.

- The same IP address as the IP address set at <u>Ethernet</u> in the Network screen on Instruments tool bar
- Address whose first one byte value is 0 or 224 to 225
- Loopback address (129.0.0.1)
- Network address (all bits in host part are set to '0')
- Broadcast address (all bits in host part are set to '1')

# Network mask

Set a network mask for In-band control.









Set a network mask and IP address so that the network does not duplicate with one specified in <a href="Ethernet"><u>Ethernet</u></a> in **Network** screen on Instruments tool bar.

### Gateway

Selecting check box allows users to set the default gateway IP address.

### **Password**

When the check box is selected, a password with 4 to 8 characters can be set.

#### **VLAN Level**

When VLAN is set to the In-band control communication, set **Level** and **ID**. Following setting values are fixed.

DEI: OFFPriority: 0

• Ethertype: 0x8100 (IPv4)

### Miscellaneous

# Allow changes to interface setup while a test is running

Select this check box if you want to be able to make changes to the following interface setup during a measurement.


- WAN
- Stream
- Settings
- SyncE
- IEEE 1588v2
- OAM
- Filter


### Compatible configuration frames with Network Master V2.X or older

This check box appears in SAT (Y.1564) application.

Select this check box if you want the configuration frames to support communication with Network Master Version 2.X or older.

### 6.1.2.5 SyncE



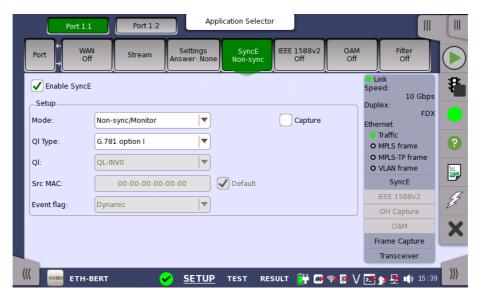

This screen allows you to configure the setup parameters related to Synchronous Ethernet. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

#### **Enable SyncE**

The check box is enabled when the interface bit rate is 25 Gbps or less.

Select this check box to enable statistics of the quality level reported in the received ESMC (Ethernet Synchronization Messaging Channel) messages and the generation of Sync Alarm when such messages are missing.



Due to the properties of 10 Mbps Ethernet, the transfer of SyncE timing cannot be guaranteed at this rate.

### **Follows**

It is possible to let the Port 2 copy the setup from Port 1 by touching the **Follow** button. When this button is displayed in green, Port 2 continues to follow Port 1 change. This button appears when the Port 1 settings can be copy to Port 2.

#### Setup

### Mode

- Non-sync/Monitor: Network Master receives ESMC messages and monitors the quality level, but does not transmit an ESMC message. Network Master does not synchronize itself with the reference clock.
- Synchronous: Network Master transmits the quality levels specified in *QL* in an ESMC message every second.

### QI Type

Allows you to select a protocol/option. This changes the textual representation of the quality levels on the result- and status pages.

QI

Allows you to specify the quality level to be indicated in the transmitted Ethernet signal.

Combination of QI Type and QI

G.781 option I	G.781 option II	G.781 option III	G.8264
QL-INV0	QL-STU	QL-UNK	QL-INV0
QL-INV1	QL-PRS	QL-INV1	QL-INV1
QL-PRC	QL-INV2	QL-INV2	QL-INV2
QL-INV3	QL-INV3	QL-INV3	QL-INV3
QL-SSU-A	QL-TNC	QL-INV4	QL-INV4
QL-INV5	QL-INV5	QL-INV5	QL-INV5
QL-INV6	QL-INV6	QL-INV6	QL-INV6
QL-INV7	QL-ST2	QL-INV7	QL-INV7
QL-SSU-B	QL-INV8	QL-INV8	QL-INV8
QL-INV9	QL-INV9	QL-INV9	QL-INV9
QL-INV10	QL-ST3	QL-INV10	QL-EEC2
QL-SEC	QL-INV11	QL-SEC	QL-EEC1
QL-INV12	QL-SMC	QL-INV12	QL-INV12
QL-INV13	QL-ST3E	QL-INV13	QL-INV13
QL-INV14	QL-PROV	QL-INV14	QL-INV14
QL-DNU	QL-DUS	QL-INV15	QL-INV15

# Src MAC

Allows you to specify the MAC address to be used in ESMC messages. You can either use the **Default** check box to force an instrument-specific default value, or touch the address field to enter an address yourself.

### **Event flag**

When Mode is set to Synchronous, sets the event flag of packets.

• **Dynamic**: Sets to 1 to the first packet, sets to 0 to other packets.

Static Off: Sets to 0.Static On: Sets to 1.

# Capture


Selecting this check box enables recording of ESMC messages. The captured packet data are saved to file with extension "pcap" when the measurement has ended. The destination folder of the captured data file is the same folder where the measurement result file is saved.




When capturing the packets concerning SyncE protocol, FCS values of Ethernet frames are not included in the captured packet data file.

#### 6.1.2.6 IEEE 1588v2

Touching the IEEE 1588v2 button in the navigation area will display the screen shown below.

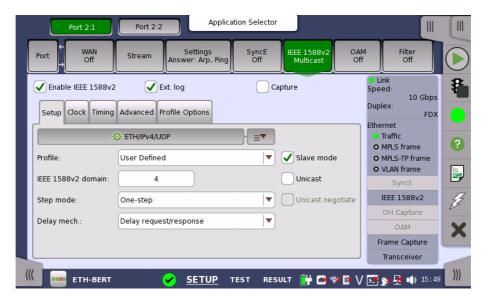

This screen allows you to configure the IEEE 1588 clock (based on the IEEE 1588 Precision Time Protocol (PTP), which is used to distribute absolute time across the Ethernet network). An IEEE 1588 clock can act either as a timing master or as a slave. The screen also contains information about the current status of the selected port.

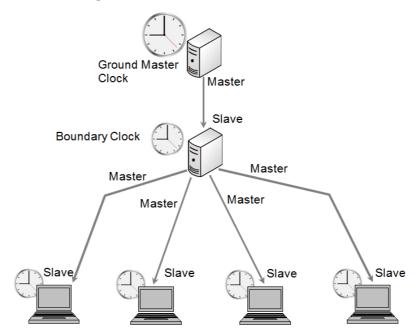

The clock may be set up in either normal or unicast mode.

#### Enable IEEE 1588v2

The check box is enabled when the interface bit rate is 25 Gbps or less.

Select this check box to start the clock. The settings of the **Slave mode** and **Unicast** check boxes in Setup tab will determine whether the clock runs as a slave or will become the grandmaster clock.



When the Network Master becomes a grandmaster, and if the internal clock is selected (or if the GPS is not available), the IEEE 1588 clock is set from the Network Master's internal time (offset by the selected UTC offset). This action only takes place when the clock is restarted (e.g. disable/enable the clock will force this).

When the Network Master is grandmaster in unicast mode, only one slave will be accepted at a time. Other slaves are just ignored.

#### Ext. Log

Used to record the external log. If you select this, the IEEE1588v2 Log button appears in the navigation area of Result screen.

### Capture

Used to capture the packets concerning IEEE 1588 v2 protocol. The captured packet data are saved to file with extension "pcap" when the measurement has ended. The destination folder of the captured data file is the same folder where the measurement result file is saved.



When capturing the packets concerning IEEE 1588v2 protocol, FCS values of Ethernet frames are not included in the captured packet data file.

#### **Follows**

It is possible to let the Port 2 copy the setup from Port 1 by touching the **Follow** button. When this button is displayed in green, Port 2 continues to follow Port 1 change. This button appears when the Port 1 settings can be copy to Port 2.


The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

The setup area of this screen contains the following groupings of parameters, placed on separate tab pages:

- General setup parameters
- Master clock specific parameters
- Timing-specific parameters
- Advanced parameters
- Profile option parameters

### Setup tab

The **Setup** tab contains the general setup parameters for IEEE 1588v2.

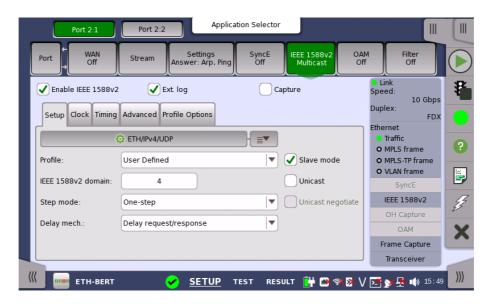

### Transport protocol

Touching the protocol button will launch the detailed mode dialog box (the <a href="IEEE 1588v2 Protocol">IEEE 1588v2 Protocol</a> dialog box). Touching the arrow to the right of the button () will open the quick selection menu. You can set up the transport protocol(s) for PTP messages either by selecting one of the predefined configurations (e.g. ETH/VLAN/IPv4/UDP) from the quick selection menu or by configuring the protocols via the detailed mode dialog box.

Depending on the transport protocol setting, Profile setting will be forced to **User Defined**.

#### **Profile**

Select the profile of PTP (Precision Time Protocol) from below.

- **User Defined**: Allows you to define the PTP profile. Available IEEE 1588v2 domain is 0 to 255. Unicast/Multicast and the delay mechanism can be set.
- G.8265.1: Uses the PTP profile defined in ITU-T G.8265.1. This profile is used for unicast mode. Available IEEE 1588v2 domain is 4 to 23. Transport protocol will be set to ETH/IPV4/UDP.
- **G.8275.1**: Uses the PTP profile defined in ITU-T G.8275.1. This profile is used for multicast mode. Available IEEE 1588v2 domain is 24 to 43. Transport protocol will be set to **ETH**.
- G.8275.2: Uses the PTP profile defined in ITU-T G.8275.2. In this profile, Unicast and Unicast negotiation check boxes are both selected. Available IEEE 1588v2 domain is 44 to 63.

### IEEE 1588v2 domain

Touch the field to set the domain. The PTP messages and data sets are associated with a domain and therefore the PTP protocol is independent for different domains.



In multicast mode, review the attributes in the timing section when changing the domain. Otherwise the best master algorithm may fail for all IEEE 1588v2 clocks in the domain.

#### Step mode

Select how to send the message for the time synchronization: **One-step** and **Two-step**.

- One-step: The timestamp of the time when the master send a Sync message is inserted into the Sync message itself. Follow\_up message is not sent.
- Two-step: The timestamp of the time when the master send a Sync message is inserted into the Follow\_up message which follows the Sync message. For Network Master, the same timestamp is inserted into both the Sync message and the Follow\_up message.

#### Delay mech.

Allows you to choose which mechanism to use for calculating the mean path delay: **Delay request/response** or **Peer delay**.

#### Slave mode

If the check box is selected, the port can only act as a slave clock. Used in both multicast (normal) and unicast mode.

#### Unicast

Used to enable the unicast profile. For domains 0 to 3 static unicast is enabled. For domains 4 to 23 the Telecom Profile (ITU-T G.8265.1 IEEE 1588 v2 profile for telecommunication) is used.

If Slave mode is checked, the clock of the Network Master will always run as a slave in both normal and unicast mode.

If Slave mode is not checked in normal mode, the best master clock algorithm is run and the result of this will determine if the Network Master can become a grandmaster clock. In Unicast mode, if the Slave mode is not checked, the Network Master will become a grandmaster clock.

#### Unicast negotiate

Selecting the check box enables the unicast negotiation. This check box is available when Profile is set to **User Defined** and the **Unicast** is selected.

### Clock tab

The **Clock** tab contains the parameters related to the grand master clock-specific setup. Note that only ID can be set if the port is set in Slave Mode.



### Source



Allows you to specify the time reference that the Network Master uses to send PTP messages.

- Internal: Current instrument time
- GPS: GPS time (Requires external GPS receiver)

## Priority #1/#2

Allows you to specify the priority 1 and priority 2 values. Acceptable values are between 0 and 255.

#### Class

Allows you to specify the clock class. Acceptable values are between 0 and 255

## Identity

Allows you to specify the 64 bit clock identity. You can either use the Source MAC to generate the identity (by selecting the **Use src MAC** check box) or you can type the identity yourself (using the address field).

#### Time source

Either choose one of the predefined time sources in the drop-down menu, or select **User defined** and enter a value manually. Acceptable values are between 0x00 and 0xFF.

#### Accuracy

Either choose one of the predefined accuracy in the drop-down menu, or select **User defined** and enter a value manually. Acceptable values are between 0x00 and 0xFF.

 $\mbox{\sc ePRTC}$  connected, PRTC connected, and PRTC not connected are available when:

• Profile is set to G.8275.1, G.8275.2 or User Defined and Slave mode is cleared.


PRTC: Primary Reference Time Clock

## flagField

Displays the flag field of the announce message in hexadecimal. You can edit this value on the <u>Advanced</u> tab.

## Timing tab

The **Timing** tab contains the timing-specific parameters.

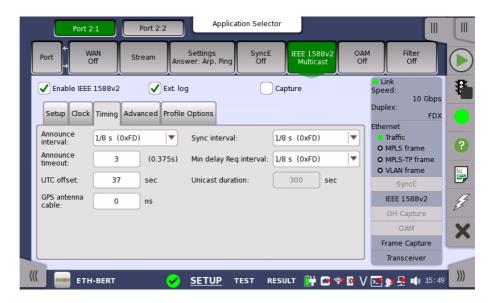



In multicast mode, it is important that all IEEE 1588v2 clocks in the same domain uses the same announce interval and announce timeout values. Otherwise the best master algorithm may fail. Sync interval and Min. delay Req. interval should also match the domain.

#### Announce interval

Allows you to specify the sending interval of announce messages. Available values are between  $1/8\ s$  and  $32\ s$ .

The data to send actually is displayed in hexadecimal.

#### Announce timeout

Allows you to specify the number of missed announce intervals before announce timeout. Acceptable values are between 2 and 255.

The calculated time is displayed right hand of the field.

#### **UTC** offset

Set the time difference between the internal clock or Coordinated Universal Time (UTC) and Internal Atomic Time (TAI). For the time of January 2017, set 37 seconds as the difference between UTC and TAI. This value is used when converting the internal time or a GPS based UTC time to TAI based time, which is used in an IEEE 1588 clock. The correct UTC/TAI offset value changes when leap seconds are applied to the UTC time.

#### GPS antenna cable

Allows you to specify the delay time of GPS antenna cable connected to the Network Master in nano second unit.

When calculating the delay time from the cable length, it is recommendable to use 5 ns/m as the conversion factor.

When using the following GPS provided by Anritsu, set 25 ns.

• G0325A

## Sync interval

Allows you to specify the interval between transmitted sync messages. Available values are between  $1/128\ s$  and  $32\ s$ .

The data to send actually is displayed in hexadecimal.

## Min delay Req. interval

Allows you to specify the minimum interval between transmitted delay request messages. Available values are between  $1/128\ s$  and  $32\ s$ .

The data to send actually is displayed in hexadecimal.

#### **Unicast duration**

In unicast slave mode, you ask a master to emit announce, sync and delay response messages for some time. This setting is enabled when the <u>Setup</u> tab is set to either of the following.

- Profile is set to **G.8265.1** and **Slave mode** is selected.
- Profile is set to User Defined and Slave mode, Unicast, Unicast negotiate are selected.

After this period, the master forgets everything about your request. The Unicast duration is this period in seconds. Legal values are from 60 to 1000 seconds. A Network Master unicast slave will renew the request 10 seconds before timeout.

#### Advanced tab

On the **Advanced** tab, you can edit the flag field of the announce message if the **Slave mode** check box is not selected on the Setup tab.



## flagField

Displays the bit settings of Octet:0 and Octet:1 in hexadecimal.


# Octet:0, Octet:1

Select a checkbox to set the bit to 1.

To change flagField with keeping the time synchronization when **Unicast negotiation** on Setup tab is selected, it is necessary that addresses between the master and the slave have been resolved.

## **Profile Options tab**

The **Profile Option** tab contains the signalling message parameter.

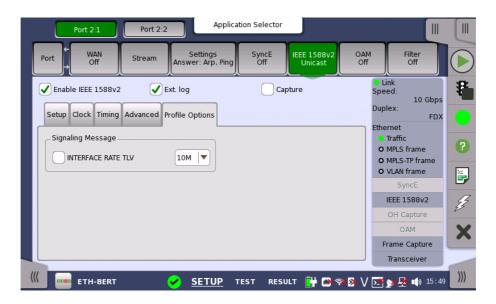

#### INTERFACE RATE TLV

This checkbox is available only when Profile is set to G.8275.2 on the Setup tab. Select this check box if bit rates are different between transmitted and received signals. For INTERFACE RATE TLV, refer to the following standards.

- ITU-T G.8271/Y.1366 Time and phase synchronization aspects of telecommunication networks
  - $\label{lem:power_problem} \mbox{Appendix}\,\, V\,\, .\,\, \mbox{Delay asymmetry resulting from interface rate change in PTP-unaware network elements}$
- ITU-T G.8275.2/Y.1369.2 Internet protocol aspects . Transport Precision time protocol telecom profile for phase/time synchronization with partial timing support from the network

Annex D. TLV for PTP interface rate

When the check box is selected, the Network Master performs the following operation:

- When the Network Master behaves as Master, INTERFACE RATE TLV is appended to Signalling Message.
- When the Network Master behaves as Slave, it calculates delayAsymmetry by using the bit rate of the received INTERFACE RATE TLV.

In the drop-down menu, you can select a desired bit rate.

# **Transport Protocol**

The IEEE 1588v2 Protocol dialog box is launched by touching the protocol button on the Setup tab page. The dialog box allows you to configure the protocols in detailed mode.



In the IEEE 1588v2 Protocol dialog box, the buttons on the left-hand side allow you to select the relevant layers. The current selection is shown at the top of the Frame Content area. Touching one of the layer buttons in the Frame Content area will display the setup parameters for that layer.

The following layers and parameters are available:

#### ETH layer

When the Layer 3 is set to **None**, you can set **Src MAC** and **Select Multicast MAC address** only.

- Dst MAC Type in the destination MAC address to be used with all PTP
  - Touch the **ARP** button to solve any MAC setup in connection with IPv4. Touch the **NDP** (NS/NA) button to solve any MAC setup in connection with IPv6.
- Src MAC Type in the source MAC address to be used with all PTP frames. Select Default to use the default MAC that comes with the Ethernet port.
- Ethertype Ethernet type is user-selectable only in case of VLAN use.
- Select Multicast MAC address The Multicast MAC address to be used in PTP frames.
  - Automatic select: Multicast MAC address will be set depending on the message.
  - 01-80-C2-00-00-0E: Multicast MAC address used for non-peer-delay measurement mechanism messages.
  - 01-1B-19-00-00: Multicast MAC address used for peer-delay measurement mechanism messages.

## **MPLS** layer

Select the number of levels using **Level count** drop down menu.

- Level count Up to eight levels of MPLS fields can be inserted in the frame. The number of MPLS fields is selected through the Level count drop-down menu, and each level is set up individually.
- Label Allows you to set up a denoting of the MPLS.
- **EXP** Allows you to set up the 3 bit value EXP (Experimental used in MPLS to support differentiated services (priority)).
- TTL Allows you to set up the 8 bit value TTL (Time To Live).

## **VLAN** layer

When the VLAN level count is 2, the two VLAN levels will be designated S-VLAN and C-VLAN. S-VLAN is short for Service provider VLAN and C-VLAN is short for Customer VLAN.

- Level count Up to eight levels of VLAN can be inserted in the frame. The number of VLAN fields is selected through the Level count drop-down menu, and each level is set up individually.
- ID Touching the ID (VLAN ID) button launches a setup dialog box from which it is possible to set up a denoting of the virtual LAN.
- **DEI** Selecting the **DEI** check box sets a 1-bit flag denoting whether MAC addresses inside the frame are in canonical format.
- Priority It is possible to set up the priority level of each frame.
- Ethertype When the Level count is more than one, select the type from 0x8100, 0x88A8, 0x9100 or 0x9200.

The layer 3 protocol number is displayed in the lowest line.

#### IPv4 layer

IGMP host and IGMP version appear when Profile is set to SMPTE 2059-1.

- Src IP Input the IPv4 source address.
- Dst IP In unicast mode, input the IPv4 destination address.
- DSCP(PTP events message) and DSCP(PTP other message) Set the DSCP value to be used for transmitted PTP event frames and a value for all other PTP frames. Acceptable values are between 0x00 and 0x3F.
- IGMP host Touch Join to send a Join message from the Network Master to the IGMP host. The button display changes to Leave.

  Touch Leave to send a Leave message to the IGMP host.
- **IGMP version** Select a version from the list. Refer to <u>IGMP host</u> of Stream setup.

#### IPv6 layer

MLD host and MLD version appear when Profile is set to SMPTE 2059-1.

- Src IP Select setting mode using drop-down menu.
  - Manual: touch the field to enter 32 Hex values.
  - Stateless: configures the address automatically. The lamp lit in green if the automatic configuration has succeeded.

Touching the **Setup** button under the virtual lamp in the **Src IP** line will open the **Stateless IPv6 Setup** dialog box.


Selecting the **Use src MAC** check box configures the interface ID from the MAC address.

When the check box is clear, touch the field to set the interface ID.

Touching **Renew now** starts the source IP address configuration.

- Dst IP In unicast mode type in the IPv6 destination address.
- Multicast scope Select one of the predefined IPv6 multicast scope values or choose User defined to manually enter a value. Acceptable values are between 0x0 and 0xF.
- Payload length Select how to set the payload length.
   Auto: Payload length in the IPv6 header is set automatically.
   Null: Sets 0 to the payload length in the IPv6 header.

• Extension header -Appends the IPv6 extension header. Touching Setup opens the Extension Header dialog box.

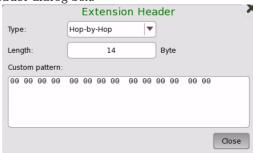

Туре

Select the extension header type from Hop-by-Hop, Routing (Type 0), Destination.

#### Length

Set the byte length of the custom pattern.

The value setting to the actual header is the truncated value after the decimal point of (Length + 2)/8.

#### Custom pattern

Touch the field to edit the pattern by using Pattern Editor.

- MLD host Touch Join to send a Join message from the Network Master to the MLD host. The button name changes to Leave.
  - Touch Leave to send a Leave message to the MLD host.
- MLD version Select a version from the list. The function varies by version. Refer to MLD host of Stream setup.

#### 6.1.2.7 OAM

Touching the **OAM** button in the navigation area will display the screen shown below.



OAM (Operation, Administration and Management) is a group of management functions that provides system or network fault indication, performance monitoring, security management, diagnostic functions, configuration and user provisioning.

This screen allows you to configure the OAM application (i.e. the OAM functions). It can also be used to inspect the current status of the selected port.

#### Protocol

Touch the button in the top left-hand part of the screen to select the protocol. The setup parameters are grouped according to protocol.

- <u>802.3ah protocol</u> Applies to the connectivity of point-to-point connections across one hop.
- <u>802.1ag protocol</u> Applies to the connectivity of bridges and paths that pass through bridges. Handles both multipoint connections and point-to-point connections.
- <u>Y.1731 protocol</u> An extension to the 802.1ag standard and relies upon the 802.1ag protocol for transport. Applies to both multipoint and point-to-point connections.

In addition, the 802.1ag and Y.1731 protocol screens contain a special <u>Discovery setup</u>.



To change to a different protocol, the state of the current protocol will be set to 'Off'.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

#### **OAM Protocol**



In the **OAM Protocol** dialog box the buttons on the left-hand side allow you to select the relevant layers. The current selection is shown at the top of the **Frame Content** area. Touching one of the layer buttons in the **Frame Content** area will display the setup parameters for that layer.

The following layers and parameters are available:

#### **OAM layer**

**Src MAC**: The MAC address of the source that sends the OAM Protocol Data Units, which is a unicast address. When selecting the **Default** check box, the MAC address which is set to the port is used.

#### **PBB** layer

• B-Tag: Allows you to set a VLAN Identifier (VID), a Drop Eligible Indicator

- (**DEI**) and a Priority Code Point (**PCP**). Displays a Tag Protocol Identifier (**TPID**).
- I-Tag: Allows you to set a VLAN Identifier (VID), a Drop Eligible Indicator (DEI), a Priority Code Point (PCP) and a User Customer Address (UCA). Displays a Tag Protocol Identifier (TPID).
- Dst MAC: Touch the field to enter the PBB destination address.
- Src MAC: Touch the field to enter the PBB source address.
- Ethertype: When the VLAN layer is added, select the type from 0x8100, 0x88A8, 0x9100 or 0x9200.

## MPLS, MPLS-TP layer

Select the number of levels using Level count drop down menu.

- Level count Up to eight levels of MPLS fields can be inserted in the frame. The number of MPLS fields is selected through the Level count drop-down menu, and each level is set up individually.
- Label Allows you to set up a denoting of the MPLS.
- Traffic Class Allows you to set up the 3 bit value EXP (Experimental used in MPLS to support differentiated services (priority)).
- TTL Allows you to set up the 8 bit value TTL (Time To Live).

### **VLAN** layer

When the VLAN level count is 2, the two VLAN levels will be designated S-VLAN and C-VLAN. S-VLAN is short for Service provider VLAN and C-VLAN is short for Customer VLAN.

- Level count Up to eight levels of VLAN can be inserted in the frame. The number of VLAN fields is selected through the Level count drop-down menu, and each level is set up individually.
- ID Touching the ID (VLAN ID) button launches a setup dialog box from which it is possible to set up a denoting of the virtual LAN.
- **DEI** Selecting the **DEI** check box sets a 1-bit flag denoting whether MAC addresses inside the frame are in canonical format.
- **Priority** It is possible to set up the priority level of each frame.
- Ethertype When the Level count is more than one, select the type from 0x8100, 0x88A8, 0x9100 or 0x9200.

The higher layer protocol number is displayed in the lowest line.

# 802.3ah protocol setup

Selecting the 802.3ah protocol will display the screen shown below.



#### Discovery tab

The **Discovery** tab contains the following parameters:

#### State

Allows you to set the state of the protocol to either On or Off. Note that when State is set to On, the Link mode, Vendor OUI and Vendor specific info parameters are disabled.

#### Link mode

Allows you to set the DTEs to **Active** or **Passive** mode. active DTEs initiate the exchange of information, while passive DTEs react to the initiation by the remote DTE. Note that active DTEs operate in a limited respect if the remote OAM entity is in passive mode.

## Vendor OUI

Allows you to specify the 24-bit Organizationally Unique Identifier of the vendor. Touch the field to launch an editor dialog box.

## Vendor specific info

Allows you to specify a 28-bit identifier that may be used to differentiate a vendor's product models/versions. Touch the field to launch an editor dialog box.

#### Unidirectional

Select this check box to make the device operate in unidirectional transmission mode.

#### Link event

This setting is reserved for future use and cannot be set.

## Remote loopback

This setting is reserved for future use and cannot be set.

#### Variable retrieval

Select this check box to make the DTE support sending Variable Response OAMPDUs.

## Defects tab

The Defects tab allows you to enable/disable local defects.

#### Link fault

Select this check box to enable a message if the PHY determines that a fault has occurred on the receive direction of the local DTE.

## Dying gasp

Select this check box to enable a message if an unrecoverable local failure condition has occurred.

#### Critical event

Select this check box to enable a message if an unspecified critical event has occurred.

# 802.1ag protocol setup

Selecting the 802.1ag protocol will display the screen shown below.



The screen contains two views: the default Setup view and the Discovery view. Use the **Setup** and **Discovery** buttons at the bottom of the screen to switch between the two views.

The Setup view is described below. The Discovery view is described in a separate section.

## General parameters

## State

Allows you to set the state of the protocol to either **On** or **Off**. Note that when **State** is set to **On**, the other general parameters are disabled, but the tabs and their contents are enabled.

#### MEP ID

Allows you to specify the Local Maintenance Point ID, which will identify the unit in the MA (Maintenance Association).

MEP: Maintenance End Point

#### **Domain**

Allows you to identify the network or part of the network for which faults in connectivity are managed.

#### MD Level

Use the drop-down menu to specify the MD (Maintenance Domain) level at which the MEP exists.

#### Association

Allows you to specify the Main Association Identifier.

#### CCM tab

The **CCM** tab contains the Continuity Check Message parameter:

#### **CCM** interval

Use the drop-down menu to specify the frequency at which CCMs are transmitted and expected to be received.

#### LBM tab

The **LBM** tab contains the Loopback Message parameters:

## **Optional TLV**

Use the drop-down menu to select a TLV type (Type, Length and Value), if relevant. The possible types are: **Data TLV** and **Test TLV**. If you select one of the TLV types, fields for specifying the **Length** and **Value** will appear.

## Length

Only available if a Data or Test TLV type has been selected. Allows you to specify the length of the TLV.

## Value

Only available if a **Data TLV** or **Test TLV** type has been selected. Allows you to specify the value of the TLV. Note that for the Data TLV type, this field is an entry field where you open an editor and type the value; for the Test TLV type, it is a drop-down menu.

#### LTM tab

The LTM tab contains the Link Trace Message parameters:

## TTL

Allows you to specify a TTL (Time to Live) value. Used to indicate whether or not an LTM should be terminated by the receiver.

## Trans ID

Allows you to specify the transaction number for the LTM.



Y.1731 protocol setup Selecting the Y.1731 protocol will display the screen shown below.

The screen contains two views: the default Setup view and the Discovery view. Use the **Setup** and **Discovery** buttons at the bottom of the screen to switch between the two views.

The Setup view is described below. The Discovery view is described in a separate section.

## General parameters

## State

Allows you to set the state of the protocol to either **On** or **Off**. Note that when **State** is set to **On**, the other general parameters are disabled, but the tabs and their contents are enabled.

## **MEP ID**

Allows you to specify the Local Maintenance Point ID, which will identify the unit in the MEG (Maintenance Entity Group).

## **MEG ID**

Allows you to identify the MEG (MEG End Point) to which the MEP belongs.

## MEG level

Use the drop-down menu to specify the MEG level at which the MEP exists.

#### CCM tab

The **CCM** tab contains the Continuity Check Message parameter:

## **CCM** interval

Use the drop-down menu to specify the frequency at which CCMs are transmitted and expected to be received.

### LBM tab

The LBM tab contains the Loopback Message parameters:

#### **Optional TLV**

Use the drop-down menu to select a TLV type (Type, Length and Value), if relevant. The possible types are: **Data TLV** and **Test TLV**. If you select one of the TLV types, **Length** and **Value** fields for specifying the ID will appear.

#### Length

Only available if a **Data TLV** or Test **Test TLV** has been selected. Allows you to specify the length of the TLV.

#### Value

Only available if a **Data TLV** or **Test TLV** type has been selected. Allows you to specify the value of the TLV. Note that for the **Data TLV** type, this field is an entry field where you open an editor and type the value; for the **Test TLV** type, it is a drop-down menu.

#### LTM tab

The LTM tab contains the Link Trace Message parameters:

#### TTL

Allows you to specify a TTL (Time to Live) value. Used to indicate whether or not an LTM should be terminated by the receiver.

#### Trans ID

Allows you to specify the transaction number for the LTM.

#### TST tab

The **TST** tab contains the Test PDU parameters:

## Frames to send

Allows you to specify the number of frames to be transmitted.

## Rate

Use the drop-down menu to select the rate at which frames are transmitted.

## **Optional TLV**

Use the drop-down menu to select the **Test TLV** type, if relevant. **Length** and **Value** fields will then appear.

#### Length

Only available if the Test TLV type has been selected. Allows you to specify the length of the TLV.

#### Value

Only available if the Test TLV type has been selected. Use the drop-down menu to select the value of the TLV.

#### MCC tab

The MCC tab contains the Maintenance Communication Channel parameters:

#### OUI

Allows you to specify the Organizationally Unique Identifier for the organization defining a specific format and meaning of ETH-MCC.

#### Data

Allows you to specify any required additional information. The type of information depends on the specific application of ETH-MCC.

#### LCK tab

The LCK tab contains the Locked parameters:

#### Client MEG level

Allows you to specify the MEG level of the client MEG.

## LCK rate

Use the drop-down list to select the rate of the LCK frames being transmitted.

#### AIS tab

The AIS tab contains the Alarm Indication Signal parameters:

#### Client MEG level

Allows you to specify the MEG level of the client MEG.

#### AIS rate

Use the drop-down menu to select the rate of the AIS frames being transmitted.

#### 1DM tab

The 1DM tab contains the One-way Delay Measurement parameters:

#### Type

Use the drop-down menu to select the relevant operation type (**On-demand operation** or **Proactive operation**). The same 1DM frame format can be used for both.

## Rate

Use the drop-down menu to select the rate at which 1DM frames are transmitted.

#### Frames to send

Allows you to specify the number of frames to transmit.

## **Optional TLV**

Use the drop-down menu to select a TLV type, if relevant. The possible types are: **Data TLV** and **Test TLV**. If you select one of the TLV types, **Length** and **Value** fields for specifying the **ID** will appear.

## Length

Only available if a **Data TLV** type has been selected. Allows you to specify the length of the TLV.

## Value

Only available if a **Data TLV** type has been selected. Allows you to specify the value of the TLV. Note that for the **Data TLV**V type, this field is an entry field where you open an editor and type the value.

#### ID

Only available if a **Test TLV** type has been selected. Allows you to specify the value of the ID.

#### DMM tab

The **DMM** tab contains the Delay Measurement Message parameters:

#### Type

Use the drop-down menu to select the relevant operation type (**On-demand operation** or **Proactive operation**).

#### Rate

Use the drop-down menu to select the rate at which DMM frames are transmitted.

#### Frames to send

Allows you to specify the number of frames to transmit.

## Delay threshold

Allows you to specify a delay threshold that is used when a DMM test is active. If the delay meets or exceeds that threshold, the user is alerted.

## **Optional TLV**

Use the drop-down menu to select a TLV type, if relevant. The possible types are: **Data TLV** and **Test TLV**. If you select one of the TLV types, **Length** and **Value** fields for specifying the ID will appear.

## Length

Only available if a **Data TLV** type has been selected. Allows you to specify the length of the TLV.

## Value

Only available if a **Data TLV** type has been selected. Allows you to specify the value of the TLV. Note that for the **Data TLV** type, this field is an entry field where you open an editor and type the value.

#### ΙD

Only available if a **Test TLV** type has been selected. Allows you to specify the value of the ID.

## LMM tab

The **LMM** tab contains the Loss Measurement Message parameters:

#### Rate

Use the drop-down menu to select the rate at which LMM frames are transmitted.

#### Frames to send

Allows you to specify the number of frames to transmit.

#### Loss threshold

Allows you to specify a loss threshold that is used when an LMM test is active. If the loss ratio meets or exceeds that threshold, the user is alerted.

## SLM tab

The **SLM** tab contains the Synthetic Loss Message parameters:

#### Rate

Use the drop-down menu to select the rate at which SLM frames are transmitted.

#### Frames to send

Allows you to specify the number of frames to transmit.

#### Loss threshold

Allows you to specify a loss threshold that is used when an SLM test is active. If the loss ratio meets or exceeds that threshold, the user is alerted.

## **EXM** tab

The **EXM** tab contains the Experimental OAM Message parameter:

#### Data

Allows you to specify a string which you can send in a message to other remote maintenance points.

## VSM tab


The **VSM** tab contains the Vendor-Specific OAM Message parameter:

## Data

Allows you to specify a string which you can send in a message to other remote maintenance points.

## Discovery view (802.1ag/Y.1731 protocols)

Touching the **Discovery** button available for the 802.1ag or Y.1731 protocol will display the screen shown below.

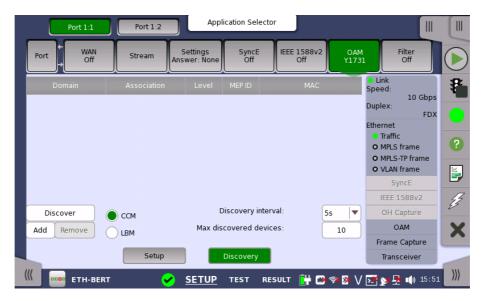

The contents of the Discovery view screen is the same for both protocols. The screen contains the following parameters:

## CCM/LBM

Select the radio button for the relevant method of discovery.

- **CCM** Passive method. Discover Remote Maintenance points by looking at incoming CCM frames. This is the preferred method of discovery and the default selection.
- LBM Active method. Discover other devices by sending out a multicast loopback message and discover the devices' MAC addresses.

### Discovery interval


Use the drop-down menu to specify the time period during which to wait and discover messages.

#### Max discovered devices

Allows you to specify the maximum number of devices that will be discovered.

## Discovering devices

To discover devices, touch the **Discover** button on the left side of the screen. This will display the **Discovery** dialog box.

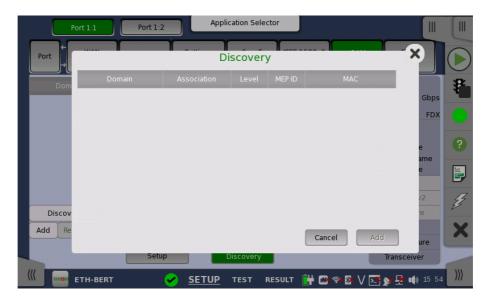

Devices will appear in the dialog's list as they are discovered. Select the device in the list and touch the **Add** button in the dialog box. The device is added to the list displayed on the Discovery view screen.

# Adding devices manually

To add devices manually, touch the **Add** button on the left side of the Discovery view screen. This will launch the **Add Rmp** dialog box where you can enter identification data for a specific remote device.



The Add Rmp dialog box contains the following parameters:

#### **Domain**

Allows you to specify the MD to which the MEP belongs. You can set the domain when 802.1ag is selected.

#### **MEG ID**

Allows you to specify the MEG to which the MEP belongs.

## Level

Use the drop-down menu to select the MD level at which the MEP exists.

#### MEP ID

Allows you to specify the Maintenance Point ID that the unit will be known as in the MA. Note that this is the only required parameter.

#### MAC

Allows you to specify the MAC address of the remote unit.

#### Accept

Touch the **Accept** button when you have entered the desired data in the dialog box. The identified unit is then added to the list displayed on the Discovery view screen. Note that the **Accept** button is enabled only when you have entered a value in the **MEP ID** field.

#### Removing devices

To remove a device from the list displayed on the Discovery view screen, select the device and then touch the **Remove** button on the left side of the screen.

#### 6.1.2.8 Filter

Touching the **Filter** button in the navigation area will display the screen shown below.



This screen allows you to set up filters and masks for the reception of Ethernet frames. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

#### **Enable filters**

Select this check box to be able to set up new filters or make changes to the existing ones.

## Select Filter

Opens the dialog box to set target fields to be filtered.

## Pattern Offset

The button will be enabled if **Pattern** is selected in **Select Filter** dialog box. Set the number of bytes counted from top of destination MAC address byte.

#### **Follows**

It is possible to let the Port 2 copy the setup from Port 1 by touching the **Follow** button. When this button is displayed in green, Port 2 continues to follow Port 1 change. This button appears when the Port 1 settings can be copy to Port 2.

Columns are "AND'ed", rows are "OR'ed".

The filter and mask table shows the currently existing filters. There are 8 rows, each representing a filter which (when enabled) is applied to each received frame. Each filter is composed as a set of values and/or masks (e.g. MAC destination address, IP addresses etc.). If all values in at least one enabled row/filter matches, the frame will pass.

If the mask for a specific value is enabled, only bits that are "1"/on are compared to the frame. For instance, if MAC Destination value is '00-12-34-56-78-9A' and the mask is set to '00-FF-00-FF-FF', only frames with MAC addresses 'XX-12-XX-56-78-9A' will pass.

To specify the set of values and/or masks available for each filter (i.e. the columns of the table), touch the **Select Filter** button. This will launch the filter editor dialog box, which contains a number of check boxes for enabling filters and masks on different addresses.

To set up / edit a filter, touch the relevant table cell. This will launch the filter/mask NumPad dialog box.

# Allow the following encapsulation types

At the bottom of the screen, it is possible to only allow certain encapsulation types.

- Ether type: allows passing of Ethernet frames.
- SNAP: allows passing frames which has SNAP header.
- LLC: allows passing of frames which has LLC header.

If none are selected, all frames including other than Ethernet frame will pass the filter.

## Select Filter

Select Filter			? X
Field	Filter Mask	Field	Filter Mask
Src MAC address	<b>✓</b> □	Src IPv4 address	. 🗸 🗌
Dst MAC address	$\checkmark$	Dst IPv4 address	. 🗸 🗌
Src MPLS-TP MAC address		Src IPv6 address	
Dst MPLS-TP MAC address		HDst IPv6 address	
Src PBB MAC address		FDst IPv6 address	
Dst PBB MAC address		Src TCP/UDP Port	
B-Tag		Dst TCP/UDP Port	
I-Tag		Pattern	<b>✓</b> □
1 2	3 4	5 6 7	7 8
MPLS Filter			
Mask			
VLAN Filter			
Mask			
Select all Clear all Ok			

The **Select Filter** dialog box contains a number of check boxes for enabling filters and masks on different addresses. Selectable check boxes depend on frame structure. The selected filters appear in row of the table.

## MPLS Filter, VLAN Filter setting


MPLS Filter and VLAN Filter can be selected up to eight levels because these layers may have up to eight levels. The parameters in each filter can be set independently.

For setting parameters, refer to MPLS or VLAN in "Stream" subsection.

## Pattern filter setting

With the pattern value, it is possible to match a user-defined 32 bit value to a specific offset defined by **Pattern Offset**. The pattern offset applies to all 8 filters but will only affect the enabled ones.


- 1. Select check box of Pattern on the Select Filter dialog box.
- 2. Touch Pattern Offset button.
- 3. Specify the Pattern Offset. This is the number of bytes counted from top of destination MAC address byte. If you specified "7", the four bytes of source MAC address are set to the object of filtering.
- 4. Touch the cell of **Pattern** in the table on the setup area.
- 5. Specify the pattern of four bytes.
- 6. Select the check box at left-side of the table.

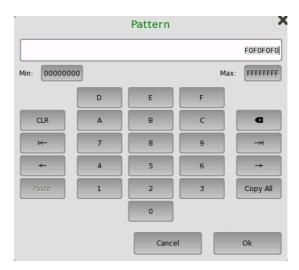

For MPLS/VLAN pattern setting, the dedicated dialog box will launch.


#### **MPLS**

Enter the number of MPLS label and TTL (Time To Live). You can select Bottom of Label Stack or Experimental Bits.



## **VLAN**

Enter the number of VLAN Priority and VLAN ID. You can select CFI Flag.



## 6.1.3 Status Information

This section describes the status information available in the status area of the Ethernet ports setup screen.

## 6.1.3.1 Status Summary

The status summary displayed for the Ethernet interface consists of the following information:



The actual summary information displayed depends on the type of the Ethernet interface.

**Physical Status** 

The topmost part of the status area gives you access to information about the current physical status of the selected interface. A summary consisting of the most relevant status indicators is displayed constantly. By touching the summary, you can launch a display that contains the detailed status information.

Interface Status

The second part of the status area gives you access to alarm and error information for the selected interface. The status is indicated by the lamp color. You can choose whether to view only the current alarm and error status, or to view all alarms and errors in the alarm trap since it was last reset.

A summary consisting of the most relevant alarm/error indications is displayed constantly. By touching the summary, you can launch a display that contains all alarms/errors.


**Monitor Buttons** 

At the bottom of the status area are the following buttons that give you access to various monitor information. By touching a button, you can launch the corresponding information display.

- SyncE
- IEEE 1588v2
- OAM
- OH Capture
- Frame Capture
- Transceiver

#### 6.1.3.2 Physical Details

Touching the topmost summary box in the status area of the **Ports Setup** screen displays the status shown below.

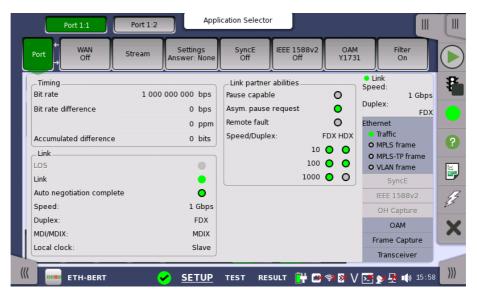

This screen presents detailed information about the current physical status of the received signal at the Ethernet interface.

The physical status information consists of the following parameters:

- Bit rate, which shows the current bit rate.
- <u>Bit rate difference</u>, which shows the difference in bit rate between received signal and reference source signal.
- <u>Accumulated difference</u>, which shows the accumulated bit rate difference between the received signal and the reference source signal.
- Link, which shows the link status of Ethernet.
- <u>Link partner abilities</u>, which shows the abilities of the opposite interface port. (Only available for Electrical)
- <u>Timestamp source availabilities</u>, which shows the status of the external signals used for timestamp.

# Timing Bit rat

The currently received bit rate is shown in bits per second (bps).

## Bit rate difference

The current difference between the received signal and the reference source signal is shown in both parts per million (ppm) and bits per second (bps).

#### Accumulated difference

The accumulated difference between the received signal and the reference source signal is shown. The information is presented as number of bits of difference detected over the accumulation period.



This is important information for identifying small frequency differences, which may not be visible by showing the current bit rate difference.

The accumulated difference information is accumulated continuously. The accumulation is reset when measurement is started or restarted.

#### Link

#### LOS

Indicates whether LOS (Loss of Signal) of the transceiver is occurred or not.

#### Link

Indicates whether Ethernet link is established or not.

## Auto negotiation complete

Indicates whether Auto negotiation is completed or not.

#### Speed

10 Mbps, 100 Mbps, 1 Gbps, 10 Gbps, 25 Gbps, 40 Gbps, or 100 Gbps is shown.

#### **Duplex**

FDX: Full Duplex, HDX: Half Duplex.

#### MDI/MDIX

When **Electrical** interface type is selected, interface type is displayed. MDI: Medium Dependent Interface, MDIX: Medium Dependent Interface Crossover

#### Local clock

When IEEE 1588.v2 is turned on, Master or Slave is shown.

#### Link partner abilities

When Electrical interface type is selected, the Link partner abilities is shown.

## Pause capable

Indicates in green when the device is capable of flow control using Pause request.

## Asym. pause request

Indicates in green when the device is capable of asymmetric flow control using Pause request.

# Remote fault

Indicates in red when the device is sending the remote fault signal.

#### Speed/Duplex

Available speed and duplex are indicated in green.

# Timestamp source availabilities

The status indicators for the external signal used as time stamp are displayed. This area is available and indicators turn green or red if both of the following conditions are met. The status that becomes available varies depending on the setting for **Source** in Stream - Meas screen. The status of the external signals used for timestamp is shown.

- In the Stream Measurement area of the Stream tab, one of **Jitter**, **Latency**, and **Service disruption** is selected.
- In the Stream Measurement area of the Stream tab, other than **Internal** is selected.

#### Ext. ref. 10MHz

This indicator is not available for MT1100A.

## Ext. ref. 1PPS

This indicator is not available for MT1100A.


#### **GPS**

Green: The GPS input is available.

Red: The GPS input is not available. If "Sync for 30s" is displayed, it takes 30 seconds from inputting the GPS signal to turning the indicator green. In case it stays in red after 30 seconds elapsed, confirm the connection between the Network Master and the GPS.

#### 6.1.3.3 Interface

Touching the middle summary box in the status area of the **Ports Setup** screen displays the status shown below.

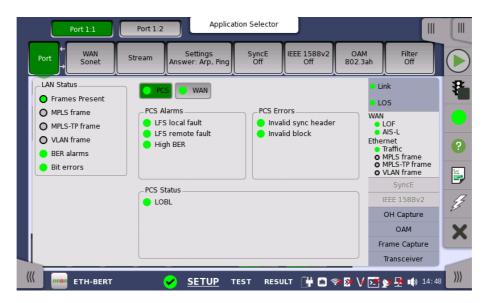

This screen presents key interface status indicators, with <u>Lamp icons</u> showing the current status. These indicators give a quick overview of the condition of the lines.

# LAN Status

- Frame Present: Ethernet frames are detected.
- MPLS frame: Label of MPLS (Multi-Protocol Label Switching) is detected.
- MPLS-TP frame: Label of MPLS-TP (Multi-Protocol Label Switching Transport Profile) is detected.
- VLAN frame: Virtual LAN tag is detected.
- Multi stream frame loss: Multi stream frame loss is detected.
- BER alarms: BER Alarms are detected.
- Bit errors: Bit errors are detected.

Multi stream frame loss appears in case of Mon./Gen. application.

#### **PCS Status**

PCS Status appears when the Interface Type bit rate is 10 Gbps or higher

- LFS local fault: Local fault is detected.
- LFS remote fault: Remote fault is detected.
- 64B/66B code violation: 64B/66B code violation is detected.
- LOBL: Loss of Block Lock is detected.
- LOAML: Loss of Alignment Marker Lock is detected.

#### View mode

Status display other than **LAN Status** can be switched by touching a button. You can select the status to display from following items:

WAN

WAN button appears when Port is set to 10 Gbps WAN.

PCS

**PCS** button appears when the Interface Type bit rate is 10 Gbps or higher.

FEC

**FEC** button appears when <u>FEC enable</u> on Setup screen is selected. Touching the button displays FEC Status.

The icon indicating the summary is displayed on each button.

### WAN Alarms, WAN Errors

For the detail of items, refer to the following descriptions in "SDH/SONET/PDH/DSn Applications".

- SDH Alarms
- SDH Errors
- SONET Alarms
- SONET Errors

#### **PCS Alarms**

The displayed status varies depending on the optical transceiver type.

- LFS local fault: Local fault is detected.
- LFS remote fault: Remote fault is detected.
- High BER: High bit error rate is detected.
- LOA: Alignment error is detected.

#### **PCS Errors**

- Invalid sync header: Invalid sync header (Sync bit is 00B or 11B.) is detected.
- Invalid alignment marker: Invalid alignment marker is detected.
- BIP error: BIP error is detected.
- Invalid block: Invalid block is detected.

# **PCS Status**

- LOBL: Loss of Block Lock is detected.
- LOAML: Loss of Alignment Marker Lock is detected.

#### **FEC Status**

- LOFA: Loss of frame alignment
- Corr. CW: Corrected Codewords
- Uncorr. CW: Uncorrected Codewords
- FEC symbol errors lane 0 3: Symbol error(s) in each lane.

## 6.1.3.4 OH Capture

This function is enabled when interface is set to 10G WAN. Touching the OH Capture button in the status area of the Ports Setup screen launches the dialog box similar to the SDH/SONET OH Capture screen.

Refer to OH Capture in the "SDH Setup and Status" section.

## 6.1.3.5 SyncE

Touching the **SyncE** button in the status area of the **Ports Setup** screen displays the status shown below.



This screen presents information related to the status of synchronous Ethernet.

#### SSM/QL

Synchronization Status Message and Quality Level status

## Last received


Shows the latest QL value.

#### SSF

*Server signal fail.* The Lamp icon becomes red when no ESMC message has been received within the last five seconds.

## 6.1.3.6 IEEE 1588v2

Touching the IEEE 1588v2 button in the status area of the Ports Setup screen displays the status shown below.

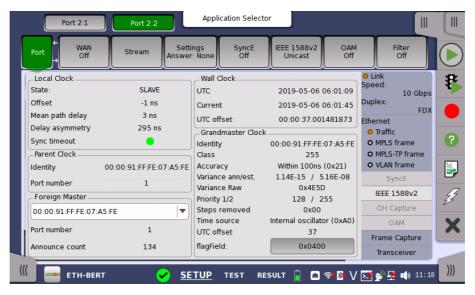

This screen presents information about the status of the IEEE 1588 clock.

#### Local Clock

#### State

Shows the current clock state of the ports (MASTER/SLAVE). INIT. appears when a unicast slave is stuck in INIT-state until the master clock grants access.

#### Offset

Shows the current offset from the master clock.

## Mean path delay

Shows the mean path delay, which is the time from master to slave back to master again, divided by two.

## Delay asymmetry

Shows the value calculated from the received INTERFACE RATE TLV only when profile is set to G.8275.2.

For details, refer to the standards listed on the **Profile option** tab.

## Sync timeout

Shows the current status of Sync Message reception. The Lamp icon becomes red if no Sync Message has been received within five times the Sync interval.

## **Parent Clock**

#### Identity

Shows the identity of a slave's parent clock.

#### Port number

Shows the port number of a slave's parent clock.

## Foreign Masters

Provides a list of detected foreign masters. The identity of the current master is shown in the field, the other masters are listed in a drop-down menu.

## Port number

Shows the port number of the currently selected foreign master.

## Announce count

Shows the number of Announce Messages received from the currently selected foreign master.

## Wall Clock

#### UTC

Shows the current UTC time. Requires an external GPS receiver.

#### Current

Shows the current wall clock time.

## **UTC** offset

Shows the offset between the wall clock time and the UTC time.

This is available when the GPS is used as reference.

## **Grandmaster Clock**

## Identity

Shows the identity of the grandmaster.

#### Class

Shows the class of the grandmaster. Ql is displayed together, depending on <a href="SyncE">SyncE</a> Ql type, profile, and class value.

## Accuracy

Shows the accuracy of the grandmaster. The hexadecimal value of the accuracy in the PTP packet data is displayed right-hand.

#### Variance ann/est.

Shows the offset variance of the grandmaster. Both the announced value and a calculated estimate are shown (in  $s^2$ ).

#### Variance Raw

Shows the offset variance of the grandmaster in hexadecimal.

## Priority 1/2

Shows priority 1 and 2 of the grandmaster.

## Steps removed

Shows the number of communication paths traversed between the local clock and the grand master clock.

#### Time source

Shows the time source. The hexadecimal value of the time source in the PTP packet data is displayed right-hand.

## **UTC** offset

Shows the UTC offset provided by Announce Message from the Groundmaster clock.

## flagfield

Shows the flag field of the announce message in hexadecimal. To see details, touch the button.

## 6.1.3.7 OAM

Touching the **OAM** button in the status area of the **Ports Setup** screen displays the status shown below.



This screen presents information about the status of the OAM functions. The information is split up on a number of tabs. Note that the layout of the dialog depends on the currently selected OAM protocol.

# 802.3ah status information



## Loop button

Touch the **Loop** button to send the far-end device into loopback mode and reflect frames.

## Devices tab

Shows the status of the remote and local devices.

## Variables tab

On the **Variables** tab you can request various variables. Select the relevant variable from the drop-down menu and then touch the **Request** button.

# 802.1ag status information



### Message buttons

Allows you to send messages either to a remote MEP ID or to a unicast MAC Address.

- U-LBM: Data-path integrity to/from the far-end to/from one address (unicast).
- M-LBM: Data-path integrity to/from the far-end to/from multiple addresses (multicast).
- LTM: Enumerate and identify all hops between two end points.

#### **Fault button**

The fault messages are sent when the button is active.

• CCM: Continuity Check Messages.

## Devices tab

Shows the current status of the devices.

The outer circle of the colored Lamp in the Status column represents the CCM status (green means that CCMs are received from that RMP, red means no CCMs are received). The inner circle indicates whether the RDI bit in the CCM frame is set (red) or not set (green).

## Decode tab

Shows extra information about LTM frames.

# Y.1731 status information



## Message buttons

Allows you to send messages either to a remote MEP ID or to a unicast MAC Address.

- U-LBM: Data-path integrity to/from the far-end to/from one address (unicast).
- M-LBM: Data-path integrity to/from the far-end to/from multiple addresses (multicast).
- LTM: Enumerate and identify all hops between two end points.
- MCC: Maintenance communication channel message.
- EXM: Experimental message and response.
- VSM: Vendor-specific message and response.
- TST: Test message used for Bit Error Rate measurement and /or throughput measurement.
- LMM: Determine packet loss.
- SLM: Determine frame loss.
- 1DM: One-way delay measurements.
- DMM: Propagation delay between two end points.

## Fault buttons

The fault messages are sent when the button is active.

- CCM: Continuity Check Messages.
- AIS: Alarm Indication Signal.
- LCK: Locked Signal Function.

## Devices tab

Shows the current status of the devices.

The outer circle of the colored Lamp in the Status column represents the CCM status (green means that CCMs are received from that RMP, red means no CCMs are received). The inner circle indicates whether the RDI bit in the CCM frame is set (red) or not set (green).

#### Decode tab

Shows extra information about the various frame types.

#### 6.1.3.8 Frame Capture

Touching the **Frame Capture** button in the status area of the **Ports Setup** screen launches the screen shown below.



This screen allows you to set up and execute capture of transmitted frames.



On Ethernet application over OTN, **Frame Capture** button in the status area may be disabled depending on <u>Client signal</u> settings.

## Capture Setup

#### Frame slicing

Use the Frame slicing drop-down menu to specify which part of the frame will be captured. The available options are: Whole frame, Top 64 Byte, Top 128 Byte.

#### **Buffer handling**

Use the **Buffer handling** drop-down menu to choose either **Stop when full** or **Overwrite**.

#### **Buffer size**

Use the **Buffer size** drop-down menu to specify the size of the buffer. The specified size will be reflected in the **Buffer Usage** indicator at the bottom of the screen.

#### Capture transmitted frames

Select the check box if capturing the transmitted frames.

Clear the check box to capture the incoming frames.



During the 10 Gbit/s rate state, transmitted streams the traffic generator sends can't be captured.

Transmitted protocol frames can be captured. 'Protocol frames' are the frames which used for information such as ARP, SyncE, IEEE1588v2, OAM.
This is the same for 10GbE over OTN (OTU2e - 10GbE mapping).

#### **Trigger Setup**

## Trigger

Manual

This is the default setting, which captures all frames. All other trigger setup parameters are disabled.

• Error

Frame capture starts when the error specified by **Error Type** drop-down menu has occurred.

Field match

Frame capture starts if the field in transmitted frame matches to one defined by Frame Field Trigger Definition.

#### **Trigger position**

Select the position of a trigger frame in the captured data.

- Top

  The trigger frame will be located at top of the captured data.
- Middle
   The trigger frame will be located at center of the captured data.

## **Error Type**

The possible values are: Any Type, Fragment, Oversized or undersized, Oversized, Undersized, FCS error, Oversized & FCS error and IP checksum error.

# Frame Field Trigger Definition

Touching the left field opens the **Field offset** dialog box, which enables you to specify a value between 0 and 15999 in the field.

Touching the center field opens the **Pattern Editor** dialog box, which enables you to specify the relevant pattern in the field.

## Capturing frames

## Start/stop capture

Touch the **Start** button to start the capturing. The button changes to the **Stop** button. Capture progress is shown in **Buffer Usage**.

To stop the frame capture, touch the **Stop** button.

## Save capture data

When the capture is complete, you can save the captured data as a PCAP file, which can be used by a variety of open-source decoding tools. You can also save the data and then view them on the Network Master using <u>Wireshark</u> application in Utilities.


Touching the **Save** button allows you to create a PCAP file and view the data on the Network Master. Touching the **View** button allows you to view the data on the Network master.



When saving capture files using the MX100001A MT1000A/MT1100A Control Software, the destination folder is automatically set to the "Internal" folder of the Network Master.

#### 6.1.3.9 Transceiver

Touching the **Transceiver** button in the status area of the **Ports Setup** screen displays the status shown below.

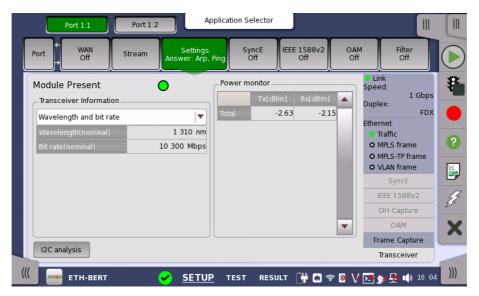

This screen presents status information about the optical transceiver (Pluggable module installed on the connector panel).

When the optical transceiver is SFP or SFP+, I2C analysis appears.

When the optical transceiver is QSFP+ or QSFP28 Adpt., <u>I2C analysis</u> and <u>Settings</u> appear.

When the optical transceiver is CFP or CFP2, <u>MDIO analysis</u> and <u>Settings</u> appear.

#### **Module Present**

Green indicates that an optical transceiver is currently mounted.

# Transceiver Information

Select the information from pull down menu. **Alarm** and **Output control** appear when the bit rate is 40 Gbps or greater.


- Alarm shows the alarm status.

  Loss of Signal: Turns on red when no optical signal is detected.
- Wavelength and bit rate shows the nominal wavelength and bit rate.
- Compliance shows the available standards.
- Vendor information shows the data stored in the optical transceiver.
- Output control allows to select lanes to insert alarm/errors.

## Tune wavelength

When the optical transceiver is a tunable SFP, the following items are displayed for **Wavelength and bit rate**.

Bit rate, Channel, Wavelength, Frequency, First frequency, Last frequency, Grid spacing

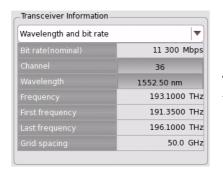


Touching **Channel** or **Wavelength** value opens the dialog box to set the wavelength.

#### Power monitor

The optical power read out from the transceiver is displayed.


The transmitting optical power or current is displayed in left column. The received optical power is displayed in right column.

In case of 40GbE and 100GbE, the total current and the currents by each lane are displayed for Tx. The total optical power and the optical powers by each lane are displayed for Rx.

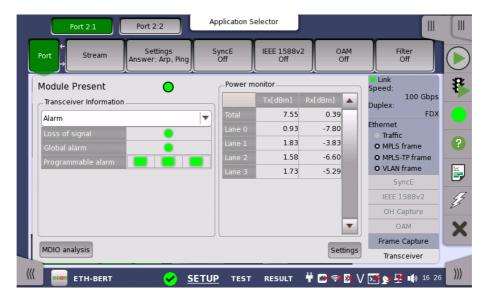


## I2C analysis

When the transceiver is SFP or SFP+, touching the **I2C** analysis button at the bottom corner displays the dialog box below.

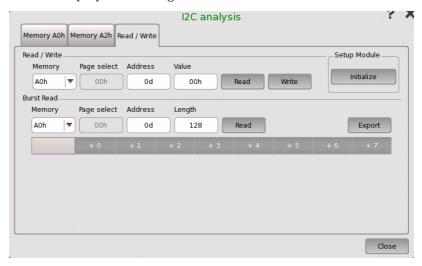

This dialog box allows reading/writing information into the registers of the optical transceiver via  $I^2C$  (Inter-Integrated Circuit) interface.

Registers in the transceiver are defined in *SFF-8472 Specification for Diagnostic Monitoring Interface for Optical Transceivers* and *SFF-8690 Specification for Tunable SFP+ Memory Map for ITU Frequencies*.

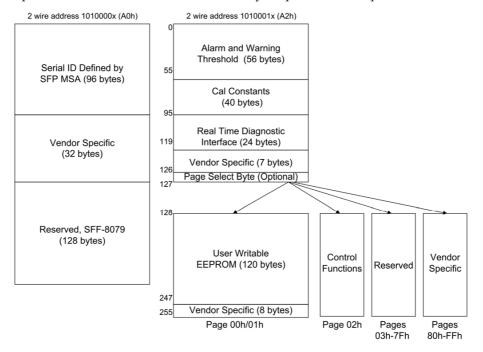

SFP Memory Map

- Memory A0h shows information in Memory A0h.
- Memory A2h shows information in Memory A2h.
- Read/Write allows you to read or write values to the specified registers.

#### Read/Write

Read/Write allows you to read or write values to the specified registers.

## Setup Module

Touching the **Initialize** button initializes register values in the transceiver.

# Read/Write


Specifying the address and the page allows users to read or write the data.

## **Burst Read**

Specifying the top address, page, and length allows users to read the data. Touching the **Export** opens the dialog box to save the read data.


# I2C analysis

When the transceiver is QSFP+ or QSFP28 Adapt., touching the I2C analysis button at the bottom corner displays the dialog box below.

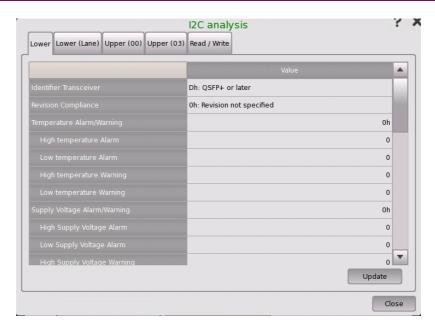

This dialog box allows reading/writing information into the registers of the optical transceiver via  $I^2C$  (Inter-Integrated Circuit) interface.

Registers in the transceiver are defined in *INF-8438i Specification for QSFP (Quad Small Form factor Pluggable) Transceiver.* 

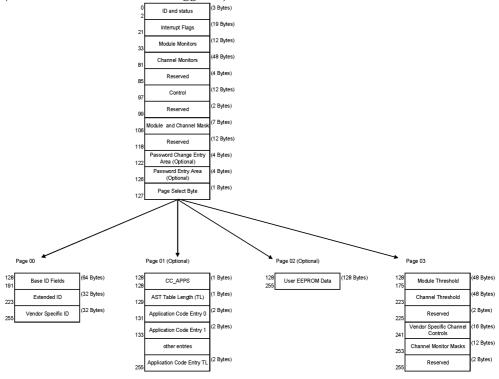

QSFP+ Memory Map

- LOWER shows information in lower address registers.
- LOWER Lane shows information of each lane in lower address registers.
- UPPER(00) shows information in upper address registers (page 00).
- UPPER(03) shows information in upper address registers (page 03).
- Read/Write allows you to read or write values to the specified registers.

Touching the  $\mbox{\sc Update}$  button reads the register data of the transceiver.

#### Read/Write

## Single Read/Write


Specifying the address and the page allows users to read or write the data.

#### **Burst Read**

Specifying the top address, page, and length allows users to read the data. Touching the **Export** opens the dialog box to set the filename.

#### MDIO analysis

When the transceiver is CFP or CFP2CFP4, MDIO analysis button is displayed on Transceiver status screen. Touching the MDIO analysis button at the bottom corner displays the dialog box below.

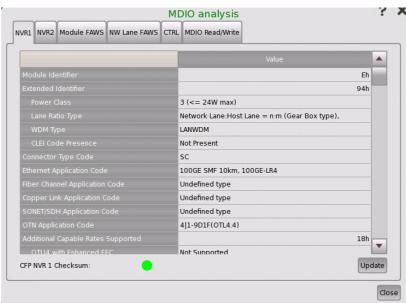

This dialog box presents information reading/writing to the MDIO (Management Data Input/Output) register.

- NVR1, NVR2 shows Non-volatile Registers.
- Module FAWS, NW Lane FAWS shows the fault/alarm/warning/status.
- CTRL allows to set CFP pins, the loopback route, FIFO reset or initialization.
- MDIO Read/Write allows to set CFP pins, the loopback route, FIFO reset or the initialization.

Touching the **Update** button reads the register data of CFP.

MDIO registers are defined in CFP MSA Management Interface Specification.

## **CTRL**

#### Initialize

Touching Initialize button starts starts CFP initialization.



Settings in CTRL tab will be initialized when CFP is removed from the module or CFP power is turned off.

#### Pin control


Touching the button will switch the output level of CFP pin. Touching **Vcc** button turns on/off the feeding power to the CFP.

#### FIFO control

Select the check box to set one to the FIFO Reset bit or the FIFO Auto Reset bit.

#### Loopback control

Select the check box for enabling the loopback function of CFP.

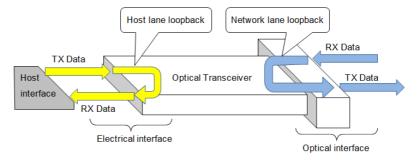

## MDIO Read/Write

## Single Read/Write

Specifying the address allows users to read or write the data.


#### **Burst Read**

Specifying the top address and length allows users to read the data. Touching the **Export** opens the dialog box to set the filename.

## Settings

Touching the **Settings** button at right hand bottom displays the dialog box. The contents of the dialog box varies depending on the transceiver module.

This dialog box allows to set Network Master interface to the optical transceiver. **Tx** table allows users to set the emphasis coefficients for Tx Output signal in the figure below. **Rx Equalizer** table allows users to set the equalization values for Rx Input signal in the figure below.

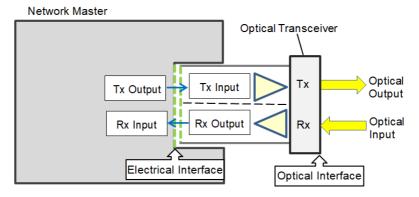

When setting same value at all lanes, touch the button in **Tracking** column and set the button display to **On**. The value set at Lane 0 is applied to all lanes.

When setting a different value at each lane, touch the button in **Tracking** column and set the button display to **Off**. Set the value by touching the field for each lane.

# Setting for QSFP+ and CFP



## Tx

Allows to set the output waveform of Network Master.

VOD

VOD (Voltage Output Differential) can be set.

Pre-emphasis

Three kinds of pre-emphasis can be set.

First


Emphasis is applied to the bit where data changes.

Pre

Emphasis is applied to the bit immediately before where the data changes.

# Second

Emphasis is applied where the bits become consecutive after the data changes.

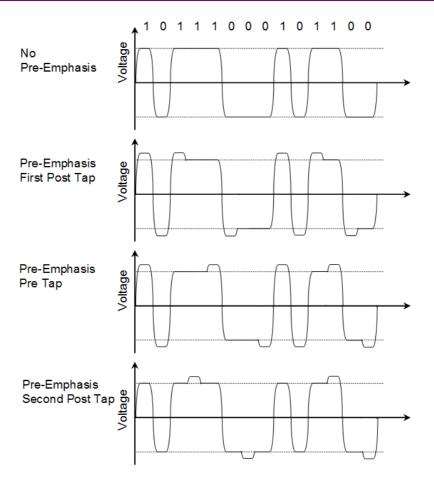

# Receiver Interface

Allows to set the gain of the high frequency band for the reception circuit in Network Master.

Rx Equalizer

Equalization can be set.

Control

The mode of boost can be set.

DC Gain

The gain of the Rx circuit is up to 8 dB in 2 dB steps.

- 0:0 dB
- 1: 2 dB
- 2:4 dB
- 3:6 dB
- 4:8 dB

# Settings for CFP2 and QSFP28 Adpt.



For MU110012A



For MU110013A

## **Transmitter Interface**

Allows to set the receiver characteristic of Network Master.

Attn

Attenuation of voltage output can be set.

Pre

Emphasis is applied to the bit immediately before where the data changes.

Post

Emphasis is applied to the bit where data changes.



For MU110012A, the sum of Attn, Pre and Post cannot exceed 31 per lane. For MU110013A, the setting range are: Attn: 0 to 7, Pre: 0 to 3, Post: 0 to 7

# Receiver Interface

• For MU110012A

Rx Equalizer

Execute Auto Tune

Executes the auto-tuning of equalization.

Restore Defaults

Restores the default setting of equalization.

• For MU110013A

Auto Rx Equalizer Enable

Setting to **On** starts the Auto Tune of the Rx Equalizer.

Equalizer

Specify the value of equalization setting.

# 6.1.4 Errors/Alarms Insertion

This section describes the errors or alarms insertion for the Ethernet layer on the Application toolbar.



## Alarms/Errors/ Others

Select the port to insert errors, and the stimuli type. The settings items vary depending on the selected stimulus type.

- Ethernet LAN: Inserts errors or alarms related the Ethernet frame, IP packet or the pattern error.
- Ethernet PCS alarms/errors: Inserts errors or alarms to PCS blocks.
- Ethernet PCS skew: Inserts skew between specified lanes.
- Ethernet WAN: Inserts errors or alarms to the WAN header.
- Ethernet frequency: Adds the frequency offset to the Ethernet bit rate.


# 6.1.4.1 Ethernet LAN


- 1. Select **Alarms** or **Errors/Violations** using the radio button.
- 2. Select **Destination** using the drop down menu.
- 3. Select the  ${\bf Insertion}$  in case of Errors/Violations.

Alarms will be inserted continuously.


- Off: Turns off inserting errors.
- Manual: Inserts errors in the specified counts if you touch the Error Insert icon.
- **Burst / sec**: Inserts errors in the specified counts in one second periodic.
- **Burst / 10 sec**: Inserts errors in the specified counts in ten second periodic.
- Burst\*1E-02 to Burst\*1E-07: Inserts errors of burst length in the specified rate continuously.
  - For example, Burst length is set to 3 and Burst\*1E–06 is selected, the three errors will be inserted per one million blocks. The Error Insert icon shows only status.
- 4. Touch the **Burst length** field to set the errors insertion counts.
- 5. When Insertion is set to **Manual**. Touch the **Error Insert** icon.

#### Manual










Destination	Description	
IFG	Sends an Ethernet frame which has the small infer frame gap.	
FCS	Sends an Ethernet frame which has FCS error.	
Preamble	When the interface bit rate is 10 Gbps or lower, sends a preamble in which pattern is different from the normal pattern.	
PAUSE frames.	Sends PAUSE frames.	
Wrong IP checksum	Sends data which IPv4 Header checksum is wrong.	
Fragmented IP	Sends IPv4 data which is fragmented.	
Wrong Layer4 checksum	Sends data which checksum in TCP header or UDP header is wrong.	
BERT pattern error	Inserts an error into the payload pattern.	
BERT Seq. error	Inserts an error into the sequence number which is used to check the pattern sequence in BERT.	
Error symbol/block	When the interface bit rate is 10 Gbps, sends data that 64/66B block format in PCS is set to incorrect pattern. When 1 Gbps or less, inserts TX_ER of MII Media Independent Interface).	
FEC symbol error	This option appears when <u>FEC enable</u> on Setup screen is selected.  Inserts a symbol error into the FEC of 25G and 100G Ethernet frame.	

# 6.1.4.2 Ethernet PCS alarms/errors


The PCS alarms/errors is available in following applications.

- BERT
- Mon.Gen.
- Ch Stat
- 1. Select **Alarms** or **Errors** using the radio button.
- 2. Select the **Destination** inserting the alarm or the error.
- 3. Select the **Insertion** in case of Errors.
  - Off: Turns off inserting errors.
  - Manual: Inserts errors in the specified counts if you touch the Error Insert icon.
  - Burst: Inserts errors or alarms in counts you have specified.
  - Rate: Inserts errors in the specified rate continuously.
  - Alternate: Repeats error/alarm insertion per specified number of frames.
  - All: Inserts errors to all Ethernet frames.
- 4. If **PCS error lane** appears, touch the buttons. Touch the buttons in the dialog box to select/clear lanes. The errors will be inserted to selected (orange) lanes.


#### Manual




#### Burst




## Rate (For 1E-3)



## Alternate



#### ΑII



Destination	Description
Invalid block type	Sends a PCS block of a block type not defined in IEEE 802.3.
Invalid sync header	Sends a PCS block with a sync header not defined in IEEE 802.3.
Invalid alignment marker	Sends an alignment marker which does not follow the definition in IEEE 802.3.
BIP error	Sends an alignment marker with an error in the BIP field.

## 6.1.4.3 Ethernet PCS skew

- 1. Touch the field below the port selection to set the number of skew bits. The calculated skew time is shown below the field.
- 2. When Port is set to 100 Gbps, Select the Lane type.
- 3. Touch the buttons of **Insertion lane**, the dialog box will appear.
- 4. Touch the buttons to select/clear lanes. The skew will be inserted between selected (orange) lanes and non selected (gray) lanes.

Setting to "0" means that inserting no skew.

#### 6.1.4.4 Ethernet WAN

When Port is set to **SFP+ 10 Gbps WAN**, inserting the WAN alarms/errors is available.

- 1. Select **Alarms** or **Errors/Violations** using the radio button.
- 2. Select **Destination** using the drop down menu.
- 3. Select the **Insertion** in case of Errors/Violations.

Alarms will be inserted continuously.

- Off: Turns off inserting errors.
- Manual: Inserts errors in the specified counts if you touch the Error Insert icon.
- 4. Touch the **WAN burst length** field to set the errors insertion counts.
- 5. When Insertion is set to **Manual**, Touch the Error Insert icon.

# 6.1.4.5 Ethernet frequency

Touch the field to set **Ethernet frequency**. Enter the desired deviation in the Tx Deviation field. A positive value increases the frequency.

# **6.2 BERT**

#### 1 1 0 1

The Bit Error Rate Test (BERT) described in this section is applicable for Ethernet interfaces.

For BERT of OTN interface, refer to BERT in "OTN Application".

# 6.2.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Ethernet interface are described in a separate section:

• Ethernet Setup and Status

For applications also including an OTN interface, you can find a description of the setup options and status information for OTN in the following section:


• OTN Setup and Status

Please refer to the sections relevant for your current port setup requirements.

# 6.2.2 Test Setup

#### 6.2.2.1 Control

When you go to the test setup of the Ethernet BERT application, the following screen is displayed.

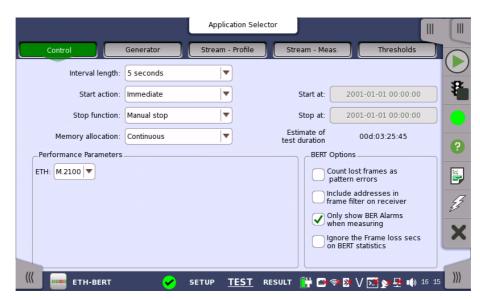

This screen contains the parameters that are generally required in a test setup.

## Interval length

Allows you to specify the duration of the BERT intervals. The drop-down menu contains the following values: 1, 2, 5, 10, 15, 30 seconds, 1, 5, 10, 15, 30 minutes, 1, 2, 4, 6, 12 hours or No intervals.

#### Start action

Allows you to specify when the measurement is started.

- Immediate: Starts the measurement when you touch the **Start** button.
- **Start at**: Starts the measurement at the time specified in the **Start at** field on the right.

#### Stop function

Allows you to specify when the measurement ends.

- Manual stop: Stops the measurement immediately when you touch the Stop button.
- **Stop at**: Stops the measurement at the time specified in the **Stop at** field on the right.
- **Duration**: Performs the measurement for the duration of time specified on the right.

## Memory allocation

Allows you to specify how the measurement will be stored in the Network Master's memory.

- Use all storage: When Network Master's memory became full of measured data, the whole measurement is stopped.
- Continuous: When Network Master's memory became full of measured data, the oldest records in that memory will be overwritten.

  When the memory became full, it is recorded in Event log.

The Network Master's memory size (the file size of measurement results) is 64 Mbytes per one port. The result file size is less than 64 Mbytes because it is compressed when saving to the file.

#### Estimate of test duration

Contains an estimation of the time (in days, hours, minutes and seconds) before the whole memory will be filled out by the test. The estimated value is dependent on the current interface and selections concerning this interface. During an ongoing measurement, the estimate will be recalculated periodically, meaning that the estimate will get better and better. The estimate can be seen on the status line during a measurement.

## Performance Parameters

The titles of ITU-T Recommendation are below.

- **G.826** End-to-end error performance parameters and objectives for international, constant bit-rate digital paths and connections
- G.829 Error performance events for SDH multiplex and regenerator sections
- G.8201 Error performance parameters and objectives for multi-operator international paths within the Optical Transport Network (OTN)
- M.2100 Performance limits for bringing-into-service and maintenance of international multi-operator PDH paths and connections
- **M.2101.1** Performance limits for bringing-into-service and maintenance of international multi-operator SDH paths and multiplex sections
- M.2401 Error performance limits and procedures for bringing-into-service and maintenance of multi-operator international paths and sections within an optical transport network
- M.2110 Bringing into service international multi-operator paths, sections and transmission systems

#### OTN-related

These items appear if OTN Tx and OTN Rx are selected on Setup screen.

#### OTN

G.8201, M.2401 (M.2110)

## Time period

15 minutes, 1 hour, 2 hours, 24 hours, 7 days

#### **Allocation**

Touching the **Setup** button launches the dialog box. Refer to <u>Performance Parameters</u> in "OTN Application" .

# Ethernet-related

10G WAN appears if Port on the Test Setup screen is set to 10 Gbps WAN.

## **ETH**

M.2100

#### 10G WAN

G.826, G.826+G.829, M.2101.1(M.2100)

#### **BERT Options**



This option appears in the BERT application.

## Count lost frames as pattern errors

Enabling this function means that if a frame is lost then all test pattern bits in the frame are considered errored and will be included in the pattern error counter.

#### Include addresses in frame filter on receiver

When enabling this function, the Ethernet frames which their destination addresses match to following items will appear on the <u>Streams</u> screen.

- Src MAC
- Src IP
- VLAN ID
- Src Port

This setting makes the effect to only following measurement results on the Statistics screen.

BERT	Mon./Gen
BERT	Multi Stream Transmit
Latency	Multi Stream Throughput
Jitter	Multi Stream Frame Loss
	Multi Stream Latency
	Multi Stream Jitter

This setting does not effect to Frame Capture.

## Only show BER Alarms when measuring

BER alarms in Interface status dialog box is enabled only when the measurement is running. This function allows to avoid the BER alarms occurrence when no data is input.

#### Ignore the Frame loss secs on BERT statistics

The Frame loss secs." on BERT statistics will not be used for judging the Status Summary. This function allows to avoid the <u>Status Summary</u> alarms occurrence when no frames are input.

#### 6.2.2.2 Generator

Touching the **Generator** button in the navigation area displays the following screen.

The **Follow** button appears when the Port 2 settings can follow Port 1.



This screen contains the traffic-related parameters.

## **Traffic Duration**

Allows you to set conditions concerning frames transmission. Choosing **Continuous** will make a continual test sequence. Alternatively, the duration can be set manually in either **Seconds** or **Frames**, coupled with a specification of the number of seconds/frames in the adjacent field.


## Automatically start the traffic generator when a test is started

In case of **Continuous**, you can select this check box to make the traffic generator start synchronously with the test starting.

## 6.2.2.3 Stream - Profile

Touching the **Stream - Profile** button in the navigation area displays the following screen.

The <u>Follow</u> button appears when the Port 2 settings can follow Port 1.

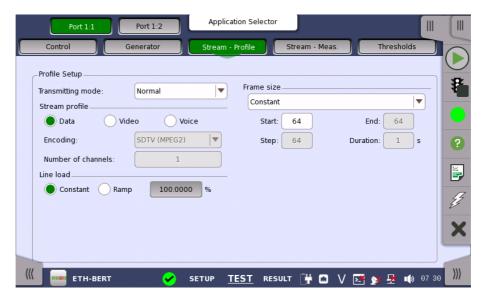

This screen contains the parameters for specifying a profile and pattern for each stream and for specifying which measurements are made.

### Transmission mode

- Normal: Does not generate the bursts. The normal Ethernet frames are sent.
- Burst: Generate the bursts.

## Stream profile

Allows you to specify and configure a profile type for the currently selected stream. Using the radio buttons, you can select the stream profile as either **Data**, **Video** or **Voice**.



On the Ethernet application over OTN, only **Data** appears depending on the <u>Client signal</u> setting.

## **Encoding**

Open the drop-down menu to select the relevant encoding type. The available values depend on the selected profile type.

## Number of channels

Specify the number of stream channels selected at Encoding.

#### Line load

When Profile type is set to **Data**, you can select the line load profile as either **Constant** or **Ramp**. If you select **Ramp**, you can touch the adjacent button to display the **Ramp Line Load Setup** dialog box.

When Profile type is set to **Video** or **Voice**, the line load calculated from Encoding and Number of channels is displayed.



The line load unit can be specified from Percent, Mbps, and IFG.

When IFG (Inter frame gap) is specified to the unit, 12 byte setting means the 100% utilization. The value set to the field is an average of Inter frame gap.

When Transmission mode is **Normal**, 100% or more line load can be set in specific case.



On the Ethernet application over OTN, following unit appears depending on the Client

Touching **Off** at left-bottom stops sending the stream.



signal setting.

- Percent and Mbps
- Mbps

The dialog box contains the following settings:

# Line load start

The line load at which the ramp will start.

# Line load end

The line load at which the ramp will end. (This is the value shown on the line load button.)

## Step size

The step size from start to end.

## Step duration


The duration of each step.

Selecting **msec-Ramp** check box allows to set the step duration in 1 millisecond increments.

## Ramp mode

How the ramp should continue. 3 modes are available:

- **Keep end**: The specified end line load is maintained after the ramp is ended.
- Repeat ramp: The ramp is repeated.
- Invert ramp: The ramp is inverted.

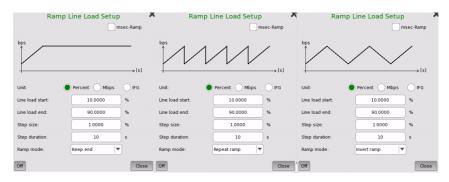


Frame size

When Profile is set to **Data**, four setups are available:


#### Constant

Uses the fixed frame size specified by the **Start** value for the duration of the test. The following figure shows an example of frame sizes when **Constant** is selected.

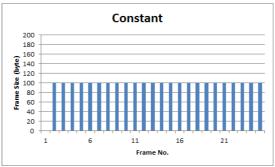

# Stepped


Steps the frame size from **Start** to **End** in increments of **Step**. Each frame size is transmitted for the period in seconds specified by **Duration**. The following figure shows an example of frame sizes when **Stepped** is selected.

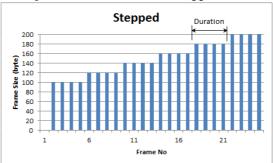

If the traffic duration is set to *Continuous* on the **Generator** screen, the step sequence will be repeated indefinitely. If traffic duration is set to *a number of seconds*, the step sequence will be terminated when the specified total period has elapsed. Similarly for traffic duration set to *a number of frames*, the step sequence will be terminated when the total number of transmitted frames reaches the specified count.


## Random

Sends a continuous stream of frames of random sizes, evenly distributed between **Start** and **End**. The following figure shows an example of frame sizes when **Random** is selected.

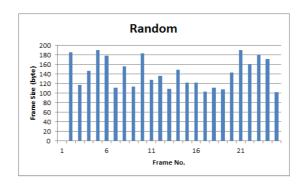

## 1-Byte incremental

Steps the frame size from **Start** to **End** in increment of one byte in frame-by-frame. The following figure shows an example of frame sizes when **1-Byte** incremental is selected.

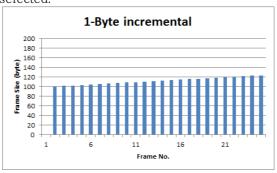



Frame size is protocol headers and payload combined. Frame size does not include preamble and interframe gap.



When setting Frame size to 52 byte or less and Interface type is **SFP+**, the actual rate (Utilization) does not reach to 100% even if line load is set to 100%.

Burst mode

Set the burst generation mode. The normal Ethernet frames are not sent in the burst mode.



- Off: stops sending the stream.
- Const: generates the bursts that the burst length and the gap length are constant.

• Ramp: generates the bursts while changing the burst length.

#### **Number of Bursts**


Selecting **Num of Burst** allows to set the number of the bursts to generate. If sending specified number bursts has finished, sending stream will stop.

**Burst length** 

Set the burst length and the gap length.

When Burst mode is set to Const:
 Touch the field of Burst length and Gap length to set the value.

 Burst length can also be set by specifying Duty and Period.




The value set to the **Gap length** field is an average of inter burst gaps.


• When Burst mode is set to **Ramp**:

Touch the Ramp mode field to set how to vary the burst length.

• If **Keep end** is set, the burst length varies as below.

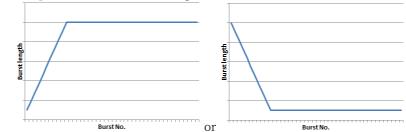

• If Repeat ramp is set, the data length varies as below.

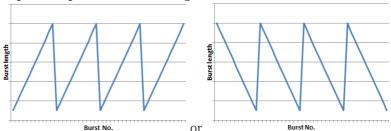

Touch the field of **Burst start** and **Burst end** to set the range that the burst length varies.

Touch the **Gap length** field to set the value. The value set to the **Gap length** field is an average of inter burst gaps.

Frame size

Set the frame size used for the burst length calculation. 20 bytes (preamble and IFG) adding to the value set in this field is used as the one frame size of the burst length setting.

## 6.2.2.4 Stream - Measurement

Touching the Stream - Measurement button in the navigation area displays the following screen.

The <u>Follow</u> button appears when the Port 2 settings can follow Port 1.



Select one or more of the measurements (Jitter, Latency and Service disruption) and then specify a threshold value for each. This screen allows you to configure Jitter, Latency and Service disruption.

## Enable sequence checking

Appears when "Unframed" is selected to the protocol in Stream of Port Setup screen.



Select the check box if enabling the frame sequence checking.

Select the Jitter check box to measure it.

When selecting Threshold check box and enter the value, Pass/Fail is judged.

Latency Select the Latency check box to measure it.

When selecting Threshold check box and enter the value, Pass/Fail is judged.

Service disruption Select the Service disruption check box to measure it.

> Select Disruption Type from Packet or LOS. You may not be able to select LOS depending on the interface settings.

When selecting Packet, enter the number of skip of frame number to count service disruption.

When selecting LOS, service disruption is counted if one or more LOS is detected.

Enter Error free period as time from counting the service disruption to restart it.

litter



# Latency / Jitter timestamp

This screen allows you to configure the timestamp of **Jitter**, **Latency** and **Service disruption**.

#### Source

Select a timestamp source for measurement. The indicator on the right notifies you whether latency and/or jitter can be measured.

Green: Latency and/or jitter can be measured.

Red: There is a possibility that the timestamp source signal could not be detected. For the detection status of the timestamp source signal, refer to <u>Timestamp source availabilities</u>.

When **GPS** is set, the measurement can be performed by using two Network Masters which have made synchronized.

In this case, set the same option to **Source(Ext ref. 10MHz)** of both Network Master.

#### Internal

This option uses the timestamp generated inside the Network Master. You can measure one-way latency by receiving Ethernet frames from another Network Master. To do this, you need to synchronize two Network Masters' timestamp with GPS. Note that, after the clocks are synchronized with GPS, they run without synchronization between two Network Masters. This causes time difference between the clocks as the time elapses.

The degree of the difference depends on the internal clock accuracy whose specification is listed in External Interfaces in the MT1100A Specifications. For how to synchronize timestamp with GPS, refer to <a href="Timestamp">Timestamp</a> Synchronization Procedure.

When Source is switched to **Internal** from other options, timestamps behaves as follows:

- When the application has already been running on other ports with Timing source set to **Internal**.
  - Timestamps synchronize with those of the other ports.
- When no other ports are used and GPS signal is not received: Timestamps start from any time.
- When no other ports are used and GPS signal is received: Timestamps start from GPS time.

# GPS

This option uses the timestamp generated based on TOD (Time of Day) signal and 1PPS signal which are provided by the GPS receiver One way latency can be measured.

#### GPS antenna cable

To measure the phase error precisely, set the correction value to GPS cable correction.

When calculating the delay time from the cable length, it is recommendable to use 5 ns/m as the conversion factor.

When using the following GPS provided by Anritsu, set 25 ns.

G0325A

## **Timestamp Synchronization Procedure**


The following shows an example of the procedure to perform the jitter and latency measurement under the condition that the timestamps have been synchronized with GPS.

- 1. Connect the G0325A GPS Receiver to the Network Master.
- 2. Turn on the Network Master.
- 3. While checking the GPS reception icon at the right-bottom of the screen, move the network master to the environment where it can receive GPS signals.
- 4. Confirm that no other applications are running.
- 5. Start MonGen or BERT application with selecting one port.
- 6. Select a bit rate used for the measurement (In the <u>Port Setup</u> dialog box, select **Forced** or **Autonegotiate**, not **Off**.)
- 7. On Test Setup page, touch Stream Meas..
- 8. Select the **Jitter** and **Latency** check boxes.
- 9. Set Source of Latency / Jitter timestamp to **GPS**. Wait until the indicator on the right turns green.
- 10. Set Source of Latency / Jitter timestamp to **Internal**. Wait until the indicator on the right turns green.

#### 6.2.2.5 Thresholds

Touching the **Thresholds** button in the navigation area displays the following screen.

The **Follow** button appears when the Port 2 settings can follow Port 1.

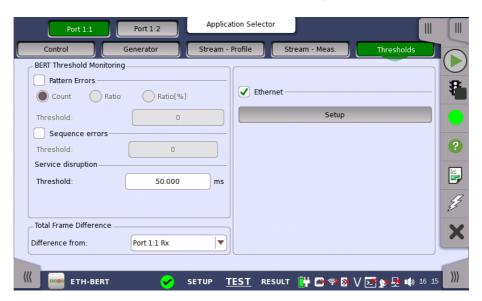

This screen contains the parameters for setting up the various threshold values (i.e. limits) for errors and Pass/Fail status that are used during the monitoring.

## BERT Threshold Monitoring

## **Pattern Errors**

Allows you to enable monitoring of pattern errors (i.e. bit errors) and to set up a threshold value for the bit error ratio.

Choose whether the threshold is specified as an absolute value or a percentage, using the **Count**, **Ratio** and **Ratio** (%) radio buttons, and then specify the value in the **Threshold** field.

## Sequence errors

Allows you to enable monitoring of sequence errors and to set up the relevant threshold value.

## Service disruption

If you specify a threshold value for the service disruptions (using the **Threshold** field), any disruption whose maximum duration time exceeds the threshold value will be marked in red on the Test Result screen.

# Total Frame Difference

Allows you to select the reference port to measure the differential time, using **Difference from:** drop down menu.

## **Transport**

This setting appears in case of following applications on OTN.

- BERT
- Mon./Gen.
- Reflector

When you select the check box, you can enable alarm or error thresholds.

#### Interface

Fixed to **OTN**.

#### **Evaluation item**

Select the item to evaluate. If selecting other than **Any Alarm or Error**, another menu appears.

#### **Evaluation type**

Select the relevant type.

## Pass & fail threshold

Touch the left-hand number to set the lower limit for "Warning". Touch the right-hand number to set the lower limit for "Fail". The lower limit of "Fail" must be equal to or greater than the lower limit of "Warning" (defining a "Within limits" range in between them).

# Ethernet

When you select the check box, you can enable various thresholds. Touch the **Setup** button to display the **Ethernet threshold setup** dialog box.



In the dialog box, select the check boxes for the relevant thresholds and then touch the **Close** button to list them on the **Thresholds** screen. You can select/deselect all check boxes in the dialog box by using the **Select all** / **Clear all** buttons. Touch the individual value fields either in the dialog box or in the list on the screen to specify the threshold values.

# Example

Setting	Measured Result	
	Pass	Fail
< 100	100 or greater	less than 100
<= 100	greater than 100	100 or less
>= 100	less than 100	100 or greater
> 100	100 or less	greater than 100




The Network Master transmits the 32-bit "jam sequence" eight times when the Ethernet frames collide at any point in the frame. This collision motion is different from the definition of the IEEE Standard.

In the "back off" process of the Network Master, the maximum wait time is expanded up to the 12 power of 2. Moreover, the Network Master does not discard the frame when the collision has occurred 16 times.

## 6.2.3 Test Results


## 6.2.3.1 Summary

When you go to the test results of the Ethernet BERT application, the following screen is displayed.

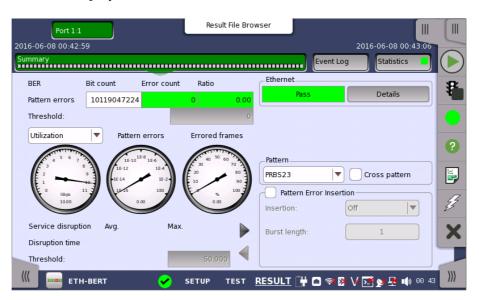

This screen contains a summary of the results of the Ethernet BERT test. The information includes such things as number of pattern errors, average and maximum disruption time, and number of exceeded thresholds.

The three dials showing utilization/throughput results, pattern errors and errored frames can be enlarged by clicking on them. The black needle points the measured value in the latest period.

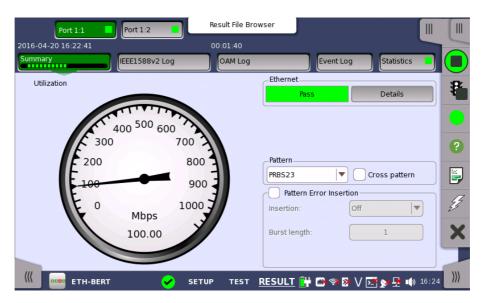

To view throughput information, select Throughput in the drop-down menu and then expand the dial. Use the drop-down menu above the expanded dial to select the relevant layer.

When Ethernet is selected on 'Threshold' of the Test Setup screen, the Ethernet information appears in the upper right-hand corner, shows pass/fail status summary. Touching the Details button allows you to inspect the individual pass/fail status.



Transport

Displays the results of Transport test. This result appears if 'Transport' check box is selected in the Test Setup screen.

Pattern

Allows to change the payload pattern. Cross pattern check box is the same as Cross pattern at successive frames of Payload pattern setting.

Pattern Error insertion This provides the same Error insertion as Stimuli setup options in Application Toolbar.

## Insertion

If selecting Manual, error(s) are inserted when you touch the Alarm/Error **Insert** icon () button.


Set **Off** to stop the error insertion.

## **Burst length**

If 'Insertion' is set to **Manual**, touch the button and set the number of errors to insert.

## 6.2.3.2 IEEE1588v2 Log

Touching the IEEE1588v2 Log button in the navigation area will display the screen shown below.

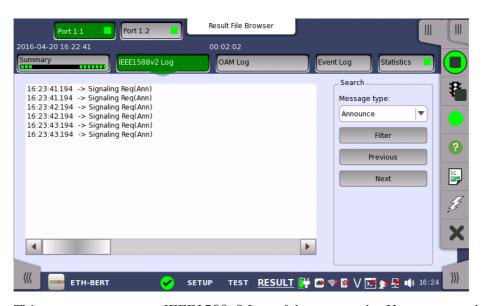

This screen presents an IEEE1588v2 Log of the test results. You can search the messages by specifying the type.

## Search

## Message type

Select the message type from below.


- Announce
- DelayReq
- DelayResp
- FollowUp
- Management
- PDelayReq
- PDelayResp
- PDelayRespFollowUp
- Signaling
- Sync

Select the search method.

- Filter
- Previous
- Next

## 6.2.3.3 OAM Log

Touching the **OAM Log** button in the navigation area will display the screen shown below.

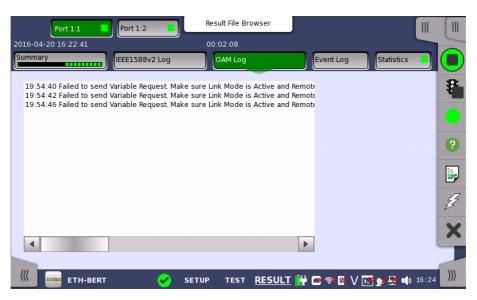


This screen presents an OAM Log of the test results. Note that the layout of the dialog box depends on the currently selected OAM protocol.

## 6.2.3.4 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

#### 6.2.3.5 Statistics

Touching the **Statistics** button in the navigation area displays the screen shown below.

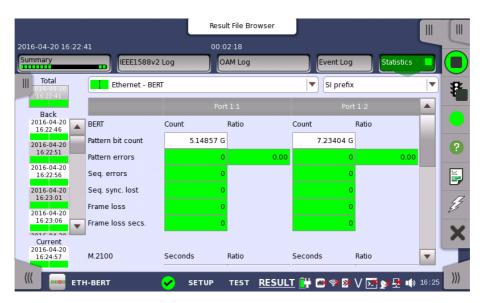

This screen presents a detailed analysis of the test results. You can choose to view either the total results from measurement start or the results of a specific interval during the test. You can also zoom in on a specific result item. The results can be displayed either in table (list) form or as a graph.

## Selecting which results to view

# Selecting the interval time


Touch the **Total** button to switch the total values measured in all interval times. The start time of measurement is displayed on the button.

Touching the button in left side **Back** field shows the measured values in the interval time. The end time of the interval is displayed on the button.

**Current** button is displayed at left bottom when the measurement is running. Touching the **Current** button shows the measured values in the current interval time. The start time of the current interval is displayed on the button.

The slide-out panel on the left-hand side of the screen contains the following functions:

- Only show intervals that contains errors
- Time format





If you have stopped measurement during the interval time, the measurement results of the current interval are discarded. The log of the current interval is not displayed in **Back** field

In this case, result data are re-calculated excluding the data of the current interval when the measurement is stopped. This causes that "Count" and "Ratio" displayed after the measurement will be different from that of during measurement. The sum of interval time (multiplied interval time by the number of back logs) may not match the differential time between displayed time at left top and right top after the measurement.

# Selecting type of results

Open the middle drop-down menu in the top row of buttons to select which results you want to display on the screen.

- OTN Alarms/Errors
- OTN Performance
- BERT
- Performance
- Frame
- Burst
- Size Distribution
- Transmit
- Latency
- Jitter
- WAN Alarms/Errors
- WAN G.826
- WAN G.826+G.829
- WAN M.2101.1(M.2100)
- SyncE
- IEEE 1588v2
- PCS
- 802.3ah

- 802.1ag/Y.1731
- FEC
- Conditions

OTN options appear if the Ethernet signal is carried by OTN.

# Studying a specific result

Touch a specific cell in a result table to zoom in on the corresponding result item. The **Count** and **Ratio** fields are displayed on a **Zoom** tab. A **Time vs. Statistics** tab is also available. Use the **Back** button or touch the zoom filed to return to the statistics screen.



# Selecting how results are displayed


## Selecting notation

Select the required notation for the results from the notation drop-down menu.

- Unformatted e.g. 71892
- SI prefix e.g. 71.892 k (k means "kilo")
- Engineering e.g. 71.892E3
- Scientific e.g. 7.1892E4


# Bits and bytes conversion

The name of the item measured in bits is available as a button. You can convert the unit from Bits to Bytes, by touching the button.



## Save results to files

The **CSV Export** button appears when the measurement isn't running. Touch the button, and you can select item(s) you want to export to a CSV file during measurement. The button is not displayed while the measurement is running or when Ethernet is over the OTN layer.

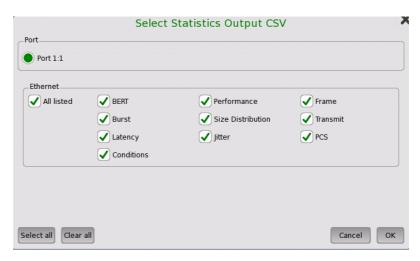

Touch OK, and enter the filename.

## Results

The result items varies depending on the configuration in Ports Setup screen.

OTN Alarms/Errors Refer to Results in "OTN Application".
OTN Performance Refer to Results in "OTN Application".

BERT BERT

Pattern bit count, Pattern errors, PRBS Sync Alarm, Seq.  $\,$ 

errors, Seq. sync. lost, Frame loss

M.2100

ES, SES, ALS, UAT, AVT, EFS

Throughput

Data layer, Network layer, Link layer, Phys. (preamble),

Physical layer, Utilization layer

Performance Frequency\*

Min. Deviation, Max. Deviation, Avg. Deviation

Utilization

Min. utilization, Max. utilization, Avg. utilization

Throughput

Min. throughput, Max. throughput, Avg. throughput

Frame rate

 $\mbox{\rm Min.}$  frame rate,  $\mbox{\rm Max.}$  frame rate,  $\mbox{\rm Avg.}$  frame rate

Frame Alarms

Link, Remote fault

Good Frames

Total, Good frame, Unicast frame, Multicast frame, Broadcast frame, Pause frame, VLAN frame, MPLS frame, MPLS-TP frame, PBB frame, VLAN max level,

VLAN min level, MPLS max level, MPLS min level

**Errored Frames** 

Errored frame, Fragmented, Oversized, Undersized, FEC errored, Oversized & FCS errored, Error symbol

Layer3 Error

IP checksum errored

Other Frames

Collisions, Preamble violations, IFG violations

Last Received

VLAN 1 to VLAN 8, MPLS 1 to MPLS 8, B-Tag, I-Tag

Frame diff.

Frame diff.

Burst Frames

Total, Good frame, Bursted, Number of bursts

Burst Size

Avg. burst size, Min. burst size, Max. burst size

Size Distribution Total Frames

Total, Good frame

Size Dist.

64-127, 128/-255, 256-511, 512-1023, 1024-1518, Jumbo

Frame Size

Avg. frame size, Min. frame size, Max. frame size

Transmit Traffic

Frames, Bytes, Unicast, Multicast, Broadcast, Errored, FCS errored, 64-127, 128-255, 256-511, 512-1023, 1024-

1518, Jumbo

Latency Latency

(Latency is displayed in the range of 0 to 20 seconds. In case the measured value is out of this range,  $\mbox{N/A}$  is

displayed.)

Jitter Jitter(ns)
WAN Alarms/Errors Alarms

SDH: LOS, LOF, OOF, MS-TIM, MS-AIS, MS-RDI, AU-AIS, AU-LOP, HP-TIM, HP-PLM, HP-UNEQ, HP-RDI, LCD Sonet: LOS, LOF, OOF, TIM-S, AIS-L, RDI-L, AIS-P, LOP-

P, TIM-P, PLM-P, UNEQ-P, RDI-P, LCD

Errors

SDH: A1A2, B1, B2, MS-REI, B3, HP-REI Sonet: A1A2, B1, B2, REI-L, B3, REI-P

WAN G.826 MUX

SDH: LOS, LOF, OOF, MS-TIM, MS-AIS, MS-RDI, AU-AIS, AU-LOP, HP-TIM, HP-PLM, HP-UNEQ, HP-RDI, LCD Sonet: LOS, LOF, OOF, TIM-S, AIS-L, RDI-L, AIS-P, LOP-

P, TIM-P, PLM-P, UNEQ-P, RDI-P, LCD

VC4, SPE

ES(Forward), SES(Forward), UNAV(Forward), ES(Backward), SES(Backward), UNAV(Backward)

WAN G.826+G.829 MUX

ES(Forward), SES(Forward), UNAV(Forward), ES(Backward), SES(Backward), UNAV(Backward)

VC4, SPE

ES(Forward), SES(Forward), UNAV(Forward), ES(Backward), SES(Backward), UNAV(Backward)

WAN MUX

M.2101.1(M.2100) ES(Forward), SES(Forward), UNAV(Forward),

ES(Backward), SES(Backward), UNAV(Backward)

VC4, SPE

ES(Forward), SES(Forward), UNAV(Forward), ES(Backward), SES(Backward), UNAV(Backward)

SyncE SSM Statistics

Rx total QL, Tx total QL

Alarms SSF Rx SSM QL

Refer to Combination of Ql Type and Ql

IEEE 1588v2 Offset Stat

Offset, Absolute offset, Deviation

Offset Variance

Offset variance Mean Path Delay Req./resp, Peer

PDV

Path delay variation

Message Stat

Announce count, Sync count, Follow up count, Delay request, Delay response, Peer delay req., Peer delay resp

follow up, Signalling, Management

Signalling

INTERFACE RATE TLV rate changes

Clock Status Stat.

State transaction, State transaction events, Faults,

Grandmaster changes

GPS - Wall clock

Min. GPS - Wall clock, Max. GPS - Wall clock, Avg. GPS -

Wall clock

PCS PCS 10G/25G

LOBL, Invalid sync header, Invalid block, High BER, LFS

local fault, LFS remote fault

PCS 40G/100G

LOBL, Invalid sync header, BIP error, Invalid block, LOA, High BER, LFS local fault, LFS remote fault

Alignment marker

LOAML, Invalid alignment marker, Marker map

Lane skew

Relative skew

802.3ah Information, Event, Var req, Var resp, Loopback,

Duplicate, Unsupported, Organization

802.1ag/Y.1731 CCM, LBM, LBR, LTM, LTR, Other, Total

FEC LOFA, Corr.CW, Uncorr. CW,

Symbol error, Symbol error rate, Lane marker

(LOFA: Loss of FEC alignment

Corr.: Corrected, Uncorr.: Uncorrected

CW: Codewords)

Conditions

Timestamp source GPS

\*: Frequency results appear only when no OTN layer.

For the parameters of the following WAN performance measurements, refer to "SDH/SONET Performance Measurement Items" in SDH/SONET/PDH/DSn Applications.

Note that the same results are displayed because Pass/Fail judgement is not performed.

SPE stands for Synchronous Payload Envelope.

- WAN G.826
- WAN G.826+G.829
- WAN M.2101.1(M.2100)

#### M.2100 Performance Measurement Items

This paragraph describes the performance result items. Measurement time definitions are as below.

S<sub>Total</sub>

Total measurement time. This is the total time of the measurement excluding the time of power failure.

 $S_{Avail}$ 

Available time of measurement. Calculated from the following formula:  $S_{Avail} = S_{Total} - S_{Unavail}$ 


 $S_{Unavail} \\$ 

Unavailable time of measurement. Refer to UAT definition.

## M.2100 Performance Parameters

Items	Definition
ES	Errored Second Within $S_{Avail}$ , the number of seconds during which one or more pattern errors occurred.
SES	Severely Errored Second Within S <sub>Avail</sub> , the number of seconds during which any of the following is detected.  • 10 <sup>-3</sup> or more pattern errors  • LOF  • LOS
ALS	Alarm Second Within S <sub>Avail</sub> , the number of seconds during which any of the following is detected.  • Link is not established.  • Remote Fault  • LOF  • Errored Frame Count
	Unavailable Time

UAT	When SES or ALS continues for ten seconds, UAT starts from the beginning of the time. When items other than SES continues for ten seconds, UAT ends at one second before the time. Refer to the figure of <a href="Example of Unavailable Time Detection">Example of Unavailable Time Detection</a> .  First, the time (when determining the start of UAT) is not counted as UAT, and then if determined, the UAT is recounted.  First, the time (when determining the end of UAT) is counted as UAT, and then if determined, the UAT is recounted. In a word, the values of UAT may be reduced later. The same is applied to other items.
AVT	Available Time The available time of the measurement S <sub>Avail</sub> =S <sub>Total</sub> -S <sub>Unavail</sub>
EFS	Error Free Second Within $S_{Avail}$ , the number of seconds during which no errors occurred.

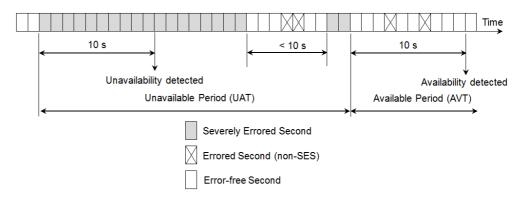

Example of Unavailable Time Detection


## **About Sequence Error and Sequence Sync Loss**

Sequence Error and Sequence Sync Loss are measured as following:

Ethernet frames sent by Network Master include special bytes that indicates sequence number. When receiving this Ethernet frames, Network master sets the sequence number of next incoming Ethernet frame.

Network Master checks sequence numbers in every four straight incoming frames. When the sequence number does not match the expected value, a Sequence Error or a Sequence Sync Loss will occur.

• Sequence Error: When one frame arrived after next sequence number frame.



• Sequence Sync Loss: Other case of Sequence Error. For example, when one or more sequence number were lost.

#### Sequence number of the frame Received Ethernet frames Sequence Sync Loss (Frame No.7 was lost.) Received Ethernet frames

Sequence Sync Loss (Frame No.6 has delayed by two frames.)

## 6.3 Cable



The Ethernet Cable Test uses Time Domain Reflectometry (TDR) to validate and detect open and short circuited CAT5/CAT5E cables. This test is convenient for installation and troubleshooting of cables.

### Time Domain Reflectometry Principle

The TDR method can be used for control of electrical cables. The TDR transmits a short pulse which will be fully absorbed if the cable is perfectly terminated. In case of open or short circuited cables, the pulse will be reflected.

- An open circuited cable will result in an *increase* of impedance.
- A short circuited cable will result in a *decrease* of impedance.

These conditions will give a pulse reflection in an either positive or negative mirrored pulse. If the time is measured and the speed of the signal in the cable is known, a distance to the problem can be estimated.

The magnitude of the reflection (called the *reflective coefficient P*) can be found from a formula involving the impedance to the load  $(Z_t)$  and the resistance in the media  $(Z_0)$ :

$$P = (Z_t - Z_0) \text{ over } (Z_t + Z_0).$$

P = 0 indicates no reflection. P = +1 indicates an open circuit, and P = -1 indicates a short circuit.

#### Wiring of Ethernet Cables

A CAT5/CAT5E cable consists of 4 twisted pairs which typically are terminated in a RJ45 connector.

#### CAT5

Defined in *ANSI/TIA/EIA-568-A*. The color code referring to this standard is called **T568A**.

#### CAT5E

Defined in *TIA/EIA-568-B*. The color code referring to this standard is called **T568B**.

## 6.3.1 Test Setup

When you go to the test setup of the Ethernet Cable Test, the following screen is displayed.



This screen allows you to control and monitor an Ethernet Cable Test.

#### Test setup controls

## **Color Coding Standard**

Allows you to select the color coding used for the graphical representation of the cables. In the drop-down menu, you can choose between T-568A (CAT5) and T-568B (CAT5E).

# Test monitoring information

#### Pair

Lists the individual cable pairs in relation to the pin number and color coding.

#### Status

Shows the status of the wires inside the cable. The Lamp indicator will be *green* if there is no problem and *red* if there is a problem.

- OK indicates a fully functional cable.
- Short indicates a short circuited cable.
- Open indicates an open circuited cable.

#### Distance to fault

In case of cable troubles (i.e. an open or a short circuit) the distance to the problem will be indicated approximately in this field.

Detectable distance to the fault is up to  $100\ m.$ 

## 6.4 Channel Statistics



The Channel Statistics test separates incoming frames into channels based on a number of defining characteristics (*Definitions*) and shows information about each channel (*Statistics*). The test is mostly used for in-service monitoring, where it provides data for detailed analysis of the traffic types present in the network.

## 6.4.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Ethernet interface are described in a separate section:

• Ethernet Setup and Status



Channel Statistics test is available for up to 10 Gbps interface.

## 6.4.2 Test Setup

### 6.4.2.1 Control

Refer to "Control in "BERT" section for the operation.

## 6.4.2.2 Generator

Refer to "Generator in "BERT" section for the operation.

## 6.4.2.3 Stream - profile

Refer to "Streams - profile in "Mon/Gen" section for the operation.

### 6.4.2.4 Stream - Meas.

Refer to "Streams - Meas. in "Mon/Gen" section for the operation.

#### 6.4.2.5 Definitions

Touching the **Definitions** button in the navigation area displays the following screen.

The <u>Follow</u> button appears when the Port 2 settings can follow Port 1.




This screen is where you specify which frame characteristics are considered when performing the channel separation (i.e. which frame characteristics are active during the test). The maximum number of channels is 231.

For example, if **MAC source address** check box is selected, frames whose source MAC addresses are not match appear in different channels

## 6.4.3 Test Results

## 6.4.3.1 Summary

Touching the **Summary** button in the navigation area will display the screen shown below.

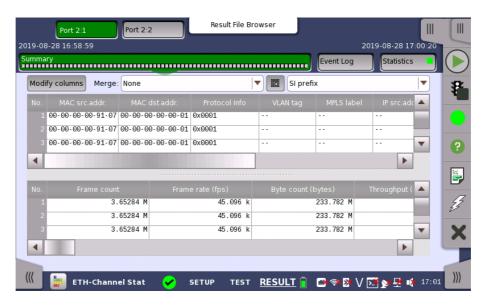

This screen presents the results of the Channel Statistics test. The screen contains two lists, one which lists the created channels and another which shows the results for each channel. Each channel is shown as a row in the two lists.

The lists can be shown either above each other (with the channels list on top) or beside each other (with the channels list to the left). Use the 🖻 button in the top row of fields and buttons to switch between the two layouts.

#### Merging channels

To get a better overview of a certain aspect of the received traffic, you can combine channels using the *Merge* functionality.

Open the **Merge** drop-down menu to combine all channels where one specific definition value (e.g. the source MAC address) is identical. The drop-down menu contains all currently active definitions.

When the test results are shown in merged mode, definitions that are not uniquely defined will be hidden, so that only the merge criterion, channel number, and protocol information will be visible. The protocol information field, which shows which protocols are detected in a channel, will in merged mode show all protocols present in the frames contained in the merged channel.

Unlike the setup of active <u>definitions</u>, the merge setting works on already collected channels - that is, it does not affect how the system separates channels, and it will work on both running, stopped and loaded tests.


#### Selecting notation

Select the required notation for the results from the notation drop-down menu.

- Unformatted e.g. 71892
- SI prefix e.g. 71.892 k (k means "kilo")
- Engineering e.g. 71.892E3
- Scientific e.g. 7.1892E4

#### Modifying columns

To select which columns are shown in the two lists, touch the **Modify columns** button. This will launch the **Modify shown columns** dialog box.

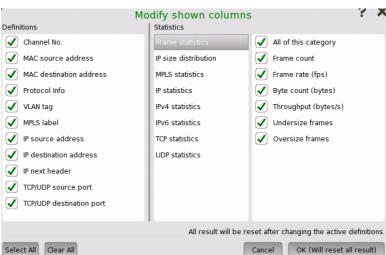

#### **Definitions**

The selected check boxes correspond to the columns currently shown in the channels list on the **Summary** screen.

#### **Statistics**

The selected check boxes correspond to the columns currently shown in the results list on the **Summary** screen. Note that the check boxes are placed under categories.

- Frame statistics
- IP size distribution
- MPLS statistics
- IP statistics
- IPv4 statistics
- · IPv6 statistics
- TCP statistics
- UDP statistics

#### Select/Clear all

To select all check boxes in the dialog box, touch the Select All button.

To clear all check boxes in the dialog box, touch the Clear All button.

### 6.4.3.6 IEEE1588v2 Log

If Ext. log is selected in IEEE1588v2 screen of Ethernet Frame Setup, the IEEE1588v2 Log button appears in the navigation area. Refer to  $\underline{\text{IEEE1588v2}}$  Log in "BERT" for the operation.

#### 6.4.3.7 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

#### 6.4.3.8 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to <u>Statistics</u> of Mon/Gen for the operation.



The frame count result in the Statistics screen may not match to the result in the Summary screen, because the measurement start time and the stop time are different between Summary screen and Statistics screen.

## 6.5 Mon/Gen



*Ethernet Monitor/Generate* is typically used for out-of-service and performance testing. It is possible to perform a passive, non-intrusive monitoring or at the same time transmit test data, which can be reflected for further evaluation and testing of the network.

## 6.5.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Ethernet interface are described in a separate section:

• Ethernet Setup and Status

For applications also including an OTN interface, you can find a description of the setup options and status information for OTN in the following section:


• OTN Setup and Status

Please refer to the sections relevant for your current port setup requirements.

## 6.5.2 Test Setup

## Copy frame content to other stream(s)

This feature allows you to copy the frame content of the stream that you are currently configuring to all streams in another port or to a single stream.



Touching the **Copy To** button opens a drop-down menu from which you can select the relevant port and **All** or a specific stream.

#### 6.5.2.1 Control

Refer to "Control in BERT Test Setup subsection for the operation.


#### 6.5.2.2 Generator

Refer to "Generator in BERT Test Setup subsection for the operation.

## 6.5.2.3 Streams - Profile

Touching the **Streams** - **Profile** button in the navigation area displays the following screen.

The **Follow** button appears when the Port 2 settings can follow Port 1.

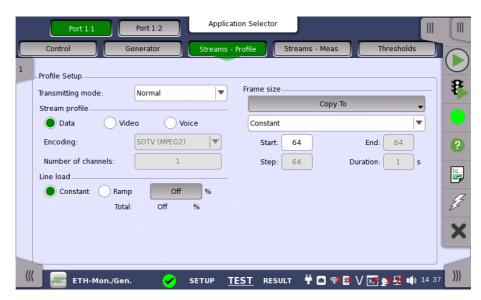

This screen contains the parameters for specifying a profile and pattern for each stream and for specifying which measurements are made.

#### Stream selection

Use the slide-out panel on the left-hand side of the screen to select the relevant stream. To enable the stream, touch the right-hand button on the slide-out panel and set the load amount.

#### Transmission mode

- Normal: Does not generate the bursts. The normal Ethernet frames are sent.
- Burst: Generate the bursts.

#### Stream X profile

Allows you to specify and configure a profile type for the currently selected stream. Using the radio buttons, you can select the stream profile as either **Data**, **Video** or **Voice**.



On the Ethernet application over OTN, only **Data** appears depending on the <u>Client signal</u> setting.

#### **Encoding**

Open the drop-down menu to select the relevant encoding type. The available values depend on the selected profile type.

#### **Number of channels**

Specify the number of channels.

#### Line load

When Profile type is set to **Data**, you can select the line load profile as either **Constant** or **Ramp**. If you select **Ramp**, you can touch the adjacent button to display the **Ramp Line Load Setup** dialog box.

When Profile type is set to **Video** or **Voice**, the line load calculated from Encoding and Number of channels is displayed.

The sum of the line load of each stream is displayed under the button.



The line load unit can be specified from **Percent**, and **Mbps**. Touching **Off** at left-bottom stops sending the stream.





On the Ethernet application over OTN, only **Mbps** appears depending on the <u>Client</u> <u>signal</u> setting.

The dialog box contains the following settings:

#### Line load start

The line load at which the ramp will start.

#### Line load end

The line load at which the ramp will end. (This is the value shown on the line load button.)

#### Step size

The step size from start to end.


#### Step duration

The duration of each step.

### Ramp mode

How the ramp should continue. 3 modes are available:

- **Keep end**: The specified end line load is maintained after the ramp is ended.
- Repeat ramp: The ramp is repeated.
- Invert ramp: The ramp is inverted.

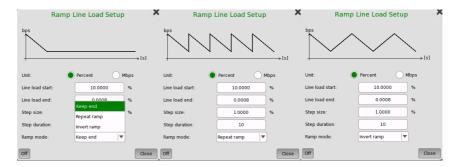


#### Frame size

When Profile is set to Data, three setups are available:

#### Constant


Uses the fixed frame size specified by the **Start** value for the duration of the test. The following figure shows an example of frame sizes when **Constant** is

selected.

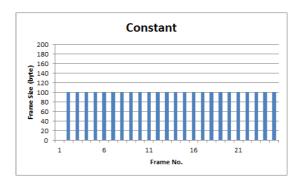

## Stepped


Steps the frame size from **Start** to **End** in increments of **Step**. Each frame size is transmitted for the period in seconds specified by **Duration**. The following figure shows an example of frame sizes when **Stepped** is selected.

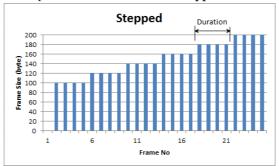

If the traffic duration is set to *Continuous* on the **Generator** screen, the step sequence will be repeated indefinitely. If traffic duration is set to *a number of seconds*, the step sequence will be terminated when the specified total period has elapsed. Similarly for traffic duration set to *a number of frames*, the step sequence will be terminated when the total number of transmitted frames reaches the specified count.

#### Random

Sends a continuous stream of frames of random sizes, evenly distributed between **Start** and **End**. The following figure shows an example of frame sizes when **Random** is selected.

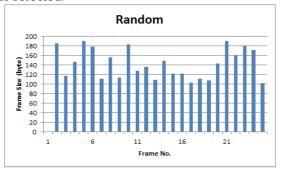



Frame size is protocol headers and payload combined. Frame size does not include preamble and interframe gap.




### Burst mode

Set the burst generation mode. The normal Ethernet frames are not sent in the burst mode.

- Off: stops sending the stream.
- Const: generates the bursts that the data length and the gap length are constant.

When Const is selected, "Burst" is displayed on multi stream slide.



### **Number of Bursts**

Selecting **n-Burst** allows to set the number of the bursts to generate. If sending specified number bursts has finished, sending stream will stop.

Duty

Set the burst data length and the gap length.

Touch the field of Duty and Period to set the value.

Frame size

Set the frame size used for the burst data length calculation. 20 bytes (preamble and IFG) adding to the value set in this field is used as the one frame size of the burst data length.

#### 6.5.2.4 Streams - Meas.

Touching the **Streams - Meas.** button in the navigation area displays the following screen.

The **Follow** button appears when the Port 2 settings can follow Port 1.



This screen allows you to configure Frame Loss, Jitter, and Latency.

#### Measurement Setup

#### Frame loss

Select the check box to measure Frame Loss.

When selecting Threshold check box and enter the value, Pass/Fail is judged.

If selecting Count, set the frame loss number.

If selecting Ratio, set the frame loss ratio.

Jitter

Select Jitter to measure it.

When selecting Threshold check box and enter the value, Pass/Fail is judged.

#### Latency

Select the check box to measure it.

When selecting Threshold check box and enter the value, Pass/Fail is judged.

# Latency / Jitter timestamp

This items allow you to configure the resolution of Jitter and Latency.

#### Source

Select a timestamp source for measurement. The color of the right-hand indicator shows whether latency and/or jitter can be measured or not.

Green: Latency and/or jitter can be measured.

Red: There is a possibility that the timestamp source signal could not be detected. For the detection status of the timestamp source signal, refer to Timestamp source availabilities.

When **GPS** is set, the measurement can be performed by using two Network Masters which have made synchronized.

In this case, set the same option to **Source(Ext ref. 10MHz)** of both Network Master.

#### Internal

This option uses the timestamp generated inside the Network Master. When Internal is selected, you can measure latency by receiving Ethernet frames from other Network Masters. To do this, you need to synchronize two Network Masters' timestamp with GPS once. Note that clocks run without synchronization between two Network Masters after synchronizing with GPS, the time difference between them raises along with the elapsed time. The degree of the difference depends on the internal clock accuracy whose specification is listed in External Interfaces in MT1100A Specification. For the procedure to synchronize timestamp with GPS, follow the <a href="Itmestamp Synchronization Procedure">Itmestamp Synchronization Procedure</a>.

When Source is switched to **Internal** from other options, timestamps behavior are the followings:

- When the application has been already running on other ports with setting Timing source to **Internal**.:
  - Timestamps synchronize with those of the other ports.
- When no other ports are used and GPS signal is not received: Timestamps start from any time.
- When no other ports are used and GPS signal is received: Timestamps start from GPS time.

#### **GPS**

This option uses the timestamp generated based on TOD (Time of Day) signal and 1PPS signal which are provided by the GPS receiver One way latency can be measured.

#### GPS antenna cable

To measure the phase error precisely, set the correction value to GPS cable correction.

When calculating the delay time from the cable length, it is recommendable to use 5 ns/m as the conversion factor.

When using the following GPS provided by Anritsu, set 25 ns.

• G0325A


#### 6.5.2.5 Thresholds

For **Total Frame Difference** and **Ethernet**, refer to "Thresholds in BERT Test Setup subsection for the operation.

### 6.5.3 Test Results


#### 6.5.3.1 Summary

When you go to the test results of the Ethernet Monitor/Generate application, the following screen is displayed.

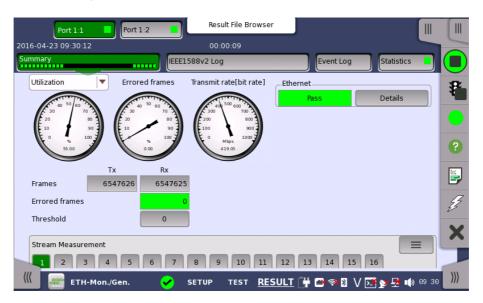

This screen contains a summary of the results of the Ethernet Monitor/Generate test. The information includes such things as number of errored frames and number of exceeded thresholds.

The three dials showing utilization/throughput results, pattern errors and errored frames can be enlarged by touching on them. The black needle points the measured value in the latest period.

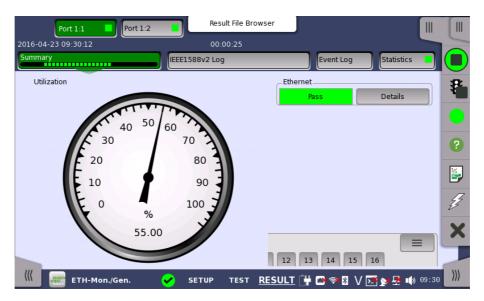

To view throughput information, select **Throughput** in the drop-down menu and then expand the dial. Use the drop-down menu above the expanded dial to select the relevant layer.

When **Ethernet** is selected on Threshold of the Test Setup screen, the **Ethernet** information appears in the upper right-hand corner, shows pass/fail status summary. Touching the **Details** button allows you to inspect the individual pass/fail status.



### Transport

Displays the results of Transport test. This result appears if **Transport** check box is selected in the Test Setup screen.

The stream slide-up at the bottom of the screen allows you to configure and inspect the measurements of each individual stream. Display/Hide the slide-up by touching the handle icon. You can set up thresholds for frameloss, latency and jitter for each stream as well as inspect the measurement results.



## 6.5.3.2 IEEE1588v2 Log

If Ext. log is selected in IEEE1588v2 screen of Ethernet Frame Setup, the IEEE1588v2 Log button appears in the navigation area. Refer to IEEE1588v2 Log in "BERT" for the operation.

### 6.5.3.3 OAM Log


The operation of OAM Log screen is the same as that of BERT application. Refer to OAM Log in BERT for the operation.

### 6.5.3.4 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

#### 6.5.3.5 Statistics

Touching the **Statistics** button in the navigation area displays the screen shown below.

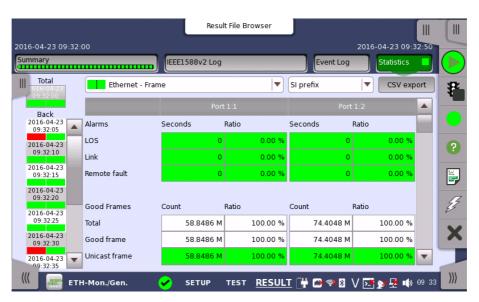

This screen presents a detailed analysis of the test results. You can choose to view either the total results from measurement start or the results of a specific interval during the test. You can also zoom in on a specific result item. The results can be displayed either in table (list) form or as a graph.

#### Selecting which results to view

# Selecting the interval time


Touch the **Total** button to switch the total values measured in all interval times. The start time of measurement is displayed on the button.

Touching the button in left side **Back** field shows the measured values in the interval time. The end time of the interval is displayed on the button.

The **Current** button is displayed at left bottom when the measurement is running. Touching the **Current** button shows the measured values in the current interval time. The start time of the current interval is displayed on the button.

The slide-out panel on the left-hand side of the screen contains the following functions:

- Only show intervals that contains errors
- Time format





If you have stopped measurement during the interval time, the measurement results of the current interval are discarded. The log of the current interval is not displayed in **Back** field.

In this case, result data are re-calculated excluding the data of the current interval when the measurement is stopped. This causes that "Count" and "Ratio" displayed after the measurement will be different from that of during measurement. The sum of interval time (multiplied interval time by the number of back logs) may not match the differential time between displayed time at left top and right top after the measurement.

# Selecting type of results

Open the middle drop-down menu in the top row of buttons to select which results you want to display on the screen.

- Performance
- Frame
- Burst
- Size Distribution
- Transmit
- Multi Stream Transmit
- Multi Stream Throughput
- Multi Stream Frame Loss
- Multi Stream Latency
- Multi Stream Jitter
- PCS\*1
- SyncE
- IEEE 1588v2
- 802.3ah
- 802.1ag/Y.1731
- FEC\*
- Conditions

\*: Either of PCS or FEC is displayed when the interface is 100 Gbps or less.

# Studying a specific result

Touch a specific cell in a result table to zoom in on the corresponding result item. The **Count** and **Ratio** fields are displayed on a **Zoom** tab. A **Time vs. Statistics** tab is also available. Use the **Back** button or touch the zoom filed to return to the statistics screen.

## Selecting how results are displayed


#### Selecting notation

Select the required notation for the results from the notation drop-down menu.

- Unformatted e.g. 71892
- SI prefix e.g. 71.892 k (k means "kilo")
- Engineering e.g. 71.892E3
- Scientific e.g. 7.1892E4


# Bits and bytes conversion

The name of the item measured in bits is available as a button. You can convert the unit from Bits to Bytes, by touching the button.



## Save results to files

The CSV Export button appears when the measurement isn't running. Touch the button, and you can select item(s) you want to export to a CSV file during measurement. The button is not displayed while the measurement is running.

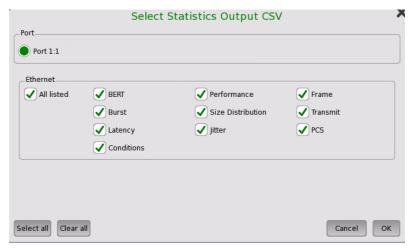

Touch OK, and enter the filename.

#### Results

Results are displayed according to your choice.

Performance

Utilization

Throughput

Frame rate

Frame

Alarms

Good Frames

**Errored Frames** 

Layer3 Error

Other Frames

Last Received

Frame diff.

Bursts

Frames

Burst Size

Size Distribution

Total Frames

Size Dist.

Frame Size

Transmit

Traffic

Multi Stream Transmit

Traffic

```
Multi Stream Throughput
      Throughput
Multi Stream Frame Loss
      Frame Loss
Multi Stream Latency
      Latency(us)
      (Latency is displayed in the range of 0 to 20 seconds. In case the measured
      value is out of this range, N/A is displayed.)
Multi Stream Jitter
      Jitter(us)
PCS
      PCS 10G/25G
      PCS 40G/100G
      Alignment marker
      Lane Skew
SyncE
      SSM Statistics
      Alarms
      Rx SSM QL
IEEE 1588v2
      Offset Stat.
      Offset Variance
      Mean Path Delay
      Path delay variation (PDV)
      Message Stat
      Signalling
      Clock Status Stat.
802.3ah
802.1ag/Y.1731
FEC
      LOFA
      Corr.CW, Uncorr. CW
      Symbol errors
Conditions
      GPS
```

## 6.6 Pass Through



Ethernet Pass Through enables non-intrusive in-service monitoring for both fast troubleshooting and detailed analysis of the live traffic on a network. All traffic received on a port is forwarded on the other port and vice versa. Traffic between the two network DUT elements is monitored as illustrated below.



## 6.6.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Ethernet interface are described in a separate section:

• Ethernet Setup and Status



For the Pass Through tests, the interface bit rate of 10 Gbps or less can be set.

## 6.6.2 Test Setup

## 6.6.2.1 Control

Refer to "Control in BERT Test Setup subsection for the operation.

#### 6.6.2.2 Thresholds

Touching the **Thresholds** button in the navigation area displays the following screen.

The **Follow** button appears when the Port 2 settings can follow Port 1.




#### **Ethernet**

When you select the check box, you can enable various thresholds. Touch the **Setup** button to display the **Ethernet threshold setup** dialog box.

### 6.6.3 Test Results

#### 6.6.3.1 Summary

When you go to the test results of the Ethernet Pass Through application, the following screen is displayed.

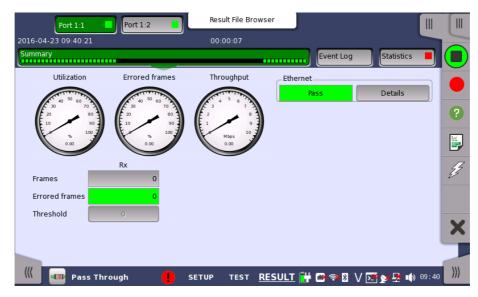

This screen contains a summary of the results of the Ethernet Pass Through test. The information includes such things as number of errored frames and number of exceeded thresholds.

The three dials showing utilization/throughput results, pattern errors and errored frames can be enlarged by touching on them. The black needle points the measured value in the latest period.

When **Ethernet** is selected on 'Threshold' of Test Setup screen, the **Ethernet** information appears in the upper right-hand corner, shows pass/fail status summary. Touching the **Details** button allows you to inspect the individual pass/fail status. Refer to <u>Summary</u> in BERT section.

## 6.6.3.2 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to <u>Event Log</u> of SDH/SONET/PDH/DSn BERT application.

#### 6.6.3.3 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to <u>Statistics</u> of BERT for the operation.

## 6.7 Ping



The Ethernet Ping test is a quick and easy way for testing, troubleshooting and verification of connectivity and latency. Packets are sent from the source address to the destination address and back again - allowing the user to determine whether traffic is possible.

## 6.7.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Ethernet interface are described in a separate section:

• Ethernet Setup and Status

## 6.7.2 Test Setup

When you go to the test setup of the Ethernet Ping application, the following screen is displayed.



This screen allows you to configure the Ping test conditions for the currently selected port.

#### **Test Duration**

Allows you to define the test duration in one of three ways:

- Continuous Used when a *persistent Ping test* is needed.
- **Seconds** Used to define the test duration in *seconds*.
- Ping requests Used to define the test duration in *number of ping requests*.

## Threshold

#### Timeout

Allows you to specify the timeout threshold value in milliseconds (ms).

## Traffic

#### Request interval

Allows you to specify the interval between frames in seconds.

#### Frame size

Allows you to specify the frame size in bytes.



Frame size is protocol header and payload combined. Frame size does not include preamble and interframe gap.

#### 6.7.3 Test Results


The results of an Ethernet Ping test relate to a specific port and consist of the Round Trip Times of the ping requests. The data is shown in both list-form and in a graphical presentation.

# Graphical presentation

The graphical presentation consists of a bar diagram of the Round Trip Times and of a pie chart showing the percentage distribution of echo replies and timeouts.

### 6.7.3.1 Summary

When you go to the test results of the Ethernet Ping test, the following screen is displayed.

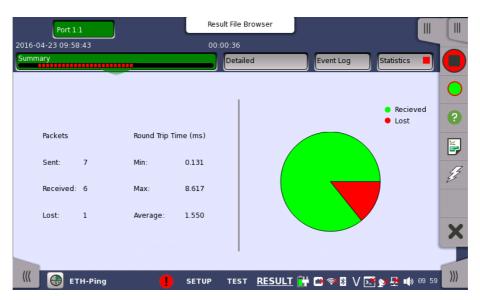

This screen presents a summary of the results of an Ethernet Ping test. The results relate to a specific port and consist of information about sent/received/lost packages and the minimum/maximum/average Round Trip Time.

# Graphical presentation

The graphical presentation consists of a pie chart showing the percentage distribution of received/lost packages.

#### 6.7.3.2 IEEE1588v2 Log

If Ext. log is selected in IEEE1588v2 screen of Ethernet Frame Setup, the IEEE1588v2 Log button appears in the navigation area. Refer to IEEE1588v2 Log in "BERT" for the operation.

#### 6.7.3.3 Detailed

Result File Browser 2016-04-23 09:58:43 2016-04-23 09:59:32 Detailed Statistics Event Log Round trip time (ms) 1: Reply: RTT 8.617 ms 2: Reply: RTT 0.134 ms 3: Reply: RTT 0.136 ms 4: Timeout 5: Reply: RTT 0.147 ms 6: Reply: RTT 0.131 ms 7: Reply: RTT 0.134 ms 8: Reply: RTT 0.135 ms 15 9: Reply: RTT 0.133 ms 4 10: 応答:RTT 0.138 ms

Touching the **Detailed** button in the navigation area will display the following screen.

This screen presents the detailed results of an Ethernet Ping test. The results relate to a specific port and consist of the Round Trip Times of the individual Ping requests. The data is shown in both list-form and in a graphical representation.

TEST RESULT 🔐 🗃 🔊 🗸 V 🍱 🔊 晃 🜒 10 00

SETUP

# Graphical presentation

The graphical presentation consists of a bar diagram of the round trip times.

#### 6.7.3.4 Event Log

ETH-Ping

Touching the Event Log button in the navigation area displays the screen providing the event log data. Refer to  $\underline{\text{Event Log}}$  of SDH/SONET/PDH/DSn BERT application.


#### 6.7.3.5 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to <u>Statistics</u> of BERT for the operation.

## 6.8 Reflector



In *Ethernet Reflector* mode the Network Master loops incoming traffic on a port swapping MAC and/or IP addresses.

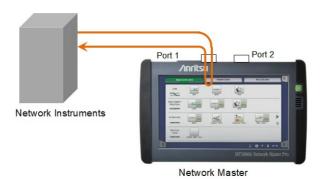



HDX (Half Duplex) is not possible in 'Reflector' mode. Multicast or Broadcast frame are not reflected in 'Reflector' mode.

## 6.8.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Ethernet interface are described in a separate section:

• Ethernet Setup and Status

In Ethernet Setup for Reflector mode, two buttons appear in Navigation area.

- Swap
- <u>Settings</u>
   Only <u>Incoming Frames</u> tab, <u>Receiver Setup</u> tab, and <u>In-band Setup</u> tab appear.
- <u>OAM</u>

**Incoming Frames** tab is different from that in other applications.



In Src MAC and Src IP, set the source MAC address and the source IP address of ARP request and Ping request.

For applications also including an OTN interface, you can find a description of the setup options and status information for OTN in the following section:

• OTN Setup and Status

Please refer to the sections relevant for your current port setup requirements.

## 6.8.2 Test Setup

#### 6.8.2.1 Control

Refer to **Control** in BERT Test Setup subsection for the operation.

#### 6.8.2.2 Thresholds

Touching the **Thresholds** button in the navigation area displays the following screen.

The **Follow** button appears when the Port 2 settings can follow Port 1.



This screen allows you to set up a number of special monitoring items related to the various interface types. When specified and enabled, these threshold values (i.e. limits) for errors and Pass/Fail status will be used during the monitoring.

Total Frame Difference

Allows you to select the reference port to measure the differential time, using **Difference from:** drop down menu.


**Ethernet** 

When you select the check box, you can enable various thresholds. Touch the **Setup** button to display the same **Ethernet threshold setup** dialog box as BERT.

#### 6.8.3 Test Results

#### 6.8.3.1 Summary

When you go to the test results of the Ethernet Reflector application, the following screen is displayed.

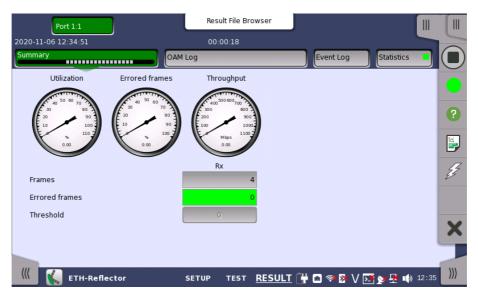

This screen contains a summary of the results of the Ethernet Reflector test. The information includes such things as number of errored frames and number of exceeded thresholds.

The three dials showing utilization/throughput results, pattern errors and errored frames can be enlarged by touching on them. The black needle points the measured value in the latest period.

When **Ethernet** check box is selected on **Threshold** of the Test Setup screen, the **Ethernet** information appears in the upper right-hand corner, shows pass/fail status summary. Touching the **Details** button allows you to inspect the individual pass/fail status. Refer to <u>Summary</u> in BERT section.

## 6.8.3.2 OAM Log

The operation of **OAM Log** screen is the same as that of BERT application. Refer to <u>OAM Log</u> in BERT for the operation.

#### 6.8.3.3 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to <u>Event Log</u> of SDH/SONET/PDH/DSn BERT application.

#### 6.8.3.4 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to <u>Statistics</u> of BERT for the operation.

## 6.9 RFC 2544



The RFC 2544 is a benchmarking methodology and defines a number of tests to be used for describing the performance characteristics of a network device (or a complete network). The Network Master includes several physical setups (test modes) and four different tests.

#### Throughput Test

The throughput is the fastest rate at which a DUT (Device Under Test) can forward frames without frame loss for a specific frame size. That is, the fastest rate at which the count of test frames transmitted by the DUT is equal to the number of test frames sent to it by the Network Master.

#### Frame Loss Test

Used to determine the frame loss rate of a DUT throughout the entire range of input data rates and frame sizes.

#### Latency/Jitter Test

Used to determine the duration from when the frame left the unit to when the frame returned to the unit. The test is done for different line loads for a specific frame size.

#### **Burst Test**

This is also called burstability or back-to-back test. The burst value is the number of frames in the longest burst that the DUT will handle without the loss of any frames.



If your test parameters are identical for the throughput and the frame loss test, use the combined test 'Throughput and Frame loss' to save time and enhance overview at the results pages.

## 6.9.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Ethernet interface are described in a separate section:

## • Ethernet Setup and Status

For applications also including an OTN interface, you can find a description of the setup options and status information for OTN in the following section:

#### • OTN Setup and Status

Please refer to the sections relevant for your current port setup requirements.

## 6.9.2 Test Setup

#### **Restriction of Number of Steps**

RFC 2544 measures the throughput, frame loss, latency/jitter, and burst while changing the load applied to the DUT by changing the transmission rate and size of the Ethernet frame. In addition to the final results, Network Master retains the measurement results at each load as an intermediate results, but 500 steps are retained at maximum. Depending on the setting of the steps, it is possible to retain more than 500 steps, but in that case the oldest measurement result(s) will be discarded.

Also, depending on the setting, only the results of one category (throughput, frame loss, latency/jitter, or burst) may be retained in large amount disproportionately. In order to avoid this, Network Master organizes the results so that results at least 100 steps remain as shown in the examples below.

Example 1

Test	Number of Steps set in Setup	Number of steps in which the measurement results are retained
Throughput	100	100
Frame loss	200	200
Burst	500	200*

<sup>\*:</sup> Measurement results for the first 300 steps are discarded.

### Example 2

Test	Number of Steps set in Setup	Number of steps in which the measurement results are retained
Throughput	500	300* <sup>1</sup>
Frame loss	200	100*2
Burst	100	100

<sup>\*1:</sup> Measurement results for the first 200 steps are discarded.

However, when the test mode is <u>End to end network test</u>, results up to 100 steps are retained.

Example 3 When the test mode is **End to End**.

Test	Number of Steps set in Setup	Number of steps in which the measurement results are retained
Throughput	100	100
Frame loss	200	100*1
Burst	500	100*2

<sup>\*1:</sup> Measurement results for the first 100 steps are discarded.

In the test setting, the total number of steps can be set to more than 500. In this case, a warning is displayed on the <u>Summary</u> screen when the measurement is started.

The number of test steps can be calculated by the following formula.

<sup>\*2:</sup> Measurement results for the first 100 steps are discarded.

<sup>\*2:</sup> Measurement results for the first 400 steps are discarded.

Number of steps =  $f \times (r+1) \times l$ 

- f: Number of Frame Size steps
- r: Repeats
- 1: Number of Line Load steps

In the following setting example, the number of steps is 100.



- f=5 Five frame sizes, 64, 256, 512, 1024, and 1518 bytes are selected.
- r=3 One measurement is repeated three times after the first measurement, which means four times for each.
- l=5 With the settings of Min. 20%, Max. 100%, and Step 20%, line load steps are five, 20%, 40%, 60%, 80%, and 100%.


Number of steps=  $f \times (r+1) \times 1 = 5 \times (3+1) \times 5=100$ 



When **Accumulate repeated steps** in the <u>Advanced</u> screen is selected, r=0 regardless of the set value of **Repeats**.

#### 6.9.2.1 Control

When you go to the test setup of the RFC 2544 application, the following screen is displayed.

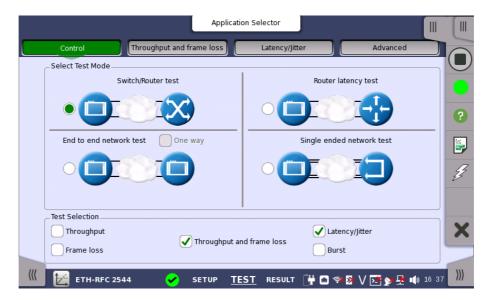

This screen allows you to specify your test mode and select which RFC 2544 tests to carry out.

#### Select Test Mode

4 different test modes are available:

- Switch/Router test
- Router latency test
- End to end network test
- Single ended network test



Switch/Router test uses two ports to perform tests.

When only one port is selected at starting RFC 2544 application, it is not able to start Switch/Router test.

Select the test mode to define your test configuration. See the description of the test modes below.

#### **Test Selection**

Select one or more of the following RFC 2544 tests:

- Throughput
- Frame loss
- Throughput and frame Loss
- Latency/Jitter
- Burst



For each test that you select, a separate test setup screen will become available, containing the relevant setup parameters for that test. Similarly, the test results will include only the tests that you have selected in 'Test Selection'.

#### **Test Mode Descriptions**

## Switch/Router test



In this test mode one Network Master is able to test, e.g. the data link layer of a switch or router. Both ports must be active and linked in this mode, with port 2 in follow port 1 mode. IP and MAC-addresses must be swapped, ensuring that the switch will forward frames from port 1 to port 2 and vice versa.

#### Testing in this mode

- Throughput test
- Frame Loss test

- Throughput and Frame Loss test
- Latency/Jitter test
- Burst test



Router latency test

Both ports must be activated in order to perform the Switch/Router test. You cannot select **Throughput and Frame Loss** and **Throughput / Frame Loss** at the same time.



In this test mode, the latency-test sends out ping frames, used for measuring the response time for router equipment. The maximum line load for the Router Latency Test is 1 Mbps.

The Network Master is capable of responding to incoming ping frames, and can thus be used to run the Router Latency Test port to port, if required.



When the instrument is used to reply to incoming ping frames, the settings of the Encapsulation type and VLAN/no VLAN in port traffic setup will decide which ping requests to answer. So do VLAN ID and Address setups.

The Router Latency Test works with both IPv4/ICMPv4 and IPv6/ICMPv6.


#### Testing in this mode

• Latency/Jitter test

# End to end network test



In this test mode, two Network Masters will work together performing an RFC 2544 test. The Network Master which users actually operate to perform RFC2544 test is the **Local** and the other Network Master which sends and receives Ethernet frames via the network under test is the **Remote**.

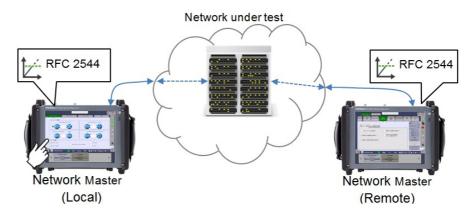

After starting RFC2544 test, the 'local' Network Master tries to control the 'remote' Network Master via the network under test. To control the 'remote' Network Master, 'local' Network Master starts communication using Dest. MAC address and Dest. IP address set on the Stream screen. Therefore, destination addresses of the 'local' Network Master and source addresses of the 'remote' Network Master should be set to the same. Also, enable **Accept Network Master Configuration frames** option on <a href="Incoming Frames">Incoming Frames</a> tab of the Setting screen on the 'remote' Network Master.

Before starting the test, confirm the software versions of both 'local' Network Master and 'remote' Network Master.

When the software version of 'remote' Network Master is the same as or later than that of 'local' Network Master:

You can perform tests with no restriction.

Other than the above case:

You can perform tests by one of following methods:

• Update the software version of 'remote' Network Master (recommended).

The required setup to perform RFC 2544 test is transferred from the 'local' Network Master to the 'remote' Network Master when the test is started.

When the test is started on the 'local' Network Master, a popup will appear on the 'remote' Network Master, telling that the unit is being remotely controlled - providing a 'break connection' button. The popup will disappear when the test is completed or stopped on the 'local' Network Master.

When the test is completed, the test results are transferred from the 'remote' Network Master to the 'local' Network Master. Remote 1 and Remote 2 buttons appear in Navigation area for displaying the 'remote' side test results.





The local results and 'remote' results are related in the way that Tx statistics for the local ports match up with the Rx statistics for the remote ports and vice versa.

The End to End Test can be run in several modes: By default, both of Port 1 and Port 2 are used for transmitting and receiving on both the 'local' Network Master and the 'remote' Network Master. Depending on the address setup the test will run either Local port 1 > Remote port 1, and Local port 2 > Remote port 2 or vice versa.

If **One Way** is selected, the test will transmit frames from either the 'remote' Network Master or the 'local' Network Master. The direction Ethernet frames are sent can be set at End to End Test (master side) in **Advanced**.

#### Testing in this mode

- Throughput test
- Frame Loss test
- Throughput and Frame Loss test
- Burst test

Note that you cannot select **Throughput and Frame Loss** and **Throughput** / **Frame Loss** at the same time.

# Single ended network test



This test is used when testing network by reflecting traffic back to the Network Master. This requires a device to reflect the traffic back e.g. a second Network Master.



If both ports are active, the test will require both ports to be linked and do a dual 'Single ended network test'. Turn off one of the ports to only test on one of the ports.

#### Testing in this mode


- Throughput test
- Frame Loss test
- Throughput and Frame Loss test
- Latency/Jitter test
- Burst test

Note that you cannot select 'Throughput and Frame Loss' and 'Throughput'  $\ /\$ 'Frame Loss' at the same time.

## 6.9.2.2 Throughput


Only available if you have specified a **Throughput** test on the **Control** of the Test Setup screen.

Touching the **Throughput** button in the navigation area will display the screen shown below.

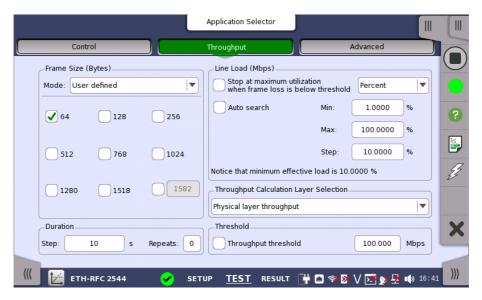

Selecting the either of following check box displays the screen shown below.

- Stop at maximum utilization when frame loss is below threshold
- · Auto search

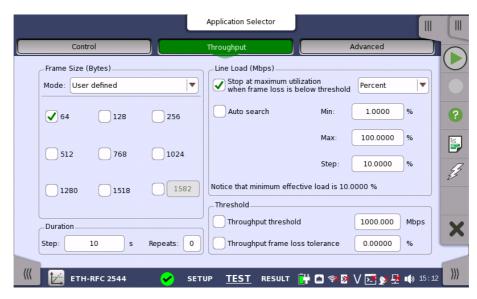


This screen allows you to configure the following parameters related to an RFC 2544 Throughput test:



The changes affect both Port 1 and Port 2 when the Switch/Router Test mode is selected.

Frame Size (Bytes)

Frame size can be specified in four ways. Observe that the screen layout changes depending on the type of Frame Size selected.

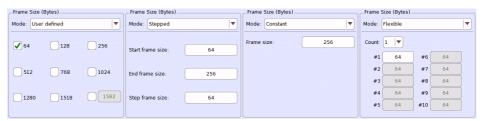

#### User defined

Check boxes for the following predefined sizes are available: 64, 128, 256, 512, 768, 1024, 1280, 1518 and 1519 to 16000(Using the field at right bottom).

#### Stepped

Setup of **Start frame size**, **End frame size** and **Step frame size** is available. The frame size starts at *Start frame size* and increases/decreases in intervals of *Step frame size* until the frame size is above/below *End frame size* (the increase or decrease depending on the specified start and end values).

# Constant

A **Frame size** field for specifying the constant size is available.

# Flexible

This option allows users to select multiple frame sizes from arbitrary frame length.

Set number of frame sizes to apply in **Count**, and input a frame length in each frame size text box.



The **stepped** mode is convenient for testing different frame sizes consistently and equally distributed. As a consequence it produces more smooth and detailed graphs when the step frame size is arbitrarily low. The test extends in time for smaller step frame sizes.



When selecting **Flexible**, one result is displayed for one frame length. If multiple frame sizes whose value is same are set, the measured results of them are merged and displayed in one result.

Frame size is protocol headers and payload combined. Frame size does not include preamble and interframe gap.

# Duration

#### Step

Specify the approximate duration in time of each step of the test. It can be set to a number of seconds (minimum 3 seconds).

#### Repeats

Specify the number of times the complete test will repeat. Valid range: 0 to 1000.

#### Line Load (Mbps)

The different test line loads used in the test are specified as a Minimum (Min) and Maximum (Max) - varied in intervals of the value specified in the Step field. The test always starts at Maximum line load and decreases until the line load is less than Minimum. The results can be presented in either Mbps or as Percent.

Valid range of Min, Max, Step depends on the unit and Ethernet interface.

Percent

0.0008 to 100.0000 %.

Mbps

10M interface: 0.00008 to 10.000 Mbps  $^{*1}$  100M interface: 0.0008 to 100.00 Mbps  $^{*1}$  1G interface: 0.008 to 1000.00 Mbps  $^{*1}$  10G interface: 0.08 to 10000.00 Mbps  $^{*2}$ 

\*1: Setting is only available with the Ethernet 10/100/1000 interface.

\*2: Setting is only available when the Ethernet 10 Gig option is installed.

### Stop at maximum utilization when frame loss is below threshold

The test will continue to test the next frame size if the current test step at a specific line load and frame size does not have any frames lost.

#### Auto search

Allows you to let the test automatically find the maximum line load that gives zero frame loss, using a specified resolution. Auto Search can run in one of the two following modes:

- Smart that assumes that there is a higher probability of frame loss occurring closer to Max, and therefore makes a skewed binary search searching the higher line loads first.
- **Binary** that will perform a binary search of the specified line load interval from **Max** to **Min**.

The **Resolution** field lets you specify the precision of the auto search. A higher precision extends the duration of the test. Available resolutions are: **0.1%**, **1.0%** and **10.0%**.



The check boxes are enabled except when selecting **End to End network test** on Control screen.

# Throughput Calculation Layer Selection

Select the layer on which the throughput calculation is done. As described in the <u>Throughput calculation</u> section there are 6 different layers:

- Utilization layer throughput
- Physical layer throughput
- Physical layer throughput (without preamble)
- · Link layer throughput
- Network layer throughput
- Data layer throughput

**Data layer throughput** appears when **UDP** or **TCP** is set to the layer 4 of the Ethernet frame on 'Ports Setup' screen.

#### **Threshold**

# Throughput threshold

Set the throughput threshold. If the measured throughput is equal to or below the threshold, the test result is Fail.


# Throughput frame loss tolerance

Set the throughput frame loss tolerance. If an occurred frame loss is equal to or below the tolerance, the test result is Pass.

### 6.9.2.3 Frame Loss

Only available if you have specified a Frame Loss test on the Control screen.

Touching the **Frame loss** button in the navigation area will display the screen shown below.

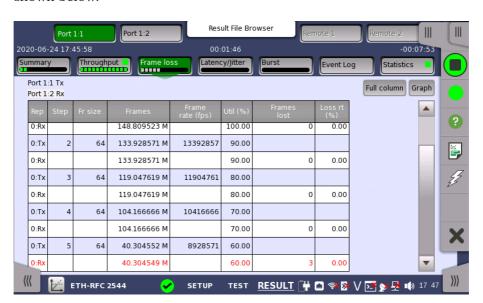

This screen allows you to configure the following parameters related to an RFC 2544 Frame Loss test:


- Frame Size
- Line Load
- <u>Duration</u>

The parameters are identical to the ones described in the *Throughput* section above.

# 6.9.2.4 Throughput and Frame Loss

Only available if you have specified a **Throughput and Frame Loss** test on the **Control** screen. Use this test if you want to perform both a Throughput test and a Frame Loss test while using the same test parameters for both.

Touching the **Throughput and frame loss** button in the navigation area will launch the screen shown below.

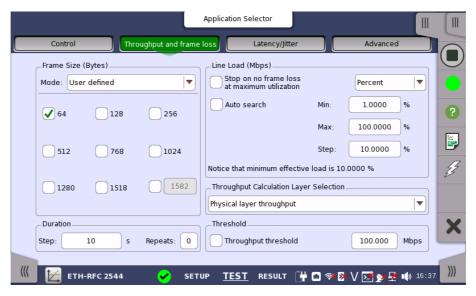

This screen allows you to configure the following parameters related to an RFC 2544 Throughput and Frame Loss test:

- Frame Size
- <u>Duration</u>
- Line Load
- Throughput Calculation Layer Selection
- Threshold


The settings for 'Throughput and Frame Loss' are identical to the ones described in the Throughput section above.

Note that under **Threshold**, the **Throughput frame loss tolerance** check box is not displayed for a Throughput and Frame Loss test.

# 6.9.2.5 Latency/Jitter

Only available if you have specified a Latency/Jitter test on the Control screen.

Touching the Latency/Jitter button in the navigation area will display the screen shown below.

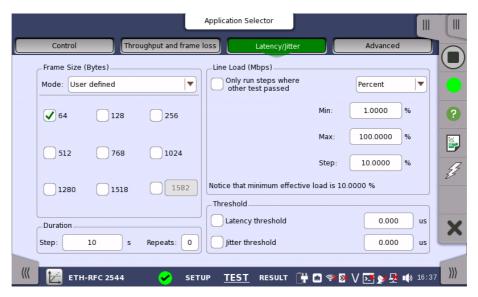

This screen allows you to configure the parameters related to an RFC 2544 Latency/Jitter test:

- Frame Size
- Duration
- Line Load
- Threshold

Most of the settings for Latency are identical to the ones described above in the Throughput section. Please see the detailed descriptions in that section in addition to the Latency-specific information provided here.

# Only run steps where other test passed

If selecting the check box, the latency test will be done only on the line load steps where other test has passed (i.e. no frame loss).

The other tests can be selected from: Throughput, Frame Loss, and Throughput and Frame Loss.

You can specify a tolerance level of the line load in percent ratio of the utilization.

Example when other test is **Throughput** and Tolerance level is 80:

Thre	oughput test	Line load of	
Frame size (byte)	Utilization (%)	Result	Latency/Jitter test (%)
64	100	Fail	(Not tested)
64	60	Pass	48
64	20	Pass	16



When **Only run steps where other test passed** is selected, all other settings are forced identical for the Frame Loss and Latency/Jitter tests.

Only run steps where other test passed is enabled in case of 'Switch/Router test' or 'Single ended network test'.

If duration **Repeats** is set to **0** (zero), the test will run a single time. If it is set to **1**, the test will run two times (repeated once).

## Threshold

# Latency threshold

Test result is Fail when the measured latency is equal to threshold or greater.


#### Jitter threshold

Test result is Fail when the measured jitter is equal to threshold or greater.

### 6.9.2.6 Burst

Only available if you have specified a Burst test on the **Control** screen.

Touching the **Burst** button in the navigation area will display the screen shown below.

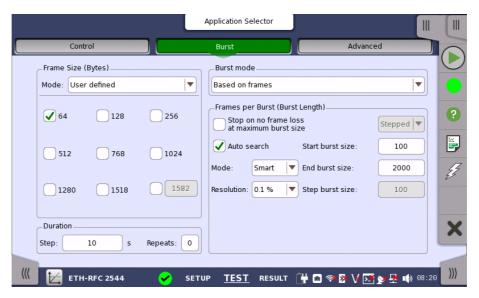

This screen allows you to configure the following parameters related to an RFC 2544 Burst test:

- Frame Size
- Frames per burst (burst length) or Seconds per burst (burst length)
- <u>Duration</u>

Frame Size and Duration are identical to the ones described above in the Throughput section. Please see the detailed descriptions in that section in addition to the Burst-specific information provided here.

# **Burst mode**

Select how to set burst length.

- Based on frames: sets burst length by multiples of Ethernet frame size.
- Based on seconds: sets burst length by time.

# Frames per Burst (Burst Length)

The number of frames per burst can either be varied (selecting **Stepped** in the drop-down menu) or constant (selecting **Constant**).

**Stepped** works like *Stepped* for frame sizes, i.e. the test starts with **Start burst Size** and in intervals of **Step burst size** increases or decreases to **End burst size**.

Constant allows you to specify a Start burst size.

# Stop on no frame loss at maximum burst size

If selected, the burst test stops on no frame loss at maximum burst size.

#### Auto search

If selected, the burst length is searched automatically. Select the search method from **Mode**. Select the search resolution from **0.1** %, **1.0** %, or **10.0** %.



The check boxes are enabled except when selecting **End to End network test** on Control screen.

If duration **Repeats** is set to **0** (zero), the test will run a single time. If it is set to 1, the test will run two times (repeated once).

# Seconds per Burst (Burst Length)

Touch a button to set seconds per burst.

When setting burst length by seconds, the burst length is searched automatically. Select the search resolution from 0.1 %, 1.0 %, or 10.0 %. Select the search method from **Mode**.

### 6.9.2.7 Advanced

Touching the **Advanced** button in the navigation area will display the screen shown below.



This screen allows you to specify various advanced settings for the RFC 2544 test(s).

- Pretest Options
- End to End Test (master side)
- Throughput Calculation Layer Selection
- Miscellaneous
- Throughput Type
- <u>Latency Timestamp</u>

# **Pretest Options**

#### Transmit learning frames

When this option is enabled, the RFC 2544 test will send out a number of 'learning frames' before the first test-step starts on each port. This happens to train network equipment, so that initial latency results will not be invalid.

# End to End Test (master side)

#### In One-Way test, transmit frames from

This parameter defines the direction of the frames when transmitted during an End to End test with the One-Way setting enabled. Available directions are:

- Local: The 'local' Network Master sends Ethernet frames to the 'remote' Network Master.
  - The 'remote' Network Master measures the received frames.
- Remote: The 'remote' Network Master sends Ethernet frames to the 'local'

Network Master.

The 'local' Network Master measures the received frames.

### Use local source addresses for destination on remote side

When the check box is selected, the Network Master does not use the IP or MAC addresses for differentiating frames during the RFC 2544 test. An exception is End to End test control, but routing equipment in the network may need the addresses to be set up correctly. To limit the amount of needed setups on the Remote side, this setting can be enabled to transfer the source address setup from the Local using it as destination on the Remote. However, the source addresses must still be correctly setup on the remote in order to make the End to End test work.

#### Store test results on remote side

When the check box is selected, test results will be stored on the 'remote' Network Master.

# Throughput Calculation Layer Selection

Select the layer on which the throughput calculation is done. As described in the <u>Throughput calculation</u> section there are 6 different layers:

- Utilization layer throughput
- Physical layer throughput
- Physical layer throughput (without preamble)
- Link layer throughput
- Network layer throughput
- · Data layer throughput

**Data layer throughput** appears when **UDP** or **TCP** is set to the layer 4 of the Ethernet frame on 'Ports Setup' screen.

# Miscellaneous

## Include addresses in frame filter on receiver

When the check box is selected, the Ethernet frames which their destination addresses match the following items will appear on the <u>Streams</u> screen.

- Src MAC
- Src IP
- VLAN ID
- Src Port

This setting has an effect on only the following measurement results on the Statistics screen.

- Multi Stream Transmit
- Multi Stream Throughput
- Multi Stream Frame Loss
- Multi Stream Latency
- Multi Stream Jitter

This setting does not have an effect on Frame Capture.

# Accumulate repeated steps

When the check box is selected, the RFC 2544 test (Throughput, Frame loss, Latency, and Burst) is performed by steps by means of changing a parameter value. When selecting the check box, the results of each steps are accumulated by each test when the tests are repeated.


Throughput Type

Select whether to register Average throughput or Maximum throughput.

# 6.9.3 Test Results

# Graphical presentation


The results of the performed RFC 2544 tests can be presented in either tabular form or as graphical representations. The graphical presentation mode provides an overview of the results and the progress of the test.

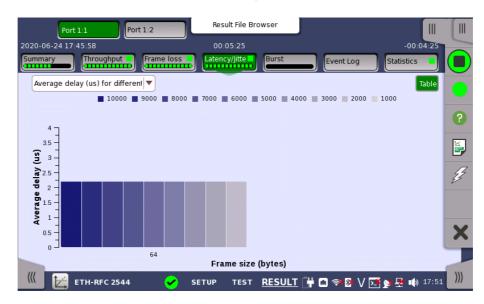

On the test-specific result screen, you switch between the two modes by using the  ${\bf Graph}$  and  ${\bf Table}$  buttons.


Full column

Switches the items to display in the table. When the **Full column** button is green, all measurement results are displayed.

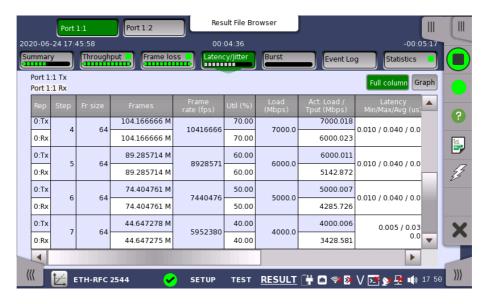

# 6.9.3.1 Summary

When you go to the test results of the Ethernet RFC 2544 application, the following screen is displayed.

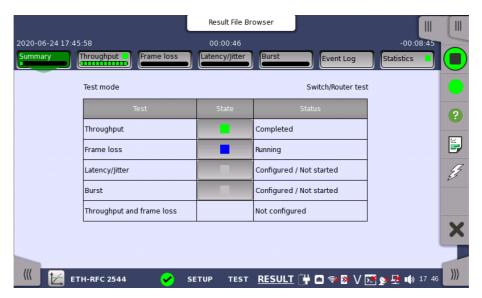

This screen presents the current status of the test(s) (Configured / Not Started, Running, Completed or Not Configured). Touching the status button for a specific test will display the result screen of the test.

# 6.9.3.2 Throughput

Touching the **Throughput** button in the navigation area will display the screen shown below.



This screen presents the results from the Throughput test.

The most important columns of the tables are the varied main parameters Frame size and Throughput and the performance parameter Frames lost.



The order of the tables will vary depending on the test mode and the relation of the ports.

Test Mode	Port 1	Port 2
ISwitch/Router test	Port 1 Tx Port 2 Rx	
End to End test		
Router latency test		Port 2 Tx Port 2 Rx
Single ended network test		

#### 6.9.3.3 Frame loss



Only available if you have specified a Frame loss test on the 'Control' of the Test Setup screen.

Touching the **Frame loss** button in the navigation area will display the screen shown below.



This screen presents the results from the Frame loss test.

The most important columns of the tables are the varied main parameters Frame size and Throughput and the performance parameter Loss rate.



The order of the tables will vary depending on the test mode and the relation of the ports. Refer to the table in "Throughput" subsection of Test Results.

# 6.9.3.4 Throughput and frame loss

Touching the **Throughput and frame loss** button in the navigation area will display the screen shown below.



This screen presents the results from the Throughput and frame loss test.


The most important columns of the tables are the varied main parameters Frame size and Throughput and the performance parameters Frames lost and Loss rate.



The order of the tables will vary depending on the test mode and the relation of the ports. Refer to the table in "Throughput" subsection of Test Results.

# 6.9.3.5 Latency/Jitter

Touching the Latency/Jitter button in the navigation area will display the screen shown below.

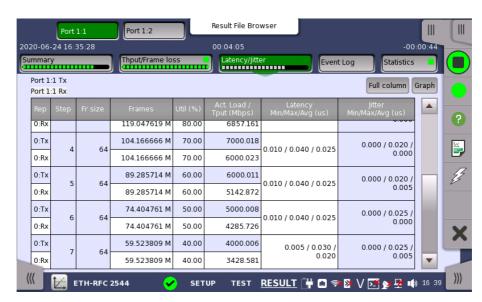

This screen presents the results from the Latency test.

The most important columns of the tables are:


- $\bullet\,\,$  the varied main parameters Frame size and Throughput
- the performance parameters Min, Avg and Max latency stated in micro
- the performance parameters Min, Avg and Max jitter stated in micro seconds



The order of the tables will vary depending on the test mode and the relation of the ports. Refer to the table in "Throughput" subsection of Test Results.

### 6.9.3.6 Burst

Touching the **Burst** button in the navigation area will display the screen shown below.

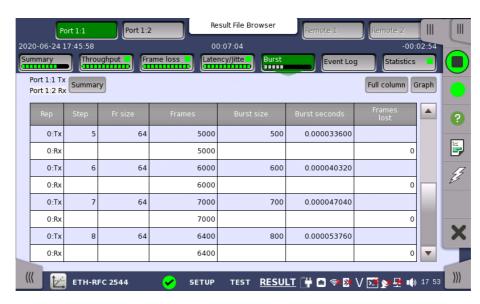


This screen presents the results from the Burst test.

The most important columns of the tables are the varied main parameters **Burst** size, Frame size and the performance parameter Frames lost.

# Summary

Touch the button to display the average burst size and the average burst seconds.

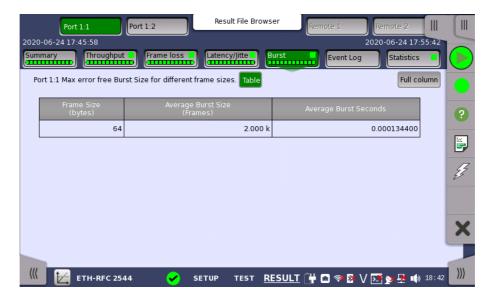



The order of the tables will vary depending on the test mode and the relation of the ports. Refer to the table in Throughput subsection of Test Results.

# 6.9.3.7 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

#### 6.9.3.8 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to <u>Statistics</u> of Mon/Gen for the operation.

# 6.9.4 Throughput Calculation

Throughput may be calculated on 6 different layers.


Throughput Calculation	Frame Representation				
Data layer	IFG     Preamble     MAC header     MPLS (opt)     PBB (opt)     VLAN (opt)     LLC SNAP (opt)     IP UDP header     PAYLOAD     CRC				
Network layer	IFG Preamble MAC header (opt)				
Link layer	IFG Preamble MAC MPLS PBB VLAN LLC SNAP IP UDP PAYLOAD CRC				
Physical layer, no preamble	IFG     Preamble     MAC header     MPLS (opt)     PBB (opt)     VLAN (opt)     LLC (opt)     SNAP (opt)     IP header     UDP TCP     PAYLOAD     CRC				
Physical layer	IFG         Preamble         MAC header         MPLS (opt)         PBB (opt)         VLAN (opt)         LLC SNAP (opt)         IP UDP header         DAYLOAD         CRC				
Utilization layer	Min.   Preamble   MAC   MPLS   PBB   VLAN   LLC   SNAP   IP   UDP   PAYLOAD   CRC				
Frame information	Network Master frame size does not include Preamble  Area included in throughput calculation  Min. IFG  Area included in utilization calculation				

Each calculation is done on a one second base. It is possible either to register the maximum throughput (actually showing only the second with the highest throughput), or to register an *average throughput per second* taken over a selected part of the test period.



The calculation depends on the setting of the transmitted frame contents. Even in cases where the transmitter is not used, the calculation will be based on this setting.

The part of the test from which the average throughput is calculated, is selected in a way to avoid influence from latency and missing frames. The drawing below illustrates this.

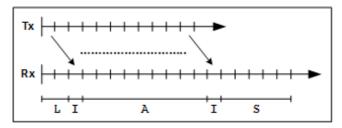

The Tx graph shows the transmitted periods, and the Rx graph shows the received periods. Due to latency the receiver will first see the transmitted frames some time later than when transmitter actually sent the frames (the L-period). This is also why the receiver may have more periods than the transmitter, in order to await delayed frames. However the receiver will maximum wait for 10 extra periods (seconds) before it times out, as frames may actually physically be lost somewhere in the network.

The average calculation is triggered when the receiver actually sees the first frame. The frames in this first I-period are ignored. Then the average calculation is started and runs over the next duration-2 A-periods. Frames in the last I-period are also ignored. Frames in the remaining S-periods have no influence on the average calculation.

# 6.10 RFC 6349





The RFC 6349 Framework for TCP Throughput Testing describes a practical methodology for measuring end-to-end TCP Throughput in a managed IP network.

For using RFC 6349 application, TCP Throughput option is required to the test module. If the option has been installed, RFC 6349 icon will appear in Application Selector.

The Network Master has the test sequence according to RFC 6349.

- 1. Path MTU
  - Identifies the maximum IP packet size passing through the network without fragmentation (Maximum Transmission Unit).
- 2. Baseline Round Trip Time (RTT)

  Measures the lowest RTT assuming that packets pass through the network without congestion.
- ${\it 3. Window Scan} \ and \ Throughput \\ {\it While scanning the TCP window size, measures the maximum bit rate of the end-to-end network path.}$
- 4. Multi-Service
  Measures multiple-TCP connection throughput. Multiple TCP connection throughput test is called "Multi-Service" in Network Master.

The window size scanning method can be set by **Test Mode**.

The RFC 6349 also defines TCP metrics as <u>Transfer Time Ratio</u>, <u>TCP Efficiency</u> and Buffer Delay.

# 6.10.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Ethernet interface are described in a separate section:

• Ethernet Setup and Status

In Ethernet Setup for RFC 6349 test, three buttons appear in Navigation area.

- Streams
   Layer 4 settings is fixed to TCP.
- Settings
   Miscellaneous tab does not appear.
- Filter



The following addresses cannot be used for RFC 6349 application tests.

- All numbers are zero. (i.e, 0.0.0.0 for IPv4, :: for IPv6)
- Multicast address

When Layer 3 is IPv6, tests can be performed if link local addresses (First 16 bits of prefix is FE80) meet the following requirements:

Requirement 1: Both Src IP address and Src IP address are link local addresses. Requirement 2: Src IP address satisfies the followings.


- Prefix: FE80:0000:0000:0000
- Interface ID: Modified EUI-64 format generated from Src. MAC

Please refer to the sections relevant for your current port setup requirements.

# 6.10.2 Test Setup

### 6.10.2.1 Control

When you go to the test setup of the RFC 6349 application, the following screen is displayed.

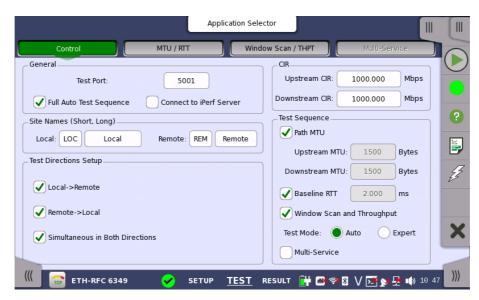

This screen allows you to specify your test mode and select which RFC 6349 tests to carry out.

# General

# Test Port

Touch the fields to set the port number.

When the Network Master is on Local side, this value is used as the TCP destination port number.

When the Network Master is on Remote side, this value is used as the TCP source port number.

### **Full Auto Test Sequence**

If selecting check box, followings are selected:

Local -> Remote, Remote -> Local, Simultaneous in Both Directions, Path MTU, Baseline RTT, Window Scan and Throughput The Test Mode will be set to Auto. Connect to iPerf Server is cleared.

#### Connect to iPerf Server

If selecting check box, Network Master will connect to the iperf server. "iperf" is the tool to measure the network throughput.

Followings are cleared:


Remote -> Local, Simultaneous in Both Directions, Full Auto Test Sequence.



Network Master supports iPerf2 only.

# Site Names (Short, Long)

In RFC 6349 mode, two Network Masters will work together performing a test. The Network Master which users actually operate to perform RFC 6349 test is the Local and the other Network Master which sends and receives Ethernet frames via the network under test is the Remote.

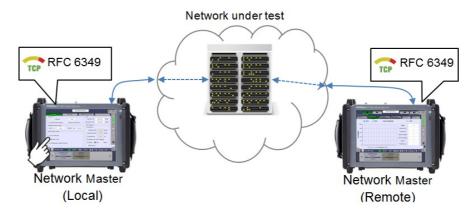

The required setup to perform RFC 6349 test is transferred from the 'local' Network Master to 'remote' Network Master when the test is started.

Touch the fields to set the Site Names:

- Local: The site name for 'local' Network Master side.
- Remote: The site name for 'remote' Network Master side.

**Test Directions Setup** Select the one or more check boxes. Ethernet frames are sent from left side site name to right side site name. Ethernet frames received at the site displayed right side will be measured.

> Selecting Simultaneous in Both Directions tests the both throughput of outgoing and incoming streams.

# **Communication Port**

Touch the fields to set the port number.

CIR

Touch the fields to set the committed information rate (CIR).

- Upstream CIR: CIR of outgoing stream.
- Downstream CIR: CIR of incoming stream.

# **Test Sequence**

Select the check boxes of the test defined in RFC 6349, which you wish to run.

#### Path MTU

Runs a test to determine the Path MTU (Maximum Transmission Unit). If cleared, set the Upstream MTU and Downstream MTU.

# **Baseline RTT**

Runs a test to determine the Baseline RTT. If cleared, set the Baseline RTT value in the field.

### Window Scan and Throughput

Runs a test to determine Throughput test while scanning the TCP window size.

## **Test Mode**

Auto: Scans at the window size of 25%, 50%, 75%, and 100% of BDP.

Expert: Scans the window size defined by user.

#### Multi-Service

Runs a test to measure the throughput with multiple TCP connections.

# 6.10.2.2 MTU / RTT

MTU / RTT button in the navigation area is enabled if Path MTU check box or Baseline RTT check box is selected on Control screen.



This screen allows you to specify test parameters.

## MTU Discovery

The field will be enabled if Path MTU check box is selected on Control screen. Touch the **Minimum MTU** or **Maximum MTU** fields set the bytes range used when discovering MTU.

# **Baseline RTT**

The field will be enabled if Baseline RTT check box is selected on Control screen. Touch the fields to set the running time of the Baseline RTT test.

## 6.10.2.3 Windows Scan / Throughput

Windows Scan / Throughput button in the navigation area is enabled if Windows Scan and Throughput check box of Test Sequence is selected on Control screen.

The contents of the screen depend on the test mode selected on Control screen.

The arrow buttons in navigation area switch the test direction of settings. The right arrow button shows to **Local** -> **Remote** direction, and left arrow button shows **Remote** -> **Local** direction.

If **Auto** is selected on Control screen, following screen appears.



If Expert is selected on Control screen, following screen appears.



# BDP (Bytes)

Appears when Test mode is set to Auto. If CIR and Baseline RTT are set on Control screen, calculated BDP (Bandwidth-Delay Product) appears.

#### **Desired Max Window Size**

Appears when Test mode is set to Auto. The nominal window size to be used if possible. If specified window size is lower than BDP/16, a larger window size will be calculated and used automatically.

# Window Scan

Touch the **Step Duration** field to set the duration of each steps. Select the check boxes to execute the step in the table.

Auto

Test parameters are set automatically.

Expert

Window Size: Touch the field to set TCP window size.

**Connections**: Touch the field to set TCP connection number.

Total: Calculated bytes are displayed.

## Throughput

Select the Enable Threshold check box if enabling the PASS/FAIL test.

Touch the % of Ideal field to set the threshold of throughput.

Touch the **Step Duration** field to set the duration of a step.

Auto

Test parameters are set automatically.

Expert

Select the check box if executing the Throughput test.

Set the parameters as same as Window Scan.

#### 6.10.2.4 Multi-Service

**Multi-Service** button in the navigation area is enabled if Multi-Service check box of Test Sequence is selected on Control screen.



This screen allows you to set of connections by specifying TOS (Type of Service) or DSCP (differentiated Service Codepoint) used for Diffserv. Touch the **Test Duration** field to set the duration of Multi-service test.

# Auto (BDP)

Select the check box if setting Window Size automatically. The window size is calculated from bandwidth delay product (BDP).

# Connection

Select the check box of the stream number to enable a connection.

# **Destination Port**

Touch the fields to set the destination port number.

# DSCP/TOS

Touch the fields to set a Diffserv or TOS codepoint to be included in IPv4 headers belonging to the connection.

#### Traffic class

Touch the fields to set a Traffic class of IPv6 headers.

### Flow label

Touch the fields to set a Flow label of IPv6 headers.



DSCP/TOS appears if Layer 3 in Stream Setup is set to **IPv4**. Traffic class and Flow label appear if Layer 3 in Stream Setup is set to **IPv6**.

### **Application Name**

Touch the fields to set a text string that identifies the application on the port number (for reporting purposes only). For example, HTTP, POP3, etc.

# 6.10.3 Test Results


Test Directions	-	Local -> Remote	
	<b>—</b>	Remote -> Local	
		Local -> Remote of Both Directions	
		Remote -> Local of Both Directions	

# Graphical presentation

The results of the performed RFC 6349 tests can be presented in either tabular form or as graphical representations. The graphical presentation mode provides an overview of the results and the progress of the test.

## 6.10.3.1 Summary

When you go to the test results of the Ethernet RFC 6349 application, the following screen is displayed.

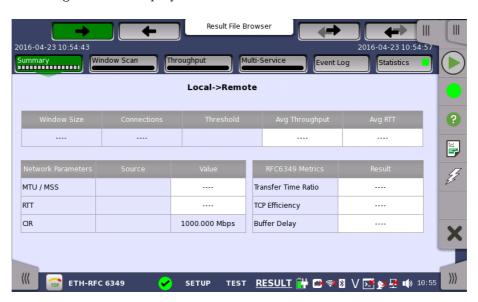

This screen presents the summary of current measurement values.

**Local -> Remote**: Shows the results of Upstream (Local to Remote) test. **Remote -> Local**: Shows the results of Downstream (Remote to Local) test.

The measurement results are displayed in white cells.

#### Throughput and RTT

- Window Size: The window size used for the step.
- Connections: The number of TCP connections.
- Threshold: The threshold of the throughput.
- **Avg Throughput**: The average value of measured Throughputs.

• Avg RTT: The average value of measured RTT.

#### **Network Parameters**

- MTU / MSS: Maximum Transmission Unit / Maximum Segment Size
- RTT: Round Trip Time
- CIR: Committed Information Rate

#### RFC6349 Metrics

- Transfer Time Ratio
- TCP Efficiency
- Buffer Delay

# 6.10.3.2 RFC 6349 Metrics

RFC 6349 defines three metrics.

#### **Transfer Time Ratio**

Defined as below:

$$TCP Transfer Time Ratio = \frac{Actual TCP Transfer Time}{Ideal TCP Transfer Time}$$

Ideal TCP Transfer Time is calculated from bit rate, MTU and TCP payload bytes. The Maximum Transmission Unit (MTU) is obtained from Path MTU test.

# **TCP Efficiency**

TCP Efficiency is the ratio of transmitted bytes without retransmission in transmitted total bytes. Defined as below:

TCP Efficiency (%) = 
$$\frac{\text{Transmitted Bytes} - \text{Retransmitted Bytes}}{\text{Transmitted Bytes}} \times 100$$

If 100 000 bytes were sent, and 2 000 had to be retransmitted, the TCP Efficiency percentage would be calculated as:

TCP Efficiency (%) = 
$$\frac{102000 - 2000}{102000} \times 100 = 98.03$$

# **Buffer Delay**

Buffer Delay shows the ratio of increased RTT against baseline RTT. Defined as below:

Average RTT during transfer = 
$$\frac{\text{Total RTTs during transfer}}{\text{Transfer durations in seconds}}$$
Buffer Delay (%) = 
$$\frac{\text{Average RTT during transfer} - \text{Baseline RTT}}{\text{Baseline RTT}} \times 100$$

For example, a baseline RTT of network path is 25 ms, and average RTT across the entire transfer increases to 32 ms. Buffer Delay percentage would be calculated as:

Buffer Delay (%) = 
$$\frac{32-25}{25} \times 100 = 28$$

# 6.10.3.3 Window Scan

Result File Browser 2016-04-23 10:56:48 Statistics Summary 理想值 Local->Remote ステップ詳細 Step Window Size Connections f put (Mbps) Avg Throughput 400 Ideal Throughput 200 Avg RTT TCP Efficiency グラフをクリックすると詳細が表示されます ETH-RFC 6349 

Touching the **Window Scan** button in the navigation area will display the screen shown below.

This screen presents the results from the Window Scan test. The ideal throughput and the actual throughput are shown in the chart. If touching on the Graph bars, step details appear in the right hand table.

# 6.10.3.4 Throughput

Touching the **Throughput** button in the navigation area will display the screen shown below.



This screen presents the Throughput results in graph or table. Touch the **Graph** and **Table** buttons to switch between the tabular form and a graphical presentation of the results.

The ideal throughput, RTT and <u>TCP Efficiency</u> are shown in the graphical presentation.

- THPT/EFF: Throughput and TCP Efficiency
- THPT/RTT: Throughput and Round Trip Time

Following results are displayed in the tabular form.

- Avg Throughput
- Ideal Throughput
- Actual Transfer Time
- Ideal Transfer Time
- Transfer Time Ratio
- Window Size / Conn
- Transmitted Bytes
- Retransmitted Bytes
- Retransmitted %
- TCP Efficiency
- Baseline RTT
- Min RTT
- Avg RTT
- Max RTT
- Buffer Delay

In bidirectional mode, the measured throughput in bidirectional mode is less than the ideal in one way mode. This is due to the overhead caused by interleaving returning ACK frames into the transfer. The ideal throughput of the instrument in bidirectional mode is calculated by considering the estimated interleaving returning ACK frame.

In case of connecting iPerf server, the "Interval" result of iPerf server is displayed more 1 second than the "Actual Transfer Time" result of the instrument. When you check the result of iPerf server, it is recommended to set the duration of the test by sufficient long period.

#### 6.10.3.5 Multi-Service

Touching the **Multi-Service** button in the navigation area will display the screen shown below.



This screen presents results by each TCP connection of RTT, Throughput and TCP Efficiency. Use the **Graph** and **Table** buttons to switch between the tabular form and a graphical presentation of the results.

Touching the button in navigation area switches the Test direction of results.

The results in Connection are:

- Connection: Connection number of the stream
- Min RTT: Minimum Round Trip Time
- Avg RTT: Average Round Trip Time
- Max RTT: Maximum Round Trip Time
- Tx THPT: Transmitter throughput
- TCP Efficiency: The ratio of actual throughput against ideal throughput

The results in Total are:

- Min RTT: Minimum RTT in all connections
- Avg RTT: Average Round Trip Time
- Max RTT: Maximum RTT in all connections
- Tx THPT: Sum of throughput in each connections
- TCP Efficiency: The ratio of total actual throughput of connections against total ideal throughput of connections

# 6.10.3.6 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

# 6.10.3.7 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data.

Refer to Statistics of BERT for the operation.

Performance and Frame are displayed as RFC 6349 Statistic result.

# 6.11 SAT 1564



Service Activation Test is an out-of-service test used to assess the proper configuration and performance of Ethernet services. The test methodology, which is described in the ITU-T recommendation Y.1564, applies to point-to-point and point-to-multipoint connectivity in the Ethernet layer and to the network portions that provide (or contribute to) the provisioning of such services.

The recommendation also defines the terms used in the Network Master screens related to Service Activation Test.

ITU-T Y.1564 is designed around three key objectives:

- To serve as a network service level agreement (SLA) validation tool, ensuring that a service meets its guaranteed performance settings in a controlled test time.
- To ensure that all services carried by the network meet their SLA objectives at their maximum committed rate, proving that under maximum load network devices and paths can support all the traffic as designed.
- To perform medium- and long-term service testing, confirming that network elements can properly carry all services while under stress during a soaking period.

# 6.11.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Ethernet interface are described in a separate section:

• Ethernet Setup and Status

For applications also including an OTN interface, you can find a description of the setup options and status information for OTN in the following section:


• OTN Setup and Status

Please refer to the sections relevant for your current port setup requirements.

# 6.11.2 Test Setup

# 6.11.2.1 Control

When you go to the test setup of the SAT 1564 application, the following screen is displayed.

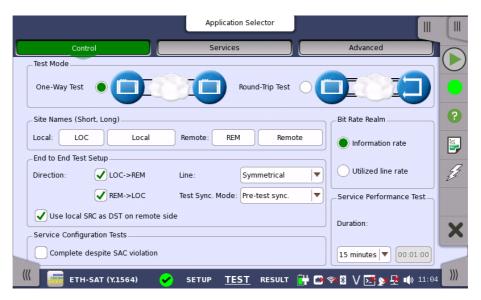


This screen allows you to configure the test mode and other general parameters related to a <u>Service Activation Test</u>.

**Test Mode** 

Use the radio buttons to select the relevant test mode.

## **One-Way Test**

In this test mode, two Network Master units will work together performing the test (End to End Test). The Network Master which users actually operate to perform SAT Y.1564 test is the *Local* and the other Network Master which sends and receives Ethernet frames via the network under test is the *Remote*.

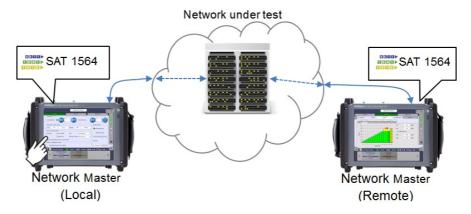

After starting SAT Y.1564 test, the 'local' Network Master tries to control the 'remote' Network Master via the network under test. To control the 'remote' Network Master, the 'local' Network Master starts communication using Dest. MAC address and Dest. IP address set on the Stream screen. Therefore, destination addresses of the 'local' Network Master and source addresses of the 'remote' Network Master should be set to the same. Also, enable Accept Network Master Configuration frames option on Incoming Frames tab of the Setting screen on the 'remote' Network Master.

The required setup to perform SAT Y.1564 test is transferred from the 'local' Network Master to the 'remote' Network Master when the test is started.



Enable "Compatible configuration frames with Network Master V2.X or older" to support communication with Network Master V2.X or older. The setting is locate under Ports Setup screen > Ethernet > Settings.



Frames from Service 1 on the local side must reach Service 1 on the remote side and vice versa. This applies to all services.

When the End to End test is started, a popup will appear on the remote side, telling that the unit is being remotely controlled and allowing the user to break the connection, if required. The popup will disappear when the test is completed or stopped on the local side.

When the End to End test is completed, the test results are transferred from the remote side to the local side.

# Round-Trip Test

This test mode is used when testing network by reflecting traffic back to the instrument. This requires a device to reflect the traffic back, for instance a second Network Master.



A remote side Network Master in Reflector mode must have Swap IP address and Swap Ports on UDP and TCP frames enabled.

Site Names (Short, Long)

Touch the fields to set the Site Names:

- Local: The site name for 'local' Network Master side.
- Remote: The site name for 'remote' Network Master side.

End to End Test Setup This setup is enabled when One-Way Test is selected.

#### Direction

Use the check boxes to specify which directions to test. Ethernet frames are sent from left side site name to right side site name. Ethernet frames received at right site will be measured.

#### Line

Use the drop-down menu to select how the service attributes for the directions are set up.

- Symmetrical: The same service attributes are used for both directions.
- Asymmetrical: Service attributes are set up for each direction.

# Test Sync. Mode

Use the drop-down menu to select the method for synchronization of the two instruments performing the test. Synchronization is required for correct measurement of FTD (frame transfer delay) and FDV (frame delay variance) in End to End Test mode.

- Select GPS if external GPS receivers are available at both the local and the remote site. This gives the most accurate measurements.
- Select Pre-test sync. if GPS is not available for both instruments. In this mode, synchronization is obtained using proprietary protocol prior to the first step of the Service Configuration Test.



External GPS sensor is available from Anritsu (part no. G0325A).

Use local SRC as DST on remote side

Select this to transfer the local source IP address to the remote side, to be used as destination IP address. If ARP is enabled locally, it will also be enabled on the remote side. If IP is disabled, the local source MAC address will be transferred to the remote side, to be used as destination MAC address.

#### Bit Rate Realm

The CIR/EIR rates for services refer to either information rate or utilized line rate. Use the radio buttons to specify which bit realm to operate in.

CIR: Committed Information Rate EIR: Excess Information Rate

#### Information rate

The bit rate of frames starting with the first MAC address bit and ending with the last FCS bit.

In this realm actual load on the Ethernet line is bigger as minimum inter frame gap, preamble, and start of frame delimiter (20 octets in total per frame) are not included. Maximum possible value depends on selected framesize(s).

For instance, a 100 Mbit/s Ethernet port can handle a total information rate of about 77 Mbit/s to 99 Mbit/s depending on the average frame size of the transmitted Ethernet frames.

#### Utilized line rate

The bit rate of the Ethernet line, including the bits for:

- The minimum inter frame gap
- Preamble
- Start of frame delimiter
- Frame starting with the first MAC address bit and ending with the last FCS bit.

In this realm the Ethernet line rate defines the maximum combined CIR for all included services.

# Service Configuration Tests

### Complete despite SAC violation

Select this check box to allow the configuration test to be completed despite any detected SAC violations. If not selected, the configuration test will stop when the first SAC violation is detected.

#### Service Performance Test

# Duration

Allows you to set the duration period of the performance test. Either select one of the predefined values in the drop-down menu or use the field to specify a custom period.

#### **6.11.2.2 Services**

Touching the **Services** button in the navigation area will launch the screen shown below.






If the End to End test setup on the 'Control' screen has been set to asymmetrical service attributes setups, two Services buttons are displayed instead of one: Services L->R button and Services R->L button.

This screen allows you to configure up to eight services being tested in the current <u>Service Activation Test</u>. For each service, you can:

- Enable/Disable the service
- Set up the profile
- Set up the bandwidth
- Set up the service acceptance criteria (thresholds)
- Set up the color aware
- Set up the frame size configuration

Enable/Disable service

Select the services that are to be tested. Up to 8 services can be specified, either by enabling already defined services or by defining new ones. Use the stream slide-out to select the relevant services. The stream slide-out is displayed via the tab in the top left-hand corner of the setup area.

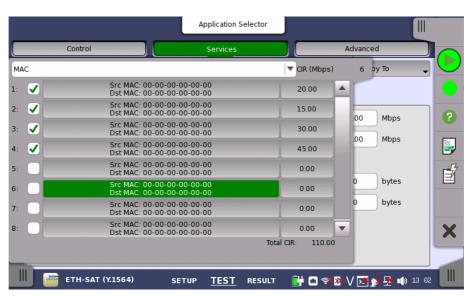


Use the **Enabled** check box to enable/disable the service specified in the **Service** field.

To define a new service, select the relevant stream, specify a name in the **Service** field and then configure the service using the tabs.

# Profile tab

The **Profile** tab contains the following parameters:

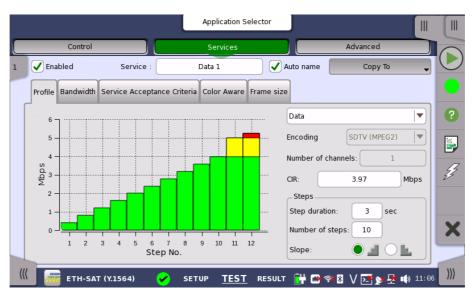

**Profile** 

In case of Round-Trip Test mode, the drop-down menu at the top allows you to select the service profile as either **Data**, **Video** or **Voice**.

# **Encoding**

Open the drop-down menu to select the relevant encoding type. The available values depend on the selected profile type.

# Number of channels

Specify the number of channels.

# CIR

Allows you to specify the Committed Information Rate (CIR). When set to zero, the CIR test is excluded. If color awareness is enabled, this is the bit rate for green frames.

# Steps

# Step duration

Allows you to specify the test step duration. Valid setting is from 1 to 60 seconds.

# Number of steps

Allows you to specify the number of steps in the CIR test. Valid setting is from  $1\ \text{to}\ 10\ \text{steps}$ .

#### Slope

Use the radio buttons to select an ascending ( $lap{4}$ ) or descending ( $lap{4}$ ) test slope for the CIR test.

- If the descending test slope is selected in **Round-Trip Test** mode, all remaining CIR steps are skipped when a CIR step passes.
- In One-Way Test mode, all CIR steps are always performed.

### Bandwidth tab

The **Bandwidth** tab contains the following parameters:



### CIR

Allows you to specify the Committed Information Rate (CIR). When set to zero, the CIR test is excluded. If color awareness is enabled, this is the bit rate for green frames.

# **EIR**

Allows you to specify the Excess Information Rate (EIR). When set to zero, the EIR test is excluded. If color awareness is enabled, this is the bit rate for yellow frames.



CIR plus EIR for a service must be greater than zero.

# Traffic policing

Select this check box to enable the traffic policing test. When enabled, you can specify a margin on the **Service Acceptance Criteria** tab and use that margin for pass/fail evaluation during the service configuration test. The test will fail if the throughput is greater than CIR + EIR + Margin.

# **CBS**

Allows you to specify the Committed Burst Size (CBS) in bytes. When set to zero, the CBS test is excluded. If color awareness is enabled (see below), this is the burst size for green frames.



The CBS test can only be executed if CIR is also greater than zero. Furthermore, it must be possible to send at least twice the number of CBS bytes with CIR rate within the step duration.

#### **EBS**


Allows you to specify the Excess Burst Size (EBS) in bytes. When set to zero, the EBS test is excluded. If color awareness is enabled (see below), this is the burst size for yellow frames.



The EBS test can only be executed if EIR is greater than zero. If CIR is greater than zero, the EBS test also requires that CBS is greater than zero. Furthermore, it must be possible to send at least twice the number of EBS bytes with EIR rate within the step duration.

### Service Acceptance Criteria tab

The Service Acceptance Criteria tab contains the following parameters:

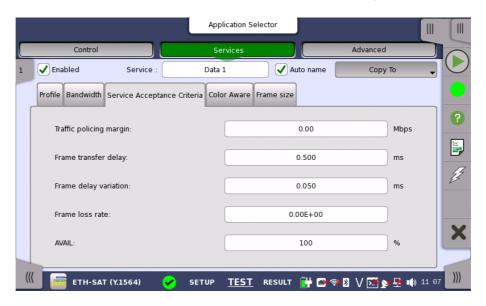

### Traffic policing margin

Only active when the traffic policing test is enabled. Allows you to specify a margin for the pass/fail evaluation during the service configuration test. The test will fail if the throughput is greater than CIR + EIR + Margin.

# Frame transfer delay / RT Frame transfer delay

Allows you to specify the maximum acceptable transfer delay in ms (mean).

# Frame delay variation / RT Frame delay variation

Allows you to specify the maximum acceptable frame transfer deviation in ms (mean).

# Frame loss rate


Allows you to specify the maximum acceptable frame loss rate.

# **AVAIL**

Allows you to specify the minimum acceptable availability percentage.

# Color Aware tab

The Color Aware tab contains the following parameters:

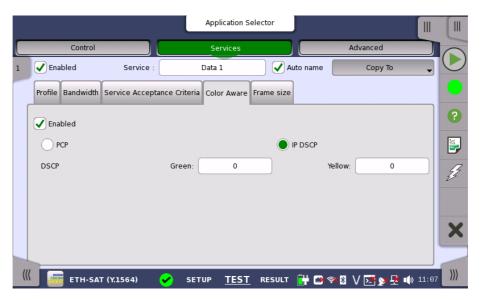

Select the **Enabled** check box to enable color awareness. You can then choose the color method (**PCP** or **IP DSCP**), as well as the priority values to mark the green and yellow frames with.

- Choose PCP to use VLAN priority coloring. This requires that VLAN is enabled.
- Choose IP DSCP to use IP priority coloring.

With color awareness enabled, the test will include results for green and yellow frames for the EIR, Traffic Policing and the EBS tests.

With color awareness, the transmitted frame rate is 100% CIR green-marked frames plus 125% EIR yellow-marked frames. If EIR is less than 20% of CIR, the transmit rate is 100% CIR green-marked frames plus 25% CIR yellow-marked frames plus 100% EIR yellow-marked frames. Without color awareness, the transmit rate is 100% CIR + 125% EIR. If EIR is less than 20% of CIR, the transmit rate is 125% CIR + 100% EIR.


# Frame Size tab

The contents of the **Frame Size** tab depends on your choice of mode. Frame size has two modes: **Constant** and **EMIX**.

# Constant


Allows you to either select a constant frame size from one of several predefined sizes, or to define a custom frame size with MTU size or User defined size setting.



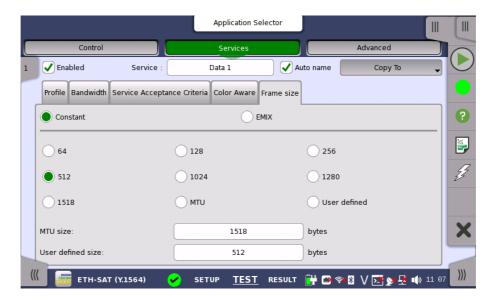

# **EMIX**

Allows you to set up a repeating frame size pattern. The pattern must consist of at least 1 frame size and at most 16.

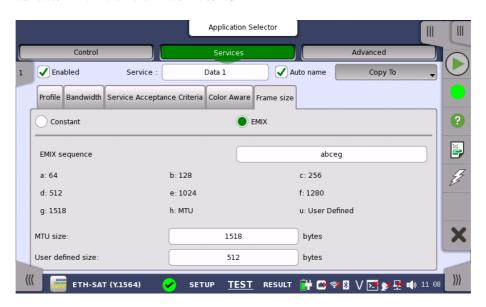

Touching EMIX sequence field opens the dialog box.






Frame size is protocol headers and payload combined. Frame size does not include preamble and interframe gap.

# 6.11.2.3 Advanced

Touching the **Advanced** button in the navigation area will launch the screen shown below.

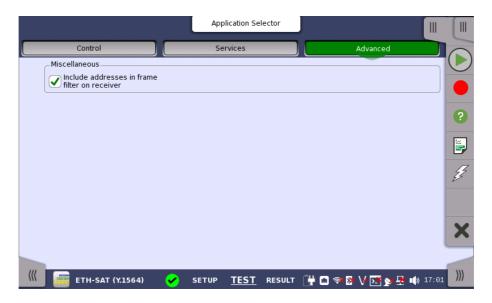

#### Miscellaneous

#### Include addresses in frame filter on receiver

When enabling this function, the Ethernet frames which their destination addresses match to following items will appear on the <u>Streams</u> screen.

- Src MAC
- Src IP
- VLAN ID
- Src Port

This setting makes the effect to only following measurement results on the Statistics screen.


- Multi Stream Transmit
- Multi Stream Throughput
- Multi Stream Frame Loss
- Multi Stream Latency
- Multi Stream Jitter

This setting does not effect to Frame Capture.

# 6.11.3 Test Results

# 6.11.3.1 Summary

When you go to the test results of the Service Activation Test, the following screen is displayed.

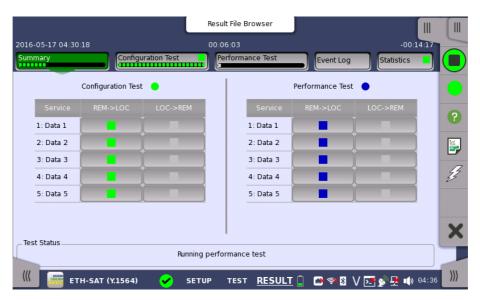

This screen presents a summary of the results of the Service Activation Test. Touching the result button for a specific service in either the **Configuration Test** or **Performance Test** result panel will display the relevant screen with detailed results information.

#### Item status Lamp

Each result item has a colored Lamp indicating the status for this item and its sub items:



Green The item and all its sub items are passing or have passed the Service Acceptance Criteria.

Yellow The GPS synchronization has been lost for a following period or more.

• G0325A: 10 seconds


FTD and FDV results could be compromised if the duration of continuous GPS synchronization loss has been longer the this time FTD and FDV results are compromised.

Red The items and one or more of its sub items have failed the Service Acceptance Criteria.

Gray Results for the item are pending.

Blue The measurement is running.

#### **GPS** status Lamp



Green GPS synchronization is OK.

Yellow GPS synchronization has been lost for 10 seconds or more. FTD and FDV results could be compromised.

## 6.11.3.2 Configuration Test

Result File Browse 2016-05-17 04:30:18 Summary Statistics Configuration Tes 3: Data 3 CIR 25.00% 0.242 0.000 Touch on each cell to see the details Min Max Mean 1/4 CIR 2/4 CIR 3/4 CIR SETUP TEST RESULT ☐ → ♥ N V M № 4 10 04 33 ETH-SAT (Y.1564)

Touching the **Configuration Test** button in the navigation area will display the screen shown below.

This screen presents the detailed Configuration Test results for a specific service. Use the drop-down menu at the top of the screen to select which service to view.

The results are presented in a table and are related to a specific CIR%. Select the relevant CIR% either by selecting the corresponding bar in the bar graph or by using the CIR drop-down menu.

Touching a cell in table displays Minimum, Maximum, Mean value and the Threshold, at bottom of screen.

Test results

Select a cell in the results table to see the details. The following information is presented:

## IR / ULR

Shows the minimum, mean and maximum bit rate in Mbps. Depending on the test setup, the bit rate is either Information Rate (IR) or Utilized Line Rate (ULR).

#### FL

Shows the number of lost frames and the frame loss ratio. The frame loss ratio is frames lost divided by frames transmitted.

## FTD / RT FTD

Shows the minimum, mean, maximum and current Frame Transfer Delay in milliseconds. Depending on the test setup, the result is either one-way delay or round-trip delay.

#### FDV / RT FDV

Shows the minimum, mean, maximum and current Frame Delay Variation in milliseconds. Depending on the test setup, the result is either one-way or round-trip.

#### 6.11.3.3 Performance Test

Result File Browser 2016-05-17 04:30:18 -00:12:0 Performance Test Event Loa Statistics 1: Data 1 0.517 19.98 0 0.000 100 2: Data 2 13.87 0 0.000 100 3: Data 3 100 7.83 0 0.517 0.000 4: Data 4 23.96 0 0.517 0.000 100 5: Data 5 29.77 0 0.517 0.000 100 Touch on each cell to see the details \_2: Data 2 - FTD Min Max Mean Threshold 0.401 0.632 0.517 0.500 SETUP ETH-SAT (Y.1564) 

Selecting the **Performance Test** button in the navigation area will display the screen shown below.

This screen presents the detailed Performance Test results.

#### Test results

Select a cell in the results table to see the details. The following information is presented:

#### IR

Shows the minimum, mean and maximum bit rate in Mbps. Depending on the test setup, the bit rate is either Information Rate (IR).

# FL

Shows the number of lost frames and the frame loss ratio. The frame loss ratio is frames lost divided by frames transmitted.

#### **FTD**

Shows the minimum, mean, maximum and current Frame Transfer Delay in milliseconds. Depending on the test setup, the result is either one-way delay or round-trip delay.

# **FDV**

Shows the minimum, mean, maximum and current Frame Delay Variation in milliseconds. Depending on the test setup, the result is either one-way or round-trip.

#### Avail

Shows *Availability*, which is the percentage of one-second in intervals that are categorized as available. An available second occurs when the line is in the available state. The available state begins at the onset of 10 consecutive non-SES<sub>eth</sub> outcomes. A SES<sub>eth</sub> is defined as a second with a frame loss rate of 0.5 or more. See ITU-T Y.1563 *Ethernet frame transfer and availability performance* clause 9.

## 6.11.3.4 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to <u>Event Log</u> of SDH/SONET/PDH/DSn BERT application.

## 6.11.3.5 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to <u>Statistics</u> of Mon/Gen for the operation.

# 6.12 Traceroute



The Traceroute test is used to determine the route taken by packets in an IP network. The intermediate routers traversed are identified by the sending of a sequence of ICMP Ping packets to the desired destination, each packet with a too low Time-to-Live (TTL) or *hop limit* so that it terminates in one of the routers and makes the router return an error message. Routers decrement the TTL and discard a package when the TTL value has reached zero.

Traceroute works by gradually increasing the TTL value for each packet, starting at "1". The first set of packets terminates at the first router, the second set at the second router, and so on until a ping reply is received from the destination. This is used to build a list of the hosts that the packets must pass through to reach the intended destination.

The test will send regular ICMP type 11 Ping packets to each host that is detected in this way, and display the resulting RTT (Round Trip Times).

# 6.12.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Ethernet interface are described in a separate section:

• Ethernet Setup and Status

# 6.12.2 Test Setup

When you go to the test setup of the Ethernet Traceroute test, the following screen is displayed.



This screen allows you to configure the parameters related to a <u>Traceroute</u> test.

#### **Test Duration**

#### Number of attempts

Used to specify the maximum number of times that Ping packets with each TTL value are transmitted. If no ICMP type 11 or ping reply is received after this number of attempts, the test will move on to a higher TTL value.

# Max number of hops

Used to specify the maximum number of hops performed in the test. The test will gradually increment the TTL value until a regular ping reply is received. If no ping reply is received before this number of hops, the test will stop.

## Ping each hosts

Used to specify the number of times each host is pinged to determine the RTT. For each hop that responds with ICMP 11 type packets, and for the desired destination, this number of Ping packets is sent.

#### **Threshold**


#### **Timeout**

Used to specify the timeout limit for Ping packets sent by the test.

# 6.12.3 Test Results

## 6.12.3.1 Summary

When you go to the test results of the Ethernet Traceroute test, the following screen is displayed.

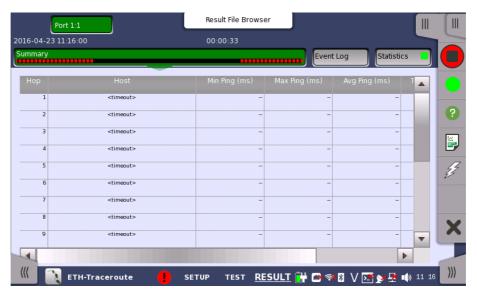

This screen shows the status/results of a running Traceroute test, or the results of the most recently completed test.

Each row in the table represents a hop in the chain of host servers of the traceroute. For each hop/host the following information is shown:

- The IP address of the host
- The Min., Max. and Average ping RTTs
- The number of ping timeouts during the determination of the RTT



In the results table for a successfully completed test, the last row will represent the destination of the traceroute.

## 6.12.3.2 IEEE1588v2 Log

If Ext. log is selected in IEEE1588v2 screen of Ethernet Frame Setup, the IEEE1588v2 Log button appears in the navigation area. Refer to  $\underline{\text{IEEE1588v2}}$  Log in "BERT" for the operation.

#### 6.12.3.3 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to <u>Event Log</u> of SDH/SONET/PDH/DSn BERT application.

#### 6.12.3.4 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to <u>Statistics</u> of BERT for the operation.


# 6.13 Discovery




The Discovery application searches for another Network Masters connecting to the network. It is also able to change the application running in the discovered Network Master.

The purpose of this application is to switch the application running in the discovered Network Master for running the RFC 2544, RFC 6349, or SAT (Y.1564) application.

For example, when the test mode is set to **End to end network test** in the RFC 2544 application, test can be performed cooperating with opposed side slave equipment by switching Network Master B application to RFC2544 as shown in figure below. For how to operate this example, refer to "Procedure" section.

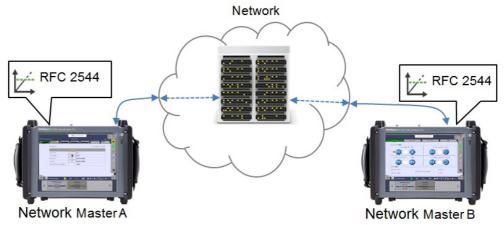

When the test mode is set to **Single ended network test** in the RFC 2544 application, test can be performed cooperating with opposed side reflecting equipment by switching Network Master B application to Reflector as shown in figure below.

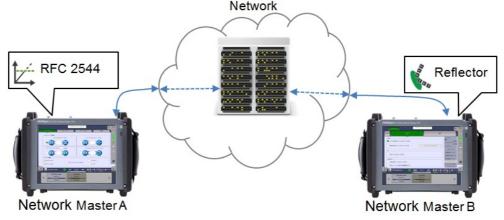



When In-band control is allowed at another port, the Discovery application cannot be started.

Network Master connecting to the network cannot be discovered under the following conditions.

- The Ethernet application is not running in Network Master.
- One of the following applications is running in Network Master:

Cable Test

Pass Through

Ethernet over OTN layer

- Allow In-band control is not selected.
- Port Setup is set to 10 Gbps WAN.

# 6.13.1 Ports Setup and Status

The first step after running an application is to set the port interfaces. Set the port interfaces in the **Ports Setup** screen, which also provides the port status information.

The setup options and status information related to the Ethernet interface are described in the following section:

• Ethernet Setup and Status

In the Ethernet setup of Discovery, the following two buttons appear in the Navigation area.

- Port
- Settings

# 6.13.2 Test Setup

#### 6.13.2.1 Control

The following screen is displayed to set the test of the Discovery application.



In this screen, the Discovery test method is set.

#### Search Type

Touch the field to select the way to search for Network Master.

- Inside local IP network (Muliticast search):
  Searches for Network Masters using multicast. This searches for Network
  Master in short time.
- Any IP address (Unicast search):

  Searches for Network Masters using unicast. This searches Network Master existing in the external network via the gateway. It takes a long time, so the dialog box appears during the searching.

#### **Sender Information**

The sending frame information which is set in the Settings screen is displayed.

#### **Unicast Search**

When Any IP address (Unicast search) is set at Search Type, set the IP address range of unicast. The IP address changes continuously.

- Search Target Count: Set the number of IP addresses to search.
- **Search Target IP**: Set the starting IP address. The ending IP address is displayed at right hand of the field.

# 6.13.3 Test Results


#### **Perform Discovery**



Touching this icon on the Application tool bar starts the processing for discovering Network Masters.

## 6.13.3.1 Summary

The following screen is displayed to check the test results of the Ethernet Discovery application.

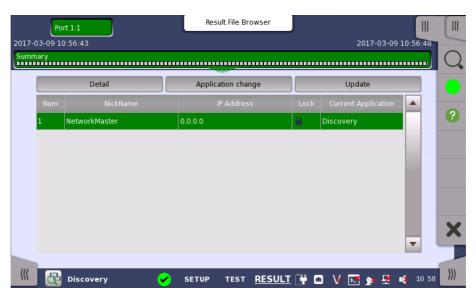

In this screen, up to 16 results of searching for Network Masters are displayed. If password is set to the Network Master, an icon appears in **Lock** row. Selecting a line by touching the table enables button operation.

#### Detail


Touching this button displays the detailed information.

#### Application change

Touching this button opens the dialog box to change the application running in Network Master.

#### Update

Touching this button updates the **Current Application** row in the table.

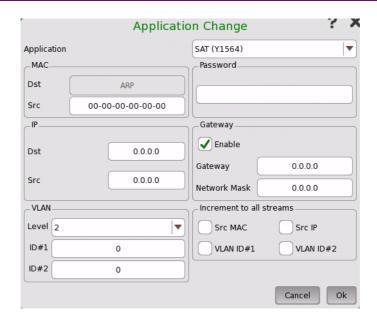

#### **Application**

Touch the field to select the application to run in Network Master.

The following items appear according to the **Application change** setting. These settings are applied to the application that has been changed.

#### MAC

Set Source MAC address.

#### IΡ

Set Destination IP address and Source IP address.

# Gateway

Select the check box to enable Gateway and Network Mask settings.

## **VLAN**

Set Level and ID. Following parameters are fixed value.

## **Password**

When a password has been set to the target Network Master, the **Password** field appears. Enter the password which is set to the target Network Master.

#### Increment to all streams

The check box is selected in case of SAT (Y.1564) application, the address values (MAC, IP, VAN) at the multi-stream are set incrementally in each stream.



After switching an application, **Answer incoming ARP requests** in the <u>Settings</u> screen is selected.

After switching to the RFC 2544 and SAT(Y1564) application, the following settings are selected.

Accept Network Master configuration frames in the <u>Settings</u> screen

Use local source addresses for destination on remote side in the <u>Advanced</u>
screen


After switching to the Reflector application, the following settings in the <u>Swap</u> screen are selected.

Swap all MAC addresses Swap IP addresses Swap UDP/TCP ports

For other settings, the same values are used after switching the application.

## 6.13.4 Procedure

This section explains the procedure to control the Network Master through a network using Discovery application. In the example here, Network Master B discovers Network Master A. Network Master B switches the application of Network Master A to RFC2544 and performs RFC2544 test.

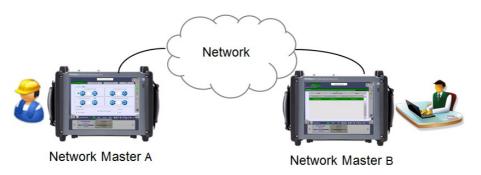


## **Network Master A Setup**

- 1. Turn on Network Master A.
- 2. Start one of Ethernet applications on Network Master A.
- 3. Set up interface on the **Port** screen and establish Ethernet link.




- 4. Touch the **Settings** on the SETUP screen.
- 5. Touch the In-band Setup tab.
- 6. Select Allow in-band control.

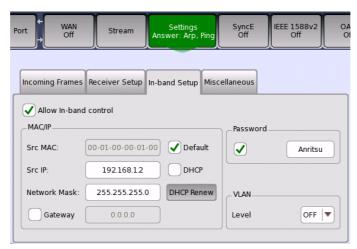

- 7. Set Src MAC, Src IP which is specified by DHCP or the administrator, and Password. Set Gateway and VLAN if needed.
- 8. Leave Network Master A powered on.

#### **Network Master B Operation**

- 1. Turn on Network Master B.
- 2. Touch Discovery in Ethernet applications.
- 3. Set up interface on the **Port** screen and establish Ethernet link.
- 4. Touch on Application toolbar.
- 5. If Network Master A is found, touch Detail.

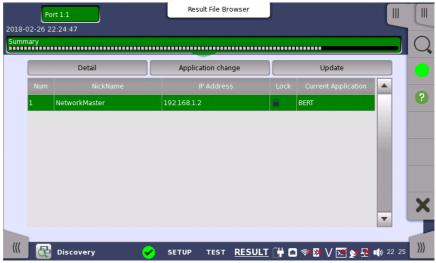


6. Select **RFC2544** as the application to run on Network Master A.

Enter a MAC address, IP addresses, and password used for RFC 2544 test of Network Master A.



Set an IP address to Src different from one displayed in the figure of step 5.

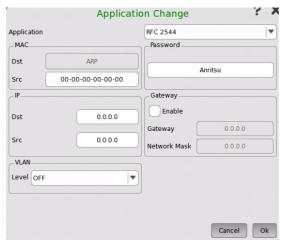


7. Touch **OK**. It takes a few minutes until the application of Network Master A is changed. MAC address, IP addresses, VLAN settings, and Gateway settings set in the Application Change dialog box will be set to <u>Streams</u> of Network Master A.

8. Touch **Update**. Confirm that the application of Network Master A has been changed to RFC2544.



- 9. Touch X on Application toolbar to exit Discovery application.
- 10. Touch RFC2544 ....
- 11. Set up interface on the **Port** screen and establish Ethernet link.
- 12. Select **End to end network test** on the Control screen.

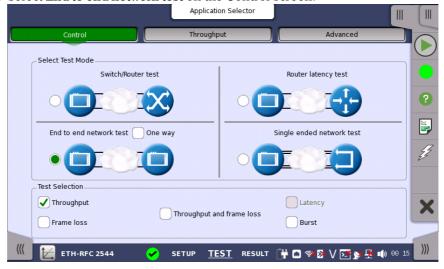

- 13. Touch on the Application toolbar.
- $14.\,$  After the test finished, Network Master A Measurement Results can be seen on Network Master B.



Network Master B Measurement Results (touch Port 1:1 in navigation area)



Network Master A Measurement Results (touch Remote 1 in navigation area)

# 7 OTN Applications

This chapter describes the graphical user interface (i.e. screens, sub-screens and major dialog boxes) related to OTN-only applications.

The following setting and applications are available:

- OTN Setup and Status
- APS
- BERT
- RTD



OTN Setup and Status may also be part of the test in following applications.

- SDH/SONET/PDH/DSn
- Ethernet
- CPRI/OBSAI
- Fibre Channel


# 7.1 OTN Setup and Status

An **OTUk** button in the navigation area of the <u>Ports Setup</u> screen gives you access to the OTN setup for the transmitter and/or receiver of the currently selected port.

OTN (Optical Transport Networking) provides support for optical networking using wavelength-division multiplexing (WDM). OTN is defined in the ITU-T Recommendation G.709 as a set of Optical Network Elements (ONE) connected by optical fiber links, able to provide functionality of transport, multiplexing, switching, management, supervision and survivability of optical channels carrying client signals.



The OTUk interface uses the optical ports.

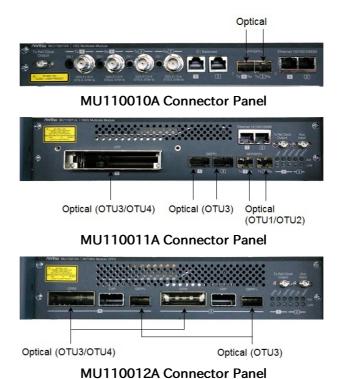

The connectors on MU110013A panel to be used are the same as those of MU110012A.

# 7.1.1 Transmitter Setup

# 7.1.1.1 Physical Setup

When the transmitter is set up with an OTUk interface, touching the Tx button in the navigation area will launch the following screen.



This screen allows you to enable the optical interface of the OTN transmitter. It can also be used to inspect the current status of the selected port by the button in Navigation area.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

#### Transmitter

- SFP/SFP+: Available bit rate is up to 2.5 Gbit/s for SFP, up to 10 Gbit/s for SFP+.
- QSFP+: Available bit rate is up to 40 Gbit/s.
- CFP: Available bit rate is up to 100 Gbit/s.
- CFP2: Available bit rate is up to 100 Gbit/s.
- QSFP28 Adapt.: Available bit rate is up to 100 Gbit/s. Attaching the J1686B CFP2 QSFP28 Adaptor or J1756A CFP2 QSFP28 Adaptor is required.

# Mode

Select the transmission mode.

- Off: OTUk frame is not transmitted.
- Normal: Transmits OTUk frames generated in the Network Master.
- Through (pass through mode):Transmits the received data.
- OH overwrite (pass through mode with Overhead overwrite): Overwrite the overhead of the received data to OH data generated in Transmit side.

#### **Clock Configuration**

Use the drop-down menu to select the clock source. This is fixed to **Received** when **Transmission** is set to **Through** or **OH overwrite**.

#### **Timing Source**

Internal: Internal clock of the module
External: The clock input to the connector

**GPS**: The clock provided from the external GPS sensor **Received**: The clock generated from the received signal

When External, GPS or Received is set, the right hand lamp indicates whether clock is detected or not.

#### Ref.Port

Switches the reference clock output on/off. If setting to **On**, the reference clock is output to "Tx Ref Output" connector on the module panel.

Tx reference clock output can be enabled only one port on the same module.

#### Rate

Switches the clock division ratio.

- 1/16: Divides the Tx Clock frequency by 16.
- 1/64: Divides the Tx Clock frequency by 64.




When the output signal is set to OTU1 and the Rate is 1/64, Tx reference clock is not output to the panel connector.

#### Sync Port

This item appears when using MU110013A and Interface Type is set to CFP2. Selects the output of Sync Clock Output connector on MU110013A panel.

- Off: does not output the clock.
- 1/8: outputs 1/8 divided clock of the data synchronized clock (approximately 3.494 GHz).
- 1/16: outputs 1/16 divided clock of the data synchronized clock (approximately 1.747 GHz).

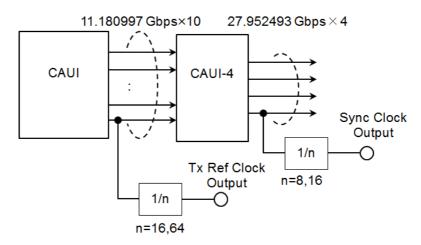

Block Diagram of MU110013A Tx Part

Transceiver


Displays the Transceiver information when Optical Transmitter is selected.

Multi lane mapping

In case of OTU3, OTU3e1, OTU3e2, or OTU4, the **Lane Mapping** button appears. Refer to <u>Multi lane mapping</u> in "Ethernet Setup and Status".

## 7.1.1.2 OTUk Frame Setup

Touching the navigation area button which represents the transmitter's OTN layer will launch the screen shown below.

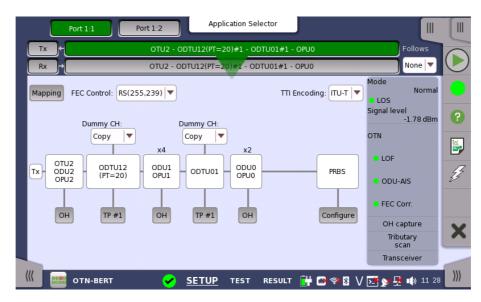

This screen allows you to configure OTUk frame of the currently selected transmitter. It can also be used to inspect the current status of the selected port in a separated screen.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

To setting up the OTU frame, touch **Mapping** button at first. Then select the relevant values for the various containers in the structure shown in the setup area, either by opening a drop-down menu or by touching a button to launch an editor dialog.

Note that the changes you make will be reflected in the text displayed in the OTUk button in the navigation area.

OTUk button in the navigation area.

To make the Port 2 transmitter follow the Port 1 transmitter (i.e. copy its settings), touch the right-most button in the navigation area and select the Tx1 in the drop-down menu. The Port 2 settings continue to follow the Port 1 transmitter change. The default setting is **None**. Note that the Port 1 transmitter cannot follow the Port 2 transmitter.

#### Mapping

Touch the **Mapping** button and use the launched dialog box to define the OTUk frame mapping. The following settings are available:

- Output Signal
- Client Signal
- Multiplexing 1
- Multiplexing 2
- Multiplexing 3

See a description of the setting options in the Mapping Dialog section below.

#### **FEC Control**

Use the drop-down menu to select whether or not to transmit FEC (Forward Error Correction) data.

- No FEC: OTUk data is transmitted without FEC encoding.
- RS(255,239): OTUk data is transmitted with FEC encoding. RS(255,239) code is

**Follows** 

Frame Setup

defined in ITU-T Rec. G.709.

#### TTI Encoding

Use the drop-down menu to select TTI encoding method.

- ITU-T: Corresponding to ITU-T Rec. G.709.
- ANSI: All TTI 64 bytes can be edited as the operator specification.

#### ОН

Touch an **OH** button to launch the corresponding **Overhead** dialog box. Depending on whether you have selected multiplexing or not in the frame mapping, there will be one or more overheads to configure.

The dialog box is described in detail in the *Overhead Dialog* section below.

#### **Dummy CH**

Only displayed when the frame mapping is set to multiplexing. Select the payload of the dummy channel from the drop-down menu.

- **Copy**: Transmit the copy of the main Tributary Port (TP) data to the dummy Tributary Port (TP).
- **Unused**: Dummy ODUj data which are generated separately from the Main ODUj data are embedded into the remained TPs.

#### TP

Only displayed when the frame mapping is set to multiplexing. Touch the **TP** button and use the launched dialog box to set the number of TP or TS. The selected TP number is showed on the button.

The dialog box is described in the *TP/TS* section.

#### GFP-F

Only displayed when the client signal is Ethernet. Touch the **GFP-F** button to launch a dialog box where you can to select parameters.

The dialog box is described in the *GFP-F* section.

## GFP-T

Only displayed when the client signal is GbE. Touch the GFP-T button to launch a dialog box where you can to select CSF Replacement.

The dialog box is described in the *GFP-T* section.

## Configure

Only displayed when the client signal is PRBS. Touch the **Configure** button to launch a dialog box where you can select pattern type.

• PRBS9 to PRBS31: Pseudo-random bit sequence. The number indicates the bit length of sequence.


For example, bit length of PRBS9 is  $2^9$ -1=511.

PRBS Pattern Inversion is enabled.

• User [32] bit, User [2048] bit: 32 bits or 2048 bits length pattern. The field which shows bit length is enabled. Touch the field to launch the dialog box to define the bit pattern. Refer to <a href="The User Pattern Editor">The User Pattern Editor</a>.

#### **7.1.1.3 Mapping**

Touching the Mapping button in the upper left-hand corner of the Ports Setup screen launches the dialog box shown below.

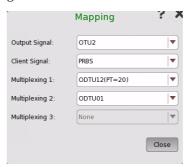

This dialog box allows you to define OTN frame mapping.

#### **Output Signal**

Defines the bit rate the output from the Tx port.

• **OTU1**: 2.666 Gbit/s • **OTU2**: 10.709 Gbit/s

• OTU2(Ext.OPU2): 10.709 Gbit/s

• OTU1e: 11.049 Gbit/s • OTU2e: 11.096 Gbit/s • OTU1f: 11.270 Gbit/s • OTU2f: 11.318 Gbit/s • **OTU3**: 43.018 Gbit/s • OTU3e1: 44.571 Gbit/s • OTU3e2: 44.583 Gbit/s • OTU4: 111.810 Gbit/s

## Client Signal

Defines the Client Signal. The available values change depending on the output signal type and the application.

For the OTN application

• PRBS: PRBS • NULL: Null

For the Ethernet +OTN application

- **GbE**: Giga bit Ethernet (1.25 Gbit/s)
- **10GbE**: 10 Giga bit Ethernet (10.3125 Gbit/s)
- 40GbE: 40 Giga bit Ethernet (41.25 Gbit/s)
- 100GbE: 100 Giga bit Ethernet (103.125 Gbit/s)
- Ethernet: Variable rate
- MPLS: MPLS header and payload without Ethernet header
- IPv4PDU: IPv4 header and payload without Ethernet header
- IPv6PDU: IPv6 header and payload without Ethernet header

Following options do not appear when selecting **Enable two ports** on Select port(s) dialog box.

Ethernet, MPLS, IPv4PDU, IPv6PDU

Following options appear when Output signal is set to OTU4 in BERT application. MPLS, IPv4PDU, IPv6PDU

For the SDH/SONET/PDn/DSn +OTN application

• STM256(Async): Synchronous Transport Module-256 (39813.12 Mbit/s)



- STM64(Async): Synchronous Transport Module-64 (9953.28 Mbit/s)
- STM64(Sync): Synchronous Transport Module-64 (9953.28 Mbit/s)
- STM16(Async): Synchronous Transport Module-16 (2488.32 Mbit/s)
- STM16(Sync): Synchronous Transport Module-16 (2488.32 Mbit/s)
- STM4: Synchronous Transport Module-4 (622.08 Mbit/s)
- STM1: Synchronous Transport Module-1 (155.52 Mbit/s)
- STS768(Async): Synchronous Transport Signal-768 (39813.12 Mbit/s)
- STS192(Async): Synchronous Transport Signal-192 (9953.28 Mbit/s)
- STS192(Sync): Synchronous Transport Signal-192 (9953.28 Mbit/s)
- STS48(Async): Synchronous Transport Signal-48 (2488.32 Mbit/s)
- STS48(Sync): Synchronous Transport Signal-48 (2488.32 Mbit/s)
- STS12: Synchronous Transport Signal-12 (622.08 Mbit/s)
- STS3: Synchronous Transport Signal-3 (155.52 Mbit/s)
- Trans.(PRBS): PRBS without SDH/SONET header (Same setting as PRBS in OTN application)
- Trans.(Null): Null without SDH/SONET header (Same setting as NULL in OTN application)

#### For the Fibre Channel +OTN application

- FC100: Fibre Channel 100 Mbyte/s (1.0625 Gbit/s)
- FC200: Fibre Channel 200 Mbyte/s (2.125 Gbit/s)
- FC400: Fibre Channel 400 Mbyte/s (4.25 Gbit/s)
- FC800: Fibre Channel 800 Mbyte/s (8.5 Gbit/s)
- FC1200: Fibre Channel 1200 Mbyte/s (10.51875 Gbit/s)

#### For the CPRI +OTN application

- **614.4 M(CPRI)**: CPRI Option 1 (614.4 Mbit/s)
- 1228.8 M(CPRI): CPRI Option 2 (1228.8 Mbit/s)
- 2457.6 M(CPRI): CPRI Option 3 (2457.6 Mbit/s)
- 3072.0 M(CPRI): CPRI Option 4 (3072.0 Mbit/s)
- **4915.2 M(CPRI)**: CPRI Option 5 (4915.2 Mbit/s)
- 6144.0 M(CPRI): CPRI Option 6 (6144.0 Mbit/s)
- 9830.4 M(CPRI): CPRI Option 7 (9830.4 Mbit/s)
- 10137.6 M(CPRI): CPRI Option 8 (10137.6 Mbit/s)

#### Multiplexing 1

Applicable when there are two or more levels of multiplexing. Defines into which higher order the second level ODU is mapped.

- None
- ODTU4.1: One 1.25G Tributary Slot (TS)
- ODTU4.2: Two 1.25G Tributary Slots (TS)
- ODTU4.8(ODU2): Eight 1.25G Tributary Slots (TS)
- ODTU4.8(Ext. OPU2): Eight 1.25G Tributary Slots (TS)
- ODTU4.8(ODU2e): Eight 1.25G Tributary Slots (TS)
- ODTU4.31: Thirty-one 1.25G Tributary Slot (TS)
- ODTU4.ts : Supports ODUflex. One to eighty TSs can be selected.
- ODTU3.1: One 1.25G Tributary Slot (TS)
- ODTU3.ts: Supports ODUflex. One to thirty two TSs can be selected.
- ODTU23 (PT=20): Supports 2.5G Tributary Slot (TS).
- ODTU23 (PT=20)(Ext. OPU2): Supports 2.5G Tributary Slot (TS).
- ODTU23 (PT=21): Supports 1.25G Tributary Slot (TS).
- ODTU23 (PT=21)(Ext. OPU2): Supports 1.25G Tributary Slot (TS).

- ODTU13 (PT=20): Supports 2.5G Tributary Slot (TS).
- ODTU13 (PT=21): Supports 1.25G Tributary Slot (TS).
- ODTU2e3e1: Supports 1.25G Tributary Slot (TS).
- ODTU3e2.8: Supports 2.5G Tributary Slot (TS).
- ODTU2.1: One 1.25G Tributary Slot (TS)
- ODU2(Ext. OPU2): One 1.25G Tributary Slot (TS)
- ODTU12 (PT=20): Supports 2.5G Tributary Slot (TS).
- ODTU12 (PT=21): Supports 1.25G Tributary Slot (TS).
- ODTU2.ts: Supports ODUflex. One to eight TSs can be selected.
- ODTU01: Supports 1.25G Tributary Slot (TS).



Following options do not appear when selecting **Enable two ports** on Select port(s) dialog box.

ODTU4.31, ODTU4.ts, ODTU3.ts

#### Multiplexing 2

Applicable when there are three levels of multiplexing. Defines into which higher order ODU is multiplexed.

- None
- ODTU2.1: One 1.25G Tributary Slot (TS) can be selected.
- ODTU12 (PT=20): Supports 2.5G Tributary Slot (TS).
- ODTU12 (PT=21): Supports 1.25G Tributary Slot (TS).
- ODTU2.ts: Supports ODUflex. One to eight TSs can be selected.
- ODTU01: Supports 1.25G Tributary Slot (TS).



ODTU2.ts option does not appear when selecting **Enable two ports** on Select port(s) dialog box.


#### Multiplexing 3

Applicable when Output signal is OTU4 or OTU3.

- None
- ODTU01: Supports 1.25G Tributary Slot (TS).

#### 7.1.1.4 Overhead

Touching an **OH** button in the setup area of the **Ports Setup** screen launches a dialog box similar to the one shown below.

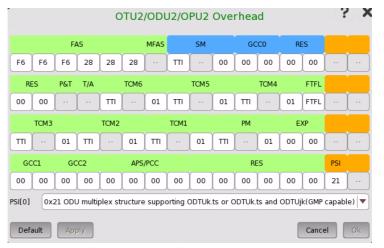



This dialog box presents detailed information about the overhead and allows you to configure it. Blue fields are OTU overhead. Green fields except FAS and MFAS are ODU overhead. Orange fields are OPU overhead.

The actual layout of the dialog box depends on which overhead you are configuring. The description below provides a general description of the OTN overhead.

The overhead consists of the following parameters:

- FAS, which is the signal for the frame alignment.
- MFAS, which is the signal for the multiframe alignment.
- SM, which shows the Signal Monitoring.
- GCC0-GCC2, which shows the General Communication Channel.
- RES, which is the reserved for future international standardization.
- TCM1-TCM6, which shows the Tandem Connection Monitoring.
- FTFL, which shows the Fault Type and Fault Location.
- PM, which shows the Path Monitoring.
- EXP, which shows the bytes for experimental use.
- <u>APS/PCC</u>, which shows the Automatic Protection Switching and Protection Communication Control channel.
- PSI, which shows the Payload Structure Identifier.

Default defined as: F6 F6 F6 28 28 28. To change a byte value, touch the relevant byte button to launch the editor dialog box.

If FAS(s) value is changed, a receiver which received the signal with changed FAS might be able not to detect the frame alignment.

This field counts the OTU frame number. The value changes from 0 through 255 cyclically.

SM consists of the following parameters:

- TTI byte (Trail Trace Identifier)
- BIP-8 byte (Bit Interleaved Parity level 8 code)
- 3rd byte:
  - Bits 1-4: BIP violations (BEI/BIAE)
  - Bit 5: Signal fail status (BDI)
  - Bit 6: Frame alignment error (IAE)
  - Bits 7-8: Reserved for future use

The TTI byte and 3rd byte can both be edited by launching the **OTUk SM-TTI** dialog box.



FAS



MFAS

SM

#### TTI

The TTI (Trail Trace Identifier) is a 64-Byte signal that occupies one byte of the frame and is aligned with the OTUk multiframe.

- SAPI (Source Access Point Identifier)
- DAPI (Destination Access Point Identifier)
- Operator (32-Byte Operator specific)

#### 3rd byte Bit 1-4: BEI/BIAE

Bits 1-4 show BIP violations BEI/BIAE (Backward Error Indication / Backward Incoming Alignment Error). Only 1011 shows BIAE=true.

Bits 1-4	BIP violations
0000	0
0001	1
0010	2
0011	3
0100	4
0101	5
0110	6
0111	7
1000	8
1001 to 1111	0

## 3rd byte Bit 5: BDI

BDI (Backward Defect Indication) is set to "1" to indicate a signal fail status, otherwise it is set to "0".

#### 3rd byte Bit 6: IAE

IAE (Incoming Alignment Error) is set to "1" to indicate a frame alignment error, otherwise it is set to "0".

# 3rd byte Bit 7,8: RES

These bits are reserved.

# GCC0-GCC2

These fields are used to carry transmission management and signaling information. These bytes can be edited in hexadecimal value.

## TCM1-TCM6

TCM1-TCM6 consists of the following parameters:

- TTI byte (Trail Trace Identifier)
- $\bullet \ \ \mathsf{BIP-8} \ \mathsf{byte} \ (\mathsf{Bit} \ \mathsf{Interleaved} \ \mathsf{Parity} \ \mathsf{level} \ \mathsf{8} \ \mathsf{code})$
- 3rd byte:
  - Bits 1-4: BIP violations (BEI/BIAE)
  - Bit 5: Signal fail status (BDI)
  - Bits 6-8: Status (STAT)

The TTI byte and 3rd byte can both be edited by launching the **OTUk TCMn-TTI** dialog box, which is similar to the dialog box used to edit SM.



#### TTI

The TTI (Trail Trace Identifier) is a 64-Byte signal that occupies one byte of the frame and is aligned with the OTUk multiframe.

- SAPI (Source Access Point Identifier)
- DAPI (Destination Access Point Identifier)
- Operator (32-Byte Operator specific)

#### 3rd byte Bit 1-4: BEI/BIAE

Bits 1-4 show BIP violations BEI/BIAE (Backward Error Indication / Backward Incoming Alignment Error). Only 1011 shows BIAE=true.

Bits 1-4	BIP violations
0000	0
0001	1
0010	2
0011	3
0100	4
0101	5
0110	6
0111	7
1000	8
1001 to 1111	0

## 3rd byte Bit 5: BDI

BDI (Backward Defect Indication) is set to "1" to indicate a signal fail status, otherwise it is set to "0".


## 3rd byte Bit 6-8: STAT

Bits 6-8 show TCM status.

Bits 6-8	TCM status
000	no source TC
001	in use without IAE
010	in use with IAE
011	Reserved
100	Reserved
101	ODUk-LCK
110	ODUk-OCI
111	ODUk-AIS

**FTFL** 

The FTFL message consists of two 128-byte fields. Launch the **ODUk FTFL** dialog box to edit the fields.

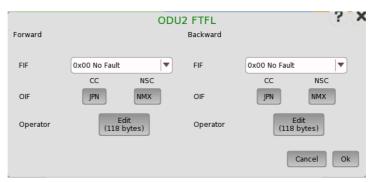

Both messages (Forward and Backward) consist of the following parameters:

#### FIF (Fault indication field)

Byte	Fault indication
0x00	No Fault
0x01	Signal Fail
0x02	Signal Degrade
0x03 to 0xFF	Reserved

## OIF (Operator identifier field)

- CC Country code is a three-character ISO 3166 geographic/political countrycode (G/PCC).
- NSC National segment code is a 1-6 character ITU carrier code (ICC).

## Operator (Operator-specific field)

This field is available for operator use. Touching the button launches the *Pattern Editor*.

M PM consists of the following parameters:

- TTI byte (Trail Trace Identifier)
- BIP-8 byte (Bit Interleaved Parity level 8 code)
- 3rd byte:
  - Bits 1-4: BIP violations (BEI)

PM

- Bit 5: Signal fail status (BDI)
- Bits 6-8: Status (STAT)

The TTI byte and 3rd byte can both be edited by launching the **ODUk PM-TTI** dialog box, which is similar to the dialog box used to edit SM.

#### TTI

The TTI (Trail Trace Identifier) is a 64-Byte signal that occupies one byte of the frame and is aligned with the OTUk multiframe.

- SAPI (Source Access Point Identifier)
- DAPI (Destination Access Point Identifier)
- Operator (32-Byte Operator specific)

## 3rd byte Bit 1-4: BEI

BEI (Backward Error Indication) shows the count of interleaved-bit blocks that have been detected in error by the corresponding ODUk path monitoring sink using the BIP-8 code.

Bits 1-4 shows BIP violations.

Bits 1-4	BIP violations
0000	0
0001	1
0010	2
0011	3
0100	4
0101	5
0110	6
0111	7
1000	8
1001 to 1111	0

## 3rd byte Bit 5: BDI

BDI (Backward Defect Indication) is set to "1" to indicate a signal fail status, otherwise it is set to "0".

## 3rd byte Bit 6-8: STAT

STAT (Path Monitoring Status) indicates the presence of a maintenance signal.

STAT	Signal type
000	Reserved
001	Normal path signal
010	Reserved
011	Reserved
100	Reserved
101	ODUk-LCK
110	ODUk-OCI
111	ODUk-AIS

# APS/PCC

APS/PCC has four bytes. Requests/Status is defined for First byte. The request or status is shown in bits 1-4.

The protection type is shown in bit 5-8.



Bits 1-4	Meaning
0000	NR (No request)
0001	DNR (Do not revert)
0010	RR (Reverse request)
0011	Reserved
0100	EXER (Exercise)
0101	Reserved
0110	WT (Wait-to-restore)
0111	Reserved
1000	MS (Manual switch)
1001	Reserved
1010	SD (Signal degrade)
1011	Reserved
1100	SF (Signal fail)
1101	Reserved
1110	FS (Forced switch)
1111	Lockout

PSI means Protocol Structure Identifier. This field shows the payload type. You can either enter a new value directly in the field or select the relevant value from the PSI[0] drop-down menu.


PSI value	Payload type
0x01	Experimental mapping
0x02	Asynchronous CBR mapping
0x03	Bit synchronous CBR mapping
0x04	ATM mapping
0x05	GFP mapping
0x06	Virtual Concatenated signal
0x07	PCS codeword transparent Ethernet mapping: 1000BASE-X into OPU0 40GBASE-R into OPU3 100GBASE-R into OPU4
0x08	FC-1200 into OPU2e mapping
0x09	GFP mapping into Extended OPU2

PSI

PSI value	Payload type
0x0A	STM-1 mapping into OPU0
0x0B	STM-4 mapping into OPU0
0x0C	FC-100 mapping into OPU0
0x0D	FC-200 mapping into OPU1
0x0E	FC-400 mapping into OPUflex
0x0F	FC-800 mapping into OPUflex
0x10	Bit stream with octet timing mapping
0x11	Bit stream without octet timing mapping
0x12	IB SDR mapping into OPUflex
0x13	IB DDR mapping into OPUflex
0x14	IB QDR mapping into OPUflex
0x15	SDI mapping into OPU0
0x16	(1.485/1.001) Gbit/s SDI mapping into OPU1
0x17	1.485 Gbit/s SDI mapping into OPU1
0x18	(2.970/1.001) Gbit/s SDI mapping into OPUflex
0x19	2.970 Gbit/s SDI mapping into OPUflex
0x1A	ESCON mapping into OPU0
0x1B	DVB_ASI mapping into OPU0
0x1C	FC-1600 mapping into OPUflex
0x20	ODU multiplex structure supporting ODTUjk only (AMP only)
0x21	ODU multiplex structure supporting ODTUk.ts or ODTUk.ts and ODTUjk (GMP capable)
0x55	Not available
0x66	Not available
0x80	Reserved code for proprietary use (non-standard payload mappings)
0xFD	NULL test signal mapping
0xFE	PRBS test signal mapping
0xFF	Not available

## 7.1.1.5 TP/TS

Touching a **TP** button on the **Ports Setup** screen launches the **TP/TS** dialog box. Note that the contents and layout of the dialog box depends on which higher order type has been selected.

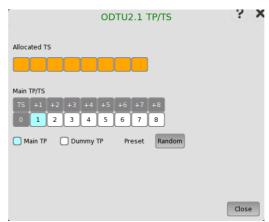


This dialog box allows you to define OTUk frame mapping.

- Main TP/TS: Tributary Port/Slot number of Measurement target for Lower order ODU frame.
- **Dummy TP**: Condition of TP/TS(s) other than Main TP/TS. Transmitted signal is selected by *Dummy CH*.
  - Copy: The same signal as Main TP/TS is transmitted.
  - **Unused**: Lower order ODU frame constructed of PRBS mapping is transmitted.

## 7.1.1.6 GFP-T

GFP-T means Transparent Generic Framing Procedure, defined by ITU-T Rec. G.7041/Y.1303. When OTN layer is added to Ethernet applications, GFP-T button appears in the setup area of the Ports Setup screen if Client Signal is selected to GbE. Touching an GFP-T button launches the below dialog box.

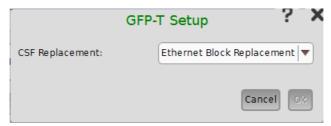


#### **CSF Replacement**

Setting behavior of GFP-T when CSF (Client Signal Fail) occurs.

- Ethernet Block Replacement :Transmits 10B data to indicate the link error.
- **GFP-T CSF Replacement**: Transmits CSF and IDLE frames CSF is transmitted with 500 ms interval.

#### 7.1.1.7 GFP-F

GFP-F means Frame-mapped Generic Framing Procedure, defined by ITU-T Rec. G.7041/Y.1303. When OTN layer is added to Ethernet applications, GFP-F button appears in the setup area of the Ports Setup screen if Client Signal is selected to Ethernet. Touching an GFP-F button launches the below dialog box.

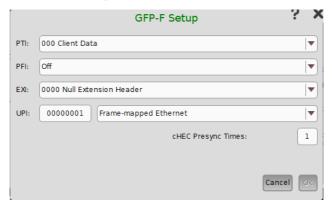

#### PTI

Set three bits of PTI (Payload Type Identifier). When setting PTI to 100-Client Management, all transmitting GFP-F frames is Client Management Frame.

#### PFI

Set a bit of PFI (Payload Frame Check Sequence Identifier). **On** presents payload FCS (Frame Check Sequence). **Off** absents payload FCS.

# EXI

Set four bits of EXI (Extension header Identifier).

#### UPI

Set eight bits of UPI (User Payload Identifier). When PTI is 000 Client Data , set the type of payload. When PTI is 100 Client Management, set the type of management signal.


#### **cHEC Presync Times**

The number of continuous receptions of normal cHEC (core Header error check) until HUNT status is transited to SYNC status

# 7.1.2 Receiver Setup

# 7.1.2.1 Physical Setup

When the receiver is set up with an OTUk interface, touching the **Rx** button in the navigation area will launch the following screen.

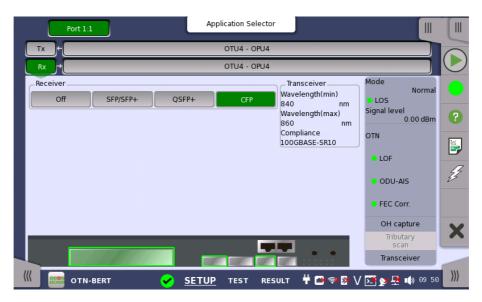

This screen allows you to make the physical setup of the receiver in OTN mode. It can also be used to inspect the current status of the selected port by the button in Navigation area.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

Receiver

Touch the button to select the interface.


- Off: No signal input interface.
- SFP/SFP+: Available bit rate is up to 2.5 Gbit/s for SFP, up to 10 Gbit/s for SFP+.
- QSFP+: Available bit rate is up to 40 Gbit/s.
- CFP: Available bit rate is up to 100 Gbit/s.
- CFP2: Available bit rate is up to 100 Gbit/s.
- QSFP28 Adapt.: Available bit rate is up to 100 Gbit/s. Attaching the J1686B CFP2 QSFP28 Adaptor or J1756A CFP2 QSFP28 Adaptor is required.

**Transceiver** 

Displays the Transceiver information.

## 7.1.2.2 OTUk Frame Setup

Touching the navigation area button which represents the receiver's OTN layer will launch the screen shown below.

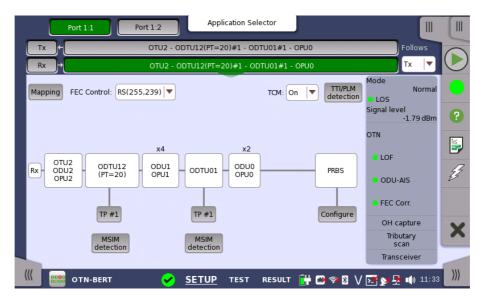

This screen allows you to configure OTUk frame of the currently selected receiver. It can also be used to inspect the current status of the selected port in a separate screen.

To setting up the OTU frame, touch **Mapping** button at first. Then select the relevant values for the various containers in the structure shown in the setup area, either by opening a drop-down menu or by touching a button to launch an editor dialog box.

Note that the changes you make will be reflected in the text displayed in the OTUk button in the navigation area.

OTUk button in the navigation area.

To make the currently selected receiver follow either the transmitter or Port 1

receiver (i.e. copy its settings), touch the right-most button in the navigation area and select the relevant value in the drop-down menu. The receiver settings continue to follow the change of either the transmitter or Port 1 receiver. The default setting is  $\mathbf{Tx}$ . Note that the Port 1 receiver cannot follow the Port 2 receiver.

## Frame Setup

## **Mapping**

Touch the **Mapping** button and use the launched Dialog box to define the OTUk frame mapping. The following settings are available:

- Input Signal
- Client Signal
- Multiplexing 1
- Multiplexing 2
- Multiplexing 3

See a description of the setting options in the *Mapping* section under setup of transmitter.

## FEC Control

Use the drop-down menu to select whether or not to transmit FEC (Forward Error Correction) data.

- No FEC: FEC Decoding (Error Correction) is set OFF.
- RS(255,239): FEC Error Correction is active based on RS(255,239) code defined in ITU-T Rec. G.709.

Follows

#### TTI/PLM detection

Launches the **TTI/PLM detection** dialog box where you can select detection method for SM, PM, and TCM1-6.

The dialog box is shown and described in the TTI/PLM detection section.

## Auto, TP

Only displayed when the frame mapping is set to multiplexing. Touch the **Auto** or **TP** # button and use the launched dialog box to set the number of TP or TS. When **Manual** or **Auto detect TS** are selected, TP number can be detect automatically, so "Auto" is shown on the button. **Auto detect TP** is selected, TP number can be set directly. So **TP** # is shown on the button.

The dialog box is described in the *TP/TS* section below.

## MSIM detection

Only displayed when the frame mapping is set to multiplexing. Touch the **MSIM detection** button and use the launched dialog box to set the detection method of MSIM.

The dialog box is shown and described in the MSIM Detection section.

## Configure

Only displayed when the client signal is PRBS. Touch the **Configure** button to launch a dialog box where you can select pattern type.

• PRBS9 to PRBS31: Pseudo-random bit sequence. The number indicates the bit length of sequence.

For example, bit length of PRBS9 is  $2^9$ -1=511.

• User [32] bit, User [2048] bit: 32 bits or 2048 bits length pattern. The field which shows bit length is enabled. Touch the field to launch the dialog box to define the bit pattern. Refer to <a href="The User Pattern Editor">The User Pattern Editor</a>.


#### **TCM**

Use the drop-down menu to select whether or not to enable measuring TCM (Tandem Connection Monitoring) alarms and errors.

- On: Enables measuring TCM alarms and errors.
- Off: Disables measuring TCM alarms and errors.

## 7.1.2.3 TP/TS


Touching a **TP** or **Auto** button on the **Ports Setup** screen launches the **TP/TS** dialog box. Note that the contents and layout of the dialog box depends on which higher order type has been selected.

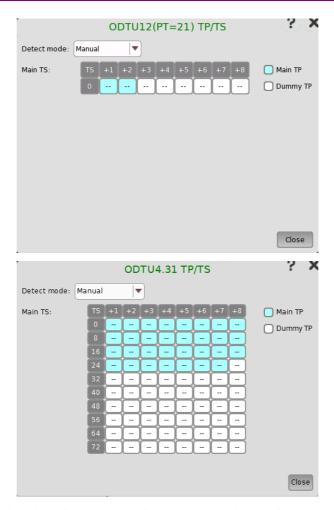

TP/TS dialog box has three screen depending on the Mode setting.

## 7.1.2.4 TTI/PLM detection

Touching the TTI/PLM detection button in the upper right-hand corner of the Ports Setup screen launches the dialog box shown below.

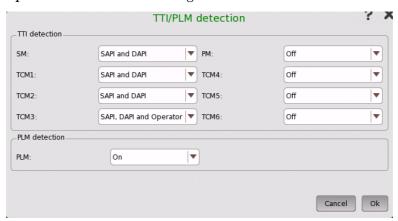

## TTI detection

TTI detection allows you to select the detection method for SM, PM, and TCM1-6

- Off Disables the TTI (Trail Trace Identifier) detection.
- SAPI (Source Access Point Identifier)
- DAPI (Destination Access Point Identifier)


- SAPI and DAPI
- SAPI, DAPI and Operator (32-Byte Operator specific)

## PLM detection

Selecting On enables the PLM (Payload Label Mismatch) detection.

## 7.1.2.5 MSIM detection

Touching an **MSIM detection** button on the **Ports Setup** screen launches the **MSIM Detection** dialog box.

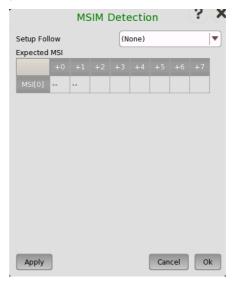

The dialog box is used to set the detection method of MSIM (Multiplex Structure Identifier Mismatch).

## Setup Follow

Select the source of the Expected MSI in the drop-down menu. The expected MSI is displayed in the dialog box.

- (None): MSIM is not detected.
- Tx Data: Expected MSI are copied from OH Preset data.
- Received Data: Expected MSI are set from received MSI data.

## 7.1.3 Status Information

This section describes the status information available for the OTN layer in the status area of the **Ports Setup** screen.

## 7.1.3.1 Status Summary

The status summary displayed for the OTN layer consists of the following information:

## **Physical Status**

The topmost part of the status area gives you access to information about the current physical status of the selected interface. A summary consisting of the most relevant status indicators is displayed constantly. By touching the summary, you can launch a display that contains the detailed status information.

#### Alarm/Error Status

The middle part of the status area gives you access to alarm and error information for the selected interface. The status is indicated by the lamp color. You can choose whether to view only the current alarm and error status, or to view all alarms and errors in the alarm trap since it was last reset.

A summary consisting of the most relevant alarm/error indications is displayed constantly. By touching the summary, you can launch a display that contains all alarms/errors.


# Capture/Monitor Status

At the bottom of the status area are below buttons that give you access to various capture/monitor information. By touching a button, you can launch the corresponding information display.

- · OH capture
- Tributary scan
- Transceiver

## 7.1.3.2 Physical Details

Touching the topmost summary box in the status area of the **Ports Setup** screen displays the status shown below.

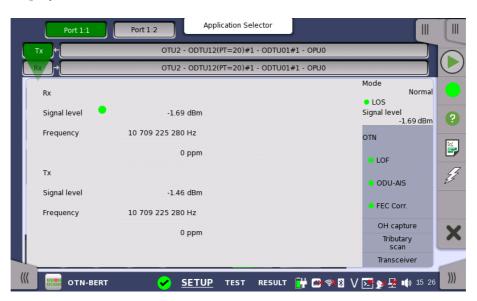

This screen presents detailed information about the current physical status of the optical signal.

## Rx Signal Level

Shows the input level of an optical signal. A lamp icon indicates the LOS state.

## Frequency

Shows the input signal frequency and the deviation of the input signal from the nominal bit rate in ppm.

## Tx Signal Level

Shows the output level of an optical signal.

## Frequency

Shows the output signal frequency and the deviation of the output signal from the nominal bit rate in ppm.

#### 7.1.3.3 Alarms and Errors

Touching the middle summary box in the status area of the **Ports Setup** screen displays the status shown below.



This screen contains detailed alarm and error information related to the OTN layer. Status is indicated by the use of <u>colored lamp icons</u>.

## Level-specific alarms

If the ODUk is multiplexed, touch the relevant OTU/ODUk level button.

The OTL button appears when OTU3 or OTU4 is selected in the mapping dialog box.

## Alarms

## OTL Alarms

LOF-OTL: Loss of Frame of Optical channel Transport Lane

OOF-OTL: Out of Frame of Optical channel Transport Lane

 $\textbf{LOR-OTL}{:}\ Loss\ of\ Recovery\ of\ Optical\ channel\ Transport\ Lane$ 

OOR-OTL: Out of Recovery of Optical channel Transport Lane

ILA/OLA: Shows the lane alignment process.

Green indicates ILA (In-Lane Alignment).

Red indicates OLA (Out-Of-Lane Alignment).

## OTU Alarms

LOS: Loss of Signal.

OTU-AIS: Optical channel Transport Unit Alarm Indication Signal.

LOF: Loss of Frame

OOF: Out of Frame

LOM: Loss of Multiframe

OOM: Out of Multiframe

SM-TIM: Section Monitoring Trail trace Indicator Mismatch

SM-BIAE: Section Monitoring Backward Incoming Alignment Error

 $\pmb{SM\text{-}BDI\text{:}} \ Section \ Monitoring \ Backward \ Defect \ Indicator$ 

SM-IAE: Section Monitoring Incoming Alignment Error

## ODU Alarms

LOFLOM: Loss of Frame and Loss of Multiframe

ODU-AIS: Optical channel Data Unit Alarm Indication Signal

ODU-LCK: Optical channel Data Unit Locked Signal

ODU-OCI: Optical channel Data Unit Open Connection Indication

**PM-TIM**: Path Monitoring Trail trace Indicator Mismatch **PM-BDI**: Path Monitoring Backward Defect Indicator

PLM: Payload Mismatch
FSF: Forward Signal Fail
FSD: Forward Signal Degrade
BSF: Backward Signal Fail
BSD: Backward Signal Degrade

MSIM: Multiple Structure Identifier Mismatch

CI-AIS: Characteristic Information Alarm Indication Signal

CSF: Client Signal Fail LSS: Link Status Signal

#### TCM Alarms

TIM: Trace Indicator Mismatch

**BIAE**: Backward Incoming Alignment Error

BDI: Backward Defect Indicator IAE: Incoming Alignment Error LTC: Loss of Tandem Connection

#### Errors

#### **OTL Errors**

FAS-OTL: Frame Alignment Signal of Optical channel Transport Lane

MFAS-OTL: Multiframe Alignment Signal of Optical channel Transport Lane

LLM-OTL: Loss of Lane Marker of Optical channel Transport Lane

## **OTU Errors**

FAS: Frame Alignment Signal

MFAS: Multiframe Alignment Signal

**SM-BIP8**: Section Monitoring Bit Interleaved Parity 8 **SM-BEI**: Section Monitoring Backward Error Indication

FEC Corr.: Forward Error Correction Corrected

FEC Uncorr.: Forward Error Correction Uncorrected

#### ODU Errors

PM-BIP8: Path Monitoring Bit Interleaved Parity 8

PM-BEI: Path Monitoring Backward Error Indicator

#### **OPU Errors**

Pattern error: Bit error detected in the payload

## TCM Errors

TCMi-BIP8: Bit Interleaved Parity 8
TCMi-BEI: Backward Error Indication

(i=1 to 6)

## **GMP Errors**

CRC8 error: CRC8 error occurred CRC5 error: CRC5 error occurred

 $\label{eq:cover:cm} \begin{tabular}{ll} \textbf{Inc over:} $C_m(t)$ value exceeds the upper limit. \\ \begin{tabular}{ll} \textbf{Dec over:} $C_m(t)$ value exceeds the lower limit. \\ \end{tabular}$ 

## **GFP Errors**

cHEC Corr.: core Header Error Check Correctable cHEC Uncorr.: core Header Error Check Uncorrectable tHEC Corr.: type Header Error Check Correctable tHEC Uncorr.: type Header Error Check Uncorrectable eHEC Corr.: extension Header Error Check Correctable

eHEC Uncorr.: extension Header Error Check Uncorrectable

Invalid GFP frame: Invalid Transport Generic Frame Procedure Frame

Superblock CRC: Superblock where CRC error occurred

CSF signal: Client Signal Fail

**CSF sync**: Client Signal Fail synchronization **FCS error**: Frame Check Sequence error detected

CMF signal: Client Management Frame

CMF sync: Client Management Frame synchronization

SSF: Server Signal Failure

**PTI Mismatch**: Payload Type Identifier Mismatch **UPI Mismatch**: User Payload Identifier Mismatch

## 7.1.3.4 OH capture

Touching the **OH capture** button in the status area of the **Ports Setup** screen displays the status shown below.



This screen shows OTU/ODU/OPU OH capture data for one frame at time. Use the **Level** drop-down menu to select which multiplexing level to display. For a description of the frame structure, see the <u>Overhead Dialog box</u> section under the ports setup of OTN.

If higher order layer is mapped, **TP/TS** button appears. Touching **TP/TS** will launch the dialog box displaying tributary ports/slots of both Tx and Rx.

# Refreshing information

## Refresh once

When touch the **Pause** button, the **Update** button appears at left side of the **Pause** one and information is not updated. Touching the **Update** button will refresh the dialog information once.

## Refresh continuously

When the dialog is open and touch the **Pause** button at refresh once mode, information is updated continuously.

# Displaying detailed information

Detailed overhead byte information can be accessed by touching the name of a specific byte. This will launch a separate dialog box containing a description of and details about the selected byte.




In the byte-specific dialog box, select the display format (ASCII or Hex) using the **Operator Specific Area** drop-down menu.

## 7.1.3.5 Tributary scan



Tributary Scan is available if the Input Signal is set to OTU1 or OTU2. OTU3 and OTU4 are not supported.

Touching the **Tributary scan** button in the status area of the **Ports Setup** screen displays the status shown below.

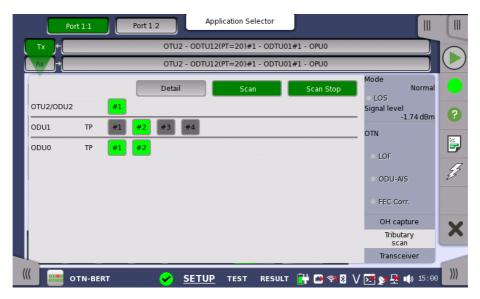

A *Tributary scan* detects errors and alarms over multiple Tributary Ports depending on the current mapping settings at the receiver port. The screen displayed by the **Tributary scan** button can be used to acquire the tributary status information.

The screen contains the following buttons: **Detail, Scan, Scan Start/Stop**. The **Scan** button is active when the screen is displayed.

## Start scanning

Touching the **Scan Start** button scans one level at a time. With the **Scan** button active (displayed in green), you can select the Tributary Port to scan by touching the number button. The buttons are shown in green or red according to the scan result. Note that only one ODUk at the first level is displayed.

#### Detail

Touching the **Detail** button enables showing details for a specific ODUk. With the **Detail** button active, you can see the detail information by touching the button in red. The **Tributary details** dialog box contains the following information:



- Path to the selected form (for example, "ODU2-ODTU12(PT=21)-ODU1 #2")
- Errors and alarms detected at the selected channel.

Touching the button in green does not launch the dialog box.

To change TP to scan, touch the **Scan** button.



Tributary Scan Results are cleared, when close the dialog box, move other status area or move other screens.

## Stop scanning

Touching the **Scan Stop** button stops the scanning session.

## 7.1.3.6 Transceiver

Touching the **Transceiver** button in the status area of the **Ports Setup** screen displays the status shown below.



This screen presents status information about the optical transceiver.

When the optical transceiver is SFP or SFP+, <u>I2C analysis</u> appears. Refer to description of <u>Transceiver</u> in Ethernet Applications.

When the optical transceiver is QSFP+ or QSFP28 Adpt., <u>I2C analysis</u> and <u>Settings</u> appear.

When the optical transceiver is CFP or CFP2, <u>MDIO analysis</u> and <u>Settings</u> appear.

## **Module Present**

Green indicates that an optical transceiver is currently mounted.

# Transceiver Information


Select the information from pull down menu. **Alarm** and **Output control** appear in case of OTU3 and OTU4.

- Alarm shows the alarm status.
- Wavelength and bit rate shows the nominal wavelength and bit rate.
- Compliance shows the available standards.
- Vendor information shows the data stored in the optical transceiver.
- Output control allows to select lanes to insert alarm/errors.

## Tune wavelength

When the optical transceiver is a tunable SFP, following items are displayed for Wavelength and bit rate.

Bit rate, Channel, Wavelength, Frequency, First frequency, Last frequency, Grid spacing

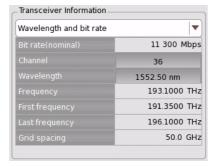


Touching **Channel** or **Wavelength** value opens the dialog box to set the wavelength.

#### Power monitor

The optical power read out from the transceiver is displayed.

The transmitting optical power or current is displayed in left column. The received optical power is displayed in right column.

In case of OTU3 and OTU4, the total optical power and the optical powers by each lane are displayed.

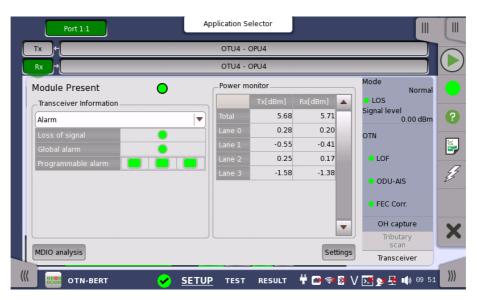

For description of **MDIO** analysis and Settings, refer to <u>Transceiver</u> in Ethernet Applications.

## 7.1.4 Error/Alarm Insertion

This section describes the errors or alarms insertion for the OTN layer on the <u>Application toolbar</u>.



Alarms/Errors/ Others

Select the port to insert errors, and the stimuli type. The settings items vary depending on the selected stimulus type.

- OTN: Inserts errors or alarms related the OTN overhead or FEC.
- OTN OTL skew: Inserts skew between specified lanes.
- OTN frequency: Adds the frequency offset to the OTU bit rate and Payload bit rate.
- OTN justification: Inserts positive or negative justification bytes of AMP

(asynchronous mapping procedure).


## 7.1.4.1 OTN

If selecting OTN, the Category drop down menu appears.

- Alarms/Errors: Inserts errors or alarms related the OTN overhead.
- GMP: Inserts errors to the general mapping procedure parameter.
- GFP: Inserts errors to the generic framing procedure parameter.
- **FEC Test**: Inserts errors to the forward error correction bytes in the OTU frame.
- OTL: Inserts errors or alarms to the specified lanes.

#### Alarms/Errors

- 1. Select **Alarm** or **Error** using **Type** drop down menu. If selecting **Off**, Errors and Alarms are not inserted.
- 2. Select the **Level**.
- 3. Select the Alarm/Error Item.
- 4. Select the Insertion Mode.
  - Single: Inserts an error or an alarm if you touch the Error Insert icon.
  - Burst: Inserts errors or alarms in counts you have specified if you touch the Error Insert icon.
  - Alternate: Repeats error/alarm insertion per specified number of frames. The Error Insert icon shows only status.
  - All: Inserts errors or alarms in all OTU frame. The Error Insert icon shows only status.
  - Rate: Inserts errors in the specified rate continuously. The Error Insert icon shows only status.
- 5. When selecting **Single** or **Burst**, touch the Error Insert icon ( ) to insert errors or alarms.

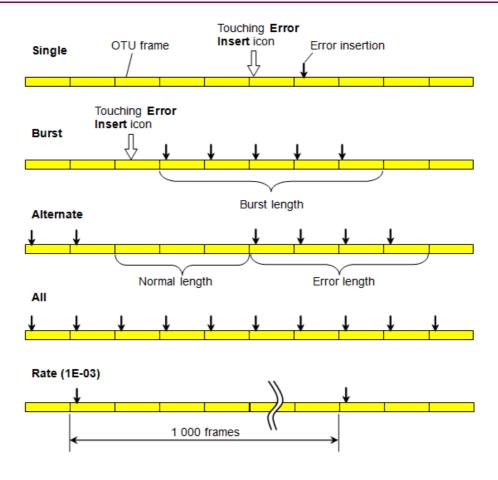

## **GMP**

- 1. Select the **Level** to insert errors.
- 2. Select the Error Item.
- 3. Touch the **Error Bits** field to edit bits.
- 4. Touch the **Error Insert** icon. The error is inserted once by touching the icon.

## **GFP**

- 1. Select the Error Item.
  - The available option depends on the Client Signal of Mapping.
- 2. Select the Insertion Mode.
- 3. Touch the **Error Bits** field to edit bits.
- 4. If Insertion Mode is set to **Single**, touch the **Error Insert** icon. The error is inserted once by touching the **Error Insert** icon.

## **FEC Test**

- 1. Select the Error Item.
  - O.182 Poisson (appears only if Client Signal is PRBS.)
  - Uncorrectable Error
  - Correctable Error
- 2. When selecting O.182 Poisson:
  - a. **Insertion Mode** is fixed to **Rate**.
    - Touch the **Rate** field to set the error insertion rate.
  - b. Select the **Exclude FAS**.
    - Selecting On inserts errors at any position excluding FAS when the rate is 2.0E-3 or larger. This settings avoids the occurrence of LOF by inserting errors into FAS.
- 3. When selecting Uncorrectable Error or Correctable Error:

- a. Touch the Sub-row field to set the sub-row.
- Insertion Mode is fixed to Single.
   Touch the Error Insert icon. The error is inserted once by touching the icon.



For O.182 Poisson, refer to the white paper on Anritsu homepage: FEC Efficiency New Test Method - Required by ITU-T New Rec. O.182 -

#### OTL

- 1. Select the **Type**.
- 2. Select the **Alarm Item** or **Error Item**.
- 3. Select the **Insertion Mode**. When setting to **Burst**, touch **Burst** field and set value. When setting to **Alternate**, touch **Error length**, **Normal length** fields and set values.
- 4. Touch the buttons of **Lane**, the dialog box will appear.
- 5. Touch the buttons to select/clear lanes. The errors will be inserted to selected (orange) lanes.

## 7.1.4.2 OTN OTL skew

- 1. Touch the field below the port selection to set the number of skew bits. The calculated skew time is shown below the field.
- 2. When the output signal is set to OTU4, select the **Lane type**.
- 3. Touch the buttons of **Insertion Lanes**, the dialog box will appear.
- 4. Touch the buttons to select/clear lanes. The skew will be inserted between selected (orange) lanes and non selected (gray) lanes.

Setting to "0" means that inserting no skew.

## 7.1.4.3 OTN frequency

Touch the field to set **Frequency Offset**. If setting a positive value, the frequency will shift higher side.

## Example:

If setting 100 ppm to the frequency offset for OTU2 output signal, the bit rate of output signal will be

 $10709225.316*(1+100*10^{-6}) = 10710296.239 \text{ (kbit/s)}.$ 

Nominal bit rates defined in ITU-T are shown below.

# OTU type OTU nominal bit rate (kbit/s) OTU1: 255/238 \* 2 488 320 = 2 666 057.143 OTU2: 255/237 \* 9 953 280 = 10 709 255.316 OTU1e: 255/238 \* 10 312 500 = 11 049 107 OTU2e: 255/237 \* 10 312 500 = 11 095 730 OTU1f: 255/238 \* 10 518 750 = 11 270 089 OTU2f: 255/237 \* 10 312 500 = 11 317 642 OTU3: 255/236 \* 39 813 120 = 43 018 413.559 OTU3e1: 255/236 \* 4 \* 10 312 500 = 44 570 974.576 OTU3e2: 243/217 \* 16 \* 2 488 320 = 44 583 356 OTU4: 255/227 \* 99 532 800 = 111 809 973.568

If low order ODU is mapped, **Payload Offset** field appears. Touch the field to set the payload offset. The calculated  $C_m$  and  $C_{nD}$  will be displayed when using GMP.

## 7.1.4.4 OTN justification

OTN justification is available when ODTUjk is selected to the  $\underline{\text{Multiplexing 1}}$  in Mapping dialog box.

- 1. Select **Level** to insert the justification.
- 2. Touch the **Burst length** field, the dialog box will appear.
- 3. Select the **Movement** of the justification.
  - Positive (+1): positive justification
  - Positive (+2): double positive justification
  - Positive (+3): triple positive justification
  - Negative (-1): negative justification
  - Negative (-2): double negative justification
- 4. Touch the **Apply Move** button to insert the justification bytes.

## 7.1.5 Restrictions for using two ports

If clearing the **Enable two ports** check box at starting the application, you cannot select Port 2. However, it allows to use the functions listed below. These functions are not available when using two ports.


- ODU3-ODUflex mapping (ODTU3.ts)
- ODU3-ODU2-ODUflex mapping (ODTU2.ts)
- ODU4-ODUflex mapping (ODTU4.ts)
- ODU4-ODU3 mapping (ODTU4.31)
- ODU4-ODU2-ODUflex mapping (ODTU2.ts)
- OTL lane number assignment
- Lane type setting of OTL skew insertion
- The following functions in case of the Ethernet Applications over OTU3/OTU4:
  - Multi-stream functions (Mon./Gen. application)
  - MPLS/MPLS-TP/PBB(MAC-in-MAC)/IP/TCP/UDP functions
  - MAC/IP/VLAN address increment/decrement/random generation at Variable function
  - Ethernet OAM
  - SyncE
  - IEEE1588v2
  - Frame Capture

## **7.2 APS**



The APS (Automatic Protection Switching) test measures the switching time in protecting the system from failure

Switching time is defined below.

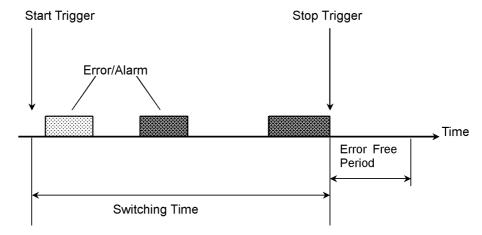

- The start and stop trigger can be selected independently.
- Trigger event can be selected from the high order OTU and ODU.
- The pass/fail thresholds for switching time can be set.
- Test results include pass/fail, switching time (minimum, maximum and average) and the measurement count of switching.

## 7.2.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.


The setup options and status information related to the OTN interface are described in the following section:

• OTN Setup and Status

## 7.2.2 Test Setup

## 7.2.2.1 Thresholds

The following screen is displayed for the **Test Setup**.

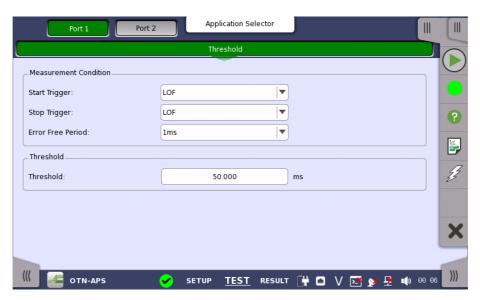

This screen contains the parameters for setting up the threshold values for errors and Pass/Fail status.

## Start Trigger, Stop Trigger

Use the drop-down menu(s) to select the appropriate trigger. Start and stop triggers include the following:

Any errors, LOF, OOF, ODU-AIS etc.

If selecting **Any errors**, all alarms and errors displayed on the list are treated as the trigger.



For example, PM-TIM and OTU-FAS are not handled as a trigger even if **Any errors** is selected.

## **Error Free Period**

Alarms or Errors set up in **Stop Trigger** are not in a measured signal within the time of this cycle, end the switching time measurement.

## **Threshold**

Allows you to specify the maximum duration of the selected trigger(s). Valid values are from 0.000 ms to 10000.000 ms.

## 7.2.3 Test Results

## 7.2.3.1 Summary

Touching the **Summary** button in the navigation area will display the screen shown below.






The following information is displayed:

- Start Trigger
- Stop Trigger
- Average switching time: Average time of switching
- Max. Time: Maximum time of switching
- Threshold: The threshold value used in the test

#### 7.2.3.2 Detailed

Touching the **Detailed** button in the navigation area will display the screen shown below.

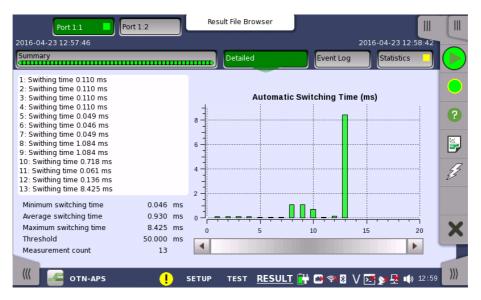

Buttons for selecting the relevant port are displayed at the top of the screen, with a color indication of the pass/fail status of the test.

This screen presents the detailed results of an OTN APS test. The results relate to a specific port and consist of the Automatic Switching times of the APS requests. The data is shown in both list-form and in a graphical presentation. This screen contains the summary field displayed below the list.

Summary field Consists of the minimum, maximum, and average automatic switching times in

milliseconds, the specified threshold value, the number of measurements.

**List-form information** Presents the automatic switching times in list-form.

Graphical presentation

The graphical presentation consists of a bar diagram of the automatic switching times. Results affected by unexpected alarms/errors are indicated.

7.2.3.3 Event Log

Touching the  $Event\ Log$  button in the navigation area displays the screen providing the event log data. Refer to  $\underline{Event\ Log}$  of SDH/SONET/PDH/DSn

BERT application.

#### 7.2.3.4 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to <u>Statistics</u> of BERT for the operation.

## **7.3 BERT**



The Bit Error Rate Test (BERT) described in this section is applicable for OTN interfaces.

## 7.3.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.


The setup options and status information related to the OTN interface are described in a separate section:

• OTN Setup and Status

## 7.3.2 Test Setup

## 7.3.2.1 Measurement Mode

Touching the **Measurement Mode** button in the navigation area displays the following screen.

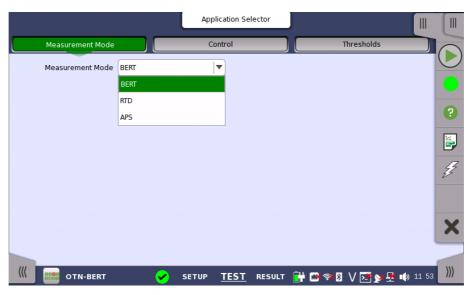

This screen allows users to switch the application.

#### Measurement Mode

Touch the field to select the application.

- BERT
- RTD
- APS



**Measurement Mode** button appears in the Navigation area only when starting the BERT by Application selector.

## 7.3.2.2 Control

Touching the **Control** button in the navigation area displays the following screen.



This screen allows you to configure the test mode and other general parameters related to the test.

## Interval length

Allows you to specify the duration of the BERT intervals. The drop-down menu contains the following values: 1 second, 2 seconds, 5 seconds, 10 seconds, 15 seconds, 30 seconds, 1 minute, 5 minutes, 10 minutes, 15 minutes, 30 minutes, 1 hour, 2 hours, 4 hours, 6 hours, 12 hours or No Intervals.

## Start action

Allows you to specify when the measurement is started.

- Immediate: Starts the measurement when you touch the Start button.
- Start at: Starts the measurement at the time specified in the Start at field on the right.

## Stop function

Allows you to specify when the measurement ends.

- Manual stop: Stops the measurement immediately when you touch the Stop button.
- **Stop at**: Stops the measurement at the time specified in the **Stop at** field on the right.
- **Duration**: Performs the measurement for the duration of time specified on the right.

## Memory allocation

Allows you to specify how the measurement will be stored in the Network Master's memory.

- Use all storage: When Network Master's memory became full of measured data, the whole measurement is stopped.
- Continuous: When Network Master's memory became full of measured data, the oldest records in that memory will be overwritten.
   When the memory became full, it is recorded in <u>Event log</u>.

The Network Master's memory size (the file size of measurement results) is 64 Mbytes per one port. The result file size is less than 64 Mbytes because it is compressed when saving to the file.

#### Estimate of test duration

Contains an estimation of the time (in days, hours, minutes and seconds) before the whole memory will be filled out by the test. During an ongoing measurement, the estimate will be recalculated periodically.

## Performance Parameters

#### OTN

Select the ITU-T Recommendation applying to the test.

- **G.8201** Error performance parameters and objectives for multi-operator international paths within the Optical Transport Network (OTN)
- M.2401 (M.2110)

**M.2401** Error performance limits and procedures for bringing-into-service and maintenance of multi-operator international paths and sections within an optical transport network


M.2110 Bringing into service international multi-operator paths, sections and transmission systems

## Time period

This parameter is displayed if OTN is set to M.2401(M.2110). 15 minutes, 1 hour, 2 hours, 24 hours, 7 days

#### Allocation

Touching the **Setup** button launches the dialog box shown below.

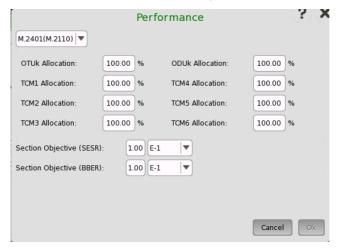

The dialog box is used to set up various performance parameters.

## Type

Select the performance type as either G.8201 or M.2401/M.2110. The contents of the dialog box depends on the selected performance type.

## Allocation

Set the Allocation ratio of OTUk, ODUk or TCMi. These parameters are displayed if Type is M.2401/M.2110.

## Section Objective (SESR)

Set the limit of SESR (Severely Errored Seconds Ratio). SES (Severely Errored Second) is a one-second period which contains 15% or more errored blocks or at least one defect.

## Section Objective (BBER)

Set the upper limit of BBER (Background Block Errors Rate). BBE (Background Block Error) is an errored block that occurred during non-SES.

The performance objectives defined in ITU Recommendation are shown in the following table.

Path type	G.8201		M.2401		
	SESR	BBER	SESR	BBER	
ODU1	0.002	4×10 <sup>-5</sup>	0.001	2×10 <sup>-5</sup>	
ODU2	0.002	10 <sup>-5</sup>	0.001	5×10 <sup>-6</sup>	
ODU3	0.002	2.5×10 <sup>-6</sup>	0.001	1.25×10 <sup>-6</sup>	

## **Performance Objectives**

## 7.3.2.3 Thresholds

Touching the **Thresholds** button in the navigation area displays the following screen.



This screen contains the parameters for setting up the various threshold values (i.e. limits) for errors and Pass/Fail status that are used during the monitoring.

## **Pattern Errors**

Allows you to enable monitoring of pattern errors (i.e. bit errors) and to set up a threshold value for the bit error ratio. Select the check box to enable the parameters.

Choose whether the threshold is specified as an absolute value or a percentage, using the **Count**, **Ratio** and **Ratio** [%] radio buttons, and then specify the value in the **Threshold** field.

## Transport

Select the check box to enable the transport-related parameters.

## Interface

Fix to **OTN**.

#### **Evaluation item**

Use the drop-down menu to select the item to evaluate. If selecting other than **Any Alarm or Error**, another menu appears.

## **Evaluation type**

Select Count or Ratio.

## Pass & fail threshold

Touch the left-hand number to set the lower limit for "Warning". Touch the right-hand number to set the lower limit for "Fail". The lower limit of "Fail" must be equal to or greater than the lower limit of "Warning" (defining a "Within limits" range in between them).

## 7.3.3 Test Results

## 7.3.3.1 Summary

Touching the **Summary** button in the navigation area will display the screen shown below.



This screen shows the summary of all error count and ratio. You can insert the pattern error in this screen.

#### **BER**

Displays the result of pattern errors and threshold.

## **Statistics Category**

The lamp icon in Status column shows the Pass or Fail results. Touching the Status column displays the statistics results.

## Transport

Displays the result of Pass & fail threshold if **Transport** check box is selecting in <u>Thresholds</u> screen.

#### **Pattern**

Select the pattern. You can edit bit pattern when the pattern is User[32] bit or User[2048] bit.

#### **Pattern Error Insertion**

Select the check box to enable the pattern error insertion.


Select Insertion Mode to **Single** or **Rate**. When **Single** is selecting, touch **Error Insert** icon in the Application Toolbar.

## 7.3.3.2 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

#### 7.3.3.3 Statistics

Touching the **Statistics** button in the navigation area displays the screen shown below.

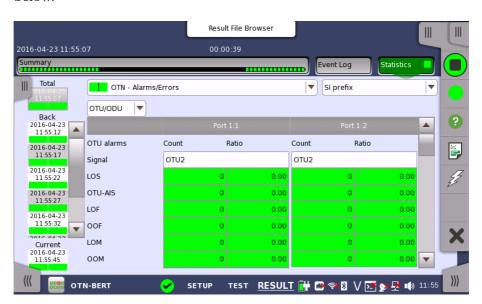

This screen presents a detailed analysis of the test results. You can choose to view either the current results (i.e. results measured during one second) or the total results from measurement start. You can also zoom in on a specific result item. The results can be displayed either in table (list) form or as a graph.

## Selecting which results to view

## Selecting the interval time

Touch the **Total** button to switch the total values measured in all interval times. The start time of measurement is displayed on the button.

Touching the button in left side **Back** field shows the measured values in the interval time. The end time of the interval is displayed on the button.

**Current** button is displayed at left bottom when the measurement is running. Touching the **Current** button shows the measured values in the current interval time. The start time of the current interval is displayed on the button.

The slide-out panel on the left-hand side of the screen contains the following functions:

- Only show intervals that contains errors
- Time format





If you have stopped measurement during the interval time, the measurement results of the current interval are discarded. The log of the current interval is not displayed in **Back** field.

In this case, result data are re-calculated excluding the data of the current interval when the measurement is stopped. This causes that "Count" and "Ratio" displayed after the measurement will be different from that of during measurement. The sum of interval time (multiplied interval time by the number of back logs) may not match the differential time between displayed time at left top and right top after the measurement.

# Selecting type of results

Open the drop-down menu in the top row plus the drop-down menu below it to select which results you want to display on the screen.

- OTN Alarms/Errors
- OTN Performance

## Selecting how results are displayed

## Selecting notation

Select the required notation for the results from the notation drop-down menu.

- Unformatted e.g. 71892
- SI prefix e.g. 71.892 k (k means "kilo")
- Engineering e.g. 71.892E3
- Scientific e.g. 7.1892E4

## Results

OTN - Alarms/Errors	OTU/ODU	OTU alarms OTU errors ODU alarms ODU errors
	Stage1 ODU	ODU alarms ODU errors
	Stage2 ODU	ODU alarms ODU errors
	Stage3 ODU	ODU alarms ODU errors
	Client	Client alarms Client errors
	ODU TCM	ODU TCMi alarms ODU TCMi errors
	Justification GFP	

	OTL	OTL Alarms/Errors Alignment marker Lane skew
OTN - Performance	OTU/ODU	OTU ODU
	Stage1 ODU	ODU
	Stage2 ODU	ODU
	Stage3 ODU	ODU
	ODU TCM	TCMi

## **OTN Performance Measurement Items**

This paragraph describes the performance result items.

EB (Errored Block) is defined as:

A block in which one or more bits are in error

## **OTN Performance Parameters**

Items	Defir	ition			
icomo	Severely Errored Second				
	Count: The number of seconds during which 15% or more EBs occurred or one or more alarms were detected.				
	Ratio: Ratio of SES to total seconds in availability time (SESR: Severely Errored Second Ratio)				
~~~	OTU/ODU, Stage n ODU	ODU/TCM			
SES	• OCI	• OCI • AIS			
	• AIS • LCK	• IAE			
	• PLM	• LCK			
	• TIM	• LTC			
	• BDI	• TIM			
		• BDI			
	Background Block Error Count: EBs that excludes blocks which are determined as SES.				
BBE	Ratio: Ratio of BBE to all blocks excluding blocks in SES (BBER: Background Block Error Ratio)				
UAS	Unavailable Time When SES continues for ten seconds, UAS starts from the beginning of the time. When items other than SES continues for ten seconds, UAS ends at one second before the time. Refer to the figure of <a href="Example of Unavailable Time Detection">Example of Unavailable Time Detection</a> .  First, the time (when determining the start of UAS) is not counted as UAS, and then if determined, the UAS is recounted.  First, the time (when determining the end of UAS) is counted as UAS, and then if determined, the UAS is recounted. In a word, the values of UAS may be reduced later. The same is applied to other items.  A bidirectional UAS is counted if forward, backward, or both directions are in the unavailable state.  Forward direction  Backward direction  Unavailable state				
		Time			
•	10 s	10 s			
		<u> </u>			
	Unavailability detected Unavailable Period	Availability detected Available Period			
←	Severely Errored Se	econd			
Errored Second (non-SES)					
	Error-free Second				

Example of Unavailable Time Detection

Pass/Fail is judged after the Time period set at  $\underline{\text{Performance Test Parameters}}$  on the Control screen has elapsed.

## **7.4 RTD**



The Round-Trip Delay (RTD) time is the duration time of the network and the network equipments.

Network Master measures RTD using a trigger injected in ODU frame. At first, Network Master transmits the trigger signal. Network Master measures the RTD by receiving the trigger signal returned from the network to be measured or the network equipment.

## 7.4.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.


The setup options and status information related to the OTN interface are described in a separate section:

• OTN Setup and Status

## 7.4.2 Test Setup

## 7.4.2.1 Control

When you go to the test setup of the RTD application, the following screen is displayed.

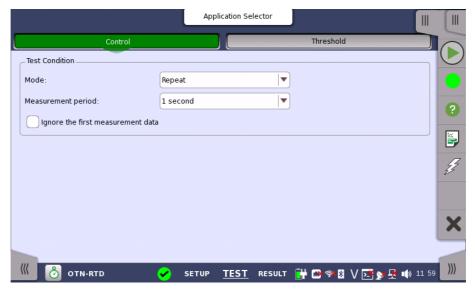

This screen allows you to configure the *RTD test* conditions for the currently selected port(s).

## **Test Condition**

## Mode

Allows you to define the test duration in one of two ways:

- Single Used to perform RTD test once.
- Repeat Used when a *persistent RTD test* is needed.

## Measurement period

Measurement period can be set the maximum RTD per one Test.

## 7.4.2.2 Threshold

Touching the **Thresholds** button in the navigation area displays the following screen.



This screen allows you to configure the RTD test conditions for the currently selected port(s).

## Threshold

## Maximum limit

Allows you to specify a threshold value in micro seconds (  $\mu$  s) deciding PASS/FAIL of RTD.

## 7.4.3 Test Results

## 7.4.3.1 Summary

Touching the **Summary** button in the navigation area will display the screen shown below.



This screen presents a summary of the RTD test results, for all of the ports included in the test. For each port, the information consists of:

- The total number of measurements
- Minimum, Average and Maximum RTD in micro seconds
- Threshold value

## 7.4.3.2 Detailed

Touching the **Detailed** button in the navigation area will display the screen shown below.



Buttons for selecting the relevant port are displayed at the top of the screen, with a color indication of the pass/fail status of the test.

This screen presents the detailed results of an RTD test. The result is shown in both list-form and in a graphical presentation. This screen contains the summary field displayed below the list.

## Summary field

Consists of the minimum, maximum, and average round-trip delay times in micro seconds, the number of measurements, the specified threshold value and measurement period.

## **List-form information**

Presents the results of an RTD test in list-form.

# Graphical presentation

The graphical presentation consists of a bar diagram of the round-trip delay times.

## 7.4.3.3 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

## 7.4.3.4 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to <u>Statistics</u> of BERT for the operation.

# 8 Mobile xHaul Applications


This chapter describes the graphical user interface (i.e. screens, sub-screens and major dialogs) related to applications used for Mobile communication interface.

The following applications are available:


- CPRI/OBSAI BERT
- CPRI P. Through
- eCPRI/RoE BERT

## 8.1 CPRI/OBSAI Setup and Status

CPRI (Common Public Radio Interface) is an interface designed for the communication inside the base station used for the mobile radio communications.

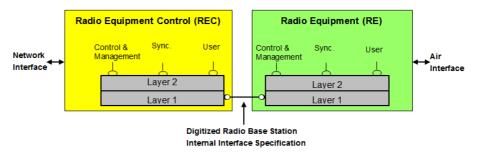

OBSAI (Open Base Station Architecture Initiative) defines the architecture of the cellular base station, including the interface between base band block and RF block. In the OBSAI specifications, this interface is defined as **RP3** (Reference Point 3).

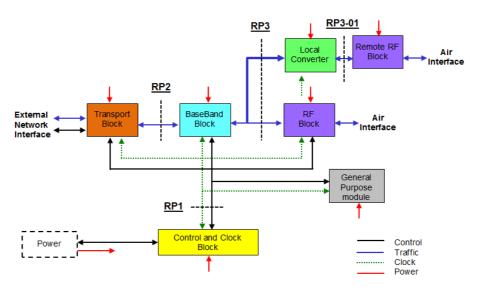

The nominal bit rates of CPRI and OBSAI are shown in the following table.

## **CPRI** Line bit rates

Option	Bit Rate (Mbit/s)	Multiplier × Reference bit rate × Coding (Mbit/s)
1	614.4	$1 \times 491.52 \times 10/8$
2	1228.8	$2 \times 491.52 \times 10/8$
3	2457.6	$4 \times 491.52 \times 10/8$
4	3072.0	$5 \times 491.52 \times 10/8$
5	4915.2	$8 \times 491.52 \times 10/8$
6	6144.0	$10 \times 491.52 \times 10/8$
7	9830.4	$16 \times 491.52 \times 10/8$
8	10137.6	20 × 491.52 × 66/64

#### **OBSAI** Line bit rates

Bit Rate (Mbit/s)	Multiplexer X Base bit rate (Mbit/s)
768	$1 \times 768$
1536	$2 \times 768$
3072	$4 \times 768$
6144	8 × 768



The CPRI/OBSAI uses the SFP/SFP+ ports.



MU110010A Connector Panel



MU110011A Connector Panel

For MU110012A and MU110013A, only the CPRI applications over OTN are available. For connectors using, refer to  $\underline{\text{OTN Setup and Status}}$  in "OTN Application".

# 8.1.1 Physical Port Setup

When the port is set up with a CPRI/OBSAI interface, touching the **Port** button in the navigation area will display the following screen.



This screen allows you to specify the physical port configuration of the currently selected CPRI/OBSAI port. It can also be used to inspect the current status of the selected port.

Port mode

Select the port mode from the drop-down menu. The possible values are:

- Off: The transmission will be disabled.
- Normal: The Network Master generates and transmits the signals.
- Through: This option is available when Contents in the CPRI/OBSAI frame setting is set to CPRI link. If Through is selected when Contents is set to Unframed or OBSAI link, Contents is forced to set to CPRI link.

Line rate

Left-side button: Opens the Line Rate Setup dialog box.



Touch **CPRI** or **OBSAI** and select a line rate. Select the bit rate of the line from the drop-down menu.

Right-side button ( ): Displays the *quick setup menu*.

# **Clock Configuration**

Use the drop-down menu to select the clock source. This is fixed to **Received** when the Port mode is set to **Through**.

Timing Source

Internal: Internal clock of the module
External: The clock input to the connector

**GPS**: The clock provided from the external GPS sensor **Received**: The clock generated from the received signal


When External, GPS or Received is set, the indicator on the right is on if the clock is detected.

Transceiver

Displays the Transceiver information.

# 8.1.2 CPRI/OBSAI Frame Setup

The **Unframed**, **CPRI Link** or **OBSAI Link** button appears in the navigation area. Touching the button will display the screen to set frame contents.

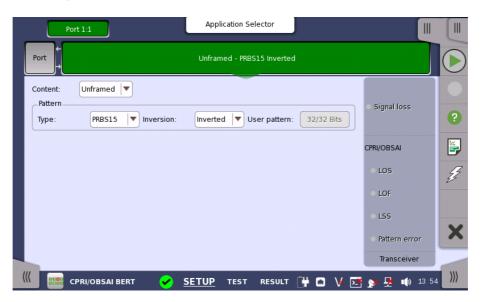

This screen allows you to specify the frame structure of the currently selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

# Content

Select the frame type. Available options depend on the Line rate setting.

- Unframed: Pattern data without frame.
- CPRI Link: CPRI frame structure
- OBSAI Link: OBSAI frame structure

# Pattern

Select a predefined pattern or define a user pattern.

# Type

• PRBS15 to PRBS31: Pseudo-random bit sequence. The number indicates the bit length of sequence.

For example, bit length of PRBS15 is  $2^{15}$ -1=32767.

- User [32] bit: Pattern of 32-bit length.
  You can edit the pattern by touching the User pattern field.
  - This option is not available when Content is set to **Unframed**.
- Off: No patterns are transmitted.

  This option is not available when Content is set to Unframed.

#### Inversion

Select whether or not to invert the bit pattern when Type is set to PRBS15 to PRBS31.

# User pattern

This is enabled when Type is set to User [32] bit.

Touch the field to open the dialog box where you can define the bit pattern. Refer to <u>The User Pattern Editor</u>.

#### **CPRI Link**

Set the CPRI Link conditions, if **Content** is set to "CPRI Link" and **Port mode** is set to "Normal".



# Start up

- **Enabled**: The line rate, protocol version, and C&M Channel will be decided by auto-negotiation. You can confirm the negotiated settings in Link of the status information.
- **Disabled**: The specified line rate, protocol version, and C&M Channel are applied.

# Role

Select the port role from Master or Slave.

Timing setting will be changed to "Received" if setting to Slave.

# **Protocol**

If Start up in CPRI Link is set to **Disabled**, select the CPRI Protocol version from 1 or 2.

Protocol version 2 appears if the line rate is set to 4915.2 Mbps or more.

# **HDLC**

Touch the drop-down menu to specify the **Rate** of slow C&M Channel. Options depend on the line rate.


#### **Ethernet**

Select the check box if setting fast C&M Channel.

Touch the field to specify the **Pointer**. To set maximum Ethernet bit rate, set "20" to the pointer. Actual Ethernet bit rate is proportional to the line rate excluding 10137.6 Mbps.

#### **OBSAI Link**

Set the OBSAI Link conditions, if **Content** is set to "OBSAI Link" and **Port mode** is set to "Normal".

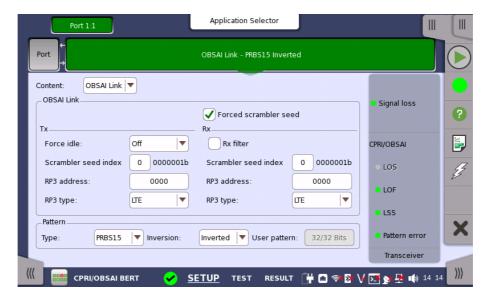

#### Forced scrambler seed

This check box is displayed when Line Rate is set to 6144.0 Mbps.

When not selected: The seed value is displayed in **Scrambler seed index** of Rx upon completion of exchange of scrambler seeds. Until the scrambler seeds are exchanged, the most recently used seed value is used.

When selected: Scrambling and de-scrambling are processed by using the scrambler seed values set by the user for Rx and Tx, without exchanging the scrambler seeds.

# Force idle

When Line Rate is set to other than **6144.0 Mbps**, idle patterns are sent if selecting **On**.

When Line Rate is set to 6144.0 Mbps and the Forced scrambler seed check box is selected, you can select IDLE\_REQ and IDLE\_ACK.

# Scrambler seed index

These items appear when Line Rate is set to 6144.0 Mbps.

Tx: Outgoing messages are scrambled based on this value.

Rx: Incoming messages are descrambled based on this value.

# RP3 address

Tx: Specify the address of outgoing messages.

Rx: Specify the address of incoming messages.

#### RP3 type

Tx: Specify the data type of outgoing messages.

Rx: Specify the data type of incoming messages.

#### Rx filter

Select the check box to measure only messages whose Rx PR3 address and RP3 type match the filter settings. A No message alarm is detected when there are no matched messages during a measuring period.

# 8.1.3 Status Information

This section describes the status information available in the status area of the CPRI/OBSAI ports setup screen.

# 8.1.3.1 Status Summary

The status summary displayed for the CPRI/OBSAI interface consists of the following information:

#### **Physical Status**

The topmost part of the status area gives you access to information about the current physical status of the selected interface. A summary consisting of the most relevant status indicators is displayed constantly. By touching the summary, you can open the dialog box where you can view the detailed status information.

#### Alarm/Error Status

The middle part of the status area gives you access to alarm and error information for the selected interface. The current status is indicated by the lamp color.

A summary consisting of the most relevant alarm/error indications is displayed constantly. By touching the summary, you can open the dialog box where you can view all alarms/errors.

#### **Monitor Status**

At the bottom of the status area, a button that gives you access to the monitor information By touching the button, you can launch the Transceiver information display.

# 8.1.3.2 Physical Details

Touching the topmost summary box in the status area of the **Ports Setup** screen launches the dialog shown below.



This screen presents information about the current state of the link.

#### Rx

• Signal level: shows the optical signal level in dBm. If the optical signal detection failed, a red indicator appears on the right.


- Bit rate: shows the actual bit rate of the receiver (in bps).
- **Deviation**: shows the deviation from the relevant nominal bit rate.
- Pattern bit rate: shows the bit rate of the pattern in received frames (in bps).

Tx


- Signal level: shows the output power of the optical transmitter.
- Bit rate: shows the actual bit rate of the transmitter (in bps)
- Deviation: shows the deviation from the relevant nominal bit rate.
- Pattern bit rate: shows bit rate of the pattern in transmitted frames (in bps).

#### 8.1.3.3 Alarms and Errors

Touching the middle summary box in the status area of the **Ports Setup** screen displays the status shown below.

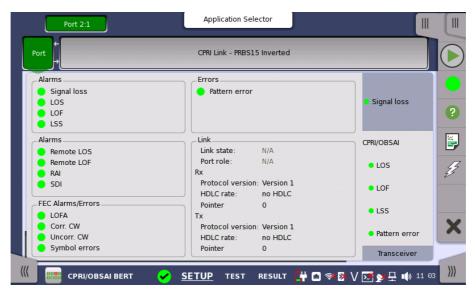

For CPRI Link

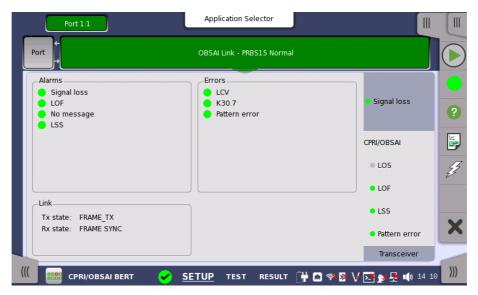

For OBSAI Link

This screen contains detailed alarm and error information related to the CPRI/OBSAI interface. Status is indicated by the use of <u>colored Lamp icons</u>. **Remote** is displayed only when the content is set to CPRI Link. **Link** is displayed only when the content is set to CPRI Link or OBSAI Link.

#### **Alarms**

- Signal loss: This indicator turns red when the optical signal is not detected.
- LOS: Loss of Signal.

For 614.4 to 9830.4 Mbps, this indicator turns red when at least sixteen 8B/10B violations occur among a whole hyperframe.

For 10137.6 Mbps, this indicator turns red when at least four 64B/66B sync header code violations occur among a whole hyperframe.

• LOF: Loss of Frame.

CPRI Link

This indicator turns red when the hyperframe alignment cannot be achieved or is lost.

**OBSAI** Link

This indicator turns red when the master frame alignment cannot be achieved or is lost.

# No message:

This indicator turns red when no OBSAI messages are detected for one second.

• LSS: Loss of Signal Synchronization.

This indicator turns red when  $10\,\%$  or larger bits in the test pattern have occurred errors.

# **Errors**

- LCV: Line Code Violations (8B/10B decoding)
  This indicator turns yellow when 10 bit sequence which is not defined in 8B/10B conversion table have been received.
- SHV: This indicator turns yellow when Invalid sync header (Sync bit is 00B or 11B) have been detected.
- K30.7: Invalid 10B code (8B/10B decoding)

  This indicator turns yellow when 10 bit sequence which is defined as '10B error code' in 8B/10B conversion table have been received.
- Pattern error : Bit error of the pattern

# Remote

Lights in red when the receiving bit in L1 Inband Protocol is "1". These bits are located in Z.130.0 in the hyperframe.

- Remote LOS: Loss of Signal detection
- Remote LOF: Loss of Frame detection
- RAI: Remote Alarm Indication
- SDI: SAP (Service access point) Defect Indication
- Reset: Master Reset acknowledge, Slave Reset request

#### Link


isplays status defined by OBSAI RP3.
<ul> <li>Tx State         TX_OFF         IDLe*1         IDLE_REQ*2         IDLE_ACK*2         FRAME_TX</li> <li>Rx State         UNSYNC</li> </ul>
WAIT_FOR_SEED*2  WAIT_FOR_ACK*2  WAIT_FOR_K28.7_IDLES  WAIT_FOR_FRAME_SYNC  FRAME_SYNC  : When Line Rate is set to other than  144.0 Mbps  : When Line Rate is set to 6144.0 Mbps
l

#### 8.1.3.4 Transceiver

Refer to Transceiver in "Ethernet Setup and Status".

# 8.1.4 Error/Alarm Insertion

This section describes how to configure settings for inserting errors or alarms by using the <u>Application toolbar</u> of CPRI/OBSAI.

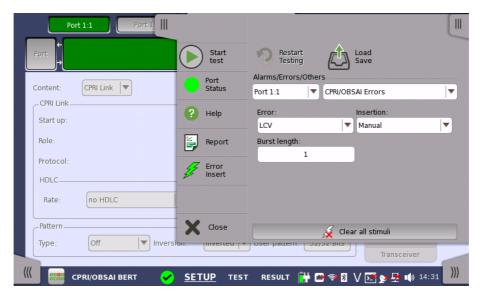

Alarms/Errors/ Others

Select the port to insert errors, and the stimuli type. The settings items vary depending on the selected stimulus type.

# 8.1.4.1 CPRI/OBSAI Alarms

1. Select the CPRI/OBSAI Alarms.

- 2. Select the **Alarm** item.
- 3. Select the **Insertion**.
  - Off: Does not insert alarms.
  - Permanently: Inserts alarms permanently.

# 8.1.4.2 CPRI/OBSAI Errors

- 1. Select the CPRI/OBSAI Errors.
- 2. Select the **Error** item.
- 3. Select the **Insertion**.
  - Off: Turns off inserting errors.
  - Manual: Inserts the specified number of errors if you touch the Error Insert icon
    - Touch the **Burst length** field to set the number of errors to insert.
  - 1E-04 to 1E-10: Inserts errors at the specified rate continuously.
- 4. When selecting **Manual**, touch the Error Insert icon ( $\mathcal{J}$ ) to insert an error.

# 8.1.4.3 CPRI/OBSAI Frequency

- 1. Select the CPRI/OBSAI Frequencies.
- 2. Touch the **Frequency Offset** field to set an offset in ppm. If setting a positive value, the frequency will shift higher side.

# 8.2 CPRI/OBSAI BERT



This section describes the Bit Error Rate Test (BERT) that is applicable to CPRI/OBSAI interfaces.

For CPRI/OBSAI BERT of OTN interface, refer to BERT in "OTN Application".

# 8.2.1 Ports Setup and Status

After the application is launched, first configure the port interface in the **Ports Setup** screen where you can view port status information.

The setup options and status information related to the CPRI/OBSAI interfaces are described in a separate section:

• CPRI/OBSAI Setup and Status

For applications including an OTN interface, you can find a description of the setup options and status information for OTN in a separate section:

• OTN Setup and Status

Refer to the sections relevant to your current port setup requirements.

# 8.2.2 Test Setup

#### 8.2.2.1 Control

When you proceed to the test setup of the CPRI/OBSAI BERT application, the following screen is displayed.



This screen contains the parameters that are generally required for BERT test.

# Interval length

Allows you to specify the duration of the BERT intervals. The drop-down menu contains the following values: 1, 2, 5, 10, 15, 30 seconds, 1, 5, 10, 15, 30 min., 1, 2, 4, 6, 12 hours or No Intervals.

#### Start action

Allows you to specify when the measurement is started.

- Immediate: Starts the measurement when you touch the **Start** button.
- **Start at**: Starts the measurement at the time specified in the **Start at** field on the right.

#### Stop function

Allows you to specify when the measurement ends.

- Manual stop: Stops the measurement immediately when you touch the Stop button.
- **Stop at**: Stops the measurement at the time specified in the **Stop at** field on the right.
- **Duration**: Performs the measurement for the duration of time specified on the right.

# Memory allocation

Allows you to specify how the measurement will be stored in the Network Master's memory.

- Use all storage: When Network Master's memory became full of measured data, the whole measurement is stopped.
- Continuous: When Network Master's memory became full of measured data, the oldest records in that memory will be overwritten.

  When the memory became full, it is recorded in Event log.

The Network Master's memory size (the file size of measurement results) is 64 Mbytes per one port. The result file size is less than 64 Mbytes because it is compressed when saving to the file.

#### Estimate of test duration

Contains an estimation of the time (in days, hours, minutes and seconds) before the whole memory will be filled out by the test. During an ongoing measurement, the estimate will be recalculated periodically.

# Performance Parameters

These items appear if OTN Tx and OTN Rx are selected on Setup screen.

#### OTN

G.8201, M.2401 (M.2110)

#### Time period

15 minutes, 1 hour, 2 hours, 24 hours, 7 days

#### **Allocation**

Touching the **Setup** button launches the dialog box. Refer to <u>Performance Parameters</u> in "OTN Application" .

# 8.2.2.1 Delay

Touching the **Delay** button in the navigation area displays the screen to set threshold value.

# Delay

Select the check box to enable the judgement using the threshold value.



If selecting check box, Port setup is changed as following:

Content: CPRI Link or OBSAI Link

Error insertion item: LCV


The check box will be cleared if Content has changed to other options.

#### Threshold


Allows you to specify a threshold value of Round Trip Delay in micro seconds ( $\mu$ s).

# 8.2.2.2 APS

Touching the **APS** button in the navigation area displays the screen to setup the APS test.

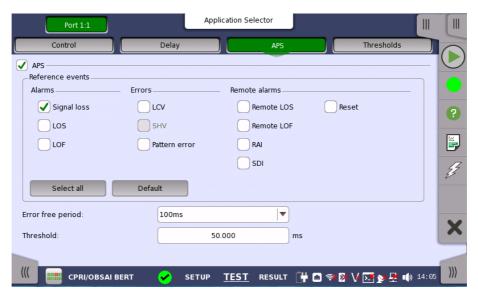

For CPRI Link

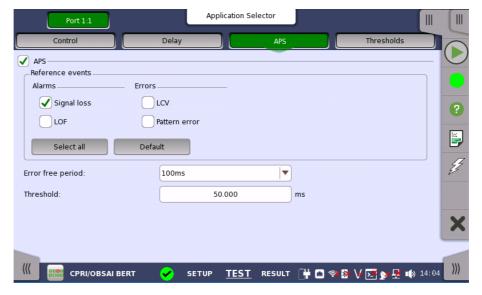

For OBSAI Link

APS

Select the check box for executing APS test during BER measurement.

# Reference events

Select the check box of **Alarms**, **Errors** or **Remote alarms** for setting to reference event.

# Error free period

If a reference event is not generated within the time of this cycle, end the switching time measurement.

#### Threshold

Allows you to specify a Pass/ Fail threshold value of switching time in milliseconds.

#### 8.2.2.3 Thresholds

Touching the **Thresholds** button in the navigation area displays the following screen.




For details on settings, refer to  $\underline{\text{Thresholds}}$  in BERT section of "SDH/SONET/PDH/DSn Applications".

# 8.2.3 Test Results

# 8.2.3.1 Summary

When you go to the test results of the CPRI/OBSAI BERT application, the following screen is displayed.

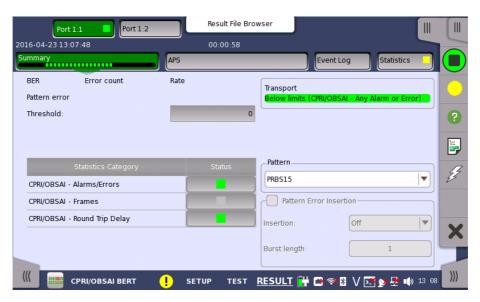

This screen contains a summary of CPRI/OBSAI BERT results.

**Statistics Category** 

The lamp icon in Status column shows the Pass or Fail results for each category. Touching the Status column displays the statistics results.

**Transport** 

Displays the results of Transport test. This result appears if **Transport** check box is selected in the Test Setup screen.

Pattern

Select the pattern.

**Pattern Error Insertion** 

This provides the Error insertion same as *Stimuli setup options* in <u>Application Toolbar</u>.

#### Insertion

Select the timing of the error insertion from the drop-down menu.

- Off: Stops the error insertion.
- Manual
- 1E-04 to 1E-10

# **Burst length**

If 'Insertion' is set to **Manual**, touch the button and set the burst length to insert.

# 8.2.3.2 APS

If APS is selected on the Test screen, **APS** button appears in Navigation area. Touching the **APS** button will display the screen shown below.



This screen shows the duration of all reference events, both in a list and in a graphic representation. This screen contains the summary field displayed below the list.

#### Summary field

Consists of the minimum, maximum, and average automatic switching times in milliseconds, the specified Max. reference duration value, the number of measurements.

# **List-form information**

Presents the automatic switching times in list-form.

# Graphical presentation

The graphical presentation consists of a bar diagram of the automatic switching times. Results may be affected by unexpected alarms/errors.

# 8.2.3.3 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

#### 8.2.3.4 Statistics

Touching the **Statistics** button in the navigation area displays the screen shown below.



This screen presents a detailed analysis of the test results. You can choose to view either the results of a specific time interval or the total results from measurement start. The results can be displayed either in table (list) form or as graphs. You can also zoom in on a specific result item and display either a zoom or a histogram.

# Selecting which results to view

# Selecting the interval time

Touch the **Total** button to switch the total values measured in all interval times. The start time of measurement is displayed on the button.

Touching the button in left side **Back** field shows the measured values in the interval time. The end time of the interval is displayed on the button.

**Current** button is displayed at left bottom when the measurement is running. Touching the **Current** button shows the measured values in the current interval time. The start time of the current interval is displayed on the button.

The slide-out panel on the left-hand side of the screen contains the following functions:

- Only show intervals that contains errors
- Time format





If you have stopped measurement during the interval time, the measurement results of the current interval are discarded. The log of the current interval is not displayed in **Back** field.

In this case, result data are re-calculated excluding the data of the current interval when the measurement is stopped. This causes that "Count" and "Ratio" displayed after the measurement will be different from that of during measurement. The sum of interval time (multiplied interval time by the number of back logs) may not match the differential time between displayed time at left top and right top after the measurement.

# Selecting type of results

Open the left drop-down menu in the top row of buttons to select which results you want to display on the screen.

- OTN Alarms/Errors
- OTN Performance
- CPRI/OBSAI Alarms/Errors
- CPRI/OBSAI Frame
- Delay Round Trip Time

OTN options appear if the CPRI/OBSAI signal is carried by OTN.

Round Trip Time appears if **Delay** check box is selected on Delay screen in Test Setup of BERT application.

# Studying a specific result

Touch a specific cell in a result table to zoom in on the corresponding result item. The **Count** and **Ratio** fields are displayed on a **Zoom** tab. A **Time vs. Statistics** tab is also available. Use the **Back** button or touch the zoom filed to return to the statistics screen.



# Selecting notation

Select the required notation for the results from the notation drop-down menu.

- **Unformatted** e.g. 71892
- SI prefix e.g. 71.891 k (k means "kilo")
- Engineering e.g. 71.892E3
- Scientific e.g. 7.1892E4

# Results

Results are displayed according to your choice.

OTN Alarms/Errors

Refer to **Results** in "OTN Application"

OTN Performance Refer to Results in "OTN Application"

Errors

CPRI/OBSAI - Frame Results Frame count

(On **Rx code words** and **Tx code words**, the following results are displayed depending

on Line rate setup.

CPRI option 1 to 7: number of 10b codes CPRI option 8 to 10: number of 66b

blocks)


CPRI/OBSAI - Round Trip Delay Results Delay

Measurement count

# 8.3 CPRI P. Through



*CPRI P. Through* enables non-intrusive in-service monitoring. All traffic received on a port is forwarded on the other port and vice versa. Traffic between the two network DUT elements is monitored as illustrated below.

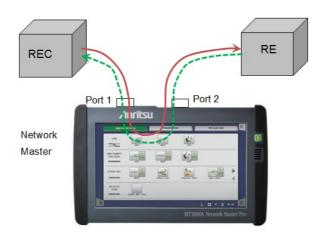

# 8.3.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the CPRI interface are described in a separate section:

• CPRI/OBSAI Setup and Status

# 8.3.2 Test Setup

# 8.3.2.1 Control

Refer to "Control" in the BERT section.


# 8.3.2.1 Thresholds

Refer to Thresholds of BERT section in "CPRI/OBSAI Applications".

# 8.3.3 Test Results

# 8.3.3.1 Summary

When you go to the test results of the CPRI P. Through application, the following screen is displayed.

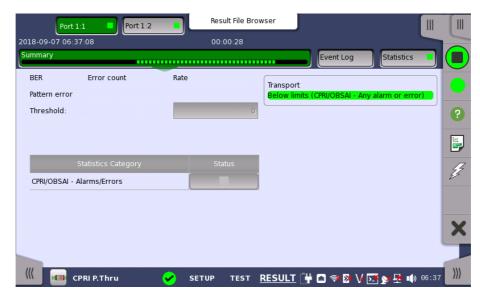

This screen contains a summary of the results of the CPRI P. Through test.

# **Statistics Category**

The lamp icon in Status column shows the Pass or Fail results. Touching the Status column displays the statistics results.

#### **Transport**

Displays the results of Transport test. This result appears if 'Transport' check box is selected in the Test Setup screen.

# 8.3.3.2 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

# 8.3.3.3 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to **Statistics** of BERT for the operation.

# Selecting type of results

Open the center drop-down menu in the top row of buttons to select which results you want to display on the screen.

- CPRI/OBSAI Alarms/Errors
- CPRI/OBSAI Frame
- CPRI/OBSAI Pass through


# 8.4 eCPRI/RoE BERT

1 1 0 1


RoE (Radio over Ethernet) is the way to control radio base stations over Ethernet and means two standards below. RoE BERT measures the bit error rate of received signal according to these standards.

- eCPRI Specification V1.0 (Common Public Radio Interface)
- IEEE 1914.3 Standard for Radio over Ethernet Encapsulations and Mappings

eCPRI protocol stack is shown in the figure below.

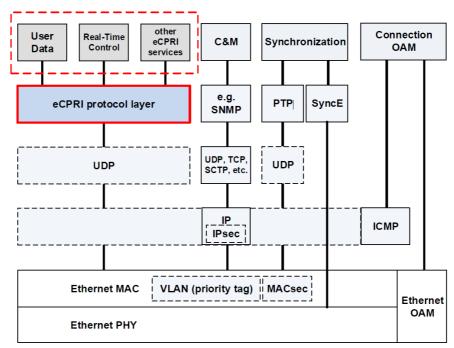

RoE encapsulation in Ethernet frames is shown in the figure below.



DA: Destination MAC Address

SA: Source MAC Address NN-NN: EtherType (0xFC3D) subType (sub type) field: 8 bits flowID (flow identifier) field: 8 bits

length (length) field: 16 bits

orderInfo (timeStamp/seqNum) field: 32 bits

FCS: Frame Check Sequence

# 8.4.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Ethernet interface are described in the following section:

• Ethernet Setup and Status

For applications including an OTN interface, you can find a description of the setup options and status information for OTN in the following section:

# • OTN Setup and Status

The Ethernet setup screen for eCPRI/RoE BERT is different from the Ethernet application setup screen in the following points.

Button	Difference	
WAN	Not displayed.	
Stream	Unframed cannot be set. Radio Frame setting is added in Stream Setup dialog box.	
Settings	Inband tab is not displayed.	
Filter	Not displayed.	

#### 8.4.1.4 Streams

You can use either a 'quick' mode or a 'detailed' mode to set up the selection of headers/layers. Touching the button at the top of the setup area will launch the *detailed mode* dialog box (the <u>Stream Setup dialog box</u>). Touching the arrow to the right of the button will open the *quick selection menu*.



# Layer configuration parameters


The settings related to each layer are described in detail below. The following layer buttons are available:

- <u>VLAN</u> (Level count is up to 2.)
- IPv4 (for eCPRI)
- <u>IPv6</u> (for eCPRI)
- <u>UDP</u> (for eCPRI)
- <u>eCPRI</u>
- <u>IEEE 1914.3</u>
- <u>Variable</u>

In the eCPRI/RoE BERT application, the SNAP, LLC1, PBB, MPLS-TP, MPLS, Custom, and ETH buttons are not displayed.

#### **eCPRI**

Selecting the **eCPRI** in Radio Frame drop-down list displays the parameters available for the eCPRI protocol layer.

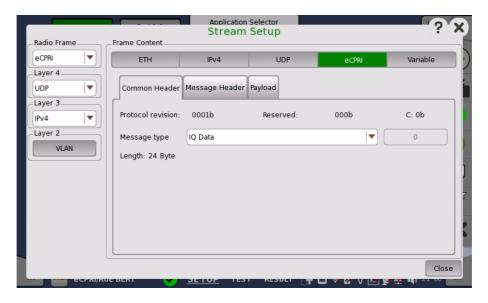

# Common Header

# Protocol version

The protocol version of eCPRI is displayed.

#### Reserved

"000b" is displayed.

С

- 0b: indicates that the eCPRI message is the last one inside the eCPRI PDU (protocol data unit).
- 1b: indicates that another eCPRI message follows this one within the eCPRI PDU.

# Message type

Select a message type. When **User Defined** is selected, touch the right-hand field and enter the value.

### Length

PC ID

A byte length of Message Header and Payload are displayed.

# Message Header

The items to be displayed vary according to the Message type.

IQ Data, Bit Sequence, Generic Data Transfer:

An identifier of a series of IQ Data messages, Bit Sequence messages, or Generic Data Transfer

messages.

SEC ID An identifier of each message in a series of

messages.

Real-Time Control Data:

RTC ID An identifier of a series of Real-Time Control Data

messages.

SEC ID An identifier of each message in a series of

messages.

Remote Memory Access:

Remote Memory

The Remote Memory Access ID is used by the sender of the request when the response is received to

Access ID distinguish between different accesses.

0: Read

Read/Write 1: Write

2: Write\_No\_Resp

Other: Reserved

0: Request

Req/Recp 1: Response 2: Failure

Other: Reserved

Element ID is used for instance to point out a specific

 $instance\ of\ a\ generic\ hardware\ function.$ 

Address Enter a memory address to read or write.

2-byte Length field contains the actual number of

bytes that were either written or read.

One-way Delay Measurement:

The Measurement ID is a 1-byte value used by the

Measurement ID sender of the request when the response is received

to distinguish between different measurements.

**Action Type** Select an Action Type of the message.

TimeStamp A time stamp data which information is specified by

Action Type.

When Action Type is set to 0x00 (Request), 0x02 (Response) or 0x05 (Follow\_Up) in the message, this field will contain the 'Compensation Value' which is

 ${\color{red}\textbf{Compensation Value}} \quad \text{the compensation time measured in nanoseconds} \\$ 

and multiplied by  $2^{16}$  and follows the format for the correctionField in the common message header specified in IEEE 1588-2008 Clause 13.3 [13].

Remote Reset:

**Reset ID** An identifier of a Remote Reset message.

1: Remote reset request

**Reset Code Op** 2: Remote reset response

Other: Reserved

Event Indication:

A 1-byte value set by the transmitter of an Event

**Event ID** Indication or a Synchronization Request to enable

identification of the acknowledge response.

**Event Type** Select a Event type.

The Sequence Number is a 1-byte value that is

Sequence Number incremented each time the transmitter sends the

"Event Indication" with Event Type set to 0x00

(Fault(s) Indication).

Number of Number of fault indications or notifications attached

**Faults/Notif** in the same message.

0 to FFFE: Vendor specific usage

**Element ID** FFFF: A fault or notification applicable for all

Elements

Raise/Cease 0: Raise a fault

1: Cease a fault

Fault/Notif

A 12-bit number indicating a fault or notification

divided between 2 bytes.

AdditionalAdditional information regarding theInformationfault/notification for vendor specific usage.

When **Event Indication** or **User Defined** is selected, the following is displayed.

#### **Enable**

Selecting the checkbox enables to edit Message Header which locates between Common Header and payload. When the checkbox is not selected, no Message Header is added.

# Length

Enter a byte length of Message Header.

#### Custom pattern

Touch the field to edit the pattern.


- Import: loads a pattern from a file.
- Export: saves the pattern to a file.

#### **Payload**

# Payload type

Select the payload type.

# IEEE 1914.3 Selecting the IEEE 1914.3 in Radio Frame drop-down list displays the parameters available for the IEEE 1914.3 protocol layer.

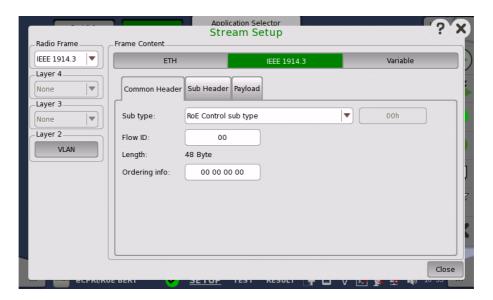

# Common Header

## Sub type

The 8-bit subType field is used to define the RoE sub type and the type of flow carried by the RoE packets. Select a Sub type. When **User Defined** is selected, enter the RoE sub type code in the right-hand field.

#### Flow ID

The flowID identifies a specific flow between two end-points. Touch the field to enter a flow id number.

#### Length

The value of the length is the total number of octets following the common RoE header. The length does not include the Ethernet FCS bytes.

# Ordering info

Ordering information is assigned to each flow and is presented in one of two methods, a sequence number or time stamp. Touch the field to enter an Ordering information length.

#### Sub Header

# Enable

Selecting the checkbox enables to edit Sub Header which locates between Common Header and payload. When the checkbox is not selected, no Sub Header is added.

# Length

Enter a byte length of Sub Header.

# **Custom pattern**

Touch the field to edit the pattern.

• Import: loads a pattern from a file.

• Export: saves the pattern to a file.

# opCode

This item appears if Sub type is set to **Control sub type**. When other than **Control sub type** is selected, touch the field right-hand to enter a number.

# **Payload**

# Payload pattern

Select a PRBS type.

# 8.4.2 Test Setup

### 8.4.2.1 Control

Refer to "Control" in Ethernet BERT Test Setup subsection for the operation.

#### **BERT Options**

Selecting the check box enables to set items in the frame.

#### 8.4.2.5 Generator

Refer to "Generator" in Ethernet BERT Test Setup subsection for the operation.

#### 8.4.2.6 Stream - Profile

Refer to "<u>Stream - Profile</u>" in Ethernet BERT Test Setup subsection for the operation.

Following points are changed in eCPRI/RoE BERT application:

- Stream profile is fixed to **Data**.
- Encoding and Number of channels are not displayed.
- Frame size is fixed to Constant.

#### 8.4.2.7 Stream - Meas.

Refer to "<u>Stream - Meas.</u>" in Ethernet BERT Test Setup subsection for the operation.

#### 8.4.2.8 Thresholds

Refer to "Thresholds" in Ethernet BERT Test Setup subsection for the operation.

# 8.4.3 Test Results


## 8.4.3.1 Summary

When you go to the test results of the eCPRI/RoE BERT application, the following screen is displayed.



This screen contains a summary of the results of the eCPRI/RoE BERT test. The information includes such things as number of pattern errors, average and maximum disruption time, and number of exceeded thresholds.

The three dials showing utilization/throughput results, pattern errors and errored frames can be enlarged by touching on them. The black needle points the measured value in the latest period.

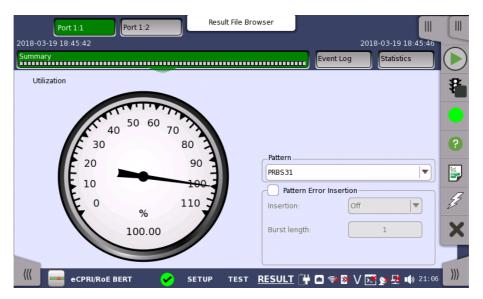

To view throughput information, select **Throughput** in the drop-down menu and then expand the dial. Use the drop-down menu above the expanded dial to select the relevant layer.

When **Ethernet** is selected on the 'Threshold' of Test Setup screen, the **Ethernet** information appears in the upper right-hand corner, shows pass/fail status summary. Touching the **Details** button allows you to inspect the individual pass/fail status.



Pattern

Allows to change the <u>payload pattern</u>. **Cross pattern** check box is the same as **Cross pattern at successive frames** of Payload pattern setting.

**Pattern Error Insertion** 

This provides the same Error insertion as *Stimuli setup options* in <u>Application Toolbar</u>.

# Insertion

If selecting Manual, error(s) are inserted when you touch the Alarm/Error Insert icon ( $\frac{1}{6}$ ).

Set **Off** to stop the error insertion.

# **Burst length**

If 'Insertion' is set to **Manual**, touch the button and set the number of errors to insert.

# 8.4.3.9 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

#### 8.4.3.10 Statistics

Touching the **Statistics** button in the navigation area displays the screen providing the statistics data. Refer to <u>Statistics</u> of BERT for the operation.

# 9 Fibre Channel (FC) Applications

This chapter describes the graphical user interface (i.e. screens, sub-screens and major dialogs) related to Fibre Channel applications.

The following applications are available:

- BERT
- Performance
- Reflector

# 9.1 Fibre Channel Setup and Status

Fibre Channel (FC) is a high-speed network technology, commonly running at 1, 2, 4, 8, 16 and 20 Gigabit per second rates. It is primarily used to connect computer data storage.

The Fibre Channel Protocol (FCP) is a transport protocol similar to TCP used in IP networks. FCP predominantly transports SCSI commands over Fibre Channel networks.

Fibre Channel has five levels (FC-0 to FC-4), where FC-4 is the uppermost level and FC-0 the lowermost.

FC Level	Name	Description
FC-4	Protocol Mapping	Network and channel protocols such as SCSI-3.
FC-3	Common Services	Encryption, RAID redundancy algorithms etc.
FC-2	Data Delivery	Framing, flow control protocols and classes of service. Core layer of Fibre Channel.
FC-1	Data Encoding/Decoding	8b/10b encoding. (FC100 to FC800) 64b/66b encoding. (FC1200)
FC-0	Physical layer	Fiber optics or copper cabling.



The Fibre Channel interface uses the optical ports.



## MU110010A Connector Panel



#### MU110011A Connector Panel

For MU110012A and MU110013A, only the FC applications over OTN are available. For usable connectors, refer to  $\underline{\text{OTN Setup and Status}}$  in "OTN Application".

# 9.1.1 Physical Port Setup

When the port is set up with a Fibre Channel interface, touching the **Port** button in the navigation area will display the screen shown below.



This screen allows you to specify the physical port configuration of the currently selected <u>Fibre Channel</u> port. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

## Port mode

Select one from the following port mode options:

- Off: The transmission will be disabled.
- 1Gb/s FC100: 100 MBytes/s
- 2Gb/s FC200: 200 MBytes/s
- 4Gb/s FC400: 400 MBytes/s
- 8Gb/s FC800: 800 MBytes/s
- 10Gb/s FC1200: 1200 MBytes/s

# **Clock Configuration**

Use the drop-down menu to select the clock source.

# **Timing Source**

**Internal**: Internal clock of the module **External**: The clock input to the connector

**GPS**: The clock provided from the external GPS sensor **Received**: The clock generated from the received signal

When External, GPS or Received is set, the right hand lamp indicates whether a clock signal is detected or not.

# Ref.Port

Switches the reference clock output on/off. If setting to On, the reference clock is output to "Tx Ref Output" connector on the module panel.

#### Rate

Switches the divide rate of the reference clock.

Transceiver

Displays the Transceiver information.

# 9.1.2 Fibre Channel Frame Setup

## 9.1.2.1 Interface

Touching the **Interface** in the navigation area displays the following screen.




**Topology** 

Point to Point is the direct connection to the device under test. Select the Login check box to establish the connection. For FC Reflector, selecting the Login check box requires peer to do an actual login.



**Fabric** is the connection using fibre channel switch. Touch **Fabric Login** button to access to the fabric login server.

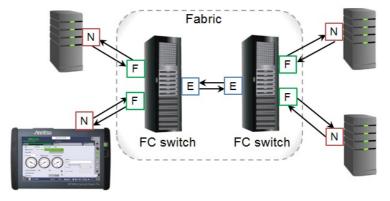

- N-Port: A hardware entity that includes a Link Control Facility, and has the ability to act as an Originator, a Responder, or both.
- F-Port: The Link Control Facility within the Fabric that attaches to an N\_Port through a link.

• E E-Port: A Fabric expansion port that connects to another E\_Port to create an Inter-Switch Link.

**E-Port** is selected when testing an connection port between the fibre channel switches. Touching **ELP** button exchanges Exchange Link Parameters with an E-port.

ELP: Exchange Link Parameters

Flow Control

Select the **Enable** check box to allow the flow control when 'Topology' is set to **Point to Point**.

If you are not logged in, touch **Remote credit** field to set the buffer size of the flow control.

The field name changes to Local credit when you login.

- Local credit: Network Master side BB Credit Count
- Remote credit: BB Credit Count of DUT (the opponent that Network Master communicate with)



Even if a sufficient number of credits are set, the phenomena that transmitting rate does not reach 100% may occur when the traffic is being received.

Source

When selecting the **Default** check box, Port WWN (World Wide Number) will be set automatically. When **Topology** is set to **Point to Point**, set the Source Identifier in the frame header by touching the **ID** field.

Touch **Port Login** to establish the communication with the destination.



Source settings are not used in the FC Reflector application.

Destination

Set the destination **Port WWN**. When 'Topology' is set to **Point to Point**, set the Destination Identifier in the frame header by touching the **ID** field.

Touch the **Port Login** to establish the connection with the destination.



Destination setting is not used in FC Reflector.

Frame Setup

Set the **Framing** type of frames to reflect. Using **Point to Point** with login or **Fabric** requires a header in the frames.





Frame Setup setting is not used in FC BERT.

In Fibre Channel Reflector mode you should activate connection to a FC Switch, after you have selected framing as SOF:Header:Data:CRC:EOF. If activating connection to a FC Switch when framing is set to SOF:Data:EOF, all frames outputted from the FC Switch are reflected to it. This phenomenon may cause malfunction of the FC Switches on the connected port.


#### 9.1.2.2 Frame

Touching the **Frame** button in the navigation area displays the following screen. **Frame** button appears in BERT and Performance applications.



# Copy frame content to other ports

This feature allows you to copy the frame content that you are currently configuring to frame content in another port.



Touching the **Copy To** button opens a drop-down menu from which you can select the relevant port.

# Follow another port



It is possible to let the Port 2 copy the setup from Port 1 by touching the **Follow** button. When this button is displayed in green, Port 2 continues to follow Port 1 change. This button appears when the Port 1 settings can be copy to Port 2.

#### Frame Setup

# **Framing**

Select the frame structure in the drop-down menu.

• SOF:Data:EOF: Start of Frame - Data - End of Frame

FC-2 Frame Format

Frame Content


(0 to 2112)

SOF

Data Field

EOF

• SOF:Header:Data:CRC:EOF: Start of Frame - Frame Header - Data - CRC - End of Frame



# Content

Select a predefined pattern or define a user pattern.

- FOX: ASCII code bit sequence of "The quick brown fox jumped over the lazy dog 1234567890".
- **5555**: Repetition of "0101010101010101".
- PRBS9 to PRBS31: Pseudo-random bit sequence. For PRBS9, its bit length is  $511 (=2^9-1)$ .
- HF TEST: High frequency test pattern. (Defined in IEEE802.3 Annex 48A)
- CRPAT: Compliant random data pattern.
- JTPAT: Jitter tolerance test pattern.
- SPAT: Supply noise pattern.
- User 32 bit: Repetition of the user defined 32 bits.
- ZERO: All bits are "0".

If you select the **User 32 bit** pattern, you can edit the bit pattern by touching the right-hand field.

#### Frame Header

Touching the Frame Header field launches the dialog box shown below.



This dialog box allows you to configure the frame header for framed Fibre Channel signals. The following parameters can be edited:

- Seq ID: Unique frame sequence identifier
- OX ID: Originator Exchange ID
- Rx ID: Responder Exchange ID

The figure below shows the full frame header structure in four bytes by six rows. The parts which can be edited are shown as colored boxes.

R_CTL	Destination ID (D_ID)		
CS_CTL	Source ID (S_ID)		
TYPE	Frame control (F_CTL)		
SEQ_ID	DF_CTL	SEQ_CNT	
OX_ID		RX_ID	
Parameter field (PARM)			

### 9.1.3 Status Information

This section describes the status information available in the status area of the Fibre Channel ports setup screen.

## 9.1.3.1 Status Summary

The status summary displayed for the Fibre Channel interface consists of the following information:

#### **Physical Status**

The topmost part of the status area gives you access to information about the current physical status of the selected interface. A summary consisting of the most relevant status indicators is displayed constantly. By touching anywhere in this part, you can open a dialog box that contains the detailed status information.

#### Alarm/Error Status

The middle part of the status area gives you access to alarm and error information for the selected interface. The status is indicated by the Lamp color. You can choose whether to view only the current alarm and error status, or to view all alarms and errors in the alarm trap since it was last reset.

A summary consisting of the most relevant alarm/error indications is displayed constantly.

# 9.1.3.2 Physical Details

Touching the topmost summary box in the status area of the **Ports Setup** screen opens the dialog shown below.



This screen presents information about the physical state and current state of the link.

#### **Timing**

#### Bit rate

The currently received bit rate is shown in bits per second (bps).

#### Bit rate difference

The current difference between the received signal's bit rate and the nominal bit rate is shown in both parts per million (ppm) and bits per second (bps).

#### Accumulated difference

The accumulated difference between the received signal's bit rate and the nominal bit rate is shown. The information is presented as the number of bits of difference detected over the accumulation period.



This is important information for identifying small frequency differences, which may not be visible by showing the current bit rate difference.

The accumulated difference information is accumulated continuously. The accumulation is reset when measurement is started or restarted.

Link

The link status information consists of the following parameters:

#### Signal Present

Indicates the detection/loss of a valid signal (bit synchronization).

#### Sync Acquired

Indicates word synchronization acquired/lost.

#### **Link Status**

Indicates the current link status.

#### Login

### Fabric Login

Lamp icon lit in green when login to an F-port.

#### **ELP**

Lamp icon lit in green when Exchange Link Parameters have been exchanged with an E-port.

#### Port Login

Lamp icon lit in green when login to an N-port.

#### 9.1.3.3 Alarms and Errors

The middle summary box in the status area of the **Ports Setup** screen indicates alarms and errors. Status is indicated by the use of <u>colored Lamp icons</u>.

• Traffic: Traffic is detected.

• Pattern Sync: Pattern Sync is detected.

• Pattern Error: Pattern Error is detected.

#### 9.1.3.4 Transceiver

Refer to <u>Transceiver</u> in "Ethernet Setup and Status" section.

# 9.1.4 Alarms/Errors Insertion

This section describes the errors and alarms insertion for the Fibre Channel interface on the <u>Application toolbar</u>.



Alarms/Errors/ Others

Select the port to insert errors, and the stimuli type. The settings items vary depending on the selected stimulus type.

#### 9.1.4.1 Fibre Channel alarms

Select an alarm option in the drop-down menu. Alarms will be inserted continuously.

- None: Does not insert alarms.
- Link reset: Inserts Link\_Reset primitive sequences. Ordered Set: K28.5 - D9.2 - D31.5 - D9.2
- Link reset response: Inserts Link\_Reset\_Response primitive sequences. Ordered Set: K28.5 - D21.1 - D31.5 - D9.2
- Not optional: Inserts Not\_Operational primitive sequences. Ordered Set: K28.5 - D21.2 - D31.5 - D5.2
- Offline: Inserts Offline primitive sequences. Ordered Set: K28.5 - D21.1 - D10.4 - D21.2

### 9.1.4.2 Fibre Channel errors

- 1. Select an error option in the Error drop-down menu.
  - None: Does not insert errors.
  - Bit: Inserts a bit error into the content part of FC frames.
  - **Symbol**: Inserts a symbol of 10 bit pattern which makes a 10b/8b conversion error.
    - When Port mode is set to FC1200, or FC1600, this option does not appear.
  - R\_RDY:Inserts a Receiver\_Ready primitive signal. Ordered Set: K28.5 - D21.4 - D10.2 - D10.2
  - CRC: Inserts a bit error into CRC part of FC frames.


    When Framing is set to SOF:Header:EOF, this option does not appear.
  - Block: Inserts an error block of 64b/66b transmission word.

When Port mode is set to FC1200 or FC1600, this option appears. This option does not appear for MU110012A and MU110013A.

- 2. In the **Insertion** drop-down list, select an insertion mode.
  - Off: Turns off inserting errors.
  - Manual: Inserts the specified number of errors if you touch the Error Insert icon.
  - **Burst / sec**: Inserts the specified number of errors in one second periodic.
  - **Burst / 10 sec**: Inserts the specified number of errors in ten second periodic.
  - Burst\*1E-02 to Burst\*1E-07: Inserts errors of burst length at the specified rate continuously.

For example, Error burst length is set to 3 and Burst\*1E-06 is selected, the three errors will be inserted per one million blocks. The Error Insert icon shows only status.

- 3. Touch the **Burst length** field to set the number of errors to insert.
- 4. When Insertion is set to **Manual**, touch the Error Insert icon.

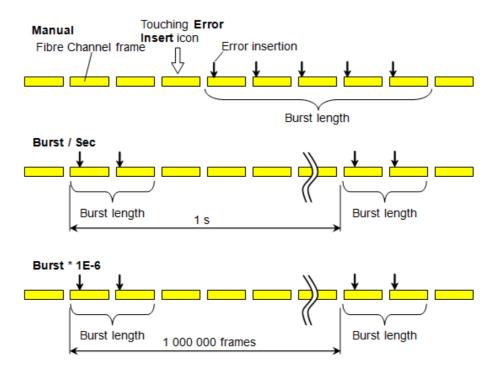

# 9.1.4.3 Fibre Channel frequency

Touch the field to set **Fibre Channel frequency**. Enter the desired deviation in the Tx Deviation field. A positive value increases the frequency.

# **9.2 BERT**

#### 1 1 0 1

BERT stands for Bit Error Rate Testing or BER Testing. The bit error rate is a key parameter in assessing systems that transmit digital data from one location to another (that is, systems such as radio data links, fiber-optic data systems, Ethernet etc.).

# 9.2.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Fibre Channel interface are described in a separate section:

#### • FC Setup and Status

For applications also including an OTN interface, you can find a description of the setup options and status information for OTN in the following section:

### • OTN Setup and Status

Refer to the sections relevant for your current port setup requirements.

# 9.2.2 Test Setup

#### 9.2.2.1 Control

When you go to the test setup of the Fibre Channel Bert application, the following screen is displayed.



This screen contains the parameters that are generally required in a BERT test setup.

### Interval length

Allows you to specify the duration of the BERT intervals. The drop-down menu contains the following values: 1, 2, 5, 10, 15, 30 seconds, 1, 5, 10, 15, 30 min., 1, 2, 4, 6, 12 hours or No Intervals.

#### Start action

Allows you to specify when the measurement is started.

- Immediate: Starts the measurement when you touch the Start button.
- **Start at**: Starts the measurement at the time specified in the **Start at** field on the right.

#### Stop function

Allows you to specify when the measurement ends.

- Manual stop: Stops the measurement immediately when you touch the Stop button
- **Stop at**: Stops the measurement at the time specified in the **Stop at** field on the right.
- **Duration**: Performs the measurement for the duration of time specified on the right.

#### Memory allocation

Allows you to specify how the measurement will be stored in the Network Master's memory.

- Use all storage: When Network Master's memory became full of measured data, the whole measurement is stopped.
- Continuous: When Network Master's memory became full of measured data, the oldest records in that memory will be overwritten.
   When the memory became full, it is recorded in Event log.

The Network Master's memory size (the file size of measurement results) is 64 Mbytes per one port. The result file size is less than 64 Mbytes because it is compressed when saving to the file.

#### Estimate of test duration

Contains an estimation of the time (in days, hours, minutes and seconds) before the whole memory will be filled out by the test. During an ongoing measurement, the estimate will be recalculated periodically.

#### Performance Parameters

These items appear if OTN Tx and OTN Rx are selected on Setup screen.

#### OTN

G.8201, M.2401 (M.2110)

#### Time period

15 minutes, 1 hour, 2 hours, 24 hours, 7 days

#### Allocation

Touching the **Setup** button launches the dialog box. Refer to <u>Performance Parameters</u> in "OTN Application" .

### **BERT Options**

#### Count lost frames as pattern errors

Enabling this function means that if a frame is lost, all test pattern bits in the frame are considered errored and will be included in the pattern error counter.

#### Include addresses in frame filter on receiver

The receiver uses a filter to determine which frames should be counted in the results. When this function is enabled, the following fields are required to match:

- Source ID
- Destination ID
- R\_CTL (=0x00, Uncategorized FC-4)
- Type (=0xE0, vender unique type)

When this function is not enabled, the following fields are required to match:

• Most significant byte of R\_CTL should be equal to 0. (FC-4 data)

#### Only show BER Alarms when measuring

BER alarms in Interface status dialog box is enabled only when the measurement is running. This function allows to avoid the BER alarms occurrence when no data is input.

#### Ignore the Frame loss secs on BERT statistics

The Frame loss secs." on BERT statistics will not be used for judging the Status Summary. This function allows to avoid the <u>Status Summary</u> alarms occurrence when no frames are input.

#### 9.2.2.2 Generator

Touching the **Generator** button in the navigation area displays the following screen.



This screen contains the traffic-related parameters.

#### **Traffic duration**


Allows you to set conditions concerning frames transmission. Choosing **Continuous** will make a continual test sequence. Alternatively, the duration can be set manually in either **Seconds** or **Frames**, coupled with a specification of the number of seconds/frames in the adjacent field.

## Automatically start and stop traffic generator with the test

Select this check box to make the traffic generator start and stop synchronously with the test starting/stopping.

#### 9.2.2.3 Stream

Touching the Stream button in the navigation area displays the following screen.

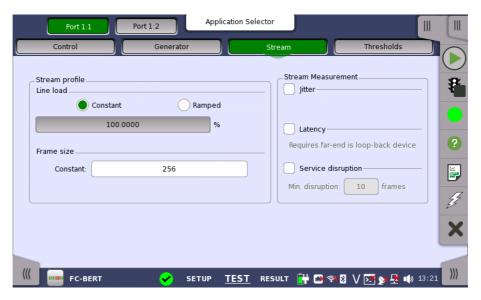

This screen contains the parameters for specifying a profile and pattern for each stream and for specifying which measurements are made.

#### Stream profile

#### Line load

Refer to "Line load in "Ethernet Applications" for the operation.

#### Frame size

Touch Constant field to set the fixed frame size for the duration of the test.



Frame size does not include byte counts of SOF and EOF. Set the Frame size to a multiple of 4.

 $\textbf{Stream Measurement} \quad \textbf{Select one or more of the measurements (Jitter, Latency and Service}$ disruption) on both of transmitter and receiver and then specify a threshold value for each.

> If selecting Service disruption, specify the threshold frame count by touching Min. disruption field.

#### 9.2.2.4 Thresholds

Touching the Thresholds button in the navigation area displays the following screen.



This screen contains the parameters for setting up the various threshold values (i.e. limits) for errors and Pass/Fail status that are used during the monitoring.

# BERT Threshold monitoring

#### Pattern errors

Allows you to enable monitoring of pattern errors (i.e. bit errors) and to set up a threshold value for the bit error ratio.


Choose whether the threshold is specified as an absolute value or a percentage, using the Count, Ratio and Ratio (%) radio buttons, and then specify the value in the Threshold field.

#### Jitter, Latency, Service disruption

Select one or more of the measurements (Jitter, Latency and Service disruption) and then specify a threshold value for each. Any measurements whose maximum duration time exceeds the threshold value will be marked in red on the Test Result screen.

#### Fibre Channel

When you select the check box, you can enable various thresholds. Touch the **Setup** button to display the **Fibre Channel threshold setup** dialog box.

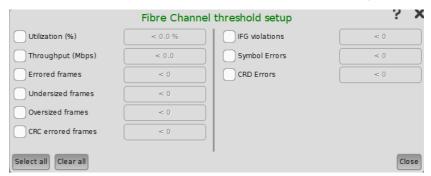

For setting example, refer to **Example** in "Ethernet threshold setup".

#### **Transport**

This setting appears in case of BERT on OTN.

When you select the check box, you can enable alarm or error thresholds.

#### Interface

Fixed to OTN.

#### **Evaluation item**

Select the item to evaluate. If selecting other than **Any Alarm or Error**, another menu appears.

#### **Evaluation type**

Select the relevant type.


#### Pass & fail threshold

Touch the left-hand number to set the lower limit for "Warning". Touch the right-hand number to set the lower limit for "Fail". The lower limit of "Fail" must be equal to or greater than the lower limit of "Warning" (defining a "Within limits" range in between them).

#### 9.2.3 Test Results

#### 9.2.3.1 Summary

When you go to the test results of the Fibre Channel BERT application, the following screen is displayed.

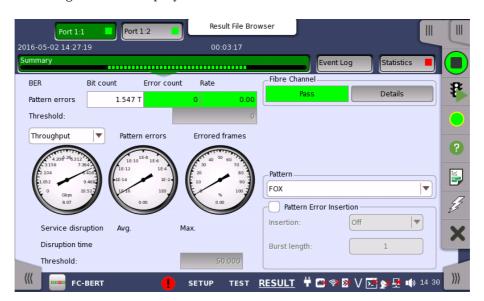

This screen contains a summary of the results of the Fibre Channel BERT test. The information includes such things as number of pattern errors, average and maximum disruption time, and number of exceeded thresholds.

The three dials showing utilization/throughput results, pattern errors and errored frames can be enlarged by touching on them. The black needle points the measured value in the latest period.

Refer to the **Summary** of BERT in "Ethernet Application".

Fibre Channel

When **Fibre Channel** is selected on 'Threshold' of the Test Setup screen, the **Fibre Channel** information appears in the upper right-hand corner, shows pass/fail status summary. Touching the **Details** button allows you to inspect the individual pass/fail status.

Pattern

Select the pattern.

Pattern Error insertion

This provides the same Error insertion as *Stimuli setup options* in <u>Application</u> Toolbar.

#### Insertion

If selecting Manual, error(s) are inserted when you touch the Alarm/Error Insert ( $\mathscr{J}$ ).

Set **Off** to stop the error insertion.

#### **Burst length**


If 'Insertion' is set to **Manual**, touch the button and set the number of errors to insert.

#### 9.2.3.2 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

#### 9.2.3.3 Statistics

Touching the **Statistics** button in the navigation area displays the screen shown below.

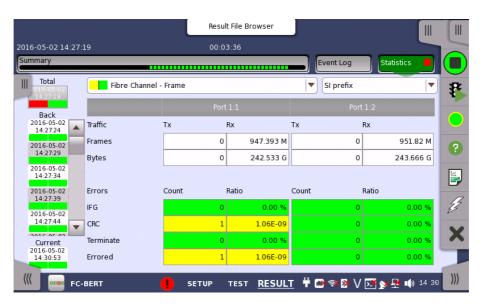

This screen presents a detailed analysis of the test results. You can choose to view either the results of a specific time interval or the total results from measurement start. The results can be displayed either in table (list) form or as graphs. You can also zoom in on a specific result item and display either a zoom or a histogram.

### Selecting which results to view

# Selecting the interval time

Touch the **Total** button to switch the total values measured in all interval times. The start time of measurement is displayed on the button.

Touching the button in left side **Back** field shows the measured values in the interval time. The end time of the interval is displayed on the button.

**Current** button is displayed at left bottom when the measurement is running. Touching the **Current** button shows the measured values in the current interval time. The start time of the current interval is displayed on the button.

The slide-out panel on the left-hand side of the screen contains the following functions:

- Only show intervals that contains errors
- Time format





If you have stopped measurement during the interval time, the measurement results of the current interval are discarded. The log of the current interval is not displayed in **Back** field.

In this case, result data are re-calculated excluding the data of the current interval when the measurement is stopped. This causes that "Count" and "Ratio" displayed after the measurement will be different from that of during measurement. The sum of interval time (multiplied interval time by the number of back logs) may not match the differential time between displayed time at left top and right top after

# Selecting type of results

Open the left drop-down menu in the top row of buttons to select which results you want to display on the screen.

- OTN Alarms/Errors
- OTN Performance
- BERT or Reflector (Depends on application)
- Link
- Frame

the measurement.

- Performance
- Size Distribution

OTN options appear if the FC signal is carried by OTN.

# Studying a specific result

Touch a specific cell in a result table to zoom in on the corresponding result item. The **Count** and **Ratio** fields are displayed on a **Zoom** tab. A **Time vs. Statistics** tab is also available. Use the **Back** button or touch the zoom filed to return to the statistics screen.



## Selecting how results are displayed

#### Selecting notation

Select the required notation for the results from the notation drop-down menu.

- Unformatted e.g. 71892
- SI prefix e.g. 71.891 k (k means "kilo")
- Engineering e.g. 71.892E3
- Scientific e.g. 7.1892E4

#### Results

Results are displayed according to your choice.

OTN Alarms/Errors Refer to Results in "OTN Application"
OTN Performance Refer to Results in "OTN Application"

BERT Results BER

Latency Jitter

Service Disruption Reflected Frames

Reflector Results Reflected Frames
Reflected Bytes

Not Reflected Frames Not Reflected Bytes

Total Frames
Total Bytes

Link Results Symbol Errors

Block Errors Ordered Sets

Frame Results Traffic

Errors Others

Performance Results Line rate

Frame rate Utilization Throughput

Size Distribution Results Size Dist.

Frame Size

#### Abbreviation

The following abbreviations are used in the description of Link results.

LR Link Reset

LRR Link Reset Response
NOS Not Operational

OLS Offline RF Remote Fault

R\_RDY Receiver Ready

# Frame Errors

The following items are displayed in the error count of Frame results.

IFG Number of frames with inter-frame gap error.

CRC Number of frames with CRC errors.

Symbol Number of frames with 10B code errors.

CRD Number of frames with CRD errors. CRD errors are when the

EOF polarity does not match the current disparity.

Terminate Number of frame with which have been terminated either with

unknown ordered sets value or with an EOFa.

Errored Number of frames which have one of Symbol, Terminate, CRC, or

CRD errors.

# 9.3 Performance



The FC Performance test is one of the methods to evaluate the network quality and defines many tests to determine the performance characteristics of the network device or entire network. Network Master includes several physical setups (test modes) and five different tests.

#### Throughput Test

The throughput is the maximum rate at which a DUT (Device Under Test) can forward frames without frame loss for a specific frame size. That is, the maximum rate at which the number of test frames sent by the DUT is equal to the number of test frames sent to it by the test equipment.

#### Traffic Profile Test

Traffic Profile Test measures actual throughput with varying the line load in up to ten steps. For each selected frame size, a set of throughput steps defined by user will run and actual measured throughput will be recorded.

#### Latency Test

Latency Test is the delay time from sending the frame from Network Master to returning the frame to Network Master. This test measures the latency when frames are sent at maximum throughput measured in Throughput Test. The latency dispersion is measured as jitter.

To run this test, it is required to perform Throughput Test at the same time.

#### **Burst Test**

Burst Test measures the number of frames in the longest burst that the DUT will handle without the loss of any frames.

#### Credit Test

Credit Test measures the minimum credit value that can output the maximum throughput measured in Throughput Test.

To run this test, it is required to perform Throughput Test at the same time.

# 9.3.1 Ports Setup and Status

The first step to run an application is to set the port interfaces. Set the port interfaces in the **Ports Setup** screen, which also provides the port status information.

The setup options and status information related to the Fibre Channel interface are described in the following section:

#### • FC Setup and Status

For applications also including an OTN interface, refer to the setup options and status information for OTN in the following section:

#### • OTN Setup and Status

Refer to the sections corresponding to the required port setup.

# 9.3.2 Test Setup

#### **Restriction of Number of Steps**

FC Perf. measures the throughput, traffic profile, latency, burst, and BB credit count while changing the load applied to the DUT by changing the transmission rate and size of the Ethernet frame. In addition to the final results, Network Master retains the measurement results at each load as an intermediate results, but 500 steps are retained at maximum. Depending on the setting of the steps, it is possible to retain more than 500 steps, but in that case the oldest measurement result(s) will be discarded.

Also, depending on the setting, only the results of one category (throughput, traffic profile, latency, burst, or BB credit count) may be retained in large amount disproportionately. In order to avoid this, Network Master organizes the results so that results at least 100 steps remain as shown in the examples below

However, Traffic Profile and Credit (when BB Credit Count is set to **Stepped**) start the next test when the number of steps has reached the number of measurable steps.

Example 1

Test	Number of Steps set in Setup	Number of steps in which the measurement results are retained
Throughput	100	100
Burst	200	200
Credit	500	200*

<sup>\*:</sup> The test is stopped when the 200th step is measured because the number of total steps reaches 500.

Example 2

Test	Number of Steps set in Setup	Number of steps in which the measurement results are retained
Throughput	500	300* <sup>1</sup>
Burst	200	100*2
Credit	100	100

<sup>\*1:</sup> Measurement results for the first 200 steps are discarded.

In the test setting, the total number of steps can be set to more than 500. In this case, a warning is displayed on the <u>Summary</u> screen when the measurement is started.

The number of test steps can be calculated by the following formula.

Number of steps =  $f \times l$ 

f: Number of Frame Size steps

1: Number of Line Load steps

In the following setting example, the number of steps is 50.

<sup>\*2:</sup> Measurement results for the first 100 steps are discarded.




f=5 Five frame sizes, 64, 256, 512, 1024, and 2140 bytes are selected.

 $l=10\,With the settings of Min.~10\%,~Max.~100\%,~and~Step~10\%,~line~load~steps~are~ten,~10\%,~20\%,~30\%,~40\%,~50\%,~60\%,~70\%,~80\%,~90\%,~and~100\%.$ 

Number of steps=  $f \times l = 5 \times 10=50$ 

#### 9.3.2.1 Control

The following screen is displayed by touching Control in the Navigation area.

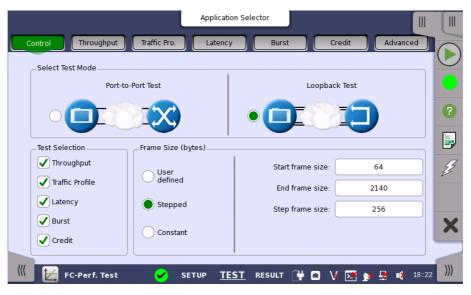

Specify the test mode and select the test to be performed in this screen.

### Select Test Mode

Two different test modes are available:

- Port to Port Test
- Loopback Test



Port to Port Test uses two ports to perform tests.

When only one port is selected at starting Performance Test application, it is not able to start Port to Port Test.

Select the test mode to define your test configuration. Refer to <u>Test Mode</u> <u>Descriptions</u>.

#### **Test Selection**

Select one or more of the following tests:

• Throughput

- Traffic Profile
- Latency
- Burst
- Credit



When a test is selected, the test setup screen including the setup parameters related to the test can be used. Similarly, the test results include only the test selected at Test Selection.

#### **Test Mode Descriptions**

#### Port to Port test



In this test mode, the facing test of Network Master and the FC instrument is performed.

The tests of throughput, latency, and burst are available.

#### Loopback test



This test is used when testing network by reflecting traffic back to the Network Master. This requires a device to reflect the traffic back e.g. a second Network Master.

In the loopback test, all the items in test selection are available.

#### Frame Size (Bytes)

There are three methods to specify the size of the fibre channel frame sent during the test.




Frame Size (Bytes) is a byte length from header to CRC. It does not include SOF and

#### User defined

Check the check box and select the following frame size:

64, 128, 256, 512, 768, 1024, 1280, 2140, and 2168 to 3240 (Set the frame size using the field at the right bottom.)

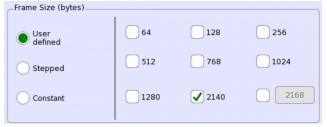

### Stepped

Set Start frame size, End frame size and Step frame size. The frame size is started from the value set at Start frame size, and increased/decreased until the value set at End frame size at intervals of the value set at Step frame size.





Set the parameters so that the number of frame sizes is ten or less. When the number of frame sizes is 11 or more, the message "Maximum of 10 frame sizes is allowed." is displayed.

#### Example:

Start frame size: 100, End frame size: 1500, Step frame size: 100 In this case, the number of frame sizes is 15 (100 to 1500). Measurements are performed for the frame sizes from 100 to 1000, not for 1100 to 1500.



The Stepped mode is useful when testing various frame sizes that are distributed consistently and equally. As a consequence, it produces more smooth and detailed graphs when a low value is set at Step frame size. When the step frame size is lower, the measurement time is longer.

#### Constant

Set a value at Frame size.



#### 9.3.2.2 Throughput

The following screen is displayed by touching **Throughput** in the Navigation area.



#### **Auto Search**

#### Mode

Select the search method.

- Smart: It is assumed that occurring the frame loss is a higher probability around Max. And the skewed binary searching is performed. (The area where the line loads is high is searched at first.)
- **Binary**: The binary searching of the line load interval specified in the range from Max to Min is performed.

#### Resolution

Select an Auto search resolutions from 0.1, 1.0 or 10.0 %.

#### Max Line Load

Set the maximum line load of Auto search. The unit is Percent or Mbps.

#### Duration

#### Step

Specify an approximate duration for each step of the test by time.

#### 9.3.2.3 Traffic Profile

The following screen is displayed by touching **Traffic Pro.** in the Navigation area.



#### Line Load

Set a line load of the Traffic Profile test. The unit is **Percent** or **Mbps**.

#### Duration

#### Step

Specify an approximate duration for each step of the test by time.

#### 9.3.2.4 Latency

The following screen is displayed by touching Latency in the Navigation area.



#### **Duration**

#### Step

Specify an approximate duration of the test by time.

#### 9.3.2.5 Burst

The following screen is displayed by touching Burst in the Navigation area.



# Frames per Burst (Burst Length)

#### **Auto Search**

When the check box is selected, the burst length is automatically searched. Select Search Mode. The resolution is selected from 1, 10, or 100.

The range of searching the burst size is set at **Start burst size** and **End burst size**.

### Stepped


The burst size is changed in steps. The range of changing the burst size is set at Start burst size and Stop burst size. And the change amount per step is set at Step burst size.

When the burst size is set as follows, it is changed from 100 to 900 (100 -> 300 -> 500 -> 700 -> 900).

Start burst size: 100 End burst size: 1000 Step burst size: 200

# 9.3.2.6 Credit

The following screen is displayed by touching Credit in the Navigation area.

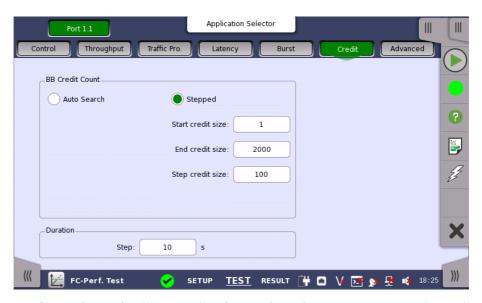

#### **BB Credit Count**

BB Credit Count (buffer-to-buffer Credit\_Count) is a counter used for Buffer-to-buffer flow control management

BB Credit Count is defined as the number of unacknowledged or outstanding frames awaiting R\_RDY responses from the directly attached Fibre Channel Port.

#### **Auto Search**

The minimum local credit that realizes the maximum throughput is searched in the range from 1 to the number set at **End credit size**. However, the minimum local credit is not searched in the range that is three times or more of the remote credit size.

Select Search Mode. The resolution is selected from 1, 10, or 100.

#### Stepped

BB Credit Count is changed in steps. The range of changing BB Credit Count is set at **Start credit size** and **End credit size**. And the change amount per step is set at **Step credit size**.

When BB Credit Count is set as follows, it is changed from 100 to 900 (100 -> 300 -> 500 -> 700 -> 900).

Start credit size: 100 End credit size: 1000 Step credit size: 200


#### Duration

#### Step

Specify the approximate duration in time of each step of the test.

#### 9.3.2.7 Advanced

The following screen is displayed by touching **Advanced** in the Navigation area.

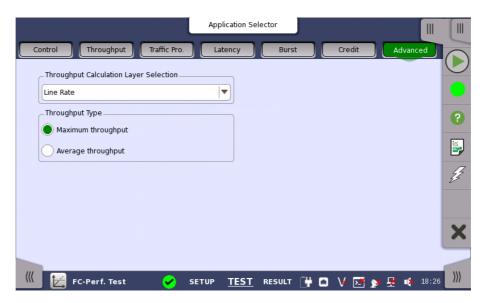

This screen sets the measurement method of *Measured Throughput* for the results of subsequent tests. The displays of the measurement results are not changed even of the Advanced settings are changed after completing the measurement.

Throughput, Traffic Profile, Latency, and Credit

#### **Throughput Calculation Layer Selection**

- Line Rate: For 1Gb/s to 8Gb/s, the throughput is calculated after encoding 8B/10B. For 10Gb/s, the throughput is calculated after encoding 64B/66B.
- L1: Layer 1. For 1Gb/s to 8Gb/s, the throughput is calculated before encoding 8B/10B. For 10Gb/s, the throughput is calculated before encoding 64B/66B.
- L2: Layer 2. Data field in FC frame.

#### Throughput Type

A throughput is measured in every one second. For example, when a test step is ten seconds, a throughput is measured ten times during one step.


When **Maximum throughput** is selected, the maximum value of the measured values in all steps is set as the test result.

When **Average throughput** is selected, the average value of the measured values n all steps is set as the test result.

#### 9.3.3 Test Results

# Graphical representation


The results of the performed FC Performance tests can be presented in either tabular form or as graphical representations. The graphical representation mode provides an overview of the results and the progress of the test.

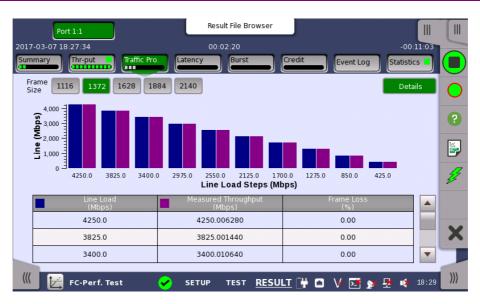

Two modes can be switched using Detail or Summary.

### 9.3.3.1 Summary


The following screen is displays by touching Summary in the Navigation area.

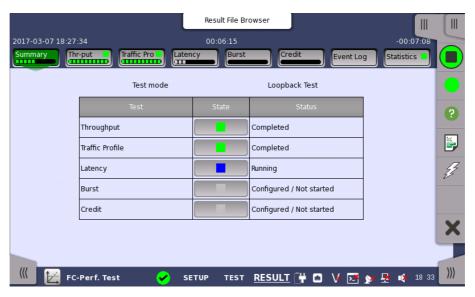

This screen presents the current status of the test(s) (**Configured / Not started**, **Running**, **Completed** or **Not Configured**). Touching the State button of the specific test displays the screen where the detailed result information is displayed.

#### 9.3.3.2 Throughput

The following screen is displayed by touching **Throughput** in the Navigation area.

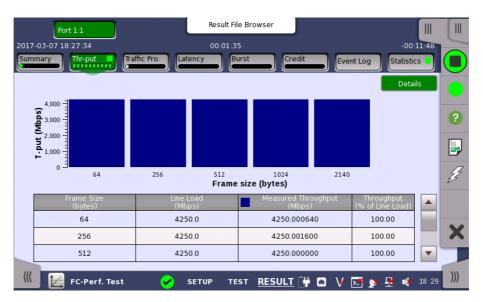

This screen displays the results of the Throughput test.

The measured throughput values are shown in a bar chart.

The following items are displayed in the result table.

- Step: Step numbers in Throughput test
- Fr size: Frame size defined in Control screen
- Frames: Number of sent frames
- Frame rate: Number of frames sent per second
- Util: Utilization in percent
- Load: Number of bits sent per second
- Act Load / Tput: Number of frames received per second
   This is a measured throughput.
- Frames lost: Difference between sent frame count and received frame count

#### 9.3.3.3 Traffic Profile

A screen similar to  $\underline{\text{Throughput}}$  is displayed by touching  $\underline{\text{Traffic Profile}}$  in the Navigation area.

This screen displays the results of the Traffic Profile test.

The line load and measured throughput values are shown in bar charts.

The following items are displayed in the result table.

- Step: Step numbers in Throughput test
- Fr size: Frame size defined in Control screen
- Frames: Number of sent frames
- Frame rate: Number of frames sent per second
- Util: Utilization in percent
- Load: Number of bits sent per second
- Act Load / Tput: Number of frames received per second
   This is a measured throughput.
- $\bullet\,\,$  Frames lost: Difference between sent frame count and received frame count
- Loss rt: Frame loss ratio in percent
   It is calculated using the following formula:

$$Loss ratio = \frac{Frame lost \times 100}{Frames}$$

#### 9.3.3.4 Latency

A screen similar to <u>Throughput</u> is displayed by touching **Latency** in the Navigation area.

This screen displays the result of Latency test.

The latency and measured jitter are shown in bar charts.

The following items are displayed in the result table.

- Step: Step numbers in Throughput test
- Fr size: Frame size defined in Control screen
- Frames: Number of sent frames
- Frame rate: Number of frames sent per second
- Util: Utilization in percent
- Load: Number of bits sent per second
- Act Load / Tput: Number of frames received per second
   This is a measured throughput.
- Latency: Delay time of frames
- Jitter: Latency time variation

#### 9.3.3.5 Burst

A screen similar to <u>Throughput</u> is displayed by touching **Burst** in the Navigation area.

This screen displays the result of Burst test.

The maximum burst length is shown in a bar chart.

The following items are displayed in the result table.

- Step: Step numbers in Throughput test
- Fr size: Frame size defined in Control screen
- Frames: Number of sent frames
- Burst size: Number of frames per Burst
- Back Pressure: Utilization in percent
- Frames lost: Difference between sent frame count and received frame count

#### 9.3.3.6 Credit

A screen similar to <u>Throughput</u> is displayed by touching **Credit** in the Navigation area.

This screen displays the result of Credit test.

The measured throughput is shown in a bar chart.

The following items are displayed in the result table.

- Step: Step numbers in Throughput test
- Fr size: Frame size defined in Control screen
- Credit Size: Sent value of BB credit count
- Frame rate: Number of frames sent per second
- Util: Utilization in percent
- Load: Number of bits sent per second

- Act Load / Tput: Number of frames received per second This is a measured throughput.
- Frames lost: Difference between sent frame count and received frame count

## 9.3.3.7 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to <u>Event Log</u> of SDH/SONET/PDH/DSn BERT application.


#### 9.3.3.8 Statistics

Touching the **Statistics** in the navigation area displays the screen providing the statistics data. Refer to <u>Statistics</u> of BERT for the operation.

# 9.4 Reflector



In *Fibre Channel Reflector* mode, the Network Master loops incoming traffic on a port, swapping ID addresses.

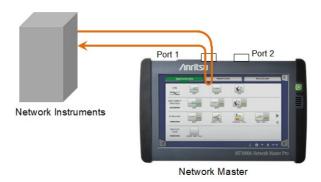

# 9.4.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.

The setup options and status information related to the Fibre Channel interface are described in a separate section:

#### • FC Setup and Status

For applications also including an OTN interface, you can find a description of the setup options and status information for OTN in the following section:


#### • OTN Setup and Status

Please refer to the sections relevant for your current port setup requirements.

# 9.4.2 Test Setup

### 9.4.2.1 Control

When you go to the test setup of the Fibre Channel Reflector application, the following screen is displayed.

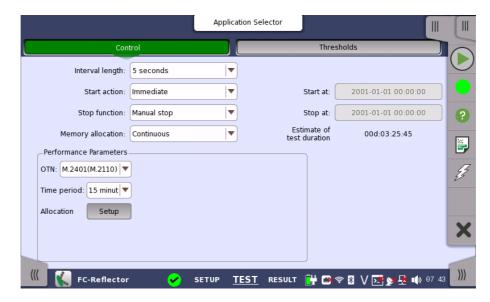


For operation, refer to Control in "BERT" section.

#### 9.4.2.2 Thresholds

Touching the **Thresholds** button in the navigation area displays the following screen.

The Follow button appears when the Port 2 settings can follow Port 1.

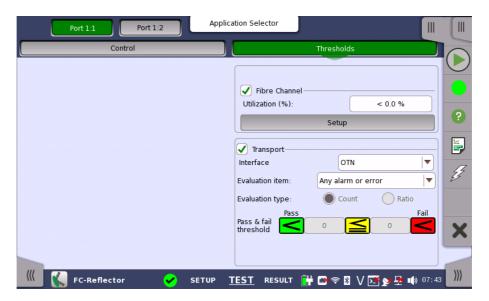


**Transport** settings appear if the FC signal is carried by OTN.

For operation of **Fibre Channel** and **Transport**, refer to <u>Thresholds</u> in BERT section.

# 9.4.3 Test Results


# 9.4.3.1 Summary

When you go to the test results of the Fibre Channel Reflector application, the following screen is displayed.

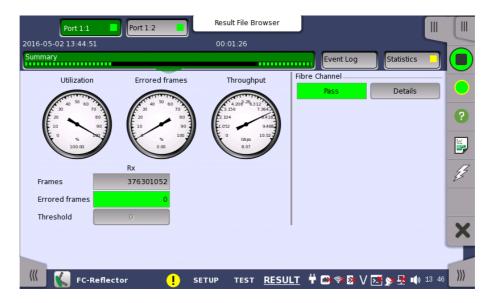


This screen contains a summary of the results of the FC Reflector test. The information includes such things as number of errored frames and number of exceeded thresholds.

The three dials showing Utilization, Errored frames and Throughput results. Utilization, Errored frames and Throughput can be enlarged by touching on them. The black needle points the measured value in the latest period.

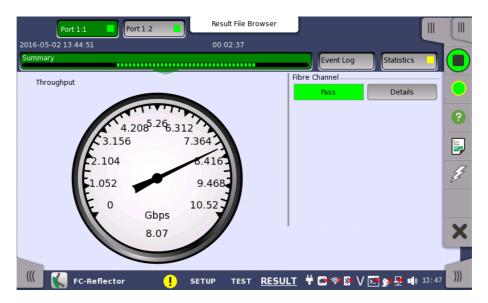

When **Fibre Channel** is selected on 'Threshold' of the Test Setup screen, the **Fibre Channel** information appears in the upper right-hand corner, shows pass/fail status summary. Touching the **Details** button allows you to inspect the individual pass/fail status.

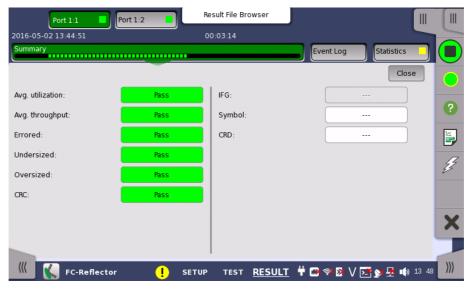


Transport


Displays the results of Transport test. This result appears if 'Transport' check box is selected in the Test Setup screen.

# 9.4.3.2 Event Log

Touching the **Event Log** button in the navigation area displays the screen providing the event log data. Refer to **Event Log** of SDH/SONET/PDH/DSn BERT application.

#### 9.4.3.3 Statistics



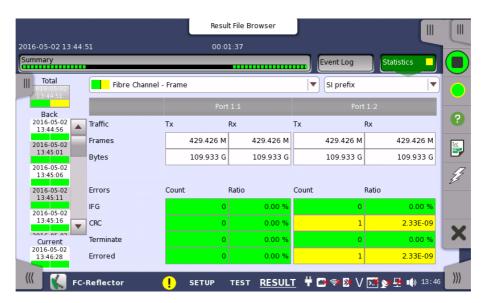

This screen presents a detailed analysis of the test results. You can choose to view either the total results from measurement start or the results of a specific interval during the test. You can also zoom in on a specific result item. The results can be displayed either in table (list) form or as a graph.

# Selecting which results to view

Interval or total results Touch the Total button to switch the total values measured in all interval times. The start time of measurement is displayed on the button.

> Touching the button in left side Back field shows the measured values in the interval time. The end time of the interval is displayed on the button.

Current button is displayed at left bottom when the measurement is running. Touching the Current button shows the measured values in the current interval time. The start time of the current interval is displayed on the button.

The slide-out panel on the left-hand side of the screen contains the following functions:

- Only show intervals that contains errors
- Time format





If you have stopped measurement during the interval time, the measurement results of the current interval are discarded. The log of the current interval is not displayed in **Back** field.

In this case, result data are re-calculated excluding the data of the current interval when the measurement is stopped. This causes that "Count" and "Ratio" displayed after the measurement will be different from that of during measurement. The sum of interval time (multiplied interval time by the number of back logs) may not match the differential time between displayed time at left top and right top after the measurement.

# Selecting type of results

Open the middle drop-down menu in the top row of buttons to select which results you want to display on the screen.

- Reflector
- Link
- Frame
- Performance
- Size Distribution

# Studying a specific result

Touch a specific cell in a result table to zoom in on the corresponding result item. The **Count** and **Ratio** fields are displayed on a **Zoom** tab. A **Histogram** tab is also available. Use the **Back** button to return to the statistics screen.

#### Selecting how results are displayed

#### Selecting notation

Select the required notation for the results from the notation drop-down menu.

- Unformatted e.g. 71892
- SI prefix e.g. 71.892 k (k means "kilo")
- **Engineering** e.g. 71.892E3
- Scientific e.g. 7.1892E4

# 10 Device Test Applications

This chapter describes the graphical user interface (i.e. screens, sub-screens and major dialogs) related to Device Test applications.

The following applications are available:

• No Frame

# 10.1 Device Test Setup and Status

Device Test sends the test pattern without the protocol frame to measure the BER of the device.

# 10.1.1 Physical Port Setup

When the port is set up with an interface, touching the **Port** button in the navigation area will display the screen shown below.



This screen allows you to specify the physical port configuration of the currently selected port. It can also be used to inspect the current status of the selected port.

The configuration options available in the setup area of the screen are described below. The status information is described in a separate section.

# Interface Type

Select the interface of the module.

#### Bit Rate

Select the bit rate standard.

# Lane Select

When bit rate is set to 100G Ethernet or OTU4, select the number of lanes.

 $16\ Lane$  and  $20\ Lane$  options mean "Logical lane', other options mean "Physical lane'.

Physical lane: Lane of the optical transceiver's electrical interface such as CAUI-4, CDAUI-8

Logical lane: Lane used for the logical process such as PCS (Ethernet)

#### Available number of lanes


Interface Type	MU110011A	MU110012A	MU110013A
CFP 40G	4	-	-
CFP 100G	10, 20	-	-
CXP	-	10, 20	10, 20
CFP2	-	20	4, 20
QSFP+	4	4	4
QSFP28 Adpt.	-	20	4, 20



To set 4 when using CFP2 or QSFP28 on MU110013A, the 4x 25G/28G BERT option is required.

Test pattern

Touch the button to launch the dialog box for setting the test pattern. When selecting Tx setting to Rx, Rx pattern will be set to the same as Tx pattern.



When Lane Select is set to **4 Lanes**, you can set patterns for each lane.

Tx Pattern:

PRBS7, PRBS9, PRBS15, PRBS23, PRBS31, Square

Rx Pattern:

PRBS7, PRBS9, PRBS15, PRBS23, PRBS31

#### **Clock Configuration**

#### Timing source

The possible sources are:

- Internal
- External

When **External** is set, the right hand lamp indicates whether clock is detected or not.

#### Ref. Port

Switches the reference clock output on/off. If setting to **On**, the reference clock is output to "Tx Ref Output" connector on the module panel.

#### Rate

Select the divide rate of the reference clock.

# Sync Port

This item appears when using MU110013A and Interface Type is set to CFP2 or QSFP28 Adpt. Selects the output of Sync Clock Output connector on MU110013A panel.

- Off: does not output the clock.
- 1/8: outputs 1/8 divided clock of the 25/28 Gbps data synchronized clock.
- 1/16: outputs 1/16 divided clock of the 25/28 Gbps data synchronized clock.

#### 10.1.2 Status Information

This section describes the status information available for the Device Test Applications in the status area of the **Ports Setup** screen.

#### 10.1.2.1 Status Summary

The status summary displayed for the Device Test Applications consists of the following information:

#### **Physical Status**

The topmost part of the status area gives you access to information about the current physical status of the selected interface. A summary consisting of the most relevant status indicators is displayed constantly. By touching the summary, you can launch a display that contains the detailed status information.

#### **Monitor Status**

At the bottom of the status area are below buttons that give you access to various monitor information. By touching a button, you can launch the corresponding information display.

#### Transceiver

#### 10.1.2.2 Physical Details

Touching the topmost summary box in the status area of the **Ports Setup** screen launches the status shown below.



This screen presents detailed information about the current physical status of the received signal at the Device Test interface.

The physical status information consists of the following parameters:

#### Tx Signal Level

Shows the output level of an optical signal.

#### **Rx Signal Level**

Shows the input level of an optical signal. A lamp icon indicates the LOS state.

#### LSS

The currently Link Status Signal is shown by the icon.

- Red means that the link is not established.
- Green means that the link is established.

#### Bit error

The bit error status is indicated by the use of <u>colored Lamp icons</u>.

#### Frequency

Shows the input signal frequency and the deviation of the input signal from the nominal bit rate in ppm. In case of multi lanes, the frequencies and deviations are displayed by each lane.

#### **CDR Lock**

The clock data recovery status is shown by the icon.

- Red means that the timing clock cannot be recovered from received data.
- Green means that the timing clock is ok.

#### 10.1.2.3 Transceiver

Refer to <u>Transceiver</u> in "Ethernet Setup and Status" section.

# 10.1.3 Errors/Alarms Insertion

This section describes the errors or alarms insertion for the Device Test on the Application toolbar.



#### Alarms/Errors/ Others

Select the port to insert errors, and the stimuli type. Depending on the stimuli type, the setting items will appear.

- No frame errors: Inserts bit errors to specified lanes.
- No frame frequency: Adds the frequency offset to the selected bit rate.

#### 10.1.3.1 No frame errors

- 1. Touch the buttons of **Insertion Lane**, the dialog box will appear.
- 2. Touch the buttons to select/clear lanes. The errors will be inserted to selected (orange) lanes.
- 3. Touch the **Error Insert** icon. The errors will be inserted once by touching the icon

#### 10.1.3.2 No frame frequency

Touch the field to set **Frequency Offset**. If setting a positive value, the frequency will shift higher side.

# Example:

If setting 10 ppm to the frequency offset when Bit Rate is set to OTU3, the bit rate of output signal will be  $\,$ 

 $43\ 018\ 413.559*(1+10*10^{-6}) = 43\ 018\ 843.73 \text{ (kbit/s)}.$ 

# 10.2 No Frame Test



No Frame Test is the test which uses the pattern without frame structure. No Frame Test measures the BER (bit error rate) and the frequency.

# 10.2.1 Ports Setup and Status

The first step in running an application is to set up the port interfaces. This is done on the **Ports Setup** screen, which also provides port status information.


The setup options and status information related to the Ethernet interface are described in a separate section:

• Device Test Setup and Status

# 10.2.2 Test Setup

## 10.2.2.1 Control

When you go to the test setup of the No Frame application, the following screen is displayed.

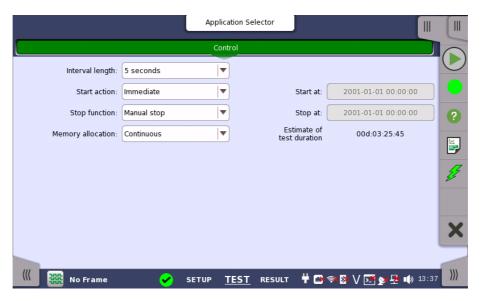

This screen contains the parameters that are generally required in a No Frame test setup.

#### Interval length

Allows you to specify the duration of the intervals. The drop-down menu contains the following values: 1, 2, 5, 10, 15, 30 seconds, 1, 5, 10, 15, 30 min., 1, 2, 4, 6, 12 hours or No Intervals.

#### Start action

Allows you to specify when the measurement is started.

- If **Immediate** is selected, the measurement starts when you touch the **Start** button.
- Selecting **Start at** will enable a delayed start. The start time for a delayed start can be specified in the adjacent **Start at** field.

#### Stop function

Allows you to specify when the measurement ends.

- If **Manual stop** is selected, the measurement will stop immediately when the **Stop** button is touched.
- Selecting **Stop at** will enable the adjacent field, in which you can specify the stop time.
- Selecting **Duration** will allow you to specify a duration time in the adjacent field.

#### Memory allocation

Allows you to specify how the measurement will be stored in the Network Master's memory.

- Use all storage: When Network Master's memory became full with measured data, the whole measurement is stopped.
- Continuous: When Network Master's memory became full with measured data, the oldest records in that memory will be overwritten.

The Network Master's memory size (the file size of measurement results) is 64 Mbytes per one port.

#### Estimate of test duration

Contains an estimation of the time (in days, hours, minutes and seconds) before the whole memory will be filled out by the test. During an ongoing measurement, the estimate will be recalculated periodically.

#### 10.2.3 Test Results

#### 10.2.3.1 Statistics



This screen presents a detailed analysis of the test results. You can choose to view either the results of a specific time interval or the total results from measurement start. The results can be displayed either in table (list) form or as graphs. You can also zoom in on a specific result item and display either a zoom or a histogram.

#### Selecting which results to view

# Selecting the interval time

Touch the **Total** button to switch the total values measured in all interval times. The start time of measurement is displayed on the button.

Touching the button in left side **Back** field shows the measured values in the interval time. The end time of the interval is displayed on the button.

The **Current** button is displayed at left bottom when the measurement is running. Touching the **Current** button shows the measured values in the current interval time. The start time of the current interval is displayed on the button.

The slide-out panel on the left-hand side of the screen contains the following functions:

- Only show intervals that contains errors
- Time format





If you have stopped measurement during the interval time, the measurement results of the current interval are discarded. The log of the current interval is not displayed in **Back** field.

In this case, result data are re-calculated excluding the data of the current interval when the measurement is stopped. This causes that "Count" and "Ratio" displayed after the measurement will be different from that of during measurement. The sum of interval time (multiplied interval time by the number of back logs) may not match the differential time between displayed time at left top and right top after the measurement.

# Selecting type of results

Open the middle drop-down menu in the top row of buttons to select which results you want to display on the screen.

- No frame Alarm/Errors
- No frame Frequency

# Studying a specific result

Touch a specific cell in a result table to zoom in on the corresponding result item. The **Count** and **Ratio** fields are displayed on a **Zoom** tab. A **Time vs. Statistics** tab is also available. Use the **Back** button or touch the zoom filed to return to the statistics screen.

#### Selecting how results are displayed

#### Selecting notation

Select the required notation for the results from the notation drop-down menu.

- Unformatted e.g. 71892
- SI prefix e.g. 71.891 k (k means "kilo")
- Engineering e.g. 71.892E3
- Scientific e.g. 7.1892E4

#### Results

Results are displayed according to your choice.

No frame - Bit error

Alarms/Errors

No frame - Frequency Rx Frequency

# 11 Utility Applications

This chapter describes the applications on the Utilities screen of Application Selector.

The following applications are available:

- <u>Scenario</u>
- GPS
- PDF Viewer
- VIP
- Wireshark

# 11.1 Scenario

Scenario application executes applications according to the description in the scenario file. The contents of the scenario file can be edited by using the *MX100003A MT1000A/MT1100A Scenario Editor Software* on the PC.

If the scenario files are not loaded, only Scenario manager icon appears on the <u>Utilities</u> screen.

If the scenario file has loaded, that icon is displayed on the Utilities screen. The icon of the scenario varies depending on the definition in the scenario.




An example of the scenario icons

Displaying / hiding of the icon can be switched by the Scenario manager screen setting.

# 11.1.1 Scenario Manager



When you go to the test setup of the Scenario Manager, the following screen is displayed.

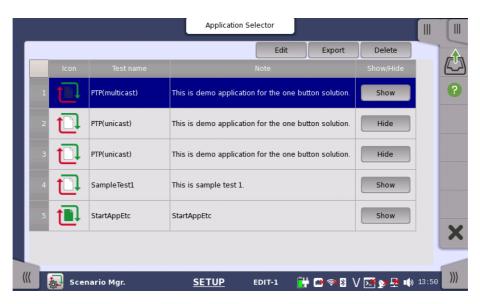

This screen provides following operations:

- Loading a scenario file
- Switching displaying the icon of the scenario or not
- Saving the scenario to file
- Deleting the scenario in the table

# Loading a scenario file

- 1. Touch the on <u>Application Toolbar</u>.
- 2. Select the file using the dialog box.
- 3. Touch Open.
- 4. The contents of the loaded scenario appear in the table. Icon, Test name and Note are defined in the scenario. They cannot be edited on the Scenario

Manager screen.

#### Editing the scenario

- 1. Touch the row of the scenario in the table.
- 2. Touch **Edit** button. The Edit screen appears.
- 3. Touching the **Value** field opens the dialog box.



Touch the **SETUP** at the bottom of the screen to return to the setup screen.

The warning icon appears at right of Resource Assignment when the port defined in the scenario does not exist. In this case, touch the **Value** field and set the available port(s).

#### Exporting the scenario to the file

Allows user to save the edited scenario.

- 1. Touch the row of the scenario in the table.
- 2. Touch **Export** button. The dialog box appears.
- 3. Enter the file name, then touch Save.

#### Deleting the scenario

This operation deletes the scenario in the table.

- 1. Touch the row of the scenario in the table.
- 2. Touch **Delete** button.
- 3. The confirmation dialog box appears. Touch Yes.

#### Hiding/showing the scenario icon


Touch **Hide/Show**button to switch showing or hiding the scenario icon.

Hide: Does not show the scenario icon on the Utilities screen (Displayed currently).

Show: Shows the scenario icon on the Utilities screen (Not displayed currently).

# 11.1.2 Running the Scenario

When scenario is loaded, the icon appears in Scenario of the Utilities screen. If touching the icon, the following screen is displayed.

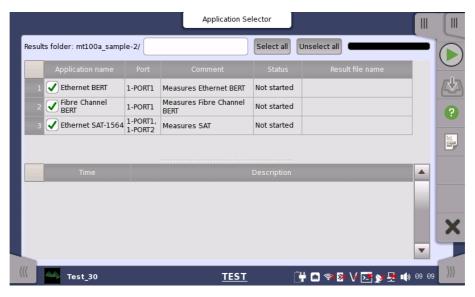

This screen displays the Pass/Fail results and status of the scenario execution. Select the check box for the application name you want to run.

To run the scenario, touch ( ) in the Application Toolbar.

#### Results folder

The destination folder to save the result file is displayed. Touch the field to open the dialog box and select the folder. If selecting **Auto**, the folder name will be generated automatically.

The button to specify the destination drive appears when touching an icon on the Utilities screen after USB flash drive was connected to the Network Master.



Even if **Result folder :Usb** has been set, result files are stored in Internal memory temporary and moved to USB flash drive after the scenario execution has finished.

In cases below, a warning message appears when Network Master attempts to save result files to USB flash drive. If Network Master failed to save result files to USB flash drive, they are stored in Internal memory.


- The USB flash drive was removed.
- The free space of the USB flash drive is insufficient.

#### Application and the result display

In the upper table, Application name, Port number for test use, and comment which are written in the scenario are displayed. If the scenario has executed, the test result and the result file name appear in the each column.

# Status indication during Scenario execution

In the lower table, the status of the application and the time that has occurred are displayed.

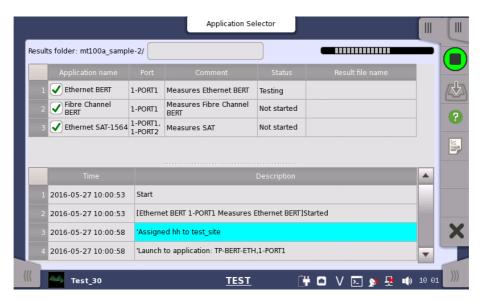

An example of the scenario execution

#### Save results

- 1. Touch the on <u>Application Toolbar</u>
- 2. Set the file name using the dialog box displayed.
- 3. Touch Save button.

# Generating the report

- 1. Touch the on Application Toolbar
- 2. Setup Report Generator using the dialog box. For details, refer to "Report" in <u>Application Toolbar</u>.
- 3. Touch **Generate** button.

# 11.2 GPS



GPS application logs NMEA format data received from the GPS receiver. According to the NMEA format data, the locations of satellite are displayed on the chart.

# 11.2.1 Test Setup

When you go to the test setup of the GPS application, the following screen is displayed.



**Test Time** 

Select the how to stop the test.

- Log until buffer is full: The test stops when the buffer memory is full with the log data. It takes around 13 hours to fill the buffer.
- Timed (or until buffer is full): The test stops when the specified time has elapsed or when the buffer memory has become full.

#### Days, Hours, Minutes

Touch the field to set the test time.

# 11.2.2 Test Results

When you go to the test result of the GPS application, the following screen is displayed.



This screen displays positions of satellite and the logged data. Touch a left top button to switch the result to display.

- Satellites: Displays the satellite positions by the chart and the table.
- Console: Displays the logged data received from GPS receiver.

Touch to start a test.

#### **Current Time**

The time received from GPS appears.

#### **Status**


- Active: Data have been received from GPS receiver.
- Stopped: Data reception from GPS receiver has stopped.

#### Time Left

When **Timed** (or until buffer is full) is selected on the Test setup screen, the remaining test time is displayed.

#### **Satellites**

# **Sky View**

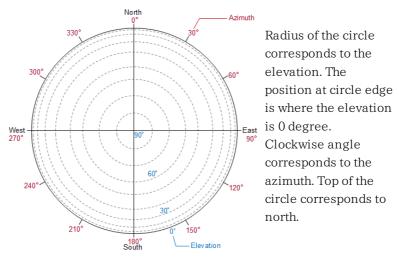

#### Satellites

Data of the received satellites are displayed.

- PRN: Displays the satellite number. (Pseudo-Random Noise sequences)
- Elev: Elevation

- Azim: Azimuth
- SNR: Signal to Noise Ratio

  Depending on the SNR value, the text color varies in green, blue, or red.

#### Console

#### **Text Console**

The logged data in text data are displayed. You can save the logged data by touching  $\nearrow$  icon on the Application Toolbar.



The log data format follows NMEA 0183 rev4.0 that is widely used in the GPS technology.

# 11.3 PDF Viewer



PDF Viewer allows you to view PDF files, for example, Operation Manual, report files created by the Network Master, etc.



## Opening the PDF file

Touching the File Open icon () on Application Toolbar opens the dialog box, where you can select a PDF file you want to open.

#### Scrolling the window

The page number is displayed at bottom center of the screen. Touching < or > next to the page number allows you to move the page.

Right hand scroll bar allows you to scroll the view vertically.



- Zoom in and out
- Link
- Search
- Bookmarks



# 11.4 VIP



VIP (Video Inspection Probe) application allows you to view the edge surface of an optical fiber by using the optional accessory Video Inspection Probe. The captured image and analysis results can be saved to files.

# 11.4.1 Application Toolbar

Icons for VIP use appear on Application Toolbar.

#### Capture



Touch the **Capture** icon to capture the current displaying image. When **Auto Focus** is selected in Setup screen, touching this icon performs autofocus and capturing the image.

#### Press for Live image



Touch the **Press for Live image** icon to display the live image on the screen.

## Analyze Image



Touch the **Analyze Image** icon to start analyzing the captured image.

#### Save



Touch the **Save** icon to save the image and analysis results to files.

#### Load



Touch the **Load** icon to load a following file.

- Image file (\*.png)
- Analysis result file (\*.vipi)

Only **Load Save** icon appears on the Expanded Application toolbar. The VIP images and analysis results can be loaded by touching the icon.



The analysis result file (extension vipi) is compatible with following models.

- MT9083 Series Access Master
- MU909014x, MU909015x μ OTDR Module

# 11.4.2 Connecting the Video Inspection Probe

Connect the USB connector of the Video Inspection Probe to Network Master.



G0382A Autofocus Video Inspection Probe

Replace the adaptor of the Video Inspection Probe with one that matches the optical connector.

For handling the Video Inspection Probe, refer to the operation manual that came with the Video Inspection Probe.

G0382A goes into the standby state unless the operation is performed for 60 seconds. If it enters the standby state, press the measurement button (M) on G0382A or touch the  $\bigcirc$  icon on the Network Master before using it.


Network Master also supports following the Video Inspection Probes.

- OPTION-545VIP USB 200/400x Video Inspect Probe
- G0293A Video Inspection Probe Lite
- G0306A Video Inspection Probe
- G0306B Video Inspection Probe

At the lower left area of the screen, this icon indicates the connection status of the Video Inspection Probe.

## 11.4.3 Test Setup

When you go to the test setup of the VIP application, the following screen is displayed.

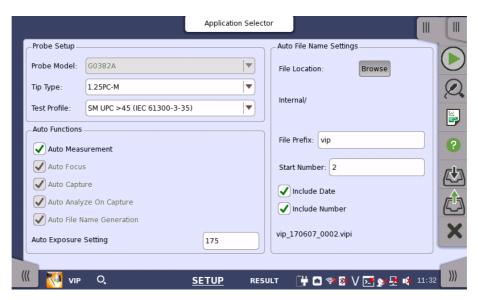

This screen allows you to configure the parameters related to a VIP test.

#### **Probe Setup**

#### Probe Model

When G0306A, G0306B, or G0382A is connected to Network Master, the model is displayed. Otherwise, select the model of the Video Inspection Probe.

#### Tip Type

Select the tip type to use.

#### **Test Profile**

Select the observing fiber type. Limits which will be judged as "Pass" are shown in tables.

In the following tables, "None" means that the fiber has no scratches or defects. "No limit" means that there is no limit to the number of scratches or defects. For example, "None >3  $\,\mu$  m" the fiber has no scratches or defects which is larger than 3  $\,\mu$  m.

• SM PC>45: Single Mode Fiber, Physical Contact, Return Loss is more than 45 dB

Zone Name	Defects	Scratches	
Core	None	None	
Cladding	No limit $<2 \mu$ m 5 from 2 $\mu$ m to 5 $\mu$ m None $>5 \mu$ m	No limit $\leq 3 \mu$ m None $> 3 \mu$ m	
Adhesive	No limit	No limit	
Contact	None ≥10 μm	No limit	

• SM APC: Single Mode Fiber, Angled Physical Contact

Zone Name Defects		Scratches	
Core	None	<b>≤</b> 4	
Cladding	No limit <2 $\mu$ m 5 from 2 $\mu$ m to 5 $\mu$ m None >5 $\mu$ m	No limit	
Adhesive	No limit	No limit	
Contact	None ≥10 μm	No limit	

• SM PC>25: Single Mode Fiber, Physical Contact, Return Loss is more than 25 dB.

Zone Name	Defects	Scratches	
C	2 ≤3 μm	2 ≤3 μm	
Core	None > 3 $\mu$ m	None > 3 $\mu$ m	
Cladding	No limit $\leq 2 \mu$ m 5 from 2 $\mu$ m to 5 $\mu$ m None >5 $\mu$ m	No limit ≤3 μ m 3 > 3 μ m	
Adhesive	No limit	No limit	
Contact	None ≥10 μm	No limit	

· · · · · · · · · · · · · · · · · · ·					
Zone Name	Defects	Scratches			
	4 ≤5 μm	No limit ≤3 μ m			
Core	None >5 $\mu$ m	$0 > 5 \mu \mathrm{m}$			
Cladding	15 trom <2 // m to <5 // m	No limit ≤5 μ m 0 > 5 μ m			
Adhesive	No limit	No limit			
Contact	None ≥10 μm	No limit			

- MM PC 50.0: Multi-Mode Fiber, Physical Contact, Core diameter 50  $\mu$  m

Limits are the same as MM PC 62.5.

#### **Auto Functions**

#### **Auto Measurement**

When it is recognized that the fiber edge surface is in the image, Auto Focus, Auto Capture, Auto Analyze On Capture, and saving a file are performed automatically.

Auto Measurement is available for G0306A, G0306B, and G0382A.

#### **Auto Focus**

When it is recognized that the fiber edge surface is in the image, autofocus and capture are performed.



If it cannot be recognized that the fiber edge surface is in the image, VIP may not perform autofocus. In that case, get a focus using < or > button on G0382A.

**Auto Focus** is available for G0382A.

#### **Auto Capture**

When it is recognized that the fiber edge surface is in focus, the image is captured automatically.

Auto Capture is available for G0306A, G0306B, and G0382A.

#### Auto Analyze On Capture

Executes Auto Analyze when the image has been captured.

#### Auto File Name Generation

File name is generated automatically when saving the file. Selecting the check box activates **Auto File Name Settings**.

#### **Auto Exposure Setting**

The value can be set when **Auto Measurement** is selected. Set target value of auto exposure in the range of 160 to 190.

#### Auto File Name Settings

#### **File Location**


Touch the Browse button to select a folder to save files.

#### File Prefix

Touch the field and set the string used in the file name. Touching **Quick Matrix** at bottom of **File Prefix Edit** dialog box opens **Input Text** dialog box to register string.



To register string, touch a blank button. Touching labeled button adds the string to file name.

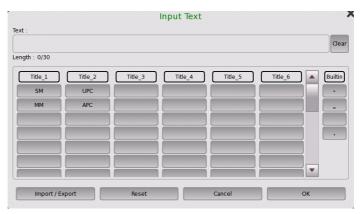

- Import/Export: Saves string on buttons to a file or loads string from a file.
- Reset: Erases string on all buttons.
- Cancel: Discards edited string and closes dialog box.
- OK: Applies edited string and closes dialog box.

#### Start Number

Touch the field and set the start number of value used in the file name.

# Include Date

If selecting the check box, date will be appended in the file name.


# Include Number

If selecting the check box, a file number will be appended in the file name.

The file name to be generated first is displayed under this item.

#### 11.4.4 Test Results

When you go to the test results of the VIP application, the following screen is displayed.

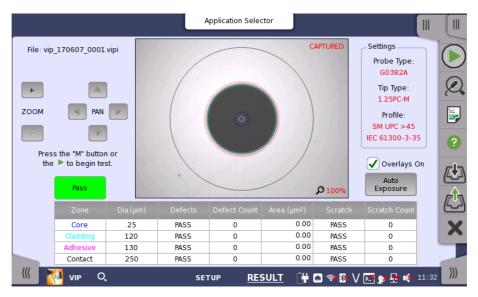

This screen displays the image captured by the Video Inspection Probe. Analyzing an image of the fiber edge surface is also available.

#### Analyzing an image

When Auto Capture is not selected, follow the procedure below:

- 1. Touch .
- 2. Touch 2.

After the analysis finishes normally, the results appear in the table. If **Overlays On** is selected, the circles showing the analysis area appear.

3. Adjust image position by touching **Zoom** buttons or **PAN** buttons.



When using G0382A, pressing the M button on VIP starts capturing and analyzing an image.

The items in tables are:

- [Zone]: Name of the analysis area
- $\bullet~$  [Dia. (  $\mu$  m)]: Measurement result of the diameter
- [Defects]: Judgement result of defects
- [Defect Count]: Number of measured defects
- [Area  $(\mu \text{ m}^2)$ ]: Total area of the detected defects
- [Scratch]: Judgement result of scratches
- [Scratch Count]: Number of measured scratches

# Overlays On

If selecting the check box, the circles showing the analysis area appear.

#### **Auto Exposure**

This button appears when Probe Model is G0382A.

Touching the button maintains the image brightness at appropriate level by adjusting exposure.

# 11.5 Wireshark







Wireshark allows users to analyze captured Ethernet frames.

Wireshark is used to analyze the capture files. There are some restrictions on functions because Ethernet interface is not connected. For example, "Capture" and "Telephony" menus are not available.

When Wireshark is started, the following screen appears.

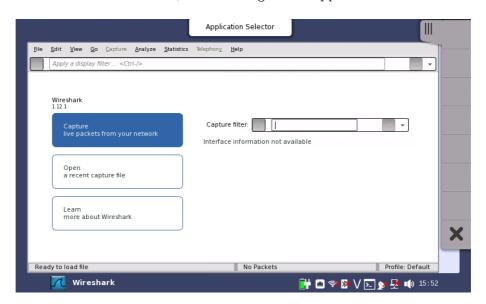


To open a file, touch the "File" menu, and then touch "Open".

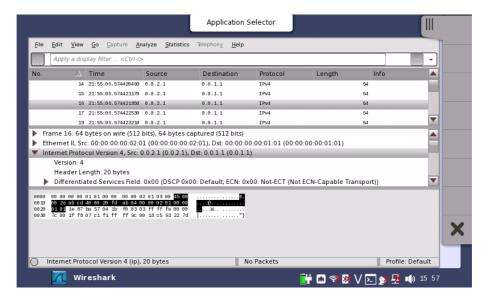

## To analyze eCPRI packets and IEEE 1914.3 packets on PC

To analyze eCPRI packets and IEEE 1914.3 packets using Wireshark installed on the PC, copy lua files to PC following the procedure below.

- 1. Connect USB flash drive to the Network Master.
- 2. Touch File Manager ( on Instrument toolbar.
- 3. Open /Internal/windowsinstaller/wireshark folder.

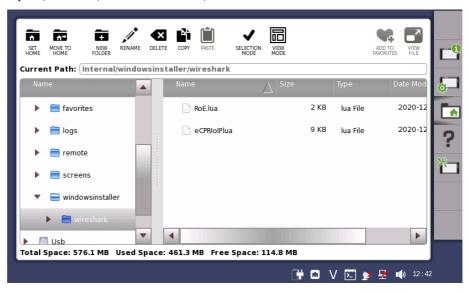

- 4. Copy RoE.lua and eCPRIoIP.lua to USB flash drive.
- 5. Remove USB flash drive from the Network Master and connect it to PC.
- Copy RoE.lua and eCPRIoIP.lua to the following folder.
   C:\Program Files\Wireshark\plugins\(\text{(Version number)}\)
   Example: C:\Program Files\Wireshark\plugins\(2.4.4\)

# 12 Specifications

# 12.1 MT1100A

This section contains specifications for the Network Master Flex, MT1100A (mainframe).

# 12.1.1 Configuration

-	Main	Frame	-
---	------	-------	---

MT1100A Network Master Flex

- Standard Accessories -

Shield Power Cord (13A)

B0699A Soft case Z1746A Stylus

Z1861A Carrying Strap

Z1862A Module Combination Kit

Z1870A Utilities ROM\*

W3734AE MT1100A Quick Reference Guide

TGG-1ET140008 Laser Safety \*: Following manuals are stored:

- W3735AE MT1100A Network Master Flex Operation Manual
- W3736AE MT1000A Network Master Pro MT1100A Network Master Flex Remote Scripting Operation Manual

#### - Options -

MT1100A-x03	Connectivity for WLAN/Bluetooth
MT1100A-ES210	2 Years Extended Warranty Service
MT1100A-ES310	3 Years Extended Warranty Service
MT1100A-ES510	5 Years Extended Warranty Service

- Optional Accessories -

B0692A ESD box B0717A Hard case

G0306B Video Inspection Probe

G0325A GPS receiver

G0382A Autofocus Video Inspection Probe

J1665B CFP2 - CFP4 Adaptor
J1686B CFP2 - QSFP28 Adaptor
J1756A CFP2 - QSFP28 Adaptor
W3735AE MT1100A Operation Manual

Z1871A Utilities in USB stick

- Modules -

MU110001A Battery and AC Power Supply Module MU110002A AC only High Power Supply Module

MU110010A 10G Multirate Module
MU110011A 100G Multirate Module
MU110012A 40/100G Module CFP2
MU110013A 40/100G Advanced Module

#### 12.1.2 Electrical Performance and Function

**External Interfaces** Internal Clock Accuracy ±4.6 ppm or less, STRATUM 3

compliant

Ref Clock Input BITS (DS1 1.544 Mbit/s), SETS (E1 2.048 Mbit/s),

2MHz Clock, 10MHz Clock ITU-T G.703 compliant Connector BNC Jack Range  $\pm 100 \, \mathrm{ppm}$ 

Serial Interface D-sub 15 pin connector Sync Output For the future use Sync Input For the future use

Service interface USB (A x 2, mini B x 1 port, Revision 2.0)

RJ45 Ethernet (10/100/1000 BASE-T) WLAN (2.4GHz IEEE802.11b/g/n)

Bluetooth (BT2.0+EDR)

AUX Connector (for connection of optional G0325A

GPS receiver)

Remote Control Ethernet, GPIB (USB-GPIB)

**Input device** Power button, Touch panel

LCD 12.1 inch display with SVGA resolution (800x600 pixels).

LED On, Standby, Charge

**Speaker** Built-in monaural speaker

Storage Memory 4GB for User use

Module Interface Up to 2 modules (Excluding Network Master Flex, Power Supply Module)

# 12.1.3 Environment Performance

**Operating**  $0^{\circ}\text{C to } +40^{\circ}\text{C}, \leq 80\%\text{RH (non-condensing)}$ 

temperature and humidity range

Storage temperature  $-20^{\circ}\text{C to } +60^{\circ}\text{C}, \leq 80\%\text{RH (non-condensing)}$ 

and humidity range EMC

EN61326-1 and EN61000-3-2

**LVD** EN61010-1

Wireless Certification For countries and regions permitting WLAN use, refer to the following URL.

https://www.anritsu.com/en-us/test-

measurement/support/downloads/brochures-datasheets-and-

catalogs/dwl16690

## 12.1.4 Mechanical Performance

Size  $224.5(H) \times 320.0 \text{ (W)} \times 46.0(D) \text{ mm (Excluding projections)}$ 

Mass 2.5 kg max.

# 12.2 MU110001A, Battery and AC Power Supply Module

# 12.2.1 Configuration

	- Main Frame -	Q'ty
MU110001A	Battery and AC Power Supply Module $$	1
	- Standard Accessories -	Q'ty
G0327A	Li-Ion Battery	2
	- Options -	
MU110001A-ES210	2 Years Extended Warranty Service	
MU110001A-ES310	3 Years Extended Warranty Service	
MU110001A-ES510	5 Years Extended Warranty Service	
	- Optional Accessories -	
Z1860A	Battery Charger	

# 12.2.2 Environment Performance

Power Voltage AC 100 V to 240 V

 $\begin{array}{ll} \text{Frequency} & 50 \text{ to } 60 \text{ Hz} \\ \text{Power} & \\ \text{consumption} & 380 \text{ VA max.} \end{array}$ 

Battery Dedicated 14.4 V Rechargeable smart Li-ion battery

Charging time 6 hours  $+25^{\circ}$ C, typ.

Operating temperature and humidity range

 $0^{\circ}$ C to  $+40^{\circ}$ C,  $\leq 80\%$ RH (non-condensing)

(non-condensing)

Storage temperature and humidity range

-20°C to +60°C, ≤80%RH (Excluding battery and AC adapter) -20°C to +50°C, ≤80%RH (Including battery and AC adapter)

(non-condensing)

EMC EN61326-1 and EN61000-3-2.

**LVD** EN61010-1.

Modules restriction

		Module1				
		None	MU110010A	MU110011A	MU110012A	MU110013A
	None	N/A	✓	*	*	*
	MU110010A		✓	*	*	*
Module 2	MU110011A	*	*	-	-	-
	MU110012A	*	*	-	-	-
	MU110013A	*	*	=	-	-

<sup>✓:</sup> Operable

# 12.2.3 Mechanical Performance

Size  $224.5(H) \times 320.0 \text{ (W)} \times 81.5(D) \text{ mm (Excluding projections)}$ 

Mass 3 kg max. (Excluding battery)

<sup>\*:</sup> Operable when AC power is supplied or two batteries are installed

<sup>-:</sup> Inoperable

# 12.3 MU110002A, AC only High Power Supply Module

# 12.3.1 Configuration

- Main Frame -

MU110002A AC only High Power Supply Module

- Options -

MU110002A-ES210
 2 Years Extended Warranty Service
 MU110002A-ES310
 3 Years Extended Warranty Service
 MU110002A-ES510
 5 Years Extended Warranty Service

## 12.3.2 Environment Performance

Power Voltage AC 100 V to 240 V

Frequency 50 to 60 Hz

Power

consumption

700 VA max.

Operating temperature and humidity range

 $0^{\circ}$ C to +40°C,  $\leq$ 80%RH (non-condensing)

(non-condensing)

Storage temperature and humidity range

-20°C to +60°C, ≤80%RH

(non-condensing)

EMC EN61326-1 and EN61000-3-2.

**LVD** EN61010-1.

 $\begin{tabular}{ll} \textbf{Modules restriction} & None. \end{tabular}$ 

## 12.3.3 Mechanical Performance

Size  $224.5(H) \times 320.0 \text{ (W)} \times 71.5(D) \text{ mm (Excluding projections)}$ 

Mass 3 kg max.

# 12.4 MU110010A, 10G Multirate Module

# 12.4.1 Configuration

- Module -

MU110010A 10G Multirate Module

- Options -

MU110010A-ES210 2 Years Extended Warranty Service
MU110010A-ES310 3 Years Extended Warranty Service
MU110010A-ES510 5 Years Extended Warranty Service

- Basic Option (Software) -

MU110010A-x01 Up to 2.7G Dual Channel MU110010A-x02 FC 1G 2G 4G Dual Channel

- Protocol Option (Software) -

Ethernet:

MU110010A-x11 Ethernet 10G Single Channel MU110010A-x12 Ethernet 10G Dual Channel

MU110010A-x20 TCP Throughput

OTN:

MU110010A-x51 OTN 10G Single Channel
MU110010A-x52 OTN 10G Dual Channel
MU110010A-x61 ODU Multiplexing

MU110010A-x62 ODU Flex

CPRI/OBSAI:

MU110010A-x71 CPRI/OBSAI Up to 5G Dual Channel
MU110010A-x72 CPRI/OBSAI 6G to 10G Single Channel
MU110010A-x73 CPRI/OBSAI 6G to 10G Dual Channel

SDH/SONET:

MU110010A-x81 STM-64 OC-192 Single Channel MU110010A-x82 STM-64 OC-192 Dual Channel

Fibre Channel:

MU110010A-x91 FC 8G 10G Single Channel MU110010A-x92 FC 8G 10G Dual Channel

# 12.4.2 Electrical Performance and Function

\*: The frequency accuracy depends on the accuracy of the MT1100A internal clock or the external clock of MT1100A.

For details, refer to the External Interfaces in MT1100A specifications.

Test signal interface

SFP/SFP+: 2 slots

SFF-8431, SFF-8472 compliant

IEEE 802.3ae-2002, IEEE802.3-2008 compliant

RJ45: 2 sockets

IEEE802.3-2008 10BASE-T, 100BASE-TX, 1000BASE-T compliant

Auto MDI-X

10/100 Mbps Full/Half Duplex, 1000 Mbps Full Duplex

RJ48: 2 sockets

ITU-T G.703 compliant

RTT BANTAM: 4 ports

ANSI DS1.102 compliant

BNC: 4 ports

ITU-T G.703 compliant

Simultaneous Measurement Port

2 ports

Port1: Selectable from RJ-45, RJ-48, SFP/SFP+, BANTAM, or BNC Port2: Selectable from RJ-45, RJ-48, SFP/SFP+, BANTAM, or BNC

# Bit Rate -

Standard	Bit Rate	Interfaces
10BASE-T:	12.5 Mbit/s	RJ-45
100BASE-TX:	125 Mbit/s	RJ-45
1000BASE-T:	1.25 Gbit/s	RJ-45
100BASE-XX:	125 Mbit/s	SFP
1000BASE-XX:	1.25 Gbit/s	SFP
10GBASE-XX:	10.3125 Gbit/s	SFP+
STM-1/OC-3:	155.52 Mbit/s	SFP
STM-4/OC-12:	622.08 Mbit/s	SFP
STM-16/OC-48:	2488.32 Mbit/s	SFP
STM-64/OC-192:	9953.28 Mbit/s	SFP+
OTU1:	2.667 Gbit/s	SFP
OTU2:	10.709 Gbit/s	SFP+
OTU1e:	11.049 Gbit/s	SFP+
OTU2e:	11.096 Gbit/s	SFP+
OTU1f:	11.270 Gbit/s	SFP+
OTU2f:	11.318 Gbit/s	SFP+
1GFC:	1.0625 Gbit/s	SFP
2GFC:	2.125 Gbit/s	SFP
4GFC:	4.25 Gbit/s	SFP
8GFC:	8.5 Gbit/s	SFP+
10GFC:	10.51875 Gbit/s	SFP+
E1:	2.048 Mbit/s	RJ-48/BNC
E3:	34.368 Mbit/s	BNC
E4:	139.264 Mbit/s	BNC
DS1:	1.544 Mbit/s	RTT Bantam
DS3:	44.736 Mbit/s	BNC
STM-1e/STS-3:	155.520 Mbit/s	BNC
CPRI1:	614.4 Mbit/s	SFP
CPRI2:	1228.8 Mbit/s	SFP
CPRI3:	2457.6 Mbit/s	SFP
CPRI4:	3072.0 Mbit/s	SFP
CPRI5:	4915.2 Mbit/s	SFP+
CPRI6:	6144.0 Mbit/s	SFP+
CPRI7:	9830.4 Mbit/s	SFP+
CPRI8:	10137.6 Mbit/s	SFP+
OBSAI 1x:	768 Mbit/s	SFP
OBSAI 2x:	1536 Mbit/s	SFP
OBSAI 4x:	3072 Mbit/s	SFP
OBSAI 8x:	6144 Mbit/s	SFP+

Bit rate offset range of  $\ Relative \ to \ \underline{Bit \ Rate}:$ 

transmitter -

PDH/DSn: -125 to +125 ppm, 1 ppm step SDH/SONET: -200 to +200 ppm, 0.1 ppm step OTN: -200 to +200 ppm, 0.1 ppm step Ethernet: -200 to +200 ppm, 0.1 ppm step Fibre Channel: -200 to +200 ppm, 0.1 ppm step CPRI/OBSAI: -100 to +100 ppm, 1 ppm step

Bit rate tolerance of

Relative to **Bit Rate**:

receiver -

 $\begin{array}{lll} {\rm PDH/DSn:} & & -150 \ {\rm to} \ +150 \ {\rm ppm} \\ {\rm SDH/SONET:} & & -200 \ {\rm to} \ +200 \ {\rm ppm} \\ {\rm OTN:} & & -200 \ {\rm to} \ +200 \ {\rm ppm} \\ {\rm Ethernet:} & & -200 \ {\rm to} \ +200 \ {\rm ppm} \\ {\rm Fibre \ Channel:} & & -200 \ {\rm to} \ +200 \ {\rm ppm} \\ {\rm CPRI/OBSAI:} & & -100 \ {\rm to} \ +100 \ {\rm ppm} \end{array}$ 

Optical Output
Optical Input
Electrical Output

Bit Rate Refer to Bit Rate.

Bit Rate Refer to Bit Rate.

1.5M/2M Output

1.5M/2M balanced output

Bit Rate Refer to <u>Bit Rate</u>.

Pulse mask ITU-T G.703 compliant

2M to 139/45/156M Output

Bit Rate Refer to <u>Bit Rate</u>.

Pulse mask ITU-T G.703 compliant

Code/Interface 2.048 Mbits/s HDB3, BNC 75  $\Omega$  (Unbalance) 34.368 Mbit/s HDB3, BNC 75  $\Omega$  44.736 Mbit/s B3ZS, BNC 75  $\Omega$ 

139.264 Mbit/s CMI, BNC 75  $\Omega$ 155.52 valign="top" Mbit/s CMI, BNC 75  $\Omega$ 

Return Loss (Unbalance) ITU-T G.703 compliant

10/100 /1000M Output

Bit Rate Refer to <u>Bit Rate</u>.

RJ-45

Code/Interface IEEE802.3-2008 10BASE-T, 100BASE-TX, 1000BASE-T

compliant

**Electrical Input** 

1.5M/2M Input

Code/Interface 1.544 Mbits/s AMI/B8ZS, Bantam 100  $\Omega$ 

(Balance) 2.048 Mbits/s HDB3, RJ-48 120  $\Omega$ 

Bit Rate Refer to <u>Bit Rate</u>.

DS1 Short Haul:

Sensitivity (1.5M) 15 dB linear attenuation, 0 dB cable attenuation, nominal

impedance
TERMINATE:

Up to 36 dB cable attenuation, nominal impedance

DSX MONITOR:

15 dB to 25 dB linear attenuation, nominal impedance

BRIDGED:

Up to 36 dB cable attenuation, high impedance

Sensitivity (2M) TERMINATE:

Up to 40 dB cable attenuation, nominal impedance

MONITOR:

20 dB to 26 dB linear attenuation and up to 6 dB cable

attenuation, nominal impedance

20 dB to 30 dB linear attenuation, 0 dB cable attenuation,

nominal impedance

BRIDGED:

Up to 40 dB cable attenuation, high impedance

#### 2M to 139/45/156M Input

Bit Rate Refer to Bit Rate.

Code/Interface 2.048,34.368 Mbit/s HDB3, BNC 75  $\Omega$  (Unbalance) 44.736 Mbits/s B3ZS, BNC 75  $\Omega$  139.264,155.52 Mbits/s CMI, BNC 75  $\Omega$ 

TERMINATE:

Sensitivity (2.048Mbit/s)

Up to 40 dB cable attenuation, nominal impedance

MONITOR:

20 dB to 26 dB linear attenuation and up to 6 dB cable

attenuation, nominal impedance

20 dB to 30 dB linear attenuation, 0 dB cable attenuation,

nominal impedance

BRIDGED:

Up to 40 dB cable attenuation, high impedance

Sensitivity TERMINATE:

(34.368/44.736 Mbit/s) Up to 12.0 dB cable attenuation, nominal impedance

MONITOR:

20 dB linear attenuation and up to 12 dB cable attenuation,

 $nominal\ impedance$ 

 $20\ dB$  to  $30\ dB$  linear attenuation ,  $0\ dB$  cable attenuation,

nominal impedance

Sensitivity TERMINATE:

(139.264/155.52Mbit/s) Up to 12.0 dB cable attenuation, nominal impedance

MONITOR:

20 dB linear attenuation and up to 12 dB cable attenuation,

nominal impedance

Return Loss ITU-T G.703 compliant

10/100 /1000M Input

Bit Rate Refer to Bit Rate.

RJ-45

Code/Interface IEEE802.3-2008 10BASE-T, 100BASE-TX, 1000BASE-T

compliant

**Jitter generation** Optical interface: ITU-T G.783 compliant

Electrical interface: ITU-T G.823, ANSI T1.403, ANSI T1.404 compliant

**Jitter Tolerance** 

Optical interface: ITU-T G.825, ITU-T G.8251 compliant Electrical interface: ITU-T G.823, ITU-T G.824 compliant

**Rx Bit Rate counter** Bit Rate Refer to Bit Rate.

Accuracy According to the <u>Internal Clock</u> of MT1100A.

**Tx Ref Clock Output** Selectable from 1/16, or 1/64 against the <u>Bit Rate</u> of the

Lane. (Available only when an SFP+ port is selected.)

Level Min: 250 mVp-p Max: 550 mVp-p

Termination 50  $\Omega/AC$  (Single ended)

Connector SMA female

## 12.4.3 Environment Performance

Operating 0°C to +40°C, ≤80%RH (non-condensing)

temperature and humidity range

(non-condensing)

Storage temperature and humidity range

-20°C to +60°C, ≤80%RH (non-condensing)

Laser Safety IEC 60825-1:2007 Class 1

FDA 21 CFR 1040.10 and 1040.11 except for deviations pursuant to [Laser

Notice No.50] dated 2007-June-24.

EMC EN61326-1 and EN61000-3-2.

**LVD** EN61010-1

## 12.4.4 Mechanical Performance

Size  $224.5 \text{ (H)} \times 320 \text{ (W)} \times 36.2 \text{ (D)} \text{ mm (Excluding projections)}$ 

Mass 1.4 kg max.

# 12.5 MU110011A, 100G Multirate Module

# 12.5.1 Configuration

- Module -

MU110011A 100G Multirate Module

- Options -

MU110011A-ES210 2 Years Extended Warranty Service
 MU110011A-ES310 3 Years Extended Warranty Service
 MU110011A-ES510 5 Years Extended Warranty Service

- Basic Option (Software) -

MU110011A-x01 Up to 10G Single Channel MU110011A-x03 Up to 10G Dual Channel

- Protocol Option (Software) -

Fibre Channel:

MU110011A-x04 Up to 10G FC Dual Channel MU110011A-x05 Up to 10G FC Single Channel

Ethernet:

MU110011A-x13 Ethernet 40G Single Channel
MU110011A-x14 Ethernet 40G Dual Channel
MU110011A-x15 Ethernet 100G Single Channel

MU110011A-x20 TCP Throughput

OTN:

MU110011A-x53 OTN 40G Single Channel MU110011A-x54 OTN 40G Dual Channel MU110011A-x55 OTN 100G Single Channel

MU110011A-x61 ODU Multiplexing

MU110011A-x62 ODU Flex

MU110011A-x63 40/100G ODU Multi Stage

CPRI/OBSAI:

MU110011A-x71 CPRI/OBSAI Up to 10G Single Channel MU110011A-x72 CPRI/OBSAI Up to 10G Dual Channel

SDH/SONET:

MU110011A-x83 STM-256 OC-768 Single Channel MU110011A-x84 STM-256 OC-768 Dual Channel

## 12.5.2 Electrical Performance and Function

\*: The frequency accuracy depends on the accuracy of the MT1100A internal clock or the external clock of MT1100A.

For details, refer to the External Interfaces in MT1100A specifications.

Test signal interface

CFP: 1 slot

CFP MSA Hardware Specification, Rev. 1.4 compliant

CFP MSA Management Interface Specification V2.2 R06a compliant (Not

supported to MSA 100GLH) IEEE 802.3ba-2010 compliant

QSFP+: 2 slots

SFF-8436, SFF-8472 compliant IEEE 802.3ba-2010 compliant

SFP/SFP+: 2 slots

SFF-8431, SFF-8472 compliant

IEEE 802.3ae-2002, IEEE802.3-2008 compliant

RJ45: 2 sockets

IEEE802.3-2008 10BASE-T, 100BASE-TX, 1000BASE-T compliant

Auto MDI-X

10/100 Mbps Full/Half Duplex, 1000 Mbps Full Duplex

Simultaneous Measurement Port

2 ports

Port 1: Selectable from CFP, QSFP+, SFP/SFP+, or RJ-45. Port 2: Selectable from QSFP+, SFP/SFP+, or RJ-45.

	*
Bit Rate	-

Standard	Bit Rate	Interfaces
10BASE-T:	12.5 Mbit/s	RJ-45
100BASE-TX:	125 Mbit/s	RJ-45
1000BASE-T:	1.25 Gbit/s	RJ-45
100BASE-XX:	125 Mbit/s	SFP
1000BASE-XX:	1.25 Gbit/s	SFP
10GBASE-XX:	10.3125 Gbit/s	SFP+
40GbE:	10.31250000 Gbit/s × 4 lanes	CFP, QSFP+
100GbE:	10.31250000 Gbit/s × 10 lanes	CFP
STM-1/OC-3:	155.52 Mbit/s	SFP
STM-4/OC-12:	622.08 Mbit/s	SFP
STM-16/OC-48:	2.48832 Gbit/s	SFP
STM-64/OC-192:	9.95328 Gbit/s	SFP+
STM-256/OC-768:	9.95328 Gbit/s × 4 lanes	CFP
OTU1:	2.666057143 Gbit/s	SFP
OTU2:	10.70922532 Gbit/s	SFP+
OTU1e:	11.04910714 Gbit/s	SFP+
OTU2e:	11.09572785 Gbit/s	SFP+
OTU1f:	11.27008929 Gbit/s	SFP+
OTU2f:	11.31764241 Gbit/s	SFP+
OTU4:	11.18099736 Gbit/s × 10 lanes	CFP
OTU3:	10.75460339 Gbit/s × 4 lanes	CFP, QSFP+
OTU3e1:	11.14274364 Gbit/s × 4 lanes	CFP, QSFP+
OTU3e2:	11.14583889 Gbit/s × 4 lanes	CFP, QSFP+
1GFC:	1.0625 Gbit/s	SFP
2GFC:	2.125 Gbit/s	SFP
4GFC:	4.25 Gbit/s	SFP
8GFC:	8.5 Gbit/s	SFP+
10GFC:	10.51875 Gbit/s	SFP+
CPRI1:	614.4 Mbit/s	SFP
CPRI2:	1228.8 Mbit/s	SFP
CPRI3:	2457.6 Mbit/s	SFP
CPRI4:	3072.0 Mbit/s	SFP
CPRI5:	4915.2 Mbit/s	SFP+
CPRI6:	6144.0 Mbit/s	SFP+
CPRI7:	9830.4 Mbit/s	SFP+
CPRI8:	10137.6 Mbit/s	SFP+
OBSAI 1x:	768 Mbit/s	SFP
OBSAI 2x:	1536 Mbit/s	SFP
OBSAI 4x:	3072 Mbit/s	SFP
OBSAI 8x:	6144 Mbit/s	SFP+

## Connector

CFP: 104 Pin electrical connector (4, 10 Lane support)

QSFP+: 38 Pin electrical connector (4 Lane support)

SFP, SFP+: 20 Pin electrical connector RJ-45: 8 Pin electrical connector

#### 

Green: Activity (Blink)

Frequency variable

range -

 SDH/SONET:
 -200 to +200 ppm, 0.1 ppm step

 OTN:
 -200 to +200 ppm, 0.1 ppm step

 Ethernet:
 -200 to +200 ppm, 0.1 ppm step

 Fibre Channel:
 -200 to +200 ppm, 0.1 ppm step

 CPRI/OBSAI:
 -100 to +100 ppm, 1 ppm step

In case of using CFP, the frequency in above range may exceed the specification of CFP.

#### **Electrical Output**

## CFP Data/XData

Phase margin: 380 mUIp-p min.

Threshold margin: 85 mVp-p min. (Differential)

(Condition)

Bit Rate: 10.312500000 Gbit/s, 10.754603390 Gbit/s, 11.142743644

Gbit/s, 11.145838894 Gbit/s

Pattern: PRBS31 BER: 1.0E-12

Measurement Equivalent to IEEE 802.3ba Annex 83B

system:

## QSFP+ Data/XData

Phase margin: 380 mUIp-p min.

Threshold margin: 85 mVp-p min. (Differential)

(Condition)

Bit Rate: 10.312500000 Gbit/s, 10.754603390 Gbit/s, 11.142743644

 $Gbit/s,\,11.145838894\,Gbit/s$ 

Pattern: PRBS31 BER: 1.0E-12

Measurement Equivalent to IEEE 802.3ba Annex 83B

system:

## CFP Reference Clock -

Level Min: 175 mVp-p

Max: 25 mVp-p

Jitter:  $\leq$  35 ps p-p

(Condition)

Single ended swing

Bit Rate:  $9.9532800000 \; \text{Gbit/s*1/16}, \; 11.145838894 \; \text{Gbit/s*1/16}$ 

## 10/100 /1000M Output

Bit Rate: Refer to Bit Rate.

RJ-45

Code/Interface: IEEE802.3-2008 10BASE-T, 100BASE-TX, 1000BASE-T

compliant

**Electrical Input** 

**Optical Input SFP** 

10/100 /1000M Input

Bit Rate Refer to Bit Rate.

Code/Interface RJ-45

IEEE802.3-2008 10BASE-T, 100BASE-TX, 1000BASE-T

compliant

**Optical Output SFP** Power Depends on the optical modules (SFP, SFP+).

Code/Interface NRZ LC(SMF/MMF) SFP(+) module is replaceable.

Source type/modulation Depends on the optical modules (SFP, SFP+). Wavelength Depends on the optical modules (SFP, SFP+).

Bit Rate Refer to <u>Bit Rate</u>.

Minimum Optical Depends on the optical modules (SFP, SFP+).

Sensitivity

Wavelength Range of Depends on the optical modules (SFP, SFP+).

Receiver

Level

Wavelength Depends on the optical modules (SFP, SFP+).

Jitter GenerationOptical interface:ITU-T G.783 compliantJitter ToleranceOptical interface:ITU-T G.825, ITU-T G.8251 compliant

**Tx Ref Clock Output** Selectable from 1/16, or 1/64 against the <u>Bit Rate</u> of the

Lane.

(RJ-45 port cannot be selected). Min: 250 mVp-p

Max: 550 mVp-p

Termination 50  $\Omega/AC$  (Single ended)

Connector SMA female

**AUX Input** Factory use only.

Termination 50  $\Omega/AC$  (Single ended)

Connector SMA female

## 12.5.3 Environment Performance

Operating temperature and humidity range

 $0^{\circ}$ C to +40°C, 20 to 80%RH (non-condensing)

(non-condensing)

Storage temperature and humidity range

-20°C to +60°C, 20 to 80%RH (non-condensing)

Laser Safety IEC 60825-1:2007 Class 1M

CFP: 100GBASE-SR10 QSFP+: 40GBASE-SR4

FDA 21 CFR 1040.10 and 1040.11

except for deviations pursuant to [Laser Notice No.50] dated 2007-June-24.

IEC 60825-1:2007 Class 1

CFP: 100GBASE-LR4, 40GBASE-LR4, 40GBASE-FR

QSFP+: 40GBASE-LR4

SFP+: 10GBASE-LR, 10GBASE-ER, 10GBASE-ZR

SFP: 4G FC(SX), 4G FC(LX), 4G FC(EX),

OC-48 LR-1/STM L-16.1, OC-48 LR-2/STM L-16.2, 000BASE-SX, 1 1000BASE-LX, 1000BASE-ZX, 100 BASE-FX, 100BASE-LX

FDA 21 CFR 1040.10 and 1040.11

except for deviations pursuant to [Laser Notice No.50] dated 2007-June-24.

EMC EN61326-1 and EN61000-3-2.

**LVD** EN61010-1

## 12.5.4 Mechanical Performance

Size  $224.5(H) \times 320 (W) \times 59.3 (D) \text{ mm (Excluding projections)}$ 

Mass 3 kg max. (Excluding optical transceivers)

# 12.6 MU110012A, 40/100G Module CFP2

MU110012A-x14

MU110012A-x15

# 12.6.1 Configuration

MU110012A	40/100G Module CFP2
	- Options -
MU110012A-ES210	2 Years Extended Warranty Service
MU110012A-ES310	3 Years Extended Warranty Service
MU110012A-ES510	5 Years Extended Warranty Service
	- Basic Option (Software) -
MU110012A-x01	Up to 10G Single Channel
MU110012A-x03	Up to 10G Dual Channel
	- Protocol Option (Software) -
Fibre Channel:	
MU110012A-x04	Up to 10G FC Dual Channel
MU110012A-x05	Up to 10G FC Single Channel
Ethernet:	
MU110012A-x13	Ethernet 40G Single Channel

Ethernet 40G Dual Channel

Ethernet 100G Single Channel

- Module -

MU110012A-x16 Ethernet 100G Dual Channel OTN: MU110012A-x53 OTN 40G Single Channel MU110012A-x54 OTN 40G Dual Channel

MU110012A-x55 OTN 100G Single Channel MU110012A-x56 OTN 100G Dual Channel

MU110012A-x61 **ODU** Multiplexing

MU110012A-x62 ODU Flex

MU110012A-x63 40/100G ODU Multi Stage

CPRI/OBSAI:

MU110012A-x71 CPRI/OBSAI Up to 10G Single Channel MU110012A-x72 CPRI/OBSAI Up to 10G Dual Channel

SDH/SONET:

MU110012A-x83 STM-256 OC-768 Single Channel MU110012A-x84 STM-256 OC-768 Dual Channel

## 12.6.2 Electrical Performance and Function

\*: The frequency accuracy depends on the accuracy of the MT1100A internal clock or the external clock of MT1100A.

For details, refer to the External Interfaces in MT1100A specifications.

Test signal interface

CFP2: 2 slots

CFP MSA CFP2 Hardware Specification, Rev. 1.0 compliant

CFP MSA Management Interface Specification V2.2 R06a compliant (Not

supported to MSA 100GLH) IEEE 802.3ba-2010 compliant

CXP: 2 slots

InfiniBand Architecture 1.2.1 Annex A6: CXP compliant

SFF-8642, IEEE 802.3ba-2010 compliant

QSFP+: 2 slots

SFF-8436, SFF-8472 compliant IEEE 802.3ba-2010 compliant

Simultaneous Measurement Port

2 ports

Port 1: Selectable from CFP2, CXP, or QSFP+. Port 2: Selectable from CFP2, CXP, or QSFP+.

Bit Rate -

Standard	Bit Rate	Interfaces
40GbE:	10.31250000 Gbit/s × 4 lanes	QSFP+
100GbE:	10.31250000 Gbit/s × 10 lanes	CXP
100GbE:	25.781250000 Gbit/s × 4 lanes	CFP2
OTU4:	27.952493392 Gbit/s × 4 lanes	CFP2
OTU3:	10.754603390 Gbit/s × 4 lanes	QSFP+
OTU3e1:	11.142743644 Gbit/s × 4 lanes	QSFP+
OTU3e2:	11.145838894 Gbit/s × 4 lanes	QSFP+

Connector

CFP2: 104 Pin electrical connector (4 Lane support)

CXP: 84 Pin electrical connector (10 Lane support) QSFP+: 38 Pin electrical connector (4 Lane support)

Port Status LED Yellow: Link

Green: Activity (Blink)

Frequency variable

range -

SDH/SONET: -200 to +200 ppm, 0.1 ppm step

OTN: -200 to +200 ppm, 0.1 ppm stepEthernet: -200 to +200 ppm, 0.1 ppm step

In case of using CFP2, the frequency in the above range may exceed the specification of CFP2.

## Electrical Output

#### CFP2 Data/XData

Phase margin: 300 mUIp-p min.

Threshold margin: 85 mVp-p min. (Differential)

(Condition)

Bit Rate: 25.781250000 Gbit/s, 27.952493392 Gbit/s

Pattern: PRBS31 BER: 1.0E-12

Measurement Equivalent to OIF CEI-28G-SR

system:

## CXP Data/XData

Phase margin: 380 mUIp-p min.

Threshold margin: 85 mVp-p min. (Differential)

(Condition)

Bit Rate: 10.312500000 Gbit/s

Pattern: PRBS31 BER: 1.0E-12

Measurement Equivalent to IEEE 802.3ba Annex 83B

system:

## QSFP+ Data/XData

Phase margin: 380 mUIp-p min.

Threshold margin: 85 mVp-p min. (Differential)

(Condition)

Bit Rate: 10.312500000 Gbit/s, 10.754603390 Gbit/s,

11.142743644 Gbit/s, 11.145838894 Gbit/s

Pattern: PRBS31 BER: 1.0E-12

Measurement Equivalent to IEEE 802.3ba Annex 83B

system:

## CFP2 Reference Clock -

Level Min: 175 mVp-p

Max: 325 mVp-p

Jitter:  $\leq$  35 ps p-p

(Condition)

Single ended swing

25.781250000 Gbit/s \*1/40, 27.952493392 Gbit/s \*1/40, Bit Rate:

 $28.200\ 960\ 000\ Gbit/s*1/40$ 

Selectable from 1/40, or 1/160 against the <u>Bit Rate</u> of the lane.

100GbE:  $25.781250000 \text{ Gbit/s} \times 4 \text{ lanes}$  CFP2 OTU4:  $27.952493392 \text{ Gbit/s} \times 4 \text{ lanes}$  CFP2

Level Min: 250 mVp-p

Max: 550 mVp-p

Termination 50  $\Omega/AC$  (Single ended)

Connector SMA female

**AUX Input** Factory use only.

Termination 50  $\Omega/AC$  (Single ended)

Connector SMA female

## 12.6.3 Environment Performance

**Operating**  $0^{\circ}\text{C to } +40^{\circ}\text{C}, 20 \text{ to } 80\%\text{RH (non-condensing)}$ 

temperature and humidity range

(non-condensing)

Storage temperature and humidity range

-20°C to +60°C, 20 to 80%RH (non-condensing)

Laser Safety IEC 60825-1:2007 Class 1M

CXP: 100GBASE-SR10 QSFP+: 40GBASE-SR4

FDA 21 CFR 1040.10 and 1040.11

except for deviations pursuant to [Laser Notice No.50] dated 2007-June-24.

IEC 60825-1:2007 Class 1

CFP2: 100GBASE-LR4
QSFP+: 40GBASE-LR4

FDA 21 CFR 1040.10 and 1040.11

except for deviations pursuant to [Laser Notice No.50] dated 2007-June-24.

EMC EN61326-1 and EN61000-3-2.

**LVD** EN61010-1

## 12.6.4 Mechanical Performance

Size  $224.5(H) \times 320 (W) \times 59.3(D) \text{ mm (Excluding projections)}$ 

Mass 3 kg max. (Excluding optical transceivers)

# 12.7 MU110013A, 40/100G Advanced Module

## 12.7.1 Configuration

- Module -

MU110013A 40/100G Advanced Module

- Options -

MU110013A-ES210 2 Years Extended Warranty Service MU110013A-ES310 3 Years Extended Warranty Service MU110013A-ES510 5 Years Extended Warranty Service

- Basic Option (Software) -

MU110013A-x01 Up to 10G Single Channel MU110013A-x03 Up to 10G Dual Channel

- Protocol Option (Software) -

Fibre Channel:

MU110013A-x04 Up to 10G FC Dual Channel MU110013A-x05 Up to 10G FC Single Channel

No Frame:

MU110013A-x08 4x 25G/28G BERT

Ethernet:

MU110013A-x13 Ethernet 40G Single Channel
MU110013A-x14 Ethernet 40G Dual Channel
MU110013A-x15 Ethernet 100G Single Channel
MU110013A-x16 Ethernet 100G Dual Channel
MU110013A-x23 RS-FEC for 100GBASE-SR4

OTN:

MU110013A-x53 OTN 40G Single Channel
MU110013A-x54 OTN 40G Dual Channel
MU110013A-x55 OTN 100G Single Channel
MU110013A-x56 OTN 100G Dual Channel

MU110013A-x62 ODU Flex

MU110013A-x63 40/100G ODU Multi Stage

CPRI/OBSAI:

MU110013A-x71 CPRI/OBSAI Up to 10G Single Channel MU110013A-x72 CPRI/OBSAI Up to 10G Dual Channel

SDH/SONET:

MU110013A-x83 STM-256 OC-768 Single Channel MU110013A-x84 STM-256 OC-768 Dual Channel

## 12.7.2 Electrical Performance and Function

\*: The frequency accuracy depends on the accuracy of the MT1100A internal clock or the external clock of MT1100A.

For details, refer to the External Interfaces in MT1100A specifications.

Test signal interface

CFP2: 2 slots

CFP MSA CFP2 Hardware Specification, Rev. 1.0 compliant

CFP MSA Management Interface Specification V2.2 R06a compliant (Not

supported to MSA 100GLH) IEEE 802.3ba-2010 compliant

CXP: 2 slots

InfiniBand Architecture 1.2.1 Annex A6: CXP compliant

SFF-8642, IEEE 802.3ba-2010 compliant

QSFP+: 2 slots

SFF-8436, SFF-8472 compliant IEEE 802.3ba-2010 compliant

Simultaneous **Measurement Port** 

2 ports

Port 1: Selectable from CFP2, CXP, or QSFP+. Port 2: Selectable from CFP2, CXP, or QSFP+.

Bit Rate

Standard	Bit Rate	Interfaces
40GbE:	10.31250000 Gbit/s × 4 lanes	QSFP+
100GbE:	10.31250000 Gbit/s × 10 lanes	CXP
100GbE:	25.781250000 Gbit/s × 4 lanes	CFP2
OTU4:	27.952493392 Gbit/s × 4 lanes	CFP2
OTU3:	10.75460339 Gbit/s × 4 lanes	QSFP+
OTU3e1:	11.14274364 Gbit/s × 4 lanes	QSFP+
OTU3e2:	11.14583889 Gbit/s × 4 lanes	QSFP+

Connector

CFP2: 104 Pin electrical connector (4 Lane support)

CXP: 84 Pin electrical connector (10 Lane support) QSFP+: 38 Pin electrical connector (4 Lane support)

Port Status LED

Yellow: Link

Green: Activity (Blink)

Frequency variable

OTN: -200 to +200 ppm, 0.1 ppm steprange -Ethernet: -200 to +200 ppm, 0.1 ppm step

> In case of using CFP2, the frequency in the above range may exceed the specification of CFP2.

**Electrical Output** 

CFP2 Data/XData

Phase margin: 300 mUIp-p min.

Threshold margin: 85 mVp-p min. (Differential)

(Condition)

Bit Rate: 25.781250000 Gbit/s, 27.952493392 Gbit/s

Pattern: PRBS31 BER: 1.0E-12

Measurement Equivalent to OIF CEI-28G-SR

system:

CXP Data/XData

Phase margin: 380 mUIp-p min.

Threshold margin: 85 mVp-p min. (Differential)

(Condition)

Bit Rate: 10.312500000 Gbit/s

Pattern: PRBS31 BER: 1.0E-12

Measurement Equivalent to IEEE 802.3ba Annex 83B

system:

QSFP+ Data/XData

Phase margin: 380 mUIp-p min.

Threshold margin: 85 mVp-p min. (Differential)

(Condition)

Bit Rate: 10.312500000 Gbit/s, 10.754603390 Gbit/s, 11.142743644

Gbit/s, 11.145838894 Gbit/s

Pattern: PRBS31 BER: 1.0E-12

Measurement Equivalent to IEEE 802.3ba Annex 83B

system:

CFP2 Reference Clock -

Level Min: 175 mVp-p

Max: 325 mVp-p

Jitter:  $\leq 35 \text{ ps p-p}$ 

(Condition)

Single ended swing

Bit Rate: 25.781250000 Gbit/s \*1/40, 27.952493392 Gbit/s \*1/40

Tx Ref Clock Output

Frequency - Selectable from 1/16, or 1/64 against the <u>Bit Rate</u> of the lane.

Selectable from 1/40, or 1/160 against the Bit Rate of the lane.

Level Min: 250 mVp-p

Max: 550 mVp-p

Termination 50  $\Omega$ /AC (Single ended)

Connector SMA female

Sync Clock Output

Frequency Selectable from 1/8, or 1/16 against the <u>Bit Rate</u> of the lane.

100GbE 25.781250000 Gbit/s  $\times$  4 lanes CFP2 OTU4 27.952493392 Gbit/s  $\times$  4 lanes CFP2

Level Min: 150 mVp-p

Max: 650 mVp-p

Termination 50  $\Omega/AC$  (Single ended)

Connector SMA female

AUX Input Factory use only.

Termination 50  $\Omega/AC$  (Single ended)

Connector SMA female

## 12.7.3 Environment Performance

Operating temperature and humidity range

0°C to +40°C, 20 to 80%RH (non-condensing)

(non-condensing)

Storage temperature and humidity range

 $-20^{\circ}\text{C}$  to  $+60^{\circ}\text{C}$ , 20 to 80%RH

(non-condensing)

Laser Safety IEC 60825-1:2007 Class 1M

CFP2: 100GBASE-SR4
CXP: 100GBASE-SR10
QSFP+: 40GBASE-SR4

FDA 21 CFR 1040.10 and 1040.11

except for deviations pursuant to [Laser Notice No.50] dated 2007-June-24.

IEC 60825-1:2007 Class 1

CFP2: 100GBASE-LR4 QSFP+: 40GBASE-LR4

FDA 21 CFR 1040.10 and 1040.11

except for deviations pursuant to [Laser Notice No.50] dated 2007-June-24.

EMC EN61326-1 and EN61000-3-2.

**LVD** EN61010-1

## 12.7.4 Mechanical Performance

Size  $224.5 \text{ (H)} \times 320 \text{ (W)} \times 59.3 \text{ (D)} \text{ mm (Excluding projections)}$ 

Mass 3 kg max. (Excluding optical transceivers)

# 12.8 Measurement Functionality

## 12.8.1 Ethernet Measurements

and indicates the distance from the instrument to the fault.

Transmitter Clock Reference Clock

• Internal clock

- External clock
  - BITS
  - SETS
  - o 2MHz
  - 10MHz
- GPS
- Received clock
- IEEE1588v2

Frequency deviation measurement

Refer to Bit Rate

Frequency Offset  $\pm 200 \text{ ppm } 1 \text{ ppm step}$ 

**SyncE functionality** Specify quality level (QL) of the transmitted Ethernet signal.

SyncE functionality is available when the interface bit rate is 10Gbps or less.

Analysis of QL indicated in received Ethernet signal. An alarm is raised on missing QL indications.

SyncE results

- SSM Rx count and rate
- SSM Tx count
- Indicated QL statistics
- SSF seconds

ESMC messages capture

• ESMC messages can be captured and exported in a Wireshark compatible format.

# IEEE 1588v2 functionality

Timing master/slave

• Each port of the Ethernet interface can act as a timing master or a timing slave independently, except ports for 40GbE and 100GbE.

Supported modes: Multicast (native PTP) and Unicast (G.8265.1). When acting as master in Unicast (G.8265.1) mode, one slave is accepted at a time, other slaves are ignored. If the slave requires 32, 64 or 128 Sync messages per second, the IEEE 1588-2008 paragraph 7.7.2.1 concerning 90% confidence interval is not followed.

Configurable parameters (per port):

- Clock identity
- Port number

- Priority 1
- Priority 2
- Domain number
- Clock class
- Slave only mode
- Time source
- Encapsulation
- Announce receipt timeout
- Clock accuracy
- Clock step mode
- Announce interval
- Syncinterval
- Minimum delay request interval

#### IEEE 1588 clock results:

- Clock state
- Announce count
- Sync count
- Follow-up count
- Delay request count
- Delay response count
- Delay follow-up count
- Peer delay request/response/response-follow-up counters
- Maximum/Minimum/Average offset
- Maximum/Minimum/Average offset deviation
- Maximum/Minimum/Average offset variance
- Maximum/Minimum/Average mean path delay
- Maximum/Minimum/Average peer mean path delay
- Maximum/Minimum/Average path delay variation

#### UTC time offset

 $\bullet~$  With a GPS signal present, the offset from UTC time is calculated.

## Parent clock results:

• Identity and Port number.

#### Grand-master results:

- Identity
- Class
- Accuracy
- Priority 1
- Priority 2
- Announced- and observed offset variance.

## Foreign master clock results (up to five clocks per port):

- Identity
- Port number and Announce count

## The following IEEE 1588 events are counted and logged:

- Clock state transitions
  - State transition events

• Faults and Changes in grand-master clock

IEEE 1588 messages can be captured and exported in a Wireshark compatible format.

WAN

Terminology

SDH, SONET

Transmitter, Receiver Supported encapsulations (frame formats)

- EtherType ll (DIX v.2)
- IEEE 802.3 with 802.2 (LLC1)
- IEEE 802.3 with SNAP

Variable line rate traffic generation

• Up to full line rate

Transmitter Frame size

• From 60 bytes to 16,000 bytes

## Receiver settings

- User-defined expected preamble length (3 to 15 bytes)
- User-defined IFG lower threshold\* (27 bytes)
- User-defined Jumbo frame size upper limit (1519 to 16000 bytes)

\*: Only for Ethernet 10/100/1000 Mbps (cannot use 10Gbps)

## Traffic generator

Line load profile

- Constant: 0.0008% 100%
- Ramp:
  - Line load: start, end, step (0.0001% resolution)
  - Step duration: 3 to 3600 seconds
  - Ramp mode: Keep end, Repeat ramp, Invert ramp

## Frame size profile

- Constant: 60 16000 bytes
- Stepped:
  - Frame size: start, end, step (to 16000 bytes)
  - Duration: 1 to 3600 seconds
- Random:
  - Frame size: start, end (to 16000 bytes), User-defined TCP/UDP frame size upper limit (2048 bytes)

## Traffic duration

- Continuous
- Seconds: 1 to 2,000,000,000 • Frames: 1 to 2,000,000,000

Unicast/broadcast

User-defined traffic mix of unicast and broadcast frames

**VLAN** 

• User-defined VLAN ID and VLAN priority

#### Address

• Configurable IP and Ethernet source and destination addresses (supports IPv4 and IPv6 addressing). Fixed, DHCP, DNS.

#### Flow control

- Generate pause frames
- Respond to pause frames

#### **ARP**

• Answer incoming ARP request On/Off

#### ΙP

- Fixed or incremented IP identifier
- User programmable DSCP/TOS byte

#### UDP/TCP

- User programmable UDP/TCP address
- UDP Checksum: automatic or fixed (null)
- TCP checksum: automatic

#### Status, Results

#### Status

Link status, RF, Signal present, Jabber detected, Frames present, Speed, Full
or half duplex, Interface type, Local clock (Ethernet 1000), Pause capable and
Asymmetric pause request (excluding 10Gbps), Link partner capabilities
(excluding 10Gbps)

## Resolution

• User-defined resolution for statistical measurements: 1, 2, 5, 10, 15, 30s, 1, 5, 15, 30 minutes, 1, 2, 4, 6, 12 hours.

#### Performance statistics

- Maximum/Minimum/Average utilization
- Maximum/Minimum/Average user and total throughput
- Maximum/Minimum/Average frame rate
- Maximum/Minimum/Average frame latency
- Maximum/Minimum/Average packet jitter

#### Frame statistics

- Total frames
- Total valid frames
- Unicast/multicast/broadcast frames
- Pause frame
- VLAN frame
- MPLS frames
- MPLS-TP frame
- PBB frame
- VLAN Max/Min level
- MPLS Max/Min level

- Fragmented frames
- Oversized and Undersized frames
- FCS errored frames
- Error symboled frames (Excluding 10Gbps)
- Code violation frames (For 10Gbps)
- Collisions (10/100 Mbps half duplex)
- Preamble Violations
- IFG violations
- Local Fault (For 10Gbps)
- Remote Fault (For 10Gbps)
- Last Received VLAN 1-8 (ID/Priority)
- Last Received MPLS 1-8 (Label/Priority/TTL)
- B-Tag, I-tag (ID/Priority)

#### Burst statistics

Disabled in case of the OTN client.

- Total frames in burst
- Good/Bursted frames
- Number of Bursts
- Maximum/Minimum/Average burst size

#### Frame distribution statistics

- Total valid/good frames
- 64 127 byte frames
- 128 255 byte frames
- 256 511 byte frames
- 512 1023 byte frames
- 1024 1518 byte frames
- Total number of jumbo frames
- Maximum/Minimum/Average frame size

## Filters

Up to 8 filter conditions can be defined. Each condition can filter on:

- IP or MAC source address
- IP or MAC destination address
- Broadcast address
- IEEE OUI value
- Encapsulation type
- VLAN ID
- VLAN tag priority
- MPLS
- MPLS-TP source/destination MAC
- PBB source/destination MAC
- PBB I-tag/B-tag
- TCP/UDP source and destination port
- User-defined pattern at a defined offset

## Adjustable thresholds

- Utilization
- Throughput

- Errored frames
- Collision rate
- Unicast frames
- Multicast frames
- Broadcast frames
- Pause frames
- Fragmented frames
- Undersized frames
- · Oversized frames
- FCS errored frames
- IFG violations (Ethernet 10/100/1000 Mbps)
- Preamble violations
- Difference between Tx and Rx

## **DHCP**

- Show source IP address assigned by DHCP.
- Show current lease expire time.
- Show IP addresses of primary and secondary DNS server when obtained by DHCP.

## **Error generation**

#### For LAN

- IFG (For 10/100/1000 Mbps), FCS, Preamble, Error symbol/block
- Wrong IP checksum, fragmented IP, Wrong layer4 checksum
- BERT Pattern error, BERT sequence error

#### For WAN

• SDH:

A1A2, B1, B2, MS-REI, B3, HP-REI

• SONET:

A1A2, B1, B2, REI-L, B3, REI-P

## For PCS

• Invalid block type (0x00, 0x2d, 0x33, 0x66), Invalid sync header (00, 11), Invalid alignment marker, BIP error

## Alarm generation

## For LAN

- No link
- Local fault (For 10 Gbps, 25 Gbps, 40 Gbps, 100 Gbps)
- Remote fault

#### For WAN

• SDH:

LOS, LOF, OOF, MS-TIM, MS-AIS, MS-RDI, AU-AIS, AU-LOP, HP-TIM, HP-PLM, HP-UNEQ, HP-RDI, LCD

• SONET:

LOS, LOF, OOF, TIM-S, AIS-L, RDI-L, AIS-P, LOP-P, TIM-P, PLM-P, UNEQ-P, RDI-P, LCD-P

## For PCS

• High BER (For 40 Gbps, 100 Gbps)

### PCS Skew Insertion

Bits:

0 to 4224 (For 100 Gbps Tx lane),

0 to 8448 (For 40 Gbps, 100 Gbps Physical lane)

### **WAN OH Capture**

Item

- SOH/TOH: 64 Frames
- POH: 64 Frames
- Pathtrace:J0/J1/J2 (Displays in ASCII characters)

## Timing

- Single
- Repeat: Update period 1s

## Frame Capture

Buffer size

1, 2, 4, 8, 16, 32, 64, 128 MB for 10M/100M/1000M/10G interface

512 KB for 25G, 40G, and 100G interface

Frame slicing

Whole frame, Top 64 Bytes, Top 128 Bytes

Buffer handling

Stop when full, Overwrite

Capture transmitted frames

on, off

Trigger Type

Manual, Error, Field match

Trigger Position

Top, Middle (Only when Trigger Type is Error/Field match)

Error Type

Any Type, Fragment, Oversize or undersize, Oversize, Undersize, FCS error

#### Transceiver

Module Present

Transceiver Information

 $Alarm, Wavelength \, and \, bit \, rate, \, Compliance, \, Vendor \, Information, \, Output$ 

Control

Power monitor

MDIO analysis

For CFP and CFP2:

NVR1, NVR2, Module FAWS, MW Lane FAWS, CTRL, MDIO Read/Write

I2C analysis

For QSFP+ and QSFP28 Adpt:

Lower, Lower (Lane), Upper (00), Upper (03), Read/Write

Setting

For CFP: VOD, Pre-Emphasis, Rx Equalizer

For CFP2: Attenuation, Pre-Emphasis, Rx Equalizer

#### **BER** test

Generation and detection of test patterns. Count of errors in received test pattern. Pattern generation:

• Unframed (layer 1)

- Framed with Ethernet (MAC) header (layer 2)
- Framed with Ethernet (MAC) header and IP header (layer 3)
- Framed with Ethernet (MAC) header, IP header and UDP/TCP header (layer 4)

#### Test patterns:

- PRBS 9, PRBS 11, PRBS 15, PRBS 20, PRBS 23, PRBS 29, PRBS 31, HF test pattern, CRPAT, JTPAT, SPAT
- User-defined up to 32 bits. Length in step of 1 bit.

Detection of sequence errors and loss of sequence synchronization.

Frame loss count and frame loss seconds.

Throughput measurement: Maximum/Minimum/Average values are presented.

#### Test resolution

- User-defined up to resolution:
  1, 2, 5, 10, 15, 30 sec, 1, 5, 10, 15, 30 minutes, 1, 2, 4, 6, 12 hours
- No intervals

# Throughput measurement

Throughput may be calculated on 6 different layers:

- Utilization layer
- · Physical layer
- Physical layer excl. preamble
- Link layer
- · Network layer
- Data layer

# Service disruption measurement

Can be activated as part of the BER test:

- Maximum/Average service disruption time, resolution 0.1  $\mu$  sec
- Number of service disruptions

## Ping test

For the connectivity check through the network.

- Round Trip Time (RTT)
- Supports IPv4 addressing
- Answer incoming Ping requests (On/Off)

#### Traceroute

Trace the IP route over the IP network.

- User-defined max no. of hops (1 to 255)
- Information per hop: Maximum/Minimum/Average ping time and number of ping timeouts

#### **Ethernet OAM option**

- Y.1731 (Service Layer OAM)
- IEEE 802.1ag (Connectivity layer OAM) and IEEE 802.3ah (Access Link OAM)

#### **VLAN**

#### Number of VLAN tag

• Up to 8 layers of VLAN can be inserted into the Ethernet frame.
Only 1 level of VLAN is supported in ping, Traceroute and RFC2544 router latency tests.

## Parameters per VLAN tag

• EtherType 0x8100 (802.1Q), 0x88a8 (802.1ad), 0x9100 or 0x9200

• User-defined VLAN ID, CFI and VLAN priority

#### Status

• Indicator for detection of VLAN tagged frames

#### Statistics

- Number of VLAN tagged frames
- Maximum number of VLAN layers detected

#### **Ethernet MPLS**

## MPLS supported

- MPLS unicast is supported (EtherType 0x8847).
- Support for MPLS in BERT, RFC 2544 (excluding router latency) tests and general statistics

## Number of MPLS headers

• Up to 8 MPLS headers can be set by the user.

## Parameters per MPLS header

• User-defined label, Exp and TTL fields in each MPLS header

## MPLS-TP support

• PWE (Pseudo Wire Emulation Edge-to-Edge) label (the RFC4448 control word) can be added.

## Status

• Indicator for detection of MPLS frames and MPLS-TP

#### Statistics

- Number of MPLS frames and MPLS-TP frames
- Maximum number of MPLS layers detected

#### **Ethernet Multistream**

## Number of streams

Up to 16 streams can be activated on the Ethernet line.

## Parameters per stream

- Encapsulation (frame format)
- Line rate traffic load, up to full line rate
- Configurable IP and Ethernet source and destination addresses (supports IPv4 and IPv6 addressing)
- User-defined traffic mix of unicast and broadcast frames
- Adjustable frame size from 60 bytes to 16000 bytes
- Frame sizes may be set to constant, stepped or random length.
- User programmable VLAN ID and VLAN priority
- User programmable DSCP/TOS byte
- User programmable UDP/TCP address

In stream 1 a BER test can be made.

#### Statistics

Available information per stream:

- Frame loss count/rate
- · Frames and bytes received
- · Frames and bytes transmitted
- Throughput
- Latency/Jitter

# and commissioning

RFC2544 installation Switch/router test and Single ended network test modes:

- Throughput
- Frame loss
- · Latency or packet jitter
- Back-to-back frames (burstability)

End-to-end network test mode (two Network Master Pros in a master-slave setup)

- Throughput
- Frame loss
- Back-to-back frames (burstability)

Router latency test mode: IP ping based latency test or packet jitter.

For RFC2544 throughput measurement the user can choose to make the measurement for:

- Physical layer
- Physical layer excl. preamble
- Link layer
- Network layer
- Data layer
- Average or maximum values

## RFC6349 TCP throughput test

Supports connecting to iPerf server.

End-to-end network test mode

- Local -> Remote
- Remote -> Local
- Simultaneous in Both Direction

For RFC6349 test sequence the user can choose to make the measurement for:

- Path MTU
- Baseline RTT
- Window Scan and Throughput
- Multi-Service

Multi-Service: DSCP or TOS can be set to each TCP connections.

- Destination Port
- DSCP or TOS

## **Service Activation** Test (Y.1564)

Service Activation Test is an out-of-service test to assess the proper configuration and performance of Ethernet services.

- Test up to 8 services
- Color-Aware and Non-Color-Aware in combinations (IP DSCP or VLAN PCP)
- · GPS timing synchronization

#### Two test modes:

- One-way (uni- or bi-directional, symmetrical or asymmetrical)
- Round-trip

## Service Configuration Test:

- With subtests for:
  - Committed Information Rate
  - Excess Information Rate
  - Traffic Policing
  - o Committed Burst Size
  - Excess Burst Size
- Step duration: 1 sec to 60 sec (user programmable)
- Number of steps: 1 to 10 (user programmable)
- Slope: rising or falling
- Results:
  - Pass/Fail indication
  - IR (Maximum/Minimum/Average)
  - FL (Count/FLR)
  - FTD and FDV (Maximum/Minimum/Average/Current (during measurement))

#### Service Performance Test:

- All services tested simultaneously at CIR
- Duration: 15 minutes, 2 hours, 24 hours or customer programmable
- Results:
  - Pass/Fail indication
  - IR (Maximum/Minimum/Average)
  - FL (Count/FLR)
  - FTD and FDV (Maximum/Minimum/Average/Current (during measurement))
  - o AVAIL(%)
  - Unavail (sec)

## Verification against Service Acceptance Criteria:

- Information Rate
- Frame Transfer Delay
- Frame Delay Variation
- Frame Loss Rate
- Availability

## **IP Channel Statistics**

IP Channel Statistics is available when the interface bit rate is 10Gbps or less.

Number of channels

The statistics are provided for up to 230 channels, identified by user-defined combinations of:

- IPv4, IPv6 or MAC address
- VLAN ID or MPLS label
- Protocol information
- IP next header (protocol)
- TPC/UDP ports.

#### Statistics

Available information per channel:

- Frame statistics
  - Frame count/rate
  - Throughput
  - Byte count
  - Undersize frames
  - Oversize frames
- Size distribution
  - IP Frame/packet size distribution
- MPLS statistics
  - MPLS/IP frames
  - o MPLS/IP bytes
- IP statistics
  - IP packet count, rate
  - IP bytes
  - IP throughput
  - IP header bytes
  - $\circ$  IP fragments
  - TTL threshold violations
- IPv4 statistics
  - IPv4 packet count, rate
  - IPv4 bytes
  - IPv4 throughput
  - IPv4 header bytes
  - IPv4 header errors
- IPv6 statistics
  - IPv6 packet count, rate
  - IPv6 bytes
  - IPv6 throughput
  - IPv6 header bytes
- TCP/UDP statistics
  - TCP/UDP packets, rate
  - TCP/UDP bytes
  - TCP/UDP throughput
  - TCP/UDP errored packets

#### Reflector mode

The following parameters are user-settable:

- Swap all MAC addresses or one specific MAC address
- Swap IP addresses

- Swap port numbers on UDP/TCP frames
- Force ACK on TCP frames

## Discovery

Number of Network Masters to be discovered: Up to 16 Network Masters

Search type:

- Multicast search for inside IP network
- Unicast search for inside and outside IP network

## Application Change:

- Available application to change: Reflector, RFC 2544, RFC 6349, SAT(Y.1564),
   Discovery
- Settings: Password, Source MAC address, Destination MAC address, VLAN, Source IP address, Destination IP address, Gateway, Increment to all streams

## 12.8.2 SDH/SONET/PDH/DSn

SONET/SDH switchable.

Number of ports

Max. 4

**Transmitter Clock** 

Reference Clock

- Internal clock
- External clock
  - BITS
  - SETS
  - o 2MHz
  - o 10MHz
- Received clock

## Frame format

- STM-1/STM-1e/OC-3/STS-3
- STM-4/OC-12
- STM-16/OC-48
- STM-64/OC-192
- STM-256/OC-762

For bit rate, refer to Bit Rate of MU110010A and Bit Rate of MU110011A.

#### Measurement Parameter

## Interval

1second, 2seconds, 5seconds, 10seconds, 15seconds, 30seconds,

1minute, 5minutes, 10minutes, 15minutes, 30minutes,

1hour, 2hours, 4hours, 6hours, 12hours,

No intervals

Start Key Action

Immediate

Start at(year-month-day, hour-minute-second)

Stop Function

Manual Stop

Stop at (year-month-day, hour-minute-second)

Duration (1second to 99days 23hour-59minute-59second)

## 12.8.2.1 SDH

#### **SDH Mappings**

STM-256 - AU4-256c - VC4-256c - Bulk

STM-256/STM-64 - AU4-64c - VC4-64c - Bulk

STM-256/STM-64/STM-16 - AU4-16c - VC4-16c - Bulk

STM-256/STM-64/STM-16/STM-4 - AU4-4c - VC4-4c - Bulk

STM-256/STM-64/STM-16/STM-4/STM-1/STM-1e - AU-4 - VC-4 - Bulk

STM-64/STM-16/STM-4/STM-1/STM-1e - AU-4 - VC-4 - E4

STM-256/STM-64/STM-16/STM-4/STM-1/STM-1e

- AU-4 - VC-4 - TU-3 - VC-3 - Bulk

STM-64/STM-16/STM-4/STM-1/STM-1e - AU-4 - VC-4 - TU-3 - VC-3 - DS3

STM-64/STM-16/STM-4/STM-1/STM-1e - AU-4 - VC-4 - TU-3 - VC-3 - E3

STM-256/STM-64/STM-16/STM-4/STM-1/STM-1e

-AU-4 - VC-4 - TU-12 - VC-12 - Bulk

STM-64/STM-16/STM-4/STM-1/STM-1e

- AU-4 - VC-4 - TU-12 - VC-12 - E1 (Async/Sync)

STM-256/STM-64/STM-16/STM-4/STM-1/STM-1e

-AU-4 - VC-4 - TU-11 - VC-11 - Bulk

STM-64/STM-16/STM-4/STM-1/STM-1e

- AU-4 - VC-4 - TU-11 - VC-11 - DS1 (Async/Sync)

STM-256/STM-64/STM-16/STM-4/STM-1/STM-1e - AU-3 - VC-3 - Bulk

STM-64/STM-16/STM-4/STM-1/STM-1e - AU-3 - VC-3 - DS3

STM-64/STM-16/STM-4/STM-1/STM-1e - AU-3 - VC-3 - E3

STM-256/STM-64/STM-16/STM-4/STM-1/STM-1e

- AU-3 - VC-3 - TU-12 - VC-12 - Bulk

STM-64/STM-16/STM-4/STM-1/STM-1e

- AU-3 - VC-3 - TU-12 - VC-12 - E1 (Async/Sync)

STM-256/STM-64/STM-16/STM-4/STM-1/STM-1e

- AU-3 - VC-3 - TU-11 - VC-11 - Bulk

STM-64/STM-16/STM-4/STM-1/STM-1e

- AU-3 - VC-3 - TU-11 - VC-11 - DS1 (Async/Sync)

# Dummy channel handling

Copy, Unequipped (For AU only)

## Test patterns

- PRBS:  $2^9$ -1,  $2^{11}$ -1,  $2^{15}$ -1,  $2^{20}$ -1,  $2^{23}$ -1,  $2^{29}$ -1, $2^{31}$ -1 (Normal/Inverse)
- Fixed :User Pattern, All0, All1, Alternating 1:1, Alternating 1:3, Alternating 1:7, 2 in 8
- User Pattern: 32 bits, 2048 bits

## Preset data

## OH Preset data

- SOH: All bytes except B1, B2, H1, H2 and H3 byte
- VC-4/VC-3 POH : All bytes except B3
- VC-12/VC-11 POH: All bytes except BIP-2

Path trace Setting: J0, J1, J2 (ASCII data, 16 bytes/64 bytes)

#### Tandem connection

Off, N1(VC-4), N1(VC-3), N2(VC-12), N2(VC-11)

#### Frequency Offset

±200 ppm 0.1 ppm step

#### Alarm Insertion

Item

• LOS, LOF, OOF, MS-AIS, MS-RDI, AU-AIS, AU-LOP, HP-TIM, HP-PLM, HP-UNEQ, HP-RDI, TU-AIS, TU-LOP, TU-LOM, LP-TIM, LP-UNEQ, LP-RDI, LP-PLM, LSS, TC-UNEQ, TC-LTC, TC-TIM, TC-AIS, TC-RDI, TC-ODI

• LOF/OOF-STL, LOR/OOR-STL

#### Insertion:

- Permanent, Alternate (Excluding LOS, OOF and LSS)
- Permanent (For LOS, OOF and LSS)
- Manual, Alternate (for LOF/OOF-STL and LOR/OOR-STL)

#### Alternate:

Alarm length: 1 to 8000 (Frame)Normal length: 1 to 8000 (Frame)

#### Manual:

• Burst length: 1 to 8000 (Frame)

## **Error Insertion**

#### Item

- A1A2, B1, B2, MS-REI, B3, HP-REI, V5/B3, LP-REI, TC-IEC, TC-REI, TC-OEI, TC-BIP-2, ERR-TRANS, Pattern error
- A1A2-STL

#### Insertion:

- Manual, Rate, Alternate (Excluding ERR-TRANS and A1A2-STL)
- Manual, Rate (For ERR-TRANS)
- Alternate (For A1A2-STL)

#### Manual:

- Burst length: 1 to 8000 (bit) (Excluding Pattern error)
- Burst length: 1 to 4000 (bit) (For Pattern error)

## Rate:

•  $1*10^{-3}$ ,  $1*10^{-4}$ ,  $1*10^{-5}$ ,  $1*10^{-6}$ ,  $1*10^{-7}$ ,  $1*10^{-8}$ ,  $1*10^{-9}$ ,  $1*10^{-10}$ The available highest rate varies depending on the error item.

#### Alternate:

- (Excluding Pattern error)
  - Error: 1 to 8000 (Frame)
  - Normal : 1 to 8000 (Frame)
- (For Pattern error)
  - Error: 1 to 4000 (bit)
  - Normal: 100 to 4000 (bit) (except STM-256)
     500 to 4000 (bit) (STM-256)

## STL Skew Insertion

Bits: 0 to 138240

### **Pointer**

AU-4, AU-3, TU-3, TU-12, TU-11

## Test Sequence:

- No Test Sequence
- Single Alternating
- Regular + Double
- Regular + Missing

• Double Alternating

#### Movement:

- Positive
- Negative
- Burst: 1 to 100

#### Jump:

- NDF: Including NDF or Excluding NDF
- Pointer Value: 0 to 782(AU-4/AU-3) or 764(TU-3) or 139(TU-12) or 103(TU-11)

# Error/Alarm detection Alarm detection

- LOS, LOF, OOF, MS-AIS, MS-RDI, AU-AIS, AU-LOP, HP-PLM, HP-TIM, HP-RDI, HP-UNEQ, TU-AIS, TU-LOP, TU-LOM, LP-PLM, LP-TIM, LP-RDI, LP-UNEQ, TC-AIS, HP-TC-RDI, HP-TC-ODI, HP-TC-UNEQ, TC-TIM, TC-LTC, TC-AIS, TC-RDI, TC-ODI, TC-UNEQ, LSS
- ILA/OLA

Display: Second (Resolution: 1 second)

• LOF-STL, OOF-STL, LOR-STL, OOR-STL

Display: Second (Resolution: 0.001 second) (LOF-STL, LOR-STL) Frame (OOF-STL, OOR-STL)

#### Error Detection

- A1A2, B1, B2, MS-REI, B3, HP-REI, V5/B3, LP-REI, TC-IEC, TC-BIP-2, TC-REI, TC-OEI, Pattern error, Pattern block error for G.826
- A1A2-STL

Display: Count, Ratio

## STL Skew Detection

Relative skew, Marker Map

### Monitor

## Signal level:

- dBm (Excluding STM-1e)
- dB (For STM-1e)

Deviation: ppm (Resolution: 1 ppm)

Bit rate: bit/s

#### Pointer analyze

Pointer value: AU-PTR, TU-PTR

Element: Negative, Positive

Graph: Pointer movement

## OH Capture

Item

- SOH: 64 FramesPOH: 64 Frames
- Pathtrace: J0/J1/J2 (Displays in ASCII characters)

Timing

- Single
- Repeat: Update period 1s

#### Transceiver

#### Module Present

Transceiver Information

Alarm, Wavelength and bit rate, Compliance, Vendor Information, Output Control

Power monitor

#### MDIO analysis

For CFP and CFP2:

NVR1, NVR2, Module FAWS, MW Lane FAWS, CTRL, MDIO Read/Write

## I2C analysis

For QSFP+ and QSFP28 Adpt:

Lower, Lower (Lane), Upper (00), Upper (03), Read/Write

#### Setting

For CFP: VOD, Pre-Emphasis, Rx Equalizer

For CFP2: Attenuation, Pre-Emphasis, Rx Equalizer

## **Through Mode**

#### Mode:

- Through Rx
- OH Overwrite
  - SOH, A1/A2, K1/K2, S1, DCC1-3, DCC4-12, J0, SOH 1 byte

## Stimuli

• Alarm: LOS, LOF, OOF, MS-RDI

Available alarms depend on Through mode setting.

• Error: A1A2, B1, B2, MS-REI, ERR-TRANS

Available errors depend on Through mode setting.

• Insertion: refer to <u>Alarm Insertion</u> and <u>Error Insertion</u>

#### **APS**

#### APS (Automatic Protection Switching) Measurement

- Reference event: LOS, LOF, OOF, MS-AIS, MS-RDI, APS Switchover, AU-AIS, AU-LOP, HP-TIM, HP-PLM, HP-UNEQ, TU-LOM, TU-AIS, TU-LOP, LP-TIM, LP-PLM, LP-UNEQ, LSS, A1A2, B1, B2, MS-REI, B3, V5, Pattern errors
- Max reference duration: 0.000 to 10000.000 ms
- Result: Average switching time, Maximum switching time, Minimum switching time

## APS Protocol analyze

- APS configuration :Ring or Linear
  - Ring: Short Path, Long Path
  - Linear: 1+1 architecture, 1:n architecture
- APS Protocol Request: The value of K1, K2 byte is sent depending on selected type.
- APS Interpretation : Number, Elapsed Time

## **Delay measurement**

Measurement Mode: Single, Repeat

Measurement Period: 0.5, 1, 2, 5,10 s

Measurement Range: Up to 10 000 000.000  $\mu$ s / resolution 0.1  $\mu$ s, Timeout

## SDH Performance Measurement

- Setup: G826, G.828+G.829, M.2101.1(M2100)
- Allocation
  - Mux Allocation 0 to 100%
  - VC-4 Allocation 0 to 100%
  - VC-3 Allocation 0 to 100%
  - VC-11/VC-12 Allocation 0 to 100%
- Time period: 15minutes, 1hour, 2hour, 24hour, 7days (only M.2101.1)
- Result: ES, SES, BBE, UNAV
- Display: Count, Ratio

## **Tributary Scan**

Displays the alarm status of all channels in a specified layer except STM-256.

Green (No alarm), Red (Alarm occurring), Gray (Not applied)

#### 12.8.2.2 SONET

#### **SONET Mappings**

```
OC-768/OC-192 - STS-192c - STS-192c SPE - Bulk
```

OC-768/OC-192/OC-48 - STS-48c - STS-48c SPE - Bulk

OC-768/OC-192/OC-48/OC-12 - STS-12c - STS-12c SPE - Bulk

OC-768/OC-192/OC-48/OC-12/OC-3/STS-3 - STS-3c - STS-3c SPE - Bulk

OC-192/OC-48/OC-12/OC-3/STS-3 - STS-3c - STS-3c SPE - E4

OC-768/OC-192/OC-48/OC-12/OC-3/STS-3

- STS-3c - STS-3c SPE - TU-3 - VC-3 - Bulk

OC-192/OC-48/OC-12/OC-3/STS-3 - STS-3c - STS-3c SPE - TU-3 - VC-3 - DS3

OC-192/OC-48/OC-12/OC-3/STS-3 - STS-3c - STS-3c SPE - TU-3 - VC-3 - E3

OC-768/OC-192/OC-48/OC-12/OC-3/STS-3

- STS-3c - STS-3c SPE - VT-12 - VT-12 SPE - Bulk

OC-192/OC-48/OC-12/OC-3/STS-3

- STS-3c - STS-3c SPE - VT-12 - VT-12 SPE - E1 (Async/Sync)

OC-768/OC-192/OC-48/OC-12/OC-3/STS-3

- STS-3c - STS-3c SPE - VT-11 - VT-11 SPE - Bulk

OC-192/OC-48/OC-12/OC-3/STS-3

- STS-3c - STS-3c SPE - VT-11 - VT-11 SPE - DS1 (Async/Sync)

OC-768/OC-192/OC-48/OC-12/OC-3/STS-3 - STS-1 - STS-1 SPE - Bulk

OC-192/OC-48/OC-12/OC-3/STS-3 - STS-1 - STS-1 SPE - DS3

OC-192/OC-48/OC-12/OC-3/STS-3-STS-1-STS-1 SPE - E3

OC-768/OC-192/OC-48/OC-12/OC-3/STS-3

- STS-1 - STS-1 SPE - VT-12 - VT-12 SPE - Bulk

OC-192/OC-48/OC-12/OC-3/STS-3 - STS-1

- STS-1 SPE - VT-12 - VT-12 SPE - E1 (Async/Sync)

OC-768/OC-192/OC-48/OC-12/OC-3/STS-3

- STS-1 - STS-1 SPE - VT-11 - VT-11 SPE - Bulk

OC-192/OC-48/OC-12/OC-3/STS-3 - STS-1

- STS-1 SPE - VT-11 - VT-11 SPE - DS1/J1 (Async/Sync)

## Dummy channel handling

Copy, Unequipped (For STS only)

## Test patterns

- PRBS: 2<sup>9</sup>-1, 2<sup>11</sup>-1, 2<sup>15</sup>-1, 2<sup>20</sup>-1, 2<sup>23</sup>-1, 2<sup>29</sup>-1,2<sup>31</sup>-1 (Normal/Inverse)
- Fixed: User Pattern, All0, All1, Alternating 1:1, Alternating 1:3, Alternating 1:7, 2 in 8
- User Pattern: 32 bits, 2048 bits

#### Preset data

#### OH Preset data

- TOH: All bytes except B1, B2, H1, H2 and H3 byte
- STS-3c/STS-1 POH : All bytes except B3
- VT-2/VT-1.5 POH: All bytes except BIP-2

Path trace Setting: J0, J1, J2 (ASCII data, 16 bytes/64 bytes)

#### **Tandem connection**

Off, Z5(STS-3c), Z5(STS-1), Z6(VT-2), Z6(VT-1.5)

## Frequency Offset

 $\pm 200$  ppm 0.1 ppm step

## **Alarm Insertion**

Item

- LOS, LOF, OOF, AIS-L, RDI-L, AIS-P, LOP-P, TIM-P, PLM-P, UNEQ-P, RDI-P, AIS-V, LOP-V, LOM-V, TIM-V, UNEQ-V, RDI-V, PLM-V, LSS, TC-UNEQ, TC-LTC, TC-TIM, TC-AIS, TC-RDI, TC-ODI
- LOF/OOF-STL, LOR/OOR-STL

## Insertion:

- Permanent, Alternate (Excluding LOS, OOF and LSS)
- Permanent (For LOS, OOF and LSS)
- Manual, Alternate (for LOF/OOF-STL and LOR/OOR-STL)

#### Alternate:

- Alarm length: 1 to 8000 (Frame)
- Normal length: 1 to 8000 (Frame)

## Manual:

• Burst length: 1 to 8000 (Frame)

#### **Error Insertion**

Item

- A1A2, B1, B2, REI-L, B3, REI-P, V5/B3, REI-V, TC-IEC, TC-REI, TC-OEI, TC-BIP-2, ERR-TRANS, Pattern error
- A1A2-STL

#### Insertion:

- Manual, Rate, Alternate (Excluding ERR-TRANS and A1A2-STL)
- Manual, Rate (For ERR-TRANS)
- Alternate (For A1A2-STL)

#### Manual:

- Burst length: 1 to 8000 (bit) (Excluding Pattern error)
- Burst length: 1 to 4000 (bit) (For Pattern error)

## Rate:

•  $1*10^{-3}$ ,  $1*10^{-4}$ ,  $1*10^{-5}$ ,  $1*10^{-6}$ ,  $1*10^{-7}$ ,  $1*10^{-8}$ ,  $1*10^{-9}$ ,  $1*10^{-10}$ The available highest rate varies depending on the error item.

#### Alternate:

- (Excluding Pattern error)
  - Error: 1 to 8000 (Frame)

• Normal: 1 to 8000 (Frame)

• (For Pattern error)

• Error: 1 to 4000 (bit)

• Normal: 100 to 4000 (bit) (except OC-768) 500 to 4000 (bit) (OC-768)

STL Skew Insertion Bits: 0 to 138240

Pointer STS-3c, STS-1, TU-3, VT-2, VT-1.5

#### Test Sequence:

- No Test Sequence
- Single Alternating
- Regular + Double
- Regular + Missing
- Double Alternating

#### Movement:

- Positive
- Negative
- Burst: 1 to 100

## Jump:

- NDF: Including NDF or Excluding NDF
- Pointer Value: 0 to 782(STS-3c/STS-1) or 764(TU-3) or 139(VT-2) or 103(VT-1.5)

# Error/Alarm detection Alarm detection

- LOS, LOF, OOF, AIS-L, RDI-L, AIS-P, LOP-P, TIM-P, PLM-P, UNEQ-P, RDI-P, AIS-V, LOP-V, LOM-V, TIM-V, UNEQ-V, RDI-V, PLM-V, TC-UNEQ, TC-LTC, TC-TIM, TC-AIS, TC-RDI, TC-ODI, LSS
- ILA/OLA

Display: Second (Resolution: 1 second)

• LOF-STL, OOF-STL, LOR-STL, OOR-STL

Display : Second (Resolution : 0.001 second) (LOF-STL, LOR-STL) Frame (OOF-STL, OOR-STL)

## Error Detection

- A1A2, B1, B2, REI-L, B3, REI-P, V5/B3, REI-V, TC-IEC, TC-BIP-2, TC-REI, TC-OEI, Pattern error, Pattern block error for G.826
- A1A2-STL

Display: Count, Ratio

## STL Skew Detection Relative skew, Marker Map

## **Monitor** Signal level:

- dBm (Excluding STS-3)
- dB (For STS-3)

Deviation: ppm (Resolution: 1ppm)

Bit rate: bit/s

Pointer analyze Pointer value: STS-PTR, VT-PTR

Element : Negative, Positive

Graph: Pointer movement

### OH Capture Item

TOH: 64 FramesPOH: 64 Frames

• Pathtrace:J0/J1/J2 (Displays in ASCII characters)

### Timing

• Single

• Repeat: Update period 1s

### Transceiver

Module Present

Transceiver Information

Alarm, Wavelength and bit rate, Compliance, Vendor Information, Output

Power monitor

MDIO analysis

For CFP and CFP2:

NVR1, NVR2, Module FAWS, MW Lane FAWS, CTRL, MDIO Read/Write

I2C analysis

For QSFP+ and QSFP28 Adpt:

Lower, Lower (Lane), Upper (00), Upper (03), Read/Write

Setting

For CFP: VOD, Pre-Emphasis, Rx Equalizer

For CFP2: Attenuation, Pre-Emphasis, Rx Equalizer

## Through Mode

### Mode:

- Through
- OH Overwrite
  - TOH, A1/A2, K1/K2, S1, DCC1-3, DCC4-12, J0, TOH 1byte

### Stimuli

• Alarm: LOS, LOF, OOF, RDI-L

Available alarms depend on Through mode setting.

• Error: A1A2, B1, B2, REI-L, ERR-TRANS

Available errors depend on Through mode setting.

• Insertion: refer to <u>Alarm Insertion</u> and <u>Error Insertion</u>.

### APS

### APS (Automatic Protection Switching) Measurement

- Reference event: LOS, LOF, OOF, AIS-L, RDI-L, APS Switchover, AIS-P, LOP-P, TIM-P, PLM-P, UNEQ-P, LOM-V, AIS-V, LOP-V, TIM-V, PLM-V, UNEQ-V, LSS, A1A2, B1, B2, REI-L, B3, V5, Patter errors
- Max reference duration: 0.000 to 10000.000 ms
- Result: Average switching time, Maximum switching time, Minimum

### switching time

### APS Protocol analyze

- APS configuration :Ring or Linear
  - Ring: Short Path, Long Path
  - Linear: 1+1 architecture, 1:n architecture
- APS Protocol Request: The value of K1, K2 byte is sent depending on selected type.
- APS Interpretation : Number, Elapsed Time

### **Delay measurement**

Measurement Mode: Single, Repeat

Measurement Period: 0.5, 1, 2, 5,10 s

Measurement Range : Up to 10 000 000.000  $\mu$ s / resolution 0.1  $\mu$ s, Timeout

### SONET Performance Measurement

- Setup: G826, G.828+G.829, M.2101.1(M2100)
- Allocation
  - Mux Allocation 0 to 100%
  - STS-3c Allocation 0 to 100%
  - STS-1 Allocation 0 to 100%
  - VT-2/VT-1.5/VC-12 Allocation 0 to 100%
- Time period: 15minutes, 1hour, 2hour, 24hour, 7days (only M.2101.1)
- Result: ES, SES, BBE, UNAV
- Display: Count, Ratio

### **Tributary Scan**

Displays the alarm status of all channels in a specified layer except OC-768.

Green (No alarm), Red (Alarm occurring), Gray (Not applied)

### 12.8.2.3 PDH

### Number of ports

Max. 4

### Frame format

Non PCM frame

Bit rate: Refer to Bit Rate of MU110010A.

### Framed

Bit rate (Format)

- E1 2.048Mbit/s (30,31ch with or without CRC4, Sa-bit, CAS)
- E3 34.368Mbit/s (G.751)
- E4 139.264Mbit/s (G.751)
- DS1 1.544Mbit/s (T1.107, SF/ESF/Japan ESF, CAS)
- DS3 44.736Mbit/s (T1.107, M13/C-bit)

### Mux/DeMux

- E1 n\*64kbit/s
- DS1 n\*64kbit/s or n\*56kbit/s

### Frequency Offset

±125 ppm 1 ppm step

### **BER Test patterns**

PRBS:

E1

$$2^6 - 1, \, 2^7 - 1, \, 2^9 - 1, \, 2^{11} - 1, \, 2^{15} - 1, \, 2^{20} - 1, \, 2^{23} - 1, \, \mathsf{QRSS} \, 11, \, \mathsf{QRSS} \, 20$$

E3/E4

 $2^{9}-1$ ,  $2^{11}-1$ ,  $2^{15}-1$ ,  $2^{20}-1$ ,  $2^{23}-1$ ,  $2^{29}-1$ ,  $2^{31}-1$ , QRSS 20

 $(2^{29}-1, 2^{31}-1)$  and QRSS 20 are only available for E4.)

DS1/DS3

 $2^{9}$ -1,  $2^{11}$ -1,  $2^{15}$ -1,  $2^{20}$ -1,  $2^{23}$ -1,  $2^{29}$ -1,  $2^{31}$ -1, QRSS 20

Fixed: User Pattern (32bits, 2048bits), All0, All1, 1 in 1, 1 in 3, 1 in 7, 3 in 24, Fox Pattern

(Fox Pattern is not available for E4.)

Logic: Normal, Inverse

Line build out

DS1

0 dB, -7.5 dB, -15 dB, -22.5dB, 1-133 ft, 133-266 ft, 266-399 ft, 399-533 ft, 533-

DS3

High-0 ft, DSX-450 ft

**Alarm Insertion** 

Item

E1

No Signal, AIS, No Frame, Distant Alarm, Pattern sync loss, No CAS MFAS, Distant MF Alarm

E3/E4

No Signal, AIS, No Frame, RDI, Pattern sync loss

DS1

LOS, AIS, RAI, OOF, LLS

DS3

LOS, AIS, RAI, LOF, Idle, LSS

**Error Insertion** 

Item

E1

FAS, FAS and NFAS, FAS word, CRC4, CRC4 MFAS, Code, Pattern error, CAS MFAS, E-Bit, Pattern slip, Frame slip, Transparent

E3/E4

Frame, Code, Pattern error, Pattern slip (Code is only available for E3.)

DS1

Pattern error, Pattern slip, CRC-6, F-Bit, S-Bit, BPV, EXZ

DS3

Pattern error, Pattern slip, FEBE, C-Bit, F-Bit, P-Bit, BPV

Timing: Manual, Burst

Error/Alarm detection Alarm detection

E1

LOS, AIS, No Frame, No CRC4 MF, Distant, No sync, No CAS MF, Distant MF

E3/E4

LOS, AIS, No Frame, Distant, No Sync

DS1

LOS, AIS, OOF, RAI, LLS

DS3

LOS, AIS, LOF, RAI, IDLE, LSS

Display: Second

Error Detection

E1

FAS, Pattern error, CRC4, CRC4 MFAS, E-bit, Code, Pattern slip, Frame slip, Pattern block error for G.826

E3/E4

FAS, Code, Pattern error, Pattern slip, Pattern block error for G.826 (Code is only available for E3.)

DS1

F-Bit, Pattern, CRC-6, S-Bit, BPV, Pattern slip, EXZ, Pattern block error for G.826

DS3

BPV, Pattern error, Pattern slips, Parity, C-bit, F-bit, FEBE, Pattern block error for G.826

Display: Count, Ration

**Error Performance** G.821/G.826/M.2100 analysis of the received signal

Result Status

Current information on:

- Alarms and errors
- Input level indication
- · Actual bit rate
- Frequency deviation
- E1: CAS bits, FAS/non FAS bits
- DS1: CAS bits, F-Bit, S-Bit
- DS3: F-bits
- Round trip delay
- APS switching time (Only available in case of E1 or DS1.)

# 12.8.3 OTN

### 12.8.3.1 OTN Setup

Frame Format OTU4, OTU3, OTU3e1, OTU3e2, OTU2, OTU1e, OTU2e, OTU1f, OTU2f, OTU1

Transmitter Clock Reference Clock

- Internal clock
- External clock
  - BITS
  - SETS
  - 2MHz
  - 10MHz
- GPS
- Received

Through mode Transparent, OH Overwrite Thr. (ALL OTU/ODU/OPU OH)

Mapping OTU4 (Client PRBS)

OTU4-ODU4/OPU4-PRBS OTU4-ODU4/OPU4-ODTU4.1-ODU0/OPU0-PRBS OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-PRBS OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-ODTU01-ODU0/OPU0-PRBS OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2-PRBS OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2-ODTU2.1 -ODU0/OPU0-PRBS OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2 -ODTU12(PT=20,21)-ODU1/OPU1-PRBS OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2 -ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-PRBS OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2 -ODTU2.ts-ODUflex-PRBS OTU4-ODU4/OPU4-ODTU4.8(ODU2e)-ODU2e/OPU2e-PRBS OTU4-ODU4/OPU4-ODTU4.31-ODU3/OPU3-PRBS\* OTU4-ODU4/OPU4-ODTU4.ts-ODUflex/OPUflex-PRBS\* OTU4 (Client Null) OTU4-ODU4/OPU4-NULL OTU4-ODU4/OPU4-ODTU4.1-ODU0/OPU0-NULL OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-NULL OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-ODTU01-ODU0/OPU0-NULL OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2-NULL OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2-ODTU2.1 -ODU0/OPU0-NULL OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2 -ODTU12(PT=20,21)-ODU1/OPU1-NULL OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2 -ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-NULL OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2 -ODTU2.ts-ODUflex-NULL\* OTU4-ODU4/OPU4-ODTU4.8(ODU2e)-ODU2e/OPU2e-NULL OTU4-ODU4/OPU4-ODTU4.31-ODU3/OPU3-NULL\* OTU4-ODU4/OPU4-ODTU4.ts-ODUflex/OPUflex-NULL\* OTU4 (Client Ethernet) OTU4-ODU4/OPU4-100GbE OTU4-ODU4/OPU4-ODTU4.31-ODU3/OPU3-40GbE\* OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2-10GbE OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/Ext.OPU2-10GbE OTU4-ODU4/OPU4-ODTU4.8(ODU2e)-ODU2e/OPU2e-10GbE OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2 -ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-GbE OTU4-ODU4/OPU4-ODTU4.1-ODU0/OPU0-GbE OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-ODTU01-ODU0/OPU0-GbE OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2 -ODTU2.ts-ODUflex-Ethernet\* OTU4-ODU4/OPU4-ODTU4.ts-ODUflex/OPUflex-Ethernet\*

OTU4-ODU4/OPU4-ODTU4.ts-ODUflex/OPUflex-MPLS

```
OTU4-ODU4/OPU4-ODTU4.ts-ODUflex/OPUflex-IPv4PDU*
     OTU4-ODU4/OPU4-ODTU4.ts-ODUflex/OPUflex-IPv6PDU*
OTU4 (Client SDH/SONET)
     OTU4-ODU4/OPU4-ODTU4.31-ODU3/OPU3-STM256/STS768*
     OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2
                                          -STM64(Async)/STS192(Async)
     OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2
                                            -STM64(Sync)/STS192(Sync)
     OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-STM16(Async)/STS48(Async)
     OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-STM16(Async)/STS48(Sync)
     OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2
                -ODTU12(PT=20,21)-ODU1/OPU1-STM16(Async)/STS48(Async)
     OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2
                 -ODTU12(PT=20,21)-ODU1/OPU1-STM16(Async)/STS48(Sync)
     OTU4-ODU4/OPU4-ODTU4.1-ODU0/OPU0-STM4/STS12
     OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1
                                     -ODTU01-ODU0/OPU0-STM4/STS12
     OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2
          -ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-STM4/STS12
     OTU4-ODU4/OPU4-ODTU4.1-ODU0/OPU0-STM1/STS3
     OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-ODTU01-ODU0/OPU-
     STM1/STS3
     OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2
           -ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-STM1/STS3
     OTU4-ODU4/OPU4-ODTU4.1-ODU0/OPU0-PRBS
     OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-PRBS
     OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2-PRBS
     OTU4-ODU4/OPU4-ODTU4.31-ODU3/OPU3-PRBS*
     OTU4-ODU4/OPU4-ODTU4.1-ODU0/OPU0-NULL
     OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-NULL
     OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2-NULL
     OTU4-ODU4/OPU4-ODTU4.31-ODU3/OPU3-NULL
OTU4 (Client FC)
     OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2
                                            -ODTU2.ts-ODUflex-FC800*
     OTU4-ODU4/OPU4-ODTU4.ts-ODUflex-FC800*
     OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2
                                            -ODTU2.ts-ODUflex-FC400*
     OTU4-ODU4/OPU4-ODTU4.ts-ODUflex-FC400
     OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-FC200
     OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2
                                 -ODTU12(PT=20,21)-ODU1/OPU1-FC200
     OTU4-ODU4/OPU4-ODTU4.1-ODU0/OPU0-FC100
     OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-ODTU01-ODU0/OPU0-FC100
     OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2
               -ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-FC100
                                         -ODTU2.1-ODU0/OPU0-FC100
```

### -ODTU2.1-ODU0/OPU0-FC100

### OTU4 (Client CPRI)

OTU4-ODU4/OPU4-ODTU4.ts-ODUflex-10137.6 M(CPRI) \*OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2

-ODTU2.ts-ODUflex-9830.4 M(CPRI)\*

OTU4-ODU4/OPU4-ODTU4.ts-ODUflex-9830.4 M(CPRI)\*
OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2

-ODTU2.ts-ODUflex-6144.0 M(CPRI)\*

OTU4-ODU4/OPU4-ODTU4.ts-ODUflex-6144.0 M(CPRI) \*OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2

-ODTU2.ts-ODUflex-4915.2 M(CPRI)

OTU4-ODU4/OPU4-ODTU4.ts-ODUflex-4915.2 M(CPRI) \*OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2

-ODTU2.ts-ODUflex-3072.0 M(CPRI)\*

OTU4-ODU4/OPU4-ODTU4.ts-ODUflex-3072.0 M(CPRI)

OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-2457.6 M(CPRI)

OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2

-ODTU12(PT=20,21)-ODU1/OPU1-2457.6 M(CPRI)

OTU4-ODU4/OPU4-ODTU4.1-ODU0/OPU0-1228.8 M(CPRI)

OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-ODTU01-ODU0/OPU0-1228.8  $\mathsf{M}(\mathsf{CPRI})$ 

OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2

-ODTU2.1-ODU0/OPU0-1228.8 M(CPRI)

OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2

-ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-1228.8 M(CPRI)

OTU4-ODU4/OPU4-ODTU4.1-ODU0/OPU0-614.4 M(CPRI)

OTU4-ODU4/OPU4-ODTU4.2-ODU1/OPU1-ODTU01-ODU0/OPU0-614.4  $\mathsf{M}(\mathsf{CPRI})$ 

OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2

-ODTU2.1-ODU0/OPU0-614.4 M(CPRI)

OTU4-ODU4/OPU4-ODTU4.8(ODU2)-ODU2/OPU2

-ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-614.4 M(CPRI)

# OTU3/3e1/3e2 (Client PRBS)

OTU3-ODU3/OPU3-PRBS

OTU3-ODU3/OPU3-ODTU13(PT=20,21)-ODU1/OPU1-PRBS

OTU3-ODU3/OPU3-ODTU13(PT=20,21)-ODU1/OPU1

-ODTU01-ODU0/OPU0-PRBS

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2-PRBS

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2

-ODTU2.1-ODU0/OPU0-PRBS

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2

-ODTU12(PT=20,21)-ODU1/OPU1-PRBS

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2

-ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-PRBS

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2

-ODTU2.ts-ODUflex-PRBS

OTU3-ODU3/OPU3-ODTU3.1-ODU0/OPU0-PRBS

OTU3-ODU3/OPU3-ODTU3.ts-ODUflex/OPUflex-PRBS \*
OTU3e1-ODU3e1/OPU3e1-ODTU2e3e1-ODU2e/OPU2e-PRBS
OTU3e2-ODU3e2/OPU3e2-ODTU3e2.8-ODU2e/OPU2e-PRBS

### OTU3/3e1/3e2 (Client Null)

OTU3-ODU3/OPU3-NULL

OTU3-ODU3/OPU3-ODTU13(PT=20,21)-ODU1/OPU1-NULL

OTU3-ODU3/OPU3-ODTU13(PT=20,21)-ODU1/OPU1

-ODTU01-ODU0/OPU0-NULL

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2-NULL

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2

-ODTU2.1-ODU0/OPU0-NULL

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2

-ODTU12(PT=20,21)-ODU1/OPU1-NULL

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2

-ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-NULL

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2

-ODTU2.ts-ODUflex-NULL

OTU3-ODU3/OPU3-ODTU3.1-ODU0/OPU0-NULL

OTU3-ODU3/OPU3-ODTU3.ts-ODUflex/OPUflex-NULL\*

OTU3e1-ODU3e1/OPU3e1-ODTU2e3e1-ODU2e/OPU2e-NULL

OTU3e2-ODU3e2/OPU3e2-ODTU3e2.8-ODU2e/OPU2e-NULL

### OTU3/3e1/3e2 (Client Ethernet)

OTU3-ODU3/OPU3-40GbE

OTU3-ODU3/OPU3-ODTU13(PT=20,21)-ODU1/OPU1

-ODTU01-ODU0/OPU0-GbE

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2

-ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-GbE

OTU3-ODU3/OPU3-ODTU3.1-ODU0/OPU0-GbE

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2-10GbE

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/Ext.OPU2-10GbE

OTU3e1-ODU3e1/OPU3e1-ODTU2e3e1-ODU2e/OPU2e-10GbE

OTU3e2-ODU3e2/OPU3e2-ODTU3e2.8-ODU2e/OPU2e-10GbE

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2

-ODTU2.ts-ODUflex-Ethernet\*

OTU3-ODU3/OPU3-ODTU3.ts-ODUflex/OPUflex-Ethernet

### OTU3 (Client SDH/SONET)

OTU3-ODU3/OPU3-STM256(Async)/STS768(Async)

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2

-STM64(Async)/STS192(Async)

OTU3-ODU3/OPU3-ODTU13(PT=20,21)-ODU1/OPU1

-STM16(Async)/STS48(Async)

OTU3-ODU3/OPU3-ODTU3.1-ODU0/OPU0-STM4/STS12

OTU3-ODU3/OPU3-ODTU3.1-ODU0/OPU0-STM1/STS3

OTU3-ODU3/OPU3-PRBS

OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2-PRBS

OTU3-ODU3/OPU3-ODTU13(PT=20,21)-ODU1/OPU1-PRBS

OTU3-ODU3/OPU3-ODTU3.1-ODU0/OPU0-PRBS

```
OTU3-ODU3/OPU3-NULL
     OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2-NULL
     OTU3-ODU3/OPU3-ODTU13(PT=20,21)-ODU1/OPU1-NULL
     OTU3-ODU3/OPU3-ODTU3.1-ODU0/OPU0-NULL
OTU3 (Client FC)
     OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2
                                             -ODTU2.ts-ODUflex-FC800*
     OTU3-ODU3/OPU3-ODTU3.ts-ODUflex-FC800*
     OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2
                                             -ODTU2.ts-ODUflex-FC400*
     OTU3-ODU3/OPU3-ODTU3.ts-ODUflex-FC400
     OTU3-ODU3/OPU3-ODTU13(PT20,21)-ODU1/OPU1-FC200
     OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2
                                  -ODTU12(PT=20,21)-ODU1/OPU1-FC200
     OTU3-ODU3/OPU3-ODTU13(PT=20,21)-ODU1/OPU1
                                           -ODTU01-ODU0/OPU0-FC100
     OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2
               -ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-FC100
     OTU3-ODU3/OPU3-ODTU3.1-ODU0/OPU0-FC100
OTU3 (Client CPRI)
     OTU3-ODU3/OPU3-ODTU3.ts-ODUflex-10137.6 M(CPRI)
     OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2
                                      -ODTU2.ts-ODUflex-9830.4 M(CPRI)*
     OTU3-ODU3/OPU3-ODTU3.ts-ODUflex-9830.4 M(CPRI)*
     OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2
                                      -ODTU2.ts-ODUflex-6144.0 M(CPRI)*
     OTU3-ODU3/OPU3-ODTU3.ts-ODUflex-6144.0 M(CPRI)*
     OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2
                                      -ODTU2.ts-ODUflex-4915.2 M(CPRI)*
     OTU3-ODU3/OPU3-ODTU3.ts-ODUflex-4915.2 M(CPRI)
     OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2
                                      -ODTU2.ts-ODUflex-3072.0 M(CPRI)*
     OTU3-ODU3/OPU3-ODTU3.ts-ODUflex-3072.0 M(CPRI)
     OTU3-ODU3/OPU3-ODTU13(PT20,21)-ODU1/OPU1-2457.6 M(CPRI)
     OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2
                           -ODTU12(PT=20,21)-ODU1/OPU1-2457.6 M(CPRI)
     OTU3-ODU3/OPU3-ODTU3.1-ODU0/OPU0-1228.8 M(CPRI)
     OTU3-ODU3/OPU3-ODTU13(PT=20,21)-ODU1/OPU1
                                   -ODTU01-ODU0/OPU0-1228.8 M(CPRI)
     OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2
        -ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-1228.8 M(CPRI)
     OTU3-ODU3/OPU3-ODTU3.1-ODU0/OPU0-614.4 M(CPRI)
     OTU3-ODU3/OPU3-ODTU13(PT=20,21)-ODU1/OPU1
                                    -ODTU01-ODU0/OPU0-614.4 M(CPRI)
     OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2
```

-ODTU12(PT=20,21)-ODU1/OPU1-ODTU01-ODU0/OPU0-614.4 M(CPRI)

# OTU3-ODU3/OPU3-ODTU23(PT=20,21)-ODU2/OPU2 -ODTU2.1-ODU0/OPU0-614.4 M(CPRI)

### OTU2 (Client PRBS)

OTU2-ODU2/OPU2-PRBS

OTU2-ODU2/OPU2-ODTU2.1-ODU0/OPU0-PRBS

OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1-PRBS

OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1

-ODTU01-ODU0/OPU0-PRBS

OTU2-ODU2/OPU2-ODTU2.ts-ODUflex-PRBS

### OTU2 (Client Null)

OTU2-ODU2/OPU2-NULL

OTU2-ODU2/OPU2-ODTU2.1-ODU0/OPU0-NULL

OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1-NULL

OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1

-ODTU01-ODU0/OPU0-NULL

OTU2-ODU2/OPU2-ODTU2.ts-ODUflex-NULL

### OTU2 (Client Ethernet)

OTU2-ODU2/OPU2-10GbE

OTU2-ODU2/Ext.OPU2-10GbE

OTU2-ODU2/OPU2-ODTU2.1-ODU0/OPU0-GbE

OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1

-ODTU01-ODU0/OPU0-GbE

OTU2-ODU2/OPU2-ODTU2.ts-ODUflex-Ethernet

### OTU2 (Client SDH/SONET)

OTU2-ODU2/OPU2-STM64(Async)/STS192(Async)

OTU2-ODU2/OPU2-STM64(Sync)/STS192(Sync)

OTU2-ODU2/OPU2-ODTU2.1-ODU0/OPU0-STM4/STS12

OTU2-ODU2/OPU2-ODTU2.1-ODU0/OPU0-STM1/STS3

OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1

-STM16(Async)/STS48(Async)

OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1

-STM16(Sync)/STS48(Sync)

OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1

-ODTU01-ODU0/OPU0-STM4/STS12

OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1

-ODTU01-ODU0/OPU0-STM1/STS3

OTU2-ODU2/OPU2-PRBS

OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1-PRBS

OTU2-ODU2/OPU2-ODTU2.1-ODU0/OPU0-PRBS

OTU2-ODU2/OPU2-NULL

OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1-NULL

OTU2-ODU2/OPU2-ODTU2.1-ODU0/OPU0-NULL

### OTU2 (Client FC)

OTU2-ODU2/OPU2-ODTU2.ts-ODUflex-FC800 OTU2-ODU2/OPU2-ODTU2.ts-ODUflex-FC400

```
Measurement Functionality
     OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1-FC200
     OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1
                                          -ODTU01-ODU0/OPU0-FC100
     OTU2-ODU2/OPU2-ODTU2.1-ODU0/OPU0-FC100
OTU2 (Client CPRI)
     OTU2-ODU2/OPU2-ODTU2.ts-ODUflex-9830.4 M(CPRI)
     OTU2-ODU2/OPU2-ODTU2.ts-ODUflex-6144.0 M(CPRI)
     OTU2-ODU2/OPU2-ODTU2.ts-ODUflex-4915.2 M(CPRI)
     OTU2-ODU2/OPU2-ODTU2.ts-ODUflex-3072.0 M(CPRI)
     OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1-2457.6 M(CPRI)
     OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1
                                   -ODTU01-ODU0/OPU0-1228.8 M(CPRI)
     OTU2-ODU2/OPU2-ODTU2.1-ODU0/OPU0-1228.8 M(CPRI)
     OTU2-ODU2/OPU2-ODTU12(PT=20,21)-ODU1/OPU1
                                    -ODTU01-ODU0/OPU0-614.4 M(CPRI)
     OTU2-ODU2/OPU2-ODTU2.1-ODU0/OPU0-614.4 M(CPRI)
OTU1 (Client PRBS)
     OTU1-ODU1/OPU1-PRBS
     OTU1-ODU1/OPU1-ODTU01-ODU0/OPU0-PRBS
OTU1 (Client Null)
     OTU1-ODU1/OPU1-NULL
     OTU1-ODU1/OPU1-ODTU01-ODU0/OPU0-NULL
OTU1 (Client Ethernet)
     OTU1-ODU1/OPU1-ODTU01-ODU0/OPU0-GbE
OTU1 (Client SDH/SONET)
     OTU1-ODU1/OPU1-STM16(Async)/STS48(Async)
     OTU1-ODU1/OPU1-ODTU01-ODU0/OPU0-STM4/STS12
     OTU1-ODU1/OPU1-ODTU01-ODU0/OPU0-STM1/STS3
     OTU1-ODU1/OPU1-PRBS
     OTU1-ODU1/OPU1-ODTU01-ODU0/OPU0-PRBS
     OTU1-ODU1/OPU1-ODTU01-ODU0/OPU0-NULL
OTU1 (Client FC)
     OTU1-ODU1/OPU1-FC200
     OTU1-ODU1/OPU1-ODTU01-ODU0/OPU0-FC100
OTU1 (Client CPRI)
     OTU1-ODU1/OPU1-2457.6 M(CPRI)
     OTU1-ODU1/OPU1-ODTU01-ODU0/OPU0-1228.8 M(CPRI)
     OTU1-ODU1/OPU1-ODTU01-ODU0/OPU0-614.4 M(CPRI)
```

OTU1e/2e (Client PRBS)

OTU1e-ODU1e/OPU1e-PRBS

623

OTU2e-ODU2e/OPU2e-PRBS

OTU1e/2e (Client Null)

OTU1e-ODU1e/OPU1e-NULL OTU2e-ODU2e/OPU2e-NULL

OTU1e/2e (Client Ethernet)

OTU1e-ODU1e/OPU1e-10GbE OTU2e-ODU2e/OPU2e-10GbE

OTU2e (Client FC)

OTU2e-ODU2e/OPU2e-FC1200

OTU1f/2f (Client PRBS)

OTU1f-ODU1f/OPU1f-PRBS OTU2f-ODU2f/OPU2f-PRBS

OTU1f/2f (Client Null)

OTU1f-ODU1f/OPU1f-NULL OTU2f-ODU2f/OPU2f-NULL

OTU1f/2f (Client FC)

OTU1f-ODU1f/OPU1f-FC1200 OTU2f-ODU2f/OPU2f-FC1200

\*: Available if "Enable two ports" check box is not selected.

Client Signals Client Signals

Refer to Section SDH/SONET, Ethernet, Fibre Channel and CPRI.

For the restriction if the "Enables two ports" check box is selecting, refer to

Restriction for using two ports.

Test Pattern PRBS:  $2^9-1$ ,  $2^{11}-1$ ,  $2^{15}-1$ ,  $2^{20}-1$ ,  $2^{23}-1$ ,  $2^{29}-1$ ,  $2^{31}-1$  with polarization

Normal / Inverted

User Pattern: 32bits, 2048bits

 $\textbf{Measurement channel} \ \ Dummy \ (Unused), \ Copy$ 

Tributary Port and Slot can be configured in ODTU mapping.

FEC Encode/Decode RS(255,239) described in ITU-T Rec. G709, No FEC

OH Edit All OTU, ODU bytes except MFAS and BIP8

TTI, FTFL bytes with multi-frame manner

TTI measurement Condition for detecting TIM can be selected.

TCM measurement On/Off

12.8.3.2 OTN Stimuli

```
Alarm Insertion
                     OTL*
                           OOF/LOF, OOR/LOR
                     OTU, ODU *
                           LOS, OTU-AIS, OOF/LOF, OOM/LOM, SM-TIM, SM-BIAE, SM-BDI, SM-IAE,
                           ODU-AIS, ODU-OCI, ODU-LCK, PM-TIM, PM-BDI, FSF, FSD, BSF, BSD,
                           TCMi-TIM, TCMi-BIAE, TCMi-BDI, TCMi-IAE, TCMi-LTC (i=1-6)
                     Multiplexed ODU
                           OOF/LOF, OOM/LOM, ODU-AIS, ODU-OCI, ODU-LCK, PM-TIM, PM-BDI,
                           FSF, FSD, BSF, BSD
                     Client
                           Client-AIS, CSF
                     Insertion timing
                           Single, Burst, Alternate, All
                     *: Available for both of Normal mode and Through mode
Error Insertion
                     OTL<sup>*</sup>
                           MFAS, LLM
                     OTU, ODU *
                            Bitall, FAS, MFAS, SM-BIP8, SM-BEI, PM-BIP8, PM-BEI, TCMi-BIP8, TCMi-
                           BEI (i=1-6), Uncorrectable Error, Correctable Error
                     Multiplexed ODU
                           FAS, PM-BIP8, PM-BEI
                     GMP
                           CRC8, CRC5, Invalid JC1, Invalid JC2, Invalid JC1&JC2
                     GFP
                           cHEC, tHEC, Superblock CRC
                           Inserted Error bits are editable.
                     Client
                           Bit Error
                     Insertion timing
                           Single, Burst, Alternate, Rate, Rate (Random for Bitall), All
                     *: Available for both of Normal mode and Through mode
Frequency Offset
                     \pm 200 ppm 0.1 ppm step
Payload Offset
                     Movement type
                           AMP
                           Burst Insertion (Positive(+1), Positive(+2), Positive(+3), Negative (-1),
                           Negative (-2))
                           GMP
                           Offset (ppm)
                     Offset
                           AMP
                           -131 ppm to +83 ppm (Depending on mapping configuration)
                           0.1 ppm step
                            -150 ppm to +150 ppm 0.1 ppm step
```

### 12.8.3.3 OTN Measurement

Alarm Detection OTL

LOF, OOF, LOR, OOR, ILA/OLA

OTU, ODU

LOS, OTU-AIS, LOF, OOF, LOM, OOM, SM-TIM, SM-BIAE, SM-BDI, SM-IAE, ODU-AIS, ODU-OCI, ODU-LCK, PM-TIM, PM-BDI, FSF, FSD, BSF, BSD, MSIM, TCMi-TIM, TCMi-BIAE, TCMi-BDI, TCMi-IAE, TCMi-LTC (i=1-6)

Multiplexed ODU

LOFLOM, OOF, OOM, ODU-AIS, ODU-OCI, ODU-LCK, PM-TIM, PM-BDI, MSIM

Client

Client-AIS, PLM, CSF, LSS

**Error Detection** 

OTL

FAS, MFAS, LLM

OTU, ODU

FAS, MFAS, SM-BIP8, SM-BEI, FEC Corrected, FEC Uncorrectable, PM-BIP8, PM-BEI, TCMi-BIP8, TCMi-BEI (i=1-6)

Multiplexed ODU

FAS, MFAS, PM-BIP8, PM-BEI

**GFP** 

cHEC corrected, cHEC uncorrectable, tHEC corrected,

tHEC uncorrectable, CSF Signal, CSF Sync, Invalid GFP Frame, Superblock CRC, eHEC corrected, eHEC uncorrectable, FCS,

CMF Sync, CMF Signal, SSF, PTI Mismatch, UPI Mismatch

Client

Bit Error

Justification analysis

Count

AMP

Positive(+1), Positive(+2), Negative(-1), offset(ppm)

GMP

CRC8 Error, CRC5 Error, Inc, Inc>1, Inc>2, Inc Over, Dec, Dec>1, Dec>2, Dec Over, offset(ppm), Cm(t) Max, Cm(t) Min

**OH Capture** 

OTU/ODU/OPU OH, Multiplexed ODU/OPU OH TTI bytes, FTFL bytes with Multi-frame Manner

Update timing

Repeat 1sec, Single

**Transceiver** 

Module Present

Transceiver Information

Alarm, Wavelength and bit rate, Compliance, Vendor Information, Output

Control

Power monitor

MDIO analysis

For CFP and CFP2:

NVR1, NVR2, Module FAWS, MW Lane FAWS, CTRL, MDIO Read/Write

I2C analysis

For QSFP+ and QSFP28 Adpt:

Lower, Lower (Lane), Upper (00), Upper (03), Read/Write

Setting

For CFP: VOD, Pre-Emphasis, Rx Equalizer

For CFP2: Attenuation, Pre-Emphasis, Rx Equalizer

APS Measurement Result : Average switching time, Maximum switching time, Minimum switching

time

Trigger

Start Trigger, Stop Trigger

 $\begin{array}{c} \text{Measurement Range} \\ \text{0.001 to } 10.000 \, \text{ms} \end{array}$ 

Error Free Period

1, 10, 100, 200, 300, 400, 500, 600, 700, 800, 900 and 1000 ms

OTN Performance Measurement

Standard

ITU-T Rec. G.8201, M.2401(M.2110)

Tributary Scan Supports up to 10 Gbps.

Detected Alarms

OTU-AIS, LOF, OOF, LOM, OOM, SM-BIAE, SM-BDI, SM-IAE, ODU-AIS, ODU-

OCI, ODU-LCK, PM-BDI, LOFLOM

Round Trip Delay Result: RTD Time

Measurement Range

0.5 seconds, 1 second, 2 seconds, 5 seconds, 10 seconds

Measurement Timing Single, Repeat

## 12.8.4 Fibre Channel

Port mode Off, FC100, FC200, FC400, FC800, FC1200, FC1600

**Topology** Point to Point, Fabric, E-Port

Framing SOF:Data:EOF, SOF:Header:Data:CRC:EOF

**Content** FOX, ALL5555, PRBS 9, PRBS 11, PRBS 15, PRBS 20, PRBS 23, PRBS 29,

PRBS 31, BHFTEST, BCRPAT, BJTPAT, BSPAT, USER\_32, ZERO

Alarm Insertion Item

Link reset, Link reset response, Not optional, Offline

**Error Insertion** Item

Bit, Symbol, Block, R\_RDY, CRC

Insertion timing Manual, Burst

Link Detection Signal Present, Sync Acquired, Link Status

**Login Detection** Fabric Login, Port Login, ELP

Pattern Detection Traffic, Pattern Sync, Pattern Error

**Transceiver** Module Present

Transceiver Information

Alarm, Wavelength and bit rate, Compliance, Vendor Information, Output

Control

Power monitor

BER Test BERT:

Pattern bit count, Pattern errors, Frame loss, Frame loss seconds, Pattern loss

seconds, Jitter, Latency, Service disruption

Symbol Errors Ordered Sets:

R\_RDY, LR, LRR, NOS, OLS

Traffic:

Frames, Bytes

Errors:

IFG, CRC, Symbol, CRD, Terminate, Errored

Line rate, Frame rate, Throughput

Size Distribution

**Performance** Test Mode:

Port to Port, Loopback

Test:

Throughput, Traffic Profile, Latency, Burst, Credit (Only for Loopback mode)

**Reflector mode** Supports Reflector application.

## 12.8.5 CPRI/OBSAI

Port mode Unframed: Off, Normal

CPRI Link: Off, Normal, Through

OBSAI Link: Off, Normal

Line rate CPRI: 614.4 Mbps, 1228.8 Mbps, 2457.6 Mbps, 3072.0 Mbps, 4915.2 Mbps,

6144.0 Mbps, 9830.4 Mbps, 10137.6 Mbps

OBSAI: 768 Mbps, 1536 Mbps, 3072.0 Mbps, 6144.0 Mbps

Clock Configuration Timing Source

Internal clockExternal clock

• GPS

• Received clock

Content Unframed, CPRI Link, OBSAI Link

Pattern PRBS 15, PRBS 20, PRBS 23, PRBS 29, PRBS 31, User 32 bit, OFF

CPRI Link Start up

Enabled, Disabled

Role

Master, Slave Protocol version

1, 2 HDLC rate

no HDLC, 240 kbit/s, 480 kbit/s, 960 kbit/s, 1920 kbit/s, 2400 kbit/s, Highest

possible

Ethernet

On, Off

Pointer: 20 to 63

OBSAI Link Force idle

Off, IDLE\_REQ, IDLE\_ACK

Scrambler seed index

0 to 17 RP3 address

0000 to 1FFF

RP3 type

WCDMA/FDD, GSM/EDGE, 802.16, LTE

Forced scrambler seed, Rx filter

Available

Alarm Insertion Item

Unframed: Signal loss, LSS

CPRI Link: Signal loss, LOS, LOF, LSS, Remote-LOS, Remote-LOF, RAI, SDI,

Reset

OBSAI Link: Signal loss, LOF, LSS

**Error Insertion** Item

Unframed: Pattern error

CPRI Link: LCV, SHV, K30.7, Pattern error OBSAI Link: LCV, K30.7, Pattern error

Insertion timing
Manual, Rate

Frequency Offset  $\pm 100 \text{ ppm } 1 \text{ ppm step}$ 

Alarm Detection Unframed: Signal loss, LSS

CPRI Link: Signal loss, LOS, LOF, LSS

OBSAI Link: Signal loss, LOF, No message, LSS

**Error Detection** Unframed: Pattern error

CPRI Link: LCV, SHV, K30.7, Pattern error OBSAI Link: LCV, K30.7, Pattern error

Remote status CPRI Link: Remote LOS, Remote LOF, RAI, SDI, Reset

Link CPRI Link:

Rx/Tx: Protocol version, HDLC rate, Pointer

OBSAI Link:

Tx state, Rx state

**Transceiver** Module Present

Transceiver Information

Alarm, Wavelength and bit rate, Compliance, Vendor Information, Output

Control

Power monitor

BER Test Alarms:

Unframed: Signal loss, LSS

CPRI Link: Signal loss, LOS, LOF, LSS, Remote LOS, Remote LOF, RAI, SDI,

Reset

OBSAI Link: Signal loss, LOF, No message, LSS

Errors:

Unframed: Pattern error

CPRI Link: LCV, SHV, K30.7, Pattern error OBSAI Link: LCV, K30.7, Pattern error

Frames count:

CPRI Link: Rx hyper frames, Rx code words, Tx hyper frames, Tx code words

OBSAI Link: Rx Message Groups, Tx Message Groups

Delay

Delay, Average Delay, Min Delay, Max Delay, Measurement count

APS

Switching Time

CPRI Pass Through Alarm:

Signal loss, LOS, LOF, LSS, Remote LOS, Remote LOF, RAI, SDI, Reset

Errors:

LCV, SHV, K30.7

Frames count:

Rx hyper frames, Rx code words, Tx hyper frames, Tx code words

### 12.8.6 Device Test

Interface Type Off, QSFP+, CFP, CXP, CFP2, QSFP28 Adpt

Bit Rate Off, 40G Ethernet, 100G Ethernet, STM256/OC768, OTU3, OTU3e1, OTU3e2,

OTU4

Lane Select 4 Lane, 10 Lane, 20 Lane

Timing source • Internal clock

• External clock

**Test Pattern** PRBS7, PRBS9, PRBS15, PRBS23, PRBS31, Square Wave\*

\*: Square Wave is available only for Tx pattern.

Frequency Offset  $\pm 200 \text{ ppm } 0.1 \text{ ppm step}$ 

Error Insertion

Item

Bit Error

Insertion timing Single

**Monitor** Signal level: dBm

Frequency: Hz, ppm

LOS, LSS, CDR Lock, Bit error

**Transceiver** Module Present

Transceiver Information

Alarm, Wavelength and bit rate, Compliance, Vendor Information, Output

Control

Power monitor

MDIO analysis

For CFP and CFP2:

NVR1, NVR2, Module FAWS, MW Lane FAWS, CTRL, MDIO Read/Write

I2C analysis

For QSFP+ and QSFP28 Adpt:

Lower, Lower (Lane), Upper (00), Upper (03), Read/Write

Setting

For CFP: VOD, Pre-Emphasis, Rx Equalizer

For CFP2: Attenuation, Pre-Emphasis, Rx Equalizer

No Frame Measurements

Bit Error, Frequency

# 12.9 Optical Modules



Correct functionality can only be guaranteed with optical modules purchased from Anritsu for the MU110010A, MU110011A, MU110012A, and MU110013A.

### Safety measures for laser products

Optical modules for the MU110010A, MU110011A, MU110012A, and MU110013A comply with optical safety standards in IEC 60825-1.

### Specifications

Specification of optical modules purchased from Anritsu for the MU110010A and MU110011A (each with 1 transmitter and 1 receiver) with LC connectors (subject to change without further notice):

Order No./ Name	Description	Min. Input	Input	Output	Output
	(Approx. Distance)	Sensitivity	Wavelength	Power	Wavelength
G0311A	1000BASE - SX 850 nm	-17 dBm	770 to 860	-9.5 to -3	830 to 860
1G 850 nm SX SFP	Multi mode (0.5 km)		nm	dBm	nm
G0312A	1000BASE - LX 1310 nm	-18 dBm	1260 to	-10 to -3	1260 to
1G 1310 nm LX SFP	Single mode (10 km)		1580 nm	dBm	1360 nm
G0313A	1000BASE - ZX 1550 nm	-23 dBm	1260 to	-2 to 5	1480 to
1G 1550 nm ZX SFP	Single mode (80 km)		1580 nm	dBm	1580 nm
G0315A	10GBASE - LR 1310 nm	-14.4 dBm	1260 to	-6 to -1	1290 to
10G LR/LW 1310 nm SFP+	Single mode (10 km)		1565 nm	dBm	1330 nm
G0316A 10G ER/EW 1550 nm 40 km SFP+	10GBASE - ER 1550 nm Single mode (40 km)	-15.8 dBm	1260 to 1565 nm	-3 to 3 dBm	1530 to 1560 nm
G0318A 10G ZR/ZW 1550 nm 80 km SFP+	10GBASE - ER 1550 nm Single mode (80 km)	-22 dBm	1260 to 1565 nm	0 to 5 dBm	1525 to 1565 nm
G0319A	STM-1/-4/-16 short haul,	-18 dBm	1270 to	-5 to 0	1260 to
Up to 2.7G 1310 nm 15 km SFP	1310 nm (15 km)		1580 nm	dBm	1360 nm
G0320A	STM-1/-4/-16 long haul,	-27 dBm	1270 to	-2 to 3	1280 to
Up to 2.7G 1310 nm 40 km SFP	1310 nm (40 km)		1580 nm	dBm	1335 nm
G0321A	STM-1/-4/-16 long haul,	-28 dBm	1270 to	-2 to 3	1500 to
Up to 2.7G 1550 nm 80 km SFP	1550 nm (80 km)		1580 nm	dBm	1580 nm
G0322A	1GFC, 2GFC, 4GFC	-18 dBm	1260 to	-8 to 0	1260 to
1G/2G/4G FC 1310 nm SFP	1310 nm (10 km)		1360 nm	dBm	1360 nm
G0323A	1GFC, 2GFC, 4GFC	-18 dBm	1470 to	0 to 5	1510 to
1G/2G/4G FC 1550 nm SFP	1550 nm (40 km)		1600 nm	dBm	1590 nm
G0328A	1GFC, 2GFC, 4GFC	-15 dBm	830 to 860	-9 to 0	830 to 860
1G/2G/4G FC 850 nm SFP	850 nm (0.5 km)		nm	dBm	nm
G0329A	10GBASE - LR 1310 nm	-14 dBm	1260 to	-8.2 to 0.5	1260 to
10G LR 1310 nm SFP+	Single mode (10 km)		1355 nm	dBm	1355 nm
G0332A	100BASE-FX 1310 nm	-31 dBm	1270 to	-20 to -15	1280 to
100 M FX 1310 nm MM SFP	Multi mode (2 km)		1600 nm	dBm	1380 nm
G0333A	10GBASE - SR 850 nm	-11.1 dBm	840 to 860	-7.3 to -1	840 to 860
10G SR/SW 850 nm SFP+	Multi mode (0.3 km)		nm	dBm	nm

Order No./ Name		Min. Input Sensitivity	Input Wavelength	Output Power	Output Wavelength
G0356A	8G FC/10G SR 850 nm SFP+	-11.1 dBm	840 to 860	-8.2 to -1	840 to 860
8G FC/10G SR 850 nm SFP+	OG 1 C / 10G SK 650 IIII SFF+	-11.1 UDIII	nm	dBm	nm

Specification of optical modules purchased from Anritsu for the MU110011A, MU110012A, and MU110013A with LC connectors (subject to change without further notice):

Order No./ Name	Description (Approx. Distance)	Min. Input Sensitivity	Input Wavelength	Output Power	Output Wavelength
G0281A CFP 100GBASE-SR10	100GBASE-SR10 Multi mode 850 nm (0.5 km)	-17 dBm	840 to 860 nm	-9.5 to -3 dBm	840 to 860 nm
G0334A 40G LR4 1310 nm QSFP+	40G Ethernet/OTN Single mode 1310 nm (10 km)	-11.5 dBm per Lane	1264.5 to 1277.5 nm 1284.5 to 1297.5 nm 1304.5 to 1317.5 nm 1324.5 to 1337.5 nm	Total: 8.3 dBm max. -2 to 2.3 dBm per Lane	1264.5 to 1277.5 nm 1284.5 to 1297.5 nm 1304.5 to 1317.5 nm 1324.5 to 1337.5 nm
G0335A 40G LR4 1310 nm CFP	40G Ethernet/OTN Single mode 1310 nm (10 km)	-11.1 dBm per Lane	1264.5 to 1277.5 nm 1284.5 to 1297.5 nm 1304.5 to 1317.5 nm 1324.5 to 1337.5 nm	Total: 8.3 dBm max. -2 to 2.3 dBm per Lane	1264.5 to 1277.5 nm 1284.5 to 1297.5 nm 1304.5 to 1317.5 nm 1324.5 to 1337.5 nm
G0336A 40G LR4 1550 nm CFP	40G SDH/OTN Single mode 1550 nm (2 km)	-6 dBm	1530 to 1565 nm	0 to 3 dBm	1530 to 1565 nm
G0337A 100G LR4 1310 nm CFP	100G Ethernet/OTN Single mode 1310 nm (10 km)	-10.3 dBm per Lane	1294.53 to 1296.59 nm 1299.02 to 1301.09 nm 1303.54 to 1305.63 nm 1308.09 to 1310.19 nm	max.	1294.53 to 1296.59 nm 1299.02 to 1301.09 nm 1303.54 to 1305.63 nm 1308.09 to 1310.19 nm
G0359A 40G SR4 850 nm QSFP+	40GBASE-SR4 Multi mode 850 nm (0.1 km)	-9.9 dBm	840 to 860 nm	-8 to 2.4 dBm	840 to 860 nm

Specification of optical modules purchased from Anritsu for the MU110011A, MU110012A, and MU110013A with LC connectors (Cont'd)

Order No./ Name	Description (Approx. Distance)	Min. Input Sensitivity	Input Wavelength	Output Power	Output Wavelength
G0338A 100G LR4 1310 nm CFP2	100G Ethernet/OTN Single mode 1310 nm (10 km)	-10.3 dBm per Lane	1294.53 to 1296.59 nm 1299.02 to 1301.09 nm 1303.54 to 1305.63 nm 1308.09 to 1310.19 nm	max.	1294.53 to 1296.59 nm 1299.02 to 1301.09 nm 1303.54 to 1305.63 nm 1308.09 to 1310.19 nm
G0339A 100G 850 nm CXP	100G Ethernet Multi mode 850 nm (0.1 km)	-9.5 dBm per Lane	840 to 860 nm	Total: 8.9 dBm max. -7.6 to 2.4 dBm per Lane	840 to 860 nm
G0364A 100G LR4 1310 nm QSFP28	100G Ethernet/OTN Single mode 1310 nm (10 km)	-8.6 dBm per Lane	1294.53 to 1296.59 nm 1299.02 to 1301.09 nm 1303.54 to 1305.63 nm 1308.09 to 1310.19 nm	max.	1294.53 to 1296.59 nm 1299.02 to 1301.09 nm 1303.54 to 1305.63 nm 1308.09 to 1310.19 nm
G0365A 100G LR4 Dual Rate 1310 nm QSFP28	100G Ethernet/OTN Single mode 1310 nm (10 km)	-8.4 dBm per Lane	1294.53 to 1296.59 nm 1299.02 to 1301.09 nm 1303.54 to 1305.63 nm 1308.09 to 1310.19 nm	max.	1294.53 to 1296.59 nm 1299.02 to 1301.09 nm 1303.54 to 1305.63 nm 1308.09 to 1310.19 nm
G0366A 100G SR4 850 nm QSFP28	100G Ethernet Multi mode 850 nm (0.1 km)	-9.9 dBm per Lane	840 to 860 nm	Total: 8.9 dBm max. -9.1 to 2.4 dBm per Lane	840 to 860 nm
G0369A 100G LR4 Dual Rate 1310 nm CFP4	100G Ethernet/OTN Single mode 1310 nm (10 km)	-8.6 dBm per Lane	1294.53 to 1296.59 nm 1299.02 to 1301.09 nm 1303.54 to 1305.63 nm 1308.09 to 1310.19 nm	max.	1294.53 to 1296.59 nm 1299.02 to 1301.09 nm 1303.54 to 1305.63 nm 1308.09 to 1310.19 nm

# 13 Support

This chapter contains information about general maintenance of the Network Master. It also contains information on how to obtain support or service assistance.

# 13.1 Maintenance and Cleaning

This section contains information about general maintenance and cleaning of the Network Master.

### 13.1.1 Maintenance

The Network Master does not require any regular adjustments.

Using the Network Master in a normal environment and under normal conditions will not call for general maintenance.

There are no user-serviceable parts in the Network Master. Possible service or repair should be performed by Anritsu authorized personnel only.

# 13.1.2 Cleaning

From time to time the Network Master needs to be cleaned. The surfaces of the Network Master can be cleaned with any mild detergent that does not contain solvents.

Before any cleaning, please take notice of the warnings below:



# Disconnect the Network Master from the mains power connection before any cleaning involving fluid.

- Only use a soft cloth moisturized with a mild detergent to clean the surface of the touch screen.
- Clean the inlet regularly. If dust accumulates around the power pins, there is a risk of fire.
- Keep the cooling fan clean so that the ventilation holes are not obstructed. If the ventilation is obstructed, the cabinet may overheat and catch fire.

# 13.1.3 Storage

Wipe off dust, fingerprint marks, stains, spots, etc. from the surface of the Network Master before storing it. Avoid storing the Network Master in these places

- In direct sunlight for extended periods
- Outdoors
- In excessively dusty locations
- Where condensation may occur
- In liquids, such as water, oil, or organic solvents, and medical fluids, or places where these liquids may adhere
- In salty air or in place chemically active gases (sulfur dioxide, hydrogen sulfide, chlorine, ammonia, nitrogen dioxide, or hydrogen chloride etc.) are present
- Where toppling over may occur
- In the presence of lubricating oil mists
- In places at an altitude of more than 2 000 m

- In the presence of frequent vibration or mechanical shock, such as in cars, ships, or airplanes
- Places with temperatures and relative humidity in the following ranges:

When including battery and AC adapter:

Temperature range of ≤ $-20^{\circ}$ C or ≥ $+50^{\circ}$ 

Humidity range of ≥90%

When excluding battery and AC adapter:

Temperature range of ≤ $-30^{\circ}$ C or ≥ $+60^{\circ}$ 

Humidity range of ≥90%

### Recommended storage conditions

It is recommended that the Network Master be stored in a place that meets the ambient conditions suggested above, plus the following conditions, if it is not to be used for a long period of time:

• Temperature: 5 to 30°C

• Humidity: 40 to 75%

• Little temperature and humidity fluctuations within one day

# 13.2 Calibration

MT1100A, MU110010A, MU110011A, MU110012A, and MU110013A do not require any calibration in the meaning of adjustment after shipment from factory.

In order to ensure measurements made by these instruments within the specifications, periodically running performance test (equivalent to the inspections made when shipping) for the instrument. The recommended frequency depends on the particular usage of the instruments, but generally yearly performance test is highly advised.

The final decision on performance verification frequency is to be taken by the user, as performance test verifies past measurements rather than guarantee future measurements.

In the event of this equipment malfunctions, contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed or in a separate file of the PDF version, of this manual.

The separate file is "A4\_address\_book\_e\_\*\*\*\*\*\*.pdf" stored in the Z1870A Utilities ROM. "\*\*\*\*\*\*" of the filename shows numeric characters.

# 13.3 Formatting the data area in the Network Master

Occasionally it is required to remove customer data from Network Master such as after instrument rental. With Software tools you can format Network Master internal data area.

Two data areas are available: Data area and Property area.

Data area contains user rewritable data. Property area contains system data.

Each area can be formatted with tools stored on a USB flash drive. The tools are stored on the Utilities ROM. Please refer to the following description to format.

To perform Data area formatting, copy

"REFORMAT\_DATA\_AREA.MT1000\_SW" to root of USB flash drive.

To perform Property area formatting, copy

"REFORMAT\_PROPERTY\_AREA.MT1000\_SW" to root of USB flash drive.

Place the format tools in the root of an empty of USB flash drive. To perform both kinds of formattings simultaneously, place both tools in the root together.

### **Procedure**

- 1. Remove power cord and turn instrument off. Power button turns off.
- 2. Insert the USB flash drive with the tools in one of the USB Type-A ports.
- 3. Connect power cord or push power button to turn power on. Then formatting is executed and Network Master will reboot automatically.
- 4. Remove USB flash drive. The formatting is completed.

# 13.4 Upgrading the Software



Connect the power cord to the Network Master while updating the software. When updating the software with battery operation, make sure that there is 40% (or more) power in the battery of the Network Master.

# 13.4.1 Installation by using USB flash drive

- 1. Copy the installer onto an empty USB flash drive.
- 2. If USB flash drive is inserted to the Network Master, remove it. If the Network Master is powered-down while the USB flash drive is still inserted, there is a risk that the USB flash drive may not operate normally after the installation.
- 3. Press the power button to shut down the Network Master. Never force to power off by holding the power button pressed for several seconds.
- 4. Remove power cord and confirm the power button turns to gray.
- 5. Insert the USB flash drive into the Network Master.
- 6. Connect power cord to the Network Master.
- 7. Press the power button to boot the Network Master.

  The Network Master will detect the installer stored in the USB flash drive, and start installing the software. After the installation has finished, the Network Master will reboot.

If the software is installed on battery operation without connecting power cord, Network Master does not reboot. Press the power button to boot the Network Master

- 8. Check the software version at <u>System Information</u> on the **Instrument Toolbar**.
- 9. Remove USB flash drive after the installation has completed.

### 13.4.2 Installation via Network

- 1. Install MX100001A MT1000A/MT1100A Control Software to PC by referring to 3.5.1 <u>Installation of Control Software</u>.
- 2. Configure the Control Software and the Network Master so that they can communicate via Ethernet by referring to 3.5.2 <u>Connection and Setup</u>.
- 3. Upgrade the software by referring to 3.5.5 Remote Upgrade.

# 13.5 Support and Service Assistance

In case your Network Master needs support or service, follow the instructions given in the sub-sections below.

# 13.5.1 Before you obtain assistance

To ensure fast help the Anritsu or the Anritsu representative need detailed information about the Network Master and the problems concerning the Network Master. The minimum information required is listed below:

- A file containing the system information. The file can be generated using the icon in the *instrument toolbar*.
- Possible error code displayed on the touch screen, or any other error indications
- A detailed description of the problem and how it occurred. Please make the
  description as detailed as possible, e.g. by drawing an illustration and/or
  saving relevant screen captures.

# 13.5.2 Data Backup

Data in mass storage may be deleted when servicing the Network Master. Before asking the support, backup the data according to following procedures.

### Backup to USB Flash Drive

- 1. Insert the USB flash drive to the USB port of the Network Master.
- 2. Touch on Instrument Toolbar.
- 3. Touch Selection Mode so that multiple files can be selected.
- 4. Touch Internal in left pane.
- 5. Touch all files displayed in right pane.
- 6. Touch **Copy** ( ).
- 7. Touch Usb in left pane.
- 8. Touch Paste ( ).
- 9. Touch Internal twice to display folders.
- 10. Touch a folder and copy it.
- 11. Touch Usb.
- 12. Touch **Paste** ( ). Copy all folders to the USB flash drive.

### Backup via USB Interface

- 1. Close all applications by touching X on the Application Tool Bar.
- 2. Connect the USB cable between PC and USB type B connector of the Service Interface.
- 3. If PC has detected the Network Master, copy files or folders to PC using PC software (Explorer of Windows etc.).

### 13.5.3 Obtaining Support or Service Assistance

In the event of this equipment malfunctions, contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

# 13.6 Transporting and Disposal

This section describes the precautions to observe when transporting and disposing of the main frame at the end of its useful life.

# 13.6.1 Repackaging

Use the original shipping materials, or an approved optional transit case, when repacking the unit for transport. Repack according to the following procedure when the original shipping materials (or a transit case) are not available.

- 1. Procure a corrugated cardboard, wooden, or aluminum box large enough to pack in cushioning material around the unit.
- 2. Wrap the main frame in some material such as plastic sheeting that will prevent entry of dust and water.
- 3. Place the unit into the box.
- 4. Pack soft materials around the main frame so that it cannot slide around inside the packing box.
- 5. Secure the outside of the box with packaging cord, adhesive tape, bands, or other such implements.

# 13.6.2 Transporting

In addition to preventing vibration as much as possible, transport under conditions meeting the storage conditions outlined above.

# 13.6.3 Disposal

When the Network Master has reached the end of its useful life, dispose of it in accordance with local environmental regulations. Before disposal, dismantle or physically destroy any non-volatile memory media in the Network Master to ensure that data in memory cannot be recovered by third parties.

# 13.7 Special Information

# 13.7.1 Equipment Certificate

Anritsu Corporation certifies that this equipment was tested before shipment using calibrated measuring instruments with direct traceability to public testing organizations recognized by national research laboratories, including the National Institute of Advanced Industrial Science and Technology, and the National Institute of Information and Communications Technology, and was found to meet the published specifications.

# 13.7.2 Anritsu Warranty

Anritsu Corporation will repair this equipment free-of-charge if a malfunction occurs within one year after shipment due to a manufacturing fault, and software bug fixes will be performed in accordance with the separate Software End-User License Agreement, provide, however, that Anritsu Corporation will deem this warranty void when:

- The fault is outside the scope of the warranty conditions separately described in the operation manual.
- The fault is due to mishandling, misuse, or unauthorized modification or repair of the equipment by the customer.
- The fault is due to severe usage clearly exceeding normal usage.
- The fault is due to improper or insufficient maintenance by the customer.
- The fault is due to natural disaster, including fire, wind or flood, earthquake, lightning strike, or volcanic ash, etc.
- The fault is due to damage caused by acts of destruction, including civil disturbance, riot, or war, etc.
- The fault is due to explosion, accident, or breakdown of any other machinery, facility, or plant, etc.
- The fault is due to use of non-specified peripheral or applied equipment or parts, or consumables, etc.
- The fault is due to use of a non-specified power supply or in a non-specified installation location.
- The fault is due to use in unusual environments (Note).
- The fault is due to activities or ingress of living organisms, such as insects, spiders, fungus, pollen, or seeds.

In addition, this warranty is valid only for the original equipment purchaser. It is not transferable if the equipment is resold.

Anritsu Corporation shall assume no liability for damage or financial loss of the customer due to the use of or a failure to use this equipment, unless the damage or loss is caused due to Anritsu Corporation's intentional or gross negligence.

### Note:

For the purpose of this Warranty, "unusual environments" means use:

- In places of direct sunlight
- In dusty places
- In liquids, such as water, oil, or organic solvents, and medical fluids, or places where these liquids may adhere

- In salty air or in places where chemically active gases (sulfur dioxide, hydrogen sulfide, chlorine, ammonia, nitrogen dioxide, or hydrogen chloride etc.) are present
- In places where high-intensity static electric charges or electromagnetic fields are present
- In places where abnormal power voltages (high or low) or instantaneous power failures occur
- In places where condensation occurs
- In the presence of lubricating oil mists
- In places at an altitude of more than 2,000 m
- In the presence of frequent vibration or mechanical shock, such as in cars, ships, or airplanes

# 13.7.3 Anritsu Corporation Contact

In the event of this equipment malfunctions, please contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

# 13.7.4 Licensing Information

This product includes copyrighted third-party software licensed under the terms of the GNU General Public License.

Please see the GNU General Public License for the exact terms and conditions of this license.

Especially the following parts of this product are subject to GNU GPL:

- The Linux operating system kernel
- The busybox swiss army knife of embedded linux
- e2fsprogs filesystem utilities for use with the ext2 filesystem

All listed software packages are copyrighted by their respective authors. Please see the source code for detailed information.

# 13.7.5 Availability of Source Code

Anritsu Corporation has the full source code of the GPL licensed software, including any scripts to control compilation of the object code.

# 13.8 Software License Document

Network Master comes with the package software as described in following Table. Note, however, that the package software is not covered by the Anritsu Software License Agreement.

Go to the following website for details of each license.

https://www.anritsu.com/ja-JP/test-

measurement/support/downloads/manuals/dwl16668

### **Software License**

Name	Version	License	
ace_tao	2.2a	custom	
alsa-lib	1.0.24.1	LGPL	
alsa-utils	1.0.24.2	GPL	
atk	2.10.0-1	LGPL	
at-spi	1.32.0-5	GPL	
at-spi2-atk	2.10.2-1	GPL2	
at-spi2-core	2.10.2-1	GPL2	
attr	2.4.47-1	LGPL	
avahi	0.6.31-11	LGPL	
bash	2.05b	GPL2	
binutils	2.24-1	GPL	
bluez	4.101	GPL	
bluez-tools	0.1.38	GPL	
busybox	1.20.2	GPL2	
cairo	1.12.16-1	LGPL,MPL	
compositeproto	0.4	MIT	
coreutils	8.23-1	GPL3	
cups-filters	1.0.41-1	GPL	
damageproto	1.1.0	MIT	
dbus	1.4.14	GPL,custom	
dbus-glib	0.82	GPL2,custom	
DirectFB	1.4.0	LGPL	
dosfstools	3.0.26-1	GPL2	
e2fsprogs	1.41.4	GPL	
expat	2.0.1	MIT	
fontconfig	2.11.0-1	custom	
font-util	1.0.1	MIT	
freetype	2.3.9	GPLorFTL	
gdb	6.6	GPL	
gdk-pixbuf2	2.30.2-1	LGPL2.1	
glib	1.2.10-11	LGPL	
glib2	2.38.2-1	LGPL	

# Software License (Cont'd)

Name	Version	License
glibc	2.17-5.1	GPL,LGPL
gmp	5.1.3-2	LGPL3
gnutls	3.2.7-1	GPL3,LGPL2.1
graphite	1:1.2.4-1	LGPL,GPL,custom
gsettings-desktop-schemas	3.10.1-1	GPL
gtk2	2.14.3	LGPL
gtk3	3.10.6-1	LGPL
gzip	1.6-1	GPL3
harfbuzz	0.9.24-1	MIT
hicolor-icon-theme	0.12-2	GPL2
hplip	3.14.1	custom
icewm	1.3.7	GPL
inputproto	1.4.4	MIT
jack	0.121.3-7	GPL,LGPL
kbproto	1.0.3	MIT
keyutils	1.5.8-1	GPL2,LGPL2.1
kobs-ng	12.09.01	GPL
krb5	1.11.4-1	custom
lcms2	2.5-2	MIT
libcap	2.22-5	GPL2
libcups	1.7.0-2	GPL
libdbus	3.5.7	GPL,custom
libdrm	2.3.1	MIT
liberation-fonts	20070509	GPL+exception
libffi	3.0.13-4	MIT
libfontenc	1.0.4	MIT
libgcrypt	1.5.3-1	LGPL
libgpg-error	1.12-1	LGPL
libICE	1.0.4	MIT
libidn	1.28-2	GPL3,LGPL
libjpeg-turbo	1.3.0-3	GPL,custom
liblzma	5.0.5-2	PublicDomain
libnfnetlink	0.0.25	GPL
libnl	3.2.23-1	GPL
libpciaccess	0.10.6	MIT
libpng	1.6.7-1	custom
libpthread-stubs	0.1	MIT
libSM	1.0.2	MIT
libtasn1	3.4-1	GPL3,LGPL
libtermcap	2.0.8	LGPL

# Software License (Cont'd)

Name	Version	License
libtiff	4.0.3-4	custom
libusb	1.0.9	LGPL
libusbx	1.0.17-1	LGPL
libx11	1.6.2-1	custom
libXau	1.0.4	MIT
libXaw	1.0.4	MIT
libxcb	1.9.1-2	custom
libxcomposite	0.4.4-1	custom
libxcursor	1.1.14-1	custom
libXext	1.0.4	MIT
libXfixes	4.0.3	MIT
libXfont	1.3.3	MIT
libXft	2.1.13	MIT
libxi	1.7.2-1	custom
libxinerama	1.1.3-2	custom
libxkbcommon	0.3.2-1	custom
libxkbfile	1.0.5	MIT
libxml2	2.6.28	MIT
libXmu	1.0.4	MIT
libXpm	3.5.7	MIT
libXrandr	1.3.0	MIT
libXrender	0.9.4	MIT
libXt	1.0.4	MIT
libxtst	1.2.2-1	custom
libxxf86vm	1.1.3-1	custom
linux-gpib	3.2.20	GPL2
linux_kernel	3.0.35	GPL2
lua	5.2.3-1	MIT
merge	0.1	GPL
mesa	10.0.1-1	custom
mesa-libgl	10.0.1-1	custom
modeps	1	GPL
ncurses	5.9-6	MIT
nettle	2.7.1-1	GPL2
newfs_msdos	1.33	BSD
obexftp	0.23	LGPL
opencv	3.1	BSD
openobex	1.5	LGPL
openssl	0.9.8g	custom
p11-kit	0.20.1-1	BSD

# Software License (Cont'd)

Name	Version	License
pango	1.36.1-1	LGPL
pcre	8.34-1	BSD
perf	3.0.35	GPL
pixman	0.32.4-1	custom
poppler	0.26.4-1	GPL
poppler-data	0.4.6-1	custom,GPL2
poppler-qt4	0.26.3-1	GPL
portaudio	19_20111121-	custom
portmap	5beta	BSD
qt4	4.8.2	GPL3,LGPL, FDL,custom
qwt	6.1.0rc3	LGPL
randrproto	1.2.2	MIT
readline	6.2.004-2	GPL
recordproto	1.13.2	MIT
renderproto	0.9.3	MIT
resourceproto	1.0.2	MIT
samba	3.6.23	GPL3
scrnsaverproto	1.1.0	MIT
talloc	2.1.1-1	GPL3
tcpdump	4.5.1-1	BSD
tcp_wrappers	7.6	BSD
timezone	2006n	BSD
tslib	1	LGPL
u-boot	Jan-13	GPL
udev	117	GPL
wayland	1.3.0-1	MIT
wget	1.15-1	GPL3
wireless_tools	29	GPL
wireshark	1.12.1	GPL2
wpa_supplicant	0.5.9	GPL
x11vnc	0.9.13-6	GPL2
xcb-proto	1.2	MIT
xcmiscproto	1.1.2	MIT
xextproto	7.0.3	MIT
xf86bigfontproto	1.1.2	MIT
xf86driproto	2.0.4	MIT
xorg-server	1.6.1	MIT
xorg-x11-drv-keyboard	1.3.2	MIT

# Software License (Cont'd)

Name	Version	License
xorg-x11-drv-mouse	1.4.0	MIT
xorg-x11-proto-devel	7.5	MIT
xorg-x11-xkb-utils	7.2	MIT
xproto	7.0.13	MIT
xterm	234	MIT
xtrans	1.2.3	MIT
zlib	1.2.8	zlibv

# 13.9 EULA License Document

#### Software End-User License Agreement (EULA)

Please carefully read and accept this Software End-User License Agreement (hereafter this EULA) before using (includes executing, copying, installing, registering, etc.) this Software (includes programs, databases, scenarios, etc., used to operate, set, etc., Anritsu electronic equipment, etc.). By using this Software, you shall be deemed to have agreed to be bound by the terms of this EULA, and Anritsu Corporation (hereafter Anritsu) hereby grants you the right to use this Software with the Anritsu specified equipment (hereafter Equipment) for the purposes set out in this EULA.

#### Article 1. Grant of License and Limitations

- 1. You may not to sell, transfer, rent, lease, lend, disclose, sublicense, or otherwise distribute this Software to third parties, whether or not paid therefor.
- 2. You may make one copy of this Software for backup purposes only.
- 3. You are not permitted to reverse engineer, disassemble, decompile, modify or create derivative works of this Software.
- 4. This EULA allows you to install one copy of this Software on one piece of Equipment.

#### Article 2. Disclaimers

To the extent not prohibited by law, in no event shall Anritsu be liable for direct, or any incidental, special, indirect or consequential damages whatsoever, including, without limitation, damages for loss of profits, loss of data, business interruption or any other commercial damages or losses, and damages claimed by third parties, arising out of or related to your use or inability to use this Software, unless the damages are caused due to Anritsu's intentional or gross negligence.

#### Article 3. Limitation of Liability

- 1. If a fault (bug) is discovered in this Software, failing this Software to operate as described in the operation manual or specifications even though you have used this Software as described in the manual, Anritsu shall at its own discretion, fix the bug, or replace the software, or suggest a workaround, free-of-charge, provided, however, that the faults caused by the following items and any of your lost or damaged data whatsoever shall be excluded from repair and the warranty.
  - i. If this Software is deemed to be used for purposes not described in the operation manual or specifications.
  - ii. If this Software has been used in conjunction with other non-Anritsuapproved software.
  - iii. If this Software or the Equipment has been modified, repaired, or otherwise altered without Anritsu's prior approval.
  - iv. For any other reasons out of Anritsu's direct control and responsibility, such as but not limited to, natural disasters, software virus infections, or any devices other than this Equipment, etc.
- 2. Expenses incurred for transport, hotel, daily allowance, etc., for on-site repairs or replacement by Anritsu engineers necessitated by the above faults shall be borne by you.
- 3. The warranty period for faults listed in Section 1 of this Article shall be either

6 months from the date of purchase of this Software or 30 days after the date of repair or replacement, whichever is longer.

#### Article 4. Export Restrictions

You shall not use or otherwise export or re-export directly or indirectly this Software except as authorized by the laws and regulations of Japan and the United States, etc. In particular, this Software shall not be exported or re-exported (a) into any Japan or US embargoed countries or (b) to anyone restricted by the Japanese export control regulations, or the US Treasury Department's list of Specially Designated Nationals or the US Department of Commerce Denied Persons List or Entity List. In using this Software, you warrant that you are not located in any such embargoed countries or on any such lists.

You also agree that you will not use or otherwise export or re-export this Software for any purposes prohibited by the Japanese and US laws and regulations, including, without limitation, the development, design and manufacture or production of missiles or nuclear, chemical or biological weapons of mass destruction, and conventional weapons.

#### Article 5. Change of Terms

Anritsu may change without your approval the terms of this EULA if the changes are for the benefit of general customers, or are reasonable in light of the purpose of this EULA and circumstances of the changes. At the time of change, Anritsu will inform you of those changes and its effective date, as a general rule 45 days, in advance on its website, or in writing or by e-mail.

#### Article 6. Termination

- 1. Anritsu may terminate this EULA immediately if you violate any conditions described herein. This EULA shall also be terminated immediately by Anritsu if there is any good reason that it is deemed difficult to continue this EULA, such as your violation of Anritsu copyrights, patents, etc. or any laws and ordinances, or if it turns out that you belong to an antisocial organization or has a socially inappropriate relationship with members of such organization.
- 2. You and Anritsu may terminate this EULA by a written notice to the other party 30 days in advance.

#### Article 7. Damages

If Anritsu suffers any damages or loss, financial or otherwise, due to your violation of the terms of this EULA, Anritsu shall have the right to seek proportional damages from you.

#### Article 8. Responsibility after Termination

Upon termination of this EULA in accordance with Article 6, you shall cease all uses of this Software immediately and shall as directed by Anritsu either destroy or return this Software and any backup copies, full or partial, to Anritsu.

#### Article 9. Negotiation for Dispute Resolution

If matters of interpretational dispute or items not covered under this EULA arise, they shall be resolved by negotiations in good faith between you and Anritsu.

# Article 10. Governing Law and Court of Jurisdiction

This EULA shall be governed by and interpreted in accordance with the laws of Japan without regard to the principles of the conflict of laws thereof, and any disputes arising from or in relation to this EULA that cannot be resolved by negotiation described in Article 9 shall be subject to and be settled by the exclusive agreed jurisdiction of the Tokyo District Court of Japan.

# Revision History:

February 29th, 2020

# 13.10 CE Conformity Marking

Anritsu affixes the CE conformity marking on the following product(s) in accordance with the Decision 768/2008/EC to indicate that they conform to the EMC, LVD, and RoHS directive of the European Union (EU).

CE marking



# 13.10.1 Product Model

Model:

MT1100A Network Master Flex

# 13.10.2 Applied Directive

EMC:

Directive 2014/30/EU

LVD:

Directive 2014/35/EU

RoHS:

Directive 2011/65/EU

### 13.10.3 Applied Standards

EMC:

Emission: EN 61326-1: 2013 (Class A) Immunity: EN 61326-1: 2013 (Table 2)

Standard	Performance Criteria*
IEC 61000-4-2 (ESD)	В
IEC 61000-4-3 (EMF)	A
IEC 61000-4-4 (Burst)	В
IEC 61000-4-5 (Surge)	В
IEC 61000-4-6 (CRF)	A
IEC 61000-4-8 (RPFMF)	A
IEC 61000-4-11 (V dip/short)	В, С

#### \*: Performance Criteria

- A. The equipment shall continue to operate as intended during and after the test. No degradation of performance or loss of function is allowed below a performance level specified by the manufacturer, when the equipment is used as intended. The performance level may be replaced by a permissible loss of performance. If the minimum performance level or the permissible performance loss is not specified by the manufacturer, either of these may be derived from the product description and documentation and what the user may reasonably expect from the equipment if used as intended.
- B. The equipment shall continue to operate as intended after the test. No degradation of performance or loss of function is allowed below a performance level specified by the manufacturer, when the equipment

is used as intended. The performance level may be replaced by a permissible loss of performance. During the test, degradation of performance is however allowed. No change of actual operating state or stored data is allowed. If the minimum performance level or the permissible performance loss is not specified by the manufacturer, either of these may be derived from the product description and documentation and what the user may reasonably expect from the equipment if used as intended.

C. Temporary loss of function is allowed, provided the function is self-recoverable or can be restored by the operation of the controls.

Harmonic current emissions:

EN 61000-3-2:2014 (Class A equipment)

LVD:

EN 61010-1:2010 (Pollution Degree 2)

RoHS:


EN 50581:2012 (Category 9)

If the third digit of the serial number is "7", the product complies with Directive 2011/65/EU as amended by (EU) 2015/863.

(Pb,Cd,Cr6+,Hg,PBB,PBDE,DEHP,BBP,DBP,DIBP)

If the third digit of the serial number is "6", the product complies with Directive 2011/65/EU.

(Pb,Cd,Cr6+,Hg,PBB,PBDE)



Serial number example

#### 13.10.4 Contact

Name: Anritsu GmbH

Address, City: Nemetschek Haus, Konrad-Zuse-Platz 1

81829 München,

Country: Germany

Name: ANRITSU EMEA Ltd

Address, City: 200 Capability Green, Luton

Bedfordshire, LU1 3LU

Country: United Kingdom

#### 13.10.5 CE Declaration



#### ANRITSU CORPORATION

5-1-1 Onna, Atsugi-shi, Kanagawa, 243-8555 Japan Phone: +81 46 223 1111

### **DECLARATION of CONFORMITY**

( (

Product: Anritsu Corporation

Model: MT1100A Serial: 62xxxxxxxx

Software name and version: Not reconfigurable radio

Accessories: J0491

This declaration of conformity is issued under the sole responsibility of the manufacturer

#### **Means of Conformity**

We declare under our sole responsibility that the Product (s) is conformity with the essential requirements and other relevant requirements of the Radio Equipment (RE) Directive (2014/53/EU).

Supplied by

Technical File held by

Anritsu Corporation

Anritsu Corporation

5-1-1 Onna Atsugi-shi Kanagawa,

5-1-1 Onna Atsugi-shi Kanagawa,

243-8555 Japan

243-8555 Japan

**Notified Body** 

N/A

N/A

Standard used for comply

RE Directive (Article 3.1(a) Safety)

EN 60950-1: 2006 + Amd.11: 2009 + Amd.1: 2010 +

Amd.12: 2011 EN 62311: 2008

RE Directive (Article 3.1(b) EMC)

EN 301 489-1 V2.1.1 EN 301 489-17 V3.1.1

EN 61326-1: 2013 EN 61000-3-2: 2014 EN 61000-3-3: 2008

**RE Directive** 

EN 300 328 V2.1.1

(Article 3.2 Spectrum)

Date of issue:

June 7, 2017

**Signature of Responsible Person:** 

Masato Arai Director

M, arai

Anritsu Corporation

No. TAA-1CENMX0010

# 13.11 RCM Conformity Marking

Anritsu affixes the RCM mark on the following product(s) in accordance with the regulation to indicate that they conform to the EMC framework of Australia/New Zealand.

RCM marking



# 13.11.1 Product Model

Model:

MT1100A Network Master Flex

# 13.11.2 Applied Standards

EMC:

Emission: EN 61326-1:2013 (Class A equipment)

# 13.12 Laser Safety

# 13.12.1 Laser Safety Classifications

Class 1 and 1M indicate the danger degree of the laser radiation specified below according to IEC 60825-1:2007.

#### Class 1:

Lasers that are safe under reasonably foreseeable conditions of operation, including the use of optical instruments for intrabeam viewing.

#### Class 1M:

Lasers emitting in the wavelength range from 302.5 to 4000 nm that are safe under reasonably foreseeable conditions of operation, but may be hazardous if the user employs optics within the beam. Two conditions apply:

- a. for diverging beams, if the user views the laser output with certain optical instruments (for example, eye loupes, magnifiers and microscopes) within a distance of 100 mm;
- b. for collimated beams, if the user views the laser output with certain optical instruments (for example, telescopes and binoculars).



The laser in the plug-in unit provided for this equipment is classified as Class 1 according to the IEC 60825-1:2007 standard, and is safe under reasonably foreseeable operating conditions.

Never use optical instruments to directly view Class 1M laser products. Doing so may result in serious damage to the eyes.



Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

The use of optical instruments with this product will increase eye hazard.

Table 1 Laser Safety Classifications Based on IEC 60825-1:2007

Model Name	Class	Class Max. Optical Output Power (mW)* Pulse Width (s		Emitted Beam Divergence (deg)		Laser Aperture	Incorporated Laser Specifications
MU110010A	1	0.5	CW	850	31.9	Figure 1,[1],[2]	Table 2 (a)
MU110011A	1	0.5	CW	1310	11.5	Figure 2,[4],[5]	Table 2 (b)
	1	2.0	CW	1550	11.5		Table 2 (c)
	1	0.8	CW	1310	11.5		Table 2 (d)
	1	2.0	CW	1550	11.5		Table 2 (e)
	1	2.0	CW	1550	11.5		Table 2 (f)
	1	1.0	CW	1310	11.5		Table 2 (g)
	1	2.0	CW	1310	11.5		Table 2 (h)
	1	2.0	CW	1550	11.5		Table 2 (i)
	1	1.0	CW	1310	11.5	]	Table 2 (j)
	1	3.2	CW	1550	11.5	]	Table 2 (k)
	1	0.6	CW	850	31.9	]	Table 2 (l)
	1	1.1	CW	1310	11.5		Table 2 (m)
	1	0.04	CW	1310	31.9	]	Table 2 (n)
	1	0.6	CW	850	31.9		Table 2 (o)
	1	0.78	CW	850	31.9		Table 2 (p)
MU110011A	1M	6.5	CW	850	23.0	Figure 2,[1]	Table 2 (q)
	1	7.8	CW	1310	11.5		Table 2 (r)
	1	2	CW	1550	11.5		Table 2 (s)
	1	6.8	CW	1310	11.5		Table 2 (t)
MU110011A	1M	5.0	CW	850	23.0	Figure 2,[2],[3]	Table 2 (u)
MU110012A MU110013A	1	6.8	CW	1310	11.5	Figure 3,[5],[6] Figure 4,[5],[6]	Table 2 (v)
MU110012A MU110013A	1	7.8	CW	1310	11.5	Figure 3,[1],[2] Figure 4,[1],[2]	Table 2 (w)
	1M	7.8	CW	850	23.0	Figure 3,[3],[4] Figure 4,[3],[4]	Table 2 (x)
	1	11.3	CW	1310	11.5	Figure 3,[1],[2]	Table 2 (y)
	1	10	CW	1310	11.5	Figure 4,[1],[2]	Table 2 (z)
	1M	7.8	CW	850	23.0		Table 2 (aa)
	1	11.3	CW	1310	11.5		Table 2 (ab)

<sup>\*</sup> Indicates the possible optical output power when each and every reasonably foreseeable single-fault condition is included.

Table 2 Incorporated Laser of MU110010A, MU110011A, MU110012A and MU110013A

	Incorporated Laser	Max. Optical Output Power (mW)*	Pulse Width (s)/ Repetition Rate	Emitted Wavelength (nm)	Beam Divergence (deg)
(a)	G0311A	0.5	CW	850	31.9
(b)	G0312A	0.5	CW	1310	11.5
(c)	G0313A	2.0	CW	1550	11.5
(d)	G0315A	0.8	CW	1310	11.5
(e)	G0316A	2.0	CW	1550	11.5
(f)	G0318A	2.0	CW	1550	11.5
(g)	G0319A	1.0	CW	1310	11.5
(h)	G0320A	2.0	CW	1310	11.5
(i)	G0321A	2.0	CW	1550	11.5
(j)	G0322A	1.0	CW	1310	11.5
(k)	G0323A	3.2	CW	1550	11.5
(1)	G0328A	0.6	CW	CW 850	
(m)	G0329A	1.1	CW	1310	11.5
(n)	G0332A	0.04	CW	1310	31.9
(o)	G0333A	0.6	CW	850	31.9
(p)	G0356A	0.8	CW	850	31.9
(q)	G0281A	6.5	CW	850	23.0
(r)	G0335A	7.8	CW	1310	11.5
(s)	G0336A	2	CW	1550	11.5
(t)	G0337A	6.8	CW	1310	11.5
(u)	G0359A	5.0	CW	850	23.0
(v)	G0334A	6.8	CW	1310	11.5
(w)	G0338A	7.8	CW	1310	11.5
(x)	G0339A	7.8	CW	850	23.0
(y)	G0364A	11.3	CW	1310	11.5
(z)	G0365A	10	CW	1310	11.5
(aa)	G0366A	7.8	CW	850	23.0
(ab)	G0369A	11.3	CW	1310	11.5

Indicates the possible optical output power when each and every reasonably foreseeable single-fault condition is included.

# 13.12.2 Indication Labels on Product

**Table 3 Labels on Product** 

	Туре	Label	Affix to	Model Name
1	Explanation (IEC 60825-1)	△ IEC 60825-1:2007 CLASS 1 LASER PRODUCT	Figure 1,A	MU110010A
2	Explanation (IEC 60825-1)	IEC 60825-1:2007 INVISIBLE LASER RADIATION DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS (MX OUTPUT POWER) (PULSE DURATION) (WAVELENGTH) 65mW OW 840 680mm CLASS 1M LASER PRODUCT	Figure 2,A	MU110011A
3	Explanation (IEC 60825-1)	IEC 60825-1:2007 INVISIBLE LASER RADIATION DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS (MX OUTPUT POWER) (PULSE DURATION) (WAVELENGTH) 7.8mW CW 840 6800mm CLASS 1M LASER PRODUCT	Figure 3,A	MU110012A
4	Explanation (IEC 60825-1)	IEC 60825-1:2007 INVISIBLE LASER RADIATION DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS (MX OUTPUT POWER) (PULSE DURATION) (WAVELENGTH) 7:8mW CW 840 6800mm CLASS 1M LASER PRODUCT	Figure 4,A	MU110013A
5	Certification (21 CFR 1040.10)	THIS PRODUCT COMPLIES WITH 21 CFR 1040.10 AND 1040.11 EXCEPT FOR DEVIATIONS PURSUANT TO LASER NOTICE NO. 50, DATED JUNE 24, 2007	Figure 5,A	MU110010A, MU110011A, MU110012A, MU110013A
6	Identification (21 CFR 1040.10)	IDENTIFICATION LABEL ANRITSU CORP. 5-1-1.0NNA,ATSUGI-SHI KANAGAWA 243-8555,JAPAN MANUFACTURED ATTOHOKU ANRITSU CO., LTD KORIYAMA PLANT,	Figure 5,B	MU110010A, MU110011A, MU110012A, MU110013A

# 13.12.3 Laser Radiation Markings



Figure 1: Locations of Laser Beam Aperture (MU110010A)

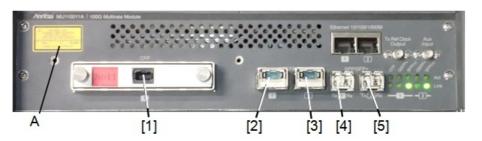


Figure 2: Locations of Laser Beam Aperture (MU110011A)

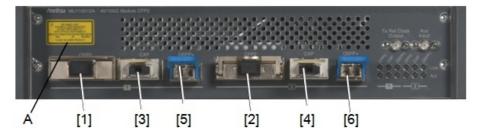


Figure 3: Locations of Laser Beam Aperture (MU110012A)

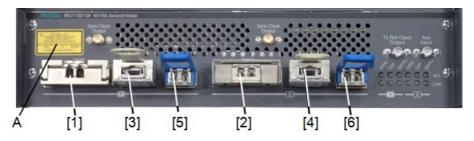


Figure 4: Locations of Laser Beam Aperture (MU110013A)



Figure 5: Locations of Affixed Labels

# 13.13 Wireless Certification

### 13.13.1 Japan MIC



MT1100A has obtained the certification of construction type of specified radio equipment.

# 13.13.2 North America (USA FCC and Canada IC)

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of this device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1. l'appareil ne doit pas produire de brouillage.
- 2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### **FCC CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

# 13.13.3 Europe CE



Hereby, Anritsu Corporation, declares that this instrument is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

#### 13.13.4 Mexico IFETEL

IFETEL certification number: RCPANMT16-0657



The operation of this equipment is subject to the following two conditions:

- 1. It is possible that this equipment or device may not cause harmful interference.
- 2. This equipment or device must accept any interference, including interference that may cause undesired operation.

La operación de este equipo está sujeta a las siguientes dos condiciones: :

- 1. es posible que este equipo o dispositivo no cause interferencia prejudicial.
- 2. este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

# 13.13.5 Singapore IMDA

Complies with IMDA Standards DA107532

MT1100A is certified IMDA wireless certification.

# 13.14 Declarations

# 13.14.1 Notes on Export Management

This product and its manuals may require an Export License/Approval by the Government of the product's country of origin for re-export from your country.

Before re-exporting the product or manuals, please contact us to confirm whether they are export-controlled items or not.

When you dispose of export-controlled items, the products/manuals need to be broken/shredded so as to be unlawfully used for military purposes.

# 13.14.2 Information for EU and EFTA Customers Only

Please recycle the battery





The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste. Check with your local solid-waste disposal officials for details of recycling options or proper disposal in your area.

Before disposing of this product, discharge the battery and mail it to your Anritsu Service or Sales office.

- 1. Disconnect the AC adapter, if used.
- 2. Turn the power switch to on.
- 3. Leave the product on until the power indicator goes off; the battery is now discharged.
- 4. Remove the battery.
- 5. Insulate the battery terminals with adhesive tape.
- 6. Please recycle in accordance with your national or regional legislation.



Equipment marked with the Crossed-out Wheeled Bin Symbol complies with council directive 2012/19/EU (the "WEEE directive") in European Union. For products placed on the EU market after August 13, 2005, please contact your local Anritsu representative at the end of the product's useful life to arrange disposal in accordance with your initial contract and the local law.

# 13.14.3 Information for U.S. Customers Only

Please recycle the battery



The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Before disposing of this product, discharge the battery and mail it to your Anritsu Service or Sales office.

- 1. Attach the battery pack to the product.
- 2. Disconnect the AC adapter, if used.
- 3. Turn the power switch to ON.
- 4. Leave the product on until the power indicator goes off; the battery is now discharged.
- 5. Remove the battery.
- 6. Insulate the battery terminals with adhesive tape.
- 7. Mail it to your Anritsu Service or Sales office, or to the address shown below.

#### ANRITSU COMPANY

490 Jarvis Drive, Morgan Hill, CA 95037-2809, USA

# 13.14.4 Information for the Chinese Market Only

Concerning declaration of China RoHS, please see the note below.



China RoHS is not 100% identical to the European (EU) RoHS. EU RoHS has exemptions for Pb and Hg in various alloys, soldering, displays and other products. The China RoHS declaration in the next table does **NOT** comply with EU RoHS.

产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素						
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 [Cr(VI)]	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
印刷线路板 (PCA)	×	0	×	×	0	0	
机壳、支架 (Chassis)	×	0	×	×	0	0	
LCD	×	×	×	×	0	0	
其他(电缆、风扇、 连接器等) (Appended goods)	×	0	×	×	0	0	

〇:表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规 定的限量要求以下。

#### 环保使用期限



这个标记是根据 2006/2/28 公布的「电子信息产品污染控制管理办法」以及 SJ/T 11364-2006「电子信息产品污染控制标识要求」的规定,适用于在中国 销售的电子信息产品的环保使用期限。仅限于在遵守该产品的安全规范及使用 注意事项的基础上,从生产日起算的该年限内,不会因产品所含有害物质的泄漏或突发性变异,而对环境污染,人身及财产产生深刻地影响。

注)电池的环保使用期限是5年。

<sup>×:</sup>表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363·2006 标准规定的限量要求。