



APPLICATION NOTE

MP1777A

10 GHz Jitter Analyzer

Copyright © 1999 by ANRITSU CORPORATION

Printed in Japan

All rights reserved. No part of this manual may be reproduced in any form without written permission of ANRITSU CORPORATION.

Contents

| | |
|----------------------------------------------------------------------------------------------------------------------------------------|----|
| 1. Preface----- | 1 |
| 2. Jitter Definition----- | 1 |
| 2.1 Jitter and Wander----- | 1 |
| 2.2 Quantity of Jitter----- | 2 |
| 2.3 Unit of Jitter----- | 3 |
| 3. Jitter Measurement----- | 5 |
| 3.1 Basic Jitter Test----- | 5 |
| 3.2 Jitter Tolerance Measurement----- | 5 |
| 3.3 Jitter Transfer Characteristics Measurement----- | 6 |
| 3.4 Jitter Generation Measurement----- | 6 |
| 4. MP1777A 10 GHz Jitter Analyzer----- | 7 |
| 5. Examples of Jitter Measurement and Configuration of Measuring Instrument----- | 8 |
| 5.1 Measurement Items----- | 8 |
| 5.2 Jitter Measurement Items and Configured Measuring Instrument----- | 8 |
| 6. Examples of Measurement----- | 9 |
| 6.1 Example of Jitter Tolerance Measurement for STM-64/OC-192 Clock Regeneration Module----- | 9 |
| 6.2 Example of Jitter Transfer Characteristics Measurement for STM-64/OC-192 Clock recovery Module----- | 13 |
| 6.3 Example of Jitter Generation Measurement for STM-64/OC-192 Clock recovery Module----- | 17 |
| 6.4 Example of Jitter Sweep Measurement for Clock recovery Module for Submarine Transmission System (G.975)----- | 20 |
| 6.5 Example of Jitter Transfer Characteristics Measurement for Clock recovery Module for Submarine Transmission System (G.975)----- | 24 |
| 6.6 Example of Jitter Generation Measurement for Clock recovery Module for Submarine Transmission System (G.975)----- | 28 |
| 6.7 Example of Jitter Tolerance Measurement for FEC (Forward Error Correction) Encoder and Decoder Module----- | 31 |
| 6.8 Example of Jitter Transfer Characteristics Measurement for FEC Encoder/Decoder Module----- | 35 |
| 6.9 Example of Jitter Generation Measurement for FEC Encoder/Decoder Module----- | 39 |
| 6.10 Example of Jitter Sweep Measurement for MUX/DEMUX Module----- | 42 |
| 6.11 Example of Jitter Generation Measurement for MUX/DEMUX Module----- | 46 |
| 6.12 Example of Frequency Tolerance Measurement for SDH/SONET Transmission Equipment----- | 49 |

| | |
|-----------------------------------------------------------------------------------|-----------|
| 6.13 Example of Jitter Tolerance Measurement for SDH/SONET Transmission | |
| Equipment | 51 |
| 6.14 Example of Frequency Tolerance Measurement for Submarine Transmission | |
| Equipment | 56 |
| 6.15 Example of Jitter Tolerance Measurement for Submarine Transmission | |
| Equipment | 58 |

1. Preface

This application note describes jitter measurement for the components and transmission equipment that make up STM-64/OC-192 (9.95328 Gbit/s) and submarine transmission system that are currently being extensively developed and installed. This application note explains jitter definition, what jitter measurement includes, and the features of jitter measuring instrument MP1777A, which conforms to new ITU-T recommendation O.172. It also describes examples of measurement using the equipment.

2. Jitter Definition

2.1 Jitter and Wander

In a digital network, the symptom in which the noise and transmission pattern on the transmission line disturb the timing of signals to be transmitted and put pulse waveforms out of phase before and after the average position is called jitter or wander (see Figure 2-1). There is no clear boundary between jitter and wander. However, generally, frequencies lower than a phase change frequency (phase modulation frequency) of 10 Hz are called wander frequencies. Frequencies higher than 10 Hz are called jitter frequencies (see Figure 2-2).

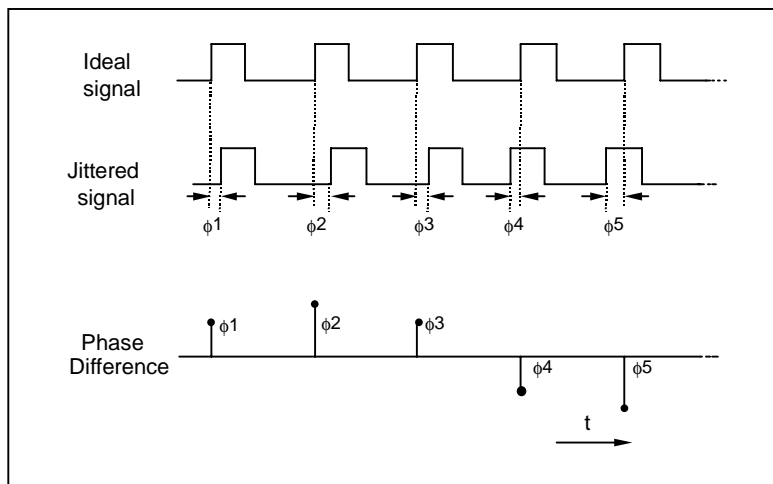


Figure 2-1 Jitter

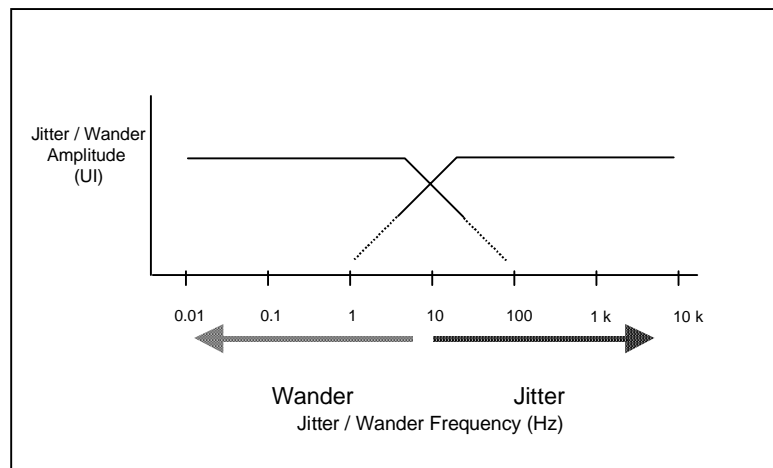


Figure 2-2 Jitter and wander

2.2 Quantity of Jitter

The quantity of jitter is represented as the amount of phase difference between the measured signal and reference signal. Figure 2-3 (a) and (b) show the waveforms of a reference signal and measured signals observed using an oscilloscope. The shaded areas near the rising and falling edges of the jittered signal shown in (b) of Figure 2-3 show the areas within which the edges momentarily fall as the signal enters and exits the phase states shown in (c) and (d) of Figure 2-3. The jitter difference between (c) and (d) is called the jitter amplitude, and the reciprocal of repetitive cycle (T_m) is called the jitter frequency (f_m).

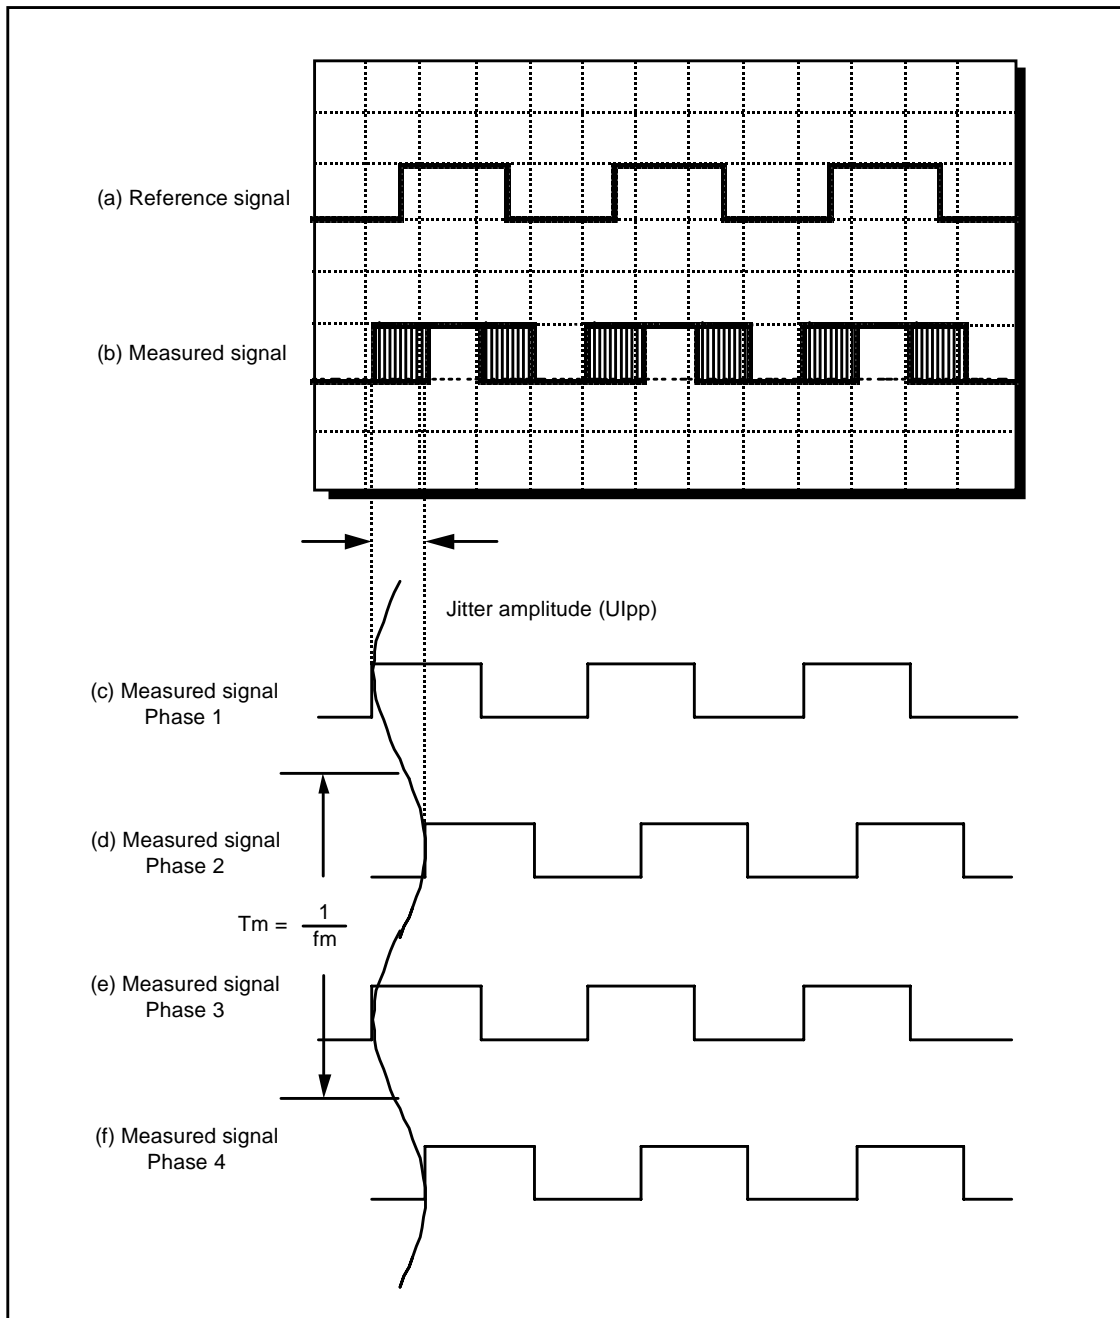


Figure 2-3 Jitter waveform

2.3 Unit of Jitter

Jitter is the phase change of a digital signal, and the quantity of jitter is an index for evaluating the transmission quality. All transmission codes require a common unit. Unit Interval (UI) is used as a unit that indicates the jitter amplitude. One UI is defined as one cycle of bit clock (see Figure 2-4). Two types of units: UI_{pp} (peak to peak of phase change width) and UI_{rms} (effective value of phase change width) are actually used. Since these units are standardization parameters that are bit rate independent, the quantity of jitter can be compared at different bit rates (see Figure 2-5).

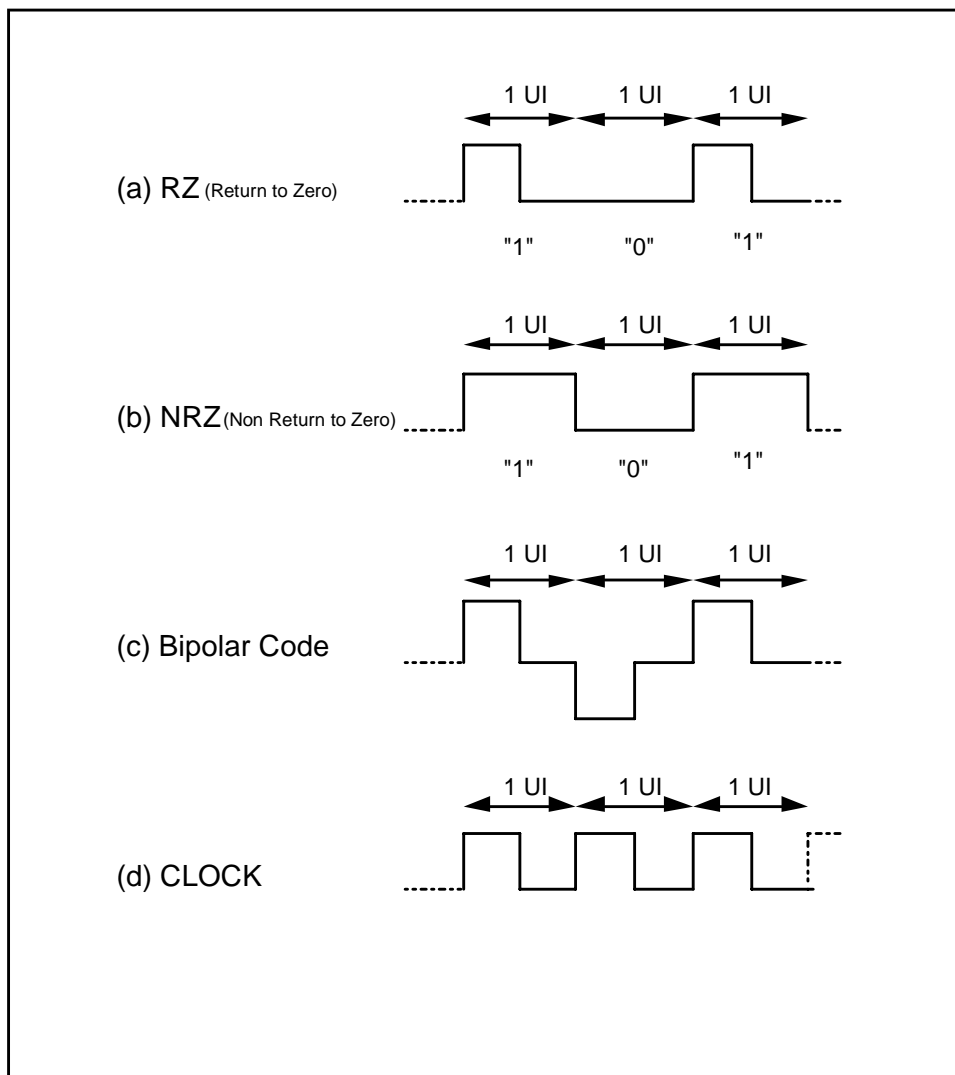


Figure 2-4 Unit of jitter (1)

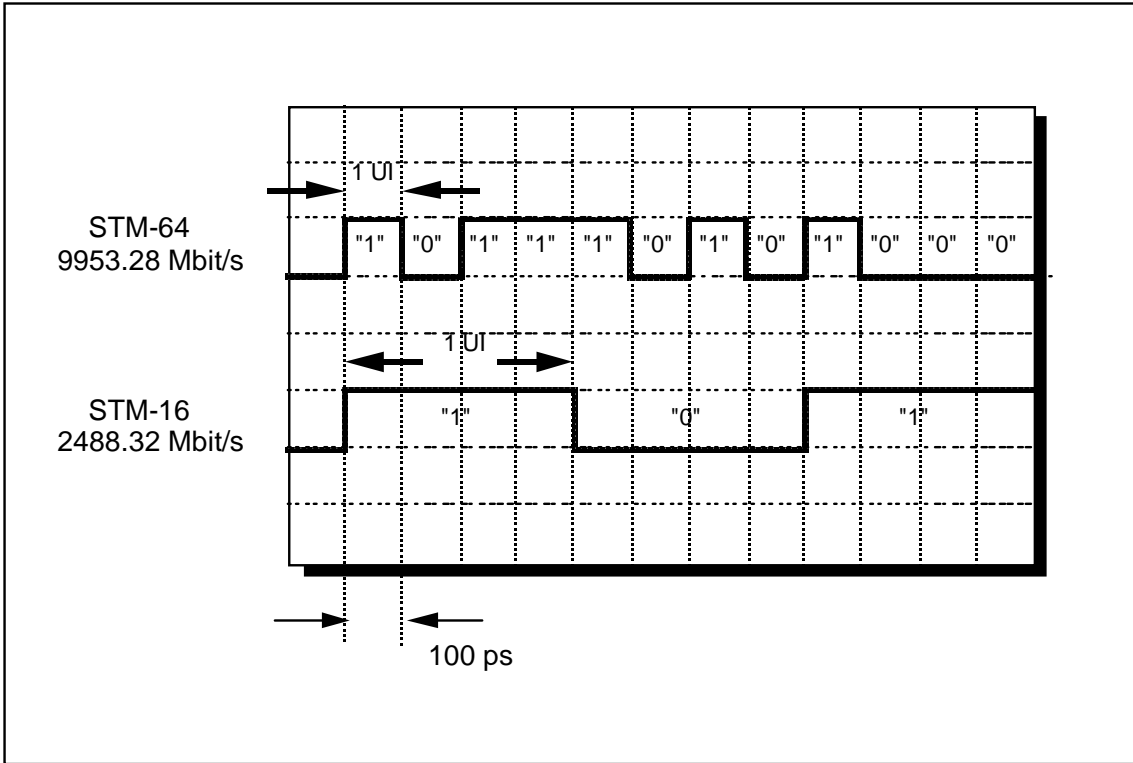


Figure 2-5 Unit of jitter (2)

3. Jitter Measurement

3.1 Basic Jitter Test

Since jitter significantly affects the network transmission quality, quantitative evaluation of jitter is required. The jitter performance test includes the following three basic tests:

1. Jitter tolerance measurement
2. Jitter transfer characteristics measurement
3. Jitter generation measurement

3.2 Jitter Tolerance Measurement

Jitter tolerance measurement evaluates to what extent a DUT operates without causing an error when the signal to be input to the DUT is sine-wave jitter modulated (sine-wave phase modulated) and the jitter amplitude is increased. The jitter tolerance of the DUT is evaluated by changing the jitter modulation frequency to repeat measurement and link the measurement results at measurement points as shown in Figure 3-1.

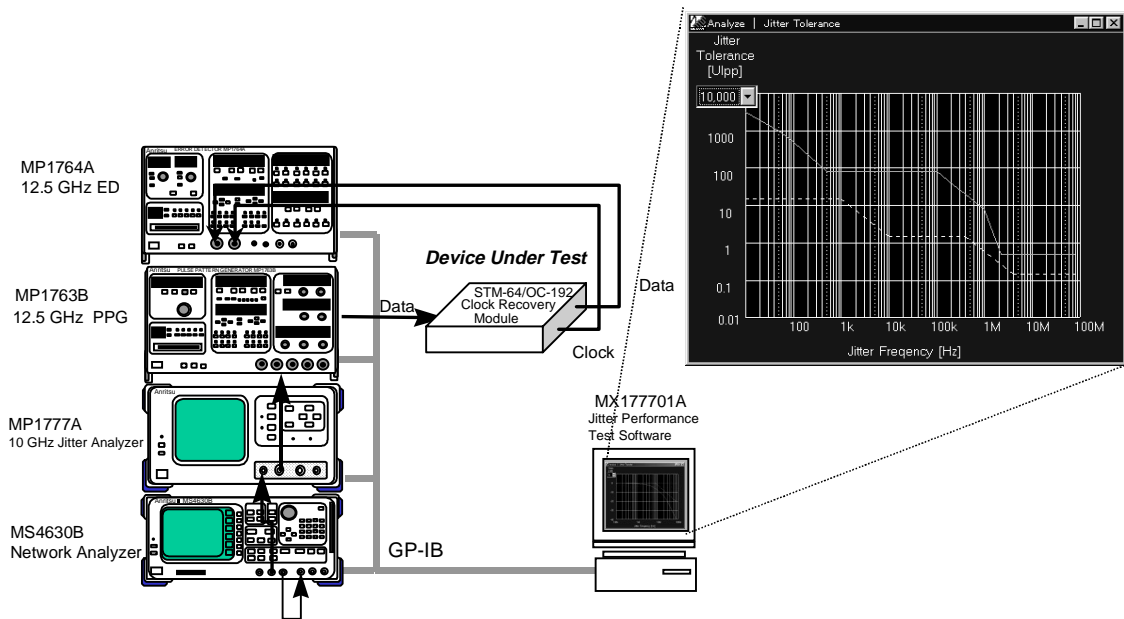


Figure 3-1 Jitter tolerance measurement

3.3 Jitter Transfer Characteristics Measurement

Jitter transfer characteristics measurement evaluates to what extent the jitter amplitude is transferred to the output side when the sine-wave modulated (sine-wave phase modulated) signal is input to a DUT. The measurement results are obtained from the jitter amplitude (J_{in}) added to the input side and the jitter amplitude (J_{out}) measured in the output side by expression (1). This measurement is very important for restricting jitter accumulation.

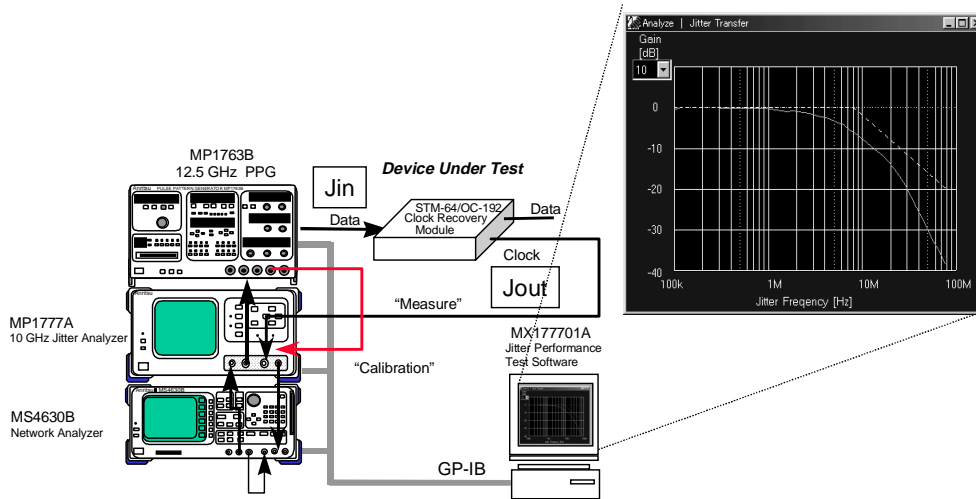


Figure 3-2 Jitter transfer characteristics measurement

$$\text{Jitter Gain (dB)} = 20 \text{ LOG } (J_{out}/J_{in}) \text{ -----Expression (1)}$$

3.4 Jitter Generation Measurement

Jitter generation measurement requires that the quantity of jitter generated by a DUT be 0.01 Urms or less at all STM-1 to 16/OC-1 to OC-48 bit rates. However, ITU-T has recently considered reviewing jitter generation measurement.

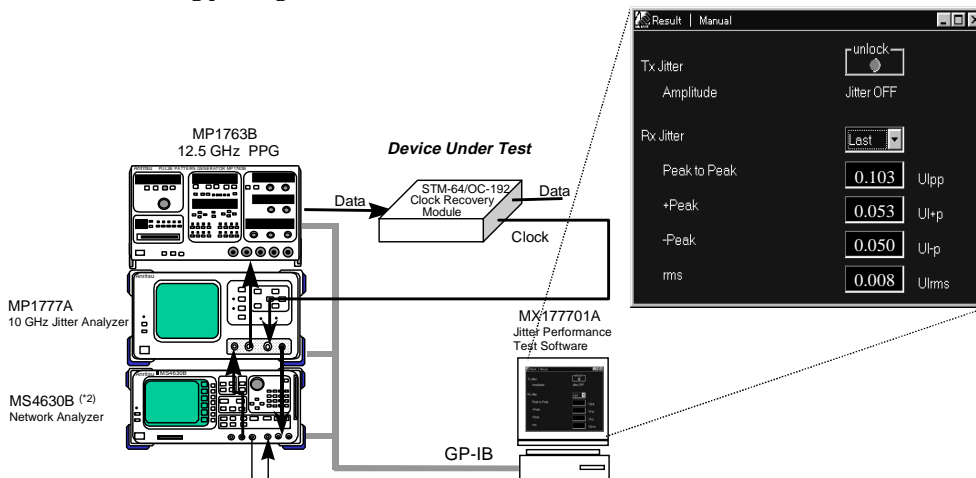


Figure 3-3 Jitter Generation Measurement

4. MP1777A 10 GHz Jitter Analyzer

The MP1777A 10 GHz Jitter Analyzer is the world-first measurement instrument that conforms to new ITU-T recommendation O.172 (SDH jitter measuring instrument standard) and supports jitter measurement at 10 Gbit/s. This jitter analyzer can be used in various applications such as development and production of STM-64/OC-192 transmission equipment and optical modules that are currently being installed in submarine transmission systems and main land network lines.

Features

- Jitter measurement that conforms to new ITU-T recommendation O.172 (March. 1999) is possible.

- Jitter bandwidth: 80 MHz

- Maximum jitter modulation amplitude: 3200 UIpp

- Bit rates that support the two-system submarine transmission system can be added.

Option 01: 2494.16 MHz, 4988.32 MHz, 9976.64 MHz

Option 02: 2666.0571 MHz, 5332.1142 MHz, 10664.2284 MHz (ITU-T G.975)

- Automatic jitter tolerance measurement

[Example of configuration]

MP1763B 12.5 GHz Pulse Pattern Generator

MP1764A 12.5 GHz Error Detector

MS4630B Network Analyzer

MX177701A Jitter Performance Test Software

- Automatic jitter transfer measurement

[Example of configuration]

MP1763B 12.5 GHz Pulse Pattern Generator

MS4630B Network Analyzer

MX177701A Jitter Performance Test Software



Figure 4-1 MP1777A

5. Examples of Jitter Measurement and Configuration of Measuring Instrument

5.1 Measurement Items

- (1) Jitter tolerance measurement for STM-64/OC-192 clock recovery module
- (2) Jitter transfer characteristics measurement for STM-64/OC-192 clock recovery module
- (3) Jitter generation measurement for STM-64/OC-192 clock recovery module
- (4) Jitter sweep measurement for clock recovery module for submarine transmission system
- (5) Jitter transfer characteristics measurement for clock recovery module for submarine transmission system
- (6) Jitter generation measurement for clock recovery module for submarine transmission system
- (7) Jitter tolerance measurement for FEC encoder and decoder module
- (8) Jitter transfer characteristics measurement for FEC encoder and decoder module
- (9) Jitter generation measurement for FEC encoder and decoder module
- (10) Jitter sweep measurement for MUX/DEMUX module
- (11) Jitter generation measurement for MUX/DEMUX module
- (12) Frequency tolerance measurement for SDH/SONET transmission equipment
- (13) Jitter tolerance measurement for SDH/SONET transmission equipment
- (14) Frequency tolerance measurement for submarine transmission equipment
- (15) Jitter tolerance measurement for submarine transmission equipment

5.2 Jitter Measurement Items and Configured Measuring Instrument

| | Measurement item | | | | | | | | | | | | | | |
|----------------------------------------------------------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|------|------|------------------|------------------|
| | (1) | (2) | (3) | (4) | (5) | (6) | (7) | (8) | (9) | (10) | (11) | (12) | (13) | (14) | (15) |
| MP1777A | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Option 01 2494M / 4988M / 9977M | | | | (✓) ⁴ | (✓) ⁴ | (✓) ⁴ | | ✓ | ✓ | (✓) ⁶ | (✓) ⁶ | | | | |
| Option 02 2494M / 4988M / 9977M | | | | ✓ | ✓ | ✓ | | (✓) | (✓) | (✓) ⁶ | (✓) ⁶ | | | | |
| Option 10 High-Sensitivity Input | | (✓) ² | (✓) ² | | (✓) ² | (✓) ² | | (✓) ² | (✓) ² | | (✓) ² | | | | |
| MP1763B 12.5 GHz PPG | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | (✓) ⁵ | (✓) ⁵ | (✓) ⁵ | ✓ | ✓ | | | | |
| MP1764A 12.5 GHz ED | ✓ | | | ✓ | | | (✓) ⁵ | | | ✓ | | | | | |
| MP3630A (Tx)* SDH/SONE Analyzer | (✓) ¹ | (✓) ¹ | (✓) ¹ | (✓) ¹ | (✓) ¹ | (✓) ¹ | ✓ | ✓ | ✓ | (✓) ¹ | (✓) ¹ | ✓ | ✓ | (✓) ⁷ | (✓) ⁷ |
| MP3630A (Rx)* SDH/SONE Analyzer | (✓) ¹ | | | (✓) | | | ✓ | | | (✓) ¹ | | ✓ | ✓ | (✓) ⁷ | (✓) ⁷ |
| MS4630B Network Analyzer | ✓ | ✓ | (✓) ³ | ✓ | ✓ | (✓) ³ | ✓ | ✓ | (✓) ³ | ✓ | ✓ | | | | |
| MP9659B 10 G E/O, O/E Converter | | | | | | | | | | | | ✓ | ✓ | ✓ | ✓ |
| MX177701A Automatic jitter measurement software | ✓ | ✓ | (✓) ³ | ✓ | ✓ | (✓) ³ | ✓ | ✓ | (✓) ³ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |

(✓)¹: This device can be used instead of MP1763B/MP1764A.

(✓)²: This option is used when the DUT output level is less than 0.7 Vpp.

(✓)³: This device is not required when MX177701A Jitter Performance Test Software is not used.

(✓)⁴: This option is used for evaluation for 2494M/4988M/9974M submarine transmission.

(✓)⁵: The programmable pattern enables this device to be used instead of ME3630A.

(✓)⁶: This option is used for evaluation at the submarine transmission bit rate.

(✓)⁷: Only SDH/SONET interface can be used.

* ME3630A requires jitter tolerance options such as option 24 (TX) and option 34 (RX).

6. Examples of Measurement

6.1 Example of Jitter Tolerance Measurement for STM-64/OC-192 Clock recovery Module

This jitter tolerance measurement measures the jitter tolerance point at which an error occurs when a jitter-modulated data signal is input to an STM-64/OC-192 clock recovery module.

The MX177701A Jitter Performance Test Software enables use of a measurement method (jitter tolerance measurement) that finds and evaluates the jitter tolerance point. This software also enables use of a measurement method (jitter sweep measurement) that adds a preset jitter value to check only whether an error occurs. The former method (jitter tolerance measurement) is suitable for applications such as performance evaluation for a DUT in research and development departments. The latter method (jitter sweep measurement) is suitable for the applications such as shipment inspection during mass production of the DUT in manufacturing departments.

6.1.1 Example of measurement connection

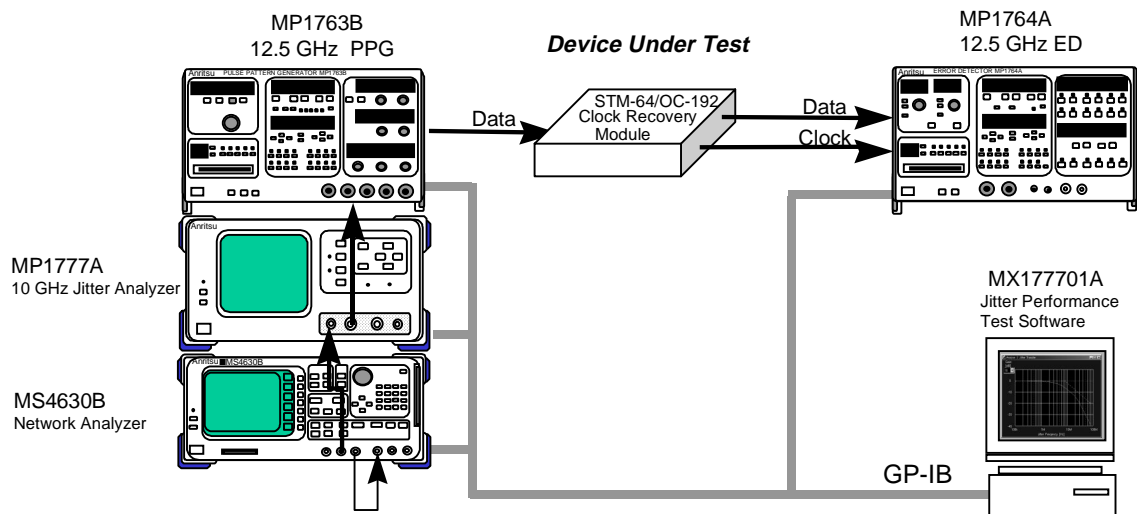


Figure 6-1-1 Connection for jitter tolerance measurement

Note: The MX177701A Jitter Performance Test Software does not exercise control related to the interfaces with the MP1763B 12.5 GHz Pulse Pattern Generator and MP1764A 12.5 GHz Error Detector. Before automatic jitter measurement is started, they must be set to the optimum condition.

6.1.2 Measurement procedure

This section explains the measurement procedure for the measurement method (jitter tolerance measurement) that finds and evaluates the jitter tolerance point.

[Measurement procedure]

(1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

Set "Bit Rate" in the TX to "9953 M."

Items to be selected

| | | |
|----------|----------|----------|
| Standard | +Opt. 01 | +Opt. 02 |
| 9953 M | 9977 M | 10664 M |
| 4977 M | 4988 M | 5332 M |
| 2488 M | 2494 M | 2666 M |

Note:
Only options installed in the MP1777A can be displayed as items to be selected.

Select "Jitter Tolerance" from the Test menu.

Items to be selected

- Manual
- Jitter Tolerance
- Jitter Transfer
- Jitter Sweep

Set Clock to "Internal."

Items to be selected

- Internal
- Lock 2 MHz (Unbaranced)
- Lock 2 MHz (Baranced)
- Lock 2 Mbps (Unbaranced)
- Lock 2 Mbps (Baranced)
- Lock 1.5 MHz (Unbaranced)
- Lock 1.5 Mbps (Baranced)
- External

(2) Set the measurement point (Tolerance Table) and applicable standard (Mask) on the Test menu screen of the MX177701A Jitter Performance Test Software.

Select "Bellcore GR-1377" from the Tolerance Table.

Items to be selected

- Bellcore GR-1377
- User

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

If "User" is selected in the Tolerance Table, measurement conditions can be freely edited.

If "User" is selected in the Tolerance Table, measurement points can be freely changed.

If Mask = User is set, a technical standard value can be freely set. Also, the mask shape at the set value can be checked using the graph on the right.


If an applicable Jitter Tolerance specification has been previously set, measurement results can be judged as acceptable or not. Set Mask to "Bellcore GR-1377."

Items to be selected


- Bellcore GR-1377
- User

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

(3) Press the Start/Stop button on the Test menu screen of the MX177701A Jitter Performance Test Software to start measurement.

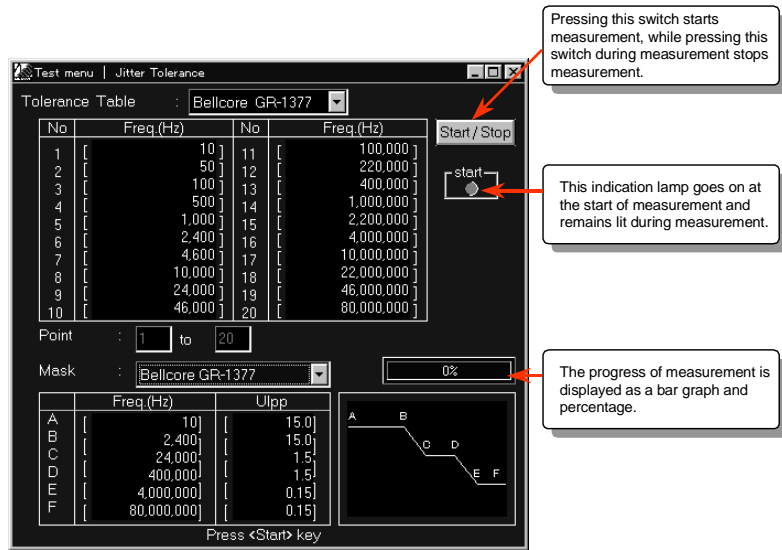


(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software. JG at the right is an abbreviation of Judge and indicates the acceptance/rejection decision for the Mask (standard value) set on the Test menu screen. "O" means acceptance, and "●" means rejection.

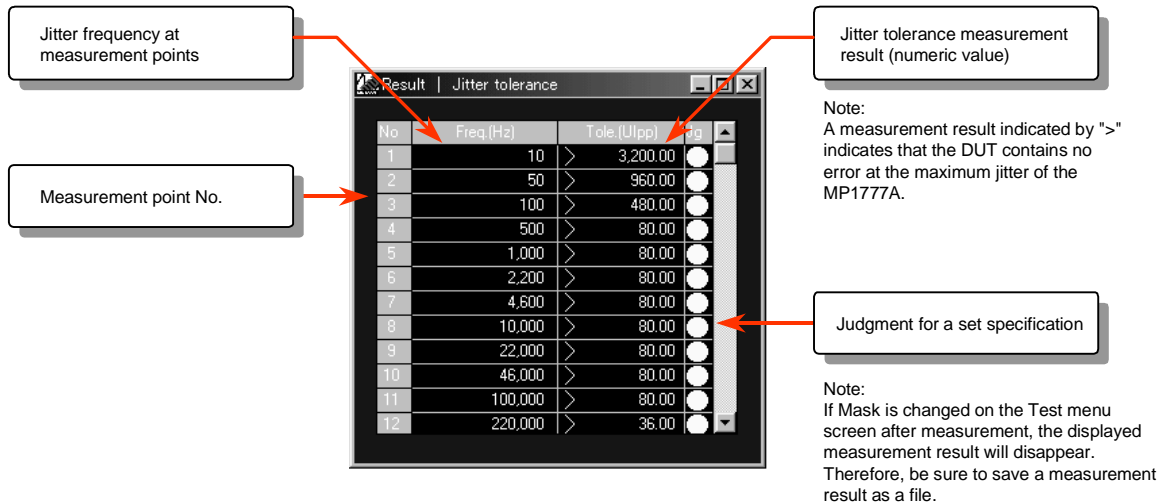

Note: To display the Result screen, the Test menu screen must be opened in advance.

(5) Display the measurement results as graphic data on the Analyze screen of the MX177701A Jitter Performance Test Software. The solid line indicates the measurement results, and the dotted line indicates the standard value (Mask).

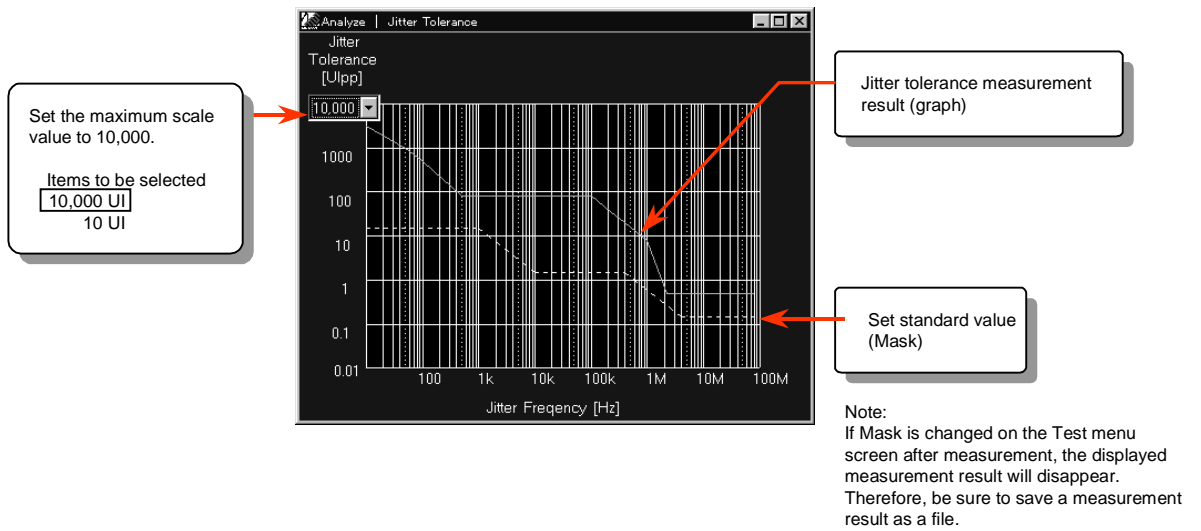

Note: To display the Result screen, the Test menu screen must be opened in advance.

6.2 Example of Jitter Transfer Characteristics Measurement for STM-64/OC-192 Clock recovery Module

This jitter transfer characteristics measurement measures to what extent a DUT attenuates the jitter component of a jitter-modulated data signal at each jitter frequency when a signal is input to an STM-64/OC-192 clock recovery module.

The MX177701A Jitter Performance Test Software automatically controls the MP1777A 10 GHz Jitter Analyzer and MS4630B Network Analyzer for the measurement. This software enables jitter transfer measurement at 55 points for only 100 seconds, and is suitable for the applications in research and development departments and manufacturing and inspection departments.

6.2.1 Example of measurement connection

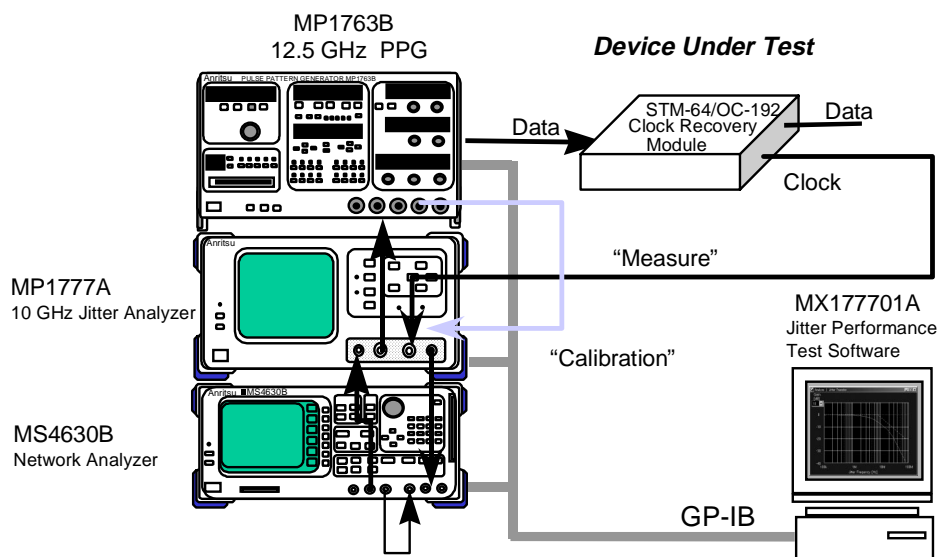


Figure 6-2-1 Connection for jitter transfer characteristics measurement

Note: The MX177701A Jitter Performance Test Software does not exercise control related to the interface with the MP1763B 12.5 GHz Pulse Pattern Generator. Before automatic jitter measurement is started, it must be set to the optimum condition.

6.2.2 Measurement procedure

This section explains the procedure for jitter transfer measurement for a STM-64/OC-192 clock recovery module.

[Measurement procedure]

- (1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

Set "Bit Rate" of the TX and RX to "9953 M."

Items to be selected

| Standard | +Opt. 01 | +Opt.02 |
|----------|----------|---------|
| 9953 M | 9977 M | 10664 M |
| 4977 M | 4988 M | 5332 M |
| 2488 M | 2494 M | 2666 M |

Note:
Only options installed in the MP1777A can be displayed as items to be selected.

Select "Jitter Transfer" from the Test menu.

Items to be selected

- Manual
- Jitter Tolerance
- Jitter Transfer
- Jitter Sweep

Set Clock to "Internal."

Items to be selected

- Internal
- Lock 2 MHz (Unbaranced)
- Lock 2 MHz (Baranced)
- Lock 2 Mbps (Unbaranced)
- Lock 2 Mbps (Baranced)
- Lock 1.5 MHz (Unbaranced)
- Lock 1.5 Mbps (Baranced)
- External

- (2) Set the measurement point (Tolerance Table) and applicable standard (Mask) on the Test menu screen of the MX177701A Jitter Performance Test Software.

Set Tx Range to "0.5 UI."

Items to be selected

- 80 UI : Measurement of 100 Hz to 1 MHz
- 0.5 UI : Measurement of 100 kHz to 80 MHz

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

Set Measurement Type to "Calibration" and perform calibration in the loopback state of MP1777A. Then, set Measurement Type to "Measurement" and measure the object after connecting to it.

Note:
There may be no problem if the clock output of the MP1763B Pulse Pattern Generator is looped back at "Calibration."

Sets the jitter generation conditions. Set Start Freq. to "100 kHz," UI to "0.15 UI," and Stop Freq. to "100 MHz."

If Mask = User is set, a technical standard value can be freely set. Also, the mask shape at the set value can be checked using the graph on the right.

If an applicable Jitter Transfer specification has been previously set, measurement results can be judged as acceptable or not. Set Mask to "User."

Items to be selected

- Bellcore GR-1377
- User


Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

Set User Mask as follows:


| | | |
|----|----------------|-----------|
| A: | [100] | [0.1] |
| B: | [8,000,000] | [0.1] |
| C: | [80,000,000] | [-19.9] |
| D: | [80,000,000] | [-19.9] |

Note:
Values on the left are four times the value of fc of the ITU-T G.958 STM-16 Type A standard.

(3) Press the Start/Stop button on the Test menu screen of the MX177701A Jitter Performance Test Software to start measurement.

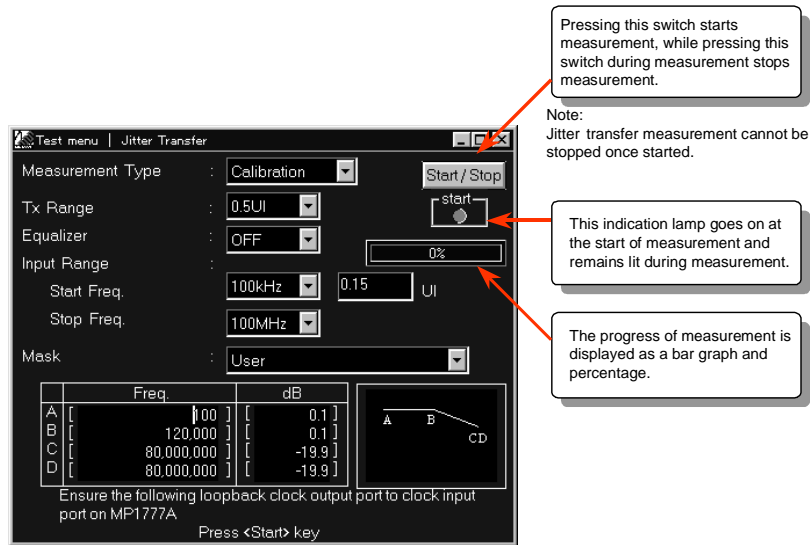


(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software. JG at the right is an abbreviation of Judge and indicates the acceptance/rejection decision for the Mask (standard value) set on the Test menu screen. "O" means acceptance, and "●" means rejection.

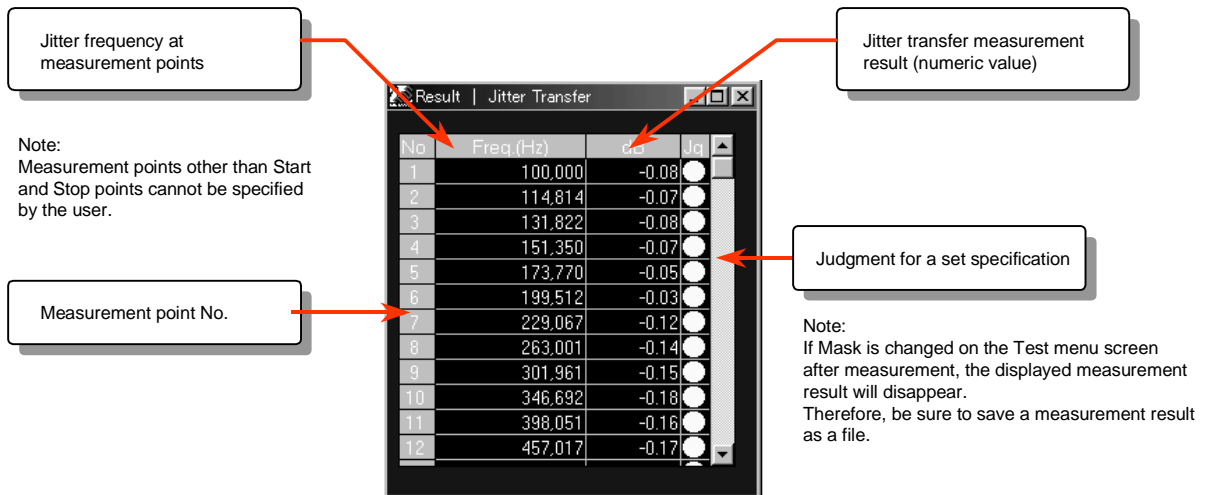

Note: To display the Result screen, the Test menu screen must be opened in advance.

(5) Display the measurement results as graphic data on the Analyze screen of the MX177701A Jitter Performance Test Software. The solid line indicates the measurement results, and the dotted line indicates the standard value (Mask).

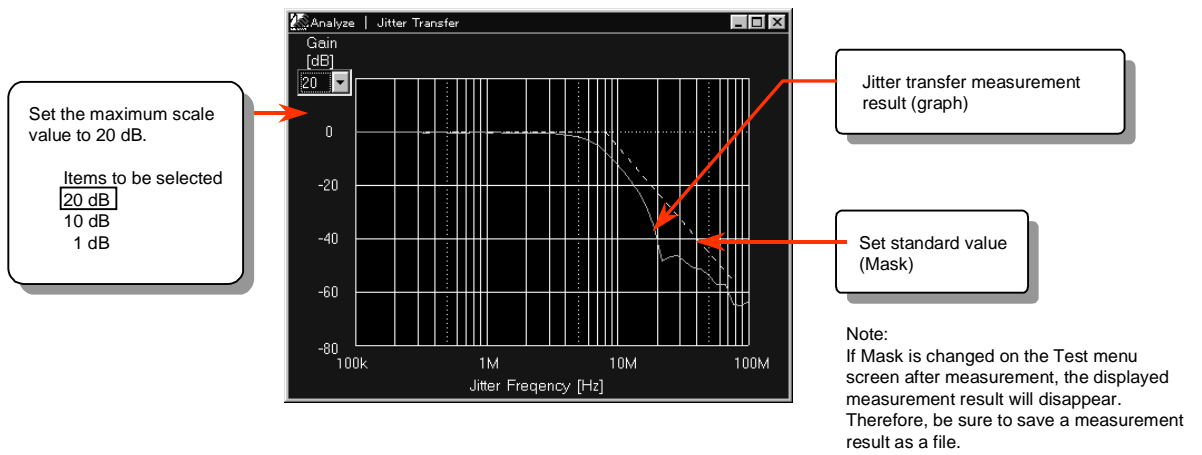

Note: To display the Result screen, the Test menu screen must be opened in advance.

6.3 Example of Jitter Generation Measurement for STM-64/OC-192 Clock recovery Module

This Jitter generation measurement measures the jitter of a DUT when a data signal without jitter (Jitter = OFF) is input to an STM-64/OC-192 clock recovery module.

Jitter generation measurement has generally been done using Urms units. However, ITU-T has recently reviewed jitter generation measurement, and measurement using UJpp units is also requested. The MP1777A enables measurement that satisfies a jitter band of 80 MHz in UJpp and Urms units.

6.3.1 Example of measurement connection

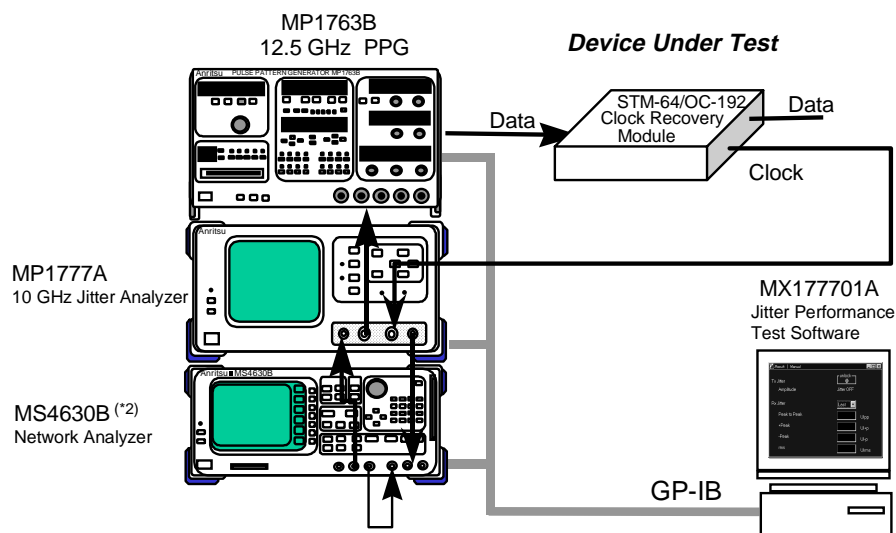


Figure 6-3-1 Connection for jitter generation measurement

Note:

- (1) The MX177701A Jitter Performance Test Software does not exercise control related to the interface with the MP1763B 12.5 GHz Pulse Pattern Generator. Before automatic jitter measurement is started, it must be set to the optimum condition.
 - (2) For jitter generation measurement, the jitter generator does not require a modulated signal. When the MX177701A Jitter Performance Test Software is not used, the MS4630B Network Analyzer is not required for measurement.
-

6.3.2 Measurement procedure

This section explains the procedure for jitter generation measurement for a STM-64/OC-192 clock recovery module (reference standard Bellcore GR-1377).

[Measurement procedure]

- (1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

Set "Bit Rate" in the TX to "9953 M."

Items to be selected

| Standard | +Opt.01 | +Opt.02 |
|----------|---------|---------|
| 9953 M | 9977 M | 10664 M |
| 4977 M | 4988 M | 5332 M |
| 2488 M | 2494 M | 2666 M |

Note:
Only options installed in the MP1777A can be displayed as items to be selected.

Select "Manual" from the Test menu.

Items to be selected

- Manual
- Jitter Tolerance
- Jitter Transfer
- Jitter Sweep

Set Clock to "Internal."

Items to be selected

- Internal
- Lock 2 MHz (Unbaranced)
- Lock 2 MHz (Baranced)
- Lock 2 Mbps (Unbaranced)
- Lock 2 Mbps (Baranced)
- Lock 1.5 MHz (Unbaranced)
- Lock 1.5 Mbps (Baranced)
- External

- (2) Set the measurement conditions on the Test menu screen for the MX177701A Jitter Performance Test Software.

Set Tx Jitter to "OFF."

Items to be selected

- OFF
- ON

Set Filter to "HP" + LP (50 k - 80 MHz)."

Items to be selected

- LP : (- 80 MHz)
- HP1+LP : (10 k - 80 MHz)
- HP2+LP : (4 M - 80 MHz)
- HP+LP : (12 k - 80 MHz)
- HP+LP : (50 k - 80 MHz)

Note:
The items to be selected depend on Rx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

Frequency offset can freely changed at ± 50 ppm/0.1 ppm.

Set Rx Range to "1 UI."

Items to be selected

- 1 UI: Measurement resolution 0.001 UI
- 4 UI: Measurement resolution 0.01 UI


Set measurement mode to "Repeat" or "1 s."

Items to be selected


- Repeat: Repeated measurement
- Single: One measurement
- Manual: Measurement from start to stop

Note:
If output jitter is measured in units of Ulpp, perform measurement after setting the measurement time to 60 s.

(3) Press the Start/Stop button on the Test menu screen for the MX177701A Jitter Performance Test Software to start measurement.

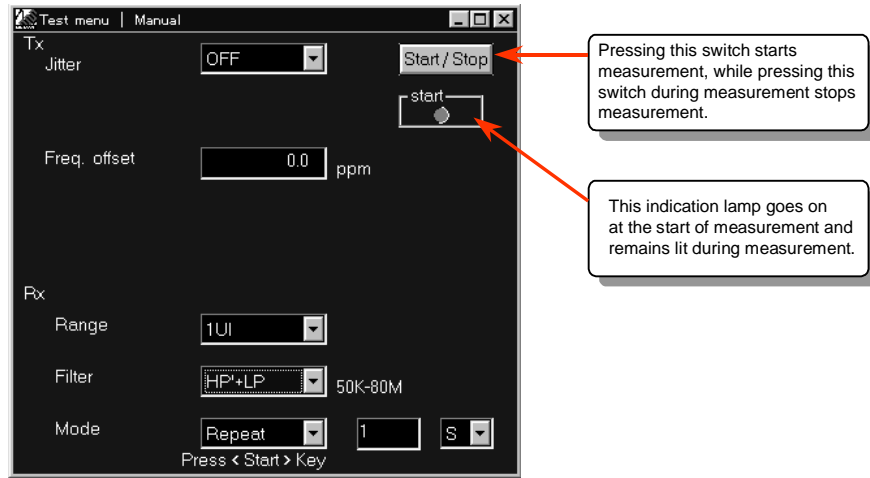

(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software.

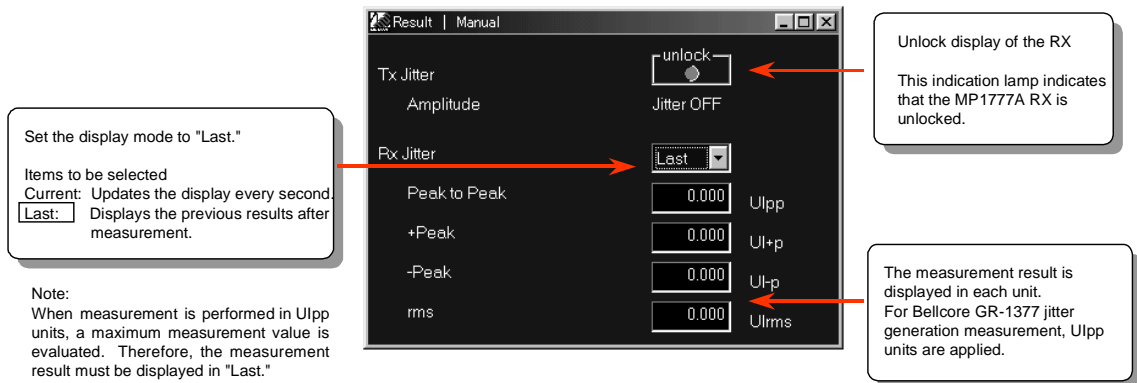

Note: To display the Result screen, the Test menu screen must be opened in advance.

6.4 Example of Jitter Sweep Measurement for Clock recovery Module for Submarine Transmission System

This jitter sweep measurement checks whether an error occurs when a jitter-modulated data signal is input to a clock recovery module for submarine transmission systems.

MX177701A Jitter Performance Test Software enables use of a measurement method (jitter tolerance measurement) that finds and evaluates the jitter tolerance point. This software also enables use of a measurement method (jitter sweep measurement) that adds a preset jitter value to check only whether an error occurs. The former method (jitter tolerance measurement) is suitable for the applications such as performance evaluation for the DUT in research and development departments. The latter method (jitter sweep measurement) is suitable for the applications such as shipment inspection during mass production of the DUT in the manufacturing departments.

6.4.1 Example of measurement connection

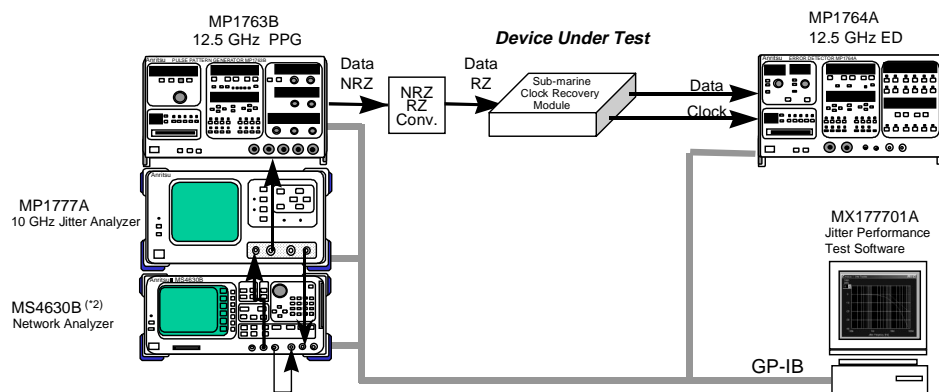


Figure 6-4-1 Connection for jitter sweep measurement

Notes:

- (1) The signal input to the clock recovery module for submarine transmission system is generally RZ. An NRZ/RZ converter is required for the output of the MP1763B Pulse Pattern Generator.
 - (2) The MX177701A Jitter Performance Test Software does not exercise control related to the interfaces with the MP1763B Pulse Pattern Generator and MP1764A Error Detector. Before measurement, they must be set to the optimum condition.
-

6.4.2 Measurement procedure

This section explains an example of measurement (jitter sweep measurement) that adds a preset jitter value to check only whether an error occurs.

[Measurement procedure]

(1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

The screenshot shows the main configuration screen of the MX177701A Jitter Performance Test Software. The 'Test menu' is set to 'Jitter Sweep'. The 'Tx Bit Rate' is set to '10664M', and the 'Clock' is set to 'Internal'. The 'Rx Bit Rate' is also set to '10664M'.

Callout 1 (Left): Set "Bit Rate" in the TX to "10664 M."
 Items to be selected: Standard, +Opt. 01, +Opt. 02. The value 10664 M is highlighted in the +Opt. 02 column.

Callout 2 (Top Right): Select "Jitter Sweep" from the Test menu.
 Items to be selected: Manual, Jitter Tolerance, Jitter Transfer, Jitter Sweep.

Callout 3 (Bottom Right): Set Clock to "Internal."
 Items to be selected: Internal, Lock 2 MHz (Unbaranced), Lock 2 MHz (Baranced), Lock 2 Mbps (Unbaranced), Lock 2 Mbps (Baranced), Lock 1.5 MHz (Unbaranced), Lock 1.5 Mbps (Baranced), External.

Note: To evaluate a device for a submarine transmission system, options must be installed in the MP1777A main unit.

(2) Set the measurement point (Sweep Table) on the Test menu screen of the MX177701A Jitter Performance Test Software.

The screenshot shows the 'Test menu | Jitter Sweep' screen. The 'Sweep Table' is set to 'Bellcore GR-1377'. A table of measurement points is displayed, with columns for No., Freq. (Hz), and (Ujpp). The 'Point' is set to 1 to 20, and the progress is at 0%.

Callout 1 (Left): Select "User" from the Sweep Table.
 Items to be selected: Bellcore GR-1377, User.


Callout 2 (Right): If "User" is selected in the Sweep Table, measurement conditions can be freely edited.

Callout 3 (Bottom Right): If "User" is selected in the Sweep Table, measurement points can be freely changed.

Note: The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 10664 M is set.

| No. | Freq. (Hz) | (Ujpp) | No. | Freq. (Hz) | (Ujpp) |
|-----|------------|----------|-----|----------------|----------|
| 1 | [10] | [15.0] | 11 | [100,000] | [1.5] |
| 2 | [50] | [15.0] | 12 | [220,000] | [1.5] |
| 3 | [100] | [15.0] | 13 | [400,000] | [1.5] |
| 4 | [500] | [15.0] | 14 | [1,000,000] | [0.6] |
| 5 | [1,000] | [15.0] | 15 | [2,200,000] | [0.27] |
| 6 | [2,400] | [15.0] | 16 | [4,000,000] | [0.15] |
| 7 | [4,600] | [7.8] | 17 | [10,000,000] | [0.15] |
| 8 | [10,000] | [3.6] | 18 | [22,000,000] | [0.15] |
| 9 | [24,000] | [1.5] | 19 | [46,000,000] | [0.15] |
| 10 | [46,000] | [1.5] | 20 | [80,000,000] | [0.15] |

(3) Press the Start/Stop button on the Test menu screen of the MX177701A Jitter Performance Test Software to start measurement.

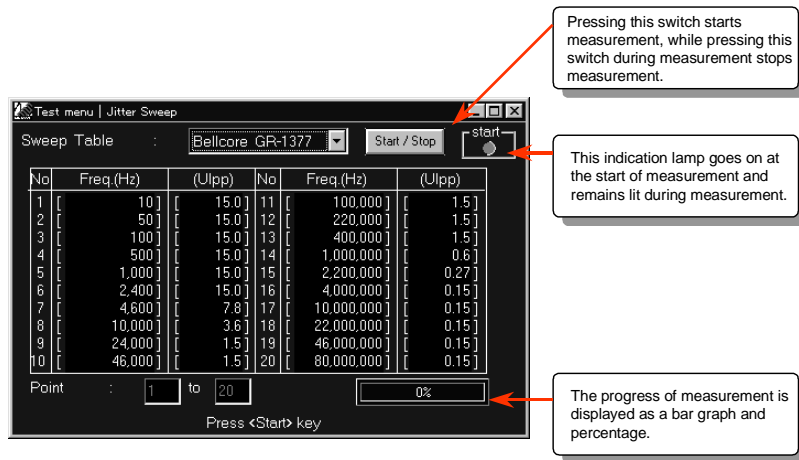


Pressing this switch starts measurement, while pressing this switch during measurement stops measurement.

This indication lamp goes on at the start of measurement and remains lit during measurement.

The progress of measurement is displayed as a bar graph and percentage.


(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software. JG at the right end is an abbreviation of Judge and indicates whether an error occurred when the quantity of jitter with the Sweep Table value set on the Test menu screen is generated. "O" means that no error occurs, and "●" means that an error occurs.

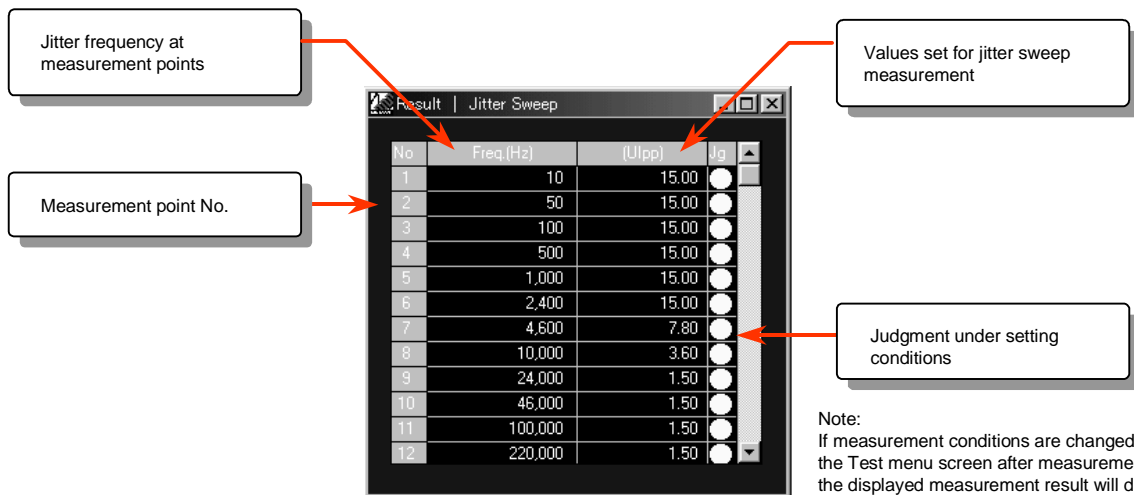

Note:
If measurement conditions are changed on the Test menu screen after measurement, the displayed measurement result will disappear. Therefore, be sure to save a measurement result as a file.

Note: To display the Result screen, the Test menu screen must be opened in advance.

(5) Display the measurement results as graphic data on the Analyze screen of the MX177701A Jitter Performance Test Software. ○ or X indicates the measurement point. ○ indicates that no error occurs, and X indicates that an error occurs.

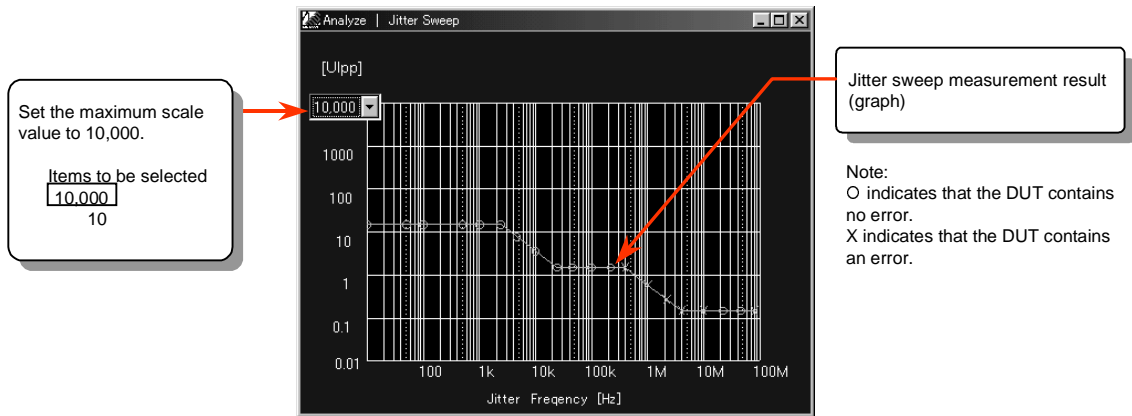

Note: To display the Result screen, the Test menu screen must be opened in advance.

6.5 Example of Jitter Transfer Characteristics Measurement for Clock recovery Module for Submarine Transmission System

This jitter transfer characteristics measurement measures to what extent the DUT attenuates the jitter component of a jitter-modulated data signal at each jitter frequency when a signal is input to a clock recovery module for submarine transmission systems.

The MX177701A Jitter Performance Test Software automatically controls the MP1777A 10 GHz Jitter Analyzer and MS4630B Network Analyzer for the measurement. This software enables jitter transfer measurement at 55 points for only 100 seconds, and is suitable for the applications in research and development departments and manufacturing and inspection departments.

6.5.1 Example of measurement connection

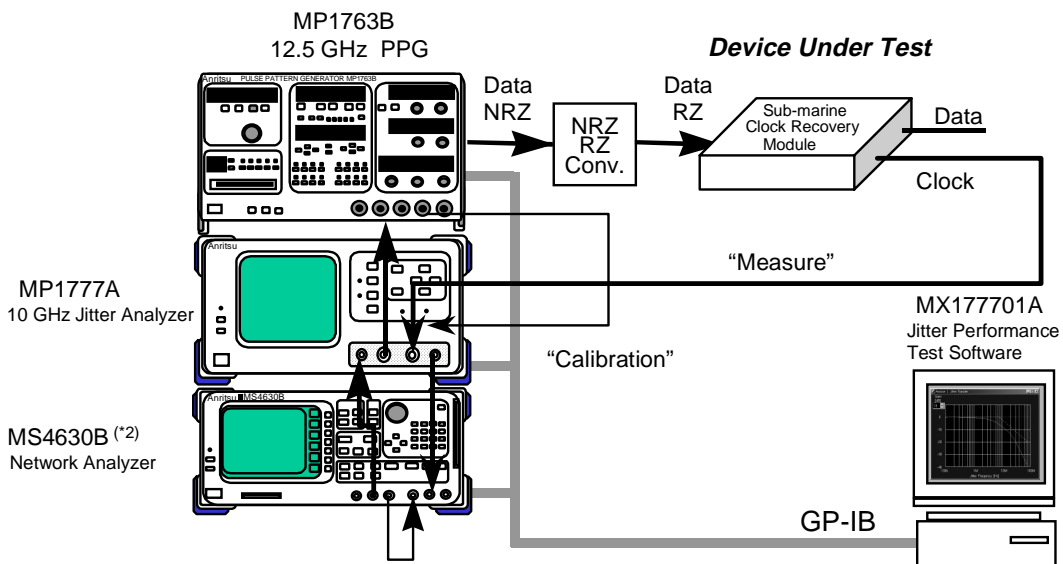


Figure 6-5-1 Connection for jitter transfer characteristics measurement

Notes:

- (1) The signal input to the clock recovery module for submarine transmission system is generally RZ. The NRZ/RZ converter is required for the output of the MP1763B Pulse Pattern Generator.
 - (2) The MX177701A Jitter Performance Test Software does not exercise control related to the interface with the MP1763B Pulse Pattern Generator. Before measurement, it must be set to the optimum condition.
-

6.5.2 Measurement procedure

This section explains the procedure for jitter transfer measurement for a clock recovery module for submarine transmission systems.

[Measurement procedure]

(1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

Set "Bit Rate" in the TX and RX to "10664 M."

Items to be selected
Standard +Opt.01 +Opt.02
9953 M 9977 M 10664 M
4977 M 4988 M 5332 M
2488 M 2494 M 2666 M

Note:
Only options installed in the MP1777A can be displayed as items to be selected.

Select "Jitter Transfer" from the Test menu.

Items to be selected
Manual
Jitter Tolerance
Jitter Transfer
Jitter Sweep

Set Clock to "Internal."

Items to be selected
Internal
Lock 2 MHz (Unbaranced)
Lock 2 MHz (Baranced)
Lock 2 Mbps (Unbaranced)
Lock 2 Mbps (Baranced)
Lock 1.5 MHz (Unbaranced)
Lock 1.5 Mbps (Baranced)
External

(2) Set the measurement point (Tolerance Table) and applicable standard (Mask) on the Test menu screen of the MX177701A Jitter Performance Test Software.

Set Tx Range to "0.5 UI."

Items to be selected
80 UI: Measurement of
100 Hz to 1 MHz
0.5 UI: Measurement of
100 kHz to 80 MHz

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 10664 M is set.

If an applicable Jitter Transfer specification has been previously set, measurement results can be judged as acceptable or not. Set Mask to "User."

Items to be selected
Bellcore GR-1377
User

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 10664 M is set.

Set Measurement Type to "Calibration" and perform calibration in the loopback state of MP1777A. Then, set Measurement Type to "Measurement" and measure the object after connecting to it.

Note:
There may be no problem if the clock output of the MP1763B Pulse Pattern Generator is looped back at "Calibration."

Sets the jitter generation conditions. Set Start Freq. to "100 kHz," UI to "0.15 UI," and Stop Freq. to "100 MHz."

If Mask = User is set, a technical standard value can be freely set. Also, the mask shape at the set value can be checked using the graph on the right.

Set User Mask as follows:

| | Freq. | | dB |
|---|----------------|---|---------|
| A | [100] | [| 0.1] |
| B | [120,000] | [| 0.1] |
| C | [80,000,000] | [| -19.9] |
| D | [80,000,000] | [| -19.9] |

Note:
Values on the left are four times the value of f_c of the ITU-T G.958 STM-16 Type A standard.

(3) Press the Start/Stop button on the Test menu screen of the MX177701A Jitter Performance Test Software to start measurement.

Pressing this switch starts measurement, while pressing this switch during measurement stops measurement.

Note: Jitter transfer measurement cannot be stopped once started.

This indication lamp goes on at the start of measurement and remains lit during measurement.

The progress of measurement is displayed as a bar graph and percentage.

| | Freq. | dB |
|---|------------|-----------|
| A | 100 | [0.1] |
| B | 120,000 | [0.1] |
| C | 80,000,000 | [-19.9] |
| D | 80,000,000 | [-19.9] |

Ensure the following loopback clock output port to clock input port on MP1777A.
Press <Start> key

(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software. JG at the right is an abbreviation of Judge and indicates the acceptance/rejection decision for the Mask (standard value) set on the Test menu screen. "O" means acceptance, and "●" means rejection.

Jitter frequency at measurement points

Jitter transfer measurement result (numeric value)

Judgment for a set specification

Note: Measurement points other than Start and Stop points cannot be specified by the user.


Measurement point No.

| No | Freq. (Hz) | dB | Jg |
|----|------------|-------|----|
| 1 | 100,000 | -0.08 | ○ |
| 2 | 114,814 | -0.07 | ○ |
| 3 | 131,822 | -0.08 | ○ |
| 4 | 151,350 | -0.07 | ○ |
| 5 | 173,770 | -0.05 | ○ |
| 6 | 199,512 | -0.03 | ○ |
| 7 | 229,067 | -0.12 | ○ |
| 8 | 263,001 | -0.14 | ○ |
| 9 | 301,961 | -0.15 | ○ |
| 10 | 346,692 | -0.18 | ○ |
| 11 | 398,051 | -0.16 | ○ |
| 12 | 457,017 | -0.17 | ○ |

Note: If Mask is changed on the Test menu screen after measurement, the displayed measurement result will disappear. Therefore, be sure to save a measurement result as a file.

Note: To display the Result screen, the Test menu screen must be opened in advance.

(5) Display the measurement results as graphic data on the Analyze screen of the MX177701A Jitter Performance Test Software. The solid line indicates the measurement results, and the dotted line indicates the standard value (Mask).

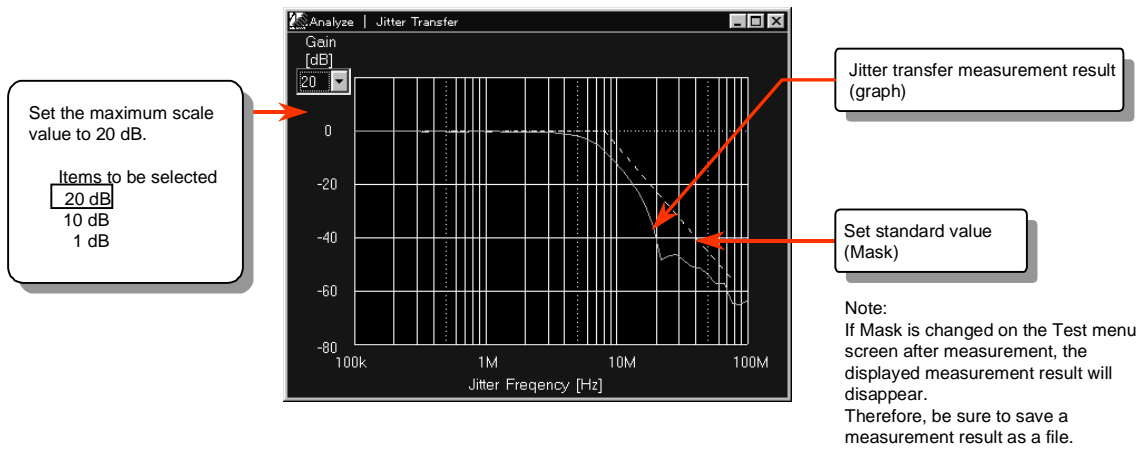

Note: To display the Result screen, the Test menu screen must be opened in advance.

6.6 Example of Jitter Generation Measurement for Clock recovery Module for Submarine Transmission System

This jitter generation measurement measures the jitter of a DUT when a data signal without jitter (Jitter = OFF) is input to a clock recovery module for submarine transmission systems.

The jitter standard related to submarine transmission equipment is not available. However, this section explains an example of measurement to which the SDH standard is applied based on conversion with SDH. Jitter generation measurement has generally been made using Urms units. However, ITU-T has recently reviewed jitter generation measurement, and measurement using UJpp units is also requested. The MP1777A enables measurement that satisfies a jitter band of 80 MHz in UJpp and Urms units.

6.6.1 Example of measurement connection

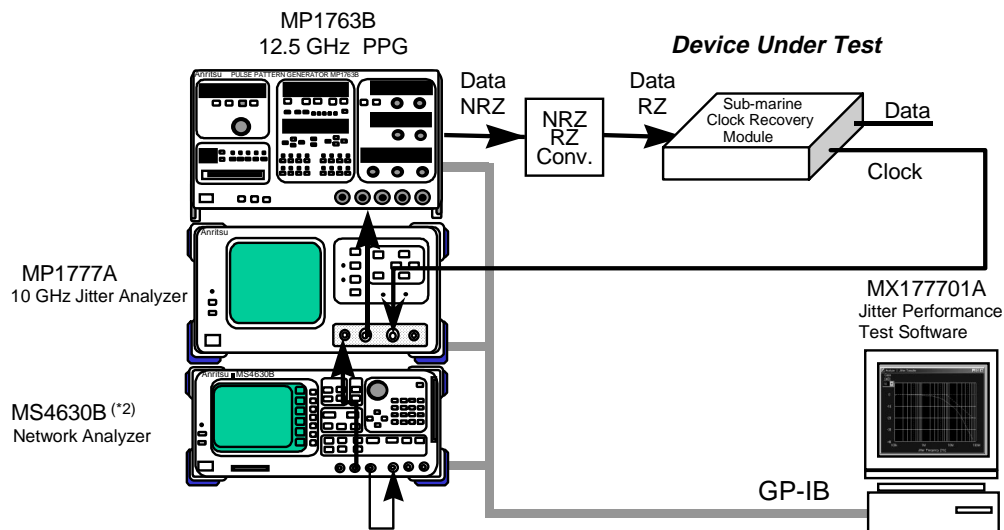


Figure 6-6-1 Connection for jitter generation measurement

Notes:

- (1) The MX177701A Jitter Performance Test Software does not exercise control related to the interface with the MP1763B 12.5 GHz Pulse Pattern Generator. Before automatic jitter measurement is started, it must be set to the optimum condition.
 - (2) For jitter generation measurement, the jitter generator does not require the modulated signal. When the MX177701A Jitter Performance Test Software is not used, the MS4630B Network Analyzer is not required for measurement.
-

6.6.2 Measurement procedure

This section explains the procedure for jitter generation measurement for a clock recovery module for submarine transmission systems (reference standard Bellcore GR-1377).

[Measurement procedure]

(1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

Set "Bit Rate" in the TX to "9953 M."

Items to be selected

| Standard | +Opt. 01 | +Opt. 02 |
|----------|----------|----------|
| 9953 M | 9977 M | 10664 M |
| 4977 M | 4988 M | 5332 M |
| 2488 M | 2494 M | 2666 M |

Note:
Only options installed in the MP1777A can be displayed as items to be selected.

Select "Manual" from the Test menu.

Items to be selected

- Manual
- Jitter Tolerance
- Jitter Transfer
- Jitter Sweep

Set Clock to "Internal."

Items to be selected

- Internal
- Lock 2 MHz (Unbaranced)
- Lock 2 MHz (Baranced)
- Lock 2 Mbps (Unbaranced)
- Lock 2 Mbps (Baranced)
- Lock 1.5 MHz (Unbaranced)
- Lock 1.5 Mbps (Baranced)
- External

(2) Set the measurement conditions on the Test menu screen of the MX177701A Jitter Performance Test Software.

Set Tx Jitter to "OFF."

Items to be selected

- OFF
- ON

Frequency offset can freely changed at ± 50 ppm/0.1 ppm.

Set Rx Range to "1 UI."

Items to be selected

- 1 UI: Measurement resolution 0.001 UI
- 4 UI: Measurement resolution 0.01 UI

Set Filter to "HP" + LP (50 k - 80 MHz)."

Items to be selected

- LP : (- 80 MHz)
- HP1+LP : (10 k - 80 MHz)
- HP2+LP : (4 M - 80 MHz)
- HP+LP : (12 k - 80 MHz)
- HP+LP : (50 k - 80 MHz)

Note:
The items to be selected depend on Rx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.


Set measurement mode to "Repeat" or "1 s."

Items to be selected


- Repeat: Repeated measurement
- Single: One measurement
- Manual: Measurement from start to stop

Note:
If output jitter is measured in units of Upp, perform measurement after setting the measurement time to 60 s.

(3) Press the Start/Stop button on the Test menu screen of the MX177701A Jitter Performance Test Software to start measurement.

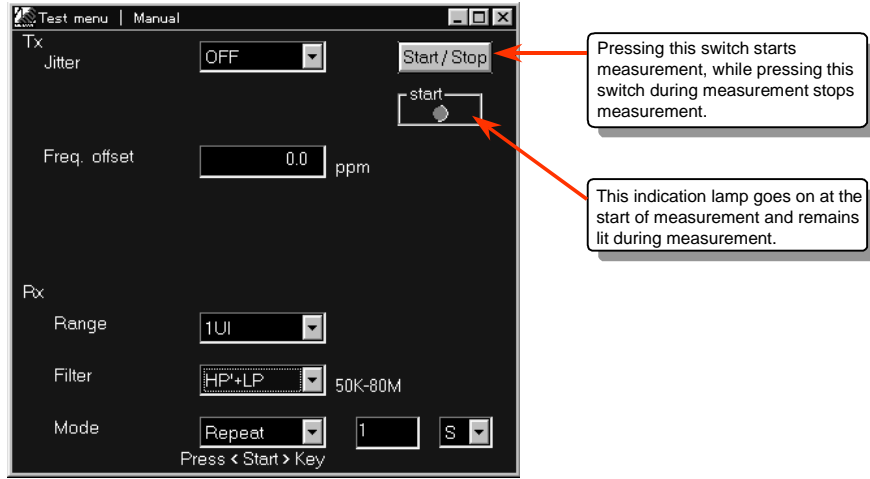

(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software.

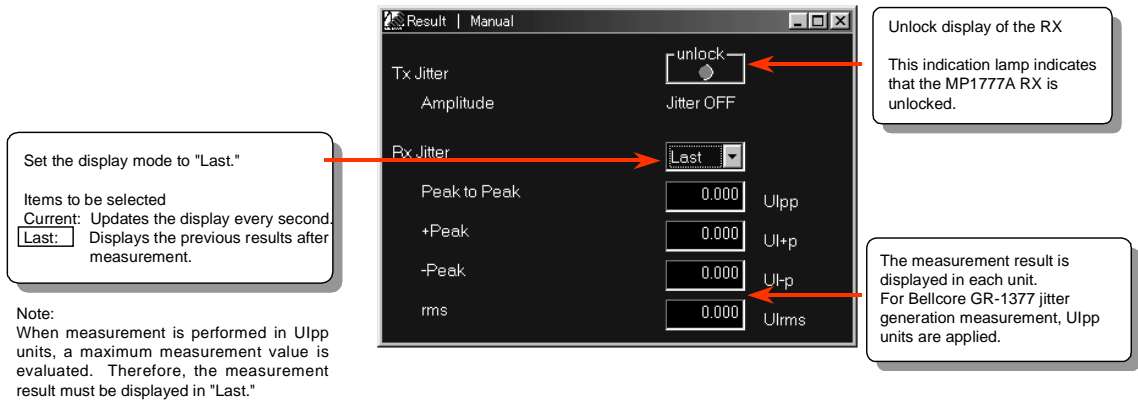

Note: To display the Result screen, the Test menu screen must be opened in advance.

6.7 Example of Jitter Tolerance Measurement for FEC (Forward Error Correction) Encoder and Decoder Module

This jitter tolerance measurement measures the jitter tolerance point at which an error occurs when a jitter-modulated data signal is input to an FEC encoder and decoder module.

The MX177701A Jitter Performance Test Software enables use of a measurement method (jitter tolerance measurement) that finds and evaluates the actual jitter tolerance point. This software also enables use of a measurement method (jitter sweep measurement) that adds a preset jitter value to check only whether an error occurs. The former method (jitter tolerance measurement) is suitable for applications such as performance evaluation for the measured in research and development departments. The latter method (jitter sweep measurement) is suitable for applications such as shipment inspection during mass production of the DUT in manufacturing departments.

6.7.1 Example of measurement connection

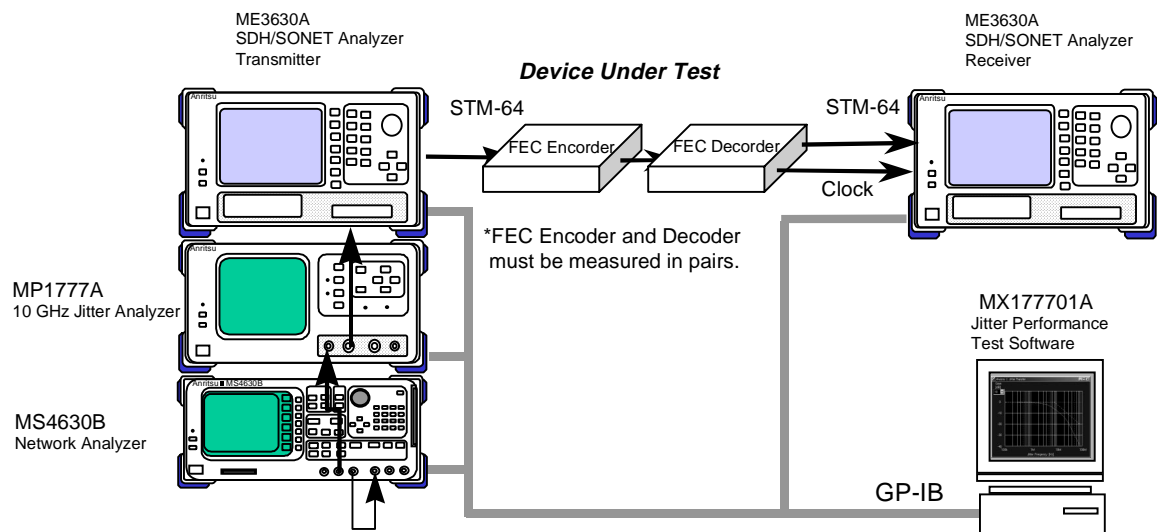


Figure 6-7-1 Connection for jitter tolerance measurement

Note: The MX177701A Jitter Performance Test Software does not exercise control related to the interface with the ME3630A SDH/SONET Analyzer. Before automatic jitter measurement is started, it must be set to the optimum condition.

6.7.2 Measurement procedure

This section explains the measurement procedure for the measurement method (jitter tolerance measurement) that finds and evaluates the jitter tolerance point.

[Measurement procedure]

(1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

Set "Bit Rate" in the TX to "9953 M."

Items to be selected
Standard +Opt.01 +Opt.02
9953 M 9977 M 10664 M
4977 M 4988 M 5332 M
2488 M 2494 M 2666 M

Note:
Only options installed in the MP1777A can be displayed as items to be selected.

Select "Jitter Tolerance" from the Test menu.

Items to be selected
Manual
Jitter Tolerance
Jitter Transfer
Jitter Sweep

Set Clock to "Internal."

Items to be selected
Internal
Lock 2 MHz (Unbaranced)
Lock 2 MHz (Baranced)
Lock 2 Mbps (Unbaranced)
Lock 2 Mbps (Baranced)
Lock 1.5 MHz (Unbaranced)
Lock 1.5 Mbps (Baranced)
External

(2) Set the measurement point (Tolerance Table) and applicable standard (Mask) on the Test menu screen for the MX177701A Jitter Performance Test Software.

Select "Bellcore GR-1377" from the Tolerance Table.

Items to be selected
Bellcore GR-1377
User

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

If an applicable Jitter Tolerance specification has been previously set, measurement results can be judged as acceptable or not. Set Mask to "Bellcore GR-1377."

Items to be selected
Bellcore GR-1377
User

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

If "User" is selected in the Tolerance Table, measurement conditions can be freely edited.


If "User" is selected in the Tolerance Table, measurement points can be freely changed.

If Mask = User is set, a technical standard value can be freely set. Also, the mask shape at the set value can be checked using the graph on the right.


| No | Freq.(Hz) | No | Freq.(Hz) |
|----|------------|----|----------------|
| 1 | [10] | 11 | [100,000] |
| 2 | [50] | 12 | [220,000] |
| 3 | [100] | 13 | [400,000] |
| 4 | [500] | 14 | [1,000,000] |
| 5 | [1,000] | 15 | [2,200,000] |
| 6 | [2,400] | 16 | [4,000,000] |
| 7 | [4,600] | 17 | [10,000,000] |
| 8 | [10,000] | 18 | [22,000,000] |
| 9 | [24,000] | 19 | [46,000,000] |
| 10 | [46,000] | 20 | [80,000,000] |

| | Freq.(Hz) | Ujpp |
|---|----------------|----------|
| A | [10] | [15.0] |
| B | [2,400] | [15.0] |
| C | [24,000] | [1.5] |
| D | [400,000] | [1.5] |
| E | [4,000,000] | [0.15] |
| F | [80,000,000] | [0.15] |

(3) Press the Start/Stop button on the Test menu screen of the MX177701A Jitter Performance Test Software to start measurement.

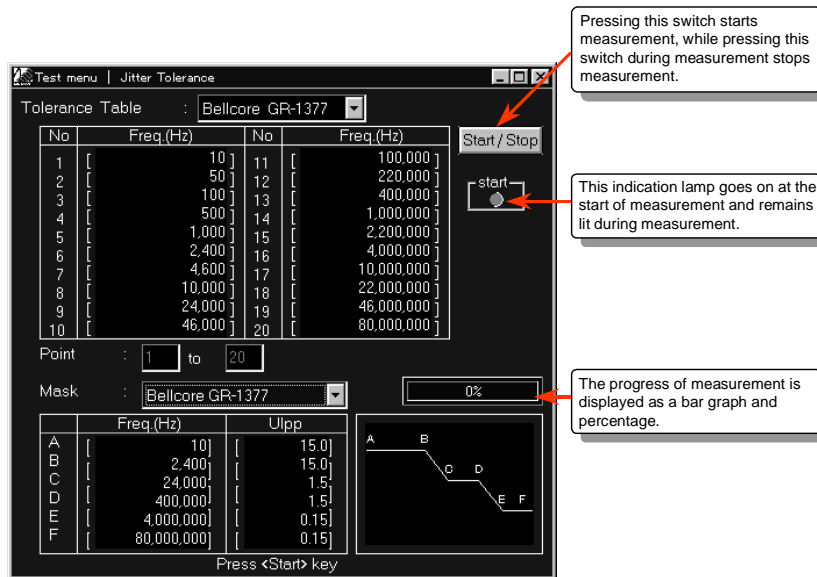


(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software. JG at the right is an abbreviation of Judge and indicates the acceptance/rejection decision for the Mask (standard value) set on the Test menu screen. "O" means acceptance, and "●" means rejection.

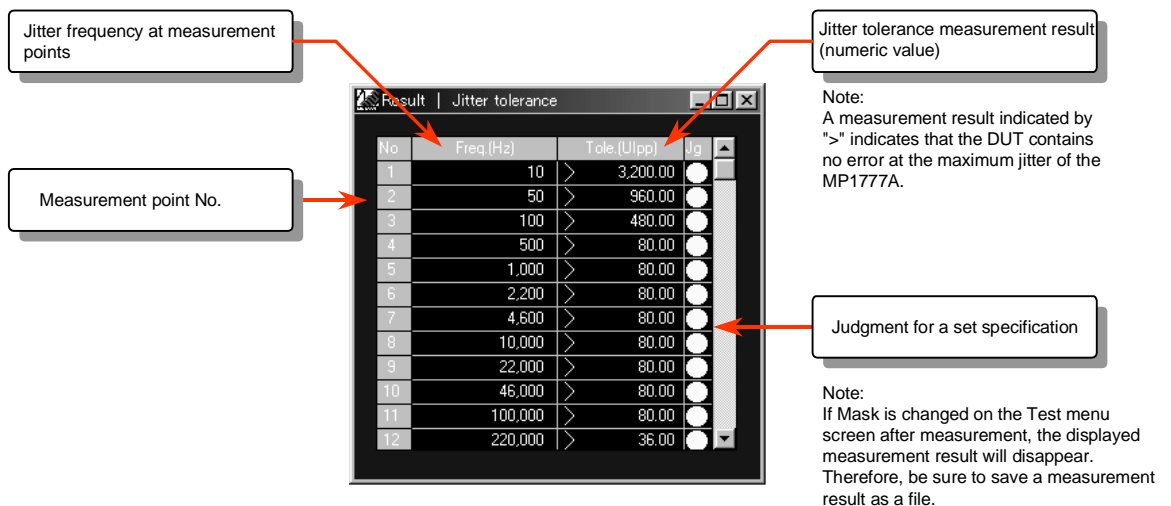

Note: To display the Result screen, the Test menu screen must be opened in advance.

(5) Display the measurement results as graphic data on the Analyze screen of the MX177701A Jitter Performance Test Software. The solid line indicates the measurement results, and the dotted line indicates the standard value (Mask).

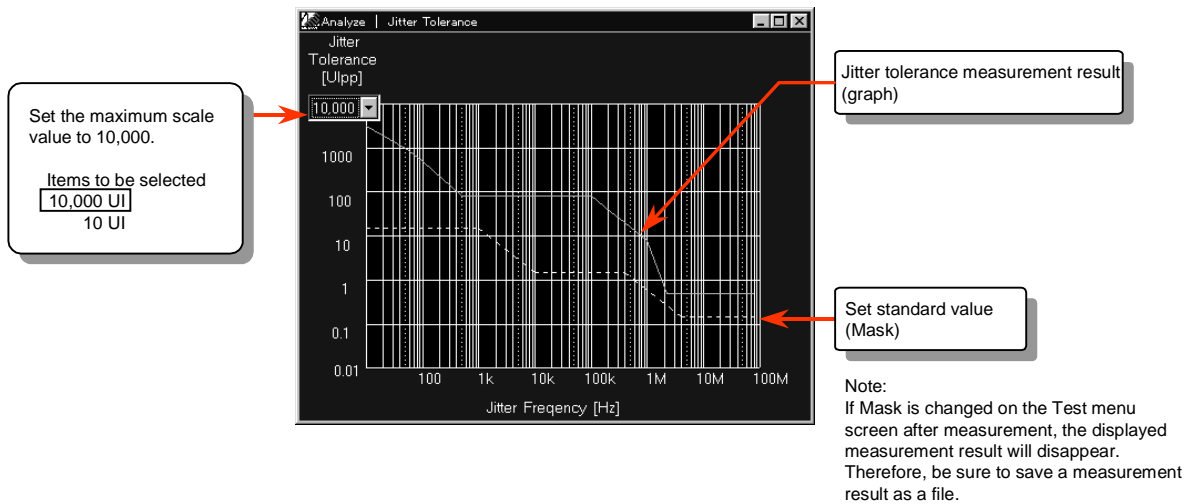

Note: To display the Result screen, the Test menu screen must be opened in advance.

6.8 Example of Jitter Transfer Characteristics Measurement for FEC Encoder and Decoder Module

This jitter transfer characteristics measurement measures to what extent the DUT attenuates the jitter component of the jitter-modulated data signal at each jitter frequency when the signal is input to an FEC encoder and decoder module.

The MX177701A Jitter Performance Test Software automatically controls the MP1777A 10 GHz Jitter Analyzer and MS4630B Network Analyzer for the measurement. This software enables jitter transfer measurement at 55 points for only 100 seconds, and is suitable for applications in research and development departments and manufacturing and inspection departments.

6.8.1 Example of measurement connection

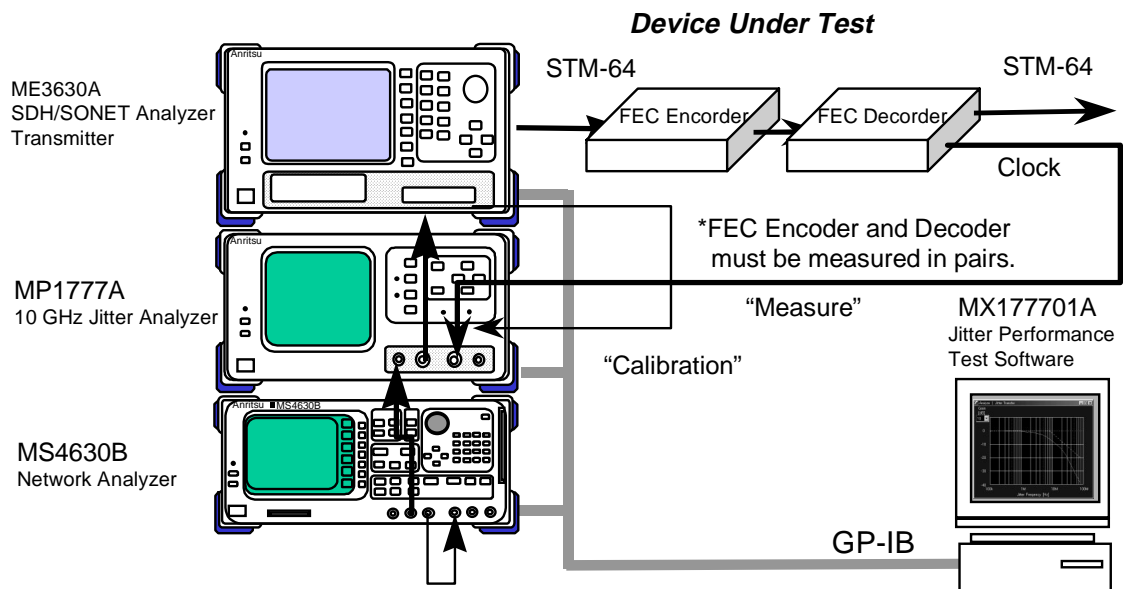


Figure 6-8-1 Connection for jitter transfer characteristics measurement

Notes:

- (1) The signal input to a clock recovery module for submarine transmission systems is generally RZ. An NRZ/RZ converter is required for the output of the ME3630A SDH/SONET Analyzer.
 - (2) The MX177701A Jitter Performance Test Software does not exercise control related to the interface with the ME3630A SDH/SONET Analyzer. Before measurement, it must be set to the optimum condition.
-

6.8.2 Measurement procedure

This section explains the procedure for jitter transfer measurement for an FEC encoder/decoder module.

[Measurement procedure]

(1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

Set "Bit Rate" of the TX and RX to "9953 M."

Items to be selected
9953 M

Note:
If the ME3630A SDH/SONET Analyzer is connected as a pattern generator, Tx Bit Rate must be 9953 M.

Select "Jitter Transfer" from the Test menu.

Items to be selected
Manual
Jitter Tolerance
Jitter Transfer
Jitter Sweep

Set Clock to "Internal."

Items to be selected
Internal
Lock 2 MHz (Unbaranced)
Lock 2 MHz (Baranced)
Lock 2 Mbps (Unbaranced)
Lock 2 Mbps (Baranced)
Lock 1.5 MHz (Unbaranced)
Lock 1.5 Mbps (Baranced)
External

(2) Set the measurement point (Tolerance Table) and applicable standard (Mask) on the Test menu screen of the MX177701A Jitter Performance Test Software.

Set Tx Range to "0.5 UI."

Items to be selected
80 UI: Measurement of 100 Hz to 1 MHz
0.5 UI: Measurement of 100 kHz to 80 MHz

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

If an applicable Jitter Transfer specification has been previously set, measurement results can be judged as acceptable or not. Set Mask to "User."

Items to be selected
User

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

Set Measurement Type to "Calibration" and perform calibration in the loopback state of MP1777A. Then, set Measurement Type to "Measurement" and measure the object after connecting to it.

Note:
There may be no problem if the clock output of the ME3630A SDH/SONET Analyzer is looped back at "Calibration."

Set the jitter generation conditions. Set Start Freq. to "100 kHz," UI to "0.15 UI," and Stop Freq. to "100 MHz."

If Mask = User is set, a technical standard value can be freely set. Also, the mask shape at the set value can be checked using the graph on the right.


Set User Mask as follows:

Note:
Values on the left are four times the value of fc of the ITU-T G.958 STM-16 Type A standard.


| | Freq | dB |
|---|----------------|-----------|
| A | [100] | [0.1] |
| B | [120,000] | [0.1] |
| C | [80,000,000] | [-19.9] |
| D | [80,000,000] | [-19.9] |

Ensure the following loopback clock output port to clock input port on MP1777A.
Press <Start> key

(3) Press the Start/Stop button on the Test menu screen of the MX177701A Jitter Performance Test Software to start measurement.

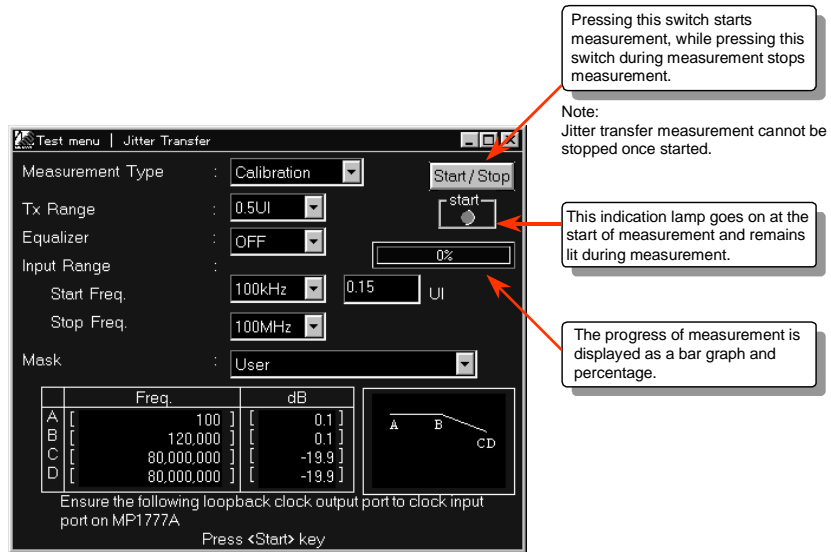


(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software. JG at the right is an abbreviation of Judge and indicates the acceptance/rejection decision for the Mask (standard value) set on the Test menu screen. "O" means acceptance, and "●" means rejection.

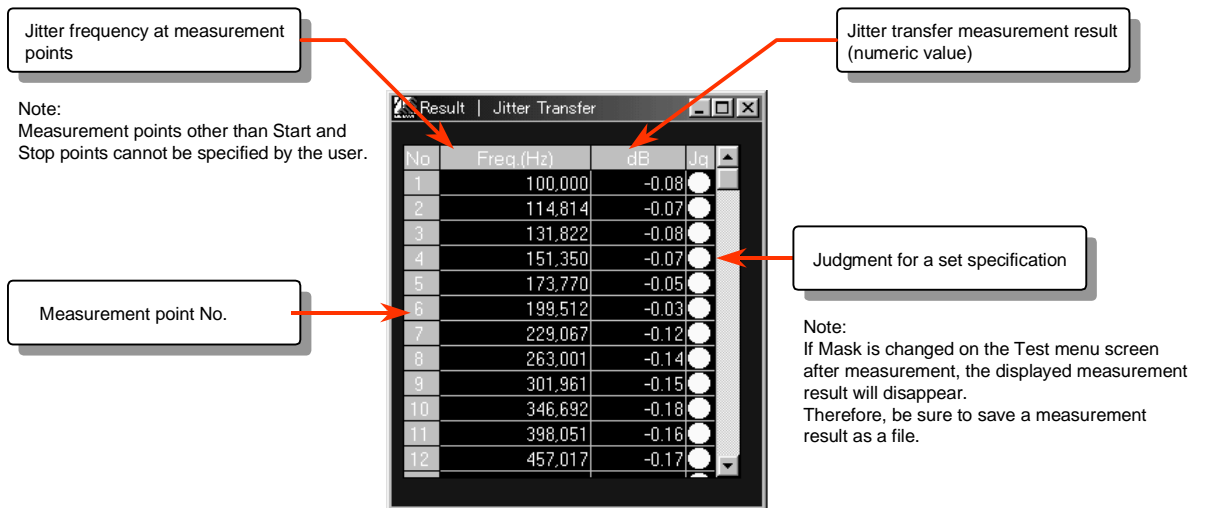

Note: To display the Result screen, the Test menu screen must be opened in advance.

(5) Display the measurement results as graphic data on the Analyze screen of the MX177701A Jitter Performance Test Software. The solid line indicates the measurement results, and the dotted line indicates the standard value (Mask).

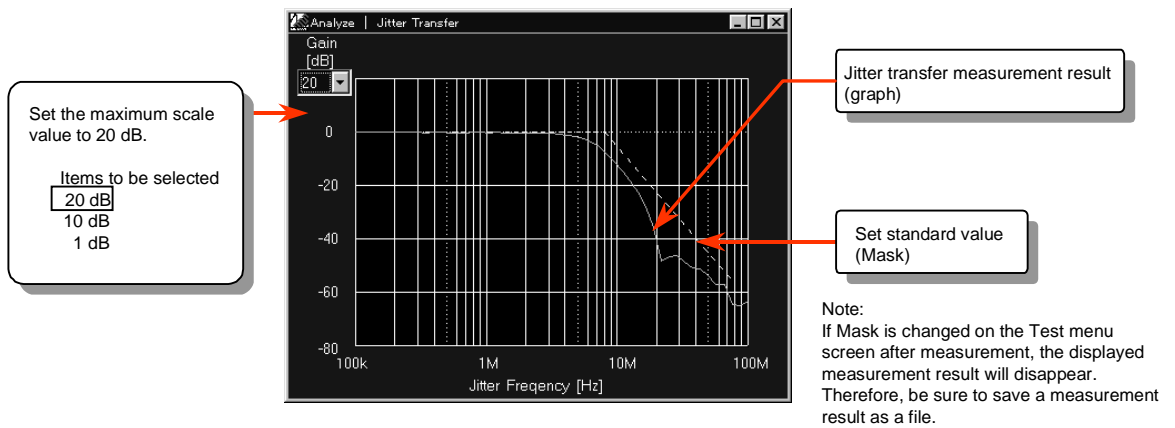

Note: To display the Result screen, the Test menu screen must be opened in advance.

6.9 Example of Jitter Generation Measurement for FEC Encoder/Decoder Module

This jitter generation measurement measures the jitter of the DUT when a data signal without jitter (Jitter = OFF) is input to an FEC encoder/decoder module.

The jitter standard related to submarine transmission equipment is not available. However, this section explains an example of measurement to which the SDH standard is applied based on conversion with SDH. Jitter generation measurement has generally been done using Urms units. However, ITU-T has recently reviewed jitter generation measurement, and measurement using UIpp units is also requested. The MP1777A enables measurement that satisfies a jitter band of 80 MHz in UIpp and Urms units.

6.9.1 Example of measurement connection

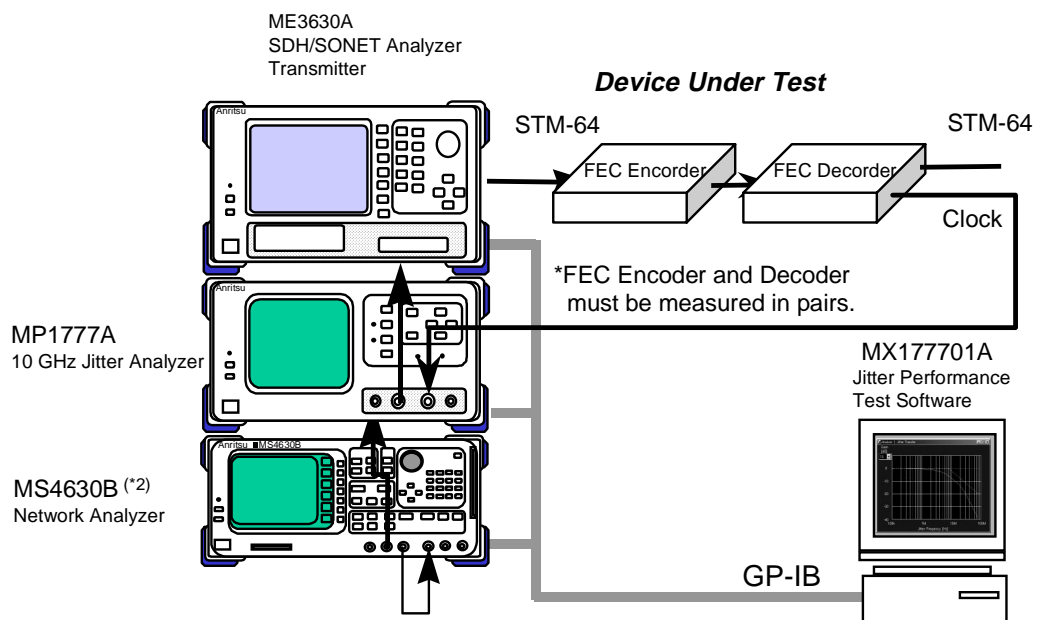


Figure 6-9-1 Connection for jitter generation measurement

Notes:

- (1) The MX177701A Jitter Performance Test Software does not exercise control related to the interface with the ME3630A SDH/SONET Analyzer. Before automatic jitter measurement is started, it must be set to the optimum condition.
 - (2) For jitter generation measurement, the jitter generator does not require a modulated signal. When the MX177701A Jitter Performance Test Software is not used, the MS4630B Network Analyzer is not required for measurement.
-

6.9.2 Measurement procedure

This section explains the procedure for jitter generation measurement for an EFC encoder and decoder module (reference standard Bellcore GR-1377).

[Measurement procedure]

(1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

Set "Bit Rate" of the TX to "9953 M."

Items to be selected
9953 M

Note:
If the ME3630A SDH/SONET Analyzer is connected as a pattern generator, Tx Bit Rate must be 9953 M.

Select "Manual" from the Test menu.

Items to be selected
Manual
Jitter Tolerance
Jitter Transfer
Jitter Sweep

Set Clock to "Internal."

Items to be selected
Internal
Lock 2 MHz (Unbaranced)
Lock 2 MHz (Baranced)
Lock 2 Mbps (Unbaranced)
Lock 2 Mbps (Baranced)
Lock 1.5 MHz (Unbaranced)
Lock 1.5 Mbps (Baranced)
External

(2) Set the measurement conditions on the Test menu screen of the MX177701A Jitter Performance Test Software.

Set Tx Jitter to "OFF."

Items to be selected
OFF
ON

Set Filter to "HP" + LP (50 k - 80 MHz)."

Items to be selected
LP : (- 80 MHz)
HP1+LP : (10 k - 80 MHz)
HP2+LP : (4 M - 80 MHz)
HP+LP : (12 k - 80 MHz)
HP+LP : (50 k - 80 MHz)

Note:
The items to be selected depend on Rx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

Frequency offset can freely changed at ± 50 ppm/0.1 ppm.

Set Rx Range to "1 UI."


Items to be selected
1 UI: Measurement resolution 0.001 UI
4 UI: Measurement resolution 0.01 UI

Set measurement mode to "Repeat" or "1 s."


Items to be selected
Repeat: Repeated measurement
Single: One measurement
Manual: Measurement from start to stop

Note:
If output jitter is measured in units of Upp, perform measurement after setting the measurement time to 60 s.

(3) Press the Start/Stop button on the Test menu screen of the MX177701A Jitter Performance Test Software to start measurement.

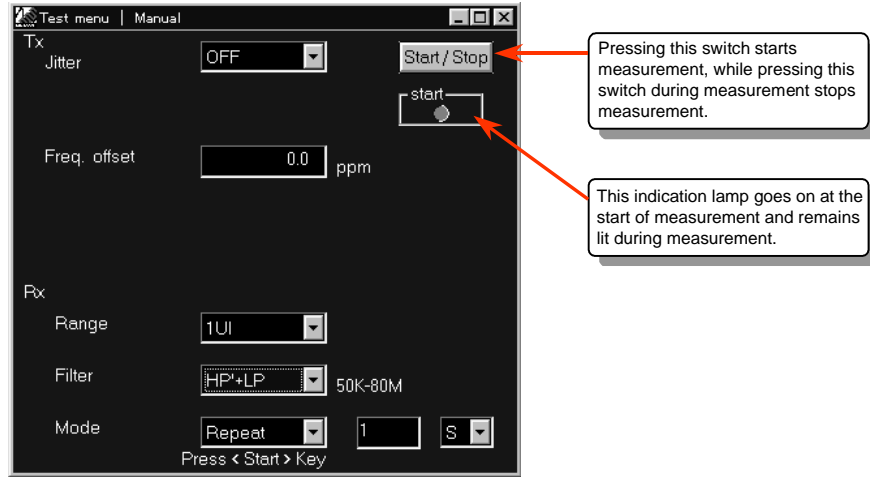

(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software.

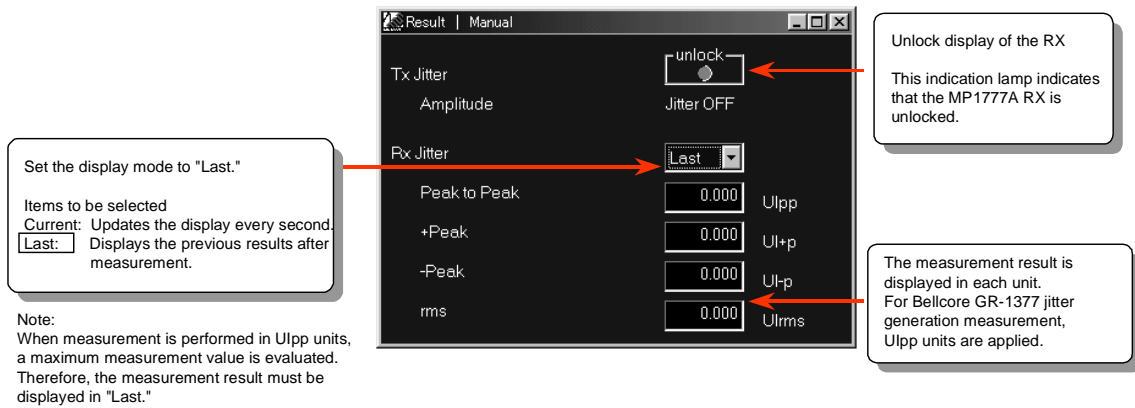

Note: To display the Result screen, the Test menu screen must be opened in advance.

6.10 Example of Jitter Sweep Measurement for MUX/DEMUX Module

This jitter sweep measurement checks the jitter tolerance point at which an error occurs when a jitter-modulated data signal is input to a MUX/DEMUX module.

The MX177701A Jitter Performance Test Software enables use of a measurement method (jitter tolerance measurement) that finds and evaluates the jitter tolerance point. This software also enables use of a measurement method (jitter sweep measurement) that adds a preset jitter value to check only whether an error occurs. The former method (jitter tolerance measurement) is suitable for applications such as performance evaluation for the DUT in research and development departments. The latter method (jitter sweep measurement) is suitable for applications such as shipment inspection during mass production of the DUT in manufacturing departments.

6.10.1 Example of measurement connection

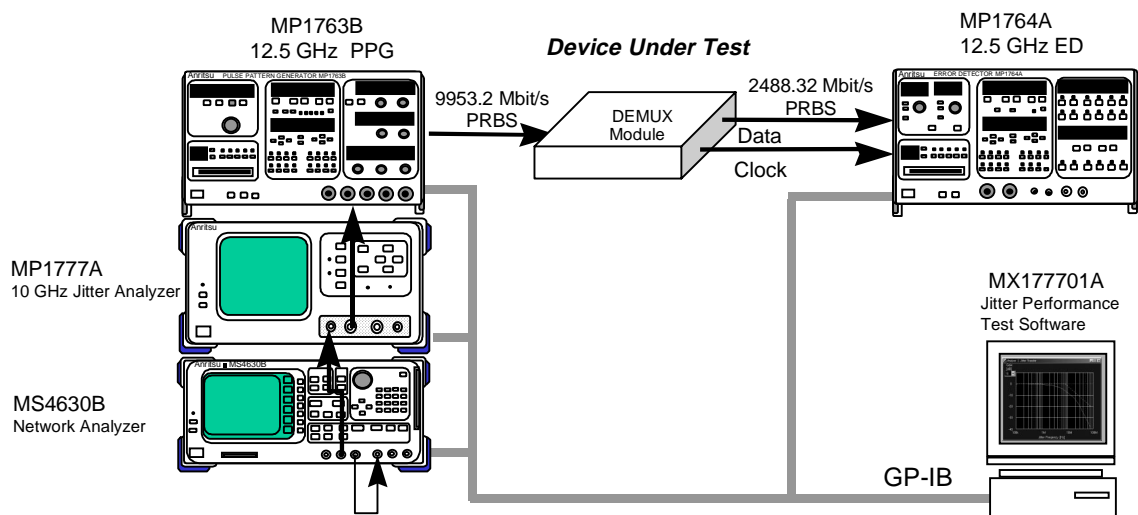


Figure 6-10-1 Connection for jitter sweep measurement

Note: The MX177701A Jitter Performance Test Software does not exercise control related to the interfaces with the MP1763B Pulse Pattern Generator and MP1764A Error Detector. Before measurement, they must be set to the optimum condition.

6.10.2 Measurement procedure

This section explains an example of measurement (jitter sweep measurement) that adds a preset jitter value to check only whether an error occurs.

[Measurement procedure]

(1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

Set "Bit Rate" in the TX to "2488 M."

Items to be selected

| Standard | +Opt. 01 | +Opt.02 |
|----------|----------|---------|
| 9953 M | 9977 M | 10664 M |
| 4977 M | 4988 M | 5332 M |
| 2488 M | 2494 M | 2666 M |

Note:
Only options installed in the MP1777A can be displayed as items to be selected.

Test menu: Jitter Sweep

Tx Bit Rate: 9953M

Clock: Internal

Rx Bit Rate: 9953M

Select "Jitter Sweep" from the Test menu.

Items to be selected

- Manual
- Jitter Tolerance
- Jitter Transfer
- Jitter Sweep

Set Clock to "Internal."

Items to be selected

- Internal
- Lock 2 MHz (Unbaranced)
- Lock 2 MHz (Baranced)
- Lock 2 Mbps (Unbaranced)
- Lock 2 Mbps (Baranced)
- Lock 1.5 MHz (Unbaranced)
- Lock 1.5 Mbps (Baranced)
- External

(2) Set the measurement point (Sweep Table) on the Test menu screen of the MX177701A Jitter Performance Test Software.

Select "Bellcore GR-1377" from the Sweep Table.

Items to be selected

- Bellcore GR-1377
- User

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

Test menu | Jitter Sweep

Sweep Table: Bellcore GR-1377

| No | Freq.(Hz) | (Ujpp) | No | Freq.(Hz) | (Ujpp) |
|----|-----------|--------|----|------------|--------|
| 1 | 10 | 15.0 | 11 | 100,000 | 1.5 |
| 2 | 50 | 15.0 | 12 | 220,000 | 1.5 |
| 3 | 100 | 15.0 | 13 | 400,000 | 1.5 |
| 4 | 500 | 15.0 | 14 | 1,000,000 | 0.6 |
| 5 | 1,000 | 15.0 | 15 | 2,200,000 | 0.27 |
| 6 | 2,400 | 15.0 | 16 | 4,000,000 | 0.15 |
| 7 | 4,600 | 7.8 | 17 | 10,000,000 | 0.15 |
| 8 | 10,000 | 3.6 | 18 | 22,000,000 | 0.15 |
| 9 | 24,000 | 1.5 | 19 | 46,000,000 | 0.15 |
| 10 | 46,000 | 1.5 | 20 | 80,000,000 | 0.15 |


Point : 1 to 20

Press <Start> key


If "User" is selected in the Sweep Table, measurement conditions can be freely edited.

If "User" is selected in the Sweep Table, measurement points can be freely changed.

(3) Press the Start/Stop button on the Test menu screen of the MX177701A Jitter Performance Test Software to start measurement.

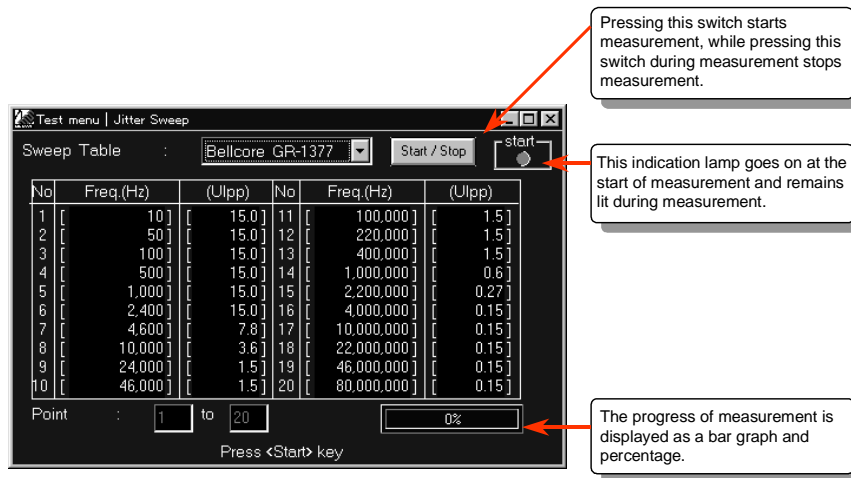


(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software. JG at the right is an abbreviation of Judge and indicates whether an error occurs when the quantity of jitter with the Sweep Table value set on the Test menu screen is generated. "O" means that no error occurs, and "●" means that an error occurs.

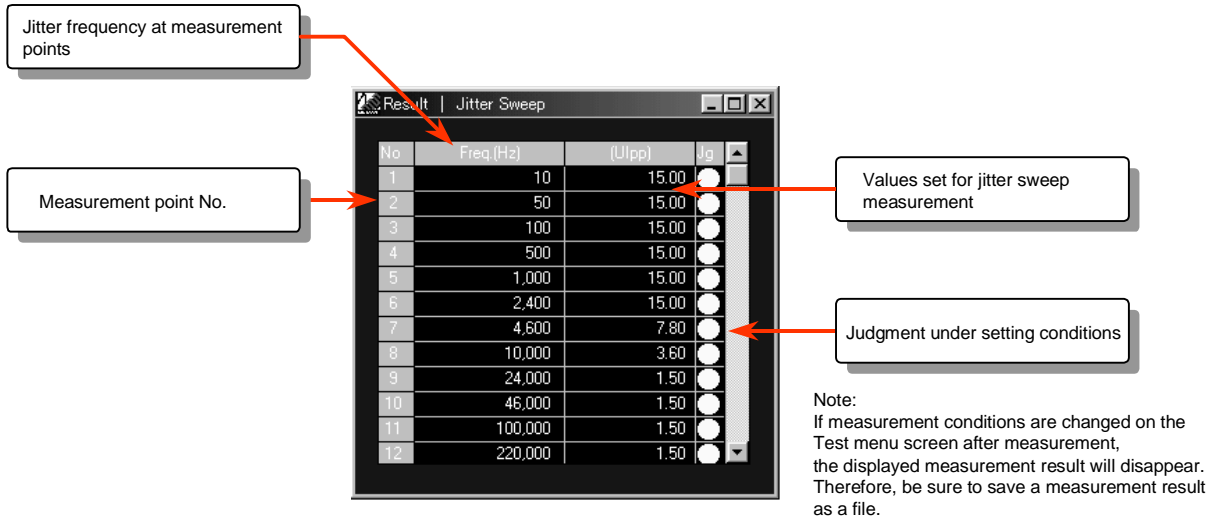

Note: To display the Result screen, the Test menu screen must be opened in advance.

(5) Display the measurement results as graphic data on the Analyze screen of the MX177701A Jitter Performance Test Software. ○ or X indicates the measurement point. ○ indicates that no error occurs, and X indicates that an error occurs.

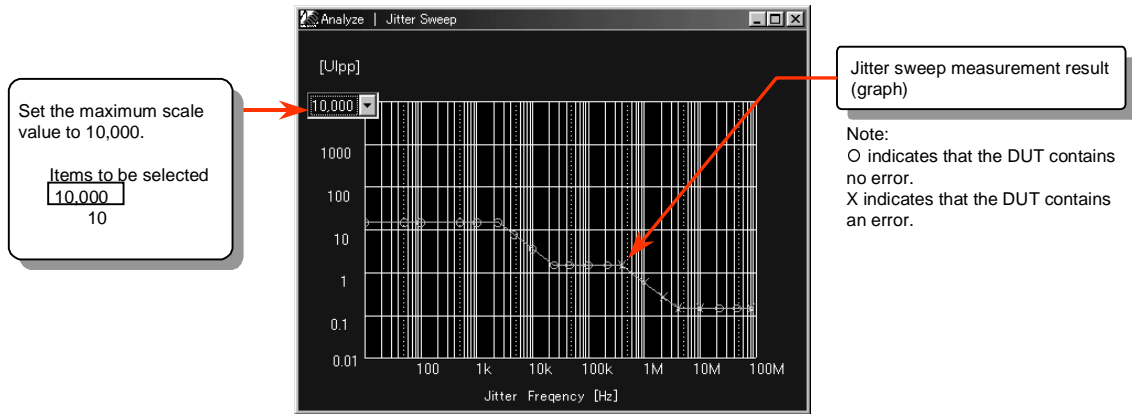

Note: To display the Result screen, the Test menu screen must be opened in advance.

6.11 Example of Jitter Generation Measurement for MUX/DEMUX Module

This jitter generation measurement measures the jitter of the DUT when a data signal without jitter (Jitter = OFF) is input to a MUX/DEMUX module.

When the module has different input and output bit rates, jitter generation measurement evaluates jitter in the jitter band specified by the output bit rate. Jitter generation measurement has generally been done using UIrms units. However, ITU-T has recently reviewed jitter generation measurement, and measurement using UIpp units is also required. The MP1777A enables measurement that satisfies a jitter band of 80 MHz in UIpp and UIrms units.

6.11.1 Example of measurement connection

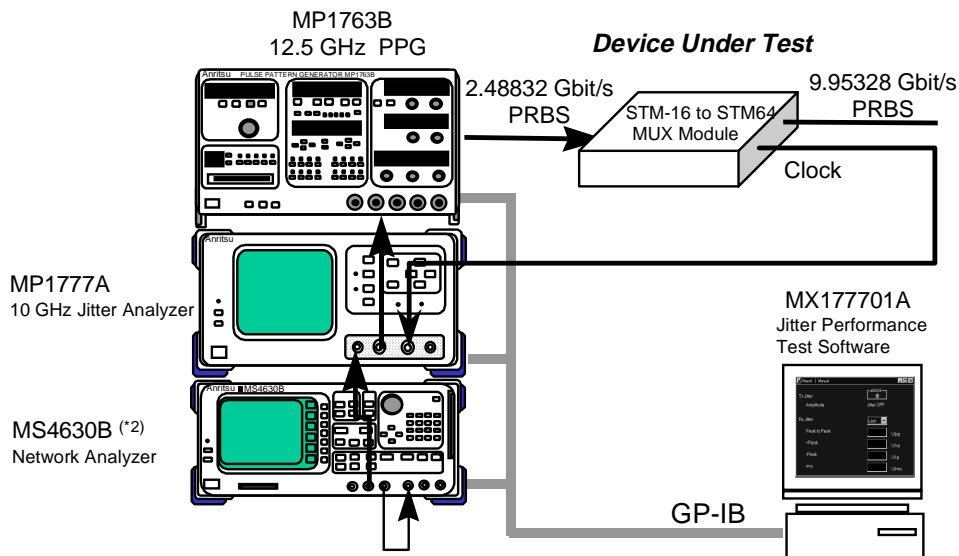


Figure 6-11-1 Connection for jitter generation measurement

Notes:

- (1) The MX177701A Jitter Performance Test Software does not exercise control related to the interface with the MP1763B 12.5 GHz Pulse Pattern Generator. Before automatic jitter measurement is started, it must be set to the optimum condition.
 - (2) For jitter generation measurement, the jitter generator does not require a modulated signal. When the MX177701A Jitter Performance Test Software is not used, the MS4630B Network Analyzer is not required for measurement.
-

6.11.2 Measurement procedure

This section explains the procedure for jitter generation measurement for a MUX/DEMUX module (reference standard Bellcore GR-1377).

[Measurement procedure]

(1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

The screenshot shows the main configuration screen of the MX177701A Jitter Performance Test Software. The 'Test menu' is set to 'Manual'. The 'Tx' and 'Rx' sections both have 'Bit Rate' set to '9953M' and 'Clock' set to 'Internal'.

Callout 1 (Left): Set "Bit Rate" in the TX to "2488 M" and "Bit Rate" in the RX to "9953 M."
 Items to be selected:

| Standard | +Opt. 01 | +Opt. 02 |
|----------|----------|----------|
| 9953 M | 9977 M | 10664 M |
| 4977 M | 4988 M | 5332 M |
| 2488 M | 2494 M | 2666 M |

 Note:
 Only options installed in the MP1777A can be displayed as items to be selected.

Callout 2 (Top Right): Select "Manual" from the Test menu.
 Items to be selected:
 Manual
 Jitter Tolerance
 Jitter Transfer
 Jitter Sweep

Callout 3 (Bottom Right): Set Clock to "Internal."
 Items to be selected:
 Internal
 Lock 2 MHz (Unbaranced)
 Lock 2 MHz (Baranced)
 Lock 2 Mbps (Unbaranced)
 Lock 2 Mbps (Baranced)
 Lock 1.5 MHz (Unbaranced)
 Lock 1.5 Mbps (Baranced)
 External

(2) Set the measurement conditions on the Test menu screen of the MX177701A Jitter Performance Test Software.

The screenshot shows the 'Test menu' screen with 'Manual' selected. The 'Tx' section has 'Jitter' set to 'OFF'. The 'Rx' section has 'Range' set to '1UI', 'Filter' set to 'HP+LP', and 'Mode' set to 'Repeat'.

Callout 1 (Top Left): Set Tx Jitter to "OFF."
 Items to be selected:
 OFF
 ON

Callout 2 (Top Right): Frequency offset can freely changed at ±50 ppm/0.1 ppm.
 Freq. offset: 0.0 ppm

Callout 3 (Middle Right): Set Rx Range to "1 UI."
 Items to be selected:
 1 UI: Measurement resolution 0.001 UI
 4 UI: Measurement resolution 0.01 UI


Callout 4 (Bottom Right): Set measurement mode to "Repeat" or "1 s."
 Items to be selected:
 Repeat: Repeated measurement
 Single: One measurement
 Manual: Measurement from start to stop

Callout 5 (Bottom Left): Set Filter to "HP" + LP (50 k - 80 MHz).
 Items to be selected:
 LP : (- 80 MHz)
 HP1+LP : (10 k - 80 MHz)
 HP2+LP : (4 M - 80 MHz)
 HP+LP : (12 k - 80 MHz)
 HP+LP : (50 k - 80 MHz)


Note:
 The items to be selected depend on Rx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

Note:
 If output jitter is measured in units of Upp, perform measurement after setting the measurement time to 60 s.

(3) Press the Start/Stop button on the Test menu screen of the MX177701A Jitter Performance Test Software to start measurement.

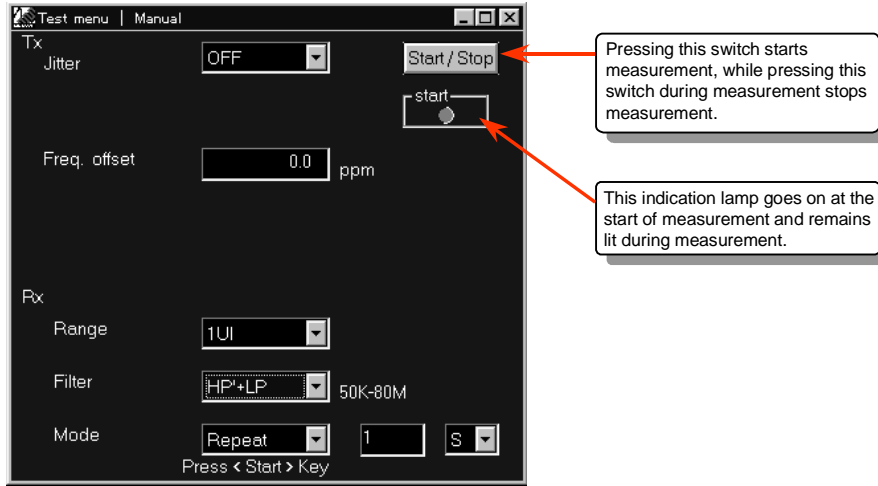

(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software.

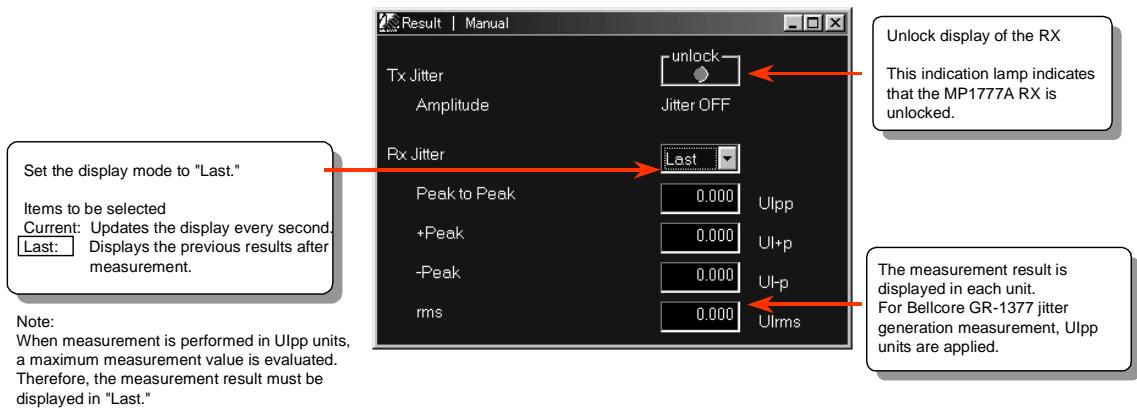

Note:
When measurement is performed in Upp units, a maximum measurement value is evaluated. Therefore, the measurement result must be displayed in "Last."

Note: To display the Result screen, the Test menu screen must be opened in advance.

6.12 Example of Frequency Tolerance Measurement for SDH/SONET Transmission Equipment

This frequency tolerance measurement checks whether an error occurs when a frequency-offset data signal is input to SDH/SONET transmission equipment.

The MP1777A 10 GHz Jitter Analyzer can be adjusted to a ± 50 ppm frequency offset in steps of 0.1 ppm. This function enables checking of the frequency tolerance of transmission equipment.

6.12.1 Example of measurement connection

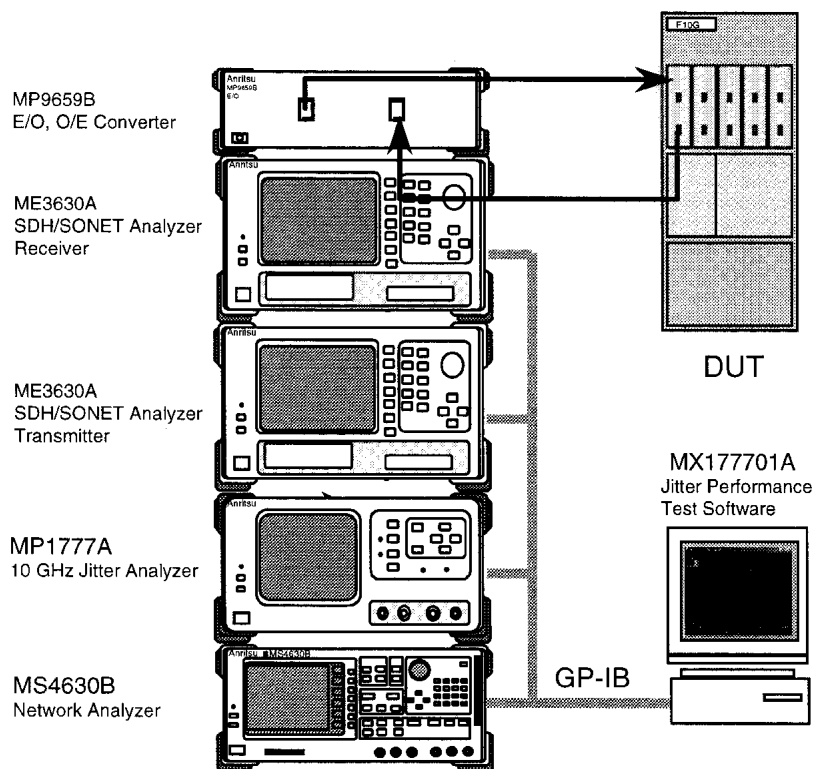


Figure 6-12-1 Connection for frequency tolerance measurement

Note: The MX177701A Jitter Performance Test Software does not control the setting related to the interfaces with the ME3630A SDH/SONET Analyzer and the MP9659B E/O O/E Converter. Before measurement, it must be set to the optimum condition.

6.12.2 Measurement procedure

This section explains an example of frequency tolerance measurement that checks whether an error occurs when a frequency-offset data signal is input to SDH/SONET transmission equipment.

[Measurement procedure]

- (1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

The screenshot shows the main configuration screen of the MX177701A Jitter Performance Test Software. The interface includes a 'Test menu' dropdown set to 'Manual', 'Tx' and 'Rx' sections for 'Bit Rate' (both set to 9953M), and a 'Clock' dropdown set to 'Internal'. Three callout boxes provide instructions: the first points to the 'Bit Rate' dropdown with a table of options; the second points to the 'Test menu' dropdown; the third points to the 'Clock' dropdown with a list of clock options.

Set "Bit Rate" in the TX to "9953 M."

| Standard | +Opt. 01 | +Opt.02 |
|----------|----------|---------|
| 9953 M | 9977 M | 10664 M |
| 4977 M | 4988 M | 5332 M |
| 2488 M | 2494 M | 2666 M |

Items to be selected
Manual
Jitter Tolerance
Jitter Transfer
Jitter Sweep

Set Clock to "Internal."

Items to be selected
Internal
Lock 2 MHz (Unbaranced)
Lock 2 MHz (Baranced)
Lock 2 Mbps (Unbaranced)
Lock 2 Mbps (Baranced)
Lock 1.5 MHz (Unbaranced)
Lock 1.5 Mbps (Baranced)
External

- (2) Change the frequency offset, and check whether an ME3630A SDH/SONET Analyzer receiver error occurs on the Test menu screen of the MX177701A Jitter Performance Test Software.

The screenshot shows the 'Test menu' screen with 'Manual' selected. It features controls for 'Tx Jitter' (set to OFF), 'Freq. offset' (set to 0.0 ppm), 'Rx Range' (set to 1U), 'Filter' (set to HP+LP), and 'Mode' (set to Repeat). Two callout boxes provide instructions: one points to the 'Tx Jitter' dropdown, and the other points to the 'Freq. offset' input field.

Set Tx Jitter to "OFF."

Items to be selected
OFF
ON

Set frequency offset in the range of -50 ppm to +50 ppm.
Check for error occurrence on the receiver side of the ME3630A SDH/SONET Analyzer.

6.13 Example of Jitter Tolerance Measurement for SDH/SONET Transmission Equipment

This jitter tolerance measurement measures the jitter tolerance point at which an error occurs when a jitter-modulated data signal is input to SDH/SONET transmission equipment.

The MX177701A Jitter Performance Test Software enables use of a measurement method (jitter tolerance measurement) that finds and evaluates the jitter tolerance point. This software also enables use of a measurement method (jitter sweep measurement) that adds a preset jitter value to check only whether an error occurs. The former method (jitter tolerance measurement) is suitable for applications such as performance evaluation for the DUT in research and development departments. The latter method (jitter sweep measurement) is suitable for applications such as shipment inspection during mass production of the DUT in manufacturing departments.

6.13.1 Example of measurement connection

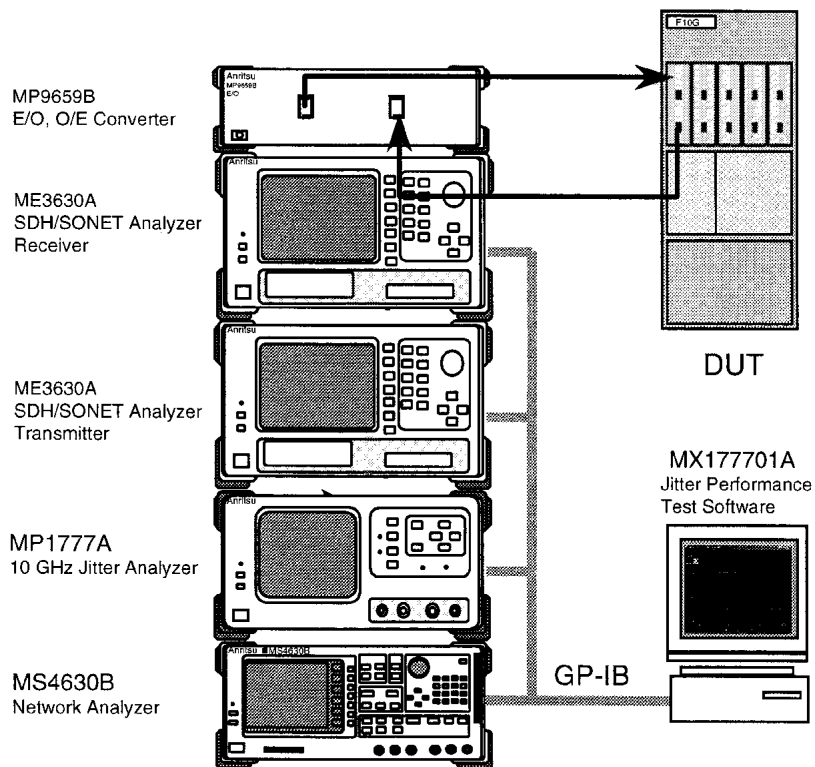


Figure 6-13-1 Connection for jitter tolerance measurement

Note: The MX177701A Jitter Performance Test Software does not exercise control related to the interface with the ME3630A SDH/SONET Analyzer. Before automatic jitter measurement is started, it must be set to the optimum condition.

6.13.2 Measurement procedure

This section explains the measurement procedure for the measurement method (jitter tolerance measurement) that finds and evaluates the jitter tolerance point.

[Measurement procedure]

(1) Set the bit rate and clock conditions on the Set-up screen of the MX177701A Jitter Performance Test Software.

Set "Bit Rate" in the TX to "9953 M."

Items to be selected
Standard +Opt. 01 +Opt.02
9953 M 9977 M 10664 M
4977 M 4988 M 5332 M
2488 M 2494 M 2666 M

Note:
Only options installed in the MP1777A can be displayed as items to be selected.

Select "Jitter Tolerance" from the Test menu.

Items to be selected
Manual
Jitter Tolerance
Jitter Transfer
Jitter Sweep

Set Clock to "Internal."

Items to be selected
Internal
Lock 2 MHz (Unbaranced)
Lock 2 MHz (Baranced)
Lock 2 Mbps (Unbaranced)
Lock 2 Mbps (Baranced)
Lock 1.5 MHz (Unbaranced)
Lock 1.5 Mbps (Baranced)
External

(2) Set the measurement point (Tolerance Table) and applicable standard (Mask) on the Test menu screen of the MX177701A Jitter Performance Test Software.

Select "Bellcore GR-1377" from the Tolerance Table.

Items to be selected
Bellcore GR-1377
User

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

If an applicable Jitter Tolerance specification has been previously set, measurement results can be judged as acceptable or not. Set Mask to "Bellcore GR-1377."

Items to be selected
Bellcore GR-1377
User

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

If "User" is selected in the Tolerance Table, measurement conditions can be freely edited.


If "User" is selected in the Tolerance Table, measurement points can be freely changed.

If Mask = User is set, a technical standard value can be freely set. Also, the mask shape at the set value can be checked using the graph on the right.


| No | Freq.(Hz) | No | Freq.(Hz) |
|----|-----------|----|--------------|
| 1 | [10 | 11 | [100,000 |
| 2 | [50 | 12 | [220,000 |
| 3 | [100 | 13 | [400,000 |
| 4 | [500 | 14 | [1,000,000 |
| 5 | [1,000 | 15 | [2,200,000 |
| 6 | [2,400 | 16 | [4,000,000 |
| 7 | [4,600 | 17 | [10,000,000 |
| 8 | [10,000 | 18 | [22,000,000 |
| 9 | [24,000 | 19 | [46,000,000 |
| 10 | [46,000 | 20 | [80,000,000 |

| A | Freq.(Hz) | Ujpp |
|---|--------------|--------|
| A | [10 | [15.0 |
| B | [2,400 | [15.0 |
| C | [24,000 | [1.5 |
| D | [400,000 | [1.5 |
| E | [4,000,000 | [0.15 |
| F | [80,000,000 | [0.15 |

(3) Press the Start/Stop button on the Test menu screen of the MX177701A Jitter Performance Test Software to start measurement.

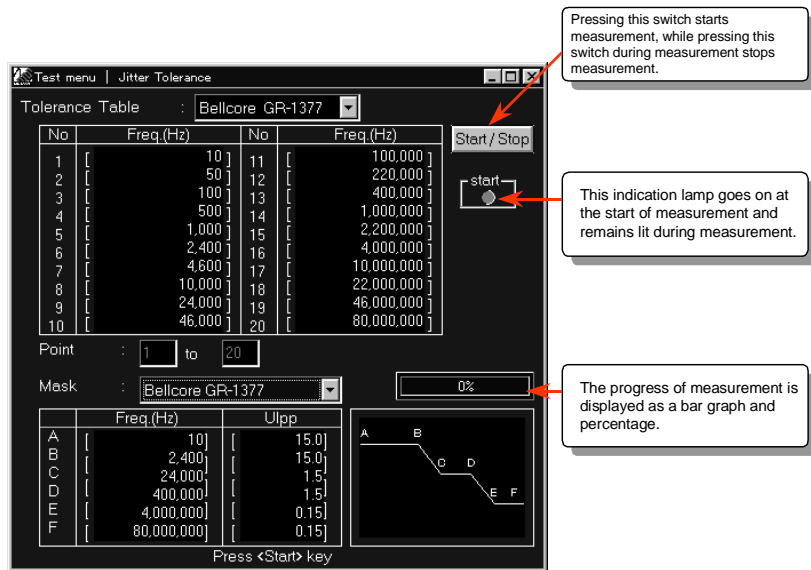


(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software. JG at the right is an abbreviation of Judge and indicates the acceptance/rejection decision for the Mask (standard value) set on the Test menu screen. "O" means acceptance, and "●" means rejection.

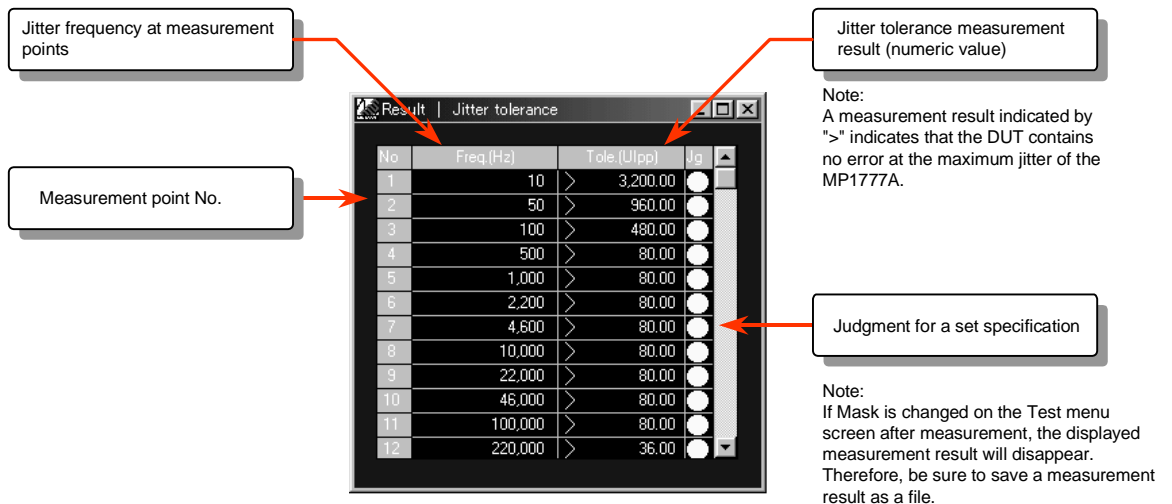

Note: To display the Result screen, the Test menu screen must be opened in advance.

(5) Display the measurement results as graphic data on the Analyze screen of the MX177701A Jitter Performance Test Software. The solid line indicates the measurement results, and the dotted line indicates the standard value (Mask).

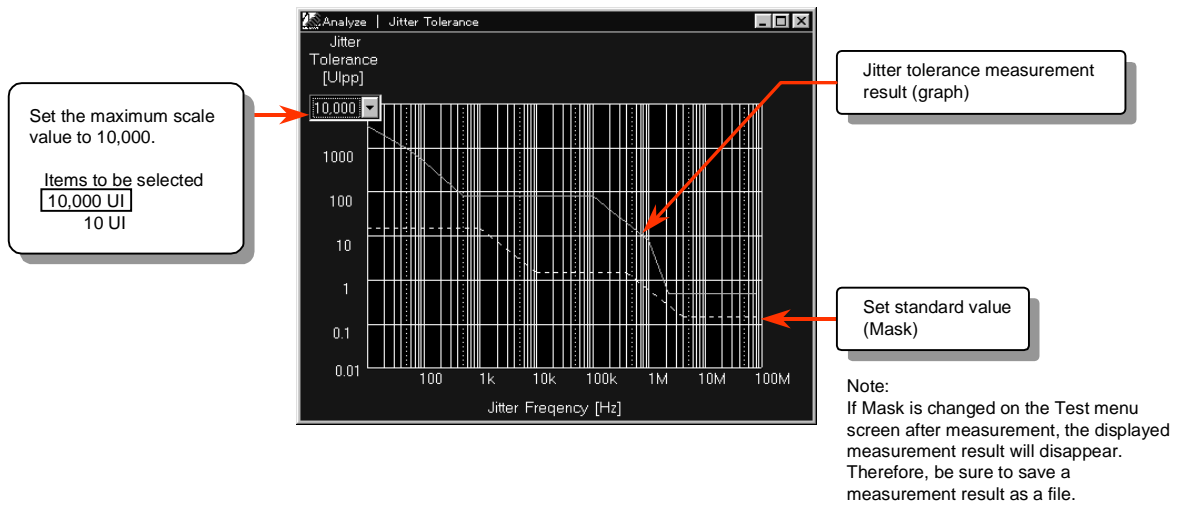

Note: To display the Result screen, the Test menu screen must be opened in advance.

6.14 Example of Frequency Tolerance Measurement for Submarine Transmission Equipment

This frequency tolerance measurement checks whether an error occurs when a frequency-offset data signal is input from the SDH side to submarine transmission equipment and returned to the SDH.

The MP1777A 10 GHz Jitter Analyzer can be adjusted to a ± 50 ppm frequency offset in steps of 0.1 ppm. This function enables checking of the frequency tolerance of transmission equipment.

6.14.1 Example of measurement connection

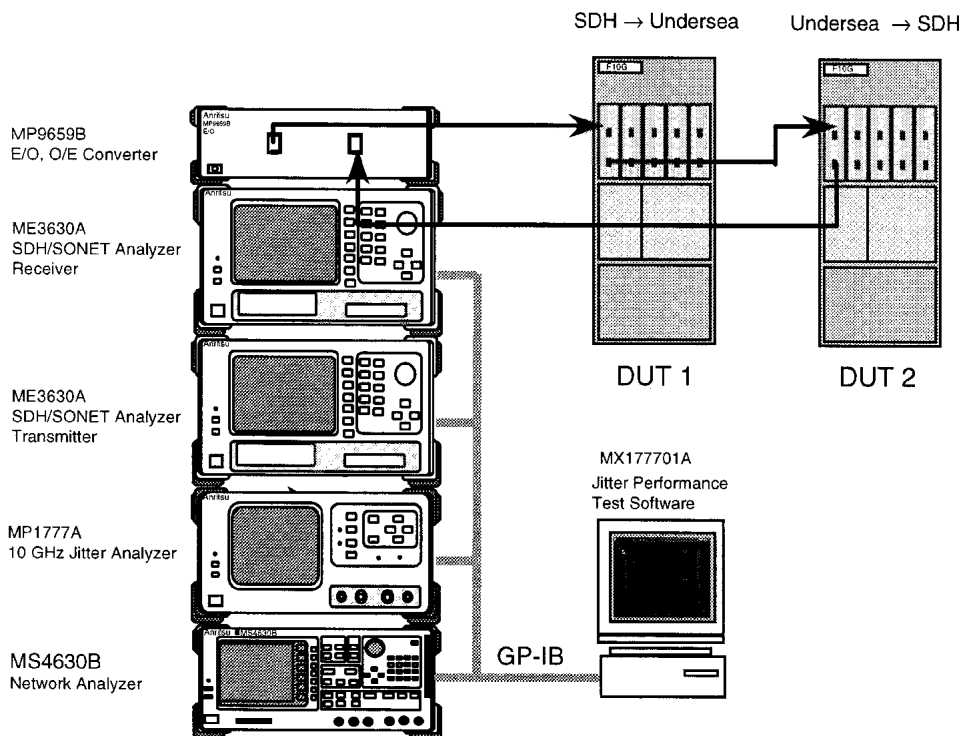


Figure 6-14-1 Connection for frequency tolerance measurement

Note: The MX177701A Jitter Performance Test Software does not control the setting related to the interfaces with the ME3630A SDH/SONET Analyzer and MP9659B E/O O/E Converter. Before measurement, they must be set to the optimum condition.

6.14.2 Measurement procedure

This section explains an example of frequency tolerance measurement that checks whether an error occurs when a frequency-offset data signal is input from the SDH side to submarine transmission equipment and returned to the SDH.

[Measurement procedure]

(1) Set the bit rate and clock conditions on the main screen of the MX177701A Jitter Performance Test Software.

The screenshot shows the main configuration screen of the MX177701A Jitter Performance Test Software. The interface includes a 'Test menu' dropdown set to 'Manual', 'Tx' and 'Rx' sections for 'Bit Rate' (both set to 9953M) and 'Clock' (set to Internal). Three callout boxes provide instructions:

- Left Callout:** "Set 'Bit Rate' in the TX to '9953 M.'" and a table of bit rate options:

| Standard | +Opt. 01 | +Opt.02 |
|----------|----------|---------|
| 9953 M | 9977 M | 10664 M |
| 4977 M | 4988 M | 5332 M |
| 2488 M | 2494 M | 2666 M |
- Top Right Callout:** "Select 'Manual' from the Test menu." and "Items to be selected: Manual, Jitter Tolerance, Jitter Transfer, Jitter Sweep".
- Bottom Right Callout:** "Set Clock to 'Internal.'" and "Items to be selected: Internal, Lock 2 MHz (Unbaranced), Lock 2 MHz (Baranced), Lock 2 Mbps (Unbaranced), Lock 2 Mbps (Baranced), Lock 1.5 MHz (Unbaranced), Lock 1.5 Mbps (Baranced), External".

(2) Change the frequency offset, and check whether an ME3630A SDH/SONET Analyzer receiver error occurs on the Test menu screen of the MX177701A Jitter Performance Test Software.

The screenshot shows the 'Test menu' screen with 'Manual' selected. The 'Tx' section has 'Jitter' set to 'OFF'. The 'Freq. offset' is set to '0.0 ppm'. The 'Rx' section has 'Range' set to 'TUI', 'Filter' set to 'HP+LP' (50K-80M), and 'Mode' set to 'Repeat'. Two callout boxes provide instructions:

- Left Callout:** "Set Tx Jitter to 'OFF.'" and "Items to be selected: OFF, ON".
- Right Callout:** "Set frequency offset in the range of -50 ppm to +50 ppm. Check for error occurrence on the receiver side of the ME3630A SDH/SONET Analyzer."

6.15 Example of Jitter Tolerance Measurement for Submarine Transmission Equipment

This jitter tolerance measurement measures the jitter tolerance point at which an error occurs when a jitter-modulated data signal is input from the SDH side to the submarine transmission equipment and returned to the SDH.

The MX177701A Jitter Performance Test Software enables use of a measurement method (jitter tolerance measurement) that finds and evaluates the jitter tolerance point. This software also enables use of a measurement method (jitter sweep measurement) that adds a preset jitter value to check only whether an error occurs. The former method (jitter tolerance measurement) is suitable for applications such as performance evaluation for the DUT in research and development departments. The latter method (jitter sweep measurement) is suitable for applications such as shipment inspection during mass production of the DUT in manufacturing departments.

6.15.1 Example of measurement connection

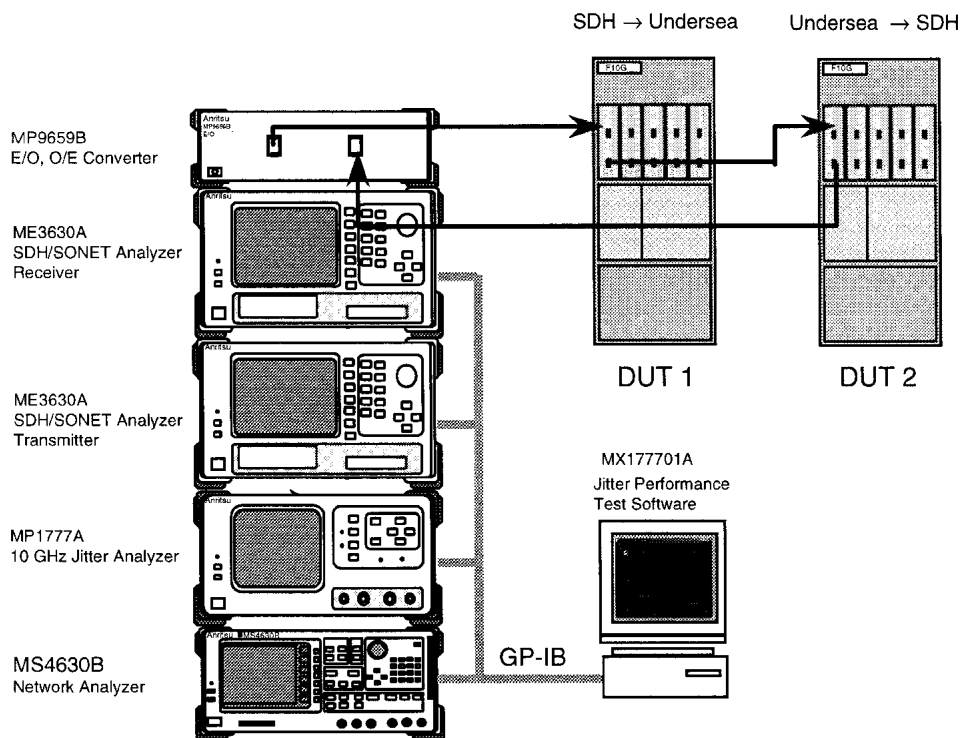


Figure 6-15-1 Connection for jitter tolerance measurement

Note: The MX177701A Jitter Performance Test Software does not exercise control related to the interface with the ME3630A SDH/SONET Analyzer. Before automatic jitter measurement is started, it must be set to the optimum condition.

6.15.2 Measurement procedure

This section explains the measurement procedure for the measurement method (jitter tolerance measurement) that finds and evaluates the jitter tolerance point.

[Measurement procedure]

(1) Set the bit rate and clock conditions on the Set-up screen of the MX177701A Jitter Performance Test Software.

Set "Bit Rate" in the TX to "9953 M."

Items to be selected
Standard +Opt. 01 +Opt.02
9953 M 9977 M 10664 M
4977 M 4988 M 5332 M
2488 M 2494 M 2666 M

Note:
Only options installed in the MP1777A can be displayed as items to be selected.

Select "Jitter Tolerance" from the Test menu.

Items to be selected
Manual
Jitter Tolerance
Jitter Transfer
Jitter Sweep

Set Clock to "Internal."

Items to be selected
Internal
Lock 2 MHz (Unbaranced)
Lock 2 MHz (Baranced)
Lock 2 Mbps (Unbaranced)
Lock 2 Mbps (Baranced)
Lock 1.5 MHz (Unbaranced)
Lock 1.5 Mbps (Baranced)
External

(2) Set the measurement point (Tolerance Table) and applicable standard (Mask) on the Test menu screen of the MX177701A Jitter Performance Test Software.

Select "Bellcore GR-1377" from the Tolerance Table.

Items to be selected
Bellcore GR-1377
User

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

If an applicable Jitter Tolerance specification has been previously set, measurement results can be judged as acceptable or not. Set Mask to "Bellcore GR-1377."

Items to be selected
Bellcore GR-1377
User

Note:
The items to be selected depend on Tx Bit Rate set on the main screen. The above example shows items when Bit Rate = 9953 M is set.

If "User" is selected in the Tolerance Table, measurement conditions can be freely edited.


If "User" is selected in the Tolerance Table, measurement points can be freely changed.

If Mask = User is set, a technical standard value can be freely set. Also, the mask shape at the set value can be checked using the graph on the right.


| No | Freq.(Hz) | No | Freq.(Hz) |
|----|------------|----|----------------|
| 1 | [10] | 11 | [100,000] |
| 2 | [50] | 12 | [220,000] |
| 3 | [100] | 13 | [400,000] |
| 4 | [500] | 14 | [1,000,000] |
| 5 | [1,000] | 15 | [2,200,000] |
| 6 | [2,400] | 16 | [4,000,000] |
| 7 | [4,600] | 17 | [10,000,000] |
| 8 | [10,000] | 18 | [22,000,000] |
| 9 | [24,000] | 19 | [46,000,000] |
| 10 | [46,000] | 20 | [80,000,000] |

| | Freq.(Hz) | Ujpp |
|---|----------------|----------|
| A | [10] | [15.0] |
| B | [2,400] | [15.0] |
| C | [24,000] | [1.5] |
| D | [400,000] | [1.5] |
| E | [4,000,000] | [0.15] |
| F | [80,000,000] | [0.15] |

(3) Press the Start/Stop button on the Test menu screen of the MX177701A Jitter Performance Test Software to start measurement.

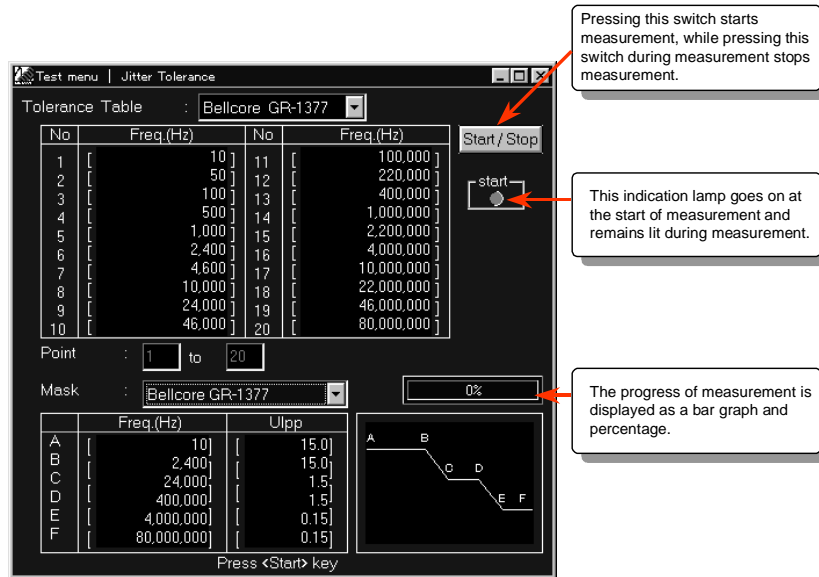


(4) Check the numeric measurement results on the Result screen of the MX177701A Jitter Performance Test Software. JG at the right is an abbreviation of Judge and indicates the acceptance/rejection decision for the Mask (standard value) set on the Test menu screen. "O" means acceptance, and "●" means rejection.

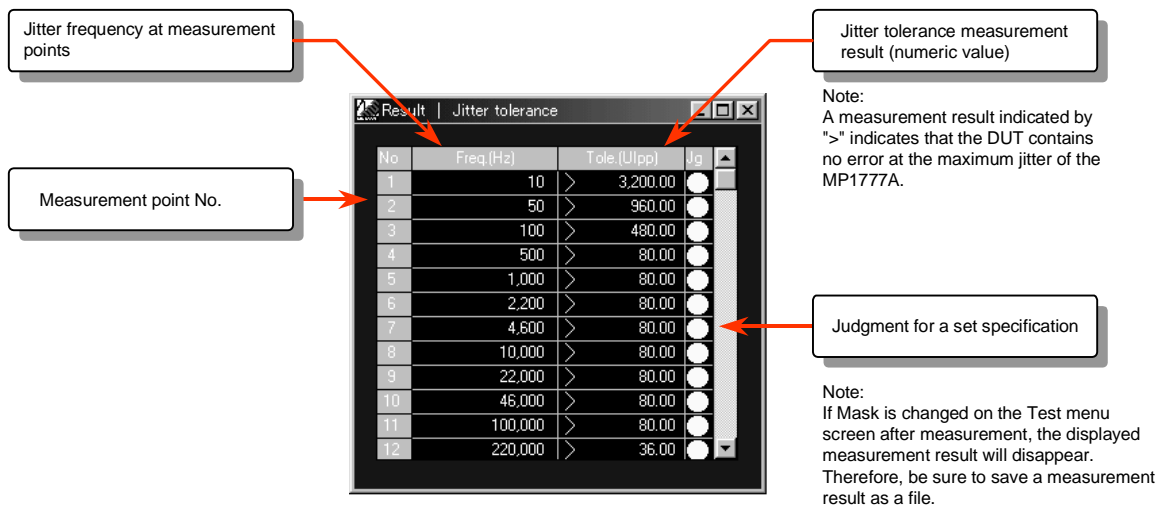

Note: To display the Result screen, the Test menu screen must be opened in advance.

(5) Display the measurement results as graphic data on the Analyze screen of the MX177701A Jitter Performance Test Software. The solid line indicates the measurement results, and the dotted line indicates the standard value (Mask).

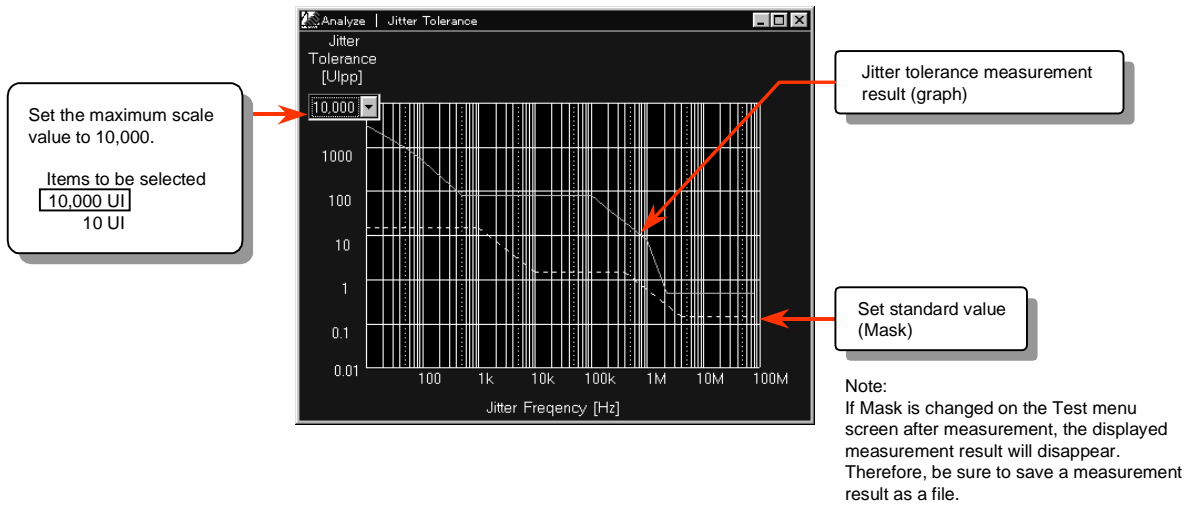

Note: To display the Result screen, the Test menu screen must be opened in advance.

Anritsu

Specifications are subject to change without notice.

ANRITSU CORPORATION

5-10-27, Minamiazabu, Minato-ku, Tokyo 106-8570, Japan
 Phone: +81-3-3446-1111
 Telex: J34372
 Fax: +81-3-3442-0235

Overseas Subsidiaries

● U.S.A.

ANRITSU COMPANY

North American Region Headquarters

1155 East Collins Blvd., Richardson, Tx 75081, U.S.A.
 Phone: +1-972-644-1777
 Fax: +1-972-644-3416

● Canada

ANRITSU ELECTRONICS LTD.

Unit 102, 215 Stafford Road West
 Nepean, Ontario K2H 9C1, Canada
 Phone: +1-613-828-4090
 Fax: +1-613-828-5400

● Brasil

ANRITSU ELETRÔNICA LTDA.

Praia de Botafogo 440, Sala 2401 CEP 22250-040,
 Rio de Janeiro, RJ, Brasil
 Phone: +55-21-5276922
 Fax: +55-21-537-1456

● U.K.

ANRITSU LTD.

200 Capability Green, Luton, Bedfordshire LU1 3LU, U.K.
 Phone: +44-1582-433200
 Fax: +44-1582-731303

● Germany

ANRITSU GmbH

Grafenberger Allee 54-56, 40237 Düsseldorf 1,
 Germany
 Phone: +49-211-96855-0
 Fax: +49-211-96855-55

● France

ANRITSU S.A.

9, Avenue du Québec Z.A. de Courtabœuf 91951 Les
 Ulis Cedex, France
 Phone: +33-1-60-92-15-50
 Fax: +33-1-64-46-10-65

● Italy

ANRITSU S.p.A.

Via Elio Vittorini, 129, 00144 Roma EUR, Italy
 Phone: +39-06-502-26-66
 Fax: +39-06-502-24-25

● Sweden

ANRITSU AB

Botvid Center, Fittja Backe 1-3 145 84 Stockholm,
 Sweden
 Phone: +46-853470700
 Fax: +46-853470730

● Singapore

ANRITSU PTE LTD.

6, New Industrial Rd., #06-01/02, Hoe Huat Industrial
 Building, Singapore 536199
 Phone: +65-282-2400
 Fax: +65-282-2533

● Hong Kong

ANRITSU COMPANY LTD.

Suite 719, 7/F., Chinachem Golden Plaza, 77 Mody
 Road, Tsimshatsui East, Kowloon, Hong Kong, China
 Phone: +852-2301-4980
 Fax: +852-2301-3545

● Korea

ANRITSU CORPORATION

14F Hyun Juk Bldg. 832-41, Yeoksam-dong,
 Kangnam-ku, Seoul, Korea
 Phone: +82-2-553-6603
 Fax: +82-2-553-6604-5

● Australia

ANRITSU PTY LTD.

Unit 3/170 Forster Road Mt. Waverley, Victoria, 3149,
 Australia
 Phone: +61-3-9558-8177
 Fax: +61-3-9558-8255

● Taiwan

ANRITSU COMPANY INC.

6F, 96, Sec. 3, Chien Kou North Rd. Taipei, Taiwan,
 R.O.C.
 Phone: +886-2-2515-6050
 Fax: +886-2-2509-5519