

Doc.No: M3T-1ET170004

09 June 2017

Anritsu Corporation

MP1800A

Security Update against WannaCrypt Ransomware

— Installation Instructions —

1 Overview






This document describes instructions for installing the security update against the WannaCrypt* (ransomware) worm to the Windows XP Professional or Windows Embedded Standard 7 (WES7) OS built in the MP1800A.

*WannaCrypt is also known as WannaCry, WannaCryptor or Wcry.

Windows XP Professional must be updated to Windows XP Service Pack 3 (SP3) before installing this WannaCrypt security update. This document also describes the SP3 installation.

If MP1800A is already infected by WannaCrypt, contact the Anritsu sales office for how to initialize MP1800A to the condition at factory shipment.

2 Instruction Stages

3.1	Preparing	2
		
3.2	Confirming Windows Version of MP1800A	3
		
3.3	Obtaining Update.....	6
		
3.4	Preparing for Installation.....	9
		
3.5	Installing Update in MP1800A	9
		
3.6	Confirming Update after Installation.....	12

3 Instructions

3.1 Preparing

1. Equipment needed for installation

The following equipment is needed for installing the update.

- Internet-connected PC
- USB flash memory that can be mounted on both MP1800A and PC desktops.
The USB flash memory must not have any security management function.
- Mouse and keyboard for operating MP1800A.

Note:

Scan and confirm that the PC and USB flash memory are not infected by any malware.

2. Backing-up important files

We recommend creating a backup of important data* to external storage such as USB flash memory to guard against data loss problems when installing the update.

* User-defined pattern file, analysis results, configuration files, and other important files.

Note:


Anritsu will not be held liable for loss of data on the storage device in MP1800A.

3.2 Confirming Windows Version of MP1800A




Confirm the build version of the Windows OS in the MP1800A.

- Windows XP Professional
- Windows Embedded Standard 7 (WES7) (32-bit)



1. Quit MX180000A application by clicking “EXIT” icon at the top right.
Quit Selector windows by clicking X button at the top right.

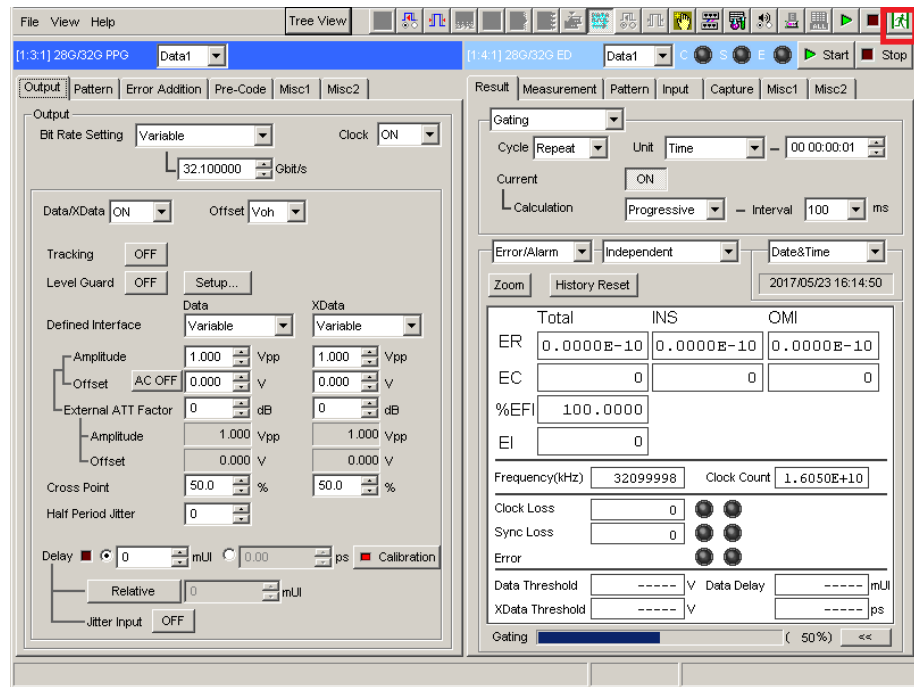

2. Confirm it is running Windows XP or not: Select Windows Start menu → Control Panel → Performance & Maintenance → System.

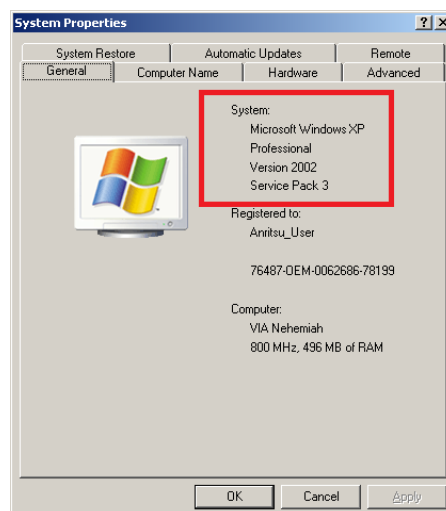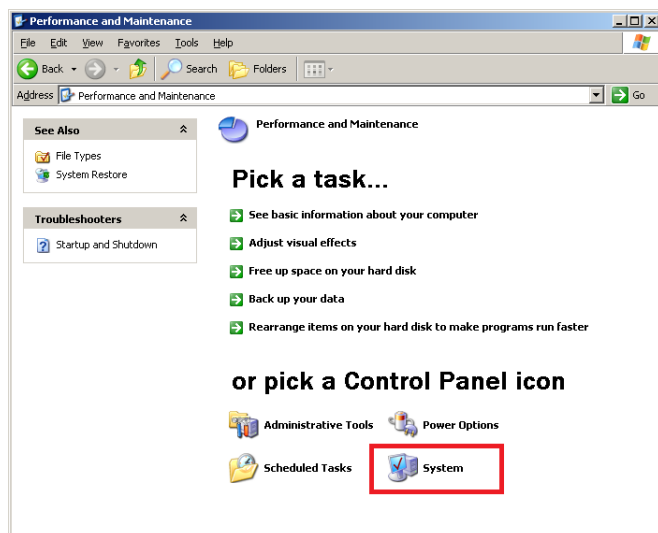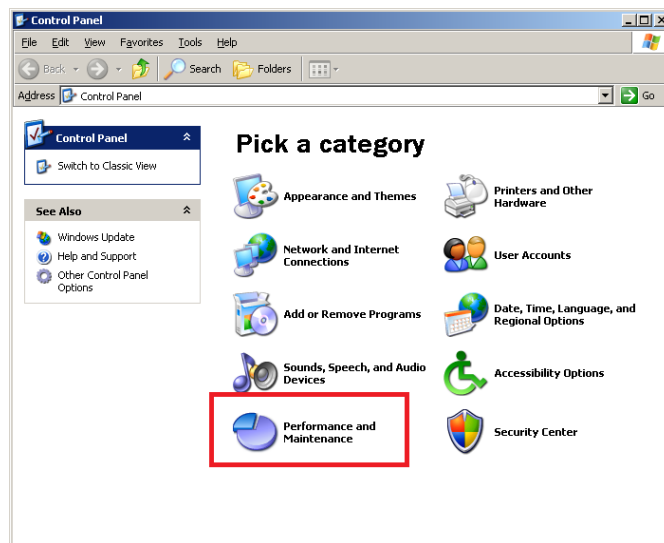

3. Confirm it is running Windows WES7 or not:
Select Windows Start menu → Control Panel → System & Security → System.

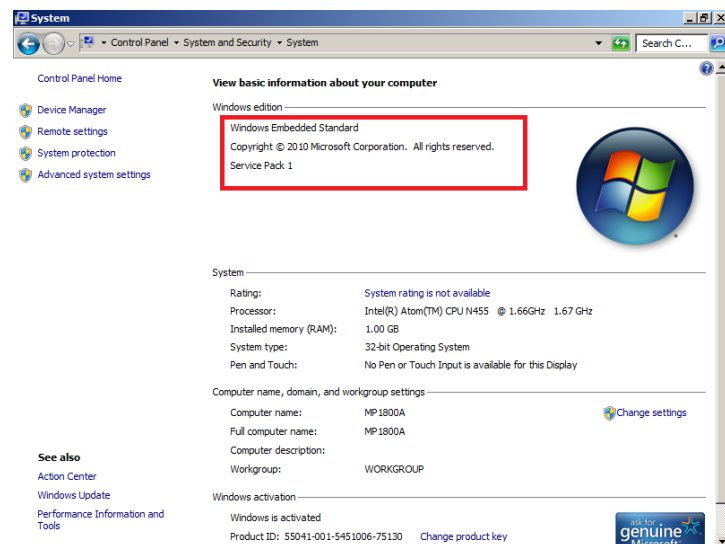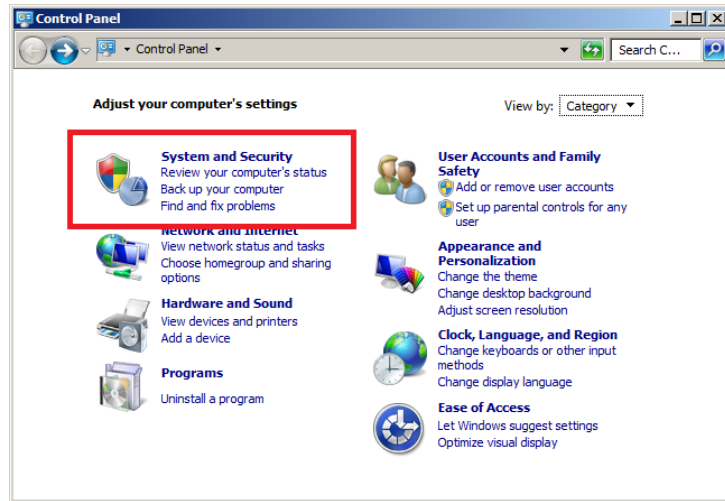

3.3 Obtaining Update

Download the correct update from Microsoft's homepage.
Use an Internet-connected PC to download the update.

This section describes the PC operation for downloading.

Note:


DO NOT connect the MP1800A directly to the Internet to download the update.

- If the MP1800A is running Windows XP Professional


1. Access the following page and download the Windows XP SP3 update.

<http://www.catalog.update.microsoft.com/Home.aspx>

Input KB936929 in the following box and click "Search".

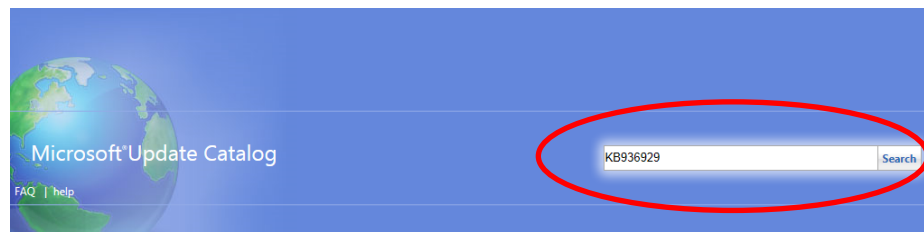

2. At the displayed catalog page, click "Download".

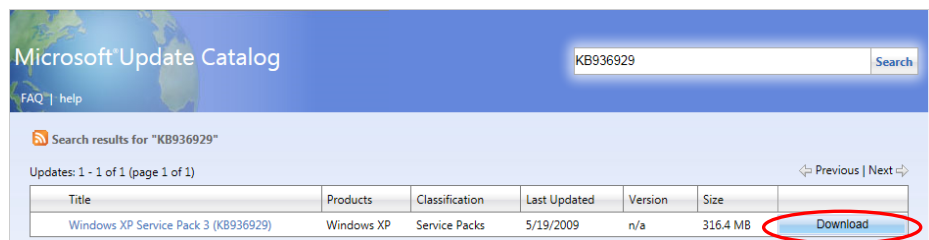

3. At the displayed download screen, click the file under English and save it to the PC.


Copy the file to USB flash memory.




4. Access the following page and download the Windows XP update against WannaCrypt.

<http://www.catalog.update.microsoft.com/Home.aspx>

Input KB4012598 in the following box and click “Search”.

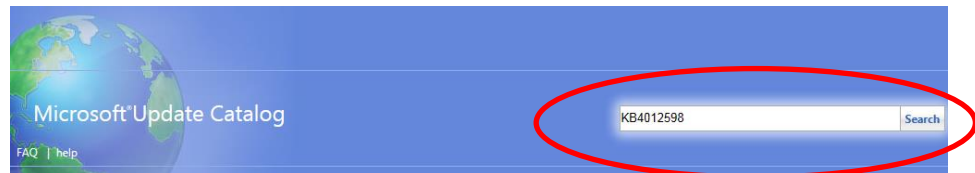


5. At the displayed catalog page, click “Download” for “Security Update for Windows XP SP3 (KB4012598) Windows XP”.

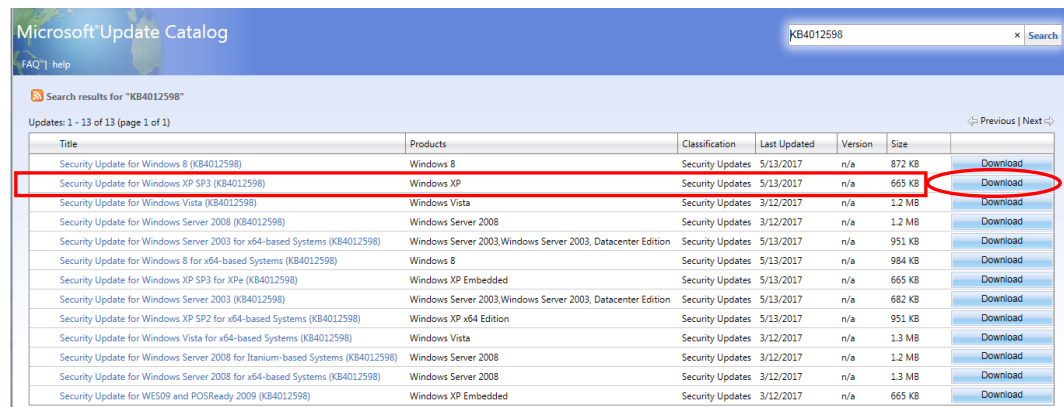

Title	Products	Classification	Last Updated	Version	Size	
Security Update for Windows 8 (KB4012598)	Windows 8	Security Updates	5/13/2017	n/a	872 KB	Download
Security Update for Windows XP SP3 (KB4012598)	Windows XP	Security Updates	5/13/2017	n/a	665 KB	Download
Security Update for Windows Vista (KB4012598)	Windows Vista	Security Updates	3/12/2017	n/a	1.2 MB	Download
Security Update for Windows Server 2008 (KB4012598)	Windows Server 2008	Security Updates	3/12/2017	n/a	1.2 MB	Download
Security Update for Windows Server 2003 for x64-based Systems (KB4012598)	Windows Server 2003, Windows Server 2003, Datacenter Edition	Security Updates	5/13/2017	n/a	951 KB	Download
Security Update for Windows 8 for x64-based Systems (KB4012598)	Windows 8	Security Updates	5/13/2017	n/a	984 KB	Download
Security Update for Windows XP SP3 for xPe (KB4012598)	Windows XP Embedded	Security Updates	5/13/2017	n/a	665 KB	Download
Security Update for Windows Server 2003 (KB4012598)	Windows Server 2003, Windows Server 2003, Datacenter Edition	Security Updates	5/13/2017	n/a	682 KB	Download
Security Update for Windows XP SP2 for x64-based Systems (KB4012598)	Windows XP x64 Edition	Security Updates	5/13/2017	n/a	951 KB	Download
Security Update for Windows Vista for x64-based Systems (KB4012598)	Windows Vista	Security Updates	3/12/2017	n/a	1.3 MB	Download
Security Update for Windows Server 2008 for Itanium-based Systems (KB4012598)	Windows Server 2008	Security Updates	3/12/2017	n/a	1.2 MB	Download
Security Update for Windows Server 2008 for x64-based Systems (KB4012598)	Windows Server 2008	Security Updates	3/12/2017	n/a	1.3 MB	Download
Security Update for WES09 and POSReady 2009 (KB4012598)	Windows XP Embedded	Security Updates	3/12/2017	n/a	665 KB	Download

6. At the displayed download screen, click the file under English and save it to the PC.

Copy the file to USB flash memory.

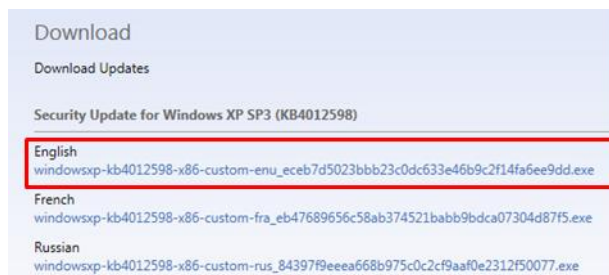


- If the MP1800A is running Windows Embedded Standard 7 (WES7) (32-bit)

1. Access the following page and download the update for WES7 against WannaCrypt.

<http://www.catalog.update.microsoft.com/Home.aspx>


Input KB4012212 in the following box and click “Search”.

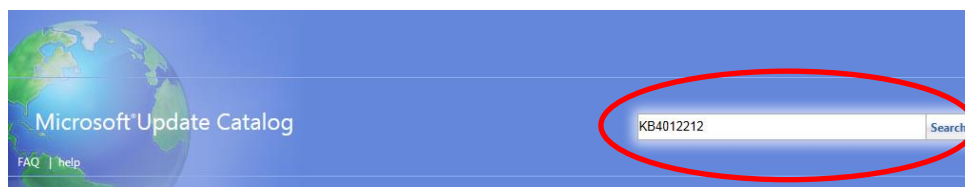

2. At the displayed catalog page, click “March, 2017 Security Only Quality Update for Windows Embedded Standard 7 (KB4012212) Windows Embedded Standard 7”.

Title	Products	Classification	Last Updated	Version	Size	
March, 2017 Security Only Quality Update for Windows 7 for x64-based Systems (KB4012212)	Windows 7	Security Updates	3/28/2017	n/a	33.2 MB	Download
March, 2017 Security Only Quality Update for Windows 7 (KB4012212)	Windows 7	Security Updates	3/28/2017	n/a	18.8 MB	Download
March, 2017 Security Only Quality Update for Windows Embedded Standard 7 (KB4012212)	Windows Embedded Standard 7	Security Updates	3/28/2017	n/a	18.8 MB	Download
March, 2017 Security Only Quality Update for Windows Embedded Standard 7 for x64-based Systems (KB4012212)	Windows Embedded Standard 7	Security Updates	3/28/2017	n/a	33.2 MB	Download
March, 2017 Security Only Quality Update for Windows Server 2008 R2 for x64-based Systems (KB4012212)	Windows Server 2008 R2	Security Updates	3/28/2017	n/a	33.2 MB	Download
March, 2017 Security Only Quality Update for Windows Server 2008 R2 for Itanium-based Systems (KB4012212)	Windows Server 2008 R2	Security Updates	3/28/2017	n/a	34.5 MB	Download

3. At the Download screen, click the file name and save the file to the PC. Copy the file to USB flash memory.

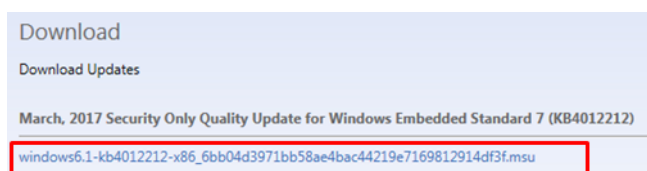

3.4 Preparing for Installation

1. Quit MX180000A application and Selector.
2. Quit all MX18xxxA if they are running.
3. Display the icons on the desktop.

The installation can be done using icons on the Windows desktop.

But, MP1800A does not display the icons as default of factory shipment.

Display icons by the following instructions.

XP: Right-click the desktop. Move cursor to “Arrange Icons By” and click “Show Desktop Icons”.

WES7: Right-click the desktop. Move cursor to “View” and click “Show Desktop Icons”.

3.5 Installing Update in MP1800A

Quit all applications installed in the MP1800A by the customer.

- If the MP1800A is running Windows XP Professional
Before installing the update, Windows XP Service Pack 3 (SP3) must be installed. This takes 2 hours.

Note:

At least 2 GB of free space is required to install SP3 in the hard drive of the MP1800A.

The available free space can be confirmed as follows.

Double-click “My Computer”, right-click the C drive and select “Properties”.

1. Copy the two update files downloaded as described in section 3.3 “Obtaining Update” to USB flash memory and then plug this memory into the MP1800A USB port.
2. Copy the two files to the desktop of MP1800A.
After copying, unmount the USB flash memory from the desktop.

Note:

Unmount the USB flash memory by clicking the USB Eject icon on the taskbar at the bottom right of the screen and then remove the USB flash memory from the USB port.

3. Install the SP3 update.

Double-click the copied


windowsxp-kb936929-sp3-x86-enu_c81472f7eeea2eca421e116cd4c03e2300ebfd
e4.exe file.

The SP3 update program will launch. Follow the displayed instructions to continue the SP3 installation.

Note:

The SP3 Installation Wizard cannot be cancelled when installing SP3. DO NOT shut down or reboot the MP1800A during the SP3 installation.

4. After installation completes, restart Windows.
If the installer does not appear, restart Windows from the Start menu.
5. If the following screen is displayed, select "Not right now".

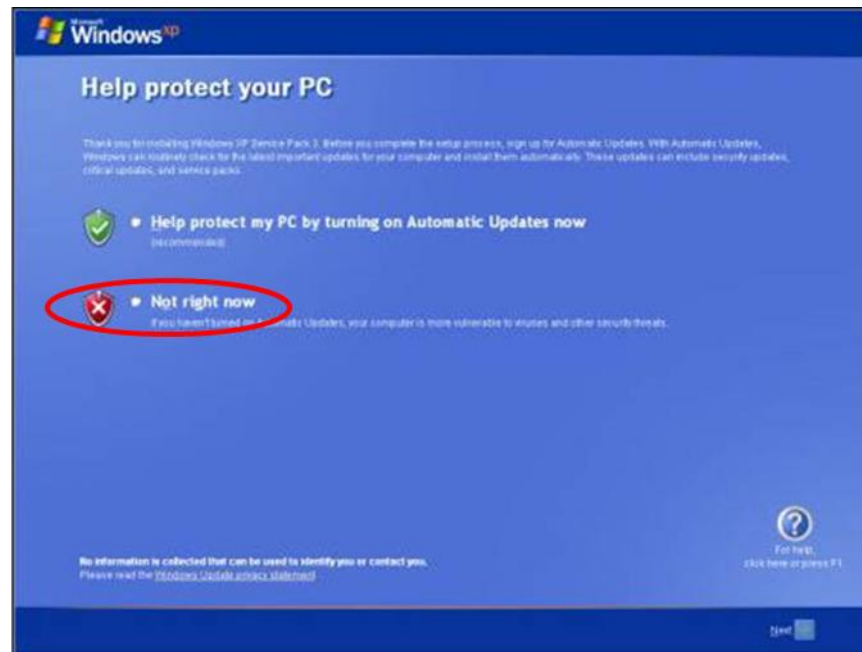

Note:

If "Help protect my PC by turning on Automatic Updates now" is selected, automatic Windows Update is enabled and other updates may be installed automatically.

Anritsu does not warrant operations of MP1800A if "Help protect my PC by turning on Automatic Updates now" is selected.

6. Install the Security Update.

Double-click the copied

windowsxp-kb4012598-x86-custom-enu_eceb7d5023bbb23c0dc633e46b9c2f14fa6ee9dd.exe file.

The update program will launch. Follow the displayed instructions to continue installation.

7. After installation completes, restart Windows.

If the installer does not appear, restart Windows from the Start menu.

■ If the MP1800A is running Windows Embedded Standard 7 (WES7) (32-bit)

1. Copy the update downloaded as described section 3.3 “Obtaining Update” to USB flash memory and then plug this memory into the MP1800A USB port.
2. Quit all applications running in the MP1800A. Double-click “My Computer” on the desktop.
3. Copy the update to the desktop of MP1800A.
After copying, unmount the USB flash memory from the desktop.

Note:

Unmount the USB flash memory by clicking the USB Eject icon on the taskbar at the bottom right of the screen and then remove the USB flash memory from the USB port.

4. Install the update. This takes about 20 minutes.

Double-click the copied file.

The update program will launch. Follow the displayed instructions to continue installation.

5. After installation completes, restart Windows.


If the installer does not appear, restart Windows from the Start menu.

3.6 Confirming Update after Installation

1. Launch MP1800A application. At boot up, the MP1800A automatically launches.
2. After MP1800A launches, confirm the characters and figures are correctly displayed on the screen and testing can be performed correctly.

■ If the MP1800A is running Windows XP Professional
Confirm the installation of Windows XP SP3 and the update.


1. Click “Start” and select “Control Panel”.
2. Select “Add or Remove Programs”.
3. Check “Show Updates” at the top and confirm the presence of “Windows XP Service Pack 3” and “Security Update for Windows XP (KB4012598)” as follows.

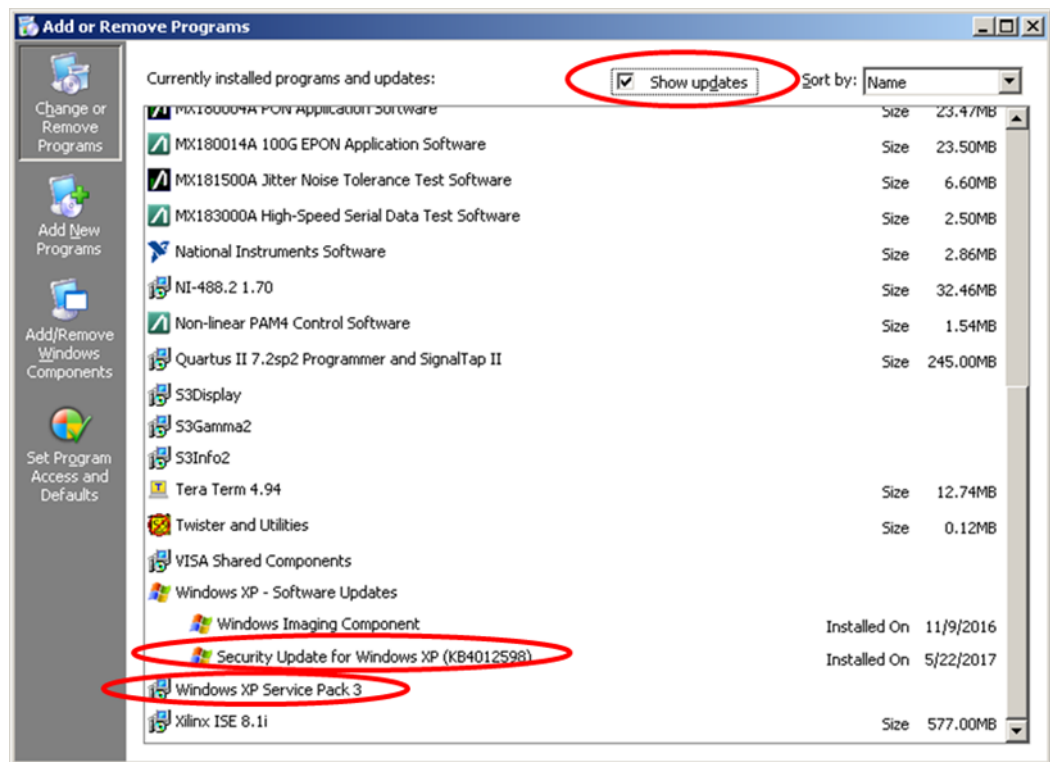

4. Delete the update files.
When the installation is confirmed, the copied files are not needed. Delete them from the desktop.
5. Revert the configuration to that before the update installation.
Right-click the desktop. Move to “Arrange Icons By” and uncheck “Show Desktop Icons”.

- If the MP1800A is running Windows Embedded Standard 7 (WES7) (32-bit) Confirm the installation of the update.

1. Click “Start” on the Windows taskbar and select “Control Panel”.
2. Select “View installed updates” in the displayed items when selecting “Programs”.
3. Confirm the presence of KB4012212 as follows.

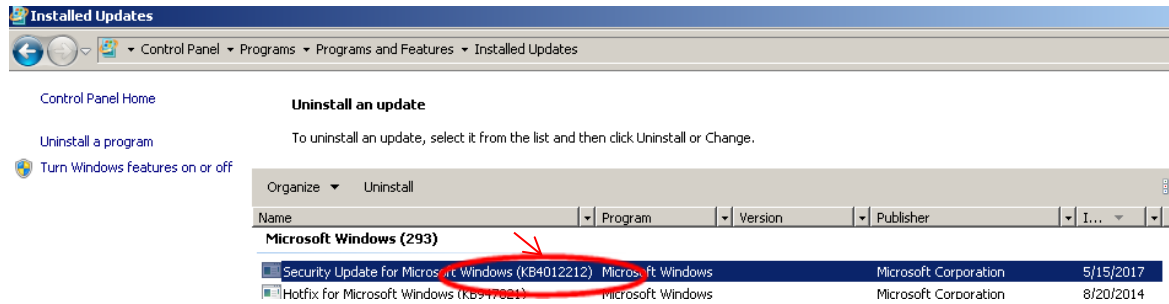

4. Delete the update file.
When the installation is confirmed, the copied file is not needed. Delete it from the desktop.
5. Revert the configuration to that before the update installation.
Right-click the desktop. Move to “Arrange Icons By” and uncheck “Show Desktop Icons”.

4 Other Notes

- Contact

For questions about these instructions, update installation failures or unclear points, contact your Anritsu Service Center or Sales office.