


**Anritsu** Advancing beyond


# MT8852B-015

Adaptive Frequency Hopping Option for the MT8852B

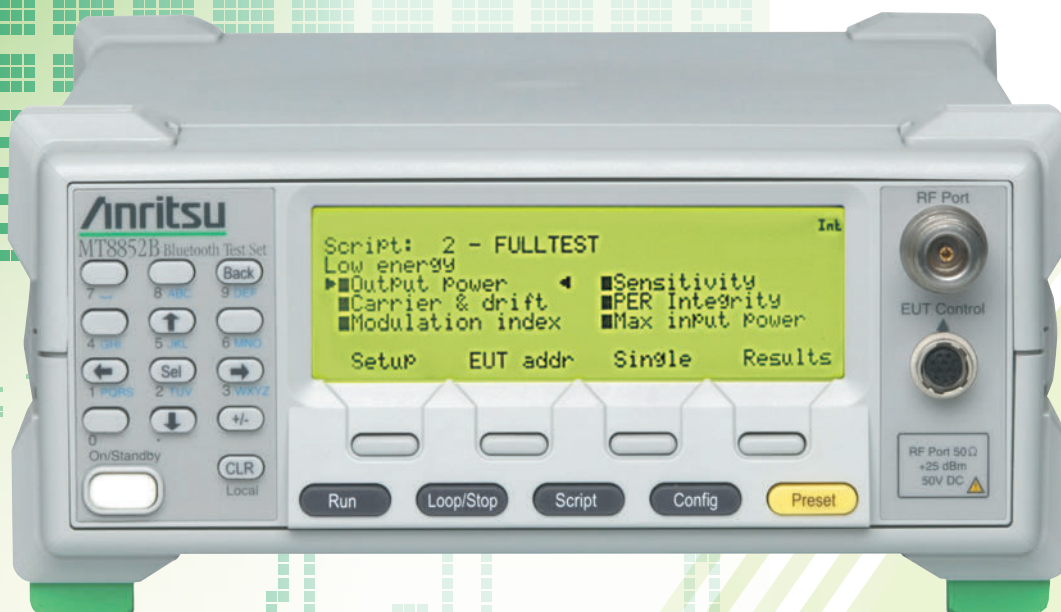

00  
20  
40  
60


FER vs

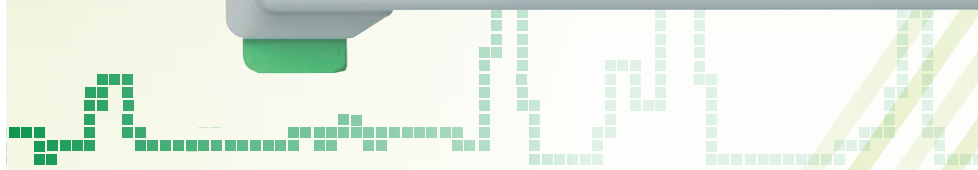


## What is Adaptive Frequency Hopping?

When two Bluetooth devices connect under normal circumstances, they establish a basic frequency hopping scheme across 79 frequency channels in the 2.4 GHz ISM band, hopping at a rate of 1600 times per second. However, as is becoming increasingly common, interference may be encountered in environments where other wireless technologies, such as 802.11 WLAN or DECT are also active. Blocked channels, caused by interference, result in a deterioration in the performance of the connection, and this in turn results in poor voice quality or reduced data transfer rates. To limit the impact of this interference, an adaptation of frequency hopping, known as Adaptive Frequency Hopping (AFH) was introduced by the Bluetooth Special Interest Group in the Bluetooth Core Specification v1.2. AFH aims to restore the performance of a Bluetooth connection by identifying channels with high error rates and excluding the use of these channels thereafter.

The figure below shows an example of Bluetooth packets being blocked by WLAN transmission within the same radio band.

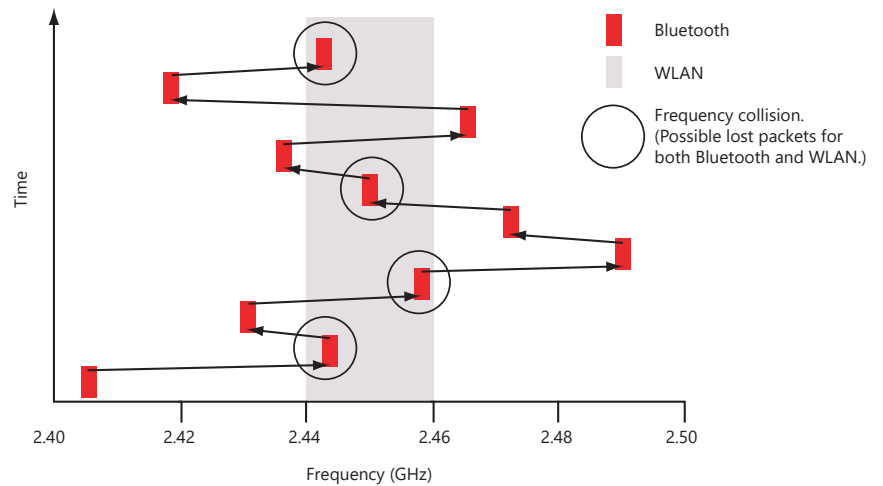


When AFH is enabled, the channels in use by WLAN are excluded and the Bluetooth packets are restricted to other channels where there is less chance of interference.

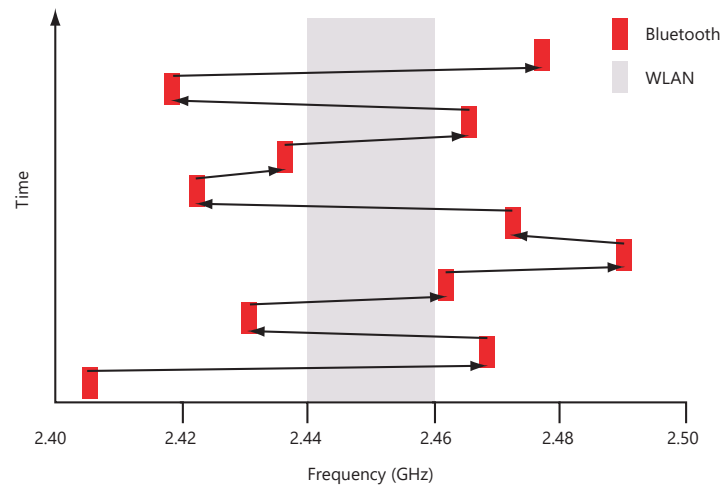

## MT8852B Implementation of AFH

When Bluetooth devices that implement the Bluetooth Core Specification v1.2 are connected, each device can create its own Local Assessment Scheme.

This is a channel map that defines which channels the device assesses to be clear and which are experiencing interference. The MT8852B is designed to respond to the EUT assessment of the channels experiencing interference. The MT8852B, being the Master device, creates an Active Channel Map that is the combination of the EUT's local assessment scheme and any channels that the user has manually masked from the user interface. This is shown in the figure below.

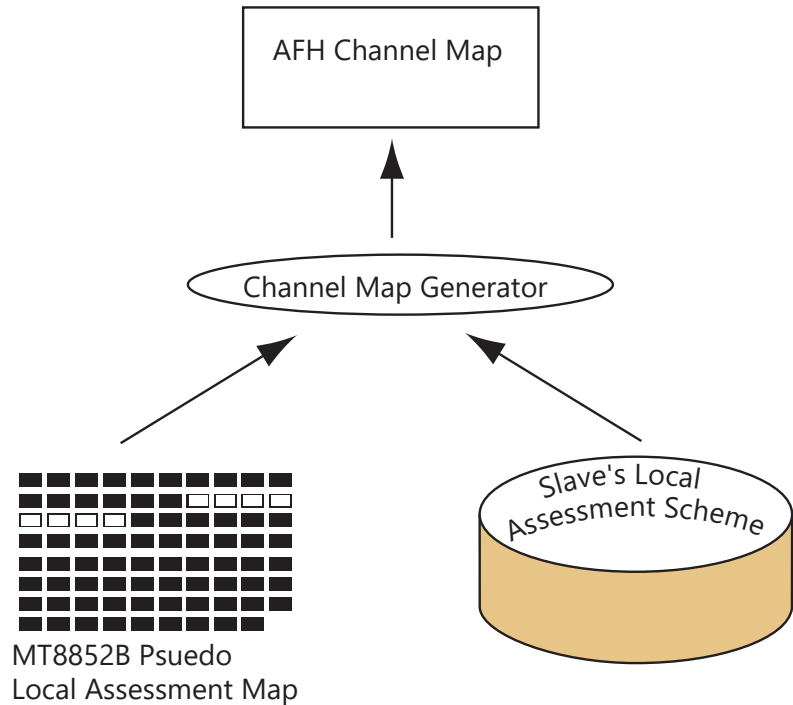

The Active Channel Map defines the permitted channels that the MT8852B and EUT use whilst frequency hopping.

The MT8852B-015 option allows you to:

- Connect to an EUT using the Faster Connection feature introduced in the Bluetooth Core Specification v1.2 and display the connection time in milliseconds.
- Display the EUT Bluetooth v1.2 Supported Features map, including AFH capabilities.
- Create an AFH connection to the EUT.
- Read the EUT Local Assessment Scheme in the presence of an external interfering signal (e.g. WLAN).
- Manually define additional channels to mask in the MT8852B Psuedo Local Assessment Map.
- Display a graph of channel utilization against time to measure the speed with which an EUT masks channels when an interfering source is activated.
- Display a graph of Frame Error Rate (FER) against time to validate that an EUT identifies all "Bad" channels and maintains a zero or low FER.
- Establish an audio SCO link so that the audio quality can be monitored in the presence of interfering signals, and ensure that the AFH functionality maintains a high quality audio path.

## Channel Utilization Against Time

This screen presents a graph with one second resolution of the number of channels masked by the EUT. It can be used to measure the time that it takes an EUT to respond to the introduction of an interfering signal source. When the interfering source is removed, the same display shows the time that it takes an EUT to re-introduce the, now clear, channels into the hopping scheme.



## Frame Error Rate Against Time

This screen presents a graph with one second resolution of the FER of the Bluetooth link with AFH enabled. When an interfering source such as a 802.11 WLAN access point is activated, the FER can be seen to increase immediately. As the EUT's local assessment scheme identifies the "bad" channels and reports its assessment to the MT8852B, the FER decreases as channels are removed from the hopping plan.



## Audio Measurements with AFH

The MT8852B also supports SCO connections with AFH active. This facilitates analysis of the impact of an interfering source on the quality of an audio signal.



## MT8852B-015 Option Summary

---

Order Code	MT8852B-015
Faster Connection	Displays connection time in milliseconds
AFH Graphical Screens	Channel utilization against time (120 seconds active display with one second resolution). FER against time (120 seconds active display with one second resolution)
AFH Active Channel Map	Live display of currently active channel map
AFH Settings	AFH On/Off EUT reporting rate (1 to 30 seconds) EUT reporting On/Off
MT8852B Pseudo Local Assessment	Manual setting of masked channels
Minimum Number of Active Channels	Can be set to 1 (Bluetooth specification requires a minimum of 20 active channels in AFH mode)
Audio Capability	AFH enabled with SCO connection established.

## Ordering Information

Please specify the model/order number, name and quantity when ordering.

The names listed in the chart below are Order Names. The actual name of the item may differ from the Order Name.

Model No.	Name
MT8852B-015	Adaptive Frequency Hopping

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Anritsu is under license.

Other trademarks and trade names are those of their respective owners.

Data subject to change without notice.



Specifications are subject to change without notice.

### • United States

#### **Anritsu Americas Sales Company**

450 Century Parkway, Suite 190, Allen, TX 75013 U.S.A.  
Phone: +1-800-Anritsu (1-800-267-4878)

### • Canada

#### **Anritsu Electronics Ltd.**

700 Silver Seven Road, Suite 120, Kanata,  
Ontario K2V 1C3, Canada  
Phone: +1-613-591-2003  
Fax: +1-613-591-1006

### • Brazil

#### **Anritsu Eletronica Ltda.**

Praça Amadeu Amaral, 27 - 1 Andar  
01327-010 - Bela Vista - Sao Paulo - SP, Brazil  
Phone: +55-11-3283-2511  
Fax: +55-11-3288-6940

### • Mexico

#### **Anritsu Company, S.A. de C.V.**

Blvd Miguel de Cervantes Saavedra #169 Piso 1, Col. Granada  
Mexico, Ciudad de Mexico, 11520, MEXICO  
Phone: +52-55-4169-7104

### • United Kingdom

#### **Anritsu EMEA Ltd.**

200 Capability Green, Luton, Bedfordshire, LU1 3LU, U.K.  
Phone: +44-1582-433200  
Fax: +44-1582-731303

### • France

#### **Anritsu S.A.**

12 avenue du Québec, Immeuble Goyave,  
91140 VILLEBON SUR YVETTE, France  
Phone: +33-1-60-92-15-50

### • Germany

#### **Anritsu GmbH**

Nemetschek Haus, Konrad-Zuse-Platz 1,  
81829 München, Germany  
Phone: +49-89-442308-0  
Fax: +49-89-442308-55

### • Italy

#### **Anritsu S.r.l.**

Spaces Eur Arte, Viale dell'Arte 25, 00144 Roma, Italy  
Phone: +39-6-509-9711

### • Sweden

#### **Anritsu AB**

Kistagången 20 B, 2 tr, 164 40 Kista, Sweden  
Phone: +46-8-534-707-00

### • Finland

#### **Anritsu AB**

Technopolis Aviapolis, Teknobulevardi 3-5 (D208.5),  
FI-01530 Vantaa, Finland  
Phone: +358-20-741-8100

### • Denmark

#### **Anritsu A/S**

c/o Regus Winghouse, Ørestads Boulevard 73, 4th floor,  
2300 Copenhagen S, Denmark  
Phone: +45-7211-2200

### • Russia

#### **Anritsu EMEA Ltd.**

##### **Representation Office in Russia**

Tverskaya str. 16/2, bld. 1, 7th floor., Moscow, 125009, Russia  
Phone: +7-495-363-1694  
Fax: +7-495-935-8962

### • Spain

#### **Anritsu EMEA Ltd.**

##### **Representation Office in Spain**

Paseo de la Castellana, 141. Planta 5, Edificio Cuzco IV  
28046, Madrid, Spain  
Phone: +34-91-572-6761

### • Austria

#### **Anritsu EMEA GmbH**

Am Belvedere 10, A-1100 Vienna, Austria  
Phone: +43-(0)1-717-28-710

### • United Arab Emirates

#### **Anritsu EMEA Ltd.**

##### **Anritsu A/S**

Office No. 164, Building 17, Dubai Internet City  
P. O. Box - 501901, Dubai, United Arab Emirates  
Phone: +971-4-3758479

### • India

#### **Anritsu India Private Limited**

6th Floor, Indiqube ETA, No.38/4, Adjacent to EMC2,  
Doddanekundi, Outer Ring Road, Bengaluru - 560048, India  
Phone: +91-80-6728-1300  
Fax: +91-80-6728-1301

### • Singapore

#### **Anritsu Pte. Ltd.**

11 Chang Charn Road, #04-01, Shriro House, Singapore 159640  
Phone: +65-6282-2400  
Fax: +65-6282-2533

### • Vietnam

#### **Anritsu Company Limited**

16th Floor, Peakview Tower, 36 Hoang Cau Street, O Cho Dua Ward,  
Dong Da District, Hanoi, Vietnam  
Phone: +84-24-3201-2730

### • P.R. China (Shanghai)

#### **Anritsu (China) Co., Ltd.**

Room 2701-2705, Tower A, New Caohejing International  
Business Center No. 391 Gui Ping Road Shanghai, 200233, P.R. China  
Phone: +86-21-6237-0898  
Fax: +86-21-6237-0899

### • P.R. China (Hong Kong)

#### **Anritsu Company Ltd.**

Unit 1006-7, 10/F., Greenfield Tower, Concordia Plaza,  
No. 1 Science Museum Road, Tsim Sha Tsui East,  
Kowloon, Hong Kong, P.R. China  
Phone: +852-2301-4980  
Fax: +852-2301-3545

### • Japan

#### **Anritsu Corporation**

8-5, Tamura-cho, Atsugi-shi, Kanagawa, 243-0016 Japan  
Phone: +81-46-296-6509  
Fax: +81-46-225-8352

### • Korea

#### **Anritsu Corporation, Ltd.**

5FL, 235 Pangyoeyeok-ro, Bundang-gu, Seongnam-si,  
Gyeonggi-do, 13494 Korea  
Phone: +82-31-696-7750  
Fax: +82-31-696-7751

### • Australia

#### **Anritsu Pty. Ltd.**

Unit 20, 21-35 Ricketts Road, Mount Waverley, Victoria 3149, Australia  
Phone: +61-3-9558-8177  
Fax: +61-3-9558-8255

### • Taiwan

#### **Anritsu Company Inc.**

7F, No. 316, Sec. 1, NeiHu Rd., Taipei 114, Taiwan  
Phone: +886-2-8751-1816  
Fax: +886-2-8751-1817