

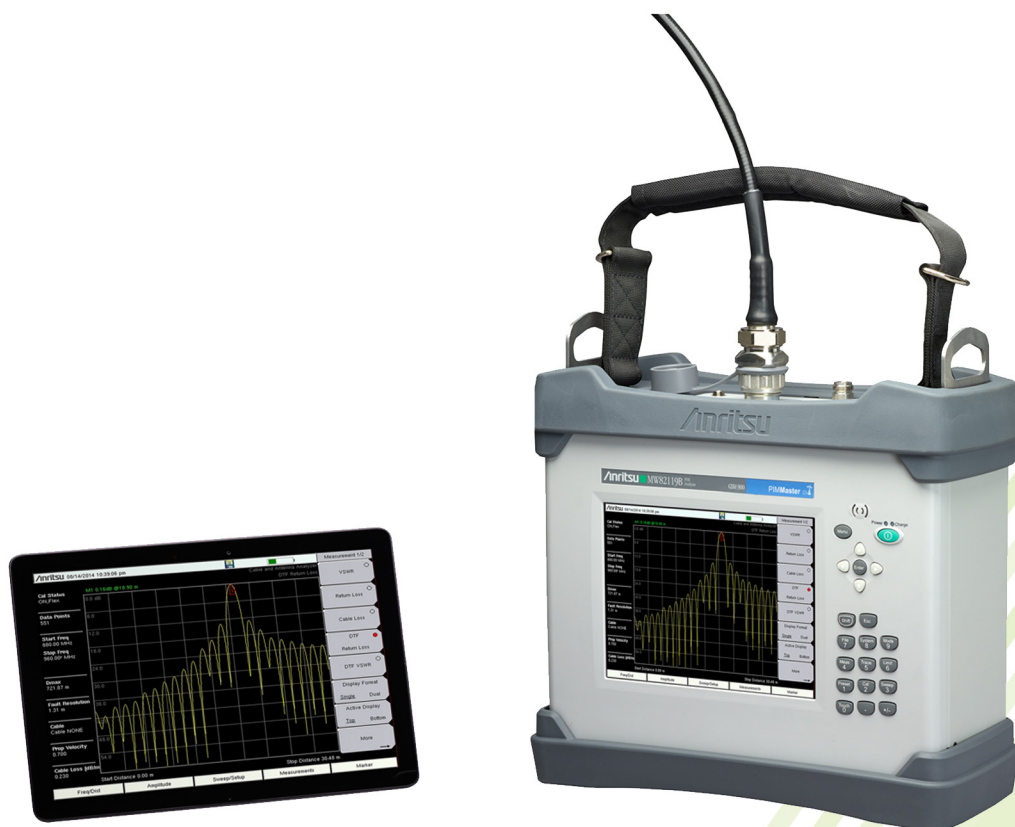
Anritsu Advancing beyond

PIM Master™

Passive Intermodulation Analyzer with
Site Master™ Cable & Antenna Analyzer

MW82119B

LTE 600 w/1900 MHz, LTE 700, APT 700, LTE 800,
Cellular 850, E-GSM 900, DCS 1800, PCS/AWS, UMTS 2100, LTE 2600



Introduction

Anritsu introduces the first fully integrated Passive Intermodulation (PIM) Analyzer plus Cable and Antenna Analyzer (Option 331) suitable for commissioning and maintaining global wireless networks. This high-performance, battery-operated unit allows operators to fully characterize infrastructure quality by measuring Return Loss, VSWR, Cable Loss, Passive Intermodulation, Distance-to-Fault, and Distance-to-PIM.

Passive Intermodulation (PIM) Analyzer Highlights

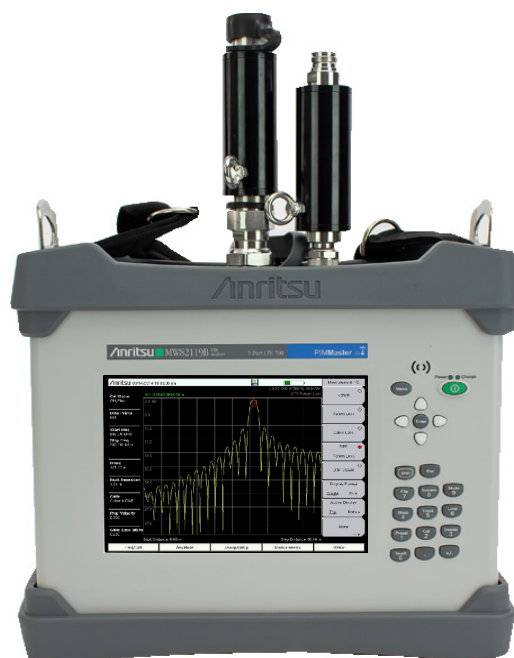
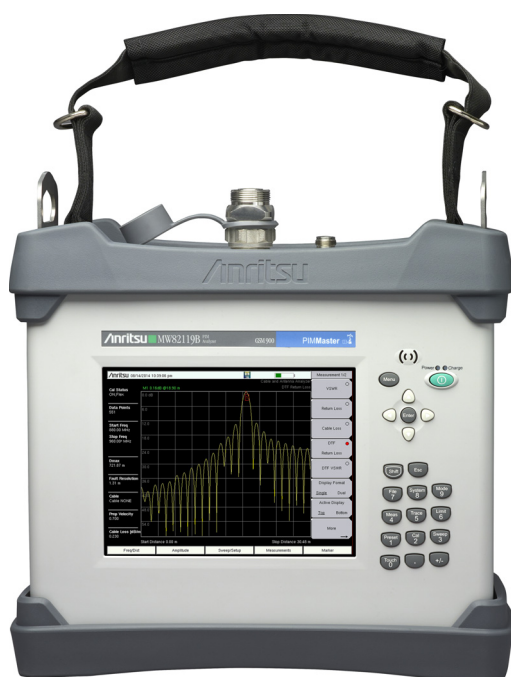
- PIM vs. Time, Swept PIM, Noise Floor, Distance-to-PIM
- 3rd, 5th, and 7th order intermodulation products detected
- Test Power: 20 dBm to 46 dBm
- Residual PIM: -125 dBm typical

Cable and Antenna Analyzer Highlights (Option 331)

- Measurements: RL, VSWR, Cable Loss, DTF, Phase
- DTF Time Delay
- Frequency range: 2 MHz to 3 GHz
- Sweep Speed: 1 ms/data point typical
- Calibration: OSL and FlexCal™

Capabilities and Functional Highlights

- Integrated solution
- Display: 8.4 in (213 mm) daylight viewable
- MIL-STD-810G drop test rated
- Padded soft case for extra protection
- Quick Name Matrix simplifies naming in the field
- High Accuracy Power Meter (Option 19)
- Battery operated: >3.0 hour run time
- IP54 rated for dust and water spray
- Stainless steel lifting rings
- Easy-to-use, menu-driven user interface
- GPS tag measurements (Option 31)



Size: 350 mm x 314 mm x 152 mm (13.8 in x 12.4 in x 6.0 in)
Lightweight: 9.2 kg to 12.4 kg (20 lb to 27 lb) depending on options

Table of Contents

Definitions.....3

General Specifications4

PIM Analyzer Specifications5

Cable and Antenna Analyzer (Option 331).....6

GPS Receiver (Option 31)7

High Accuracy Power Meter (Option 19)7

Line Sweep Tools9

easyTest Tools9

Web Remote Control.....10

Programmable Remote Control10

Ordering Information11

Standard Accessories12

USB Power Sensors12

Manuals.....13

Optional Accessories.....13

Definitions

	All specifications and characteristics apply to Revision 2 instruments under the following conditions, unless otherwise stated:
Warm-Up Time	After 10 minutes of warm-up time, where the instrument is left in the on state.
Typical Performance	Typical specifications are not tested and are not warranted. They are generally representative of the nominal characteristic performance.
Uncertainty	A coverage factor of K=2 is applied to the measurement uncertainties.
Calibration Cycle	Recommended calibration cycle is 12 months.
	All specifications subject to change without notice. For the most current data sheet, please visit the Anritsu web site: www.anritsu.com



General Specifications

PIM Master Connectors

PIM Test Port	7/16 DIN, female, 50 Ω
Dual USB Type A	2x Type A (connect USB Flash Drive and USB Power Sensor)
USB Mini-B	1x Mini-B (connect to PC for data transfer)
GPS	SMA, female (with GPS option only)
External Power	2.1 mm x 5.5 mm barrel connector, 12 VDC to 15 VDC, < 5.0 A
PIM Test Port Damage Level	+10 dBm (10 mW) continuous, (PIM Rx band) +35 dBm (3 W) continuous, (PIM Tx band)*
1900 MHz In Test Port	Type N, Female, 50 Ω (Option 600)
1900 MHz In Test Port Damage Level	+10 dBm (10 mW) continuous, 1900 MHz Rx band)
VNA Test Port	Type N, female, 50 Ω (Option 331)
VNA Test Port Damage Level	40 dBm continuous
*	Able to survive full reflection of 2 X 46 dBm PIM test tones generated by the MW82119B.

Display

Size	213 mm (8.4 in) touch screen
Resolution	800 x 600
Pixel Defects	No more than five defective pixels (99.9989% good pixels)

Battery

Type	Li-Ion
Battery Operation	3.0 hours, typical
Charging Limits	While charging, battery must be 0 °C to +45 °C, Relative Humidity $\leq$ 80 %

Power

AC/DC Adapter	Input: 100 VAC to 240 VAC, 50/60 Hz Output: 12 VDC
---------------	---

Regulatory Compliance¹

European Union	EMC 2014/30/EU, EN 61326-1:2013; CISPR 11/EN 55011, IEC/EN 61000-4-2/3/4/5/6/8/11; Low Voltage Directive 2014/35/EU; Safety EN 61010-1:2010; RoHS Directive 2011/65/EU + 2015/863
United Kingdom	EMC SI 2016/1091; BS EN 55011 & BS 61000-4-2/3/4/5/6/8/11; Consumer Protection (Safety) SI 2016/1101; BS EN 61010-1:2010; Environmental Protection SI 2012/3032; 2011/65/EU & 2015/863
Australia and New Zealand	RCM AS/NZS 4417:2012
South Korea	KCC-REM-A21+-0004
Canada	ICES-1(A)/NMB-1(A)

Environmental

	MIL-PRF-28800F Class 2
Operating Temperature Range	-10 °C to 55 °C
Storage Temperature Range	-51 °C to 71 °C
Maximum Relative Humidity	95 % RH at 30 °C, non-condensing
Vibration, Sinusoidal	5 Hz to 55 Hz
Vibration, Random	10 Hz to 500 Hz
Half Sine Shock	30 g _n
Altitude	4600 meters, operating and non-operating
Explosive Atmosphere	MIL-PRF-28800F, Section 4.5.6.3; MIL-STD-810G, Method 511.5, Procedure 1
Ingress Protection (IP)	IP54, IP67 when enclosed in optional transit case

ESD

PIM Test Port Connector Center Pin	Withstands up to ± 15 kV
VNA RF Out Connector Center Pin	Withstands up to ± 15 kV

Size and Weight

Size	350 mm x 314 mm x 152 mm (13.8 in x 12.4 in x 6.0 in)
Weight	9.2 kg to 12.6 kg (20 lb to 27.8 lb), varies by frequency option

Warranty

Duration	Standard three-year warranty (one-year warranty on battery)
----------	---

1. MW82119B-600 (Option 600) is not compliant with CE and RCM radiated emissions requirements.



PIM Analyzer Specifications

General

Measurements	PIM vs. Time, Noise Floor, Distance-to-PIM, Swept PIM
Test Method	Reverse (reflected) Passive Intermodulation (PIM) per IEC-62037-1
Intermodulation Order	3rd, 5th, and 7th order, when in receive band (user selectable)
RF Test Frequency	Accuracy: ± 1.0 ppm at 23 °C Stability: ± 1.0 ppm from -10 °C to +55 °C, typical Aging: ± 1.0 ppm/yr aging, typical

Setup Parameters

Frequency	Carrier F1, Carrier F2, Intermodulation Order
Amplitude	Ref Value, Scale, Auto Range (On/Off), Amplitude Tone (On/Off)
Setup	Output Power, Test Duration (1 s to 1,200 s)
Limit Lines	Limit (Upper/Lower), On/Off, Limit Move, Limit Alarm (On/Off, PASS/FAIL indicator)
Markers	Markers 1-6 (On/Off), Delta Markers 1-6 (On/Off), Marker to Peak/Valley, All Markers Off
GPS	On/Off, 3.3/5.0 V
DTP	Cable Velocity, Distance
Save/Recall	Setups (.stp), Measurements (.pim), Limit Lines (.lim), Screen Shots (.jpg) (save only)



PIM Analyzer Specifications

PIM Measurement Ranges

RF Test Power	Two CW tones 20 dBm to 46 dBm, 0.1 dBm steps Accuracy: ± 0.5 dB (excluding uncertainty)
Residual PIM Performance	< -117 dBm, < -125 dBm typical (2x 43 dBm test tones) < -134 dBm, < -140 dBm typical (2x 20 dBm test tones)
PIM Measurement Range	-70 dBm to -140 dBm (Revision 1 instruments) -50 dBm to -140 dBm (Revision 2 instruments)

Band	Option	Frequency Range
LTE 600 w/1900 MHz	Option 600	Tx ₁ : 617 MHz to 618 MHz, Tx ₂ : 633 MHz to 652 MHz Rx ₁ : 663 MHz to 698 MHz, Rx ₂ : 1867 MHz to 1888 MHz
LTE 700	Option 700	Tx ₁ : 731 MHz to 734.5 MHz, Tx ₂ : 746 MHz to 768 MHz Rx _{Lower} : 698 MHz to 717 MHz, Rx _{Upper} : 777 MHz to 806 MHz
APT 700	Option 701	Tx ₁ : 758 MHz to 776 MHz, Tx ₂ : 788 MHz to 803 MHz Rx _{Lower} : 710 MHz to 748 MHz, Rx _{Upper} : 825 MHz to 845 MHz
LTE 800	Option 800	Tx ₁ : 791 MHz to 795 MHz, Tx ₂ : 811.5 MHz to 821 MHz Rx: 832 MHz to 862 MHz
Cellular 850	Option 850	Tx ₁ : 869 MHz to 871 MHz, Tx ₂ : 881.5 MHz to 894 MHz Rx: 824 MHz to 849 MHz
E-GSM 900	Option 900	Tx ₁ : 925 MHz to 937.5 MHz, Tx ₂ : 951.5 MHz to 960 MHz Rx ₁ : 880 MHz to 915 MHz
DCS 1800	Option 180	Tx ₁ : 1805 MHz to 1837 MHz, Tx ₂ : 1857.5 MHz to 1880 MHz Rx: 1710 MHz to 1785 MHz
PCS/AWS	Option 194	Tx ₁ : 1930 MHz to 1945 MHz, Tx ₂ : 1965 MHz to 1995 MHz, Tx ₃ : 2110 MHz to 2155 MHz Rx ₁ : 1850 MHz to 1910 MHz (using Tx ₁ and Tx ₂), Rx ₂ : 1710 MHz to 1755 MHz (using Tx ₁ and Tx ₃)
UMTS 2100	Option 210	Tx ₁ : 2110 MHz to 2112.5 MHz, Tx ₂ : 2130 MHz to 2170 MHz Rx _{Lower} : 1920 MHz to 1980 MHz, Rx _{Upper} : 2050 MHz to 2090 MHz
LTE 2600	Option 260	Tx ₁ : 2620 MHz to 2630 MHz, Tx ₂ : 2650 MHz to 2690 MHz Rx: 2500 MHz to 2570 MHz



PIM Analyzer Specifications (continued)

PIM vs. Time

Description	IM product magnitude vs. time
Test Frequencies	F1, F2, and IM product frequencies fixed, user selectable
Measurements	Peak PIM over measurement duration, Instantaneous PIM

Noise Floor (Time View)

Description	Noise level vs. time at IM product frequency
Test Frequencies	IM product frequency fixed, user selectable
Measurements	Peak signal level over measurement duration, Instantaneous signal level

Noise Floor (Spectrum View)

Description	Noise level vs. frequency
Test Frequencies	Swept measurement over Rx band of instrument
Measurements	Peak signal level, Instantaneous signal level

Distance-to-PIM

Description	IM product magnitude vs. distance
Test Frequencies	F1 or F2 frequency swept to produce range of IM product frequencies for analysis
Fault Resolution	Varies by frequency option, <3 m (<10 ft) typical with Enhanced Resolution activated
Maximum Range	Varies by frequency option and number of Data Points selected
Markers	Standard marker functions plus Marker Table (On/Off)
Trace Overlay	DTP/DTP, DTP/DTF

Swept PIM

Description	IM product magnitude vs. frequency
Test Frequencies	F1 and F2 frequencies swept to produce range of IM product frequencies
Measurements	Peak PIM over measurement duration, Instantaneous PIM



Cable and Antenna Analyzer (Option 331)

Measurements

Measurements	VSWR
	Return Loss
	Cable Loss
	Distance-to-Fault (DTF) Return Loss
	Distance-to-Fault (DTF) VSWR
	1-Port Phase
	Smith Chart (50/75 Ω selectable)

Setup Parameters

Measurement Display	Single/Dual Measurement Display with independent markers
Frequency	Start/Stop, Signal Standard, Start Cal
DTF	Start/Stop, DTF Aid, Units (m/ft), Cable Loss, Propagation Velocity, Cable, Windowing
Windowing	Rectangular, Nominal Side Lobe, Low Side Lobe, Minimum Side Lobe
Amplitude	Top, Bottom, Auto Scale, Full Scale
Sweep	Run/Hold, Single/Continuous, RF Immunity (High/Low), Data Points, Averaging/Smoothing, Output Power (High), RF Pwr When Hold (On/Off)
Data Points	137, 275, 551, 1102, 2204
Markers	Markers 1-6 (On/Off), Delta Markers 1-6 (On/Off), Marker to Peak/Valley, Peak/Valley Auto, DTF Time Delay, Marker Table (On/Off), All Markers Off
Traces	Recall, Copy to Display Memory, No Trace Math, Trace $\pm$ Memory, (Trace + Memory)/2, and Trace Overlay (On/Off)
Limit Line	On/Off, Single Limit, Multi-segment Edit, Limit Alarm (On/Off), Pass Fail Message (On/Off), Pass/Fail (Unbounded/Bounded), Warning Limit Offset, Clear Limit
Calibration	Start Cal, Cal Type (Standard/FlexCal™), Disp Valid Cal Temp Range
Save/Recall	Setups (.stp), Measurements (.dat, .vna), Screen Shots (.jpg) (save only)
Application Options	Impedance (50 Ω , 75 Ω , Other)

Frequency

Frequency Accuracy	± 1.0 ppm at 23 °C
Stability	± 1.0 ppm from -10 °C to +55 °C, typical
Aging	± 1.0 ppm/yr, typical

Output Power

Power Level	-4 dBm, typical
-------------	-----------------

Interference Immunity

On-Channel	+17 dBm @ > 1.0 MHz from carrier frequency
On-Frequency	0 dBm within ± 10 kHz of the carrier frequency

Measurement Speed

Return Loss	≤ 1.00 ms/data point, RF immunity low, typical
Distance-to-Fault	≤ 1.25 ms/data point, RF immunity low, typical

Return Loss

Measurement Range	0 dB to 60 dB
Resolution	0.01 dB

VSWR

Measurement Range	1:1 to 65:1
Resolution	0.01

Cable Loss

Measurement Range	0 dB to 30 dB
Resolution	0.01 dB

Distance-to-Fault

Vertical Range Return Loss	0 dB to 60 dB
Vertical Range VSWR	1:1 to 65:1
Fault Resolution (meters)	$(1.5 \times 10^8 \times v_p) / \Delta F$ (v_p = velocity propagation constant, ΔF is F2-F1 in Hz)
Horizontal Range (meters)	0 to (Data Points-1) x Fault Resolution, to a maximum of 1500 meters (4921 ft)

1-Port Phase

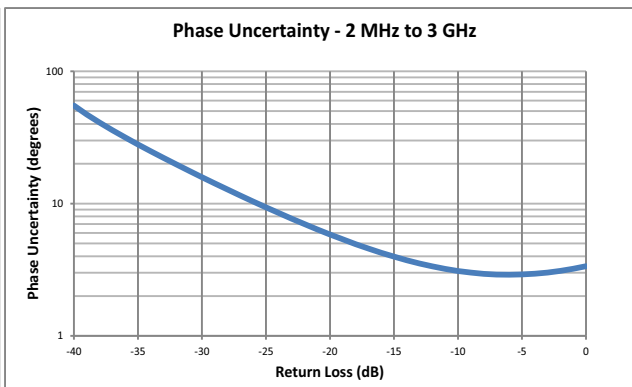
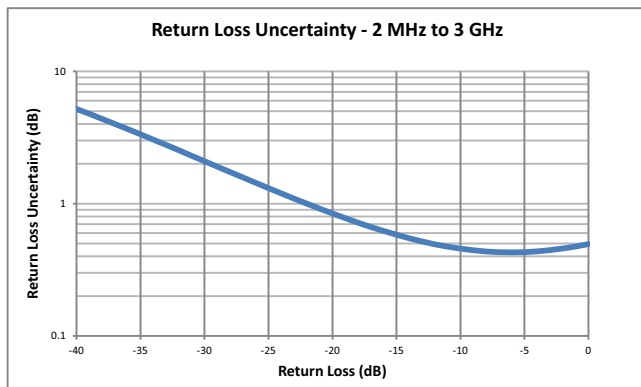
Measurement Range	-180° to $+180^\circ$
Resolution	0.01°

Smith Chart

Resolution	0.01 50/75 Ω Selectable
------------	--------------------------------

**Cable and Antenna Analyzer (Option 331)** (continued)**Measurement Accuracy**

Corrected Directivity	> 42 dB, OSL Calibration
-----------------------	--------------------------

Measurement Uncertainty**GPS Receiver (Option 31)** (Antenna sold separately)

Setup	On/Off, Antenna Voltage 3.3/5.0 V, GPS Info
GPS Time/Location Indicator	Time, Latitude, Longitude and Altitude on display
	Time, Latitude, Longitude and Altitude with trace storage
Connector	SMA(f)

**High Accuracy Power Meter (Option 19)** (requires external USB Power Sensor)

Amplitude	Maximum, Minimum, Offset, Relative On/Off, Units, Auto Scale
Average	# of Running Averages, Max Hold
Zero/Cal	Zero On/Off, Cal Factor (Center Frequency, Signal Standard)
Limits	Limit On/Off, Limit Upper/Lower

Power Sensor Model	MA24105A	MA24106A	MA24108A/18A/26A	MA24208A/18A	MA24330A/40A/50A
Description	Inline High Power Sensor	High Accuracy RF Power Sensor	Microwave USB Power Sensor	Microwave Universal USB Power Sensor	Microwave CW USB Power Sensor
Frequency Range	350 MHz to 4 GHz	50 MHz to 6 GHz	10 MHz to 8/18/26 GHz	10 MHz to 8/18 GHz	10 MHz to 33/40/50 GHz
Connector	Type N(f), 50 Ω	Type N(m), 50 Ω	Type N(m), 50 Ω (8/18 GHz) Type K(m), 50 Ω (26 GHz)	Type N(m), 50 Ω	Type K(m), 50 Ω (33/40 GHz) Type V(m), 50 Ω (50 GHz)
Dynamic Range	+3 dBm to +51.76 dBm (2 mW to 150 W)	-40 dBm to +23 dBm (0.1 μ W to 200 mW)	-40 dBm to +20 dBm (0.1 μ W to 100 mW)	-60 dBm to +20 dBm (1 nW to 100 mW)	-70 dBm to +20 dBm (0.1 nW to 100 mW)
Measurand	True-RMS	True-RMS	True-RMS, Slot Power, Burst Average Power	True-RMS, Slot Power, Burst Average Power	Average Power
Measurement Uncertainty	± 0.17 dB ^a	± 0.16 dB ^b	± 0.18 dB ^c	± 0.17 dB ^d	± 0.17 dB ^e
Data sheet (for complete specifications)	11410-00621	11410-00424	11410-00504	11410-00841	11410-00906

Notes:

- Expanded uncertainty with K=2 for power measurements of a CW signal greater than +20 dBm with a matched load. Measurement results referenced to the input side of the sensor.
- Total RSS measurement uncertainty (0 °C to 50 °C) for power measurements of a CW signal greater than -20 dBm with zero mismatch errors.
- Expanded uncertainty with K=2 for power measurements of a CW signal greater than -20 dBm with zero mismatch errors.
- Power uncertainty expressed with two sigma confidence level for CW measurement after zero operation. Includes calibration factor and linearity over temperature uncertainties, but not the effects of mismatch, zero set and drift, or noise.
- Includes linearity over temperature uncertainties, but not the effects of calibration factor, mismatch, zero set and drift, and noise.

Line Sweep Tools (for your PC)

Trace Capture		
Browse to Instrument		View and copy traces from the test equipment to your PC using Windows Explorer
Open Current Files		Open PIM or DAT files
Capture Plots To		The Line Sweep Tools screen, DAT files, Database, or JPEG
Traces		
Trace Types		Return Loss, VSWR, DTF-RL, DTF-VSWR, Cable Loss, Smith Chart, PIM vs. Time, Swept PIM, Noise Floor, and DTP
Trace Formats		DAT, PIM, CSV, PNG, BMP, JPG, HTML, Data Base, and PDF
Report Generation		
Report Generator		Includes GPS location along with measurements
Report Format		Create reports in HTML or PDF format
Report Setup		Report Title, Company, Prepared for, Location, Date and Time, Filename, Company logo
Trace Setup		1 Trace Portrait Mode, 2 Trace Portrait Mode, 1 Trace Landscape Mode
PIM Report		Tabular summary report with pass/fail analysis
Trace Validation		
Presets		7 presets allow "one click" setting of up to 6 markers and one limit line
Marker Controls		6 regular Markers, Marker Peak, Marker Valley, Marker between, and frequency entry
Delta Markers		6 Delta markers
Limit Line		Enable and drag or value entry. Also works with presets
Next Trace Button		Next Trace and Previous trace arrow keys allow quick switching between traces
Tools		
Cable Editor		Allows creation of custom cable parameters
Distance to Fault		Converts a Return Loss trace to a Distance to Fault trace
Measurement Calculator		Converts Real, Imaginary, Magnitude, Phase, RL, VSWR, Rho, and Transmit power
Signal Standard Editor		Creates new band and channel tables
Renaming Grid		36 user definable phrases for creation of file names, trace titles, and trace subtitles
Connectivity		
Connections		USB cable, USB Memory Stick

easyTest Tools (for your PC)

Instrument Mode		
		PIM Analyzer Mode, Cable & Antenna Analyzer Mode (Option 331)
Commands		
Display Image		Allows putting a custom image on the instrument screen
Recall Setup		Places the instrument into a known state
Prompt		Displays instructional messages on the instrument screen
Save		Allows automatic or manual saving of traces
Connectivity		
Connections		Ethernet, USB cable or USB memory stick

Web Remote Control

Control	Full instrument control through a browser – all instrument functions except power switch
Connections	RJ45 Ethernet jack Third-party Wi-Fi router
Protocol	HTTP/TCP/IP
Physical Layer	Cat 5 Cable, Wi-Fi router compatible
Browser	Designed for use with HTML 5 Compliant Browsers (Google Chrome or Mozilla Firefox preferred)
Operating System	iOS, Windows, Linux, Android operating systems that can host the HTML 5 compliant browser
Remote Hardware	PCs, Tablets, and Smart Phones with Ethernet or Wi-Fi connections
Download	Individual instrument files downloaded via browser Multiple instrument files and directories zipped and downloaded via browser Screen capture capability File downloads are not supported by iOS
Display Modes	Normal: All modes & displays supported Fast: Not currently supported
Password	The instrument can be password protected Passwords may be used to manage who controls the instrument
Users and Devices to Instruments Ratio	One device can view and control many instruments

Programmable Remote Control

Functionality	Instrument functionality is available via remote programming. See the MW82119B Programming Manual for details.
Programming Language	Standard Commands for Programmable Instruments (SCPI)
Interfaces	USB, LAN

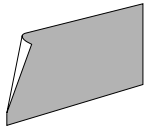
Ordering Information



Model Number	Description
MW82119B	PIM Master™ Passive Intermodulation Analyzer (must be ordered with ONE frequency option)
Frequency Options (must order one, and only one)	
MW82119B-0600	LTE 600 w/1900 MHz
MW82119B-0700	LTE 700
MW82119B-0701	APT 700
MW82119B-0800	LTE 800
MW82119B-0850	Cellular 850
MW82119B-0900	E-GSM 900
MW82119B-0180	DCS 1800
MW82119B-0194	PCS/AWS 1900/2100
MW82119B-0210	UMTS 2100
MW82119B-0260	LTE 2600
Other Options	
MW82119B-0019	High Accuracy Power Meter (requires USB power sensor)
MW82119B-0031	GPS Receiver (requires GPS antenna)
MW82119B-0331	Site Master™ Cable and Antenna Analyzer
MW82119B-0098	Standard Calibration to ISO 17025 and/or Z540.1
MW82119B-0099	Premium Calibration to ISO 17025 and/or Z540.1 plus test data

Standard Accessories (included with instrument)

Accessory	Description
	2000-1786-R Soft Carrying Case, Screen Access
	2000-1691-R Stylus with Coiled Tether
	633-75 Rechargeable Li-Ion Battery, 7500 mAh
	806-141-R Automotive Power Adapter, 12 VDC, 60 W
	2000-1714-R Shoulder Strap

Accessory	Description
	2000-1797-R Screen Protector Film, 8.4 in
	2000-1371-R Ethernet Cable, 7 ft (213 cm)
	40-187-R AC-DC Adapter with AC Power Cord (country dependent)
	3-2000-1498 USB A/5-pin mini-B Cable, 10 ft (305 cm)
	1091-422-R Adapter, 7/16 DIN(f) to 7/16 DIN(m), 50 Ω (Connector Saver)

USB Power Sensors (for complete ordering information, see the respective data sheets of each sensor)

Accessory	Description
	MA24330A Microwave CW USB Power Sensor, 10 MHz to 33 GHz, +20 dBm
	MA24340A Microwave CW USB Power Sensor, 10 MHz to 40 GHz, +20 dBm
	MA24350A Microwave CW USB Power Sensor, 10 MHz to 50 GHz, +20 dBm
	MA24208A Microwave Universal USB Power Sensor, 10 MHz to 8 GHz, +20 dBm to -60 dBm
	MA24218A Microwave Universal USB Power Sensor, 10 MHz to 18 GHz, +20 dBm to -60 dBm
	MA24106A High Accuracy RF Power Sensor, 50 MHz to 6 GHz, +23 dBm to -40 dBm

Accessory	Description
	MA24108A Microwave USB Power Sensor, 10 MHz to 8 GHz, +20 dBm to -40 dBm
	MA24118A Microwave USB Power Sensor, 10 MHz to 18 GHz, +20 dBm to -40 dBm
	MA24126A Microwave USB Power Sensor, 10 MHz to 26 GHz, +20 dBm to -40 dBm
	MA24105A Inline Dual Directional High Power Sensor, 350 MHz to 4 GHz, +3 dBm to +51.76 dBm
	MA25100A RF Power Indicator

Manuals (Soft copy at www.anritsu.com)

Part Number	Description
10100-00065	Product Information Safety and Compliance
10580-00400	PIM Master User Guide
10580-00402	PIM Master Measurement Guide
10580-00403	PIM Master Programming Manual
10580-00240	Power Meter Measurement Guide
10580-00241	Cable and Antenna Analyzer Measurement Guide
11410-00473	Troubleshooting Guide – Cable, Antenna, and Components
11410-00726	Equipment Verification Process

Optional Accessories**Accessory Kits**

Accessory	Description
	2000-1745-R PIM Master Backpack Accessory Kit (Consists of 67135, 2000-1626-R, 2000-1749-R, 1091-446-R, 1091-425-R (qty 2), 1091-426-R (qty 2), 1091-427-R, 01-510, 01-513-R, 971-9-R, 971-10-R, 11410-00726)

Accessory **Description**

	2000-1476-R PIM Master Hard Case Accessory Kit (Consists of 760-260-R, 2000-1626-R, 2000-1749-R, 1091-446-R, 1091-425-R (qty 2), 1091-426-R (qty 2), 1091-427-R, 01-510, 01-513-R, 971-9-R, 971-10-R, 11410-00726)
---	--

Backpack and Transit Case

Accessory	Description
	67135 Anritsu Backpack (for handheld instrument and PC)
	760-259-R Transit Case (holds MW82119A/B PIM Analyzer only) Exterior Dimensions: 24.83 x 19.69 x 11.88 in (63.1 x 50 x 30.2 cm)

Accessory **Description**

	760-265-R Transit Case (holds MW82119A/B PIM Analyzer plus accessories) Exterior Dimensions: 24.76 x 19.57 x 13.90 in (62.9 x 49.7 x 35.3 cm)
	760-260-R Transit Case (holds PIM Analyzer Accessories) Exterior Dimensions: 24.39 x 19.36 x 8.79 in (62 x 49.2 x 22.3 cm)

Calibration Components, 50 Ω (These components are not designed to withstand PIM test power levels. Suitable for cable and antenna analyzer measurements only.)

Accessory	Description	Accessory	Description
	OSLN50A-8 High Performance Type N(m), DC to 8 GHz, 50 Ω		2000-1619-R Precision Open/Short/Load, 7/16 DIN(f), DC to 6.0 GHz 50 Ω
	OSLNF50A-8 High Performance Type N(f), DC to 8 GHz, 50 Ω		22N50 Open/Short, N(m), DC to 18 GHz, 50 Ω
	ICN50B Calibration Module, 10 MHz to 6.0 GHz, N(m), 50 Ω		22NF50 Open/Short, N(f), DC to 18 GHz, 50 Ω
	2000-1914-R Precision Open/Short/Load, 4.3-10(f), DC to 6 GHz, 50 Ω		SM/PL-1 Precision Load, N(m), 42 dB, 6.0 GHz
	2000-1915-R Precision Open/Short/Load, 4.3-10(m), DC to 6 GHz, 50 Ω		SM/PLNF-1 Precision Load, N(f), 42 dB, 6.0 GHz
	2000-1618-R Precision Open/Short/Load, 7/16 DIN(m), DC to 6.0 GHz 50 Ω		

Precision Adapters (Recommended for cable and antenna line sweep applications only. Not Low PIM.)

Accessory	Description	Accessory	Description
	34NN50A N(m) to N(m), DC to 18 GHz, 50 Ω		510-90-R 7/16 DIN(f) to N(m), DC to 7.5 GHz, 50 Ω
	34NFN50 N(f) to N(f), DC to 18 GHz, 50 Ω		510-91-R 7/16 DIN(f) to N(f), DC to 7.5 GHz, 50 Ω
	1091-26-R SMA(m) to N(m), DC to 18 GHz, 50 Ω		510-92-R 7/16 DIN(m) to N(m), DC to 7.5 GHz, 50 Ω
	1091-27-R SMA(f) to N(m), DC to 18 GHz, 50 Ω		510-93-R 7/16 DIN(m) to N(f), DC to 7.5 GHz, 50 Ω
	1091-80-R SMA(m) to N(f), DC to 18 GHz, 50 Ω		510-96-R 7/16 DIN(m) to 7/16 DIN (m), DC to 7.5 GHz, 50 Ω
	1091-81-R SMA(f) to N(f), DC to 18 GHz, 50 Ω		510-97-R 7/16 DIN(f) to 7/16 DIN (f), DC to 7.5 GHz, 50 Ω
	1091-172-R BNC(f) to N(m), DC to 1.3 GHz, 50 Ω		510-102-R N(m) to N(m), DC to 11 GHz, 50 Ω, 90° right angle
	1091-465-R Adapter, DC to 6 GHz, 4.3-10(f) to N(f), 50 Ω		1091-467-R Adapter, DC to 6 GHz, 4.3-10(m) to N(f), 50 Ω

Low PIM Adapters

Accessory	Description
	1091-421-R Low PIM Adapter, 7/16 DIN(m) to 7/16 DIN(m), DC to 6.0 GHz, 50 Ω
	1091-422-R Low PIM Adapter, 7/16 DIN(m) to 7/16 DIN(f), DC to 6.0 GHz, 50 Ω
	1091-423-R Low PIM Adapter, 7/16 DIN(m) to N(m), DC to 6.0 GHz, 50 Ω
	1091-424-R Low PIM Adapter, 7/16 DIN(m) to N(f), DC to 6.0 GHz, 50 Ω
	1091-425-R Low PIM Adapter, 7/16 DIN(f) to N(f), DC to 6.0 GHz, 50 Ω
	1091-426-R Low PIM Adapter, 7/16 DIN(f) to N(m), DC to 6.0 GHz, 50 Ω
	1091-427-R Low PIM Adapter, 7/16 DIN(f) to 7/16 DIN(f), DC to 6.0 GHz, 50 Ω
	1091-431-R Low PIM Adapter, 45°, 7/16 DIN(m) to 7/16 DIN(f), DC to 3.0 GHz, 50 Ω
	1091-432-R Low PIM Adapter, 45°, 7/16 DIN(f) to 7/16 DIN(f), DC to 3.0 GHz, 50 Ω
	1091-468-R Low PIM Adapter, 4.3-10(f) to 7/16 DIN(m), DC to 6.0 GHz, 50 Ω

Accessory Description

	1091-433-R Low PIM Adapter, 4.1-9.5(f) to 7/16 DIN(f), DC to 3.0 GHz, 50 Ω
	1091-434-R Low PIM Adapter, 4.1-9.5(m) to 7/16 DIN(f), DC to 3.0 GHz, 50 Ω
	1091-435-R Low PIM Adapter, 4.1-9.5(f) to N(m), DC to 3.0 GHz, 50 Ω
	1091-436-R Low PIM Adapter, 4.1-9.5(m) to N(m), DC to 3.0 GHz, 50 Ω
	1091-440-R Low PIM Adapter, 4.3-10(f) to 7/16 DIN(f), DC to 6.0 GHz, 50 Ω
	1091-441-R Low PIM Adapter, 4.3-10(m) to 7/16 DIN(f), DC to 6.0 GHz, 50 Ω
	1091-443-R Low PIM Adapter, 4.3-10(m) to N(m), DC to 6.0 GHz, 50 Ω
	1091-442-R Low PIM Adapter, 4.3-10(f) to N(m), DC to 6.0 GHz, 50 Ω
	1091-446-R PIM Standard, -80 dBm $\pm$ 3 dB at 1730 MHz, with 2 x 20 W, 7/16 DIN(m) to 7/16 DI (f), 50 Ω
	1091-466-R Low PIM Adapter, 4.3-10(m) to 7/16 DIN(m), DC to 6.0 GHz, 50 Ω

PIM Analyzer Loads

Accessory	Description
	2000-1749-R Low PIM Load, 700 MHz to 2600 MHz, 10 W, 7/16 DIN(m), 7/16 DIN(f), 50 Ω
	2000-1913-R Low PIM Load, 700 MHz to 2600 MHz, 10 W, 4.3-10(m) to 4.3-10(f), 50 Ω

Accessory	Description
	2000-1724-R Low PIM Load, 663 MHz to 2800 MHz, 40 W, 7/16 DIN(m), 7/16 DIN(f), 50 Ω

Attenuators (Recommended for power measurements only. Not Low PIM.)

Accessory	Description
	3-1010-122 Attenuator (Bi-directional), 20 dB, 5 W, DC to 12.4 GHz, N(m) to N(f)
	3-1010-123 Attenuator (Bi-directional), 30 dB, 50 W, DC to 8.5 GHz, N(m) to N(f)

Accessory	Description
	3-1010-124 Attenuator (Bi-directional), 40 dB, 100 W, DC-8.5 GHz, N(f) input to N(m) output, Unidirectional

GPS Antennas (active)PIM Analyzer Test Cables

Accessory	Description
	2000-1528-R Magnet Mount, SMA(m) with 5 m (16.4 ft) cable, requires 5 VDC
	2000-1652-R Magnet Mount, SMA(m) with 0.3 m (1 ft) cable, requires 3.3 VDC or 5 VDC

Accessory	Description
	2000-1760-R Miniature Antenna, SMA(m), requires 2.5 VDC to 3.7 VDC

PIM Test Port Cables

Accessory	Description
	2000-1626-R PIM Test Cable, 3.0 m, 7/16 DIN(m) to 7/16 DIN(m), 50 Ω
	2000-1783-R PIM Test Cable, 3.0 m, 7/16 DIN(m) to 7/16 DIN(f), 50 Ω
	2000-1845-R PIM Test Cable, 3.0 m, 7/16 DIN(m) to 4.3-10(m), 50 Ω
	2000-1846-R PIM Test Cable, 3.0 m, 7/16 DIN(m) to 4.3-10(f), 50 Ω

Accessory	Description
	16DD50-2.75-R Armored PIM Test Cable, 2.75 m, 7/16 DIN(m) to 7/16 DIN(m), 50 Ω
	16DD50-4.0-R Armored PIM Test Cable, 4.0 m, 7/16 DIN(m) to 7/16 DIN(m), 50 Ω

Interchangeable Adapter Phase Stable Test Port Cables, Armored w/Reinforced Grip (Recommended for cable and antenna line sweep applications. Not low PIM. It uses the same ruggedized grip as the Reinforced Grip series cables. Now you can also change the adapter interface on the grip to four different connector types)

Accessory	Description
	15RCN50-1.5-R 1.5 m, DC to 6 GHz, N(m), N(f), 7/16 DIN(m), 7/16 DIN(f), 50 Ω
	15RCN50-3.0-R 3.0 m, DC to 6 GHz, N(m), N(f), 7/16 DIN(m), 7/16 DIN(f), 50 Ω

Phase-Stable Test Port Cables, Armored w/Reinforced Grip (Recommended for cable and antenna line sweep applications only. Not low PIM.)

Accessory	Description	Accessory	Description
	15RDN50-1.5-R 1.5 m, DC to 6 GHz, N(m) to 7/16 DIN(m), 50 Ω		15RNFN50-1.5-R 1.5 m, DC to 6 GHz, N(m) to N(f), 50 Ω
	15RDFN50-1.5-R 1.5 m, DC to 6 GHz, N(m) to 7/16 DIN(f), 50 Ω		15RNFN50-3.0-R 3.0 m, DC to 6 GHz, N(m) to N(f), 50 Ω
	15RDN50-3.0-R 3.0 m, DC to 6 GHz, N(m) to 7/16 DIN(m), 50 Ω		
	15RDFN50-3.0-R 3.0 m, DC to 6 GHz, N(m) to 7/16 DIN(f), 50 Ω		


Phase-Stable Test Port Cables, Armored (Recommended for cable and antenna line sweep applications only. Not Low PIM. Use with tightly spaced connectors and other general purpose applications)

Accessory	Description	Accessory	Description
	15NNF50-1.5C 1.5 m, DC to 6 GHz, N(m) to N(f), 50 Ω		15NDF50-1.5C 1.5 m, DC to 6 GHz, N(m) to 7/16 DIN(f), 50 Ω
	15NN50-1.5C 1.5 m, DC to 6 GHz, N(m) to N(m), 50 Ω		15ND50-1.5C 1.5 m, DC to 6 GHz, N(m) to 7/16 DIN(m), 50 Ω
	15NNF50-3.0C 3.0 m, DC to 6 GHz, N(m) to N(f), 50 Ω		15N43M50-1.5C Test Port Extension Cable, Armored, 1.5 m, DC to 6 GHz, N(m) to 4.3-10(m)
	15NN50-3.0C 3.0 m, DC to 6 GHz, N(m) to N(m), 50 Ω		15N43F50-1.5C Test Port Extension Cable, Armored, 1.5 m, DC to 6 GHz, N(m) to 4.3-10(f)
	15NNF50-5.0C 5.0 m, DC to 6 GHz, N(m) to N(f), 50 Ω		15N43M50-3.0C Test Port Extension Cable, Armored, 3 m, DC to 6 GHz, N(m) to 4.3-10(m)
	15NN50-5.0C 5.0 m, DC to 6 GHz, N(m) to N(m), 50 Ω		15N43F50-3.0C Test Port Extension Cable, Armored, 3 m, DC to 6 GHz, N(m) to 4.3-10(f)

Bandpass Filters

Accessory	Description
	1030-114-R 806 MHz to 869 MHz, N(m) to SMA(f), 50 Ω
	1030-109-R 24 MHz to 849 MHz, N(m) to SMA(f), 50 Ω
	1030-110-R 880 MHz to 915 MHz, N(m) to SMA(f), 50 Ω
	1030-111-R 1850 MHz to 1910 MHz, N(m) to SMA(f), 50 Ω
	1030-112-R 2400 MHz to 2484 MHz, N(m) to SMA(f), 50 Ω
	1030-105-R 890 MHz to 915 MHz, N(m) to N(f), 50 Ω
	1030-106-R 1710 MHz to 1790 MHz, N(m) to N(f), 50 Ω
	1030-107-R 1910 MHz to 1990 MHz, N(m) to N(f), 50 Ω
	1030-149-R High Pass, 150 MHz, N(m) to N(f), 50 Ω
	1030-150-R High Pass, 400 MHz, N(m) to N(f), 50 Ω

Accessory Description

	1030-151-R High Pass, 700 MHz, N(m) to N(f), 50 Ω
	1030-152-R Low Pass, 200 MHz, N(m) to N(f), 50 Ω
	1030-153-R Low Pass, 550 MHz, N(m) to N(f), 50 Ω
	1030-155-R 2500 MHz to 2700 MHz, N(m) to N(f), 50 Ω
	1030-178-R 1920 MHz to 1980 MHz, N(m) to N(f), 50 Ω
	1030-179-R 777 MHz to 798 MHz, N(m) to N(f), 50 Ω
	1030-180-R 2500 MHz to 2570 MHz, N(m) to N(f), 50 Ω
	2000-1684-R 791 MHz to 821 MHz, N(m) to N(f), 50 Ω
	2000-2147-R 3700 MHz to 3980 MHz, N(m) to N(f)

Miscellaneous Accessories

Accessory	Description
	2000-1374 External Dual Charger for Li-Ion Batteries
	633-75 Rechargeable Li-Ion Battery, 7500 mAh
	01-528-R Torque Wrench for coupling torque of 4.3-10 connectors, 22 mm opening
	01-201 Torque End Wrench, 5/16 in, 0.9 N·m (8 lbf·in), For tightening male devices, for SMA, 3.5 mm, 2.4 mm, K, and V connectors
	971-9-R Cleaning Wipes

Accessory Description

	2000-1884-R PIM Hunter™ Test Probe (For full specifications, refer to the 2000-1884-R Technical Data Sheet 11410-00999)
	2000-1691-R Stylus with Coiled Tether
	01-510 Adjustable Wrench
	01-513-R 1-1/4 in Torque Wrench
	971-10-R Cleaning Swabs

Training at Anritsu

Anritsu has designed courses to help you stay up to date with technologies important to your job. For available training courses, visit: www.anritsu.com and search for training and education.



• United States

Anritsu Americas Sales Company
450 Century Parkway, Suite 190,
Allen, TX 75013, U.S.A.
Phone: +1-800-Anritsu (1-800-267-4878)

• Canada

Anritsu Electronics Ltd.
Americas Sales and Support
450 Century Parkway, Suite 190,
Allen, TX 75013, U.S.A.
Phone: +1-800-Anritsu (1-800-267-4878)

• Brazil

Anritsu Eletrônica Ltda.
Praça Amadeu Amaral, 27 - 1 Andar
01327-010 - Bela Vista - São Paulo - SP, Brazil
Phone: +55-11-3283-2511
Fax: +55-11-3288-6940

• Mexico

Anritsu Company, S.A. de C.V.
Blvd Miguel de Cervantes Saavedra #169 Piso 1,
Col. Granada, Mexico, Ciudad de Mexico,
11520, MEXICO
Phone: +52-55-4169-7104

• United Kingdom

Anritsu EMEA Ltd.
200 Capability Green,
Luton, Bedfordshire, LU1 3LU, U.K.
Phone: +44-1582-433200
Fax: +44-1582-731303

• France

Anritsu S.A.
12 avenue du Québec, Immeuble Goyave,
91140 VILLEBON SUR YVETTE, France
Phone: +33-1-60-92-15-50

• Germany

Anritsu GmbH
Nemetschek Haus, Konrad-Zuse-Platz 1,
81829 München, Germany
Phone: +49-89-442308-0
Fax: +49-89-442308-55

• Italy

Anritsu S.r.l.
Spaces Eur Arte, Viale dell'Arte 25, 00144 Roma, Italy
Phone: +39-6-509-9711
List Revision Date: 20230901

• Sweden

Anritsu AB
Kistagången 20 B, 2 tr, 164 40 Kista, Sweden
Phone: +46-8-534-707-00

• Finland

Anritsu AB
Technopolis Aviapolis, Teknobulevardi 3-5 (D208.5.),
FI-01530 Vantaa, Finland
Phone: +358-20-741-8100

• Denmark

Anritsu A/S
c/o Regus Winghouse, Ørestads Boulevard 73, 4th floor,
2300 Copenhagen S, Denmark
Phone: +45-7211-2200

• Spain

Anritsu EMEA Ltd.
Representation Office in Spain
Paseo de la Castellana, 141.
Planta 5, Edificio Cuzco IV
28046, Madrid, Spain
Phone: +34-91-572-6761

• Austria

Anritsu EMEA GmbH
Am Belvedere 10, A-1100 Vienna, Austria
Phone: +43-(0)1-717-28-710

• United Arab Emirates

Anritsu EMEA Ltd.
Anritsu A/S
Office No. 164, Building 17, Dubai Internet City
P. O. Box - 501901, Dubai, United Arab Emirates
Phone: +971-4-3758479

• India

Anritsu India Private Limited
6th Floor, Indigube ETA, No.38/4, Adjacent to EMC2,
Doddanekundi, Outer Ring Road,
Bengaluru - 560048, India
Phone: +91-80-6728-1300
Fax: +91-80-6728-1301

• Singapore

Anritsu Pte. Ltd.
1 Jalan Kilang Timor, #07-04/06 Pacific Tech Centre
Singapore 159303
Phone: +65-6282-2400
Fax: +65-6282-2533

• Vietnam

Anritsu Company Limited
16th Floor, Peakview Tower, 36 Hoang Cau Street,
O Cho Dua Ward, Dong Da District, Hanoi, Vietnam
Phone: +84-24-3201-2730

• P.R. China (Shanghai)

Anritsu (China) Co., Ltd.
Room 2701-2705, Tower A, New Caohejing
International Business Center No. 391 Gui Ping Road
Shanghai, 200233, P.R. China
Phone: +86-21-6237-0898
Fax: +86-21-6237-0899

• P.R. China (Hong Kong)

Anritsu Company Ltd.
Unit 1006-7, 10/F., Greenfield Tower, Concordia Plaza,
No. 1 Science Museum Road, Tsim Sha Tsui East,
Kowloon, Hong Kong, P.R. China
Phone: +852-2301-4980
Fax: +852-2301-3545

• Japan

Anritsu Corporation
8-5, Tamura-cho, Atsugi-shi, Kanagawa, 243-0016 Japan
Phone: +81-46-296-6509
Fax: +81-46-225-8352

• South Korea

Anritsu Corporation, Ltd.
8F, A TOWER, 20, Gwacheondaero 7-gil, Gwacheon-si,
Gyeonggi-do, 13840, Republic of Korea
Phone: +82-2-6259-7300
Fax: +82-2-6259-7301

• Australia

Anritsu Pty. Ltd.
Unit 20, 21-35 Ricketts Road,
Mount Waverley, Victoria 3149, Australia
Phone: +61-3-9558-8177
Fax: +61-3-9558-8255

• Taiwan

Anritsu Company Inc.
7F, No. 316, Sec. 1, NeiHu Rd., Taipei 114, Taiwan
Phone: +886-2-8751-1816
Fax: +886-2-8751-1817