

Anritsu Advancing beyond

ShockLine™ 1-Port USB Vector Network Analyzers

MS46121B

150 kHz to 6 GHz



Introduction

The MS46121B is part of the ShockLine™ family of Vector Network Analyzers from Anritsu. It is available with a frequency range of 150 kHz to 6 GHz, and is capable of 1-port S-parameter and band pass time domain (distance to fault) measurements.

The MS46121B Vector Network Analyzer (VNA) is controlled through USB from an external PC. The MS46121B runs the same software as the rest of the ShockLine family, providing a powerful graphical user interface for testing of passive devices. Up to 16 MS46121B VNAs can be controlled from one computer, making it ideal for testing multiple 1-port devices in parallel for improved test productivity and throughput.

The MS46121B with Option 2 provides a Time Domain Reflectometry (TDR) like display that enables real impedance measurements over frequency. With Option 21, scalar transmission measurements between MS46121B instruments can be performed in various configurations.

This document provides detailed specifications for the MS46121B series Vector Network Analyzer and related options.

Instrument Models and Operating Frequencies

Base Model

- MS46121B, 1-Port ShockLine VNA

One Frequency Option

- MS46121B-006, 150 kHz to 6 GHz, 1-Port

Principal Options

- MS46121B-002, Time Domain
- MS46121B-021, Scalar Transmission Measurement



MS46121B ShockLine 1-Port USB VNA

Table of Contents

Definitions 3
 High Level Noise 4
 Output Power 4
 Measurement Stability 4
 Frequency Resolution, Accuracy, and Stability 4
 Uncorrected (Raw) Port Characteristics 4
 Scalar Transmission Measurement Accuracy 4
 Dynamic Range for Scalar Transmission 4
 VNA System Performance 5
 VNA System Performance 6
 Measurement Throughput 6
 Standard Capabilities 7
 Calibration and Correction Capabilities 9
 Remote Operability 9
 Recommended External PC Configuration 9
 Device Connections 10
 Mechanical 11
 Regulatory Compliance 11
 Environmental 11
 Warranty 11
 Ordering Information 12

Definitions

All specifications and characteristics apply to instruments under the following conditions, unless otherwise stated:

Warm-Up Time	After 30 minutes of warm-up time, where the instrument is left in the ON state.
Temperature Range	Specifications apply over the 25 °C ± 5 °C temperature range.
Error-Corrected Specifications	Specifications are valid over 23 °C ± 3 °C, with < 1 °C variation from calibration temperature.
Frequency Bands in Tables	When a frequency is listed in two rows of the same table, the specification for the common frequency is taken from the lower frequency band.
User Cables	Specifications do not include effects of any user cables attached to the instrument.
Discrete Spurious Responses	Specifications may exclude discrete spurious responses.
Internal Reference Signal	All specifications apply with internal 10 MHz Crystal Oscillator Reference Signal.
Interpolation Mode	All specifications are with Interpolation Mode Off.
Standard	Refers to instruments without Options.
Typical Performance	Typical performance indicates the measured performance of an average unit. It does not include guard-bands and is not covered by the product warranty.
Characteristic Performance	Characteristic performance indicates a performance designed-in and verified during the design phase. It does include guard-bands and is not covered by the product warranty.
Uncertainty	A coverage factor of x1 is applied to the measurement uncertainties to facilitate comparison to other industry analyzers.
Recommended Calibration Cycle	12 months (Residual specifications also require calibration kit calibration cycle adherence.)
Specifications Subject to Change	All specifications are typical unless otherwise noted and are subject to change without notice. For the most current data sheet, please visit the Anritsu web site: www.anritsu.com

The instrument may be protected by one or more of the following patents: 6894581, 7088111, 7545151, 7683633, 7924024, 8417189, 8718586, 10116432, 9967085, 9964585, 9860054, 9733289, and 9366707, depending upon the model and option configuration of the instrument.

High Level Noise

Measured at 100 Hz IF bandwidth and at default power level, RMS.

Frequency	Magnitude (dB)	Phase Noise (deg RMS)
150 kHz to 6 GHz	0.02	0.2

Output Power

Frequency	Power Setting	Standard (dBm)
150 kHz to 46 MHz	Default	- 5
> 46 MHz to 4 GHz	Default	+ 3
> 4 GHz to 6 GHz	Default	- 5

Measurement Stability

Ratio measurement, with ports shorted.

Frequency	Magnitude (dB/°C)	Phase (deg/°C)
150 kHz to 1 MHz	0.1	0.1
> 1 MHz to 4 GHz	0.01	0.1
> 4 GHz to 6 GHz	0.05	0.2

Frequency Resolution, Accuracy, and Stability

Resolution	Accuracy	Stability	Aging
1 Hz ^a	± 0.5 ppm (at time of calibration)	± 1.0 ppm from - 10 °C to + 55 °C	± 1.0 ppm/year

a. Frequency resolution is 10 kHz when using an external reference.

Uncorrected (Raw) Port Characteristics

User and System Correction Off.

Frequency	Directivity (dB)	Port Match (dB)
150 kHz to 6 GHz	10 dB ^a	10 dB ^b

a. Raw directivity specification degrades by 2 dB above 4 GHz.

b. Raw port match specification degrades by 5 dB above 4 GHz.

Scalar Transmission Measurement Accuracy

Measurement accuracy is specified @ 50 Hz IFBW with 10 MHz external reference, scalar normalization On, and from 0 dB to -50 dB insertion loss levels.

Scalar transmission is functional to 6 GHz.

Frequency	Accuracy (dB)
> 150 kHz to 4 GHz	± 1.0
> 4 GHz to 6 GHz	± 2.0

Dynamic Range for Scalar Transmission

Dynamic range is specified @ 30 Hz IFBW with 10 MHz external reference, scalar normalization On, and using a USB hub with two MS46121B instruments connected.

Frequency	Dynamic Range (dB, typical)
150 kHz to 6 GHz	80

VNA System Performance


Error-Corrected Specifications

With calibration using TOSLN50A-8 or TOSLNF50A-8 N-type connector manual calibration kits or OSLN50A-8 and OSLNF50A-8 manual calibration kits.

Frequency Range	Directivity (dB)	Source Match (dB)	Reflection Tracking (dB)
150 kHz to 4 GHz	42	35	± 0.1
> 4 GHz to 6 GHz	42	35	± 0.2

Measurement Uncertainties

The graphs give measurement uncertainties after the above error-corrected calibration. The errors are a worst-case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability. 10 Hz IF Bandwidth is used. All calibrations and measurements were performed at default port power. For other conditions, please use our free Exact Uncertainty Calculator software, available for download from the Anritsu web site at www.anritsu.com.

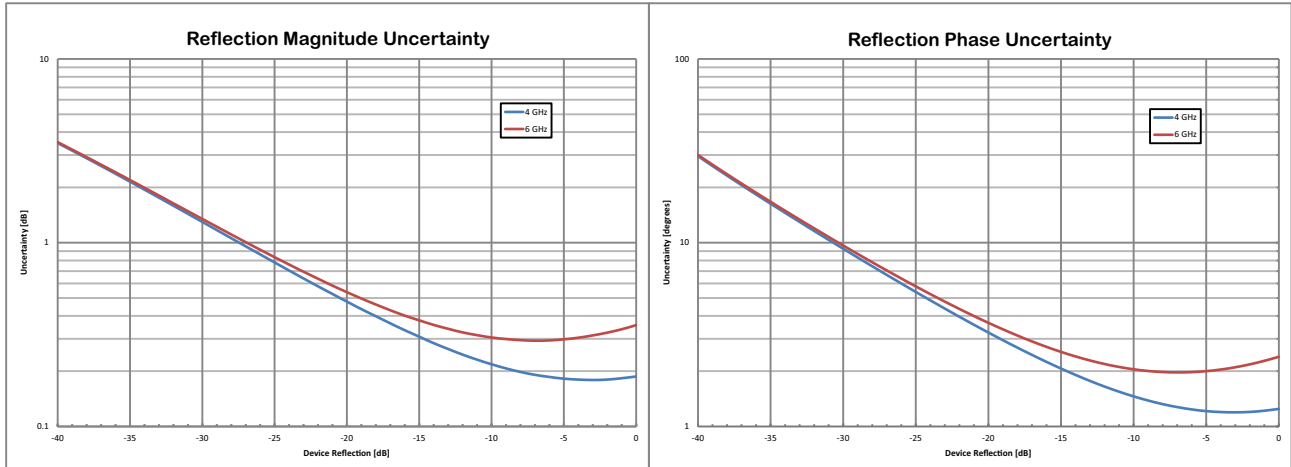

VNA System Performance


Error-Corrected Specifications

With calibration using the MN25408A SmartCal™ automatic calibration kit with connector options MN25408A-001, -002, and -003.

Frequency Range	Directivity (dB)	Source Match (dB)	Reflection Tracking (dB)
150 kHz to 1 GHz	42	35	± 0.15
> 1 GHz to 5 GHz	40	35	± 0.2
> 5 GHz to 6 GHz	33	32	± 0.2

Measurement Uncertainties

The graphs give measurement uncertainties after the above error-corrected calibration. The errors are a worst-case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability. 10 Hz IF Bandwidth is used. All calibrations and measurements were performed at default port power. For other conditions, please use our free Exact Uncertainty Calculator software, available for download from the Anritsu web site at www.anritsu.com.

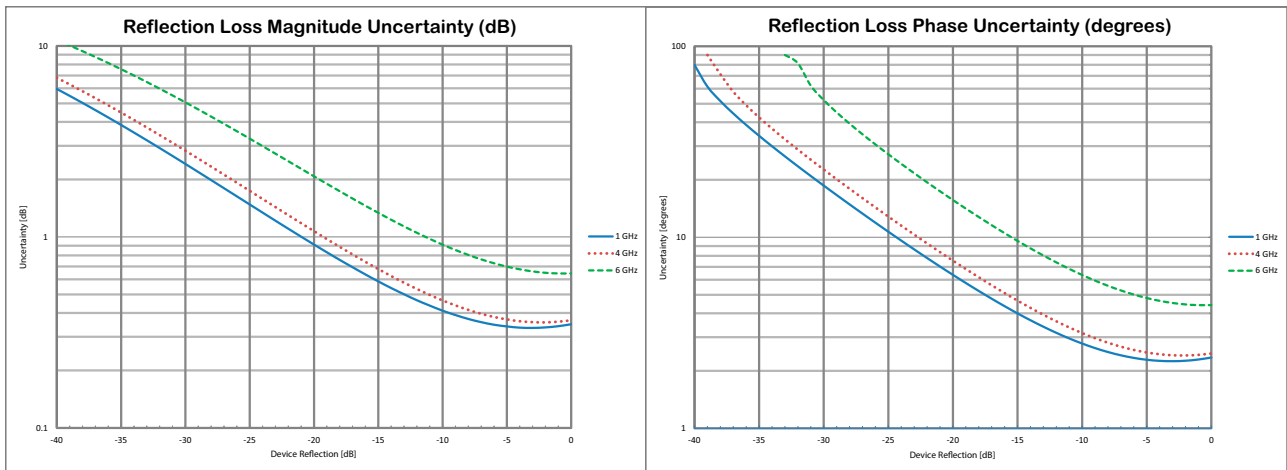

Measurement Throughput

Measurement Speed

140 μs/point, typical. Per point single sweep time, including placing measurement data into memory. Average of narrow, mid, and wide frequency span sweeps. 100 kHz IFBW, 1601 points, 1 port calibrated data measurement. Timing dependent on external computer configuration. Measurements taken with an Intel® Core™ i5-6300U processor running Windows 7 with 4 GB of RAM and 60 GB of free hard disk space.

Standard Capabilities

Operating Frequencies		
MS46121B-006		150 kHz to 6 GHz
Measurement Parameters		
1-Port Measurements		S_{11} or any user-defined combination of a_1 , b_1 , 1
2-Port Measurements		$S_{ XY }$ where Y is the source and X is the receiver
Domains		Frequency Domain and Band Pass Time Domain (Distance to Fault)
Sweeps		
Frequency Sweep Types		Linear, Log, CW, or Segmented
Display Graphs		
Single Rectilinear Graph Types		Log Magnitude, Phase, Linear Magnitude, Real, Imaginary, SWR, and Impedance
Dual Rectilinear Graph Types		Log Mag and Phase, Linear Mag and Phase, Real and Imaginary
Circular Graph Types		Smith Chart, Polar
Measurements Data Points		
Maximum Data Points		2 to 20,001 points
Limit Lines		
Limit Lines		Single or segmented. 2 limit lines per trace. 50 segments per trace.
Single Limit Readouts		Uses interpolation to determine the intersection frequency.
Test Limits		Both single and segmented limits can be used for PASS/FAIL testing.
Ripple Limit Lines		
Limit Lines		Single or segmented. Two limit lines per trace. 50 segments per trace.
Ripple Value		Absolute Value or Margin
Test Limits		Both single and segmented limits can be used for PASS/FAIL testing.
Averaging		
Point-by-Point		Point-by-point (default), maximum number of averages = 4096
Sweep-by-Sweep		Sweep-by-sweep, maximum number of averages = 4096
IF Bandwidth (All IFBW settings applicable with Option 21 enabled. Without 10MHz external reference, IF Bandwidth can not be lower than 10KHz.)		
		10, 20, 30, 50, 70, 100, 200, 300, 500, 700 Hz 1, 2, 3, 5, 7, 10, 20, 30, 50, 100 kHz
Reference Plane		
Line Length or Time Delay		The reference planes of a calibration or other normalization can be changed by entering a line length or time delay.
Dielectric Constants		Dielectric constants may be entered for different media so the length entry can be physically meaningful.
Dispersion Modeling		Dispersion modeling is used in the cases of microstrip and waveguide to take into account frequency dependent phase velocities.
Attenuations		Attenuations and constant phase offsets can be entered to better describe any reference plane distortions.
De-embedding		For more complete reference plane manipulation, the full de-embedding system can also be used.
Measurement Frequency Range		
Frequency Range Change		Frequency range of the measurement can be narrowed within the calibration range without recalibration.
CW Mode		CW mode permits single frequency measurements also without recalibration.
Interpolation Not Activated		If interpolation is not activated, the subset frequency range is forced to use calibration frequency points.
Interpolation Activated		If interpolation is activated, any frequency range that is a subset of the calibration frequency range can be used, but there may be some added interpolation error.

Channels, Display, and Traces

Channels	Up to 16 MS46121B VNAs can operate in parallel while controlled from a single host computer. ShockLine software dedicates one channel per MS46121B VNA with 16 channels maximum
Traces	Each channel supports up to 16 data traces.
Display Colors	Unlimited colors for data traces, memory, text, markers, graticules, and limit lines
Trace Memory and Math	A separate memory for each trace can be used to store measurement data for later display or subtraction, addition, multiplication or division with current measurement data. The trace data can be saved and recalled.
Inter-trace Math	Any two traces within a channel can be combined (via addition, subtraction, multiplication, or division) and displayed on another trace. An equation editor mode is also available that allows the combination of trace data, trace memory and S-parameter data in more complex equations. Over 30 built-in functions are available. Simple editing tools and the ability to save/recall equations are also provided.

Scale Resolution

	Minimum per division, varies with graph type.
Log Magnitude	0.001 dB
Linear Magnitude	10 μ U
Phase	0.01°
Time	0.0001 ps
Distance	0.1 μ m
SWR	10 μ U
Power	0.01 dB

Markers

Markers	12 markers + 1 reference marker
Marker Coupling	Coupled or decoupled
Marker Overlay	Display markers on active trace only or on all traces when multiple trace responses are present on the same trace
Marker Data	Data displayed in graph area or in table form
Reference Marker	Additional marker per trace for reference
Marker Statistics	Mean, maximum, minimum, standard deviation Per trace or over a marker region
Marker Search and Tracking	Search and/or track for minimum, maximum, peak, or target value

Other

Filter Parameters	Display bandwidth (user-selectable loss value), corner and center frequencies, loss, Q, and shape factors.
S-Parameter Conversion	Z Reflection Impedance Z Transmission Impedance Y Reflection Admittance Y Transmission Admittance 1/S

Calibration and Correction Capabilities

Calibration Methods		Open Short Load (OSL) Offset Short (SSL) Triple Offset Short (SSS) SmartCal™ AutoCal™
Correction Models		1-Port Reflection Frequency Response (S_{11}) 2-Port Transmission Frequency Response (Scalar) ($S_{ XY }$) where Y is the source and X is the receiver
Coefficients for Calibration Standards		Use the Anritsu calibration kit USB memory device to load kit coefficients and characterization files. Enter coefficients into user-defined locations. Use complex load models.
Interpolation		Allows interpolation between calibration frequency points.
Dispersion Compensation		Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip
Embedding/De-embedding		The MS46121B is equipped with an Embedding/De-embedding system.
De-embedding		De-embedding is generally used for removal of test fixture contributions, modeled networks, and other networks described by S-parameters (s2p files) from measurements.
Embedding		Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement.
Multiple Networks		Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily.

Remote Operability

ShockLine supports several remote operability options.

Communication Type	Data Format	Performance	Description
Drivers	IVI-C drivers are available for download from the Anritsu website. The IVI-C package supports National Instruments LabVIEW and LabWindows, C#, .NET, MATLAB, and Python34 programming environments.		
Triggering	Start Trigger	Software	

Recommended External PC Configuration

- CPU Intel® Core™ i5-6300U Processor
 - RAM 4 GB
 - Disk 120 GB
 - DirectX Version 9 with Windows Display Driver Model (WDDM) installed
 - USB One USB 2.0 (or higher) type A port per MS46121B used
- To increase the number of USB ports available an externally powered USB hub may also be used.
ShockLine software is compatible with Windows® 7, 8, 8.1, 10, or 11; 32- or 64-bit operating systems

Device Connections



MS46121B

Test Port 1

MS46121B	N(m)
Damage Input Levels	+ 23 dBm maximum, ± 50 VDC maximum

External Reference In

Frequency Input	10 MHz (better than 10 ppm frequency accuracy is recommended)
Connector Type	MCX(f)
Signal	0.89 V _{pp} , minimum; 80 Ω, nominal

USB Ports

One Micro USB 2.0 port for connecting to an external PC controller.
 For multiple MS46121B instruments on one PC, an externally powered USB 2.0 hub is recommended

Mechanical

Dimensions	W x H x D	52 mm x 148 mm x 36 mm
Weight		< 0.4 kg (< 0.9 lb), typical weight

Regulatory Compliance

European Union	EMC 2014/30/EU, EN 61326:2013, CISPR 11/EN 55011, IEC/EN 61000-4-2/3/4/5/6/8/11 Low Voltage Directive 2014/35/EU Safety EN 61010-1:2010 RoHS Directive 2011/65/EU & Amendment 2015/863
United Kingdom	EMC SI 2016/1091; BS EN 55011 & BS EN 61000-4-2/3/4/5/6/8/11 Consumer Protection (Safety) SI 2016/1101; BS EN 61010-1:2010 Environmental Protection SI 2012/3032; 2011/65/EU & 2015/863
Canada	ICES-1(A)/NMB-1(A)
Australia and New Zealand	RCM AS/NZS 4417:2012
South Korea	R-R-A2J-1007

Environmental

	MIL-PRF-28800F Class 2
Operating Temperature Range	-10 °C to 55 °C
Storage Temperature Range	-51 °C to 71 °C
Maximum Relative Humidity	95 % RH at 30 °C, non-condensing
Vibration, Sinusoidal	5 Hz to 55 Hz
Vibration, Random	10 Hz to 500 Hz
Half Sine Shock	30 g _n
Altitude	4600 meters, operating and non-operating

Warranty

Instrument and Built-In Options	Three (3) years from the date of shipment (standard warranty)
Calibration Kits	Typically 1 year from the date of shipment
Test Port Cables	Typically 1 year from the date of shipment
Warranty Options	Additional warranty available

Ordering Information

Instrument Models	
Base Model	MS46121B, ShockLine™ 1-Port USB VNA
Required Option	MS46121B-006, 150 kHz to 6 GHz, type N(m) port
Included Accessories	
	USB-A to Micro-B with latch cable, 2000-2010-R, 1.83 m (6 ft) Getting Started with Anritsu Flier, provides access to all ShockLine web content and services.
Main VNA Option	
MS46121B-002	Low Pass Time Domain
MS46121B-021	Scalar Transmission Measurement
Precision Automatic Calibrator Module	
MN25208A	2-port USB SmartCal Module, 300 kHz to 8.5 GHz (available with connector Options -001 N(f), -002 K(f), -003 3.5 mm(f))
MN25408A	4-port USB SmartCal Module, 300 kHz to 8.5 GHz (available with connector Options -001 N(f), -002 K(f), -003 3.5 mm(f))
MN25218A ¹	2-port USB SmartCal Module, 300 kHz to 20 GHz (available with connector Option -002 K(f))
MN25418A	4-port USB SmartCal Module, 300 kHz to 20 GHz (available with connector Option -002 K(f))
36585K-2M	K Connector Precision AutoCal Module, 70 kHz to 40 GHz, K(m) to K(m)
36585K-2F	K Connector Precision AutoCal Module, 70 kHz to 40 GHz, K(f) to K(f)
36585K-2MF	K Connector Precision AutoCal Module, 70 kHz to 40 GHz, K(m) to K(f)
2000-1809-R	Serial to USB Adapter (required for use with 36585 AutoCal module if control PC does not have a serial port)
Mechanical Calibration Kits	
3653A	N Connector Calibration Kit, Without Sliding Loads, DC to 18 GHz, 50 Ω
OSLN50A-8	Precision N Male Open/Short/Load Mechanical Calibration Tee, DC to 8 GHz, 50 Ω
OSLNF50A-8	Precision N Female Open/Short/Load Mechanical Calibration Tee, DC to 8 GHz, 50 Ω
TOSLN50A-8	Precision N Male Through/Open/Short/Load Mechanical Calibration Tee, DC to 8 GHz, 50 Ω
TOSLNF50A-8	Precision N Female Through/Open/Short/Load Mechanical Calibration Tee, DC to 8 GHz, 50 Ω
RF Cables and Adapters	
1091-26-R	Adapter, SMA(m) to N(m), DC to 18 GHz, 50 Ω
1091-27-R	Adapter, SMA(f) to N(m), DC to 18 GHz, 50 Ω
1091-80-R	Adapter, SMA(m) to N(f), DC to 18 GHz, 50 Ω
1091-81-R	Adapter, SMA(f) to N(f), DC to 18 GHz, 50 Ω
71693-R	Ruggedized adapter, K(f) to N(f), DC to 18 GHz, 50 Ω
34NK50	Precision Adapter, N(m) to K(m), DC to 18 GHz, 50 Ω
34NKF50	Precision Adapter, N(m) to K(f), DC to 18 GHz, 50 Ω
34NFK50	Precision Adapter, N(f) to K(m), DC to 18 GHz, 50 Ω
34NFKF50	Precision Adapter, N(f) to K(f), DC to 18 GHz, 50 Ω
K220B	Precision Adapter, DC to 40 GHz, K(m) to K(m), 50 Ω
K222B	Precision Adapter, DC to 40 GHz, K(f) to K(f), 50 Ω
K224B	Precision Adapter, DC to 40 GHz, K(m) to K(f), 50 Ω

1. Applies to Rev 2 SmartCal Modules. MN25218A with serial numbers <1817999 operate from 1 MHz to 20 GHz.

Ordering Information (continued)

Test Port Cables, Flexible, Ruggedized, Phase Stable



15NNF50-1.0B	1.0 m, DC to 18 GHz, Test Port Cable, Flexible, Phase Stable, N(f) to N(m), 50 Ω
15NNF50-1.5B	1.5 m, DC to 18 GHz, Test Port Cable, Flexible, Phase Stable, N(f) to N(m), 50 Ω
15NN50-1.0B	1.0 m, DC to 18 GHz, Test Port Cable, Flexible, Phase Stable, N(m) to N(m), 50 Ω
15LL50-1.0A	1.0 m, DC to 26.5 GHz, Test Port Extension Cable, Armored, Phase Stable, 3.5 mm(m) to 3.5 mm(m), 50 Ω
15LLF50-1.0A	1.0 m, DC to 26.5 GHz, Test Port Extension Cable, Armored, Phase Stable, 3.5 mm(m) to 3.5 mm(f), 50 Ω
15KK50-1.0A	1.0 m, DC to 26.5 GHz, Test Port Extension Cable, Armored, Phase Stable, K(m) to K(m), 50 Ω
15KKF50-1.0A	1.0 m, DC to 26.5 GHz, Test Port Extension Cable, Armored, Phase Stable, K(m) to K(f), 50 Ω

Tools

01-200	Calibrated Torque End Wrench, GPC-7 and Type N
01-201	Torque End Wrench, 5/16 in, 0.9 N·m (8 lbf·in) (for tightening male devices, for SMA, 3.5 mm, 2.4 mm, K, and V connectors)
01-203	Torque End Wrench, 13/16 in, 0.9 N·m (8 lbf·in) (for tightening ruggedized SMA, 2.4 mm, K and V test port connectors)
01-204	End Wrench, 5/16 in, Universal, Circular, Open-ended (for SMA, 3.5 mm, 2.4 mm, K, and V connectors)
More Information	Refer to our Precision RF & Microwave Components Catalog for descriptions of adapters and other components.

Documentation

User Documentation	Soft copies of the manuals as Adobe Acrobat PDF files are available for download from the instrument model web page at www.anritsu.com . For more information and product support, please contact ShockLineVNA.support@Anritsu.com .
10100-00067	ShockLine Product Information, Compliance, and Safety
10410-00344	MS46121A/B Series VNA Operation Manual
10410-00337	MS46121A/B, MS46122A/B, and MS46322A/B Series VNA User Interface Reference Manual
10410-00746	ShockLine Programming Manual

Notes

Training at Anritsu

Anritsu has designed courses to help you stay up to date with technologies important to your job. For available training courses, visit: www.anritsu.com and search for training and education.



• United States

Anritsu Americas Sales Company
450 Century Parkway, Suite 190,
Allen, TX 75013, U.S.A.
Phone: +1-800-Anritsu (1-800-267-4878)

• Canada

**Anritsu Electronics Ltd.
Americas Sales and Support**
450 Century Parkway, Suite 190,
Allen, TX 75013, U.S.A.
Phone: +1-800-Anritsu (1-800-267-4878)

• Brazil

Anritsu Elettronica Ltda.
Praça Amadeu Amaral, 27 - 1 Andar
01327-010 - Bela Vista - Sao Paulo - SP, Brazil
Phone: +55-11-3283-2511
Fax: +55-11-3288-6940

• Mexico

Anritsu Company, S.A. de C.V.
Blvd Miguel de Cervantes Saavedra #169 Piso 1,
Col. Granada, Mexico, Ciudad de Mexico,
11520, MEXICO
Phone: +52-55-4169-7104

• United Kingdom

Anritsu EMEA Ltd.
200 Capability Green,
Luton, Bedfordshire, LU1 3LU, U.K.
Phone: +44-1582-433200
Fax: +44-1582-731303

• France

Anritsu S.A.
12 avenue du Québec, Immeuble Goyave,
91140 VILLEBON SUR YVETTE, France
Phone: +33-1-60-92-15-50

• Germany

Anritsu GmbH
Nemetschek Haus, Konrad-Zuse-Platz 1,
81829 München, Germany
Phone: +49-89-442308-0
Fax: +49-89-442308-55

• Italy

Anritsu S.r.l.
Spaces Eur Arte, Viale dell'Arte 25, 00144 Roma, Italy
Phone: +39-6-509-9711
List Revision Date: 20230901

• Sweden

Anritsu AB
Kistagången 20 B, 2 tr, 164 40 Kista, Sweden
Phone: +46-8-534-707-00

• Finland

Anritsu AB
Technopolis Aviapolis, Teknobulevardi 3-5 (D208.5),
FI-01530 Vantaa, Finland
Phone: +358-20-741-8100

• Denmark

Anritsu A/S
c/o Regus Winghouse, Ørestads Boulevard 73, 4th floor,
2300 Copenhagen S, Denmark
Phone: +45-7211-2200

• Spain

**Anritsu EMEA Ltd.
Representation Office in Spain**
Paseo de la Castellana, 141.
Planta 5, Edificio Cuzco IV
28046, Madrid, Spain
Phone: +34-91-572-6761

• Austria

Anritsu EMEA GmbH
Am Belvedere 10, A-1100 Vienna, Austria
Phone: +43-(0)1-717-28-710

• United Arab Emirates

**Anritsu EMEA Ltd.
Anritsu A/S**
Office No. 164, Building 17, Dubai Internet City
P. O. Box - 501901, Dubai, United Arab Emirates
Phone: +971-4-3758479

• India

Anritsu India Private Limited
6th Floor, Indiqube ETA, No.38/4, Adjacent to EMC2,
Doddanekundi, Outer Ring Road,
Bengaluru - 560048, India
Phone: +91-80-6728-1300
Fax: +91-80-6728-1301

• Singapore

Anritsu Pte. Ltd.
1 Jalan Kilang Timor, #07-04/06 Pacific Tech Centre
Singapore 159303
Phone: +65-6282-2400
Fax: +65-6282-2533

• Vietnam

Anritsu Company Limited
16th Floor, Peakview Tower, 36 Hoang Cau Street,
O Cho Dua Ward, Dong Da District, Hanoi, Vietnam
Phone: +84-24-3201-2730

• P.R. China (Shanghai)

Anritsu (China) Co., Ltd.
Room 2701-2705, Tower A, New Caohejing
International Business Center No. 391 Gui Ping Road
Shanghai, 200233, P.R. China
Phone: +86-21-6237-0898
Fax: +86-21-6237-0899

• P.R. China (Hong Kong)

Anritsu Company Ltd.
Unit 1006-7, 10/F., Greenfield Tower, Concordia Plaza,
No. 1 Science Museum Road, Tsim Sha Tsui East,
Kowloon, Hong Kong, P.R. China
Phone: +852-2301-4980
Fax: +852-2301-3545

• Japan

Anritsu Corporation
8-5, Tamura-cho, Atsugi-shi, Kanagawa, 243-0016 Japan
Phone: +81-46-296-6509
Fax: +81-46-225-8352

• South Korea

Anritsu Corporation, Ltd.
8F, A TOWER, 20, Gwacheondaero 7-gil, Gwacheon-si,
Gyeonggi-do, 13840, Republic of Korea
Phone: +82-2-6259-7300
Fax: +82-2-6259-7301

• Australia

Anritsu Pty. Ltd.
Unit 20, 21-35 Ricketts Road,
Mount Waverley, Victoria 3149, Australia
Phone: +61-3-9558-8177
Fax: +61-3-9558-8255

• Taiwan

Anritsu Company Inc.
7F, No. 316, Sec. 1, NeiHu Rd., Taipei 114, Taiwan
Phone: +886-2-8751-1816
Fax: +886-2-8751-1817