MP1900A Signal Quality Analyzer-R Operation Manual

Seventh Edition

For safety and warning information, please read this manual before attempting to use the equipment.

Keep this manual with the equipment.

ANRITSU CORPORATION

Document No.: M-W3911AE-7.0

Safety Symbols

To prevent the risk of personal injury or loss related to equipment malfunction, Anritsu Corporation uses the following safety symbols to indicate safety-related information. Ensure that you clearly understand the meanings of the symbols BEFORE using the equipment. Some or all of the following symbols may be used on all Anritsu equipment. In addition, there may be other labels attached to products that are not shown in the diagrams in this manual.

Symbols used in manual



DANGER

This indicates a very dangerous procedure that could result in serious injury or death if not performed properly.



⚠ WARNING

This indicates a hazardous procedure that could result in serious injury or death if not performed properly.




CAUTION

This indicates a hazardous procedure or danger that could result in light-to-severe injury, or loss related to equipment malfunction, if proper precautions are not taken.

Safety Symbols Used on Equipment and in Manual

The following safety symbols are used inside or on the equipment near operation locations to provide information about safety items and operation precautions. Ensure that you clearly understand the meanings of the symbols and take the necessary precautions BEFORE using the equipment.



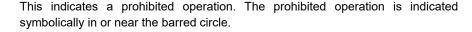




This indicates an obligatory safety precaution. The obligatory operation is indicated symbolically in or near the circle.



This indicates a warning or caution. The contents are indicated symbolically in or near the triangle.

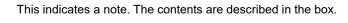





These indicate that the marked part should be recycled.

MP1900A Signal Quality Analyzer-R **Operation Manual**

19 June 2017 (First Edition) September 2019 (Seventh Edition)

Copyright © 2017-2019, ANRITSU CORPORATION.

All rights reserved. No part of this manual may be reproduced without the prior written permission of the

The contents of this manual may be changed without prior notice.

Printed in Japan



WARNING



- ALWAYS refer to the operation manual when working near locations at which the alert mark shown on the left is attached. If the advice in the operation manual is not followed, there is a risk of personal injury or reduced equipment performance. The alert mark shown on the left may also be used with other marks and descriptions to indicate other dangers.
- Overvoltage Category
 This equipment complies with overvoltage category II defined in IEC 61010. DO NOT connect this equipment to the power supply of overvoltage category III or IV.

Electric Shock

• To ensure that the equipment is grounded, always use the supplied 3-pin power cord, and insert the plug into an outlet with a ground terminal. If power is supplied without grounding the equipment, there is a risk of receiving a severe or fatal electric shock or causing damage to the internal components.

Repair

MARNING NO OPERATOR SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

Only qualified service personnel with a knowledge of electrical fire and shock hazards should service this equipment. This equipment cannot be repaired by the operator. DO NOT attempt to remove the equipment covers or unit covers or to disassemble internal components. There are high-voltage parts in this equipment presenting a risk of severe injury or fatal electric shock to untrained personnel. In addition, there is a risk of damage to precision components.

Calibration



• The performance-guarantee seal verifies the integrity of the equipment. To ensure the continued integrity of the equipment, only Anritsu service personnel, or service personnel of an Anritsu sales representative, should break this seal to repair or calibrate the equipment. Be careful not to break the seal by opening the equipment or unit covers. If the performance-guarantee seal is broken by you or a third party, the performance of the equipment cannot be guaranteed.



WARNING

Falling Over

 This equipment should always be positioned in the correct manner. If the cabinet is turned on its side, etc., it will be unstable and may be damaged if it falls over as a result of receiving a slight mechanical shock.

Always set up the equipment in a position where the power switch can be reached without difficulty.

LCD

This equipment uses a Liquid Crystal Display (LCD). DO NOT subject
the equipment to excessive force or drop it. If the LCD is subjected to
strong mechanical shock, it may break and liquid may leak.

This liquid is very caustic and poisonous.

DO NOT touch it, ingest it, or get in your eyes. If it is ingested accidentally, spit it out immediately, rinse your mouth with water and seek medical help. If it enters your eyes accidentally, do not rub your eyes, rinse them with clean running water and seek medical help. If the liquid gets on your skin or clothes, wash it off carefully and thoroughly with soap and water.



CAUTION

Cleaning

- Always remove the main power cable from the power outlet before cleaning dust around the power supply and fan.
 - Clean the power inlet regularly. If dust accumulates around the power pins, there is a risk of fire.
 - Keep the cooling fan clean so that the ventilation holes are not obstructed. If the ventilation is obstructed, the cabinet may overheat and catch fire.

Check Terminal



 Never input a signal of more than the indicated value between the measured terminal and ground. Input of an excessive signal may damage the equipment.

Static Sensitive



- Always take the following anti-static measures to prevent the internal circuit from being damaged when using a connector indicated by the symbol shown on the left.
 - Wear a wrist strap connected to the ground terminal of this equipment.
 - Connect the ground wires of this equipment, external measuring instruments and DUT before connecting a coaxial cable.
 - Eliminate static electricity charged between the cores and outer conductors of an external device and the coaxial cable, before connecting this equipment and the external device.



 This is a heavy object. When lifting and moving this equipment, always work in a group of two or more, or use a trolley. There is a risk of back injury, if this equipment is lifted or moved by one person.



CAUTION

External Storage Media

The MP1900A saves data and programs to an external storage media which has USB interface.

If this media is mishandled or becomes faulty, important data may be lost. It is recommended to periodically back up all important data and programs to protect them from being lost accidentally.

Anritsu will not be held responsible for lost data.

Pay careful attention to the following points.

- Never remove the memory card from the equipment while it is being accessed.
- The memory card may be damaged by static electric charges.
- Users should note that external storage media not shipped with this equipment may not have been tested by Anritsu, thus Anritsu cannot guarantee the performance or suitability of such media.

Hard disk

The equipment is equipped with an internal hard disk from which, as with any hard disk, data may be lost under certain conditions. It is recommended to periodically back up all important data and programs to protect them from being lost accidentally.

Anritsu will not be held responsible for lost data.

To reduce the possibility of data loss, particular attention should be given to the following points.

- The equipment should only be used within the recommend temperature range, and should not be used in locations where the temperature may fluctuate suddenly.
- Always follow the guidelines to ensure that the equipment is set up in the specified manner.
- · Always ensure that the fans at the rear and side of the equipment are not blocked or obstructed in any way.
- Exercise care not to bang or shake the equipment whilst the power is
- Never disconnect the mains power at the plug or cut the power at the breaker with the equipment turned on.



CAUTION

Lifetime of Parts

The life span of certain parts used in this equipment is determined by the operating time or the power-on time. Due consideration should be given to the life spans of these parts when performing continuous operation over an extended period. The safety of the equipment cannot be guaranteed if component parts are used beyond their life spans. These parts must be replaced at the customer's expense even if within the guaranteed period described in Warranty at the beginning of this manual. For details on life-span, refer to the corresponding section in this manual.

Parts with operating time-dependent life span: LCD backlight (40,000 hours)

Use in a Residential **Environment**

This equipment is designed for an industrial environment.

In a residential environment, this equipment may cause radio interference in which case the user may be required to take adequate measures.

Use in Corrosive Atmospheres

Exposure to corrosive gases such as hydrogen sulfide, sulfurous acid, and hydrogen chloride will cause faults and failures.

Note that some organic solvents release corrosive gases.

Equipment Certificate

Anritsu Corporation certifies that this equipment was tested before shipment using calibrated measuring instruments with direct traceability to public testing organizations recognized by national research laboratories, including the National Institute of Advanced Industrial Science and Technology, and the National Institute of Information and Communications Technology, and was found to meet the published specifications.

Anritsu Warranty

Anritsu Corporation will repair this equipment free-of-charge if a malfunction occurs within one year after shipment due to a manufacturing fault. However, software fixes will be made in accordance with the separate Software End-User License Agreement. Moreover, Anritsu Corporation will deem this warranty void when:

- The fault is outside the scope of the warranty conditions separately described in the operation manual.
- The fault is due to mishandling, misuse, or unauthorized modification or repair of the equipment by the customer.
- The fault is due to severe usage clearly exceeding normal usage.
- The fault is due to improper or insufficient maintenance by the customer.
- The fault is due to natural disaster, including fire, wind, flooding, earthquake, lightning strike, or volcanic ash, etc.
- The fault is due to damage caused by acts of destruction, including civil disturbance, riot, or war, etc.
- The fault is due to explosion, accident, or breakdown of any other machinery, facility, or plant, etc.
- The fault is due to use of non-specified peripheral or applied equipment or parts, or consumables, etc.
- The fault is due to use of a non-specified power supply or in a non-specified installation location.
- The fault is due to use in unusual environments (Note).
- The fault is due to activities or ingress of living organisms, such as insects, spiders, fungus, pollen, or seeds.

In addition, this warranty is valid only for the original equipment purchaser. It is not transferable if the equipment is resold.

Anritsu Corporation shall assume no liability for injury or financial loss of the customer due to the use of or a failure to be able to use this equipment.

Note:

For the purpose of this Warranty, "unusual environments" means use:

- In places of direct sunlight
- In dusty places
- Outdoors
- In liquids, such as water, oil, or organic solvents, and medical fluids, or places where these liquids may adhere
- In salty air or in place chemically active gases (sulfur dioxide, hydrogen sulfide, chlorine, ammonia, nitrogen dioxide, or hydrogen chloride etc.) are present
- In places where high-intensity static electric charges or electromagnetic fields are present
- In places where abnormal power voltages (high or low) or instantaneous power failures occur
- In places where condensation occurs
- In the presence of lubricating oil mists
- In places at an altitude of more than 2,000 m
- In the presence of frequent vibration or mechanical shock, such as in cars, ships, or airplanes

Anritsu Corporation Contact

In the event of this equipment malfunctions, contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

Software End-User License Agreement (EULA)

Please read this Software End-User License Agreement (hereafter this EULA) carefully before using (includes executing, copying, registering, etc.) this software (includes programs, databases, scenarios, etc., used to operate, set, etc., Anritsu electronic equipment). By reading this EULA and using this software, you are agreeing to be bound by the terms of its contents and Anritsu Corporation (hereafter Anritsu) hereby grants you the right to use this Software with the Anritsu-specified equipment (hereafter Equipment) for the purposes set out in this EULA.

1. Grant of License and Limitations

- 1. Regardless of whether this Software was purchased from or provided free-of-charge by Anritsu, you agree not to rent, lease, lend, or otherwise distribute this Software to third parties and further agree not to disassemble, recompile, reverse engineer, modify, or create derivative works of this Software.
- 2. You may make one copy of this Software for backup purposes only.
- 3. You are not permitted to reverse engineer this software.
- 4. This EULA allows you to install one copy of this Software on one piece of Equipment.

2. Disclaimers

To the extent not prohibited by law, in no event shall Anritsu be liable for personal injury, or any incidental, special, indirect or consequential damages whatsoever, including, without limitation, damages for loss of profits, loss of data, business interruption or any other commercial damages or losses, arising out of or related to your use or inability to use this Software.

3. Limitation of Liability

- a. If a fault (bug) is discovered in this Software, preventing operation as described in the operation manual or specifications whether or not the customer uses this software as described in the manual, Anritsu shall at its own discretion, fix the bug, or exchange the software, or suggest a workaround, free-of-charge. However, notwithstanding the above, the following items shall be excluded from repair and warranty.
 - If this Software is deemed to be used for purposes not described in the operation manual or specifications.
 - ii) If this Software is used in conjunction with other non-Anritsu-approved software.
 - iii) Recovery of lost or damaged data.
 - iv) If this Software or the Equipment has been modified, repaired, or otherwise altered without Anritsu's prior approval.
 - v) For any other reasons out of Anritsu's direct control and responsibility, such as but not limited to, natural disasters, software virus infections, etc.
- b. Expenses incurred for transport, hotel, daily allowance, etc., for on-site repairs by Anritsu engineers necessitated by the above faults shall be borne by you.
- c. The warranty period for faults listed in article 3a above covered by this EULA shall be either 6 months from the date of purchase of this Software or 30 days after the date of repair, whichever is longer.

4. Export Restrictions

You may not use or otherwise export or re-export directly or indirectly this Software except as authorized by Japanese and United States law. In particular, this software may not be exported or re-exported (a) into any Japanese or US embargoed countries or (b) to anyone on the Japanese or US Treasury Department's list of Specially Designated Nationals or the US Department of Commerce Denied Persons List or Entity List. By using this Software, you warrant that you are not located in any such country or on any such list. You also agree that you will not use this Software for any purposes prohibited by Japanese and US law, including, without limitation, the development, design and manufacture or production of missiles or nuclear, chemical or biological weapons of mass destruction.

5. Termination

Anritsu shall deem this EULA terminated if you violate any conditions described herein. This EULA shall also be terminated if the conditions herein cannot be continued for any good reason, such as violation of copyrights, patents, or other laws and ordinances.

6. Reparations

If Anritsu suffers any loss, financial or otherwise, due to your violation of the terms of this EULA, Anritsu shall have the right to seek proportional damages from you.

7. Responsibility after Termination

Upon termination of this EULA in accordance with item 5, you shall cease all use of this Software immediately and shall as directed by Anritsu either destroy or return this Software and any backup copies, full or partial, to Anritsu.

8. Dispute Resolution

If matters of dispute or items not covered by this EULA arise, they shall be resolved by negotiations in good faith between you and Anritsu.

9. Court of Jurisdiction

This EULA shall be interpreted in accordance with Japanese law and any disputes that cannot be resolved by negotiation described in Article 8 shall be settled by the Japanese courts.

Notes On Export Management

This product and its manuals may require an Export License/Approval by the Government of the product's country of origin for re-export from your country.

Before re-exporting the product or manuals, please contact us to confirm whether they are export-controlled items or not.

When you dispose of export-controlled items, the products/manuals need to be broken/shredded so as not to be unlawfully used for military purpose.

Notice

The following actions are strictly prohibited for all of the software installed in this product or otherwise provided by Anritsu:

- 1. Copying, except for archival purposes.
- 2. Transferring to a third party separately from this product.
- 3. Analyzing the incorporated software including but not limited to modifying, decompiling, disassembling, and reverse engineering.

Cautions against computer virus infection

· Copying files and data

Only files that have been provided directly from Anritsu or generated using Anritsu equipment should be copied to the instrument. All other required files should be transferred by means of USB or CompactFlash media after undergoing a thorough virus check.

Adding software

Do not download or install software that has not been specifically recommended or licensed by Anritsu.

Network connections

Ensure that the network has sufficient anti-virus security protection in place.

Protection against malware (intentionally harmful software) and virus.

This equipment runs on Windows Operating System.

To connect This equipment to network, the following is advised.

- · Activate Firewall.
- Install important updates of Windows.
- Use antivirus software.

FOR CALIFORNIA USA ONLY

This product contains a CR Coin Lithium Battery which contains
Perchlorate Material – special handling may apply; See
www.dtsc.ca.gov/hazardouswaste/perchlorate

Crossed-out Wheeled Bin Symbol

Equipment marked with the Crossed-out Wheeled Bin Symbol complies with council directive 2012/19/EU (the "WEEE Directive") in European Union.



For Products placed on the EU market after August 13, 2005, please contact your local Anritsu representative at the end of the product's useful life to arrange disposal in accordance with your initial contract and the local law.

CE Conformity Marking

Anritsu affixes the CE conformity marking on the following product(s) in accordance with the Decision 768/2008/EC to indicate that they conform to the EMC, LVD, and RoHS directive of the European Union (EU).

CE marking



1. Product Model

Model: MP1900A Signal Quality Analyzer-R

2. Applied Directive

EMC: Directive 2014/30/EU LVD: Directive 2014/35/EU RoHS: Directive 2011/65/EU

3. Applied Standards

EMC: Emission: EN 61326-1: 2013 (Class A)
 Immunity: EN 61326-1: 2013 (Table 2)

	Performance Criteria*
IEC 61000-4-2 (ESD)	В
IEC 61000-4-3 (EMF)	Α
IEC 61000-4-4 (Burst)	В
IEC 61000-4-5 (Surge)	В
IEC 61000-4-6 (CRF)	Α
IEC 61000-4-8 (RPFMF)	Α
IEC 61000-4-11 (V dip/short)	B, C

*: Performance Criteria

A: The equipment shall continue to operate as intended during and after the test. No degradation of performance or loss of function is allowed below a performance level specified by the manufacturer, when the equipment is used as intended.

The performance level may be replaced by a permissible loss of performance. If the minimum performance level or the permissible performance loss is not specified by the manufacturer, either of these may be derived from the product description and documentation and what the user may reasonably expect from the equipment if used as intended.

- B: The equipment shall continue to operate as intended after the test. No degradation of performance or loss of function is allowed below a performance level specified by the manufacturer, when the equipment is used as intended. The performance level may be replaced by a permissible loss of performance. During the test, degradation of performance is however allowed. No change of actual operating state or stored data is allowed. If the minimum performance level or the permissible performance loss is not specified by the manufacturer, either of these may be derived from the product description and documentation and what the user may reasonably expect from the equipment if used as intended.
- C: Temporary loss of function is allowed, provided the function is self-recoverable or can be restored by the operation of the controls.

Harmonic current emissions:

EN 61000-3-2: 2014 (Class A equipment)

No limits apply to this equipment with an active input power under 75 W.

• LVD: EN 61010-1: 2010 (Pollution Degree 2)

• RoHS: EN 50581: 2012 (Category 9)

If the third digit of the serial number is "7", the product complies with Directive 2011/65/EU as amended by (EU) 2015/863.

(Pb,Cd,Cr6+,Hg,PBB,PBDE,DEHP,BBP,DBP,DIBP) If the third digit of the serial number is "6", the product complies with Directive 2011/65/EU.

(Pb,Cd,Cr6+,Hg,PBB,PBDE)



4. Contact

Name: Anritsu GmbH

Address, city: Nemetschek Haus, Konrad-Zuse-Platz 1

81829 München,

Country: Germany

Name: ANRITSU EMEA Ltd.

Address, city: 200 Capability Green, Luton

Bedfordshire, LU1 3LU

Country: United Kingdom

RCM Conformity Marking

Anritsu affixes the RCM mark on the following product(s) in accordance with the regulation to indicate that they conform to the EMC framework of Australia/New Zealand.

RCM marking



1. Product Model

Model: MP1900A Signal Quality Analyzer-R

2. Applied Standards

EMC: Emission: EN 61326-1: 2013 (Class A equipment)

About Eco label



The label shown on the left is attached to Anritsu products meeting our environmental standards.

Details about this label and the environmental standards are available on the Anritsu website at https://www.anritsu.com

About This Manual

A testing system combining an MP1900A Signal Quality Analyzer-R, module(s), and control software is called the Signal Quality Analyzer-R Series. The operation manuals of the Signal Quality Analyzer-R Series consist of separate documents for MP1900A, module(s), and control software, as shown below.

Configuration o	of Signal Quality Analyzer-R Series Operation indicates this document.
	MP1900A Signal Quality Analyzer-R Operation Manual
	Describes the basic operations, panel details, and maintenance of the MP1900A, as well as the steps from module installation to the start of use.
	Module Operation Manual
	MU195020A 21G/32G bit/s SI PPG MU195040A 21G/32G bit/s SI ED MU195050A Noise Generator Operation Manual
	Describes the panel details, how to operate, performance test, maintenance, and troubleshooting of the module to be installed on the MP1900A.
	MU196020A PAM4 PPG MU196040A PAM4 ED MU196040B PAM4 ED Operation Manual
	Describes the panel details, performance test, maintenance, and troubleshooting of the MU196020A, MU196040A, and MU196040B.
	MU181000A 12.5GHz Synthesizer MU181000B 12.5GHz 4 port Synthesizer Operation Manual
	Describes the panel details, how to operate, performance test, maintenance, and troubleshooting of the MU181000A and MU181000B.
	MU181500B Jitter Modulation Source Operation Manual
	Describes the panel details, how to operate, performance test and maintenance of the MU181500B.
-	MU183020A 28G/32G bit/s PPG MU183021A 28G/32G bit/s 4ch PPG Operation Manual
	Describes the panel details, performance test, maintenance, and troubleshooting of the MU183020A and MU183021A.
	MU183040A 28G/32G bit/s ED MU183041A 28G/32G bit/s 4ch ED
	MU183040B 28G/32G bit/s High Sensitivity ED MU183041B 28G/32G bit/s 4ch High Sensitivity ED Operation Manual

Describes the panel details, how to operate, performance test, maintenance, and troubleshooting of the MU183040A, MU183041A, MU183040B, and MU183041B.

Configuratio	on of Signal Quality Analyzer-R Series Operation (Cont'd) indicates this document.
	MX190000A Signal Quality Analyzer-R Control Software Operation Manual
	Describes the operation of the software that controls the Signal Quality Analyzer-I Series.
	Extended Application Operation Manual
	Describes the operation of the extended application for the Signal Quality Analyzer-R Series.
	MX183000A High-Speed Serial Data Test Software Operation Manual
	Describes the setup and operating procedure of MX183000A.

Table of Contents

For Safe	ety	iii
About T	his Manual	I
1.1 1.2 1.3	Product Overview	1-2 1-3
	'2 Panels and Connections Front Panel Rear Panel	2-12-22-3
Chapter	3 Preparation Before Use	3-1
3.2 3.3 3.4 3.5 3.6 3.7 3.8	Distance from Fan	3-3 3-4 3-9 3-11 3-12 3-14
Chapter 4.1 4.2	* 4 Start/Stop Procedures Start Procedure	4-2

Chapte	r 5 Remote Control	5-1
5.1	Remote Interface Settings	5-2
5.2	Using Ethernet	
5.3	Using GPIB	5-7
Chapte	r 6 Installing MX190000A	6-1
6.1	Installing MX190000A	
Chapte	r 7 Troubleshooting	7-1
7.1	Problems upon Power-on	7-2
7.2	Problem upon Module Replacement	7-3
7.3	Software Problems	7-4
Chapte	r 8 Maintenance	8-1
8.1	Daily Maintenance	8-2
8.2	Touch Panel Calibration	
8.3	System Recovery Function	8-5
8.4	Caution on Storage	8-13
8.5	Transportation	8-14
8.6	Calibration	8-15
8.7	Disposal	8-16

Chapter 1 Overview

This chapter provides an overview and the specifications of the MP1900A Signal Quality Analyzer-R (hereinafter, referred to as "MP1900A").

1.1	Produc	ct Overview	1-2
1.2	Produc	ct Configuration	1-3
	1.2.1	Standard Configuration	1-3
	1.2.2	Optional Accessories	1-5
1.3	Specif	ications	1-6

1.1 Product Overview

By installing various plug-in modules (hereinafter, referred to as "module"), the MP1900A can support research, development and production of module devices for the optical communication market or high-speed bus interface such as PCI Express. The MP1900A is also useful for research and development for the next-generation communication market, including optical packet transmission.

Up to 8 modules can be installed into the MP1900A. The MP1900A is equipped with touchpanel LCDs, keys and a rotary encoder for easy operation. Remote control can also be performed by adding the GPIB or LAN.

The latest information on modules that can be installed to the MP1900A is available on the Anritsu website at https://www.anritsu.com.

1.2 Product Configuration

1.2.1 Standard Configuration

The MP1900A can operate alone, without an external control PC.

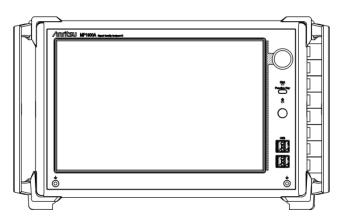


Figure 1.2.1-1 MP1900A appearance

Table 1.2.1-1 shows the standard configuration of the MP1900A. The latest information is available on the Anritsu website.

https://www.anritsu.com/en-us/test-measurement/products/mp1900a

Table 1.2.1-1 Standard Configuration

Item	Model	Product Name	Q'ty	Remarks
Main unit	MP1900A	Signal Quality Analyzer-R	1	
Accessories	G0342A	ESD Discharger	1	
		Power Cord, 3M	1	
	J1627A	GND connection cable	1	
	P0031A	USB Memory	1	Stores the latest set of the operation manuals, the MX190000A Software and MX183000A Software.
	Z0306A	Wrist strap	1	

Module insertion slots

The MP1900A is equipped with slots for installing up to 8 modules into the side panel.

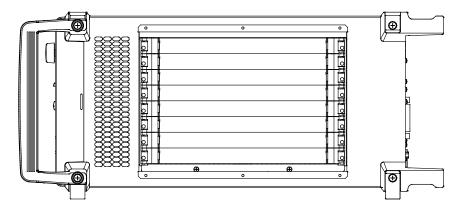


Figure 1.2.1-2 MP1900A Side Panel

The following modules are installable to the MP1900A.

Model **Product Name** MU195020A* 21G/32G bit/s SI PPG MU195040A* 21G/32G bit/s SI ED MU195050A* Noise Generator MU196020A* PAM4 PPG MU196040A* PAM4 ED MU196040B* PAM4 ED MU181000A 12.5GHz Synthesizer MU181000B 12.5GHz 4port Synthesizer MU181500B Jitter Modulation Source 28G/32G bit/s PPG MU183020A* MU183021A* 28G/32G bit/s 4ch PPG MU183040B* 28G/32G bit/s High Sensitivity ED MU183041B* 28G/32G bit/s 4ch High Sensitivity ED

Table 1.2.1-2 Installable Modules

*: The module has restrictions on installation positions and a number to install.

For the latest information of the modules that are installable to the MP1900A, refer to the Anritsu web site (https://www.anritsu.com).

1.2.2 Optional Accessories

Table 1.2.2-1 shows the options for the MP1900A. All options are sold separately.

Table 1.2.2-1 Optional Accessories

Model	Product Name	Remarks
B0736A	Front Cover (For MP1900A)	Necessary to put the MP1900A into the carrying case.
B0737A	Carrying Case (For MP1900A)	
B0738A	Rack Mount Kit (For MP1900A)	
J0008	GPIB CABLE, 2.0 m	2 m
W3813AE	MX183000A Operation Manual	Printed version
W3911AE	MP1900A Operation Manual	Printed version
W3915AE	MU195020/40/50A Operation Manual	Printed version
W3976AE	MU196020/40A/40B Operation Manual	Printed version
W3913AE	MX190000A Operation Manual	Printed version
Z0541A	USB Mouse	
Z0917A	Shielded LAN Cable, 5m	Shielded LAN cable, 5 m
Z1746A	Stylus	
Z1953A	Gigabit Ethernet Switch (5Port)	5 ports
B0576A	Blank Panel	
Z1964A	Torque Wrench (Right Angle)	

1.3 Specifications

Table 1.3-1 MP1900A Specifications

No.	Item	Specifications	
1	Functions		
1.1	Input device, button	Resistance film touch panel, Rotary encoder, Function button, Power button	
1.2	LED	Power, Power Standby, Disk Access	
1.3	LCD	12.1 inch WXGA (1280 × 800)	
1.4	Ethernet	Rear panel 10/100/1000 Base-T RJ45 1 port (External: For remote control)	
		Rear panel 10/100/1000 Base-T RJ45 1 port (Internal: Reserved for future use)	
1.5	External Display VGA/HDMI	Rear panel D-Sub 15pin 1 port Rear panel HDMI Type A 1 port	
1.6	USB	Front panel USB Type A 4 port Rear panel USB Type A 2 port	
1.7	GPIB	Rear panel 1 port (For remote control)	
1.8	Module slot	8 Slots (Slot1 to Slot8)	
1.9	Functional earth terminal	Front panel 2 jacks Rear panel 1 terminal	
1.10	os	Windows embedded standard 7	
1.11	Internal storage device	SATA 2.5-inch HDD 1 Unit (tray loading)*1	
1.12	Function	System and measurement sound output	
		Software-defined functions button	
1.13	Remote interface	GPIB, Ethernet External (automatic switchover)	
1.14	Internal reference clock	10 MHz ± 1 ppm (Accuracy at initial shipment)	
2	Environmental performance		
	Power supply*2	AC 100 to 120 V, 200 to 240 V (automatic switching between 100 and 200 V systems), 50 to 60 Hz	
	Power consumption	1350 VA	
	Operating temperature range	+5 to +40°C (without condensation)	
	Storage temperature range	-20 to +60°C (Recommended storage temperature range: +5 to +30°C)	
3	Mechanical measurements		
	Dimensions	222.5 mm (H) \times 340 mm (W) \times 451 mm (D) (Protrusions excluded)	
	Mass	≤ 20 kg (excluding modules, blank panels, protective cover, power cord)	

^{*1:} Removing and replacing the HDD by Customer is outside the scope of warranty coverage.

The information on options and application parts for the MP1900A is available on the Anritsu website at https://www.anritsu.com.

^{*2:} Operating voltage is -10 to +10% of rated voltage

2

Chapter 2 Panels and Connections

This section describes panels and connections of the MP1900A

2.1	Front Panel	2-2
2.2	Rear Panel	2-3
2.3	Side Panel	2-4

2.1 Front Panel

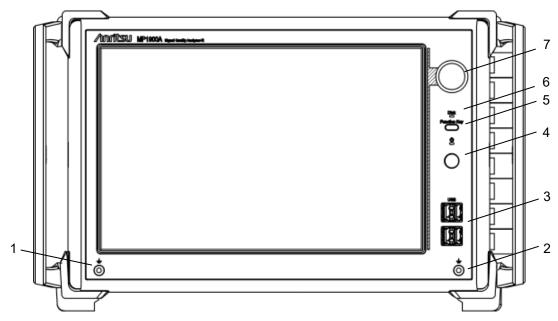


Figure 2.1-1 Front panel

Table 2.1-1 Front panel

No.	Name	Function
1 2	GND terminal	Connects to the wrist strap during operation, as a countermeasure against static electricity. Be sure to use the wrist strap when using the MP1900A.
3	USB ports	Four Revision 2.0 USB ports are provided. Turn the connected peripherals off before turning off the MP1900A.
4	Power switch	Turns the power to the MP1900A on/off. When this switch is turned off while the power cord is connected, the Standby LED above the switch lights. When the power is automatically turned off because of the temperature abnormality, the Standby LED flashes. In this case, unplug the power cord to turn off the Standby LED entirely.
5	Function Key	Software-defined functionkey. For details, refer to Chapter 3 "Basic Operations" in the MX190000A Signal Quality Analyzer-R Control Software Operation Manual.
6	HDD access LED	Turns on when the internal HDD is accessed.
7	Rotary encoder	Rotate to increase/decrease the numeric value.

2.2 Rear Panel

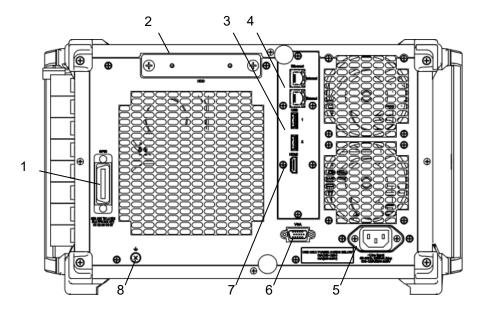


Figure 2.2-1 Rear panel

Table 2.2-1 Rear panel

No.	Name	Function	
1	GPIB connector	The GPIB connector. Connect a cable to the GPIB connector on the rear panel before turning on the MP1900A. Connection after turning it on may cause failure.	
2	HDD	Slot to install a 2.5-inch HDD. Open the cover when replacing the HDD.	
3	USB port	Two Revision 3.0 USB ports are provided. Turn off the connected peripherals before turning off the MP1900A.	
4	Ethernet connector	RJ45 for Internal, RJ45 for External 10/100/1000BASE are supported. Internal: Reserved for future use. External: Connectable to network This is an interface for remote control. Refer to 5.2 "Using Ethernet" for detail	
5	Inlet	Connect to a 100 to 120 Vac or to a 200 to 240 Vac power supply via the 3-pin power cord.	
6	VGA	VGA connector to display the screen to an external display device.	
7	HDMI	HDMI connector to display the screen to an external display device.	
8	Functional GND terminal	GND terminal for ESD (ElectroStatic Discharge) Connect to Device under test with cables for common grounding.	

2.3 Side Panel

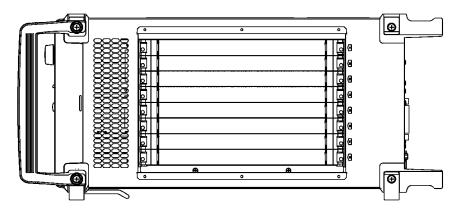


Figure 2.3-1 Side panel

Eight slots for installing modules are provided on the left side. See 3.3 "Installing and Removing Modules" for how to install/remove the module to/from the slots.

Chapter 3 Preparation Before Use

This chapter describes preparations required before starting measurements.

3.1	Environmental Conditions of Installation Site 3-2		
3.2	Distan	Distance from Fan3-3	
3.3	Installing and Removing Modules		3-4
	3.3.1	Installing modules	3-4
	3.3.2	Removing modules	3-7
3.4	Power Connection		3-9
	3.4.1	Power Requirements	3-9
	3.4.2	Connecting the Power Cord	3-9
3.5	Measures Against EOS and ESD		3-11
	3.5.1	How to use the GND connection cable	3-11
	3.5.2	How to use the ESD Discharger	3-11
3.6	Conne	ecting with Peripheral Devices	3-12
3.7	Conne	ecting Network	3-14
3.8	Windows Security Measures		3-15
	3.8.1	Activating Firewall	3-16
	3.8.2	3.8.2 Installing Windows Important Update Programs	
		(Windows Update)	3-18
	3.8.3	Using Antivirus Software	3-20

3.1 Environmental Conditions of Installation Site

The MP1900A operates in the temperature range from 5 to 40°C. Avoid using it under any of the following environment conditions which may cause failure.

- Strong vibrations
- High humidity or dust
- Direct sunlight
- Chemically active gases
- Substantial temperature changes

Note:

Dew may form inside of the MP1900A if it is moved to a warm location after operating for a long time in a cool location. In such a case, be sure to wait until the MP1900A becomes completely dry before turning on the power switch. Doing so with condensation present may cause a short circuit and damage the MP1900A.

Install the MP1900A horizontally as shown in Figure 3.1-1.

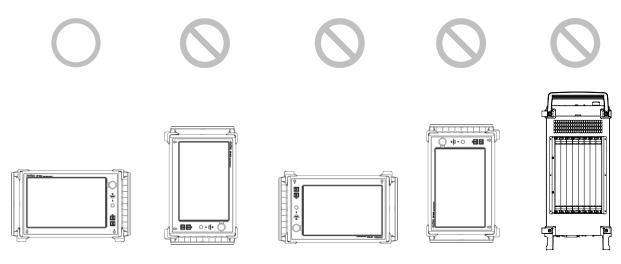


Figure 3.1-1 Installation Orientation



If the MP1900A is not installed in a "good" direction as above, a small shock may turn it over and harm the user.

3.2 Distance from Fan

A cooling fan is provided at the rear of the MP1900A. Install the MP1900A at least 10 cm away from walls, peripheral devices, or the like to prevent blockage of ventilation. Insufficient ventilation may cause the internal temperature to rise, resulting in failure.

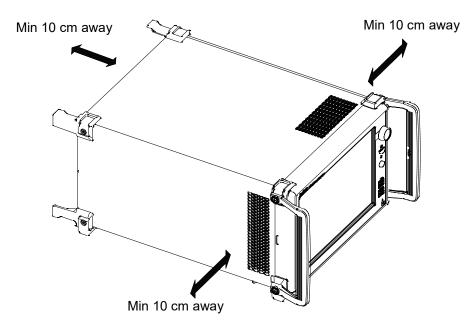


Figure 3.2-1 Distance from fan

3.3 Installing and Removing Modules

Slots from the module are Slot1, Slot2, Slot3, Slot4, Slot5, Slot6, Slot7, Slot8 from the top.

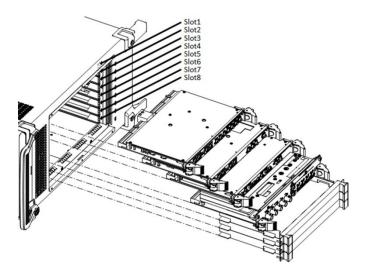


Figure 3.3-1 MP1900A modules

3.3.1 Installing modules

- 1. Disconnect the power cord.
- 2. Fully insert a module, sliding along the grooves.
- 3. Check that the module ejectors are set facing out. Fit the hooks into holes on the chassis.

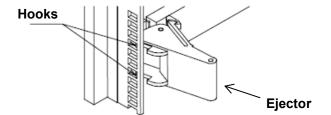


Figure 3.3.1-1 Module hooks

4. Upon insertion, use a Phillips screwdriver to tighten the screws on both the left and right sides of the module.


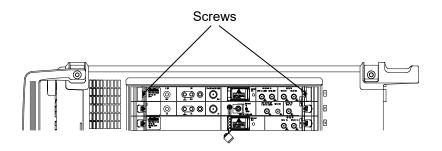


Figure 3.3.1-2 Module screws




CAUTION

- Be sure to check that the power cord of the MP1900A is disconnected before installing the modules. Installing modules with the power cord connected may result in failure.
- Take countermeasures against static electricity (ESD) when installing modules. Failure to do so may result in failure.
- Make sure to insert the module completely horizontally into the groove (see the figure below). Failure to do so may deform the metal spring on top of the modules.

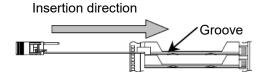

Correct: plug-in module horizontal to grooves

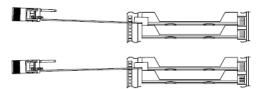

Incorrect: plug-in module not horizontal to grooves

Figure 3.3.1-3 Module insertion

Do not touch any electric component mounting surface.
 Doing so may damage the components.

CAUTION

- Be careful not to catch your fingers when manipulating the ejector. Doing so may cause injury.
- Tighten the left and right screws after inserting a module. Failure to do so may cause malfunction or failure of the module, or allow it to drop out when transported.
- Attach a blank panel to every slot where no module is installed. Not attaching blank panels may result in failure due to air currents or internal temperature rise.

3.3.2 Removing modules

- 1. Disconnect the power cord.
- 2. Loosen the left and right screws on the module to be removed.

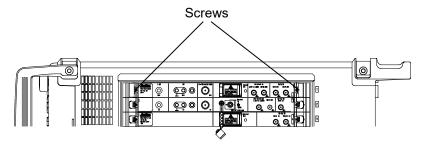


Figure 3.3.2-1 Modules screws

- 3. Press the red ejector lock buttons on both sides of the module to unlock the ejector.
- 4. Set the ejectors to the outside.
- 5. Hold the ejectors and gently pull out the module.


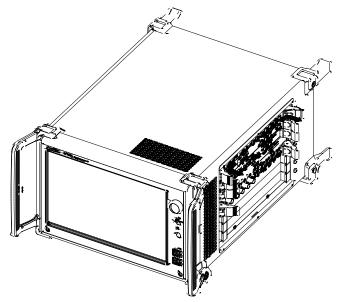


Figure 3.3.2-2 Modules ejectors




CAUTION

- Be sure to check that the power cord of the MP1900A is disconnected before pulling out the modules. Pulling out modules with the power cord connected may result in failure.
- Take countermeasures against static electricity (ESD) when pulling out modules. Failure to do so may result in failure.
- Make sure to pull out the module completely horizontally from the grooves (see the figure below). Failure to do so may deform the metal spring on top of the modules.

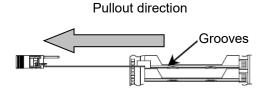

Correct: plug-in module horizontal to grooves

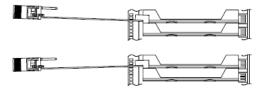

Incorrect: plug-in module not horizontal to grooves

Figure 3.3.2-3 Module pullout

- Do not touch any electric component mounting surface. Doing so may damage the components.
- . Be careful not to catch your fingers when manipulating the ejector. Doing so may cause injury.
- · Be sure to loosen the left and right screws on the module and to release the ejector lock before setting the ejector outside. Failure to do so may damage the ejector.

3.4 Power Connection

This section describes the procedures for supplying power.

3.4.1 Power Requirements

For normal operation of the MP1900A, observe the power voltage range described below.

Power source	Voltage range	Frequency
100 Vac system	100 to 120 V	50 to 60 Hz
200 Vac system	200 to 240 V	50 to 60 Hz

Changeover between 100 and 200 V systems is made automatically.



CAUTION

Supplying power exceeding the above range may result in electrical shock, fire, failure, or malfunction.

3.4.2 Connecting the Power Cord

Insert the power plug into an outlet, and connect the other end to the power inlet on the rear panel. To ensure that the MP1900A is grounded, always use the supplied 3-pin power cord, and insert the plug into an outlet with an GND terminal. When the power cord is connected, the Standby LED is lit and the MP1900A enters the standby status.



WARNING

If the MP1900A is connected to an ungrounded outlet, there is a risk of receiving a fatal electric shock. In addition, the peripheral devices connected to the instrument may be damaged.

Always connect the MP1900A to a properly grounded outlet. Do not use the instrument with an extension cord or transformer that does not have a ground wire.

Unless otherwise specified, the signal-connector ground terminal, like an external conductor of the coaxial connector, of the instrument is properly grounded when connecting the power cord to a grounded outlet. Connect the ground terminal of DUT to a ground having the same potential before connecting with the instrument. Failure to do so may result in an electric shock, fire, failure, or malfunction.



CAUTION

If an emergency arises causing the MP1900A to fail or malfunction, disconnect the MP1900A from the power supply by disconnecting either end of the power cord.

When installing the MP1900A, arrange the power inlet and outlet so that an operator may easily connect or disconnect the power cord. Moreover, DO NOT fix the power cord around the plug and the power inlet with a holding clamp or similar device.

If the MP1900A is mounted in a rack, a power switch for the rack or a circuit breaker may be used for power disconnection.

It should be noted that, the power switch on the front panel of the MP1900A is a standby switch, and cannot be used to cut the main power.

The MP1900A has an internal hard disk drive. Do not remove the power cord during startup of the MP1900A, except for an emergency.

3.5 Measures Against EOS and ESD

This section describes how to prevent MP1900A from being damaged by electrical over-stress (EOS) or electrostatic discharge (ESD).

3.5.1 How to use the GND connection cable

There is a risk of damaging MP1900A due to EOS if MP1900A and other peripheral equipment (including experimental circuits) are not connected to the common ground.

When connecting MP1900A and other peripheral (including experimental circuits), connect other peripheral equipment to the ground terminal of MP1900A's chassis with the GND connection cable before connecting the I/O connectors.

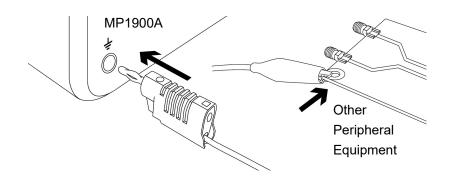


Figure 3.5.1-1 How to Use the GND Connection Cable

3.5.2 How to use the ESD Discharger

There is a risk of damaging MP1900A if the coaxial cable you connect to MP1900A is charged electrostatically.

To prevent MP1900A from being damaged by ESD, remove electrostatic charges from the cable by using the ESD Discharger before cabling the connectors.

The ESD Discharger can be used with one of SMA connector (and its compatible connector) and V connector (and its compatible connector).

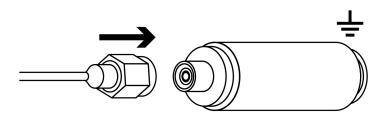


Figure 3.5.2-1 How to Use the ESD Discharger

3.6 Connecting with Peripheral Devices

USB mouse, keyboard and other USB devices
 Connect a cable with a Type A connector to the USB port on the front
 or rear panel. Turn off the connected devices before turning off the
 MP1900A.

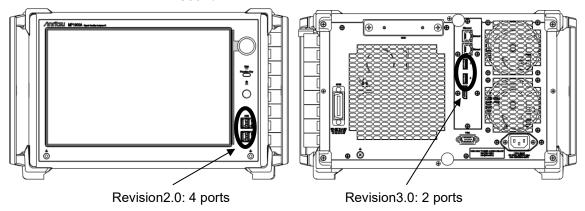


Figure 3.6-1 USB interface

- 2. The MP1900A has four USB Revision 2.0 ports on the front panel and two USB Revision 3.0 ports on the rear panel as standard. Use the USB ports to connect the USB mouse or a keyboard.
- 3. Ethernet
 Connect the RJ modular plug of a 10 BASE-T, 100 BASE-TX or
 1000BASE-TX cable to the RJ45 connector on the rear panel. Refer to
 5.2 "Using Ethernet" for details.
- Before turning on the MP1900A, connect the display cable to the HDMI or VGA connector on the rear panel. The external display can be used when the MP1900A is turned on. Connecting after the MP1900A has been turned on may cause failure. Turn off the display before turning off the MP1900A.

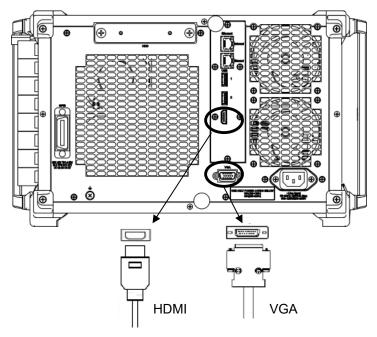


Figure 3.6-2 Display interface

5. A D-SUB 15 pins connector and a HDMI Type A connector are provided on MP1900A's rear panel as a standard feature. When the resolution is set to 1280 × 800 pixels, simultaneous display on the external display and the built-in LCD of the MP1900A can be performed.

6. GPIB

Connect a cable to the GPIB connector on the rear of the MP1900A before turning on the MP1900A. Connecting after the MP1900A has been turned on may cause failure. Refer to 5.3 "Using GPIB" for details.

3.7 Connecting Network

When connecting the MP1900A to a network, be sure to set the IP address using Network Connections on Windows, so as not to conflict with the IP address of any other device on the network. Consult your network administrator for available IP address. Refer to 5.2 "Using Ethernet" for the IP address setting procedure. Do not connect the MP1900A to a network which has possibly been invaded by a virus.

3.8 Windows Security Measures

MP1900A uses Windows Embedded Standard 7 (WES7) 64bit version. When connecting MP1900A to a network, in addition to connecting to secure and virus-protected networks, the following procedures are recommended in order to add protection against malware (malicious software) and viruses.

- Activating firewall
- Installing Windows important update programs
- Using antivirus software

The security measure settings condition of this product can be confirmed from the Control Panel of Windows.

- 1. Click **Start** \rightarrow **Control Panel** from the Windows menu bar hidden in the lower part of the screen.
- 2. Click System and Security \rightarrow Action Center.
- 3. Click **Security**, and confirm security measures settings condition.

Note:

Security warnings are not displayed by factory default.



CAUTION

When connecting MP1900A to the Internet or to an external network, there is a possibility an unpredictable problem or damage may occur. Anritsu Corporation does not recompense for any damage caused by connecting MP1900A to a network.

3.8.1 Activating Firewall

It is recommended to turn On the Windows firewall on MP1900A.

Windows firewall On/Off setting:

- 1. Click **Start** \rightarrow **Control Panel** from the Windows menu bar hidden in the lower part of the screen.
- 2. Click **System and Security** →**Windows Firewall** to show Windows Firewall window.

Note:

Windows Firewall is On when MP1900A is shipped from factory. The settings to allow external communications are already done so that MP1900A is operated properly by remote-control, etc. Thus, additional settings are unnecessary.

 Click Turn Windows Firewall on or off found in left side of Windows Firewall window.

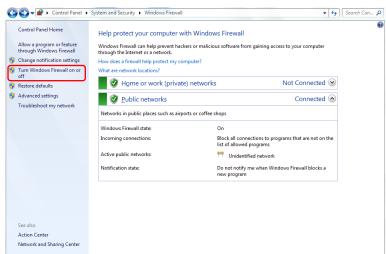


Figure 3.8.1-1 Windows Firewall Window

4. Customize Settings window will be shown where Windows firewall On/Off settings can be changed.

Use MP1900A with the following checkboxes Off (unchecked).

- Block all incoming connections, including those in the list of allowed programs
- Notify me when Windows Firewall blocks a new program

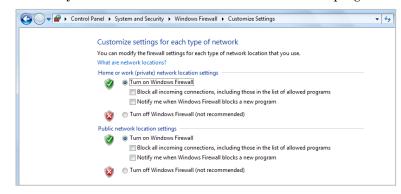


Figure 3.8.1-2 Customize Settings Window

3.8.2 Installing Windows Important Update Programs (Windows Update)

It is necessary to regularly check for important Windows update programs and keep them up-to-date. However, since executing update program downloads and installations will decrease the performance of MP1900A, deactivate automatic updates for Windows Update. Instead, it is recommended to check for new updates, execute downloads and installations periodically when MP1900A is not in use for measurement.

Windows Update setting and execution:

- 1. Click **Start** \rightarrow **Control Panel** from the Windows menu bar hidden in the lower part of the screen.
- Click System and Security → Windows Update to show Windows Update window.
- 3. To deactivate automatic updates, click **Change settings** found in left side of Windows Update window.



Figure 3.8.2-1 Windows Update Window

4. Select **Never check for updates (not recommended)** in Important updates, then click **OK**.

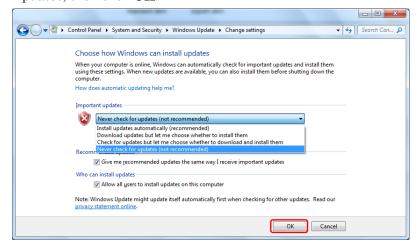


Figure 3.8.2-2 Change settings Window

 To check for newly available update programs (manual update), click Check for updates in Windows Update window.

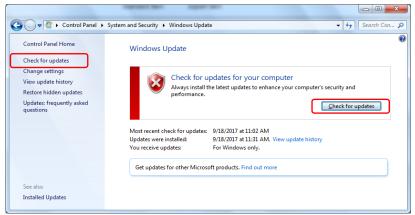


Figure 3.8.2-3 Windows Update Window (manual update)

6. When a new update program is found, download and install following the displayed instructions.

3.8.3 Using Antivirus Software

It is recommended to install antivirus software on MP1900A. However, since the automatic updates for virus data library and the full scans run in the background by the antivirus software will decrease the performance of MP1900A, do not execute them. Instead, it is recommended to run them periodically when MP1900A is not in use for measurement.

The antivirus software that checked operation in MP1900A is shown below.

- Trend Micro OfficeScan XG
- Norton Security Deluxe (confirmed by version 22.11.0.41)

Note:

Refer to the antivirus software operation manual for its installation and operation procedures. Although it is confirmed that no negative effects in the general usage of MP1900A are caused by using the software mentioned above, there is no guarantee for different software even if containing similar functions.

Chapter 4 Start/Stop Procedures

This chapter describes the start and stop procedures of the application software for using the MP1900A.

4.1	Start Procedure4	-2
4.2	Stop Procedure4	-3

4.1 Start Procedure

At non-standby status (when Standby LED is off)

(1) When the power cord is connected, the Standby LED is lit and the MP1900A enters the standby status.

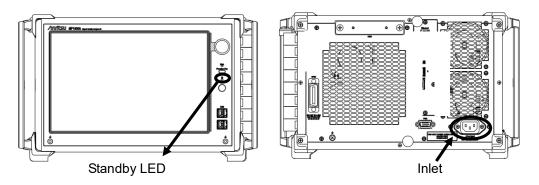


Figure 4.1-1 Front and rear panels

At standby status (when Standby LED is on)

- (1) Turn on the power switch of the MP1900A.

 The power lamp is lit and Windows starts.
- (2) After starting Windows, the Application Selector screen is displayed. Touch the icon of the application to be started. For details of the Application Selector screen, refer to the MX190000A Signal Quality Analyzer-R Control Software Operation Manual.

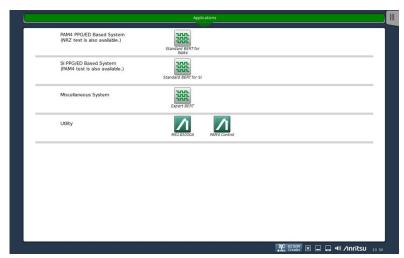


Figure 4.1-2 Application Selector screen

4.2 Stop Procedure

(1) Press and hold the power switch on the front panel. The Power lamp goes off, and then the Standby LED lights up (enters standby status).



CAUTION

The MP1900A has an internal hard disk drive. Do not remove the power cord during startup of the MP1900A, except for an emergency

Chapter 5 Remote Control

Remote control of the MP1900A can be performed via Ethernet or GPIB interface. This chapter describes the remote control procedure.

5.1	Remote Interface Settings	. 5-2
5.2	Using Ethernet	. 5-5
5.3	Using GPIB	. 5-7

5.1 Remote Interface Settings

To remote-control the MP1900A by using the remote interface, set the remote interface from **Remote Control**. Start the application after the MP1900A has started, and select **Remote Control** on the General Settings window.

Refer to MX190000A Signal Quality Analyzer-R Control Software Operation Manual for details of System Toolbar.

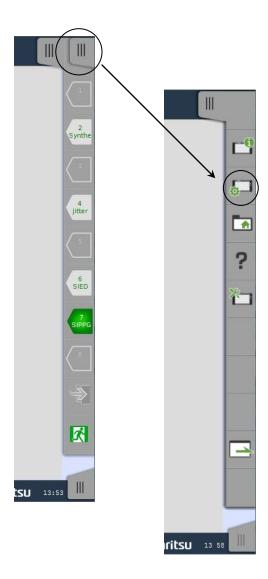


Figure 5.1-1 System Toolbar

Tap the Navigation Tab on the upper right corner of the screen to display the System Toolbar. Then Touch

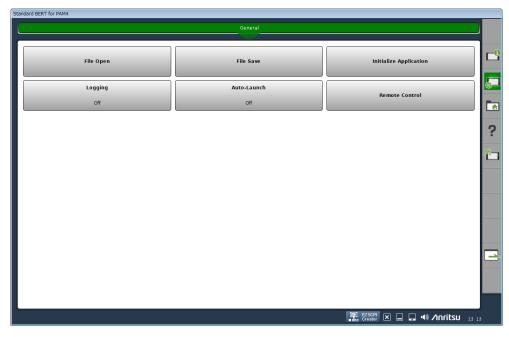


Figure 5.1-2 General Settings Window

Next, touch **Remote Control** to display a dialog box for setting remote control. Set TCP port number and GPIB address for the MP1900A.

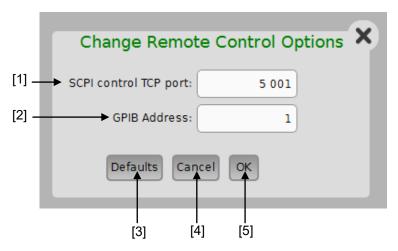


Figure 5.1-3 Remote Control Dialog Box

Table 5.1-1 Remote Control setting

No.	Туре	Function/operation	
[1]	SCPI control TCP port	Set the TCP/IP socket port number to remote-control MP1900A via Ethernet interface. Perform the settings according to the Control PC or other external controller. MX190000A Signal Quality Analyzer-R Control Software functions as the TCP server.	
[2]	GPIB Address	Set the GPIB device address of the MP1900A used when GPIB is selected for the active interface.	
[3]	Defaults	Resets the settings to default. The default values are shown below. SCPI control TCP port: 5 001 GPIB Address: 1	
[4]	Cancel	Close this dialog box.	
[5]	OK	Save the setting and close this dialog box.	

Refer to MX190000A Signal Quality Analyzer-R Control Software Operation Manual for details of remote control.

5.2 Using Ethernet

Specify IP Address, Subnet Mask, and Gateway for the MP1900A. Connect the controller to the IP Address displayed on the Remote Control tab.

 Click Change Network Connection to change the IP address, subnet mask, and gateway address of MP1900A. The Network Connection window of Windows is displayed.



Figure 5.2-1 Network Connection Window

- (2) Right-click the **Local Area Connection** icon, and then click **Properties**.
- (3) Click Internal Protocol Version 4 (TCP IPv4), and then click **Properties**.
- (4) Set the items in the Internal Protocol Version 4 (TCP IPv4) Properties dialog box.



Figure 5.2-2 Internal Protocol Version 4 (TCP/IPv4) Properties dialog box

Note:

For the IP address of the remote interface, set the address other than "192.168.1.xxx". The "192.168.1.xxx" address is used for the module address. If this address is set, the module may not operate properly.

Note:

Do not change settings of Local Area Connection 2 (Do Not Change). When the settings are changed, the application is not started normally. Set the following values if the settings are changed.

Table 5.2-1 Local Area Connection 2 (Do Not Change) Default Values

Item	Setting
IP address	192.168.1.101
Subnet mask	255.255.255.0
Default gateway	Blank (not set)

Refer to MX190000A Signal Quality Analyzer-R Control Software Operation Manual for details such as setup restrictions. Use the External connector installed on the rear panel to connect the 10 BASE-T/100 BASE-TX/1000 BASE-TX cable.

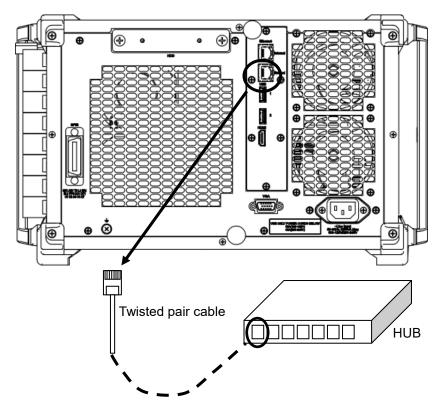


Figure 5.2-3 Ethernet Cable Connection

5.3 Using GPIB

The GPIB is available using the set GPIB address (refer to 5.1, "Remote Interface Settings").

GPIB connector is located on the rear panel. Be sure to connect the GPIB cable before turning on the MP1900A. Up to 15 devices, including the controller, can be connected in one GPIB system. Note that the cable length is limited, as shown below.

- Total cable length: ≤20 m
- Cable length between devices: ≤4 m

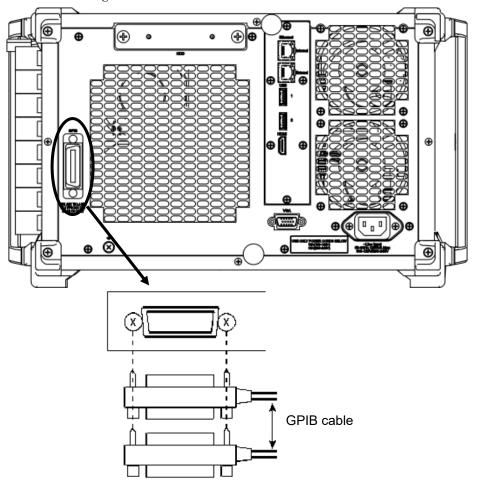


Figure 5.3-1 GPIB Cable Connection

Connect cables without forming loops.

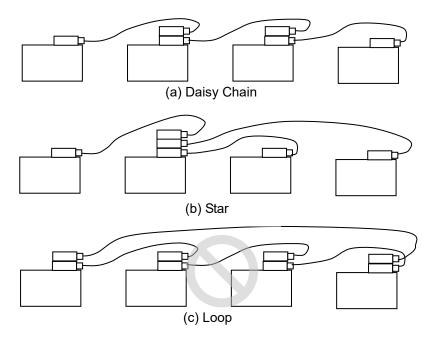


Figure 5.3-2 GPIB Cable Connection Methods

Chapter 6 Installing MX190000A

This chapter describes how to install the MX190000A Signal Quality Analyzer-R Control Software (hereinafter, referred to as "MX190000A"), when reinstalling or upgrading MX190000A is required.

6.1 Installing MX190000A......6-2

6.1 Installing MX190000A


The MP1900A comes with MX190000A. When reinstalling or upgrading MX190000A is required, follow the installation procedure described below.

To re-install the MX190000A, use the USB memory supplied with the MP1900A. If the MX190000A is updated, the firmware of the MP1900A and each module should also be updated.


(1) Insert the USB memory into the MP1900A to copy the files to the internal HDD. Files to be copied are stored in the following folder as follows:

\Installer\MX190000A_VER_x_xx_xx.exe x_xx_xx above indicates the software version.


- (2) Execute "MX190000A_VER_x_xx_xx.exe" to start installation. When overwriting a version of MX190000A that has already been installed in the MP1900A (e.g., when upgrading the version), a message dialog box "Reinstall all program features installed by the previous setup." is displayed. Touch **Yes** to continue the installation. In this event, Steps 4 (this step) to 8 are omitted. Proceed with Step 9.
- (3) The installer starts. Touch Next.

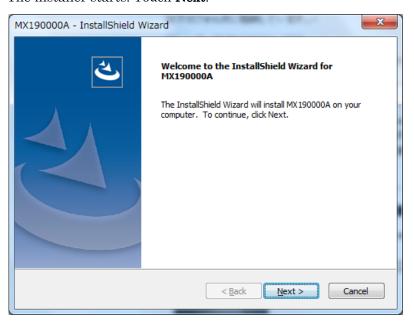


(4) Enter a user name, a company name, and the serial number into the respective textbox, and then touch Next.For the serial number, enter the 10-digit serial number of the MP1900A that is to be controlled by MX190000A.

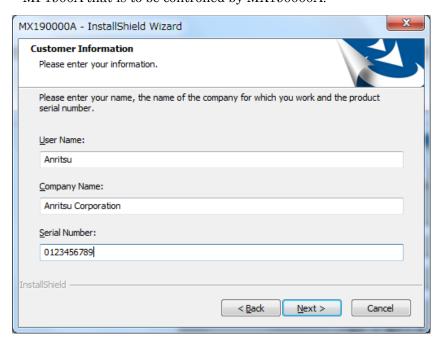


(5) The error message shown below will be displayed if an incorrect serial number is entered and **Next** is touched. Touch **OK** to close the error message, and then enter the correct serial number.

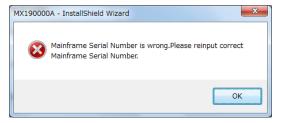


(6) Select **MP1900A** in the Setup Type and touch **Next**. When installing the application to a PC, select **External PC**. Refer to *MX190000A* Signal Quality Analyzer-R Control Software Operation Manual for details.

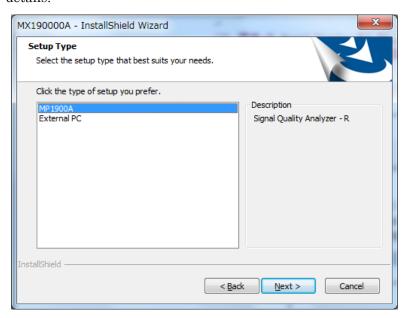

(7) When installation is ready (the following window is displayed), touch **Install** to start installation.

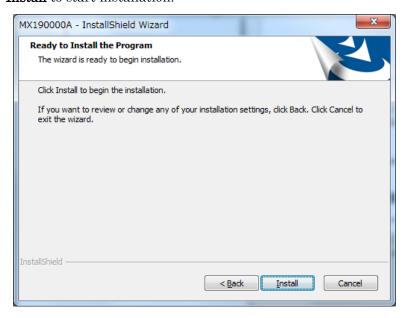

(8) The following window is displayed when the installation completes normally. Touch **Finish** to end the installation procedure.

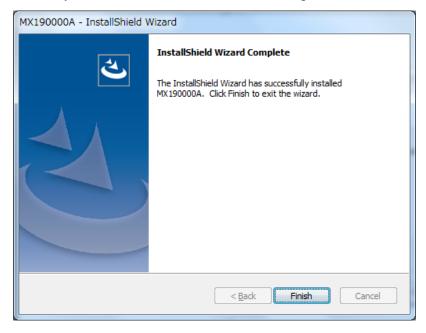

(9) Be sure to check the software version of the MP1900A after installing MX190000A. If the firmware version is not the latest, necessary files must be downloaded. Refer to MX190000A Signal Quality Analyzer-R Control Software Operation Manual for details on how to check the version and how to upgrade the software.

Chapter 7 Troubleshooting

This chapter describes the procedures to check if a failure has occurred during abnormal operation of the MP1900A.

7.1	Problems upon Power-on	7-2
7.2	Problem upon Module Replacement	7-3
7.3	Software Problems	7-4

7.1 Problems upon Power-on

Table 7.1-1 Remedies for problems upon power-on

Symptom	Location to Check	Remedy	
The MP1900A	Is the power cord loose?	Fully connect the cable.	
cannot be turned on.	Is the Standby LED is turned on? If the power cord is removed and inserted dustartup of the MP1900A, the MP1900A may turned on by pressing the power switch on the panel. In this event, take either of these actions are to seconds. 1. Remove the power cord and connect it agas 5 seconds. 2. Press and hold the power switch for at least seconds, release the power switch, and the press the power switch again.		
		Check if the power is being supplied to the power cord. If the MP1900A cannot be turned on even when the power is being supplied, the MP1900A may have failed. Contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.	
	Is the MP1900A powered on after shutting it down	When the power is automatically turned off because of the temperature abnormality, the Standby LED	
	because of the temperature	flashes. In this case, unplug the power cord to turn	
	abnormality?	off the Standby LED entirely.	

7.2 Problem upon Module Replacement

Table 7.2-1 Remedies for problems upon module replacement

Symptom	Location to Check	Remedy
A module is not recognized after	Is the module installed properly?	Install the module again by referring to 3.3 "Installing and Removing Modules."
starting application.	Are the appropriate modules installed?	Confirm the MP1900A software version and the supported modules by visiting the MP1900A Series Signal Quality Analyzers-R product information page in the Anritsu web site (https://www.anritsu.com). If the appropriate modulus are not recognized, it may have failed. Contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

7.3 Software Problems

Table 7.3-1 Remedies for software problems

Symptom	Location to Check	Remedy	
The MX190000A application is not installed.	Is the MX190000A application registered in the Windows start menu?	Refer to Chapter 6 "Installing MX190000A" to re-install the MX190000A Control Software.	
Windows does not start.	_	The hard disk may have failed. Contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.	
The module is not recognized after starting the application.	Have the settings of Local Area Connection 2 (Do Not Change) been changed?	Set Local Area Connection 2 (Do Not Change) correctly by referring to 5.2, "Using Ethernet.	
Touch panel does not function properly.	_	Calibrate the touch panel by referring to 8.2 "Touch Panel Calibration".	

If a problem cannot be solved using any of the items listed above, perform initialization and check the items again. If the problem still occurs, contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

8

Chapter 8 Maintenance

This section describes the maintenance of the MP1900A.

8.1	Daily Maintenance	8-2
8.2	Touch Panel Calibration	8-3
8.3	System Recovery Function	8-5
8.4	Caution on Storage	8-13
8.5	Transportation	8-14
8.6	Calibration	8-15
8.7	Disposal	8-16

8.1 Daily Maintenance

- Wipe off any external stains with a cloth damped with diluted mild detergent.
- Vacuum away any accumulated dust or dirt with a vacuum cleaner.
- Tighten any loose parts fixed with screws, using the specified tools.

8.2 Touch Panel Calibration

If the touch panel screen is not detected at the correct position, calibrate the touch panel according to the following procedure.

When calibrating the touch panel, use a taper-tipped stick that does not damage the panel surface.

- Touch All Programs →DMC Touch Panel Configuration. (Figure 8.2-1) from the start menu of Windows.
- 2. When the tool starts, touch **Calibration**.
- 3. Touch the center of + displayed at five locations on the screen by finger or touch pen. (Figure 8.2-3)
- 4. Touch or click **OK**. The Calibration window is closed. (Figure 8.2-4)

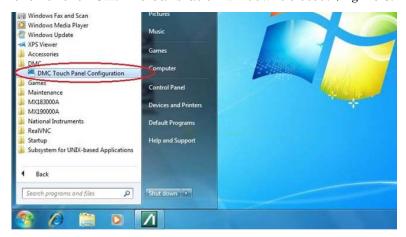


Figure 8.2-1 Touch Panel Calibration Procedure 1



Figure 8.2-2 Touch Panel Calibration Procedure 2

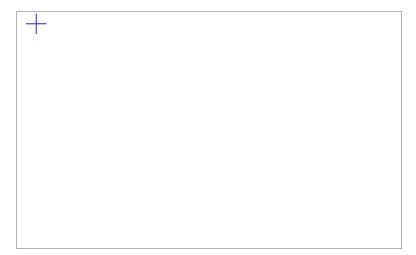


Figure 8.2-3 Touch Panel Calibration Procedure 3

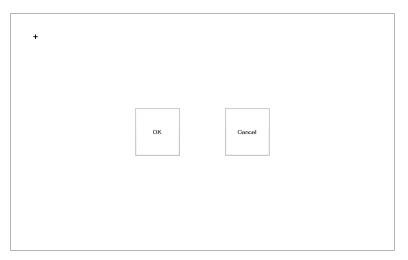


Figure 8.2-4 Touch Panel Calibration Procedure 4

8.3 System Recovery Function

The MP1900A has system recovery function to restore data on the hard disk to the factory shipment status. These functions can be used in the event of system instability.



CAUTION


Fully understand the following and back up all necessary data before performing a system recovery.

- Executing system recovery restores the original Windows factory settings, and reverts the data stored on the C drive to the original factory state. All data such as applications and updates subsequently measurement conditions saved, measurement results, and screen captures will therefore be deleted.
- Data deleted by these functions cannot be restored.
- The MX190000A must be re-installed if system recovery is performed. Before performing system recovery, prepare the MX190000A software installer for the version you are using.
- Executing a system recovery disables the activated MX183000A license. Before performing the following system recovery procedure, refer to 2.4 "License Key Activation" in the MX183000A High-Speed Serial Data Test Software Operation Manual and transfer the license to another PC temporarily.

However, when using the MX183000A V3.07.xx or later, you can retain the license according to the recovery procedure on the following pages, even without saving the license temporarily. Please note that once disabled, the license key cannot be used anymore. In case you have disabled the license key, contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

<Procedure>

- 1. Disconnect the MP1900A from the network if connected.
- 2. Connect the keyboard and mouse to the mainframe, and then turn the MP1900A power On.
- 3. Press the **F8** key on the keyboard. The following screen will appear.

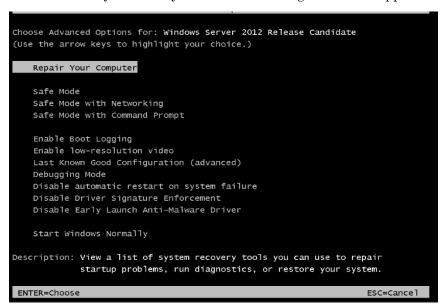


- 4. Use the keyboard cursor keys to select **Repair Your Computer**, and then press **Enter**.
- 5. Click Next.



6. Click **OK**. Leave the Password box blank.




7. Click Reinstall Windows.

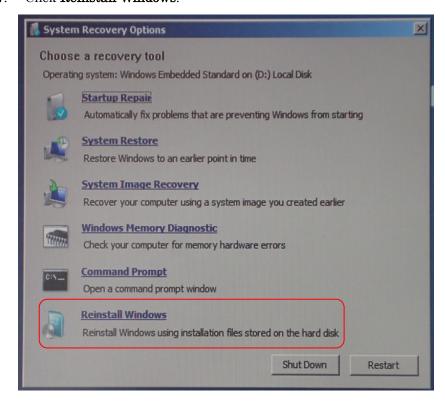


8. Click Yes.



The Recovery Processing window of Windows is displayed. The
recovery processing requires 10 to 30 minutes. The Recovery dialog
box is displayed after restarting MP1900A several times.
Click Restore my files.

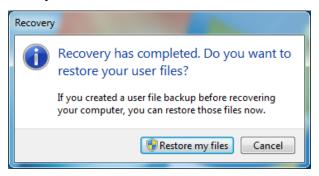

10. Click Cancel.

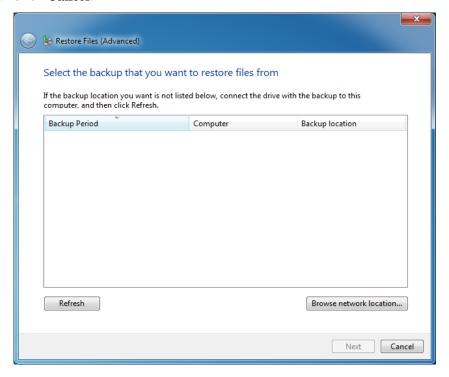

- 11. Install the MX190000A according to 2.1.1 "Installing" of the MX190000A Signal Quality Analyzer-R Control Software Operation Manual.
- 12. Install the MX183000A High-Speed Serial Data Test Software according to 2.3 "Installation/Uninstallation" of the MX183000A High-Speed Serial Data Test Software Operation Manual.
- 13. Double-click the Do First icon on the desktop.



14. The batch processing is executed.


```
C:\Windows\System32\cmd.exe

(1.75) Configure-IP Address.


(2.75) Configure Boot-setup.
The operation completed successfully.
The operation completed successfully.
(3.75) Remove old files
Changing Access rights (It takes about 5 minutes.)
Removing old files... (It takes about 5 minutes.)
```

15. After 10 minutes have passed, the screen to calibrate the touch panel is displayed.

Touch the center of — displayed at the five locations in the screen by a finger or a touch pen.

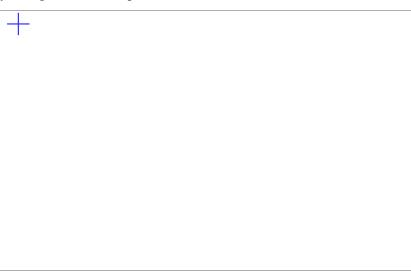

16. When the calibration is finished, the following screen is displayed. If the calibration failed, touch or click Cancel. If the calibration succeeded, touch or click OK. Then, the calibration screen is closed.

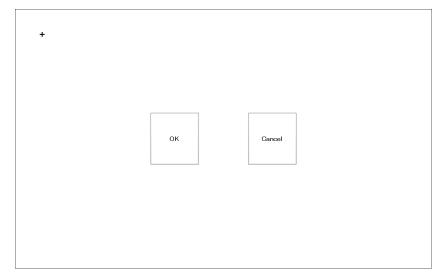

17. [Retry calibration again?(Y/N)] is shown in the command prompt. If the calibration failed, press y or Y and press Enter on the keyboard. As the calibration screen is shown, retry the calibration. If the calibration succeeded, press n or N and press Enter on the keyboard. Then, the MP1900A will automatically reboot.

```
CAWindows\System32\cmd.exe

(1/5) Configure—IP Address.


(2/5) Configure Boot—setup.
The operation completed successfully.
The operation completed successfully.
The operation completed successfully.
(3/5) Remove old files
Changing Access rights (It takes about 5 minutes.)
Removing old files... (It takes about 5 minutes.)
(4/5) Calibrate touch screen
Retry calibration again?(Y/N)
```

Checking operation

Check the operation using the following procedure after recovering the system.


1. Touch All Programs \rightarrow MX190000A \rightarrow MX190000A from the start menu of Windows.

Confirm that the following Application Selector screen is displayed.

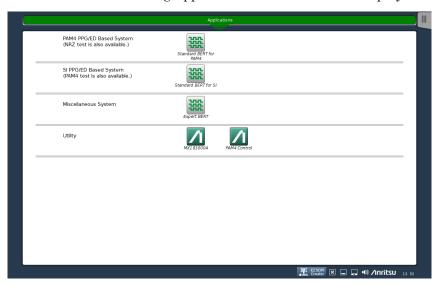

2. Touch All Programs \rightarrow MX183000A \rightarrow High Speed Serial Data Test Software from the Windows start menu.

Confirm that the following Selector window is displayed.

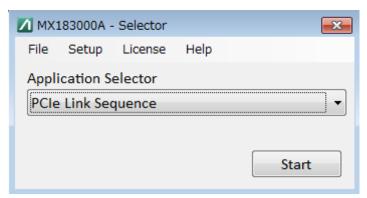

3. Activate the license that was moved to another PC before the system recovery. For details, refer to 2.4 "License Key Activation" in the MX183000A High-Speed Serial Data Test Software Operation Manual.

When using the MX183000A V3.07.xx or later, check that the license is **Active** here.

8.4 Caution on Storage

Wipe off any dust, soil, or stain on the device prior to storage. Avoid storing the device in any of the following locations:

- · In direct sunlight for extended periods
- In excessively dusty locations
- Outdoors
- Where condensation may occur
- In liquids, such as water, oil, or organic solvents, and medical fluids, or places where these liquids may adhere
- In salty air or in place chemically active gases (sulfur dioxide, hydrogen sulfide, chlorine, ammonia, nitrogen dioxide, or hydrogen chloride etc.) are present
- Where toppling over may occur
- In the presence of lubricating oil mists
- At low atmospheric pressure
- In the presence of frequent vibration or mechanical shock, such as in cars, ships, or airplanes
- Under the following condition:
 Temperature range of ≤-20°C or ≥60°C

Recommended storage conditions

In addition to the abovementioned storage cautions, the following environment conditions are recommended for long-term storage.

- Temperature range of 5 to 30°C
- Slight daily fluctuation in temperature and humidity

8.5 Transportation

Use the original packing materials, if possible, when packing the MP1900A for transport. If you do not have the original packing materials, pack the MP1900A according to the following procedure. When handling the MP1900A, always wear clean gloves, and handle it gently so as not to damage it.

<Procedure>

- Use a dry cloth to wipe off any stain or dust on the exterior of the MP1900A.
- 2. Check for loose or missing screws.
- 3. Provide protection for structural protrusions and parts that can easily be deformed, and wrap the MP1900A with a sheet of polyethylene. Finally, cover with moisture-proof paper.
- 4. Place the wrapped MP1900A into a cardboard box, and tape the flaps with adhesive tape. Furthermore, store it in a wooden box as required by the transportation distance or method.

During transportation, place it under an environment that meets the conditions described in 8.4 "Caution on Storage".

8.6 Calibration

Regular maintenance such as periodic inspections and calibration is essential for the Signal Quality Analyzer-R Series for long-term stable performance. Regular inspection and calibration are recommended for using the Signal Quality Analyzer-R Series in its prime condition at all times. The recommended calibration cycle after delivery of the Signal Quality Analyzer-R Series is twelve months.

If you require support after delivery, contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

We may not provide calibration or repair if any of the following cases apply.

- Seven or more years have elapsed after production and parts for the instrument are difficult to obtain, or it is determined that reliability cannot be maintained after calibration and repair due to significant wear.
- Circuit changes, repair, or modifications are done without our approval.
- It is determined that the repair cost would be higher than the price of a new item.

8.7 Disposal

Observe national and local regulations when disposing of the MP1900A.

Before disposal, dismantle or physically destroy any non-volatile memory media in the MP1900A to ensure that data in memory cannot be recovered by third parties.