

Measurement Guide

Spectrum Analyzer

for Anritsu RF and Microwave Handheld Instruments

**BTS Master™, Site Master™, Spectrum Master™, Cell Master™,
LMR Master™, VNA Master™**

Spectrum Analyzer	Included
Preamplifier	Option 8
Bias Tee	Option 10
IQ Waveform Capture	Option 24
Interference Analyzer	Option 25
Channel Scanner	Option 27
CW Generator	Option 28
Zero-Span IF Output	Option 89
Gated Sweep	Option 90
Coverage Mapping	Option 431
Electromagnetic Field (EMF)	Option 444
AM/FM/PM Analyzer	Option 509

Note

Not all instrument models offer every option or every measurement within a given option. Refer to the Technical Data Sheet of your instrument for available options and supported measurements.

The Anritsu logo is displayed in a stylized, blue, sans-serif font.

Unauthorized Use or Disclosure

Anritsu Company has prepared the product user documentation for use by Anritsu Company personnel and customers as a guide for the proper installation, operation, and maintenance of Anritsu Company equipment and software programs. The drawings, specifications, and information contained therein are the property of Anritsu Company, and any unauthorized use is prohibited; they shall not be reproduced, copied, or used in whole or in part as the basis for manufacture or sale of the equipment or software programs without the prior written consent of Anritsu Company.

Export Management

The Anritsu products identified herein and their respective manuals may require an Export License or approval by the government of the product country of origin for re-export from your country. Before you export these products or any of their manuals, please contact Anritsu Company to confirm whether or not these items are export-controlled. When disposing of export-controlled items, the products and manuals must be broken or shredded to such a degree that they cannot be unlawfully used for military purposes.

Updates

Updates, if any, can be downloaded from the Anritsu website at:

<http://www.anritsu.com/>

For the latest service and sales contact information in your area, please visit:

<http://www.anritsu.com/contact-us>

Table of Contents

Chapter 1—General Information

1-1	Introduction	1-1
1-2	Product Information, Compliance, and Safety	1-1
1-3	Contacting Anritsu	1-1
1-4	Selecting a Measurement Mode	1-2

Chapter 2—Spectrum Analyzer

2-1	Introduction	2-1
2-2	General Measurement Setups	2-1
2-3	Making Spectrum Analyzer Measurements	2-1
	Setting Frequency	2-1
	Setting Bandwidth Parameters	2-2
	Setting Sweep Parameters	2-3
2-4	Resolution Bandwidth	2-8
2-5	Video Bandwidth	2-8
2-6	Sweep Limitations	2-9
2-7	Attenuator Functions	2-9
2-8	Detection	2-10
2-9	Indications of Excessive Signal Level	2-10
2-10	Preamplifier Measurement Example	2-14
2-11	Field Measurements	2-14
2-12	Field Strength Measurements	2-15
	Introduction	2-15
	Antenna Calculations	2-16
2-13	Occupied Bandwidth Measurement	2-17
2-14	Channel Power Measurement	2-19
	Introduction	2-19
	Channel Power Measurement for GSM	2-19
2-15	Adjacent Channel Power Measurement	2-21
2-16	EMF Measurement (Option 444)	2-22
2-17	Out-of-Band Spurious Emission Measurements	2-23
2-18	In-Band/Out-of-Channel Measurements	2-25
2-19	AM/FM/SSB Demodulation Measurements	2-26
2-20	Carrier to Interference Ratio Measurement	2-27
2-21	Emission Mask (In-Band) Measurement	2-30

Table of Contents (Continued)

2-22	Spurious Emissions (Out-of-Band) Measurement	2-31
	Creating a New Spurious Emission Mask	2-31
	Loading an Existing Mask	2-33
	Modifying an Existing Mask	2-33
	Spurious Emissions (Out-of-Band) Measurements	2-35
2-23	PIM Hunting	2-38
	Introduction	2-38
	Starting PIM Hunting	2-38
	Measurement Results	2-39
	Procedure	2-40
2-24	IQ Waveform Capture (Option 24)	2-41
	Waveform Capture Setup	2-41
	Capturing a Waveform	2-42
2-25	Spectrum Analyzer Menus	2-43
	Marker Menu	2-44
	Measure Menu (1 of 5)	2-45
	Measure Menu (2 of 5)	2-46
	Measure Menu (3 of 5)	2-47
	Measure Menu (4 of 5)	2-48
	Measure Menu (5 of 5)	2-49
	Sweep Menu	2-50
	Trace Menus	2-51
	Limit Menus	2-51
	Application Options Menu	2-52
2-26	Freq (Frequency) Menu	2-53
	Freq 1/2 (Frequency Menu without Offset)	2-53
	Freq 1/2 (Frequency Menu with Offset Function)	2-55
	Freq 2/2 Menu	2-57
2-27	Amplitude Menu	2-59
	Amplitude Menu	2-59
	Units & Detection Menu	2-60
2-28	Span Menu	2-61
2-29	Zero Span IF BW Menu (Option 89)	2-62
2-30	BW (Bandwidth) Menu	2-63
2-31	Marker Menu	2-64
	More Peak Options (Marker & Peak) Menu	2-65
	Marker 2/2 Menu	2-66

Table of Contents (Continued)

2-32	Sweep Menu	2-67
	Sweep Mode Menu	2-68
	Triggering Menu	2-69
	Trigger Source Menu	2-70
	Gate Setup Menu	2-71
2-33	Measure Menu	2-72
	Power and BW Menu	2-73
	Field Strength Menu	2-74
	OCC BW Menu	2-75
	Channel Power Menu	2-76
	ACPR Menu	2-77
	EMF Menu (Option 444)	2-79
	Masks and C/I Menu	2-80
	Emission Mask (In-Band) Menu	2-81
	Spurious Emissions (Out-of-Band) Menu	2-82
	C/I Menu	2-84
	C/I Signal Type Menu	2-85
	AM/FM Demod 1/2 Menu	2-86
	Demod Type (AM/FM) Menu	2-87
	AM/FM Demod 2/2 (More) Menu	2-88
	Generator Menu (Optional)	2-89
	PIM Hunting Menu	2-90
	IQ Waveform Capture Menu (Option 24)	2-91
	IQ Capture Triggering Menu	2-92
	IQ Capture Save Menu	2-92
	IQ Capture Frequency/Amplitude Menu	2-93
	Coverage Mapping Menu (Option 431)	2-93
2-34	Trace Menu	2-94
	Trace A Ops Menu	2-96
	Trace B Ops Menu	2-97
	Trace C Ops Menu	2-98
2-35	Limit Menu	2-99
	Edit Menu (Limit)	2-100
	Edit Menu (Continued)	2-101
	Limit Move Menu	2-102
	Limit Envelope Menu	2-103
	Limit Advanced Menu	2-105
2-36	Application Options Menu	2-106
2-37	Other Menus	2-106

Chapter 3—Interference Analyzer (Option 25)

3-1	Introduction	3-1
-----	------------------------	-----

Table of Contents (Continued)

3-2	General Measurement Setups	3-1
3-3	Spectrum.	3-1
3-4	Spectrogram	3-2
3-5	Signal Strength	3-4
3-6	Received Signal Strength Indicator (RSSI).	3-5
3-7	Signal ID	3-6
3-8	Interference Mapping	3-8
	Overview	3-9
	Interference Mapping (Antenna Only)	3-10
	Interference Mapping (MA2700A and Antenna)	3-14
	Save the Mapping Information.	3-19
3-9	Interference Analyzer (IA) Menu Maps	3-22
	Measurements Menu (1 of 4).	3-23
	Measurements Menu (2 of 4).	3-24
	Measurements Menu (3 of 4).	3-25
	Measurements Menu (4 of 4).	3-26
	Marker Menus	3-27
	Sweep Menus	3-28
	Trace Menus	3-29
	Limit Menus	3-29
	Application Options Menu	3-30
3-10	Freq (Frequency) Menu	3-31
	Freq 1/2 (Frequency Menu without Offset)	3-31
	Freq 1/2 (Frequency Menu with Offset Function)	3-33
	Freq 2/2 Menu	3-34
3-11	Span Menu	3-36
3-12	Zero Span IF BW Menu (Option 89)	3-37
3-13	Amplitude Menu	3-38
	Units & Detection Menu.	3-39
3-14	BW (Bandwidth) Menu	3-40

Table of Contents (Continued)

3-15	Measurements Menu	3-41
	[Spectrum] Measure Menu	3-42
	Power and BW Menu	3-43
	Field Strength Menu	3-44
	OCC BW Menu	3-45
	Channel Power Menu	3-46
	ACPR Menu	3-47
	EMF Menu (Option 444)	3-49
	Masks and C/I Menu	3-50
	Emission Mask (In-Band) Menu	3-51
	C/I Menu	3-52
	C/I Signal Type Menu	3-53
	AM/FM Demod 1/2 Menu	3-54
	Demod Type Menu	3-55
	AM/FM Demod 2/2 Menu	3-56
	Generator Menu (Optional)	3-57
	IQ Waveform Capture Menu (Option 24)	3-58
	IQ Capture Triggering Menu	3-59
	IQ Capture Save Menu	3-59
	IQ Capture Frequency/Amplitude Menu	3-60
	Coverage Mapping Menu (Option 431)	3-61
	Spectrogram Menu	3-62
	Signal Strength Menu	3-63
	RSSI Menu	3-64
	Signal ID Menu	3-65
	Interference Mapping Menu	3-66
	Bearing Lines Menu	3-67
	Mapping Save/Recall Menu	3-68
	Direction Finding Menu	3-69
	Pan & Zoom Menu	3-70
	DF Sound Settings Menu	3-70
3-16	Marker Menu	3-71
	Marker and Peak Menu	3-72
	Marker 2/2 Menu	3-73
3-17	Sweep Menu	3-74
	Sweep Mode Menu	3-75
	Triggering Menu	3-76
	Trigger Source Menu	3-77
	Gate Setup Menu	3-78

Table of Contents (Continued)

3-18	Trace Menu	3-79
	Trace A Ops Menu	3-80
	Trace B Ops Menu	3-81
	Trace C Ops Menu	3-82
3-19	Limit Menu	3-83
	[Limit] Edit Menu	3-85
	[Limit] Edit Menu (Continued)	3-86
	Limit Move Menu	3-87
	Limit Envelope Menu	3-88
	Limit Advanced Menu	3-90
3-20	Application Options	3-91
3-21	Other Menus	3-91

Chapter 4—Channel Scanner (Option 27)

4-1	Introduction	4-1
4-2	General Measurement Setups	4-1
4-3	Sample Procedure	4-2
4-4	Custom Setup Measurements	4-3
4-5	Custom Setup Example	4-3
4-6	Script Master Measurement Setup	4-4
4-7	Channel Scanner Menu Map	4-6
4-8	Scanner Menu	4-7
	Channel Scan Menu	4-7
	Freq Scan Menu	4-8
	Scan Script Master Menu	4-9
4-9	Amplitude Menu	4-10
4-10	Custom Scan Menu	4-11
4-11	Measurements Menu	4-12
4-12	Sweep Menu	4-14
4-13	Measure Menu	4-14
4-14	Trace Menu	4-14
4-15	Limit Menu	4-14
4-16	Other Menus	4-14

Chapter 5—CW Signal Generator (Option 28)

5-1	Introduction	5-1
	Additional Required Equipment	5-1
5-2	Procedure	5-2

Table of Contents (Continued)

Chapter 6—Coverage Mapping (Option 431)

6-1	Introduction	6-1
6-2	General Measurement Setups	6-1
6-3	Spectrum Analysis Settings	6-1
6-4	Coverage Mapping	6-2
	Anritsu easyMap Tools	6-4
	Instrument Settings	6-5
	Map the Signal Strength	6-7
	Save the Coverage Mapping Information	6-9
6-5	Coverage Mapping Menus	6-13
6-6	Coverage Mapping Menu	6-15
	Mapping Save/Recall Menu.	6-16
	Pan & Zoom Menu.	6-17
	Measurement Setup Menu	6-19
	Point Distance/Time Setup Menu	6-20
	RSSI Menu	6-21
	ACPR Menu.	6-22
	Field Strength Menu	6-23

Chapter 7—AM/FM/PM Analyzer (Option 509)

7-1	Introduction	7-1
7-2	General Measurement Setup	7-2
7-3	Example FM Demodulation Measurement	7-4
7-4	AM/FM/PM Analyzer Menus	7-8
	Map of Main Menus.	7-8
	Map of Frequency Menus	7-9
	Map of Measurements Menus.	7-10
	Map of Audio Demod Menus.	7-11
7-5	RF Freq (Frequency) Menu	7-12
7-6	RF Span Menu	7-13
7-7	(Signal) Standard List Menu	7-14
7-8	Amplitude Menu	7-15
7-9	Setup Menu	7-16
7-10	Measurements Menu	7-17
7-11	RF Spectrum Menu.	7-18
7-12	Audio Spectrum AM Menu	7-19
7-13	Audio Waveform AM Menu.	7-20
7-14	Audio Spectrum FM Menu	7-21

7-15	Audio Waveform FM Menu	7-22
7-16	Audio Spectrum PM Menu	7-23
7-17	Audio Waveform PM Menu	7-24
7-18	Coverage Mapping Menu	7-25
	Mapping Save/Recall Menu	7-26
	Measurement Setup Menu	7-27
	Point Distance/Time Setup Menu	7-28
7-19	Audio Demod AM Menu	7-29
7-20	Audio Demod FM Menu	7-30
7-21	Marker Menu	7-31

Chapter 8—Bias Tee (Option 10)

8-1	Introduction	8-1
8-2	Bias Tee Menu	8-3

Index

Chapter 1 — General Information

1-1 Introduction

This Measurement Guide describes the test and measurement functions of Anritsu RF and Microwave Handheld Instruments. Basic spectrum analyzer functions are included with most Anritsu handheld instruments. Other functions are available only when the related option is installed and activated:

- “Interference Analyzer (Option 25)”
- “Channel Scanner (Option 27)”
- “CW Signal Generator (Option 28)”
- “Coverage Mapping (Option 431)”
- “AM/FM/PM Analyzer (Option 509)”
- “Bias Tee (Option 10)”

Screen-captured images contained in this document are provided as examples. Illustrations of menu maps, or menu trees, may show submenu keys that display only under certain conditions. The actual displays, screen menus, and measurement details may differ based on instrument model, firmware version, installed options, and current instrument settings.

For EMF, refer to *Electromagnetic Field (EMF) Measurements Option 444 Measurement Guide*, 10580-00455.

1-2 Product Information, Compliance, and Safety

Read the Handheld Instruments Product Information, Compliance, and Safety Guide (PN: 10100-00065) for important safety, legal, and regulatory notices before operating the equipment. For additional information and literature covering your product, visit the product page of your instrument on <http://www.anritsu.com/> and select the Library tab.

Not all instrument models offer every option. Please refer to the Technical Data Sheet of your instrument for available options.

1-3 Contacting Anritsu

To contact Anritsu, please visit:

<http://www.anritsu.com/contact-us>

On this page you can find links to sales, service, and support contact information for your country or region. You can also provide online feedback, complete a “Talk to Anritsu” form to have your questions answered, or obtain other services offered by Anritsu.

Updated product information can be found on the Anritsu website:

<http://www.anritsu.com/>

Search for the product model number. The latest documentation is on the product page under the Library tab.

1-4 Selecting a Measurement Mode

To switch between measurement modes, or applications:

1. Press the **Shift** front panel key, followed by **Mode** (9). The Mode Selector dialog opens.
2. Use the arrow keys, rotary knob, or press the touch screen to highlight the desired measurement mode. The list of available applications depends on the options that are installed and activated on your instrument. See [Figure 1-1](#).
3. Press **Enter**.

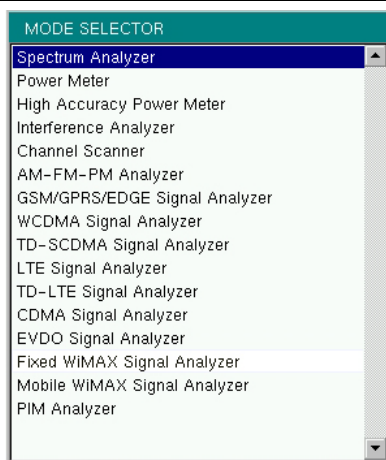


Figure 1-1. Mode Selector Dialog Box

On instruments that have a front panel **Menu** key, an alternate method of changing the measurement mode is to press **Menu**, then press the appropriate application icon on the touch screen.



Figure 1-2. Menu Key Screen - Application Icons and User-Defined Shortcuts

Chapter 2 — Spectrum Analyzer

2-1 Introduction

Spectrum analyzer measurements include the use of additional functions beyond frequency, span, amplitude, and marker functions. [Section 2-2](#) and [Section 2-3](#) explain setup procedures and settings for making spectrum analyzer measurements. [Section 2-4](#) through [Section 2-8](#) focus on resolution bandwidth, video bandwidth, sweep, attenuator, and detection functions. [Section 2-11](#) through [Section 2-24](#) cover field measurements including brief examples demonstrating field strength, occupied bandwidth, channel power, adjacent channel power ratio, EMF, out-of-band spurious emissions, in-band/out-of-channel, AM/FM/SSB demodulation, masks and carrier to interference ratio (C/I), coverage mapping, and IQ waveform capture. Finally, [Section 2-25](#) through [Section 2-37](#) detail the submenus available in Spectrum Analyzer mode.

2-2 General Measurement Setups

Refer to your instrument User Guide for instructions on setting up frequency, span, amplitude, GPS, limit lines, markers, and file management.

2-3 Making Spectrum Analyzer Measurements

Required Equipment

An antenna that is appropriate for the frequency range to be measured.

Required Setup

- Place the instrument in Spectrum Analyzer mode. Refer to [“Product Information, Compliance, and Safety” on page 1-1](#).
- Connect the input signal or antenna to the RF In test port.

Setting Frequency

The tuning frequency range can be entered in several different ways depending upon what makes the most sense, either for the user or for the application. The center frequency and span can be specified, the start and stop frequencies can be entered, or a signal standard and channel number can be selected from the built-in list.

Offset Frequency

In addition, a user-defined frequency offset can be entered to adjust the frequency that is displayed on the instrument from the actual swept frequency. For example, if the DUT is an antenna system receiving signals in the 10 GHz range and offsetting the signals to the 1 GHz range, you can set a frequency offset in the spectrum analyzer in order to display the actual received antenna frequency in the sweep window. For a measurement example, see [Figure 2-41 on page 2-58](#).

Both positive and negative offset values are allowed. Negative offsets can be useful for seeing differences from expected values. Enter a negative offset of the expected value, and the received antenna frequency should display in the 0 Hz range.

When enabled, **Offset** is displayed at the bottom of the screen (Figure 2-41), and the **Center Freq**, **Start Freq**, and **Stop Freq** submenu keys indicate that a frequency offset has been turned on by adding the word **Offset** before **Center**, **Start**, and **Stop**. For menu examples, see Figure 2-37 on page 2-53 and Figure 2-39 on page 2-56.

To remove a frequency offset, set the **Freq Offset** to 0 Hz.

Setting Bandwidth Parameters

The resolution bandwidth (RBW) and the video bandwidth (VBW) can be coupled to the frequency span automatically or manually set. When set to **Auto RBW**, the RBW adjusts automatically in proportion to the frequency span. The default ratio of the span width to the resolution bandwidth is 100:1, and can be changed as follows:

1. Press the **BW** main menu key.
2. Press the **Span/RBW** submenu key. The current **Span/RBW** ratio is shown as part of the submenu key label. Change the value using the keypad, the directional arrows, or the rotary knob and then press **Enter**.

When auto-coupling between the span and RBW is selected (the **Auto RBW** submenu key is toggled to “On”), this is indicated on the left side of the display with the **RBW** label and underneath it one to three digits followed by the frequency units; this represents the resolution bandwidth value. If manual RBW is selected (the **Auto RBW** submenu key is toggled “Off”), the label and value turn red and a “#” symbol is shown in front of the **RBW** label. Adjust resolution bandwidth independently of the span. If an unavailable resolution bandwidth is entered, then the instrument selects the next higher resolution bandwidth. If a value greater than the widest RBW is entered, then the instrument selects the widest RBW.

VBW can be set two ways – manually or by auto coupling. Auto coupling of the **VBW** links the video bandwidth to the resolution bandwidth, so that **VBW** varies in proportion to **RBW**. Auto coupling is indicated on the left side of the display with the **VBW** label and underneath it one to three digits and the frequency units; this represents the video bandwidth value. If manual **VBW** coupling is selected, the label and value turn red and the “#” symbol is shown in front of **VBW** on the left side of the display. Adjust video bandwidth independently of the **RBW**. If a non-existent video bandwidth is entered, then the instrument selects the next higher video bandwidth. If a value greater than the widest **VBW** is entered, then the instrument selects the widest **VBW**.

The ratio of the resolution bandwidth to the video bandwidth can be changed by pressing the **BW** main menu key, the **RBW/VBW** submenu key, and then using the keypad, the directional arrows, or the rotary knob to set the ratio. By default, the **RBW/VBW** ratio is set to 3. The current value of the ratio is shown as part of the submenu key label.

1. Press the **BW** main menu key.
2. Press the **RBW/VBW** submenu key. The current **RBW/VBW** ratio is shown as part of the submenu key label. Enter the desired value.

The **RBW** range varies with instrument features. Refer to the **RBW** submenu key description in “**BW (Bandwidth) Menu**” on page 2-63, and check your Technical Data Sheet for the **RBW** range of your instrument.

Setting Sweep Parameters

To set the sweep parameters, press the **Shift** key followed by the **Sweep (3)** key.

Single/Continuous

When this submenu key is pressed, the instrument toggles between single sweep and continuous sweep. In single sweep mode, the instrument waits until the **Sweep Once** submenu key is pressed or another triggering mode is selected.

Sweep Mode

Several sweep modes are available on the instrument. Press the **Sweep Mode** submenu keys to select between **Fast** (default), **Performance**, **No FFT**, or **Burst Detect**. Note that **Burst Detect** is supported on MS2720T and MT8220T instrument models only.

Improperly installed cellular boosters can sometimes produce burst interference. By using **Burst Detect** mode when available, a narrow-pulsed or burst signal is easily seen in spectrum analyzer mode, capturing emitters as narrow as 200 μ s. **Burst Detect** works in a maximum span of 15 MHz.

[Figure 2-1](#) shows two traces. The yellow trace is the live trace with **Burst Detect** sweep mode, while the green trace is a max hold trace. There is not much difference between the two traces, thus, max hold is no longer needed in order to see narrow pulsed signals.

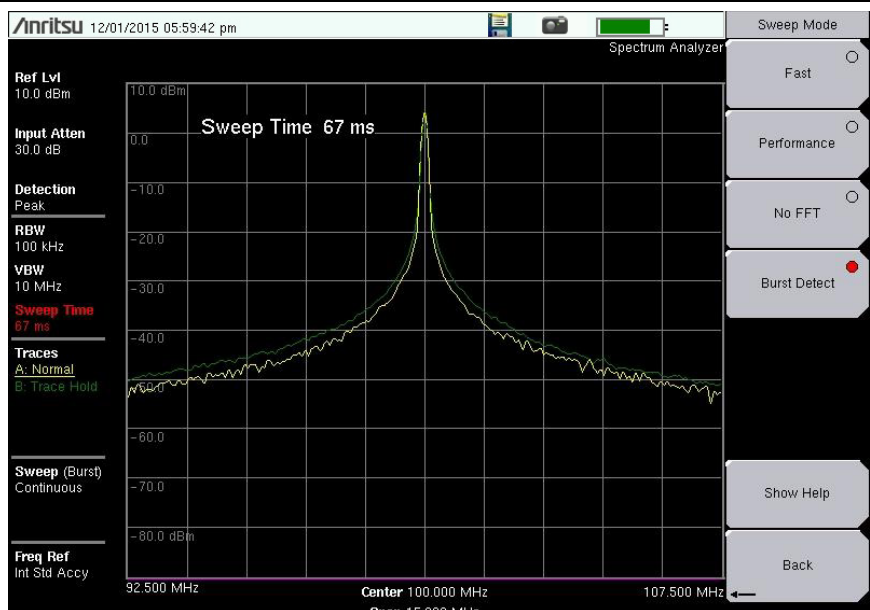


Figure 2-1. Example of Burst Detect Sweep Mode

The **Show Help** submenu key displays a table detailing the trade-off between sweep speed and performance of the sweep mode options.

Note	Sweep Mode menu functionality varies based on instrument model. Fast is the default sweep mode for instruments that have received the new instrument calibration from Anritsu.
-------------	--

Trigger Type

To select a specific type of triggering in zero span, press the **Triggering** submenu key followed by the **Source** submenu key. Selections are:

Free Run: The default trigger type is “Free Run” in which the instrument begins another sweep as soon as one is finished.

External: A TTL signal applied to the External Trigger BNC input connector causes a single sweep to occur. This mode is used in zero span, and triggering occurs on the rising edge of the signal. After the sweep is complete, the resultant trace is displayed until the next trigger signal arrives.

Video: This mode is used in zero span to set the power level at which a sweep is initiated. The power level can be set from -130 dBm to $+30$ dBm. Trigger is based on the measured signal level. The sweep triggers when the signal level crosses the trigger level with a positive slope. If no signal crosses the trigger level, it displays the last trace on the screen before video triggering was selected. To change the video triggering level use the rotary knob, enter the desired amplitude with the keypad, or use the left or right arrows to change the setting by 1 dB or the up or down arrows to change the setting by 10 dB.

IF Power (available on MS2720T model only): This mode is used in zero span to set IF power level as the trigger source. The power level can be set from -130 dBm to $+30$ dBm, using the rotary knob, arrow keys, or keypad. The trigger is based on the measured signal level. If no signal reaches or exceeds the trigger level, then the instrument displays no trace on the screen.

Zero Span IF Output (Standard or Option 89): Zero Span IF Output provides an IF signal that is nominally at 140 MHz out of a BNC female connector labeled IF Out 140 MHz or IF Out (option) 140 MHz.

Notes

The IF output signal is present only when the spectrum analyzer Span is set to zero and the **Zero Span** button has been pressed a second time to bring up the IF bandwidth menu (refer to [“Zero Span IF BW Menu \(Option 89\)”](#) on page 2-62). The key sequence is: **Span > Zero Span > Zero Span**.

MS2723B and MS2724B instruments use IF frequency of 37.8 MHz rather than the 140 MHz of other Anritsu Spectrum Masters. IF output bandwidth is limited to 16 MHz. For these MS2723B and MS2724B instruments, the BNC connector is labeled **IF Out 37.8 MHz**.

You can select Normal or any one of four fixed IF bandwidths of 7 MHz, 10 MHz, 16 MHz, or 32 MHz. In Normal, the bandwidth is set by the spectrum analyzer RBW selection (**BW > Zero Span RBW**). When Normal is selected, the IF bandwidth is influenced by the selection of RBW filters, although the digital RBW filters themselves are not employed.

Zero Span IF output effectively uses the spectrum analyzer as a receiver front-end, converting the input signal at the spectrum analyzer RF In connector to a signal centered at 140 MHz out of the IF Out 140 MHz connector. You can then process the IF signal in a way that meets your needs. That may mean using an A-to-D converter or some other signal processing method. An anti-aliasing filter can be employed in the signal processing to reduce the effect of noise and spurious signals. A filter centered on 140 MHz with a bandwidth slightly wider than 32 MHz is also advised to eliminate any undesired out-of-band signals on the IF output. In particular, signals at 100 MHz and its harmonics (that would be eliminated by the filter) are on the IF output.

When IF output is turned on by setting the instrument to zero span, then pressing the Zero Span submenu key a second time displays the Zero Span IF Bandwidth menu (Figure 2-2). The selectable bandwidth values may differ among instrument types. This figure is typical.

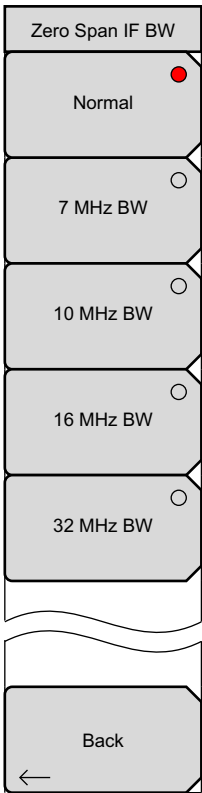


Figure 2-2. Zero Span IF Bandwidth Selection Menu

The Normal IF BW choice selects a bandwidth that uses analog bandpass filters in the normal RBW chain. By changing the RBW, different filter bandwidths are selected.

The spectrum analyzer has several mixer bands. Depending on the operating frequency, the local oscillator may be above or below the input frequency. When the local oscillator frequency is below the input frequency, an increase in the input frequency results in an increase in the IF output frequency. When the local oscillator is above the input frequency, an increase in the input frequency moves it closer to the local oscillator frequency and the IF output frequency consequently decreases. The following tables show the bands and indicates where the LO frequency is, in relation to the RF frequency.

Table 2-1. Mixer Bands and LO Relation to RF Frequency (Spectrum Master)

Band	Low RF MHz	High RF MHz	Local Oscillator Side	Output Spectrum
0	0	2650	High	Inverted
1	2650	5350	High	Inverted
2	5350	9200	High	Inverted
3	9200	13000	Low	Not Inverted
4	13000	16500	High	Inverted
5	16500	20000	Low	Not Inverted
6	20000	32800	High	Inverted
7	32800	43000	Low	Not Inverted

Table 2-2. Mixer Bands and LO Relation to RF Frequency (BTS Master)

Band	Low RF MHz	High RF MHz	Local Oscillator Side	Output Spectrum
1	0	2800	High	Inverted
2	2800	3300	High	Inverted
3	3300	4000	High	Inverted
4	4000	4700	High	Inverted
5	4700	5500	Low	Not Inverted
6	5500	6300	Low	Not Inverted
7	6300	7100	Low	Not Inverted

“Inverted” means that the IF is spectrally inverted from the input (as the input frequency goes higher, the IF goes lower).

“Not Inverted” means that the IF is not spectrally inverted (as the input frequency goes higher, the IF goes higher).

You need to take frequency inversion into account when processing the IF signal. Assuming that the IF has been processed to yield I and Q data, inversion is easily done by swapping I and Q.

A residual frequency offset of the IF may exist compared to the RF due to the resolution of the first and second local oscillators, as well as the calibration of the IF filters. This offset is usually on the order of several kHz, but may be up to 10 kHz or so if the narrowest IF filters are selected. To determine the residual offset, you need a second spectrum analyzer or a frequency counter.

1. Attach a signal source (or antenna) to the spectrum analyzer and set the center frequency to the center of the signal being received.
2. Press **BW** then Zero Span, and then press Zero Span a second time to turn on the IF output.
3. Attach a second spectrum analyzer to the IF output and set the center frequency to 140 MHz. Set the span of the second spectrum analyzer to 100 kHz or less to have the resolution needed to be able to measure an offset that may be 25 kHz or less.
4. Measure the frequency of the IF signal to see how far the signal is offset from 140 MHz.

Gated Sweep (Option 90)

To set up the instrument for gated sweep measurements, press the **Gated Sweep Setup** key under the Sweep menu. The instrument screen changes to a dual graph view that makes it easier to set up the Gate Length and Gate Delay using the time domain/zero span view in the bottom graph while simultaneously viewing the signal spectrum in the top graph. The Gate Length is represented by the width of the displayed blue dashed rectangle. See [Figure 2-3](#). This is useful for measuring signals in the time domain such as pulsed RF, time multiplexed, or burst modulated signals.

The Gate Source selected determines the trigger source from which the gate is controlled. Not all instrument models and options support all triggering selections. (Refer to “[Gate Setup Menu](#)” on page 2-71.) Gate Polarity controls the triggering edge of the selected triggering source.

The Gate View Settings key brings up a submenu where you can independently set the Zero Span RBW, Zero Span VBW, and Zero Span Time. Zero Span Time controls the time scale of the Gate View graph.

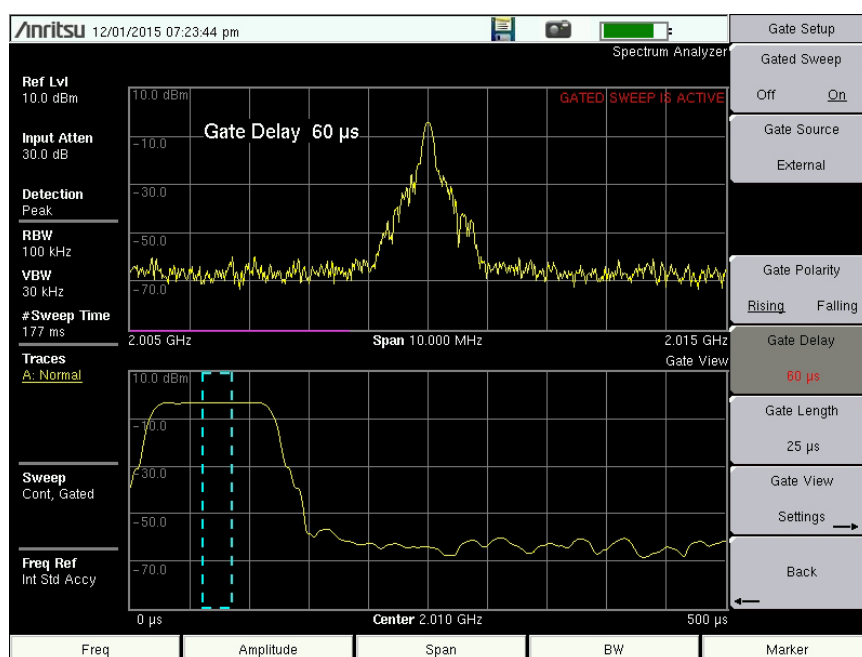


Figure 2-3. Gated Sweep Example - External Gate Source

After the gate has been set up, you can apply gating to the spectrum by setting **Gated Sweep** to **On**. Gating continues to be applied when you press **Back** and access other measurements and functions of the spectrum analyzer until either: (1) **Gated Sweep** is explicitly set to **Off** or (2) the Span setting is changed to Zero Span. Gated Sweep is not allowed in Zero Span mode.

2-4 Resolution Bandwidth

Resolution Bandwidth (RBW) determines frequency selectivity. The spectrum analyzer traces the shape of the RBW filter as it tunes past a signal. The choice of resolution bandwidth depends on several factors. Filters take time to settle. The output of the filter takes some time to settle to the correct value, so that it can be measured. The narrower the filter bandwidth (resolution bandwidth), the longer the settling time needs to be, and therefore, the slower the sweep speed.

The choice of resolution bandwidth depends upon the signal being measured. If two closely spaced signals are to be measured individually, then a narrow bandwidth is required. If a wider bandwidth is used, then the energy of both signals is included in the measurement. Thus, the wider bandwidth does not have the ability to look at frequencies selectively, but instead simultaneously measures all signals falling within the resolution bandwidth. Therefore, a broadband measurement would include all signals and noise within the measurement bandwidth into a single measurement.

On the other hand, a narrow-band measurement separates the frequency components, resulting in a measurement that includes separate peaks for each signal. There are advantages to each. The ultimate decision depends upon the type of measurement required.

There is always some amount of noise present in a measurement. Noise is often broadband in nature; that is, it exists at a broad range of frequencies. If the noise is included in the measurement, the measured value could be in error (too large) depending upon the noise level. With a wide bandwidth, more noise is included in the measurement. With a narrow bandwidth, less noise enters the resolution bandwidth filter, and the measurement is more accurate. If the resolution bandwidth is narrower, the noise floor drops on the spectrum analyzer display. As the measured noise level drops, smaller signals that were previously obscured by the noise can now be measured.

2-5 Video Bandwidth

Spectrum analyzers typically use another type of filtering after the detector called video filtering. This filter also affects the noise on the display but in a different manner than the resolution bandwidth. In video filtering, the average level of the noise remains the same, but the variation in the noise is reduced. Hence, the effect of video filtering is a “smoothing” of the signal noise. The resultant effect on the analyzer’s display is that the noise floor compresses into a thinner trace, while the average position of the trace remains the same.

Changing the video bandwidth (VBW) does not improve sensitivity, but it does improve discernability and repeatability when making low-level measurements. As a general rule, most field spectrum analyzer measurements are made at a video bandwidth that is a factor of 10 to 100 smaller than the resolution bandwidth. This ratio can be specified in the **BW** main menu. Using this ratio, with a resolution bandwidth of 30 kHz, typically, the video bandwidth is set between 300 Hz and 3 kHz, although it can be set anywhere from 1 Hz to 10 MHz.

2-6 Sweep Limitations

With some spectrum analyzers, the user has control over sweep time (the elapsed time of each sweep, sometimes called scan time). An analyzer cannot be swept arbitrarily fast while maintaining its specified accuracy, but has a sweep rate limitation depending upon the resolution bandwidth, video bandwidth, and frequency range selected. The sweep rate is not usually chosen by the user but is determined by the frequency range swept divided by the sweep time. The limitation on sweep rate comes from the settling or response time of the resolution and video bandwidth filters. If an analyzer is swept too quickly, the filters do not have time to respond, and the measurement is inaccurate. Under such conditions, the analyzer display tends to have a “smeared” look to it, with the spectral lines being wider than normal and shifted to the right and at a lower amplitude than is correct.

Anritsu products are designed to relieve the user of having to calculate the sweep speed or experiment to discover a sweep speed that yields accurate results. When changing the RBW and VBW, the sweep speed automatically changes to the fastest sweep speed that yields accurate results. The sweep speed is faster for a wide RBW or VBW and slower for a narrow RBW or VBW. The sweep speed can also be changed manually, by pressing the **Sweep** key and selecting the **Sweep Time** submenu key. Enter a sweep time from 10 μ s to 600 seconds. If the minimum sweep time entered by the user is less than the value needed to assure accurate results, the value that delivers accurate results is used. Regardless of the minimum sweep time setting, the instrument never sweeps faster than the RBW and VBW settings allow. The instrument is designed to ensure that no uncalibrated measurement conditions can occur.

2-7 Attenuator Functions

The Spectrum Analyzer includes a step attenuator at the RF input. This attenuator is used to reduce large signals to levels that make best use of the analyzer’s dynamic range. Normally, the input attenuation automatically adjusts as a function of Reference Level. In the **Amplitude** menu, the **Attn Lvl** key allows manual adjustment of the input attenuation, using the numeric keypad, the **Up/Down** arrow keys, or the rotary knob. In **Auto Atten** mode, as the reference level is increased, the attenuation is increased.

The following actions, listed in decreasing order of effectiveness, can facilitate the detection of low-level CW signals:

Note

1. Decrease the reference level and attenuation. Refer to [“Amplitude Menu” on page 2-59](#).
2. Turn on the Preamp.
3. Reduce RBW. Refer to [“BW \(Bandwidth\) Menu” on page 2-63](#).
4. Decrease VBW (RBW/VBW = 10 is often optimal for this purpose).
5. Use trace averaging if VBW is already set to 1 Hz.

2-8 Detection

Several detection methods tailor the performance of the instrument to meet specific measurement requirements. In general, several measurement points are calculated for each display point. The various detection methods are different ways of dealing with how measurement point data is shown at each display point. Refer to [“Units & Detection Menu”](#) on page 2-60.

Peak: This method causes the largest measurement point to be shown for each display point, and ensures that a narrow peak is not missed.

RMS/Avg: This method performs a root-mean-square calculation of all the measurement points in each display point. This is particularly useful in displaying the average value of noise or noise-like signals.

Negative: This method causes the smallest measurement point to be shown for each display point. It is especially useful in zero span, to see if the signal amplitude drops briefly. The method is also useful when looking at modulated signals, to see if some frequencies are not being used.

Sample: This is the fastest detection method because for each display point, only one frequency point is measured. Use this method when speed is of paramount importance and the possibility of missing a narrow peak is not important.

Quasi-peak: When this selection is made, resolution bandwidths and video bandwidths of 200 Hz, 9 kHz and 120 kHz are available. This detection method is designed to meet CISPR requirements. (Not available in zero span.)

2-9 Indications of Excessive Signal Level

The Spectrum Analyzer has built-in features to indicate when a received signal is too high for the current setup. [Figure 2-4](#) through [Figure 2-8](#) illustrate a normal trace followed by examples of screen messages indicating excessive signal levels. Before proceeding with the measurements, adjust the reference level and/or the attenuator level as instructed. Adjusting the resolution bandwidth and frequency range may also help.

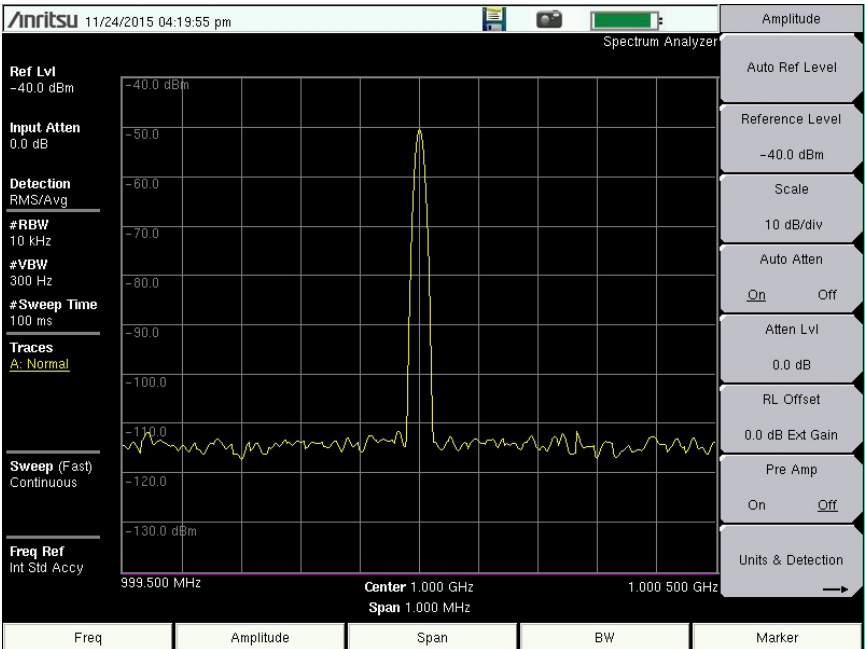


Figure 2-4. Normal Trace

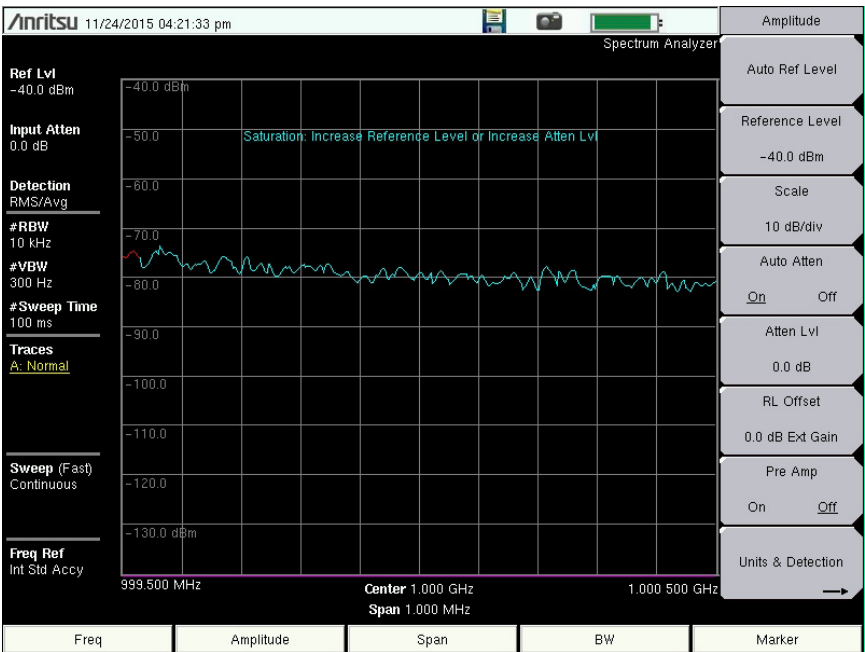


Figure 2-5. Saturation - Off Screen

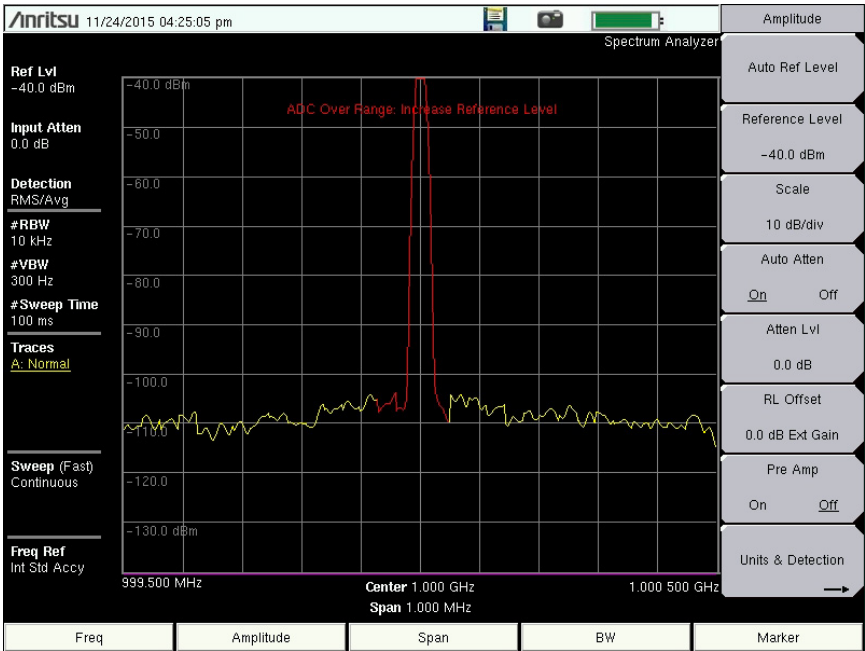


Figure 2-6. ADC Over Range - On Screen

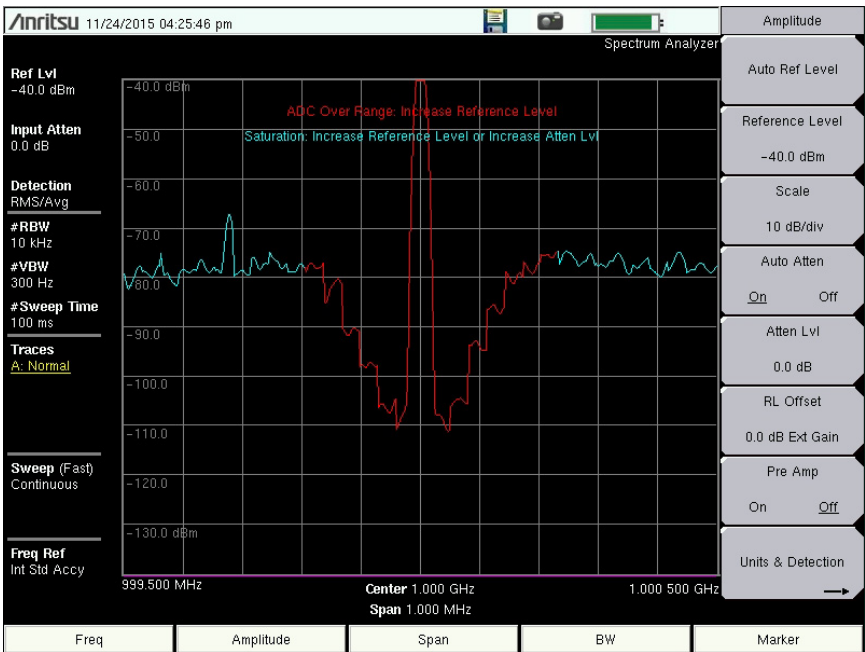


Figure 2-7. Saturation and ADC Overload

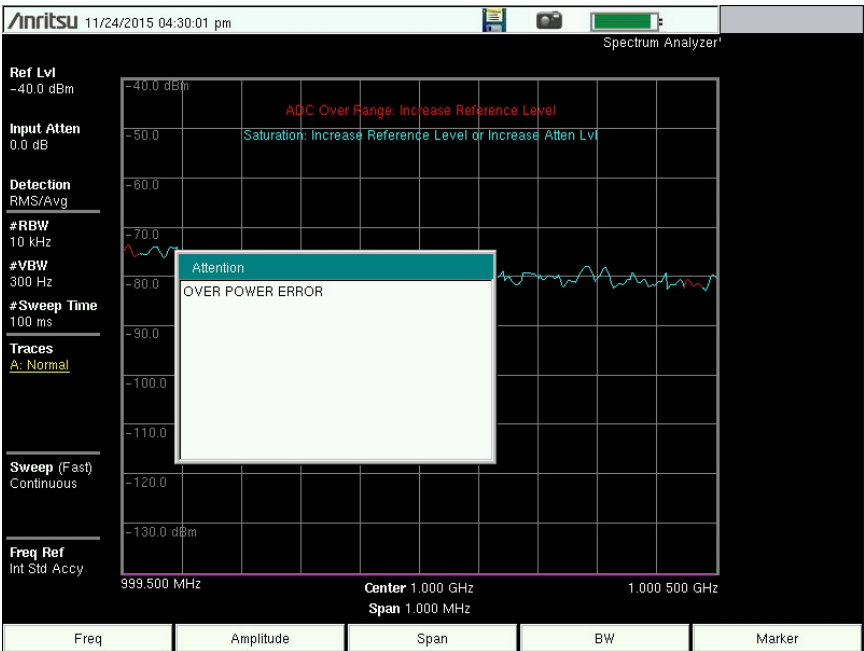


Figure 2-8. Over Power Error (MT8220T and MS2720T-0709 only)

2-10 Preamplifier Measurement Example

The preamplifier can be turned on and off by pressing the **Amplitude** main menu key, then selecting the **Preamp On/Off** submenu key.

Figure 2-9 shows the noise floor with the preamplifier off (green trace) and on (yellow trace). Notice that when the preamplifier is turned on, the noise floor drops significantly.

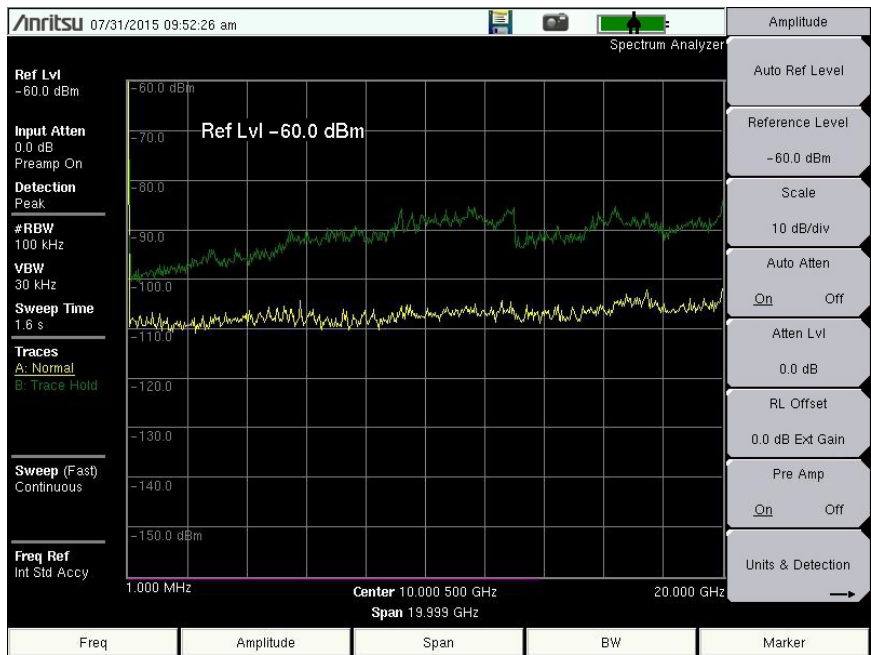


Figure 2-9. Preamplifier On and Off

2-11 Field Measurements

In Spectrum Analyzer mode, smart one-button measurements are built-in for field strength, occupied bandwidth, channel power, adjacent channel power ratio, emission mask, and carrier-to-interference ratio (C/I) tests. In addition, AM/FM/SSB demodulation is available to aid in the identification of interfering signals. The following sections present brief examples demonstrating the use of these measurements.

2-12 Field Strength Measurements

Introduction

Required Equipment

Portable Antenna for which antenna factors or antenna gain and bandwidth data are available.

Procedure

1. Press the **Shift** key then the **Measure (4)** key. Then press the Power and Bandwidth submenu key, and press the Field Strength submenu key followed by pressing the On/Off submenu key so that **On** is underlined.
2. Press the Antenna submenu key to display the loaded antenna profiles with their model number and frequency range. Use the **up** or **down** arrow keys or the rotary knob to select the desired antenna. Press the **Enter** key to select or **ESC** to cancel.

Note Select an antenna from the standard list available or use the Antenna Editor feature of Anritsu Master Software Tools to define a custom antenna and upload the antenna information to the antenna list.

When the Field Strength measurement is enabled, an additional plot is shown at the bottom of the display indicating the selected antenna factor over the currently set frequency span. The field strength measurement is automatically adjusted for this antenna factor.

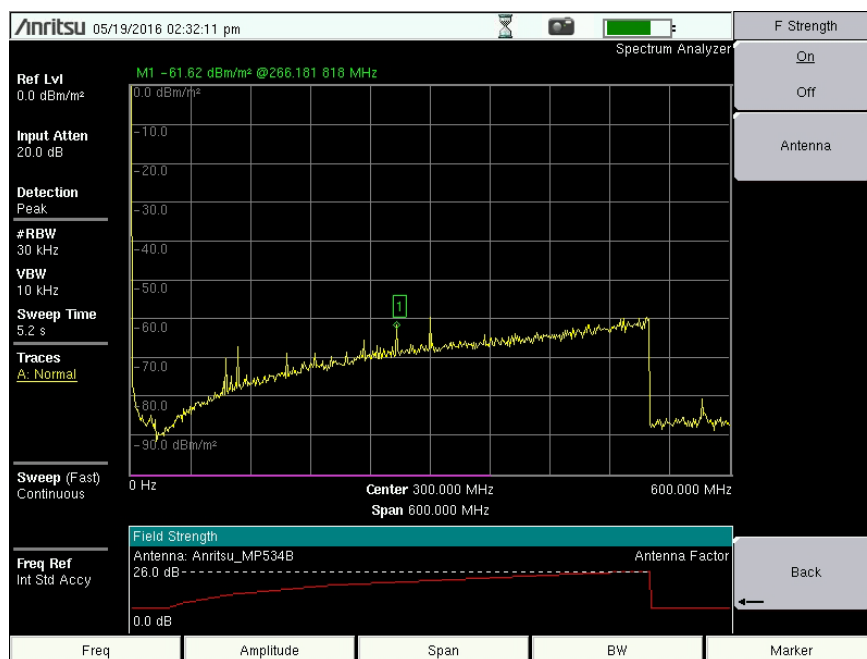


Figure 2-10. Field Strength Measurement Display

3. Connect the antenna to the RF In port.
4. Press the **Freq** main menu key, press the **Center Freq** submenu key, and enter the center frequency.
5. Press the **Span** main menu key. Set the span wide enough to include the primary channel bandwidth and upper and lower channel bandwidths. At least a portion of the span has to include a frequency within the antenna's specified range.
6. Press the **BW** main menu key and verify that Auto RBW and Auto VBW are On.
7. To change the units of measurement, press the **Amplitude** main menu key, then press the **Units** submenu key and press dBm/m², dBV/m, dBmV/m, dBμV/m, Volt/m, Watt/m², dBW/m², A/m, dBA/m, or Watt/cm². The instrument automatically adjusts the measurement by the antenna factors selected. Marker values are displayed in the same units as selected for amplitude.

Antenna Calculations

The following is a list of various antenna calculations should you find it necessary to convert from one parameter to another:

Conversion of signal levels from watts to volts in a 50 ohm system:

$$P = V^2/R$$

where:

P = power in Watts , V = voltage level in Volts, and R = resistance in ohms

Note that 1mW = 10⁻³ W and 1μV = 10⁻⁶ V.

For power in dBm, and voltage in dB (μV):

$$V_{dB(\mu V)} = P_{(dBm)} + 107dB$$

Power density to field strength:

An alternate measure of field strength is power density:

$$P_d = E^2/(120\pi)$$

where:

E is the field strength in V/m and P_d is the Power density in W/m²

Power density at a point:

$$P_d = (P_t G_t)/(4\pi r^2)$$

where:

P_d = power density in W/m

P_t = power transmitted in Watts

G_t = gain of transmitting antenna

r = distance from the antenna in meters

This equation is only valid in the far field, where electric and magnetic fields are related by the characteristic impedance of free space.

2-13 Occupied Bandwidth Measurement

Occupied Bandwidth (OBW) is a common measurement performed on radio transmitters. This measurement calculates the bandwidth containing the total integrated power occupied in a given signal bandwidth. There are two different methods of calculation depending upon the technique used to modulate the carrier.

- **% Integrated Power Method:** The occupied frequency bandwidth is calculated as the bandwidth containing the specified percentage of the transmitted power.
- **> dBc Method:** The occupied frequency bandwidth is defined as the bandwidth between the upper and lower frequency points at which the signal level is a desired number of dB below the peak carrier level.

Required Equipment

- Test Port Extension Cable, Anritsu part number 15NNF50-1.5C
- 30 dB, 50 Watt, bi-directional, DC –18 GHz, N(m) – N(f), Attenuator, Anritsu 42N50A-30 (required if the power level being measured is > +30 dBm)

Procedure

1. Using the test port extension cable and the 30 dB, 50 watt, bi-directional attenuator (if needed) connect the **RF In** port to the appropriate transmitter test port or signal source.
2. Press the **Freq** main menu key followed by the **Center Freq** submenu key and enter the center frequency using the keypad, the arrow keys, or the rotary knob. If entering a frequency using the keypad, the submenu key labels change to GHz, MHz, kHz, and Hz. Press the appropriate units key. Pressing the **Enter** key has the same effect as the MHz submenu key.
3. If an attenuator was connected in [Step 1](#), then press the **Amplitude** main menu key then press the **RL Offset** submenu key, enter 30 then select dB External Loss to compensate for the loss in the attenuator.
4. Press the **Amplitude** main menu key then press the **Reference Level** submenu key to set the appropriate reference level.
5. Press the **Atten Lvl** submenu key to set the input attenuation level or leave **Auto Atten** set to On.
6. Press the **BW** main menu key to set the resolution bandwidth and video bandwidth if desired.
7. Press the **Shift** key then the **Measure (4)** key. Then press the **Power and Bandwidth** submenu key, and press the **OCC BW** submenu key. Choose the measurement method (% Int Pwr or > dBc) by pressing the **Method** submenu key. The selected method is underlined.
8. Press the dBc or % submenu keys to adjust the settings as needed. Common values are 99% and 30 dBc.
9. Press the **On/Off** submenu key to start the measurement. An information box appears below the graph while occupied bandwidth measurement is on.

Figure 2-11 shows the occupied bandwidth results using the percent of power method on a WCDMA signal. Occupied Bandwidth is a constant measurement; after it is turned on, it remains on until it is turned off by pressing the On/Off submenu key again. Occupied bandwidth is calculated at the end of each sweep.

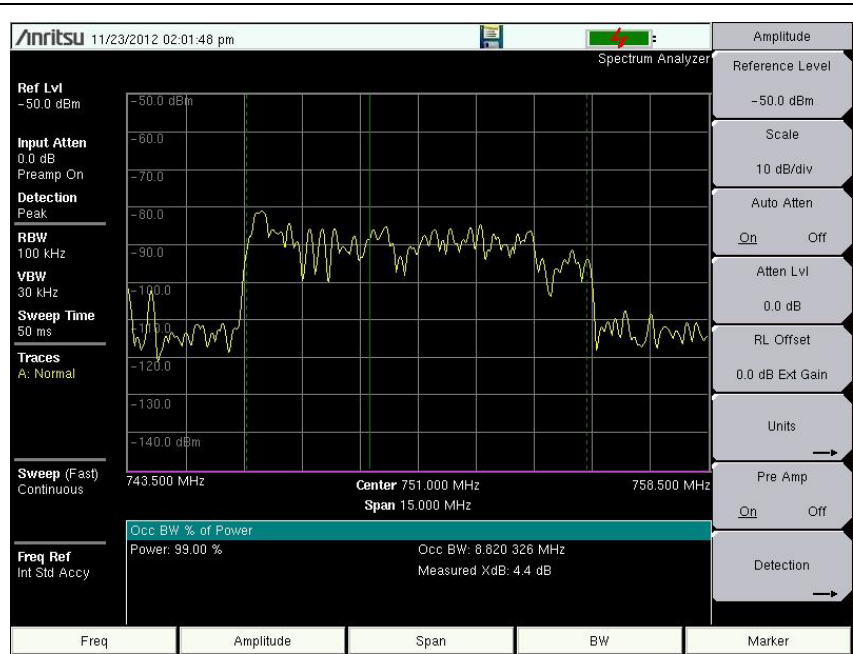


Figure 2-11. Occupied Bandwidth Results Using the % of Power Method

2-14 Channel Power Measurement

Introduction

Channel power measurement is one of the most common measurements for a radio transmitter. This test measures the output power, or channel power, of a transmitter over the frequency range. Out-of-specification power measurements indicate system faults, which can be in the power amplifiers or in filter circuits. Channel Power measurements can be used to validate transmitter performance, comply with government regulations, or to keep overall system interference at a minimum.

Frequency and span settings for many signal standards can be set.

1. Press the **Freq** main menu key.
2. Press the Signal Standard submenu key. Choose the desired standard and press **Enter**.
3. Press the Channel # submenu key to enter the channel number at which the measurement is to take place and press **Enter**.
4. Press the **Shift** key then the **Measure** (4) key. Then press the Power and Bandwidth submenu key, and press the Channel Power submenu key.
5. Press the On/Off submenu key to start and stop channel power measurements.

Channel Power Measurement for GSM

Global Systems for Mobile (GSM) communication is a globally accepted standard for digital cellular communication. A number of frequency bands that are allocated to GSM mobile phones use a combination of Frequency Division Multiple Access (FDMA) and Time Division Multiple Access (TDMA). Within each band, are approximately one hundred available carrier frequencies on 200 kHz spacing (FDMA), and each carrier is broken up into time-slots so as to support eight separate conversations (TDMA). GSM uses the Gaussian Minimum Shift Keying (GMSK) modulation method.

Required Equipment

Test Port extension cable, Anritsu 15NNF50-1.5C

Procedure

1. Using the test port extension cable, connect the signal source to the RF In test port.
2. Press the **Amplitude** main menu key and press the Reference Level submenu key to set the reference level to -20 dBm. Adjust the values given in this procedure to match your measurement conditions.
3. Press the Scale submenu key and set the scale to 10 dB/div.
4. Press the **BW** main menu key and verify that Auto RBW and Auto VBW are On.
5. Press the **Freq** main menu key followed by the Signal Standard submenu key. Scroll through the dialog box using the up or down arrow keys or the rotary knob to highlight the GSM 900 - Downlink standard for the measurement and press **Enter**.
6. Press the Channel# submenu key and enter the channel number using the keypad, the arrow keys, or the rotary knob. For this example, select Channel 60.

7. Press the **Shift** key then the **Measure** (4) key. Then press the Power and Bandwidth submenu key, and press the Channel Power submenu key.
8. Verify that the center frequency is set to that of the GSM signal, in this case 947.0 MHz by looking at the center frequency annotation on-screen.
9. Press the Ch Pwr Width submenu key and enter 200 kHz for the integration bandwidth, or set the integration bandwidth appropriate for the particular application.
10. Press the Span submenu key and enter 600 kHz as the channel span, or set the channel span to a value appropriate for the particular application.
11. Make the measurement by pressing the **Measure** (4) key, the Power and Bandwidth submenu key, and the Channel Power submenu key. Then press On. The measurement results are displayed in the message area.

Note

Channel Power is a constant measurement. After it is turned on, it remains on until it is turned off by pressing the On/Off submenu key again.

2-15 Adjacent Channel Power Measurement

Required Equipment

- 30 dB, 50 watt, Bi-Directional, DC–18 GHz, N(m)–N(f) Attenuator, Anritsu Part Number 42N50A-30 (if required for the power level being measured)
- Test Port extension cable, Anritsu Part Number 15NNF50-1.5C

Procedure

1. Using the test port extension cable and 30 dB attenuator, connect the signal source to the input of the attenuator, and connect the output of the attenuator to the RF In test port.
2. If an attenuator was connected in step 1, press the **Amplitude** main menu key then press the **RL Offset** submenu key, enter 30 then select dB External Loss to compensate for the loss in the attenuator.
3. Press the **Amplitude** main menu key and press the **Reference Level** submenu key to set the reference level to 60 dBm.
4. Press the **Atten Lvl** submenu key to set the input attenuation level needed for the measurement. This value depends on the input power level and any external attenuator. Enter an attenuation level to achieve roughly –40 dBm at the input mixer.
5. Press the **BW** main menu key and verify that Auto RBW and Auto VBW are On.
6. There are two ways to set the measurement parameters. If the signal standard and channel are known, press the **Freq** main menu key and set the signal standard and press **Channel** submenu key for the signal to be measured, then skip to [Step 12](#). If the signal standard and channel are not known, follow the procedure in [Step 7](#) through [Step 11](#).
7. Press the **Freq** main menu key, press the **Center Freq** submenu key, and enter the desired center frequency.
8. Press the **Shift** key then the **Measure (4)** key. Then press the **Power and Bandwidth** submenu key, and press the **ACPR** submenu key.
9. Press the **Main Ch BW** submenu key, and enter the main channel bandwidth.
10. Press the **Adj Ch BW** submenu key, and enter the adjacent channel bandwidth.
11. Press the **Ch Spacing** submenu key, and enter the channel spacing.
12. Make the measurement by pressing the **On/Off** submenu key. The detection method is automatically changed to RMS Average.

Solid vertical lines are drawn on the display to indicate the main channel. Dashed vertical lines define the adjacent channels. The SPA displays the measurement results in the message area.

Note

Adjacent Channel Power Ratio is a constant measurement. After it is turned on, it remains on until it is turned off by pressing the On/Off submenu key again.

2-16 EMF Measurement (Option 444)

Option 444 adds the EMF Measurement menu to the Spectrum Analyzer measurement mode. Refer to the *EMF Measurement Guide* (10580-00455) for complete description of this option.

Required Equipment

This option must be used in conjunction with an Anritsu isotropic antenna in the frequency range specified by the instrument and antenna technical data sheets.

Procedure

1. Press the **Shift** key, then the **Mode** (9) key to open the Mode Selector dialog box. Use the **Up** or **Down** arrow keys to highlight the Spectrum Analyzer measurement mode and press **Enter**.
2. Press the **Shift** key followed by the **Measure** (4) key.
3. To access EMF Measurement, press the Power and Bandwidth submenu key, then EMF Measurement.

2-17 Out-of-Band Spurious Emission Measurements

The measurements described in this section are distinct from the built-in out-of-band spurious emission measurements that are performed via the **Masks** and **C/I** submenu. See [“Spurious Emissions \(Out-of-Band\) Measurement”](#) on page 2-31.

Required Equipment

Test Port extension cable, Anritsu 15NNF50-1.5C

Procedure

1. Using the test port extension cable, connect the signal source to the RF In test port.
2. Press the **Freq** main menu key, press the **Center Freq** submenu key, and enter the center frequency.
3. Press the **Span** main menu key. Set the span wide enough to include the primary channel bandwidth and upper and lower channel bandwidths.
4. Press the **Amplitude** main menu key, then press the **Reference Level** submenu key and set the reference level to -20 dBm.
5. Press the **Auto Atten** submenu key and select **On**.
6. Press the **BW** main menu key, then use the **RBW** and **VBW** submenu keys to set the resolution bandwidth to 3 kHz and the video bandwidth to 300 Hz.
7. Press the **Marker** main menu key and press the **Marker 123456** submenu key to select Marker 1. The underlined number indicates the active marker.

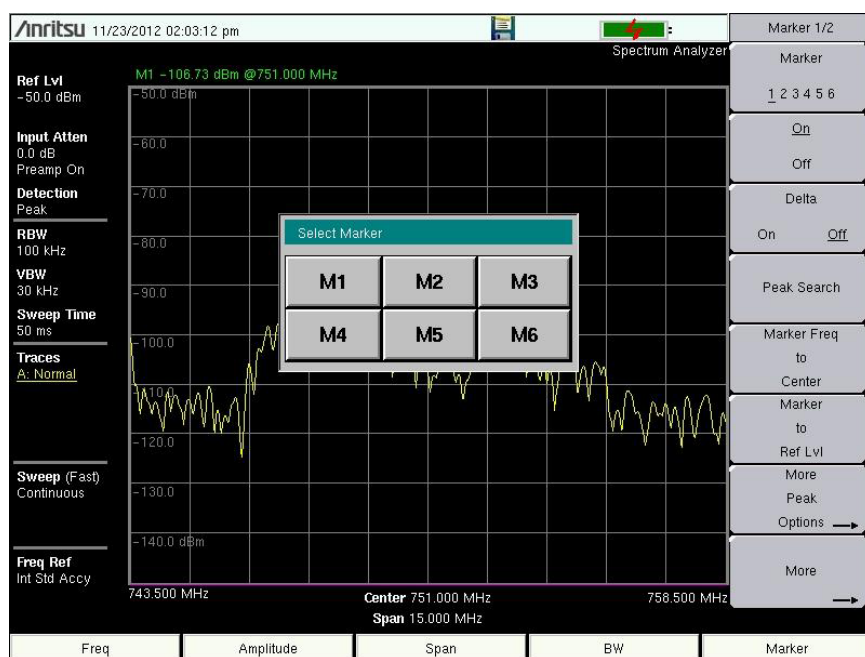


Figure 2-12. Select Active Marker with the Touch Screen

- 8. Press the On/Off\ delta marker, press the Delta submenu key so that On is underlined. Use the arrow keys or rotary knob to move the delta marker to the desired frequency and press **Enter**.
- 9. Compare the value of the marker to the specified allowable level of out-of-band spurious emissions for the corresponding channel transmit frequency.
- 10. Repeat [Step 8](#) and [Step 9](#) for the remaining spurs. Use either Marker 1 again, or choose another marker. [Figure 2-13](#) shows a simulated out-of-band spurious signal 3 MHz from the carrier using a delta marker.

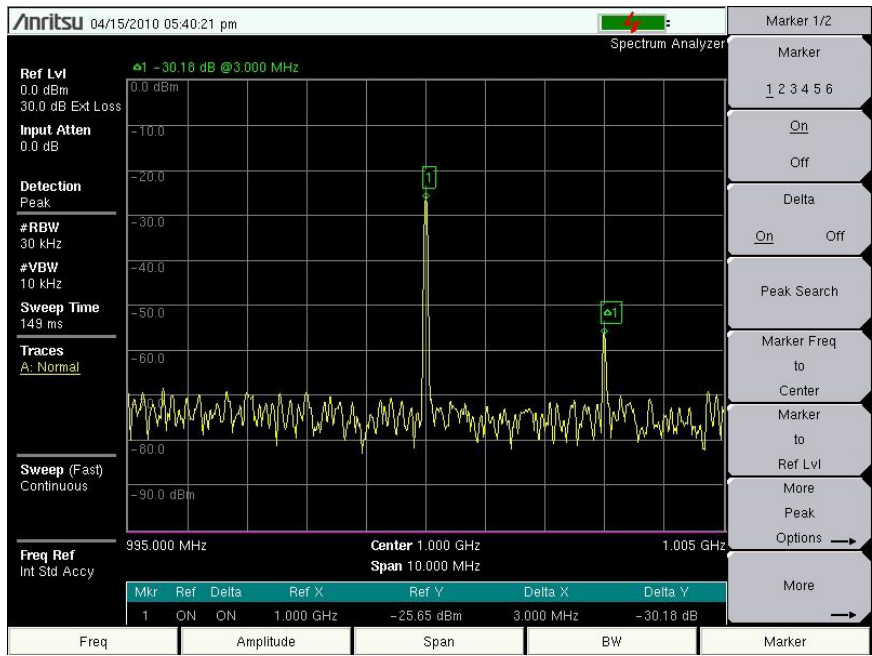


Figure 2-13. Out-of-Band Spurious Emission Measurement

2-18 In-Band/Out-of-Channel Measurements

The in-band/out-of-channel measurements are used to determine the distortion and interference within the system band, but outside of the transmitting channel. These measurements include in-band spurious emissions and adjacent channel power ratio (also called spectral regrowth). There are stringent regulatory controls on the amount of interference that a transmitter can spill to neighboring channels. To determine compliance with the allowable level of spurious emissions, two parameters need to be specified:

- Measurement channel bandwidth
- Allowable level of spurious emissions

The measurements described in this section are distinct from the built-in emission mask (in-band) measurements that are performed via the **Masks** and **C/I** submenu. See [“Emission Mask \(In-Band\) Measurement” on page 2-30](#).

Required Equipment

- 30 dB, 50 watt, Bi-Directional, DC–18 GHz, N(m)–N(f), Attenuator, Anritsu 42N50A-30
- Test Port extension cable, Anritsu 15NNF50-1.5C

Procedure

1. Using the test port extension cable and 30 dB, 50 watt, (Bi-directional) attenuator, connect the **RF In** port to the appropriate transmit test port.
2. Press the **Freq** main menu key, press the **Center Freq** submenu key, and enter the center frequency.
3. Press the **Span** main menu key. Set the span wide enough to include the primary channel bandwidth and upper and lower channel bandwidths.
4. Press the **Amplitude** main menu key and then press the **Reference Level** submenu key to set the reference level to -20 dBm.
5. Press the **RL Offset** submenu key, enter 30 then select **dB External Loss** to compensate for the loss in the attenuator.
6. Press the **Auto Atten** submenu key and set the attenuation to **On**.
7. Press the **BW** main menu key and use the **RBW** and **VBW** submenu keys to set the resolution bandwidth to 10 kHz and the video bandwidth to 300 Hz.
8. Press the **Marker** main menu key and press the **Marker 123456** submenu key to select Marker 1. The underlined number indicates the active marker.
9. Press the **On/Off** submenu key and use the arrow keys, the keypad or the rotary knob to move the marker over one of the spurs.
10. Compare the value of the marker to the specified allowable level of in-band/out-of-channel spurious emissions for the corresponding channel transmit frequency.
11. Repeat steps 9 and 10 for the remaining spurs. Use either Marker 1 again, or choose another marker.

2-19 AM/FM/SSB Demodulation Measurements

The built-in demodulator for AM, narrowband FM, wideband FM, and single sideband (selectable upper sideband (USB) and lower sideband (LSB) signals) allows a technician to hear an interfering signal. The demodulated signal can be heard using either the built-in speaker or a monaural headset connected to the 2.5 mm jack on the connector panel.

Procedure

1. Press the **Shift** key followed by the **Measure (4)** key. Then press the AM/FM Demod submenu key.
2. Press the Demod Type submenu key and press FM Wide Band, FM Narrow Band, AM, USB, or LSB to match the modulation format of the signal.
3. Press the Back submenu key.
4. Press the Demod Freq submenu key and use the keypad or rotary knob to enter the center frequency of the signal to be demodulated. For USB and LSB signals, fine tune the signal by adjusting the Beat Freq Osc. By default the BFO frequency is set to zero, meaning that the re-injected carrier is exactly at the demodulation frequency. The Beat Freq Osc submenu key allows adjustment of the beat frequency oscillator to fine tune the signal through a span of ± 10000 Hz.
5. Press the On/Off submenu key to enable the demodulation.
6. Press the Volume submenu key and use the up or down arrow keys or the rotary knob to change the audio volume from 0% to 100%. For most headsets, a volume of 40% is adequate.
7. The Demod Time submenu key sets the time that the instrument demodulates the signal. Enter a value from 100 ms to 500 seconds.

2-20 Carrier to Interference Ratio Measurement

Carrier to Interference Ratio (C/I) Measurement is a two-step process, first measuring the carrier level and then, with the carrier turned off, measuring the remaining signals and noise in the band of interest. After the two measurements are complete, the ratio of the carrier level to the noise plus interference is displayed using three assumptions:

- The interferer is a narrowband frequency hopping signal (NB FHSS)
- The interferer is a wideband frequency hopping signal (WB FHSS)
- The interferer is a broadband signal (BB).

The primary application for this type of measurement is determining the magnitude of interference problems for 802.11b, 802.11g and 802.11a access points (hot spots).

Procedure

1. Press the **Freq** main menu key followed by the **Signal Standard** submenu key. Select the appropriate signal standard based on the signal to be measured and press **Enter**.
2. Press the **Channel** submenu key, select the operating channel of the access point being measured and press **Enter**.
3. Press the **Shift** key followed by the **Measure (4)** key. Then press the **Masks and C/I** submenu key, and then the **C/I** submenu key.
4. Press the **Center Freq** (or **Offset Center Freq**) submenu key and enter the desired frequency, unless a Signal Standard and Channel have already been selected in the Frequency menu.
5. If needed, press the **Span** submenu key and set an appropriate span width for the signal to be measured.
6. If the signal environment includes slow frequency hopping signals, such as cordless telephones, press the **Sweep Time** submenu key to set a sweep time of one second or more to give a good chance of capturing instances of the interfering signal. The minimum sweep time for a valid measurement is displayed in the **Min Sweep Time** submenu key.
7. Press the **On/Off** submenu key and follow the on-screen prompts to complete the measurement.

Note

Access to the transmitter is required to complete this procedure as the transmitted carrier must be turned off for the second portion of the measurement.

8. After the measurement is complete, the measurement box gives results for the three different signal types. Some measurement results may show as Error, and this is to be expected.

The following figures show the C/I measurement steps: ready to measure the carrier (Figure 2-14), with the carrier measured (Figure 2-15), and the measurement results (Figure 2-16).

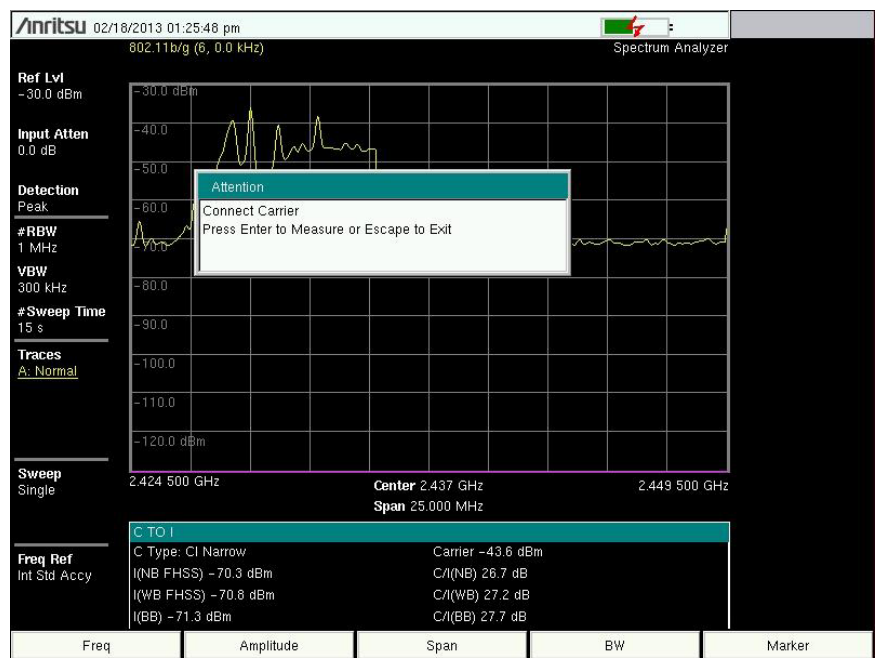


Figure 2-14. C/I Measurement, Ready to Measure the Carrier

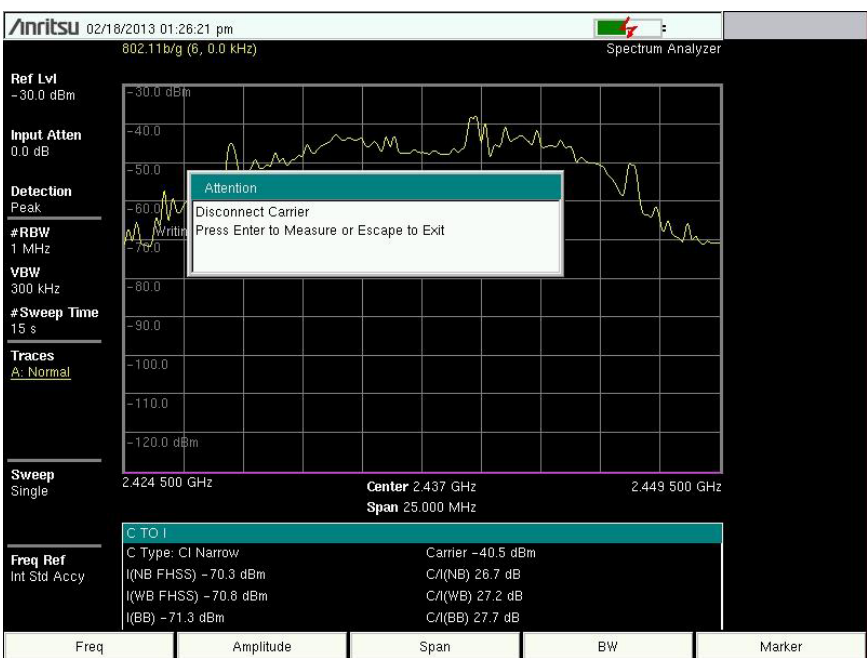


Figure 2-15. C/I Measurement, Carrier Measured

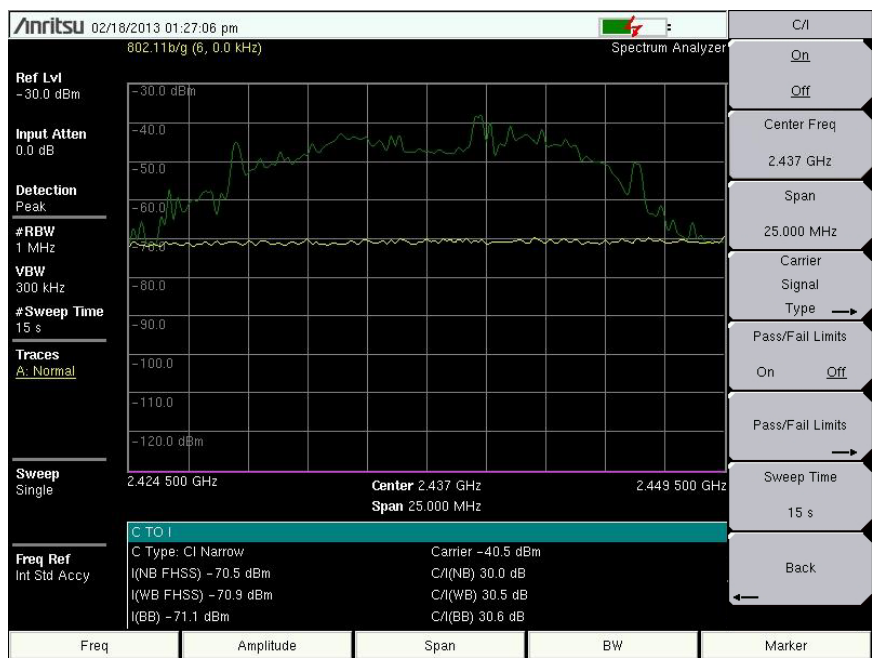


Figure 2-16. C/I Measurement, Results

2-21 Emission Mask (In-Band) Measurement

The emission mask is a segmented upper limit line that displays frequency range, peak power and frequency, relative power, and pass/fail status for each segment of the mask. The emission mask must have at least two segments.

- 1. Create or recall a multi-segment limit line or envelope to use as an emission mask. Refer to [Section 2-35 “Limit Menu” on page 2-99](#) for details on the Limit menu.
- 2. Press the **Shift** key followed by the **Measure (4)** key. Then press the Masks and C/I submenu key, and then the Emission Mask (In-Band) submenu key.
- 3. Press the Ref Power Peak/Channel submenu key to toggle between the two settings. When **Peak** is selected, the mask is moved up or down so that the mask value at the center frequency is the same as the peak value of the trace. When **Channel** is selected, the reference power value is the same as would be calculated by the Channel Power measurement, over the defined channel width; in this case, the mask value at the center frequency is moved to the channel power measurement result.
- 4. Press the Emission Mask On/Off submenu key to turn Emission Mask On.
- 5. The table at the bottom of the screen displays the pass/fail status of each Emission Mask segment.

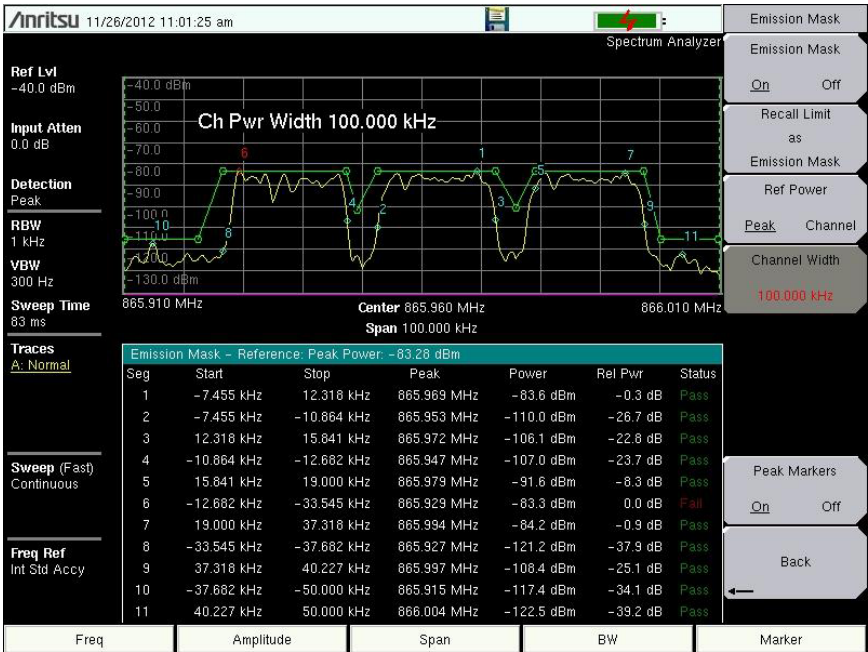


Figure 2-17. Emission Mask (In-Band)

2-22 Spurious Emissions (Out-of-Band) Measurement

The Spectrum Analyzer measures spurious emissions from a base station using the Spurious Emissions (Out-of-Band) Mask feature. Creating a spurious emission mask allows you to test signals against wireless communications standards. A mask with up to 32 segments must be created before starting the measurements.

Creating a New Spurious Emission Mask

1. Press the **Shift** key followed by the **Measure (4)** key. Then press the Masks and C/I submenu key followed by the Spurious Emissions (Out-of-Band) key.
2. Press the Spurious Emissions submenu key to select On. See [Figure 2-18](#).

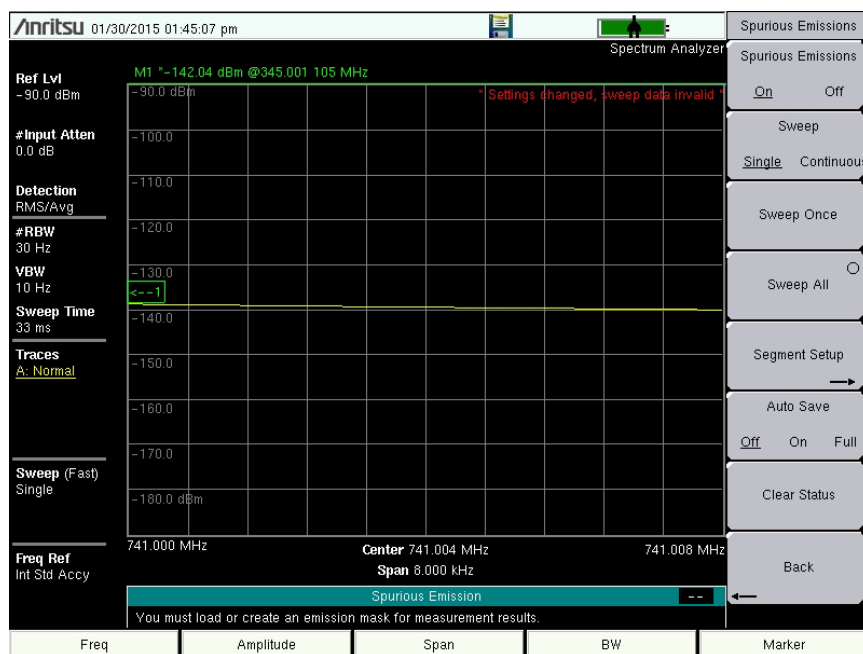


Figure 2-18. Spurious Emission Screen

3. Press the **Freq** main menu key followed by the Start Freq submenu key and enter a value for the beginning point of a segment.
4. Press the Stop Freq submenu key and enter a value for the end point of the segment.
5. Optionally, you can adjust the RBW, VBW, reference level, and reference level offset. However, you cannot change the sweep mode or any of the following amplitude settings for individual segments in the mask:
 - Preamp On/Off
 - Auto Attenuator On/Off
 - Attenuator Level (the attenuator adjusts automatically if Auto Attenuator is currently On)
6. Return to the Spurious Emissions submenu by pressing the touch screen shortcut in the upper right corner of the display, where the words **Spectrum Analyzer** are located.

You can also select the Spurious Emissions submenu by pressing the **Shift** key followed by the **Measure (4)** key, then pressing the Masks and C/I submenu key followed by the Spurious Emissions (Out-of-Band) key.

7. Press Segment Setup to display the Spurious Segments submenu, illustrated in [Figure 2-19](#).
8. Press Add Current Settings As New Segment.
9. Press Segment Start Amplitude and enter the desired pass/fail limit amplitude for the first point of the segment.
10. Press Segment Stop Amplitude and enter the desired pass/fail limit amplitude for the last point of the segment.

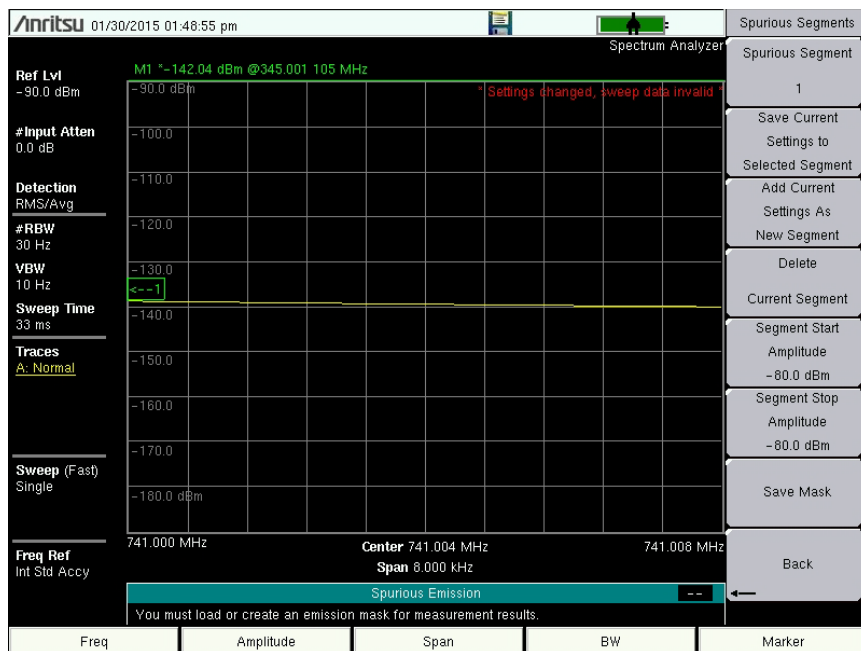


Figure 2-19. Spurious Segments Screen

11. Press Save Current Settings to Selected Segment.
12. Repeat [Step 3](#) through [Step 11](#) as necessary to create more segments.
13. Press Save Mask and enter the mask name in the Filename entry field. If needed, select Spurious Emission Mask from the Filetype pull-down menu. Press Enter.

To start the spurious emission measurements, refer to [“Spurious Emissions \(Out-of-Band\) Measurements”](#) on page 2-35.

Loading an Existing Mask

1. Press the **Shift** key followed by the **File (7)** key.
2. Press Recall.
3. Scroll through the list of files and select the desired spurious emission mask (file extension .spe).
4. Press **Enter** to load the selected mask into the Spurious Emission measurement.

Modifying an Existing Mask

To edit segments in an existing mask:

1. Load the desired emission mask.
2. Press **Segment Setup** to display the **Spurious Segments** submenu.
3. Press the **Spurious Segment** submenu key and select the segment number to edit, which is highlighted in red.
4. Press the **Freq** main menu key followed by the **Start Freq** submenu key and enter a value for the beginning point of a segment.
5. Press the **Stop Freq** submenu key and enter a value for the end point of the segment.
6. Return to the **Spurious Emissions** submenu by pressing the touch screen shortcut in the upper right corner of the display, where the words **Spectrum Analyzer** are located.
You can also select the **Spurious Emissions** submenu by pressing the **Shift** key followed by the **Measure (4)** key, then pressing the **Masks and C/I** submenu key followed by the **Spurious Emissions (Out-of-Band)** key.
7. Press **Segment Setup**.
8. Press **Segment Start Amplitude** and enter the desired amplitude for the first point of the segment.
9. Press **Segment Stop Amplitude** and enter the desired amplitude for the last point of the segment.
10. Press **Save Current Settings to Selected Segment**.
11. Repeat [Step 3](#) through [Step 10](#) as necessary to edit more segments.
12. Press **Save Mask** and enter the mask name in the **Filename** entry field. Use the existing mask name if you wish to overwrite the file. If needed, select **Spurious Emission Mask** from the **Filetype** pull-down menu. Press **Enter**.

To add segments to an existing mask:

1. Load the desired emission mask.
2. Press **Segment Setup** to display the **Spurious Segments** submenu.
3. Use the current segment number shown on the **Spurious Segment** submenu key or enter the number of the segment to be used as a template for the new segment.
4. Press **Add Current Settings As New Segment**.
5. Press the **Freq** main menu key followed by the **Start Freq** submenu key and enter a value for the beginning point of a segment.

6. Press the Stop Freq submenu key and enter a value for the end point of the segment.
7. Return to the Spurious Emissions submenu by pressing the touch screen shortcut in the upper right corner of the display, where the words Spectrum Analyzer are located.

You can also select the Spurious Emissions submenu by pressing the **Shift** key followed by the **Measure (4)** key, then pressing the Masks and C/I submenu key followed by the Spurious Emissions (Out-of-Band) key.
8. Press Segment Setup.
9. Press Segment Start Amplitude and enter the desired amplitude for the first point of the segment.
10. Press Segment Stop Amplitude and enter the desired amplitude for the last point of the segment.
11. Press Save Current Settings to Selected Segment.
12. Repeat [Step 4](#) through [Step 11](#) as necessary to add more segments.
13. Press Save Mask and enter the mask name in the Filename entry field. Use the existing mask name if you wish to overwrite the file. If needed, select Spurious Emission Mask from the Filetype pull-down menu. Press Enter.

Spurious Emissions (Out-of-Band) Measurements

Three types of measurements are available once you have created an emission mask. You can choose to sweep the full mask once or continuously, or sweep an individual mask segment. You can also select to save or not save the measurement results.

Sweeping All Segments Once

1. Press the Sweep submenu key and select Single.
2. Press the Auto Save submenu key and select Off, On, or Full. Refer to [“Auto Save Modes”](#).
3. Press Sweep All to initiate one measurement sweep of the full spurious emission mask. See [Figure 2-20](#).

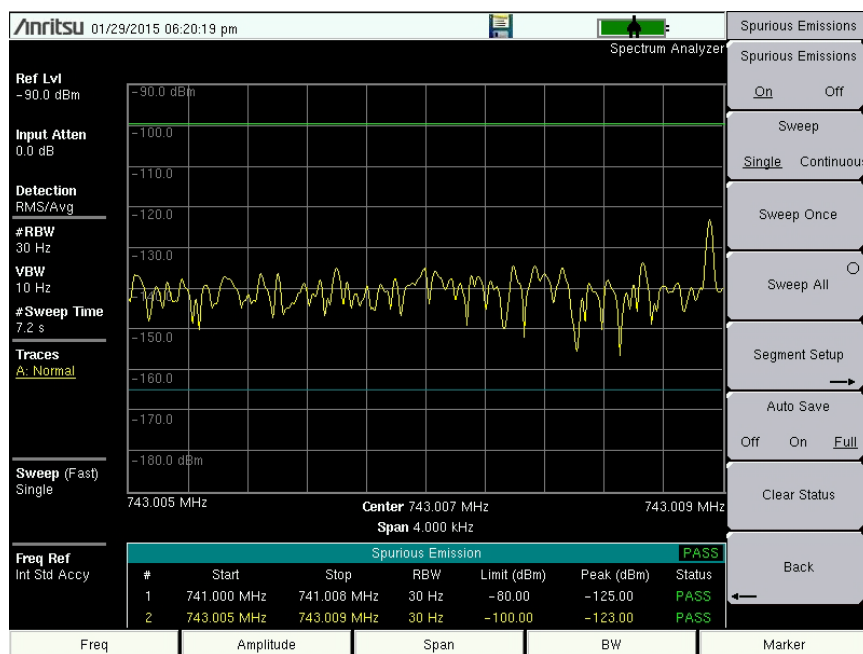


Figure 2-20. Spurious Emission Measurements

Sweeping All Segments Continuously

1. Press the Auto Save submenu key and select Off, On, or Full. Refer to [“Auto Save Modes”](#).
2. Press the Sweep submenu key and select Continuous to start the measurements.
3. Press Sweep again to select Single and stop the measurements.

Sweeping an Individual Segment

1. Press the Sweep submenu key and select Single.
2. Press the Auto Save key and select Off, On, or Full. Refer to [“Auto Save Modes”](#).

- 3. Press Sweep Once to initiate one measurement sweep of the currently selected segment, which is highlighted in yellow in the Spurious Emission table. See [Figure 2-20](#).

Auto Save Modes

Measurements can be saved automatically by pressing the Auto Save submenu key and selecting either On or Full. The On setting saves an HTML file that contains a table for each segment measured. A status block in the table displays Pass or Fail for the individual segment. The Overall Status at the end of the file indicates whether the spurious emission mask passed or failed. See [Figure 2-21](#).

Segment 1	Pass
Start Frequency	743.000000 MHz
Stop Frequency	747.000000 MHz
Ref Level	-90.0 dBm
Auto Attenuation	On
Attenuation	0 dB
Detection	RMS/Avg (Log)
Ref Level Offset	0.0 dB
Preamp	Off
RBW	0 MHz
Auto-RBW	Off
VBW	0 MHz
Auto-VBW	Off
VBW Type	Linear
Start Amplitude	-80.0 dBm
Stop Amplitude	-80.0 dBm
Peak Power	-107.8 dBm

Overall Status: PASSED.

Figure 2-21. Spurious Emission Mask Segment Data - Auto Save On

The Auto Save Full selection generates a scroll list that displays the amplitude of each frequency point measured for the segment. A JPG image of the segment is displayed in the HTML file. The image is also saved as a separate JPG file, which is listed at the bottom of the segment table and labeled Screen Shot. See [Figure 2-22](#).

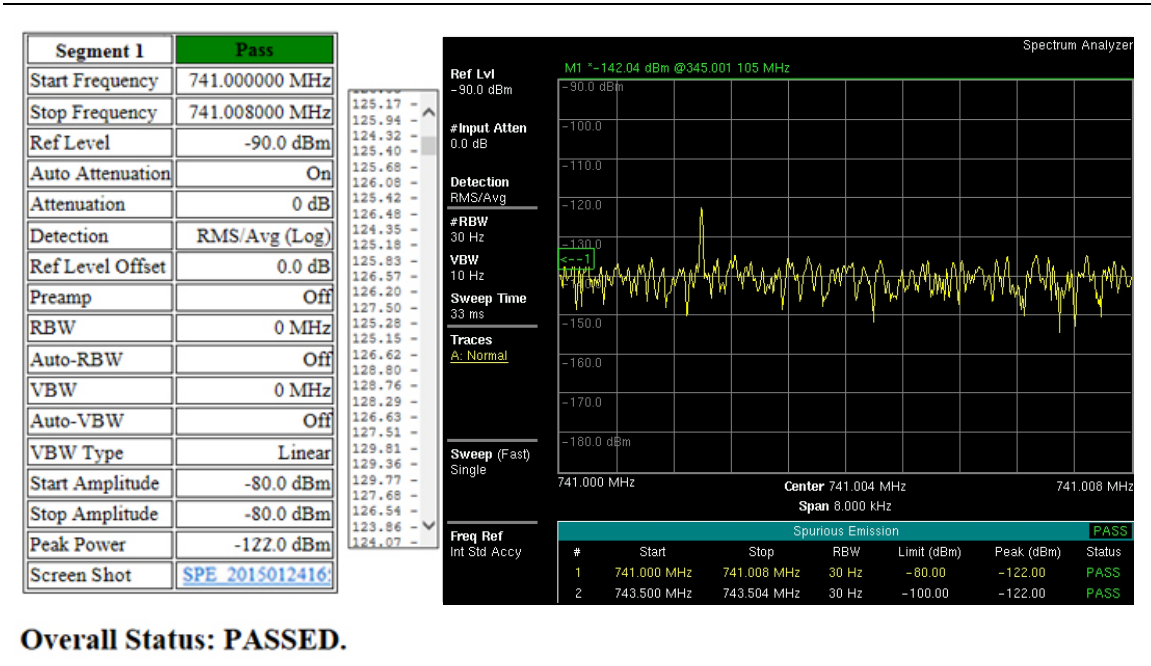


Figure 2-22. Spurious Emission Mask Segment Data - Auto Save Full

2-23 PIM Hunting

Introduction


PIM hunting is an essential measurement technique for contractors and operators who have confirmed that a transmitter site is experiencing PIM and who need to locate and mitigate the sources. An Anritsu PIM Master™ MW82119B generates test tones and “lights up” the PIM sources. The user searches for the precise locations of the PIM sources with the PIM probe attached to an Anritsu spectrum analyzer. This search requires very fast response to changes in the signal level detected by the PIM probe, along with the ability to set and change limit lines quickly. The PIM Hunting menu in the spectrum analyzer provides everything you need in a single menu and the response time is optimized for signal detection.

Starting PIM Hunting

To start PIM Hunting mode:

1. Put the instrument in Spectrum Analyzer mode.
2. Press the **Shift** button then press the **4 (Measure)** key to enter the measurement control menu.
3. Press the PIM Hunting button on the Measure menu.
4. Use the instructions in [Figure 2-74, “PIM Hunting Menu” on page 2-90](#) to set the PIM Hunting measurement.

Measurement Results

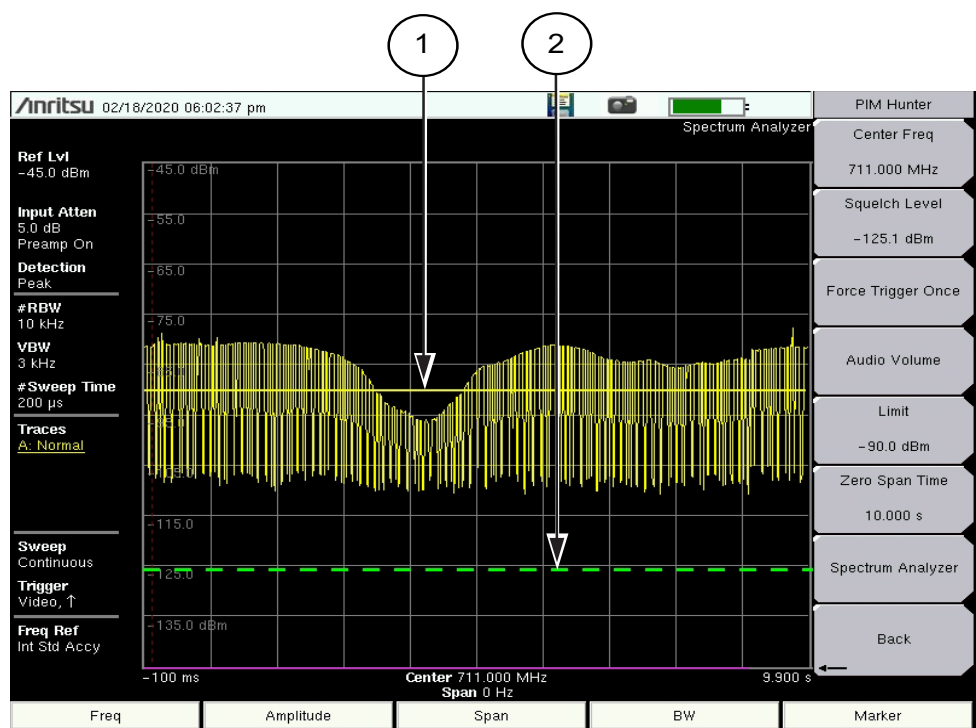

1.	The PIM Limit Line
2.	The Squelch Level Line

Figure 2-23. PIM Display

A user is alerted to the location of a PIM source by a tone and by a graph.

Procedure

1. Set the center frequency. Use the IM3 (product under test) value shown on the PIM Master as your center frequency. Make sure to go to a different button so as not to accidentally change the Center Frequency. Remember that this is a Zero Span measurement and any change to the center frequency affects the measurement.
2. Set the limit line level. This level is usually set (see specific method of procedure (MOP) for required settings) from a few dB to as much as 10 dB lower than the measured PIM vs. Time value (because that is the PIM measurement used for PIM hunting). Pass/Fail criteria may ultimately be set by the Swept PIM measurement on the PIM Master, but PIM vs. Time is the measurement used for PIM hunting.
3. Set the squelch level. This level is set below the Limit Line level, at least 10 dB or lower.
4. Set the zero span time. This lets the user see the IM pulses (battery-powered PIM analyzers use pulsed F1 & F2 CW signals for power efficiency). This can be set to the user's preference for PIM Hunting. The screen shot in [Figure 2-23, "PIM Display" on page 2-39](#) has a 10-second Zero Span Time and shows multiple pulsed IM signals.
5. Set the force trigger once. Use this setting to see the level (dBm) to which the signal falls; it needs to be above the Squelch Line in order for it to move. You can adjust the Squelch Level accordingly.
6. Set the audio volume to a comfortable level so that you hear it clearly and do not need to look at the screen when PIM hunting.
7. After setting up your measurement, use the DTP (Distance-to-PIM) value from the PIM Master as a starting distance from the antenna to start looking for the PIM source. Use a handheld spectrum analyzer and a PIM Hunter probe with the appropriate uplink filter connected to the spectrum analyzer via an RF cable (N connectors).

Caution

Practice safety when PIM hunting, especially on elevated platforms (e.g., roofs or towers) or in cluttered environments and be aware of your surroundings.

8. With the configured PIM Hunting setup, move the probe antenna around (e.g., roof top or tower) and listen to the audio tone. The audio tone starts with a low pitch (when not near the PIM source) and increases to a higher pitch as the antenna gets nearer to the PIM source) to determine where the PIM sources are.
9. Move the probe around until the tone gets very high, then go beyond that point to see if it stays high or goes down in pitch to locate the exact source. Validate the source by placing a mitigating device over the source, such as a temporary PIM blanket, to see if the PIM level decreases on the PIM Master (sometimes there are multiple PIM sources around the same value, so the PIM measurement may remain in the same range). After that PIM source is found and mitigated, move on to the next and repeat until the PIM measurement value is at the required level per the MOP or customer requirement.


2-24 IQ Waveform Capture (Option 24)

Option 24, IQ Waveform Capture, captures the raw data for the set center frequency and for the duration of the set capture length. This section includes instructions for setting up the instrument, capturing a waveform, and saving it to the instrument, or using the MATLAB script to read the captured waveform and to save it to a PC.

For remote setup and waveform capture, please refer to the Programming Manual for your instrument. It includes SCPI commands for instrument remote control, waveform set up and capture, and two sample scripts: MATLAB and C++. The MATLAB script is used to read a WCAP file from the instrument and unpack the data into a MATLAB array. The C++ sample program uses the SCPI commands to initiate a capture and save it directly to the PC.

Waveform Capture Setup

1. Press the **Shift** key and then the **Measure (4)** key on the instrument to open the Measure menu.
2. Press the IQ Waveform Capture submenu key (which is displayed only if Option 24 is installed on your instrument) to open the IQ Waveform Capture menu.
3. Press the Capture Length submenu key to set the length of time that data is taken.
4. Press the Capture Mode submenu key and select either **Single** or **Continuous**. Selecting **Single** performs one capture when **Start Capture** is pressed. When **Continuous** is selected, multiple waveform captures (that are the time length set in **Capture Length**) are taken until the **Start Capture** button is pressed to end the waveform capture process.
5. Press the Sample Rate submenu key to set the desired capture rate. Bandwidths are also displayed for each sample rate. Select the desired sample rate in the Select Capture Sample Rate list box (Figure 2-24) with the arrow keys or rotary knob and press **Enter**.

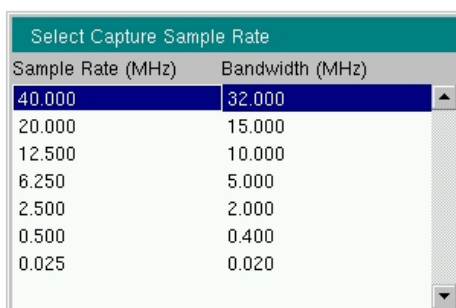

Sample Rate (MHz)	Bandwidth (MHz)
40.000	32.000
20.000	15.000
12.500	10.000
6.250	5.000
2.500	2.000
0.500	0.400
0.025	0.020

Figure 2-24. IQ Capture Sample Rate

6. Press the Triggering submenu key to open the Capture Triggering menu. Set the **Source**, **Slope** and **Delay** parameters. Press **Back** to return to the IQ Waveform Capture menu.
7. Press the File Name & Location submenu key to open the Save menu. Set up the folder where the saved captured data are placed by pressing the **Capture Location** submenu key. Set up a captured waveform filename using the **File Name (Prefix)** submenu key. Refer to [“IQ Capture Save Menu” on page 2-92](#) for additional information on Capture Location and File Name (Prefix).

- 8. Press the Frequency/Amplitude submenu key to set up the frequency parameters of the waveform to be captured. The Freq/Amp menu opens. Set the frequency, span, reference level and scale for the y-axis, and attenuation settings for the waveform capture.

Note

When setting the Span, set it slightly larger than the captured bandwidth. This allows you to see what you are capturing within the display. A good value to start with is 125% of the captured bandwidth. Setting the Span this way does not affect the bandwidth of the captured signal.

Capturing a Waveform

Press the Start Capture submenu key. If Capture Mode was set to Single, a single waveform capture is taken. If Continuous is selected, waveform capturing ends when the Stop Capture (initial state Start Capture) button is pressed. When Stop Capture is pressed, the current capture cycle completes and then IQ capture ends. The captured waveform is named and stored in the file location set by File Name (Prefix) and Capture Location.

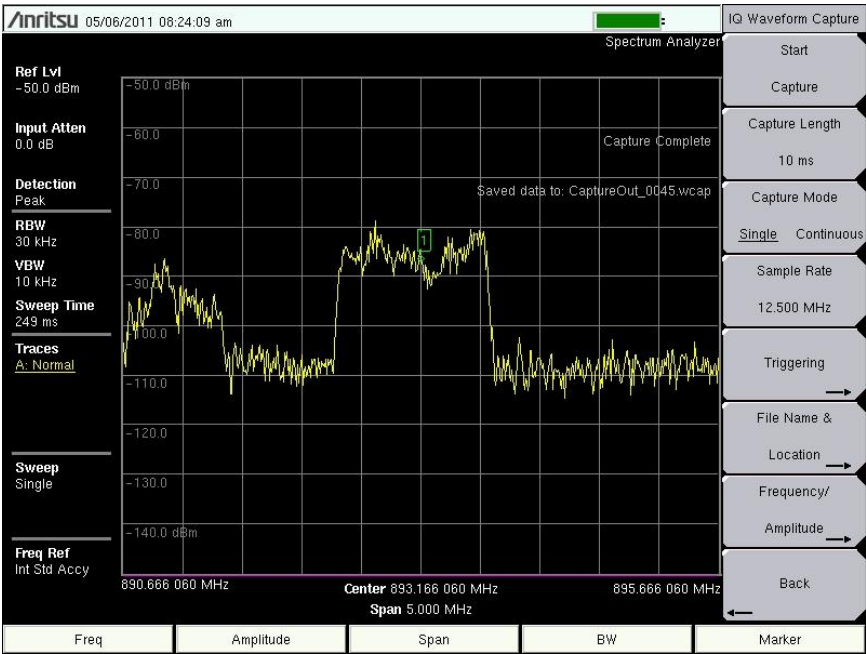


Figure 2-25. IQ Waveform Capture

2-25 Spectrum Analyzer Menus

Figure 2-26 through Figure 2-36 show the maps of the Spectrum Analyzer menus. The following sections describe Spectrum Analyzer main menus and associated submenus. The submenus are listed in the order they appear on the display from top to bottom under each main menu. Menu maps typically display all possible submenu keys, although some keys are displayed on the instruments only under special circumstances (refer to menu descriptions).

Main menu keys are used to display the highest-level menus. The Marker menu is shown on the next page.

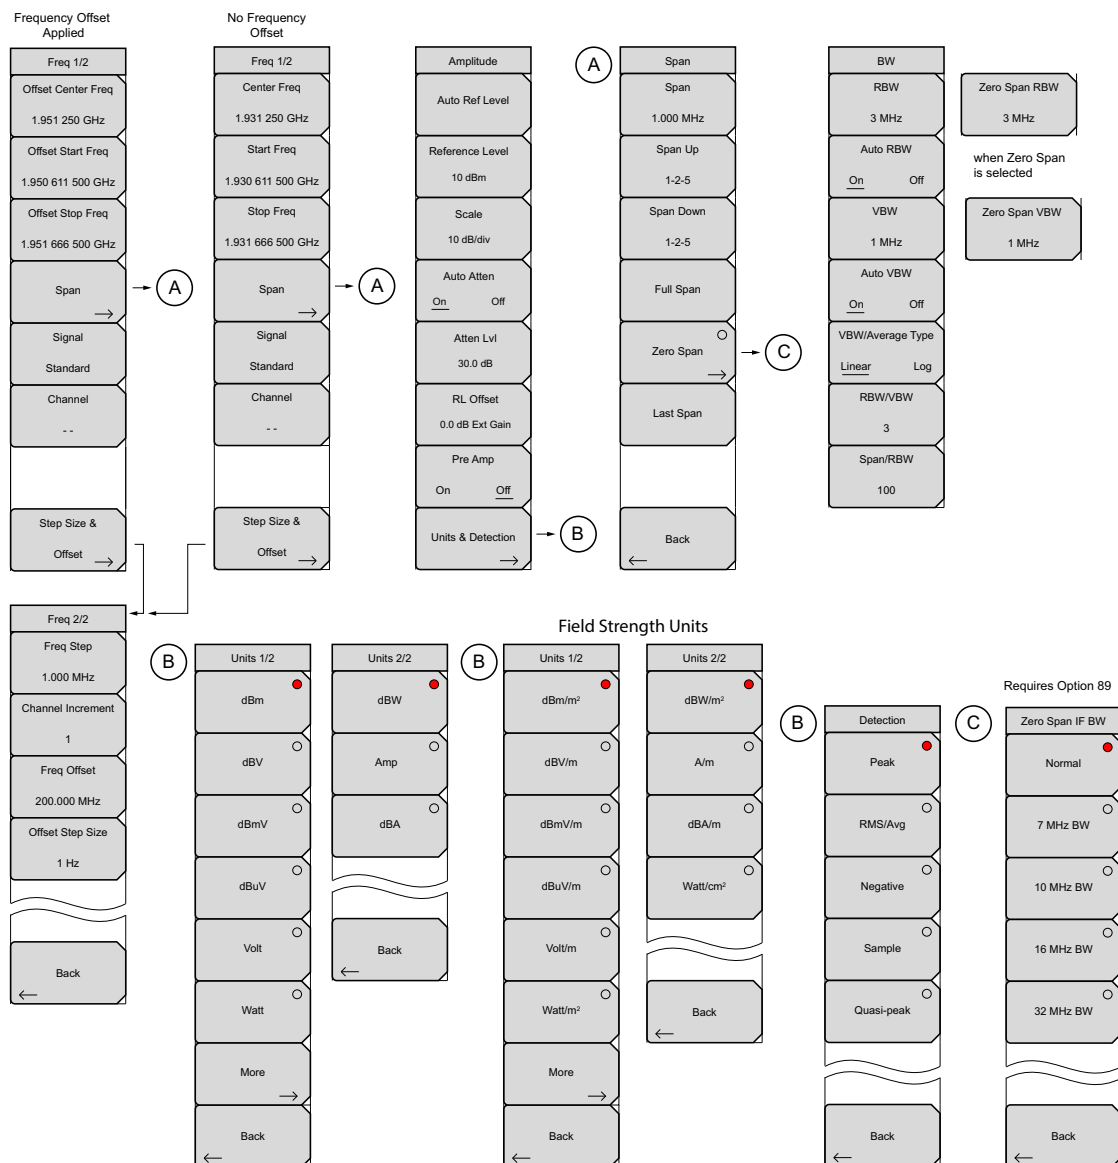


Figure 2-26. Main Menu Keys

Marker Menu

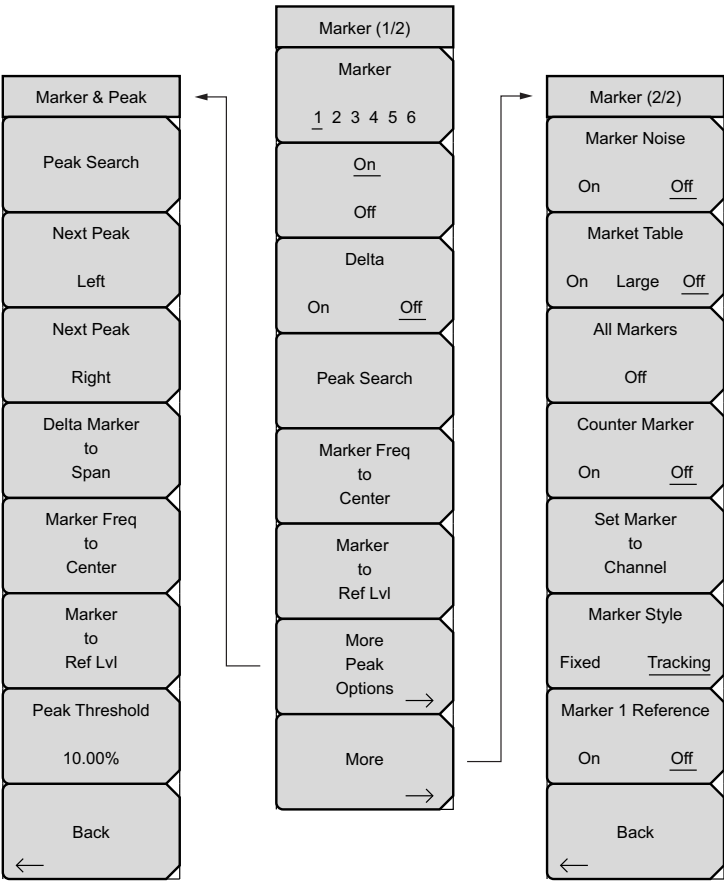


Figure 2-27. Marker Submenu Keys

Measure Menu (1 of 5)

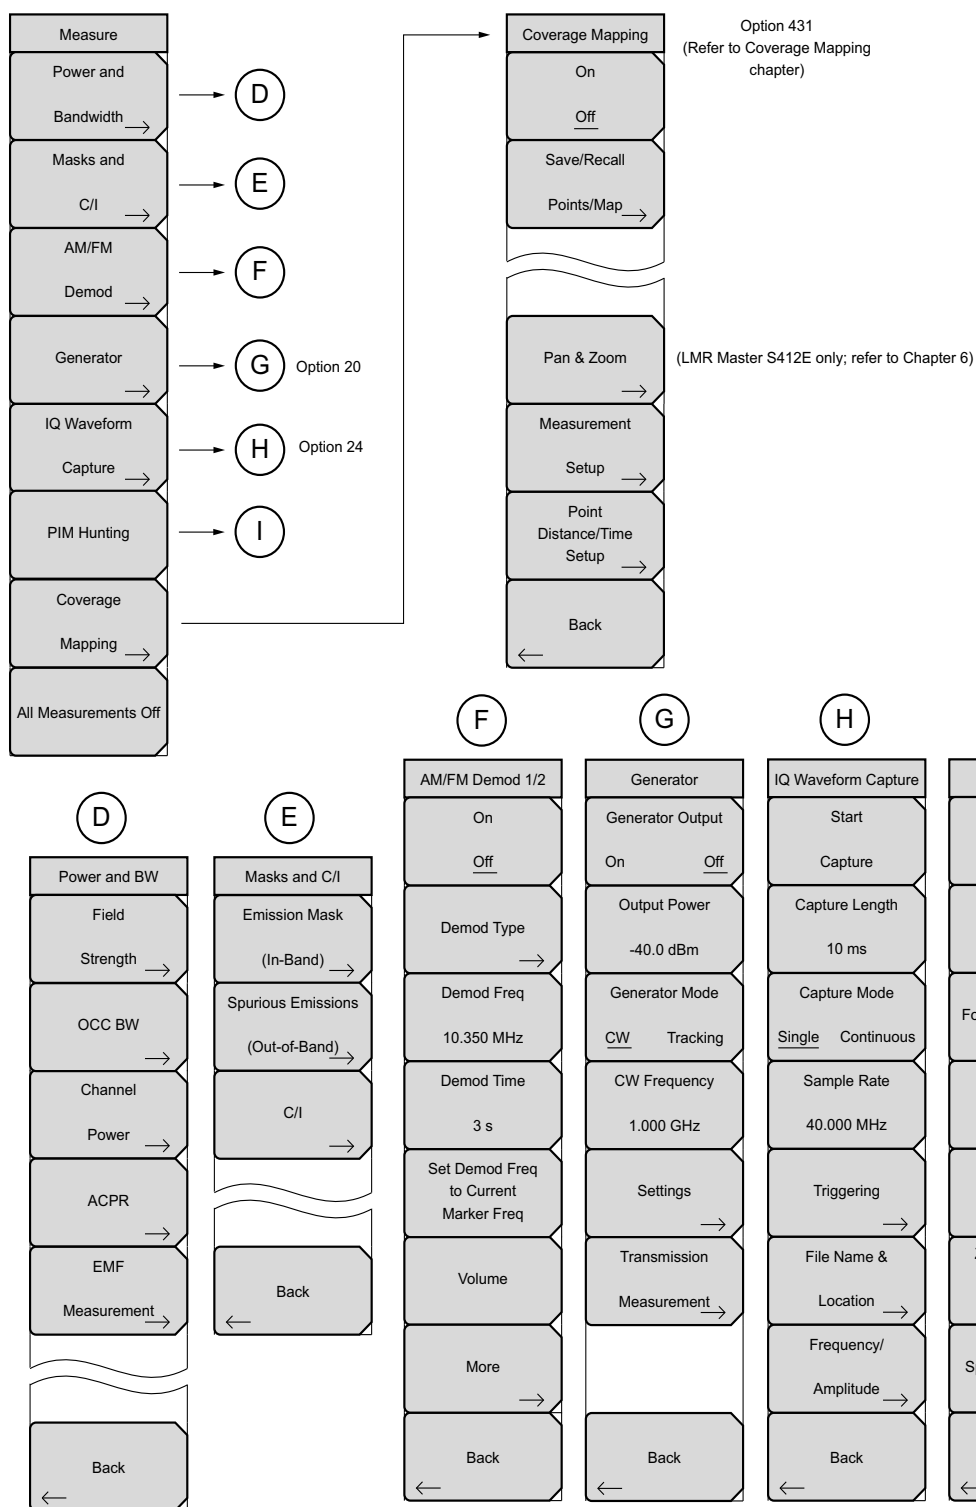


Figure 2-28. Measure Submenu Keys — Measure

Measure Menu (2 of 5)

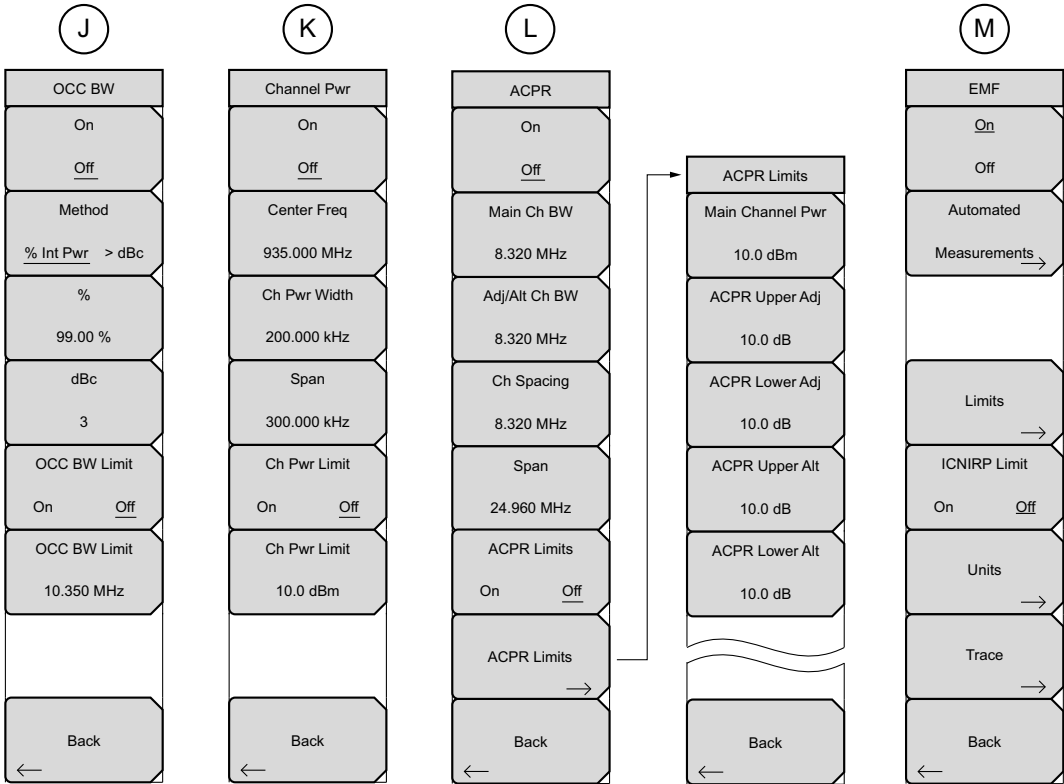
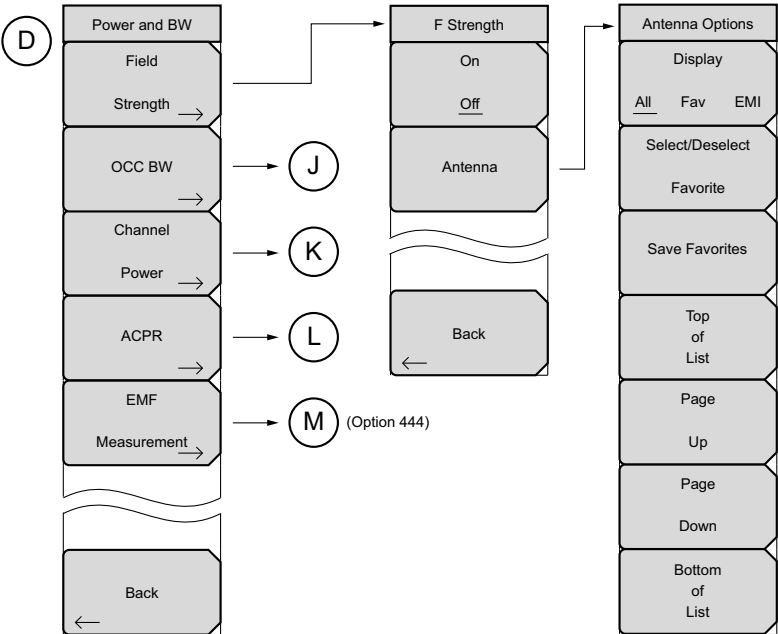


Figure 2-29. Measure Submenu Keys — Power and Bandwidth

Measure Menu (3 of 5)

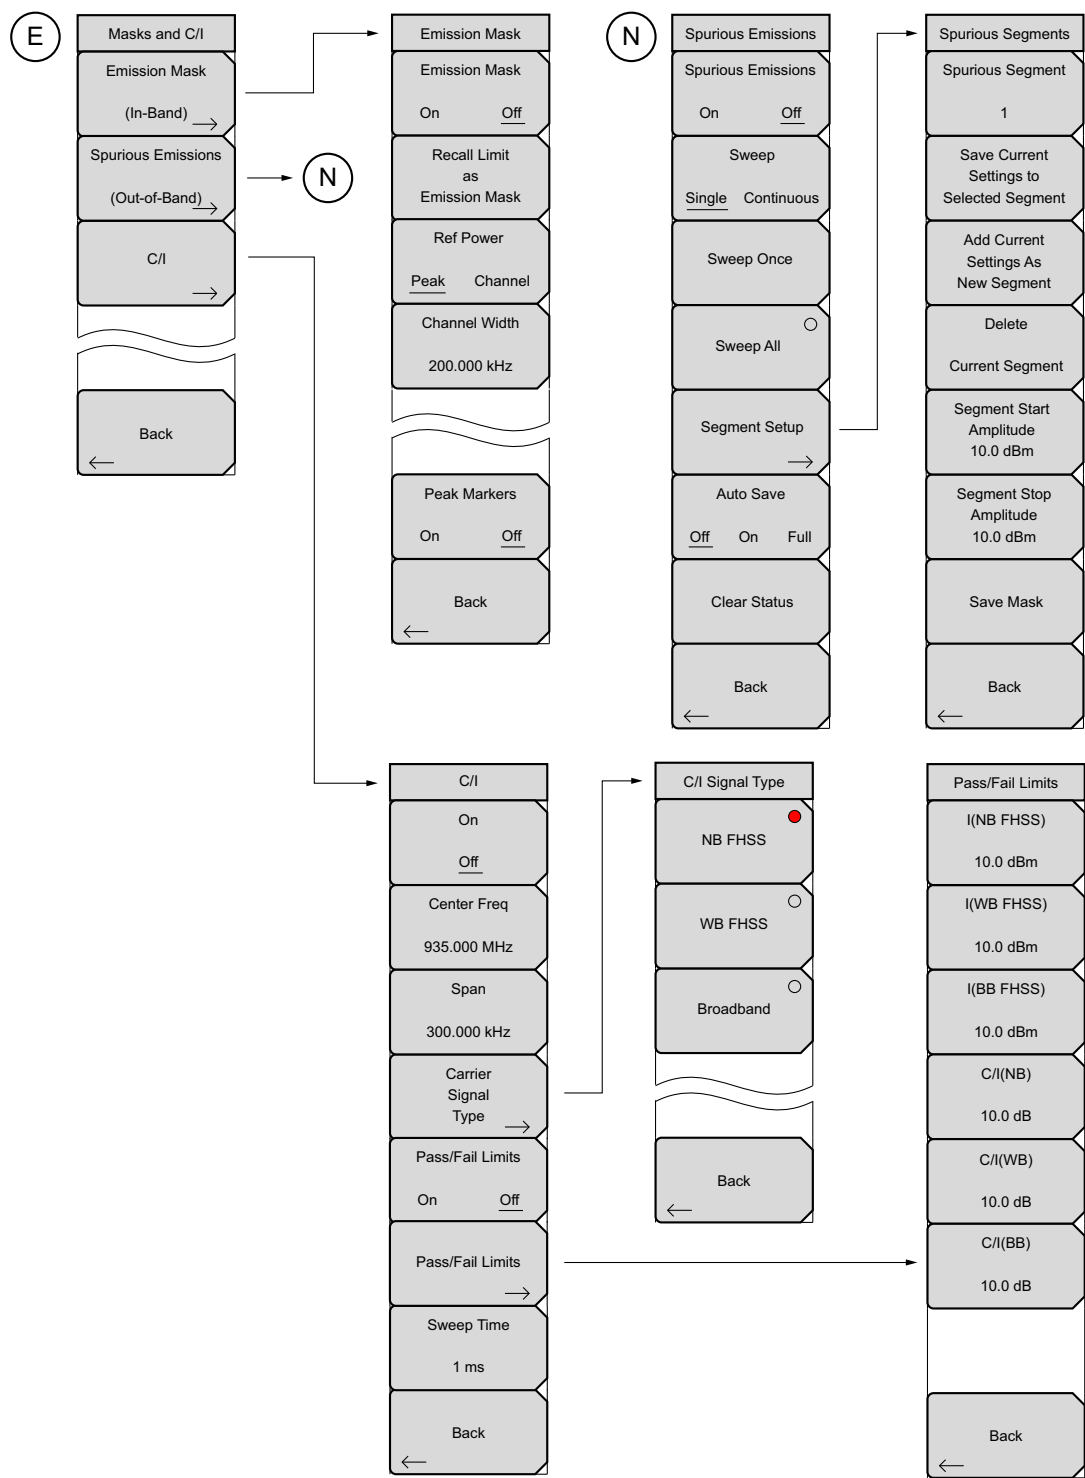


Figure 2-30. Measure Submenu Keys — Masks and C/I

Measure Menu (4 of 5)

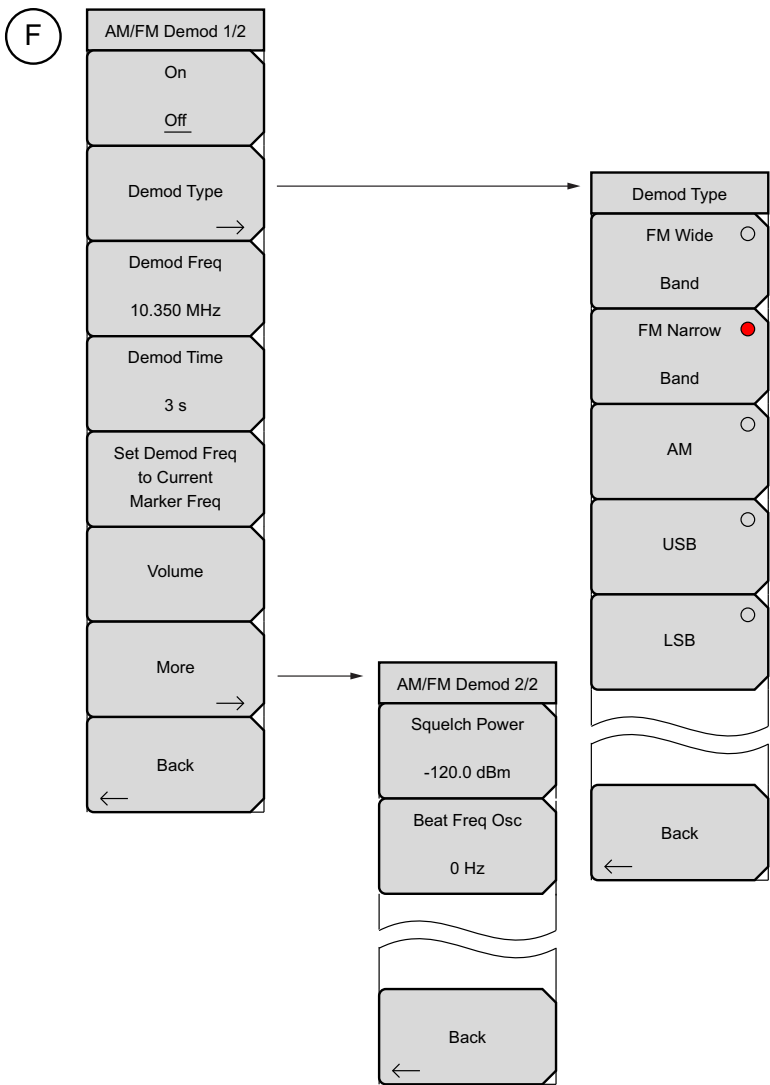


Figure 2-31. AM/FM Demod Menus

Measure Menu (5 of 5)

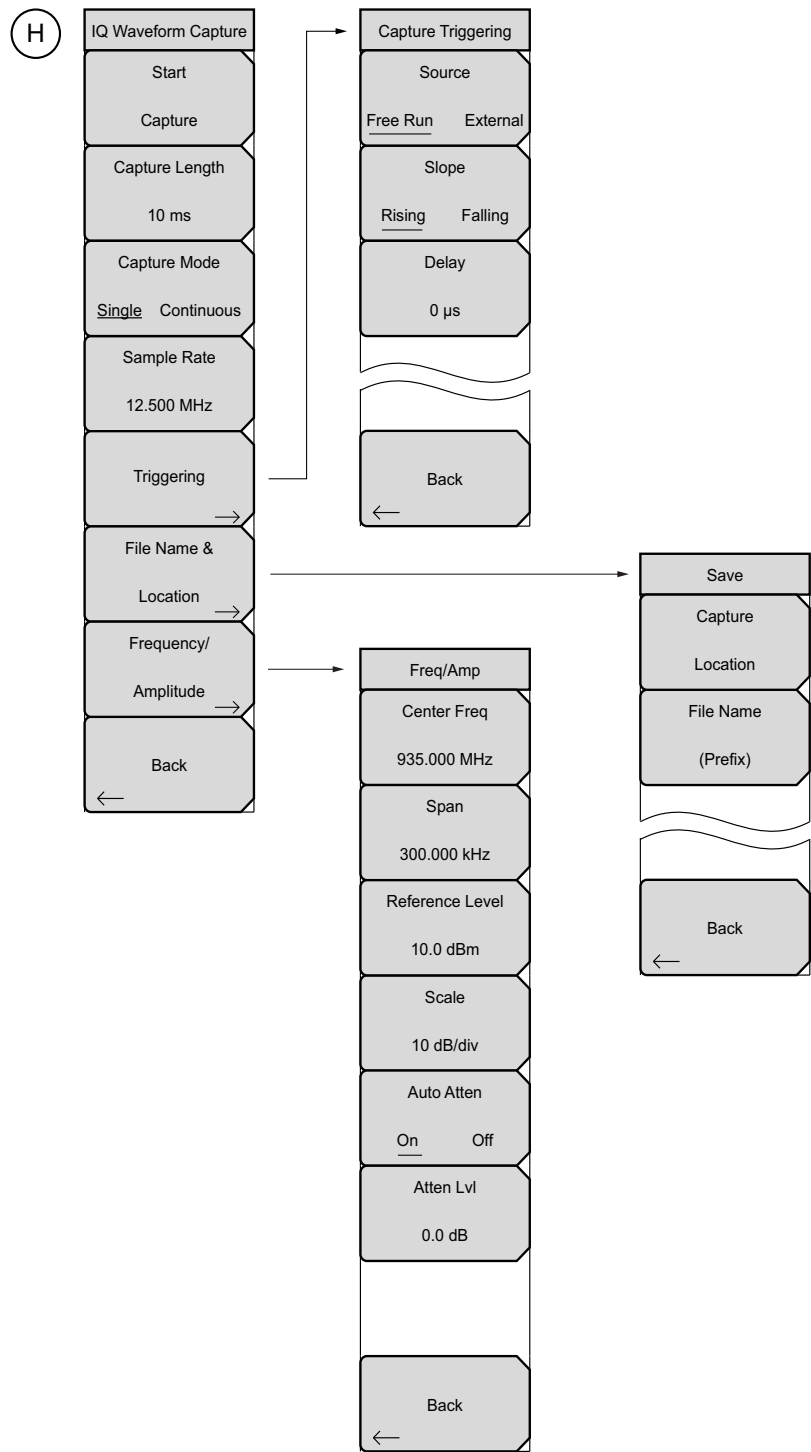


Figure 2-32. IQ Waveform Capture Submenu Keys (Option 24)

Sweep Menu

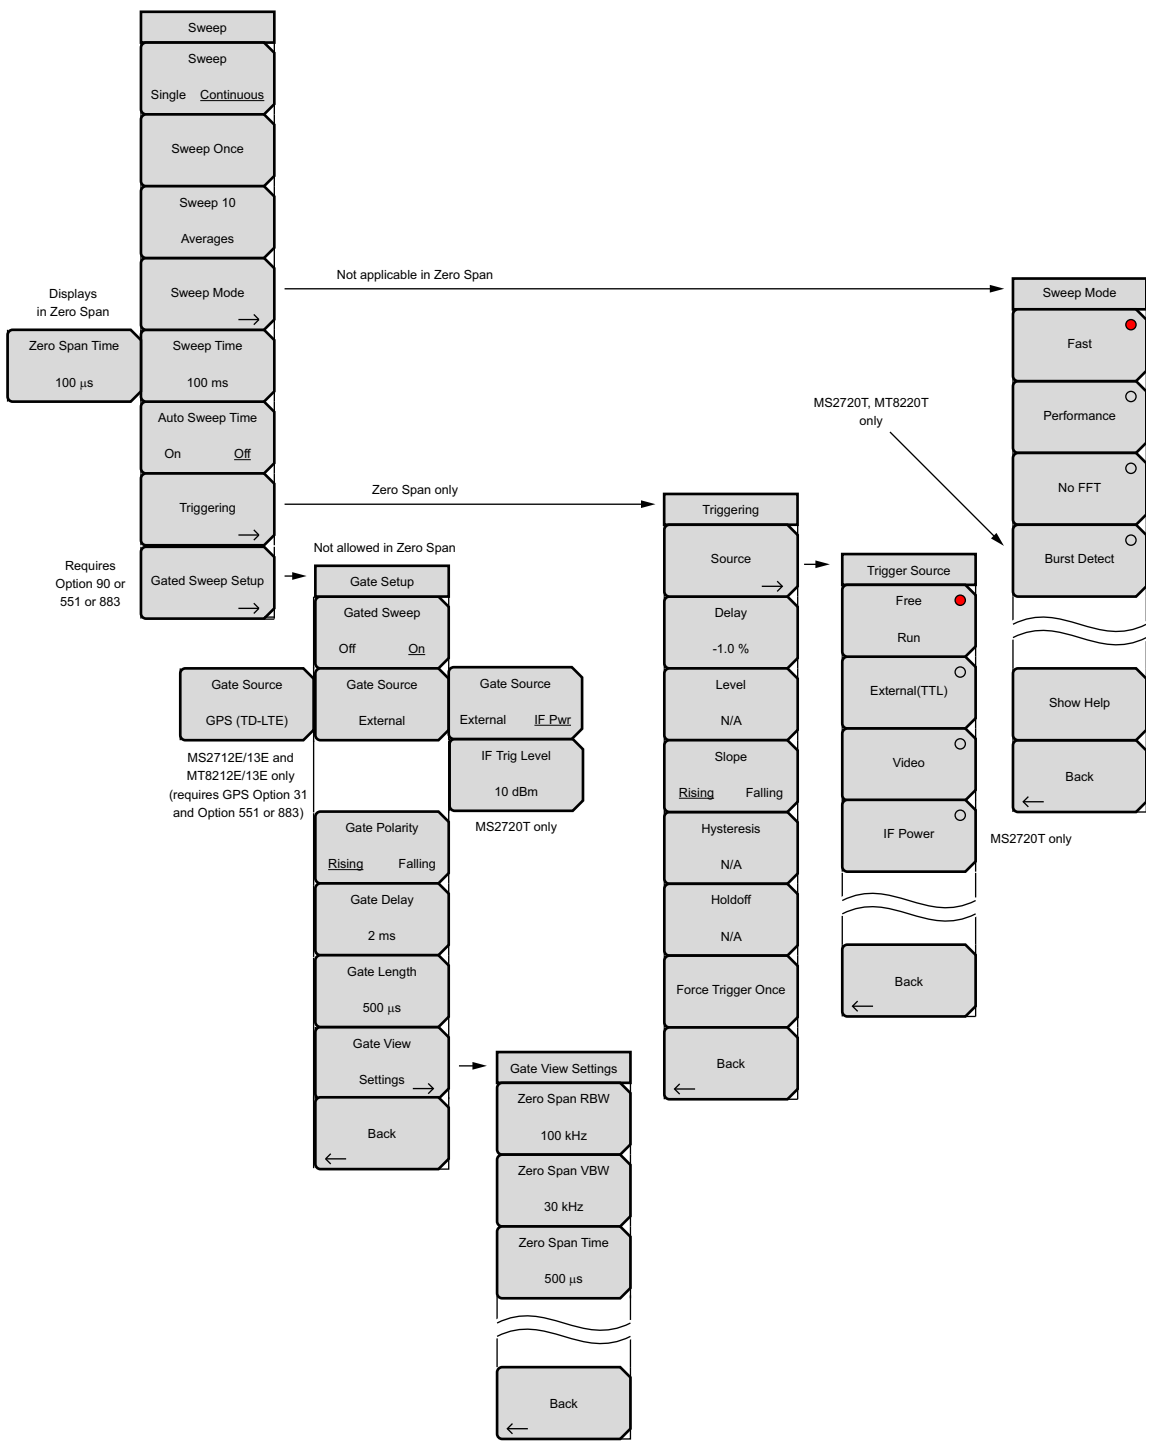


Figure 2-33. Sweep Submenu Keys

Trace Menus

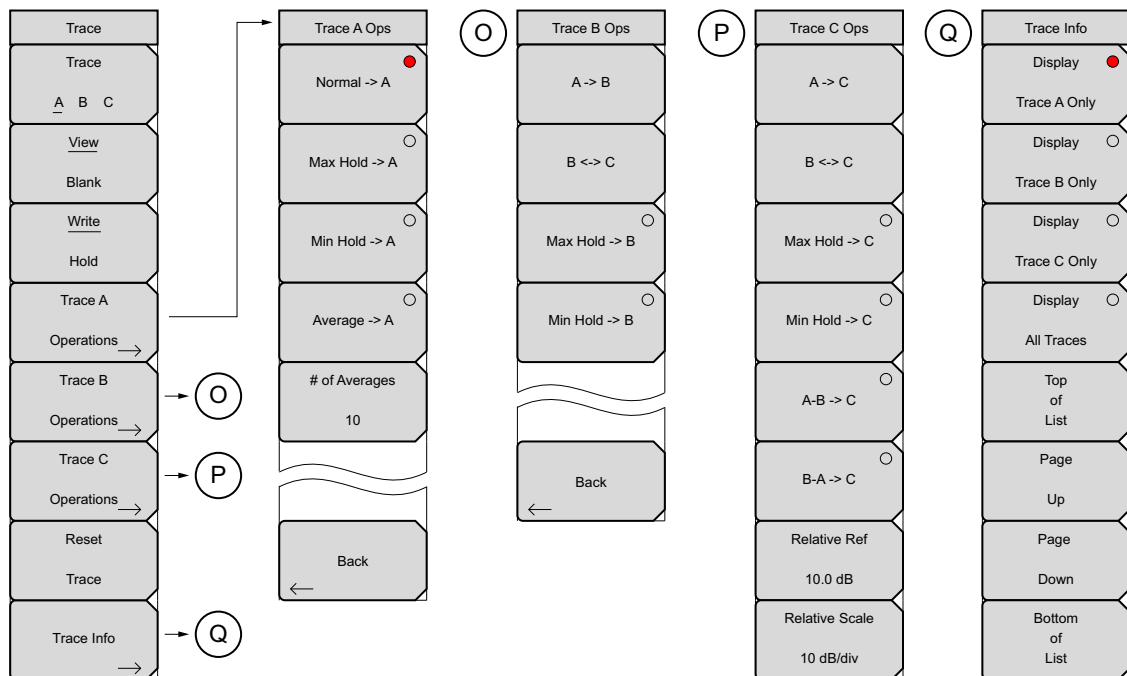


Figure 2-34. Trace Submenu Keys

Limit Menus

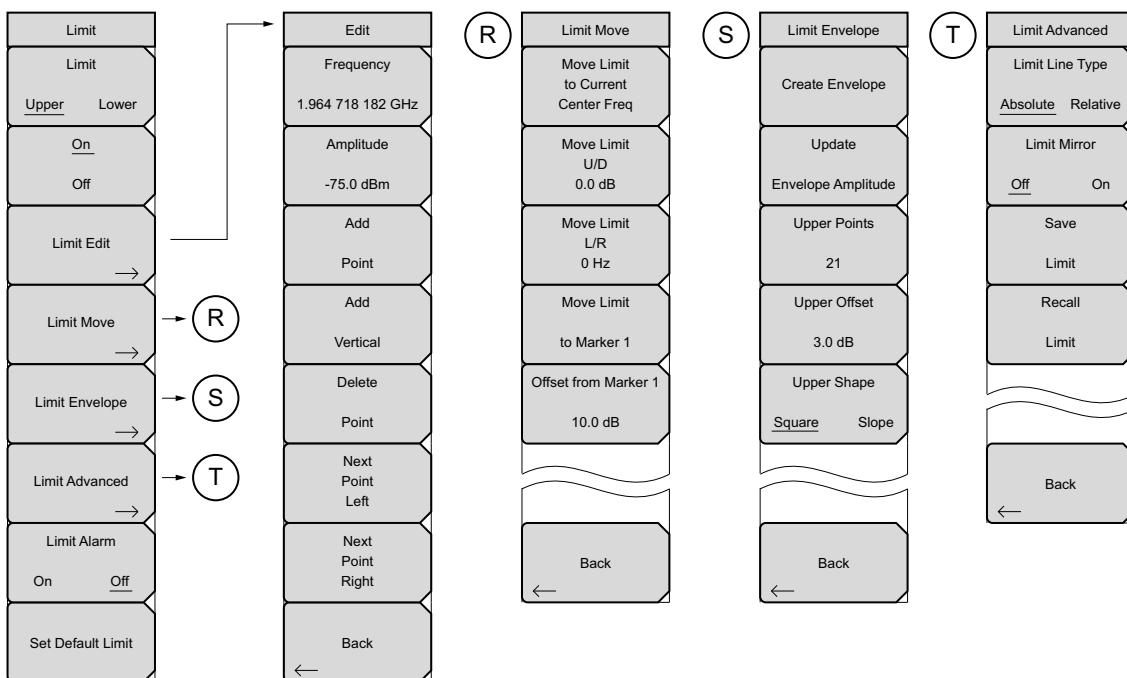


Figure 2-35. Limit Submenu Keys

Application Options Menu

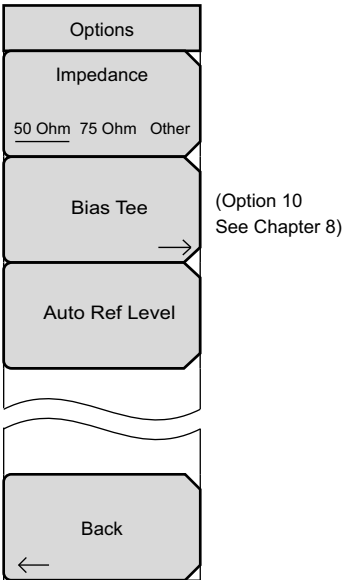


Figure 2-36. System Menu, Application Options Submenu Keys

2-26 Freq (Frequency) Menu

Freq 1/2 (Frequency Menu without Offset)

Key Sequence: **Freq**

The tuning frequency range can be entered in several different ways depending upon what makes the most sense for the user or for the application. The center frequency and span can be specified, the start and stop frequencies can be entered, or a signal standard and channel number can be selected from the built-in list.

<div><div>Freq 1/2</div><div>Center Freq 1.931 250 GHz</div><div>Start Freq 1.930 611 500 GHz</div><div>Stop Freq 1.931 666 500 GHz</div><div>Span →</div><div>Signal Standard</div><div>Channel 25, 0.0 kHz</div><div>Step Size & Offset →</div></div>	<p>Center Freq: Press the Freq main menu key followed by the Center Freq submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If entering a frequency using the keypad, the submenu key labels change to GHz, MHz, kHz, and Hz. Press the appropriate units key. Pressing the Enter key has the same effect as the MHz submenu key.</p> <p>Note: When using the up and down arrows, the frequency moves in steps defined by the value entered using the Freq Step submenu key. When using the left or right arrow keys, the frequency of the active parameter moves by 10% of the current frequency span. If the instrument is in zero span, the left and right arrows do nothing. Turning the rotary knob changes the active frequency parameter in increments of one display point for each click of the knob. There are 551 display points across the screen.</p> <p>Start Freq: Press the Freq main menu key followed by the Start Freq submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If a start frequency higher than the current stop frequency is entered, the stop frequency changes to yield a 10 Hz span.</p> <p>Stop Freq: Press the Freq main menu key followed by the Stop Freq submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If a stop frequency lower than the current start frequency is entered, the start frequency changes to yield a 10 Hz span.</p> <p>Span: Press the Freq main menu key followed by the Span submenu key and enter the desired span. The Span menu is used to set the frequency range over which the instrument sweeps. The span can be set from 10 Hz to the maximum frequency range the product supports. See the product specifications for the maximum frequency. Span can also be set to zero span.</p> <p>The submenu key shows the current value for span in units of GHz, MHz, kHz, or Hz. When the Span button is pressed, span becomes the active parameter and may be changed. Use the keypad, the directional arrow keys, or the rotary knob to increase or decrease the span frequency. If the span is changed using the arrow keys, the span changes in 1-2-5 steps for each key press. See “Span Menu” on page 2-61.</p>
---	---

Figure 2-37. SPA Frequency Menu (1 of 2)

Freq 1/2

Center Freq
1.931 250 GHz

Start Freq
1.930 611 500 GHz

Stop Freq
1.931 666 500 GHz

Span
→

Signal
Standard

Channel
25, 0.0 kHz

Step Size &
Offset →

Signal Standard: Use the up or down arrow keys or the rotary knob to highlight a signal standard and press **Enter** to select.

When a signal standard is selected, the center frequency and span for the first channel of the last segment of the particular standard is automatically tuned. Other settings, such as channel spacing and integration bandwidth, are also automatically entered.

Channel #: Use the up or down arrow keys, the keypad, or the rotary knob to select a channel number for the selected signal standard. The center of the channel is tuned to the center of the spectrum analyzer display. The frequency value is the amount by which the center frequency differs from the center of the channel.

Step Size & Offset: Opens the [“Freq 2/2 Menu”](#) on page 2-57.

Figure 2-38. SPA Frequency Menu (2 of 2)

Freq 1/2 (Frequency Menu with Offset Function)

Key Sequence: **Freq**

The tuning frequency range can be entered in several different ways depending upon what makes the most sense for the user or for the application. The center frequency and span can be specified, the start and stop frequencies can be entered, or a signal standard and channel number can be selected from the built-in list. A user-defined frequency offset, either positive or negative, can be entered to adjust the frequency that is displayed on the instrument from the actual swept frequency. Refer to [“Offset Frequency” on page 2-1](#). When enabled (Freq Offset \neq 0), Offset is displayed at the bottom of the screen ([Figure 2-41](#)) and the Center Freq, Start Freq, and Stop Freq submenu keys indicate that a frequency offset is turned on.

Set the Freq Offset to 0 Hz to remove the frequency offset.

Note

The Freq Offset affects the displayed values of Frequencies, Markers, and Limits. The current frequency offset value is displayed in the [“Freq 2/2 Menu”](#).

Freq 1/2	Offset Center Freq : Press the Freq main menu key followed by the Offset Center Freq submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If entering a frequency using the keypad, the submenu key labels change to GHz, MHz, kHz, and Hz. Press the appropriate units key. Pressing the Enter key has the same effect as the MHz submenu key. With zero offset, this key differs, refer to Figure 2-38 .
Offset Center Freq	
## GHz	
Offset Start Freq	Offset Start Freq: Press the Freq main menu key followed by the Offset Start Freq submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If a start frequency higher than the current stop frequency is entered, the stop frequency changes to yield a 10 Hz span.
## GHz	
Offset Stop Freq	Offset Stop Freq: Press the Freq main menu key followed by the Offset Stop Freq submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If a stop frequency lower than the current start frequency is entered, the start frequency changes to yield a 10 Hz span.
## GHz	
Span	
→	
Signal	Span: Press the Freq main menu key followed by the Span submenu key and enter the desired span. Refer to “Span Menu” on page 2-61 .
Standard	Signal Standard: Use the up or down arrow keys or the rotary knob to highlight a signal standard and press Enter to select.
Channel	When a signal standard is selected, the center frequency and span for the first channel of the last segment of the particular standard is automatically tuned. Other settings, such as channel spacing and integration bandwidth, are also automatically entered.
--	
Step Size &	Channel #: Use the up or down arrow keys, the keypad, or the rotary knob to select a channel number for the selected signal standard. The center of the channel is tuned to the center of the spectrum analyzer display. The frequency value is the amount by which the center frequency differs from the center of the channel.
Offset →	Step Size & Offset: Opens the “Freq 2/2 Menu” on page 2-57 .

Figure 2-39. SPA Freq 1/2 with Offset Function Menu

Freq 2/2 Menu

It is from this menu that Offset is turned on and off.


Key Sequence: **Freq** > Step Size & Offset

<div><div>Freq 2/2</div><div>Freq Step<div>## MHz</div></div><div>Channel Increment<div>#</div></div><div>Freq Offset<div>## MHz</div></div><div>Offset Step Size<div># Hz</div></div><div></div><div>Back<div>←</div></div></div>	<p>Freq Step: Press the Freq main menu key followed by the Freq Step submenu key to enter the desired frequency step size. The frequency step specifies the amount by which a frequency changes when the up or down arrow keys are pressed. The center frequency, start frequency, and stop frequency values can be changed using Freq Step. The instrument changes active parameter by the frequency step when the up or down arrow keys are pressed. The frequency step size can be any value from 1 Hz to upper limit of the instrument with a resolution of 1 Hz. The frequency step value can be used to change start frequency, stop frequency, center frequency, and the frequency step size.</p> <p>Use the keypad or the rotary knob to change the Frequency Step size.</p> <p>Channel Increment: Sets the increment value for the Channel # submenu key.</p> <p>Freq Offset: Enter the desired offset (positive or negative) using the keypad, the arrow keys, or the rotary knob. If entering a frequency by using the keypad, then the submenu key labels change to GHz, MHz, kHz, and Hz. Press the appropriate units key. Pressing the Enter key has the same effect as the MHz submenu key.</p> <p>Offset Step Size: Enter the desired frequency offset step size. The offset frequency step specifies the amount by which the offset frequency changes when the up or down arrow keys are pressed.</p> <p>Use the keypad or the rotary knob to change the Offset Step Size.</p> <p>Back: Returns to the “Freq 1/2 (Frequency Menu with Offset Function)” on page 2-55.</p>
--	---


Figure 2-40. SPA Freq 2/2 Menu Offset Function

Offset Example

Example of Frequency Offset Using the Same Source Signal

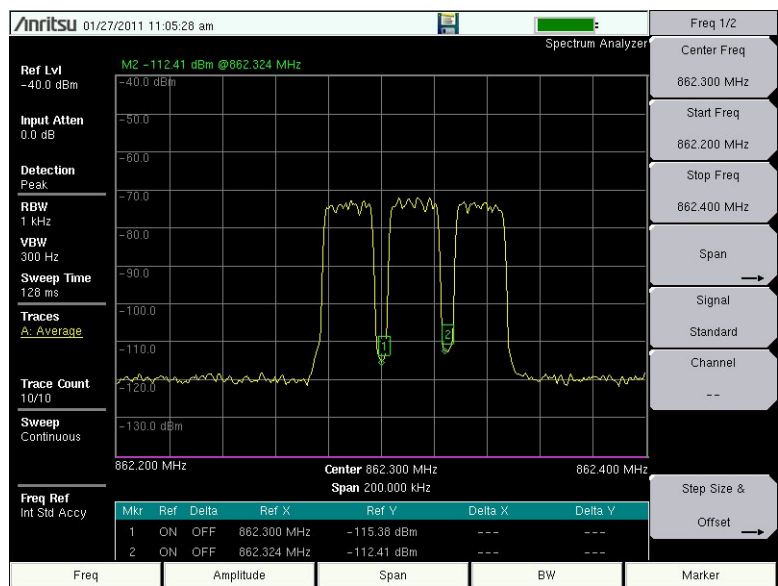

No Offset

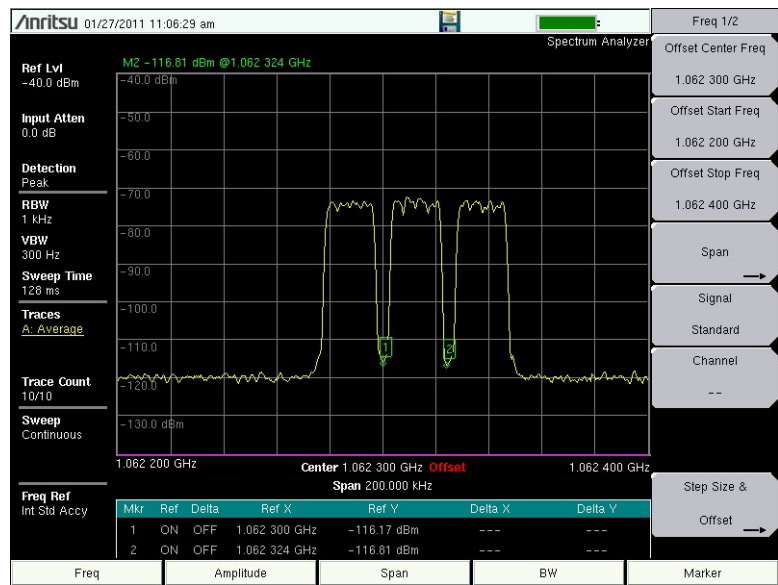

+200 MHz Frequency Offset
(Freq > Step Size & Offset > Freq Offset)

Figure 2-41. 200 MHz Frequency Offset Example

2-27 Amplitude Menu

Amplitude Menu

Key Sequence: **Amplitude**

Note

On older versions of firmware, the Auto Ref Level function may be accessible only from the “[Application Options Menu](#)” on page 2-106, and Units & Detection may appear as two separate submenu keys.

Amplitude	Auto Ref Level: Press this submenu key to adjust the position of a displayed signal so that it is approximately two divisions down from the top of the sweep window, if possible. When the key is pressed, the reference level is adjusted once. Auto Ref Level may turn off the low-noise front-end preamplifier, but does not turn it on. It has no effect on vertical scaling.
Auto Ref Level	
Reference Level	Reference Level: The reference level is the top graticule line on the display, and can be set from +30 dBm to –150 dBm. A value may be entered from the numeric keypad. Use the \pm key to toggle between positive and negative values. After entering the value, press the dBm submenu key or the Enter key. The up or down arrow keys change the reference level in 10 dB steps, and the left or right arrow keys change the value by 1 dB. The rotary knob changes the value by 0.1 dB per click. The reference level value may be modified by the reference level offset value to compensate for an external attenuator or amplifier.
10 dBm	
Scale	Scale: The scale can be set in 1 dB steps from 1 dB per division to 15 dB per division. The value can be changed using the keypad, the rotary knob, or the arrow keys.
10 dB/div	
Auto Atten	Auto Atten On/Off: Input attenuation can be either tied to the reference level (On) or manually selected (Off). When input attenuation is tied to the reference level, attenuation is increased as higher reference levels are selected to make sure the instrument input circuits are not saturated by large signals that are likely to be present when high reference levels are required.
On Off	
Atten Lvl	Atten Lvl: Press this submenu key and use the numeric keypad, the rotary knob, or the arrow keys to change the attenuation value.
30.0 dB	
RL Offset	RL Offset xx dB Ext Gain/Loss: RL Offset compensates for the presence of external input attenuation or gain. Enter a positive value to compensate for gain or loss, then press the appropriate submenu key (dB External Gain or dB External Loss). The new RL Offset value is displayed on the button.
0.0 dB Ext Gain	
Pre Amp	Pre Amp On/Off: This submenu key turns the low-noise front-end preamplifier on or off. To ensure accurate measurement results, the largest signal into the instrument input when the preamplifier is turned on should be less than –40 dBm.
On Off	
Units & Detection	Units & Detection: Press this submenu key to open the “ Units & Detection Menu ” on page 2-60.
→	

Figure 2-42. SPA Amplitude Menu

Units & Detection Menu

Key Sequence: **Amplitude** > Units & Detection

Units & Detection

Units →

Detection →

Back ←

Detection

Peak ●

RMS/Avg ○

Negative ○

Sample ○

Quasi-peak ○

Back ←

Units: Press this submenu key to select the amplitude unit: dBm, dBV, dBmV, dBμV, Volt, Watt, dBW, Amp, or dBA. When measuring Field Strength, values may be displayed in dBm/m², dBV/m, dBmV/m, dBμV/m, Volt/m, Watt/m², dBW/m², A/m, dBA/m, or Watt/cm². See [Figure 2-26 on page 2-43](#). Press Back to return to the Amplitude menu.

Detection: Several detection methods tailor the function of the instrument to meet specific measurement requirements. There are often more measurement points across the screen than display points. The various detection methods are different ways of dealing with how measurement points are shown at each display point. The Detection submenu is illustrated on the lower left.

Peak: This method causes the largest measurement point to be shown for each display point, assuring that a narrow peak is not missed.

RMS/Avg: In the Preset case, when the VBW/Average Type is set to Linear, this method detects the average power of measurement points that go into the display point. When VBW/Average Type is set to Log, the traditional average of log(power), such as dBm, is displayed for the detector, as well as for VBW and trace average.

Negative: This method causes the smallest measurement point to be shown for each display point. It is especially useful in zero span, to see if the signal amplitude drops briefly. The method is also useful when looking at modulated signals, to see if some frequencies are not being used.

Sample: This is the fastest detection method because for each display point, only one frequency point is measured. Use this method when speed is of paramount importance and the possibility of missing a narrow peak is not important.

Quasi-peak: When this selection is made, resolution bandwidths and video bandwidths of 200 Hz, 9 kHz and 120 kHz are available. This detection method is designed to meet CISPR requirements.

Back: Returns to the [“Amplitude Menu” on page 2-59](#).

Figure 2-43. SPA Units & Detection Menu

2-28 Span Menu

Press the **Span** main menu key. This is equivalent to pressing the **Span** submenu key under the **Freq** menu. The **Span** menu is used to set the frequency range over which the instrument sweeps. The span can be set from 10 Hz to the maximum frequency of the instrument. The **Span** can also be set to zero span.

Key Sequence: **Span**

<div>Span</div>	Span: This submenu key shows the current value for span in units of GHz, MHz, kHz, or Hz. When the Span button is pressed, span becomes the active parameter and may be changed. Use the keypad, the directional arrow keys, or the rotary knob to increase or decrease the span frequency. If the span is changed using the arrow keys, the span changes in a 1-2-5 sequence for each key press.
<div>Span</div> <div>1.000 MHz</div>	
<div>Span Up</div> <div>1-2-5</div>	Span Up 1-2-5: This is a convenient way to quickly arrive at a wider span value. The first time the submenu key is pressed, the span value increases to the nearest even value that starts with 1, 2, or 5. For example, if the span is 1.8 MHz, then pressing the submenu key for the first time changes the span to 2.0 MHz, and the next press takes the value to 5.0 MHz, and so on.
<div>Span Down</div> <div>1-2-5</div>	Span Down 1-2-5: This is a convenient way to narrow the frequency span. The first time the submenu key is pressed, the span value decreases to the nearest even value that starts with 1, 2, or 5. For example, if the span is 1.8 MHz, then pressing the submenu key for the first time changes the span to 1.0 MHz, and the next press takes the value to 500 kHz, then 200 kHz, and so on.
<div>Full Span</div>	Full Span: Pressing this button sets the span to cover the entire tunable spectrum of the instrument.
<div>Zero Span</div> <div></div>	Zero Span: This submenu key sets zero span. In this mode, the display shows amplitude changes at a single frequency. This function is frequently used to allow the easy monitoring of power variations over time. For example, if information about the amplitude of an 802.11a access point signal is needed, then the access point frequency would be set as the center frequency, resolution bandwidth would be set to a value wide enough to encompass as much of the signal as possible, and the tester would walk around the access point usable area while the instrument records the amplitude using slow sweep.
<div>Last Span</div>	Zero Span (Option 89): If Option 89 is installed on your instrument, press the Zero Span key again (after the circle is red) to access the “Zero Span IF BW Menu (Option 89)” on page 2-62.
<div>Back</div> <div>←</div>	Last Span: This submenu key returns the span to the most recent span value immediately before a change was made.
<div>Zero Span</div> <div>→</div>	Back: Returns to the previous menu.

Figure 2-44. SPA Span Menu

2-29 Zero Span IF BW Menu (Option 89)

Note Option 89 is not available on all instrument models. Refer to your instrument Technical Data Sheet.

Zero Span IF bandwidth provides a nominal 140 MHz IF signal out of a BNC female connector. The IF output signal is present only when the instrument span is set to zero by pressing the **Zero Span** key in the Span menu. Press the Zero Span submenu key again to access the Zero Span IF BW menu.

When **Normal** is selected, the IF bandwidth is influenced by the RBW setting. The selectable bandwidth values may differ among instrument types.

Key Sequence: **Span** > Zero Span

<div>Zero Span IF BW</div> <div>Normal</div> <div>7 MHz BW</div> <div>10 MHz BW</div> <div>16 MHz BW</div> <div>32 MHz BW</div> <div>Back</div>	<p>Normal: Press this key to select a bandwidth based on the RBW setting. The selectable fixed bandwidth values listed below may differ depending on your instrument.</p> <p>7 MHz BW: Press this button to select a fixed IF bandwidth of 7 MHz.</p> <p>10 MHz BW: Press this button to select a fixed IF bandwidth of 10 MHz.</p> <p>16 MHz BW: Press this button to select a fixed IF bandwidth of 16 MHz.</p> <p>32 MHz BW: Press this button to select a fixed IF bandwidth of 32 MHz.</p> <p>Back: Returns to the Span menu.</p>
---	--

Figure 2-45. Zero Span IF BW Menu

2-30 BW (Bandwidth) Menu

Key Sequence: **BW**

BW	RBW: The current resolution bandwidth value is displayed in this submenu key. The key displays the Zero Span RBW if Zero Span is selected. The RBW can be changed using the keypad, the arrow keys, or the rotary knob. Bandwidth values increment in a 1 to 3 sequence, from 1 Hz to 3 Hz to 10 Hz, or from 10 Hz to 30 Hz to 100 Hz, for example. Refer to your instrument Technical Data Sheet for the resolution bandwidth range.
RBW	
3 MHz	
Auto RBW	
On Off	Auto RBW On/Off: When Auto RBW is On, the instrument selects the resolution bandwidth based on the current span width. The ratio of span width to RBW can be specified using the Span/RBW submenu key.
VBW	
1 MHz	
Auto VBW	
On Off	VBW: The current video bandwidth value is displayed in this submenu key. The key displays the Zero Span VBW if Zero Span is selected. The VBW can be changed using the keypad, the arrow keys, or the rotary knob. Bandwidth values increment in a 1 to 3 sequence, from 1 Hz to 3 Hz to 10 Hz, or from 10 Hz to 30 Hz to 100 Hz, for example. Refer to your instrument Technical Data Sheet for the video bandwidth range.
VBW/Average Type	
Linear Log	Auto VBW On/Off: When Auto VBW is On, the instrument selects the video bandwidth based on the resolution bandwidth. The ratio of video bandwidth to resolution bandwidth can be set using the RBW/VBW submenu key.
RBW/VBW	
3	VBW/Average Type: Toggles between Linear averaging (arithmetic mean) and Logarithmic averaging (geometric mean). When VBW linear averaging is used, the result is calculated by Linear running average, then Log, and then displayed. When VBW log averaging is used, the result is obtained by taking Log, then running average, and then displayed. These two approaches can result in different responses to time-varying signals.
Span/RBW	
100	RBW/VBW: This submenu key displays the ratio between resolution bandwidth and video bandwidth. To change the ratio, press this submenu key and use the keypad, the arrow keys, or the rotary knob to select a new ratio. The default ratio is 3. When the quasi-peak detector is selected the RBW/VBW ratio is changed to 1.
	Span/RBW: This submenu key displays the ratio between the span width and the resolution bandwidth. The default value is 100, meaning that the span width is approximately 100 times the resolution bandwidth. The value is approximate because resolution bandwidth filters come in discrete steps while span width can be set to any value up to the maximum span of the instrument. To change the ratio, press this submenu key and use the keypad, the arrow keys, or the rotary knob to select a new ratio.

Figure 2-46. SPA Bandwidth Menu

2-31 Marker Menu

Key Sequence: **Marker**

Press the **Marker** main menu key to open the Marker menu. The instrument is equipped with six markers. Any or all markers can be employed simultaneously.

Marker (1/2)	
Marker	
<u>1</u> 2 3 4 5 6	Marker: Press to select which marker (1, 2, 3, 4, 5, 6) is active using the touch screen. The active marker is underlined.
On	
Off	On/Off: Turns the selected marker underlined in the Marker submenu key On or Off.
Delta	
On Off	Delta On/Off: Turns on a delta marker and prompts for a delta offset frequency, either positive or negative from the frequency of the currently active marker.
Peak Search	
Marker Freq to Center	Peak Search: This key places the currently active marker on the highest signal amplitude currently displayed on screen.
Marker to Ref Lvl	Marker Freq to Center: Moves the frequency noted by the active marker to the center frequency position and center of the display.
More Peak Options →	Marker to Ref Level: Causes the amplitude of the currently active marker to become the reference level, which is the top horizontal line of the display.
More →	More Peak Options: Brings up a secondary menu of submenu keys for more peak searching options. See the “More Peak Options (Marker & Peak) Menu” on page 2-65.

More: Opens a submenu of additional Marker options. See the [“Marker 2/2 Menu” on page 2-66.](#)

Figure 2-47. SPA Marker (1/2) Menu

More Peak Options (Marker & Peak) Menu

Key Sequence: **Marker** > More Peak Options

Marker & Peak	
Peak Search	Peak Search: Places the currently active marker on the highest amplitude signal currently on screen.
Next Peak	
Left	Next Peak Left: From the current position of the active marker, the instrument searches to the left (toward lower frequencies) for a peak signal that rises above the peak threshold setting and places the active marker on that signal. If no such peak is found, the marker is placed at the left end of the trace. Peak Threshold is described below.
Next Peak	
Right	Next Peak Right: From the current position of the active marker, the instrument searches to the right (toward higher frequencies) for a peak signal that rises above the peak threshold setting and places the active marker on that signal. If no such peak is found, the marker is placed at the right end of the trace. Peak Threshold is described below.
Delta Marker to Span	
Marker Freq to Center	Delta Marker to Span: Sets the total span width to the value of the delta marker. If the delta marker is zero, the span is set to zero span. If the delta marker value is set to less than 10 Hz, then instrument sets the span to 10 Hz. If no delta marker is turned on, no change is made.
Marker to Ref Lvl	Marker Freq to Center: Sets the center frequency to the frequency of the currently active marker.
Peak Threshold	Marker to Ref Lvl: Sets the reference level (top graticule line) to the amplitude of the currently active marker.
10.00%	Peak Threshold: Sets the percentage of the current display that a signal must rise before it is considered a peak. For example, 10% is one division of the ten division graticule.
Back	Back: Returns to the “Marker Menu” on page 2-64 .
←	

Figure 2-48. SPA Marker & Peak Menu

Marker 2/2 Menu

Key Sequence: **Marker** > More

<div><div>Marker (2/2)</div><div>Marker Noise</div><div>OnOff</div><div>Marker Table</div><div>OnLargeOff</div><div>All Markers</div><div>Off</div><div>Counter Marker</div><div>OnOff</div><div>Set Marker to Channel</div><div>Marker Style</div><div>FixedTracking</div><div>Marker 1 Reference</div><div>OnOff</div><div>Back</div></div>	<p>Marker Noise On/Off: Turns the markers into noise markers with units of dBm/Hz. When this option is selected, the detection method is automatically changed to RMS and the displayed value is compensated for the noise bandwidth of resolution bandwidth filter.</p> <p>Marker Table On/Large/Off: Causes a table to be displayed below the sweep window. The table is automatically sized to display all markers that are turned on. In addition to the marker frequency and amplitude, the table also shows delta frequencies and amplitude deltas for all markers that have deltas entered for them. If Large is selected, a large screen display opens underneath the graph that displays both frequency and amplitude for the active marker in large type.</p> <p>All Markers Off: Turns off all markers.</p> <p>Counter Marker On/Off: Sets the frequency counter mode for the active marker. Marker frequency values are normally limited in resolution to individual display pixels. Each pixel may represent multiple frequencies. In the frequency counter mode, in the region of the counter marker, higher resolution digital signal processing is used to determine the frequency. Using Counter Marker in association with Marker to Peak results in the frequency of the signal peak to a much higher displayed resolution. Note that frequency accuracy is affected by the RBW setting and sweep times may be longer when using counter marker because of the additional signal processing.</p> <p>Set Marker To Channel: If a signal standard has been selected, pressing this key brings up a dialog box to select a channel. Select a channel number for the current signal standard, and the instrument sets the active marker to the center frequency of the channel.</p> <p>If no signal standard has been selected, a message “No standard selected. Press Enter or Escape to Continue.” is displayed. Press either button to leave the settings as they were before the key was pressed.</p> <p>Marker Style: This key changes the behavior of the reference markers. If Fixed is selected, reference markers stay at the amplitude they were at when the associated delta marker was turned on. If Tracking is selected, the amplitude of the reference marker changes as the signal amplitude is changed. Note that the reference marker tracks the amplitude, not the frequency of a signal.</p> <p>Marker 1 Reference: Selects whether Marker 1 is the reference for all six delta markers, or whether each of the six reference markers has an associated delta marker. When Marker 1 Reference is On, markers 2 through 6 are always Off, but each Delta marker 2 through 6 can be toggled On or Off.</p> <p>Back: Returns to the “Marker Menu” on page 2-64.</p>
---	---

Figure 2-49. SPA Marker (2/2) Menu

2-32 Sweep Menu

Key Sequence: **Shift > Sweep (3)** key

Sweep	Sweep Single/Continuous: This submenu key toggles between continuous sweep and single sweep. In single sweep mode, the results of a sweep are displayed on the screen while the instrument awaits a trigger event to start a new sweep.
Sweep Single Continuous	Sweep Once: When Sweep is set to Single, Sweep Once triggers a single measurement sweep. This key has no function when the instrument is in continuous sweep mode.
Sweep Once	Sweep # Averages: Sweeps the number of times set using the # of Averages button under the Trace A Ops menu. Trace A must be set to Averaging (Shift > Trace 5) key > Trace A Operations > Average->Trace A) for this menu to function. Each trace is displayed using the exponential average of each sweep.
Sweep 10 Averages	Sweep Mode: Pressing this submenu key opens the “Sweep Mode Menu” on page 2-68. The key is not valid in Zero Span.
Sweep Mode →	Sweep Time: Sets the sweep time for the measurement. Refer to “Sweep Limitations” on page 2-9 for more information.
Sweep Time 100 ms	Auto Sweep Time: When Off, the measurement sweeps the time set in Sweep Time. When On, the instrument calculates a minimum sweep time and uses it for all subsequent sweeps.
Auto Sweep Time On Off	Triggering: Available in Zero Span only. Displays the “Triggering Menu” on page 2-69.
Triggering →	Gated Sweep Setup: Gated Sweep requires: Option 90, or Option 551 or 883 on model MS2712E/13E or MT8212E/13E
Gated Sweep Setup →	Press the Gated Sweep Setup key to open the “Gate Setup Menu” on page 2-71. This function is not allowed in Zero Span mode.

Figure 2-50. SPA Sweep Menu

Sweep Mode Menu

Key Sequence: **Shift > Sweep (3) key > Sweep Mode**

Sweep Mode is not applicable in Zero Span.

Sweep Mode

Fast

Performance

No FFT

Burst Detect

Show Help

Back

Fast: Fastest sweep speed (up to 100 times faster than Performance).

Performance: Provides best amplitude accuracy and ensures all specifications are met.

No FFT: Slowest sweep speed. Suited for analog and pulse modulated signals.

Burst Detect: Press to view narrow pulsed signals. This function is available on MS2720T and MT8220T models only.

Show Help: Displays a table showing the merits and trade-offs of the Sweep Mode settings.

Back: Returns to the [“Sweep Menu” on page 2-67](#).

Figure 2-51. SPA Sweep Mode Menu

Triggering Menu

Key Sequence: **Shift** > **Sweep (3)** key > Triggering

This menu is available only in Zero Span.

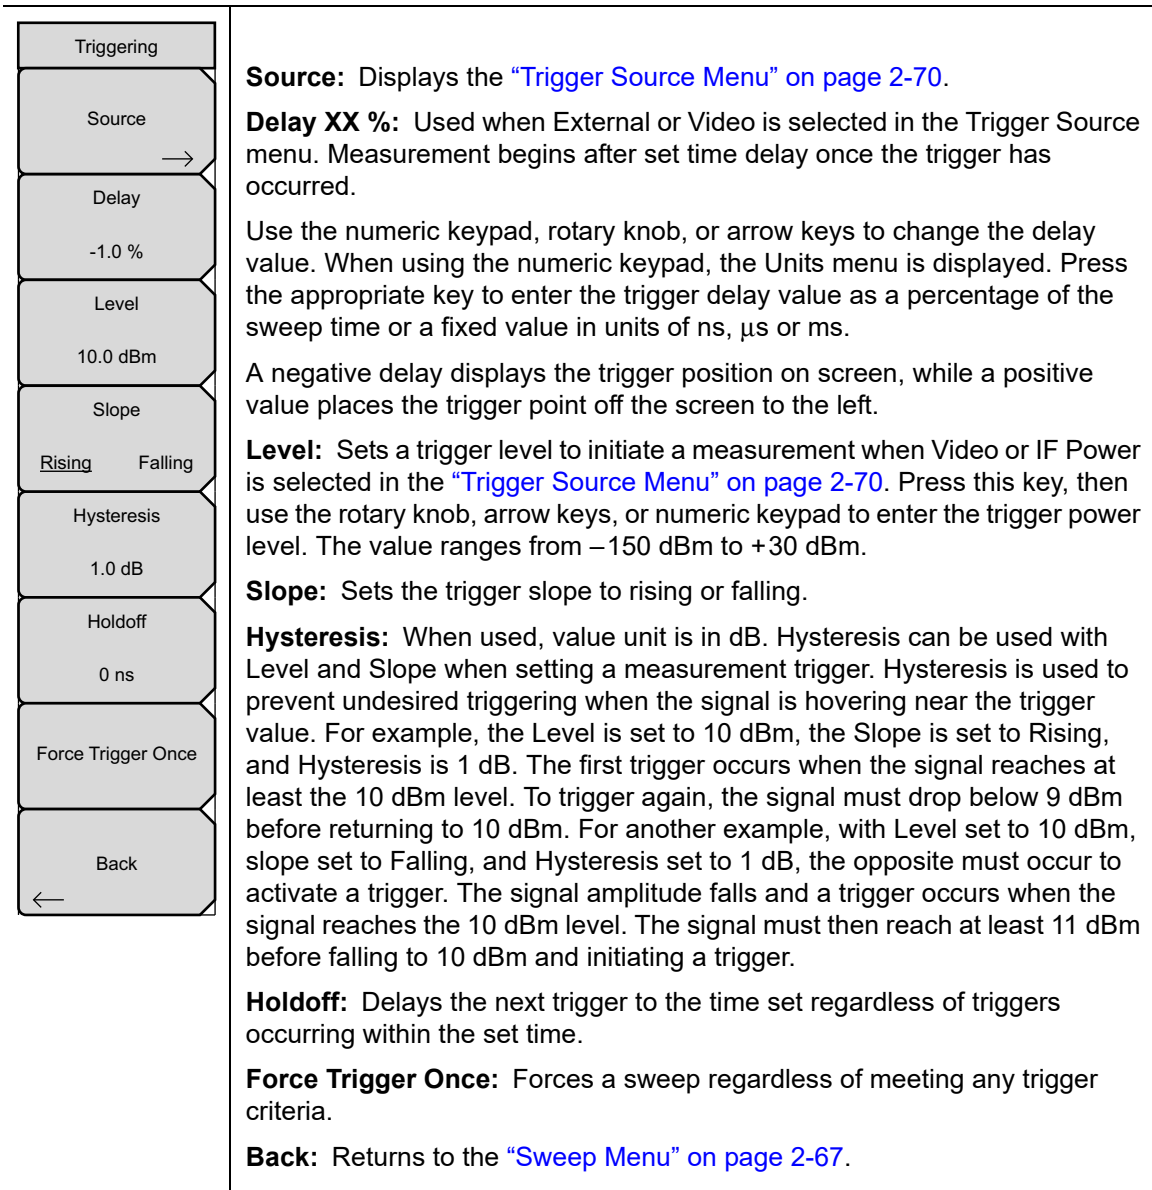


Figure 2-52. SPA Triggering Menu

Trigger Source Menu

Key Sequence: **Shift > Sweep (3) key > Triggering > Source**

Trigger Source

Free

Run

External (TTL)

Video

IF Power

Back

Free Run: In this mode, a new sweep is started immediately upon completion of an old sweep. No trigger event is required to initiate a sweep.

External (TTL): A TTL signal applied to the External Trigger BNC input connector causes a single sweep. After the sweep is complete, the resultant trace is displayed until the next trigger signal is received.

Video: This mode uses Video power as the trigger source. The trigger level is set using the Level key in the [“Triggering Menu”](#). The trigger is based on the measured signal level. If no signal reaches or exceeds the trigger level, no trace displays on the screen.

IF Power (MS2720T Only): This mode uses IF power level as the trigger source. The power level is set using the Level key in the [“Triggering Menu”](#). The trigger is based on the measured signal level. If no signal reaches or exceeds the trigger level, no trace displays on the screen.

Back: Returns to the [“Triggering Menu”](#) on page 2-69.

Figure 2-53. SPA Triggering Menu

Gate Setup Menu

Key Sequence: **Shift > Sweep (3)** key > Gated Sweep Setup

Gate Setup	<p>Gated Sweep: Turns the Gated Sweep function On and Off. Gated Sweep is not allowed in Zero Span mode. Refer to “Gated Sweep (Option 90)” on page 2-7.</p> <p>Gate Source: Selects the trigger source for the gated sweep.</p> <p>External: This setting designates the trigger source as an external signal that is input via the instrument’s Ext Trigger In connector.</p> <p>GPS (TD-LTE): The GPS trigger source is valid only on instrument models with 20 MHz IF Bandwidth available:</p> <p>Cell Master MT8212E/13E Spectrum Master MS2712E/13E</p> <p>Additionally, these instruments must be loaded with firmware V1.60 or later, and have these options installed:</p> <p>Option 31 (GPS), and either of Option 551 (TD-LTE/LTE-A RF Measurements), or Option 883 (LTE/LTE-A FDD/TDD Measurements)</p> <p>When GPS (TD-LTE) is selected, the gated sweep time is 10 ms.</p> <p>IF Pwr: This trigger type is available on model MS2720T only. When choosing IF power as the trigger source, press the IF Trig Level key (not shown) and use the rotary knob, arrow keys, or numeric keypad to enter the trigger power level. The value ranges from -150 dBm to +30 dBm.</p>
Gated Sweep	
Off On	
Gate Source	
External	
Gate Polarity	
Rising Falling	
Gate Delay	
2 ms	
Gate Length	
500 μ s	
Gate View	<p>Gate Polarity: Selects the trigger edge to begin the gated sweep.</p> <p>Gate Delay: Sets the start of the gated sweep indicated by the left border of the blue dashed rectangle shown in the bottom graph of Figure 2-3 on page 2-7.</p> <p>Gate Length: Sets the length of the gate and is reflected on the zero span graph by the width of the blue dashed rectangle.</p> <p>Gate View Settings: Opens the Gate View Settings menu. Allows a user to independently change the RBW, VBW and sweep time of the zero span or gate view (bottom graph).</p> <p>Zero Span RBW: Sets the resolution bandwidth of the zero span graph.</p> <p>Zero Span VBW: Sets the video bandwidth of the zero span graph.</p> <p>Zero Span Time: Sets the sweep time of the zero span graph.</p> <p>Back: Returns to the Gate Setup menu.</p> <p>Back: Returns to the “Sweep Menu” on page 2-67 and changes the Gated Sweep Setup view back to the full screen spectrum view. The Gated Sweep settings are retained and applied to the spectrum view.</p>
Settings →	
Back	
←	
Gate View Settings	
Zero Span RBW	
100 kHz	
Zero Span VBW	
30 kHz	
Zero Span Time	
500 ms	
Back	
←	

Figure 2-54. SPA Gated Sweep Menu

2-33 Measure Menu

Key Sequence: **Shift > Measure (4)** key

For a shortcut to the active measurement or this main menu if no measurement is active, press the touch screen where the words **Spectrum Analyzer** are located, in the upper right corner of the display.

Measure	
Power and Bandwidth →	Power and Bandwidth: Opens the “Power and BW Menu” on page 2-73.
Masks and C/I →	Masks and C/I: Opens the “Masks and C/I Menu” on page 2-80.
AM/FM Demod →	AM/FM Demod: Opens the “AM/FM Demod 1/2 Menu” on page 2-86.
Generator →	Generator: Opens the “Generator Menu (Optional)” on page 2-89. This submenu key is present only in spectrum analyzers with a Tracking Generator option. Refer to <i>Tracking Generator Measurement Guide</i> (10580-00339) for information about this option.
IQ Waveform Capture →	IQ Waveform Capture: Opens the “IQ Waveform Capture Menu (Option 24)” on page 2-91. This submenu key is present only when Option 24 is installed.
Coverage Mapping →	Coverage Mapping: Opens the “Coverage Mapping Menu” on page 6-15. This submenu key is present only when Option 431 is installed.
All Measurements Off	All Measurement Off: Turns off any active measurements.

Figure 2-55. SPA Measure Menu

Power and BW Menu

Key Sequence: **Shift > Measure (4) key > Power and Bandwidth**

Power and BW	
Field Strength →	Field Strength: Opens the “Field Strength Menu” on page 2-74.
OCC BW →	OCC BW: : Opens the “OCC BW Menu” on page 2-75.
Channel Power →	Channel Power: : Opens the “Channel Power Menu” on page 2-76.
ACPR →	ACPR: : Opens the “ACPR Menu” on page 2-77.
EMF Measurement →	EMF Measurement: : Opens the “EMF Menu (Option 444)” on page 2-79. refer to <i>Electromagnetic Field (EMF) Measurements Option 444 Measurement Guide</i> , 10580-00455.
<hr/>	
Back ←	Back: Returns to the “Measure Menu” on page 2-72.

Figure 2-56. Power and BW Menu

Field Strength Menu

Key Sequence: **Shift** > **Measure** (4) key > Power and Bandwidth > Field Strength

F Strength

On

Off

Antenna

Back

Antenna Options

Display

All Fav EMI

Select/Deselect

Favorite

Save Favorites

Top of List

Page Up

Page Down

Bottom of List

This measurement allows the use of an antenna with known gain characteristics and measures the field strength over the frequency range of the antenna in units of dBm/m², dBV/m, dBmV/m, dBμV/m, Volt/m, Watt/m², dBW/m², A/m, dBA/m, or Watt/cm².

On/Off: Turns field strength measurements on or off.

Antenna: Press this key to display the Antenna Options submenu and bring up a dialog box that lists all the antennas for which the instrument has data, including both standard antennas and custom antennas that have been added using Master Software Tools. Antenna frequency information is also displayed. See [Figure 2-58 on page 2-75](#). Use the arrow keys or the rotary knob to select the desired antenna, then press **Enter**.

Back: Returns to the [“Power and BW Menu” on page 2-73](#).

Use the Antenna Options submenu keys for faster navigation through the list.

Display: Press this key repeatedly to display All antennas, only EMI antennas, or only antennas marked as Favorites.

Select/Deselect Favorite: Press this submenu key to add the highlighted antenna to the Favorites list. The antenna is then marked with an asterisk. If the selected antenna is already marked with an asterisk, pressing this key removes it from the Favorites list.

Save Favorites: Press this key to save the changes you have made to the Favorites list.

Top of List: Press this submenu key to jump to the top of the Antenna list.

Page Up: Press this key to skip up through the list.

Page Down: Press this key to skip down through the list.

Bottom of List: Press this submenu key to jump to the bottom of the list.

Figure 2-57. SPA Field Strength Menu

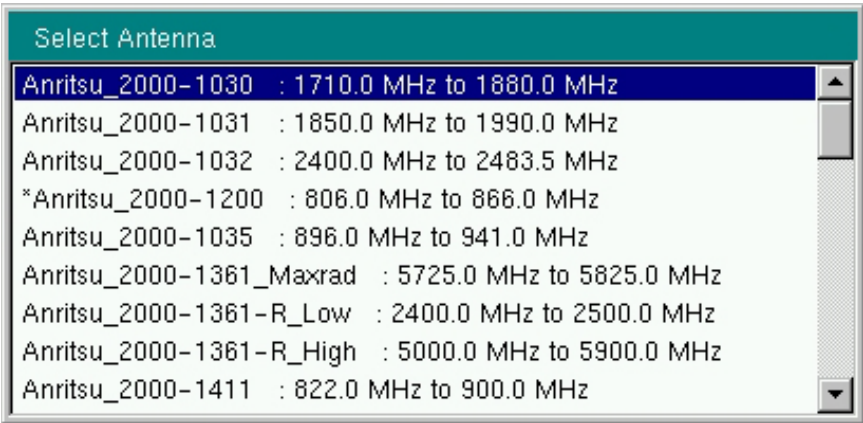


Figure 2-58. Select Antenna Dialog Box

OCC BW Menu

Key Sequence: **Shift** > **Measure (4)** key > Power and Bandwidth > OCC BW

<div>OCC BW</div> <div>On <u>Off</u></div> <div>Method <u>% Int Pwr</u> > dBc</div> <div>% 99.00 %</div> <div>dBc 3</div> <div>OCC BW Limit On <u>Off</u></div> <div>OCC BW Limit 10.350 MHz</div> <div>Back ←</div>	<p>On/Off: This submenu key turns the Occupied Bandwidth on or off.</p> <p>Method: Press this submenu key to select either the % of Internal Power (default) or dB Down measurement method. Toggling the setting on this key activates one of the two submenu keys below.</p> <p>%: Use the keypad, directional arrow keys, or the rotary knob to enter the percent of power, from 0% to 99%.</p> <p>dBc: Use the keypad, directional arrow keys, or the rotary knob to enter the dBc value (0 dBc to 100 dBc).</p> <p>OCC BW Limit On/Off: Press this submenu key to turn Occupied Bandwidth Limit on and off.</p> <p>OCC BW Limit: Press this key and use the arrow keys, rotary knob, or numeric keypad to enter the upper limit value for the Occupied Bandwidth.</p> <p>Back: Returns to the “Power and BW Menu” on page 2-73.</p>
---	--

Figure 2-59. SPA OCC BW Menu

Channel Power Menu

Key Sequence: **Shift** > **Measure** (4) key > Power and Bandwidth > Channel Power

Channel Pwr	On/Off: Begins or ends the channel power measurement. When the measurement is on, Ch Pwr appears below the display. The detection method automatically changes to RMS Average when the measurement is started. The detection method can be modified by pressing the Shift and the Sweep keys and pressing the Detection submenu key.
On Off	
Center Freq	Center Freq: Activates the center frequency function, and sets the center frequency of the instrument for the channel power measurement. Enter values using the keypad, arrow keys, or the rotary knob. The up and down arrows change the frequency by the frequency step size entered in the "Freq (Frequency) Menu" . The left and right arrows change the frequency by 10% of the span. When using the numeric keypad, press a unit key or press Enter for values in MHz. With zero offset, this key is labeled Center Freq . With an offset other than zero, the key is labeled Offset Center Freq , as illustrated on the left, below the full menu. Refer to Section "Freq 1/2 (Frequency Menu with Offset Function)" on page 2-55.
1.939 900 GHz	
Ch Pwr Width	Ch Pwr Width: Sets the width for the channel power. Use the keypad, the directional arrow keys, or the rotary knob to enter the channel power width. The up and down arrow keys change the Channel Power Width by the frequency step value. The left and right arrow keys change the value by 10% of the span.
24.960 MHz	
Span	Span: Sets the span for channel power measurement. Use the keypad, directional arrow keys, or the rotary knob to enter the span.
24.960 MHz	
Ch Pwr Limit	Ch Pwr Limit On/Off: Press this submenu key to turn Channel Power Limit on and off.
On Off	
Ch Pwr Limit	Ch Pwr Limit: Press this key and use the arrow keys, rotary knob, or numeric keypad to enter the upper limit value for the Channel Power.
10.0 dBm	
Back	Back: Returns to the "Power and BW Menu" on page 2-73.
←	
Offset Center Freq	
## GHz	

Figure 2-60. SPA Channel Power Menu

ACPR Menu

Key Sequence: **Shift** > **Measure (4)** key > Power and Bandwidth > ACPR

ACPR	On/Off: Begins or ends the ACPR measurement.
On	Main Ch BW: Sets the bandwidth of the main channel for ACPR measurement. Use the keypad, the directional arrow keys, or the rotary knob to enter a specific frequency. When using the keypad, press the GHz, MHz, kHz, or Hz submenu key to accept the frequency input. Changing this value automatically changes the adjacent channel bandwidth and channel spacing.
Off	
Main Ch BW	Adj/Alt Ch BW: Sets the bandwidth of the adjacent channels for ACPR measurement. Use the keypad, the directional arrow keys, or the rotary knob to enter a specific frequency. When using the keypad, press the GHz, MHz, kHz, or Hz submenu key to accept the frequency input.
8.320 MHz	
Adj/Alt Ch BW	Ch Spacing: Sets the channel spacing between the main and adjacent channels. Use the keypad, the directional arrow keys, or the rotary knob to enter a specific frequency. When using the keypad, press the GHz, MHz, kHz, or Hz submenu key to accept the frequency input. This value must be greater than or equal to half of the main channel bandwidth, plus half of the adjacent channel bandwidth. The up and down arrows change the frequency by the frequency step size entered in the “Freq (Frequency) Menu” on page 2-53 . The left and right arrow keys change the value by 10% of the span.
8.320 MHz	
Ch Spacing	Span: Sets the span for ACPR measurement. Use the keypad, directional arrow keys, or the rotary knob to enter the span.
8.320 MHz	
Span	ACPR Limits On/Off: Press this submenu key to turn ACPR Limits on and off.
24.960 MHz	
ACPR Limits	ACPR Limits: Brings up the ACPR Limits submenu. See Figure 2-62 on page 2-78 .
On Off	
ACPR Limits	Back: Returns to the “Power and BW Menu” on page 2-73 .
→	
Back	
←	

Figure 2-61. SPA ACPR Menu

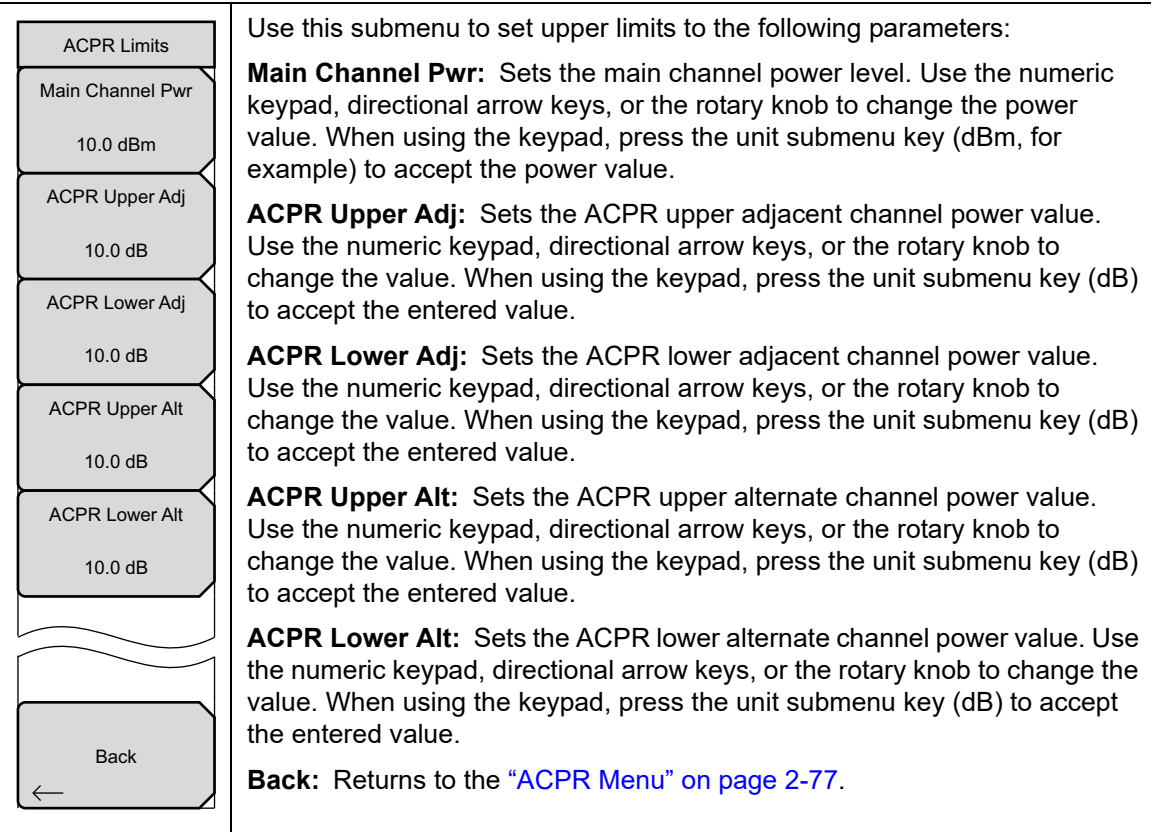


Figure 2-62. ACPR Limits Submenu Keys

EMF Menu (Option 444)

Key Sequence: **Shift** > **Measure (4)** key > Power and Bandwidth > EMF Measurement

This menu is available only when Option 444 is installed on your instrument.

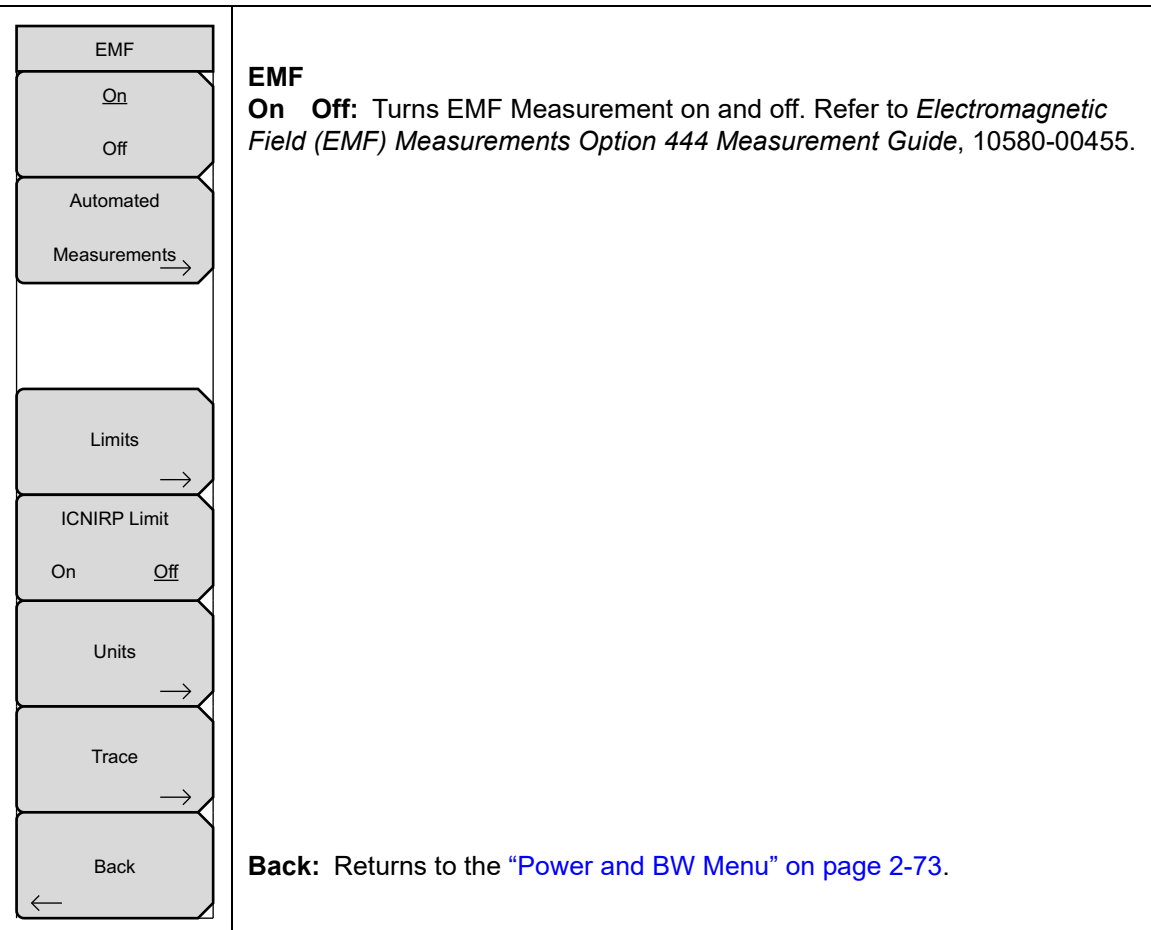


Figure 2-63. EMF Menu

Masks and C/I Menu

Key Sequence: **Shift** > **Measure** (**4**) key > Masks and C/I

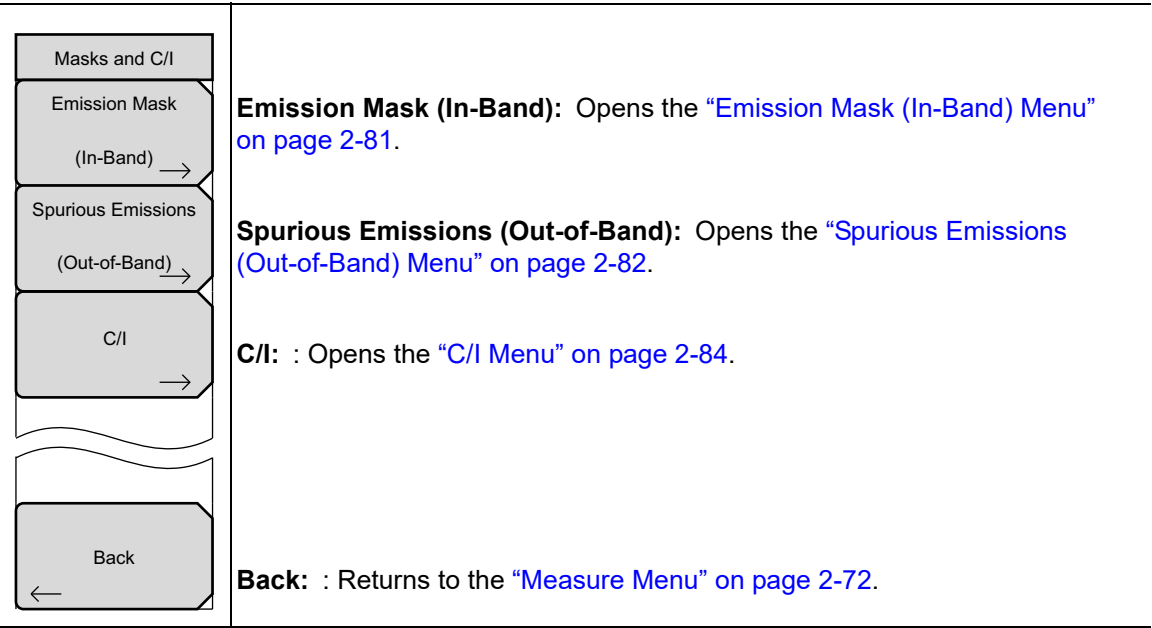


Figure 2-64. Masks and C/I Menu

Emission Mask (In-Band) Menu

Key Sequence: **Shift** > **Measure (4)** key > Masks and C/I > Emission Mask (In-Band)

Emission Mask

Emission Mask

On Off

Recall Limit
as
Emission Mask

Ref Power

Peak Channel

Channel Width

200.000 kHz

Peak Markers

On Off

Back

←

This submenu controls the setup and display of the emission mask. The emission mask is a segmented upper limit line that displays frequency range, peak power and frequency, relative power, and pass/fail status for each segment of the mask. The emission mask must have at least two segments. Refer to [“Emission Mask \(In-Band\) Measurement” on page 2-30](#) for more information.

Emission Mask On/Off: Turns On/Off the Emission Mask graph and table display. **Before** turning Emission Mask on, you must have created or recalled a mask.

With Emission Mask On, the Mask/Limit Line is adjusted up or down based on the selected Ref Power for every sweep. If the Ref Power is set to 'Peak', the center segment of the Mask/Limit is moved to match the peak amplitude of the current trace. If 'Channel' is selected, the center segment of the Mask/Limit is moved to match the calculated channel power contained in the current trace.

Recall Limit as Emission Mask: Opens the recall menu for selecting a limit line for use as the Emission Mask.

Ref Power Peak/Channel: Press this submenu key to toggle between the Peak and Channel settings. When Peak is selected, the mask is moved up or down so that the mask value at the center frequency is the same as the peak value of the trace. When Channel is selected, the reference power value is the same as would be calculated by the Channel Power measurement, over the defined channel width; in this case, the mask value at the center frequency is moved to the channel power measurement result.

Channel Width: Channel Width is preset within the Signal Standard. Press this submenu key, then use the directional arrow keys, rotary knob, or numeric keypad to adjust the channel width as desired.

Peak Markers On/Off: Turning on this feature displays a peak marker within an Emission Mask segment. For example, if the Emission Mask had seven segments then there would be seven peak markers.

Back: : Returns to the [“Masks and C/I Menu” on page 2-80](#).

Figure 2-65. Emission Mask Menu

Spurious Emissions (Out-of-Band) Menu

Key Sequence: **Shift** > **Measure** (4) key > Masks and C/I > Spurious Emissions (Out-of-Band)

Spurious Emissions

Spurious Emissions

On Off

Sweep

Single Continuous

Sweep Once

Sweep All ○

Segment Setup
→

Auto Save

Off On Full

Clear Status

Back
←

Spurious Emissions On/Off: Turns On/Off the Spurious Emissions measurement. Refer to [“Spurious Emissions \(Out-of-Band\) Measurement” on page 2-31](#) for more information.

Sweep Single/Continuous: Press this submenu key to select Single sweep mode or to initiate Continuous measurement sweeping of the full mask. Press the key again to stop the continuous measurements. Refer to [“Spurious Emissions \(Out-of-Band\) Measurements” on page 2-35](#).

Sweep Once: Press this submenu key to initiate a single sweep of the currently active segment (highlighted in yellow in the Spurious Emission table). The sweep mode must be set to Single.

Sweep All: Initiates a single measurement sweep of all segments in the mask. The sweep mode must set to Single.

Segment Setup: Press this submenu key to access the Spurious Segments submenu. See [Figure 2-67 on page 2-83](#). This key is active only when Spurious Emissions is On.

Auto Save Off/On/Full: Selects the mask data Auto Save process. When set to On, an HTML file is saved with each segment’s setup and pass/fail results. Auto Save Full saves two file types, HTML and JPG. The HTML file contains setup information, pass/fail results and trace data for all segments in the mask, as well as the screen captures in the associated JPG files. The JPG files are picture files of the measurements associated with each segment. Both the On and Full selections also contain an overall pass/fail status for the mask. Refer to [“Auto Save Modes” on page 2-36](#).

Clear Status: Press this submenu key to clear the Peak and Status data in the Spurious Emission table and all of the supported data in the mask data file.

Back: : Returns to the [“Masks and C/I Menu” on page 2-80](#).

Figure 2-66. Emission Mask Menu

	For more information on creating and editing mask segments, refer to “ Spurious Emissions (Out-of-Band) Measurement ” on page 2-31.
Spurious Segments	
Spurious Segment 1	Spurious Segment: Press this submenu key to select the number of a segment to be edited or swept. The key is active only when the segment number is highlighted in red. Use the directional arrow keys, rotary knob, or numeric keypad to enter the desired number.
Save Current Settings to Selected Segment	Save Current Settings to Selected Segment: Press this submenu key to save the data in the display and all of the supported data for the selected spurious segment in the Spurious Emission table. See Figure 2-20 on page 2-35.
Add Current Settings As New Segment	Add Current Settings As New Segment: Creates a new segment with the current parameter set. The new segment is appended to the end of the list in the Spurious Emission table.
Delete Current Segment	Delete Current Segment: Deletes the current segment from the Spurious Emission table.
Segment Start Amplitude 10.0 dBm	Segment Start Amplitude: Press this submenu key to set a value for the segment’s start limit amplitude. When the value is highlighted in red, use the directional arrow keys, rotary knob, or numeric keypad to enter the amplitude value.
Segment Stop Amplitude 10.0 dBm	Segment Stop Amplitude: Press this submenu key to set a value for the segment’s stop limit amplitude. When the value is highlighted in red, use the directional arrow keys, rotary knob, or numeric keypad to enter the amplitude value.
Save Mask	Save Mask: Saves the mask data from the display and Spurious Emission table and all supporting mask data into the mask data file.
Back ←	Back: : Returns to the previous menu.

Figure 2-67. Spurious Segments Submenu

C/I Menu

Key Sequence: **Shift** > **Measure (4)** key > Masks and C/I > C/I

C/I

On

Off

Center Freq

935.000 MHz

Span

300.000 kHz

Carrier
Signal
Type →

Pass/Fail Limits

On Off

Pass/Fail Limits →

Sweep Time

1 ms

Back ←

Offset Center Freq

GHz

On/Off: Turns carrier to interference ratio measurements on or off.

Center Freq: Press this submenu key to set the center frequency using the keypad, arrow keys, or the rotary knob. When using the numeric keypad, press a unit key or press **Enter** for values in MHz. With zero offset, this key is labeled **Center Freq**. With an offset other than zero, this key is labeled **Offset Center Freq**, as illustrated on the left, below the full menu. Refer to [Section “Freq 1/2 \(Frequency Menu with Offset Function\)” on page 2-55](#).

Span: Press this submenu key to set the frequency span using the keypad, arrow keys, or the rotary knob. When using the numeric keypad, press a unit key or press **Enter** for values in MHz.

Carrier Signal Type: Press this submenu key to display the “[C/I Signal Type Menu](#)” on page 2-85.

Sweep Time: Press this submenu key to set the sweep time. The sweep time is displayed on the key. Use the arrow keys or the rotary knob, then press **Enter**. Or use the number keypad, then press a unit key (or press **Enter** for values in μs).

Back: Returns to the “[Masks and C/I Menu](#)” on page 2-80.

Offset Center Freq: Submenu key label when a frequency offset has been entered.

Figure 2-68. C/I Menu

C/I Signal Type Menu

Key Sequence: **Shift** > **Measure (4)** key > Masks and C/I > C/I > Carrier Signal Type

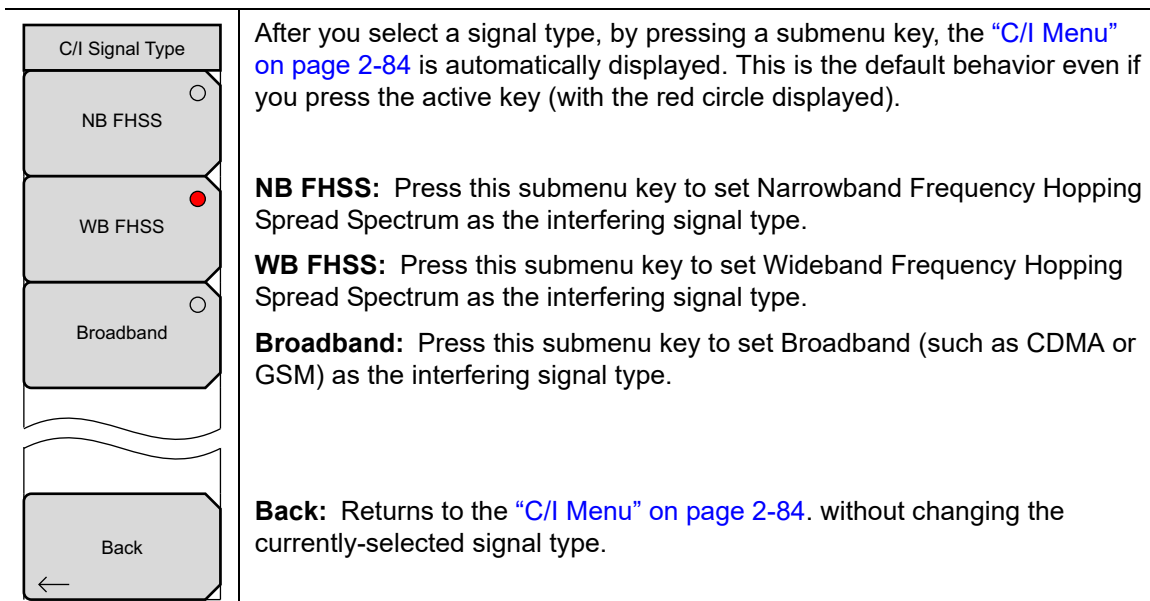


Figure 2-69. C/I Signal Type Menu

AM/FM Demod 1/2 Menu

Key Sequence: **Shift** > **Measure** (4) key > AM/FM Demod

AM/FM Demod 1/2	On/Off: Turns AM/FM Demodulation on or off.
On	Demod Type: Provides submenu keys to select the type of signal to be demodulated (refer to “Demod Type (AM/FM) Menu” on page 2-87): FM Wide Band FM Narrow Band AM USB LSB
Off	
Demod Type	
→	
Demod Freq	
10.350 MHz	Demod Freq: Use the keypad, the directional arrow keys, or the rotary knob to enter the center frequency of the signal to be demodulated. This frequency does not have to be within the current frequency sweep range to which the instrument is set.
Demod Time	Demod Time: Use the keypad, the directional arrow keys, or the rotary knob to increase or decrease the demodulation time, and press the Enter key to select. The demodulation time can be set from 100 milliseconds to 200 seconds. The instrument sweeps one time for every demodulation period. Sweeping pauses during the demodulation time.
3 s	
Set Demod Freq to Current Marker Freq	Set Demod Freq to Current Marker Freq: Sets the demodulation frequency to the frequency of the current marker.
Volume	Volume: The current volume setting is displayed on the screen. Use the up or down arrow keys or rotary knob to change the volume, and press the Enter key to select.
More	
→	More: Press this submenu key to display the “AM/FM Demod 2/2 (More) Menu” on page 2-88 .
Back	Back: Returns to the “Measure Menu” on page 2-72 .
←	

Figure 2-70. SPA AM/FM Demod 1/2 Menu

Demod Type (AM/FM) Menu

Key Sequence: **Shift** > **Measure (4)** key > AM/FM Demod > Demod Type

Demod Type	Press one of these submenu keys to select an AM/FM demodulation type. The red circle indicates the active selection.
FM Wide Band	FM Wide Band: Frequency Modulation
FM Narrow Band	FM Narrow Band: Frequency Modulation
AM	AM: Amplitude Modulation
USB	USB: Upper Sideband. This can also be used when demodulating CW (Morse code) signals.
LSB	LSB: Lower Sideband. This can also be used when demodulating CW (Morse code) signals.
Back	Back: Returns to the “AM/FM Demod 1/2 Menu” on page 2-86.

Figure 2-71. SPA AM/FM Demod Menu

Refer to [Section 2-19 “AM/FM/SSB Demodulation Measurements” on page 2-26](#) for a description of the built-in demodulator.

AM/FM Demod 2/2 (More) Menu

Key Sequence: **Shift** > **Measure** (4) key > AM/FM Demod > More

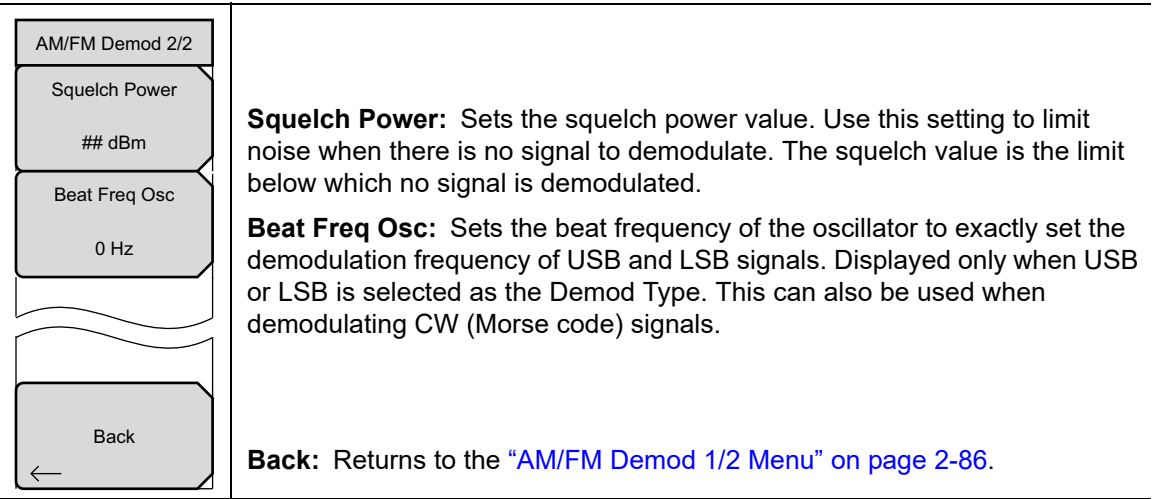


Figure 2-72. SPA AM/FM Demod 2/2 Menu

Generator Menu (Optional)

Key Sequence: **Shift** > **Measure (4)** key > Generator

This menu is available only in spectrum analyzers with Tracking Generator (Option 20).

Generator

Generator Output

On Off

Output Power

dBm

Generator Mode

CW Tracking

CW Frequency

GHz

Settings

→

Transmission

Measurement →

Back

←

Generator Output

On Off: Turns the Tracking Generator Option on and off.

For more information about the Tracking Generator, refer to the *Tracking Generator Measurement Guide*, Anritsu part number 10580-00339.

Back: Returns to the [“Measure Menu” on page 2-72](#).

Figure 2-73. SPA Generator Menu

PIM Hunting Menu

Key Sequence: **Shift > Measure (4) key > PIM Hunting**

PIM Hunting	
Center Freq 3.555 GHz	Center Freq: Set to the center frequency of the IM products from PIM Master.
Squelch Level -125 dBm	Squelch Level: Set this to the same value as video trigger setting; it is the green dotted line on the screen (keep below limit line).
Force Trigger Once	Force Trigger Once: Reset a trace, especially if the trace is not sweeping.
Audio Volume	Audio Volume: Sets the volume of the variable tone over a 30 dB range.
Limit -65 dBm	Limit: Set limit line of the PIM product being hunted (it is the solid yellow line on screen).
Zero Span Time 10.000 s	Zero Span Time: Set the time scale for PIM hunting to the number of IM pulses the user wants to see.
Spectrum Analyzer	Spectrum Analyzer: Returns to the Measurement menu of the Spectrum Analyzer application.
Back ←	Back: Returns to the Measurement menu of the Spectrum Analyzer application.

Figure 2-74. PIM Hunting Menu

IQ Waveform Capture Menu (Option 24)

Key Sequence: **Shift** > **Measure** (4) key > IQ Waveform Capture

This menu is available only when Option 24 is installed on your instrument.

IQ Waveform Capture	
Start	Start Capture: Initiates a capture using the current settings. Messages appear on screen to notify the user of progress and the filename of the data acquired after the waveform capture is complete (Figure 2-25). If Capture Mode is set to Continuous, this button becomes the Stop Capture button. Press the Stop Capture button to end a continuous waveform capture.
Capture	
Capture Length	Capture Length: Sets the time length of the capture.
10 ms	
Capture Mode	Capture Mode: When set to “single”, the instrument performs one waveform capture each time “Start Capture” is pressed. When set to “continuous”, the instrument begins a new capture as soon as the previous one is finished.
Single Continuous	
Sample Rate	Sample Rate: Opens the Select Capture Sample Rate dialog (Figure 2-24). Select the desired Sample Rate (MHz) and associated Bandwidth (MHz) and then press Enter .
12.500 MHz	
Triggering	Triggering: Opens the “IQ Capture Triggering Menu” on page 2-92 to set the triggering parameters.
→	
File Name &	File Name & Location: Opens the “IQ Capture Save Menu” on page 2-92 to set the directory location of the saved file and the prefix of the file name.
Location	
→	
Frequency/	Frequency/Amplitude: Opens the “IQ Capture Frequency/Amplitude Menu” on page 2-93 which contains the specific buttons for setting up the capture waveform frequency, display and attenuation parameters.
Amplitude	
→	
Back	Back: Returns to the “Measure Menu” on page 2-72.
←	

Figure 2-75. SPA IQ Waveform Capture Menu

IQ Capture Triggering Menu

Key Sequence: **Shift > Measure (4) key > IQ Waveform Capture > Triggering**

Capture Triggering

Source

Free Run External

Slope

Rising Falling

Delay

0 μs

Back

Source: Press this submenu key to set the desired type of triggering.

Free Run: The default trigger type is Free Run, in which the instrument begins another sweep as soon as one is finished.

External: A TTL signal applied to the External Trigger BNC input connector causes a single sweep to occur after the set delay. After the sweep is complete, the resultant trace is displayed until the next trigger signal arrives.

Slope: Sets the trigger slope to rising or falling.

Delay: Used when External is selected for the Source. Capture begins after set time delay, once the trigger has occurred. The delay can be entered either as a percentage of the sweep time or as an absolute time delay with units of ns, μs, or ms.

Back: Returns to the [“IQ Waveform Capture Menu \(Option 24\)” on page 2-91](#).

Figure 2-76. SPA IQ Capture Triggering Menu

IQ Capture Save Menu

Key Sequence: **Shift > Measure (4) key > IQ Waveform Capture > File Name & Location**

Save

Capture

Location

File Name

(Prefix)

Back

Capture Location: Opens the Select Save Location dialog and Save Location menu. Refer to the instrument’s User Guide for additional information.

Filename (Prefix): Allows changing the prefix of the output file. Files are saved with a running counter appended to this prefix. Its extension is *.wcap. For example: CaptureOut0045.wcap. CaptureOut is the set prefix file name, and 0045 is the counter number appended to the prefix.

Pressing File Name (Prefix) opens the Edit Filename Prefix dialog and Save menu. The waveform capture output file is a combination of XML and binary data. The beginning of the file contains all of the capture-related parameters such as center frequency, bandwidth, and capture rate as well as any contextual information about the file, such as time, date, and GPS location (if available). At the bottom of the file, in between the <Data> tags, is the raw I and Q data in binary form. I and Q data points are each 3 bytes long and stored in 24-bit twos complement in an alternating fashion (in other words, I0, Q0, I1, Q1...).

Back: Returns to the [“IQ Waveform Capture Menu \(Option 24\)” on page 2-91](#).

Figure 2-77. SPA IQ Capture Save Menu

IQ Capture Frequency/Amplitude Menu

Key Sequence: **Shift** > **Measure (4)** key > IQ Waveform Capture > Frequency/Amplitude

<div>Freq/Amp</div>	<p>Center Freq: Press this submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If entering a frequency using the keypad, the submenu key labels change to GHz, MHz, kHz, and Hz. Press the appropriate units key. Pressing the Enter key has the same effect as the MHz submenu key. With zero offset, this key displays the title Center Freq. With an offset other than zero, this key displays the title Offset Center Freq, as shown below the full menu. Refer to Section “Freq 1/2 (Frequency Menu with Offset Function)” on page 2-55.</p> <p>Span: Lets you set the frequency span to be displayed on the instrument. This submenu key shows the current value for span in units of GHz, MHz, kHz, or Hz. When the Span button is pressed, span becomes the active parameter and may be changed. Use the keypad, the directional arrow keys, or the rotary knob to increase or decrease the span frequency. If the span is changed using the arrow keys, the span changes in a 1-2-5 sequence for each key press.</p> <p>Reference Level: The reference level is the top graticule line on the display, and can be set from +30 dBm to –150 dBm. A value may be entered from the keypad, use the ± key for a minus sign. After entering the value press the dBm submenu key or the Enter key. The up or down arrow keys change the reference level in 10 dB steps, and the left or right arrow keys change the value by 1 dB. The rotary knob changes the value by 0.1 dB per click. The reference level value may be modified by the reference level offset value to compensate for an external attenuator or amplifier.</p> <p>Scale: The y-axis scale can be set in 1 dB steps from 1 dB per division to 15 dB per division. The value can be changed using the keypad, the rotary knob or the arrow keys.</p> <p>Auto Atten: Input attenuation can be either tied to the reference level (On) or manually selected (Off). When input attenuation is tied to the reference level, attenuation is increased as higher reference levels are selected to make sure the instrument input circuits are not saturated by large signals that are likely to be present when high reference levels are required.</p> <p>Atten Level: Press this submenu key and use the keypad, the rotary knob or the arrow keys to change the attenuation value.</p> <p>Back: Returns to the “IQ Waveform Capture Menu (Option 24)” on page 2-91.</p>
<div>Center Freq</div> <div>## GHz</div>	
<div>Span</div> <div>## MHz</div>	
<div>Reference Level</div> <div>##.# dBm</div>	
<div>Scale</div> <div>## dB/div</div>	
<div>Auto Atten</div> <div>On Off</div>	
<div>Atten Lvl</div> <div>##.# dB</div>	
<div>Back</div> <div>←</div>	
<div>Offset Center Freq</div> <div>## GHz</div>	

Figure 2-78. SPA IQ Capture Freq/Amp Menu

Coverage Mapping Menu (Option 431)

Key Sequence: **Shift** > **Measure (4)** key > Coverage Mapping

This menu is available only when Option 431 is installed on your instrument. Refer to [“Coverage Mapping Menu”](#) on page 6-15.

2-34 Trace Menu

Key Sequence: **Shift > Trace (5)** key

The instrument is capable of displaying up to three traces, one with live data, and the other two either with stored data or trace math data.

<div><div>Trace</div><div>Trace</div><div>A B C</div><div>View</div><div>Blank</div><div>Write</div><div>Hold</div><div>Trace A</div><div>Operations →</div><div>Trace B</div><div>Operations →</div><div>Trace C</div><div>Operations →</div><div>Reset</div><div>Trace</div><div>Trace Info</div><div>→</div></div>	<p>Trace</p> <p>A B C: Sets trace A, B, or C as the active trace. Each press of this key increments through trace A, B, and C. The active trace is underlined.</p> <p>View/Blank: Displays or hides the active trace.</p> <p>Write/Hold: Selects between holding the current swept trace on the screen or continually sweeping and updating the displayed measurement. This is not applicable to Trace B or Trace C unless trace math involving Trace A is active.</p> <p>Trace A Operations: Lists the Trace A Ops menu to select an operation that can be applied to Trace A. See “Trace A Ops Menu” on page 2-96.</p> <p>Trace B Operations: Lists the Trace B Ops menu to select an operation that can be applied to Trace B. See “Trace B Ops Menu” on page 2-97.</p> <p>Trace C Operations: Lists the Trace C Ops menu to select an operation that can be applied to Trace C. See “Trace C Ops Menu” on page 2-98.</p> <p>Reset Trace: Resets the trace averaging, Max Hold or Min Hold, and restarts the sweep.</p> <p>Trace Info: Stops the current trace and displays a summary table of trace parameters and current settings. See Figure 2-80 on page 2-95. Press Enter or Escape to clear the table from the display and restart the trace.</p> <p>Display: Press the appropriate key to display trace information for Trace A Only, Trace B Only, Trace C Only, or All Traces.</p> <p>Top of List: Press this submenu key to jump to the top of the Trace Info table.</p> <p>Page Up: Press this key to skip up through the table.</p> <p>Page Down: Press this key to skip down through the table.</p> <p>Bottom of List: Press this submenu key to jump to the bottom of the table.</p>
---	--

Figure 2-79. SPA Trace Menu

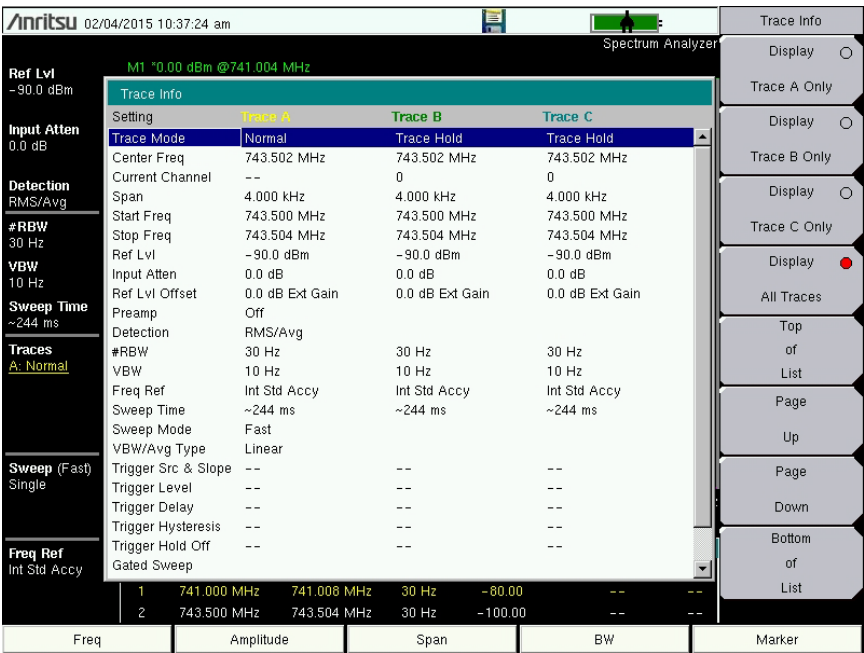


Figure 2-80. Trace Info

Trace A Ops Menu

Key Sequence: **Shift > Trace (5) key > Trace A Operations**

Trace A Ops

Normal -> A

Max Hold -> A

Min Hold -> A

Average -> A

of Averages

10

Back

Normal -> A: Displays data for the current trace sweep.

Max Hold -> A: Shows the cumulative maximum value of each display point over many trace sweeps.

Min Hold -> A: Shows the cumulative minimum value of each display point over many trace sweeps.

Average -> A: Shows an exponential average of a number of traces, determined by the # of Averages key.

of Averages: Sets the number of traces for use in calculating the average display value. Then number used for averaging ranges from 1 to 65535.

Back: Returns to the ["Trace Menu" on page 2-94](#).

Figure 2-81. SPA Trace A Ops Menu

Trace B Ops Menu

Key Sequence: **Shift** > **Trace (5)** key > Trace B Operations

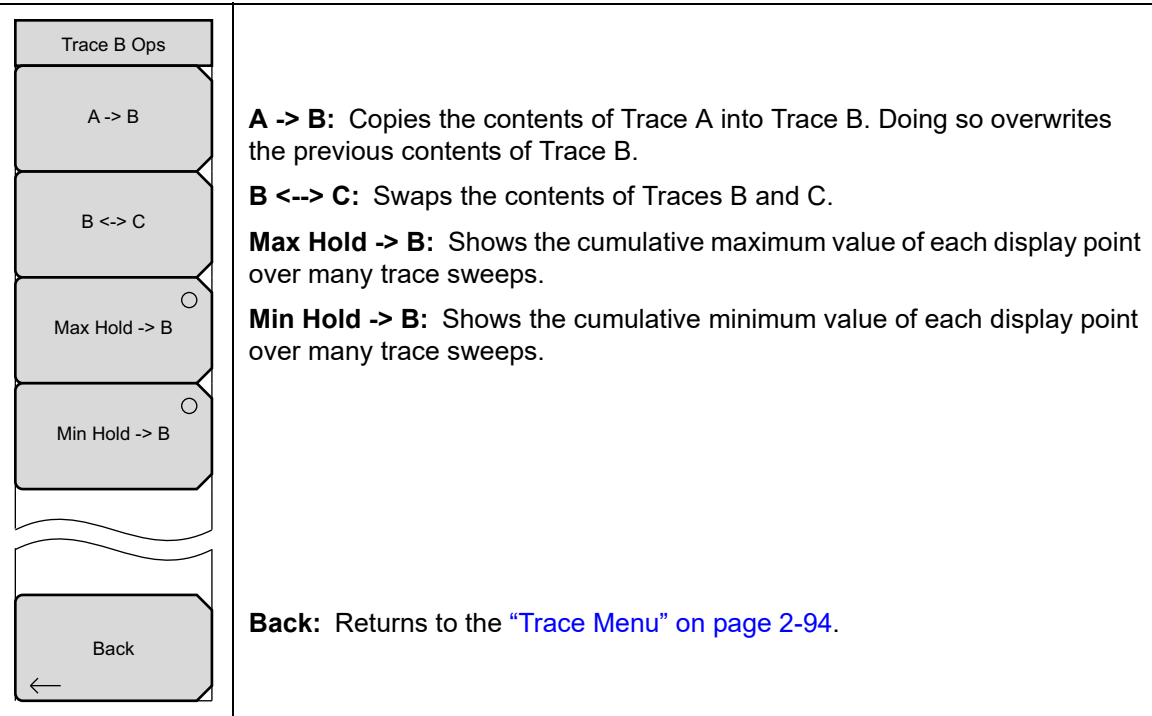


Figure 2-82. SPA Trace B Ops Menu

Trace C Ops Menu

Key Sequence: **Shift > Trace (5) key > Trace C Operations**

Trace C Ops	A -> C: Copies the contents of Trace A into Trace C. Doing so overwrites the previous contents of Trace C.
A -> C	B <--> C: Swaps the contents of Trace B and Trace C.
B <-> C	Max Hold -> C: Shows the cumulative maximum value of each display point over many trace sweeps.
Max Hold -> C	Min Hold -> C: Shows the cumulative minimum value of each display point over many trace sweeps.
Min Hold -> C	A - B -> C: Subtracts the value of Trace B from trace A and places the results in Trace C. This function is very useful for observing the changes in values of live Trace A compared to a trace stored in Trace B.
A-B -> C	When trace math is active, a relative scale shows on the right side of the graph, and is associated to Trace C. This allows the user to optimize the display of Trace C without affecting the display of Trace A and Trace B.
B-A -> C	B - A -> C: Subtracts the value of Trace A from Trace B and places the results in Trace C. This function is very useful for observing the changes in values of live Trace A compared to a trace stored in Trace B. When trace math is active, a relative scale shows on the right side of the graph, and is associated to Trace C. This allows the user to optimize the display of Trace C without affecting the display of Trace A and Trace B.
Relative Ref	Relative Ref: Sets the value applied to the top graticule for the relative scale that appears on the right side of the graph when trace math is active. Change this value by using the rotary knob, up or down arrows, or entering the value on the numeric keypad and pressing the dB submenu key or the Enter key. This entry is valid only when trace math is active
10.0 dB	
Relative Scale	Relative Scale: Sets the value applied to the scaling of the relative scale that appears on the right side of the graph when trace math is active. Change this value by using the rotary knob, up or down arrows, or entering the value on the numeric keypad and pressing the dB submenu key or the Enter key. This entry is valid only when trace math is active.
10 dB/div	Back: Returns to the "Trace Menu" on page 2-94.

Figure 2-83. SPA Trace C Ops Menu

2-35 Limit Menu

Key Sequence: **Shift > Limit (6) key**

The **Limit** menu keys are shown in the following figures.

Two types of limit lines can be specified, lower limit lines and upper limit lines. Limit lines can be used for visual reference only, or for pass/fail criteria by using the limit alarm ([Figure 2-84](#)). Limit alarm failures are reported whenever a signal is above the upper limit line or below the lower limit line. By using save-on-event, a signal that exceeds the limit alarm can be automatically saved. For details, see the User Guide for your instrument.

Each limit line can consist of a single segment, or as many as 40 segments across the entire frequency span of the instrument. These limit segments are retained regardless of the current frequency span of the instrument, which allows the configuring of specific limit envelopes at various frequencies of interest without having to re-configure them each time the frequency is changed.

Limit	Limit Upper/Lower: This submenu key selects which limit line is active for editing. The limit line that is currently selected for editing is underlined.
Limit	On/Off: This submenu key turns the active limit (upper or lower) on or off.
Upper Lower	Limit Edit: This submenu key displays the “Edit Menu (Limit)” on page 2-100 that allows creating or editing of single or multi-segment limit lines. The currently active limit point is marked by a red circle on the display.
On	Limit Move: Press this submenu key to display the “Limit Move Menu” on page 2-102 .
Off	Limit Envelope: A limit envelope is very useful when you want to easily detect new signals in the presence of other preexisting signals. Use the limit envelope function to automatically create upper or lower limit lines that are based upon the on-screen measured spectrum analysis values. Refer to Figure 2-89 for an example limit envelope. Press this submenu key to open the “Limit Envelope Menu” on page 2-103 .
Limit Edit →	Limit Advanced: Press this submenu key to open the Limit Advanced submenu key menu. The advanced limit line section offers several useful functions. In this section, you can create either an absolute limit line (which is one based upon the frequencies that are entered for each inflection point) or a relative limit line (which is based upon the delta frequencies between the center frequency and the inflection points). Both types of limit lines can be saved and recalled. Press this submenu key to open the “Limit Advanced Menu” on page 2-105 .
Limit Move →	Limit Alarm On/Off: Pressing this submenu key toggles the alarm function ON and OFF for the currently active limit line. When ON, an alarm beep sounds when a data point exceeds the limit.
Limit Envelope →	Set Default Limit: Pressing this submenu key deletes all limit points for the currently active limit line and sets the default limit line value, which is a single limit whose position is 2.5 grid lines from the top of the screen (for the upper limit line) or 2.5 grid lines from the bottom of the screen (for the lower limit line), depending upon which limit is active. The inactive limit line is not altered.
Limit Advanced →	
Limit Alarm	
On Off	
Set Default Limit	

Figure 2-84. SPA Limit Menu

Edit Menu (Limit)

Key Sequence: **Shift > Limit (6) key > Limit Edit**

<div><div>Edit</div><div><div>Frequency</div><div>1.964 718 182 GHz</div></div><div><div>Amplitude</div><div>-75.0 dBm</div></div><div><div>Add</div><div>Point</div></div><div><div>Add</div><div>Vertical</div></div><div><div>Delete</div><div>Point</div></div><div><div>Next</div><div>Point</div><div>Left</div></div><div><div>Next</div><div>Point</div><div>Right</div></div><div><div>Back</div><div>←</div></div></div>	<p>Frequency: Press this submenu key to set the frequency of a limit line inflection point. The frequency of each inflection point in a limit line can be individually set. When a new point is added, it takes on a value halfway between two existing points, or it takes on the stop frequency of the current sweep if no point is higher in frequency than the one being added. See the Add Point submenu key description for more details. Use the keypad, the left or right arrow keys, or the rotary knob to change the frequency of an inflection point. The left or right arrows move the inflection point by 5% of the span.</p> <p>Amplitude: Press this submenu key to set the amplitude of a limit line inflection point. The amplitude of each inflection point can also be individually set. By default, when a new point is added, it takes on the amplitude that is on the limit line at the frequency where the point was added. Use the keypad (using the ± key to set a negative value), the up or down arrow keys, or the rotary knob to move the point to the desired value. The unit of the amplitude limit is the same as the current vertical amplitude unit. See the Add Point submenu key description for details. The up or down arrows move the amplitude by 5% of the screen height.</p> <p>Add Point: Press this submenu key to add a limit line inflection point. The precise behavior of this submenu key depends upon which inflection point is active at the time that the key is pressed. If the active limit point is somewhere in the middle of a multi-segment limit line, then a new limit point is added that is halfway between the currently active point and the point immediately to its right. The amplitude of the inflection point is such that it falls on the limit line. For example, if a limit point exists at 2.0 GHz with an amplitude of -30 dBm, and if the next point is 3.0 GHz with an amplitude of -50 dBm, then the instrument adds a point at 2.5 GHz with an amplitude of -40 dBm. The frequency and amplitude values of the new point can be adjusted as needed with the Frequency and Amplitude submenu keys.</p> <p>If the last limit point is active (assuming it is not at the right edge of the display), then the new limit point is placed at the right edge of the display at the same amplitude as the point immediately to its left. Points may not be added beyond the current sweep limits of the instrument.</p>
--	---

Figure 2-85. SPA Limit Edit Menu (1 of 2)

Edit Menu (Continued)

<div><div>Edit</div><div>Frequency</div><div>1.964 718 182 GHz</div><div>Amplitude</div><div>-75.0 dBm</div><div>Add</div><div>Point</div><div>Add</div><div>Vertical</div><div>Delete</div><div>Point</div><div>Next</div><div>Point</div><div>Left</div><div>Next</div><div>Point</div><div>Right</div><div>Back</div><div>←</div></div>	<p>Add Vertical: In many measurement masks, step changes occur in the value of the limit line. Press this submenu key to add two inflection points. The two inflection points share the same frequency and are centered midpoint between adjacent measured points. The magnitudes of the points are set by using a visually intuitive algorithm that is based upon the adjacent inflection points.</p> <p>You can adjust the magnitudes independently, but the frequencies of the two points remain linked and are adjusted as a vertical pair. Setting a discrete frequency, a limit inflection point keeps that exact frequency and place the limit point appropriately regardless of the frequency span. This is especially useful for emission mask verification.</p> <p>Delete Point: Press this submenu key to delete the currently active point. The active point becomes the point that is immediately to the left of the point that was deleted.</p> <p>Next Point Left: Press this submenu key to select the inflection point that is immediately to the left of the active point, making this newly selected point active for editing or deletion. With each key press, the active point becomes that point to the left of the previously active point, until the newly selected active point becomes the left-most point on the screen.</p> <p>Next Point Right: Press this submenu key to select the limit point immediately to the right of the active point, making this newly selected point active for editing or deletion. With each key press, the active point becomes that point to the right of the previously active point, until the newly selected active point becomes the right-most point on the screen.</p> <p>Back: Press this submenu key to return to the “Limit Menu” on page 2-99.</p>
--	---

Figure 2-86. SPA Limit Edit Menu (2 of 2)

Limit Move Menu

Key Sequence: **Shift > Limit (6) key > Limit Move**

Limit Move

Move Limit
to Current
Center Freq

Move Limit
U/D
0.0 dB

Move Limit
L/R
0 Hz

Move Limit
to Marker 1

Offset from Marker 1
10.0 dB

Back

Move Limit to Current Center Freq: Pressing this submenu key moves the center of the existing limit line to the center frequency of the measurement. The span of the existing limit line is not changed by doing this. Use this submenu key as an easy way to get an existing limit line on screen. If no limit line is turned on, then a new, flat default limit line is turned on and is located 2.5 grid lines from the top of the screen for the upper limit line or 2.5 grid lines from the bottom of the screen for the lower limit line.

Move Limit U/D: If the limit line is flat, use this submenu key to move the limit line to an absolute power point in dBm. If the limit line is not flat, then use this submenu key to move the limit line up or down by the selected number of dB. Use the keypad to enter the desired value. The entire line moves by the amount that is entered. The limit line can also be moved by using the rotary knob. Turn the rotary knob clockwise to move the line to higher power levels. The up or down arrows move the limit line by 5% of the screen height. The left or right arrows move the limit line by 0.2% of the screen height or 0.2 dB when the scale is set to 10 dB/division. The submenu key displays a zero value after the limit line has been moved.

Move Limit L/R: Pressing this submenu key allows you to adjust the frequencies of the limit line. All inflection points are moved by the value entered. The rotary knob can also be used to make this adjustment. Turn the rotary knob clockwise to move the limit line to higher frequencies. The left or right arrows move the limit line by 5% of the span while the up or down arrows move the line by one display pixel. The submenu key displays a zero value after the limit line has been moved.

Move Limit to Marker 1: Press this submenu key to move the frequency and amplitude of the center frequency of the limit line to the frequency and amplitude of Marker 1 (assuming that the Offset from Marker 1 submenu key is set to 0 dB).

Offset from Marker 1: Press this submenu key to set a limit line offset value from Marker 1 amplitude. This feature moves the limit line amplitude and frequency as needed to place the center of the limit line the user-specified number of dB from the position of Marker 1. Positive values place the limit line above Marker 1, and negative values place the limit line below Marker 1.

Back: Press this submenu key to return to the [“Limit Menu” on page 2-99](#).

Figure 2-87. SPA Limit Move Menu

Limit Envelope Menu

Key Sequence: **Shift > Limit (6) key > Limit Envelope**

Limit Envelope

Create Envelope

Update

Envelope Amplitude

Upper Points

21

Upper Offset

3.0 dB

Upper Shape

Square Slope

Back

Create Envelope: Press this submenu key to generate the envelope using the Limit Envelope characteristics. If the default results are not satisfactory, then you can make adjustments to the amplitude and frequency of each inflection point, and you can add or delete inflection points.

Update Envelope Amplitude: While working on your envelope (or if your signal amplitude changes), you may want to adjust the amplitude of the current limit without changing the frequencies of the inflection points. Pressing this submenu key makes those amplitude adjustments without frequency adjustments.

Upper Points (if Upper Limit is selected)
Lower Points (if Lower Limit is selected): Use this submenu key to define how many inflection points you want for the selected upper or lower limit envelopes. The value can be between 2 and 41, but must be an even number when a Square Upper Shape is selected (below). Note that the upper and lower limit lines do not need to have the same number of points.

Upper Offset (if Limit is toggled to Upper)
Lower Offset (if Limit is toggled to Lower): This submenu key is used to define how far away from the measured signal the upper or lower envelope is placed. The limits are ± 100 dB. For an upper envelope, usually the value is positive in order to place the envelope above the signal. For a lower envelope, the value is usually negative in order to place the envelope below the signal.

Upper Shape Square/Slope (if Limit is toggled to Upper)
Lower Shape Square/Slope (if Limit is toggled to Lower): Press this submenu key to choose whether the default for the upper or lower envelope displays with flat tops (Square setting) and reasonably vertical lines to change level or whether the envelope displays with sloped lines (Slope setting) between adjacent inflection points. When the square envelope type is selected, two inflection points are used for each horizontal segment. You can toggle between a square envelope and a sloped envelope by pressing this submenu key. [Figure 2-89](#) is an example of a Square Limit Envelope.

Back: Press this submenu key to return to the [“Limit Menu” on page 2-99](#).

Figure 2-88. SPA Limit Envelope Menu

Square Limit Envelope Example

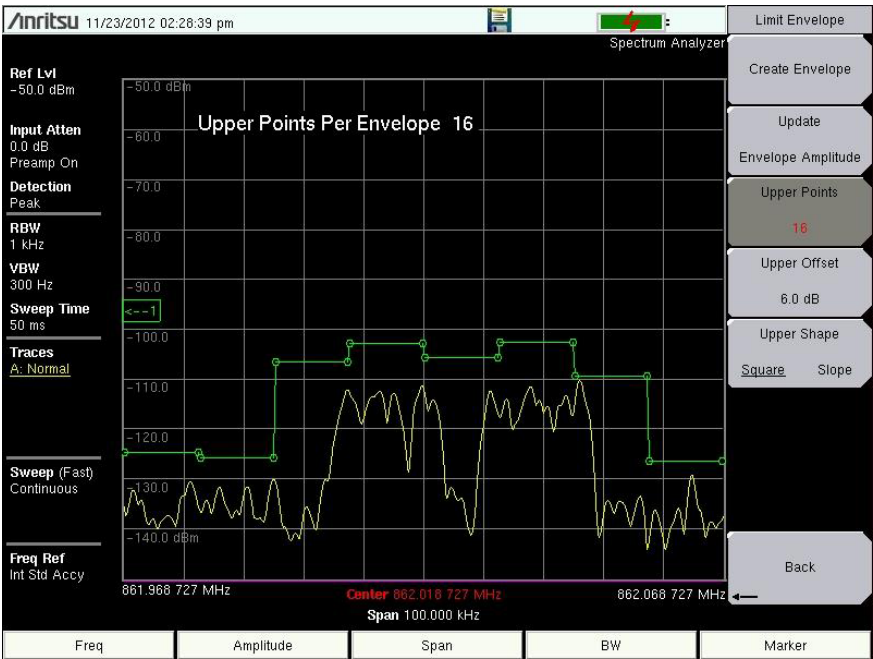


Figure 2-89. Square Limit Envelope

Sloped Limit Envelope Example

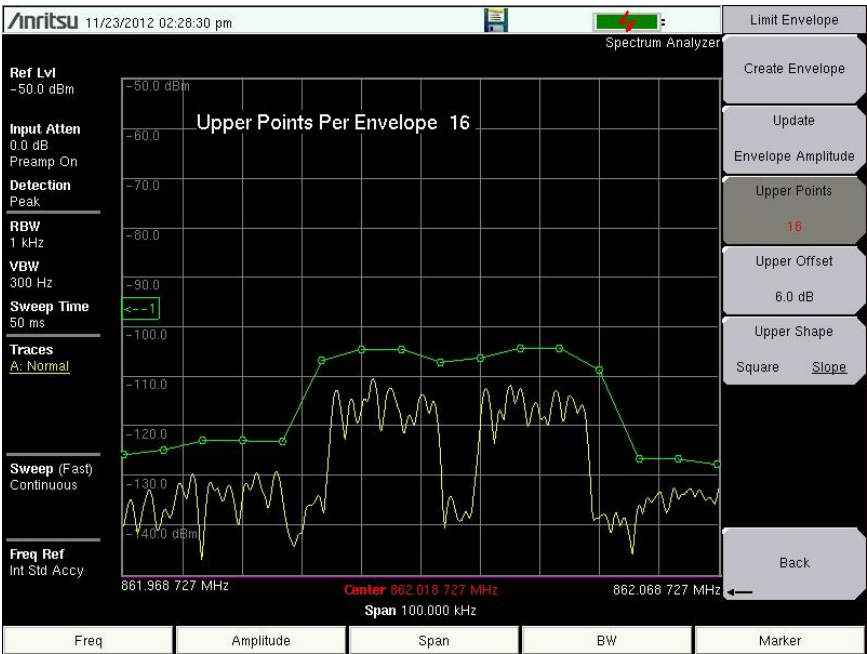


Figure 2-90. Sloped Limit Envelope

Limit Advanced Menu

Key Sequence: **Shift** > **Limit (6)** key > Limit Advanced

Limit Advanced

Limit Line Type

Absolute Relative

Limit Mirror

Off On

Save

Limit

Recall

Limit

Back

Limit Line Type Absolute/Relative: Press this submenu key to choose to have either limit line be absolute or be relative. This submenu key may be used at any time while working with limit lines. Absolute limit lines set the limit inflection points based upon the entered frequencies for each point. Relative limit lines set the limit inflection points relative to the current center frequency. Regardless of how a limit line is set up, saved, or recalled, it can be changed between absolute and relative by toggling with this submenu key.

Limit Mirror Off/On: Press this submenu key to turn the Limit Mirror feature On and Off.

Many emission masks are symmetrical. The low frequency side is identical to the upper side. The Limit Mirror feature allows you to create half of the limit line and get the other half built automatically. This feature can work in either of two ways:

Turn Limit Mirror on before beginning to build a limit line. As you add a point on either side of the center frequency, another point is automatically added on the opposite side of the center frequency.

Leave Limit Mirror off until half of the limit line is built, then turn On Limit Mirror. the other half of the limit line is built automatically.

Save Limit: Pressing this submenu key opens a dialog to save the current upper and lower limit lines. You can name the saved limit line yourself or accept the name that is suggested by the instrument (which is based upon a previously saved name). If you did not intend to save the limit line, then press Esc to stop the dialog and avoid saving the limit line.

Recall Limit: Pressing this submenu key opens a dialog box to recall a saved limit line. The dialog box presents a list of saved limit lines. Highlight the desired limit line and press **Enter**. If you decide not to recall a limit line, then press Esc to stop the dialog.

If the saved limit is a relative limit, then it is recalled centered about the current center frequency. If the saved limit is an absolute limit, then it is recalled to the frequency at which it was created.

If you recall an absolute limit, and if it is off screen, then you see the left or right limit off-screen indicator on the edge of the screen.

Back: Press this submenu key to return to the [“Limit Menu” on page 2-99](#).

Figure 2-91. SPA Limit Advanced Menu

2-36 Application Options Menu

Key Sequence: **Shift** > **System** (8) key > Application Options

<div><div>Options</div><div>Impedance</div><div>50 Ohm 75 Ohm Other</div><div>Bias Tee</div><div>Auto Ref Level</div><div>Back</div></div>	<p>Impedance 50 ohm 75 ohm Other: Select either 50 ohm, 75 ohm, or Other impedance value. Selecting 75 ohm selects the 7.5 dB loss of the Anritsu 12N50-75B adapter. For other adapters, select Other and enter the appropriate loss (0 dB is the default loss). Note that loss values are also applied to the relevant units.</p> <p>Bias Tee: See the product Technical Data Sheet to check option availability on your instrument model.</p> <p>Auto Ref Level: The Auto Ref Level function adjusts the position of a signal on the display screen so that it is approximately two divisions down from the top, if possible. When the key is pressed, the reference level is adjusted once. Auto Ref Level may turn off the low-noise front-end preamplifier, but does not turn it on. It has no effect on vertical scaling.</p> <p>Back: Press this submenu key to return to the previous menu.</p>
--	---

Figure 2-92. SPA Application Options Menu

2-37 Other Menus

Preset, **File**, **Mode**, and **System** menus are described in the instrument User Guide.

Chapter 3 — Interference Analyzer (Option 25)

3-1 Introduction

Many wireless networks operate in complex signal environments. Three or four base station antennas may be located on the same tower and can create interference problems, which can affect system capacity and coverage.

The Interference Analyzer (option 25) adds five measurement capabilities to the spectrum analyzer:

- [Section 3-4 “Spectrogram” on page 3-2](#)
- [Section 3-5 “Signal Strength” on page 3-4](#)
- [Section 3-6 “Received Signal Strength Indicator \(RSSI\)” on page 3-5](#)
- [Section 3-7 “Signal ID” on page 3-6](#)
- [Section 3-8 “Interference Mapping” on page 3-8](#)

The instrument also has a spectrum mode which displays signals in a traditional spectrum analyzer view.

Note

Set the instrument to Interference Analyzer mode for all the measurements described in this chapter. Refer to [“Product Information, Compliance, and Safety” on page 1-1](#).

3-2 General Measurement Setups

Refer to your instrument User Guide for instructions on setting up frequency, span, amplitude, GPS, limit lines, markers, and file management.

3-3 Spectrum

In Spectrum Analyzer mode, smart one-button measurements are built-in for field strength, occupied bandwidth, channel power, adjacent channel power ratio, and carrier to interference ratio (C/I) tests. In addition, AM/FM/SSB demodulation is available to aid in the identification of interfering signals. This section presents brief examples demonstrating the use of these measurements.

Press the **Measurements** main menu key followed by the **Spectrum** submenu key. Refer to [“Field Measurements” on page 2-14](#) for further spectrum measurement procedures.

3-4 Spectrogram

A Spectrogram is a three dimensional representation of frequency, time and power useful for identifying intermittent interference. Color is used to represent power levels.

Required Equipment

- An antenna that is appropriate for the frequency range to be measured

Required Setup

- Place the instrument in Interference Analyzer mode.
- Connect the antenna to the RF In test port.

Procedure

The following procedure demonstrates one example of an Interference Analyzer Spectrogram setup.

1. For the most effective spectrogram display, press the **Amplitude** main menu key, press the **Reference Level** submenu key and set the reference level such that the largest signal to be displayed is near the top of the spectrum analyzer area of the screen. The reference value required can be determined by observing the color of the highest signal and changing the reference level to place that value near the top of the spectrum analyzer area.
2. Press the **Scale** submenu key and set the scale value to place the lowest signal near the bottom of the screen. In general, 4 dB/division or 5 dB/division are good starting values.
3. Press the **BW** main menu key and set Auto RBW and Auto VBW On, or set the applicable RBW and VBW values by pressing the RBW and VBW submenu keys.
4. Press the **Measurements** main menu key, then the **Spectrogram** submenu key to display the spectrogram. Press the **Spectrogram** key again to open the Spectrogram Menu.
5. To change the time between sweeps, press the **Sweep Interval** submenu key and use the rotary knob or keypad to set the time from 0 seconds to 60 seconds.

Note

If Sweep Interval is set to a value > 0, a message is displayed instructing you to set the selected trace to Max Hold, Min Hold, or Average, which determine how multiple measurement traces are compressed into one spectrogram trace. This allows extended measurement times to be set, either with the result on one screen or when recording without running out of mass memory.

6. The instrument can be set so that spectrogram plots are automatically saved when the display is full. Press the **Record** submenu key to toggle saving On or Off.
7. When Record is set to On, the **Recording Time** submenu key is displayed. Press this submenu key to set how long the instrument will record the spectrogram before stopping.
8. The **Time Cursor** submenu key is used to turn on the horizontal time cursor. Use the up or down arrow key to move the cursor vertically through the spectrogram. The date

and time that the measurement at the cursor position was taken is displayed at the top of the screen.

Note When the Time Cursor is activated and is not on the zero trace position, the instrument will automatically stop making measurements.

9. Press the **Marker** main menu key to place up to six markers on the signal and display the power and frequency at each marker position.

Note Screen captured images are provided as examples. The image and measurement details shown on your instrument may differ from the examples in this Measurement Guide.

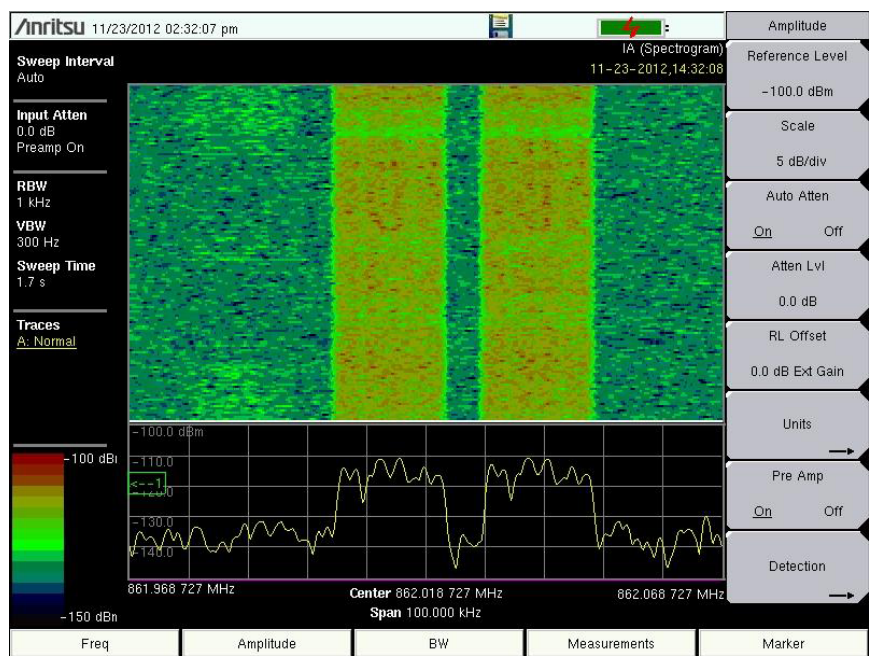


Figure 3-1. Interference Analyzer Spectrogram

3-5 Signal Strength

The Signal Strength meter is useful for tracking down the source of an interfering signal. This measurement is done at a single frequency in zero span. The power at a frequency (in dBm and Watts) is displayed along with an optional audible indicator. Connect a directional antenna and the frequency of the audible indicator increases as the measured signal strength increases. This mode is especially useful when attempting to locate an emitter using a directional antenna.

For field strength measurements, antenna factors are included. Antenna factors for many antennas offered by Anritsu are stored in the instrument. Custom antenna factors can be created and uploaded into the instrument using Anritsu Master Software Tools software.

Procedure

The following procedure demonstrates a common Interference Analyzer Signal Strength setup.

1. Connect the appropriate directional antenna to the RF In port and press the **Measurements** main menu key.
2. Press the **Signal Strength** submenu key to display the Signal Strength Meter. Press the **Signal Strength** submenu key again to open the Signal Strength menu.
3. Press the **Auto Scale** submenu key to automatically scale the display range, or set the desired maximum and minimum values by pressing the **Max Level** and **Min Level** submenu keys.
4. Press the **Speaker On/Off** submenu key to turn on the audio output.
5. If necessary, press the **Volume** submenu key to set the speaker or headphone volume to a comfortable level. Use the up or down arrow keys to adjust the volume.

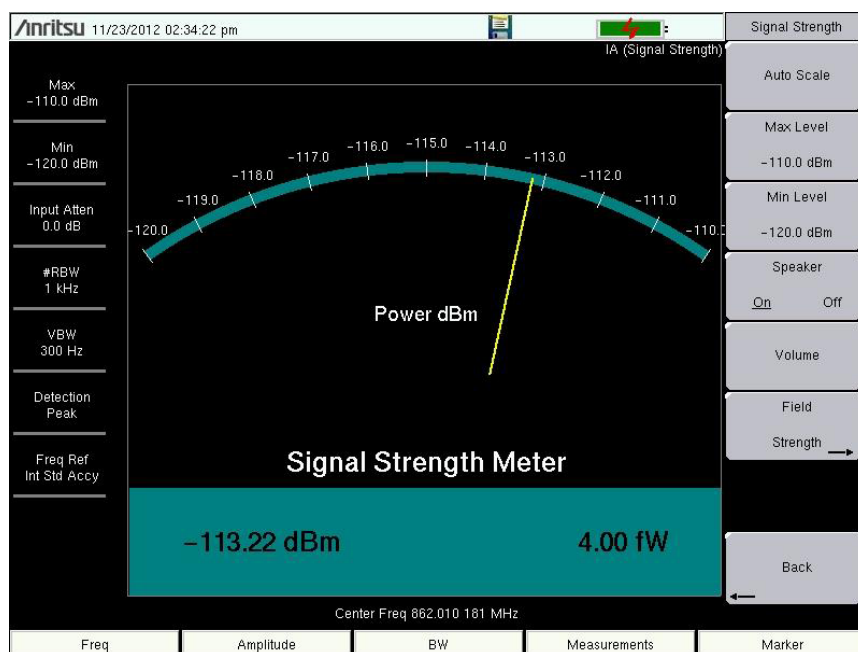


Figure 3-2. Interference Analyzer Signal Strength

3-6 Received Signal Strength Indicator (RSSI)

RSSI is useful for observing signal strength at a single frequency over time.

Procedure

The following procedure demonstrates a common Interference Analyzer RSSI setup. To select Interference Analyzer mode:

1. Press the **Measurements** main menu key, then press the RSSI submenu key to bring up the RSSI display. Press the RSSI key again to open the RSSI menu.
2. Press the Time Interval submenu key to set the time between adjacent measurement points. This time may be set from 70 ms to 1 minute.
3. Press the Time Span submenu key to set the overall time span for the RSSI measurement. This time can be set from zero, to give manual control of the time span, to a maximum of seven days. After the specified time span, the measurement is halted. Depending upon the time interval selected, the data will scroll to the left once the trace fills the screen.
4. Press the Auto Scale key to automatically set the reference level and scale factor to place the trace on the screen.

Note

The Time Span only captures the last display, not the entire time of the Time Span. Use a longer time interval to extend the effective trace capture time.

5. To store the RSSI data, press the Record On/Off submenu key to turn on data logging. The data is named Log – followed by the time at which the data was stored. Each screen full of 551 data points will be stored as a separate display, and up to seven days of data can be saved. The instrument saves the data in the saved trace directory and it can be recalled by selecting recall trace measurement.

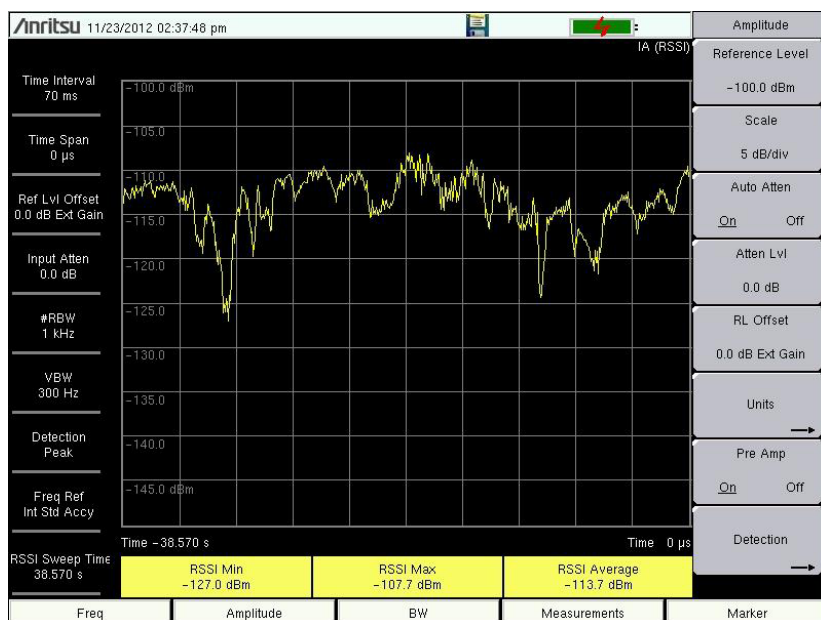


Figure 3-3. Interference Analyzer RSSI

3-7 Signal ID

Note Select a non-zero span measurement mode before starting this procedure.

The Signal ID feature in the Interference Analyzer helps to quickly identify the different types of interfering signals with a signal to noise ratio of 10 dB or greater. You can configure the Signal ID measurement parameters to identify all signals within the selected band or monitor one single interfering frequency. The results displayed include the Center Frequency, Bandwidth of the signal, the type of the signal (FM, CDMA, GSM, WCDMA, and WLAN only), its closest channel number, the number of carriers, its signal to noise ratio, and the channel power of the signal. The spectrum of the signal is colored blue to easily review the scanned signals.

Procedure

The following procedure demonstrates one example of an Interference Analyzer Signal ID setup.

1. For the most effective signal ID display, press the **Amplitude** main menu key followed by pressing the **Reference Level** submenu key. Set the reference level such that the largest signal to be displayed will be near the top of the graph area of the screen. The reference value required can be determined by observing the peak of the highest signal and changing the reference level to place that value near the top of the graph display.
2. Press the **Scale** submenu key and set the scale value to place the lowest signal near the bottom of the screen. In general, 4 dB/division or 5 dB/division will be good starting values.
3. Press the **BW** main menu key and set Auto RBW and Auto VBW On, or set the applicable RBW and VBW values by selecting the RBW and VBW submenu keys.
4. Press the **Measurements** main menu key
5. Press the **Signal ID** submenu key to activate the measurement. Press **Signal ID** again to list the Signal ID menu and to set up the Signal ID test parameters. Set up these parameters as desired – Scan Type, Scan Freq, Continuous Monitoring, Single Sweep and Review.

To view the Signal ID data of a single frequency.

1. In the Signal ID menu, press the **Scan Type** submenu key so that All is selected (underlined).
2. Press the **Single Sweep and Review** submenu key. A center frequency and its accompanying data are highlighted in the table below the graph. In the graph, a dotted red line marks the center frequency and the band of blue is the associated bandwidth. Scroll to the desired center frequency in the table and the red dotted line and band of blue will track accordingly.
3. Press the **Scan Type** submenu key so that **Freq** is selected. The center frequency that was in the table selected is entered as the Scan Freq submenu key frequency automatically. Now, instead of sweeping across the whole span, the measurement will only identify the selected frequency and will display its Channel Power as well.

- 4. Press the desired sweep mode submenu key, Continuous Monitoring or Single Sweep and Review.



Figure 3-4. Interference Analyzer Signal ID, All Scan Type

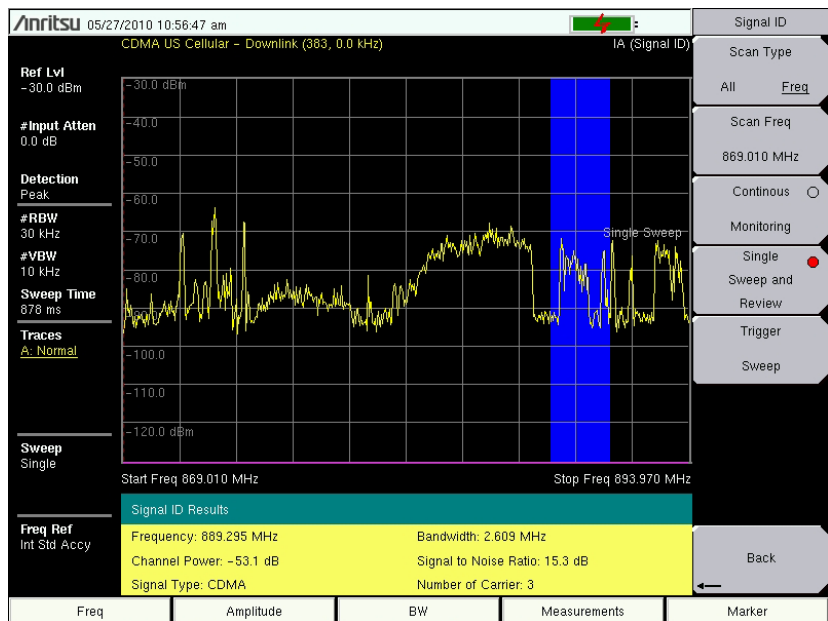


Figure 3-5. Interference Analyzer Signal ID, Freq Scan Type

3-8 Interference Mapping

Note Interference Mapping requires GPS Option 31 or the MA2700A which contains a GPS module.

Interference Mapping assists in quickly identifying the location of an interfering signal using a directional antenna and a GeoEmbedded map created using Anritsu easyMap Tools software.

The easyMap Tools program creates single panel maps (.map) for use with Anritsu instruments. easyMap Tools also creates pan and zoom maps (.azm) compatible with supported Anritsu instruments. The software imports maps from OpenStreetMap and Google Maps and creates files with or without GPS information. Anritsu easyMap Tools is available from the Anritsu website (www.anritsu.com).

Note For a list of supported instruments, refer to easyMap Tools Help.

With a valid GPS signal, the instrument will identify the current location on the displayed map with a plus sign. Saved locations are displayed with an orange square. The direction of the interfering signal can be determined and recorded. With two or more lines, you can see where the lines intersect and estimate the location of the interferer.

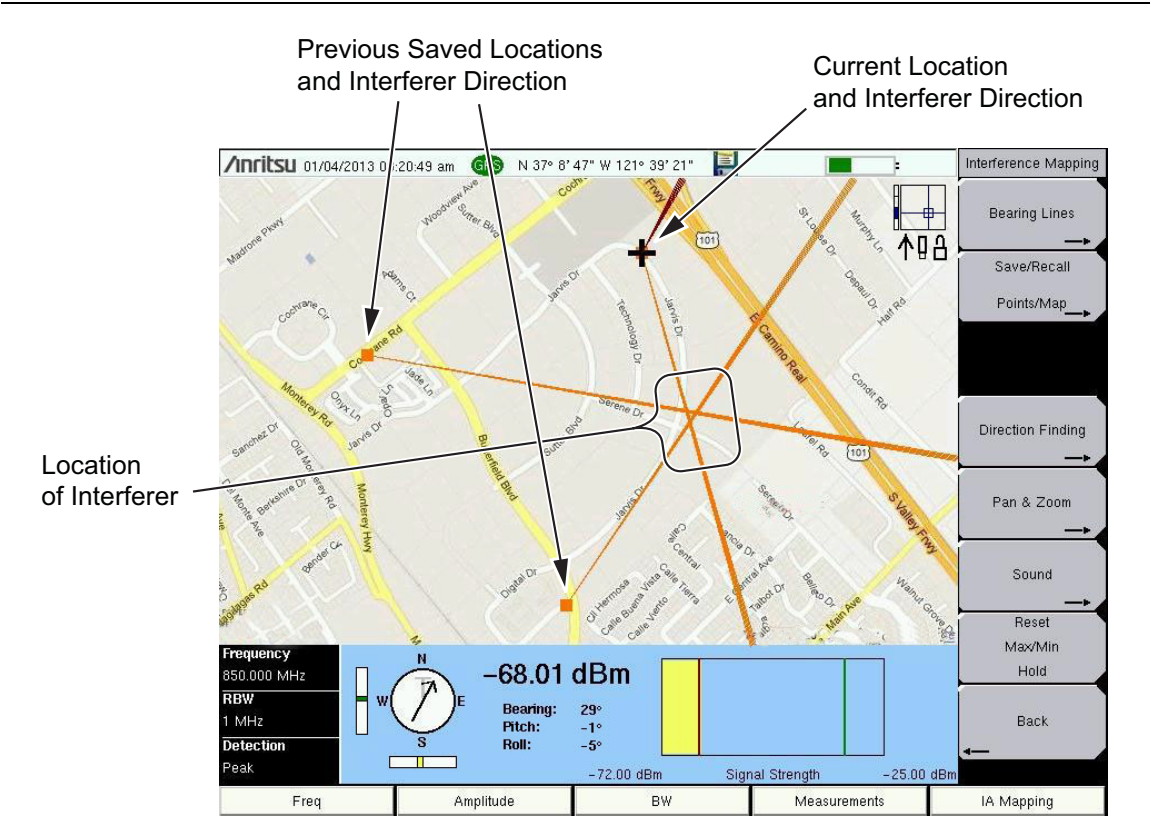


Figure 3-6. Interference Mapping with the MA2700A Handheld Direction Finding System

Overview

1. Capture a map using Anritsu easyMap Tools. Both non-zoomable (.map) and zoomable (.azm) map file formats are appropriate.
2. Copy the map file to a USB memory stick and then insert the memory stick into the Anritsu instrument's USB Type A port. Anritsu recommends copying the map file to the instrument's internal memory.
3. Set the Anritsu instrument to IA mapping and configure the instrument.
4. Load (Recall) the map file.
5. Map the interfering signal.
6. Save the mapping information.
7. View (recall) saved mapping information.
 - Saved Maps and KML points can be viewed on the Anritsu instrument. The user may want to clear any existing points before recalling the map. Refer to [“Bearing Lines Menu” on page 3-67](#).
 - Saved Maps, KML points, Tab Delimited Points, and JPG files can be transferred and viewed on a PC. Refer to [“Mapping Save/Recall Menu” on page 3-68](#).

The actual mapping process varies based on the direction finding equipment. The process is described in the following sections:

- [“Interference Mapping \(Antenna Only\)” on page 3-10](#)
- [“Interference Mapping \(MA2700A and Antenna\)” on page 3-14](#)

Note	Some steps that are identical to both processes are repeated for easier reading.
-------------	--

- [“Save the Mapping Information” on page 3-19](#)

Note	<p>Measurement updates (including bearing and signal strength) are controlled by settings of the Anritsu instrument's Sweep menu (Shift+3) settings and Triggering Source (Sweep > Triggering > Trigger Source) settings.</p> <p>The preset parameters (Sweep = Continuous and Trigger Source = Free Run) allow for continuous measurement updates.</p> <p>If the instrument display is not updating as expected, confirm these settings. Additional information is available in “Sweep Menu” on page 3-74 and “Trigger Source Menu” on page 3-77.</p>
-------------	--

Interference Mapping (Antenna Only)

Anritsu instrument requirements:

Note

- Option 31, GPS is required for Interference Mapping
- Option 25, Interference Analysis
- Directional antenna and compass

1. Capture a map using Anritsu easyMap Tools.

Anritsu easyMap Tools allows you to capture maps of any location and create Anritsu Map Files. These Geo-enabled maps are viewed on the Anritsu instrument during interference mapping. There are two Anritsu Map Files formats: (.map and .azm) used for Interference Mapping.

- .azm are map files allow Pan and Zoom on the instrument.
- .map are map files are in a legacy format compatible with older firmware.

Download easyMap Tools from the Anritsu website (www.anritsu.com). Additional information about easyMap Tools is available in the software Help.

Note

The map should extend beyond the estimated location of bearing readings and have the general location of the interferer centered in the map.

2. Move the map file to the Anritsu instrument.

Copy the map file to a USB memory stick and then insert the memory stick into the Anritsu instrument's USB Type A port. Anritsu recommends copying the map file to the instrument's internal memory. Refer to Anritsu instrument User Guide for additional information.

3. Set the Anritsu instrument to IA Mapping and configure the instrument.

- A. Connect a directional antenna in the frequency range of interest to the Anritsu instrument's RF In connector.
- B. Open up the Interference Analyzer by pressing the **Menu** key and selecting the Interference Analyzer icon or press **Shift** then **Mode** (9), highlight Interference Analysis and press **Enter**.
- C. Press the **Measurements** main menu key then press the Interference Mapping submenu key twice to display the Interference Mapping menu.
- D. Turn on GPS.
 - a. Press **Shift** then **System** (8).
 - b. Press the GPS submenu key.
 - c. Connect a GPS antenna to the SMA connector.
 - d. Set the GPS voltage to match the antenna you are using, then press the GPS On/Off submenu key to select On.
 - e. Press **GPS Info** and verify that the information from three or more satellites is captured. Press **Esc** to close the info box.

It may take several minutes for the GPS receiver to lock. When it does the GPS icon at the top of the screen is solid green and location information is displayed. Refer to the User Guide for your instrument for additional information about GPS.

E. Set the frequency (**Freq** > Center Freq) for mapping.

4a. Load (Recall) the map file.

The instrument allows you to recall a .map or .azm file (created with Anritsu easyMap Tools). With a valid GPS signal, the current location will be displayed on the map or an arrow will show the direction of the current location if it is outside the map coverage area.

- A. Press the **IA Mapping** main menu key at the bottom of the screen.
- B. Press the **Save/Recall Points/Map** submenu key.
- C. Press **Recall a Map** and select the **File Type** (AZM or MAP).
- D. Use the arrow keys to scroll down to the desired map and press **Enter** to select.
- E. The new map file will be displayed and the current location (if within the GPS boundaries of the displayed map) is shown as a plus sign.
- F. AZM maps allow zoom and pan. Refer to [“Pan & Zoom Menu” on page 6-17](#) for additional information.
- G. If the current location is outside the map boundaries, a black arrow will indicate the direction of the current location in relation to the displayed map.

Note

You can load a different map at any time. Captured bearings will be displayed on or off the map in the same manner as described above.

or

4b. Recall the Default Grid option.

With a valid GPS signal, the instrument is able to make interference mapping measurements even when an Anritsu easyMap Tools file of the current location is not available. Location, signal strength, and bearing information can be saved in a (.kml) file. Details of each time the **Save Current Bearing Location & Direction** submenu key was pressed can be viewed at a later time on the instrument or in Google Earth. Refer to [“Mapping Save/Recall Menu” on page 3-68](#) for additional information on recalling saved maps and .kml data.

Note

When using the default grid, the coverage area for Interference Mapping is fixed at 10 miles by 10 miles. The location will be centered on the default map. For example, if you go to the east by 15 miles, then there will be an arrow indicating where you went off the map. You can at this point load a new Default Grid and the current location will be at the center of the display.

- A. Press the **IA Mapping** main menu key at the bottom of the screen.
- B. Press the **Save/Recall Points/Map** submenu key.

C. Press the Recall Default Grid submenu key.

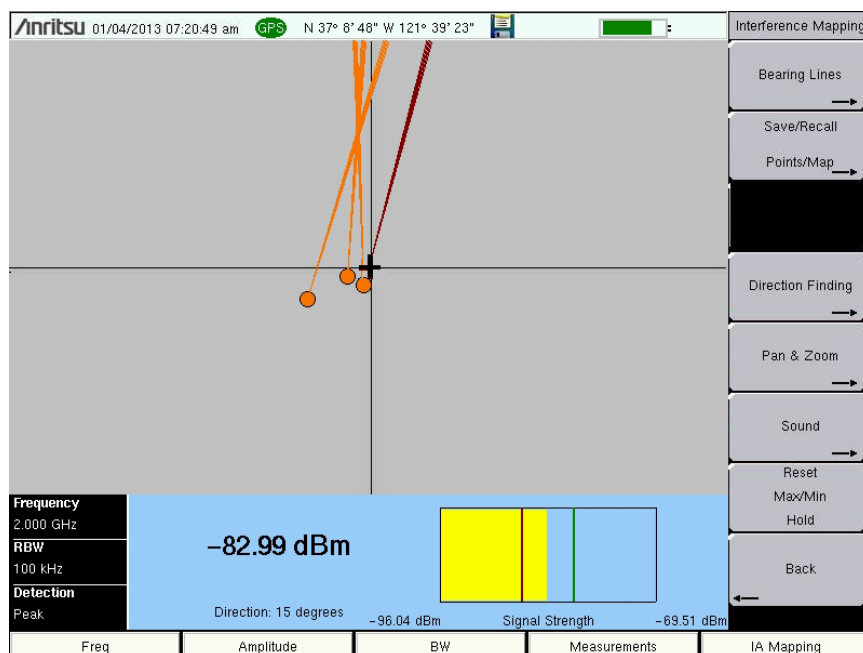


Figure 3-7. Locating an Interfering Signal with the Default Grid

5. Map the interfering signal.


Once you have the GPS signal, directional antenna, and the GeoEmbedded map or the default grid map loaded on the instrument, you can start locating interfering signals. The plus sign shows the current location on the screen.

- A. Press the **Measurements** main menu key then the **Interference Mapping** submenu key.
- B. Use the directional antenna to locate the bearing of the strongest signal. Rotate the knob on the Anritsu instrument until the red line on the display is aligned with the direction of the interfering signal. Under the **Bearing Lines** submenu, press the **Save Current Bearing Location & Direction** key to save the current location and direction.

Note

A compass may be helpful to determine the bearing of the strongest Antenna signal. Use the rotary knob on the instrument to match the direction (shown at the bottom of the display) of the vector on the screen to the compass bearing (or a landmark) of the strongest signal before pressing the **Save Current Bearing Location & Direction** submenu key.

- C. Move to the next location and repeat step 5B. You now have two lines on the screen and an idea of where the interfering signal is located. Pan & Zoom as needed (if using an AZM map). An example of interference mapping where approximate location of the interferer is determined is shown in [Figure 3-8 on page 3-13](#).

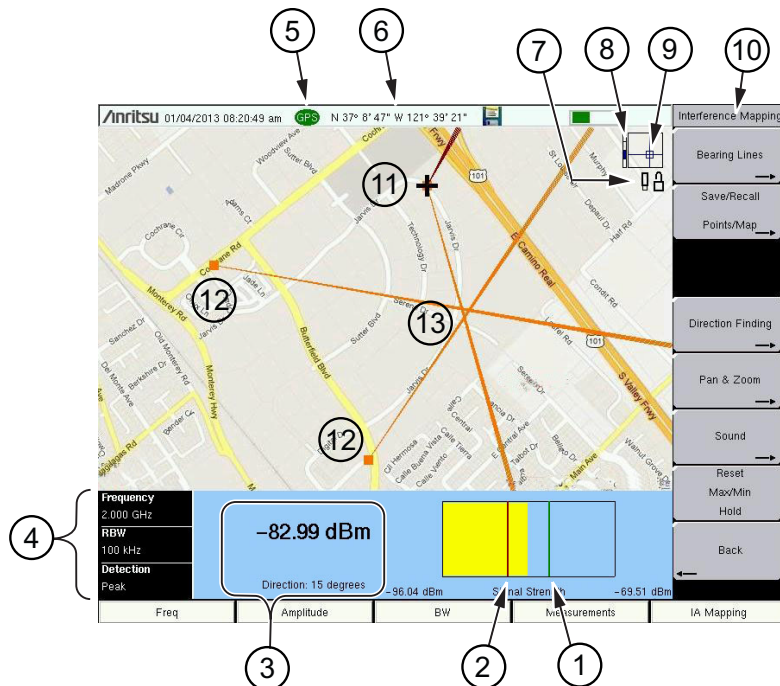

1	Maximum signal level.
2	Minimum signal level.
3	Current readings. <ul style="list-style-type: none"> Power level: Displays the power level at the Anritsu instrument's receiver. Direction: Bearing of the active vector (red). Adjust with the rotary knob on the Anritsu instrument.
4	Current Anritsu instrument settings.
5	GPS lock icon.
6	Current position.
7	Status Icons. Refer to Figure 6-12 on page 6-18 .
8	Zoom level indication (when using .azm maps). Top is maximum zoomed in position. Bottom is maximum zoomed out position. Refer to "Pan & Zoom Menu" on page 6-17 .
9	Current tile location in base map (when using .azm maps).
10	Refer to "Interference Mapping Menu" on page 3-66 .
11	Plus sign indicates current position.
12	Previous saved locations and bearings. Existing bearings can be deleted. Refer to "Bearing Lines Menu" on page 3-67 .
13	Approximate location of the interfering signal.

Figure 3-8. Interference Mapping Overview

6. Save the Mapping Information.

Refer to ["Save the Mapping Information" on page 3-19](#).

Interference Mapping (MA2700A and Antenna)

The Anritsu Instrument must have Interference Analysis (Option 25) and SPA module V6.00 or higher firmware to use Anritsu easyMap Tools.

Note

Anritsu instrument requirements:

- Option 25, Interference Analysis.
- Anritsu's MA2700A Handheld Direction Finding System (Includes GPS and electronic compass).

1. Capture a map using Anritsu easyMap Tools.

Anritsu easyMap Tools allows you to capture maps of any location and create Anritsu Map Files. These Geo-enabled maps are viewed on the Anritsu instrument during interference mapping. There are two Anritsu Map Files formats: (.map and .azm) used for Interference Mapping.

- .azm map files allow Pan and Zoom on the instrument.
- .map map files are in a legacy format compatible with older firmware.

Download easyMap Tools from the Anritsu website (www.anritsu.com). Additional information about easyMap Tools is available in the software Help.

Note

The coverage map should extend beyond the estimated location of bearing readings and have the general location of the interferer centered in the map.

2. Move the map file to the Anritsu instrument.

Copy the map file to a USB memory stick and then insert the memory stick into the Anritsu instrument's USB Type A port. Anritsu recommends copying the map file to the instrument's internal memory. Refer to Anritsu instrument User Guide for additional information.

3. Set the Anritsu instrument to IA Mapping and configure the instrument.

- A. Connect the RF cable and USB cable from the MA2700A Handheld Interference Hunter (HIH) to the instrument.
- B. Calibrate the MA2700A. Refer to [“Direction Finding Menu” on page 3-69](#) and the MA2700A User Guide.
- C. Connect a directional antenna in the frequency range of interest to the MA2700A.
- D. Setup the instrument for interference mapping mode by pressing the **Menu** key and selecting the **Interference Analyzer** icon or press **Shift** then **Mode** (9), highlight **Interference Analysis** and press **Enter**. Under the **Measurements** main menu, select **Interference Mapping**.
- E. The instrument will detect the connected MA2700A and display the message **MA2700A detected – Device is ready to use**. After GPS lock, the instrument will use GPS data from the MA2700A.

Note

Once detected, the MA2700A can be used to capture bearing and/or GPS data while in other Interference mode measurements and even other supported instrument measurement modes, including Spectrum Analyzer mode.

F. To manually select the MA2700A, confirm the MA2700A USB connection, then:

- a. Press the **Measurements** main menu key then press the Interference Mapping submenu key twice to display the Interference Mapping menu.
- b. Press the Direction Finding submenu button.
- c. Press the Direction Finding Antenna Selection submenu button and select MA2700 Handheld.

It may take several minutes for the MA2700A GPS receiver to lock. When it does the GPS icon at the top of the screen is solid green and location information is displayed. Refer to the User Guide for your instrument for additional information about GPS.

G. Set the frequency (**Freq** > Center Freq) for mapping.

4a. Load (Recall) the map file.

The instrument allows you to recall a .map or .azm file (created with Anritsu easyMap Tools). With a valid GPS signal the current location will be displayed on the map or an arrow will show the direction of the current location if it is outside the map coverage area.

- A.** Press the **IA Mapping** main menu key at the bottom of the screen.
- B.** Press the Save/Recall Points/Map submenu key.
- C.** Press Recall a Map and select the File Type (AZM or MAP).
- D.** Use the arrow keys to scroll down to the desired map and press Enter to select.
- E.** The new map file will be displayed and the current location (if within the GPS boundaries of the displayed map) is shown as a plus sign.
- F.** AZM maps allow zoom and pan, refer to [“Pan & Zoom Menu” on page 6-17](#) for additional information.
- G.** If the current location is outside the map boundaries, a black arrow will indicate the direction of the current location in relation to the displayed map.

or

4b. Recall the Default Grid option.

With a valid GPS signal, the instrument is able to make interference mapping measurements even when an Anritsu easyMap Tools file of the current location is not available. Location, signal strength, and bearing information can be saved in a (.kml) file. Details of each time the MA2700A trigger is pressed can be viewed at a later time on the instrument or in Google Earth. Refer to [“Mapping Save/Recall Menu” on page 3-68](#) for additional information on recalling saved maps and .kml data.

Note

When using the default grid the coverage area for Interference Mapping is fixed at 10 miles by 10 miles. The location will be centered on the default map. For example, if you go to the east by 15 miles, then there will be an arrow indicating where you went off the map. You can at this point load a new Default Grid and the current location will be at the center of the display.

- A. Press the **IA Mapping** main menu key at the bottom of the screen.
- B. Press the **Save/Recall Points/Map** submenu key.
- C. Press the **Recall Default Grid** submenu key.

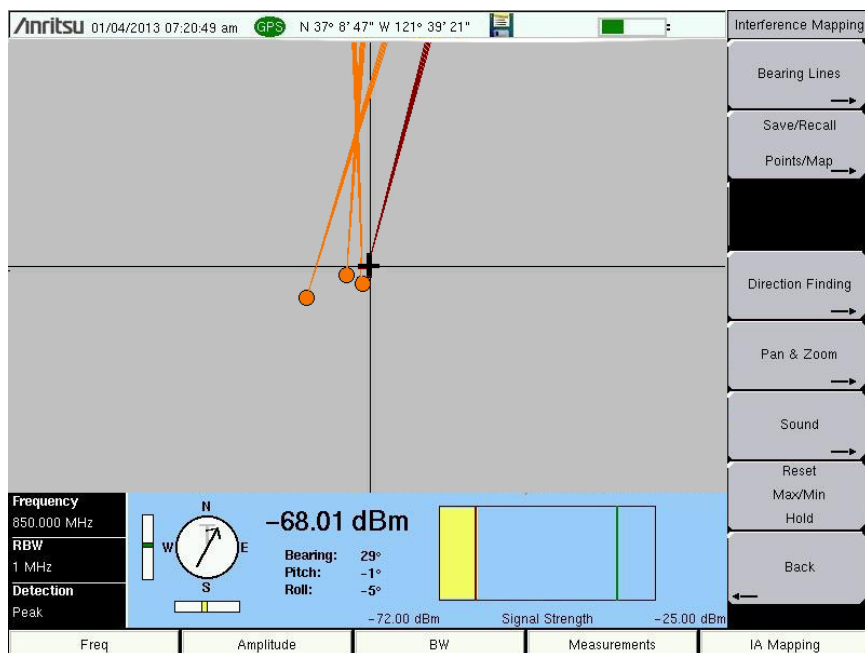


Figure 3-9. Locating an Interfering Signal with the MA2700A and the Default Grid

5. Map the interfering signal with the MA2700A.

Once you have a GPS signal from the connected Handheld Interference Hunter with a directional antenna, and the GeoEmbedded map or the default grid map loaded on an instrument, you can start locating interfering signals. The plus sign shows the current location on the screen.

- A. Press the **Measurements** main menu key then the **Interference Mapping** submenu key.


- B.** Use the MA2700A HIH with a directional antenna to locate the bearing of the strongest signal. When the HIH is aligned with the direction of the interfering signal briefly pull and release the trigger on the HIH to record the current location and bearing line of the interferer.

Pulling the MA2700A trigger will prompt the Anritsu analyzer to beep. Releasing the pulled trigger has two functions:

- Release the trigger after the initial beep (< 1 second) to capture location and signal data. This has the same function as pressing the **Save Current Bearing Location & Direction** submenu key (refer to [“Bearing Lines Menu” on page 3-67](#)).
- Release the trigger after the second beep (~ 2 seconds) to toggle the preamp in the MA2700A and the Anritsu analyzer On or Off.

The compass acquires the bearing line data for the MA2700A Handheld Interference Hunter. The compass will display a light gray T or M; T for true North, M for magnetic North. The pitch and roll indicators will display how level and plumb the MA2700A is while searching for interference signals. The compass bearing is most accurate when the MA2700A is level. To the right of the compass and pitch and roll indicators are the numerical values for Bearing, Pitch, and Roll.

- C.** Move to the next location and repeat step 5B. You now have two lines on the screen and an idea of where the interfering signal is located. Pan & Zoom as needed (if using an AZM map). An example of interference mapping with the MA2700A where the approximate location of the interferer is determined is shown in [Figure 3-10](#).

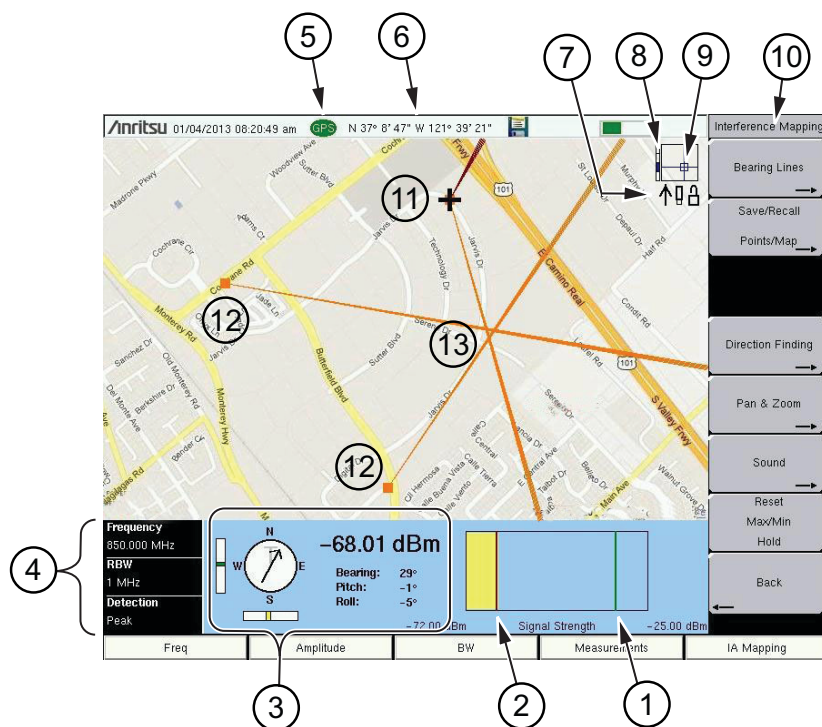

1 Maximum signal level.

2 Minimum signal level.

Figure 3-10. Interference Mapping Overview (1 of 2)

3	<p>Current readings from the MA2700A.</p> <ul style="list-style-type: none"> Compass: Before GPS lock, the compass displays a light gray M indicating magnetic north (no declination adjustment). With GPS lock, a declination adjustment is automatically applied based on location and the compass changes to display a light gray T indicating true north. The Arrow indicates the direction the MA2700A is pointing. Power level: Displays the power level at the Anritsu instrument's receiver. Bearing: Direction the MA2700A is pointing (shown in red). Pitch (vertical level): Indicates the front-to-back orientation. Roll (horizontal level): Indicates the side-to-side orientation.
4	Current Anritsu instrument settings.
5	GPS lock icon.
6	Current position.
7	<p>Status Icons (left to right). Refer to Figure 6-12 on page 6-18.</p> <ul style="list-style-type: none"> MA2700A USB connection. USB memory stick available. Map auto-centering mode.
8	Zoom level indication (when using .azm maps). Top is maximum zoomed in position. Bottom is maximum zoomed out position. Refer to "Pan & Zoom Menu" on page 6-17 .
9	<p>Current tile location in base map (when using .azm maps). Move the current tile location around the base map using the arrow keys on the Anritsu analyzer.</p> <p>Note: Panning is not functional when the instrument displayed map is at the maximum zoomed out position.</p>
10	Refer to "Interference Mapping Menu" on page 3-66 .
11	Plus sign indicates current position.
12	Previous saved (trigger pull) locations and bearings. Existing bearings can be deleted. Refer to "Bearing Lines Menu" on page 3-67 .
13	Approximate location of the interfering signal.

Figure 3-10. Interference Mapping Overview (2 of 2)

6. Save the Mapping Information.

Refer to ["Save the Mapping Information" on page 3-19](#).

Save the Mapping Information

There are three save options in Interference Mapping.

Save JPG

Press **Save/Recall Points/Map** then **Save JPG**. At the **Save** menu, press **Enter**. A .jpg file of the current screen will be saved.

The JPG file can be viewed on a PC.

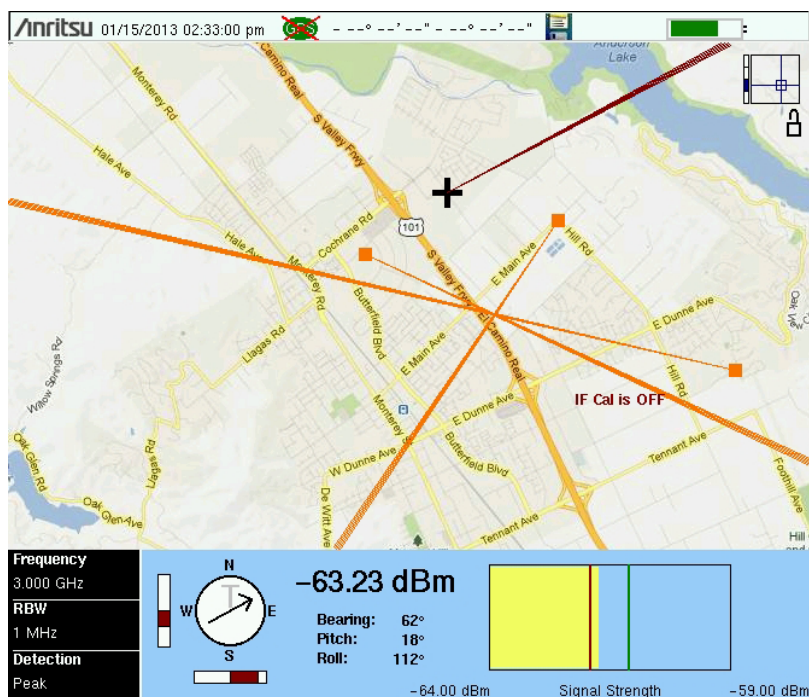


Figure 3-11. Displaying a Saved JPG File on a PC

Save KML Points

Press **Save/Recall Points/Map** then **Save KML Points**. At the Save menu, select **KML 2D** or **KML 3D**, then press **Enter**. The following information is saved for the points and vectors currently displayed on the screen:

- Signal strength (dBm)
- Bearing
- Setup (frequency, RBW, VBW, and detection type)
- Current location

The .kml file can be opened and viewed on a PC with Google Earth (<http://earth.google.com/>) and also recalled and viewed on the instrument (Figure 3-12). Refer to “Mapping Save/Recall Menu” on page 3-68 for additional information.



Figure 3-12. KML File on the PC and the Anritsu Instrument

Note

To delete existing bearings before recalling a map, refer to “[Bearing Lines Menu](#)” on page 3-67.

Save Tab Delimited Points

Press Save/Recall Points/Map then Save Tab Delimited Points. At the Save menu, press **Enter**. A tab delimited text file (.mtd) will be saved to the current location for the points and vectors currently displayed on the screen.

The Mapping Tab Delimited (.mtd) file can be viewed on a PC in a text editor or excel (Figure 3-13).

Instrument and installed options

Date format: Year-Month-Date-Day of week-hour-minute-second

Header Info

Saved Points

	A	B	C	D	E	F	G	H	I	J	K	L	M
1	<ANRITSU>												
2	FILE_MODE=												
3	MODEL=MT8213E/10/12/15/19/20/21/22/26/27/28/30/31/32/33/34/35/36/37/38/40/41/42/43/44/45/46/47/50/51/52/53/54X/57/60/61/62/63/64/6												
4	SN=5002												
5	UNIT_NAME=abcde												
6													
7	DESCR=/bd0/FileName_#1.mtd												
8	DATE=2013-02-04-01-16-51-54												
9	BASE_VER=T4.47.3023												
10	APP_NAME=SPA												
11	APP_VER=T5.83.3022												
12	SUB_MODE_NUM=3												
13	APP_MODE=1												
14													
15	# Begin SPA Setup												
16	<APP_SETUP>												
17	VERSION=1												
18													
19	<APP_DATA>												
20	#Pt	GPS Status	Longitude(X)	Latitude(Y)	Altitude	UTC Date	UTC Time	System Date	System Time	Measurement			
21	Point# 1	GPS Locked	-121.656296	37.14682	0 meters /	#####	6:02:22	#####	6:02:22	Signal Strength: -62.33 dBm Bearing 1			
22	Point# 2	GPS Locked	-121.603516	37.133572	0 meters /	#####	6:02:22	#####	6:02:22	Signal Strength: -62.24 dBm Bearing 28			
23	Point# 3	GPS Locked	-121.628708	37.150566	0 meters /	#####	6:02:22	#####	6:02:22	Signal Strength: -63.15 dBm Bearing 214			
24	<APP_DATA_END>												
25													

Figure 3-13. MTD File Opened in Excel

Information for each point includes location, time, signal strength, bearing, and instrument setup data. If you do indoor coverage mapping (or any non-geo-referenced mapping), the .mtd file is saved with the Latitude and Longitude columns in display points (screen display pixels). The upper left corner is 0,0 and the lower right corner is 665, 419. Refer to Chapter 6, “Coverage Mapping (Option 431)” for more information.

3-9 Interference Analyzer (IA) Menu Maps

Figure 3-14 through Figure 3-23 show the map of the Interference Analyzer menus. The following sections describe IA main menus and associated submenus. The submenus are listed in the order they appear on the display from top to bottom under each main menu. Menu maps typically display all possible submenu keys, although some keys are displayed on the instruments only under special circumstances (refer to menu descriptions).

Main Menu Keys are used to display the highest-level menus. The Measurements and Marker menus are shown on the next pages.

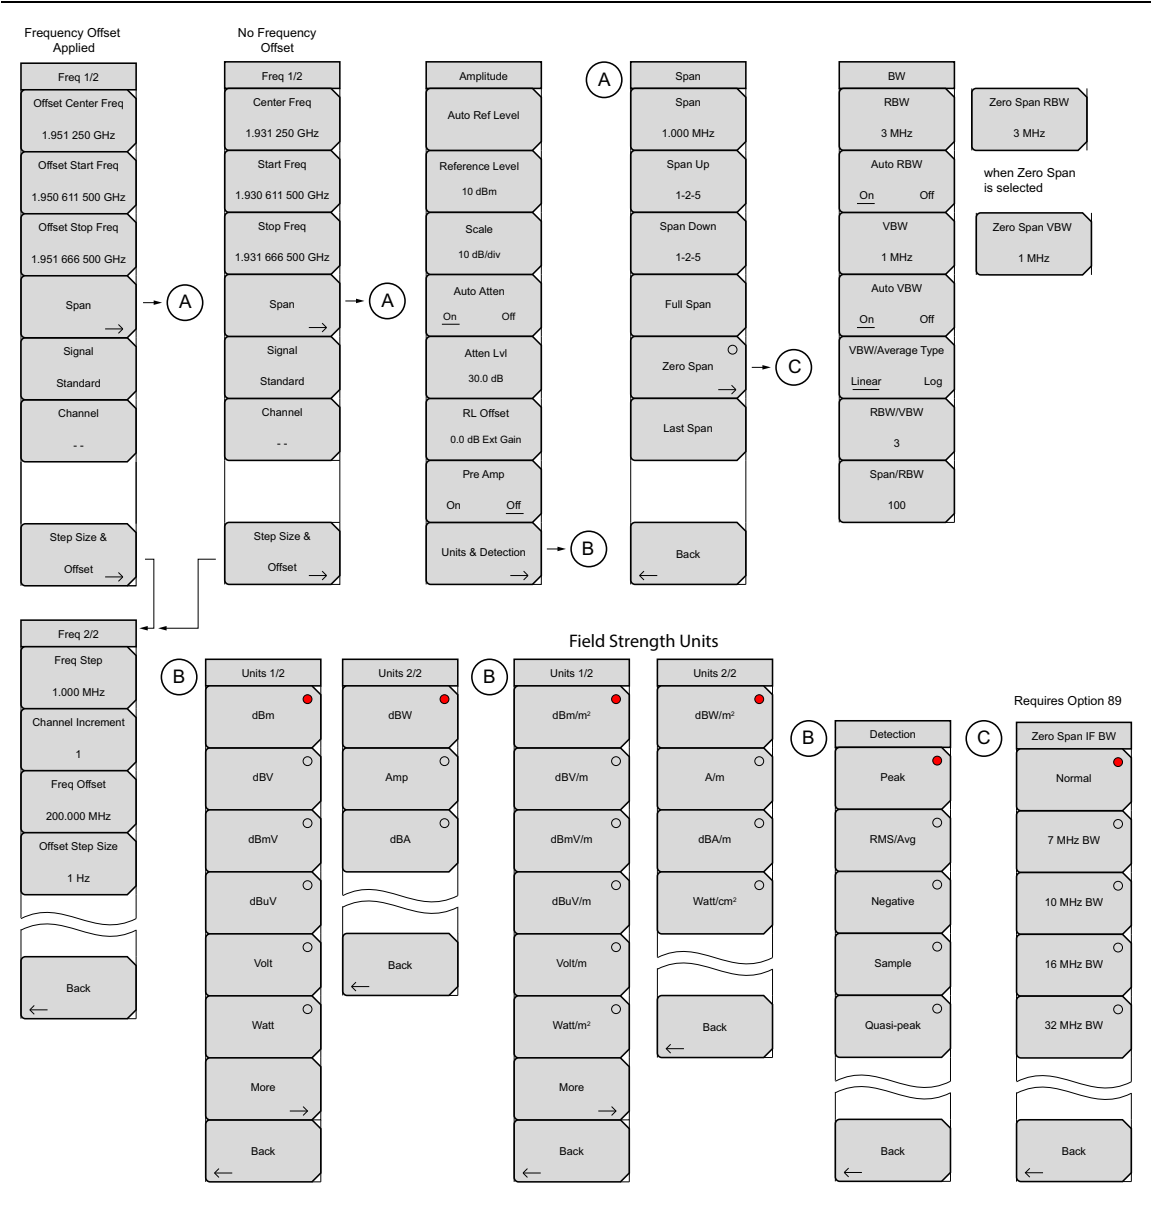


Figure 3-14. Main Menu Keys

Measurements Menu (1 of 4)

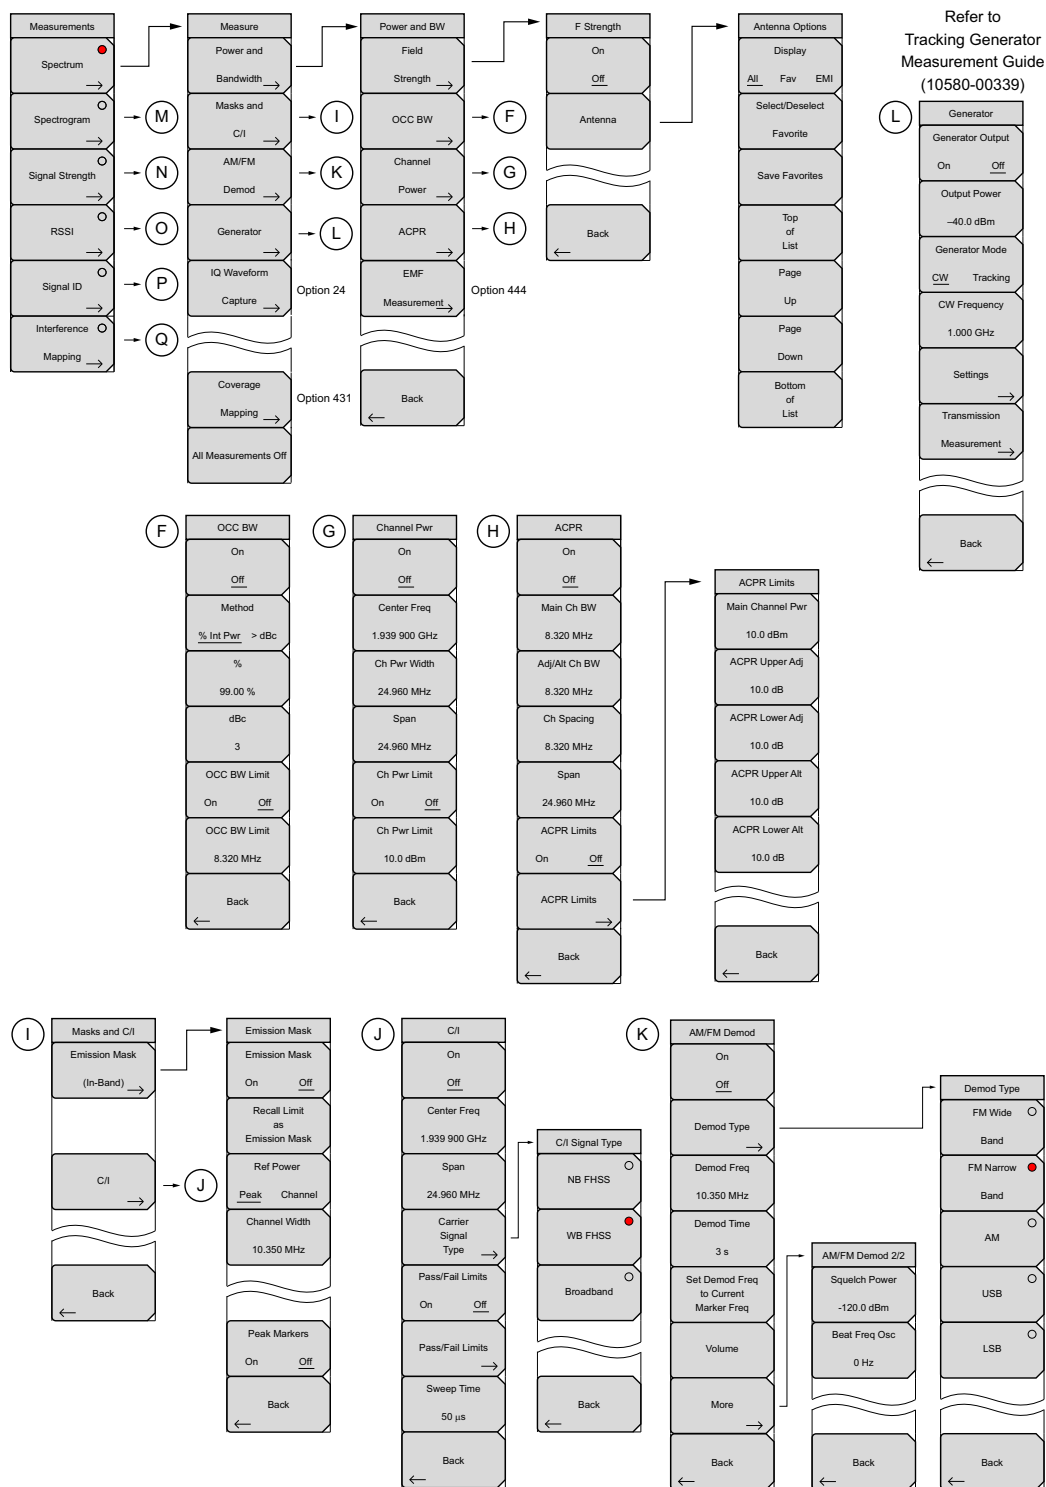


Figure 3-15. Measurements Menu Keys

Measurements Menu (2 of 4)

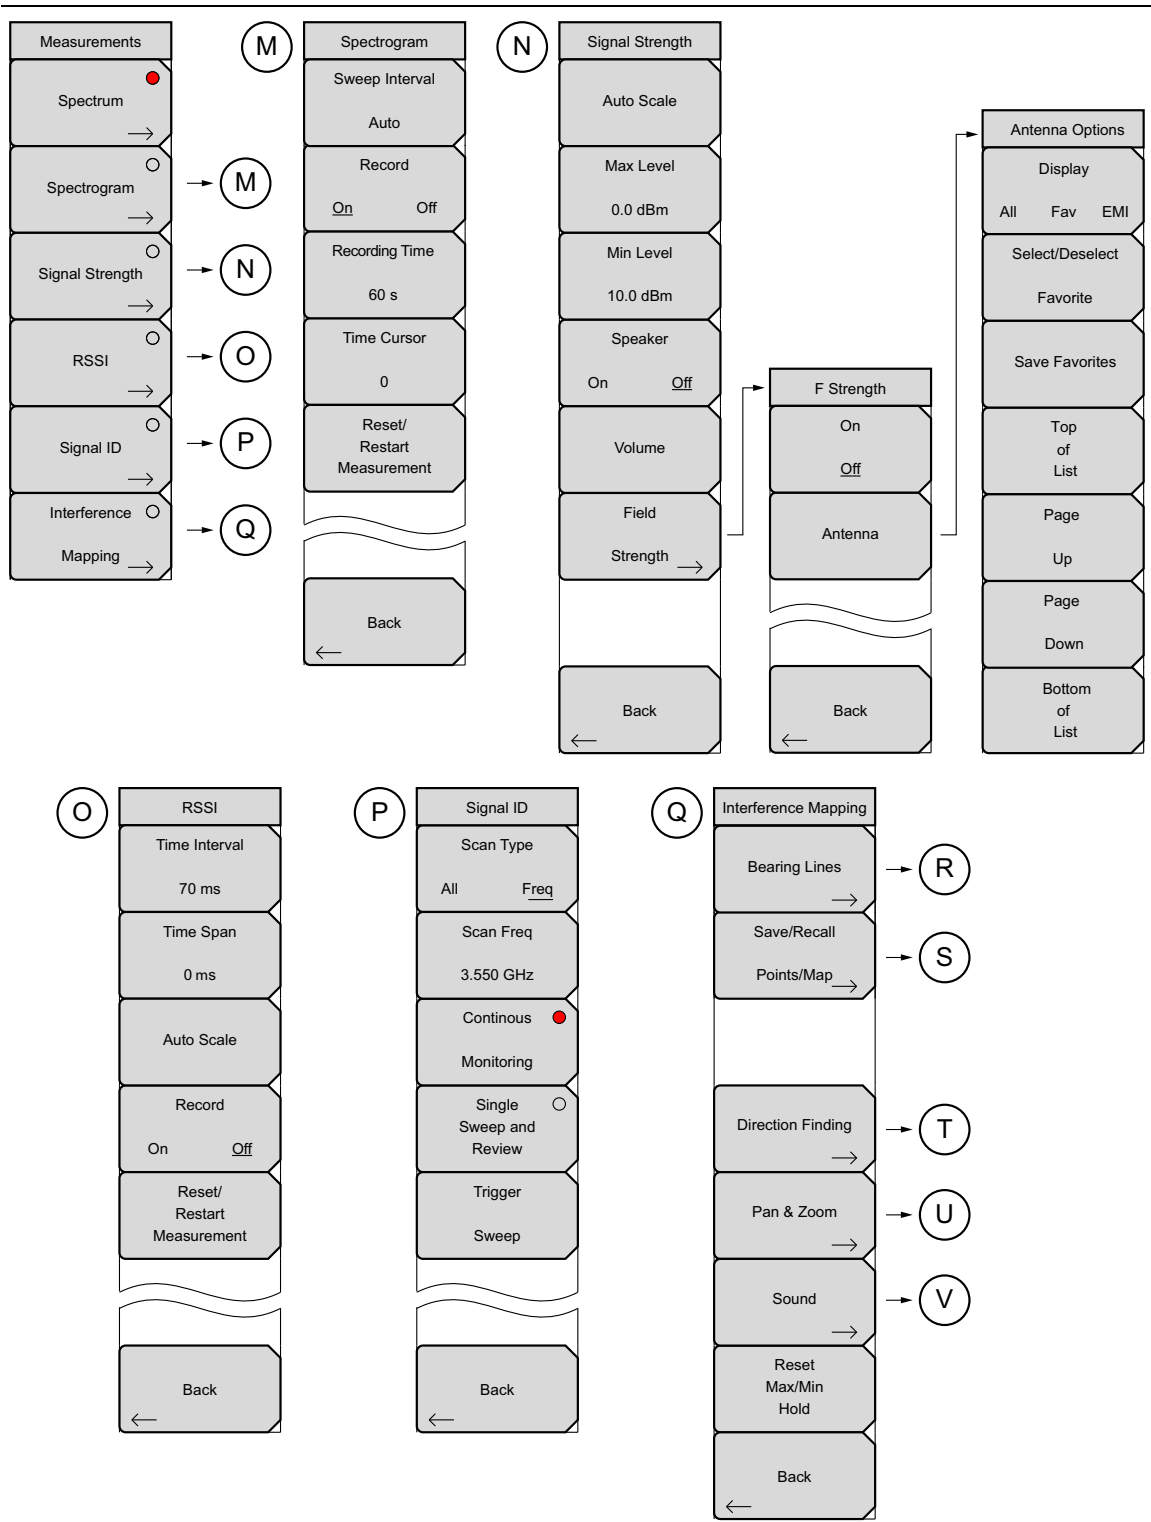


Figure 3-16. Measurements Submenu Keys

Measurements Menu (3 of 4)

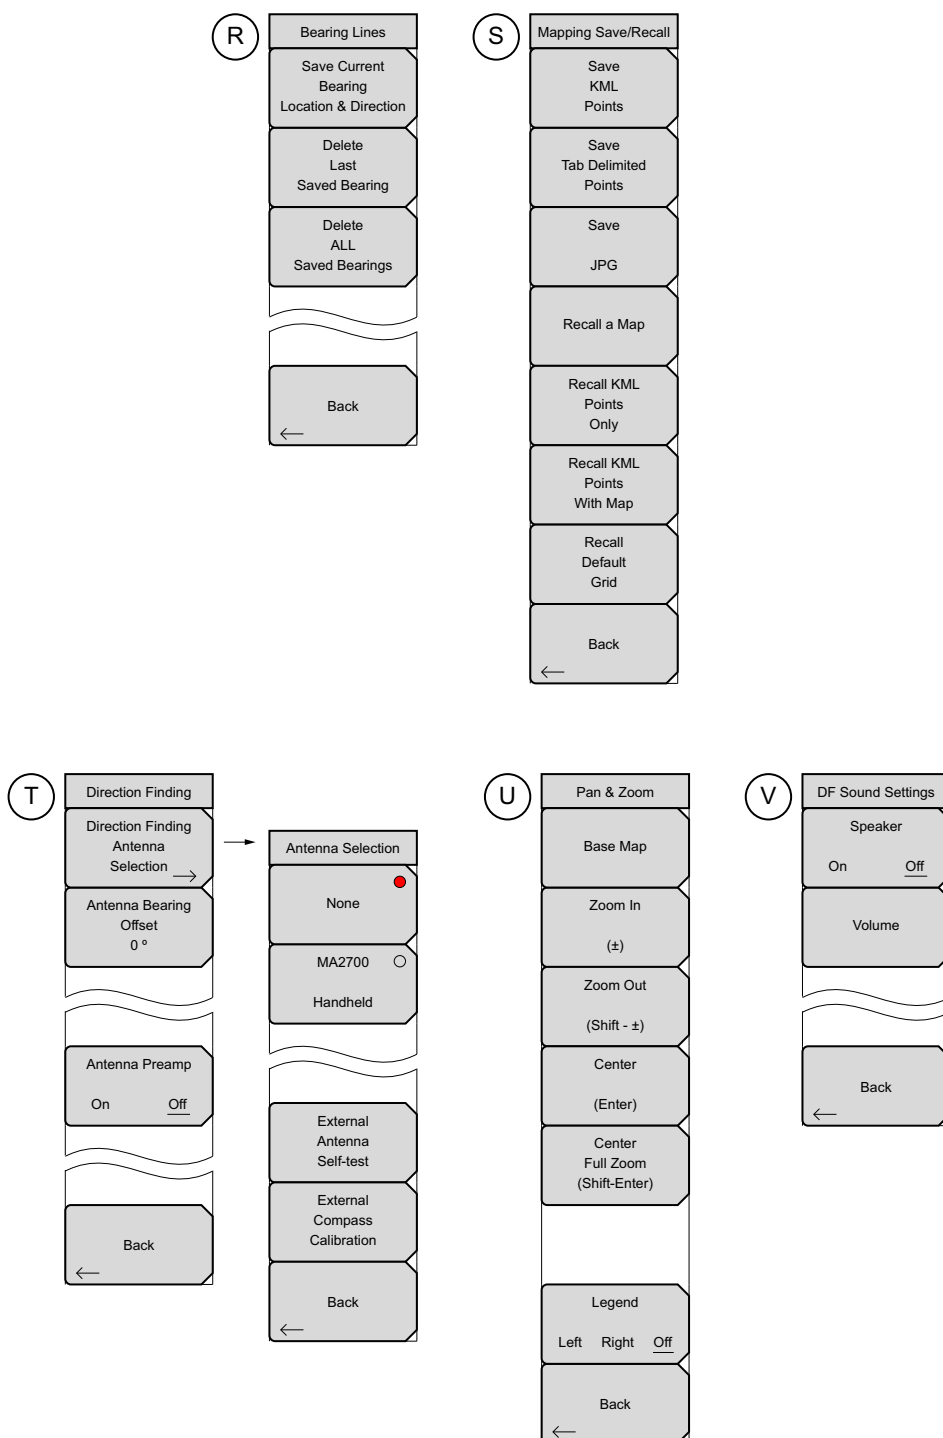


Figure 3-17. Measurements Submenu Keys

Measurements Menu (4 of 4)

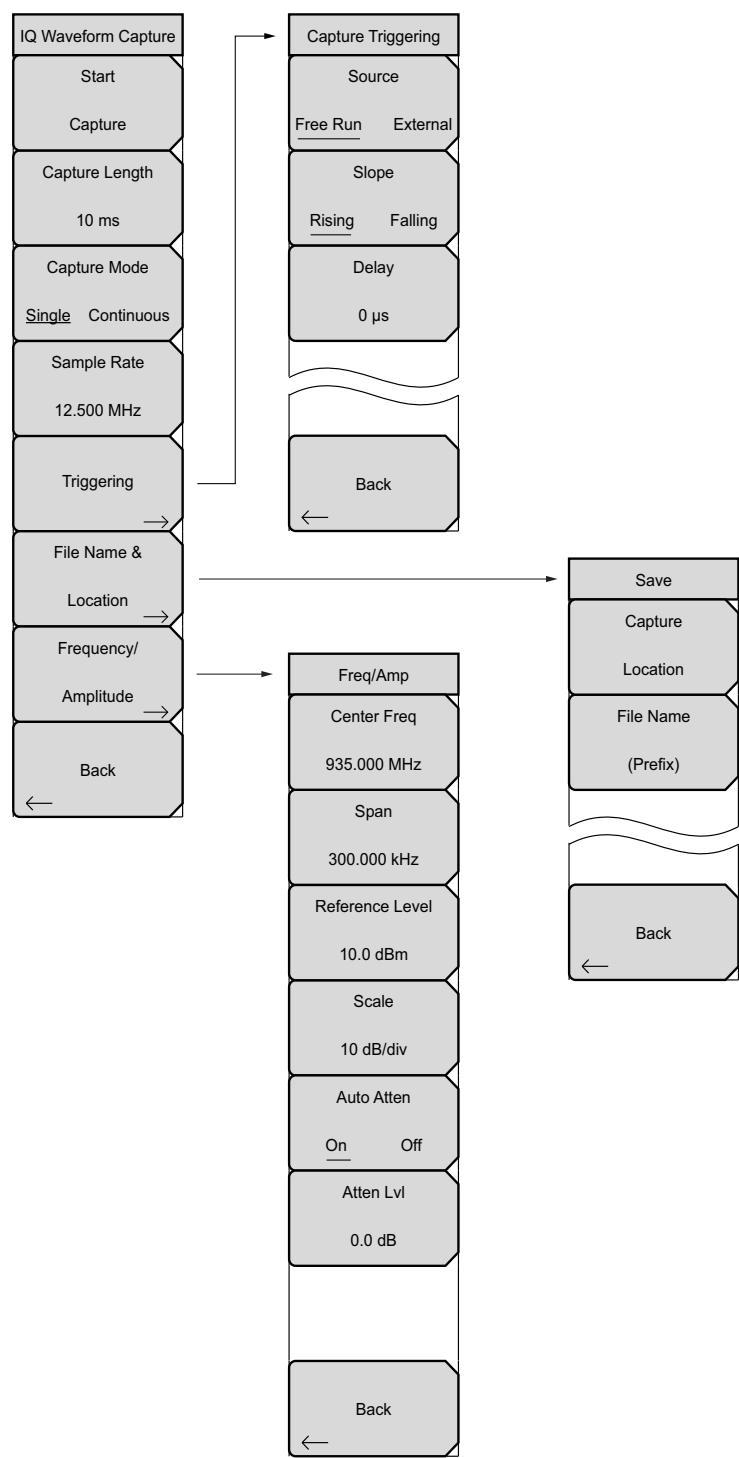


Figure 3-18. IQ Waveform Capture Submenu Keys (Option 24)

Marker Menus

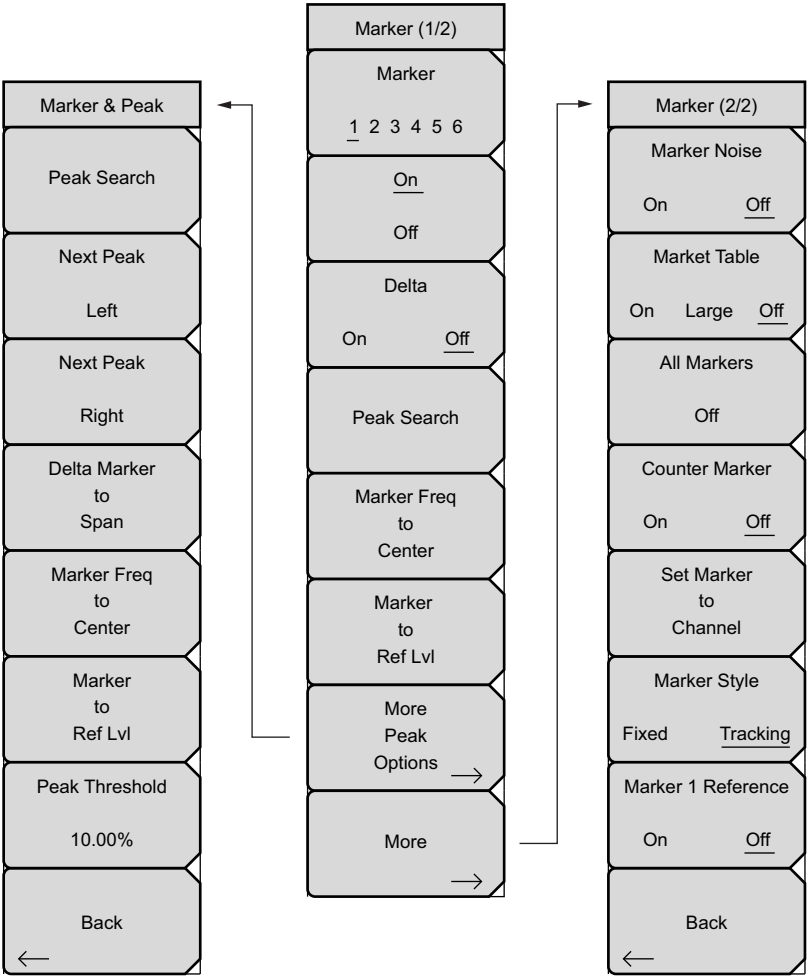


Figure 3-19. Marker Submenu Keys

Note Not available in Interference Mapping or Coverage Mapping measurements.

Sweep Menus

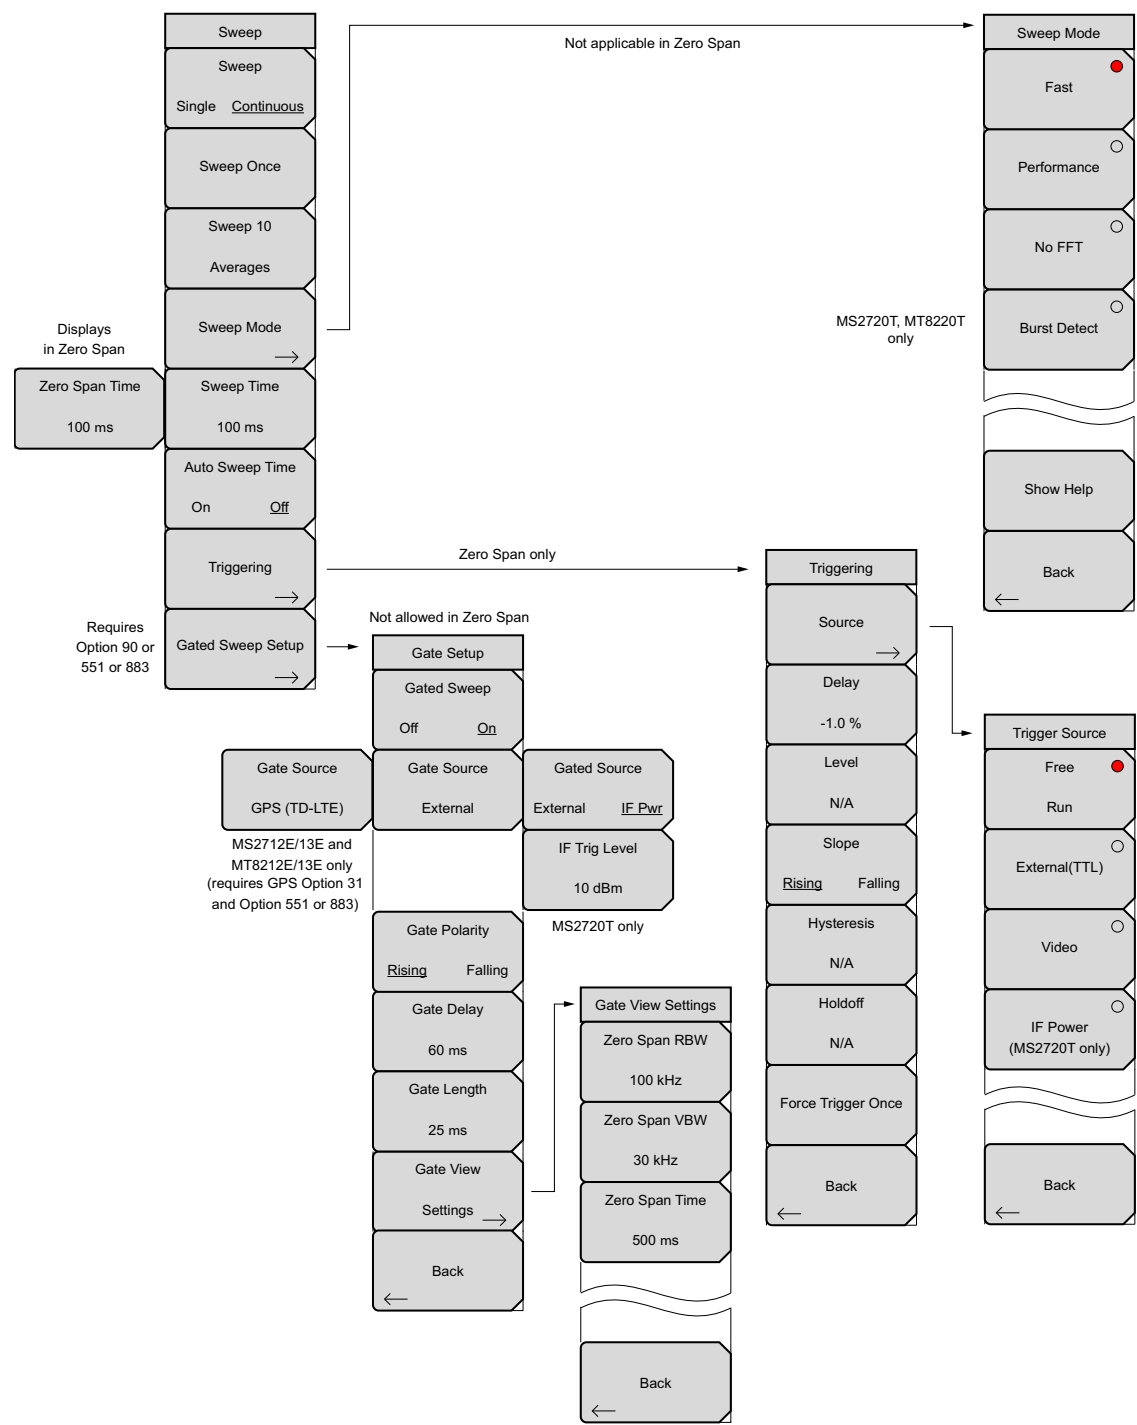


Figure 3-20. Sweep Submenu Keys

Trace Menus

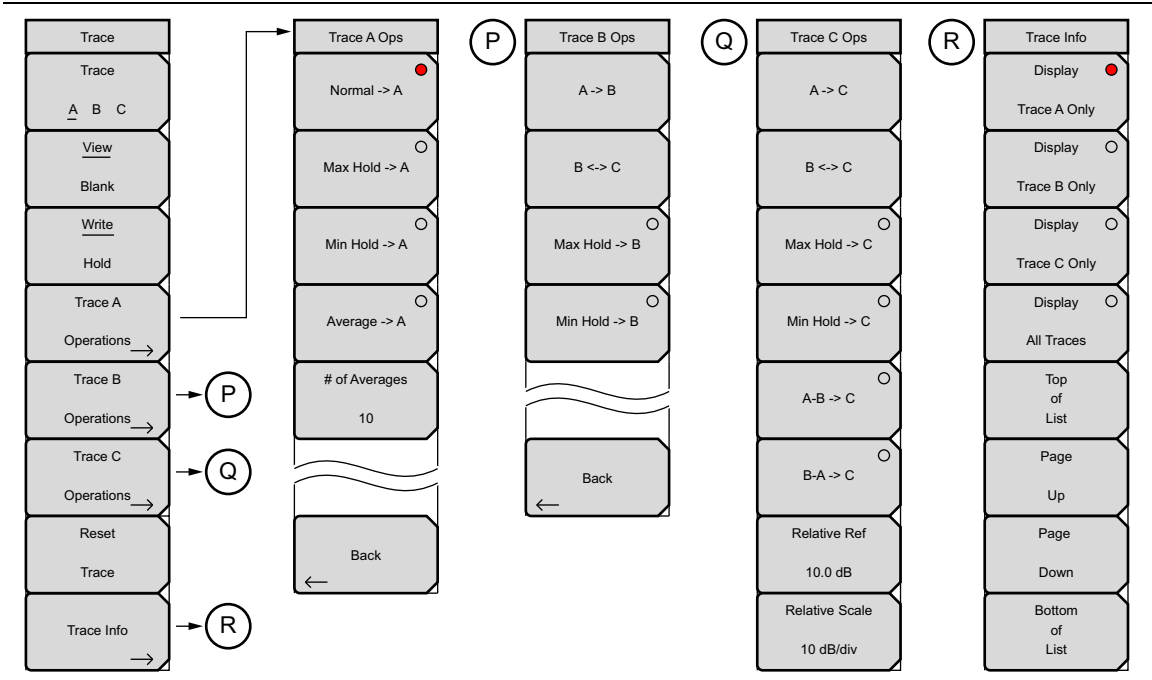


Figure 3-21. Trace Submenu Keys

Limit Menus

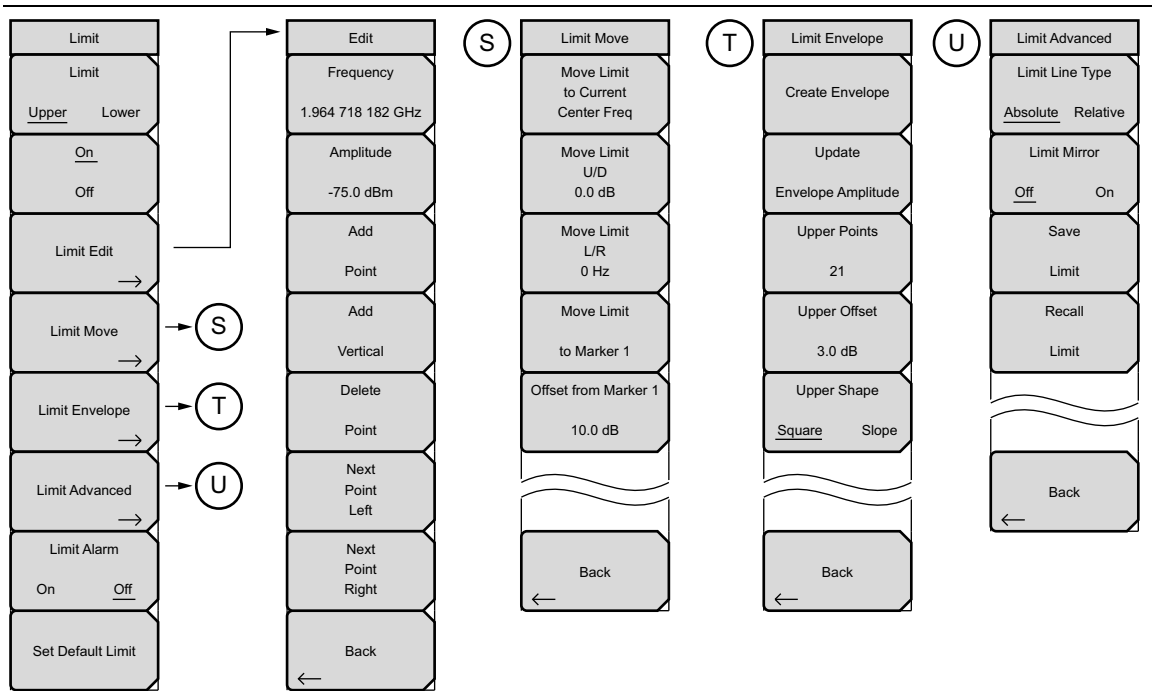


Figure 3-22. Limit Submenu Keys

Application Options Menu

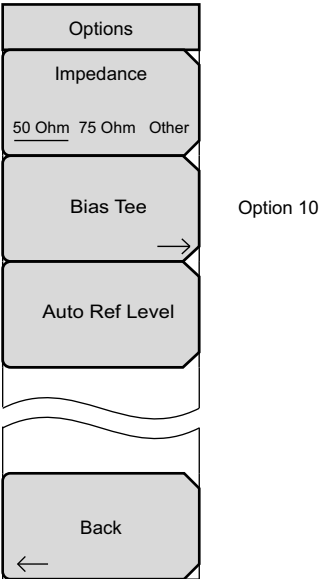


Figure 3-23. System Menu, Application Options Submenu Keys

3-10 Freq (Frequency) Menu

Freq 1/2 (Frequency Menu without Offset)

Key Sequence: **Freq**

The tuning frequency range can be entered in several different ways depending upon what makes the most sense for the user or for the application. The center frequency and span can be specified, the start and stop frequencies can be entered, or a signal standard and channel number can be selected from the built-in list.

Freq 1/2	Center Freq: Press the Freq main menu key followed by the Center Freq submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If entering a frequency using the keypad, the submenu key labels change to GHz, MHz, kHz, and Hz. Press the appropriate units key. Pressing the Enter key has the same effect as the MHz submenu key.
Center Freq 1.931 250 GHz	
Start Freq 1.930 611 500 GHz	Note: When using the up and down arrows, the frequency moves in steps defined by the value entered using the Freq Step submenu key. When using the left or right arrow keys, the frequency of the active parameter moves by 10% of the current frequency span. If the instrument is in zero span, the left and right arrows do nothing. Turning the rotary knob changes the active frequency parameter in increments of one display point for each click of the knob. There are 551 display points across the screen.
Stop Freq 1.931 666 500 GHz	
Span →	Start Freq: Press the Freq main menu key followed by the Start Freq submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If a start frequency higher than the current stop frequency is entered, the stop frequency will be changed to yield a 10 Hz span.
Signal Standard	
Channel 25, 0.0 kHz	Stop Freq: Press the Freq main menu key followed by the Stop Freq submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If a stop frequency lower than the current start frequency is entered, the start frequency will be changed to yield a 10 Hz span.
Step Size & Offset →	Span: Press the Freq main menu key followed by the Span submenu key and enter the desired span. The Span menu is used to set the frequency range over which the instrument will sweep. The span can be set from 10 Hz to the maximum frequency range the product will support. See the product specifications for the maximum frequency. Span can also be set to zero span. The submenu key shows the current value for span in units of GHz, MHz, kHz, or Hz. When the Span button is pressed, span becomes the active parameter and may be changed. Use the keypad, the directional arrow keys, or the rotary knob to increase or decrease the span frequency. If the span is changed using the arrow keys, the span changes in 1-2-5 steps for each key press. See “Span Menu” on page 3-36 .

Figure 3-24. IA Frequency Menu 1/2 (Part 1 of 2)

Freq 1/2

Center Freq
1.931 250 GHz

Start Freq
1.930 611 500 GHz

Stop Freq
1.931 666 500 GHz

Span
→

Signal
Standard

Channel
25, 0.0 kHz

Step Size &
Offset →

Signal Standard: Use the up or down arrow keys or the rotary knob to highlight a signal standard and press **Enter** to select.

When a signal standard is selected, the center frequency and span for the first channel of the last segment of the particular standard is automatically tuned. Other settings, such as channel spacing and integration bandwidth, are also automatically entered.

Channel #: Use the up or down arrow keys, the keypad, or the rotary knob to select a channel number for the selected signal standard. The center of the channel is tuned to the center of the spectrum analyzer display. The frequency value is the amount by which the center frequency differs from the center of the channel.

Step Size & Offset: Opens the [“Freq 2/2 Menu” on page 3-34](#). If Freq Offset is any value other than 0 Hz, then the Frequency menu shows “Offset” on the submenu keys for setting frequencies.

Figure 3-25. IA Frequency Menu 1/2 (Part 2 of 2)

Freq 1/2 (Frequency Menu with Offset Function)

Key Sequence: **Freq**

The tuning frequency range can be entered in several different ways depending upon what makes the most sense for the user or for the application. The center frequency and span can be specified, the start and stop frequencies can be entered, or a signal standard and channel number can be selected from the built-in list. A user defined frequency offset, either positive or negative, can be entered to adjust the frequency that is displayed on the instrument from the actual swept frequency. When enabled, **Offset** will be displayed at the bottom of the screen (Figure 3-28) and the **Center Freq**, **Start Freq**, and **Stop Freq** keys will indicate that a frequency offset has been turned on. Set the **Freq Offset** to 0 Hz to remove the frequency offset.

Note The Freq Offset will affect the displayed values of Frequencies, Markers and Limits. The current frequency offset value is displayed in the “Freq 2/2 Menu”.

Freq 1/2	<p>Offset Center Freq : Press the Freq main menu key followed by the Offset Center Freq submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If entering a frequency using the keypad, the submenu key labels change to GHz, MHz, kHz, and Hz. Press the appropriate units key. Pressing the Enter key has the same effect as the MHz submenu key.</p> <p>Offset Start Freq: Press the Freq main menu key followed by the Offset Start Freq submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If a start frequency higher than the current stop frequency is entered, the stop frequency will be changed to yield a 10 Hz span.</p> <p>Offset Stop Freq: Press the Freq main menu key followed by the Offset Stop Freq submenu key and enter the desired frequency using the keypad, the arrow keys, or the rotary knob. If a stop frequency lower than the current start frequency is entered, the start frequency will be changed to yield a 10 Hz span.</p> <p>Span: Press the Freq main menu key followed by the Span submenu key and enter the desired span. See “Span Menu” on page 3-36.</p> <p>Signal Standard: Use the up or down arrow keys or the rotary knob to highlight a signal standard and press Enter to select.</p> <p>When a signal standard is selected, the center frequency and span for the first channel of the last segment of the particular standard is automatically tuned. Other settings, such as channel spacing and integration bandwidth, are also automatically entered.</p> <p>Channel #: Use the up or down arrow keys, the keypad, or the rotary knob to select a channel number for the selected signal standard. The center of the channel is tuned to the center of the spectrum analyzer display. The frequency value is the amount by which the center frequency differs from the center of the channel.</p> <p>Step Size & Offset: Opens the “Freq 2/2 Menu” on page 3-34.</p>
Offset Center Freq	
1.930 500 GHz	
Offset Start Freq	
1.830 500 GHz	
Offset Stop Freq	
2.030 500 GHz	
Span	
Signal	
Standard	
Channel	
--	
Step Size &	
Offset	

Figure 3-26. IA Freq 1/2 with Offset Function Menu

Freq 2/2 Menu


Key Sequence: **Freq** > Step Size & Offset

<div><div>Freq 2/2</div><div>Freq Step</div><div>## MHz</div><div>Channel Increment</div><div>#</div><div>Freq Offset</div><div>## MHz</div><div>Offset Step Size</div><div># Hz</div><div></div><div></div><div>Back</div><div>←</div></div>	<p>Freq Step: Press the Freq main menu key followed by the Freq Step submenu key to enter the desired frequency step size. The frequency step specifies the amount by which a frequency will change when the up or down arrow keys are pressed. The center frequency, start frequency, and stop frequency values can be changed using Freq Step. The active parameter will be changed by the frequency step when the up or down arrow keys are pressed. The frequency step size can be any value from 1 Hz to upper limit of the instrument with a resolution of 1 Hz. The frequency step value can be used to change start frequency, stop frequency, center frequency, and the frequency step size.</p> <p>Use the keypad or the rotary knob to change the Frequency Step size.</p> <p>Channel Increment: Sets the increment value for the Channel # submenu key.</p> <p>Freq Offset: Enter the desired offset (positive or negative) using the keypad, the arrow keys, or the rotary knob. If entering a frequency using the keypad, the submenu key labels change to GHz, MHz, kHz, and Hz. Press the appropriate units key. Pressing the Enter key has the same effect as the MHz submenu key.</p> <p>Offset Step Size: Enter the desired frequency offset step size. The offset frequency step specifies the amount by which the offset frequency will change when the up or down arrow keys are pressed.</p> <p>Use the keypad or the rotary knob to change the Offset Step Size.</p> <p>Back: Returns to the “Freq 1/2 (Frequency Menu with Offset Function” on page 3-33.</p>
---	---


Figure 3-27. IA Freq 2/2 Menu

Frequency Offset Example

Example of Frequency Offset Using the Same Source Signal

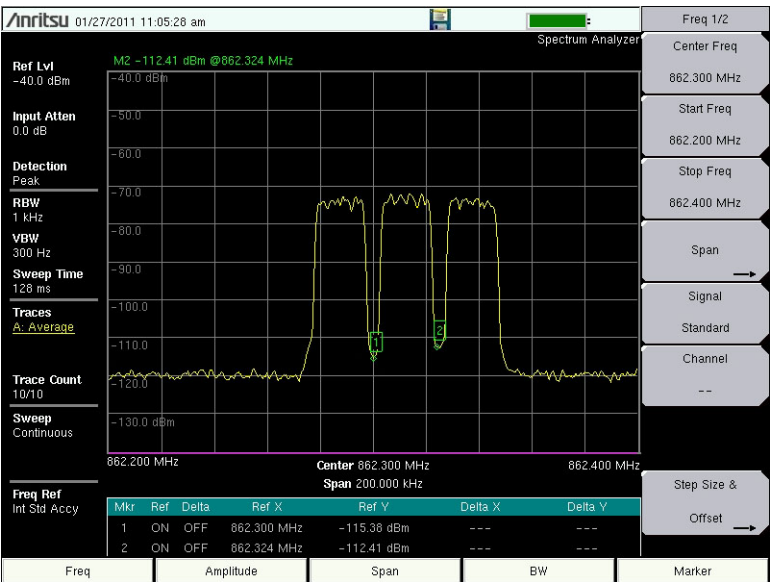

No Offset

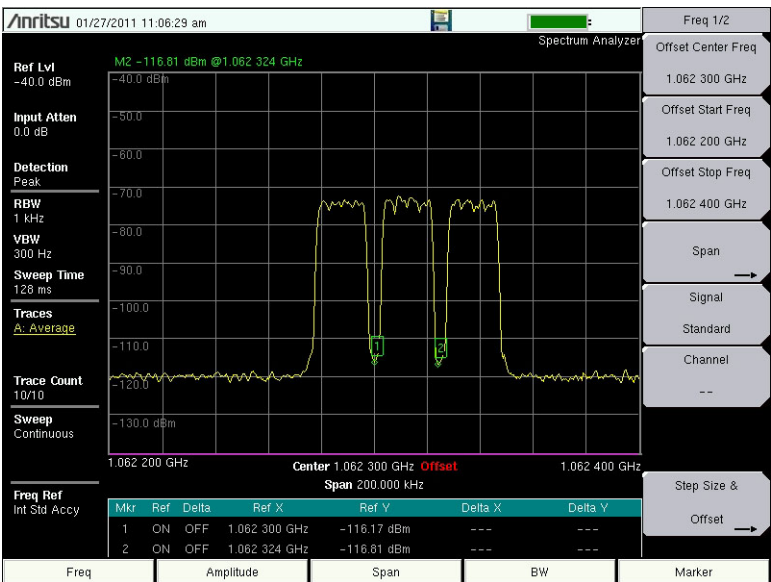

+200 MHz Frequency Offset
(Freq > Step Size & Offset > Freq Offset)

Figure 3-28. 200 MHz Frequency Offset Example

3-11 Span Menu

Press the **Span** submenu key to access the Span menu, which is used to set the frequency range over which the instrument will sweep. The span can be set from 10 Hz to the maximum frequency of the instrument. The Span can also be set to zero span.

Key Sequence: **Freq > Span**

Span

Span

1.000 MHz

Span Up

1-2-5

Span Down

1-2-5

Full Span

Zero Span

Last Span

Back

Span: This submenu key shows the current value for span in units of GHz, MHz, kHz, or Hz. When the Span button is pressed, span becomes the active parameter and may be changed. Use the keypad, the directional arrow keys, or the rotary knob to increase or decrease the span frequency. If the span is changed by using the up and down arrow keys, the span changes by the value of the Frequency Step entered in the [“Freq \(Frequency\) Menu” on page 3-31](#).

Span Up 1-2-5: This is a convenient way to quickly arrive at a wider span value. The first time the submenu key is pressed, the span value increases to the nearest even value that starts with 1, 2, or 5. For example if the span is 1.8 MHz, pressing the submenu key for the first time changes the span to 2.0 MHz, the next press takes the value to 5.0 MHz and so on.

Span Down 1-2-5: This is a convenient way to narrow the frequency span. The first time the submenu key is pressed, the span value decreases to the nearest even value that starts with 1, 2, or 5. For example if the span is 1.8 MHz, pressing the submenu key for the first time changes the span to 1.0 MHz, the next press takes the value to 500 kHz, then 200 kHz and so on.

Full Span: Pressing this button sets the span to cover the entire frequency range of the instrument.

Zero Span: This submenu key sets zero span. In this mode the display shows amplitude changes at a single frequency. This function is frequently used to allow the easy monitoring of power variations over time. For example, if information about the amplitude of an 802.11a access point signal is needed, the access point frequency would be set as the center frequency, resolution bandwidth would be set to a value wide enough to encompass as much of the signal as possible and the tester would walk around the access point usable area while the instrument records the amplitude using slow sweep.

Zero Span (Option 89): If Option 89 is installed on your instrument, press the Zero Span key again (after the circle is red) to access the [“Zero Span IF BW Menu \(Option 89\)” on page 3-37](#).

Last Span: This submenu key returns the span to the most recent span value immediately before a change was made.

Back: Returns to the previous menu.

Figure 3-29. IA Span Menu

3-12 Zero Span IF BW Menu (Option 89)

Note

Option 89 is not available on all instrument models. Refer to your instrument Technical Data Sheet.

Zero Span IF bandwidth provides a nominal 140 MHz IF signal out of a BNC female connector. The IF output signal is present only when the instrument span is set to zero by pressing the **Zero Span** key in the Span menu. Press the **Zero Span** submenu key again to access the **Zero Span IF BW** menu.

When **Normal** is selected, the IF bandwidth is influenced by the RBW setting. The selectable bandwidth values may differ among instrument types.

Key Sequence: **Freq** > **Span** > **Zero Span**

Zero Span IF BW

Normal

7 MHz BW

10 MHz BW

16 MHz BW

32 MHz BW

Back

Normal: Press this key to select a bandwidth based on the RBW setting. The selectable fixed bandwidth values listed below may differ depending on your instrument.

7 MHz BW: Press this button to select a fixed IF bandwidth of 7 MHz.

10 MHz BW: Press this button to select a fixed IF bandwidth of 10 MHz.

16 MHz BW: Press this button to select a fixed IF bandwidth of 16 MHz.

32 MHz BW: Press this button to select a fixed IF bandwidth of 32 MHz.

Back: Returns to the Span menu.

Figure 3-30. Zero Span IF BW Menu

3-13 Amplitude Menu

Key Sequence: **Amplitude**

Note On older versions of firmware, the Auto Ref Level function may be accessible only from the “[Application Options](#)” on page 3-91, and Units & Detection may appear as two separate submenu keys.

Amplitude	Auto Ref Level: Press this submenu key to adjust the position of a displayed signal so that it is approximately two divisions down from the top of the sweep window, if possible. When the key is pressed, the reference level is adjusted once. Auto Ref Level may turn off the low-noise front-end preamplifier, but does not turn it on. It has no effect on vertical scaling.
Auto Ref Level	
Reference Level	Reference Level: The reference level is the top graticule line on the display, and can be set from +30 dBm to –150 dBm. A value may be entered from the numeric keypad. Use the ± key to toggle between positive and negative values. After entering the value, press the dBm submenu key or the Enter key. The up or down arrow keys change the reference level in 10 dB steps, and the left or right arrow keys change the value by 1 dB. The rotary knob changes the value by 0.1 dB per click. The reference level value may be modified by the reference level offset value to compensate for an external attenuator or amplifier.
10 dBm	
Scale	
10 dB/div	
Auto Atten	
On Off	
Atten Lvl	Scale: The scale can be set in 1 dB steps from 1 dB per division to 15 dB per division. The value can be changed using the keypad, the rotary knob, or the arrow keys.
30.0 dB	
RL Offset	Auto Atten On/Off: Input attenuation can be either tied to the reference level (On) or manually selected (Off). When input attenuation is tied to the reference level, attenuation is increased as higher reference levels are selected to make sure the instrument input circuits are not saturated by large signals that are likely to be present when high reference levels are required.
0.0 dB Ext Gain	
Pre Amp	Atten Lvl: Press this submenu key and use the numeric keypad, the rotary knob, or the arrow keys to change the attenuation value.
On Off	
Units & Detection	RL Offset xx dB Ext Gain/Loss: RL Offset compensates for the presence of external input attenuation or gain. Enter a positive value to compensate for gain or loss, then press the appropriate submenu key (dB External Gain or dB External Loss). The new RL Offset value will be displayed on the button.
→	Pre Amp On/Off: This submenu key turns the low-noise front-end preamplifier on or off. To ensure accurate measurement results, the largest signal into the instrument input when the preamplifier is turned on should be less than –40 dBm.
	Units & Detection: Press this submenu key to open the “ Units & Detection Menu ” on page 3-39.

Figure 3-31. SPA Amplitude Menu

Units & Detection Menu

Key Sequence: **Amplitude** > Units & Detection

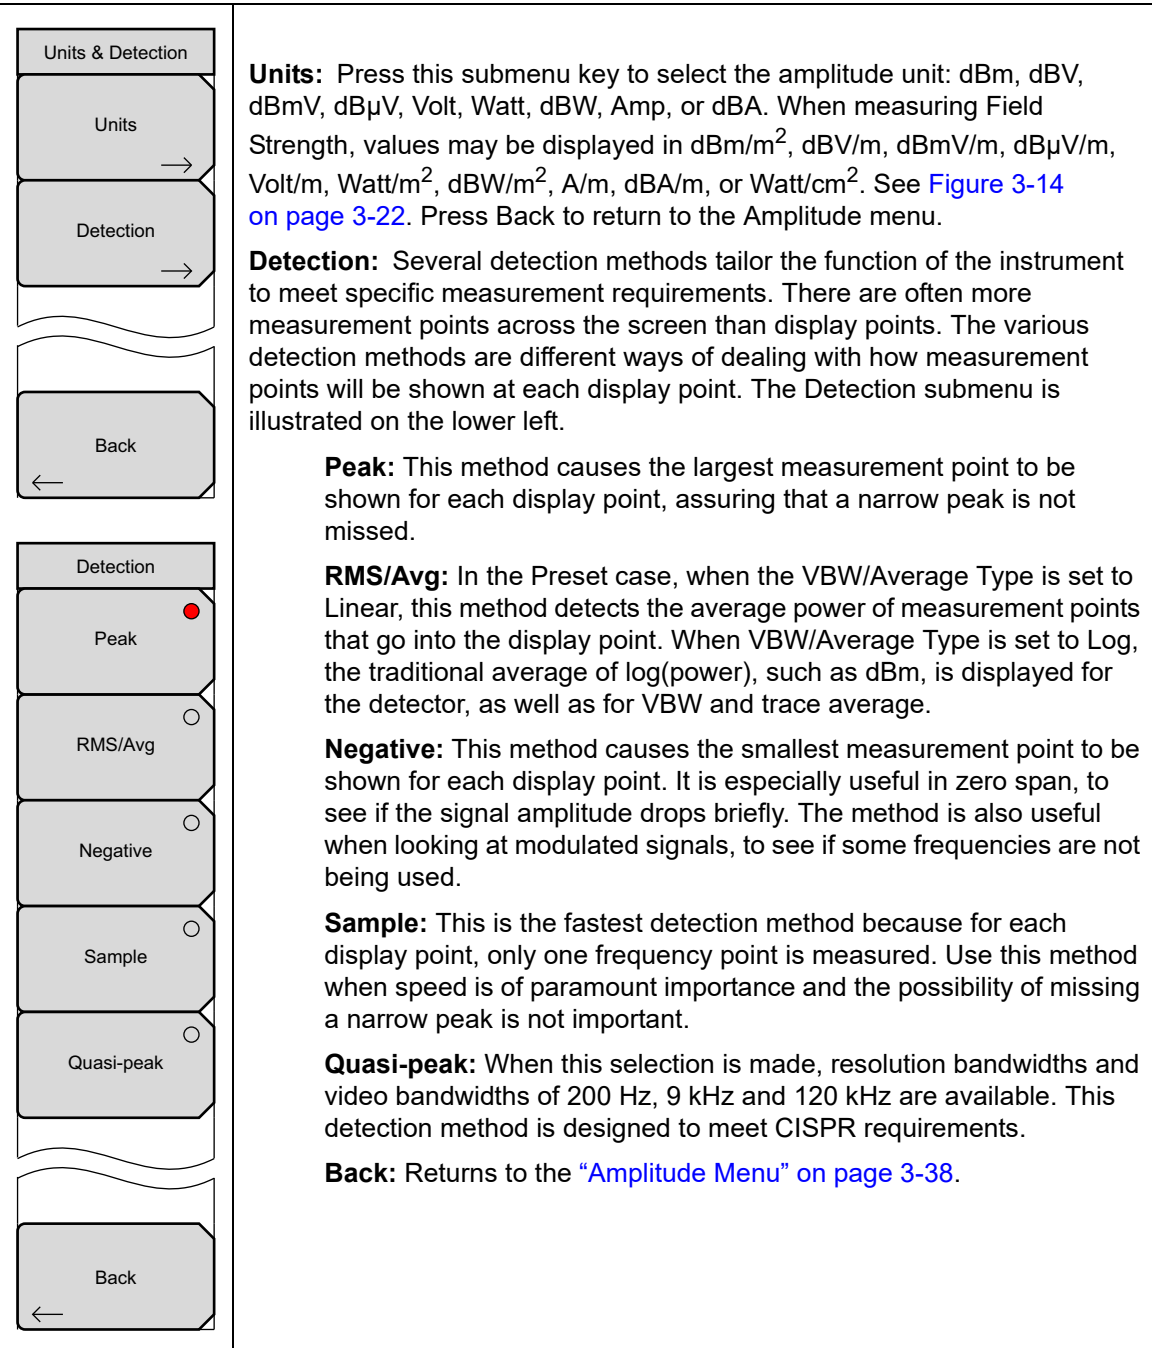


Figure 3-32. SPA Units & Detection Menu

3-14 BW (Bandwidth) Menu

Key Sequence: **BW**

BW	RBW: The current resolution bandwidth value is displayed in this submenu key. The key displays the Zero Span RBW if Zero Span is selected. The RBW can be changed using the keypad, the arrow keys, or the rotary knob. Bandwidth values increment in a 1 to 3 sequence, from 1 Hz to 3 Hz to 10 Hz, or from 10 Hz to 30 Hz to 100 Hz, for example. Refer to your instrument Technical Data Sheet for the resolution bandwidth range.
RBW	
3 MHz	
Auto RBW	
On Off	Auto RBW On/Off: When Auto RBW is On, the instrument selects the resolution bandwidth based on the current span width. The ratio of span width to RBW can be specified using the Span/RBW submenu key.
VBW	
1 MHz	
Auto VBW	
On Off	VBW: The current video bandwidth value is displayed in this submenu key. The key displays the Zero Span VBW if Zero Span is selected. The VBW can be changed using the keypad, the arrow keys, or the rotary knob. Bandwidth values increment in a 1 to 3 sequence, from 1 Hz to 3 Hz to 10 Hz, or from 10 Hz to 30 Hz to 100 Hz, for example. Refer to your instrument Technical Data Sheet for the video bandwidth range.
VBW/Average Type	
Linear Log	Auto VBW On/Off: When Auto VBW is On, the instrument selects the video bandwidth based on the resolution bandwidth. The ratio of video bandwidth to resolution bandwidth can be set using the RBW/VBW submenu key.
RBW/VBW	
3	VBW/Average Type: Toggles between Linear averaging (arithmetic mean) and Logarithmic averaging (geometric mean). When VBW linear averaging is used, the result is calculated by Linear running average, then Log, and then displayed. When VBW log averaging is used, the result is obtained by taking Log, then running average, and then displayed. These two approaches can result in different responses to time-varying signals.
Span/RBW	
100	RBW/VBW: This submenu key displays the ratio between resolution bandwidth and video bandwidth. To change the ratio, press this submenu key and use the keypad, the arrow keys, or the rotary knob to select a new ratio. The default ratio is 3. When the quasi-peak detector is selected the RBW/VBW ratio is changed to 1.
	Span/RBW: This submenu key displays the ratio between the span width and the resolution bandwidth. The default value is 100, meaning that the span width is approximately 100 times the resolution bandwidth. The value is approximate because resolution bandwidth filters come in discrete steps while span width can be set to any value up to the limit of the instrument. To change the ratio, press this submenu key and use the keypad, the arrow keys, or the rotary knob to select a new ratio.

Figure 3-33. IA Bandwidth Menu

3-15 Measurements Menu

Key Sequence: **Measurements**

Note The red circle on the submenu key indicates the currently active setting.

Measurements	
Spectrum	Spectrum: Pressing the Spectrum submenu key sets the instrument to a traditional spectrum analyzer display. When Spectrum is active, pressing the Spectrum submenu key opens a menu for Spectrum Analyzer measurements. See the “[Spectrum] Measure Menu” on page 3-42.
Spectrogram	Spectrogram: Pressing the Spectrogram submenu key sets the instrument to display a spectrogram. When Spectrogram is active, pressing the Spectrogram submenu key opens the “Spectrogram Menu” on page 3-62.
Signal Strength	Signal Strength: Pressing the Signal Strength submenu key sets the instrument to display signal strength. When Signal Strength is active, pressing the Signal Strength submenu key opens the “Signal Strength Menu” on page 3-63.
RSSI	RSSI: Pressing the RSSI submenu key sets the instrument to display RSSI (Received Signal Strength Indicator). When RSSI is active, pressing the RSSI submenu key opens the “RSSI Menu” on page 3-64.
Signal ID	Signal ID: Pressing the Signal ID submenu key opens the “Signal ID Menu” on page 3-65.
Interference Mapping	Interference Mapping: Pressing the Interference Mapping submenu key opens the “Interference Mapping Menu” on page 3-66.

Figure 3-34. IA Measurement Menu

[Spectrum] Measure Menu

Key Sequence: **Measurements** > Spectrum

For a shortcut to the active measurement or this main menu if no measurement is active, press the touch screen where the words IA (Spectrum) are located, in the upper right corner of the display.

Measure	
Power and Bandwidth →	Power and Bandwidth: Opens the “Power and BW Menu” on page 3-43.
Masks and C/I →	Masks and C/I: Opens the “Masks and C/I Menu” on page 3-50.
AM/FM Demod →	AM/FM Demod: Opens the “AM/FM Demod 1/2 Menu” on page 3-54.
Generator →	Generator: Opens the “Generator Menu (Optional)” on page 3-57. This submenu key is present only in spectrum analyzers with a Tracking Generator option.
IQ Waveform Capture →	IQ Waveform Capture: Opens the “IQ Waveform Capture Menu (Option 24)” on page 3-58. This submenu key is present only when Option 24 is installed.
Coverage Mapping →	Coverage Mapping: Opens the “Coverage Mapping Menu (Option 431)” on page 3-61. This submenu key is present only when Option 431 is installed.
All Measurements Off	All Measurements Off: Turns off all measurements.

Figure 3-35. IA Spectrum Measure Menu

Power and BW Menu

Key Sequence: **Measurements** > Spectrum > Power and Bandwidth

Power and BW	
Field Strength →	Field Strength: Opens the “Field Strength Menu” on page 3-44.
OCC BW →	OCC BW: Opens the “OCC BW Menu” on page 3-45.
Channel Power →	Channel Power: Opens the “Channel Power Menu” on page 3-46.
ACPR →	ACPR: Opens the “ACPR Menu” on page 3-47.
EMF Measurement →	EMF Measurement: : Opens the “EMF Menu (Option 444)” on page 3-49. This submenu key is present only when Option 444 is installed on your instrument. Refer to <i>Electromagnetic Field (EMF) Measurements Option 444 Measurement Guide</i> , 10580-00455
<hr/>	
Back ←	Back: Returns to the “[Spectrum] Measure Menu” on page 3-42 menu.

Figure 3-36. IA Power and BW Menu

Field Strength Menu

Key Sequence: **Measurements** > Spectrum > Power and Bandwidth > Field Strength

F Strength

On

Off

Antenna

Back

←

Antenna Options

Display

All Fav EMI

Select/Deselect

Favorite

Save Favorites

Top of List

Page Up

Page Down

Bottom of List

This measurement allows the use of an antenna with known gain characteristics and measures the field strength over the frequency range of the antenna in units of dBm/m², dBV/m, dBmV/m, dBμV/m, Volt/m, Watt/m², dBW/m², A/m, dBA/m, or Watt/cm².

On/Off: Turns Field Strength measurements on or off.

Antenna: Press this key to display the Antenna Options submenu and bring up a dialog box that lists all the antennas for which the instrument has data, including both standard antennas and custom antennas that have been added using Master Software Tools. Antenna frequency information is also displayed. See [Figure 3-38 on page 3-45](#). Use the arrow keys or the rotary knob to select the desired antenna, then press **Enter**.

Back: Returns to the [“Power and BW Menu” on page 3-43](#).

Use the Antenna Options submenu keys for faster navigation through the list.

Display: Press this key repeatedly to display All antennas, only EMI antennas, or only antennas marked as Favorites.

Select/Deselect Favorite: Press this submenu key to add the highlighted antenna to the Favorites list. The antenna is then marked with an asterisk. If the selected antenna is already marked with an asterisk, pressing this key removes it from the Favorites list.

Save Favorites: Press this key to save the changes you have made to the Favorites list.

Top of List: Press this submenu key to jump to the top of the Antenna list.

Page Up: Press this key to skip up through the list.

Page Down: Press this key to skip down through the list.

Bottom of List: Press this submenu key to jump to the bottom of the list.

Figure 3-37. IA Field Strength Menu

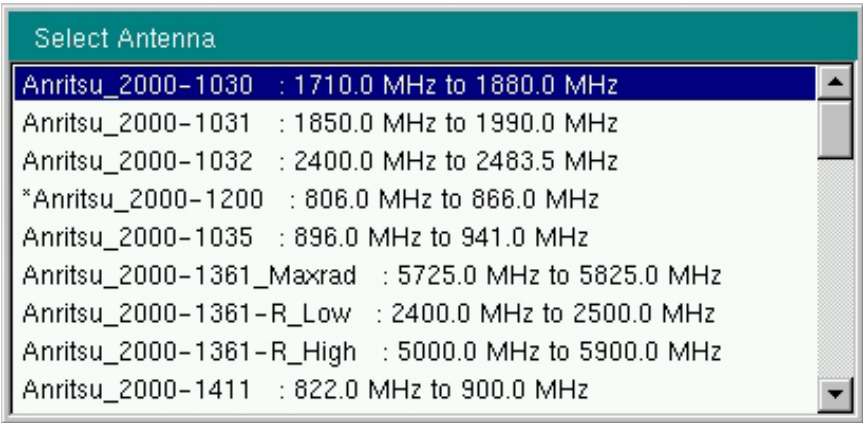


Figure 3-38. Select Antenna Dialog Box

OCC BW Menu

Key Sequence: **Measurements** > Spectrum > Power and Bandwidth > OCC BW

OCC BW	
On	
Off	
Method	
% Int Pwr > dBc	
%	
99.00 %	
dBc	
3	
OCC BW Limit	
On Off	
OCC BW Limit	
10.350 MHz	
Back	

On/Off: This submenu key turns the Occupied Bandwidth On or Off.

Method: Press this submenu key to select either the % of Internal Power (default) or dB Down measurement method. Toggling the setting on this key activates one of the two submenu keys below.

%: PUse the keypad, directional arrow keys, or the rotary knob to enter the percent of power, from 0% to 99%.

dBc: PUse the keypad, directional arrow keys, or the rotary knob to enter the dBc value (0 dBc to 100 dBc).

OCC BW Limit On/Off: Press this submenu key to turn Occupied Bandwidth Limit on and off.

OCC BW Limit: Press this key and use the arrow keys, rotary knob, or numeric keypad to enter the upper limit value for the Occupied Bandwidth.

Back: Returns to the [“Power and BW Menu” on page 3-43.](#)

Figure 3-39. IA OCC BW Menu

Channel Power Menu

Key Sequence: **Measurements** > Spectrum > Power and Bandwidth > Channel Power

<div>Channel Pwr</div> <div>On</div> <div>Off</div>	<p>On/Off: Begins or ends the channel power measurement. When the measurement is on, Ch Pwr will appear below the display. The detection method will automatically be changed to RMS Average when the measurement is started. The detection method can be modified by pressing the Shift and the Sweep keys and pressing the Detection submenu key.</p>
<div>Center Freq</div> <div>1.939 900 GHz</div>	<p>Center Freq: Activates the center frequency function, and sets the center frequency of the instrument for the channel power measurement. Enter values using the keypad, arrow keys, or the rotary knob. The up and down arrows change the frequency by the frequency step size entered in the “Freq (Frequency) Menu”. The left and right arrows change the frequency by 10% of the span. When using the numeric keypad, press a unit key or press Enter for values in MHz. With zero offset, this key is labeled Center Freq. With an offset other than zero, the key is labeled Offset Center Freq, as illustrated on the left, below the full menu. Refer to “Freq 1/2 (Frequency Menu with Offset Function)” on page 3-33.</p>
<div>Ch Pwr Width</div> <div>24.960 MHz</div>	<p>Ch Pwr Width: Sets the width for the channel power. Use the keypad, the directional arrow keys, or the rotary knob to enter the channel power width. The up and down arrow keys change the Channel Power Width by the frequency step value. The left and right arrow keys change the value by 10% of the span.</p>
<div>Span</div> <div>24.960 MHz</div>	<p>Span: Sets the span for channel power measurement. Use the keypad, directional arrow keys, or the rotary knob to enter the span.</p>
<div>Ch Pwr Limit</div> <div>On</div> <div>Off</div>	<p>Ch Pwr Limit On/Off: Press this submenu key to turn Channel Power Limit on and off.</p>
<div>Ch Pwr Limit</div> <div>10.0 dBm</div>	<p>Ch Pwr Limit: Press this key and use the arrow keys, rotary knob, or numeric keypad to enter the upper limit value for the Channel Power.</p>
<div>Back</div> <div>←</div>	<p>Back: Returns to the “Power and BW Menu” on page 3-43.</p>
<div>Offset Center Freq</div> <div>## GHz</div>	

Figure 3-40. IA Channel Power Menu

ACPR Menu

Key Sequence: **Measurements** > Spectrum > Power and Bandwidth > ACPR

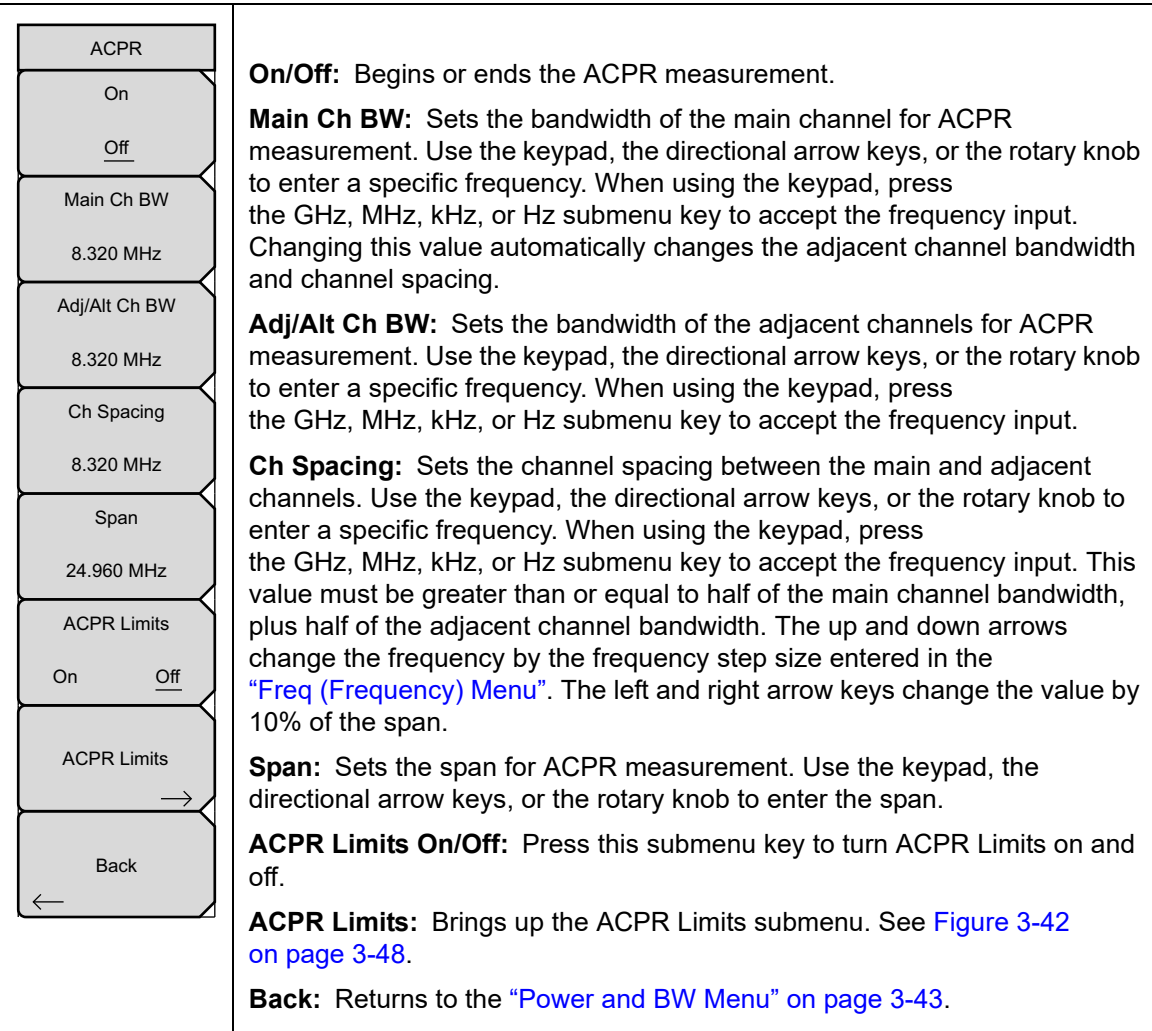


Figure 3-41. IA ACPR Menu

ACPR Limits

Main Channel Pwr

10.0 dBm

ACPR Upper Adj

10.0 dB

ACPR Lower Adj

10.0 dB

ACPR Upper Alt

10.0 dB

ACPR Lower Alt

10.0 dB

Back

←

Use this submenu to set upper limits to the following parameters:

Main Channel Pwr: Sets the main channel power level. Use the numeric keypad, directional arrow keys, or the rotary knob to change the power value. When using the keypad, press the unit submenu key (dBm, for example) to accept the power value.

ACPR Upper Adj: Sets the ACPR upper adjacent channel power value. Use the numeric keypad, directional arrow keys, or the rotary knob to change the value. When using the keypad, press the unit submenu key (dB) to accept the entered value.

ACPR Lower Adj: Sets the ACPR lower adjacent channel power value. Use the numeric keypad, directional arrow keys, or the rotary knob to change the value. When using the keypad, press the unit submenu key (dB) to accept the entered value.

ACPR Upper Alt: Sets the ACPR upper alternate channel power value. Use the numeric keypad, directional arrow keys, or the rotary knob to change the value. When using the keypad, press the unit submenu key (dB) to accept the entered value.

ACPR Lower Alt: Sets the ACPR lower alternate channel power value. Use the numeric keypad, directional arrow keys, or the rotary knob to change the value. When using the keypad, press the unit submenu key (dB) to accept the entered value.

Back: Returns to the [“ACPR Menu” on page 3-47](#).

Figure 3-42. ACPR Limits Submenu Keys

EMF Menu (Option 444)

Key Sequence: **Shift** > **Measure** (4) key > Power and Bandwidth > EMF Measurement

This menu is available only when Option 444 is installed on your instrument.

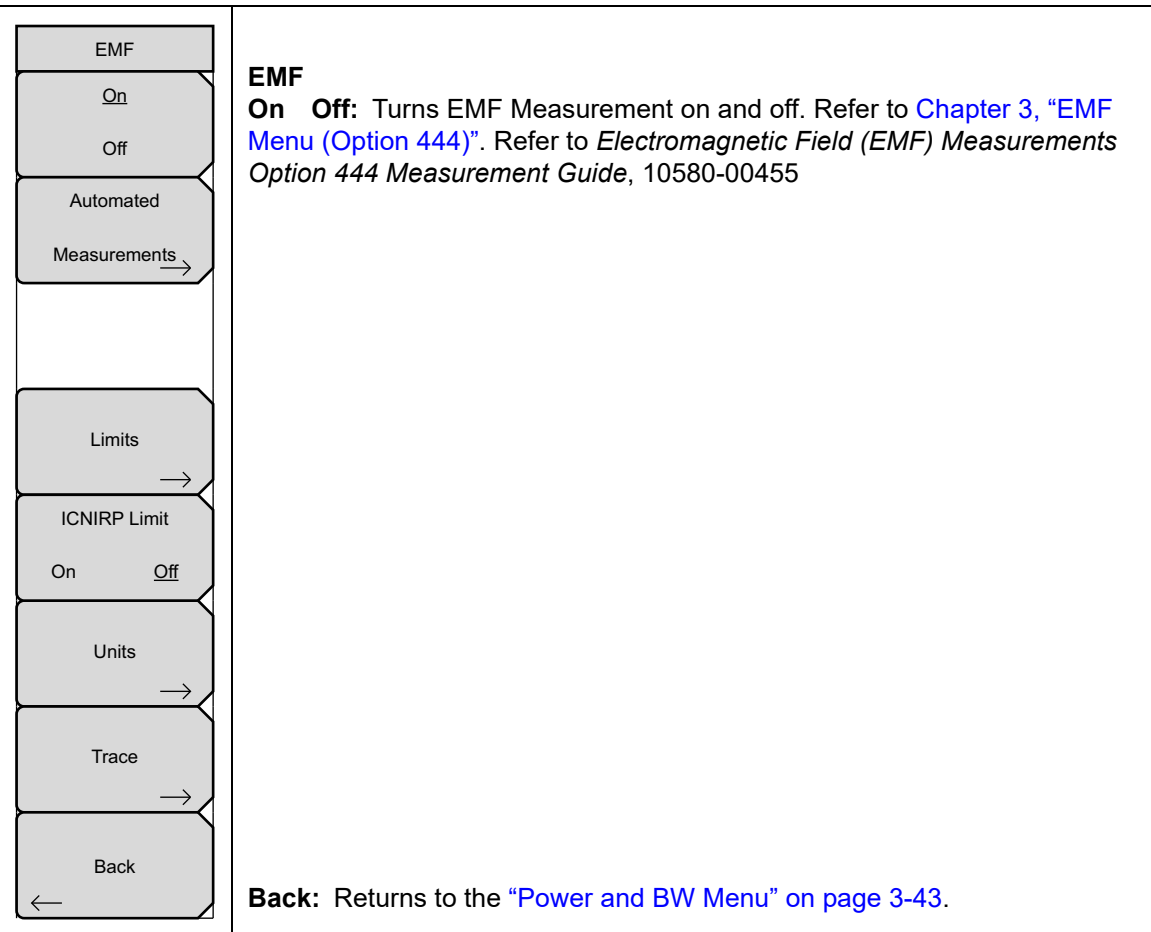


Figure 3-43. EMF Menu

Masks and C/I Menu

Key Sequence: **Measurements** > Spectrum > Masks and C/I

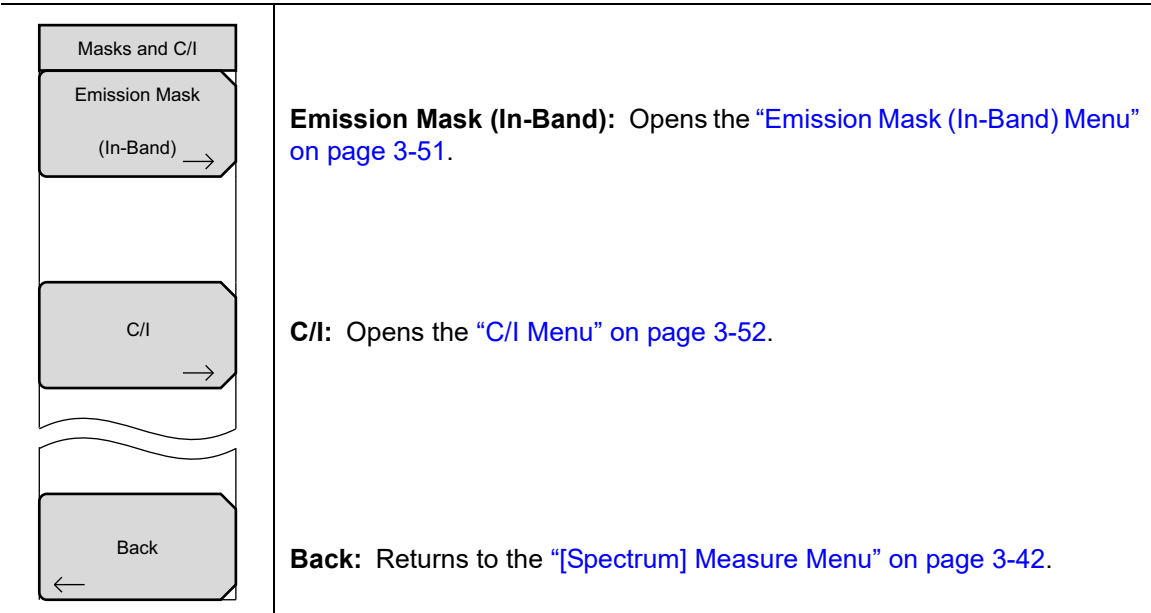


Figure 3-44. IA Masks and C/I Menu

Emission Mask (In-Band) Menu

Key Sequence: **Measurements** > Spectrum > Masks and C/I > Emission Mask (In-Band)

Emission Mask

Emission Mask

On Off

Recall Limit
as
Emission Mask

Ref Power

Peak Channel

Channel Width

200.000 kHz

Peak Markers

On Off

Back

This submenu controls the setup and display of the emission mask. The emission mask is a segmented upper limit line that will display frequency range, peak power and frequency, relative power, and pass/fail status for each segment of the mask. The emission mask must have at least two segments. Refer to [“Emission Mask \(In-Band\) Measurement” on page 2-30](#) for more information.

Emission Mask On/Off: Turns On/Off the Emission Mask graph and table display. **Before** turning Emission Mask on, you must have created or recalled a mask.

With Emission Mask On, the Mask/Limit Line is adjusted up or down based on the selected Ref Power for every sweep. If the Ref Power is set to 'Peak', the center segment of the Mask/Limit is moved to match the peak amplitude of the current trace. If 'Channel' is selected, the center segment of the Mask/Limit is moved to match the calculated channel power contained in the current trace.

Recall Limit as Emission Mask: Opens the recall menu for selecting a limit line for use as the Emission Mask.

Ref Power Peak/Channel: Press this submenu key to toggle between the Peak and Channel settings. When Peak is selected, the mask is moved up or down so that the mask value at the center frequency is the same as the peak value of the trace. When Channel is selected, the reference power value is the same as would be calculated by the Channel Power measurement, over the defined channel width; in this case, the mask value at the center frequency is moved to the channel power measurement result.

Channel Width: Channel Width is preset within the Signal Standard. Press this submenu key, then use the directional arrow keys, rotary knob, or numeric keypad to adjust the channel width as desired.

Peak Markers On/Off: Turning on this feature displays a peak marker within an Emission Mask segment. For example, if the Emission Mask had seven segments then there would be seven peak markers.

Back: Returns to the [“Masks and C/I Menu” on page 3-50](#).

Figure 3-45. IA Emission Mask Menu

C/I Menu

Key Sequence: **Measurements** > Spectrum > Masks and C/I > C/I

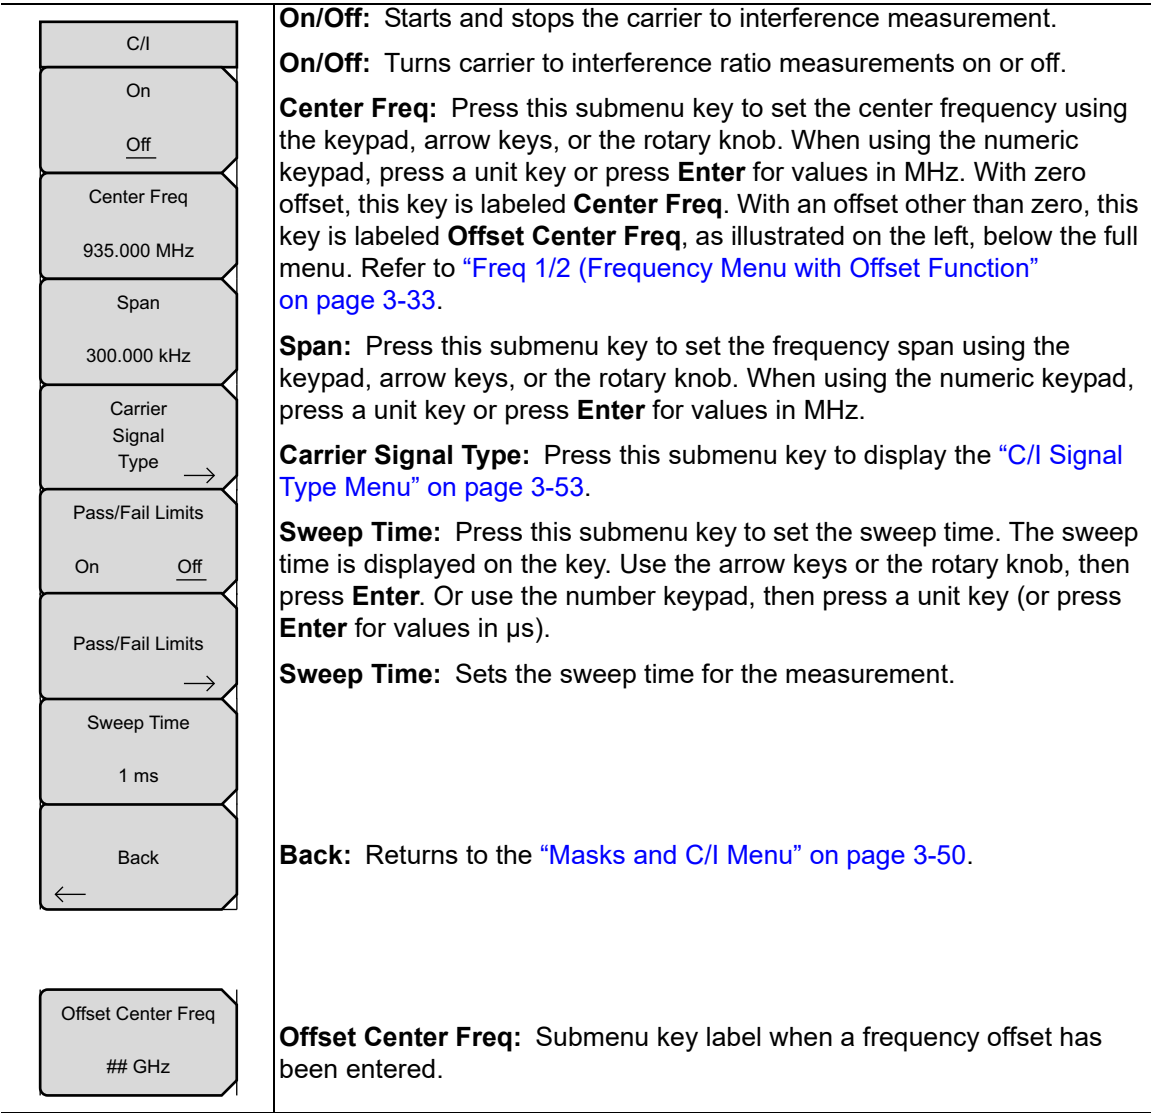


Figure 3-46. IA C/I Menu

C/I Signal Type Menu

Key Sequence: **Measurements** > Spectrum > Masks and > C/I > Carrier Signal Type

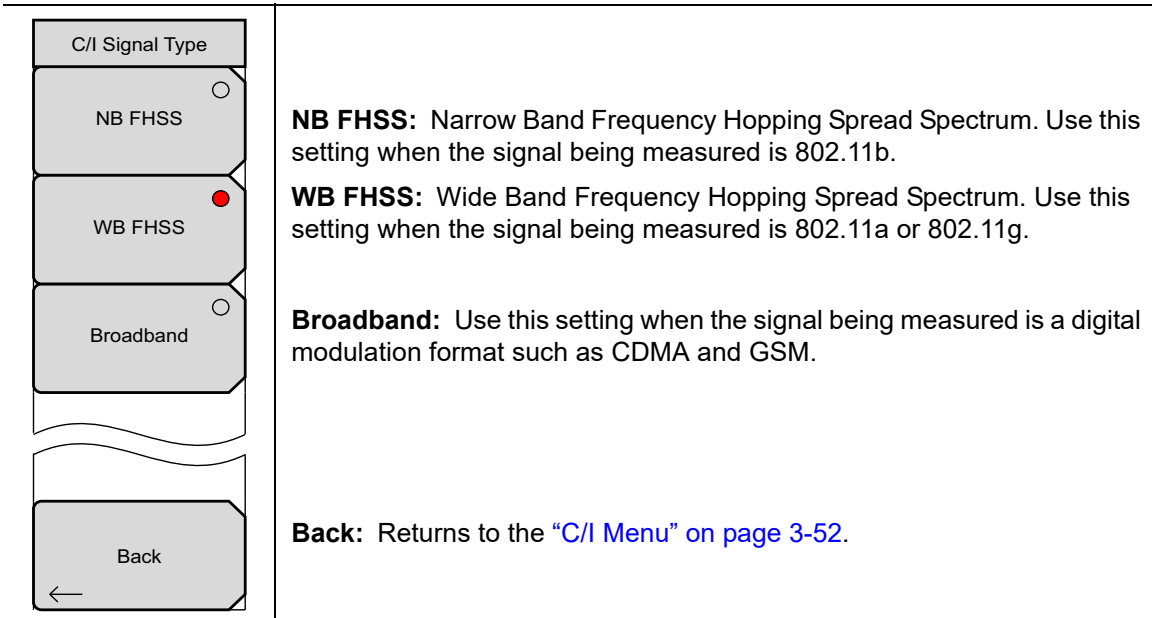


Figure 3-47. IA C/I Signal Type Menu

AM/FM Demod 1/2 Menu

Key Sequence: **Measurements** > Spectrum > AM/FM Demod

AM/FM Demod 1/2	On/Off: Turns AM/FM Demodulation on or off.
On	Demod Type: Provides submenu keys to select the type of signal to be demodulated (refer to “Demod Type Menu” on page 3-55): FM Wide Band FM Narrow Band AM USB LSB
Off	
Demod Type	
→	
Demod Freq	
10.350 MHz	Demod Freq: Use the keypad, directional arrow keys, or the rotary knob to enter the center frequency of the signal to be demodulated. When using the numeric keypad, press a unit key or press Enter for values in MHz. This frequency does not have to be within the current frequency sweep range to which the instrument is set.
Demod Time	Demod Time: Use the keypad, directional arrow keys, or the rotary knob to increase or decrease the demodulation time, and press the Enter key to select. The demodulation time can be set from 100 milliseconds to 500 seconds. The instrument sweeps one time for every demodulation period. Sweeping pauses during the demodulation time.
3 s	
Set Demod Freq to Current Marker Freq	Set Demod Freq to Current Marker Freq: Sets the demodulation frequency to the frequency of the current marker.
Volume	Volume: The current volume setting is displayed on the screen. Use the up or down arrow keys or rotary knob to change the volume, and press the Enter key to select.
More	
→	More: Opens the “AM/FM Demod 2/2 Menu” on page 3-56 .
Back	Back: Returns to the “[Spectrum] Measure Menu” on page 3-42 .
←	

Figure 3-48. IA AM/FM Demod Menu

Demod Type Menu

Key Sequence: **Measurements** > Spectrum > AM/FM Demod > Demod Type

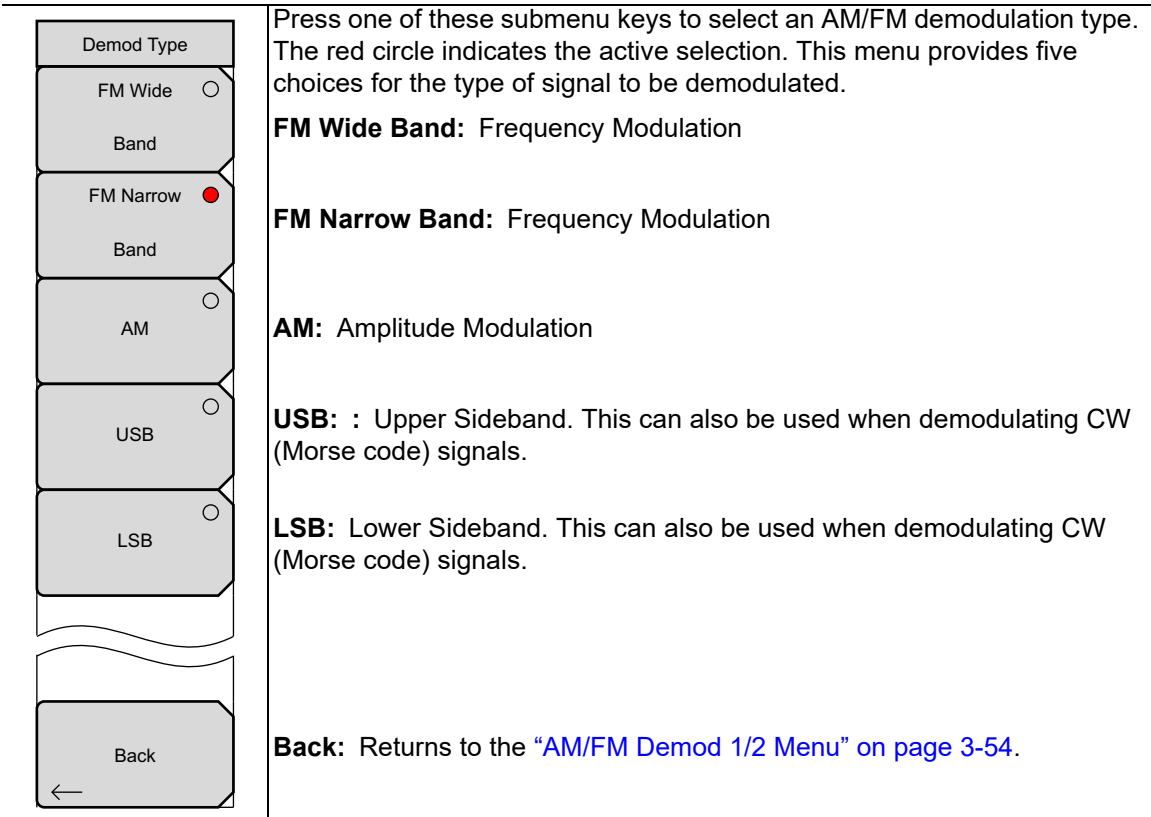


Figure 3-49. IA Demod Type Menu

Refer to [Section 2-19 “AM/FM/SSB Demodulation Measurements” on page 2-26](#) for a description of the built-in demodulator.

AM/FM Demod 2/2 Menu

Key Sequence: **Measurements** > Spectrum > AM/FM Demod > More

AM/FM Demod 2/2	
Squelch Power ## dBm	Squelch Power: Sets the squelch power value. Use this setting to limit noise when there is no signal to demodulate. The squelch value is the limit below which no signal is demodulated.
Beat Freq Osc 0 Hz	Beat Freq Osc: Sets the beat frequency of the oscillator to exactly set the demodulation frequency of USB and LSB signals. This key is active only when USB or LSB is selected as the Demod Type. This can also be used when demodulating CW (Morse code) signals.
<hr/>	
Back ←	Back: Returns to the “AM/FM Demod 1/2 Menu” on page 3-54.

Figure 3-50. IA AM/FM Demod 2/2 Menu

Generator Menu (Optional)

Key Sequence: **Measurements** > Spectrum > Generator

This menu is available only in spectrum analyzers with a Tracking Generator option.

Generator	
Generator Output	
On Off	Generator Output On Off: Turns the Tracking Generator Option on and off.
Output Power	
## dBm	For more information about the Tracking Generator, refer to the Tracking Generator Measurement Guide, Anritsu part number 10580-00339.
Generator Mode	
CW Tracking	
CW Frequency	
## GHz	
Settings	
→	
Transmission	
Measurement →	
<hr/>	
Back	Back: Returns to the "[Spectrum] Measure Menu" on page 3-42.
←	

Figure 3-51. IA Generator Menu

IQ Waveform Capture Menu (Option 24)

Key Sequence: **Measurements** > Spectrum > IQ Waveform Capture

This menu is available only when Option 24 is installed on your instrument.

<div>IQ Waveform Capture</div> <div>Start Capture</div> <div>Capture Length</div> <div>10 ms</div> <div>Capture Mode</div> <div>Single Continuous</div> <div>Sample Rate</div> <div>12.500 MHz</div> <div>Triggering</div> <div>File Name & Location</div> <div>Frequency/Amplitude</div> <div>Back</div>	<p>Start Capture: Initiates a capture using the current settings. Messages will appear on screen to notify the user of progress and the filename of the data acquired after the waveform capture is complete (Figure 2-25). If Capture Mode is set to Continuous, this button becomes the Stop Capture button. Press the Stop Capture button to end a continuous waveform capture.</p> <p>Capture Length: Sets the time length of the capture.</p> <p>Capture Mode: When set to “single”, the instrument will perform 1 waveform capture each time “Start Capture” is pressed. When set to “continuous”, the instrument will begin a new capture as soon as the previous one is finished.</p> <p>Sample Rate: Opens the Select Capture Sample Rate dialog (Figure 2-24). Select the desired Sample Rate (MHz) and associated Bandwidth (MHz) and then press Enter.</p> <p>Triggering: Opens the “IQ Capture Triggering Menu” on page 3-59 to set the triggering parameters.</p> <p>File Name & Location: Opens the “IQ Capture Save Menu” on page 3-59 to set the directory location of the saved file and the prefix of the file name.</p> <p>Frequency/Amplitude: Opens the “IQ Capture Frequency/Amplitude Menu” on page 3-60 which contains the specific buttons for setting up the capture waveform frequency, display and attenuation parameters.</p> <p>Back: Returns to the “[Spectrum] Measure Menu” on page 3-42.</p>
---	--

Figure 3-52. IA IQ Waveform Capture Menu

IQ Capture Triggering Menu

Key Sequence: **Measurements** > Spectrum > IQ Waveform Capture > Triggering

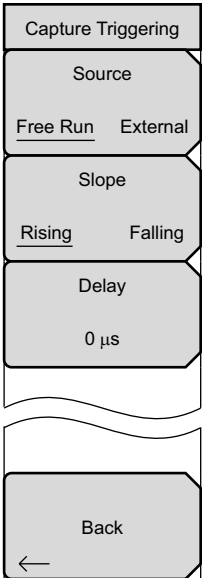
 <p>The screenshot shows the 'Capture Triggering' menu. It has a title bar 'Capture Triggering'. Below it are three main sections: 'Source' with 'Free Run' (selected) and 'External'; 'Slope' with 'Rising' (selected) and 'Falling'; and 'Delay' with '0 μs'. At the bottom is a 'Back' button with a left arrow.</p>	<p>Source: Press this submenu key to set the desired type of triggering.</p> <p>Free Run: The default trigger type is Free Run, in which the instrument begins another sweep as soon as one is finished.</p> <p>External: A TTL signal applied to the External Trigger BNC input connector causes a single sweep to occur after the set delay. After the sweep is complete, the resultant trace is displayed until the next trigger signal arrives.</p> <p>Slope: Sets the trigger slope to rising or falling.</p> <p>Delay: Used when External is selected for the Source. Capture begins after set time delay, once the trigger has occurred. The delay can be entered either as a percentage of the sweep time or as an absolute time delay with units of ns, μs, or ms.</p> <p>Back: Returns to the “IQ Waveform Capture Menu (Option 24)” on page 3-58.</p>
--	--

Figure 3-53. IA IQ Capture Triggering Menu

IQ Capture Save Menu

Key Sequence: **Measurements** > Spectrum > IQ Waveform Capture > File Name & Location

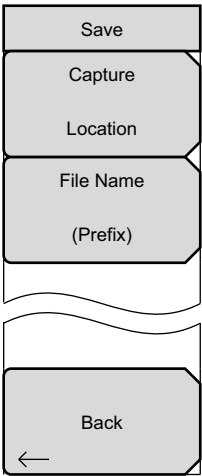
 <p>The screenshot shows the 'IQ Capture Save' menu. It has a title bar 'Save'. Below it are three main sections: 'Capture', 'Location', and 'File Name (Prefix)'. At the bottom is a 'Back' button with a left arrow.</p>	<p>Capture Location: Opens the Select Save Location dialog and Save Location menu. Refer to the instrument's User Guide for additional information.</p> <p>Filename (Prefix): Allows changing the prefix of the output file. Files are saved with a running counter appended to this prefix. Its extension is * .wcap. For example: CaptureOut0045.wcap. CaptureOut is the set prefix file name, and 0045 is the counter number appended to the prefix.</p> <p>Pressing File Name (Prefix) opens the Edit Filename Prefix dialog and Save menu. The waveform capture output file is a combination of XML and binary data. The beginning of the file contains all of the capture-related parameters such as center frequency, bandwidth, and capture rate as well as any contextual information about the file, such as time, date, and GPS location (if available). At the bottom of the file, in between the <Data> tags, is the raw I and Q data in binary form. I and Q data points are each 3 bytes long and stored in 24-bit twos complement in an alternating fashion (in other words, I0, Q0, I1, Q1...).</p> <p>Back: Returns to the “IQ Waveform Capture Menu (Option 24)” on page 3-58.</p>
---	--

Figure 3-54. IA IQ Capture Save Menu

IQ Capture Frequency/Amplitude Menu

Key Sequence: **Measurements** > Spectrum > IQ Waveform Capture > Frequency/Amplitude

Freq/Amp

Center Freq

GHz

Span

MHz

Reference Level

dBm

Scale

dB/div

Auto Atten

On Off

Atten Lvl

dB

Back

←

Offset Center Freq

GHz

Center Freq: Press this submenu key and enter the desired frequency using the keypad, arrow keys, or the rotary knob. If entering a frequency using the keypad, the submenu key labels change to GHz, MHz, kHz, and Hz. Press the appropriate units key. Pressing the **Enter** key has the same effect as the MHz submenu key. With zero offset, this key is labeled **Center Freq**. With an offset other than zero, the key is labeled **Offset Center Freq**, as illustrated on the left, below the full menu. Refer to [“Freq 1/2 \(Frequency Menu with Offset Function\)” on page 3-33](#).

Span: Lets you set the frequency span to be displayed on the instrument. This submenu key shows the current value for span in units of GHz, MHz, kHz, or Hz. When the Span button is pressed, span becomes the active parameter and may be changed. Use the keypad, the directional arrow keys, or the rotary knob to increase or decrease the span frequency. If the span is changed using the arrow keys, the span changes in a 1-2-5 sequence for each key press.

Reference Level: The reference level is the top graticule line on the display, and can be set from +30 dBm to –150 dBm. A value may be entered from the keypad, use the ± key for a minus sign. After entering the value press the dBm submenu key or the **Enter** key. The up or down arrow keys change the reference level in 10 dB steps, and the left or right arrow keys change the value by 1 dB. The rotary knob changes the value by 0.1 dB per click. The reference level value may be modified by the reference level offset value to compensate for an external attenuator or amplifier.

Scale: The y-axis scale can be set in 1 dB steps from 1 dB per division to 15 dB per division. The value can be changed using the keypad, the rotary knob or the arrow keys.

Auto Atten: Input attenuation can be either tied to the reference level (On) or manually selected (Off). When input attenuation is tied to the reference level, attenuation is increased as higher reference levels are selected to make sure the instrument input circuits are not saturated by large signals that are likely to be present when high reference levels are required.

Atten Level: Press this submenu key and use the keypad, the rotary knob or the arrow keys to change the attenuation value.

Back: Returns to the [“IQ Waveform Capture Menu \(Option 24\)” on page 3-58](#).

Figure 3-55. IA IQ Capture Freq/Amp Menu

Coverage Mapping Menu (Option 431)

Key Sequence: **Measurements** > Spectrum > Coverage Mapping

This menu is available only when Option 431 is installed on your instrument. Refer to [“Coverage Mapping Menu” on page 6-15](#).

Spectrogram Menu

Key Sequence: **Measurements** > Spectrogram

Spectrogram

Sweep Interval

Auto

Record

On Off

Recording Time

60 s

Time Cursor

0

Reset/
Restart
Measurement

Back

Sweep Interval: Press the Sweep Interval submenu key and use the rotary knob or keypad to set the time from 0 seconds to 60 seconds.

Record: When set to On, Spectrogram plots will be automatically saved to the currently selected medium for as long as is set in the Recording Time submenu key.

Recording Time: When Record is set to On, the Recording Time submenu key is displayed. Press this submenu key to specify how long the instrument will record the spectrogram to mass memory before stopping. If there is insufficient mass memory in the current location (Internal or USB), the Sweep Interval will be adjusted if currently set as Auto. If the Sweep Interval setting is not Auto, the maximum recording time will be limited to what will fit into the currently selected location.

Time Cursor: The Time Cursor is used to view the spectrum at any spot in the spectrogram display. Press the Time Cursor submenu key to turn on the horizontal time cursor. Use the up or down arrow key to move the cursor vertically through the spectrogram. The date and time that the measurement at the cursor position was taken is displayed at the top of the screen.

Reset/Restart Measurement: Pressing this key will clear the captured spectrogram display and start a new series of measurements.

Back: Returns to the [“Measurements Menu” on page 3-41](#).

Figure 3-56. IA Spectrogram Menu

Signal Strength Menu

Key Sequence: **Measurements** > Signal Strength

Signal Strength

Auto Scale

Max Level

0.0 dBm

Min Level

10.0 dBm

Speaker

On Off

Volume

Field

Strength →

Back

←

F Strength

On

Off

Antenna

Back

←

Auto Scale: Press the Auto Scale submenu key to automatically scale the display range.

Max Level: Set the desired maximum display range value by pressing the Max Level submenu key.

Min Level: Set the desired minimum display range value by pressing the Min Level submenu key.

Speaker On/Off: Press the Speaker On/Off submenu key to turn on the audio output.

Volume: Press the Volume submenu key to set the speaker or headphone volume to a comfortable level. Use the up or down arrow keys to adjust the volume.

Field Strength: This measurement allows the use of an antenna with known gain characteristics and measures the field strength over the frequency range of the antenna in units of dBm/m², dBV/m, dBmV/m, dBμV/m, Volt/m, Watts/m², dBW/m², A/m, dBA/m, or Watt/cm².

On/Off: Turns field strength measurements on or off.

Antenna: This submenu key displays a list box that lists all the antennas for which the instrument has data, including both standard antennas and custom antennas that have been added by using Master Software Tools. Use the up or down arrow keys or the rotary knob to select the desired antenna and press **Enter**.

Back: Returns to the Signal Strength menu.

Back: Returns to the [“Measurements Menu” on page 3-41](#).

Figure 3-57. IA Signal Strength Menu

RSSI Menu

Key Sequence: **Measurements** > **RSSI**

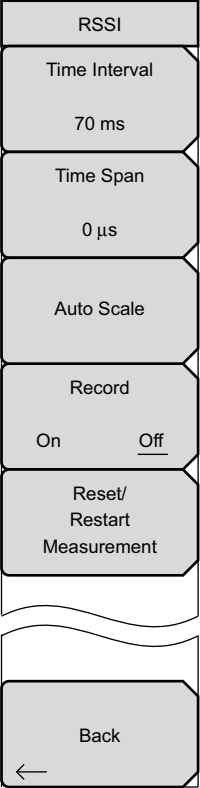
	<p>Time Interval: Press the Time Interval submenu key to set the time between adjacent measurement points. This time may be set from 70 ms to 1 minute.</p> <p>Time Span: Press the Time Span submenu key to set the overall time span for the RSSI measurement. This time can be set from zero, to give manual control of the time span, to a maximum of seven days. After the specified time span, the measurement is halted. Depending on the time interval selected, the data will scroll to the left once the trace fills the screen.</p> <p>Auto Scale: Press the Auto Scale submenu key to automatically set the reference level and scale factor to place the trace on the screen.</p> <p>Record On/Off: To store the RSSI data, press the Record On/Off submenu key to turn on data logging. Each screen full of 551 data points will be stored as a separate display, and can be saved for up to seven days. The instrument saves the data in instrument memory and it can be recalled by the Recall submenu key (File > Recall).</p> <p>Reset/Restart Measurement: Resets or restarts the measurement. The RSSI trace is erased and begins anew at the right side of the display.</p> <p>Back: Returns to the “Measurements Menu” on page 3-41.</p>
---	--

Figure 3-58. IA RSSI Menu

Signal ID Menu

Key Sequence: **Measurements** > Signal ID

<div>Signal ID</div> <div>Scan Type</div> <div>All Freq</div> <div>Scan Freq</div> <div>3.550 GHz</div> <div>Continuous ●</div> <div>Monitoring</div> <div>Single Sweep and Review ○</div> <div>Trigger Sweep</div> <div>Back</div>	<p>Scan Type: The Signal ID feature in the Interference Analyzer can help to quickly identify types of the interfering signals.</p> <p>All: Identifies all frequencies within the designated span.</p> <p>Freq: Displays the signal data for the selected scan frequency in the Signal ID Results window.</p> <p>Scan Freq: Press this submenu key to enter a desired center frequency for monitoring.</p> <p>Continuous Monitoring: Press this submenu key to continuously sweep across the start and stop frequencies, entered frequency span, or scan frequency.</p> <p>Single Sweep and Review: Initially places the Signal ID feature in single sweep mode while making a single sweep for review. For subsequent individual sweeps, press the Trigger Sweep submenu key.</p> <p>Trigger Sweep: Press this submenu key to trigger another sweep when the Single Sweep and Review submenu key is activated.</p> <p>Back: Returns to the “Measurements Menu” on page 3-41.</p>
---	---

Figure 3-59. IA Signal ID Menu

Interference Mapping Menu

Key Sequence: **Measurements** > Interference Mapping

Interference Mapping	
Bearing Lines →	Bearing Lines: Opens the “ Bearing Lines Menu ” on page 3-67.
Save/Recall Points/Map →	Save/Recall Points/Map: Opens the “ Mapping Save/Recall Menu ” on page 3-68.
Direction Finding →	Direction Finding: Opens the “ Direction Finding Menu ” on page 3-69 to set up the MA2700A Handheld Interference Hunter.
Pan & Zoom →	Pan & Zoom: Opens the “ Pan & Zoom Menu ” on page 6-17.
Sound →	Sound: Opens the “ DF Sound Settings Menu ” on page 3-70 for setting the instrument’s audio.
Reset Max/Min Hold	Reset Max/Min Hold: The lower and upper limit in the graph are adjusted and updated continuously to display the highest and lowest values. Press this button to reset the Max and Min values.
Back ←	Back: Returns to the “ Measurements Menu ” on page 3-41.

Figure 3-60. IA Interference Mapping Menu

Bearing Lines Menu

Key Sequence: **Measurements** > Interference Mapping > Bearing Lines

Bearing Lines	
Save Current Bearing Location & Direction	Save Current Bearing Location & Direction: Records a bearing line on the display, starting from the instrument's current location, based on GPS. This performs the same function as the trigger on the Anritsu MA2700A Handheld Interference Hunter.
Delete Last Saved Bearing	Delete Last Saved Bearing: Press this button to delete the last bearing line from memory. The bearing line will also be removed from the map. This may be repeated to delete more than one measurement.
Delete ALL Saved Bearings	Delete All Saved Bearings: Press this button to remove all of the bearing lines from the screen and memory.
<hr/>	
Back	Back: Returns to the "Interference Mapping Menu" on page 3-66.

Figure 3-61. IA Bearing Lines Menu

Mapping Save/Recall Menu

Key Sequence: **Measurements** > Interference Mapping > Save/Recall Points/Map

Mapping Save/Recall

Save KML Points

Save Tab Delimited Points

Save JPG

Recall a Map

Recall KML Points Only

Recall KML Points With Map

Recall Default Grid

Back

Recall

Sort By

Name Date Type

Sort Order

Asc Desc

File Type

AZM

Refresh

Directories

Save KML Points: Press this button to save the KML points. FileName.kml will be stored in the selected location. From the File menu, press Save then Change Save Location to change default location.

Save Tab Delimited Points: Press this button to save the points in a tab delimited text file. FileName.mtd will be stored in the selected location.

Save JPG: Press the Save JPG key to save a .jpg file of the current screen.

Recall a Map: Opens the Recall submenu (shown at the bottom left of this page) for selecting a map to display on the screen. The default map type is .azm. Press the File Type submenu key to select a different map type to recall.

Recall KML Points Only: Opens the Recall submenu for selecting a .kml file. Displays the saved locations overlaid on the current map or the default grid.

Recall KML Points With Map: Opens the Recall submenu for selecting a .kml file. The map that was used when the points were saved will be recalled if it is available.

Recall Default Grid: If you do not have a GPS embedded map but are out in the field making measurements, the Recall Default Grid submenu allows you to save points and the corresponding GPS coordinates (or screen coordinates for indoor maps) to view at a later time. You can also load the map after acquiring points, or switch maps at any time without losing data.

Back: Returns to the [“Interference Mapping Menu”](#) on page 3-66.

Figure 3-62. IA Mapping Save/Recall Menu

Direction Finding Menu

Key Sequence: **Measurements**> Interference Mapping > Direction Finding

Direction Finding Antenna Selection: Opens the Antenna Selection submenu for selecting the directional antenna, running an external antenna self-test, and running an external compass calibration.

None: When no interference hunter is connected, the instrument automatically defaults to this setting.

MA2700 Handheld: Press this button when using the Anritsu MA2700A for interference hunting.

External Antenna Self-Test: Press to run the External Antenna Self-Test. The MA2700A Self-test dialog opens and runs various power tests, link tests, and a Serial Flash test. The test window is dismissed if you touch the screen outside the window area.

External Compass Calibration: Opens the Compass Calibration menu and the calibration display screen. Follow the onscreen instructions.

Back: Returns to the Direction Finding menu.

Antenna Bearing Offset: Adjusts the antenna bearing line in the same direction as the directional antenna.

Press the button and enter a value between -180 and 180 then select the direction of the offset by pressing either the Degrees Clockwise terminator button or the Degrees Counter-clockwise terminator button.

Note: Clockwise is from the top (0°) to the right (90°), then down (180 or -180), and then to the left (-90°), and back up to the top ↻.

This allows the user to:

- Correct for local magnetic anomalies that are not accounted for in the True North from Magnetic North correction.
- Use an antenna null, rather than the main lobe.
- Use an antenna where the main lobe doesn't point in the same direction as the MA2700A.

Antenna Preamp On Off: When set to On, the preamplifier for the MA2700A is activated and the firmware will attempt to turn on the instrument's preamp based on current instrument settings. When set to Off, the MA2700A preamp is bypassed and the instrument's preamp is turned off.

Note: The instrument preamp can be turned on and off independently of the MA2700A preamp. Refer to ["Amplitude Menu" on page 3-38](#).

Back: Returns to the ["Interference Mapping Menu" on page 3-66](#).

Figure 3-63. IA Direction Finding Menu

Pan & Zoom Menu

Key Sequence: **Measurements** > Interference Mapping > Pan & Zoom

Refer to “Pan & Zoom Menu” on page 6-17 for a description of the submenu keys.

DF Sound Settings Menu

Key Sequence: **Measurements** > Interference Mapping > Sound

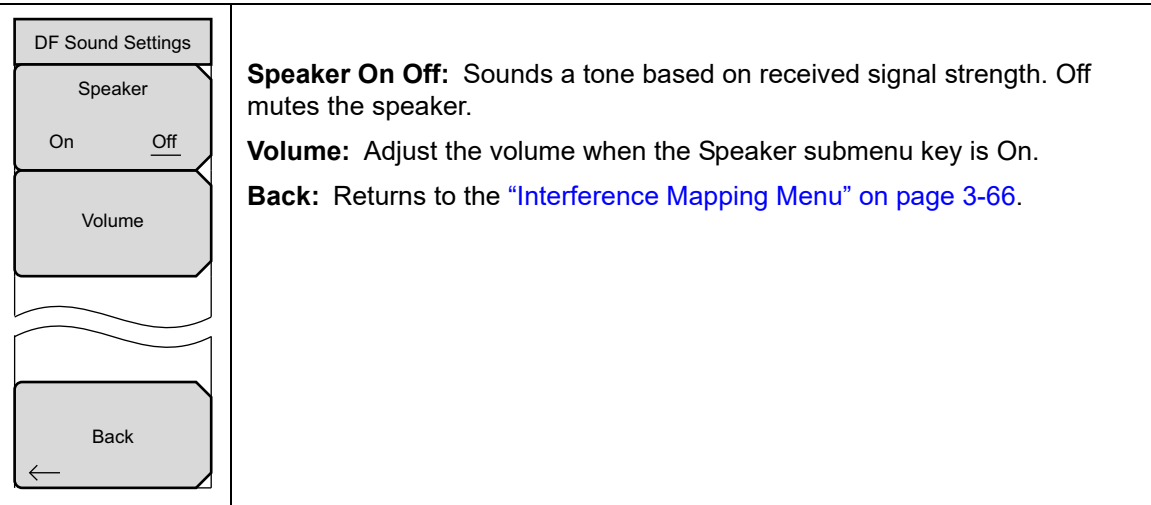


Figure 3-64. IA DF Sound Settings Menu

3-16 Marker Menu

Key Sequence: **Marker**

Press the **Marker** main menu key to open the Marker menu. The instrument is equipped with six markers. Any or all markers can be employed simultaneously.

Marker (1/2)	
Marker	
<u>1</u> 2 3 4 5 6	Marker: Selects the active marker (1 to 6). The underlined number indicates the active marker.
On	On/Off: Turns On or Off the currently active marker.
Off	
Delta	Delta On/Off: Turns On a delta marker and prompts for a delta offset frequency, either positive or negative, from the frequency of the currently active marker.
On Off	
Peak Search	Peak Search: This key places the currently active marker on the highest signal amplitude currently displayed on screen.
Marker Freq to Center	Marker Freq to Center: Moves the frequency noted by the active marker to the center frequency position and center of the display.
Marker to Ref Lvl	Marker to Ref Level: Causes the amplitude of the currently active marker to become the reference level, which is the top horizontal line of the display.
More Peak Options →	More Peak Options: Brings up a secondary menu of peak searching options. Refer to “Marker and Peak Menu” on page 3-72 .
More →	More: Opens a submenu of additional Marker options. Refer to “Marker 2/2 Menu” on page 3-73 .

Figure 3-65. IA Marker (1/2) Menu

Marker and Peak Menu

Key Sequence: **Marker** > More Peak Options

Marker & Peak	Peak Search: Places the currently active marker on the highest amplitude signal currently on screen.
Peak Search	
Next Peak	
Left	Next Peak Left: From the current position of the active marker, the instrument searches to the left (toward lower frequencies) for a peak signal that rises at least a certain amount above the average noise level. If no such peak is found, the marker is placed at the left end of the trace. The Peak Threshold key allows the user to specify the performance of peak searching.
Next Peak	
Right	Next Peak Right: From the current position of the active marker, the instrument searches to the right (toward higher frequencies) for a peak signal that rises at least a certain amount above the average noise level. If no such peak is found, the marker is placed at the right end of the trace. The Peak Threshold key allows the user to specify the performance of peak searching.
Delta Marker to Span	Delta Marker to Span: Sets the total span width to the value of the delta marker. If the delta marker is zero, the span is set to 10 Hz. If there is no delta marker, or the delta marker value is set to less than 10 Hz, then the span will be set to 10 Hz.
Marker Freq to Center	Marker Freq to Center: Sets the center frequency to the frequency of the currently active marker.
Marker to Ref Lvl	Marker to Ref Lvl: Sets the reference level, top graticule line, to the amplitude of the currently active marker.
Peak Threshold	Peak Threshold: Sets the percentage of the current display that a signal must rise before it is considered a peak. For example, 10% is one division of the ten division graticule.
10.00%	
Back	Back: Returns to the “Marker Menu” on page 3-71 .
←	

Figure 3-66. IA Marker & Peak Menu

Marker 2/2 Menu

Key Sequence: **Marker** > More

Marker (2/2)	Marker Noise On/Off: Turns the markers into noise markers with units of dBm/Hz. When this option is selected, the detection method is automatically changed to RMS and the displayed value is compensated for the noise bandwidth of resolution bandwidth filter.
Marker Noise	
On Off	
Market Table	Marker Table On/Large/Off: Causes a table to be displayed below the sweep window. The table is automatically sized to display all markers that are turned on. In addition to the marker frequency and amplitude, the table also shows delta frequencies and amplitude deltas for all markers that have deltas entered for them. If Large is selected, a large screen display opens underneath the graph that displays both frequency and amplitude for the active marker in large type.
On Large Off	
All Markers	
Off	
Counter Marker	All Markers Off: Turns off all markers.
On Off	
Set Marker to Channel	Counter Marker On/Off: Sets the frequency counter mode for the active marker. Marker frequency values are normally limited in resolution to individual display pixels. Each pixel may represent multiple frequencies. In the frequency counter mode, in the region of the counter marker, higher resolution digital signal processing is used to determine the frequency. Using Counter Marker in association with Marker to Peak will result in the frequency of the signal peak to a much higher displayed resolution. Note that frequency accuracy is affected by the RBW setting and sweep times may be longer when using counter marker because of the additional signal processing.
Marker Style	
Fixed Tracking	
Marker 1 Reference	Set Marker To Channel: If a signal standard has been selected, pressing this key brings up a dialog box to select a channel. Select a channel number for the current signal standard, and the active marker will be set to the center frequency of the channel.
On Off	
Back	Marker Style: This key changes the behavior of the reference markers. If Fixed is selected, reference markers stay at the amplitude they were at when the associated delta marker was turned on. If Tracking is selected, the amplitude of the reference marker changes as the signal amplitude is changed. Note that the reference marker tracks the amplitude, not the frequency of a signal.
←	Marker 1 Reference: Selects whether Marker 1 is the reference for all six delta markers, or whether each of the six reference markers has an associated delta marker.
	Back: Returns to the “Marker Menu” on page 3-71 .

Figure 3-67. IA Marker 2/2 Menu

3-17 Sweep Menu

Key Sequence: **Shift > Sweep (3)** key

Sweep	Sweep Single/Continuous: This submenu key toggles between continuous sweep and single sweep. In single sweep mode, the results of a sweep are displayed on the screen while the instrument awaits a trigger event to start a new sweep.
Sweep Single Continuous	Sweep Once: When Sweep is set to Single, Sweep Once triggers a single measurement sweep. This key has no function when the instrument is in continuous sweep mode.
Sweep Once	Sweep # Averages: Sweeps the number of times set using the # of Averages button under the Trace A Ops menu. Trace A must be set to Averaging (Shift > Trace (5) key > Trace A Operations > Average->Trace A) for this menu to function. Each trace is displayed using the exponential average of each sweep.
Sweep 10 Averages	Sweep Mode: Pressing this submenu key opens the “Sweep Mode Menu” on page 3-75. The key is not valid in Zero Span.
Sweep Mode →	Sweep Time: Sets the sweep time for the measurement. This submenu key is replaced by a Zero Span Time submenu key when the analyzer is set to Zero Span. Refer to “Sweep Limitations” on page 2-9 for more information.
Sweep Time 100 ms	Auto Sweep Time: When Off, the measurement sweeps the time set in Sweep Time. When On, the instrument calculates a minimum sweep time and uses it for all subsequent sweeps.
Auto Sweep Time On Off	Triggering: Available in Zero Span only. Displays the “Triggering Menu” on page 3-76.
Triggering →	Gated Sweep Setup: Gated Sweep requires: Option 90, or Option 551 or 883 on model MS2712E/13E or MT8212E/13E
Gated Sweep Setup →	Press the Gated Sweep Setup key to open the “Gate Setup Menu” on page 3-78. Note that gated sweep is valid only in IA Spectrum (and Spectrum Analyzer) measurement mode.

Figure 3-68. IA Sweep Menu

Sweep Mode Menu

Key Sequence: **Shift** > **Sweep (3)** key > Sweep Mode

Sweep Mode is not applicable in Zero Span.

Sweep Mode

Fast

Performance

No FFT

Burst Detect

Show Help

Back

Fast: Fastest sweep speed (up to 100 times faster than Performance).

Performance: Provides best amplitude accuracy and ensures all specifications are met.

No FFT: Slowest sweep speed. Suited for analog and pulse modulated signals.

Burst Detect: Press to view narrow pulsed signals. This function is available on MS2720T and MT8220T models only.

Show Help: Displays a table showing the merits and trade-offs of the Sweep Mode settings.

Back: Returns to the [“Sweep Menu” on page 3-74](#).

Figure 3-69. IA Sweep Mode Menu

Triggering Menu

Key Sequence: **Shift > Sweep (3) key > Triggering**

This menu is available only in Zero Span.

Triggering

Source

→

Delay

-1.0 %

Level

10.0 dBm

Slope

Rising Falling

Hysteresis

1.0 dB

Holdoff

0 ns

Force Trigger Once

Back

←

Source: Displays the [“Trigger Source Menu” on page 3-77](#).

Delay XX %: Used when External or Video is selected in the Trigger Source menu. Measurement begins after set time delay once the trigger has occurred.

Use the numeric keypad, rotary knob, or arrow keys to change the delay value. When using the numeric keypad, the Units menu is displayed. Press the appropriate key to enter the trigger delay value as a percentage of the sweep time or a fixed value in units of ns, μ s or ms.

A negative delay displays the trigger position on screen, while a positive value places the trigger point off the screen to the left.

Level: Sets a trigger level to initiate a measurement when Video or IF Power is selected in the [“Trigger Source Menu” on page 3-77](#). Press this key, then use the rotary knob, arrow keys, or numeric keypad to enter the trigger power level. The value ranges from –150 dBm to +30 dBm.

Slope: Sets the trigger slope to rising or falling.

Hysteresis: When used, value unit is in dB. Hysteresis can be used with Level and Slope when setting a measurement trigger. Hysteresis is used to prevent undesired triggering when the signal is hovering near the trigger value. For example, the Level is set to 10 dBm, the Slope is set to Rising, and Hysteresis is 1 dB. The first trigger occurs when the signal at least reaches the 10 dBm level. To trigger again, the signal must drop below 9 dBm before returning to 10 dBm. For another example, with Level set to 10 dBm and slope set to Falling, and Hysteresis set to 1 dB, the opposite must occur to activate a trigger. The signal amplitude falls and a trigger occurs when the signal reaches the 10 dBm level. The signal must then reach at least 11 dBm before falling to 10 dBm and initiating a trigger.

Holdoff: Delays the next trigger to the time set regardless of triggers occurring within the set time.

Force Trigger Once: Forces a sweep regardless of meeting any trigger criteria.

Back: Returns to the [“Sweep Menu” on page 3-74](#).

Figure 3-70. IA Triggering Menu

Trigger Source Menu

Key Sequence: **Shift** > **Sweep (3)** key > Triggering > Source

<div>Trigger Source</div> <div>Free <input type="radio"/></div> <div>Run</div> <div>External (TTL) <input type="radio"/></div> <div>Video <input checked="" type="radio"/></div> <div>IF Power <input type="radio"/></div> <div></div> <div></div> <div>Back </div>	<p>Free Run: In this mode, a new sweep is started immediately upon completion of an old sweep. No trigger event is required to initiate a sweep.</p> <p>External (TTL): A TTL signal applied to the External Trigger BNC input connector causes a single sweep. After the sweep is complete, the resultant trace is displayed until the next trigger signal is received.</p> <p>Video: This mode uses Video power as the trigger source. The trigger level is set using the Level key in the “Triggering Menu”. The trigger is based on the measured signal level. If no signal reaches or exceeds the trigger level, no trace will be displayed on the screen.</p> <p>IF Power (MS2720T Only): This mode uses IF power level as the trigger source. The power level is set using the Level key in the “Triggering Menu”. The trigger is based on the measured signal level. If no signal reaches or exceeds the trigger level, no trace will be displayed on the screen.</p> <p>Back: Returns to the “Triggering Menu” on page 3-76.</p>
---	--

Figure 3-71. IA Triggering Source Menu

Gate Setup Menu

Key Sequence: **Shift** > **Sweep (3)** key > Gated Sweep Setup

Gate Setup	Gated Sweep: Turns the Gated Sweep function On and Off. Gated Sweep is not allowed in Zero Span mode. Refer to “Gated Sweep (Option 90)” on page 2-7 .
Gated Sweep	
Off On	Gate Source: Selects the trigger source for the gated sweep.
Gate Source	External: This setting designates the trigger source as an external signal that is input via the instrument's Ext Trigger In connector.
External	GPS (TD-LTE): The GPS trigger source is valid only on instrument models with 20 MHz IF Bandwidth available: Cell Master MT8212E/13E Spectrum Master MS2712E/13E
Gate Polarity	Additionally, these instruments must be loaded with firmware V1.60 or later, and have these options installed: Option 31 (GPS), and either of Option 551 (TD-LTE/LTE-A RF Measurements), or Option 883 (LTE/LTE-A FDD/TDD Measurements)
Rising Falling	When GPS (TD-LTE) is selected, the gated sweep time is 10 ms.
Gate Delay	IF Pwr: This trigger type is available on model MS2720T only. When choosing IF power as the trigger source, press the IF Trig Level key (not shown) and use the rotary knob, arrow keys, or numeric keypad to enter the trigger power level. The value ranges from -150 dBm to +30 dBm.
2 ms	
Gate Length	
500 μ s	
Gate View	
Settings →	
Back	
←	
Gate View Settings	
Zero Span RBW	
100 kHz	
Zero Span VBW	
30 kHz	
Zero Span Time	
500 ms	
Back	
←	

Figure 3-72. IA Gated Sweep Menu

3-18 Trace Menu

Key Sequence: **Shift > Trace (5)** key

The instrument is capable of displaying up to three traces, one with live data, and the other two either with stored data or trace math data.

Note

This menu is active only when making Spectrum measurements. The key sequence is not operational when Spectrogram, Signal Strength, RSSI, Signal ID, or Interference Mapping measurements are active.

Trace	<p>Trace A, B, C: Sets trace A, B, or C as the active trace. Repeatedly pressing this key toggles through trace A, B, and C. The active trace is underlined.</p> <p>View/Blank: Displays or hides the active trace.</p> <p>Write/Hold: Selects between holding the current swept trace on the screen or continually sweeping and updating the displayed measurement. This is not applicable to Trace B or Trace C unless trace math involving Trace A is active.</p> <p>Trace A Operations: Lists the Trace A Ops menu to select an operation that can be applied to Trace A. See “Trace A Ops Menu” on page 3-80.</p> <p>Trace B Operations: Lists the Trace B Ops menu to select an operation that can be applied to Trace B. See “Trace B Ops Menu” on page 3-81.</p> <p>Trace C Operations: Lists the Trace C Ops menu to select an operation that can be applied to Trace C. See “Trace C Ops Menu” on page 3-82.</p> <p>Reset Trace: Resets the trace averaging, Max Hold and Min Hold, and restarts the sweep.</p> <p>Trace Info: Stops the current trace and displays a summary table of trace parameters and current settings. Press Enter to clear the table from the display and restart the trace.</p>
Trace	
<u>A</u> B C	
<u>View</u>	
Blank	
<u>Write</u>	
Hold	
Trace A	
Operations →	
Trace B	
Operations →	
Trace C	
Operations →	
Reset	
Trace	
Trace Info →	

Figure 3-73. IA Trace Menu

Trace A Ops Menu

Key Sequence: **Shift > Trace (5) key > Trace A Operations**

Trace A Ops	
Normal -> A	Normal -> A: Displays data for the current trace sweep.
Max Hold -> A	Max Hold -> A: Shows the cumulative maximum value of each display point over many trace sweeps.
Min Hold -> A	Min Hold -> A: Shows the cumulative minimum value of each display point over many trace sweeps.
Average -> A	Average -> A: Shows an exponential average of a number of traces, determined by the # of Averages key.
# of Averages 10	# of Averages: Sets the number of traces for use in calculating the average display value. Then number used for averaging ranges from 1 to 65535.
<hr/>	
Back	Back: Returns to the "Trace Menu" on page 3-79 .

Figure 3-74. IA Trace A Ops Menu

Trace B Ops Menu

Key Sequence: **Shift** > **Trace (5)** key > Trace B Operations

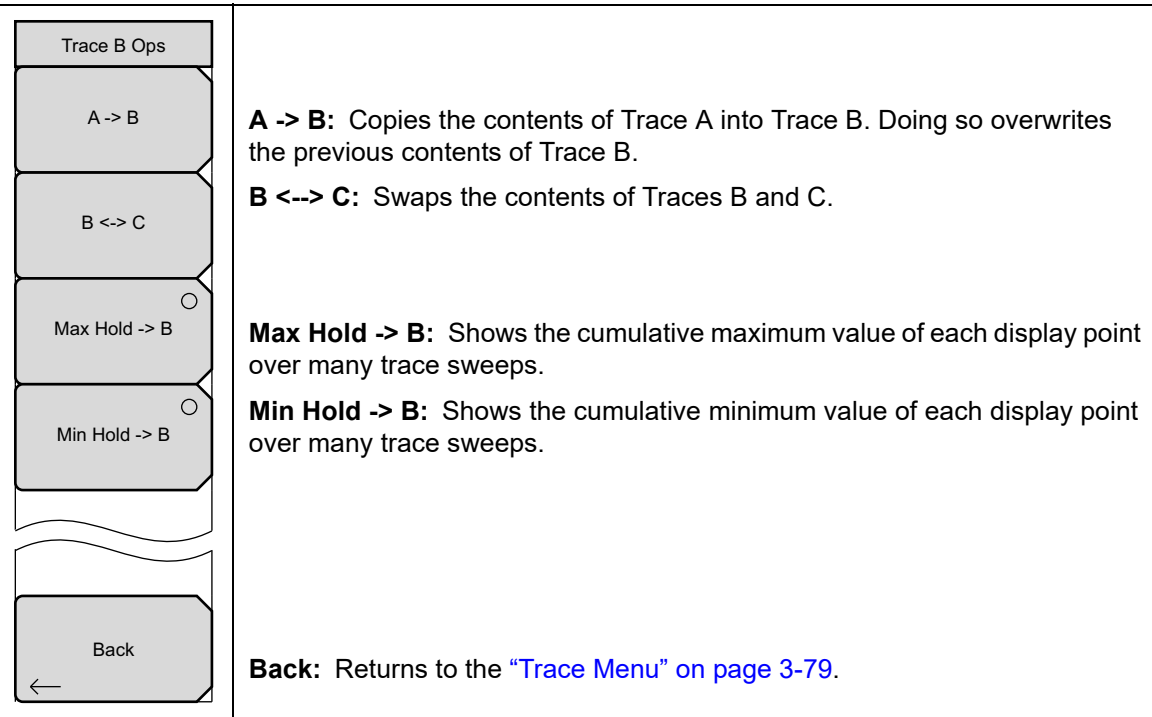


Figure 3-75. IA Trace B Ops Menu

Trace C Ops Menu

Key Sequence: **Shift** > **Trace (5)** key > Trace C Operations

Trace C Ops	A -> C: Copies the contents of Trace A into Trace C. Doing so overwrites the previous contents of Trace C.
A -> C	B <--> C: Swaps the contents of Traces B and C.
B <-> C	Max Hold -> C: Shows the cumulative maximum value of each display point over many trace sweeps.
Max Hold -> C	Min Hold -> C: Shows the cumulative minimum value of each display point over many trace sweeps.
Min Hold -> C	A - B -> C: Subtracts the value of trace B from trace A and places the results in Trace C. This function is very useful for observing the changes in values of live Trace A compared to a trace stored in Trace B.
A-B -> C	When trace math is active, a relative scale shows on the right side of the graph, and is associated to Trace C. This allows the user to optimize the display of Trace C without affecting the display of Traces A and B.
B-A -> C	B - A -> C: Subtracts the value of Trace A from Trace B and places the results in Trace C. This function is very useful for observing the changes in values of live Trace A compared to a trace stored in Trace B. When trace math is active, a relative scale shows on the right side of the graph, and is associated to Trace C. This allows the user to optimize the display of Trace C without affecting the display of Traces A and B.
Relative Ref	Relative Ref: Sets the value applied to the top graticule for the relative scale that appears on the right side of the graph when trace math is active. Change this value by using the rotary knob, up or down arrows, or entering the value on the numeric keypad and pressing the dB submenu key or the Enter key. This entry is valid only when trace math is active
10.0 dB	
Relative Scale	Relative Scale: Sets the value applied to the scaling of the relative scale that appears on the right side of the graph when trace math is active. Change this value by using the rotary knob, up or down arrows, or entering the value on the numeric keypad and pressing the dB submenu key or the Enter key. This entry is valid only when trace math is active.
10 dB/div	
	To return to the Trace Menu press the Shift key and then the Trace (5) or press the Back key.

Figure 3-76. IA Trace C Ops Menu

3-19 Limit Menu

Key Sequence: **Shift > Limit (6)** key

Two types of limit lines can be specified, lower limit lines and upper limit lines. Limit lines can be used for visual reference only, or for pass/fail criteria using the limit alarm (Figure 3-77). Limit alarm failures are reported whenever a signal is above the upper limit line or below the lower limit line. By using save-on-event, a signal that causes a limit alarm can be automatically saved. Refer to your User Guide for details.

Each limit line can consist of a single segment, or as many as 40 segments. These limit segments are retained regardless of the current frequency span of the instrument, which allows the configuring of specific limit envelopes at various frequencies of interest without having to re-configure them each time the frequency is changed.

Note

This menu is active only when making Spectrum measurements. The key sequence is not operational when Spectrogram, Signal Strength, RSSI, Signal ID, or Interference Mapping measurements are active.

Limit	Limit: This submenu key selects limit line (Upper or Lower) will be active for editing. The limit line that is currently selected for editing is underlined.
Limit	On/Off: This submenu key turns the active limit (upper or lower) on or off.
Upper Lower	Limit Edit: This submenu key displays the “[Limit] Edit Menu” on page 3-85 that allows creating or editing of single or multi-segment limit lines. The currently active limit point is marked by a red circle on the display.
On	Limit Move: Display the “Limit Move Menu” on page 3-87.
Off	Limit Envelope: A limit envelope is very useful when you want to easily detect new signals in the presence of other preexisting signals. Use the limit envelope function to automatically create upper or lower limit lines that are based upon the on-screen measured spectrum analysis values. Refer to Figure 3-82 for an example limit envelope. Press this submenu key to open the “Limit Envelope Menu” on page 3-88.
Limit Edit →	Limit Advanced: Press this submenu key to open the Limit Advanced submenu key menu. The advanced limit line section offers several useful functions. In this section, you can create either an absolute limit line (which is one based upon the frequencies that are entered for each inflection point) or a relative limit line (which is based upon the delta frequencies between the center frequency and the inflection points). Both types of limit lines can be saved and recalled. Press this submenu key to open the “Limit Advanced Menu” on page 3-90.
Limit Move →	Limit Alarm On/Off: Pressing this submenu key toggles the alarm function ON and OFF for the currently active limit line. When ON, an alarm beep will occur when a data point exceeds the limit.
Limit Envelope →	Set Default Limit: Pressing this submenu key deletes all limit points for the currently active limit line and sets the default limit line value, which is a single limit whose position is 2.5 grid lines from the top of the screen (for the upper limit line) or 2.5 grid lines from the bottom of the screen (for the lower limit line), depending upon which limit is active. The inactive limit line is not altered.
Limit Advanced →	
Limit Alarm On Off	
Set Default Limit	

Figure 3-77. IA Limit Menu

[Limit] Edit Menu

Key Sequence: **Shift** > **Limit (6)** key > Limit Edit

Edit	Frequency: Press this submenu key to set the frequency of a limit line inflection point. The frequency of each inflection point in a limit line can be individually set. When a new point is added, it takes on a value halfway between two existing points, or it takes on the stop frequency of the current sweep if no point is higher in frequency than the one being added. See the Add Point submenu key description for more details. Use the keypad, the left or right arrow keys, or the rotary knob to change the frequency of an inflection point. The left or right arrows move the inflection point by 5% of the span.
Frequency 1.964 718 182 GHz	
Amplitude -75.0 dBm	
Add Point	Amplitude: Press this submenu key to set the amplitude of a limit line inflection point. The amplitude of each inflection point can also be individually set. By default, when a new point is added, it takes on the amplitude that is on the limit line at the frequency where the point was added. Use the keypad (using the ± key to set a negative value), the up or down arrow keys, or the rotary knob to move the point to the desired value. The unit of the amplitude limit is the same as the current vertical amplitude unit. See the Add Point submenu key description for details. The up or down arrows move the amplitude by 5% of the screen height.
Add Vertical	
Delete Point	Add Point: Press this submenu key to add a limit line inflection point. The precise behavior of this submenu key depends upon which inflection point is active at the time that the key is pressed. If the active limit point is somewhere in the middle of a multi-segment limit line, then a new limit point is added that is halfway between the currently active point and the point immediately to its right. The amplitude of the inflection point will be such that it falls on the limit line. For example, if a limit point exists at 2.0 GHz with an amplitude of -30 dBm, and if the next point is 3.0 GHz with an amplitude of -50 dBm, then the added point will be at 2.5 GHz with an amplitude of -40 dBm. The frequency and amplitude values of the new point can be adjusted as needed with the Frequency and Amplitude submenu keys.
Next Point Left	
Next Point Right	
Back ←	If the last limit point is active (assuming it is not at the right edge of the display), then the new limit point will be placed at the right edge of the display at the same amplitude as the point immediately to its left. Points may not be added beyond the current sweep limits of the instrument.

Figure 3-78. IA Limit Edit Menu (Part 1 of 2)

[Limit] Edit Menu (Continued)

Edit	Add Vertical: In many measurement masks, step changes occur in the value of the limit line. Press this submenu key to add two inflection points. The two inflection points share the same frequency and are centered midpoint between adjacent measured points. The magnitudes of the points are set by using a visually intuitive algorithm that is based upon the adjacent inflection points.
Frequency 1.964 718 182 GHz	
Amplitude -75.0 dBm	You can adjust the magnitudes independently, but the frequencies of the two points remain linked and are adjusted as a vertical pair. Setting a discrete frequency, a limit inflection point will keep that exact frequency and place the limit point appropriately regardless of the frequency span. This is especially useful for emission mask verification.
Add Point	
Add Vertical	Delete Point: Press this submenu key to delete the currently active point. The active point becomes the point that is immediately to the left of the point that was deleted.
Delete Point	Next Point Left: Press this submenu key to select the inflection point that is immediately to the left of the active point, making this newly selected point active for editing or deletion. With each key press, the active point becomes that point to the left of the previously active point, until the newly selected active point becomes the left-most point on the screen.
Next Point Left	
Next Point Right	Next Point Right: Press this submenu key to select the limit point immediately to the right of the active point, making this newly selected point active for editing or deletion. With each key press, the active point becomes that point to the right of the previously active point, until the newly selected active point becomes the right-most point on the screen.
Back ←	Back: Press this submenu key to return to the “Limit Menu” on page 3-83 .

Figure 3-79. IA Limit Edit Menu (Part 2 of 2)

Limit Move Menu

Key Sequence: **Shift** > **Limit (6)** key > Limit Move

Limit Move

Move Limit
to Current
Center Freq

Move Limit
U/D
0.0 dB

Move Limit
L/R
0 Hz

Move Limit
to Marker 1

Offset from Marker 1
10.0 dB

Back

Move Limit to Current Center Freq: Pressing this submenu key moves the center of the existing limit line to the center frequency of the measurement. The span of the existing limit line is not changed by doing this. Use this submenu key as an easy way to get an existing limit line on screen. If no limit line is turned on, then a new, flat default limit line is turned on and is located 2.5 grid lines from the top of the screen for the upper limit line or 2.5 grid lines from the bottom of the screen for the lower limit line.

Move Limit ## dB: If the limit line is flat, then use this submenu key to move the limit line to an absolute power point in dBm. If the limit line is not flat, then use this submenu key to move the limit line up or down by the selected number of dB. Use the keyboard to enter the desired value. The entire line moves by the amount that is entered. The limit line can also be moved by using the rotary knob. Turn the rotary knob clockwise to move the line to higher power levels. The up and down arrows move the limit line by 5% of the screen height. The left and right arrows move the limit line by 0.2% of the screen height or 0.2 dB when the scale is set to 10 dB/division.

Move Limit ## Hz: Pressing this submenu key allows you to adjust the frequencies of the limit line. All inflection points are moved by the value entered. The rotary knob can also be used to make this adjustment. Turn the rotary knob clockwise to move the limit line to higher frequencies. The left or right arrows move the limit line by 5% of the span while the up or down arrows move the line by one display pixel.

Move Limit to Marker 1: Press this submenu key to move the frequency and amplitude of the center frequency of the limit line to the frequency and amplitude of Marker 1 (assuming that the Offset from Marker 1 submenu key is set to 0 dB).

Offset from Marker 1 ## dB: Press this submenu key to set a limit line offset value from Marker 1 amplitude. This feature moves the limit line amplitude and frequency as needed to place the center of the limit line the user-specified number of dB from the position of Marker 1. Positive values place the limit line above Marker 1, and negative values place the limit line below Marker 1.

Back: Press this submenu key to return to the [“Limit Menu” on page 3-83](#).

Figure 3-80. IA Limit Move Menu

Limit Envelope Menu

Key Sequence: **Shift > Limit (6) key > Limit Envelope**

Limit Envelope

Create Envelope

Update
Envelope Amplitude

Upper Points
21

Upper Offset
3.0 dB

Upper Shape
Square Slope

Back

Create Envelope: Press this submenu key to generate the envelope using the Limit Envelope characteristics. If the default results are not satisfactory, then you can make adjustments to the amplitude and frequency of each inflection point, and you can add or delete inflection points.

Update Envelope Amplitude: While working on your envelope (or if your signal amplitude changes), you may want to adjust the amplitude of the current limit without changing the frequencies of the inflection points. Pressing this submenu key makes those amplitude adjustments without frequency adjustments.

Upper Points (if Upper Limit is selected)
Lower Points (if Lower Limit is selected): Use this submenu key to define how many inflection points you want for the selected upper or lower limit envelopes. The value can be between 2 and 41, but must be an even number when a Square Upper Shape is selected (below). Note that the upper and lower limit lines do not need to have the same number of points.

Upper Offset (if Limit is toggled to Upper)
Lower Offset (if Limit is toggled to Lower): This submenu key is used to define how far away from the measured signal the upper or lower envelope will be placed. The limits are ±100 dB. For an upper envelope, usually the value will be positive in order to place the envelope above the signal. For a lower envelope, the value will usually be negative in order to place the envelope below the signal.

Upper Shape (if Limit is toggled to Upper)
Lower Shape (if Limit is toggled to Lower): Press this submenu key to choose whether the default for the upper or lower envelope will be with flat tops (Square setting) and reasonably vertical lines to change level or whether the envelope will have sloped lines (Slope setting) between adjacent inflection points. When the square envelope type is selected, two inflection points are used for each horizontal segment. You can toggle between a square envelope and a sloped envelope by pressing this submenu key. [Figure 3-82](#) is an example of a Square Limit Envelope.

Back: Press this submenu key to return to the [“Limit Menu” on page 3-83](#).

Figure 3-81. IA Limit Envelope Menu

Square Limit Envelope Example



Figure 3-82. Square Limit Envelope

Sloped Limit Envelope Example

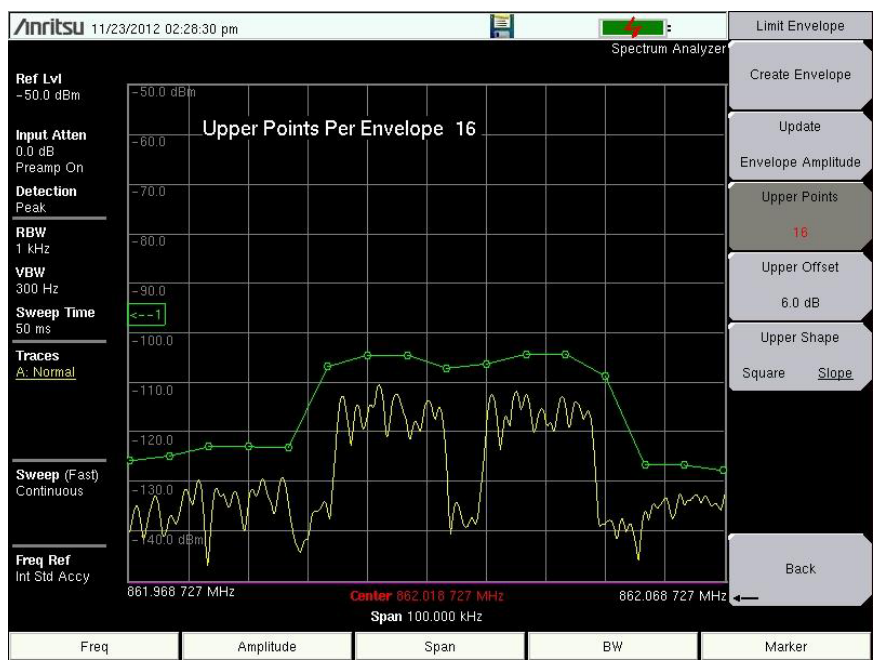


Figure 3-83. Sloped Limit Envelope

Limit Advanced Menu

Key Sequence: **Shift > Limit (6) key > Limit Advanced**

Limit Advanced

Limit Line Type

Absolute Relative

Limit Mirror

Off On

Save

Limit

Recall

Limit

Back

Limit Line Type: Press this submenu key to choose to have either limit line be absolute or be relative. This submenu key may be used at any time while working with limit lines. Absolute limit lines set the limit inflection points based upon the entered frequencies for each point. Relative limit lines set the limit inflection points relative to the current center frequency. Regardless of how a limit line is set up, saved, or recalled, it can be changed between absolute and relative by toggling with this submenu key.

Limit Mirror On/Off: Press this submenu key to turn the Limit Mirror feature On and Off.

Many emission masks are symmetrical. The low frequency side is identical to the upper side. The Limit Mirror feature allows you to create half of the limit line and get the other half built automatically. This feature can work in either of two ways:

Turn Limit Mirror on before beginning to build a limit line. As you add a point on either side of the center frequency, another point is automatically added on the opposite side of the center frequency.

Leave Limit Mirror off until half of the limit line is built, then turn On Limit Mirror. The other half of the limit line is built automatically.

Save Limit: Pressing this submenu key opens a dialog to save the current upper and lower limit lines. You can name the saved limit line yourself or accept the name that is suggested by the instrument (which is based upon a previously saved name). If you did not intend to save the limit line, then press Esc to stop the dialog and avoid saving the limit line.

Recall Limit: Pressing this submenu key opens a dialog box to recall a saved limit line. The dialog box presents a list of saved limit lines. Highlight the desired limit line and press **Enter**. If you decide not to recall a limit line, then press Esc to stop the dialog.

If the saved limit is a relative limit, then it is recalled centered about the current center frequency. If the saved limit is an absolute limit, then it is recalled to the frequency at which it was created.

If you recall an absolute limit, and if it is off screen, then you will see the left or right limit off-screen indicator on the edge of the screen.

Back: Press this submenu key to return to the [“Limit Menu” on page 3-83](#).

Figure 3-84. IA Limit Advanced Menu

3-20 Application Options

Key Sequence: **Shift** > **System** (8) key > Application Options

<div>Options</div> <div>Impedance</div> <div>50 Ohm 75 Ohm Other</div> <div>Bias Tee</div> <div>Auto Ref Level</div> <div>Back</div>	<p>Impedance 50 ohm 75 ohm Other: Select either 50 ohm, 75 ohm, or Other impedance value. Selecting 75 ohm selects the 7.5 dB loss of the Anritsu 12N50-75B adapter. For other adapters, select Other and enter the appropriate loss.</p> <p>Bias Tee: See the product Technical Data Sheet to check option availability on your instrument model.</p> <p>Auto Ref Level: The Auto Ref Level function adjusts the position of a signal on the display screen so that it is approximately two divisions down from the top, if possible. When the key is pressed, the reference level is adjusted once. Auto Ref Level may turn off the low-noise front-end preamplifier, but does not turn it on. It has no effect on vertical scaling.</p> <p>Back: Press this submenu key to return to the previous menu.</p>
--	--

Figure 3-85. IA Application Options

3-21 Other Menus

Preset, **File**, **Mode**, and **System** menus are described in the instrument User Guide.

Chapter 4 — Channel Scanner (Option 27)

4-1 Introduction

This chapter presents Channel Scanner information and procedures. The Channel Scanner option (Option 27) measures the signal power of multiple transmitted signals. The power can be displayed as either a bar graph or a text display showing the channel power of selected channels for a given air interface standard, or the manually entered channels. Up to 20 channels can be measured.

The operating frequency range for Channel Scanner mode can either be set manually, or the desired air interface standard can be selected from the Signal Standard and channel list in the instrument. When the channels are selected from the Signal Standard list, all frequency related parameters for the standard are automatically set to the appropriate values. The frequency and bandwidth settings can be manually entered using the Scan Frequencies selection if none of the available air interface standards meet the measurement need. A custom channel list can also be created to allow up to 20 independent channels to be defined.

With the use of Master Software Tools, Script Master extends the test capabilities of channel scanner testing of the instrument. Features include the use of a Script Master Test Setup File to set test parameters, extending the number of channel scans to 1200, repetitive testing, and time testing.

Note

Set the instrument to Channel Scanner mode for all the measurements described in this chapter. Refer to [“Product Information, Compliance, and Safety”](#) on page 1-1.

4-2 General Measurement Setups

Refer to your instrument User Guide for instructions on setting up frequency, span, amplitude, GPS, limit lines, markers, and file management.

4-3 Sample Procedure

The power can be scanned using a signal standard and channel numbers, or by entering a start frequency, frequency step size, and bandwidth. The channels can be customized using the Scan Custom List or Custom Setup.

The following procedure demonstrates a common channel scanner setup.

1. Press the **Scanner** main menu key to activate the Scanner menu.
2. Press the Scan Channels submenu key.
3. Press the Signal Standard submenu key, then select the CDMA US PCS signal standard.
4. Press the Number of Channels submenu key and enter 20.
5. Press the **Amplitude** main menu key and set the Reference Level and Scale so that the power of all the channels is displayed on the screen.
6. Press the **Measurements** main menu key to activate the Measurement menu.
7. If needed, press the Display submenu key to select the Graph format.
8. Press the Max Hold submenu key and select On or 5 sec.
9. If needed, press the Channel Units submenu key to select the Channel setting.
10. Press the Power Display submenu key and choose Max to display the maximum measured power for each channel.
11. Press the Color Code submenu key and select Dual to display the measurements in dual colors.

4-4 Custom Setup Measurements

Procedure

1. Press the **Custom Scan** main menu key.
2. Press the **Number of Channels** submenu key to define how many channels to include in the custom list. This choice can be changed later if needed.
3. Press the **Edit List** submenu key to bring up the list of channels. The channel highlighted in blue is the channel active for editing. Use the up or down arrows to select the channel to edit. Each channel can be set up differently.
4. Press either the **Select Signal Standard** submenu key or the **Set Freq** submenu key. If the **Select Signal Standard** submenu key was pressed, select the desired air interface standard from the dialog box. When a standard is selected, the usual bandwidth for that standard is automatically set. The bandwidth can be changed if desired.
5. Press the **Set Channel** submenu key to enter the desired channel number. If the **Set Freq** submenu key was pressed, the frequency value of the active channel will be highlighted. Use the rotary knob or the numeric key pad to enter the desired center frequency in Hz, kHz, MHz, or GHz.
6. Press the **Set Bandwidth** submenu key and use the rotary knob or numeric keypad to enter the desired value in Hz, kHz, MHz, or GHz.
7. Press the **Done Editing** submenu key.
8. Repeat steps 3 through 7 to continue editing additional channels.

4-5 Custom Setup Example

This example explains how to monitor several signals, plus a potential intermodulation product, to see if there is a correlation between the nearby signals and an intermittent interference problem.

The signals on or near the rooftop are:

- An FM broadcast station at 106.5 MHz
- A paging transmitter at 157.86 MHz
- Three cellular sites:
 - US CDMA PCS channel 50 (1932.5 MHz)
 - LTE Band 13 DL channel 5230 (751 MHz)
 - GSM 1800 channel 512 (1805.2 MHz)
- A Ham repeater at 147.36 MHz
- A Ham repeater at 446.5 MHz
- A land mobile repeater at 451.7875 MHz
- A public safety repeater at 485.5625 MHz
- In addition, the site is near the flight path of an airport. The approach frequency is 121.4 MHz.

Set up a measurement channel for each of the signals to be observed plus extra channels for any intermodulation products to be observed.

After the channels are set up, press **Shift | File | Save** then press the Change Type submenu key and select **Setup** from the list by using either the up or down arrow keys or the rotary knob, then press **Enter**. Name the setup for easy recall later and press **Enter**.

4-6 Script Master Measurement Setup

The Script Measurement function (**Scanner | Scan Scriptmaster**) allows the user to increase the number of channels to scan from 20 channels to 1,200 channels. Channel scanning is done in groups of 20. So if the maximum number of channels were set, then there would be 60 sets of 20 channels.

The Channel Scanner Script Master allows the user to automatically repeat scanning of all channels multiple times. You may choose to repeat the scan for a specified number of cycles, or choose a time duration until which the scan is repeated or ended. Please refer to Script Master Editor in Master Software Tools for creating and uploading Script Files to the instrument.

Press the **Repeat Scan Type** submenu key to set either the number of scans or period of time as the mode of testing. If **# Scans** is selected, use the **# of Repeat** submenu key to set the number of repetitions for testing the full list of channels in the Script Master Test file. The maximum number of repetitions is 1000. If **Time** is selected, use the **Scan Duration** submenu key to setup a test period for testing the channels in the Script Master Test File.

If testing the number of channels in the Script Master Test File is shorter than the Scan Duration, testing those channels will repeat. If testing the number of channels in the Script Master Test File is longer than the Scan Duration, scanning ends and the rest of the channels are not tested. Units for Scan Duration is days, hours, minutes, and seconds, with a maximum scan time of three days and a minimum scan time of ten minutes.

The sets of channels in the Script Master Test File can also be tested repeatedly. Use the **# of Repeats (Set)** submenu key to set this parameter. For example, if 5 were entered, then each set of 20 channels, would be tested five times before the next set of channels are tested.

The **# of Repeats (Set)** feature can be used in combination with **# of Repeats (List)** feature. For example, the Script Master Test File contains 100 channels, that is 5 sets of 20 channels. **# of Repeats (Set)** is set to 3 and **# of Repeats (List)** is set to 5. Pressing the **Start/Restart Test** button starts test on the first 20 channels for 3 iterations, then testing moves to the 2nd set of channels for 3 iterations and continues on till the 5th set is tested for 3 iterations. Then the list of 100 channels are tested again with each set of channels being tested 3 times. Testing is ended when five cycles of testing on 100 channels completed.

Procedure

1. Press the **Scanner** main menu key.
2. Press the **Script Master** submenu key. If no script file is currently in use, the **Select Script Master Scan Setup File** dialog will open. Select from that dialog list the desired script file. If a script file is in use or has been loaded, pressing the **Script Master** submenu key will list the **Scan Script Master** submenu.
3. Press the **Select Test** submenu key to enter a new or change the current Script Master Scan Setup file. The **Select Script Master Scan Setup File** dialog opens. Select the desired measurement script file. Once a new file is selected, the channels are loaded, along with any other scan parameters defined in the file. To over ride these parameters, follow steps 4 through 6, otherwise continue to step 7.

4. Press the Repeat Scan Type to select the desired scan mode # Scans, go to step 4a, to select Time, go to step 4b.
 - a. If # Scans is selected, press # of Repeats (List) to set the desired repetition of test cycles of the Script Master Test File. Select the # of Repeats (List) define how many channels to include in the custom list. This choice can be changed later if needed.
 - b. If Time is selected, press Scan Duration to set the desired testing period. Time on the submenu key turns red for editing. Pressing a number on the numeric keypad lists the Time menu. Press the appropriate time unit.
5. If repeated set testing is desired, press the # of Repeats (Sets) submenu key and enter the desired number of test cycles.
6. Press the Record to the On position to store test measurements.
7. Press the Start/Restart Test submenu key to begin testing.

4-7 Channel Scanner Menu Map

Figure 4-1 shows a map of the Channel Scanner menus. The following sections describe Channel Scanner main menus and associated submenus. The submenus are listed in the order they appear on the display from top to bottom under each main menu. Menu maps typically display all possible submenu keys, although some keys are displayed on the instruments only under special circumstances (refer to menu descriptions).

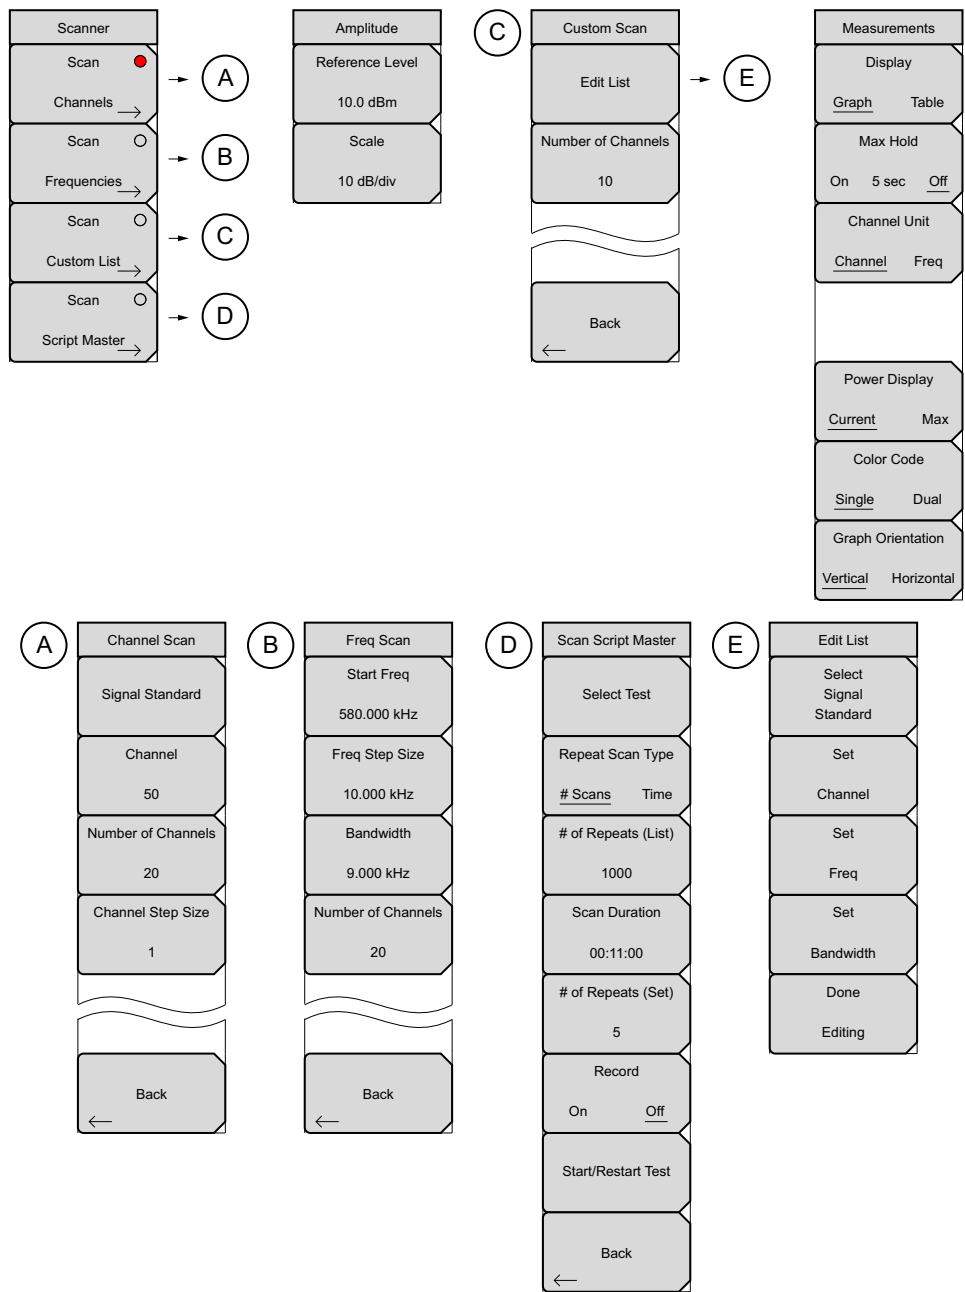


Figure 4-1. Channel Scanner Main Menu Keys

4-8 Scanner Menu

Key Sequence: **Scanner**

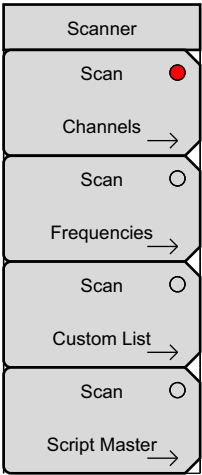
	<p>Scan Channels: Opens the “Channel Scan Menu” on page 4-7.</p> <p>Scan Frequencies: Opens the “Freq Scan Menu” on page 4-8.</p> <p>Scan Custom List Frequencies: Opens the “Custom Scan Menu” on page 4-11.</p> <p>Scan Script Master: If no script list is currently in use, the Select Script Master Scan Setup File dialog opens to select a script file for measurement use. Select a file and press Enter. The Scan Script Master menu is listed.</p> <p>If a script file has been selected or in use, then the “Scan Script Master Menu” on page 4-9 is listed. The submenu keys allow you to import a new file or change any parameter set in the Script Master file created in Master Software Tools.</p>
---	--

Figure 4-2. Channel Scanner Scanner Menu

Channel Scan Menu

Key Sequence: **Scanner** > Scan Channels > Scan Channels

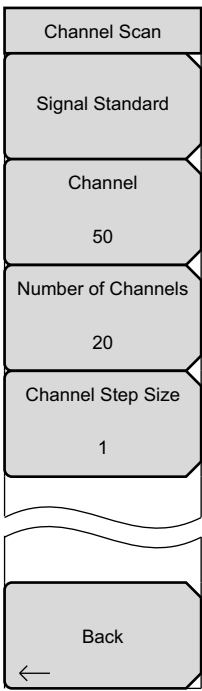
	<p>Signal Standard: Opens the Signal Standards list dialog to select a signal standard.</p> <p>Channel: Opens the Channel Editor list to set a valid band in the selected signal standard.</p> <p>Number of Channels: Sets the number of channels to be displayed. From 1 to 20 channels can be displayed.</p> <p>Channel Step Size: Sets the number of channels to skip between displayed channels.</p> <p>Back: Returns to the “Scanner Menu” on page 4-7.</p>
--	---

Figure 4-3. Channel Scanner Channel Scan Menu

Freq Scan Menu

Key Sequence: **Scanner** > Scan Frequencies > Scan Frequencies

Freq Scan	Start Freq: Sets the center frequency of the first channel to be displayed.
Start Freq 580.000 kHz	Freq Step Size: Sets the spacing between frequencies on the display.
Freq Step Size 10.000 kHz	Bandwidth: The channel bandwidth can be manually entered in GHz, MHz, kHz, or Hz.
Bandwidth 9.000 kHz	Number of Channels: Sets the number of channels to be displayed (1 to 20).
Number of Channels 20	Back: Returns to the “Scanner Menu” on page 4-7 .
Back ←	

Figure 4-4. Channel Scanner Frequency Scan Menu

Scan Script Master Menu

Key Sequence: **Scanner** > Scan Script Master > Select Setup File > Scan Script Master

Scan Script Master	Select Test: Opens the Select Script Master Scan Setup File dialog to select a script file for measurement use.
Select Test	Repeat Scan Type #Scans/Time: Sets the scan to run through the number of scans set using # of Repeat (List) or for the period of time set using Scan Duration.
Repeat Scan Type	# of Repeats (List): Sets the number of scan repetitions for the # of Repeats (Set).
# Scans Time	Scan Duration: Sets the period of time channel scanning takes place for use with Repeat Scan Type.
# of Repeats (List)	# of Repeats (Set): Sets the number of times each set of 20 channels are scanned.
1000	Record On/Off: Turns on the record mode. When the set # Scans are completed or the set Time has ended, the measurements will be stored to memory.
Scan Duration	Start/Restart Test: Starts running a selected measurement or restarts a measurement that is running.
00:11:00	Back: Returns to the "Scanner Menu" on page 4-7 .
# of Repeats (Set)	
5	
Record	
On Off	
Start/Restart Test	
Back	
←	

Figure 4-5. Channel Scanner Scan Script Master Menu

4-9 Amplitude Menu

Key Sequence: **Amplitude**

<div><div>Amplitude</div><div><div>Reference Level</div><div>10.0 dBm</div></div><div><div>Scale</div><div>10 dB/div</div></div></div>	<p>Reference Level: Activates the amplitude reference level function which sets the amplitude at the top of the display. Valid reference levels are from +30 dB to –130 dBm.</p> <p>Scale : Activates the scale function which sets the dB/division value from 1 dB/div to 15 dB/div in 1 dB steps.</p>
--	---

Figure 4-6. Channel Scanner Amplitude Menu

4-10 Custom Scan Menu

Key Sequence: **Custom Scan**

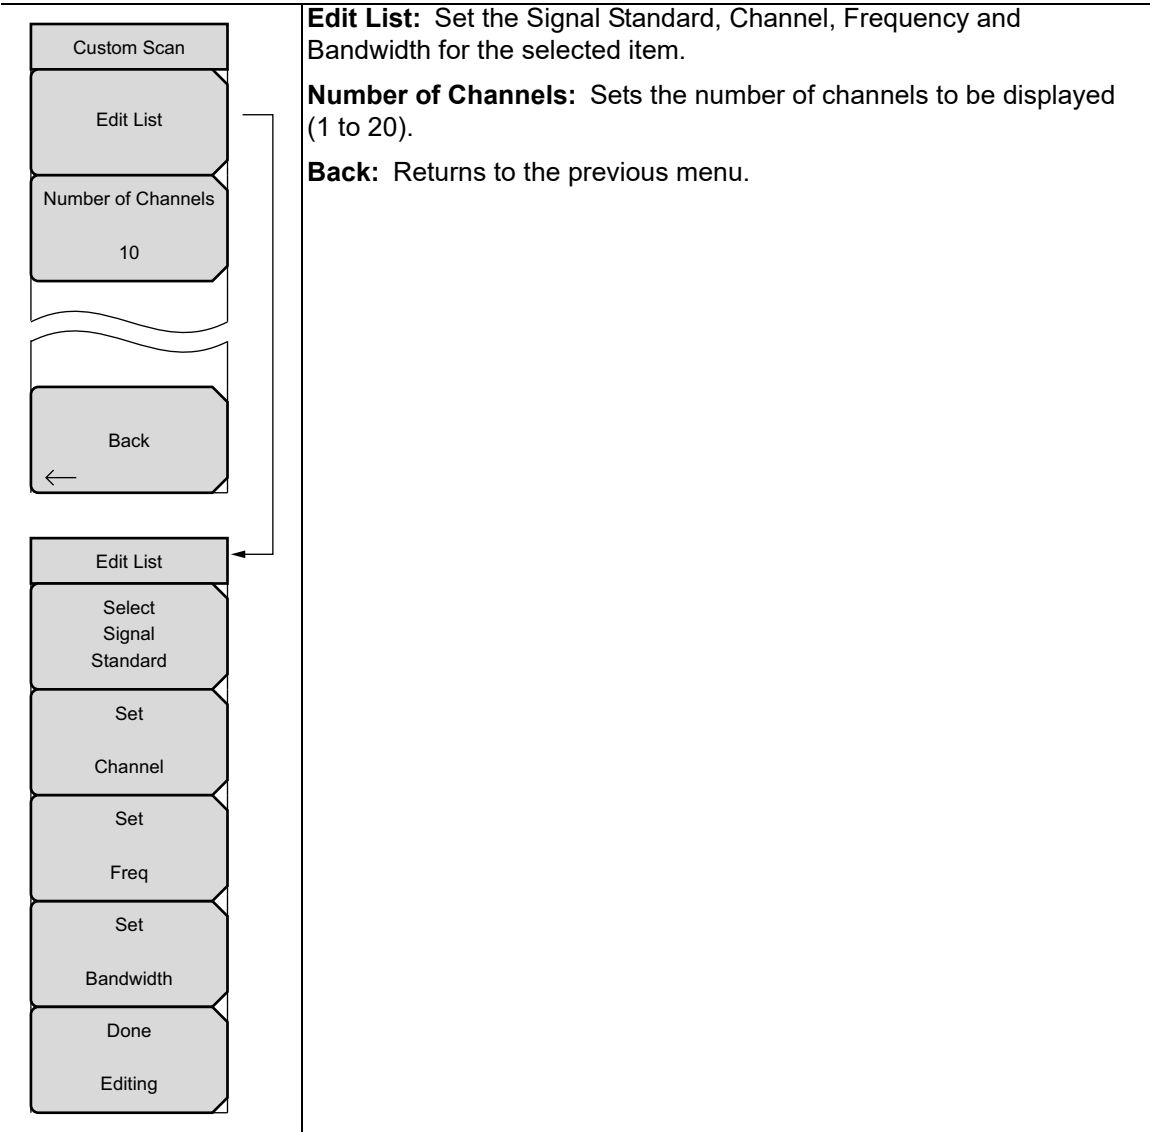


Figure 4-7. Channel Scanner Custom Scan Menu

4-11 Measurements Menu

Key Sequence: **Measurements**

Measurements

Display

GraphTable

Max Hold

On5 secOff

Channel Unit

ChannelFreq

Power Display

CurrentMax

Color Code

SingleDual

Graph Orientation

VerticalHorizontal

Display Graph/Table: Toggles the display between table and graph formats, see [Figure 4-9](#) and [Figure 4-10](#) for examples of the two formats.

Max Hold On/5 sec/Off: Turns on or off small yellow lines for every channel/frequency on the display that indicate the highest level that channel or frequency has reached. The 5 sec option holds the small yellow line at the highest level in the last 5 seconds.

Channel Units Channel/Freq: Toggles the display channel units between channel number and frequency.

Power Display Current/Max: The current power units are displayed at the bottom of the channels, or the maximum power is displayed (activated only when Max Hold is set to On or 5 sec).

Color Code Single/Dual: Channels can be represented in one color or two alternating colors.

Graph Orientation Vertical/Horizontal: When Graph is selected in the Display submenu, this key toggles the graph orientation between vertical and horizontal.

Figure 4-8. Channel Scanner Measurements Menu

NoteScreen captured images are provided as examples. Measurement details shown on your instrument may differ from the examples in this user guide



Figure 4-9. Channel Scanner Graph Display with Vertical Orientation

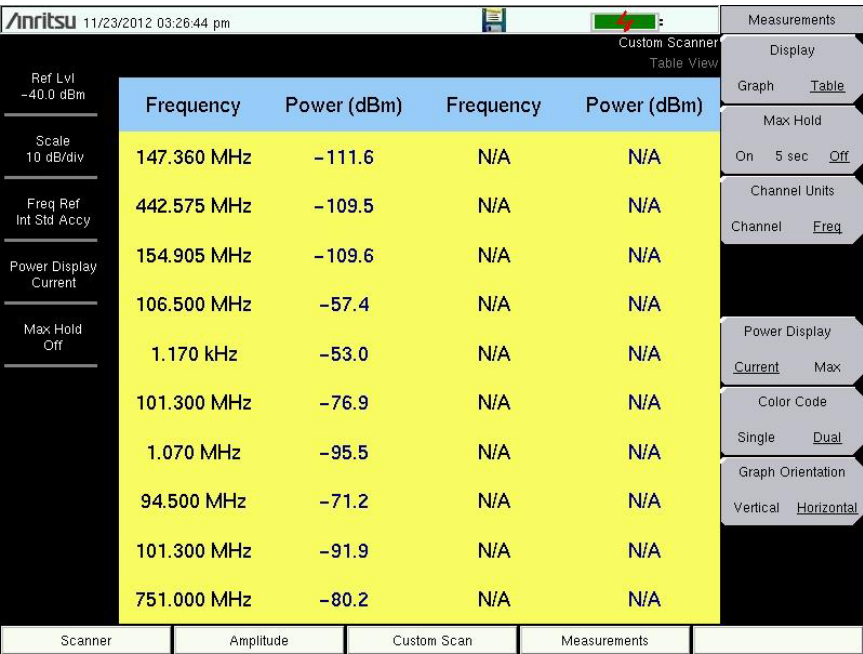


Figure 4-10. Channel Scanner Table Display

4-12 Sweep Menu

This menu is not available in Channel Scanner measurement mode.

4-13 Measure Menu

Displays the [“Measurements Menu” on page 4-12.](#)

4-14 Trace Menu

This menu is not available in Channel Scanner measurement mode.

4-15 Limit Menu

This menu is not available in Channel Scanner measurement mode.

4-16 Other Menus

Preset, **File**, **Mode** and **System** are described in the instrument User Guide.

Chapter 5 — CW Signal Generator (Option 28)

Note

Not all instrument models offer every option. Refer to the Technical Data Sheet of your instrument for available options.

5-1 Introduction

This chapter presents information and procedures used to make measurements using the optional CW Signal Generator mode (Option 28).

The CW Signal Generator provides a continuous wave (CW) signal from the VNA RF Out port of the instrument. The CW signal is primarily used for testing the sensitivity of receivers. To test receiver sensitivity, connect the signal directly to the receiver that is being measured, and then reduce the output amplitude until the receiver drops the signal.

The external splitter feeds the signal into the RF input of the instrument. The display shows the output power and frequency. The amplitude is set by using an external step attenuator.

The external splitter and attenuator are purchased separately. They are available as CW Signal Generator Kit. The “fixed” CW signal levels vary as a function of the frequency.

Additional Required Equipment

- CW Signal Generator Kit

5-2 Procedure

1. On the instrument, press the **Menu** key and select the CW Signal Generator icon.
2. Connect the attenuator to the RF Out port and the splitter to the Spectrum Analyzer RF In port as show in [Figure 5-1](#).

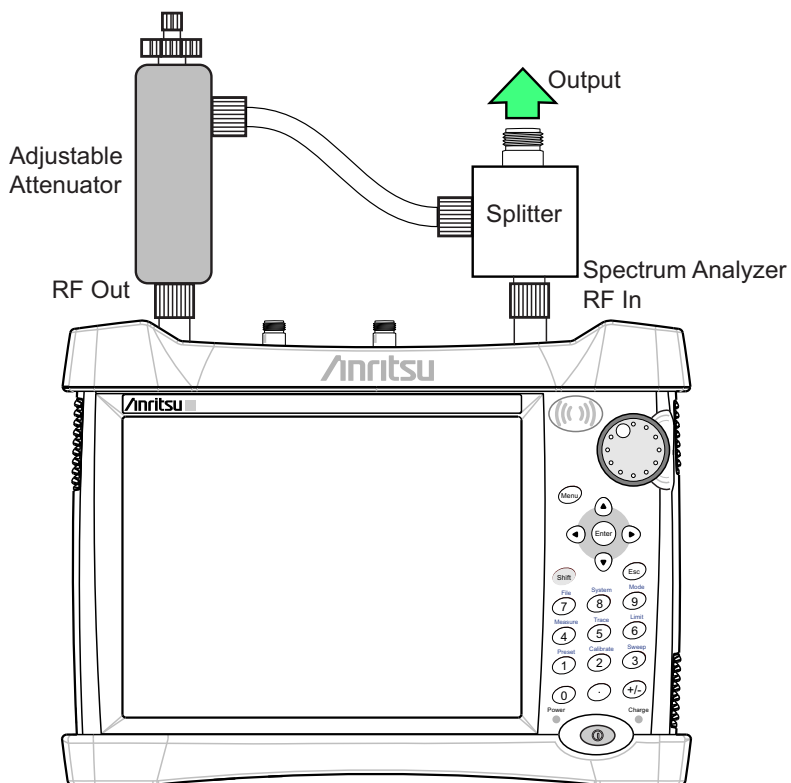


Figure 5-1. CW Signal Generator Configuration

3. Press the **Freq** menu key to set the desired frequency.

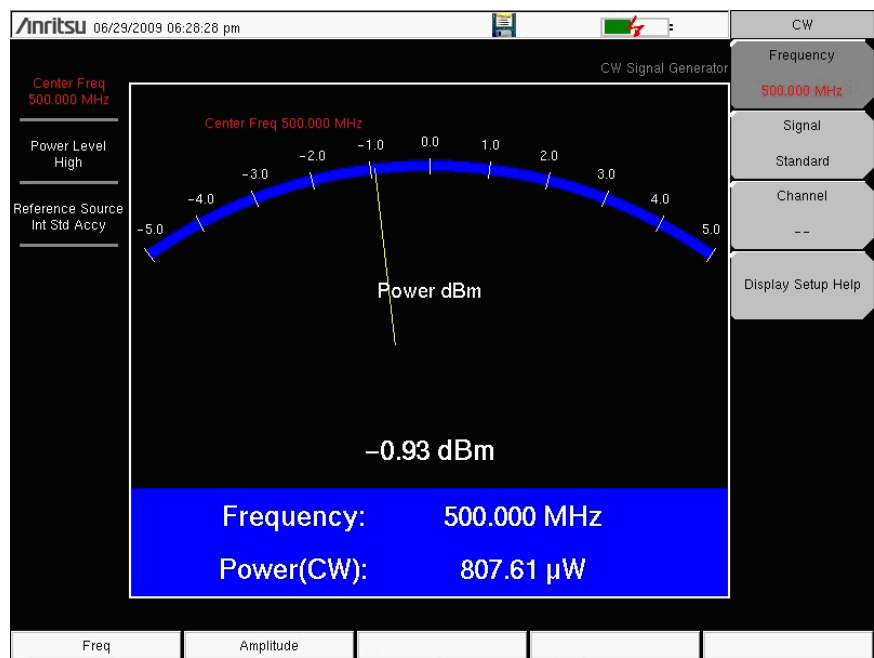


Figure 5-2. CW Signal Generator Frequency Menu

- Press the **Amplitude** key and set the power level to High or Low. The typical nominal output power in the high setting is about 0 dBm. The typical nominal output power in the low setting is about -30 dBm.

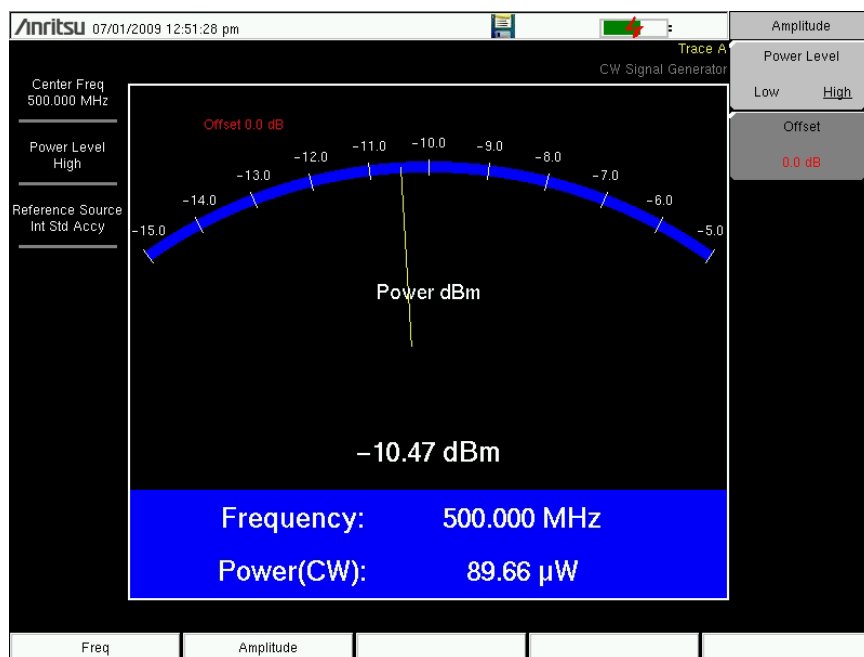


Figure 5-3. CW Signal Generator Frequency Menu

- Change the settings on the attenuator to adjust the power level. The large knob changes the power in 10 dB steps and the small knob adjusts the power level in 1 dB steps.
- Press the **Offset** submenu key to add an offset (in dB) to the amplitude level. This offset compensates for any attenuation that is placed in-line between the splitter and the DUT. Offset range is +100 dB to -100 dB.

Chapter 6 — Coverage Mapping (Option 431)

6-1 Introduction

Coverage Mapping Option 431 allows users to map RSSI and ACPR measurements. The Anritsu easyMap Tools program creates special maps compatible with Anritsu handheld spectrum analyzers. The software creates files with or without GPS information. The files will have a .map extension. easyMap Tools is available from the Anritsu website (www.anritsu.com).

The Coverage Mapping option is suitable for both indoor and outdoor mapping.

Note

Set the instrument to Spectrum Analyzer mode for Coverage Mapping measurements described in this chapter.

6-2 General Measurement Setups

Please refer to your instrument User Guide for selecting the Spectrum Analysis mode, setting up frequency, span, amplitude, GPS, limit lines, markers, and file management.

6-3 Spectrum Analysis Settings

Refer to [Chapter 2, “Spectrum Analyzer”](#) for details and full menu overview of Spectrum Analysis measurements including bandwidth parameters, sweep settings, trigger types, attenuator options, and preamp settings.

This chapter presents brief examples and menu overview of Coverage Mapping. Press **Shift + Measure (4)** key followed by the Coverage Mapping submenu key.

6-4 Coverage Mapping

Note Outdoor coverage mapping requires Option 31, GPS.

Coverage Mapping is possible both outdoors (GPS signal required) and indoors (no GPS signal). For more accurate position data for indoor measurements, use a stylus such as the Anritsu 2000-1691-R.

- **Outdoor Mapping:** The instrument logs data automatically based on either time or distance interval. If there is no map available when making the measurements, it is still possible to save all the data to a KML file and then combine the data with a map. You may also recall a map after taking the data without having to save and recall it.
- **Indoor Mapping:** Using a start-walk-stop approach, the instrument provides in-building coverage mapping by overlaying data directly onto the downloaded map (which may be a drawing of a building). Data is captured when you tap the touch screen. The instrument places points linearly between taps if Time interval is used for capturing data and there is more than one measurement. When the Repeat Type is Distance, new measurements are placed at the next tap point.

Outdoor Coverage

With a valid GPS signal, the instrument identifies the current location on the displayed GeoEmbedded map with a plus sign. Previously saved locations are displayed as squares. Using GPS, latitude, longitude, and altitude data is automatically saved for each location.

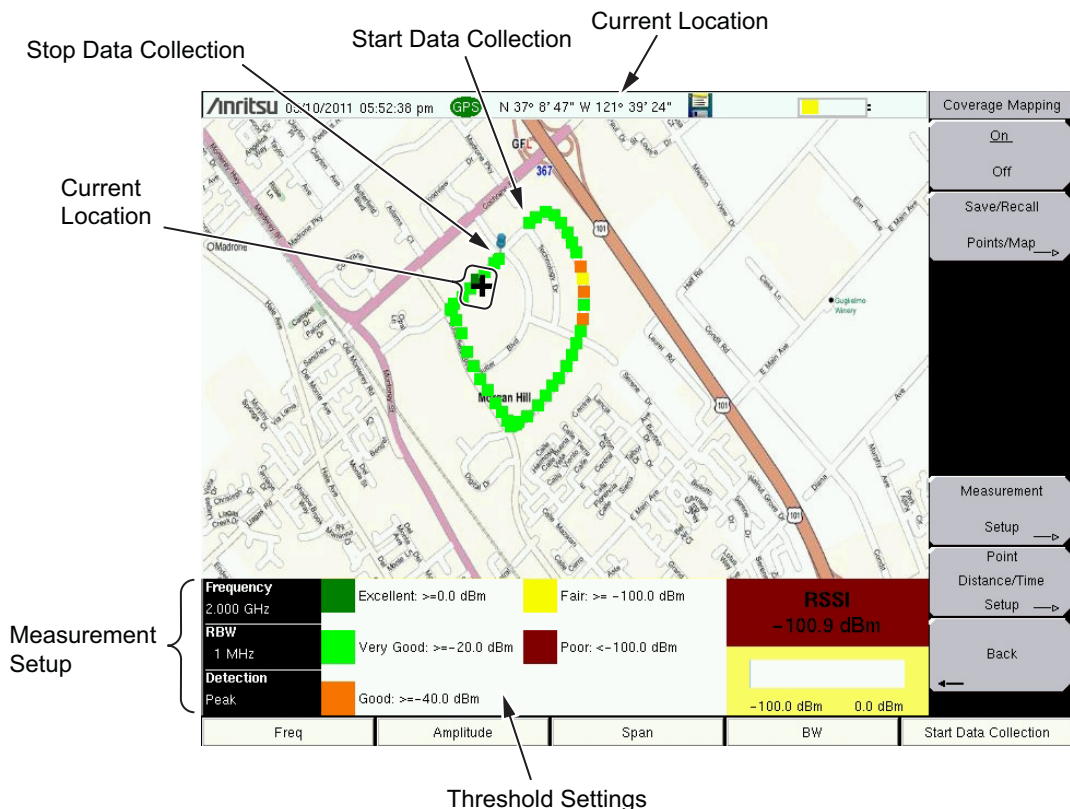


Figure 6-1. Outdoor Coverage Mapping (GPS On)

Note

The Measurement Setup and Threshold Setting boxes can be used as menu shortcuts on touch screen instruments.

Use the touch screen to select the parameter to edit.

Indoor Coverage

With GPS turned off and a non-GeoEmbedded map file, the user indicates the current position (+) with the touch screen. On instruments that do not have a touch screen, use the arrow keys. Previously saved locations are displayed as squares.

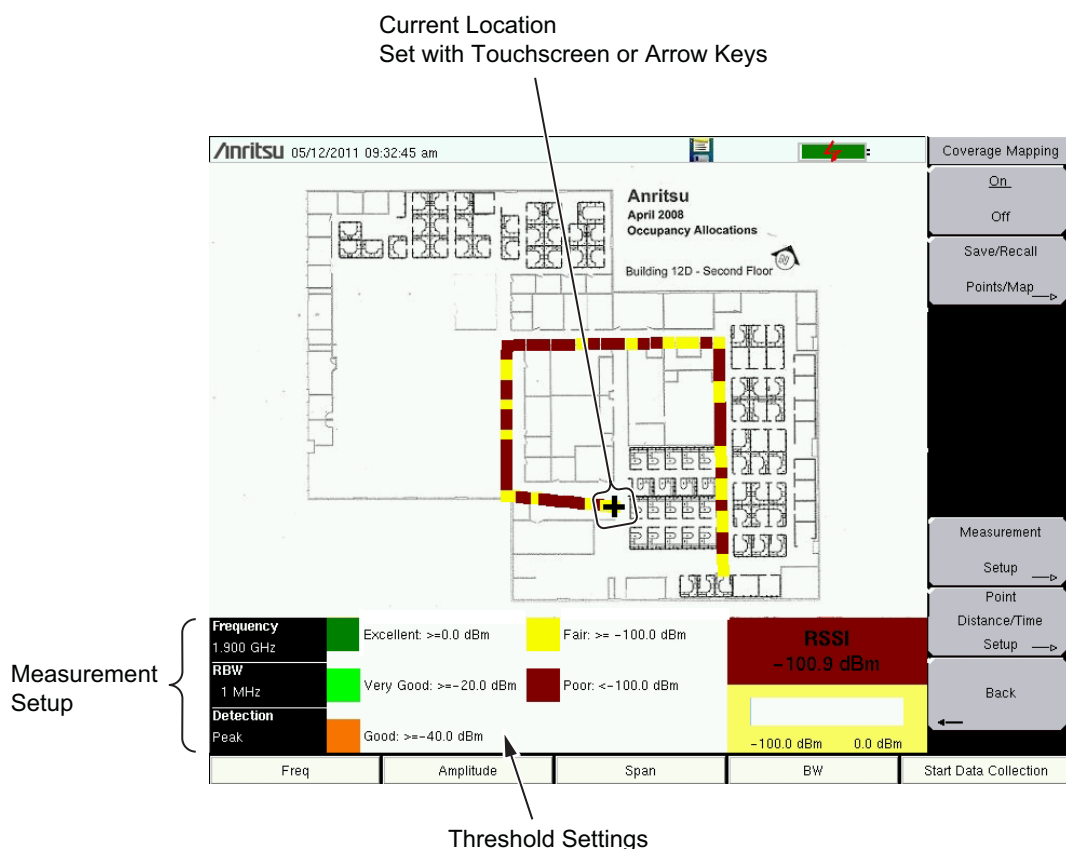


Figure 6-2. Indoor Coverage Mapping (GPS Off)

Coverage Mapping is a four-step process:

- Create an indoor or outdoor map using [“Anritsu easyMap Tools”](#).
- Load the map and configure the [“Instrument Settings”](#) on page 6-5.
- Connect an antenna to the instrument and go to [“Map the Signal Strength”](#) on page 6-7.
- [“Save the Coverage Mapping Information”](#) on page 6-9.

Anritsu easyMap Tools

Anritsu easyMap Tools allows you to capture maps of any location and create Anritsu Map Files. These maps are used for Coverage Mapping and Interference Mapping ([Chapter 3](#)). There are two Anritsu Map File formats:

- legacy .map map files
- .azm map files, which are displayed in full zoom-out view (Coverage Mapping pan-and-zoom is currently supported on the LMR Master S412E only)

Download easyMap Tools from the Anritsu website (www.anritsu.com). Additional information about easyMap Tools is available in the software Help.

Outdoor Map

Type an address in easyMap Tools and capture the map with GPS data.

Indoor Map

In easyMap Tools, open a bitmapped image (JPEG, GIF, TIFF, or PNG) of the floor plan for indoor mapping. You can also use a downloaded map and make it an indoor map. This method works well if you can get a good aerial view of a building.

The image size should be close to 666 pixels x 420 pixels (approximately 1.6:1 ratio).

Note	A USB flash drive is required to transfer maps to the instrument.
-------------	---

Instrument Settings

Setup

1. Create the appropriate map with easyMap Tools. Refer to “[Anritsu easyMap Tools](#)” on page 6-4 and the software Help. Outdoor mapping requires a GeoEmbedded map or the default grid.
2. Open up Coverage Mapping by pressing the **Menu** key and selecting the Spectrum Analyzer icon or press **Shift** then **Mode** (9), highlight Spectrum Analyzer and press **Enter**.
3. Press **Shift** then **Measure** (4). Press the Coverage Mapping submenu key. Confirm that coverage mapping is On. On or Off is underlined on the submenu key in the Coverage Mapping menu.

Proceed with [Step 4](#) for outdoor coverage mapping. GPS must be off for indoor mapping.

4. Turn on GPS.
 - a. Press **Shift** then **System** (8).
 - b. Press the GPS submenu key.
 - c. Connect a GPS antenna to the SMA connector.
 - d. Turn on GPS. On should be underlined in the GPS submenu key.
 - e. Press the GPS Voltage submenu key to select the appropriate voltage for the antenna being used. Refer to the instrument Technical Data Sheet for voltage specifications of supported GPS antennas.
 - f. Press GPS Info and verify that the information from four or more satellites is captured. Press **Esc** to close the info box.

It may take several minutes for the GPS receiver to track at least four satellites. When it does, the GPS icon at the top of the screen turns green. Refer to your instrument User Guide for additional information on GPS.

Recall a Map (Indoor or Outdoor Coverage)

The instrument allows you to recall a .map file or .azm file created with easyMap Tools. With a valid GPS signal, the current location will be displayed on an outdoor map or an arrow will show the direction of the current location if it is outside the map coverage area. With an indoor map, position the plus sign at the current location by using the touch screen or by using the arrow keys and then pressing **Enter**.

Connect the USB flash drive that has the map file or files created in “[Anritsu easyMap Tools](#)” on page 6-4 to the instrument.

1. Press the Coverage Mapping submenu key.
2. Press the Save/Recall Points/Map submenu key.
3. Press Recall a Map and select the appropriate map from the USB flash drive.
4. Use the arrow keys to scroll down to the desired map and press **Enter** to select.

[Step 5](#) and [Step 6](#) apply to outdoor coverage mapping only.

5. The new map file will be displayed and the current location (if within the GPS boundaries of the displayed map) is shown as a plus sign with outdoor mapping.
6. If the current location is outside the map boundaries, an arrow indicates the direction of the current location in relation to the displayed map.

If you do not see the USB drive in the Recall menu:

- 1. Press the Refresh Directories submenu key.
- 2. If the drive is still not visible, exit the menu, then remove and reconnect the USB drive.
- 3. Press Recall a Map again.
- 4. If the drive is still not visible, reformat the USB flash drive in FAT32 format, then copy the map files to the reformatted drive.

Recall the Default Grid

The instrument can make coverage mapping measurements even when an Anritsu easyMap Tools file of the current indoor or outdoor location is not available. In such cases, use the default grid map, save the KML points, and recall them at a later time with a map. You may also recall a map after taking the data without having to save and recall it. Alternatively, you can save the KML points and view them in Google Earth or Google Maps, or you can save the points in mtd (mapping tab delimited) format, and use another tool for analysis, such as Microsoft Excel. Refer to “Mapping Save/Recall Menu” on page 6-16 for additional information on recalling saved maps and .kml data.

Note

When using the default grid, the coverage area for outdoor mapping is fixed at 10 x 10 miles. For indoor mapping, the grid size is the indoor map file dimensions (666 pixels by 420 pixels; or 0,0 to 665,419). If GPS is on and locked, the center point of the default grid is the current location when the Recall Default Grid button was pressed.

- 1. Press the Coverage Mapping submenu key.
- 2. Press the Save/Recall Points/Map submenu key.
- 3. Press the Recall Default Grid submenu key.

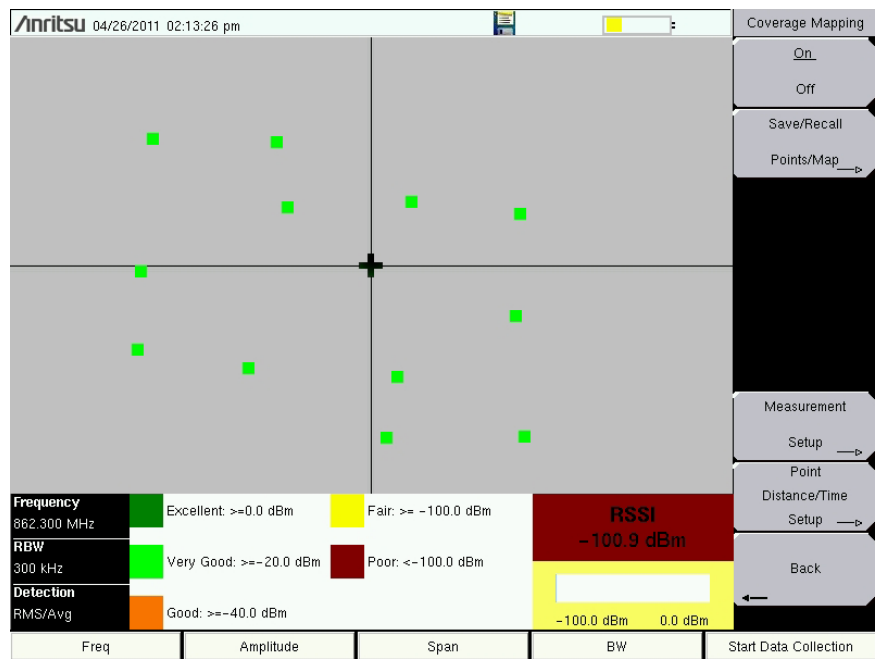


Figure 6-3. Coverage Mapping with the Default Grid.

Map the Signal Strength

Coverage Mapping supports RSSI measurement or ACPR measurement during mapping.

Note

The default settings for coverage mapping set the internal input attenuator to 0 dB (off) with the preamp on and a bandwidth of 1 MHz. These parameters can be adjusted depending on the strength of the signal being measured. The bandwidth is 10 kHz for RSSI measurements. For ACPR, it is based on ACPR settings (channel width and spacing) and the resultant span, as well as if Auto RBW is set.

Overdriving the input of the spectrum analyzer can result in ADC Overdrive or Saturation errors. Refer to [“Indications of Excessive Signal Level” on page 2-10](#). If necessary, make adjustments using the **Amplitude** menu and **BW** menu.

Once data collection begins, parameters such as amplitude, bandwidth or measurement setup cannot be changed.

ACPR

1. Press the Coverage Mapping submenu key.
2. Press the Measurement Setup submenu key.
3. Set the Center Freq, RBW, and Detection type. Refer to [Chapter 2, “Spectrum Analyzer”](#) for additional information.
4. Press ACPR once to select and again to open the setup menu.
 - a. Enter the Main and Adjacent Channel Bandwidths.
 - b. Enter the Channel Spacing.
 - c. Enter Good Passing Criteria and the Poor threshold level.
 - d. The main channel power indicator in the bottom part and the data collection squares will display colors as shown below:

Red Value (Poor) < Yellow Value < Green Value (Good)

5. Press the Start Data Collection main menu key. Data will be collected at the time or distance interval based on the setting in [“Point Distance/Time Setup Menu” on page 6-20](#). The color of the squares indicates the power level based on ACPR setup. You may have to move the instrument around, and for indoor maps, you may need to tap the touch screen.
6. Press the Stop Data Collection main menu key. Save the collected data as a .kml file, a tab-delimited text file (.mtd) or a .jpg file. Refer to [“Mapping Save/Recall Menu” on page 6-16](#).

Note

The collected data can be saved in multiple formats.

Warning



Using Anritsu equipment while operating a motor vehicle is dangerous and could lead to serious accidents. Check the laws and regulations that are in effect in your area with regard to the use and placement of electronic devices or fixtures on a moving vehicle.

RSSI

1. Press the Coverage Mapping submenu key.
2. Press the Measurement Setup submenu key.
3. Set the Center Freq, RBW, and Detection type. Refer to [Chapter 2, “Spectrum Analyzer”](#) for additional information.
4. Press RSSI once to select and again to open the setup menu.
5. Set the threshold levels: Excellent, Very Good, Good, Fair, and Poor. The threshold level is always the same for Fair and Poor, with Fair being greater than or equal to the selected level, and Poor being below that value.
6. Press the Start Data Collection main menu key. Data will be collected at the time or distance interval based on the setting in [“Point Distance/Time Setup Menu” on page 6-20](#). The color of the squares indicates the power level based on the RSSI setup.

You may have to move the instrument around, and for indoor maps, you may need to tap the touch screen.

7. Press the Stop Data Collection main menu key. Save the collected data as a .kml file, a tab-delimited text file (.mtd) or a .jpg file. Refer to [“Mapping Save/Recall Menu” on page 6-16](#).

Note

Frequency, RBW, Detection Type, and Threshold levels can also be changed using the touch screen on supported instruments.

Interior coverage mapping has two options, considering that the instrument does not have location or distance information available without GPS.

Option 1: Set the Repeat Type to Time and walk the coverage area. Press the touch screen (or use the arrow keys to set the location and press **Enter**) at each turn, and the instrument will interpolate map positions between collected data points.

Option 2: Set the Repeat Type to Distance and walk the coverage area. Press the touch screen (or use the arrow keys to set the location and press **Enter**) at any time that signal power data points are required.

The saved .kml or .mtd file in either option will not have GPS data, but it will plot on a 666 x 420 grid with RSSI or ACPR data for each captured point. The upper left corner of the map area on the display is point 0,0; the lower right corner of the display is point 665,419.

Save the Coverage Mapping Information

1. Press **Shift**, then **Meas(4)** to access the Measurement menu.
2. Press the Coverage Mapping submenu key.
3. Coverage Mapping has three save options. Refer to “[Save KML Points](#)”, “[Save Tab Delimited Points](#)”, or “[Save JPG](#)”.

All files will be stored in the default save location. To change the default location:

1. Press **Shift**, then **File (7)** to access the File menu.
2. Press **Save**.
3. Press **Change Save Location**.
4. Select an existing folder or press the **Create Folder** submenu key to create a new folder in the instrument’s internal memory or on a USB drive.
5. Press **Set Location** to make the selected folder the new default location for saving files.

Save KML Points

In the Coverage Mapping submenu, press **Save/Recall Points/Map**, then **Save KML Points**. In the Save dialog, change the file name and file type (KML 2D or KML 3D) as appropriate, then press **Enter**. The following information is saved for the points and vectors that are currently displayed on the screen:

- Signal strength
- Setup (frequency, RBW, VBW, and detection type)
- Current location

The .kml file can be recalled and viewed on the instrument. Refer to “[Mapping Save/Recall Menu](#)” on page 6-16 for information on recalling a map.

The .kml file can also be opened and viewed using Google Earth and a network connection.

Installing Google Earth

If you don’t have Google Earth installed on your computer:

Note

1. Go to www.google.com/earth.
2. Click Download Google Earth and follow the on-screen instructions.
3. After installation and Google Earth is opened, user instructions and several types of help are available from the Help pull-down menu.

1. Connect your computer or mobile device to the instrument via the Web Remote Control server. To do this, enter the instrument IP address in your Web browser address bar.

You can look up your instrument IP address by pressing **Shift**, then **System (8)**, followed by **Status**. If your instrument has not been set up with an IP address, press **System Options**, then **Ethernet Config** to access the Ethernet Editor dialog.

2. Click the File List tab and look for the .kml file you want to view in Google Earth. See Figure 6-4.
3. Click the map file name in the File column. Alternatively, you can select the checkbox next to the .kml file name, then click the Download button.
4. Click Open or Save in the pop-up dialog.

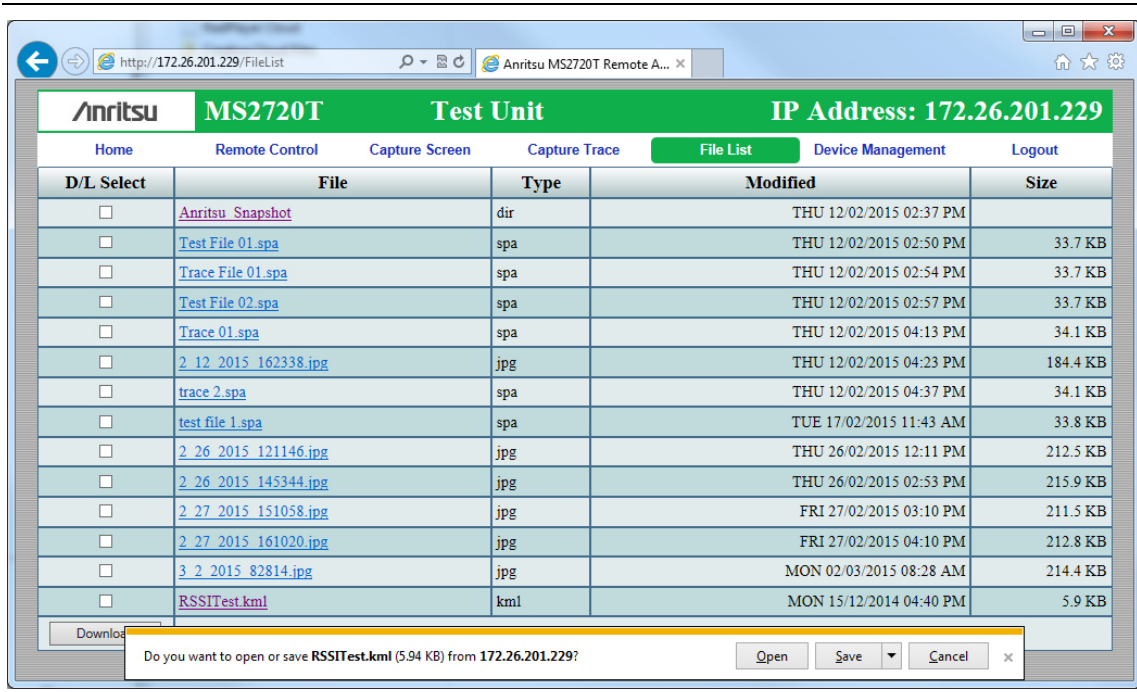


Figure 6-4. Web Remote Control Window - File List Tab

Opening the KML file automatically launches Google Earth if the application is not yet open. [Figure 6-5](#) illustrates a sample coverage mapping .kml file viewed in Google Earth. You can also view the file with Google Maps, provided you have the appropriate plug-in for your browser.

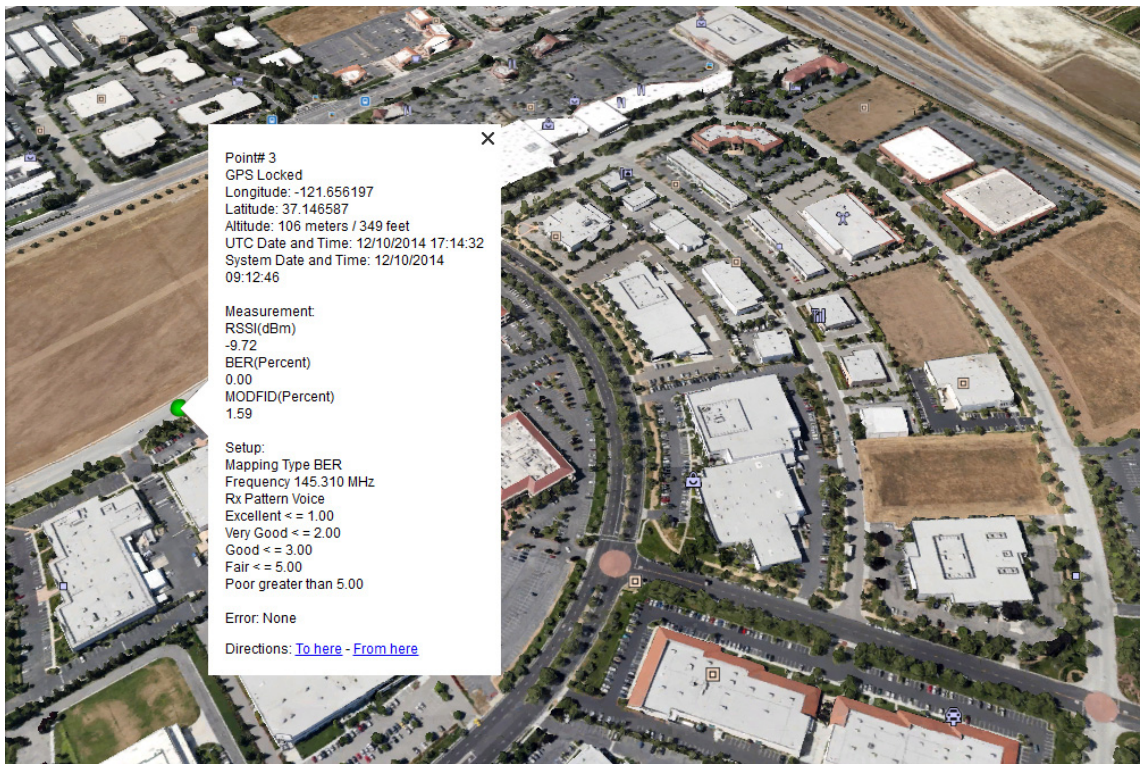


Figure 6-5. Sample Coverage Mapping KML File in Google Earth

Save Tab Delimited Points

In the Coverage Mapping submenu, press **Save/Recall Points/Map**, then **Save Tab Delimited Points**. In the Save dialog, change the file name as appropriate, then press **Enter**. A tab delimited text file (.mtd) of the coverage mapping data currently displayed on the screen will be saved to the default location.

Save JPG

In the Coverage Mapping submenu, press **Save/Recall Points/Map**, then **Save JPG**. In the Save dialog, change the file name as appropriate, then press **Enter**. A .jpg file of the current screen is saved to the default location.

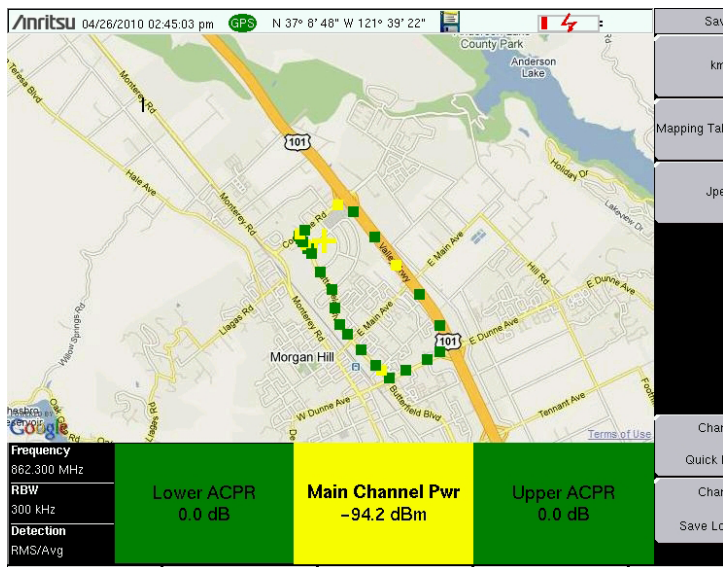


Figure 6-6. Coverage Mapping Measurement Saved as a .jpg File

6-5 Coverage Mapping Menus

Figure 6-7 shows the Coverage Mapping menu and submenu. Refer to Chapter 2, “Spectrum Analyzer” for additional information on Spectrum Analysis menus. Menu maps typically display all possible submenu keys, although some keys are displayed on the instruments only under special circumstances (refer to menu descriptions). The Pan & Zoom function in spectrum analyzer coverage mapping is currently available on the LMR Master S412E only.

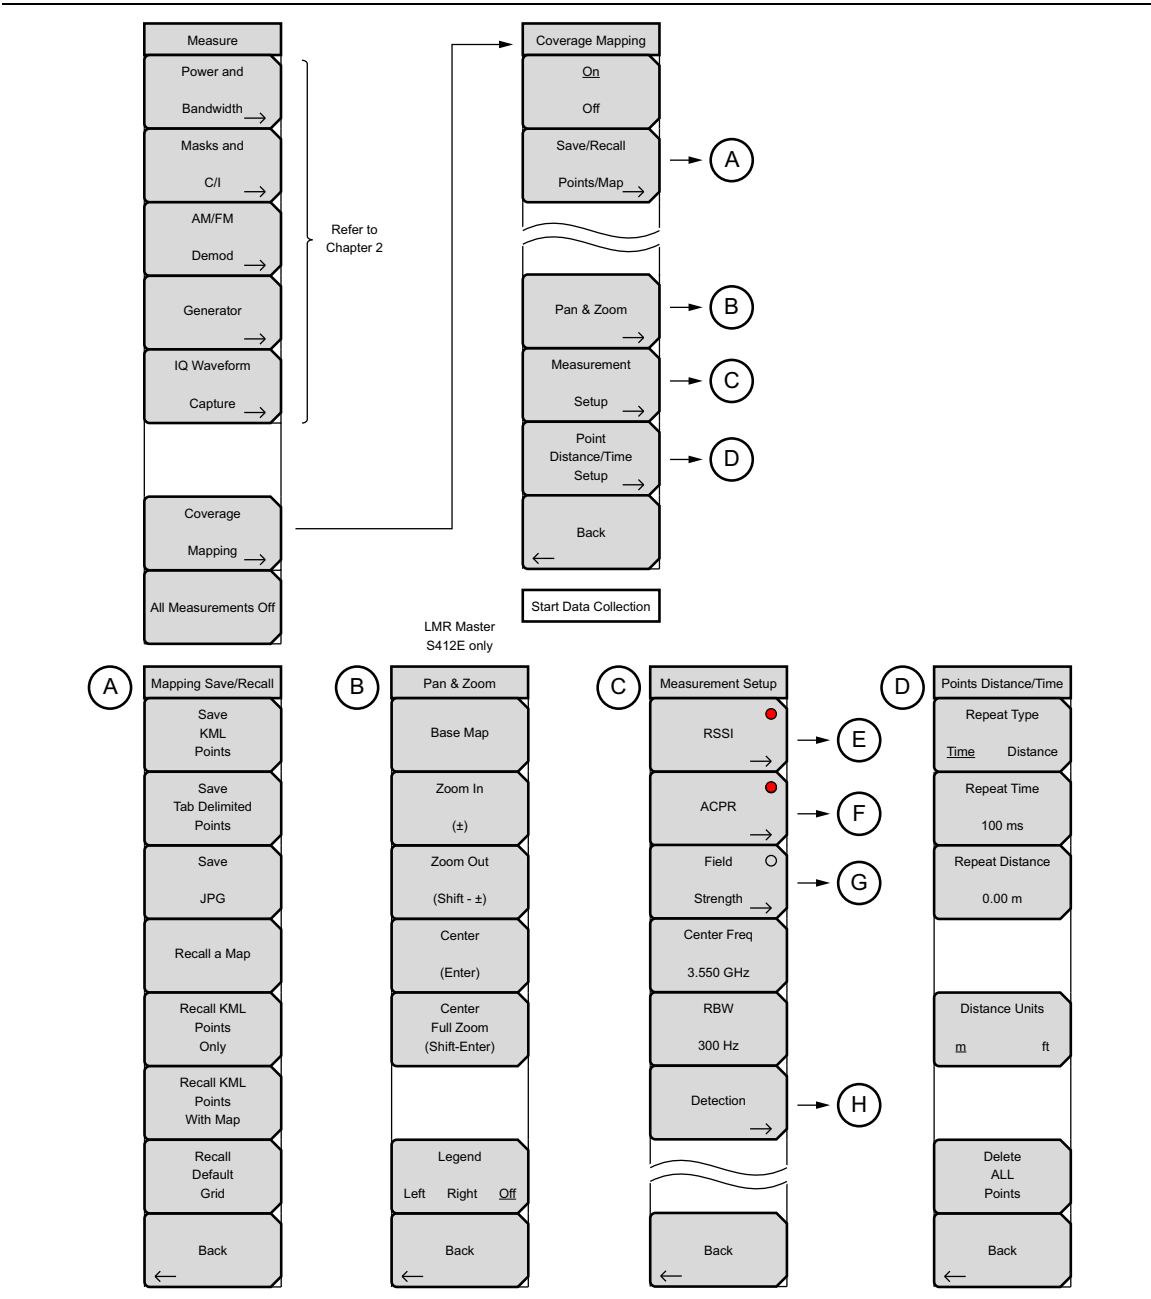


Figure 6-7. Coverage Mapping Menu Keys

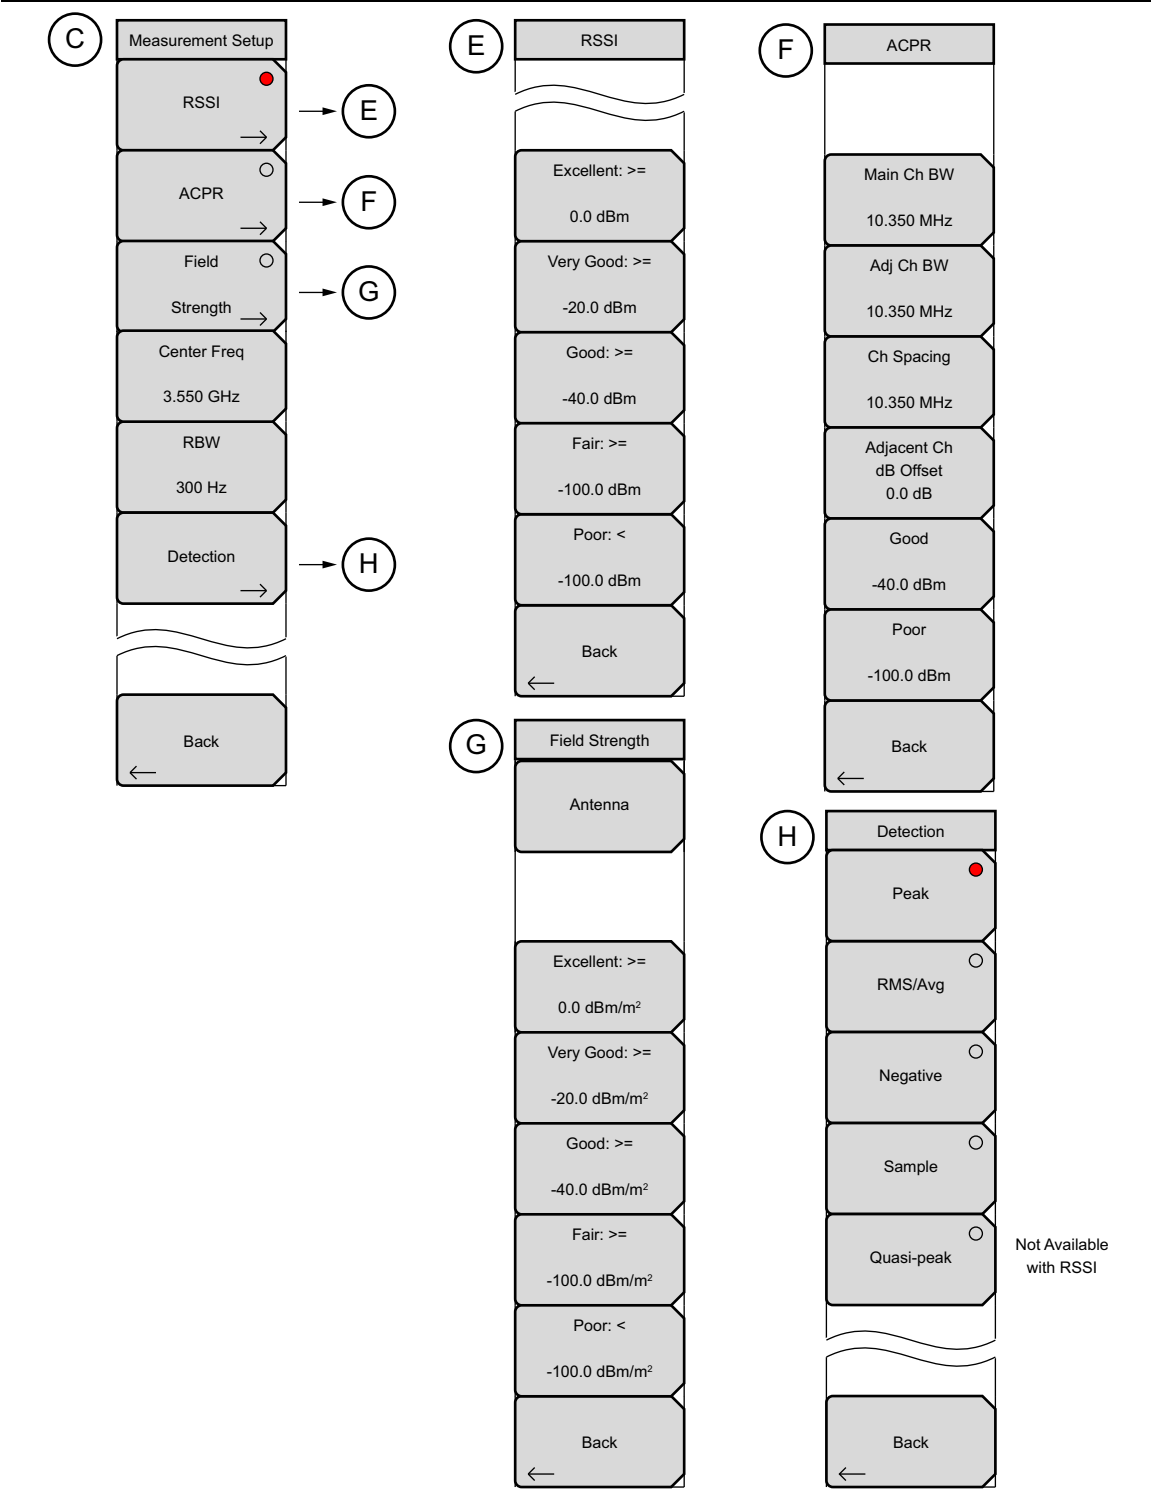


Figure 6-8. Coverage Mapping Menu Keys (Part 2)

6-6 Coverage Mapping Menu

Key Sequence: **Shift** > **Measure (4)** key > Coverage Mapping

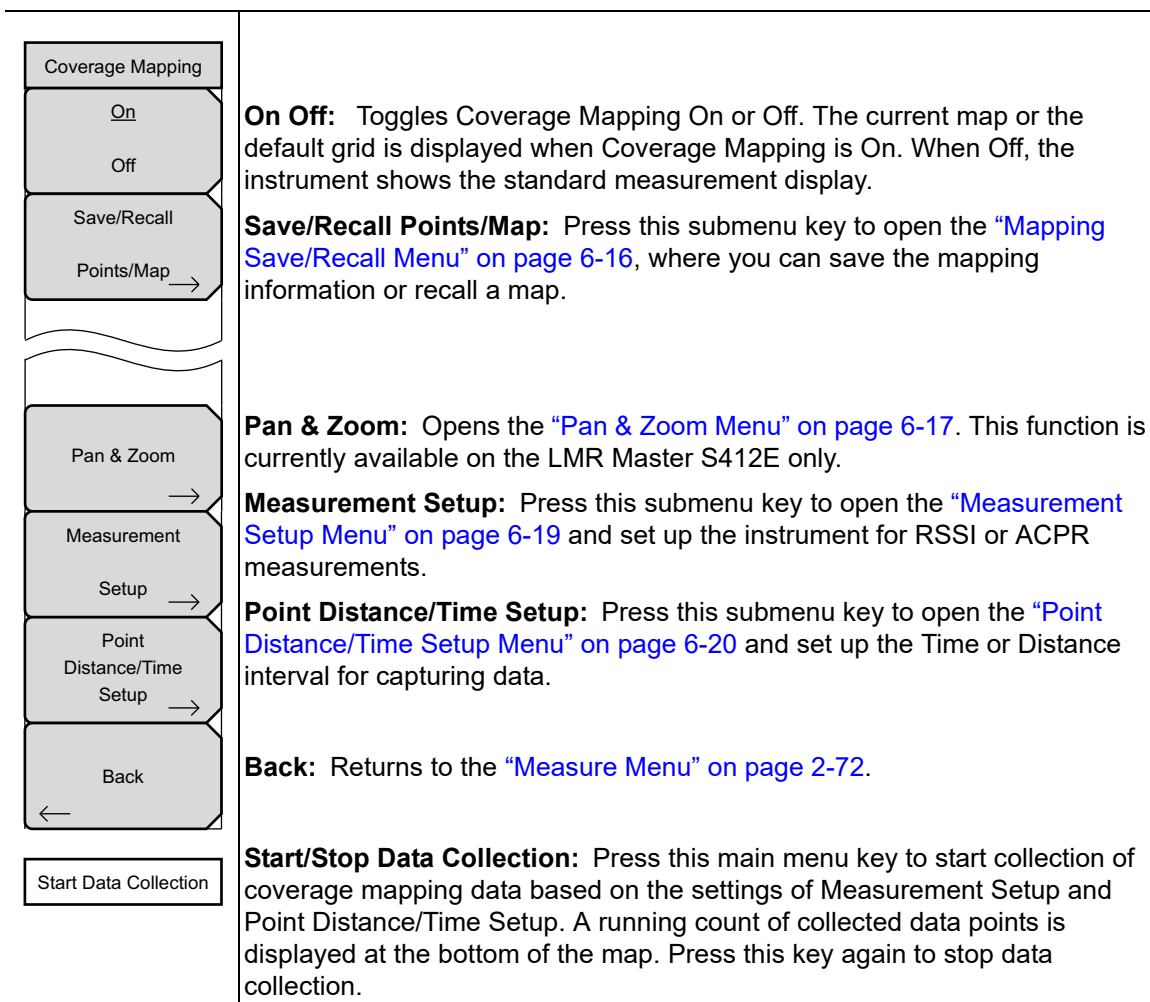


Figure 6-9. Coverage Mapping Menu

Mapping Save/Recall Menu

Key Sequence: **Shift** > **Measure (4)** key > Coverage Mapping > Save/Recall Points/Map

Mapping Save/Recall

Save KML Points

Save Tab Delimited Points

Save JPG

Recall a Map

Recall KML Points Only

Recall KML Points With Map

Recall Default Grid

Back

Recall

Sort By

Name Date Type

Sort Order

Asc Desc

File Type

AZM

Refresh

Directories

Save KML Points: Press this submenu key to save the KML points. FileName.kml will be stored in the default save location. From the File menu, press Save, then Change Save Location to change the default location. The Filetype setting includes: KML 2D, KML 3D, Mapping Tab Delimited, and JPEG. Refer to [“Save the Coverage Mapping Information” on page 6-9](#).

Save Tab Delimited Points: Press this submenu key to save the points in a tab delimited text file. FileName.mtd will be stored in the default location.

Save JPG: Press the Save JPG key to save a JPEG file of the current screen.

Recall a Map: Opens the Recall submenu (shown at the bottom left of this page) for selecting a map to display on the screen. The default map type is AZM. Press the File Type submenu key to select a different map type to recall.

Recall KML Points Only: Opens the Recall submenu for selecting a KML file. Displays the saved locations overlaid on the current map or the default grid.

Recall KML Points With Map: Opens the Recall submenu for selecting a KML file. The map that was used when the points were saved will be recalled if it is available.

Recall Default Grid: If you do not have a GPS embedded map but are out in the field making measurements, the Recall Default Grid submenu allows you to save points and the corresponding GPS coordinates (or screen coordinates for indoor maps) to view at a later time. You can also load the map after acquiring points, or switch maps at any time without losing data.

Back: Returns to the [“Coverage Mapping Menu” on page 6-15](#).

Figure 6-10. Mapping Save/Recall Menu

Pan & Zoom Menu

Key Sequence: **Shift** > **Measure (4)** key > Coverage Mapping > Pan & Zoom

Pan & Zoom

Base Map

Zoom In

(±)

Zoom Out

(Shift - ±)

Center

(Enter)

Center Full Zoom

(Shift-Enter)

Legend

Left Right Off

Back

←

The coverage mapping Pan & Zoom function is currently available only on the LMR Master S412E.

Base Map: Press this submenu key to view the full map.

Zoom In (±): Press this submenu key to zoom in one map panel at a time. The (+/-) key on the front panel keypad performs the same action, unless a parameter setting is currently selected for modification.

Zoom Out (Shift - ±): Press this submenu key to zoom out one map panel at a time. Pressing the **Shift** and (+/-) keys once performs the same action, unless a parameter setting is currently selected for modification.

Center (Enter): Press this submenu key to center the panel in which the instrument is located. The **Enter** key performs the same action, unless a parameter setting is currently selected for modification.

Center Full Zoom (Shift - Enter): Brings the map panel where the instrument is currently located into the display. Pressing the **Shift** and **Enter** keys performs the same action, unless a parameter setting is currently selected for modification. Note that the current location may not be exactly centered on the display.

Legend

Left Right Off: Press this submenu key to turn off or to display a legend at the top left or top right corner of the AZM map. The legend consists of a vertical zoom level bar, a square representing the current GPS location and base map, and three status icons (see [Figure 6-12](#)). The zoom level indicator shows the number of levels of zoom in the AZM map, with the current level displayed as a dark segment on the vertical bar. Higher levels of zoom are toward the top of the indicator bar.


The default square with crosshairs represents a map panel with the lowest zoom. The crosshairs are at the center of that panel. As the zoom level increases, a boundary of a panel is displayed around the crosshairs. The higher the zoom level, the smaller the square around the crosshairs. When panning the map (using the instrument’s arrow keys), the crosshairs and map panel boundary display your relative location in the total mapped area.

When the lock is ‘locked’ (by pressing **Enter**), the map is in auto-centering mode and will update continually to keep your current position centered while you move with the instrument. If you pan (using the arrow keys), the map is taken out of auto-centering mode, or unlocked, because you have intentionally shifted the map area away from your current location. When unlocked, the map will not follow if you walk or drive around with the instrument.

After panning, press the **Enter** key to re-center your GPS location on the map and lock auto-centering mode.

Back: Returns to the [“Coverage Mapping Menu”](#) on page 6-15.

Figure 6-11. Pan & Zoom Menu

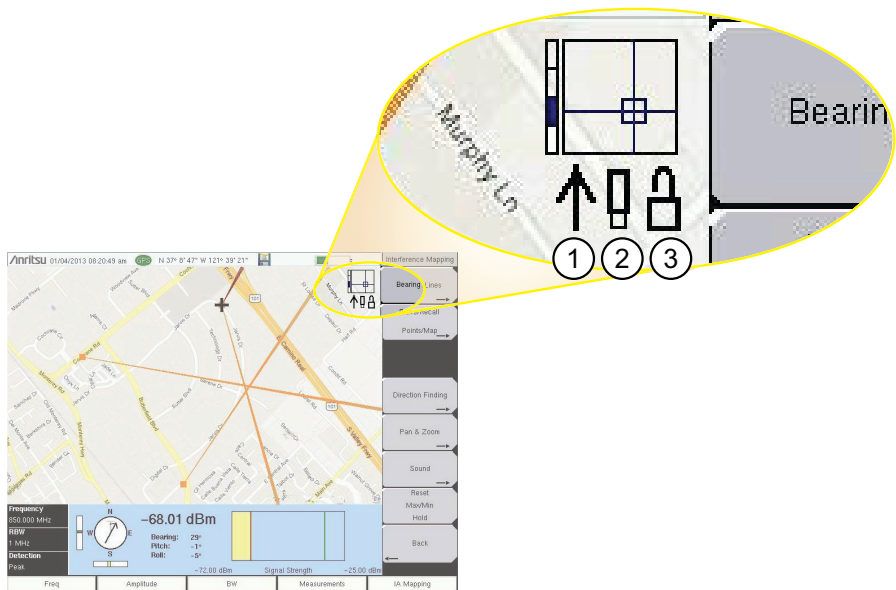

- | | |
|---|---|
| 1 | MA2700A USB cable is connected and recognized by the Anritsu instrument. |
| 2 | USB memory stick is available for data read/write. |
| 3 | AZM map auto-centering mode (locked/unlocked). When locked, the instrument automatically displays the map tile at the zoom level that best centers the current GPS location. The instrument will attempt to swap map tiles as the GPS location changes to continue displaying the current location near the center of the screen. |

Figure 6-12. Map Legend Status Indicators

Measurement Setup Menu

Key Sequence: **Shift** > **Measure (4)** key > Coverage Mapping > Measurement Setup

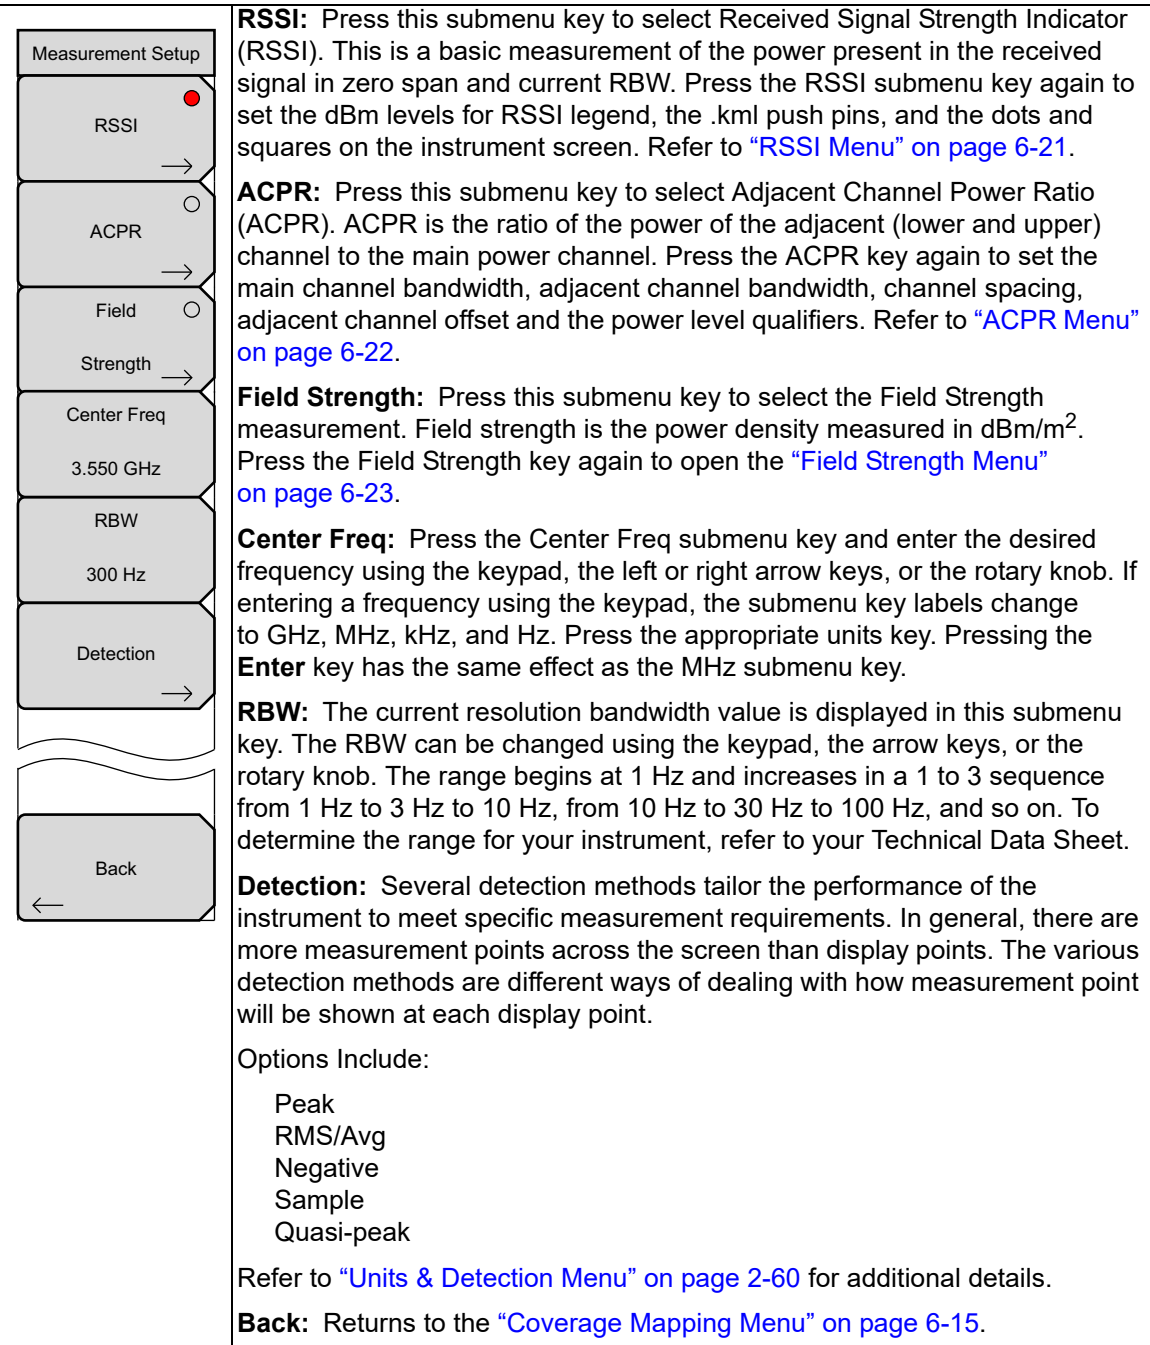


Figure 6-13. Measurement Setup Menu

Point Distance/Time Setup Menu

Key Sequence: **Shift** > **Measure** (4) key > Coverage Mapping > Point Distance/Time Setup

Points Distance/Time	Repeat Type: Toggles between using a Time or Distance interval for capturing data. Refer to “Map the Signal Strength” on page 6-7 . You may have to move the instrument around for data collection, and you may need to tap the touch screen if indoors.
Repeat Type	
Time Distance	
Repeat Time	Repeat Time: When the Repeat Type is Time and GPS is turned On for outdoor coverage mapping, use this submenu key to set the time interval between measurements. For indoor mapping (GPS is Off), the instrument interpolates position measurements in a straight line between each pair of screen-tap locations.
100 ms	
Repeat Distance	Repeat Distance: When the Repeat Type is Distance and GPS is turned On for outdoor mapping, use this submenu key to set the distance interval between measurements. For indoor mapping (GPS is Off), the instrument places all new measurements at the next screen-tap location. Note that the distance interval is approximate depending on GPS accuracy.
0.00 m	
Distance Units	
m ft	Distance Units: Toggles the unit of measure between meters and feet.
Delete ALL Points	Delete ALL Points: Deletes any and all map points.
Back	Back: Returns to the “Coverage Mapping Menu” on page 6-15 .

Figure 6-14. Point Distance/Time Setup Menu

RSSI Menu

Key Sequence: **Shift** > **Measure (4)** key > Coverage Mapping > Measurement Setup > RSSI

RSSI

Excellent: >=
0.0 dBm

Very Good: >=
-20.0 dBm

Good: >=
-40.0 dBm

Fair: >=
-100.0 dBm

Poor: <
-100.0 dBm

Back
←

The settings in this menu are used to set the color values for the recorded power during data collection. The legend displays the entered values.

Back: Returns to the [“Measurement Setup Menu” on page 6-19.](#)

Figure 6-15. Coverage Mapping RSSI Menu

ACPR Menu

Key Sequence: **Shift** > **Measure (4)** key > Coverage Mapping > Measurement Setup > ACPR

ACPR	Main Ch BW: Sets the bandwidth of the main channel for ACPR measurement. Use the keypad, the directional arrow keys, or the rotary knob to enter a specific frequency. When using the keypad, press the GHz, MHz, kHz, or Hz submenu key to accept the frequency input. Changing this value automatically changes the adjacent channel bandwidth and channel spacing.
Main Ch BW 10.350 MHz	Adj Ch BW: Sets the bandwidth of the adjacent channels for ACPR measurement. Use the keypad, the directional arrow keys, or the rotary knob to enter a specific frequency. When using the keypad, press the GHz, MHz, kHz, or Hz submenu key to accept the frequency input.
Adj Ch BW 10.350 MHz	Ch Spacing: Sets the channel spacing between the main and adjacent channels. Use the keypad, the directional arrow keys, or the rotary knob to enter a specific frequency. When using the keypad, press the GHz, MHz, kHz, or Hz submenu key to accept the frequency input. This value must be greater than or equal to half of the main channel bandwidth, plus half of the adjacent channel bandwidth. The up or down arrows change the frequency by the frequency step size entered in the “Freq (Frequency) Menu” on page 2-53 . The left or right arrow keys change the value by 10% of the span.
Ch Spacing 10.350 MHz	Adjacent Ch dB Offset: Sets the power ratio offset of the adjacent channels for ACPR measurement. The entered offset value determines the color of the lower and upper adjacent channels in the lower part of the display. If the ACPR value is larger (more positive) than the threshold, the box is green, otherwise, it is red.
Adjacent Ch dB Offset 0.0 dB	Good and Poor: These submenu keys are used to set the color values for the recorded power during data collection. The colors of the boxes in the lower part of the display, dots on the screen, and .kml pins change based on the measured values.
Good -40.0 dBm	Green: Measurement > Good
Poor -100.0 dBm	Yellow: Poor < Measurement ≤ Good
Back ←	Red: Measurement ≤ Poor
	Back: Returns to the “Coverage Mapping Menu” on page 6-15 .

Figure 6-16. Coverage Mapping ACPR Menu

Field Strength Menu

Key Sequence: **Shift** > **Measure** (4) key > Coverage Mapping > Measurement Setup > Field Strength

Field Strength	Refer to Section 2-12 “Field Strength Measurements” on page 2-15 for related information.
Antenna	Antenna: Opens a dialog for selecting an Anritsu antenna that is being used for the field strength measurement. When the antenna dialog is open, the menu changes to the Antenna Options menu, providing controls to: <ul style="list-style-type: none">- Filter the antenna list by favorites or EMI antennas- select and deselect antennas as a favorite, and save the favorites list- navigate the antenna list pages
Excellent: >= 0.0 dBm/m ²	Excellent to Poor: These submenu keys are used to set the color values for the recorded field strength during data collection. The bar graph in the lower part of the display indicates measured power density within the range settings of Excellent to Poor; the color of the measured Field Strength box, dots on the screen, and .kml pins change based on the measured value. Dark Green: Measurement ≥ Excellent Light Green: Measurement ≥ Very Good Yellow: Measurement ≥ Good Orange: Measurement ≥ Fair Red: Measurement ≤ Poor
Very Good: >= -20.0 dBm/m ²	
Good: >= -40.0 dBm/m ²	
Fair: >= -100.0 dBm/m ²	
Poor: < -100.0 dBm/m ²	
Back ←	Back: Returns to the “Coverage Mapping Menu” on page 6-15.

Figure 6-17. Coverage Mapping ACPR Menu

Refer to [Chapter 2, “Spectrum Analyzer”](#) for additional spectrum analyzer menus.

Chapter 7 — AM/FM/PM Analyzer (Option 509)

Note

Not all instrument models offer every option. Refer to the Technical Data Sheet of your instrument for available options.

7-1 Introduction

This chapter presents information and procedures that are used to make measurements when using the optional AM/FM/PM Analyzer mode (Option 509).

The AM/FM/PM Analyzer provides display and analysis of the key characteristics of analog AM, FM, and PM modulated signals. The AM/FM/PM Analyzer provides the following displays:

1. **RF Spectrum** shows the RF Spectrum graph, which is similar to Spectrum Analyzer mode with carrier power, carrier frequency, and occupied bandwidth measurements. To get to this view, select the Measurements menu and then press **RF Spectrum**. To change the occupied bandwidth measurement, press **RF Spectrum** again and make changes as desired.
2. **Audio Spectrum** shows the demodulated audio spectrum along with the following measurements: Rate, RMS, Pk-Pk/2, SINAD, THD, and Distortion/Total. To change X-axis values to 2 kHz, 5 kHz, 10 kHz, 20 kHz, 70 kHz, or 140 kHz, press **Audio Spectrum** again and change Span. When analyzing FM and PM, the reference Y-axis value is also scalable.
3. **Audio Waveform** displays the time-domain demodulated waveform along with Rate, RMS, Pk-Pk/2, SINAD, THD, and Distortion/Total measurements. The X-axis value can be changed by pressing **Audio Waveform** and changing the Sweep Time. When analyzing FM and PM, the reference Y-axis value is also scalable.
4. **Summary** displays all of the above mentioned measurements from RF Spectrum as well as the demodulated signal.
5. **AM/FM/PM Coverage Mapping (Option 431 and Option 31 also required)** allows users to map SINAD and Carrier Power measurements in a given geographical area. Note that Option 31 is not required for indoor mapping.

7-2 General Measurement Setup

Refer to your instrument User Guide for instructions on setting up frequency, span, amplitude, GPS, limit lines, markers, and file management.

1. Connect an antenna that is suitable for the measurements.
2. If the instrument is currently in a different measurement mode, switch to AM/FM/PM Analyzer mode. Refer to [“Product Information, Compliance, and Safety” on page 1-1](#).
3. Press the **Setup** main menu key, then press the **Demod Type** submenu key to toggle the setting to AM, FM, or PM signal analysis. The active setting is underlined on the submenu key face.
4. While in the Setup menu, you may choose to set the IFBW (IF Bandwidth) or to turn On or Off the automatic IFBW (by pressing the **Auto IFBW** submenu key). The available values for IFBW are: 1 kHz, 3 kHz, 10 kHz, 30 kHz, 100 kHz, and 300 kHz.

If the Auto IF BW function is On, then manually changing the IFBW turns it Off. When the Auto IF BW function is On, the IFBW is automatically changed to the closest value that is greater than, or equal to, the span currently set in the **Freq** main menu. If the span is greater than 300 kHz, then the IFBW is set to 300 kHz.

5. Press the **Freq** main menu key. You can set the frequency in one of two ways:
 1. Press the **Center Freq** submenu key to set the desired center frequency. In RF Spectrum measurements, press the **Set Carrier Freq to Center** submenu key to adjust the signal position to the center of the display screen.

Note

If Demod Type is set to FM or PM, then the Set Carrier Freq to Center function aligns the carrier to center only if the carrier is within the IFBW from the center frequency.

2. Press the **Signal Standard** submenu key to display the Signal Standards list. Choose a signal standard and press the **Enter** key. The current signal standard is displayed at the top of the sweep window. The frequency is automatically set when the signal standard is selected.

Press the **Channel** submenu key to open the Channel Editor dialog and select a channel.

6. Press the **Span** submenu key and set a span value.
7. Press the **Amplitude** main menu key to open the RF Amplitude menu. Here you may set the scale or the power offset.
8. Press the **Measurements** main menu key to open the Measurements menu.
9. From the Measurements menu, choose RF Spectrum, Audio Spectrum, Audio Waveform, or Summary.

Note

Measurement values for SINAD, THD, and Distortion/Total apply only to single tone modulation. For better accuracy of these measurements, the modulation rate should be at least 0.7% of IFBW. For Distortion Measurements, the IFBW should be at least twice the maximum modulation rate + deviation.

10. If the RF Spectrum graph displays “ADC error”, then press the **Amplitude** main menu key and then press **Adjust Range**. Pressing the **Adjust Range** submenu key sets the Y-axis reference level based on the signal strength. If the signal is too large (ADC error) or too low, then pressing this key sets the reference level such that the signal is displayed fully within the sweep window. The peak may be close to second grid from the reference.
11. To listen to the audio component of an AM or FM signal, press the **Audio Demod** submenu key. Audio demodulation is not available for PM signals.
12. In the **Audio Demod** menu, press the **On / Off** submenu key turn On or Off the audio demodulation function. A **Demod Type** submenu key is available, as well as a **Volume** submenu key.
13. To save or recall setups or measurements, press the **Shift** key and the **File (7)** key. Setup files are saved with a **.stp** extension, and measurement files are saved with a **.afp** extension.
14. Setups may also be saved or recalled by pressing the **Shift** key and the **Preset (1)** key. Refer to your instrument User Guide for details.

7-3 Example FM Demodulation Measurement

- 1. Press the **Setup** main menu key and then press the **Demod Type** submenu key to toggle the setting to FM. The active setting is underlined on the submenu key face.
- 2. Press the **Auto IFBW** submenu key to set the IFBW (IF Bandwidth) frequency automatically. The active setting is underlined on the submenu key face.
- 3. Press the **IFBW** submenu key to set the value manually. Doing so will automatically turn Off the **Auto_IFBW** function. The available values for IFBW are: 1 kHz, 3 kHz, 10 kHz, 30 kHz, 100 kHz, and 300 kHz.
- 4. Press the **Freq** main menu key to set the center frequency, the span, the signal standard, or the channel.
- 5. Press the **Amplitude** main menu key to set the scale or the power offset. From the RF Amplitude menu, you can also press the **Adjust Range** submenu key.
- 6. Press the **Measurements** main menu key to choose the desired type of measurement.
- 7. From the Measurements menu, press the **RF Spectrum** submenu key to view the signal spectrum. Press the submenu key again to set specific signal measurement functions.
 - a. Press the **Occ BW Method** submenu key to select the preferred method of presenting the occupied bandwidth, either by percent of the total received signal power or by an amount better than the dBc that is set with the dBc submenu key.
 - b. Use the other two submenu keys as needed for signal presentation.
- 8. Press the **Audio Spectrum** submenu key to view the spectrum of the demodulated audio. Press the submenu key again to set the span for the audio spectrum or the squelch level. Note that RF signals below the squelch level will cause the audio spectrum to be a flat line in the center of the screen.

In this view, you can see the 19 kHz stereo pilot tone as well as other subcarriers.

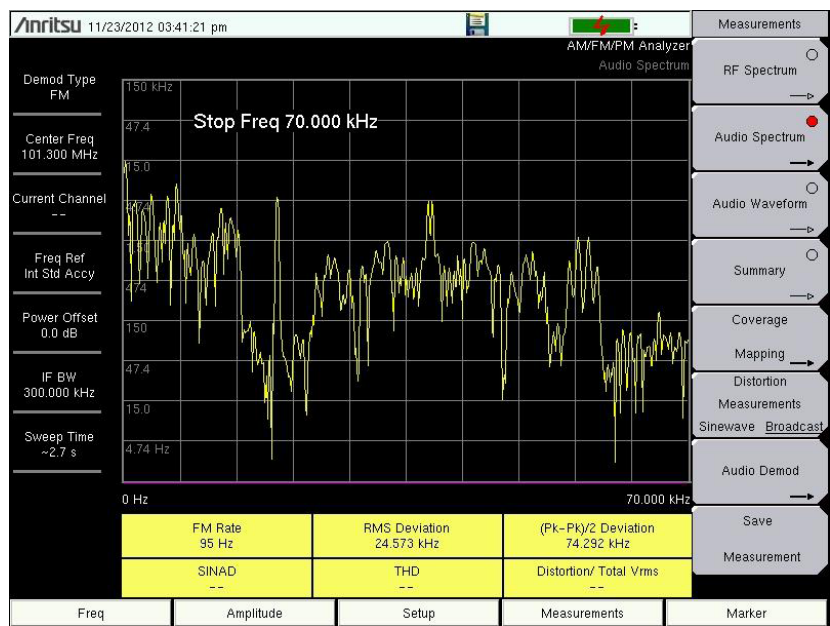


Figure 7-1. Audio Spectrum

9. From the Measurements menu, press the Audio Waveform submenu key to view the audio waveform. Press the submenu key again to set the sweep time for the audio waveform display, or the squelch level. Note that RF signals below the squelch level will cause the audio waveform to be a flat line in the center of the screen.

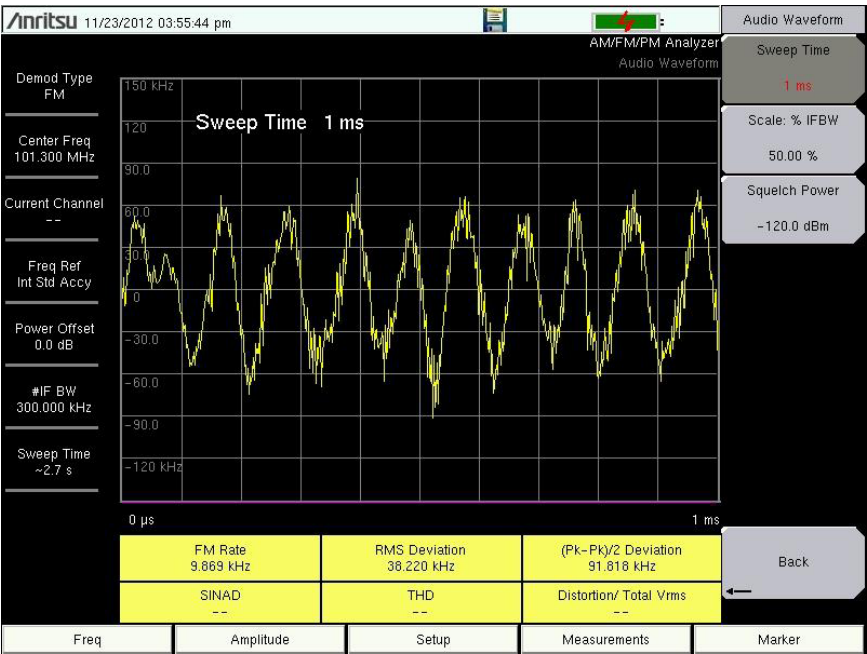


Figure 7-2. Audio Waveform

10. From the Measurements menu, press the Audio Demod submenu key to listen to the audio component of the FM signal. In this menu, you can choose wideband or narrowband demodulation, set the demodulation time, and you can also set the instrument speaker volume.

11. Press the Summary submenu key to view all of the signal characteristics in table format. Press the submenu key again to set the summary average or the squelch level.

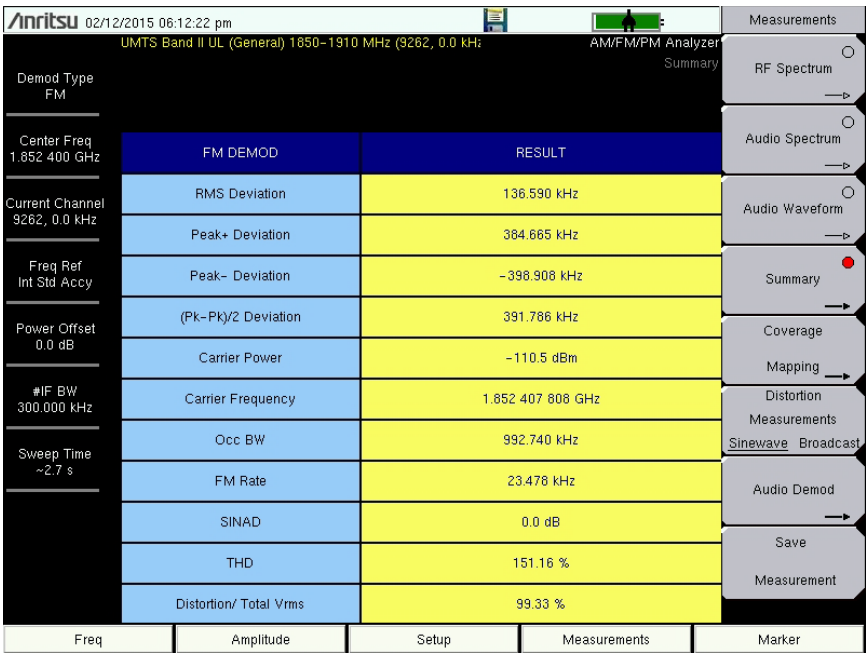


Figure 7-3. Audio Summary

Note

Measurement values for SINAD, THD, and Distortion/Total apply only to single tone modulation. For better accuracy of these measurements, the modulation rate should be at least 0.7% of IFBW. For Distortion Measurements, the IFBW should be at least twice the maximum modulation rate + deviation.

If the modulation source is not single tone, you can turn off these measurements by pressing the Distortion Measurements submenu key to select the Broadcast setting.

12. For instruments that also have Option 431 installed, press the Coverage Mapping submenu key to set up mapping of Signal-to-Noise and Distortion (SINAD) ratio and/or Carrier Power. Refer to [Figure 7-4](#) for an example of coverage mapping. After coverage mapping is turned on, press Measurement Setup to select SINAD and/or Carrier Power and set the threshold levels.

Note Frequency, Demod Type, IF Bandwidth and Threshold levels can also be changed using the touch screen.

The menu structure for coverage mapping is shown starting in “AM/FM/PM Analyzer Menus” on page 7-8.

Refer to [Chapter 6, “Coverage Mapping \(Option 431\)”](#) for an overview of the coverage mapping four-step process:

- Create an indoor or outdoor map using “Anritsu easyMap Tools” on page 6-4.
- Load the map and configure the “Instrument Settings” on page 6-5.
- Connect an antenna to the instrument and go to “Map the Signal Strength” on page 6-7.
- “Save the Coverage Mapping Information” on page 6-9.

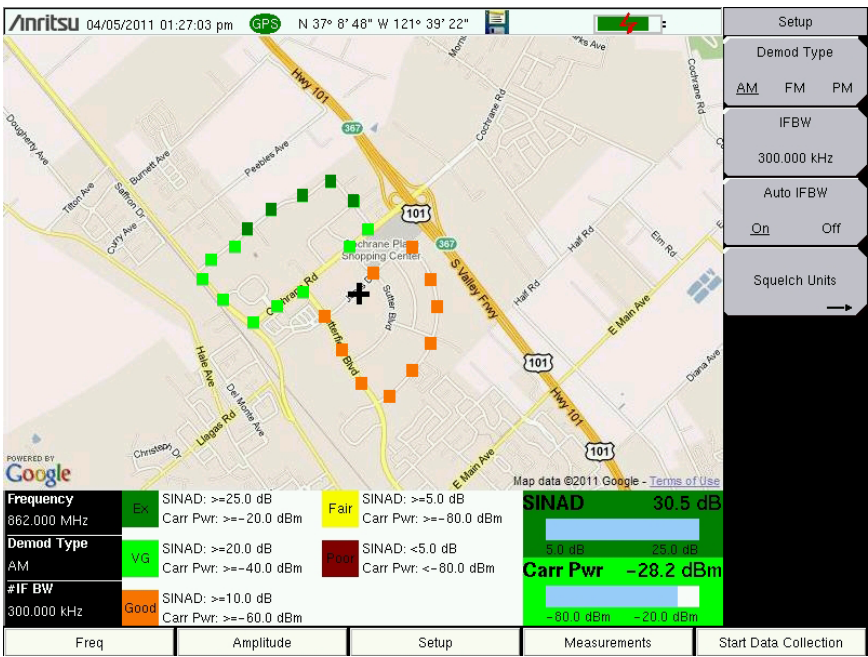


Figure 7-4. Mapping of AM Signal SINAD and Carrier Power.

Note AM/FM/PM Coverage mapping uses AM/FM/PM Analyzer mode not Spectrum Analyzer mode.

7-4 AM/FM/PM Analyzer Menus

The AM/FM/PM Analyzer controls are accessed in the menus. The menus that are opened by the five main menu keys are shown in Figure 7-5.

Map of Main Menus

Menu maps typically display all possible submenu keys, although some keys are displayed on the instruments only under special circumstances (refer to menu descriptions).

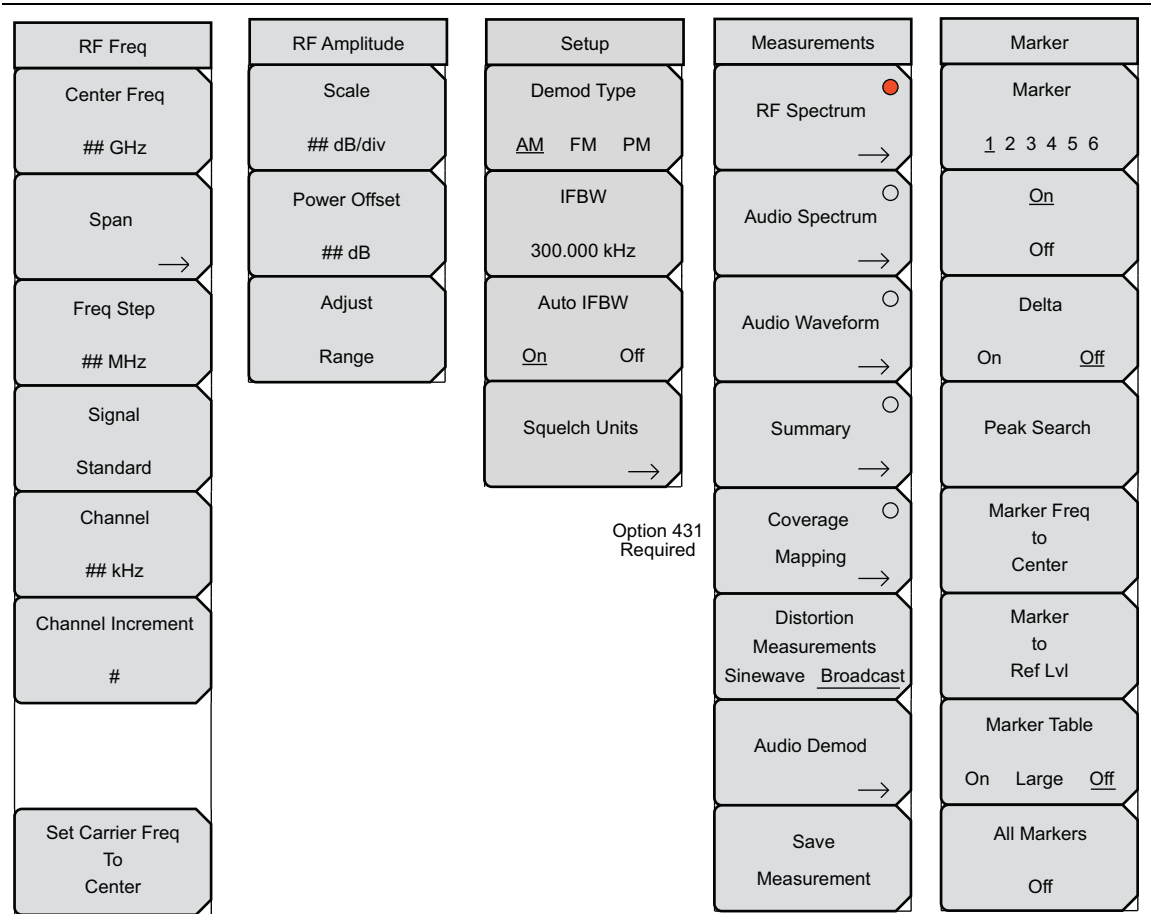


Figure 7-5. Main Menus with AM/FM/PM Analyzer (Option 509)

Map of Frequency Menus

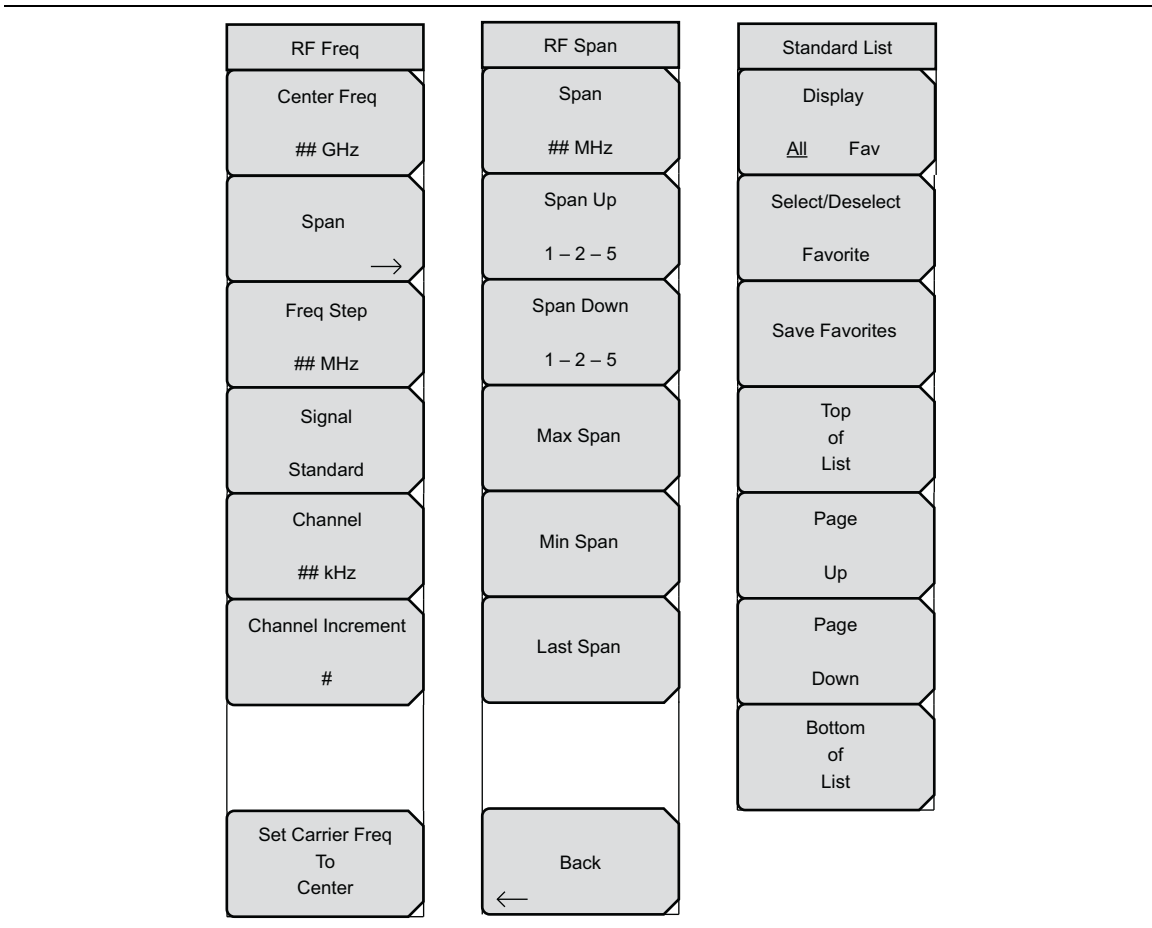


Figure 7-6. Frequency Menus with AM/FM/PM Analyzer (Option 509)

Map of Measurements Menus

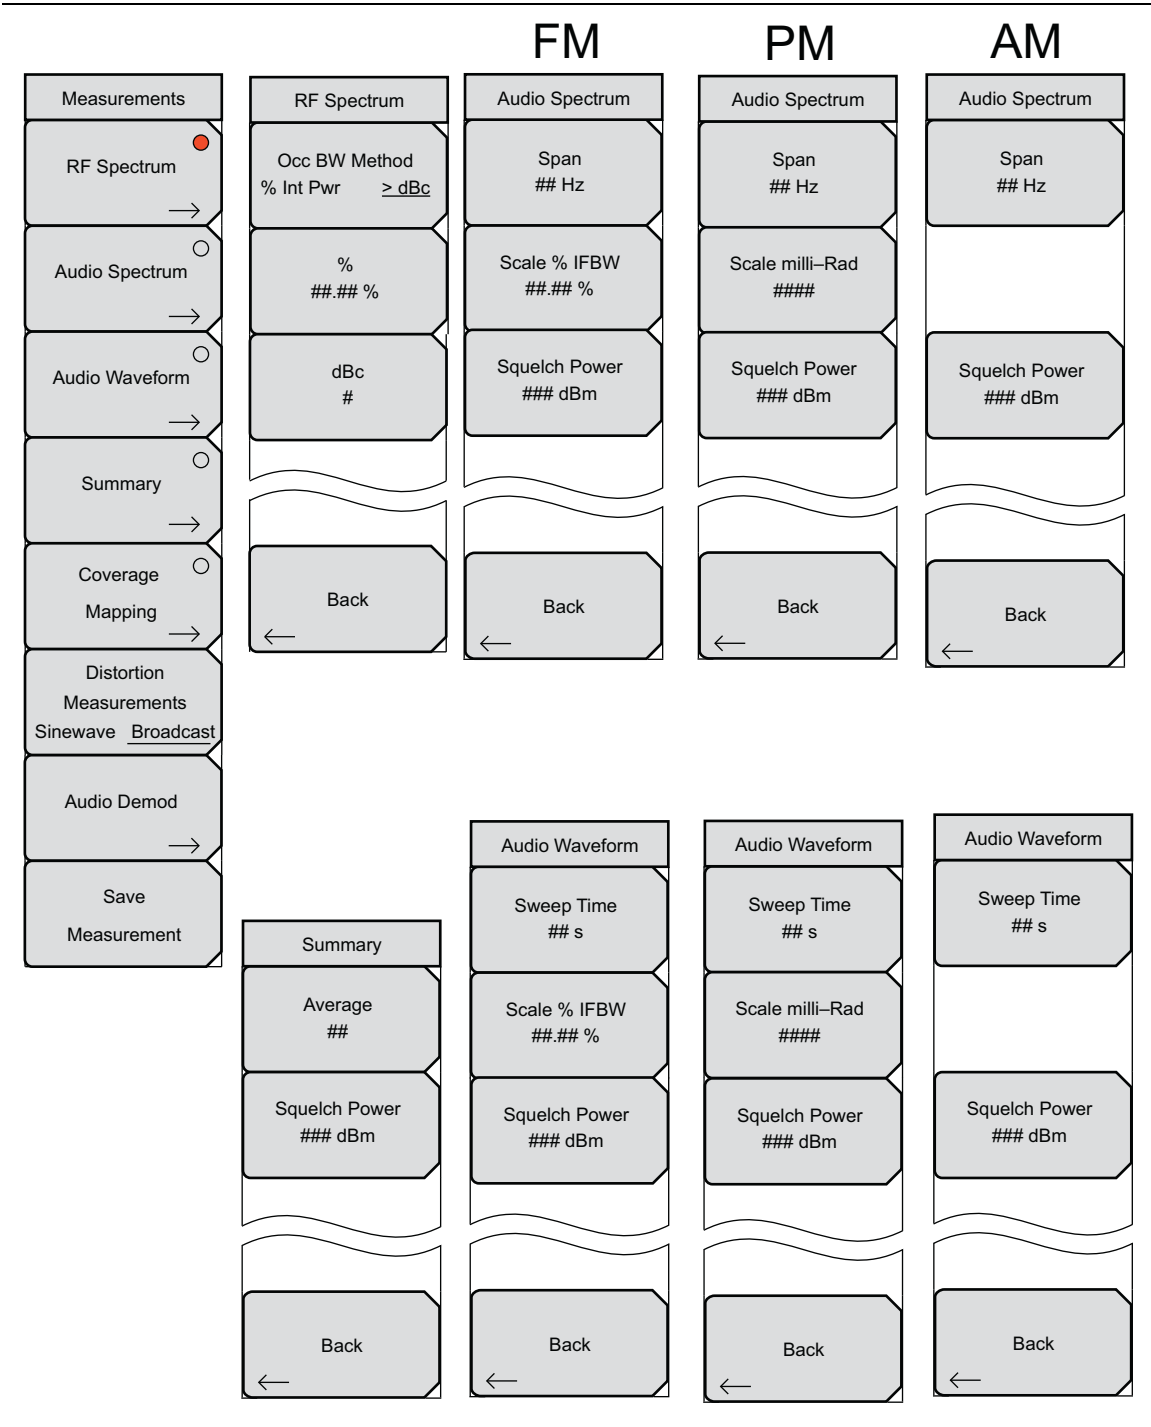


Figure 7-7. Measurements Menus with AM/FM/PM Analyzer (Option 509)

Map of Audio Demod Menus

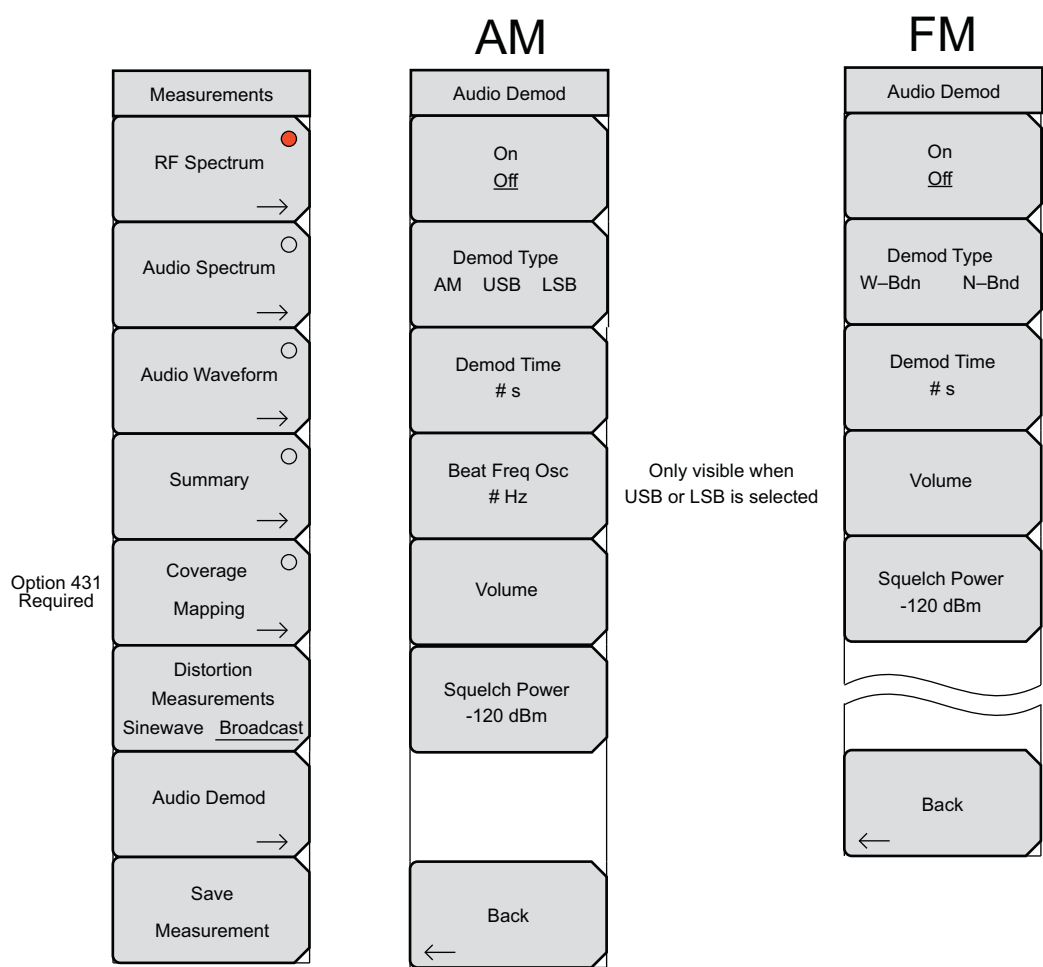


Figure 7-8. Audio Demod Menus with AM/FM/PM Analyzer (Option 509)

7-5 RF Freq (Frequency) Menu

Key Sequence: **Freq**

RF Freq	Center Freq: Press to set the frequency that you desire to measure to be in the center of the sweep window. Enter the desired frequency by using the keypad, the arrow keys, or the rotary knob. If entering a frequency by using the keypad, then the submenu key labels change to GHz, MHz, kHz, and Hz. Press the appropriate units key. Pressing the Enter key has the same effect as pressing the MHz submenu key.
Center Freq	
## GHz	
Span	Span: Press to open the Span menu (" RF Span Menu " on page 7-13). The Span menu is used to set the frequency range over which the instrument will sweep. The span can be set from 10 Hz to the maximum frequency range the product will support. See the product specifications for the maximum frequency. Span can also be set to zero span.
→	
Freq Step	Freq Step: Press to set to enter the desired frequency step size. The frequency step specifies the amount by which a frequency will change when the up or down arrow keys are pressed. The center frequency value can be changed by using Freq Step. The active parameter will be changed by the frequency step when the up or down arrow keys are pressed. If Freq Step is the active parameter, nothing happens when the arrow keys are pressed. The frequency step size can be any value from 1 Hz to the upper limit of the instrument with a resolution of 1 Hz. Use the keypad or the rotary knob to change the Frequency Step size.
## MHz	
Signal	
Standard	Signal Standard: Press to select a signal standard from the list of available standards. You can edit this list of Signal Standards by using Master Software Tools. Use the rotary knob or the arrow keys to scroll to the desired standard, and then press the Enter key. Or press the Esc key to abort and exit without a change. Refer to the (" Signal) Standard List Menu " on page 7-14.
Channel	
## kHz	Channel: Press the up or down arrow keys, the keypad, or the rotary knob to select a channel number for the selected signal standard. The center of the channel is tuned to the center of the spectrum analyzer display.
Channel Increment	
#	Channel Increment: Press to set the increment value for the Channel # submenu key
	Set Carrier Freq To Center: Press to set the carrier frequency to the center of the sweep window. If Demod Type is set to FM or PM, then the Set Carrier Freq to Center function aligns the carrier to center only if the carrier is within the IFBW from the center frequency.
Set Carrier Freq To Center	

Figure 7-9. RF Freq Menu

7-6 RF Span Menu

Key Sequence: **Freq** > **Span**

RF Span	Span: Press to set the RF Span. If you use the numeric keypad to enter a value, then the submenu keys change to Units of GHz, MHz, kHz, or Hz. Pressing the Enter key is the same as pressing the MHz submenu key. You may also use the rotary knob or the arrow keys, then press the Enter key.
Span	
## MHz	
Span Up	Span Up: Press to increase the Span. If starting at 10 kHz, the span increases to 20 kHz, 50 kHz, 100 kHz, 200 kHz, 500 kHz, 1 MHz, 2 MHz, 5 MHz and 10 MHz. Each press of this submenu key increases the span to one of these listed values.
1 – 2 – 5	
Span Down	Span Down: Press to decrease the Span. If starting at 5 MHz, then span decreases to 2 MHz, 1 MHz, 500 kHz, 200 kHz, 100 kHz, 50 kHz, 20 kHz, and 10 kHz. Each press of this submenu key decreases the span to one of these listed values.
1 – 2 – 5	
Max Span	Max Span: Press to set the span to 10 MHz, the maximum value.
	Min Span: Press to set the span to 10 kHz, the minimum value.
Min Span	Last Span: Press to set the span to the previously set span value.
	Back: Press to return to the RF Freq menu.
Last Span	
Back	
←	

Figure 7-10. RF Span Menu

7-7 (Signal) Standard List Menu

Key Sequence: **Freq** > Signal Standard

Standard List	Display
Display	All Fav: Press to display all available signal standards, or just those that have been marked as favorites. The current setting is underlined on the submenu key face.
<u>All</u> Fav	Select/Deselect Favorite: Press to mark (select) or unmark (deselect) signal standards in the Signal Standards list box.
Select/Deselect	Save Favorites: Press to save any selections (or de-escalations) in the list.
Favorite	Top of List: Press to move the list display to show the first (top of list) standards.
Save Favorites	Page Up: Press to move through the list one page at a time.
Top of List	Page Down: Press to move through the list one page at a time.
Page Up	Bottom of List: Press to move the list display to show the last (bottom of list) standards.
Page Down	
Bottom of List	

Figure 7-11. (Signal) Standard List Menu

7-8 Amplitude Menu

Key Sequence: **Amplitude**

RF Amplitude	Scale: Press to set the scaling factor in dB per division. Use the rotary knob, the arrow keys, or the numeric keypad, then press the Enter key.
Scale ## dB/div	Power Offset: Press to set the power offset in dB. Use the rotary knob, the arrow keys, or the numeric keypad, then press the Enter key.
Power Offset ## dB	Adjust Range: Press to change the reference level if the signal strength is too high (ADC error) or too low.
Adjust Range	

Figure 7-12. Amplitude Menu

7-9 Setup Menu

Key Sequence: **Setup**

Setup

Demod Type

AM FM PM

IFBW

300.000 kHz

Auto IFBW

On Off

Squelch Units

→

Squelch Units

←

dBm

Volt

Back

←

Demod Type
AM FM PM: Press to set the demodulation type to one of these three options. The selection toggles through the three choices, and the current setting is underlined on the submenu key.

IFBW: Press to set the intermediate frequency bandwidth (IFBW) and use the number keypad, the arrow keys, or the rotary knob to set the value. The available values for IFBW are: 1 kHz, 3 kHz, 10 kHz, 30 kHz, 100 kHz, and 300 kHz.

Auto IFBW
On Off: Press to turn On or Off the automatic selection of the intermediate frequency bandwidth (IFBW). The selection toggles between the two choices, and the current setting is underlined on the submenu key.

Squelch Units: Press to select whether the Squelch level is set in dBm or Volts.

Figure 7-13. Setup Menu

7-10 Measurements Menu

Key Sequence: **Measurements** or **(Shift + 4)**

The measurements that are displayed by the choices in this menu are AM or FM or PM, depending on the demodulation type that you select from the Setup menu.

Measurements	
RF Spectrum	RF Spectrum: Press to turn On the RF Spectrum measurement. The circle on the submenu key face is red when the measurement is active. When the circle is red, press this submenu key again to open the RF Spectrum menu.
Audio Spectrum	Audio Spectrum: Press to turn On the Audio Spectrum measurement. The circle on the submenu key face is red when the measurement is active. When the circle is red, press this submenu key again to open the Audio Spectrum menu.
Audio Waveform	Audio Waveform: Press to turn On the Audio Waveform measurement. The circle on the submenu key face is red when the measurement is active. When the circle is red, press this submenu key again to open the Audio Waveform menu.
Summary	Summary: Press to view a summary of the RF Spectrum, Audio Spectrum, and Audio Waveform measurements. The circle on the submenu key face is red when the measurement is active. The results are displayed in table format.
Coverage Mapping	Coverage Mapping: Press to open the "Coverage Mapping Menu" on page 7-25 . The circle on the submenu key face is red when the measurement is active.
Distortion Measurements Sinewave <u>Broadcast</u>	Distortion Measurements: Displays SINAD, THD, and Distortion/Total Vrms values when Sinewave is selected. These measurements are turned off and the values are shown as "- -" when Broadcast is selected.
Audio Demod	Audio Demod: Press this submenu key to open the Audio Demod menu.
Save Measurement	Save Measurement: Opens the Save menu.

Figure 7-14. Measurements Menu

7-11 RF Spectrum Menu

Key Sequence: **Measurements** or **(Shift + 4)** > RF Spectrum > RF Spectrum

<div><div>RF Spectrum</div><div>Occ BW Method</div><div>% Int Pwr > dBc</div><div>% ###.### %</div><div>dBc #</div><div></div><div>Back ←</div></div>	<p>Occ BW Method</p> <p>% Int Pwr >dBc: Press to select a method of presenting the occupied bandwidth, either by percent of the total received signal power or by an amount greater than the dBc that is set with the dBc submenu key. The selection toggles through the choices, and the current setting is underlined on the submenu key.</p> <p>%: Press to set the percent for the Occupied BW calculation if the selected Occ BW Method is % Int Pwr.</p> <p>dBc: Press to set the dBc for the Occupied BW calculation if the selected Occ BW Method is >dBc.</p> <p>Back: Press to return to the Measurements menu.</p>
---	---

Figure 7-15. RF Spectrum Menu

7-12 Audio Spectrum AM Menu

Key Sequence: **Measure** or **(Shift + 4)** > Audio Spectrum > Audio Spectrum

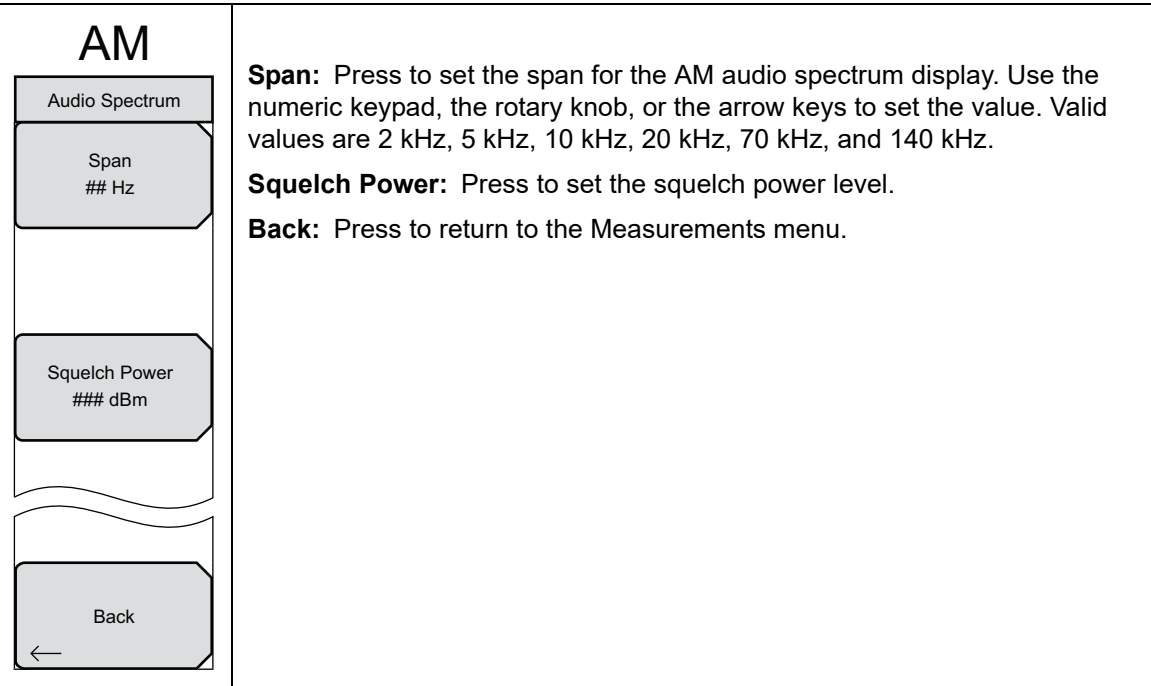


Figure 7-16. Audio Spectrum AM Menu

7-13 Audio Waveform AM Menu

Key Sequence: **Measure** or **(Shift + 4)** > Audio Waveform > Audio Waveform

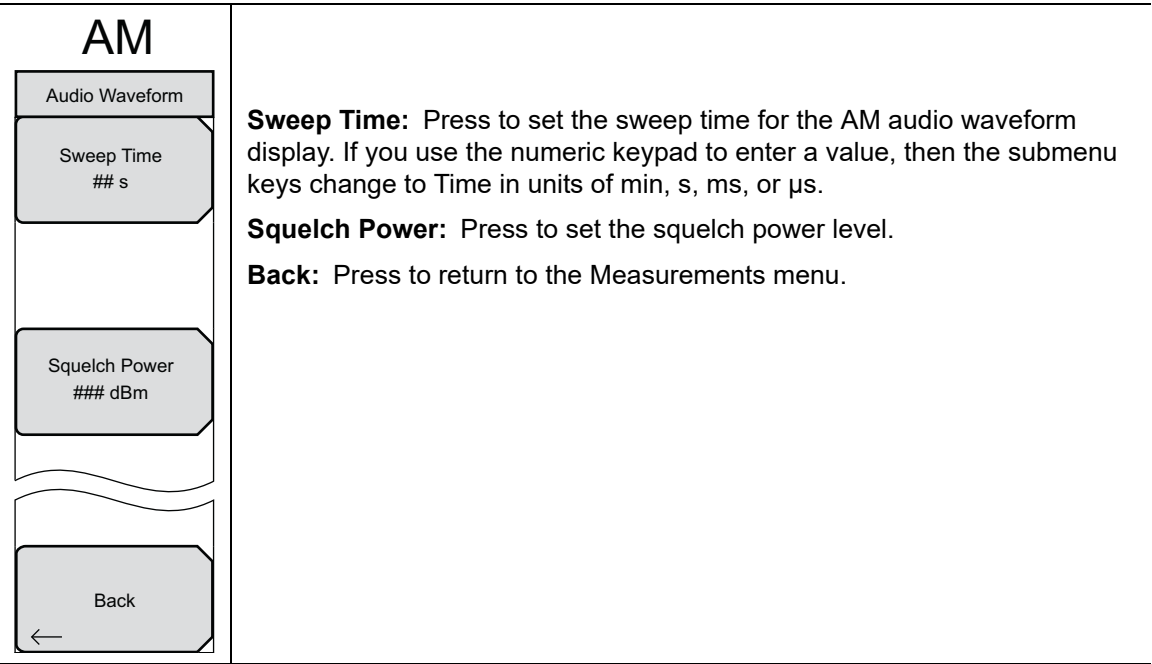


Figure 7-17. Audio Waveform AM Menu

7-14 Audio Spectrum FM Menu

Key Sequence: **Measure** or **(Shift + 4)** > Audio Spectrum > Audio Spectrum

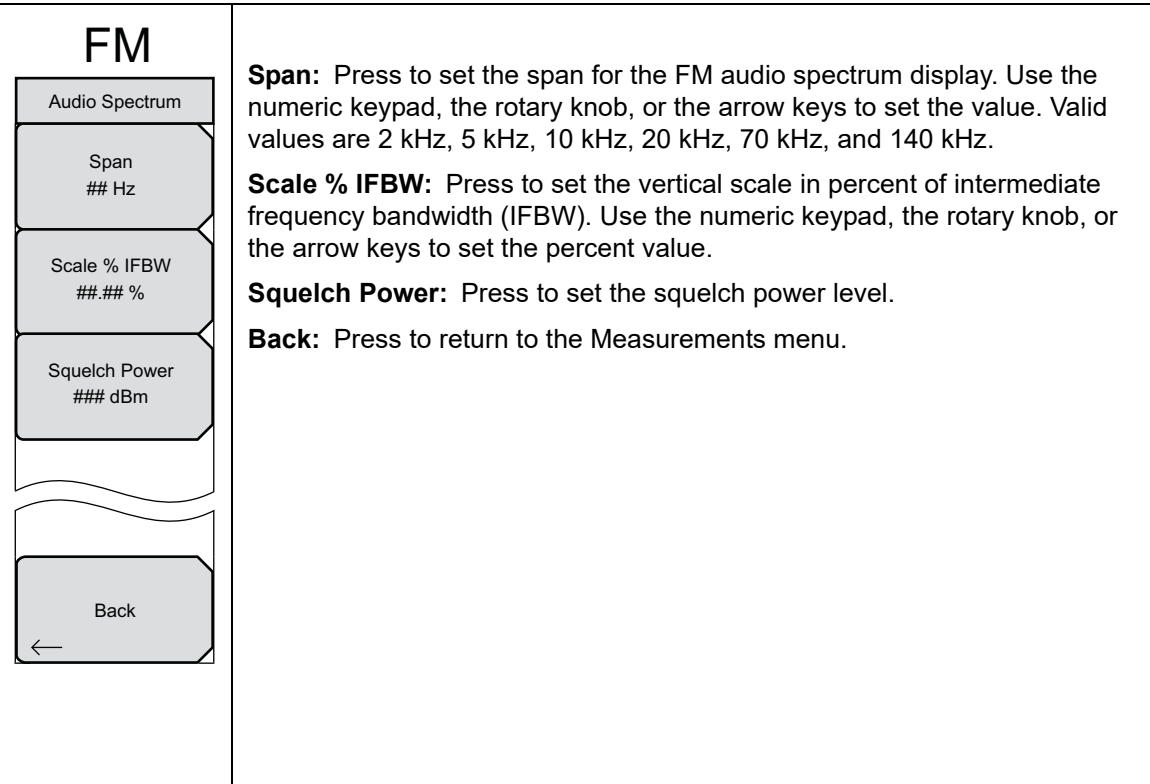


Figure 7-18. Audio Spectrum FM Menu

7-15 Audio Waveform FM Menu

Key Sequence: **Measure** or **(Shift + 4)** > Audio Waveform > Audio Waveform

FM

Audio Waveform

Sweep Time
s

Scale % IFBW
##.## %

Squelch Power
dBm

Back
←

Sweep Time: Press to set the sweep time for the FM audio waveform display. If you use the numeric keypad to enter a value, then the submenu keys change to Time in units of min, s, ms, or μ s. The output turns On at the level that has been set with the Output Power submenu key. The current state (Off or On) is underlined.

Scale % IFBW: Press to set the vertical scale in percent of intermediate frequency bandwidth (IFBW). Use the numeric keypad, the rotary knob, or the arrow keys to set the percent value.

Squelch Power: Press to set the squelch power level.

Back: Press to return to the Measurements menu.

Figure 7-19. Audio Waveform FM Menu

7-16 Audio Spectrum PM Menu

Key Sequence: **Measure** or **(Shift + 4)** > Audio Spectrum > Audio Spectrum

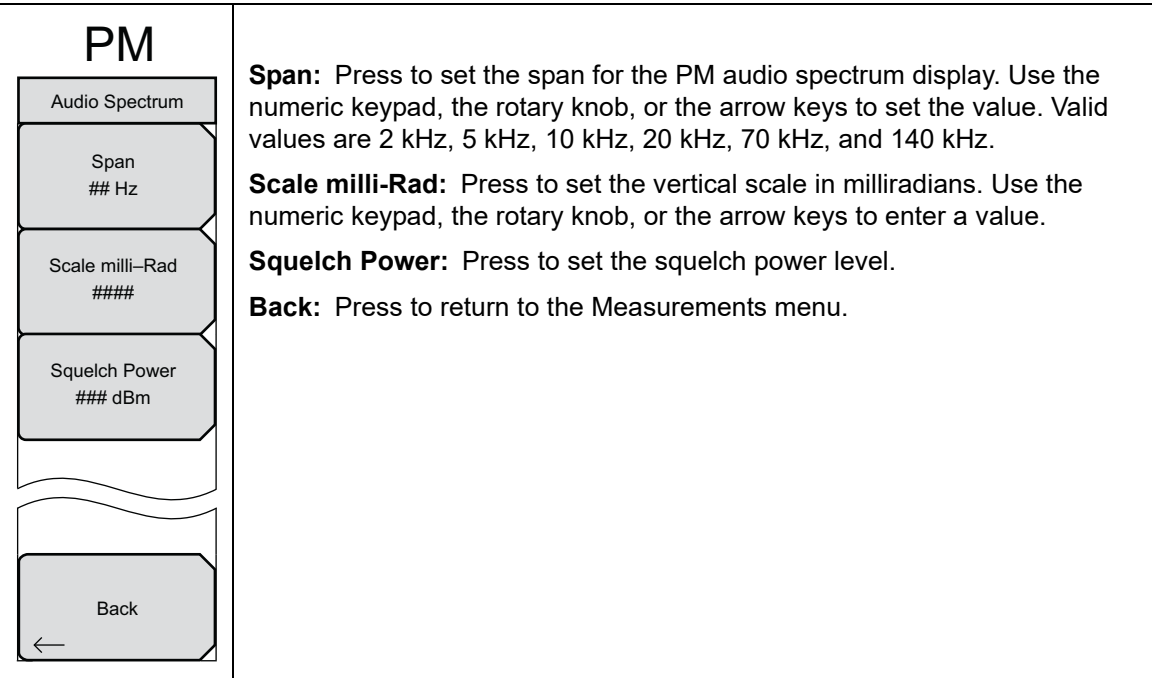


Figure 7-20. Audio Spectrum PM Menu

7-17 Audio Waveform PM Menu

Key Sequence: **Measure** or **(Shift + 4)** > Audio Waveform > Audio Waveform

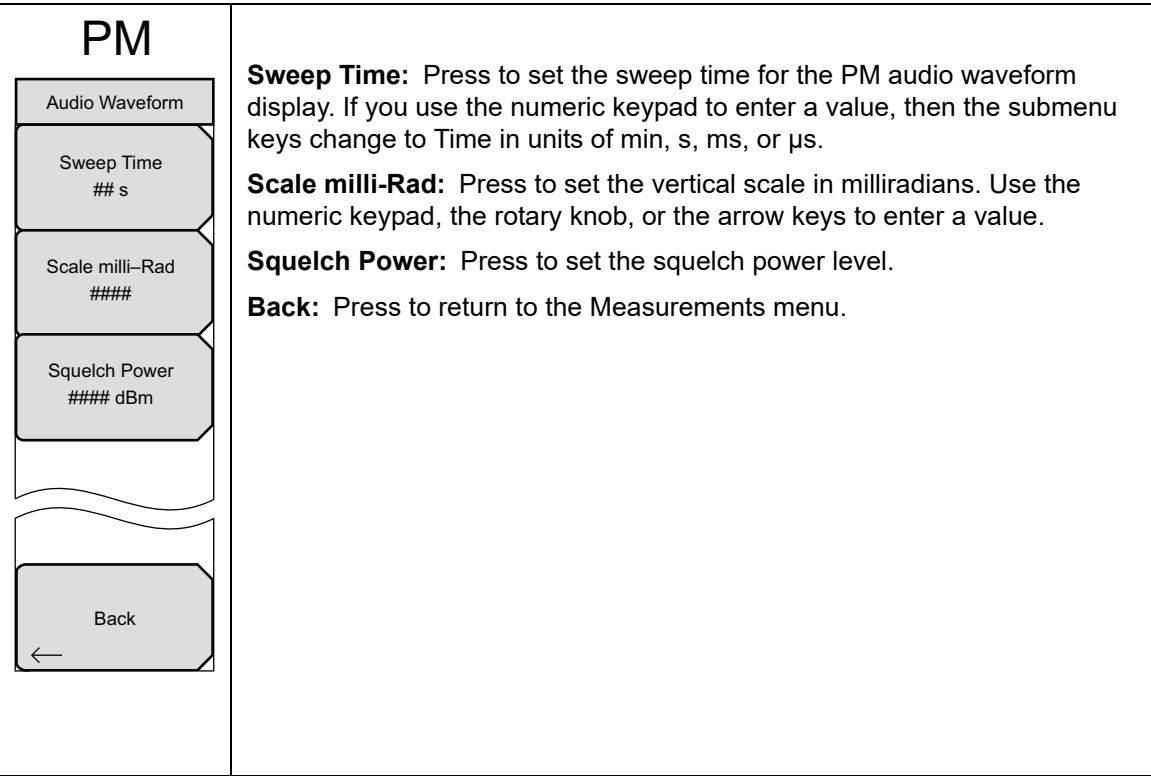


Figure 7-21. Audio Waveform PM Menu

7-18 Coverage Mapping Menu

Key Sequence: **Measure** or **(Shift + 4)** > Coverage Mapping

Coverage Mapping	On Off: Toggles Coverage Mapping On or Off. The current map or the default grid is displayed when Coverage Mapping is On. When Off, the instrument shows the standard measurement display.
On	
Off	
Save/Recall	Save/Recall Points/Map: Press this submenu key to open the “ Mapping Save/Recall Menu ” on page 7-26, where you can save the mapping information or recall a map.
Points/Map →	
<hr/>	
Pan & Zoom →	Measurement Setup: Press this submenu key to open the “ Measurement Setup Menu ” on page 7-27 and select the coverage measurement type and threshold values.
Measurement Setup →	
Point Distance/Time Setup →	Point Distance/Time Setup: Press this submenu key to open the “ Point Distance/Time Setup Menu ” on page 7-28 and set up the Time or Distance interval for capturing data.
Back	Back: Returns to the “ Measurements Menu ” on page 7-17.
	Start/Stop Data Collection: Press this main menu key to start coverage mapping data collection based on Measurement Setup settings and Point Distance/Time Setup settings. A running count of collected data points is displayed at the bottom of the map. Press again to stop data collection.

Figure 7-22. AM/FM/PM Coverage Mapping Menu

Mapping Save/Recall Menu

Key Sequence: **Measure** or **(Shift + 4)** > Coverage Mapping > Save/Recall Points/Maps

Mapping Save/Recall	Save KML Points: Press this button to save the KML points. FileName.kml will be stored in the selected location. From the File menu, press Save then Change Save Location to change the default location.
Save KML Points	Save Tab Delimited Points: Press this button to save the points in a tab delimited text file. FileName.mtd will be stored in the selected location.
Save Tab Delimited Points	Save JPG: Press the Save JPG key to save a .jpg file of the current screen.
Save JPG	Recall a Map: Opens the Recall submenu (shown at the bottom left of this page) for selecting a map to display on the screen. The default map type is .azm. Press the File Type submenu key to select a different map type to recall.
Recall a Map	Recall KML Points Only: Opens the Recall menu for selecting a .kml file. Displays the saved locations overlaid on the current map or the default grid.
Recall KML Points Only	Recall KML Points With Map: Opens the Recall menu for selecting a .kml file. The map that was used when the points were saved will be recalled if it is available.
Recall KML Points With Map	Recall Default Grid: If you do not have a GPS embedded map but are out in the field making measurements, the Recall Default Grid submenu allows you to save points and the corresponding GPS coordinates (or screen coordinates for indoor maps) to view at a later time. You can also load the map after acquiring points, or switch maps at any time without losing data.
Recall Default Grid	Back: Returns to the “Coverage Mapping Menu” on page 7-25 .
Back	
←	

Recall
Sort By
Name <u>Date</u> Type
Sort Order
Asc <u>Desc</u>
File Type
AZM
Refresh
Directories

Figure 7-23. AM/FM/PM Mapping Save/Recall Menu

Measurement Setup Menu

Key Sequence: **Measure** or **(Shift + 4)** > Coverage Mapping > Measurement Setup

<div>Measurement Setup</div> <div>Measurement</div> <div>SINAD →</div> <div></div> <div>SINAD</div> <div>Thresholds →</div> <div>Carrier Power</div> <div>Thresholds →</div> <div></div> <div>Back</div> <div>←</div>	<p>Measurement: Press this button to select coverage measurement. Choose between SINAD, Carrier Power or Both (Multiple). The button displays the current measurement selection. When Multiple is selected, the colors displayed on the instrument and in Google Earth are determined by the Carrier Power measurements, based on the specified threshold levels.</p> <p>SINAD Thresholds: Press this button to select the threshold values for SINAD measurements. Each threshold corresponds to a specific mapping point color during coverage mapping (Figure 7-4 on page 7-7). Threshold values can also be changed with the touch screen by pressing on one of the color boxes in the map legend.</p> <p>Carrier Power Thresholds: Press this button to select the threshold values for Carrier Power measurements. Each threshold corresponds to a specific mapping point color during coverage mapping. Threshold values can also be changed with the touch screen by pressing on one of the color boxes in the map legend.</p> <p>Back: Returns to the “Coverage Mapping Menu” on page 7-25.</p>
---	--

Figure 7-24. AM/PM/FM Coverage Mapping Measurement Setup Menu

Point Distance/Time Setup Menu

Key Sequence: **Measure** or **(Shift + 4)** > Coverage Mapping > Point Distance/Time Setup

Points Distance/Time	Repeat Type: Toggles between using a Time or Distance interval for capturing data. Refer to “Map the Signal Strength” on page 6-7 . You may have to move the instrument around for data collection, and you may need to tap the touch screen if indoors.
Repeat Type	
Time Distance	
Repeat Time	Repeat Time: When the Repeat Type is Time and GPS is turned On for outdoor coverage mapping, use this submenu key to set the time interval between measurements. For indoor mapping (GPS is Off), the instrument interpolates position measurements in a straight line between each pair of screen-tap locations.
100 ms	
Repeat Distance	Repeat Distance: When the Repeat Type is Distance and GPS is turned On for outdoor mapping, use this submenu key to set the distance interval between measurements. For indoor mapping (GPS is Off), the instrument places all new measurements at the next screen-tap location.
0.00 m	
Distance Units	Distance Units: Toggles the unit of measure between meters and feet.
m ft	
Delete ALL Points	Delete ALL Points: Deletes any and all map points.
Back	Back: Returns to the “Coverage Mapping Menu” on page 7-25 .
←	

Figure 7-25. Point Distance/Time Setup Menu

7-19 Audio Demod AM Menu

Key Sequence: **Measure** or **(Shift + 4)** > Audio Demod

Audio Demod	
On <u>Off</u>	On Off: Press to turn On and Off the auto demodulation function. The current state (On or Off) is underlined on the submenu key.
Demod Type AM USB <u>LSB</u>	Demod Type: Press to select the type of desired demodulation: AM, USB, or LSB. The selection toggles through the choices, and the current setting is underlined on the submenu key.
Demod Time # s	Demod Time: Press to set the demodulation time. If you use the numeric keypad to enter a value, then the submenu keys change to Time in units of min, s, ms, or μ s. Demodulation time denotes the audio playback time. Audio playback and the graph display occur one after the other. For example, if the demodulation time is chosen as 3 seconds, then one complete sweep of graph display occurs followed by 3 seconds of audio playback, followed by one sweep of graph display, followed by 3 seconds of audio playback, and so on.
Beat Freq Osc # Hz	Beat Freq Osc: Sets the beat frequency of the oscillator to exactly set the demodulation frequency of USB and LSB signals. Displayed only when USB or LSB is selected as the Demod Type. This can also be used when demodulating CW (Morse code) signals.
Volume	Volume: Press to set the instrument speaker volume for listening to the demodulated signal.
Squelch Power -120 dBm	Squelch Power: Sets the squelch power value. Use this setting to limit noise in the demodulated signal.
Back ←	Back: Press to return to the Measurements menu.

Figure 7-26. Auto Demod AM Menu

7-20 Audio Demod FM Menu

Key Sequence: **Measure** or **(Shift + 4)** > Audio Demod

Audio Demod

On
Off

Demod Type
W-Bdn N-Bnd

Demod Time
s

Volume

Squelch Power
-120 dBm

Back
←

On Off: Press to turn On and Off the auto demodulation function. The current state (On or Off) is underlined on the submenu key.

Demod Type: Press to select the type of desired demodulation: wideband (W-Bnd) or narrow band (N-Bnd). The selection toggles between the choices, and the current setting is underlined on the submenu key.

Demod Time: Press to set the demodulation time. If you use the numeric keypad to enter a value, then the submenu keys change to Time in units of min, s, ms, or μ s. Demodulation time denotes the audio playback time. Audio playback and the graph display occur one after the other. For example, if the demodulation time is chosen as 3 seconds, then one complete sweep of graph display occurs followed by 3 seconds of audio playback, followed by one sweep of graph display, followed by 3 seconds of audio playback, and so on.

Volume: Press to set the instrument speaker volume for listening to the demodulated signal.

Squelch Power: Sets the squelch power value. Use this setting to limit noise in the demodulated signal.

Back: Press to return to the Measurements menu.

Figure 7-27. Auto Demod FM Menu

7-21 Marker Menu

Key Sequence: **Marker**

Marker	Marker 1 2 3 4 5 6: Press to turn On a specific marker. The active (selected) marker is underlined on the submenu key.
Marker <u>1</u> 2 3 4 5 6	On Off: Press to turn On and Off the selected marker. The current setting is underlined on the submenu key.
On Off	Delta On Off: Press to turn On and Off a delta marker. You are prompted for a delta offset frequency, either positive or negative from the frequency of the current active marker. The current setting is underlined on the submenu key.
Delta On Off	Peak Search: Press to place the currently active marker on the highest signal amplitude that is currently displayed in the sweep window.
Peak Search	Marker Freq to Center: Press to move the frequency that is noted by the active marker to the center frequency position and the center of the sweep window.
Marker Freq to Center	Marker to Ref Lvl: Press to set the amplitude of the currently active marker as the reference level, which is the top horizontal line in the sweep window.
Marker to Ref Lvl	Marker Table On Large Off: Press to turn On or Off the marker table, which is displayed below the sweep window (Large is not functional in AM/FM/PM mode). The table is automatically sized to display all markers that are turned on. In addition to the marker frequency and amplitude, the table also shows delta frequencies and delta amplitudes for all markers that have deltas entered for them. The current setting is underlined on the submenu key.
Marker Table On Large Off	All Markers Off: Press to turn Off all markers.
All Markers Off	

Figure 7-28. Marker Menu

Chapter 8 — Bias Tee (Option 10)

Note

Not all instrument models offer every option. Please refer to your instrument Technical Data Sheet for available options.

8-1 Introduction

Option 10 provides a bias tee that is installed inside the instrument. Refer to the Vector Network Analyzer Measurement Guide (10580-00289) for complete description of this option. The bias arm is connected to a 12 VDC to 32 VDC power source that can be turned on as needed to place the voltage on the center conductor of the instrument's RF In port. This supply of bias implies it is mostly useful when conducting two-port transmission measurements. This voltage can be used to provide power to block down-converters in satellite receivers and can also be used to power some tower-mounted amplifiers.

The bias can be turned on only when the instrument is in transmission measurement, return loss, cable loss, VSWR, DTF, Spectrum Analyzer, Channel Scanner, or Interference Analyzer mode. When bias is turned on, the bias voltage and current are displayed in the lower left corner of the display. The 12 VDC to 32 VDC power supply is designed to continuously deliver a maximum of 6 Watts. Refer to [Figure 8-1 on page 8-2](#) for a sample bias tee connection.

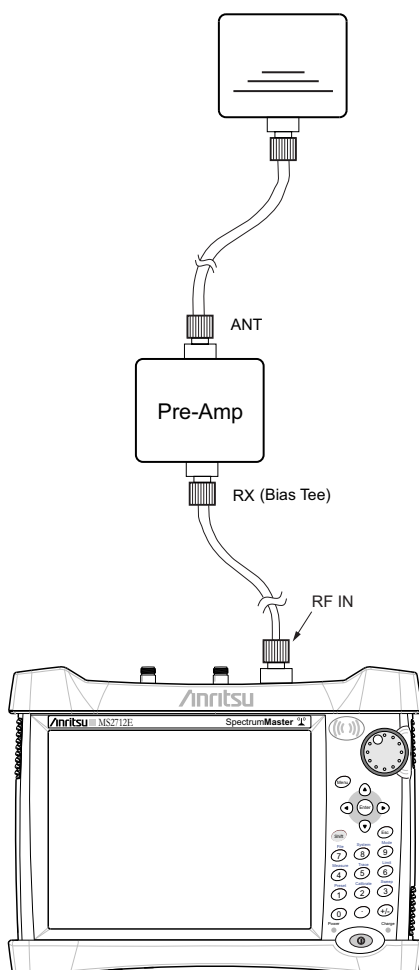


Figure 8-1. Variable Bias Tee

8-2 Bias Tee Menu

Key Sequence: **Shift** > **System (8)** key > Application Options > Bias Tee

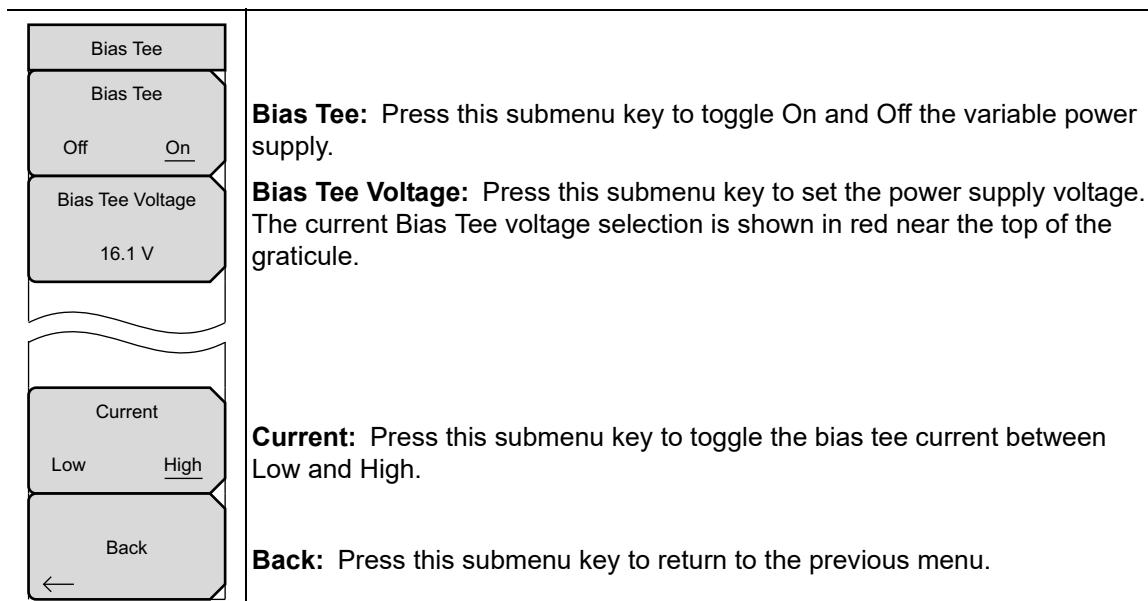


Figure 8-2. Bias Tee Menu

Index

Numerics

802.11b, 802.11g, 802.11a 2-27

A

ACPR 2-21
menu

coverage mapping 6-22

interference analyzer 3-47

spectrum analyzer 2-77

adjacent channel power 2-21

AM/FM Demod

interference analyzer 3-54

menu map, SPA 2-48

spectrum analyzer ... 2-86, 2-88, 3-56

AM/FM/PM Analyzer 7-1

menu maps 7-8

AM/FM/SSB demodulation 2-26

Amplitude menu

AM/FM/PM analyzer 7-15

channel scanner 4-10

interference analyzer 3-38

spectrum analyzer 2-59

analysis mode selection 1-2

Anritsu, contact 1-1

antenna calculations 2-16

Application Options menu

interference analyzer 3-91

spectrum analyzer 2-106

attenuator settings 2-9

Audio Demod

AM (AM/FM/PM) menu 7-29

FM (AM/FM/PM) menu 7-30

Audio Spectrum

AM (AM/FM/PM) menu 7-19

FM (AM/FM/PM) menu 7-21

PM (AM/FM/PM) menu 7-23

Audio Waveform

AM (AM/FM/PM) menu 7-20

FM (AM/FM/PM) menu 7-22

PM (AM/FM/PM) menu 7-24

B

Bias Tee 8-1

menu 8-3

burst detect 2-3, 2-68, 3-75

BW menu

interference analyzer 3-40

spectrum analyzer 2-63

C

C/I menu

interference analyzer 3-52

spectrum analyzer 2-84

C/I Signal Type menu

interference analyzer 3-53

spectrum analyzer 2-85

calculations

antenna 2-16

Carrier to Interference ratio (C/I) ... 2-27

channel power 2-19

GSM 2-19

Channel Power menu

interference analyzer 3-46

spectrum analyzer 2-76

Channel Scan menu 4-7

Channel Scanner

custom setup 4-3

introduction 4-1

menu maps 4-6

sample procedure 4-2

script master 4-4

contacting Anritsu 1-1

Coverage Mapping 6-1

menu 6-15

menu maps 6-13

Custom Scan menu 4-11

CW

continuous wave 5-1

signal generator 5-1

D

delta marker

AM/FM/PM analyzer 7-31

interference analyzer 3-71

spectrum analyzer 2-64

Demod Type menu

interference analyzer 3-55

spectrum analyzer 2-87

Detection menu

interference analyzer 3-39

spectrum analyzer 2-60

detection setting 2-10

E

EMF

Measurement 2-22, 2-79, 3-49

menu 2-79, 3-49

emission mask 2-30, 2-31, 2-33, 3-51
 menu 2-81, 3-51
 example
 custom setup, channel scanner . . . 4-3
 FM demodulation measurement . . 7-4
 frequency offset, IA 3-35
 frequency offset, SPA 2-58
 gated sweep, SPA
 external gate source 2-7
 signal ID setup, IA 3-6
 sloped limit envelope, IA 3-89
 sloped limit envelope, SPA 2-104
 spectrogram setup, IA 3-2
 square limit envelope, IA 3-89
 square limit envelope, SPA 2-104

F

field measurements, SPA 2-14
 field strength 2-15
 Field Strength menu
 coverage mapping 6-23
 interference analyzer 3-44
 spectrum analyzer 2-74
 Freq 1/2 menu
 spectrum analyzer 2-55
 Freq 2/2 menu
 spectrum analyzer 2-57
 Freq menu
 AM/FM/PM analyzer 7-12
 interference analyzer 3-31
 spectrum analyzer 2-53
 Freq Scan menu, channel scanner . . . 4-8

G

gated sweep 2-7, 2-67, 2-71, 3-74, 3-78
 Gaussian Minimum Shift Keying (GMSK)
 2-19
 Generator menu
 spectrum analyzer 2-89, 3-57
 GMSK 2-19
 GSM 2-19
 GSM channel power 2-19

I

in-band
 emission mask 2-30, 2-81
 out-of-channel 2-25
 spurious emission 2-25

Interference Analyzer
 measurement options 3-1
 menu maps 3-22
 RSSI 3-5
 signal ID 3-6
 signal strength 3-4
 spectrogram 3-2
 Interference Mapping menu 3-66, 3-67
 IQ capture 2-41, 2-91, 3-58
 IQ Capture Freq/Amp menu
 interference analyzer 3-60
 spectrum analyzer 2-93
 IQ Capture Triggering menu
 spectrum analyzer 2-92, 3-59
 IQ waveform capture 2-41
 IQ Waveform Capture menu
 spectrum analyzer 2-91, 3-58

L

Limit Advanced menu
 interference analyzer 3-90
 spectrum analyzer 2-105
 Limit Edit menu
 interference analyzer 3-85
 spectrum analyzer 2-100
 Limit Envelope menu
 interference analyzer 3-88
 spectrum analyzer 2-103
 Limit menu
 interference analyzer 3-83
 spectrum analyzer 2-99
 limit menu map, SPA 2-51
 Limit Move menu
 interference analyzer 3-87
 spectrum analyzer 2-102
 links, contact 1-1

M

Mapping Save/Recall menu
 Coverage Mapping 6-16
 Marker
 menu map, SPA 2-44
 Marker & Peak menu
 interference analyzer 3-72
 Marker 2/2 menu
 interference analyzer 3-73
 Marker 2/2 menu, spectrum analyzer . . 2-66
 Marker menu
 AM/FM/PM analyzer 7-31
 interference analyzer 3-71
 spectrum analyzer 2-64

Marker & Peak menu		menu (AM/FM/PM)	
spectrum analyzer	2-65	Amplitude	7-15
mask. See emission mask		Audio Demod AM	7-29
Masks and C/I menu		Audio Demod FM	7-30
interference analyzer	3-50	Audio Spectrum AM	7-19
spectrum analyzer	2-80	Audio Spectrum FM	7-21
measurement mode selection	1-2	Audio Spectrum PM	7-23
Measurement Setup menu		Audio Waveform AM	7-20
Coverage Mapping	6-19	Audio Waveform FM	7-22
measurements		Audio Waveform PM	7-24
adjacent channel power	2-21	Marker	7-31
AM/FM/SSB demodulation	2-26	Measurements	7-17
C/I ratio	2-27	RF Freq	7-12
channel power	2-19	RF Spectrum	7-18
field, SPA	2-14	Setup	7-16
in-band spurious	2-25	Span	7-13
in-band/out-of-channel	2-25	Standard List	7-14
OBW, SPA	2-17	menu (Coverage Mapping)	
out-of-band spurious emission	2-23	ACPR	6-22
spurious emission (out-of-band)	2-35, 2-82	Coverage Mapping	6-15
Measurements menu		field strength	6-23
AM/FM/PM analyzer	7-17	Mapping Save/Recall	6-16
channel scanner	4-12	Measurement Setup	6-19
EMF	2-22, 2-79, 3-49	Pan and Zoom	6-17
interference analyzer	3-41	Point Distance/Time Setup	6-20
spectrum analyzer	2-72	RSSI	6-21

menu (Interference Analyzer)

ACPR	3-47
AM/FM Demod 1/2	3-54
AM/FM Demod 2/2	3-56
Amplitude	3-38
Bias Tee	8-3
BW	3-40
C/I	3-52
C/I Signal Type	3-53
Capture Triggering (IQ)	3-59
Channel Power	3-46
Demod Type	3-55
Detection	3-39
Edit	3-85
EMF	3-49
Field Strength	3-44
Freq	3-31
Freq/Amp (IQ Capture)	3-60
Interference Mapping	3-66, 3-67
Limit	3-83
Limit Advanced	3-90
Limit Envelope	3-88
Limit Move	3-87
Mapping Save/Recall	3-68, 3-69, 3-70
Marker	3-71
Marker & Peak	3-72
Marker 2/2	3-73
Masks and C/I	3-50
Measurements	3-41
OCC BW	3-45
Options (Application)	3-91
Power and BW	3-43
RSSI	3-64
Signal ID	3-65
Signal Strength	3-63
Span	3-36
Spectrogram	3-62
Spectrum Measure	3-42
Sweep	3-74
Trace	3-79
Trace A Ops	3-80
Trace B Ops	3-81
Trace C Ops	3-82
Trigger Source	3-77
Zero Span IF BW	3-37

menu (SPA)

AM/FM Demod 1/2	2-86
AM/FM Demod 2/2	2-88
Amplitude	2-59
Bias Tee	8-3
BW	2-63
C/I	2-84
C/I Signal Type	2-85
Capture Triggering (IQ)	2-92
Channel Pwr	2-76
Demod Type (AM/FM)	2-87
Detection	2-60
Edit	2-100
EMF	2-79
Emission Mask	2-81
Field Strength	2-74
File (User Guide)	2-106
Freq 1/2	2-55
Freq 2/2	2-57
Freq/Amp (IQ Capture)	2-93
Limit	2-99
Limit Advanced	2-105
Limit Envelope	2-103
Limit Move	2-102
Marker	2-64
Marker 2/2	2-66
Marker & Peak	2-65
Masks and C/I	2-80
Measurements	2-72
OCC BW	2-75
Options (Application)	2-106
Power and BW	2-73
Preset (User Guide)	2-106
Span	2-61
Sweep	2-67
Sweep Mode	2-68
System (User Guide)	2-106
Trace	2-94
Trace A Ops	2-96
Trace B Ops	2-97
Trace C Ops	2-98
Trigger Source	2-70
Triggering	2-69
Zero Span IF BW	2-62

menu map	
AM/FM Demod, SPA	2-48
AM/FM/PM Analyzer	7-8
Channel Scanner	4-6
Coverage Mapping	6-13
Interference Analyzer	3-22
limit, SPA	2-51
Marker, SPA	2-44
Measurements, IA	3-23
Measurements, SPA	2-45
Spectrum Analyzer	2-43
sweep, SPA	2-50
trace, SPA	2-51
MOP	2-40

O

OCC BW menu	
interference analyzer	3-45
spectrum analyzer	2-75
occupied bandwidth (OBW)	
AM/FM/PM analyzer	7-18
channel power meas't example	2-18
interference analyzer menu	3-45
spectrum analyzer measurement	2-17
spectrum analyzer menu	2-75
offset frequency	
SPA	2-1
option	
20, Tracking Generator	2-89, 3-57
24, IQ Waveform Capture	2-41
25, Interference Analyzer	3-1
27, Channel Scanner	4-1
28, CW Signal Generator	5-1, 8-1
31, GPS required for	
interference mapping	3-8
431, Coverage Mapping menus	6-13
509, AM/FM/PM Analyzer	7-1, 7-8
8, Preamplifier	2-14
89, Zero Span	2-4, 2-61, 3-36
90, Gated Sweep	2-7, 2-67, 2-71, 3-74, 3-78
out-of-band	
spurious emission	2-23, 2-31
create mask, segment	2-31
load mask	2-33
measurements	2-35, 2-82
modify mask, segment	2-33

P

Pan and Zoom menu	6-17
-------------------	------

PIM Hunting	
introduction	2-38
measurement results	2-39
menu	2-90
mode	2-38
PIM Limit Line	2-39
Procedure	2-40
Squelch Level Line	2-39
Point Distance/Time Setup menu	
Coverage Mapping	6-20
Power and BW menu	
interference analyzer	3-43
spectrum analyzer	2-73
preamplifier settings	2-14

R

RBW to VBW ratio	2-2
received signal strength indicator	3-5
resolution bandwidth	2-8
RF Freq menu (AM/FM/PM)	7-12
RF Spectrum menu (AM/FM/PM)	7-18
RSSI menu	3-64
Coverage Mapping	6-21

S

sample procedure, Channel Scanner	4-2
Scan Script Master menu	4-9
Scanner menu	4-7
script master	4-4
settings	
attenuator	2-9
bandwidth	2-2
detection	2-10
frequency	2-1
IQ waveform capture	2-41
offset frequency	2-1
resolution bandwidth	2-8
sweep	2-3, 2-9
trigger type	2-4
video bandwidth	2-8
waveform capture	2-41
signal ID	3-6
Signal ID menu	3-65
signal strength	3-4
Signal Strength menu	
interference analyzer	3-63
SPA bandwidth parameters	2-2
SPA frequency parameters	2-1
SPA measurements	2-1

Span menu	
AM/FM/PM analyzer	7-13
interference analyzer	3-36
spectrum analyzer	2-61
Span/RBW ratio	2-2
spectrogram	3-2
Spectrogram menu	
interference analyzer	3-62
Spectrum Analyzer	
menu maps	2-43
Spectrum Measure menu	
interference analyzer	3-42
spurious emission	
in-band	2-25
out-of-band	2-23, 2-31
create mask, segment	2-31
load mask	2-33
measurements	2-35, 2-82
modify mask, segment	2-33
Standard List menu (AM/FM/PM) ...	7-14
Sweep menu	
interference analyzer	3-74
map, IA	3-28
map, SPA	2-50
spectrum analyzer	2-67
Sweep Mode menu	
interference analyzer	3-75
spectrum analyzer	2-68
sweep parameters	2-3
sweep speed	2-9
T	
Trace A Ops menu	
spectrum analyzer	2-96

Trace B Ops menu	
spectrum analyzer	2-97
Trace C Ops menu	
spectrum analyzer	2-98
Trace menu	
interference analyzer	3-79
spectrum analyzer	2-94
trace menu map, SPA	2-51
Tracking Generator (Option 20) menu	
interference analyzer	3-57
spectrum analyzer	2-89
trigger settings	2-4
Trigger Source menu	
interference analyzer	3-77
spectrum analyzer	2-70
Triggering menu	
interference analyzer	3-76
spectrum analyzer	2-69

V

video bandwidth	2-8
-----------------------	-----

W

waveform capture, IQ	2-41
web links, contact	1-1

Z

Zero Span	
key	2-61, 3-36
menu, interference analyzer	3-37
menu, spectrum analyzer	2-62
option 89, IF output	2-4

Anritsu



10580-00349



P



Anritsu utilizes recycled paper and environmentally conscious inks and toner.

Anritsu Company
490 Jarvis Drive
Morgan Hill, CA 95037-2809
USA
<http://www.anritsu.com>