

# **MU181500B**

## **Jitter Modulation Source**

### **Operation Manual**

**20th Edition**

- For safety and warning information, please read this manual before attempting to use the equipment.
- Additional safety and warning information is provided in the MP1800A Signal Quality Analyzer Installation Guide, MP1900A Signal Quality Analyzer-R Operation Manual and the MT1810A 4 Slot Chassis Installation Guide. Please also refer to them before using the equipment.
- Keep this manual with the equipment.

**ANRITSU CORPORATION**

# Safety Symbols

To prevent the risk of personal injury or loss related to equipment malfunction, Anritsu Corporation uses the following safety symbols to indicate safety-related information. Ensure that you clearly understand the meanings of the symbols BEFORE using the equipment. Some or all of the following symbols may be used on all Anritsu equipment. In addition, there may be other labels attached to products that are not shown in the diagrams in this manual.

## Symbols used in manual

 **DANGER** This indicates a very dangerous procedure that could result in serious injury or death if not performed properly.

 **WARNING** This indicates a hazardous procedure that could result in serious injury or death if not performed properly.

 **CAUTION** This indicates a hazardous procedure or danger that could result in light-to-severe injury, or loss related to equipment malfunction, if proper precautions are not taken.

## Safety Symbols Used on Equipment and in Manual

The following safety symbols are used inside or on the equipment near operation locations to provide information about safety items and operation precautions. Ensure that you clearly understand the meanings of the symbols and take the necessary precautions BEFORE using the equipment.



This indicates a prohibited operation. The prohibited operation is indicated symbolically in or near the barred circle.



This indicates an obligatory safety precaution. The obligatory operation is indicated symbolically in or near the circle.



This indicates a warning or caution. The contents are indicated symbolically in or near the triangle.



This indicates a note. The contents are described in the box.



These indicate that the marked part should be recycled.

MU181500B  
Jitter Modulation Source  
Operation Manual

15 April 2011 (First Edition)  
13 October 2021 (20th Edition)

Copyright © 2011-2021, ANRITSU CORPORATION.

All rights reserved. No part of this manual may be reproduced without the prior written permission of the publisher.

The operational instructions of this manual may be changed without prior notice.

Printed in Japan

# For Safety

## **WARNING**



### Repair



### Calibration



- ALWAYS refer to the operation manual when working near locations at which the alert mark shown on the left is attached. If the advice in the operation manual is not followed, there is a risk of personal injury or reduced equipment performance. The alert mark shown on the left may also be used with other marks and descriptions to indicate other dangers.
- Only qualified service personnel with a knowledge of electrical fire and shock hazards should service this equipment. This equipment cannot be repaired by the operator. DO NOT attempt to remove the equipment covers or unit covers or to disassemble internal components. There are high-voltage parts in this equipment presenting a risk of severe injury or fatal electric shock to untrained personnel. In addition, there is a risk of damage to precision components.
- The performance-guarantee seal verifies the integrity of the equipment. To ensure the continued integrity of the equipment, only Anritsu service personnel, or service personnel of an Anritsu sales representative, should break this seal to repair or calibrate the equipment. Be careful not to break the seal by opening the equipment or unit covers. If the performance-guarantee seal is broken by you or a third party, the performance of the equipment cannot be guaranteed.

# For Safety



## CAUTION

---

### Check Terminal



Never input a signal of more than the indicated value between the measured terminal and ground. Input of an excessive signal may damage the equipment.

### Use in a Residential Environment

This equipment is designed for an industrial environment. In a residential environment, this equipment may cause radio interference in which case the user may be required to take adequate measures.

### Use in Corrosive Atmospheres

Exposure to corrosive gases such as hydrogen sulfide, sulfurous acid, and hydrogen chloride will cause faults and failures. Note that some organic solvents release corrosive gases.

---

# Equipment Certificate

Anritsu Corporation certifies that this equipment was tested before shipment using calibrated measuring instruments with direct traceability to public testing organizations recognized by national research laboratories, including the National Institute of Advanced Industrial Science and Technology, and the National Institute of Information and Communications Technology, and was found to meet the published specifications.

## Anritsu Warranty

Anritsu Corporation will repair this equipment free-of-charge if a malfunction occurs within one year after shipment due to a manufacturing fault, and software bug fixes will be performed in accordance with the separate Software End-User License Agreement, provide, however, that Anritsu Corporation will deem this warranty void when:

- The fault is outside the scope of the warranty conditions separately described in the operation manual.
- The fault is due to mishandling, misuse, or unauthorized modification or repair of the equipment by the customer.
- The fault is due to severe usage clearly exceeding normal usage.
- The fault is due to improper or insufficient maintenance by the customer.
- The fault is due to natural disaster, including fire, wind or flood, earthquake, lightning strike, or volcanic ash, etc.
- The fault is due to damage caused by acts of destruction, including civil disturbance, riot, or war, etc.
- The fault is due to explosion, accident, or breakdown of any other machinery, facility, or plant, etc.
- The fault is due to use of non-specified peripheral or applied equipment or parts, or consumables, etc.
- The fault is due to use of a non-specified power supply or in a non-specified installation location.
- The fault is due to use in unusual environments<sup>(Note)</sup>.
- The fault is due to activities or ingress of living organisms, such as insects, spiders, fungus, pollen, or seeds.

In addition, this warranty is valid only for the original equipment purchaser. It is not transferable if the equipment is resold.

Anritsu Corporation shall assume no liability for damage or financial loss of the customer due to the use of or a failure to use this equipment, unless the damage or loss is caused due to Anritsu Corporation's intentional or gross negligence.

Note:

For the purpose of this Warranty, "unusual environments" means use:

- In places of direct sunlight
- In dusty places
- Outdoors
- In liquids, such as water, oil, or organic solvents, and medical fluids, or places where these liquids may adhere
- In salty air or in places where chemically active gases (sulfur dioxide, hydrogen sulfide, chlorine, ammonia, nitrogen dioxide, or hydrogen chloride etc.) are present
- In places where high-intensity static electric charges or electromagnetic fields are present
- In places where abnormal power voltages (high or low) or instantaneous power failures occur
- In places where condensation occurs
- In the presence of lubricating oil mists
- In places at an altitude of more than 2,000 m
- In the presence of frequent vibration or mechanical shock, such as in cars, ships, or airplanes

## **Anritsu Corporation Contact**

In the event of this equipment malfunctions, please contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the PDF version.

## Notes On Export Management

---

This product and its manuals may require an Export License/Approval by the Government of the product's country of origin for re-export from your country.

Before re-exporting the product or manuals, please contact us to confirm whether they are export-controlled items or not.

When you dispose of export-controlled items, the products/manuals need to be broken/shredded so as not to be unlawfully used for military purpose.

## Lifetime of Parts

---

The life span of certain parts used in this instrument is determined by the operating time or the power-on time. Due consideration should be given to the life spans of these parts when performing continuous operation over an extended period. These parts must be replaced at the customer's expense even if within the guaranteed period described in Warranty at the beginning of this manual.

Coaxial switch: 10 million times (BUJ and RJ jitter variation times)

## Crossed-out Wheeled Bin Symbol

Equipment marked with the Crossed-out Wheeled Bin Symbol complies with council directive 2012/19/EU (the “WEEE Directive”) in European Union.



For Products placed on the EU market after August 13, 2005, please contact your local Anritsu representative at the end of the product's useful life to arrange disposal in accordance with your initial contract and the local law.

# Software End-User License Agreement (EULA)

Please carefully read and accept this Software End-User License Agreement (hereafter this EULA) before using (includes executing, copying, installing, registering, etc.) this Software (includes programs, databases, scenarios, etc., used to operate, set, etc., Anritsu electronic equipment, etc.). By using this Software, you shall be deemed to have agreed to be bound by the terms of this EULA, and Anritsu Corporation (hereafter Anritsu) hereby grants you the right to use this Software with the Anritsu-specified equipment (hereafter Equipment) for the purposes set out in this EULA.

## Article 1. Grant of License and Limitations

1. You may not to sell, transfer, rent, lease, lend, disclose, sublicense, or otherwise distribute this Software to third parties, whether or not paid therefor.
2. You may make one copy of this Software for backup purposes only.
3. You are not permitted to reverse engineer, disassemble, decompile, modify or create derivative works of this Software.
4. This EULA allows you to install one copy of this Software on one piece of Equipment.

## Article 2. Disclaimers

To the extent not prohibited by law, in no event shall Anritsu be liable for direct, or any incidental, special, indirect or consequential damages whatsoever, including, without limitation, damages for loss of profits, loss of data, business interruption or any other commercial damages or losses, and damages claimed by third parties, arising out of or related to your use or inability to use this Software, unless the damages are caused due to Anritsu's intentional or gross negligence.

## Article 3. Limitation of Liability

1. If a fault (bug) is discovered in this Software, failing this Software to operate as described in the operation manual or specifications even though you have used this Software as described in the manual, Anritsu shall at its own discretion, fix the bug, or replace the software, or suggest a workaround, free-of-charge, provided, however, that the faults caused by the following items and any

of your lost or damaged data whatsoever shall be excluded from repair and the warranty.

- i) If this Software is deemed to be used for purposes not described in the operation manual or specifications.
  - ii) If this Software has been used in conjunction with other non-Anritsu-approved software.
  - iii) If this Software or the Equipment has been modified, repaired, or otherwise altered without Anritsu's prior approval.
  - iv) For any other reasons out of Anritsu's direct control and responsibility, such as but not limited to, natural disasters, software virus infections, or any devices other than this Equipment, etc.
2. Expenses incurred for transport, hotel, daily allowance, etc., for on-site repairs or replacement by Anritsu engineers necessitated by the above faults shall be borne by you.
  3. The warranty period for faults listed in Section 1 of this Article shall be either 6 months from the date of purchase of this Software or 30 days after the date of repair or replacement, whichever is longer.

#### **Article 4. Export Restrictions**

You shall not use or otherwise export or re-export directly or indirectly this Software except as authorized by the laws and regulations of Japan and the United States, etc. In particular, this Software shall not be exported or re-exported (a) into any Japan or US embargoed countries or (b) to anyone restricted by the Japanese export control regulations, or the US Treasury Department's list of Specially Designated Nationals or the US Department of Commerce Denied Persons List or Entity List. In using this Software, you warrant that you are not located in any such embargoed countries or on any such lists. You also agree that you will not use or otherwise export or re-export this Software for any purposes prohibited by the Japanese and US laws and regulations, including, without limitation, the development, design and manufacture or production of missiles or nuclear, chemical or biological weapons of mass destruction, and conventional weapons.

#### **Article 5. Change of Terms**

Anritsu may change without your approval the terms of this EULA if the changes are for the benefit of general customers, or are reasonable in light of the purpose of this EULA and circumstances of the changes. At the time of change, Anritsu will inform you of those changes and its effective date, as a general rule 45 days, in advance on its website, or in writing or by e-mail.

#### **Article 6. Termination**

1. Anritsu may terminate this EULA immediately if you violate any conditions described herein. This EULA shall also be terminated immediately by Anritsu if there is any good reason that it is deemed difficult to continue this EULA, such as your violation of Anritsu copyrights, patents, etc. or any laws and ordinances, or if it turns out

that you belong to an antisocial organization or has a socially inappropriate relationship with members of such organization.

2. You and Anritsu may terminate this EULA by a written notice to the other party 30 days in advance.

#### **Article 7. Damages**

If Anritsu suffers any damages or loss, financial or otherwise, due to your violation of the terms of this EULA, Anritsu shall have the right to seek proportional damages from you.

#### **Article 8. Responsibility after Termination**

Upon termination of this EULA in accordance with Article 6, you shall cease all uses of this Software immediately and shall as directed by Anritsu either destroy or return this Software and any backup copies, full or partial, to Anritsu.

#### **Article 9. Negotiation for Dispute Resolution**

If matters of interpretational dispute or items not covered under this EULA arise, they shall be resolved by negotiations in good faith between you and Anritsu.

#### **Article 10. Governing Law and Court of Jurisdiction**

This EULA shall be governed by and interpreted in accordance with the laws of Japan without regard to the principles of the conflict of laws thereof, and any disputes arising from or in relation to this EULA that cannot be resolved by negotiation described in Article 9 shall be subject to and be settled by the exclusive agreed jurisdiction of the Tokyo District Court of Japan.

#### **Revision History:**

February 29th, 2020

# CE Conformity Marking

Anritsu affixes the CE Conformity marking on the following product in accordance with the Decision 768/2008/EC to indicate that it conforms to conform to the EMC, LVD and RoHS directive of the European Union (EU).

## CE marking



### 1. Product Model

Model: MU181500B Jitter Modulation Source

### 2. Applied Directive and Standards

When the MU181500B Jitter Modulation Source is installed in the MP1900A, the applied directive and standards of this unit conform to those of the MP1900A main frame.

PS: About main frame


Please contact Anritsu for the latest information on the main frame types that MU181500B can be used with.

If the third digit of the serial number is "7", the product complies with Directive 2011/65/EU as amended by (EU) 2015/863.

(Pb,Cd,Cr6+,Hg,PBB,PBDE,DEHP,BBP,DBP,DIBP)

If the third digit of the serial number is "6", the product complies with Directive 2011/65/EU.

(Pb,Cd,Cr6+,Hg,PBB,PBDE)

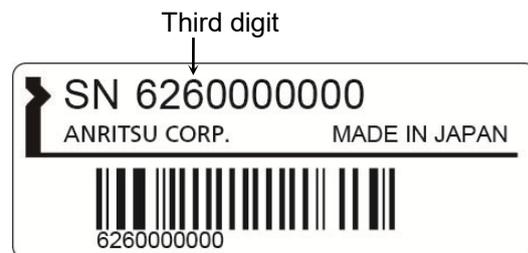

Serial number example

# UKCA Marking

Anritsu affixes the UKCA marking on the following product in accordance with the guidance to indicate that it conforms to the EMC, LVD, and RoHS regulations in the United Kingdom.

## UKCA marking



### 1. Product Model

Model: MU181500B Jitter Modulation Source

### 2. Applied Regulations and Standards

When the MU181500B Jitter Modulation Source is installed in the MP1900A, the applied directive and standards of this unit conform to those of the MP1900A main frame.

PS: About main frame

Please contact Anritsu for the latest information on the main frame types that MU181500B can be used with.

# RCM Conformity Marking

Anritsu affixes the RCM mark on the following product in accordance with the regulation to indicate that it conforms to the EMC framework of Australia/New Zealand.

## RCM marking



### 1. Product Model

Model: MU181500B Jitter Modulation Source

### 2. Applied Standards

When the MU181500B Jitter Modulation Source is installed in the MP1800A, MT1810A or MP1900A, the applied directive and standards of this unit conform to those of the MP1800A, MT1810A or MP1900A main frame.


PS: About main frame

Please contact Anritsu for the latest information on the main frame types that MU181500B can be used with.



## About This Manual


A testing system combining an MP1800A Signal Quality Analyzer or MT1810A 4-Slot Chassis mainframe, module(s), and control software is called a Signal Quality Analyzer Series. The operation manuals of the Signal Quality Analyzer Series consist of separate documents for the installation guide, the mainframe, remote control operation, module(s), and control software, as shown below.

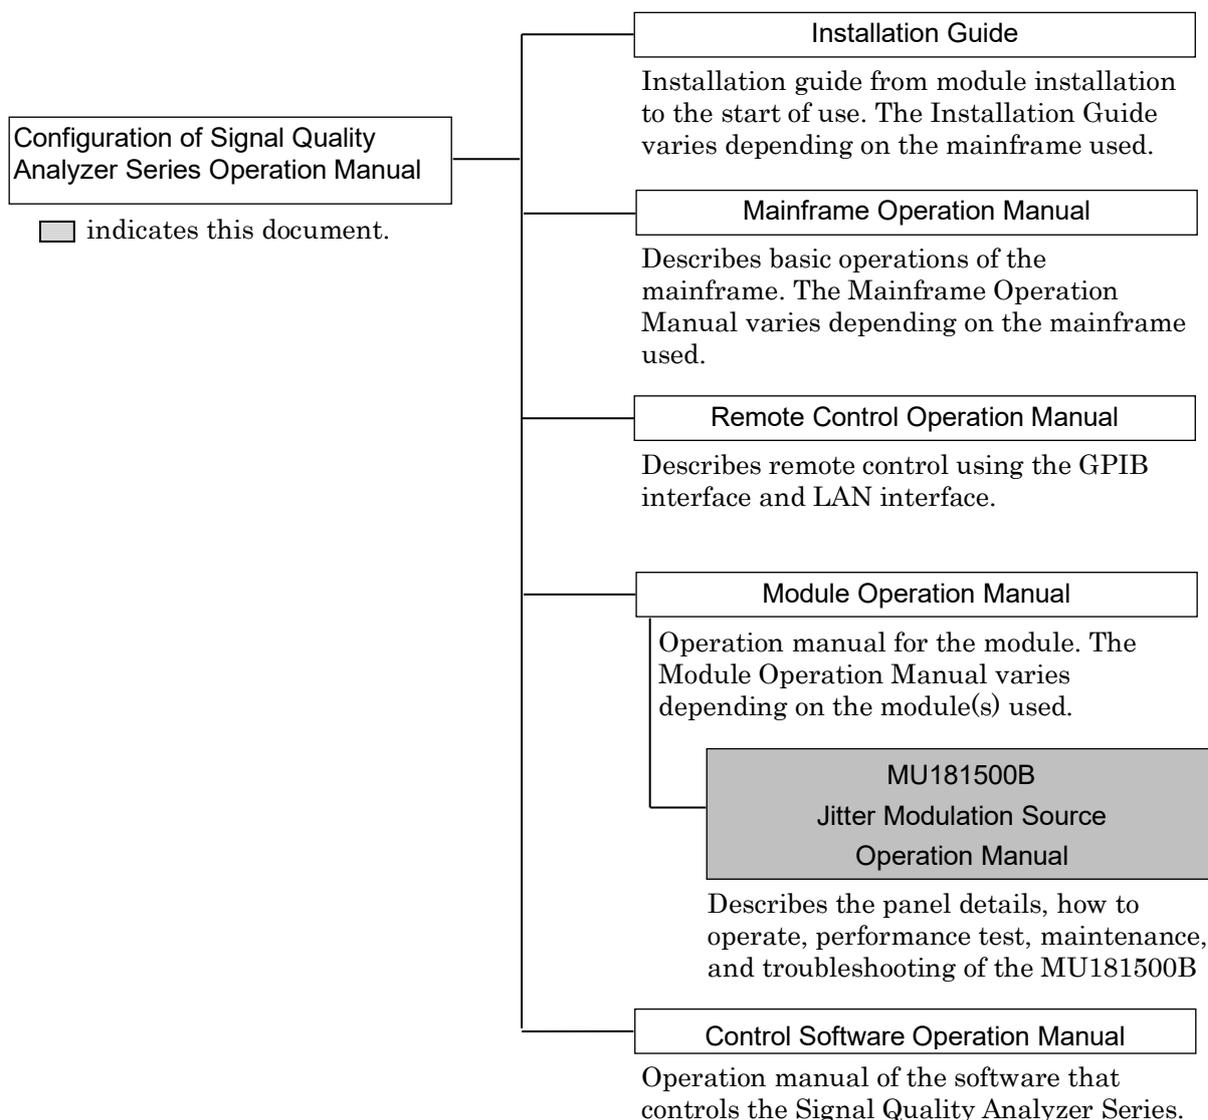

A test system combining an MP1900A Signal Quality Analyzer-R, module(s), and control software is called a Signal Quality Analyzer-R Series. The operation manuals of the Signal Quality Analyzer-R Series consist of separate documents for the MP1900A, module(s), and control software as shown below.


Configuration of Signal Quality Analyzer-R Series Operation

indicates this document.

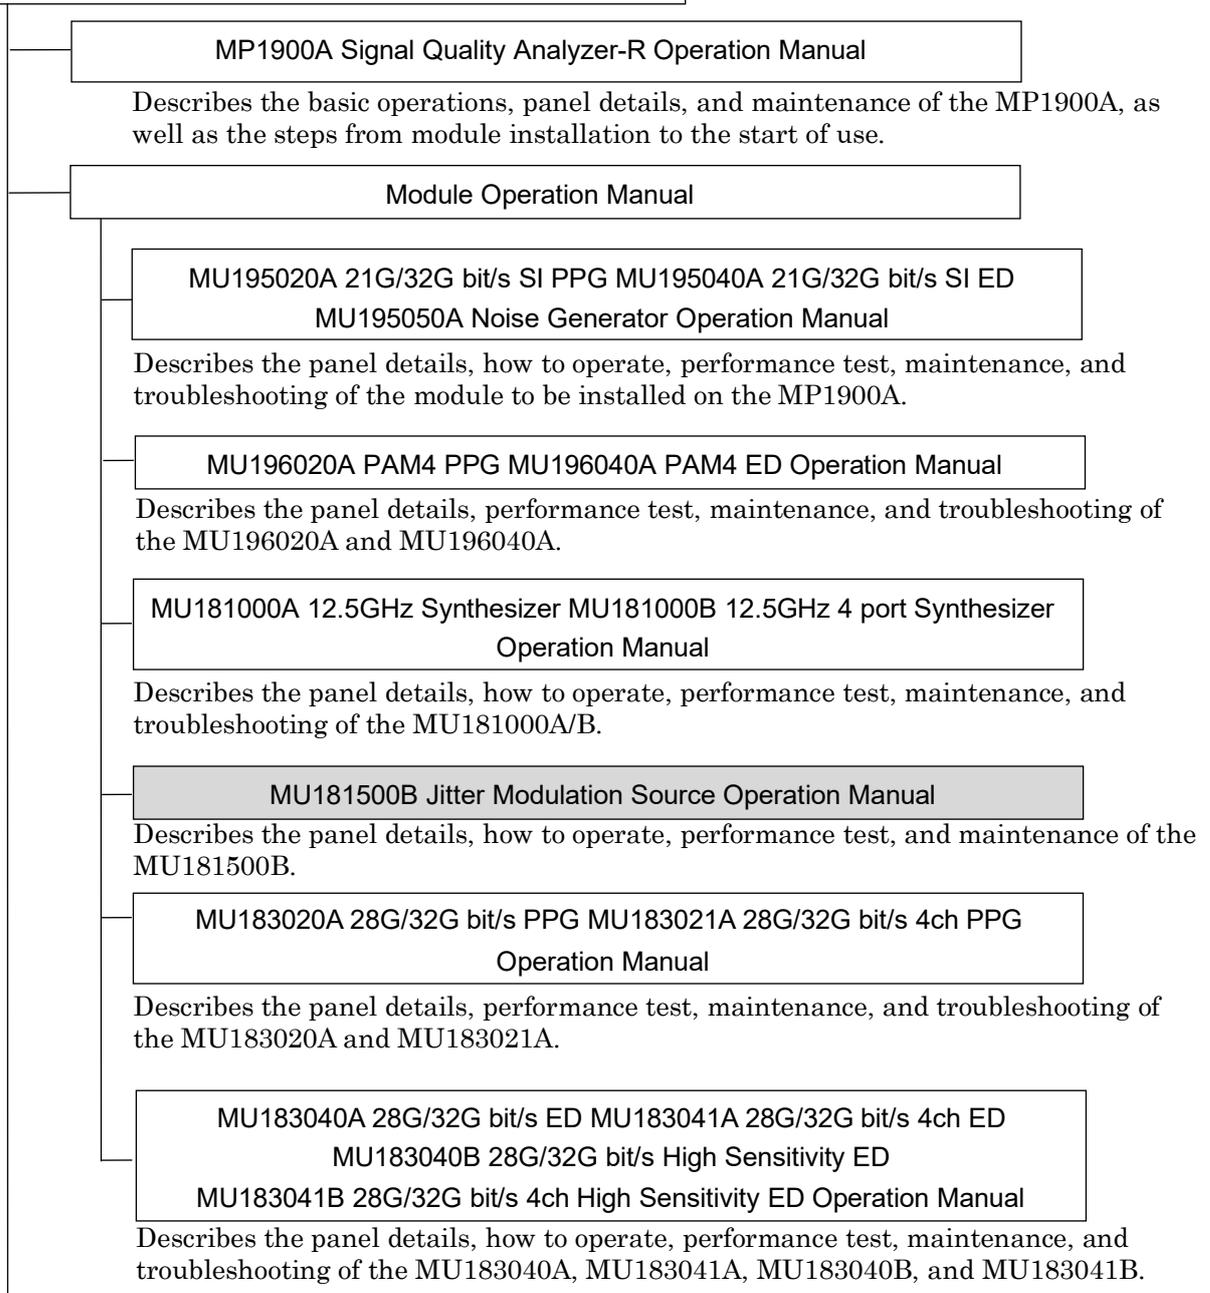

Configuration of Signal Quality Analyzer-R Series Operation (Cont'd)


indicates this document.

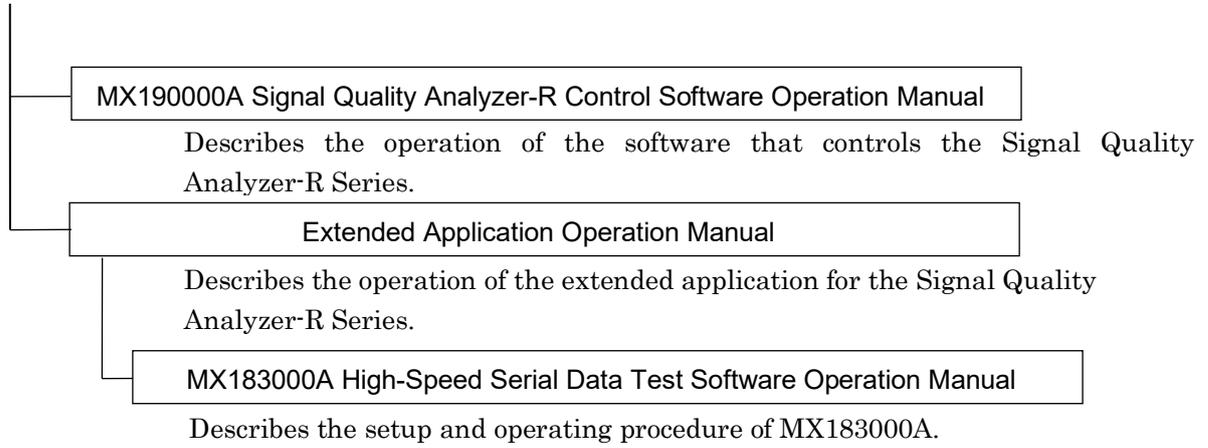

The models and names of the modules are described using the following abbreviations.

Abbreviation	Model/Name
MU181000A	MU181000A 12.5GHz Synthesizer
MU181000B	MU181000B 12.5GHz 4 port Synthesizer
MU181000A/B	MU181000A 12.5GHz Synthesizer or MU181000B 12.5GHz 4 port Synthesizer
MU181020A	MU181020A 12.5Gbit/s PPG
MU181020B	MU181020B 14Gbit/s PPG
MU181020A/B	MU181020A 12.5Gbit/s PPG or MU181020B 14Gbit/s PPG
MU181040A	MU181040A 12.5Gbit/s ED
MU183020A	MU183020A 28G/32G bit/s PPG
MU183021A	MU183021A 28G/32G bit/s 4ch PPG
MU183040A	MU183040A 28G/32G bit/s ED
MU183040B	MU183040B 28G/32G bit/s High Sensitivity ED
MU183040A/B	MU183040A 28G/32G bit/s ED or MU183040B 28G/32G bit/s High Sensitivity ED
MU183041B	MU183041B 28G/32G bit/s 4ch High Sensitivity ED
MU195020A	MU195020A 21G/32G bit/s SI PPG
MU195040A	MU195040A 21G/32G bit/s SI ED
MU195050A	MU195050A Noise Generator
MU196020A	MU196020A PAM4 PPG
MU196040A	MU196040A PAM4 ED
MU196040B	MU196040B PAM4 ED
MU196040A/B	MU196040A PAM4 ED or MU196040B PAM4 ED

“x” in an option number represents any numeral. For details of option numbers, refer to each of module operation manuals.



# Table of Contents

<b>For Safety .....</b>	<b>iii</b>
<b>About This Manual .....</b>	<b>I</b>
<b>Chapter 1 Overview .....</b>	<b>1-1</b>
1.1 Product Overview.....	1-2
1.2 Product Configuration .....	1-3
1.3 Specifications.....	1-5
<b>Chapter 2 Before Use .....</b>	<b>2-1</b>
2.1 Installation to Signal Quality Analyzer.....	2-2
2.2 Explanation of Panels .....	2-3
2.3 How to Operate Application.....	2-4
2.4 Preventing Damage .....	2-5
<b>Chapter 3 Setting Jitter .....</b>	<b>3-1</b>
3.1 Setting Procedure .....	3-2
3.2 Composition of Screens .....	3-3
3.3 Input Signal Settings .....	3-9
3.4 Setting Jitter.....	3-15
3.5 Setting Data Output .....	3-32
3.6 Setting Auxiliary Output.....	3-35
3.7 Setting Restrictions for Other Modules .....	3-36
3.8 Saving and Reading Settings .....	3-38
<b>Chapter 4 Use Example .....</b>	<b>4-1</b>
4.1 Measuring Jitter Tolerance.....	4-2
4.2 Measuring Spectrum Spread.....	4-5
4.3 Measuring Spectrum Spread (USB4 SSC Profile).....	4-8
<b>Chapter 5 Remote Commands.....</b>	<b>5-1</b>

1
2
3
4
5
6
7
Appendix
Index

**Chapter 6 Performance Test ..... 6-1**

- 6.1 Performance Test ..... 6-2
- 6.2 List Of Performance Test Equipment..... 6-2
- 6.3 Performance Test Method..... 6-2

**Chapter 7 Maintenance ..... 7-1**

- 7.1 Daily Maintenance ..... 7-2
- 7.2 Storage Precautions..... 7-3
- 7.3 Transportation..... 7-4
- 7.4 Calibration ..... 7-5
- 7.5 Disposal..... 7-6

**Appendix A List of Default Settings ..... A-1**

**Appendix B Performance Test Result Sheet.. B-1**

**Appendix C Bibliography ..... C-1**

**Appendix D Connection Examples for Jitter  
Measurement ..... D-1**

**Index .....Index-1**

# Chapter 1 Overview

---

This chapter provides an overview of the MU181500B Jitter Modulation Source (MU181500B hereafter).

1.1	Product Overview.....	1-2
1.2	Product Configuration .....	1-3
	1.2.1 Standard Configuration .....	1-3
	1.2.2 Optional Accessories.....	1-4
1.3	Specifications.....	1-5
	1.3.1 Input/Output Signal .....	1-5
	1.3.2 Jitter Modulation Performance.....	1-8
	1.3.3 General Performance.....	1-34

## 1.1 Product Overview

The MU181500B is a plug-in module that can be built into the models of Signal Quality Analyzer Series or Signal Quality Analyzer-R Series.

It generates the following jittered clocks for input and built-in clocks.

- BUJ: Bounded Uncorrelated Jitter
- RJ: Random Jitter
- SJ: Sinusoidal Jitter
- SSC: Spread Spectrum Clock
- Ext: External Jitter

Connecting the output clock of this module to the input of the Pulse Pattern Generator supports bit error measurement of the jittered signals.

The features of this module are listed below:

- Adds separate SJ, SSC, BUJ, and RJ to clocks from 800 MHz to 15 GHz
- Supports linked (tracked) operation with MU181000A or MU181000B installed in MP1800A Signal Quality Analyzer (hereinafter MP1800A) or MP1900A Signal Quality Analyzer-R (hereinafter referred to as MP1900A).
- Supports setting screen with intuitive image of clock inputs, added jitter, and output data signals.
- Outputs unmodulated divided clocks required by DUT and measurement system.
- Built-in SJ2 can be applied by installing the MU181500B to the MP1900A.\*1
- SSC Profile can be changed when installed to the MP1900A.\*2

\*1: This function is available in Version 2.0.0 or later of the MX190000A Signal Quality Analyzer-R Control Software (hereinafter referred to as MX190000A). This function and the conventional SJ2 work exclusively.

\*2: This function is available in Version 7.02.00 or later of the MX190000A.

## 1.2 Product Configuration

### 1.2.1 Standard Configuration

Table 1.2.1-1 shows the standard configuration of the MU181500B.

**Table 1.2.1-1 Standard Configuration (MU181500B)**

Item	Model/Symbol	Name	Quantity	Remarks
Main frame	MU181500B	Jitter Modulation Source	1	
Accessories	J1137	Terminator	6	
	J1341A	Open	2	
	J1624A	Coaxial Cable, 0.3 m (SMA connector)	1	
	J1508A	BNC-SMA Connector Cable (30 cm)	2	
	Z0897A	MP1800A Manual CD*	1	CD-ROM
	Z0918A	MX180000A Software CD*	1	CD-ROM

\*: Not included in the MU181500B configuration, but included in the MP1900A configuration if MU181500B is purchased with MP1900A.

## 1.2.2 Optional Accessories

Table 1.2.2-1 shows the optional accessories for the MU181500B. They are sold separately.

**Table 1.2.2-1 Optional Accessories**

Model Name	Name	Remarks
J1137	Terminator	
J1342A	Coaxial cable, 0.8 m	APC 3.5 mm connector
J1625A	Coaxial cable, 1 m (SMA connector)	
J1359A	Coaxial Adaptor (K-P, K-J, SMA)	
41KC-3	Precision Fixed Attenuator 3 dB	
41KC-6	Precision Fixed Attenuator 6 dB	
41KC-10	Precision Fixed Attenuator 10 dB	
41KC-20	Precision Fixed Attenuator 20 dB	
K240C	Precision Power Divider	
J1624A	Coaxial Cable 0.3 m (SMA connector)	
J1550A	Coaxial skew match cable (0.8 m, APC 3.5 connector)	APC 3.5 mm connector, Pair cable
J1551A	Coaxial skew match cable (0.8 m, K connector)	K connector, Pair cable
J1611A	Coaxial cable (1.3 m, K connector)	K connector
J1741A	Fixed Electrical Length Coaxial Cable (0.8 m, K Connector)	K connector
J1615A*	Coaxial Cable set (Jitter-PPG-Emphasis)	Cable set for jitter tolerance measurement
J1618A*	Coaxial Cable set (Jitter-2chPPG-Emphasis)	Cable set for jitter tolerance measurement
J1620A	Coaxial Cable (0.9 m K Connector)	K connector
W3481AE	Operation Manual	Printed version

\*: For examples of how to connect instruments with coaxial cables, refer to Appendix D.

## 1.3 Specifications

### 1.3.1 Input/Output Signal

Table 1.3.1-1 Input/Output Signal

Item	Specifications												
External Clock Input Number of Connectors Frequency Range  Input Amplitude Termination Connector	1 6.400 001 to 12.5 GHz (Clock Source: MU181000A/B) 0.8 to 15 GHz (Clock Source: External) 0.4 to 1.0 V <sub>p-p</sub> 50 Ω/AC SMA(f.)												
External Jitter Input External Jitter Number of Connectors Modulation Frequency Input Amplitude Termination Connector	Various modulations according to input signal 1 10 kHz to 1 GHz 0 to 2 V <sub>p-p</sub> 50 Ω/GND SMA(f.)												
Jitter Clock Output*1 Number of Connectors Frequency Range:	2  When Clock Source is MU181000A or MU181000B: <table border="1" style="margin-left: 40px;"> <thead> <tr> <th>Range (GHz)</th> <th>Step</th> </tr> </thead> <tbody> <tr> <td>0.800 001 to 1.562 500</td> <td>1 kHz</td> </tr> <tr> <td>1.600 001 to 3.125 000</td> <td>1 kHz</td> </tr> <tr> <td>3.200 001 to 6.250 000</td> <td>1 kHz</td> </tr> <tr> <td>6.400 001 to 12.500 000</td> <td>1 kHz</td> </tr> <tr> <td>12.800 002 to 15.000 000</td> <td>2 kHz</td> </tr> </tbody> </table> When Clock Source is External: 0.8 to 15 GHz Same frequency as clock input to Ext Jitter Input connector	Range (GHz)	Step	0.800 001 to 1.562 500	1 kHz	1.600 001 to 3.125 000	1 kHz	3.200 001 to 6.250 000	1 kHz	6.400 001 to 12.500 000	1 kHz	12.800 002 to 15.000 000	2 kHz
Range (GHz)	Step												
0.800 001 to 1.562 500	1 kHz												
1.600 001 to 3.125 000	1 kHz												
3.200 001 to 6.250 000	1 kHz												
6.400 001 to 12.500 000	1 kHz												
12.800 002 to 15.000 000	2 kHz												

\*1: Specified using the optional accessory, J1342A Coaxial Cable 0.8 m.

**Table 1.3.1-1 Input/Output Signal (Cont'd)**

Item	Specifications
Jitter Clock Output (Cont'd) Frequency offset  Amplitude Residual Jitter Termination Connector	When Clock Source is MU181000A or MU181000B: -1000 to +1000 ppm, 1 ppm step When Clock Source is External: Unspecified 0.4 to 1.0 Vp-p*2 ≤ 350 fs*3 50 Ω/AC SMA(f.)
IQ Output Number of Connectors Output Amplitude Termination Connector	To connect to Ext IQ Input on the MU181000A-001 or MU181000B-001 2 (I, Q) ≤ 1 Vp-p 50 Ω/GND SMA(f.)

\*2: The amplitude cannot be changed.

\*3: At 4.25, 7.0125, 10, 12.5, 14, 15 GHz

Table 1.3.1-1 Input/Output Signal (Cont'd)

Item	Specifications
AUX Input	
Number of Connectors	1
Frequency	Same as clock frequency input to Ext Clock Input
Input Amplitude	0.4 to 1.1 V <sub>p-p</sub>
Termination	50 Ω/AC
Connector	SMA(f.)
Reference Clock Output* <sup>1</sup>	
Number of Connectors	2
Reference Clock	Ext Clock Input or AUX Input (Clock Source: MU181000A/B.) Ext Clock Input (Clock Source: External)
Frequency setup range:	1/1, 1/2 or 1/4 of Jitter clock output frequency
Output Amplitude	Output clock frequency < 4 GHz: 0.4 to 1.2 V <sub>p-p</sub> * <sup>2</sup> Output clock frequency ≥ 4 GHz: 0.4 to 1.0 V <sub>p-p</sub> * <sup>2</sup>
Termination	50 Ω/AC
Connector	SMA(f.)
Sub-rate Clock Output* <sup>1</sup>	
Number of Connectors	2 (Differential)
Frequency	1/N of Jitter clock output frequency (N=8 to 256, 1 step)
Output Amplitude	
Range:	0.1 to 0.7 V <sub>p-p</sub> , Step 10 mV
Accuracy	±20% of 70 mV ±set Amplitude* <sup>4</sup>
Termination	50 Ω/AC
Connector	SMA(f.)



\*4: At 12.5 GHz jitter clock frequency and 1/8 division ratio

### 1.3.2 Jitter Modulation Performance

When using the MU181500B unit interlocked with the MU195020A or MU196020A, the ranges of the modulation frequency and jitter amplitude are different depending on the clock setting and operating bit rate.

Be sure to refer to 1.3, “Standard” in the *MU195020A 21G/32G bit/s SI PPG MU195040A 21G/32G bit/s SI ED MU195050A Noise Generator Operation Manual* or *MU196020A PAM4 PPG MU196040A PAM4 ED MU196040B PAM4 ED Operation Manual*, and check the ranges for items under the conditions to use.

**Table 1.3.2-1 Sinusoidal Jitter (SJ1)\*1**

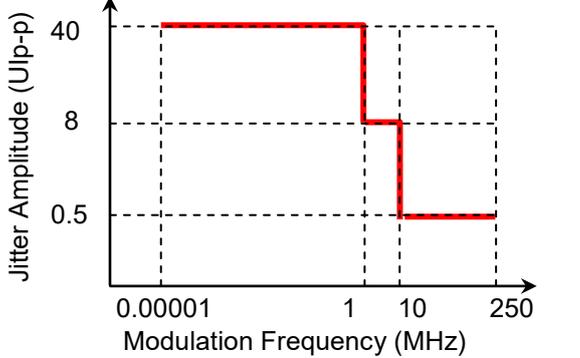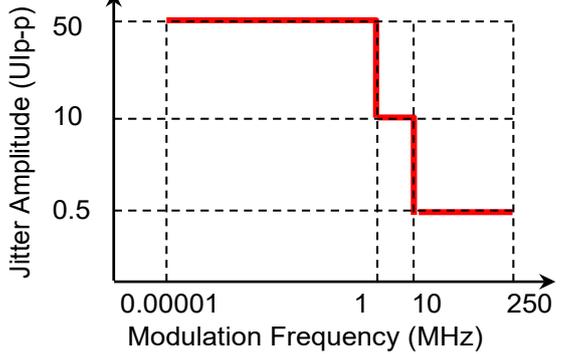Item	Specifications								
Mask Setting Range Full-rate (PPG) Full-rate (MUX)	<table border="1" data-bbox="486 907 1066 1108"> <thead> <tr> <th>Modulation Frequency (MHz)</th> <th>Jitter Amplitude (Ulp-p)</th> </tr> </thead> <tbody> <tr> <td>0.00001 to 1</td> <td>≤ 40</td> </tr> <tr> <td>1.001 to 10</td> <td>≤ 8</td> </tr> <tr> <td>10.01 to 250</td> <td>≤ 0.5</td> </tr> </tbody> </table> 	Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)	0.00001 to 1	≤ 40	1.001 to 10	≤ 8	10.01 to 250	≤ 0.5
Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)								
0.00001 to 1	≤ 40								
1.001 to 10	≤ 8								
10.01 to 250	≤ 0.5								
Half-rate (MUX) Quarter-rate (MUX)	<table border="1" data-bbox="486 1500 1066 1702"> <thead> <tr> <th>Modulation Frequency (MHz)</th> <th>Jitter Amplitude (Ulp-p)</th> </tr> </thead> <tbody> <tr> <td>0.00001 to 1</td> <td>≤ 50</td> </tr> <tr> <td>1.001 to 10</td> <td>≤ 10</td> </tr> <tr> <td>10.01 to 250</td> <td>≤ 0.5</td> </tr> </tbody> </table> 	Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)	0.00001 to 1	≤ 50	1.001 to 10	≤ 10	10.01 to 250	≤ 0.5
Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)								
0.00001 to 1	≤ 50								
1.001 to 10	≤ 10								
10.01 to 250	≤ 0.5								

\*1: Specified as data output of MU182020A or MU182021A in following diagram, 8 to 28 Gbit/s

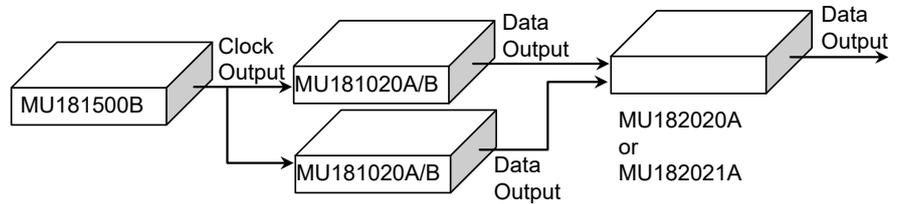


Table 1.3.2-1 Sinusoidal Jitter (SJ1)\*1 (Cont'd)

Item	Specifications	
Modulation Frequency Range	<b>Range</b>	<b>Step</b>
	10 Hz to 10 kHz	1 Hz
	10 to 100 kHz	10 Hz
	100 kHz to 1 MHz	100 Hz
	1 to 10 MHz	1 kHz
	10 to 100 MHz	10 kHz
	100 to 250 MHz	100 kHz
Modulation Bandwidth	<b>Clock Frequency</b>	<b>Bandwidth</b>
	$0.800001 < F_c \leq 1.2 \text{ GHz}$	10 Hz to 50 MHz
	$1.200001 < F_c \leq 4 \text{ GHz}$	10 Hz to 100 MHz
	$4.000001 < F_c \leq 8.5 \text{ GHz}$	10 Hz to 150 MHz
	$8.500001 < F_c \leq 15 \text{ GHz}$	10 Hz to 250 MHz
Accuracy	±100 ppm	


Table 1.3.2-1 Sinusoidal Jitter (SJ1)\*1 (Cont'd)

Item	Specifications				
Amplitude Range	<b>Data Pattern Generator</b>				
	<b>Full-rate (PPG), Full-rate (MUX)</b>			<b>Half-rate (MUX)</b>	
	<b>Modulation Frequency</b>	<b>Range (UIp-p)</b>	<b>Step (UI)</b>	<b>Range (UIp-p)</b>	<b>Step (UI)</b>
	10 Hz to 1 MHz	0 to 40	0.001	0 to 50	0.002
	1.001 to 10 MHz	0 to 8	0.001	0 to 10	0.002
	10.01 to 250 MHz	0 to 0.5	0.001	0 to 0.55	0.002
	<b>Data Pattern Generator</b>				
	<b>Quarter-rate (MUX)</b>				
	<b>Modulation Frequency</b>	<b>Range (UIp-p)</b>	<b>Step (UI)</b>		
	10 Hz to 1 MHz	0 to 50	0.004		
1.001 to 10 MHz	0 to 10	0.004			
10.01 to 250 MHz	0 to 0.548	0.004			
Accuracy	<b>Amplitude Settings</b>		<b>Accuracy</b>		
	0.001 to 2.199 UIp-p		$\pm(\text{set amplitude} \times Q\%) \pm 0.03 \text{ UI}$		
	2.2 to 21.999 UIp-p		$\pm(\text{set amplitude} \times Q\%) \pm 0.2 \text{ UI}$		
	22 to 50 UIp-p		$\pm(\text{set amplitude} \times Q\%) \pm 2 \text{ UI}$		
	Values of Q is shown below				
<b>Modulation Frequency</b>		<b>Q</b>			
10 Hz to 500 kHz		7			
500.1 kHz to 2 MHz		10			
2.001 to 80 MHz		13			
80.01 to 250 MHz		15			
Output Setting	ON, OFF switching				


**Table 1.3.2-1 Sinusoidal Jitter (SJ1)<sup>\*2,\*3</sup> (Cont'd)**

Item	Specifications										
Mask Setting Range	32G PPG Data rate is 15 to 32.1 Gbit/s for full-rate clock out setting. 32G PPG Data rate is 2.4 to 32.1 Gbit/s for half-rate clock out setting. 64G PPG Data rate is 15 to 32.1 Gbit/s for full-rate clock out setting. 64G PPG Data rate is 2.4 to 64.2 Gbit/s for half-rate clock out setting. 64G PPG Data rate is 2.4 to 64.2 Gbit/s for quarter-rate clock out setting.										
	<table border="1"> <thead> <tr> <th>Modulation Frequency (MHz)</th> <th>Jitter Amplitude (Ulp-p)</th> </tr> </thead> <tbody> <tr> <td>0.00001 to 0.1</td> <td>≤ 2000</td> </tr> <tr> <td>0.1001 to 1</td> <td>≤ 200</td> </tr> <tr> <td>1.001 to 10</td> <td>≤ 16</td> </tr> <tr> <td>10.01 to 250</td> <td>≤ 1.0</td> </tr> </tbody> </table>	Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)	0.00001 to 0.1	≤ 2000	0.1001 to 1	≤ 200	1.001 to 10	≤ 16	10.01 to 250	≤ 1.0
	Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)									
	0.00001 to 0.1	≤ 2000									
	0.1001 to 1	≤ 200									
	1.001 to 10	≤ 16									
10.01 to 250	≤ 1.0										
32G PPG Data rate is 4 to 15 Gbit/s for full-rate clock out setting. 64G PPG Data rate is 4 to 15 Gbit/s for full-rate clock out setting.											
<table border="1"> <thead> <tr> <th>Modulation Frequency (MHz)</th> <th>Jitter Amplitude (Ulp-p)</th> </tr> </thead> <tbody> <tr> <td>0.00001 to 0.1</td> <td>≤ 1000</td> </tr> <tr> <td>0.1001 to 1</td> <td>≤ 100</td> </tr> <tr> <td>1.001 to 10</td> <td>≤ 8</td> </tr> <tr> <td>10.01 to 250</td> <td>≤ 0.5</td> </tr> </tbody> </table>	Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)	0.00001 to 0.1	≤ 1000	0.1001 to 1	≤ 100	1.001 to 10	≤ 8	10.01 to 250	≤ 0.5	
Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)										
0.00001 to 0.1	≤ 1000										
0.1001 to 1	≤ 100										
1.001 to 10	≤ 8										
10.01 to 250	≤ 0.5										

**Table 1.3.2-1 Sinusoidal Jitter (SJ1)<sup>\*2,\*3</sup> (Cont'd)**

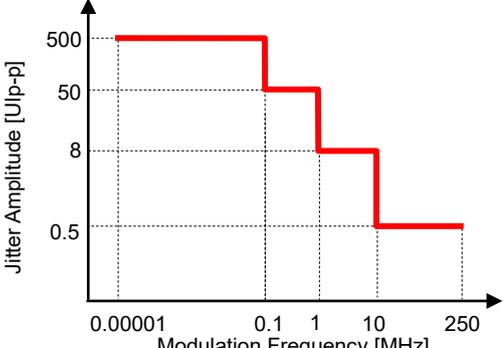Item	Specifications										
Mask Setting Range	32G PPG Data rate is 2.4 to 4 Gbit/s for full-rate clock out setting. 64G PPG Data rate is 2.4 to 4 Gbit/s for full-rate clock out setting.										
	<table border="1"> <thead> <tr> <th data-bbox="475 517 778 600">Modulation Frequency (MHz)</th> <th data-bbox="778 517 1441 600">Jitter Amplitude (Ulp-p)</th> </tr> </thead> <tbody> <tr> <td data-bbox="475 600 778 636">0.00001 to 0.1</td> <td data-bbox="778 600 1441 636">≤ 500</td> </tr> <tr> <td data-bbox="475 636 778 674">0.1001 to 1</td> <td data-bbox="778 636 1441 674">≤ 50</td> </tr> <tr> <td data-bbox="475 674 778 712">1.001 to 10</td> <td data-bbox="778 674 1441 712">≤ 8</td> </tr> <tr> <td data-bbox="475 712 778 750">10.01 to 250</td> <td data-bbox="778 712 1441 750">≤ 0.5</td> </tr> </tbody> </table>	Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)	0.00001 to 0.1	≤ 500	0.1001 to 1	≤ 50	1.001 to 10	≤ 8	10.01 to 250	≤ 0.5
	Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)									
	0.00001 to 0.1	≤ 500									
	0.1001 to 1	≤ 50									
	1.001 to 10	≤ 8									
10.01 to 250	≤ 0.5										
											

\*2: The performance is specified by the data output of MU183020A or MU183021A in the following figure.

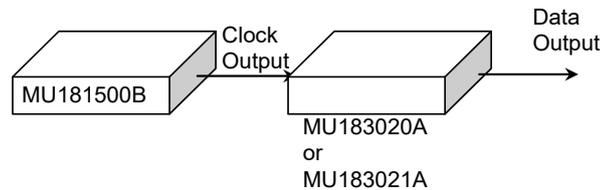

\*3: The range will be extended in Version 7.09.00 or any later version of MX180000A.

Table 1.3.2-1 Sinusoidal Jitter (SJ1)<sup>\*2,\*3</sup> (Cont'd)

Item	Specifications				
Amplitude <sup>*4</sup> Range	<b>Data Pattern Generator</b>				
	<b>32G PPG<sup>*5</sup> 64G PPG<sup>*5</sup></b>			<b>32G PPG<sup>*6</sup> 64G PPG<sup>*6</sup></b>	
	<b>Modulation Frequency</b>	<b>Range (Ulp-p)</b>	<b>Step (UI)</b>	<b>Range (Ulp-p)</b>	<b>Step (UI)</b>
	10 Hz to 100 kHz	0 to 1000	0.001	0 to 500	0.001
	100.1 kHz to 1 MHz	0 to 100	0.001	0 to 50	0.001
	1.001 to 10 MHz	0 to 8	0.001	0 to 8	0.001
	10.01 to 100 MHz	0 to 0.5	0.001	0 to 0.5	0.001
	<b>Data Pattern Generator</b>				
	<b>32G PPG<sup>*7</sup> 64G PPG<sup>*9</sup></b>			<b>32G PPG<sup>*8</sup> 64G PPG<sup>*10</sup></b>	
	<b>Modulation Frequency</b>	<b>Range (Ulp-p)</b>	<b>Step (UI)</b>	<b>Range (Ulp-p)</b>	<b>Step (UI)</b>
	10 Hz to 100 kHz	0 to 2000	0.002	0 to 2000	0.004
	100.1 kHz to 1 MHz	0 to 200	0.002	0 to 200	0.004
	1.001 to 10 MHz	0 to 16	0.002	0 to 16	0.004
	10.01 to 250 MHz	0 to 1	0.002	0 to 1	0.004



- \*4: When Built-in SJ2 is used, the range of the SJ1 jitter amplitude is narrowed by half.
- \*5: This applies when the data rate is 4 to 15 Gbit/s for full-rate clock out setting.
- \*6: This applies when the data rate is 2.4 to 4 Gbit/s for full-rate clock out setting.
- \*7: This applies when the data rate is 15 to 30 Gbit/s for full-rate clock out setting or 2.4 to 30 Gbit/s for half-rate clock out setting.
- \*8: This applies when the data rate is 30 to 32.1 Gbit/s for full-rate clock out or half-rate clock out setting.
- \*9: This applies when the data rate is one of the following:
- 15 to 30 Gbit/s for full-rate clock out setting
  - 2.4 to 30 Gbit/s for half-rate clock out setting
  - 2.4 to 30 Gbit/s for quarter-rate clock out setting
- \*10: This applies when the data rate is one of the following:
- 30 to 32.1 Gbit/s for full-rate clock out setting
  - 30 to 60 Gbit/s for half-rate clock out setting
  - 30 to 60 Gbit/s for quarter-rate clock out setting

**Table 1.3.2-1 Sinusoidal Jitter (SJ1)<sup>\*2,\*3</sup> (Cont'd)**


Item	Specifications		
Amplitude* <sub>4</sub> (Cont'd) Range	<b>Data Pattern Generator</b>		
	<b>64G PPG*<sub>11</sub></b>		
	<b>Modulation Frequency</b>	<b>Range (UIp-p)</b>	<b>Step (UI)</b>
	10 Hz to 100 kHz	0 to 2000	0.008
	100.1 kHz to 1 MHz	0 to 200	0.008
	1.001 to 10 MHz	0 to 16	0.008
	10.01 to 150 MHz	0 to 1	0.008
Accuracy	<b>Amplitude Settings</b>		<b>Accuracy</b>
	0.001 to 2.199 UIp-p		±(set amplitude × Q%)±0.03 UI
	2.2 to 21.999 UIp-p		±(set amplitude × Q%)±0.2 UI
	22 to 219.999 UIp-p		±(set amplitude × Q%)±2 UI
	220 to 2000 UIp-p		±(set amplitude × Q%)±20 UI
	Values of Q is shown below		
	<b>Modulation Frequency</b>	<b>Q</b>	
10 Hz to 500 kHz	7		
500.1 kHz to 2 MHz	10		
2.001 to 80 MHz	13		
80.01 to 250 MHz	15		
Output Setting	ON, OFF switching		

\*11: This applies when the data rate is 60 to 64.2 Gbit/s for half-rate clock out setting or 60 to 64.2 Gbit/s for quarter-rate clock out setting.

Table 1.3.2-1 Sinusoidal Jitter (SJ1)<sup>\*12,\*13</sup> (Cont'd)

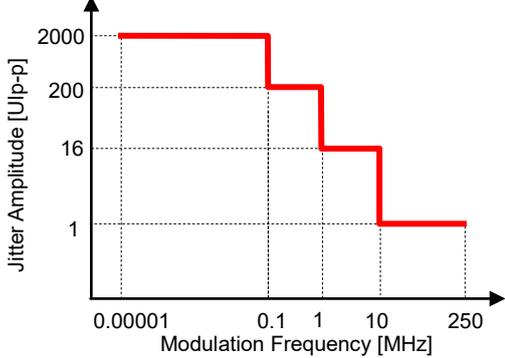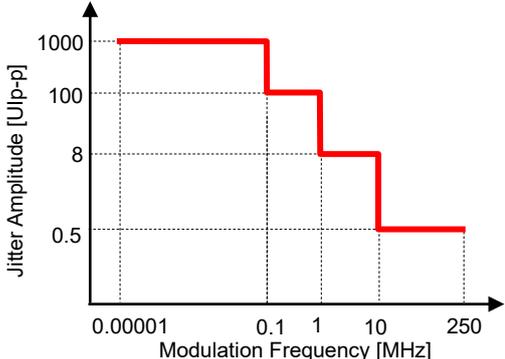Item	Specifications																				
Mask Setting Range 64G MUX <sup>*13</sup>	<p>Data rate of MP1861A: 30 to 64 Gbit/s</p> <table border="1" data-bbox="475 488 1054 721"> <thead> <tr> <th>Modulation Frequency (MHz)</th> <th>Jitter Amplitude (Ulp-p)</th> </tr> </thead> <tbody> <tr> <td>0.00001 to 0.1</td> <td>≤ 2000</td> </tr> <tr> <td>0.1001 to 1</td> <td>≤ 200</td> </tr> <tr> <td>1.001 to 10</td> <td>≤ 16</td> </tr> <tr> <td>10.01 to 250</td> <td>≤ 1.0</td> </tr> </tbody> </table>  <p>Data rate of MP1861A: 8 to 30 Gbit/s</p> <table border="1" data-bbox="475 1137 1054 1370"> <thead> <tr> <th>Modulation Frequency (MHz)</th> <th>Jitter Amplitude (Ulp-p)</th> </tr> </thead> <tbody> <tr> <td>0.00001 to 0.1</td> <td>≤ 1000</td> </tr> <tr> <td>0.1001 to 1</td> <td>≤ 100</td> </tr> <tr> <td>1.001 to 10</td> <td>≤ 8</td> </tr> <tr> <td>10.01 to 250</td> <td>≤ 0.5</td> </tr> </tbody> </table> 	Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)	0.00001 to 0.1	≤ 2000	0.1001 to 1	≤ 200	1.001 to 10	≤ 16	10.01 to 250	≤ 1.0	Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)	0.00001 to 0.1	≤ 1000	0.1001 to 1	≤ 100	1.001 to 10	≤ 8	10.01 to 250	≤ 0.5
Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)																				
0.00001 to 0.1	≤ 2000																				
0.1001 to 1	≤ 200																				
1.001 to 10	≤ 16																				
10.01 to 250	≤ 1.0																				
Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)																				
0.00001 to 0.1	≤ 1000																				
0.1001 to 1	≤ 100																				
1.001 to 10	≤ 8																				
10.01 to 250	≤ 0.5																				

\*12: The performance is specified by the data output of MP1861A in the following figure.

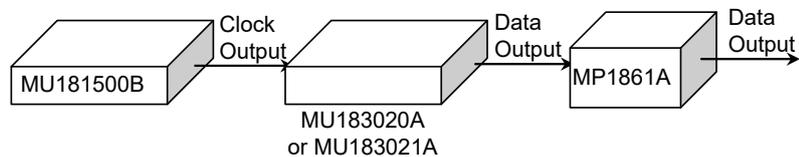

\*13: The MP1861A 64G MUX is supported by version 8.00.00 or later of MX180000A.

**Table 1.3.2-1 Sinusoidal Jitter (SJ1)\*12,\*13 (Cont'd)**

Item	Specifications				
Amplitude Range	<b>Data Pattern Generator</b>				
	<b>64G MUX</b>			<b>64G MUX*14</b>	
	<b>Modulation Frequency</b>	<b>Range (UIp-p)</b>	<b>Step (UI)</b>	<b>Range (UIp-p)</b>	<b>Step (UI)</b>
	10 Hz to 100 kHz	0 to 1000	0.002	0 to 2000	0.004
	100.1 kHz to 1 MHz	0 to 100	0.002	0 to 200	0.004
	1.001 to 10 MHz	0 to 8	0.002	0 to 16	0.004
	10.01 to 250 MHz	0 to 0.5	0.002	0 to 1	0.004
	<b>Data Pattern Generator</b>				
	<b>64G MUX*15</b>				
	<b>Modulation Frequency</b>	<b>Range (UIp-p)</b>	<b>Step (UI)</b>		
	10 Hz to 100 kHz	0 to 2000	0.008		
	100.1 kHz to 1 MHz	0 to 200	0.008		
	1.001 to 10 MHz	0 to 16	0.008		
	10.01 to 250 MHz	0 to 1	0.008		
	Accuracy	<b>Amplitude Settings</b>		<b>Accuracy</b>	
0.001 to 2.199 UIp-p		±(set amplitude × Q%)±0.03 UI			
2.2 to 21.999 UIp-p		±(set amplitude × Q%)±0.2 UI			
22 to 219.999 UIp-p		±(set amplitude × Q%)±2 UI			
220 to 2000 UIp-p		±(set amplitude × Q%)±20 UI			
Values of Q is shown below					
<b>Modulation Frequency</b>		<b>Q</b>			
10 Hz to 500 kHz		7			
500.1 kHz to 2 MHz		10			
2.001 to 80 MHz		13			
80.01 to 250 MHz		15			
Output Setting	ON, OFF switching				


\*14: This applies when the data rate of MP1861A is 30 to 60 Gbit/s.

\*15: This applies when the data rate of MP1861A is 60 to 64.2 Gbit/s.

Table 1.3.2-2 Sinusoidal Jitter (SJ2)<sup>\*1,\*2</sup>

Item	Specifications								
Mask Setting Range Full-rate (PPG) Full-rate (MUX) 32G PPG <sup>*3</sup> 64G PPG <sup>*3</sup> 64G MUX	<table border="1"> <thead> <tr> <th>Modulation Frequency (MHz)</th> <th>Jitter Amplitude (Ulp-p)</th> </tr> </thead> <tbody> <tr> <td>0.00001 to 1</td> <td>≤ 40</td> </tr> <tr> <td>1.001 to 10</td> <td>≤ 6</td> </tr> <tr> <td>10.01 to 250</td> <td>≤ 0.4</td> </tr> </tbody> </table>	Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)	0.00001 to 1	≤ 40	1.001 to 10	≤ 6	10.01 to 250	≤ 0.4
Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)								
0.00001 to 1	≤ 40								
1.001 to 10	≤ 6								
10.01 to 250	≤ 0.4								
Half-rate (MUX) Quarter-rate (MUX) 32G PPG <sup>*10</sup> 64G PPG <sup>*11</sup> 64G MUX	<table border="1"> <thead> <tr> <th>Modulation Frequency (MHz)</th> <th>Jitter Amplitude (Ulp-p)</th> </tr> </thead> <tbody> <tr> <td>0.00001 to 1</td> <td>≤ 50</td> </tr> <tr> <td>1.001 to 10</td> <td>≤ 10</td> </tr> <tr> <td>10.01 to 250</td> <td>≤ 0.5</td> </tr> </tbody> </table>	Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)	0.00001 to 1	≤ 50	1.001 to 10	≤ 10	10.01 to 250	≤ 0.5
Modulation Frequency (MHz)	Jitter Amplitude (Ulp-p)								
0.00001 to 1	≤ 50								
1.001 to 10	≤ 10								
10.01 to 250	≤ 0.5								

\*1: Specified as data output of MU182020A or MU182021A in following diagram, 8 to 28 Gbit/s

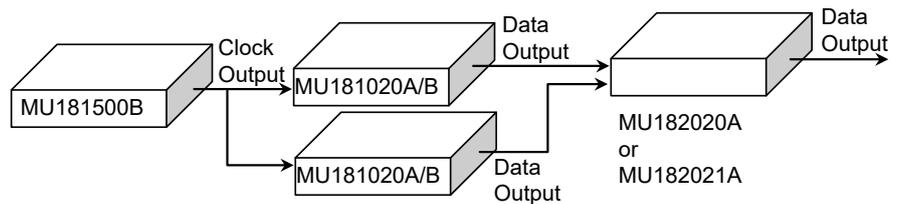

\*2: From MX190000A Version 2.00.00, only either SJ2 or Built-in SJ2 can be set.

**Table 1.3.2-2 Sinusoidal Jitter (SJ2)\*1,\*2 (Cont'd)**

Item	Specifications					
Modulation Frequency Range	<b>Range</b>		<b>Step</b>			
	10 Hz to 10 kHz		1 Hz			
	10 to 100 kHz		10 Hz			
	100 kHz to 1 MHz		100 Hz			
	1 to 10 MHz		1 kHz			
	10 to 100 MHz		10 kHz			
	100 to 250 MHz		100 kHz			
Bandwidth	<b>Clock Frequency</b>		<b>Bandwidth</b>			
	0.800001 ≤ Fc ≤ 1.5625 GHz		10 Hz to 10 MHz			
	1.600001 ≤ Fc ≤ 1.8 GHz		10 Hz to 100 MHz			
	1.800001 ≤ Fc ≤ 6.25 GHz		10 Hz to 150 MHz			
	6.400001 ≤ Fc ≤ 15 GHz		10 Hz to 250 MHz			
Accuracy	±100 ppm					
Amplitude Range	<b>Jitter amplitude (UIp-p)/Step (UI)</b>					
Data Pattern Generator: Full-rate (PPG) Full-rate (MUX) 32G PPG*3 64G PPG*3						
	<b>Jitter Clock Frequency (GHz)</b>	<b>6.400001 to 15</b>	<b>3.200001 to 6.25</b>	<b>1.800001 to 3.125</b>	<b>1.600001 to 1.8</b>	<b>0.800001 to 1.5625</b>
	<b>Modulation Frequency (MHz)</b>	0 to 40/ 0.001	0 to 20/ 0.001	0 to 10/ 0.001	0 to 10/ 0.001	0 to 5/ 0.001
	0.00001 to 1					
	1.001 to 10	0 to 6/ 0.001	0 to 3/ 0.001	0 to 1.5/ 0.001	0 to 1.5/ 0.001	0 to 0.75/ 0.001
	10.01 to 100	0 to 0.4/ 0.001	0 to 0.2/ 0.001	0 to 0.1/ 0.001	0 to 0.1/ 0.001	—
	100.1 to 150			—		
	150.1 to 250		—	—		

\*3: When the data rate is 2.4 to 15 Gbit/s for full-rate clock out setting.

Table 1.3.2-2 Sinusoidal Jitter (SJ2)<sup>\*1,\*2</sup> (Cont'd)

Item	Specifications						
Amplitude (Cont'd) Range Data Pattern Generator: Half-rate (MUX) 32G PPG <sup>*4</sup> 64G MUX <sup>*5</sup> 64G PPG <sup>*6</sup>	<b>Jitter amplitude (Ulp-p)/Step (UI)</b>						
	<b>Jitter Clock Frequency (GHz)</b> <b>Modulation Frequency (MHz)</b>	<b>6.400001 to 15</b>	<b>3.200001 to 6.25</b>	<b>1.800001 to 3.125</b>	<b>1.600001 to 1.8</b>	<b>0.800001 to 1.5625</b>	
	0.00001 to 1	0 to 50/ 0.002	0 to 50/ 0.002	0 to 25/ 0.002	0 to 25/ 0.002	0 to 12.4/ 0.002	
	1.001 to 10	0 to 10/ 0.002	0 to 10/ 0.002	0 to 5/ 0.002	0 to 5/ 0.002	0 to 2.5/ 0.002	
	10.01 to 100	0 to 0.55/ 0.002	0 to 0.4/ 0.002	0 to 0.2/ 0.002	0 to 0.2/ 0.002	—	
	100.1 to 150				—		
	150.1 to 250	—	—	—	—	—	
	Data Pattern Generator: Quarter-rate (MUX) 32G PPG <sup>*7</sup> 64G MUX <sup>*8</sup> 64G PPG <sup>*9</sup>	<b>Jitter amplitude (Ulp-p)/Step (UI)</b>					
		<b>Jitter Clock Frequency (GHz)</b> <b>Modulation Frequency (MHz)</b>	<b>6.400001 to 15</b>	<b>3.200001 to 6.25</b>	<b>1.800001 to 3.125</b>	<b>1.600001 to 1.8</b>	<b>0.800001 to 1.5625</b>
		0.00001 to 1	0 to 50/ 0.004	0 to 50/ 0.004	0 to 25/ 0.004	0 to 25/ 0.004	0 to 12.4/ 0.004
1.001 to 10		0 to 10/ 0.004	0 to 10/ 0.004	0 to 5/ 0.004	0 to 5/ 0.004	0 to 2.5/ 0.004	
10.01 to 100		0 to 0.548/ 0.004	0 to 0.4/ 0.004	0 to 0.2/ 0.004	0 to 0.2/ 0.004	—	
100.1 to 150					—		
150.1 to 250		—	—	—	—	—	

\*4: When the data rate is 15 to 30 Gbit/s for full-rate clock out setting or 2.4 to 30 Gbit/s for half-rate clock out setting.

\*5: This applies when the data rate of MP1861A is 8 to 30 Gbit/s.

\*6: This applies when the data rate is one of the following:

- 15 to 30 Gbit/s for full-rate clock out setting
- 2.4 to 30 Gbit/s for half-rate clock out setting
- 2.4 to 30 Gbit/s for quarter-rate clock out setting

\*7: When the data rate is 30 to 32.1 Gbit/s for full-rate clock out or half-rate clock out setting.

- \*8: This applies when the data rate of MP1861A is 30 to 60 Gbit/s.
- \*9: This applies when the data rate is one of the following:
  - 30 to 32.1 Gbit/s for full-rate clock out setting
  - 30 to 60 Gbit/s for half-rate clock out setting
  - 30 to 60 Gbit/s for quarter-rate clock out setting
- \*10: When the data rate is 15 to 32.1 Gbit/s for full-rate clock out setting or 2.4 to 32.1 Gbit/s for half-rate clock out setting.
- \*11: This applies when the data rate is one of the following:
  - 15 to 32.1 Gbit/s for full-rate clock out setting
  - 2.4 to 64.2 Gbit/s for half-rate clock out setting
  - 2.4 to 64.2 Gbit/s for quarter-rate clock out setting

Table 1.3.2-2 Sinusoidal Jitter (SJ2)<sup>\*1,\*2</sup> (Cont'd)

Item	Specifications																		
Amplitude (Cont'd) Range Data Pattern Generator: 64G MUX <sup>*12</sup> 64G PPG <sup>*13</sup>	<table border="1"> <thead> <tr> <th>Jitter Clock Frequency (GHz)</th> <th>Jitter amplitude (UIp-p)/ Step (UI)</th> </tr> </thead> <tbody> <tr> <td>Modulation Frequency (MHz)</td> <td>6.400001 to 15</td> </tr> <tr> <td>0.00001 to 1</td> <td>0 to 50/0.008</td> </tr> <tr> <td>1.001 to 10</td> <td>0 to 10/0.008</td> </tr> <tr> <td>10.01 to 250</td> <td>0 to 0.544/0.008</td> </tr> </tbody> </table>	Jitter Clock Frequency (GHz)	Jitter amplitude (UIp-p)/ Step (UI)	Modulation Frequency (MHz)	6.400001 to 15	0.00001 to 1	0 to 50/0.008	1.001 to 10	0 to 10/0.008	10.01 to 250	0 to 0.544/0.008								
Jitter Clock Frequency (GHz)	Jitter amplitude (UIp-p)/ Step (UI)																		
Modulation Frequency (MHz)	6.400001 to 15																		
0.00001 to 1	0 to 50/0.008																		
1.001 to 10	0 to 10/0.008																		
10.01 to 250	0 to 0.544/0.008																		
Accuracy <sup>*14</sup>	<table border="1"> <thead> <tr> <th>Amplitude Settings</th> <th>Accuracy</th> </tr> </thead> <tbody> <tr> <td>0.002 to 2.19 UIp-p</td> <td><math>\pm(\text{set amplitude} \times Q\%) \pm 0.03 \text{ UI}</math></td> </tr> <tr> <td>2.2 to 21.9 UIp-p</td> <td><math>\pm(\text{set amplitude} \times Q\%) \pm 0.2 \text{ UI}</math></td> </tr> <tr> <td>22 to 50 UIp-p</td> <td><math>\pm(\text{set amplitude} \times Q\%) \pm 2 \text{ UI}</math></td> </tr> </tbody> </table> <p>Values of Q is shown below</p> <table border="1"> <thead> <tr> <th>Modulation Frequency</th> <th>Q</th> </tr> </thead> <tbody> <tr> <td>10 Hz to 500 kHz</td> <td>10</td> </tr> <tr> <td>500.1 kHz to 2 MHz</td> <td>13</td> </tr> <tr> <td>2.001 to 80 MHz</td> <td>15</td> </tr> <tr> <td>80.01 to 250 MHz</td> <td>18</td> </tr> </tbody> </table>	Amplitude Settings	Accuracy	0.002 to 2.19 UIp-p	$\pm(\text{set amplitude} \times Q\%) \pm 0.03 \text{ UI}$	2.2 to 21.9 UIp-p	$\pm(\text{set amplitude} \times Q\%) \pm 0.2 \text{ UI}$	22 to 50 UIp-p	$\pm(\text{set amplitude} \times Q\%) \pm 2 \text{ UI}$	Modulation Frequency	Q	10 Hz to 500 kHz	10	500.1 kHz to 2 MHz	13	2.001 to 80 MHz	15	80.01 to 250 MHz	18
Amplitude Settings	Accuracy																		
0.002 to 2.19 UIp-p	$\pm(\text{set amplitude} \times Q\%) \pm 0.03 \text{ UI}$																		
2.2 to 21.9 UIp-p	$\pm(\text{set amplitude} \times Q\%) \pm 0.2 \text{ UI}$																		
22 to 50 UIp-p	$\pm(\text{set amplitude} \times Q\%) \pm 2 \text{ UI}$																		
Modulation Frequency	Q																		
10 Hz to 500 kHz	10																		
500.1 kHz to 2 MHz	13																		
2.001 to 80 MHz	15																		
80.01 to 250 MHz	18																		
Output Setting	ON, OFF switching																		

\*12: This applies when the data rate of MP1861A is 60 to 64.2 Gbit/s.

\*13: When the data rate is 60 to 64.2 Gbit/s for half-rate clock out setting or 60 to 64.2 Gbit/s for quarter-rate clock out setting.

\*14: Accuracy when using the MU181000A/B, calibrated in combination with the ED, as a clock source

**Table 1.3.2-3 Sinusoidal Jitter (Built-in SJ2)<sup>\*2,\*3,\*4</sup>**

Item	Specifications										
Switching SJ2	Function to switch “Built-in SJ2” and “SJ2 via MU181000” (SJ2 using MU181000A/B)										
Modulation Frequency Range	33 kHz, 87 MHz, 100 MHz, 210 MHz										
Modulation Bandwidth	<table border="1"> <thead> <tr> <th>Clock Frequency</th> <th>Bandwidth</th> </tr> </thead> <tbody> <tr> <td><math>0.800001 &lt; F_c \leq 1.2 \text{ GHz}</math></td> <td>33kHz</td> </tr> <tr> <td><math>1.200001 &lt; F_c \leq 8.5 \text{ GHz}</math></td> <td>33kHz, 87MHz, 100 MHz</td> </tr> <tr> <td><math>4.000001 &lt; F_c \leq 8.5 \text{ GHz}^{*1}</math></td> <td>33kHz, 87MHz, 100 MHz, 210MHz</td> </tr> <tr> <td><math>8.500001 &lt; F_c \leq 15 \text{ GHz}</math></td> <td>33kHz, 87MHz, 100 MHz, 210MHz</td> </tr> </tbody> </table>	Clock Frequency	Bandwidth	$0.800001 < F_c \leq 1.2 \text{ GHz}$	33kHz	$1.200001 < F_c \leq 8.5 \text{ GHz}$	33kHz, 87MHz, 100 MHz	$4.000001 < F_c \leq 8.5 \text{ GHz}^{*1}$	33kHz, 87MHz, 100 MHz, 210MHz	$8.500001 < F_c \leq 15 \text{ GHz}$	33kHz, 87MHz, 100 MHz, 210MHz
Clock Frequency	Bandwidth										
$0.800001 < F_c \leq 1.2 \text{ GHz}$	33kHz										
$1.200001 < F_c \leq 8.5 \text{ GHz}$	33kHz, 87MHz, 100 MHz										
$4.000001 < F_c \leq 8.5 \text{ GHz}^{*1}$	33kHz, 87MHz, 100 MHz, 210MHz										
$8.500001 < F_c \leq 15 \text{ GHz}$	33kHz, 87MHz, 100 MHz, 210MHz										
Accuracy	±100 ppm										

\*1: This applies when Data Pattern Generator is 32G PPG or SI PPG.

\*2: From MX190000A Version 2.00.00, only either Built-in SJ2 or SJ2 via MU181000 can be set.

\*3: This applies when Data Pattern Generator is 32G PPG or SI PPG (when the MU181500B is synchronized with 32G PPG or SI PPG).

\*4: Specified as data output of MU183020A or MU195020A in following diagram

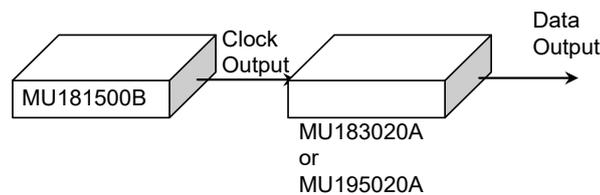


Table 1.3.2-3 Sinusoidal Jitter (Built-in SJ2)\*2,\*3,\*4 (Cont'd)

Item	Specifications				
Amplitude Range	<b>Data Pattern Generator</b>				
	<b>Full-rate (PPG), Full-rate (MUX)</b>			<b>Half-rate (MUX)</b>	
	<b>Modulation Frequency</b>	<b>Range (Ulp-p)</b>	<b>Step (UI)</b>	<b>Range (Ulp-p)</b>	<b>Step (UI)</b>
	33 kHz	0 to 40	0.001	0 to 50	0.002
	87 MHz	0 to 0.25	0.001	0 to 0.5	0.002
	100 MHz	0 to 0.25	0.001	0 to 0.5	0.002
	210 MHz	0 to 0.1	0.001	0 to 0.2	0.002
	<b>Data Pattern Generator</b>				
	<b>Quarter-rate (MUX)</b>				
	<b>Modulation Frequency</b>	<b>Range (Ulp-p)</b>	<b>Step (UI)</b>		
	33 kHz	0 to 50	0.004		
	87 MHz	0 to 0.5	0.004		
	100 MHz	0 to 0.5	0.004		
	210 MHz	0 to 0.2	0.004		
	<b>Data Pattern Generator</b>				
		<b>32G PPG*5 64G PPG*5</b>	<b>32G PPG*6 64G PPG*6</b>		
<b>Modulation Frequency</b>	<b>Range (Ulp-p)</b>	<b>Step (UI)</b>	<b>Range (Ulp-p)</b>	<b>Step (UI)</b>	
33 kHz	0 to 500	0.001	0 to 500	0.001	
87 MHz	0 to 0.25	0.001	0 to 0.25	0.001	
100 MHz	0 to 0.25	0.001	0 to 0.25	0.001	
210 MHz	0 to 0.1	0.001	—	—	

\*5: This applies when the data rate is 4 to 15 Gbit/s for full-rate clock out setting.

\*6: This applies when the data rate is 2.4 to 4 Gbit/s for full-rate clock out setting.

**Table 1.3.2-3 Sinusoidal Jitter (Built-in SJ2)\*2,\*3,\*4 (Cont'd)**

Item	Specifications				
Amplitude Range (Cont'd)	<b>Data Pattern Generator</b>				
	<b>32G PPG*7 64G PPG*9</b>			<b>32G PPG*8 64G PPG*10</b>	
	<b>Modulation Frequency</b>	<b>Range (Ulp-p)</b>	<b>Step (UI)</b>	<b>Range (Ulp-p)</b>	<b>Step (UI)</b>
	33 kHz	0 to 1000	0.002	0 to 1000	0.004
	87 MHz	0 to 0.5	0.002	0 to 0.5	0.004
	100 MHz	0 to 0.5	0.002	0 to 0.5	0.004
	210 MHz	0 to 0.2	0.002	0 to 0.2	0.004
	<b>Data Pattern Generator</b>				
	<b>64G PPG*11</b>				
	<b>Modulation Frequency</b>	<b>Range (Ulp-p)</b>	<b>Step (UI)</b>		
	33 kHz	0 to 1000	0.008		
	87 MHz	0 to 0.496	0.008		
	100 MHz	0 to 0.496	0.008		
	210 MHz	0 to 0.2	0.008		

\*7: This applies when the data rate is 15 to 30 Gbit/s for full-rate clock out setting or 2.4 to 30 Gbit/s for half-rate clock out setting.

\*8: This applies when the data rate is 30 to 32.1 Gbit/s for full-rate clock out setting or half-rate clock out setting.

\*9: This applies when the data rate is one of the following:

- 15 to 30 Gbit/s for full-rate clock out setting
- 2.4 to 30 Gbit/s for half-rate clock out setting
- 2.4 to 30 Gbit/s for quarter-rate clock out setting

\*10: This applies when the data rate is one of the following:

- 30 to 32.1 Gbit/s for full-rate clock out setting
- 30 to 60 Gbit/s for half-rate clock out setting
- 30 to 60 Gbit/s for quarter-rate clock out setting

\*11: When the data rate is 60 to 64.2 Gbit/s for half-rate clock out setting or 60 to 64.2 Gbit/s for quarter-rate clock out setting.


Table 1.3.2-3 Sinusoidal Jitter (Built-in SJ2)\*2,\*3,\*4 (Cont'd)

Item	Specifications											
Accuracy	<table border="1"> <thead> <tr> <th data-bbox="470 488 815 533">Amplitude Settings</th> <th data-bbox="820 488 1236 533">Accuracy</th> </tr> </thead> <tbody> <tr> <td data-bbox="470 539 815 577">0.001 to 2.199 UI<sub>p-p</sub></td> <td data-bbox="820 539 1236 577"><math>\pm(\text{set amplitude} \times Q\%) \pm 0.03 \text{ UI}</math></td> </tr> <tr> <td data-bbox="470 584 815 622">2.2 to 21.999 UI<sub>p-p</sub></td> <td data-bbox="820 584 1236 622"><math>\pm(\text{set amplitude} \times Q\%) \pm 0.2 \text{ UI}</math></td> </tr> <tr> <td data-bbox="470 629 815 667">22 to 219.999 UI</td> <td data-bbox="820 629 1236 667"><math>\pm(\text{set amplitude} \times Q\%) \pm 2 \text{ UI}</math></td> </tr> <tr> <td data-bbox="470 674 815 712">220 to 1000 UI</td> <td data-bbox="820 674 1236 712"><math>\pm(\text{set amplitude} \times Q\%) \pm 20 \text{ UI}</math></td> </tr> </tbody> </table>		Amplitude Settings	Accuracy	0.001 to 2.199 UI <sub>p-p</sub>	$\pm(\text{set amplitude} \times Q\%) \pm 0.03 \text{ UI}$	2.2 to 21.999 UI <sub>p-p</sub>	$\pm(\text{set amplitude} \times Q\%) \pm 0.2 \text{ UI}$	22 to 219.999 UI	$\pm(\text{set amplitude} \times Q\%) \pm 2 \text{ UI}$	220 to 1000 UI	$\pm(\text{set amplitude} \times Q\%) \pm 20 \text{ UI}$
	Amplitude Settings	Accuracy										
	0.001 to 2.199 UI <sub>p-p</sub>	$\pm(\text{set amplitude} \times Q\%) \pm 0.03 \text{ UI}$										
	2.2 to 21.999 UI <sub>p-p</sub>	$\pm(\text{set amplitude} \times Q\%) \pm 0.2 \text{ UI}$										
	22 to 219.999 UI	$\pm(\text{set amplitude} \times Q\%) \pm 2 \text{ UI}$										
	220 to 1000 UI	$\pm(\text{set amplitude} \times Q\%) \pm 20 \text{ UI}$										
	The accuracy at 210 MHz for Fc 4.000001 to 8.500000GHz is nominal value.											
<table border="1"> <thead> <tr> <th data-bbox="470 732 778 777">Fm [Hz]</th> <th data-bbox="783 732 914 777">Q</th> </tr> </thead> <tbody> <tr> <td data-bbox="470 784 778 822">33k</td> <td data-bbox="783 784 914 822">6.3</td> </tr> <tr> <td data-bbox="470 828 778 853">87M, 100M, 210M</td> <td data-bbox="783 828 914 853">14.3</td> </tr> </tbody> </table>		Fm [Hz]	Q	33k	6.3	87M, 100M, 210M	14.3					
Fm [Hz]	Q											
33k	6.3											
87M, 100M, 210M	14.3											
Output Setting	ON, OFF switching											

**Table 1.3.2-4 Random Jitter (RJ)\*1**

Item	Specifications																																																		
Bandwidth	10 kHz to 1 GHz																																																		
Crest Factor	16 dB																																																		
Filter	User, PCIe (Data clocked), PCIe (Common Ref. clock)																																																		
User Filter																																																			
3 dB Bandwidth	HPF: Through, 10 MHz, 20 MHz LPF: Through, 100 MHz																																																		
Amplitude Range	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="5">Data Pattern Generator</th> </tr> <tr> <th></th> <th colspan="2">Full-rate (PPG), Full-rate (MUX), 32G PPG*2 64G PPG*2</th> <th colspan="2">Half-rate (MUX), 32G PPG*3, 64G MUX*4 64G PPG*5</th> </tr> <tr> <th>Jitter Clock Frequency</th> <th>Range (UIp-p)</th> <th>Step (mUI)</th> <th>Range (UIp-p)</th> <th>Step (mUI)</th> </tr> </thead> <tbody> <tr> <td>≥ 2.5 GHz</td> <td>0 to 0.5</td> <td>2</td> <td>0 to 0.5</td> <td>4</td> </tr> <tr> <td>&lt; 2.5 GHz</td> <td>0 to 0.2f</td> <td>2</td> <td>0 to 0.2f</td> <td>4</td> </tr> </tbody> </table> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="5">Data Pattern Generator</th> </tr> <tr> <th></th> <th colspan="2">Quarter-rate (MUX), 32G PPG*6, 64G MUX*7 32G PPG*8</th> <th colspan="2">64G MUX*9 32G PPG*10</th> </tr> <tr> <th>Jitter Clock Frequency</th> <th>Range (UIp-p)</th> <th>Step (mUI)</th> <th>Range (UIp-p)</th> <th>Step (mUI)</th> </tr> </thead> <tbody> <tr> <td>≥ 2.5 GHz</td> <td>0 to 0.496</td> <td>8</td> <td>0 to 0.496</td> <td>16</td> </tr> <tr> <td>&lt; 2.5 GHz</td> <td>0 to 0.2f</td> <td>8</td> <td>0 to 0.2f</td> <td>16</td> </tr> </tbody> </table>	Data Pattern Generator						Full-rate (PPG), Full-rate (MUX), 32G PPG*2 64G PPG*2		Half-rate (MUX), 32G PPG*3, 64G MUX*4 64G PPG*5		Jitter Clock Frequency	Range (UIp-p)	Step (mUI)	Range (UIp-p)	Step (mUI)	≥ 2.5 GHz	0 to 0.5	2	0 to 0.5	4	< 2.5 GHz	0 to 0.2f	2	0 to 0.2f	4	Data Pattern Generator						Quarter-rate (MUX), 32G PPG*6, 64G MUX*7 32G PPG*8		64G MUX*9 32G PPG*10		Jitter Clock Frequency	Range (UIp-p)	Step (mUI)	Range (UIp-p)	Step (mUI)	≥ 2.5 GHz	0 to 0.496	8	0 to 0.496	16	< 2.5 GHz	0 to 0.2f	8	0 to 0.2f	16
Data Pattern Generator																																																			
	Full-rate (PPG), Full-rate (MUX), 32G PPG*2 64G PPG*2		Half-rate (MUX), 32G PPG*3, 64G MUX*4 64G PPG*5																																																
Jitter Clock Frequency	Range (UIp-p)	Step (mUI)	Range (UIp-p)	Step (mUI)																																															
≥ 2.5 GHz	0 to 0.5	2	0 to 0.5	4																																															
< 2.5 GHz	0 to 0.2f	2	0 to 0.2f	4																																															
Data Pattern Generator																																																			
	Quarter-rate (MUX), 32G PPG*6, 64G MUX*7 32G PPG*8		64G MUX*9 32G PPG*10																																																
Jitter Clock Frequency	Range (UIp-p)	Step (mUI)	Range (UIp-p)	Step (mUI)																																															
≥ 2.5 GHz	0 to 0.496	8	0 to 0.496	16																																															
< 2.5 GHz	0 to 0.2f	8	0 to 0.2f	16																																															
Accuracy	f: Jitter Clock Output Frequency (GHz) Jitter Clock Output Frequency ≥ 4 GHz:±(set amplitude × 15%)±4.9 ps Jitter Clock Output Frequency < 4 GHz:±(set amplitude × 15%)±7 ps																																																		

\*1: Specified as data output of MU182020A or MU182021A in following diagram, 8 to 28 Gbit/s

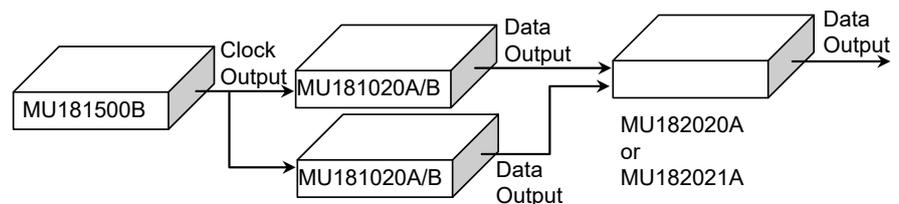

- \*2: When the data rate is 2.4 to 15 Gbit/s for full-rate clock out setting.
- \*3: When the data rate is 15 to 30 Gbit/s for full-rate clock out setting or 2.4 to 30 Gbit/s for half-rate clock out setting.
- \*4: This applies when the data rate of MP1861A is 8 to 30 Gbit/s.


- \*5: This applies when the data rate is one of the following:
  - 15 to 30 Gbit/s for full-rate clock out setting
  - 2.4 to 30 Gbit/s for half-rate clock out setting
  - 2.4 to 30 Gbit/s for quarter-rate clock out setting
- \*6: When the data rate is 30 to 32.1 Gbit/s for full-rate clock out or half-rate clock out setting.
- \*7: This applies when the data rate of MP1861A is 30 to 60 Gbit/s.
- \*8: This applies when the data rate is one of the following:
  - 30 to 32.1 Gbit/s for full-rate clock out setting
  - 30 to 60 Gbit/s for half-rate clock out setting
  - 30 to 60 Gbit/s for quarter-rate clock out setting
- \*9: This applies when the data rate of MP1861A is 60 to 64.2 Gbit/s.
- \*10: When the data rate is 60 to 64.2 Gbit/s for half-rate clock out setting or 60 to 64.2 Gbit/s for quarter-rate clock out setting.



Table 1.3.2-5 Bounded Uncorrelated Jitter (BUJ)\*1

Item	Specifications																																																
PRBS Pattern Length	$2^n - 1$ (n=7, 9, 11, 15, 23, 31)																																																
BUJ rate																																																	
Range	<table border="1"> <thead> <tr> <th>Bitrate (Gbit/s)</th> <th>Step (kbit/s)</th> </tr> </thead> <tbody> <tr> <td>0.1 to 3.2</td> <td>1</td> </tr> <tr> <td>4.9 to 6.25*2</td> <td>1</td> </tr> <tr> <td>9.8 to 12.5*2</td> <td>1</td> </tr> </tbody> </table>	Bitrate (Gbit/s)	Step (kbit/s)	0.1 to 3.2	1	4.9 to 6.25*2	1	9.8 to 12.5*2	1																																								
Bitrate (Gbit/s)	Step (kbit/s)																																																
0.1 to 3.2	1																																																
4.9 to 6.25*2	1																																																
9.8 to 12.5*2	1																																																
LPF Bandwidth*3	Through, 500 MHz*2, 300 MHz, 200 MHz, 100 MHz, 50 MHz																																																
Amplitude																																																	
Range	<table border="1"> <thead> <tr> <th colspan="5">Data Pattern Generator</th> </tr> <tr> <th rowspan="2">Jitter Clock Output Frequency</th> <th colspan="2">Full-rate (PPG), Full-rate (MUX), 32G PPG*4, 64G PPG*4</th> <th colspan="2">Half-rate (MUX), 32G PPG*5, 64 MUX*6, 64G PPG*7</th> </tr> <tr> <th>Range (UIp-p)</th> <th>Step (mUI)</th> <th>Range (UIp-p)</th> <th>Step (mUI)</th> </tr> </thead> <tbody> <tr> <td>≥ 2.5 GHz</td> <td>0 to 0.5</td> <td>2</td> <td>0 to 0.5</td> <td>4</td> </tr> <tr> <td>&lt; 2.5 GHz</td> <td>0 to 0.2f</td> <td>2</td> <td>0 to 0.2f</td> <td>4</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th colspan="5">Data Pattern Generator</th> </tr> <tr> <th rowspan="2">Jitter Clock Output Frequency</th> <th colspan="2">Quarter -rate(MUX), 32G PPG*8, 64 MUX*9, 64G PPG*10</th> <th colspan="2">64G MUX*11, 64G PPG*12</th> </tr> <tr> <th>Range (UIp-p)</th> <th>Step (mUI)</th> <th>Range (UIp-p)</th> <th>Step (mUI)</th> </tr> </thead> <tbody> <tr> <td>≥ 2.5 GHz</td> <td>0 to 0.496</td> <td>8</td> <td>0 to 0.496</td> <td>16</td> </tr> <tr> <td>&lt; 2.5 GHz</td> <td>0 to 0.2f</td> <td>4</td> <td>—</td> <td>—</td> </tr> </tbody> </table>	Data Pattern Generator					Jitter Clock Output Frequency	Full-rate (PPG), Full-rate (MUX), 32G PPG*4, 64G PPG*4		Half-rate (MUX), 32G PPG*5, 64 MUX*6, 64G PPG*7		Range (UIp-p)	Step (mUI)	Range (UIp-p)	Step (mUI)	≥ 2.5 GHz	0 to 0.5	2	0 to 0.5	4	< 2.5 GHz	0 to 0.2f	2	0 to 0.2f	4	Data Pattern Generator					Jitter Clock Output Frequency	Quarter -rate(MUX), 32G PPG*8, 64 MUX*9, 64G PPG*10		64G MUX*11, 64G PPG*12		Range (UIp-p)	Step (mUI)	Range (UIp-p)	Step (mUI)	≥ 2.5 GHz	0 to 0.496	8	0 to 0.496	16	< 2.5 GHz	0 to 0.2f	4	—	—
Data Pattern Generator																																																	
Jitter Clock Output Frequency	Full-rate (PPG), Full-rate (MUX), 32G PPG*4, 64G PPG*4		Half-rate (MUX), 32G PPG*5, 64 MUX*6, 64G PPG*7																																														
	Range (UIp-p)	Step (mUI)	Range (UIp-p)	Step (mUI)																																													
≥ 2.5 GHz	0 to 0.5	2	0 to 0.5	4																																													
< 2.5 GHz	0 to 0.2f	2	0 to 0.2f	4																																													
Data Pattern Generator																																																	
Jitter Clock Output Frequency	Quarter -rate(MUX), 32G PPG*8, 64 MUX*9, 64G PPG*10		64G MUX*11, 64G PPG*12																																														
	Range (UIp-p)	Step (mUI)	Range (UIp-p)	Step (mUI)																																													
≥ 2.5 GHz	0 to 0.496	8	0 to 0.496	16																																													
< 2.5 GHz	0 to 0.2f	4	—	—																																													
Accuracy*13	f: Jitter Clock Output Frequency (GHz) Jitter clock output frequency ≥ 4 GHz: ±(set amplitude × 15%)±4.9 ps Jitter clock output frequency < 4 GHz: ±(set amplitude × 15%)±7 ps																																																
Output Setting	ON, OFF switching																																																

\*1: Specified as data output of MU182020A or MU182021A in following diagram, 8 to 28 Gbit/s

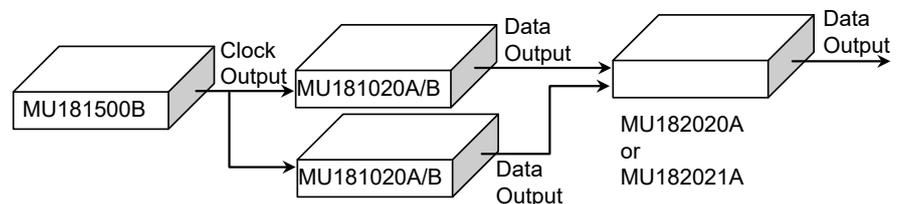

- \*2: Jitter clock output frequency exceeds 4 GHz
- \*3: 3 dB Bandwidth
- \*4: When the data rate is 2.4 to 15 Gbit/s for full-rate clock out setting.
- \*5: When the data rate is 15 to 30 Gbit/s for full-rate clock out setting or 2.4 to 30 Gbit/s for half-rate clock out setting.
- \*6: This applies when the data rate of MP1861A is 8 to 30 Gbit/s.
- \*7: This applies when the data rate is one of the following:
  - 15 to 30 Gbit/s for full-rate clock out setting
  - 2.4 to 30 Gbit/s for half-rate clock out setting
  - 2.4 to 30 Gbit/s for quarter-rate clock out setting
- \*8: When the data rate is 30 to 32.1 Gbit/s for full-rate clock out or half-rate clock out setting.
- \*9: This applies when the data rate of MP1861A is 30 to 60 Gbit/s.
- \*10: This applies when the data rate is one of the following:
  - 30 to 32.1 Gbit/s for full-rate clock out setting
  - 30 to 60 Gbit/s for half-rate clock out setting
  - 30 to 60 Gbit/s for quarter-rate clock out setting
- \*11: This applies when the data rate of MP1861A is 60 to 64.2 Gbit/s.
- \*12: When the data rate is 60 to 64.2 Gbit/s for half-rate clock out setting or 60 to 64.2 Gbit/s for quarter-rate clock out setting.
- \*13: Specified as PRBS pattern length  $2^7-1$  or  $2^9-1$ , and BUJ Rate and LPF shown below

BUJ Rate (Gbit/s)	LPF Bandwidth
4.9, 5.5, 6	500 MHz
3, 3.2	300 MHz
2, 3.2	200 MHz
1.1, 2	100 MHz

**Table 1.3.2-6 External Jitter**

Item	Specifications
Bandwidth	10 kHz to 1 GHz*1
Accuracy	$\pm 0.5$ UI $\pm 10\%$ *1,*2
Linearity	$\pm$ (set value $\times 10\%$ ) $\pm 6$ ps*1
Output Setting	ON, OFF switching

\*1: Specified by 5 GHz jitter clock output frequency and sine wave with 0.5 GHz input jitter when combined with the MU181000A or MU181000B

\*2: Input amplitude 2 Vp-p

Table 1.3.2-7 Spread Spectrum Clock (SSC)

Item	Specifications																							
SSC Profile* <sup>1</sup> SSC modulation ON/OFF Type	Triangular, USB4, Variable With ON / OFF switching Down-Spread, Center-Spread, Up-Spread, Asymmetric <table border="1" data-bbox="491 591 1278 824"> <thead> <tr> <th rowspan="2"></th> <th colspan="3">Profile</th> </tr> <tr> <th>Triangular</th> <th>USB4</th> <th>Variable</th> </tr> </thead> <tbody> <tr> <td>Down-Spread</td> <td>✓</td> <td>–</td> <td>–</td> </tr> <tr> <td>Center-Spread</td> <td>✓</td> <td>–</td> <td>–</td> </tr> <tr> <td>Up-Spread</td> <td>✓</td> <td>–</td> <td>–</td> </tr> <tr> <td>Asymmetric</td> <td>–</td> <td>✓</td> <td>✓</td> </tr> </tbody> </table>		Profile			Triangular	USB4	Variable	Down-Spread	✓	–	–	Center-Spread	✓	–	–	Up-Spread	✓	–	–	Asymmetric	–	✓	✓
	Profile																							
	Triangular	USB4	Variable																					
Down-Spread	✓	–	–																					
Center-Spread	✓	–	–																					
Up-Spread	✓	–	–																					
Asymmetric	–	✓	✓																					
Modulation Frequency* <sup>2</sup> Range Accuracy Deviation* <sup>3</sup> Modulation* <sup>1,*2</sup>	28 to 37 kHz, 1 Hz step* <sup>3</sup> ±100 ppm 0 to 7000 ppm, 1 ppm step* <sup>3</sup> Periodic Burst, Continuous Periodic Burst: Repeatedly outputs asymmetric SSC. Continuous: Outputs asymmetric SSC, and then triangular waveform. When Modulation is switched from Periodic Burst to Continuous during SSC modulation, triangular waveform is then output. During SSC modulation, it cannot be switched from Continuous to Periodic Burst.																							
Start/Stop* <sup>1,*2</sup>	Starts and stops SSC modulation. Available only when SSC is <b>ON</b> .																							
Initial Frequency* <sup>1,*2</sup> Range	–1000 to 1000 ppm, 1 ppm step																							
Min. Deviation* <sup>1,*2</sup> Range	–7000 to 1000 ppm, 1 ppm step																							
Max. Deviation* <sup>1,*2</sup>	Displays the value of <i>Min. Deviation + Deviation</i>																							
Image/List* <sup>1,*2</sup>	Image: Sets the SSC modulation on the modulated waveform image. List: Sets the SSC modulation by the time list. This is fixed to List when SSC Profile is <b>Variable</b> .																							

\*1: This is displayed when the MX190000A version is 7.02.00 or later.

\*2: This is displayed when **USB4** or **Variable** is selected for SSC Profile.

\*3: The range will be extended in Version 8.07.00 of MX180000A and Version 2.03.00 or later of MX190000A.

**Table 1.3.2-7 Spread Spectrum Clock (SSC) (Cont'd)**

Item	Specifications																									
Overshoot Peak*1,*4 Range	-1000 to 7000 ppm, 1 ppm step Note: The range varies depending on the values set for Initial Frequency and Deviation.																									
St1 Deviation*1,*4 Range	0 to 14000 ppm, 1 ppm step Note: The range varies depending on the value set for St2 Deviation.																									
St2 Deviation*1,*4 Range	0 to 14000 ppm, 1 ppm step Note: The range varies depending on the values set for St1 Deviation, Overshoot Peak, and Min. Deviation.																									
dt1*1,*4 Range	0.1 to 1.5 $\mu$ s, 0.01 $\mu$ s step																									
dt2*1,*4 Range	0.1 to 1.5 $\mu$ s, 0.01 $\mu$ s step																									
dt3*1,*4 Range	0.1 to 1.5 $\mu$ s, 0.01 $\mu$ s step																									
Slope*1,*4	Displays the slope of Steady-State.																									
Frame Frequency*1,*5	Displays the frame frequency.																									
Cell Matrix*1,*5	Displays cell matrix set for dt0 to dt7 and Steady-State. (dt2 to dt7 can be deleted.)																									
Shape*1,*5	<table border="1" data-bbox="504 1205 1378 1406"> <thead> <tr> <th></th> <th>Flat</th> <th>Linear</th> <th>Sinusoidal</th> <th>Quadratic</th> </tr> </thead> <tbody> <tr> <td>dt0</td> <td>✓</td> <td>–</td> <td>–</td> <td>–</td> </tr> <tr> <td>dt1</td> <td>✓</td> <td>✓</td> <td>✓</td> <td>✓</td> </tr> <tr> <td>dt2 to dt7</td> <td>✓</td> <td>✓</td> <td>–</td> <td>–</td> </tr> <tr> <td>Steady-State</td> <td>–</td> <td>✓</td> <td>–</td> <td>–</td> </tr> </tbody> </table>		Flat	Linear	Sinusoidal	Quadratic	dt0	✓	–	–	–	dt1	✓	✓	✓	✓	dt2 to dt7	✓	✓	–	–	Steady-State	–	✓	–	–
	Flat	Linear	Sinusoidal	Quadratic																						
dt0	✓	–	–	–																						
dt1	✓	✓	✓	✓																						
dt2 to dt7	✓	✓	–	–																						
Steady-State	–	✓	–	–																						
$\delta$ Deviation*1,*5 Range	-14000 to 14000 ppm, 1 ppm step*7 Note: The range varies so that it falls within the range of Min. Deviation to each step's Deviation.																									
Time*1,*5 Range	0.1 to 1.5 $\mu$ s, 0.01 $\mu$ s step*7																									
Slope*1,*5	Displays the shape of the slope of interval $\delta$ .																									
Add/Delete*1,*6	Adds / deletes rows. Add: Rows can be added up to dt7. Delete: Rows for dt2 to dt7 can be deleted. (dt0, dt1, and Steady-State cannot be deleted.)																									
Graph*1,*2	Displays the graph of the entire SSC Profile currently selected.																									

\*4: This is displayed when **USB4** is selected for SSC Profile and **Image** is selected.

\*5: This is displayed when **USB4** or **Variable** is selected for SSC Profile and **List** is selected.

- \*6: This is displayed when **Variable** is selected for SSC Profile and **List** is selected.
- \*7: This applies to rows dt1 to dt7. Rows dt0 and Steady-State cannot be changed.

### 1.3.3 General Performance

Table 1.3.3-1 General Performance

Item		Specifications
Dimensions		234 mm (W) × 42 mm (H) × 175 mm (D) (for Compact-PCI 2 Slot and excluding protrusions)
Mass		5.0 kg or less
Operating Environment	Operating Temperature	+15 to +35°C (ambient temperature around equipment when installed in MP1800A, MT1810A, or MP1900A)
	Storage Temperature	-20 to +60°C

# Chapter 2 Before Use

---

This chapter explains the following items:

- Installation to Signal Quality Analyzer
- Names and operations of panel parts
- How to Operate Application

2.1 Installation to Signal Quality Analyzer.....2-2

2.2 Explanation of Panels .....2-3

2.3 How to Operate Application.....2-4

2.4 Preventing Damage .....2-5



Before Use

## 2.1 Installation to Signal Quality Analyzer

For information on how to install the MU181500B to the signal quality analyzer and how to turn on the power, refer to 2.3 “Installing and Removing Modules” in the *MP1800A Signal Quality Analyzer Installation Guide* or Chapter 3 “Preparation before Use” in the *MP1900A Signal Quality Analyzer-R Operation Manual*.

For the installation slot position, refer to the release note attached to the plug-in module. Or visit the Anritsu homepage (<https://www.anritsu.com>), find the MP1800 Series Signal Quality Analyzer series or MP1900 Series Signal Quality Analyzers-R, and access your sales region. .



### CAUTION

---

**Install the same unit as the MU181000A/B in this unit.**

---

## 2.2 Explanation of Panels

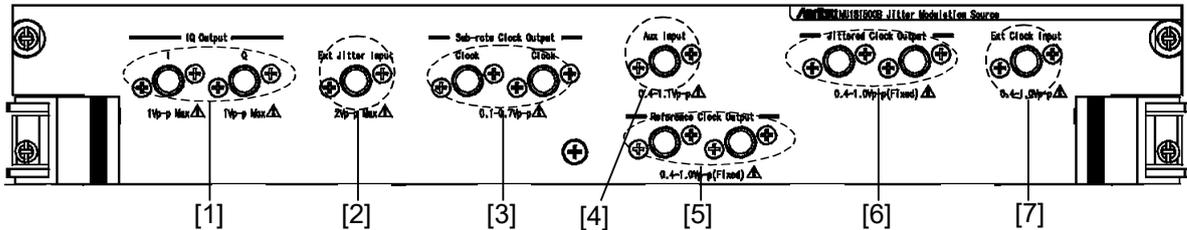


Figure 2.2-1 MU181500B panel

Table 2.2-1 Name and Function of MU181500B Panel Parts

No.	Name	Description
[1]	IQ Output Connector	Outputs IQ data. Sine wave jitter (SJ2) can be added to the system clock by connecting to the IQ input of the MU18100A/B.
[2]	Ext Jitter Input Connector	For inputting jitter modulation signal. Different modulations can be applied to this input signal.
[3]	Sub rate Clock Output Connector	Outputs 1/8 to 1/256 frequency divided clock input for clock input to either of following two connectors. Always connect the coaxial terminator accessory (J1137) to connectors without clock input. <ul style="list-style-type: none"> <li>• Ext Clock Input Connector</li> <li>• Aux Input Connector</li> </ul> When an unmodulated clock is input, a divided unmodulated clock is output at this connector.
[4]	Aux Input Connector	Inputs Clock signal.
[5]	Reference Clock Output Connector	Outputs 1/1, 1/2, or 1/4 divided signal for either of following input clocks. <ul style="list-style-type: none"> <li>• Ext Clock Input Connector</li> <li>• Aux Input Connector</li> </ul> When an unmodulated clock is input, a divided unmodulated clock is output at this connector.
[6]	Jittered Clock Output Connector	Outputs jitter-modulated clock signal
[7]	Ext Clock Input Connector	Outputs external Clock signal. This clock signal is jitter modulated and output from the Jittered Clock Output connector.

## 2.3 How to Operate Application

The modules connected to the Signal Quality Analyzer are controlled by operating the MX180000A Signal Quality Analyzer Control Software (hereinafter, referred to as “MX180000A”) or MX190000A Signal Quality Analyzer-R Control Software (hereinafter, “MX190000A”).

For information on how to start up, shut down, and operate the MX180000A, refer to the *MX180000A Signal Quality Analyzer Control Software Operation Manual* or *MX190000A Signal Quality Analyzer-R Control Software Operation Manual*.

## 2.4 Preventing Damage

Always observe the ratings when connecting to the input and output connectors of the MU181500B.

If an out-of-range signal is input, the MU181500B may be damaged.



### CAUTION

- When signals are input to the MU181500B, avoid voltages exceeding the ratings. Otherwise, the circuits may be damaged.
- When output is used at the 50  $\Omega$ /GND terminator, never feed any current or input signals to the output.
- As a countermeasure against static electricity, ground other devices to be connected (including experimental circuits) with ground wires before connecting the I/O connector.
- The outer conductor and core of the coaxial cable may become charged as a capacitor. Use any metal to discharge the outer conductor and core before use.
- Never open the MU181500B. If you open it and the MU181500B has failed or sufficient performance cannot be obtained, we may decline to repair the MU181500B.
- The MMICs used in the MU181500B are sealed in airtight containers; never open them. If you open the MU181500B and it has failed or sufficient performance cannot be obtained, we may decline to repair the MU181500B.
- To protect the MU181500B from electrostatic discharge failure, a conductive sheet should be placed onto the workbench, and the operator should wear an electrostatic discharge wrist strap. Always ground the wrist strap to the workbench antistatic mat or the frame ground of the main frame.



# Chapter 3 Setting Jitter

---

This chapter explains the composition of the screens and the operation method.

3.1	Setting Procedure .....	3-2
3.2	Composition of Screens .....	3-3
3.2.1	Overall Composition of Screen .....	3-3
3.2.2	MU181500B Control Screens .....	3-5
3.3	Input Signal Settings .....	3-9
3.3.1	MU183020A, MU181000A/B, and MU181500B .....	3-12
3.3.2	MU183020A, MU181500B, and external clock source.....	3-14
3.4	Setting Jitter.....	3-15
3.4.1	Sinusoidal Jitter (SJ) .....	3-15
3.4.2	Spread Spectrum Clock (SSC).....	3-17
3.4.3	Random Jitter (RJ).....	3-19
3.4.4	Bounded Uncorrelated Jitter (BUJ).....	3-21
3.4.5	Sinusoidal Jitter (SJ2) .....	3-22
3.4.6	Sinusoidal Jitter (Built-in SJ2).....	3-25
3.4.7	Spread Spectrum Clock (Variable SSC Profile) .....	3-26
3.5	Setting Data Output .....	3-32
3.6	Setting Auxiliary Output.....	3-35
3.7	Setting Restrictions for Other Modules .....	3-36
3.8	Saving and Reading Settings .....	3-38

### 3.1 Setting Procedure

The basic setting procedure is shown below.


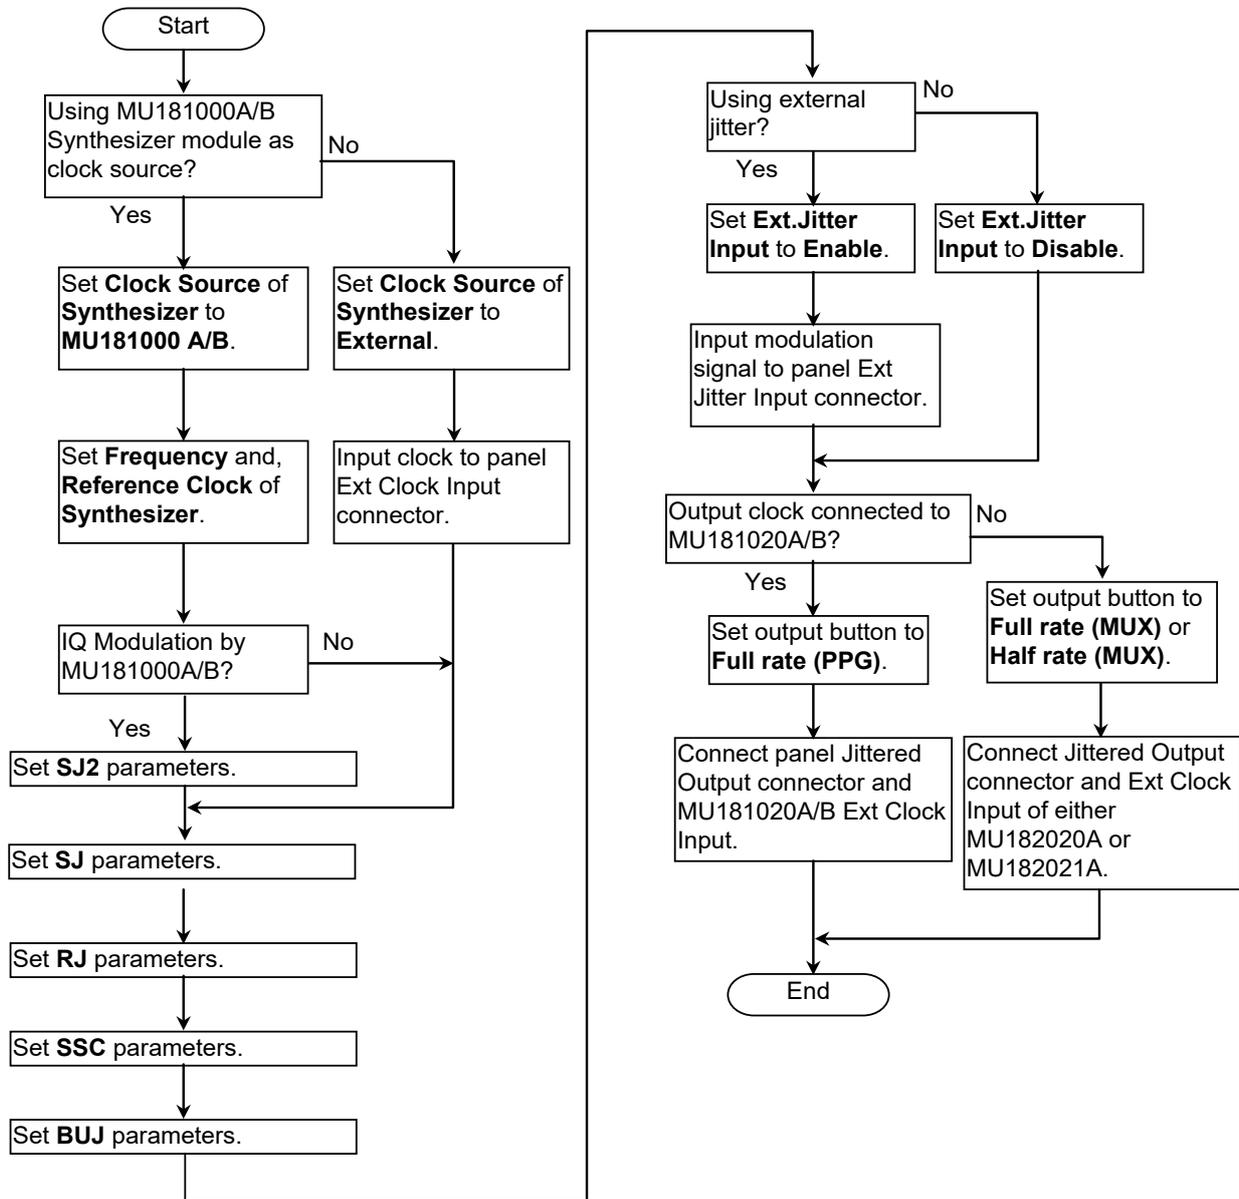


Figure 3.1-1 Jitter Modulation Source Basic Setting Procedure

### 3.2 Composition of Screens

#### 3.2.1 Overall Composition of Screen

MU181500B has the following overall screen composition when it is installed in MP1800A.

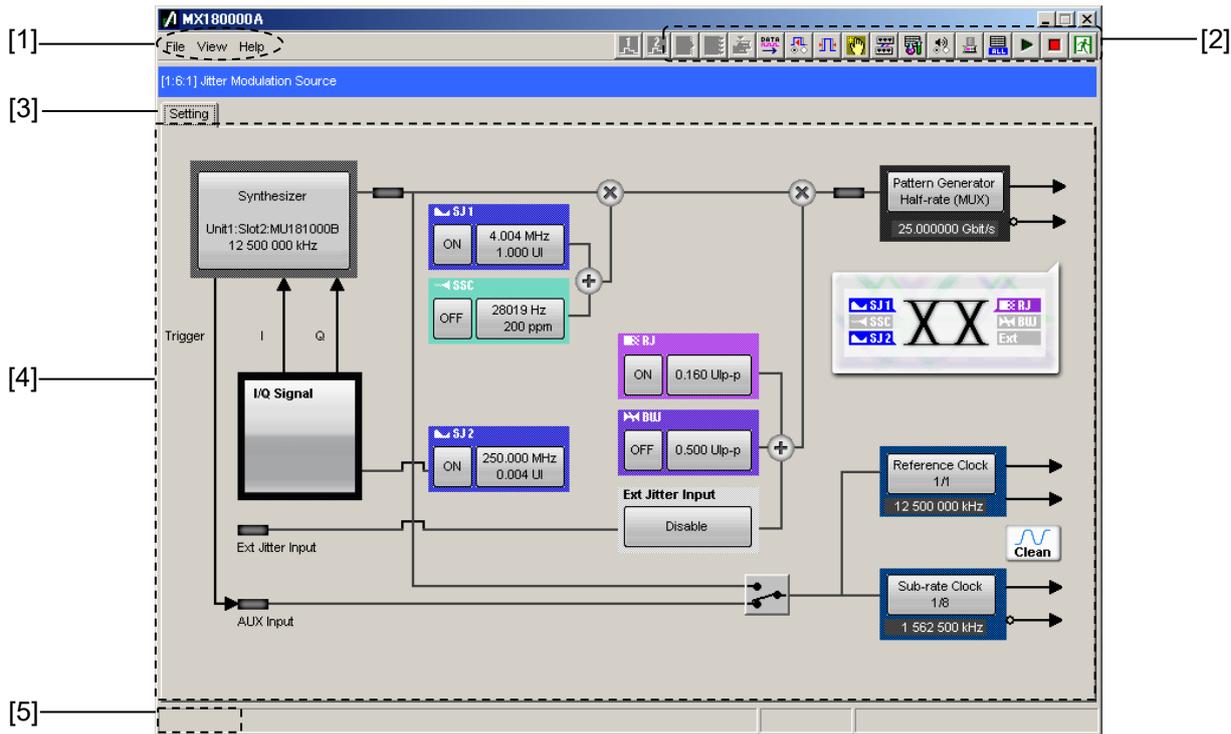

3

Setting Jitter

Figure 3.2.1-1 Overall Screen Composition

The MU181500B screens are composed of the four basic blocks shown in Figure 3.2.1-1. Table 3.2.1-1 explains each block.

Table 3.2.1-1 Screen Block Functions

No.	Block Name	Function
[1]	Menu bar	For selecting settings related to overall MU181500B
[2]	Module function buttons	Shortcut buttons to displayed unit functions Up to 17 functions can be selected by user customization of predefined function buttons.
[3]	Function setting selection tab	Switches module setting screen to each function item.
[4]	Operation screen	Performs module settings.
[5]	Tree view call area	Calls the Tree View screen by moving the cursor over this area.

MU181500B has the following overall screen composition when it is installed in MP1900A.

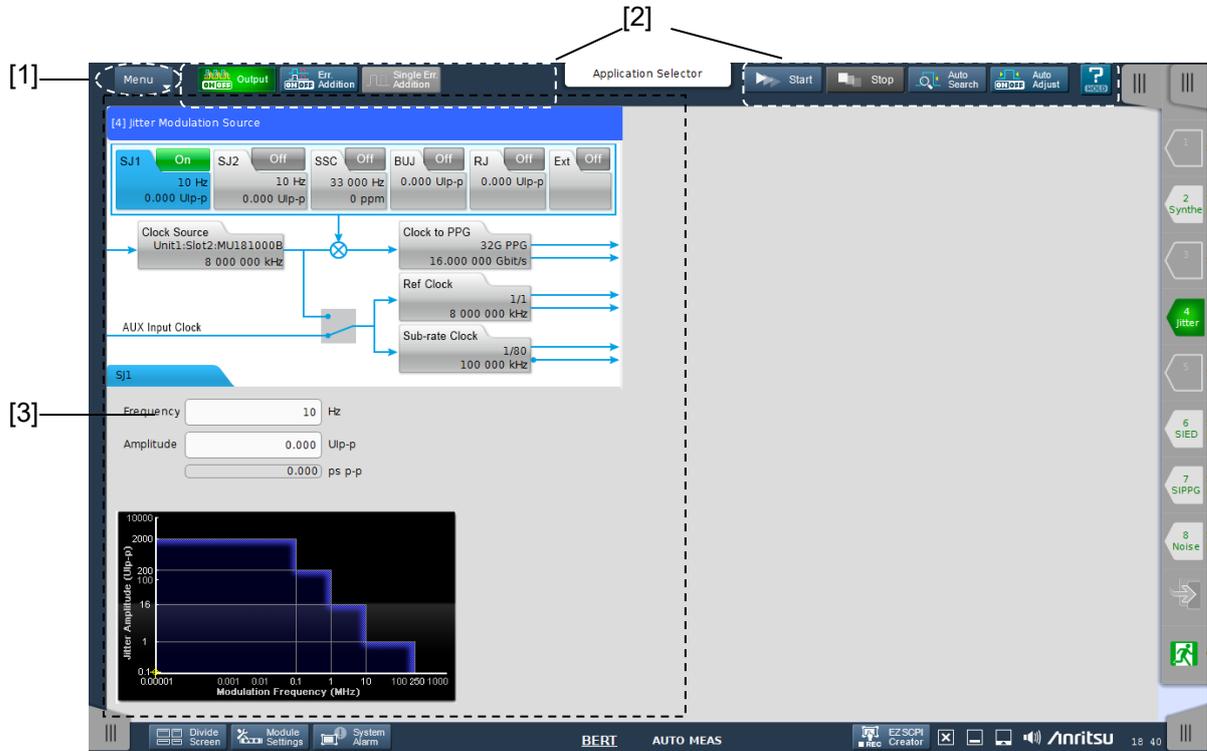


Figure 3.2.1-2 Overall Screen Composition

The MU181500B screens are composed of the three basic blocks shown in Figure 3.2.1-2. Table 3.2.1-2 explains each block.

Table 3.2.1-2 Screen Block Functions

No.	Block Name	Function
[1]	Menu	For selecting settings related to overall MU181500B
[2]	Shortcut Buttons	Shortcut buttons to display special function items of the BERT screen. Refer to 3.2 “Operation on Workspace” in the <i>MX190000A Signal Quality Analyzer-R Control Software Operation Manual</i> .
[3]	Operation screen	Performs module settings.

### 3.2.2 MU181500B Control Screens

Figure 3.2.2-1 shows the MU181500B control screen when it is installed in MP1800A.

When the screens of other modules hide the MU181500B screen, press the slot key or Tree View to display the screen to the fore.

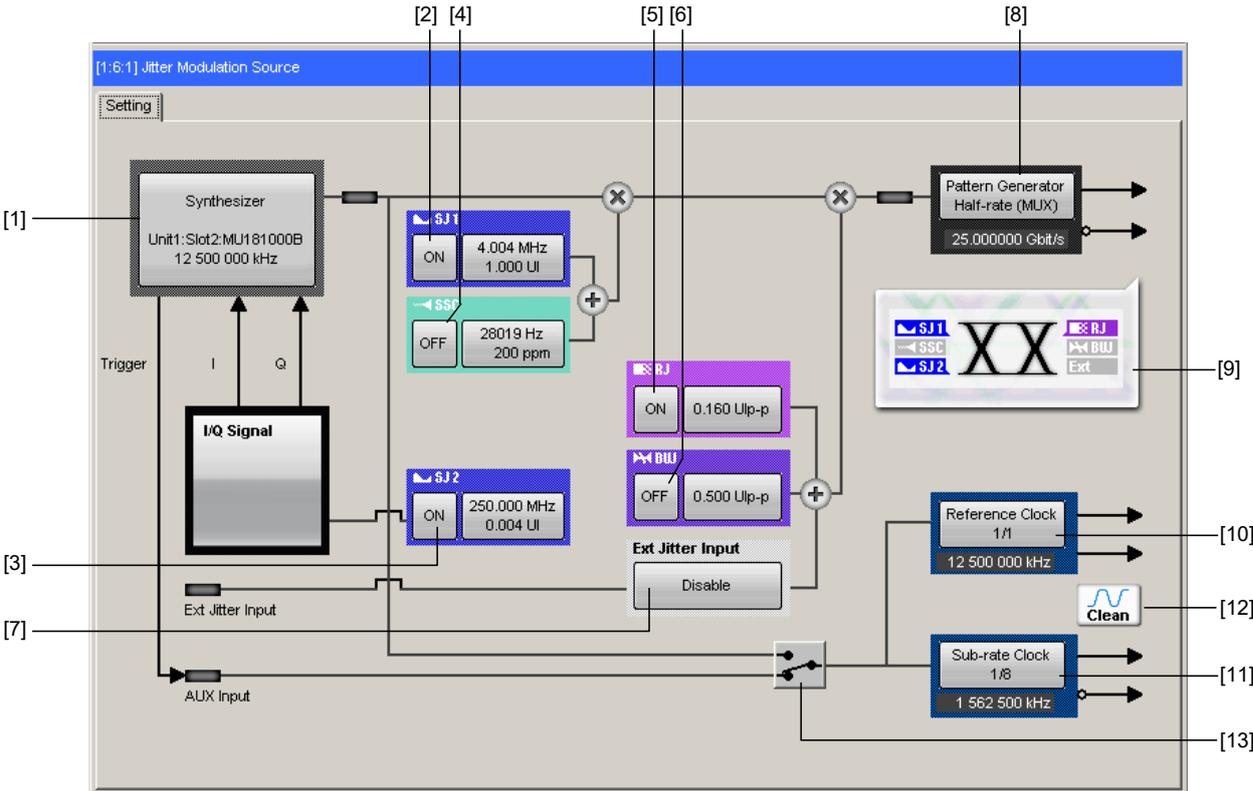



Figure 3.2.2-1 MU181500B Control Screen When Installed in MP1800A

3  
Setting Jitter

**Table 3.2.2-1 Composition of MU181500B Screen**

No.	Name	Function
[1]	Synthesizer	Sets jitter modulation clock source.
[2]	SJ1	Sets sinusoidal jitter On/Off.
[3]	SJ2	Sets sine wave signal used for MU181000A/B external jitter modulation On/Off. This can be used when the clock source is the MU181000A/B-x01.
[4]	SSC	Sets spectrum spread clock On/Off.
[5]	RJ	Sets random jitter On/Off.
[6]	BUJ	Sets bounded uncorrelated jitter On/Off.
[7]	Ext. Jitter Input	Sets signal input to the Ext. Jitter Input connector On/Off.
[8]	Pattern Generator	Sets the unit connected to the Jittered Clock Output connector.
[9]	Data output image	Displays applied jitter type as icon.
[10]	Reference Clock	Sets division rate of clock output to the Reference Clock connector.
[11]	Sub rate Clock	Sets division rate of clock output to the Sub Rate Clock connector.
[12]	Clock icon	Displays output waveform status.
[13]	AUX switch	Switches auxiliary clock input signal.

Figure 3.2.2-2 shows the MU181500B control screen when it is installed in MP1900A.

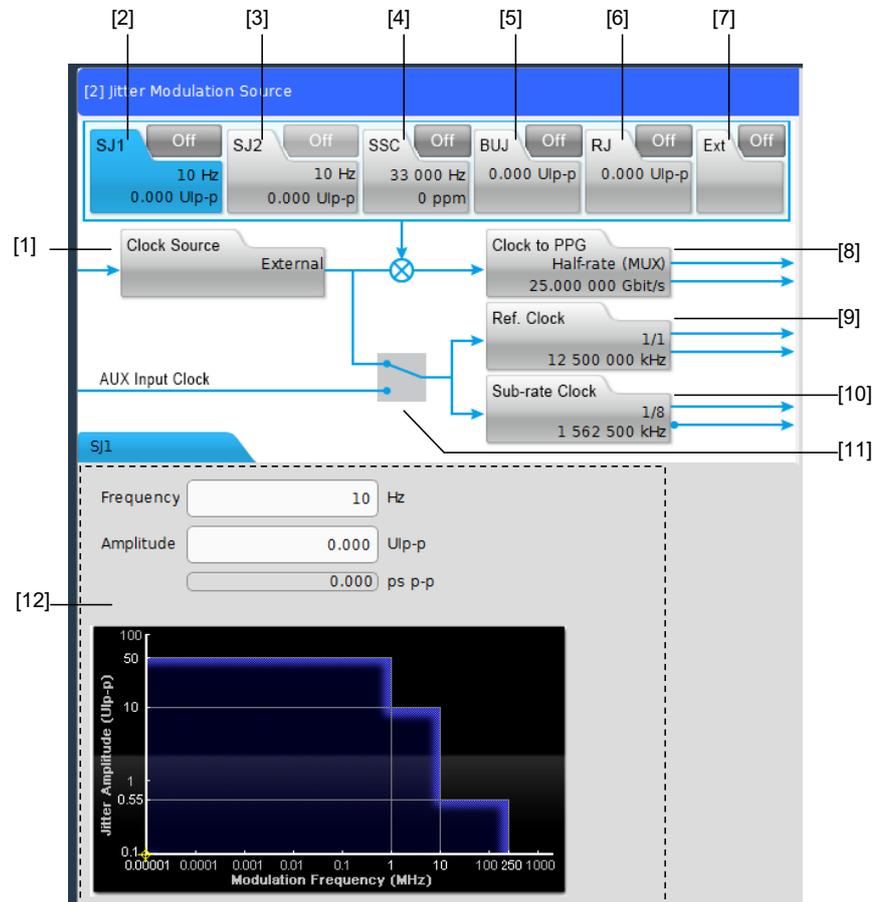

3  
Setting Jitter

Figure 3.2.2-2 MU181500B Control Screen When Installed in MP1900A

Table 3.2.2-2 Composition of MU181500B Screen

No.	Name	Function
[1]	Clock Source	Sets jitter modulation clock source.
[2]	SJ1	Sets sinusoidal jitter On/Off.
[3]	SJ2	Sets sine wave signal used for MU181000A/B external jitter modulation On/Off. This can be used when the clock source is the MU181000A/B-x01. From MX190000A Version 2.0.0, “SJ2 via MU181000” and “Built-in SJ2” using the external jitter modulation signal can be switched. When Built-in SJ2 is used, the MU181000A/B-x01 is not necessary for clock source.
[4]	SSC	Sets spectrum spread clock On/Off.
[5]	BUJ	Sets random jitter On/Off.
[6]	RJ	Sets bounded uncorrelated jitter On/Off.
[7]	Ext	Sets signal input to the Ext. Jitter Input connector On/Off.

**Table 3.2.2-2 Composition of MU181500B Screen (Cont'd)**

No.	Name	Function
[8]	Clock to PPG	Sets the unit connected to the Jittered Clock Output connector. When started as Expert BERT, you can set the clock rate (Half-rate or Full-rate)
[9]	Ref Clock	Sets division rate of clock output to the Reference Clock connector.
[10]	Sub-rate Clock	Sets division rate of clock output to the Sub rate Clock connector.
[11]	AUX switch	Switches auxiliary clock input signal.
[12]	Detail Setting Area	Selecting the desired item from [1] to [10] allows its detail setting in this area.

The following table lists the functions whose names differ between MP1800A and MP1900A. When installing MU181500B in MP1900A, read the remaining part of this manual while replacing the names as follows:

**Table 3.2.2-2 Rules to Replace Names**

MP1800A	MP1900A
Synthesizer	Clock Source
Ext. Jitter Input	Ext
Pattern Generator	Clock to PPG
Reference Clock	Ref. Clock

## 3.3 Input Signal Settings

The following sections explain the MU181500B screen when it is installed in MP1800A. The functions are the same when it is installed in MP1900A.

Set the jitter modulation clock source.

This module can use two types of clock source.

- MU181000A/B output clock
- Clock input to the Ext. Clock Input connector

Items such as the MU181000A/B frequency and reference clock are set from the MU181500B. Items cannot be set from the MU181000A/B screen.

When Option x01 is added to the MU181000A/B, the jitter waveform calibrated in combination with the main frame as well as the module name and serial number is displayed on this screen.

The screenshot shows the following settings:

Clock Source	Unit1:Slot2:MU181000B
Center Frequency	1250000 kHz
Offset	0 ppm
Reference Clock	Internal
Calibrated Module S/N	1234567890

**Figure 3.3-1 Synthesizer Settings (MU181000B)**

The screenshot shows the following settings:

Clock Source	External
Input Clock Frequency	10589934 kHz


**Figure 3.3-2 Synthesizer Settings (External)**

Table 3.3-1 Synthesizer Screen

Item	Function
Clock Source	Selects clock signal source. <b>External:</b> External clock source other than MU181000A/B <b>X:Y:MU181000A/B:</b> Synthesizer Module X is unit number and Y is slot number.
Center Frequency	Displays when <b>Clock Source</b> is <b>X:Y:MU181000A/B</b> . Sets MU181000A/B frequency in kHz units.
Input Clock Frequency	Displays when <b>Clock Source</b> is <b>External</b> . Displays frequency of clock input to the Ext Clock Input connector in kHz units
Offset	Displays when <b>Clock Source</b> is <b>X:Y:MU181000A/B</b> . Sets frequency offset of MU181000A/B in ppm units. The setting range is -1000 to 1000.
Reference Clock	Displays when <b>Clock Source</b> is <b>X:Y:MU181000A/B</b> . Selects reference clock for MU181000A/B <b>Internal:</b> Uses MU181000A/B built-in clock <b>External 10 MHz:</b> Uses clock input to the MU181000A/B Ref. Input (10 MHz) connector
Calibrated Module S/N	Displays when <b>Clock Source</b> is <b>X:Y:MU181000A/B</b> . Displays serial number of MU181000A/B calibrated with sinusoidal jitter (SJ2) in combination with main frame

**Note:**

When Option x01 is added to the MU181000A/B, an error message is displayed when the sinusoidal jitter (SJ2) has not been calibrated in combination with the main frame.

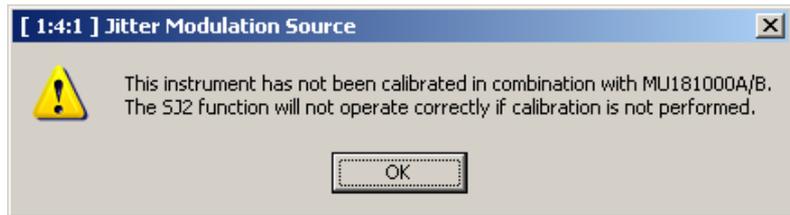

If the error message is displayed, change to the MU181000A/B with the serial number displayed in **Calibrated Module S/N**.

The SJ2 performance is not assured if the correct MU181000A/B with sinusoidal jitter (SJ2) calibrated in combination with the main frame is not connected.

**Clock connection and screen settings**

The procedure for connecting MU181500B, clock source, and MU183020A/MU183021A (hereafter, MU183020A) and setting the screen items that varies by used clock source is described below.

Connection and setting of MU181500B used by the following configurations are described.

- (1) MU183020A, MU181000A/B, and MU181500B
- (2) MU183020A, MU181500B, and external clock source

**Note:**

When the MU181000A/B and MU181500B are included in the described configuration, install MU181500B and 32G PPG to the same main frame.

Description is given, considering the modules are installed to MP1800A according to the following configuration.

Slots 1 and 2:	MU181000B
Slot 3:	MU183020A
Slots 5 and 6:	MU181500B

### 3.3.1 MU183020A, MU181000A/B, and MU181500B

#### Connecting to the clock

For connecting MU183020A, MU181000A/B, and MU181500B to the clock, refer to the connection diagram and description in *MU183020A 28G/32G PPG MU183021A 28G/32G 4ch PPG Operation Manual*, 3.2.2 “Adding Jitter to Output Signal”.

#### Setting in the screen

1. Select **Unit1:Slot2: MU181000B** from the Synthesizer **Clock Source** drop-down list in the MU181500B screen to make MU181500B and MU181000B track each other. (Refer to Figure 3.3.1-1.)
2. Select **Unit1:Slot6: MU181500B** from the **Clock Source** drop-down list in the MU183020A screen to make MU183020A and MU181500B track each other. (Refer to Figure 3.3.1-2.)
3. Now, you can set the bit rate of the output data at the **Bit Rate** box in the MU183020A screen. Figure 3.3.1-2 shows an example that the output data is set to 32.1 Gbit/s.

#### Note:

Follow the above-mentioned procedure and set to make MU181500B and MU181000B track each other. If the steps are performed in the wrong order, a warning dialog box appears as shown in Figure 3.3.1-3.



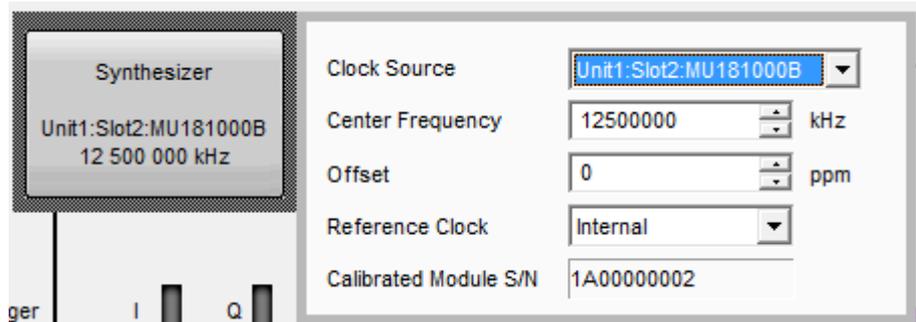


Figure 3.3.1-1 MU181500B Clock Source Settings

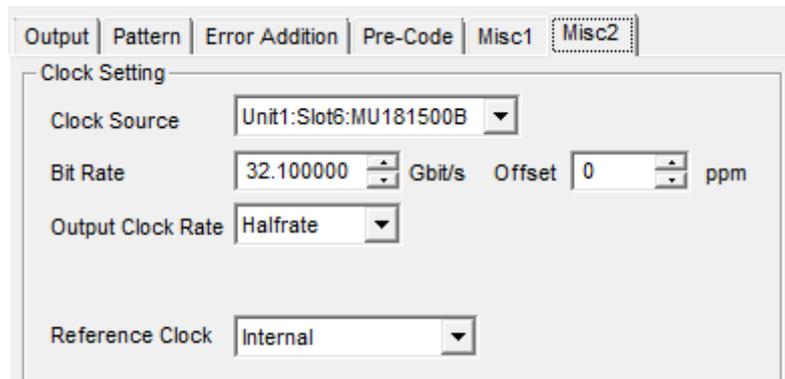

**Figure 3.3.1-2 MU183020A Clock Source Settings (When Tracking Operation of Jitter and Synthesizer)**

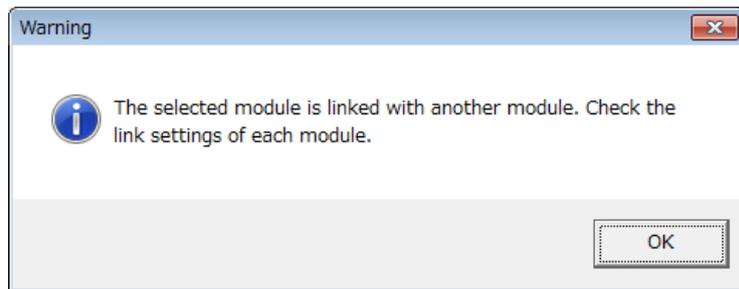

**Figure 3.3.1-3 Warning Dialog Box for Module-Tracking Operation**


### 3.3.2 MU183020A, MU181500B, and external clock source

#### Connecting to the clock

For connecting MU183020A, MU181500B, and the external clock source to the clock, refer to the connection diagram and description in *MU183020A 28G/32G PPG MU183021A 28G/32G 4ch PPG Operation Manual*, 3.2.2 “Adding Jitter to Output Signal”, replacing MU181000A with “external clock”.

#### Setting in the screen

1. Select **Unit1:Slot6: MU181500B** from the **Clock Source** drop-down list in the MU183020A screen to make MU183020A and MU181500B track each other.
2. In the MU183020A screen, select a bit rate range of data to output from the **Operation Bitrate** drop-down list. For the example in Figure 3.3.2-1, select **2.4 to 30 Gbit/s** to output 28 Gbit/s data.
3. To the Ext Clock Input connector of the MU181500B, input the clock of the frequency displayed in the **Input Clock Freq** box in the MU183020A screen. For the example in Figure 3.3.2-1, 14 GHz clock is input to output 28 Gbit/s data.
4. The **Bit Rate** box in the MU183020A screen displays the bit rate of the output data. Check that the clock that is input in step 3 can change the bit rate of the output data.

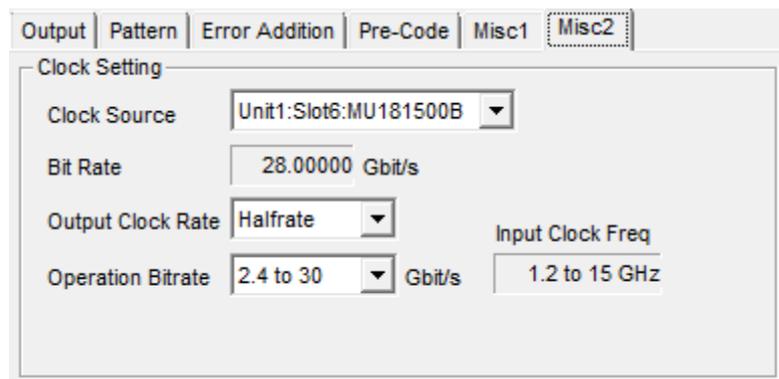

**Figure 3.3.2-1 Clock Source Settings  
(When Using Jitter and External Clock Source)**

## 3.4 Setting Jitter

Clicking the Jitter button displays the setting screen.  
The setting items vary according to the type of jitter.

### 3.4.1 Sinusoidal Jitter (SJ)

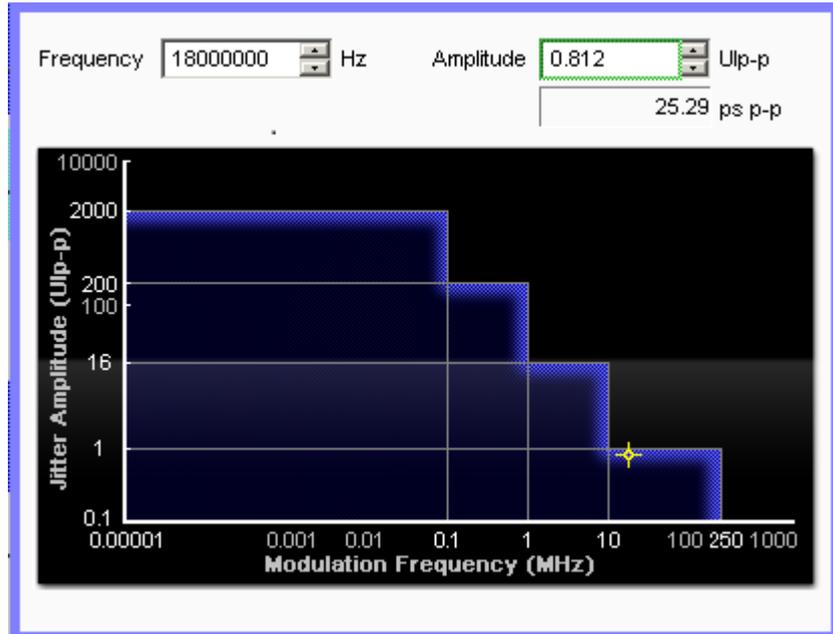


Figure 3.4.1-1 SJ Setting Screen

Table 3.4.1-1 SJ Screen Composition

Item	Function
Frequency	Sets jitter modulation frequency in Hz units
Amplitude	Sets amplitude in UIp-p units

The upper limit of the jitter modulation frequency setting range changes with the clock frequency. Additionally, the settable amplitude range varies according to the jitter modulation frequency and data output settings. For details on setting ranges and steps, refer to Table 1.3.2-1 “Sinusoidal Jitter (SJ and Built-in SJ)”.

Table 3.4.1-2 Frequency Setting Range

Clock Frequency (GHz)	Frequency (MHz)
0.800 001 to 1.200 000	0.000 010 to 50
1.200 001 to 4.000 000	0.000 010 to 100
4.000 001 to 8.500 000	0.000 010 to 150
8.500 001 to 15.000 000	0.000 010 to 250

**Table 3.4.1-3 Amplitude Setting Range**

Setting Data Output Frequency	Amplitude (Ulp-p)		
	[Full-rate (PPG)], [Full-rate (MUX)]	[Half-rate (MUX)]	[Quarter-rate (MUX)]
10 Hz to 1 MHz	0 to 40	0 to 50	0 to 50
1.001 to 10 MHz	0 to 8	0 to 10	0 to 10
10.01 to 250 MHz	0 to 0.50	0 to 0.55	0 to 0.548

**Table 3.4.1-4 Amplitude Setting Range (When Interacting With 32G PPG)**

Setting 32G PPG Frequency	Amplitude (Ulp-p)		
	Full rate 15 to 32.1G, Half rate 2.4 to 32.1G	Full rate 4 to 15G	Full rate 2.4 to 4G
10 Hz to 100 kHz	0 to 2000	0 to 1000	0 to 500
100.1 kHz to 1 MHz	0 to 200	0 to 100	0 to 50
1.001 to 10 MHz	0 to 16	0 to 8	0 to 8
10.01 to 250 MHz	0 to 1.0	0 to 0.5	0 to 0.5

**Table 3.4.1-5 Amplitude Setting Range  
(When Interacting With 64G MUX + 32G PPG)**

Bit Rate Setting for 64G MUX Frequency	Amplitude (Ulp-p)	
	30 to 64.2Gbit/s	8 to 30Gbit/s
10 Hz to 100 kHz	0 to 2000	0 to 1000
100.1 kHz to 1 MHz	0 to 200	0 to 100
1.001 to 10 MHz	0 to 16	0 to 8
10.01 to 250 MHz	0 to 1.0	0 to 0.5

**Table 3.4.1-6 Amplitude Setting Range (When Interacting With 64G PPG)**

Setting 64G PPG Frequency	Amplitude (Ulp-p)		
	Full rate 15 to 32.1G, Half rate 2.4 to 64.2G Quarter rate 2.4 to 64.2G	Full rate 4 to 15G	Full rate 2.4 to 4G
10 Hz to 100 kHz	0 to 2000	0 to 1000	0 to 500
100.1 kHz to 1 MHz	0 to 200	0 to 100	0 to 50
1.001 to 10 MHz	0 to 16	0 to 8	0 to 8
10.01 to 250 MHz	0 to 1.0	0 to 0.5	0 to 0.5

### 3.4.2 Spread Spectrum Clock (SSC)

When using the Variable SSC Profile under both of the following conditions, refer to 3.4.7, “Spread Spectrum Clock (Variable SSC Profile)”.

- The MU181500B is installed in the MP1900A.
- The MX190000A version is 7.01.20 or later.


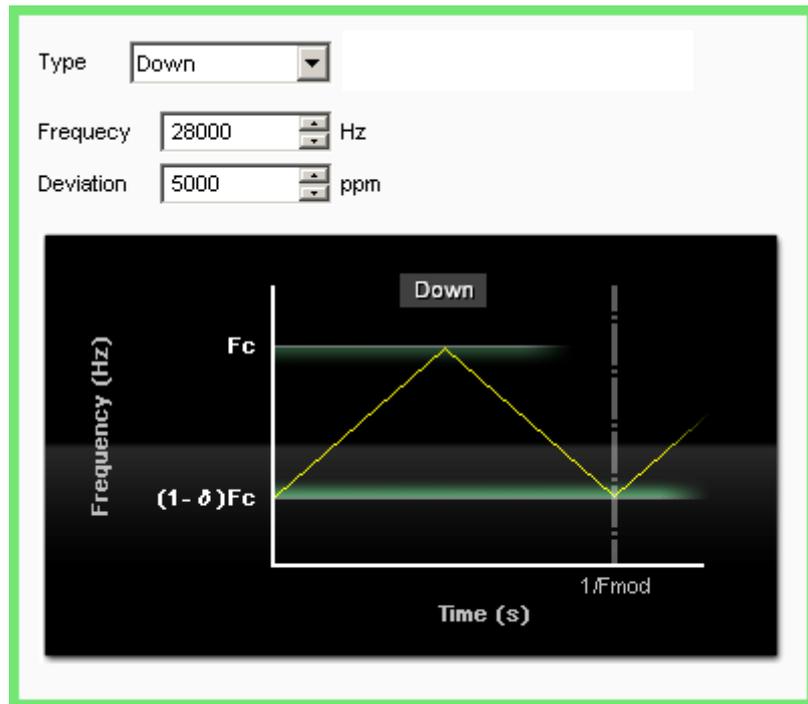


Figure 3.4.2-1 SSC Setting Screen

Table 3.4.2-1 SSC Screen Composition

Item	Function
Type	Sets spread method. Down: Spreads frequency from reference frequency down to low-frequency side Center: Spreads frequency equally on high- and low-frequency sides centered around reference frequency Up: Spreads frequency from reference frequency up to high-frequency side
Graph Area	Displays changes in clock frequency with time as schematic diagram. Fc: <b>Center Frequency</b> in Figure 3.3-1, or <b>Input Clock Frequency</b> in Figure 3.3-2 δ: <b>Deviation</b> setting 1/Fmod: Reciprocal of modulation frequency of <b>Frequency</b>
Frequency	Modulation frequency The setting range is 28 to 37 kHz. The modulation cycle 1/Fmod is the reciprocal of the modulation frequency.
Deviation	Frequency deviation. The setting range is 0 to 7000 ppm.

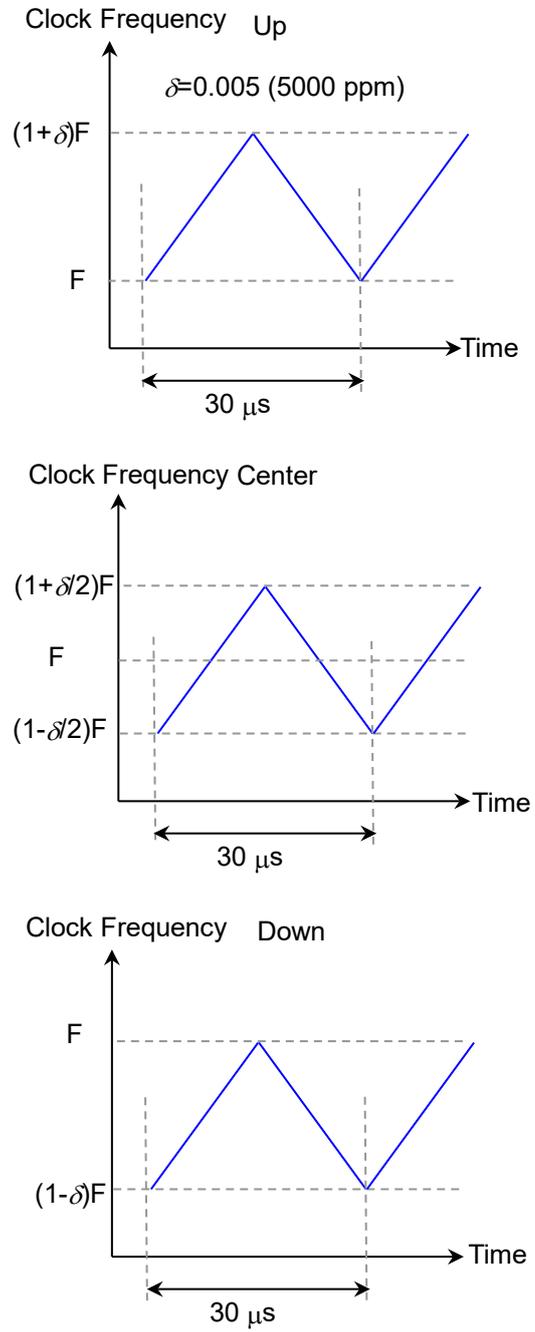

**Figure 3.4.2-2 Setting Type and Changing Frequency (Frequency: 33 kHz)**

### 3.4.3 Random Jitter (RJ)

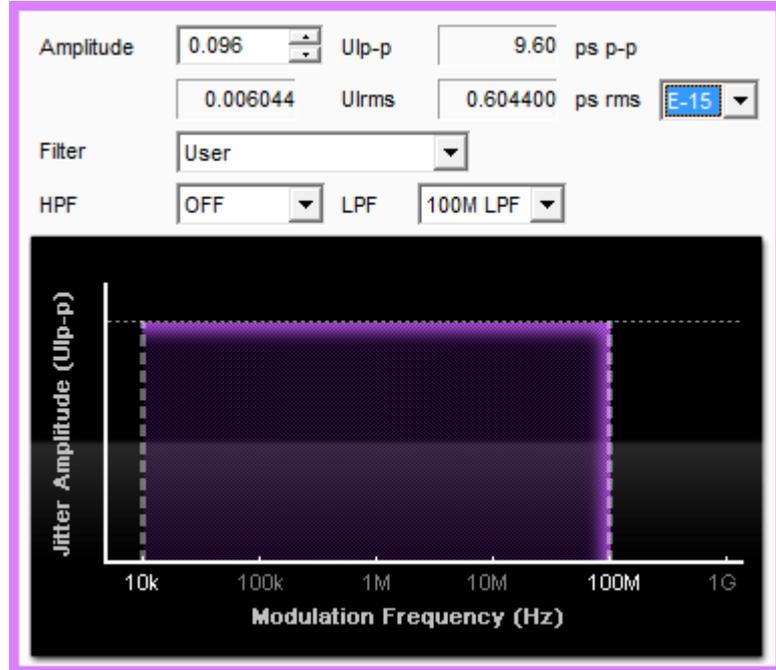


Figure 3.4.3-1 RJ Setting Screen

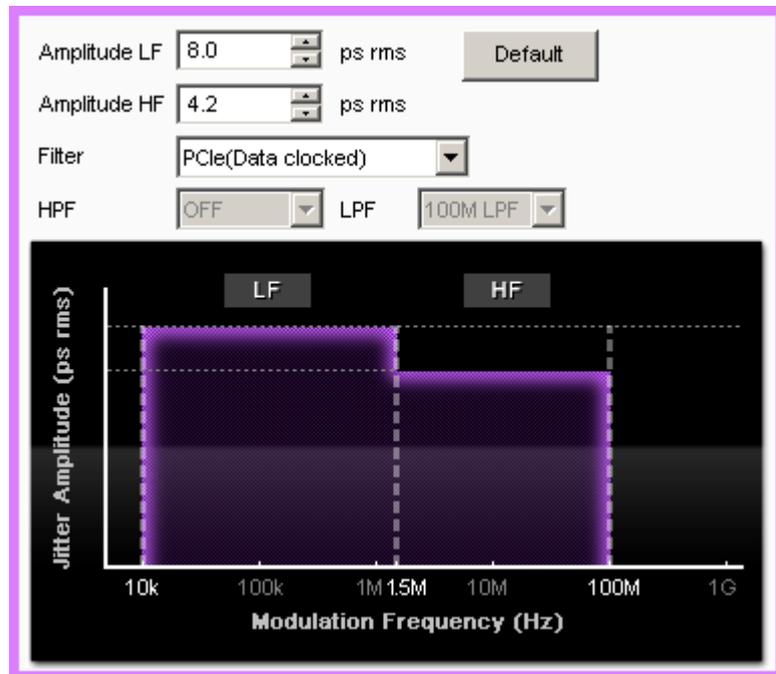


Figure 3.4.3-2 RJ Setting Screen (2)

**Table 3.4.3-1 RJ Screen Composition**

Item	Function
Amplitude	Sets maximum drift in UIp-p units. Displays UIrms, ps p-p, and ps rms conversion value. Also, sets a coefficient for p-p/rms conversion according to the specified BER.*1 For conversion coefficients for <b>E-8</b> to <b>E-16</b> , see Table 3.4.3-3.
Filter	Sets filter for controlling jitter frequency from: <b>User, PCIe (Data clocked)*2, PCIe (Common Ref. Clock)*2</b>
HPF	Sets high-pass filter from following: <b>OFF, 10MHz, 20MHz</b>
LPF	Sets low-pass filter from following: <b>OFF, 100MHz</b>
Amplitude LF	When the Filter setting is PCIe, the maximum deviation at the low-frequency side is set in ps rms units.
Amplitude HF	When the Filter setting is PCIe, the maximum deviation at the high-frequency side is set in ps rms units.
Default	When the Filter setting is PCIe, the Amplitude LF and Amplitude HF are set to the default values.

\*1: Conversion to E-8 and E-9 is available when the MX190000A version is 7.1.20 or later.

\*2: Settable when jitter output frequency exceeds 4 GHz

The deviation setting range varies according to the MU181000A/B frequency. For details on setting ranges and steps, refer to Table 1.3.2-3 “Random Jitter (RJ)”.

**Table 3.4.3-2 Deviation Setting Range**

Frequency	Amplitude (UIp-p)
≥2.5 GHz	0 to 0.5
<2.5 GHz	0 to 0.2f

f: MU181000A/B frequency (GHz)

**Table 3.4.3-3 p-p/rms Conversion Coefficient**

BER	Conversion Coefficient ( $P-P/rms$ )	BER	Conversion Coefficient ( $P-P/rms$ )
1E-8	11.224	1E-13	14.698
1E-9	11.996	1E-14	15.301
1E-10	12.723	1E-15	15.883
1E-11	13.412	1E-16	16.444
1E-12	14.069		

### 3.4.4 Bounded Uncorrelated Jitter (BUJ)

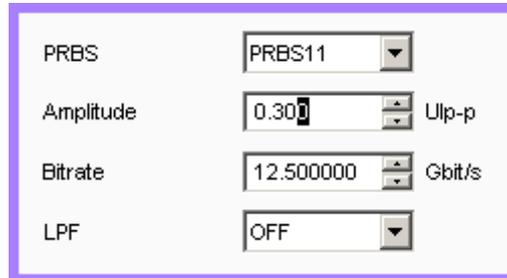


Figure 3.4.4-1 BUJ Setting Screen

Table 3.4.4-1 BUJ Screen Composition

Item	Function
PRBS	Sets the PBRs type.
Amplitude	Sets maximum drift in Ulp-p units.
Bitrate	Sets BUJ modulation bit rate in range 0.1 to 3.2 Gbit/s. The following bit rates can be set when the jitter output frequency exceeds 4 GHz. 4.9 to 6.25 Gbit/s, 9.8 to 12.5 Gbit/s
LPF	Sets low-pass filter from following: <b>OFF, 500MHz, 300MHz, 200MHz, 100MHz, 50MHz</b>

The deviation setting range varies according to the MU181000A/B frequency. For details on setting ranges and steps, refer to Table 1.3.2-5 “Bounded Uncorrelated Jitter (BUJ)”.

Table 3.4.4-2 Deviation Setting Range

Frequency	Amplitude (Ulp-p)
$\geq 2.5$ GHz	0 to 0.5
$< 2.5$ GHz	0 to $0.2f$

f: MU181000A/B frequency (GHz)

**Note:**

The BUJ amplitude accuracy is assured for the bit rates and the LPF conditions specified by the standards. When setting BUJ at other conditions, monitor the main-frame signal output with an oscilloscope and confirm the jitter amplitude.

### 3.4.5 Sinusoidal Jitter (SJ2)

SJ2 can be set when Synthesizer is set to either **X:Y:MU181000A**, or **X:Y:MU181000B** and Option x01 is installed in the MU181000A/B. From MX190000A Version 2.0.0, **SJ2 via MU181000** can be set.

#### CAUTION

When using SJ2, connect the MU181000A/B with the serial number displayed in Calibrated Module of the Synthesizer screen.

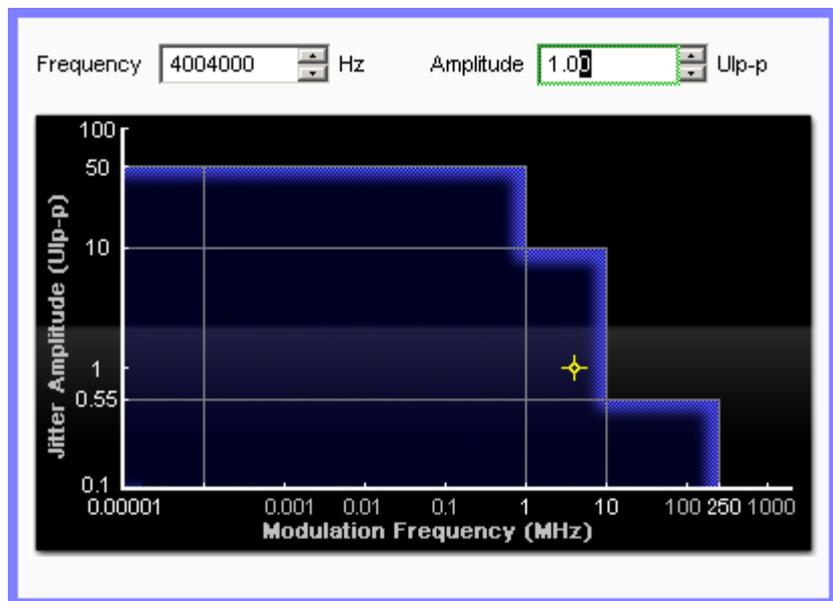


Figure 3.4.5-1 SJ2 Setting Screen

Table 3.4.5-1 SJ2 Screen Composition

Item	Function
Frequency	Sets jitter modulation frequency in Hz units
Amplitude	Sets amplitude in Ulp-p units

The upper limit of the jitter modulation frequency changes with the clock frequency.

**Table 3.4.5-2 Frequency Setting Range**

Clock Frequency (GHz)	Frequency (MHz)
0.800 001 to 1.562 500	0.000 010 to 10
1.600 001 to 1.800 000	0.000 010 to 100
1.800 001 to 6.250 000	0.000 010 to 150
6.400 001 to 15.000 000	0.000 010 to 250

Additionally, the settable amplitude range changes according to the jitter modulation frequency and data output setting. For details on setting ranges and steps, refer to Table 1.3.2-2 “Sinusoidal Jitter (SJ2)”.

**Table 3.4.5-3 Amplitude Setting Range  
(Clock Frequency 0.800001 to 1.562500 GHz)**

Setting Data Output Frequency	Amplitude (Ulp-p)		
	[Full-rate (PPG)], [Full-rate (MUX)]	[Half-rate (MUX)]	[Quarter-rate (MUX)]
10 Hz to 1 MHz	0 to 5	0 to 12.4	0 to 12.4
1.001 to 10 MHz	0 to 0.75	0 to 2.5	0 to 2.48

**Table 3.4.5-4 Amplitude Setting Range  
(Clock Frequency 1.600001 to 3.125000 GHz)**

Setting Data Output Frequency	Amplitude (Ulp-p)		
	[Full-rate (PPG)], [Full-rate (MUX)]	[Half-rate (MUX)]	[Quarter-rate (MUX)]
10 Hz to 1 MHz	0 to 10	0 to 25	0 to 24.8
1.001 to 10 MHz	0 to 1.5	0 to 5	0 to 5
10.01 to 150 MHz	0 to 0.1	0 to 0.2	0 to 0.2

**Table 3.4.5-5 Amplitude Setting Range  
(Clock Frequency 3.200001 to 6.250000 GHz)**

Setting Data Output Frequency	Amplitude (Ulp-p)		
	[Full-rate (PPG)], [Full-rate (MUX)]	[Half-rate (MUX)]	[Quarter-rate (MUX)]
10 Hz to 1 MHz	0 to 20	0 to 50	0 to 50
1.001 to 10 MHz	0 to 3	0 to 10	0 to 10
10.01 to 150 MHz	0 to 0.2	0 to 0.4	0 to 0.4

**Table 3.4.5-6 Amplitude Setting Range  
(Clock Frequency 6.400001 to 15.000000 GHz)**

Setting Data Output Frequency	Amplitude (Ulp-p)		
	[Full-rate (PPG)], [Full-rate (MUX)]	[Half-rate (MUX)]	[Quarter-rate (MUX)]
10 Hz to 1 MHz	0 to 40	0 to 50	0 to 50
1.001 to 10 MHz	0 to 6	0 to 10	0 to 10
10.01 to 250 MHz	0 to 0.4	0 to 0.55	0 to 0.48

### 3.4.6 Sinusoidal Jitter (Built-in SJ2)

This function is available in Version 2.0.0 or later of the MX190000A.

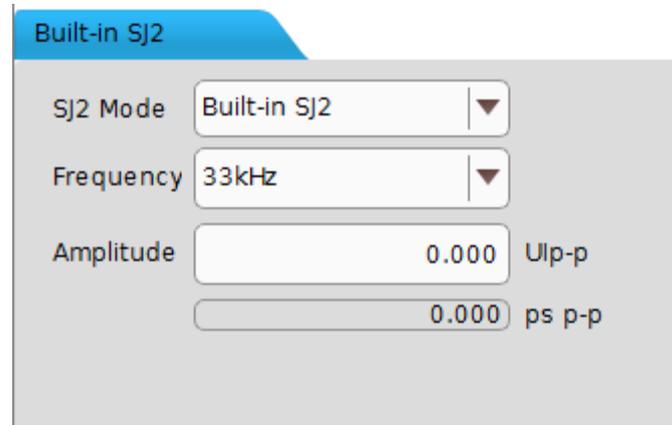


Figure 3.4.6-1 Built-in SJ2 Setting Screen

Table 3.4.6-1 Built-in SJ2 Screen Composition

Item	Function
SJ2 Mode	Selects SJ2 generation method SJ2 via MU181000: Uses SJ2 using MU181000A/B-x01 Refer to Section 3.4.5, “Sinusoidal Jitter (SJ2)”. Built-in SJ2: Uses SJ2 generated by MU181500B The MU181000B-x01 is not necessary. The setting range is shown in Amplitude. The setting range of the SJ1 jitter modulation amount is narrowed by half when using this function.
Frequency	Selects jitter modulation frequency 33 kHz, 87 MHz, 100 MHz, 210 MHz
Amplitude	Sets amplitude in Ulp-p units 33 kHz: 0 to 1000 UI 87 MHz: 0 to 0.5 UI 100 MHz: 0 to 0.5 UI 210 MHz: 0 to 0.2 UI

The upper limit of the jitter modulation frequency setting range changes with the clock frequency. Additionally, the settable amplitude range varies according to the jitter modulation frequency and data output settings. For details on setting ranges and steps, refer to Table 1.3.2-1 “Sinusoidal Jitter (SJ1 and Built-in SJ2)”.

### 3.4.7 Spread Spectrum Clock (Variable SSC Profile)

This function is available in Version 7.02.00 or later of the MX190000A.

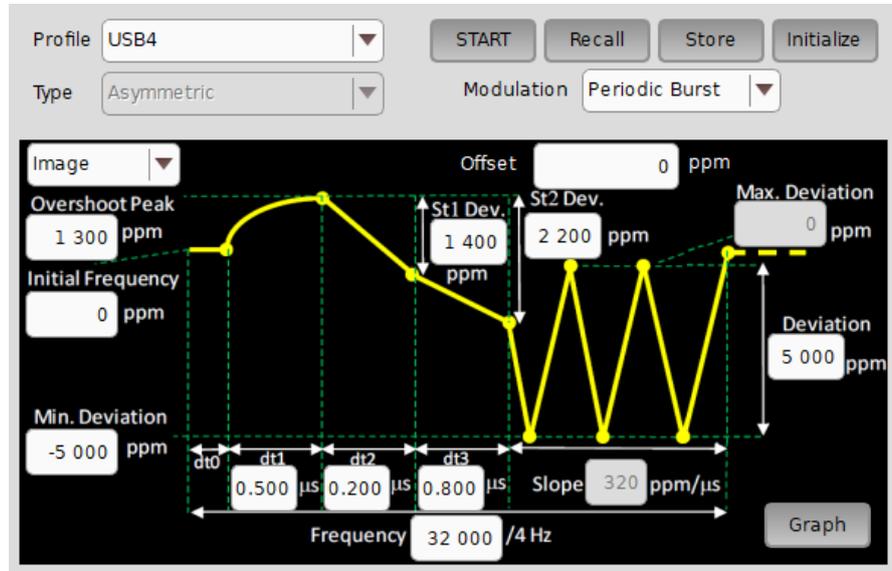


Figure 3.4.7-1 Set Variable SSC Profile Screen (For Image)

Table 3.4.7-1 Variable SSC Profile Screen Elements (Common to Image / List)

Item	Function
Profile	Select an SSC Profile. Triangular: Modulates with a triangular wave. Refer to 3.4.2, “Spread Spectrum Clock (SSC)”. USB4: Sets the SSC Profile that complies with the USB4 specifications. Variable: The user can change the settings for SSC Profile.
Type	Displays the spread spectrum method. Asymmetric: Spreads the frequency asymmetrically with respect to the reference frequency.
START/STOP	Starts / stops SSC modulation.
Recall	Recalls the SSC profile from a file.
Store	Saves the SSC profile to a file.
Initialize	Initializes the SSC Profile settings.

**Table 3.4.7-1 Variable SSC Profile Screen Elements (Common to Image / List)  
(Cont'd)**

Item	Function									
Modulation	<p>Sets the definition for SSC modulation repetition.</p> <p>Periodic Burst: Performs modulation repeatedly according to the defined SSC Profile.</p> <p>Continuous: Performs modulation according to the defined SSC Profile, and then performs triangular wave modulation. When Modulation is switched from <b>Periodic Burst</b> to <b>Continuous</b> during SSC modulation, triangular wave modulation is then performed.</p>									
Image/List	<p>Image: Sets the time and deviation amount of the SSC Profile on the time-variation graph of the clock frequency deviation.</p> <p>List: Sets the time and deviation amount for each interval of the SSC Profile.</p> <p>When <b>Profile</b> is <b>Variable</b>, <b>List</b> is only available.</p>									
Frequency	<p>Modulation frequency of the repetitive transition section Range: 28 to 37 kHz The Frame frequency is 1/4 of the value set here.</p>									
Deviation	<p>Frequency deviation of the repetitive transition section Range: 0 to 7000 ppm</p>									
Offset	<p>Displays when Clock Source is X:Y:MU181000A/B. Sets the frequency offset of the MU181000A/B in the unit of ppm. Range: -1000 to 1000 ppm</p>									
Initial Frequency	<p>Sets the amount of deviation at the start of SSC modulation. Range: -1000 to 1000 ppm</p>									
Min. Deviation	<p>Sets the amount of deviation that minimizes the clock frequency in the Steady-State Clock section of the SSC Profile. The range depends on the setting for SSC Profile.</p> <table border="1"> <thead> <tr> <th>SSC Profile</th> <th>Min.</th> <th>Max.</th> </tr> </thead> <tbody> <tr> <td>USB4</td> <td>-7000</td> <td>Smaller of "Overshoot Peak - St2 Dev." and "Initial Frequency"</td> </tr> <tr> <td>Variable</td> <td>-7000</td> <td>Initial Frequency</td> </tr> </tbody> </table>	SSC Profile	Min.	Max.	USB4	-7000	Smaller of "Overshoot Peak - St2 Dev." and "Initial Frequency"	Variable	-7000	Initial Frequency
SSC Profile	Min.	Max.								
USB4	-7000	Smaller of "Overshoot Peak - St2 Dev." and "Initial Frequency"								
Variable	-7000	Initial Frequency								
Max. Deviation	<p>Displays the amount of deviation at the maximum clock frequency of the Steady-State Clock section of the SSC Profile. Formula: Max. Deviation = Min. Deviation + Deviation.</p>									
Graph	<p>Displays a frequency deviation graph according to the SSC Profile settings in a separate window (see Figure 3.4.7-2). For explanations of graph icons, refer to Table 3.4.7-2.</p>									

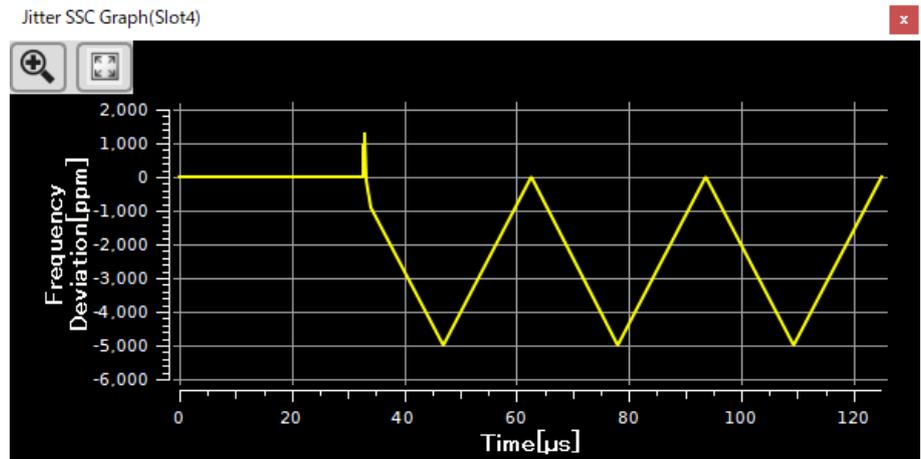


Figure 3.4.7-2 Frequency Deviation Graph Display Example

Table 3.4.7-2 Icons on Frequency Deviation Graph

Item	Function
	Enlarges a selected area of the frequency deviation graph.
	Displays the frequency deviation graph in a full frame size.

The following table shows the items that appear only when **Image** is selected as in Figure 3.4.7-1.

**Table 3.4.7-3 Variable SSC Profile Screen Elements (For Image)**

Item	Function
Overshoot Peak	Sets the amount of overshoot peak deviation of the SSC Profile. Range: (Initial Frequency) to (Deviation) ppm
St1 Dev.	Sets the amount of deviation from overshoot peak to first inflection point. Range: 0 to (St2 Dev.) ppm
St2 Dev.	Sets the amount of deviation from overshoot peak to second inflection point. Range: (St1 Dev.) to (Overshoot Peak – Min. Deviation) ppm
dt0	The value of dt0 is adjusted so that the SSC modulation period is equal to the frame period. If dt0 is less than or equal to 0, SSC modulation cannot be started.
dt1	Sets the time from the end of initial frequency to overshoot peak. The modulated waveform in this section is sinusoidal. Range: 0.10 to 1.50 $\mu$ s
dt2	Sets the time between overshoot peak to first inflection point. Range: 0.10 to 1.50 $\mu$ s
dt3	Sets the time between first and second inflection points. Range: 0.10 to 1.50 $\mu$ s
Slope	Displays the shape of the slope of the Steady-State Clock section of the SSC Profile. Formula: $\text{Slope} = \text{Deviation} \times \text{SSC\_Frequency} \times 2$

When **List** is selected, the following screen is displayed.

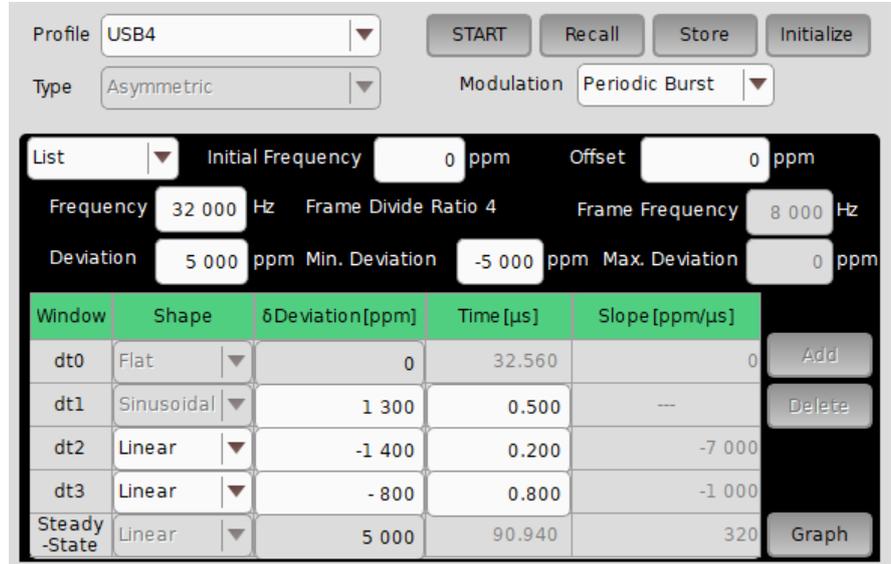


Figure 3.4.7-3 Set Variable SSC Profile Screen (For List)

The following table shows the items that appear only when **List** is selected as in Figure 3.4.7-3.

Table 3.4.7-4 Variable SSC Profile Screen Elements (For List)

Item	Function																									
Frame Frequency	Displays the frame frequency for SSC modulation. The frame frequency is 1/4 of the modulation frequency setting.																									
Shape	<p>Sets the shape of the modulated waveform in the delta section.</p> <p>Flat: Horizontal straight line</p> <p>Linear: Straight line with a slope</p> <p>Sinusoidal: Sinusoidal wave</p> <p>Quadratic: Quadratic curve</p> <p>When the SSC Profile is <b>Variable</b>, this can be changed according to the following table.</p> <table border="1"> <thead> <tr> <th>Row</th> <th>Flat</th> <th>Linear</th> <th>Sinusoidal</th> <th>Quadratic</th> </tr> </thead> <tbody> <tr> <td>dt0</td> <td>✓</td> <td>–</td> <td>–</td> <td>–</td> </tr> <tr> <td>dt1</td> <td>✓</td> <td>✓</td> <td>✓</td> <td>✓</td> </tr> <tr> <td>dt2 to dt7</td> <td>✓</td> <td>✓</td> <td>–</td> <td>–</td> </tr> <tr> <td>Steady-State</td> <td>–</td> <td>✓</td> <td>–</td> <td>–</td> </tr> </tbody> </table>	Row	Flat	Linear	Sinusoidal	Quadratic	dt0	✓	–	–	–	dt1	✓	✓	✓	✓	dt2 to dt7	✓	✓	–	–	Steady-State	–	✓	–	–
Row	Flat	Linear	Sinusoidal	Quadratic																						
dt0	✓	–	–	–																						
dt1	✓	✓	✓	✓																						
dt2 to dt7	✓	✓	–	–																						
Steady-State	–	✓	–	–																						

Table 3.4.7-4 Variable SSC Profile Screen Elements (For List) (Cont'd)

Item	Function																					
$\delta$ Deviation	<p>Sets the clock frequency deviation for <math>\delta</math> interval. The range depends on the setting for SSC Profile.</p> <p>USB4 Profile</p> <table border="1"> <thead> <tr> <th>Row</th> <th>Min.</th> <th>Max.</th> </tr> </thead> <tbody> <tr> <td>dt1</td> <td>0</td> <td>8000</td> </tr> <tr> <td>dt2, dt3</td> <td>-14000</td> <td>0</td> </tr> <tr> <td>dt0, Steady-State</td> <td colspan="2">Cannot be set</td> </tr> </tbody> </table> <p>Variable Profile</p> <table border="1"> <thead> <tr> <th>Row</th> <th>Min.</th> <th>Max.</th> </tr> </thead> <tbody> <tr> <td>dt1 to dt7</td> <td>-14000</td> <td>14000</td> </tr> <tr> <td>dt0, Steady-State</td> <td colspan="2">Cannot be set</td> </tr> </tbody> </table>	Row	Min.	Max.	dt1	0	8000	dt2, dt3	-14000	0	dt0, Steady-State	Cannot be set		Row	Min.	Max.	dt1 to dt7	-14000	14000	dt0, Steady-State	Cannot be set	
Row	Min.	Max.																				
dt1	0	8000																				
dt2, dt3	-14000	0																				
dt0, Steady-State	Cannot be set																					
Row	Min.	Max.																				
dt1 to dt7	-14000	14000																				
dt0, Steady-State	Cannot be set																					
Time	<p>Sets or displays the time of the delta section.</p> <p>dt0: The SSC modulation period is adjusted to be equal to the frame period.</p> <p>dt1 to dt7: Range: 0.10 to 1.50 <math>\mu\sigma</math></p> <p>Steady-State: Displays the time of the Steady-State Clock period. The time may change depending on the setting for Modulation.</p>																					
Slope	Displays the slope of the delta section when Shape is <b>Flat</b> or <b>Linear</b> .																					
Add	Adds a row to the list when <b>Profile</b> is <b>Variable</b> . Rows can be added up to dt7.																					
Delete	Deletes the selected row from the list when <b>Profile</b> is <b>Variable</b> . Rows dt2 to dt7 can be deleted.																					

### 3.5 Setting Data Output

The jitter calculation method varies according to the jittered clock source.



Figure 3.5-1 Data Output Setting Screen

Table 3.5-1 Data Output Screen Composition

Item	Function
Data Pattern Generator	Sets the unit connected to the Jittered Clock Output connector. <b>Full-rate (PPG):</b> MU181020A, MU181020B <b>Half-rate (MUX):</b> MU182020A, MU182021A <b>Full-rate (MUX):</b> MU182020A, MU182021A <b>Quarter-rate(MUX):</b> MP1821A <b>32G PPG:</b> MU183020A, MU183021A, MU195020A <b>64G MUX:</b> MP1861A <b>64G PPG:</b> MU196020A
Bitrate	Displays bit rate of output data

The jitter added to the data output is indicated by the icon displayed under the Data Output button. A message “Overload” appears when the sum of RJ and BUJ exceeds 0.5UI or the total amplitude of the jitters (SJ, RJ and BUJ) exceeds the total modulation in Table 3.5-2 or Table 3.5-3.

In Version 2.0.0 or later of the MX190000A, “Overload” is displayed depending on the total amplitude of SJ1, Built-in SJ2, RJ, and BUJ. Regarding SJ1 and Built-in SJ2, if their total modulation masks have the same modulation frequency, the overloads are totaled. If they have different modulation frequencies, the “Overload” are calculated and displayed separately.

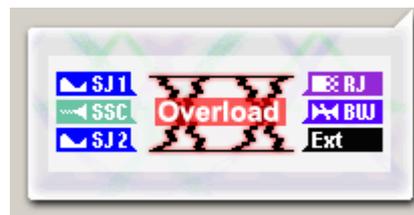


Figure 3.5-2 Jitter Icon Display (Overload)

Table 3.5-2 Total Modulation Causing Overload Display

SJ Frequency (MHz)	Total Modulation (Ulp-p)
0.000 010 to 1.000 000	50
1.001 000 to 10.000 000	10
10.010 000 to 250.000 000	0.7

Table 3.5-3 Total Modulation Causing Overload Display  
(When Interacting With 32G PPG)

SJ Frequency (MHz)	Total Modulation (Ulp-p)
0.000 010 to 0.0 075	2000.3
0.007 501 to 1.00 000	20 dB/decade (Figure 3.5-3) + 0.3
1.001 000 to 10.000 000	20 dB/decade (Figure 3.5-3) + 0.3
10.010 000 to 250.000 000	1.3


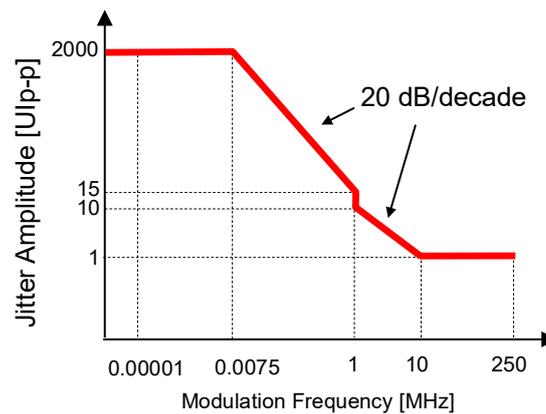


Figure 3.5-3 Total Jitter Added (When Interacting With 32G PPG)

**Table 3.5-4 Total Modulation Causing Overload Display  
(When Interacting With 64G MUX)**


SJ Frequency (MHz)	Total Modulation (Ulp-p)
0.000 010 to 0.0 075	2000.3
0.007 501 to 1.00 000	20 dB/decade (Figure 3.5-4) + 0.3
1.001 000 to 10.000 000	(Figure 3.5-4) + 0.3
10.010 000 to 250.000 000	0.85

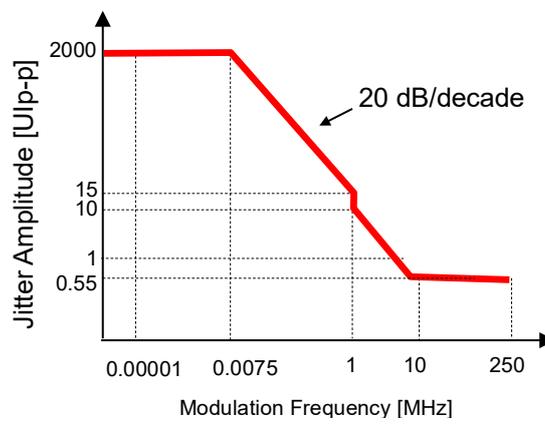

**Figure 3.5-4 Total Jitter Added (When Interacting With 64G MUX)**

**Table 3.5-5 Total Modulation Causing Overload Display  
(When Interacting With 64G PPG)**

SJ Frequency (MHz)	Total Modulation (Ulp-p)
0.000 010 to 0.0 075	1000.3
0.007 501 to 1.00 000	20 dB/decade (Figure 3.5-5) + 0.3
1.001 000 to 10.000 000	20 dB/decade (Figure 3.5-5) + 0.3
10.010 000 to 250.000 000	0.8

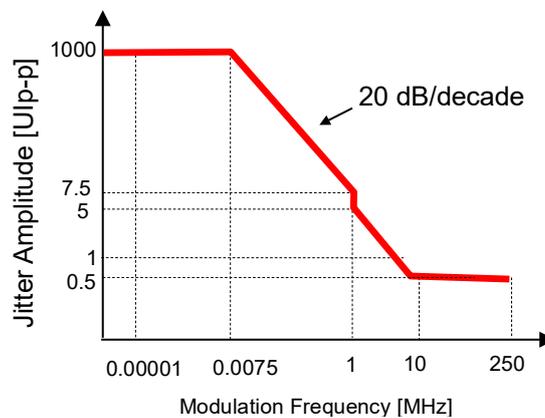

**Figure 3.5-5 Total Jitter Added (When Interacting With 64G PPG)**

## 3.6 Setting Auxiliary Output

The clock output to the AUX Output and Reference Clock Output connectors can be set.

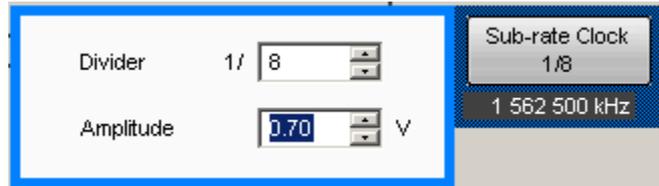


Figure 3.6-1 Sub-Rate Clock Setting Screen

Table 3.6-1 Sub-Rate Clock Screen Composition

Item	Function
Divider	Sets clock division rate in range from 1/8 to 1/256.
Amplitude	Sets amplitude in range from 0.1 to 0.7 V.

The frequency of the clock to be output appears below the button.



Figure 3.6-2 Reference Clock Setting Screen

Table 3.6-2 Reference Clock Screen Composition

Item	Function
Divider	Sets clock division rate from following: 1/1, 1/2, 1/4

The frequency of the clock to be output appears below the button.

### 3.7 Setting Restrictions for Other Modules


When the Data Input setting described in item 3.3 “Input Signal Settings” is set to something other than External, there are some restrictions on the settings for the selected module.

The restricted settings and values are shown in the following table.

**Table 3.7-1 Restrictions for Other Modules**

Clock Source Setting	Restricted Item
X:Y:MU181000A/B*	All setting items

\*: Input the unit number at X and the slot number at Y.

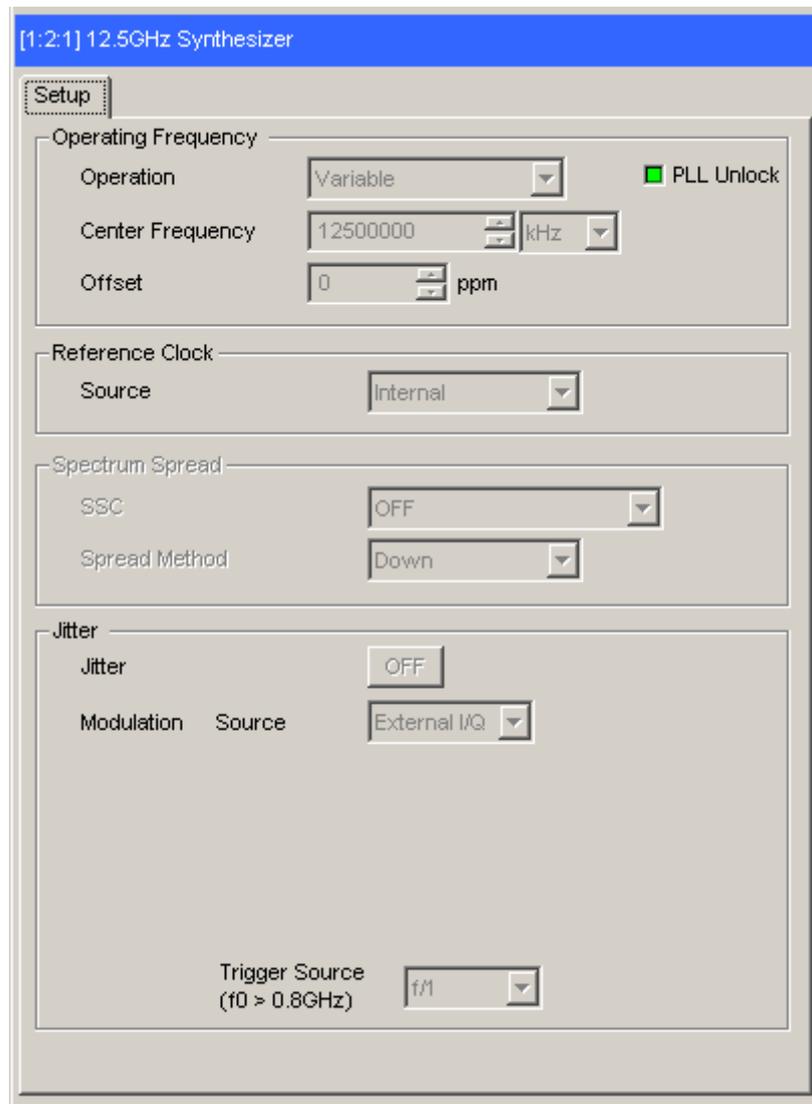

**Figure 3.7-1 Example of Restricted Settings Screen**

Figure 3.7-1 shows an example of the Module screen with restricted settings.

Text boxes with restricted setting items and labels on restricted buttons are displayed in gray.

The status field displays various messages, including the status of the connection with the MU181500B.

## 3.8 Saving and Reading Settings

The MU181500B settings can be saved to a file.

1. Click **File** on the menu bar.
2. Click **Save**. The **Save** Screen is displayed.
3. Set the **Modules** pull down menu to **MU181500B**.  
The **File Type** becomes **Binary**.
4. Set the saved file destination at **Drives** and **Directories**.
5. Input the name of the saved file at **File Name**. The file extension is JMS (and can be omitted).
6. Click **OK** to save the file with the MU181500B setting conditions.

The saved settings file can be read using the following procedure.

1. Click **File** on the menu bar.
2. Click **Open**. The **Open** screen is displayed.
3. Set the **Modules** pull down menu to **MU181500B**.
4. Specify the path to the saved settings file using **Drives** and **Directories**.
5. Select the file name from **File List**.
6. Click the **OK** to set the file settings at the MU181500B.

## *Chapter 4 Use Example*

---

This chapter explains some usage examples.

- 4.1 Measuring Jitter Tolerance .....4-2
- 4.2 Measuring Spectrum Spread.....4-5

## 4.1 Measuring Jitter Tolerance

This section explains how to use two MP1800A with the following modules to measure the jitter tolerance of a digital data receiver with built-in CDR (clock data recovery).

- MU181000A 12.5GHz Synthesizer
- MU181500B Jitter Modulation Source
- MU181020A 12.5Gbit/s PPG, 2 units
- MU181040A 12.5Gbit/s ED, 2 units
- MU182020A 25Gbit/s 1ch MUX
- MU182040A 25Gbit/s 1ch DEMUX

1. Connect Clock Output of the MU181000A to Ext Clock Input of this module using a coaxial cable.
2. Connect the Jittered Clock Output of this module to the Ext Clock Input of the MU182020A using coaxial cable.
3. Use coaxial cables to connect 1/2 Clock Output of the MU182020A to Ext Clock Input of the MU181020A (two connections).
4. Use coaxial cables to connect Data Output of the MU181020A to 1/2 Data Input of the MU182020A (two connections).
5. Use the coaxial cable to connect Clock Output of the MU181020A to 1/2 Clock Input of the MU182020A.
6. Connect the input terminals of the device under test to Data Output and  $\overline{\text{Data}}$  Output of the MU182020A using coaxial cables. If the device under test has only one input connector, connect it to Data Output of the MU182020A.
7. Connect Data Input and  $\overline{\text{Data}}$  Input of the MU182040A to the output terminals of the device under test using coaxial cables. If the device under test has only one output connector, connect to MU182040A Data Input. Do not connect anything to  $\overline{\text{Data}}$  Input.
8. Connect Clock Output of the MU182020A to Ext Clock Input of MU182040A using a coaxial cable.
9. Connect the MU182040A 1/2 Clock output and MU181040A Clock Input using coaxial cables (two connections).
10. Use coaxial cables to connect Data Output of the MU181040A to 1/2 Data Input of the MU182040A (two connections).
11. Press the MU181500B Slot button.
12. Set **Clock Source** of **Synthesizer** to **X:Y:MU181000A**. Set the Frequency and Offset.
13. Click the data output button to set the display to **Half-rate(MUX)**.

14. Click **SJ**, **RJ**, or **BUJ** to select the jitter to add and set the button display to **ON**.
15. Click the button of jitter to add to display the jitter parameter setting screen.  
Set each jitter parameter.
16. Press the MU181020A Slot button.
17. Click the **Pattern** tab. Set the data pattern.
18. Press the MU182020A Slot button.
19. Click the **Output** tab. Set the MU182020A output voltage.
20. Press the MU181040A Slot button.
21. Click the **Pattern** tab. Set the data pattern.
22. Press the MU182040A Slot button.
23. Click the **Input** tab. Sets input voltage of MU181040A.
24. Click the **Result** tab. Measure the bit error rate.
25. Change the jitter parameters at step 14 and repeat the bit error rate measurement procedure of step 23.

Refer to the following operation manual for the operation screens of each module.

- *MU181020A 12.5 Gbit/s PPG MU181020B 14 Gbit/s PPG Operation Manual*
- *MU181040A 12.5 Gbit/s ED MU181040B 14 Gbit/s ED Operation Manual*
- *MU182020A 25Gbit/s 1ch MUX MU182021A 25Gbit/s 2ch MUX Operation Manual*
- *MU182040A 25Gbit/s 1ch MUX MU182041A 25Gbit/s 2ch DEMUX Operation Manual*

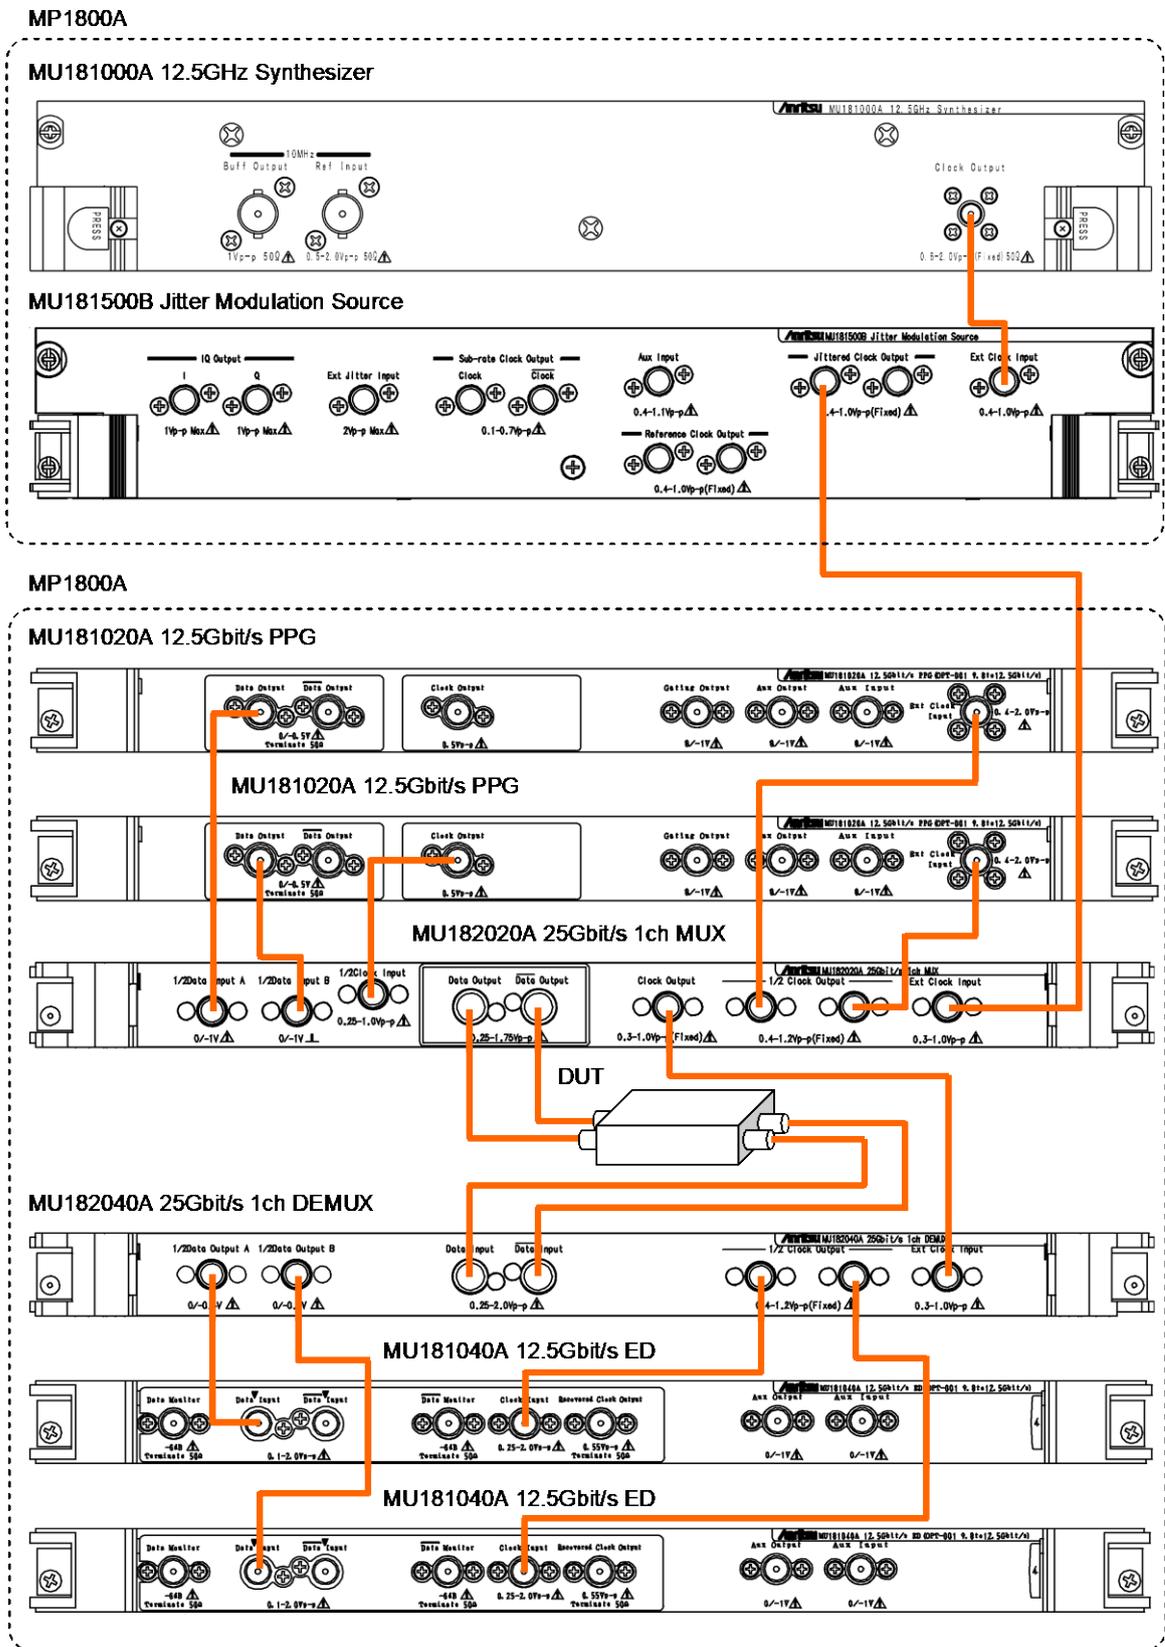


Figure 4.1-1 Jitter Tolerance Measurement System Setup

## 4.2 Measuring Spectrum Spread

This section explains how to use the following modules and a spectrum analyzer to measure the spectrum spread results of a digital data transmitter.

- MU181000A 12.5GHz Synthesizer
- MU181500B Jitter Modulation Source
- MU181020A 12.5Gbit/s PPG, 2 units
- MU182020A 25Gbit/s MUX


This measurement uses two MP1800A units.

This plug-in module is installed in the MU181000A in one MP1800A unit.

Two MU181020A PPG units and one MU182020A 25 Gbit/s MUX are installed in the other MP1800A.

1. Connect Clock Output of the MU181000A to Ext Clock Input of the MU181500B using a coaxial cable.
2. Connect the Jittered Clock Output of the MU181500B to the Ext Clock Input of the MU182020A using coaxial cable.
3. Use coaxial cables to connect 1/2 Clock Output of the MU182020A to Ext Clock Input of the MU181020A (two connections).
4. Use coaxial cables to connect Data Output of the MU181020A to 1/2 Data Input of the MU182020A (two connections).
5. Use the coaxial cable to connect Clock Output of the MU181020A to 1/2 Clock Input of the MU182020A.
6. Connect the input terminals of the device under test to Data Output and  $\overline{\text{Data}}$  Output of the MU182020A using coaxial cables. If the device under test has only one input connector, connect it to Data Output of the MU182020A.
7. Connect the output connector of the device under test to the input terminal of the spectrum analyzer using a coaxial cable. Insert an attenuator if necessary.
8. Press the MU181500B Slot button.
9. Set **Clock Source** of **Synthesizer** to **X:Y:MU181000A**. Set the Frequency and Offset.
10. Click the data output button to set the display to **Half-rate (MUX)**.
11. Click the **SSC** to set the button display to **ON**.
12. Click the **SSC** to display the parameter setting screen. Set the spectrum spread clock parameters.
13. Press the MU181020A Slot button.

14. Click the **Pattern** tab. Set the data pattern.
15. Press the MU182020A Slot button.
16. Click the **Output** tab. Set the MU181020A output voltage.
17. Measure the signal output from the device under test at the spectrum analyzer.

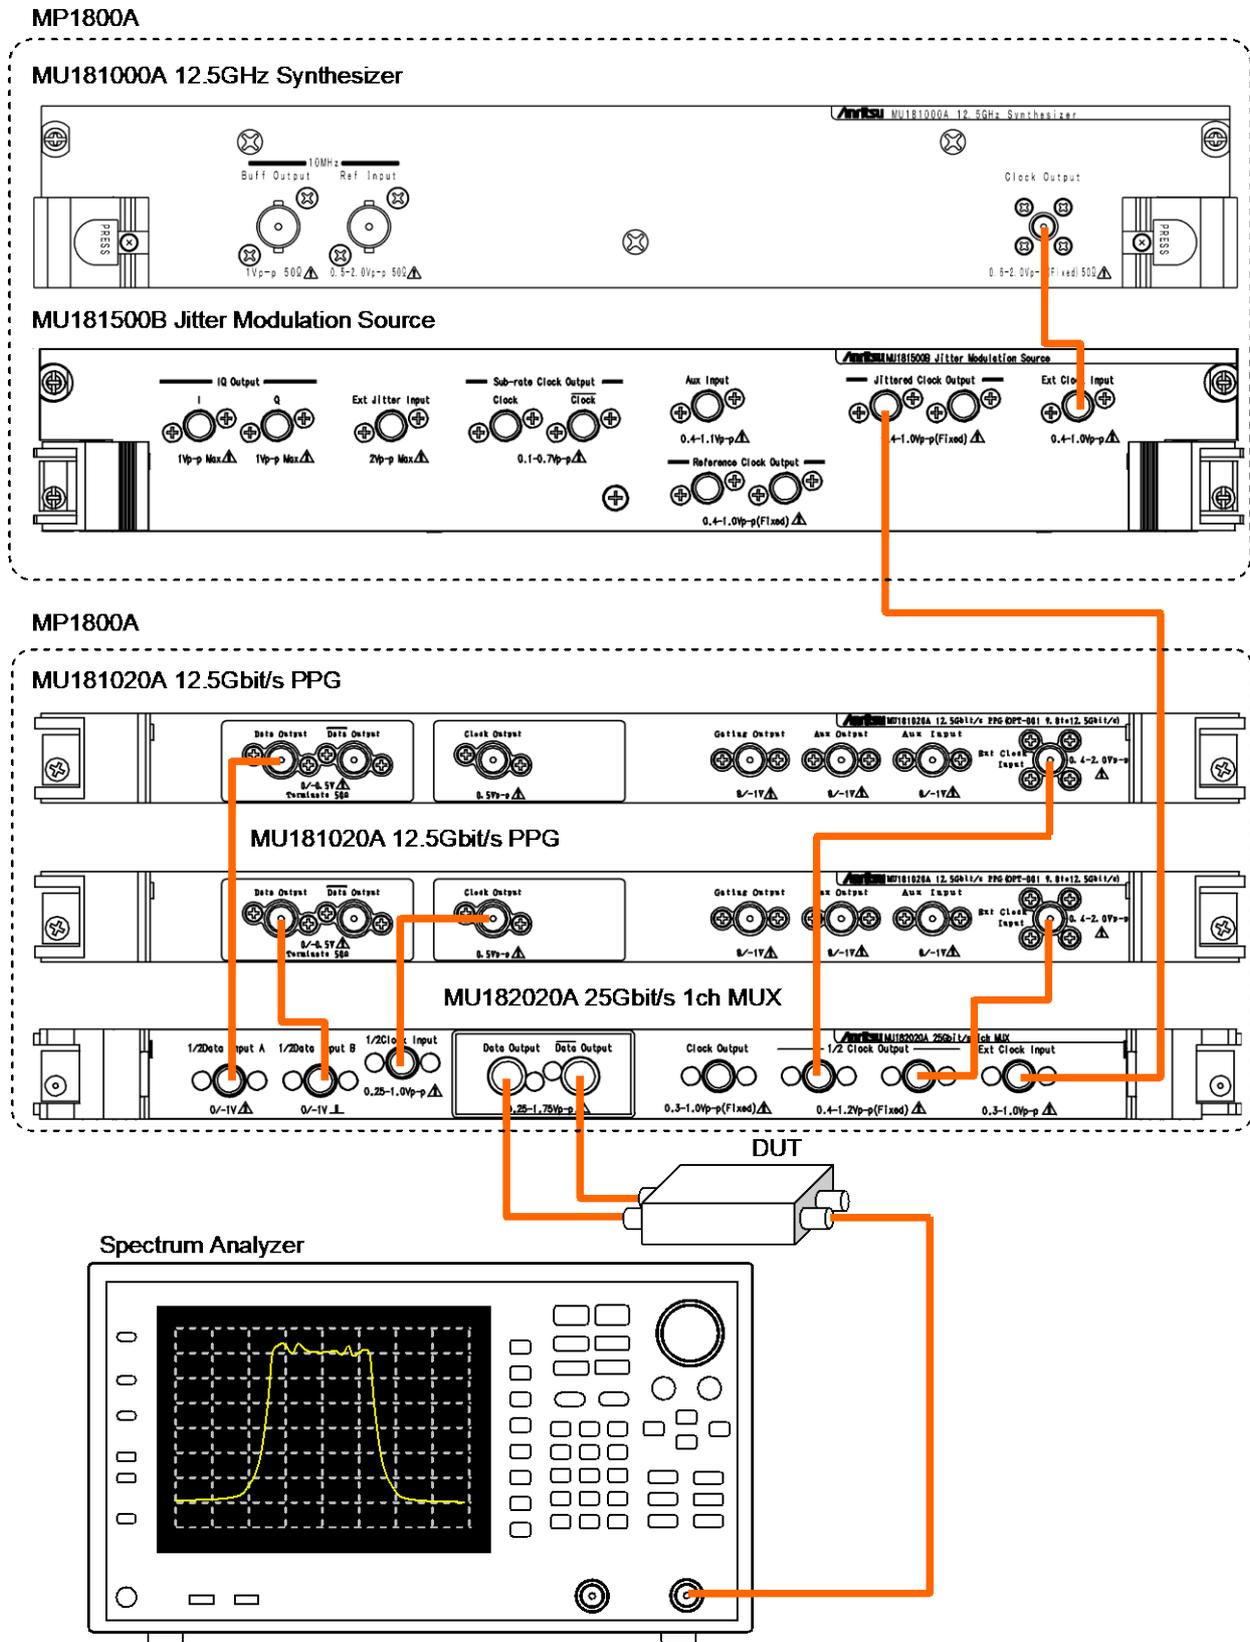

4

Use Example

Figure 4.2-1 Spectrum Spread Measurement System Setup

## 4.3 Measuring Spectrum Spread (USB4 SSC Profile)

This section explains how to use the following mainframe, modules and a spectrum analyzer to measure the spread spectrum results of a digital data transmitter.

- MP1900A Signal Quality Analyzer R
  - MU181000B 12.5GHz 4 port Synthesizer
  - MU181500B Jitter Modulation Source
  - MU195020A 21G/32G bit/s SI PPG
1. Connect Clock Output of the MU181000B to Ext Clock Input of the MU181500B using a coaxial cable.
  2. Connect the Jittered Clock Output of the MU181500B to the Ext Clock Input of the MU195020A using coaxial cable.
  3. Connect the input terminals of the device under test to Data Output and  $\overline{\text{Data}}$  Output of the MU195020A using coaxial cables.  
If the device under test has only one input connector, connect it to Data Output of the MU195020A.
  4. Connect the output connector of the device under test to the input terminal of the spectrum analyzer using a coaxial cable.  
Insert an attenuator if necessary.
  5. On the MX190000A application toolbar, click **Jitter** to display the MU181500B window.
  6. Set **Clock Source** to **X:Y:MU181000B**.  
Set the Frequency and Offset.
  7. Click the **SSC** to set the button display to **ON**.
  8. In the **Profile** box, select **USB4**, and then set the spread spectrum clock parameters for the USB4 profile. To view the SSC modulation image when setting the spread spectrum clock parameters, click **Graph**.
  9. On the MX190000A application toolbar, click **SI PPG** to display the MU195020A window.
  10. Click the **Misc2** tab. Set **Clock Source** to **X:Y:MU181500B**.
  11. On the **Misc2** tab, select **USB4 Gen2** for **Bit Rate**.
  12. On the **Pattern** tab, select any test pattern.
  13. Click the **Output** tab. Set the MU195020A output voltage.
  14. In the MU181500B window, click **SSC**, and then **START** to start the SSC modulation of the USB4 profile.
  15. Measure the signal output from the device under test at the spectrum analyzer.

### 4.3 Measuring Spectrum Spread (USB4 SSC Profile)

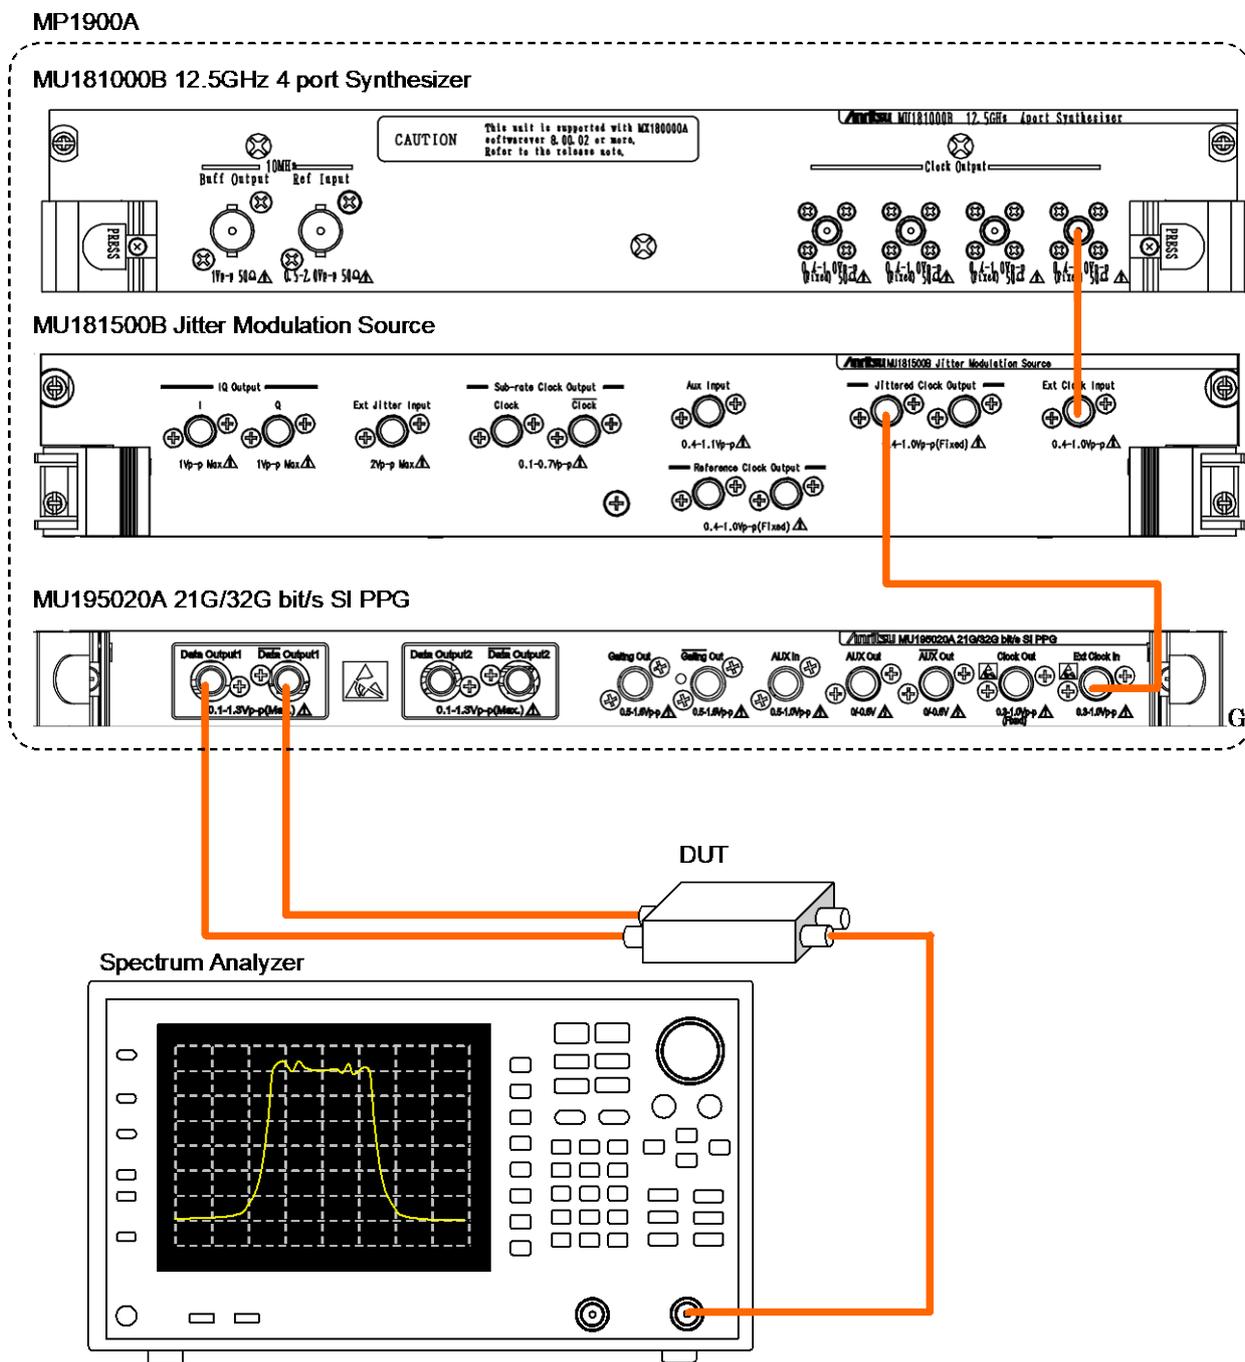


Figure 4.3-1 Spectrum Spread Measurement System Setup (USB4 SSC Profile)

4

Use Example



## Chapter 5 Remote Commands

---

For remote control commands of MU181500B jitter modulation source, refer to Section 7.10 “Jitter Command” in the *MX180000A Signal Quality Analyzer Control Software Operation Manual Remote Control*. When using the MX190000A, refer to the on-screen help of the MX190000A.



# *Chapter 6 Performance Test*

---

This chapter explains the main-frame performance tests.

6.1	Performance Test .....	6-2
6.2	List Of Performance Test Equipment.....	6-2
6.3	Performance Test Method.....	6-2
6.3.1	SJ .....	6-3
6.3.2	RJ.....	6-7
6.3.3	BUJ.....	6-10

## 6.1 Performance Test

The Performance Test is run to confirm that the main functions of the instrument meet the standards. Run the Performance Test at acceptance inspection, after service repairs, and at fixed intervals (every 6 months).

## 6.2 List Of Performance Test Equipment

Warm-up the main frame and each instrument for at least 30 minutes before starting the Performance Test. The following table lists the equipment required for the performance test.

**Table 6.2-1 Equipment Required for Performance Test**

Equipment Name	Required Performance	Recommend Model
Sampling Oscilloscope	Band: 50 GHz min. Residual jitter: 200 fs max.	86100C, 86107A, 86117A (Agilent Technology)
Spectrum Analyzer	Band: 26.5 GHz min.	MS2692A (Anritsu)
Divider	Two-way or more	MU181020A (Anritsu)

**Note:**

Warm up the device to be measured and the measuring instruments for at least 30 minutes except if specified otherwise, in order to stabilize them sufficiently before running performance tests. Maximum measurement accuracy requires, in addition to the above, conducting performance tests under ambient temperatures and with little AC power supply voltage fluctuations, as well as the absence of noise, vibrations, dust, humidity and other problems.

## 6.3 Performance Test Method

The test items and procedures are explained below.

- (1) SJ
- (2) RJ
- (3) BUJ

Furthermore, to record the test result, use Appendix B “Performance Test Result Sheet”.

### 6.3.1 SJ

Measure the output clock level and sideband level when SJ is ON and find the SJ amplitude by calculation.

Figure 6.3.1-1 and Figure 6.3.1-3 show the instrument setup when measuring SJ.

### CAUTION

When inputting a signal to the spectrum analyzer input connectors, always use an attenuator to cut the level to less than the maximum level for the connector.

There is a risk of damage to the spectrum analyzer if a signal exceeding the maximum level is input to the analyzer.

Measurement procedure when SJ amplitude  $\leq 0.4$  Ulp-p


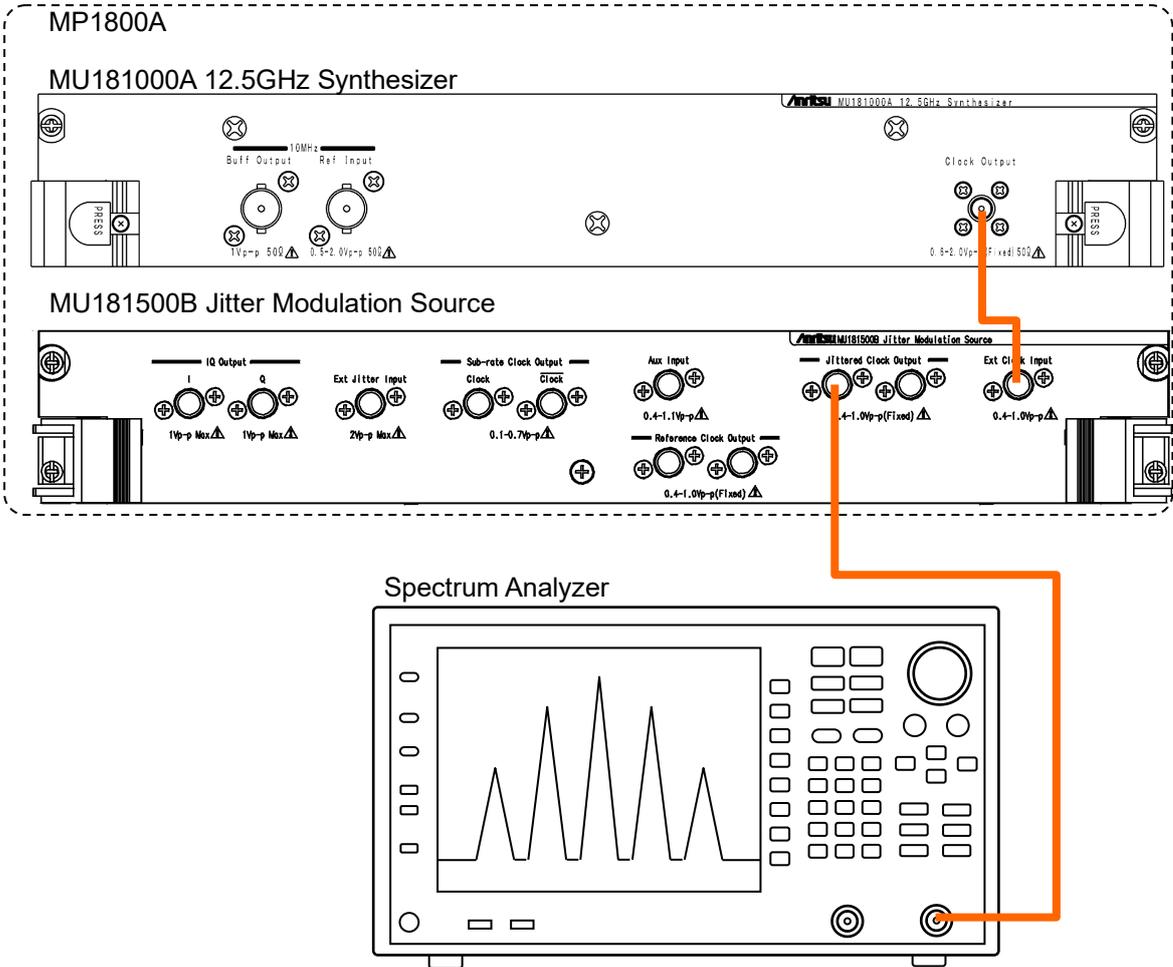


Figure 6.3.1-1 Setup when SJ Amplitude  $\leq 0.4$  Ulp-p

1. When the SJ setting is 0.4 UIp-p or less, use a coaxial cable to connect the Jittered Clock Output connector and the spectrum analyzer RF Input.
2. Set the main frame as follows:  
 Synthesizer: 12 500 000 kHz  
 SJ: Frequency 50 MHz, Amplitude 0.300 UI  
 Pattern Generator: Full rate (PPG)
3. Set the spectrum analyzer as follows:  
 Center Frequency: 12 500 MHz, Span: 250 MHz, RBW: 1 MHz
4. Measure the following carriers and sideband powers with the spectrum analyzer.  
 J0: Carrier power (dBm)  
 J1U: First sideband Upper Frequency power (dBm)  
 J1L: First sideband Lower Frequency power (dBm)  
 J2U: Second sideband Upper Frequency power (dBm)  
 J2L: Second sideband Lower Frequency power (dBm)

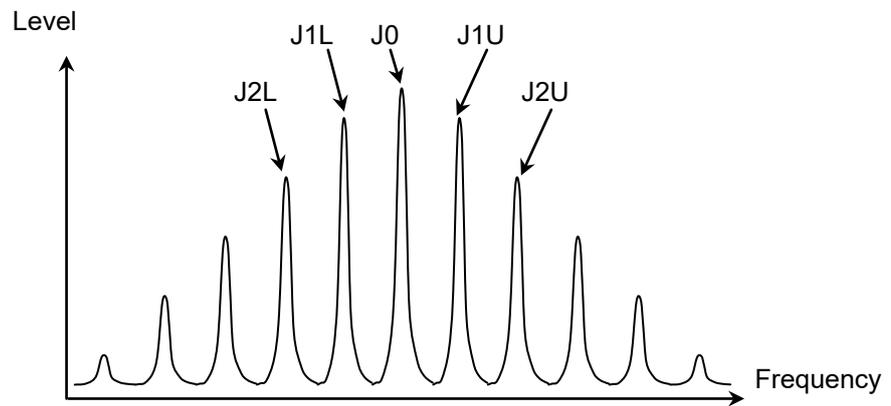

**Figure 6.3.1-2 Power Measurement with Spectrum Analyzer**

5. Use the following equation to calculate the Jitter Amplitude.

$$J1 = \frac{J1U + J1L}{2} \text{ (dBm)}$$

$$J2 = \frac{J2U + J2L}{2} \text{ (dBm)}$$

$$j0 = 10^{\left(\frac{J0}{20}\right)}$$

$$j1 = 10^{\left(\frac{J1}{20}\right)}$$

$$j2 = 10^{\left(\frac{J2}{20}\right)}$$

$$jitter\_Amplitude = \frac{1}{\pi} \times \frac{2 \times j1}{j0 + j2} \text{ (UIp-p)}$$

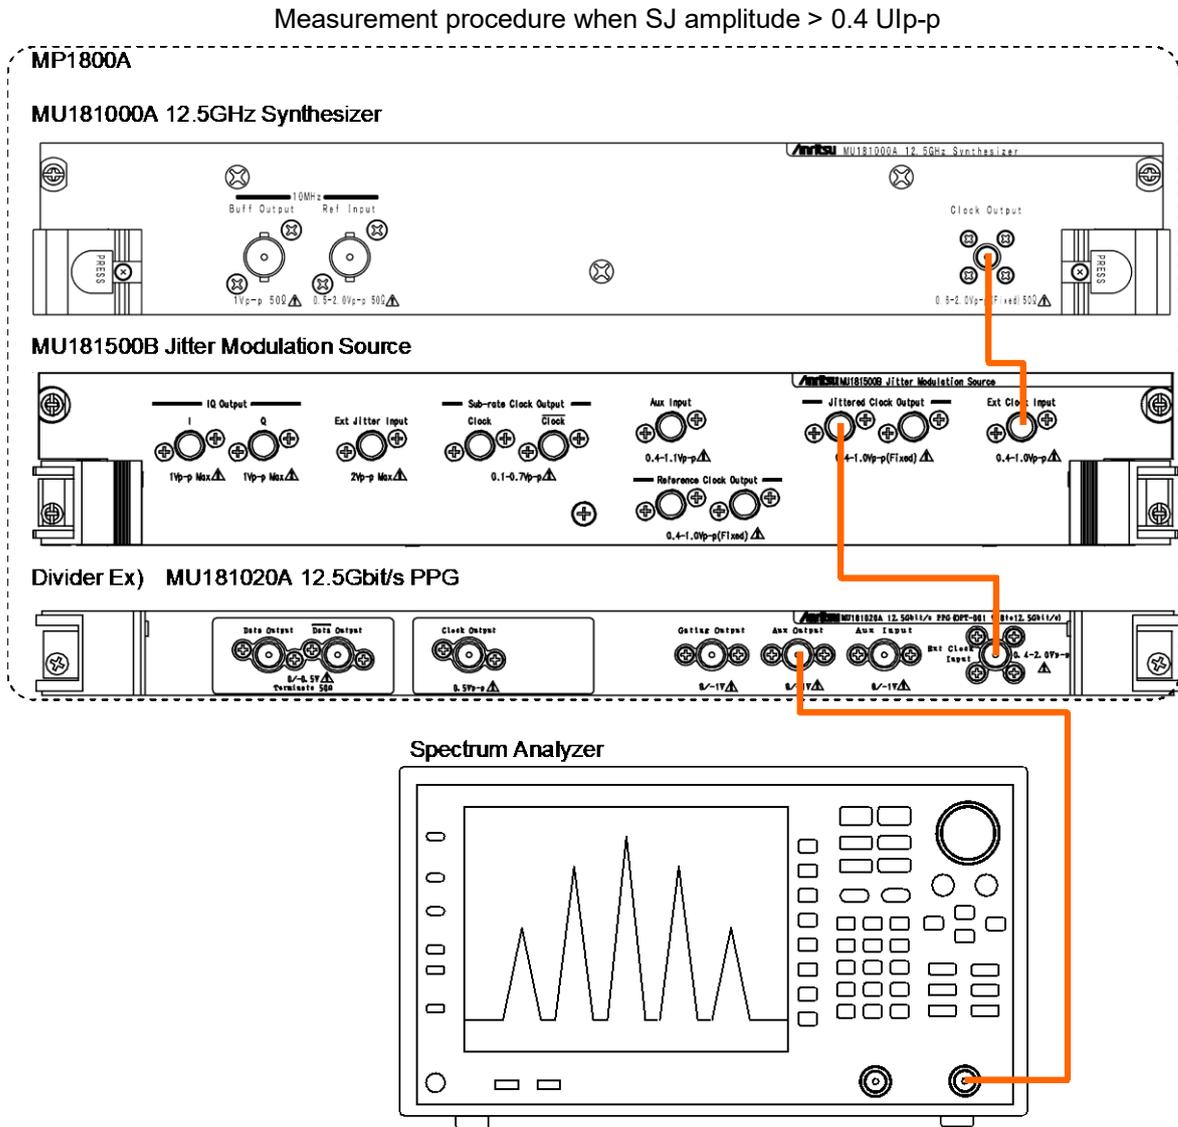


Figure 6.3.1-3 Setup when SJ Amplitude > 0.4 UIp-p

1. When the SJ amplitude is greater than 0.4 UIp-p, use a coaxial cable to connect the Jittered Clock Output connector and Input of the Divider.  
Figure 6.3.1-3 shows the instrument setup using the MU181020A as the Divider.
2. Use a coaxial cable to connect Output of the Divider to RF Input of the spectrum analyzer.
3. Set the main frame as follows:  
 Synthesizer: 12 500 000 kHz  
 SJ: Frequency 50 MHz, Amplitude 0.500 UI  
 Pattern Generator: Full rate (PPG)

4. Set the spectrum analyzer as follows:  
 Center Frequency: 6 250 MHz  
 Span: 250 MHz
5. Measure as described in step 4 of Measurement procedure when SJ amplitude  $\leq 0.4$  UIp-p.
6. Calculate as described in step 5 of Measurement procedure when SJ amplitude  $\leq 0.4$  UIp-p

However, jitter amplitude is found using the following equation.

$$jitter\_Amplitude = \frac{2}{\pi} \times \frac{2 \times j1}{j0 + j2} (UIp-p)$$

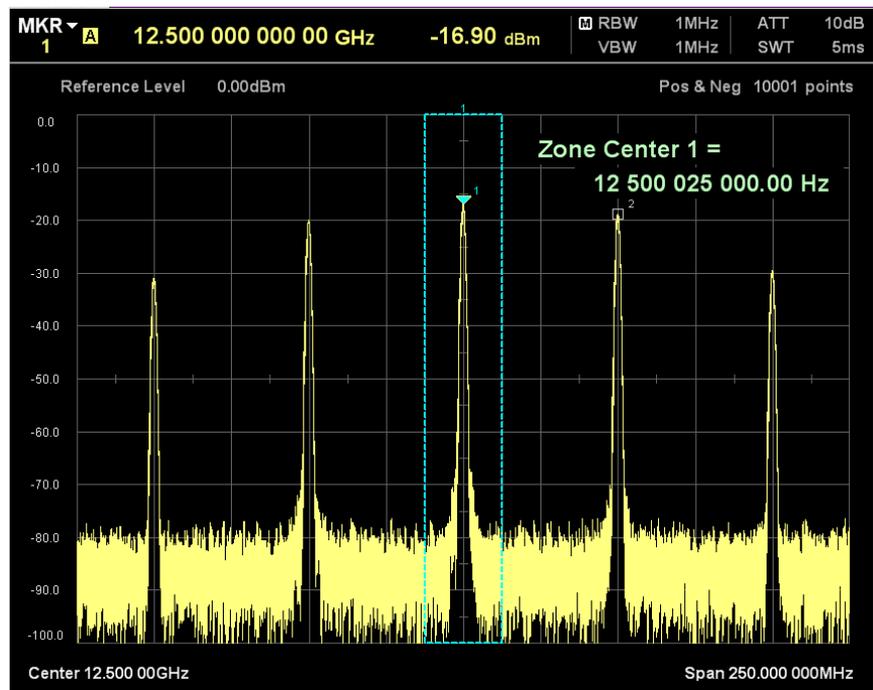


Figure 6.3.1-4 Example of Spectrum Analyzer Waveform

### 6.3.2 RJ

Measure the SSB noise level of the output clock when RJ is ON with the spectrum analyzer and find the RJ amplitude from the integrated values.


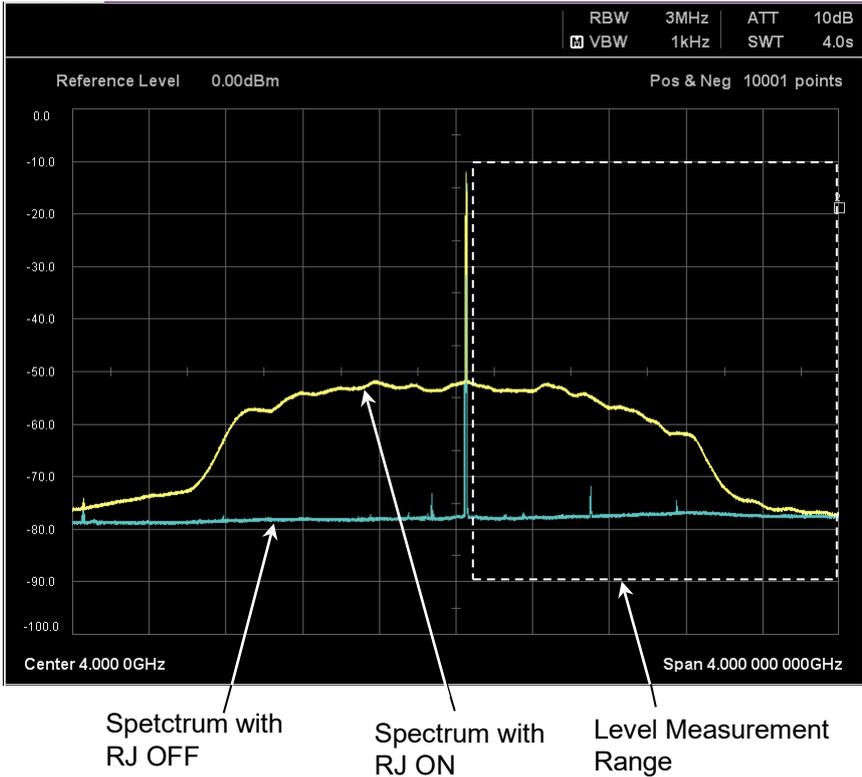


Figure 6.3.2-1 Power Measured by Spectrum Analyzer

Figure 6.3.2-2 shows the instrument setup when measuring RJ.

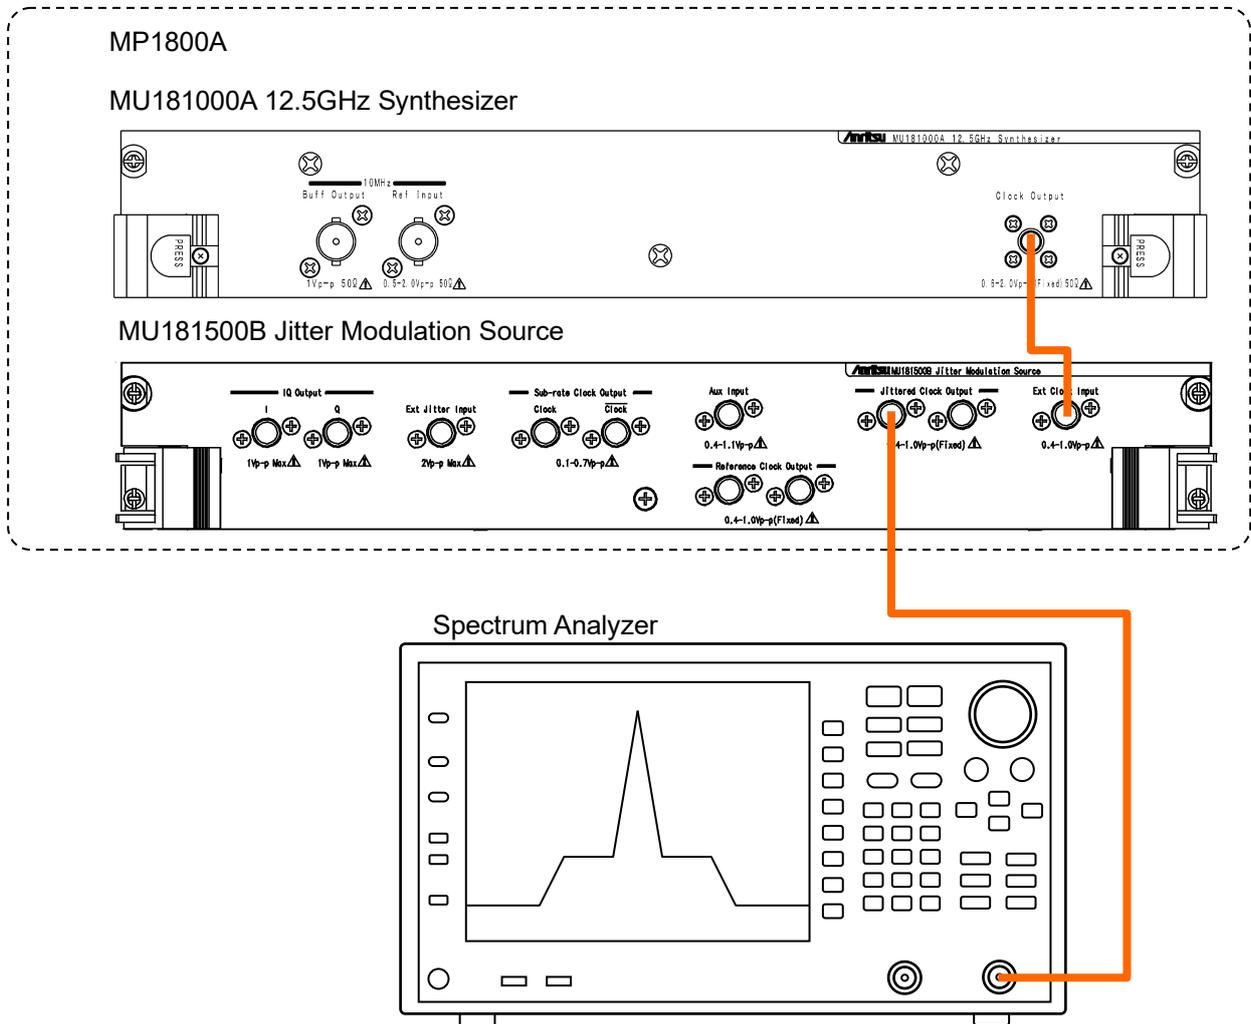

**Figure 6.3.2-2 RJ Measurement Setup**

1. Use a coaxial cable to connect the Jittered Clock Output connector and RF Input of the spectrum analyzer.
2. Set the main frame as follows:
 

Synthesizer:	4 000 000 kHz
RJ:	Amplitude 0.500 UIp-p, Filter User, HFP OFF, LPF 100 MHz
Pattern Generator:	Full rate (PPG)
3. Set the spectrum analyzer as follows:
 

RBW:	1 MHz
VBW:	1 kHz
Span:	100 MHz
4. Set the spectrum analyzer Center Frequency to 4050 MHz.
5. Measure the level  $L(f)$  at 1 MHz intervals from 4001 MHz to 4100 MHz.

6. Increase the spectrum analyzer Center Frequency in 100 MHz steps up to 5950 MHz and repeat the measurement in step 5 each time (2000 data measurements).
7. Calculate the integrated value of the spectrum analyzer SSB noise and find the RJ rms  $\sigma$  value as follows:

$$Lin(f) = 10^{\left(\frac{L(f)}{10}\right)} \text{ (mW)}$$

$$\sigma = \frac{1}{2\pi f_0} \sqrt{2 \times \sum_{f=4001}^{6000} Lin(f)} \text{ (UIrms)}$$

$f_0$ : 4 000 MHz

$Lin(f)$ : Linear value of frequency level f (MHz)

### 6.3.3 BUJ

Figure 6.3.3-1 shows the equipment setup when measuring BUJ.

## ⚠ CAUTION

When inputting a signal to the sampling oscilloscope input connectors, always use an attenuator to cut the level to less than the maximum level for the connector.

There is a risk of damage to the sampling oscilloscope if a signal exceeding the maximum level is input to the scope.

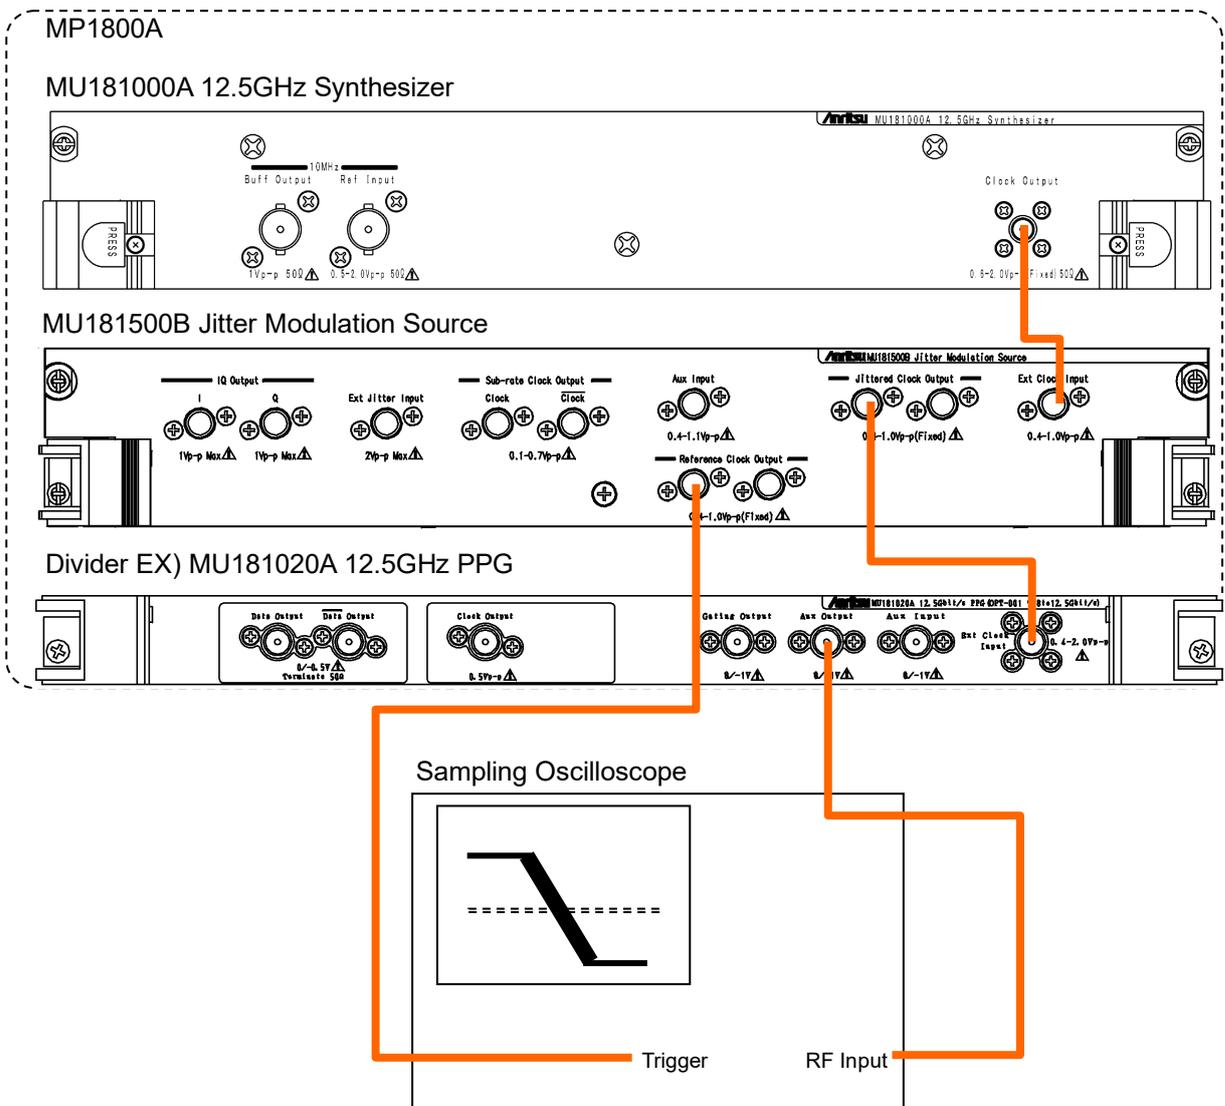


Figure 6.3.3-1 BUJ Measurement Setup

1. Use a coaxial cable to connect the Jittered Clock Output connector and Input connector of the Divider.  
Figure 6.3.3-1 shows the setup when using the MU181020A as the Divider.
2. Use a coaxial cable to connect the Output connector of the Divider and RF Input of the sampling oscilloscope.
3. Use a coaxial cable to Reference Clock Output connector and Trigger input of the sampling oscilloscope.
4. Set the main frame as follows:  
Synthesizer: 12 500 000 kHz  
BUJ: PRBS PRBS7, Amplitude 0.300 UIp-p,  
Bitrate 3.200000 GHz, LPF 300 MHz  
Pattern Generator: Full rate (PPG)
5. Set the sampling oscilloscope as follows:  
Amplitude: 150 mV/div  
Time: 10 ps/div  
Histogram Window: 10 mVp-p
6. Use the sampling oscilloscope histogram function to measure the jitter peak.
7. Jitter amplitude is found using the following equation:

$$jitter\_Amplitude = \frac{J_{pp}}{80} \text{ (UIp-p)}$$

$J_{pp}$ : Peak value of jitter (ps)

When the clock frequency is 12.5 GHz, 1 UI corresponds to 80 ps.

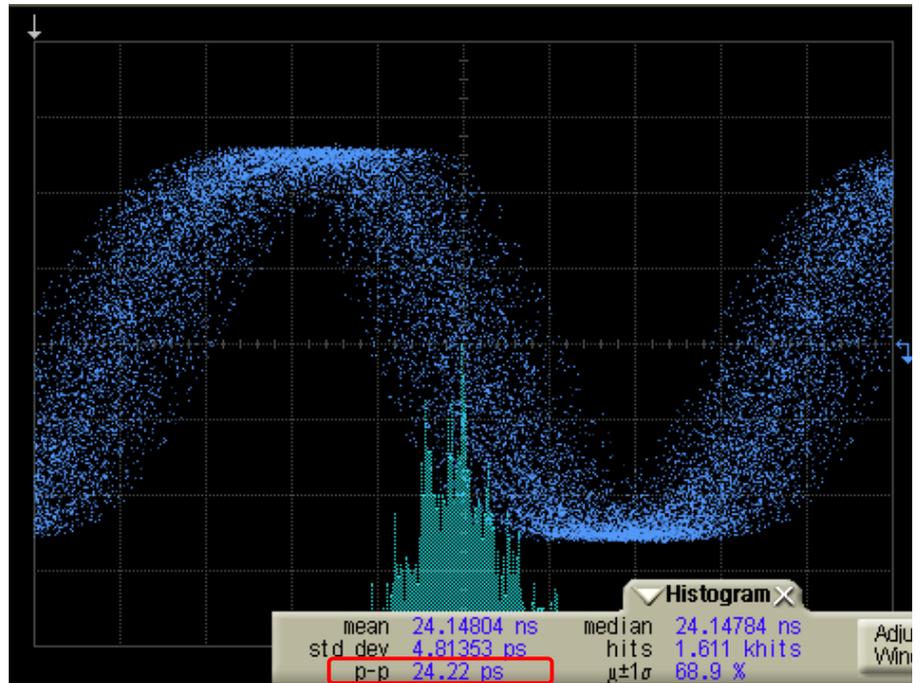


Figure 6.3.3-2 Jitter Measurement Example

# Chapter 7 Maintenance

---

This chapter describes the maintenance of the MU181500B.

7.1	Daily Maintenance .....	7-2
7.2	Storage Precautions.....	7-3
7.3	Transportation.....	7-4
7.4	Calibration .....	7-5
7.5	Disposal.....	7-6

## **7.1 Daily Maintenance**

- Wipe off any external stains with a cloth damped with diluted mild detergent.
- Vacuum away any accumulated dust or dirt with a vacuum cleaner.
- Tighten any loose parts fixed with screws, using the specified tools.

## 7.2 Storage Precautions

Wipe off dust, fingerprint marks, stains, spots, etc. from the surface of the MU181500B before storing it. Avoid storing the MU181500B in these places.

- In direct sunlight
- Dusty places
- Damp places where condensation may occur on the equipment's surface
- Places where there the MU181500B may be corroded by active gases
- Places where the equipment may be oxidized
- Where there is strong vibration
- Under either of the following temperature and humidity conditions:
  - Temperature range of  $-20^{\circ}\text{C}$  or  $+60^{\circ}\text{C}$
  - Humidity range of  $+85\%$

### Recommended storage conditions

It is recommended that the MU181500B be stored in a place that meets the ambient conditions suggested above, plus the following conditions, if it is not to be used for a long period of time:

- Temperature: 5 to  $30^{\circ}\text{C}$
- Humidity: 40 to  $75\%$
- Little temperature and humidity fluctuations within one day

## 7.3 Transportation

Use the original packing materials, if possible, when packing the MU181500B for transport. If you do not have the original packing materials, pack the MU181500B according to the following procedure. When handling the MU181500B, always wear clean gloves, and handle it gently so as not to damage it.

<Procedure>

1. Use a dry cloth to wipe off any stain or dust on the exterior of the MU181500B.
2. Check for loose or missing screws.
3. Provide protection for structural protrusions and parts that can easily be deformed, and wrap the MU181500B with a sheet of polyethylene. Finally, cover with moisture-proof paper.
4. Place the wrapped MU181500B into a cardboard box, and tape the flaps with adhesive tape. Furthermore, store it in a wooden box as required by the transportation distance or method.
5. During transportation, place it under an environment that meets the conditions described in 7.2 “Storage Precautions”.

---

## 7.4 Calibration

Regular maintenance such as periodic inspections and calibration is essential for the Signal Quality Analyzer Series for long-term stable performance. Regular inspection and calibration are recommended for using the Signal Quality Analyzer Series in its prime condition at all times. The recommended calibration cycle after delivery of the Signal Quality Analyzer Series is twelve months.

If you require support after delivery, contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the CD version.

We may not provide calibration or repair if any of the following cases apply.

- Five or more years have elapsed after production and parts for the instrument are difficult to obtain, or it is determined that reliability cannot be maintained after calibration/repair due to significant wear.
- Circuit changes, repair, or modifications are done without our approval.
- It is determined that the repair cost would be higher than the price of a new item.

## 7.5 Disposal

Confirm the notes described in the *Signal Quality Analyzer Series Installation Guide* and observe national and local regulations when disposing of the MU181500B.

## *Appendix A List of Default Settings*

**Table A-1 List of Default Settings for MU181500B**

Item	Default	Remarks
AUX Switch	Internal	
BUJ		
Amplitude	0	UIp-p
LPF	Off	
Output	Off	
PRBS	PRBS7	
Bitrate	12.500 000	Gbit/s
Data Pattern Generator*1	Half-rate (MUX)	
Ext. Jitter Input		
Output	Disable*2	
Reference Clock		
Divider	1/1	
RJ		
Amplitude	0	UIp-p
Amplitude HF	4.2*3 3.4*4	ps rms
Amplitude LF	8.0*3 4.2*4	ps rms
Filter	User	
HPF	Off	
LPF	Off	
Output	Off	
SJ1		
Amplitude	0	UIp-p
Frequency	10	Hz
Output	Off	
SJ2		
Amplitude	0	UIp-p
Frequency	10	Hz
Output	Off	
Built-in SJ2		
Amplitude	0	UIp-p
Frequency	33kHz	
Output	Off	

\*1: In MX190000A, it is displayed as Clock to PPG.  
When started as Expert BERT.

\*2: In MX190000A, it is displayed as Off.

\*3: When the Filter setting is PCIe (Data Clocked).

\*4: When the Filter setting is PCIe (Common Ref. Clocked).

**Table A-1 List of Default Settings for MU181500B (Cont'd)**

<b>Item</b>	<b>Default</b>	<b>Remarks</b>
SSC Output	Off	
SSC Triangular Profile Deviation Frequency Type	0 33 000 Down	ppm Hz
SSC USB4 Profile Modulation Display Overshoot Peak Initial Frequency St1 Dev. St2 Dev. Min. Deviation Deviation dt1 dt2 dt3 Frequency	Periodic Burst Image 1 600 300 1 400 2 200 -5 300 5 600 0.500 0.200 0.800 32 000	ppm ppm ppm ppm ppm ppm μs μs μs Hz

**Table A-1 List of Default Settings for MU181500B (Cont'd)**

Item	Default	Remarks
SSC Variable Profile		
Modulation	Periodic Burst	
Display	List	
Frequency	32 000	Hz
Initial Frequency	300	ppm
Min. Deviation	-5 300	ppm
Deviation	5 600	ppm
dt1 Shape	Sinusoidal	
dt1 Deviation	1 600	ppm
dt1 Time	0.500	μs
dt2 Shape	Linear	
dt2 Deviation	-1 400	ppm
dt2 Time	0.200	μs
dt3 Shape	Linear	
dt3 Deviation	-800	ppm
dt3 Time	0.800	μs
Sub Rate Clock		
Amplitude	0.7	Vp-p
Divider	1/8	
Synthesizer*5		
Center Frequency	12 500 000	kHz
Clock Source	External	
Offset	0	ppm
Reference Clock	Internal	

\*5: In MX190000A, it is displayed as Clock Source.





**Table B-1 SJ**

<b>Amplitude Settings(Ulp-p)</b>	<b>Measurement Value(Ulp-p)</b>	<b>Maximum Value(Ulp-p)</b>	<b>Measurement Value – Amplitude Settings(Ulp-p)</b>	<b>Minimum Value(Ulp-p)</b>

Find the maximum and minimum specification values from the following table.

<b>Amplitude Settings</b>	<b>Accuracy</b>
0.002 to 2.19 UIp-p	$\pm (\text{set amplitude} \times Q\%) \pm 0.03 \text{ UI}$
2.2 to 21.9 UIp-p	$\pm (\text{set amplitude} \times Q\%) \pm 0.2 \text{ UI}$
22 to 50 UIp-p	$\pm (\text{set amplitude} \times Q\%) \pm 2 \text{ UI}$

Values of Q is shown below

<b>Modulation Frequency</b>	<b>Q</b>
10 Hz to 500 kHz	7
500.1 kHz to 2 MHz	10
2.001 to 80 MHz	13
80.01 to 250 MHz	15

Table B-2 RJ

Amplitude Settings(Ulp-p)	Measurement Value(Ulp-p)	Maximum Value(Ulp-p)	Measurement Value – Amplitude Settings(Ulp-p)	Minimum Value(Ulp-p)

Find the maximum and minimum specification values from the following equations.

Jitter clock output frequency  $\geq 4$  GHz:  $\pm(\text{Setting amplitude} \times 15\%) \pm 4.9$  ps

Jitter clock output frequency  $< 4$  GHz:  $\pm(\text{Setting amplitude} \times 15\%) \pm 7$  ps

**Table B-3 BUJ**

<b>Amplitude Settings(Ulp-p)</b>	<b>Measurement Value(Ulp-p)</b>	<b>Maximum Value(Ulp-p)</b>	<b>Measurement Value – Amplitude Settings(Ulp-p)</b>	<b>Minimum Value(Ulp-p)</b>

Find the maximum and minimum specification values from the following equations.

Jitter clock output frequency  $\geq 4$  GHz:  $\pm(\text{Setting amplitude} \times 15\%) \pm 4.9$  ps

Jitter clock output frequency  $< 4$  GHz:  $\pm(\text{Setting amplitude} \times 15\%) \pm 7$  ps

## Appendix C Bibliography

---

- (1) IEEE 802.3 *Local and metropolitan area networks— Specific requirements*  
*Part 3: Carrier sense multiple access with Collision Detection (CSMA/CD) Access Method and Physical Layer Specifications*
- (2) ITU-T G.825 *The control of jitter and wander within digital networks which are based on the synchronous digital hierarchy (SDH)*
- (3) ITU-T G.8251 *The control of jitter and wander within the optical transport network (OTN)*
- (4) ITU-T O.172 *Jitter and wander measuring equipment for digital systems which are based on the synchronous digital hierarchy (SDH)*
- (5) ITU-T O.173 *Jitter measuring equipment for digital systems which are based on the Optical Transport Network (OTN)*
- (6) Anritsu Corporation *Best Practical Jitter Tolerance Testing with MP1800A*  
<https://www.anritsu.com/en-US/test-measurement/support/downloads/application-notes/dwl010885>
- (7) Anritsu Corporation *Best Practical Jitter Tolerance Testing with MP1900A*  
<https://www.anritsu.com/en-US/test-measurement/support/downloads/application-notes/dwl19236>
- (8) Kuo, A. Farahmand, T. Ou, N. Tabatabaei, S. Ivanov, A *Jitter models and measurement methods for high-speed serial interconnects* Test Conference, 2004. Proceedings. ITC 2004. International



## Appendix D Connection Examples for Jitter Measurement

Appendix B describes recommended examples of how to connect MU183020A, MU183040A/B, MU181500B, MP1825B, MP1861A and MP1862A by using applicable coaxial cables. When measurement is performed with jitter added to clock signals by using MU181500B, performance of each instrument is ensured by connecting as described below.

D.1	Jitter-PPG Connection .....	D-2
D.2	Jitter-PPG-ED Connection .....	D-3
D.3	Jitter-PPG-Emphasis Connection .....	D-5
D.4	Jitter-PPG-Emphasis-ED Connection .....	D-7
D.5	Jitter-2ch PPG-Two Emphasis Units Connection .....	D-10
D.6	Jitter-2ch PPG-Two Emphasis Units-ED Connection .....	D-13
D.7	Jitter-64G MUX-64G DEMUX Connection .....	D-15

## D.1 Jitter-PPG Connection

[Equipment configuration]

MU183020A

MU181500B

DUT

[How to connect instruments, Cable length requirements]

1. Connect an MU181000A/B and MU181500B's Ext. Clock Input connector. The cable length is not especially specified.
2. Connect MU181500B's Jittered Clock Output connector and MU183020A's Ext. Clock Input connector. The cable length is not especially specified.
- 3, 4. Use a J1551A coaxial skew match cable (applicable part, pair cable, 0.8 m) to connect MU183020A's Data Output and XData Output connectors to a DUT.

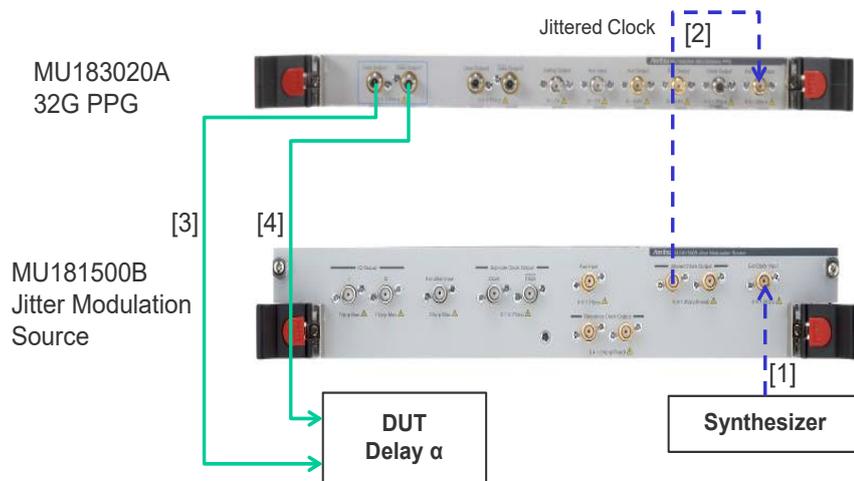


Figure D.1-1 Jitter-PPG Connection Example

## D.2 Jitter-PPG-ED Connection

[Equipment configuration]

MU183020A

MU183040B

MU181500B

DUT

[How to connect instruments, Cable length requirements]

1. Connect an MU181000A/B and MU181500B's Ext. Clock Input connector. The cable length is not especially specified.
2. Connect MU181500B's Jittered Clock Output connector and MU183020A's Ext. Clock Input connector. The cable length is not especially specified.
- 3, 4. Use a J1551A coaxial skew match cable (Pair cable, 0.8 m) to connect MU183020A's Data Output and XData Output connectors to a DUT.
- 5, 6. Use a J1551A coaxial skew match cable (Pair cable, 0.8 m) to connect MU183040B's Data Input and XData Input connectors to a DUT.
7. Anritsu recommends use of the Clock Recovery Option (MU183040B-022/023) to supply clock signals to ED. If the option is used, you don't need to connect Cable [7]. If the option is not used, connect the MU183020A's Clock Output connector and MU183040B's Ext. Clock Input connector with a cable having a length equivalent to the sum of the following:
  - Length of the cable that connects MU183020A's Data Output connector and MU183040B's Data Input connector.
  - Length of the cable that has a length corresponding to a DUT delay amount.In the following example, a cable having a length of  $(1.6 \text{ m} + \alpha)$  is used to connect the connectors:

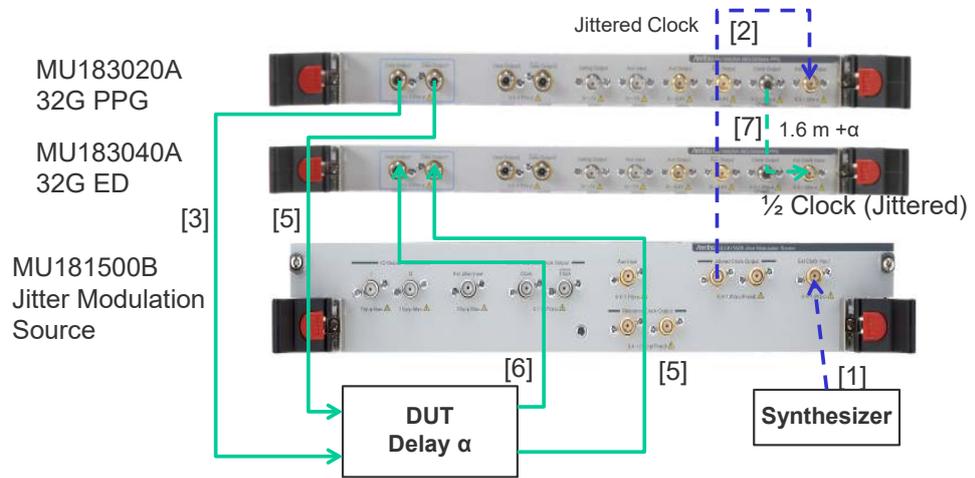


Figure D.2-1 Jitter-PPG-ED Connection Example

## D.3 Jitter-PPG-Emphasis Connection

[Equipment configuration]

MU183020A

MU181500B

MP1825B

DUT

J1615A Coaxial Cable Set (Jitter-PPG-Emphasis)

[How to connect instruments, Cable length requirements]

1. Connect an MU181000A/B and MU181500B's Ext. Clock Input connector. The cable length is not especially specified.
2. Connect MU181500B's Jittered Clock Output connector and MU183020A's Ext. Clock Input connector. The cable length is not especially specified.
3. Use a coaxial cable (applicable part, 0.8 m, K connector) to connect MU183020A's Data Output connector and MP1825B's Data Input connector.
4. Use a coaxial cable (applicable part, 1.3 m, K connector) to connect MU183020A's Clock Output connector and MP1825B's Clock Input connector. Then, on the **Misc2** tab of MU183020A, select **Full Rate Clock** in the **Output Clock Rate** box. (Figure D.3-2)
- 5, 6. Use a J1551A coaxial skew match cable (applicable part, pair cable, 0.8 m) to connect MP1825B's Data Output and XData Output connectors to a DUT.

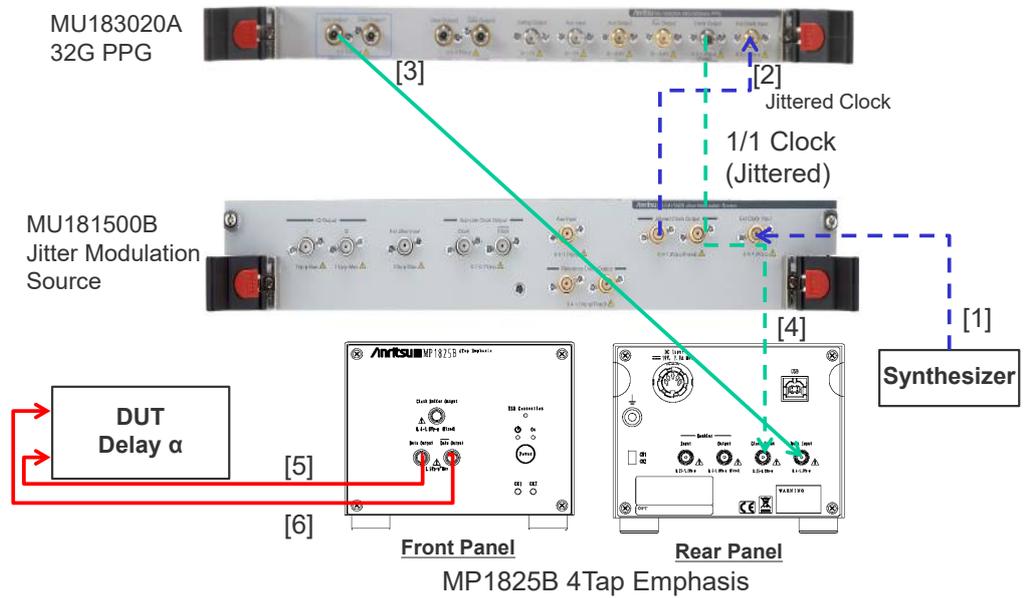


Figure D.3-1 Jitter-PPG-Emphasis Connection Example

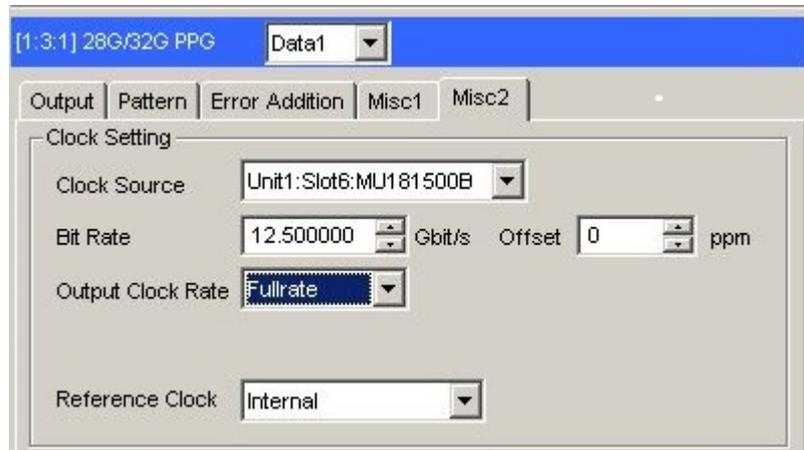


Figure D.3-2 Output Clock Rate Setting on the Misc2 Tab of MU183020A

## D.4 Jitter-PPG-Emphasis-ED Connection

[Equipment configuration]

MU183020A

MU183040B

MU181500B

MP1825B

DUT

J1615A Coaxial Cable Set (Jitter-PPG-Emphasis)

[How to connect instruments, Cable length requirements]

1. Connect an MU181000A/B and MU181500B's Ext. Clock Input connector. The cable length is not especially specified.
2. Connect MU181500B's Jittered Clock Output connector and MU183020A's Ext. Clock Input connector. The cable length is not especially specified.
3. Use a coaxial cable (applicable part, 0.8 m, K connector) to connect MU183020A's Data Output connector and MP1825B's Data Input connector.
4. Use a coaxial cable (applicable part, 1.3 m, K connector) to connect MU183020A's Clock Output connector and MP1825B's Clock Input connector. Then, on the **Misc2** tab of MU183020A, select **Full Rate Clock** in the **Output Clock Rate** box. (Figure D.3-2)
- 5, 6. Use a J1551A coaxial skew match cable (applicable part, pair cable, 0.8 m) to connect MP1825B's Data Output and XData Output connectors to a DUT.
- 7, 8. Use a J1551A coaxial skew match cable (applicable part, pair cable, 0.8 m) to connect a DUT with MU183040B's Data Input and XData Input connectors.
- 9,10 Anritsu recommends use of the Clock Recovery Option to supply clock signals to ED. If the option is used, you don't need to connect Cables [9] and [10]. If the option is not used, connect MU183020A's AUX Output connector and MP1825B's Doubler Input connector, and MP1825B's Doubler Output connector and MU183040B's Ext. Clock Input connector respectively with each cable having a length equivalent to the sum of the following:
  - Length of the cable that connects MP1825B's Data Output connector and MU183040B's Data Input connector.
  - (Length of the cable that has a length corresponding to DUT delay amount) – 0.5 m.

In the following example, a cable having a length of (1.6 m – 0.5 m +  $\alpha$ ) is used. Then, on the **Misc1** tab of MU183020A, set the clock rate to **1/4 Clock** in the **AUX Output** area. (Figure D.4-2.)

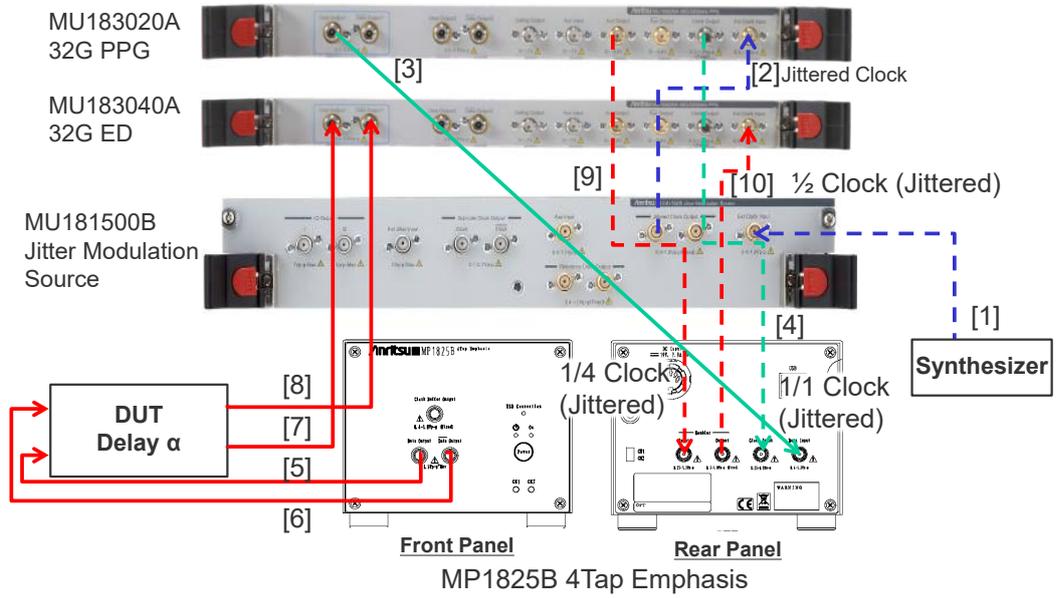


Figure D.4-1 Jitter-PPG-Emphasis-ED Connection Example

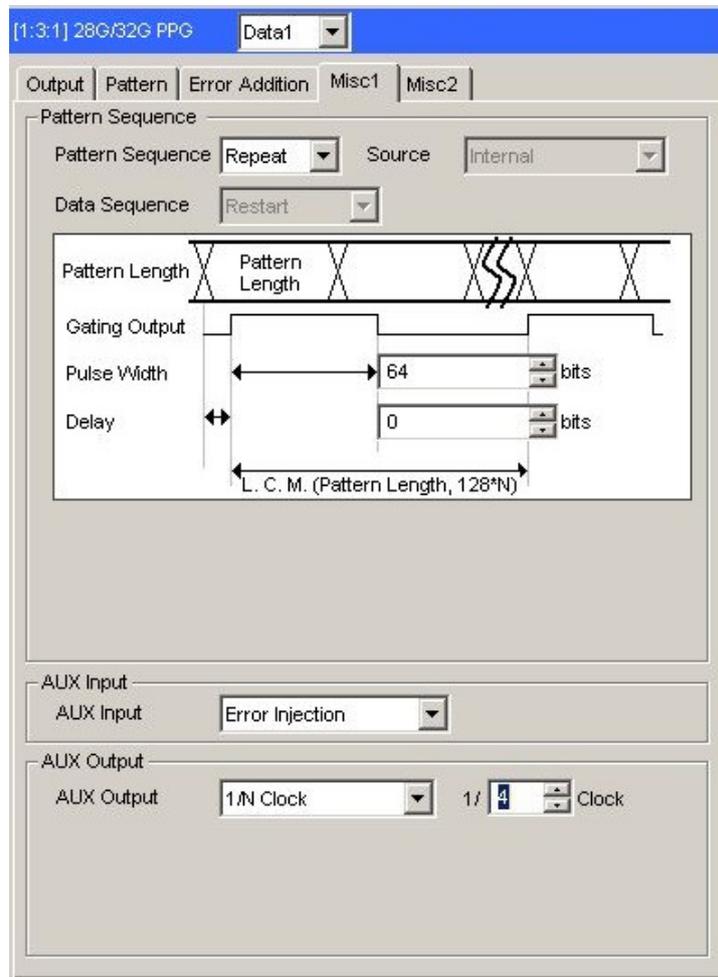


Figure D.4-2 AUX Output Setting on the Misc1 Tab of MU183020A

## D.5 Jitter-2ch PPG-Two Emphasis Units Connection

[Equipment configuration]

MU183020A-22/23 2ch PPG

MU181500B

MP1825B-02 (Two units)

DUT

J1618A Coaxial Cable Set (Jitter-2chPPG-Emphasis)

[How to connect instruments, Cable length requirements]

1. Connect an MU181000A/B and MU181500B's Ext. Clock Input connector. The cable length is not especially specified.
2. Use a coaxial cable (applicable part, 0.9 m, K connector) to connect MU181500B's Jittered Clock Output connector and MU183020A's Ext. Clock Input connector.
- 3, 4. Use coaxial cables (applicable part, 0.8 m, K connector) to connect MU183020A's Data Output1 and Data Output2 connectors respectively with the Data Input connector of each MP1825B No.1 and 2. Then, on the **Misc2** tab of MU183020A, select **Half Rate Clock** in the **Output Clock Rate** box. (Figure D.5-2)
5. Use a coaxial cable (applicable part, 0.3 m, APC 3.5 mm connector) to connect MU181500B's Jittered Clock Output connector and AUX Input connector.
- 6, 7. Use coaxial cables (applicable part, 0.8 m, APC 3.5 mm connector) to connect MU181500B's Reference Clock Output connectors respectively with the Doubler Input connector of each MP1825B No.1 and 2. Then, connect MP1825B's Doubler Output and Clock Input connectors with the semi-rigid coaxial cable that comes with MP1825B. After that switch MU181500B's AUX clock input signal to **AUX Input** and set the **Reference Clock** to **1/1**. (Figure D.5-3)
- 8, 9. Use J1439A coaxial cables (applicable part, 0.8 m) to connect the **Data Output** connector of each MP1825B No.1 and 2 to a DUT.

D.5 Jitter-2ch PPG-Two Emphasis Units Connection

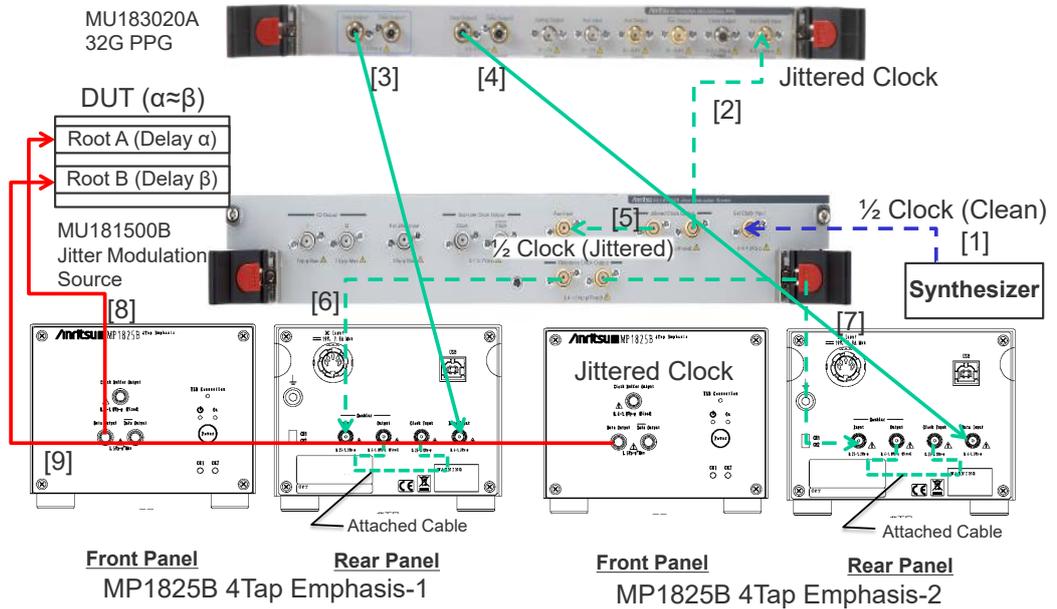


Figure D.5-1 Jitter-2ch PPG-Two Emphasis Units Connection Example


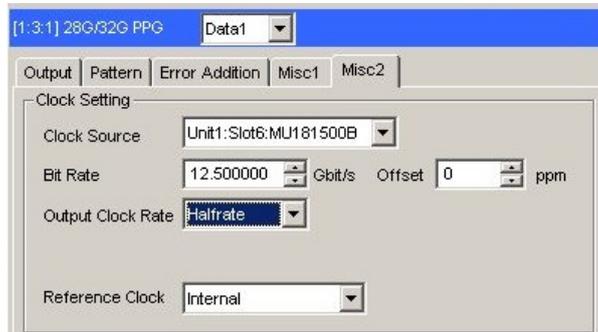


Figure D.5-2 Output Clock Rate Setting on the Misc2 Tab of MU183020A

*Appendix D Connection Examples for Jitter Measurement*

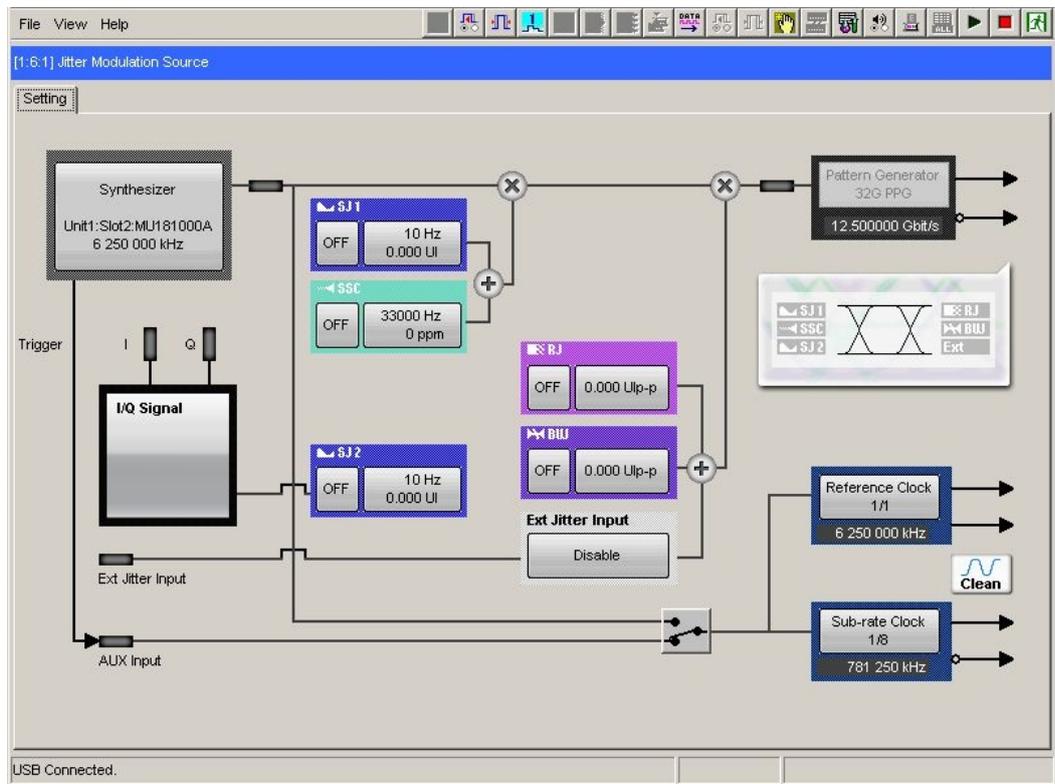

**Figure D.5-3 Setting MU181500B's AUX and Reference Clock**

## D.6 Jitter-2ch PPG-Two Emphasis Units-ED Connection

[Equipment configuration]

MU183020A-22/23 2ch PPG

MU181500B

MP1825B-02 (Two units)

MU183040B-20 2ch ED

DUT


J1618A Coaxial Cable Set (Jitter-2chPPG-Emphasis)

[How to connect instruments, Cable length requirements]

1. Connect an MU181000A/B and MU181500B's **Ext. Clock Input** connector. The cable length is not especially specified.
2. Use a coaxial cable (applicable part, 0.9 m, K connector) to connect MU181500B's Jittered Clock Output connector and MU183020A's Ext. Clock Input connector.
- 3, 4. Use coaxial cables (applicable part, 0.8 m, K connector) to connect MU183020A's **Data Output1** and **Data Output2** connectors respectively with the **Data Input** connector of each MP1825B No.1 and 2. Then, on the **Misc2** tab of MU183020A, select **Half Rate Clock** in the **Output Clock Rate** box. (Figure D.5-2)
5. Use a coaxial cable (applicable part, 0.3 m, APC 3.5 mm connector) to connect MU181500B's **Jittered Clock Output** connector and **AUX Input** connector.
- 6, 7. Use coaxial cables (applicable part, 0.8 m, APC 3.5 mm connector) to connect MU181500B's Reference Clock Output connectors respectively with the Doubler Input connector of each MP1825B No.1 and 2. Then, connect MP1825B's Doubler Output and Clock Input connectors with the semi-rigid coaxial cable that comes with MP1825B. After that switch MU181500B's AUX clock input signal to **AUX Input** and set the **Reference Clock** to 1/1. (Figure D.5-3)
- 8, 9. Use J1439A coaxial cables (applicable part, 0.8 m) to connect the Data Output connector of each MP1825B No.1 and 2 to a DUT.
- 10, 11. Use J1439A coaxial cables (applicable part, 0.8 m) to connect a DUT with MU183040B's Data Input1 and Data Input2 connectors.
12. Anritsu recommends use of the Clock Recovery Option to supply clock signals to ED. If the option is used, you don't need to connect Cable [12]. If the option is not used, connect the MP1825B's Clock Buffer Output connector and MU183040B's Ext. Clock Input connector with a cable having a length equivalent to the sum of the following:
  - Length of the cable that connects MP1825B's Data Output connector and MU183040B's Data Input connector.

*Appendix D Connection Examples for Jitter Measurement*

- (Length of the cable that has a length corresponding to DUT delay amount ( $\alpha$  to  $\beta$ )) + 0.5 m.  
In the following example, a cable having a length of (1.6 m + 0.5 m +  $\alpha$ ) is used.

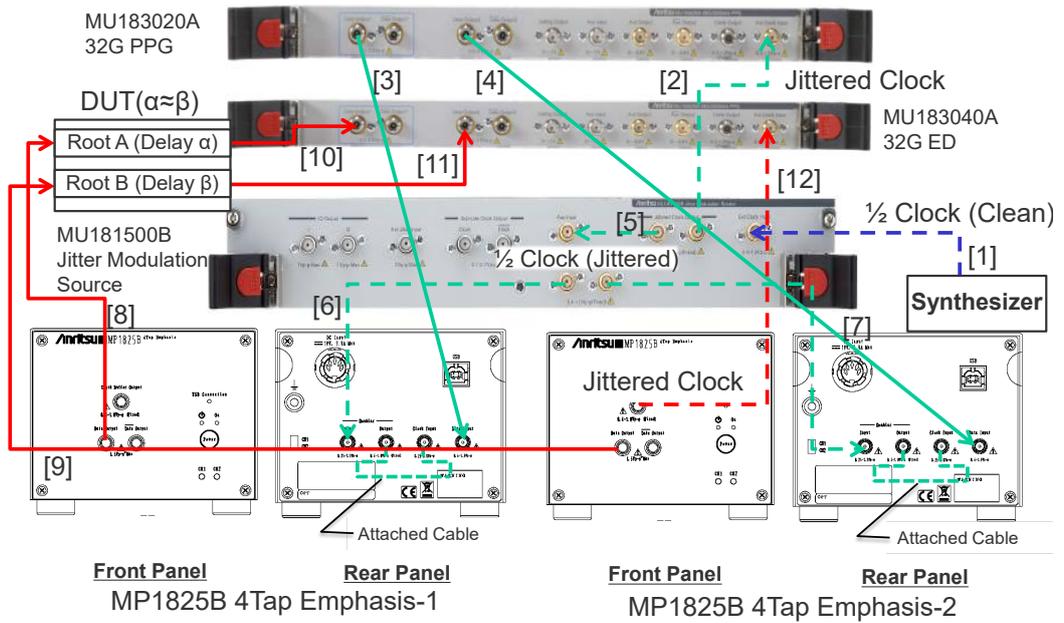

**Figure D.6-1 Jitter-2ch PPG-Two Emphasis Units-ED Connection Example**

## D.7 Jitter-64G MUX-64G DEMUX Connection

[Equipment configuration]

MP1861A

MP1862A

MP1800A

MU183020A-x22/x23 + x31

MU183040B

MU181500B

MU181000A

DUT

J1656A Coaxial Cable Set (A two-cable set for jitter tolerance measurement)

[How to connect instruments, Cable length requirements]

1. Connect the Clock Output connector of MU181000A and the Ext. Clock Input connector of MU181500B by using the J1624A coaxial cable that comes with MU181000A.
2. Connect the Jittered Clock Output connector of MU181500B and the Ext. Clock Input connector of MU183020A by using the J1624A coaxial cable that comes with MU181500B.
3. Connect the Data Input1/2 connectors on the rear panel of MP1861A and the Data Output1/2 connectors of MU183020A respectively by using coaxial cables. Use the J1658A coaxial skew match pair cable that comes with MP1861A, or cables that are of the same length with each other.
4. Connect the Clock Output connector of MU183020A and the Ext. Clock Input connector on the rear panel of MP1861A by using the J1652A coaxial cable that comes with MP1861A.
5. Connect the Delayed Clock Output and MUX Clock Input connectors on the rear panel of MP1861A by using the J1654A cable that comes with MP1861A.
6. Connect the Data Output (XData Output) connector to the DUT by using the J1656A coaxial cable that can be purchased separately.
7. Connect the Clock Output connector on the front panel of MP1861A and the Ext. Clock Input connector on the front panel of MP1862A by using a coaxial cable.

The formula to obtain the length of the coaxial cable is:

(Length of cables between the Data Output connector of MP1861A and the Data Input connector of MP1862A) + 0.5 m +  $\alpha$  (Equivalent to the delay length of the DUT)

In this case, use the cable with a length of (1.6 m + 0.5 m + a).

8. Connect the DUT and the Data Input (XData Input) connector on the front panel of MP1862A by using the J1656A coaxial cable set that can be purchased separately.
9. Connect the Delayed Clock Output and DEMUX Clock Input connectors on the rear panel of MP1862A by using the J1654A cable that comes with MP1862A.
10. Connect the Data Output1/2 connectors on the rear panel of MP1862A and the Data Input1/2 connectors of MU183040B respectively by using coaxial cables. Use the J1657A coaxial cable that comes with MP1862A, or cables that are of the same length with each other.
11. Connect the 1/2 Clock Output connector on the rear panel of MP1862A and the Ext. Clock Input connector of MU183040B by using the J1668A coaxial cable that comes with MP1862A.

D.7 Jitter-64G MUX-64G DEMUX Connection

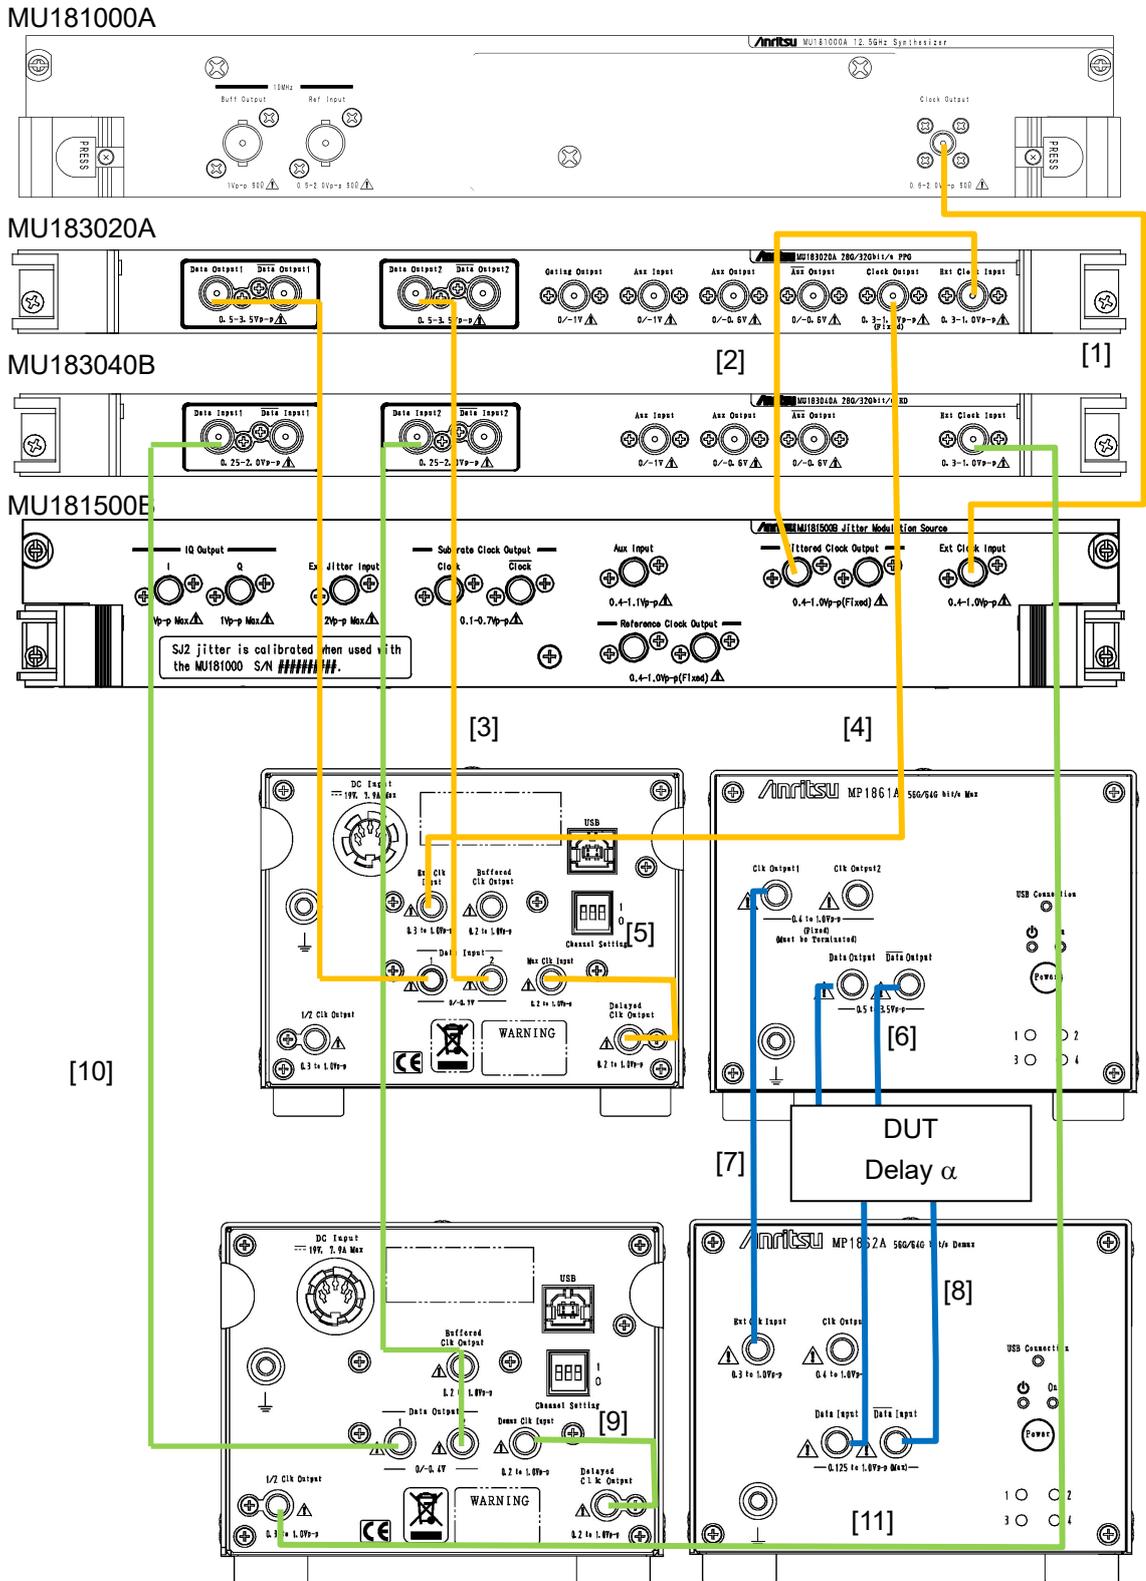


Figure D.7-1 Jitter-64G MUX-64G DEMUX Connection Example



References are to page numbers.

## A

About This Manual..... I  
Anritsu Warranty .....v  
Aux Input ..... 2-3

## B

Built-in SJ2 .....3-25  
BUJ.....3-21

## C

Calibrated Module S/N.....3-10  
Calibration..... 7-5  
Center Frequency .....3-10  
Clock Source .....3-10

## D

Data Output Setting.....3-32  
Data Pattern Generator .....3-32  
Disposal ..... 7-6  
Divider.....3-35

## E

Equipment Certificate.....v  
Ext Clock Input ..... 2-3  
Ext Jitter Input ..... 2-3  
external stains..... 7-2

## F

features..... 1-2  
Frequency Deviation Graph .....3-28  
Function setting selection tab ..... 3-3

## I

Input Frequency .....3-10  
Installation to Signal Quality Analyzer ..... 2-2  
IQ Output ..... 2-3

## J

Jittered Clock Output..... 2-3

## L

List of Default Settings .....A-1

## M

Menu..... 3-4  
Menu bar ..... 3-3  
Module function buttons..... 3-3

## O

Offset ..... 3-10  
Open ..... 3-38  
Operation screen..... 3-3, 3-4  
optional accessories ..... 1-4  
Overall Composition of Screen ..... 3-3

## P

Performance Test..... 6-2  
Preventing Damage ..... 2-5

## R

Recommended storage conditions..... 7-3  
Reference Clock .....3-10, 3-35  
Reference Clock Output..... 2-3  
RJ..... 3-20

## S

Save ..... 3-38  
SJ..... 3-15  
SJ2..... 3-22  
Specifications..... 1-5  
SSC ..... 3-17  
Standard configuration..... 1-5  
Standard Configuration..... 1-3  
Storage Precautions..... 7-3  
Sub rate Clock Output..... 2-3  
Sub-rate Clock ..... 3-35  
Synthesizer ..... 3-9

## T

Transportation..... 7-4  
Type ..... 3-18

## V

Variable SSC Profile..... 3-26

