

**MS2830A/MS2840A  
Signal Analyzer  
Vector Signal Generator  
Operation Manual  
Remote Control**

**Fourth Edition**




- For safety and warning information, please read this manual before attempting to use the equipment.
- Additional safety and warning information is provided within the MS2830A Signal Analyzer Operation Manual (Mainframe Operation), MS2840A Signal Analyzer Operation Manual (Mainframe Operation) and the MS2830A/MS2840A Signal Analyzer Vector Signal Generator Option Operation Manual (Operation). Please also refer to these documents before using the equipment.
- Keep this manual with the equipment.

**ANRITSU CORPORATION**

# Safety Symbols

To prevent the risk of personal injury or loss related to equipment malfunction, Anritsu Corporation uses the following safety symbols to indicate safety-related information. Ensure that you clearly understand the meanings of the symbols BEFORE using the equipment. Some or all of the following symbols may be used on all Anritsu equipment. In addition, there may be other labels attached to products that are not shown in the diagrams in this manual.

## Symbols used in manual

-  **DANGER** This indicates a very dangerous procedure that could result in serious injury or death if not performed properly.
-  **WARNING** This indicates a hazardous procedure that could result in serious injury or death if not performed properly.
-  **CAUTION** This indicates a hazardous procedure or danger that could result in light-to-severe injury, or loss related to equipment malfunction, if proper precautions are not taken.

## Safety Symbols Used on Equipment and in Manual

The following safety symbols are used inside or on the equipment near operation locations to provide information about safety items and operation precautions. Ensure that you clearly understand the meanings of the symbols and take the necessary precautions BEFORE using the equipment.



This indicates a prohibited operation. The prohibited operation is indicated symbolically in or near the barred circle.



This indicates an obligatory safety precaution. The obligatory operation is indicated symbolically in or near the circle.



This indicates a warning or caution. The contents are indicated symbolically in or near the triangle.



This indicates a note. The contents are described in the box.



These indicate that the marked part should be recycled.

MS2830A/MS2840A

Signal Analyzer Vector Signal Generator  
Operation Manual Remote Control

15 December 2009 (First Edition)

13 May 2016 (Fourth Edition)

Copyright © 2009-2016, ANRITSU CORPORATION.

All rights reserved. No part of this manual may be reproduced without the prior written permission of the publisher.

The contents of this manual may be changed without prior notice.

Printed in Japan

## Notes On Export Management

---

This product and its manuals may require an Export License/Approval by the Government of the product's country of origin for re-export from your country.

Before re-exporting the product or manuals, please contact us to confirm whether they are export-controlled items or not.


When you dispose of export-controlled items, the products/manuals need to be broken/shredded so as not to be unlawfully used for military purpose.



# About This Manual

## ■ Composition of Operation Manuals

The operation manuals for the MS2830A/MS284A Signal Analyzer are comprised as shown in the figure below.

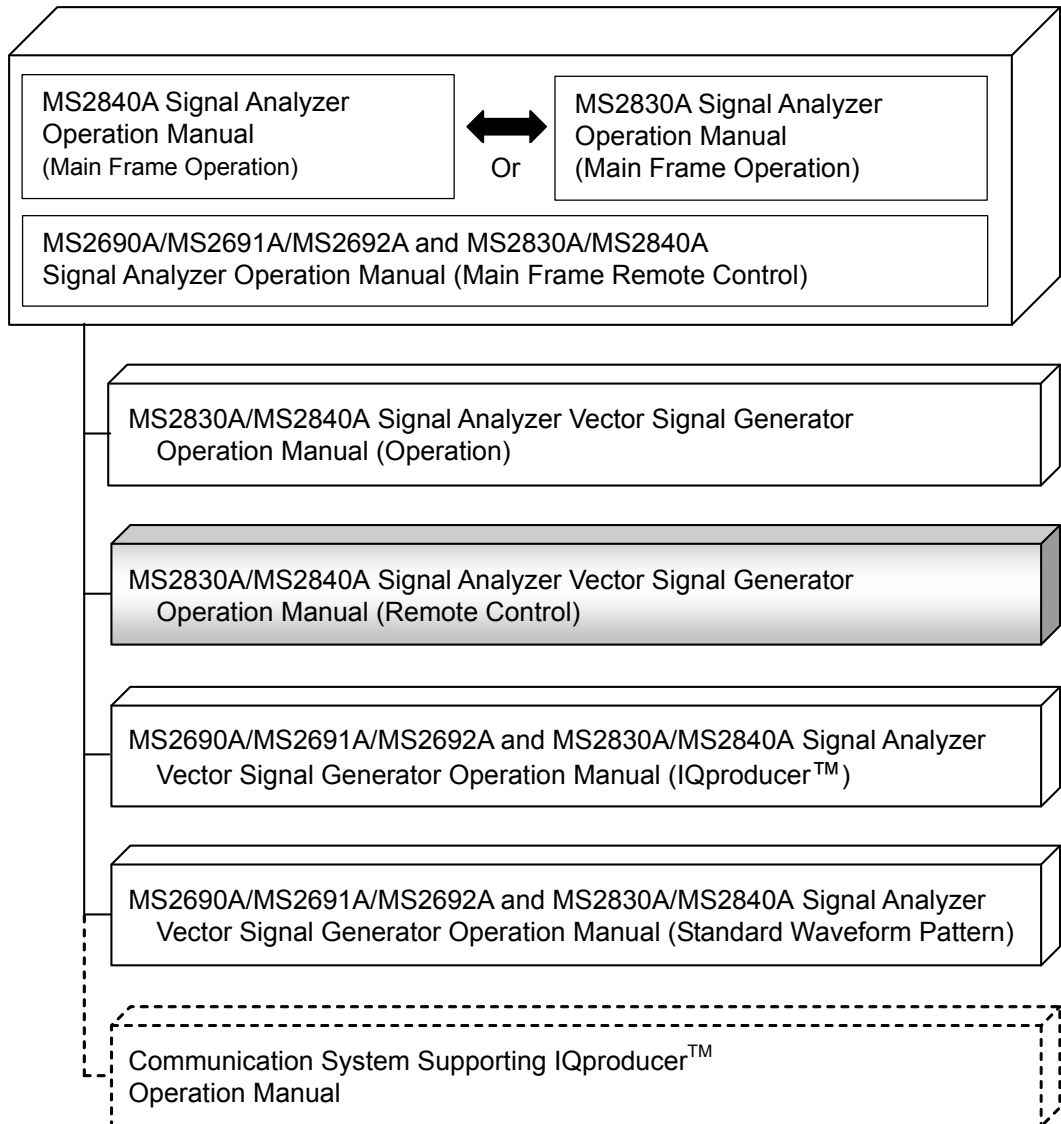

- **Signal Analyzer Operation Manual (Mainframe Operation)**
- **Signal Analyzer Operation Manual (Mainframe Remote Control)**

These manuals describe basic operating methods, maintenance procedures, common functions, and common remote control of the signal analyzer mainframe.

- **Vector Signal Generator Operation Manual (Operation)**

This manual describes functions, operating methods, and so on of the vector signal generator (option).

- **Vector Signal Generator Operation Manual (Remote Control) (This manual)**

This manual describes remote control of the vector signal generator (option).

- **Vector Signal Generator Operation Manual (IQproducer™)**

This manual describes functions, operating methods, and so on of the IQproducer, which is application software used with the vector signal generator (option).

- **Vector Signal Generator Operation Manual (Standard Waveform Pattern)**

This manual describes details on the standard waveform pattern data used with the vector signal generator (option).

# Table of Contents

|   |            |
|---|------------|
| <b>About This Manual.....</b>                                     | <b>I</b>   |
| <b>Chapter 1 Overview.....</b>                                    | <b>1-1</b> |
| 1.1 Overview .....  | 1-2        |
| <b>Chapter 2 SCPI Device Message.....</b>                         | <b>2-1</b> |
| 2.1 Setting Frequency.....  | 2-3        |
| 2.2 Setting Level .....   | 2-9        |
| 2.3 Controlling Waveform Patterns in Waveform Memory..            | 2-26       |
| 2.4 Controlling Waveform Patterns in HDD/SSD.....                 | 2-36       |
| 2.5 Modulation and AWGN Settings .....                            | 2-44       |
| 2.6 External In/Output Settings.....                              | 2-52       |
| 2.7 External output signal settings.....                          | 2-66       |
| 2.8 Setting Trigger to Be Output to SG Marker<br>of SA/SPA .....  | 2-77       |
| 2.9 Display Settings .....  | 2-79       |
| 2.10 Other Settings .....   | 2-81       |
| <b>Chapter 3 Native Device Message List.....</b>                  | <b>3-1</b> |
| 3.1 IEEE488.2 Common Device Messages.....                         | 3-2        |
| 3.2 Application Common Device Messages .....                      | 3-4        |
| 3.3 Frequency Settings.....                                       | 3-7        |
| 3.4 Level Settings .....  | 3-8        |
| 3.5 Controlling Waveform Patterns in Waveform<br>Memory .....     | 3-10       |
| 3.6 Controlling Waveform Patterns in HDD/SSD.....                 | 3-12       |
| 3.7 Modulation and AWGN Settings .....                            | 3-13       |
| 3.8 External Input Signal Settings.....                           | 3-14       |
| 3.9 External Output Signal Settings.....                          | 3-16       |
| 3.10 Setting Trigger to Be Output to SG Marker of<br>SA/SPA ..... | 3-17       |
| 3.11 Display Settings .....                                       | 3-18       |
| <b>Chapter 4 Native Device Message Details</b>                    | <b>4-1</b> |

1

2

3

4





# Chapter 1 Overview

---

This chapter provides an overview of the remote control of the Spectrum Analyzer function (hereinafter, referred to as “this application”).

|     |                |     |
|-----|----------------|-----|
| 1.1 | Overview ..... | 1-2 |
|-----|----------------|-----|

## 1.1 Overview

Automatic measurement can be performed by using this instrument in connection with an external controller (PC). This instrument is standardly equipped with GPIB, Ethernet, and USB interfaces. You can also select a remote control command from the SCPI mode, which is a command format defined by the SCPI Consortium, and Native mode, which is our unique format.

See the *MS2690A/MS2691A/MS2692A and MS2830A/MS2840A Signal Analyzer Operation Manual (Mainframe Remote Control)* for how to switch the language mode.

You can use the Native mode by converting SCPI commands into Native ones. See the *MS2690A/MS2691A/MS2692A and MS2830A/MS2840A Signal Analyzer Operation Manual (Mainframe Remote Control)* for details.

## Chapter 2 SCPI Device Message

This chapter describes the detailed specifications of SCPI remote control commands for executing the functions of this application. The device messages are listed according to function. Refer to the *MS2690A/MS2691A/MS2692A and MS2830A/MS2840A Signal Analyzer Operation Manual (Mainframe Remote Control)* for detailed specifications off the IEEE488.2 common device messages and application common device messages.

|        |   |      |
|--------|---|------|
| 2.1    | Setting Frequency.....  | 2-3  |
| 2.1.1  | Frequency.....  | 2-4  |
| 2.1.2  | Frequency Step Value.....                                     | 2-6  |
| 2.1.3  | RF Spectrum.....  | 2-8  |
| 2.2    | Setting Level.....  | 2-9  |
| 2.2.1  | Output Level Unit.....  | 2-10 |
| 2.2.2  | Volt Unit Display.....  | 2-11 |
| 2.2.3  | RF Output.....  | 2-12 |
| 2.2.4  | Unit Power.....   | 2-13 |
| 2.2.5  | SG Level Calibration.....                                     | 2-14 |
| 2.2.6  | Relative Level Value.....                                     | 2-15 |
| 2.2.7  | Relative Level.....   | 2-17 |
| 2.2.8  | Reference of Relative Level.....                              | 2-18 |
| 2.2.9  | Level Status List.....  | 2-19 |
| 2.2.10 | Level Offset Value.....                                       | 2-20 |
| 2.2.11 | Level Offset.....   | 2-21 |
| 2.2.12 | Output Level Step Value.....                                  | 2-22 |
| 2.2.13 | Output Level.....   | 2-23 |
| 2.3    | Controlling Waveform Patterns in Waveform<br>Memory.....      | 2-26 |
| 2.3.1  | Delete Pattern file on Wave Memory.....                       | 2-27 |
| 2.3.2  | Delete All Pattern files on Wave Memory.....                  | 2-28 |
| 2.3.3  | List of Loaded Pattern Files.....                             | 2-29 |
| 2.3.4  | Number of loaded pattern files.....                           | 2-30 |
| 2.3.5  | Wave Memory Size.....   | 2-31 |
| 2.3.6  | Select Pattern file on Wave Memory.....                       | 2-32 |
| 2.3.7  | Waveform Restart.....   | 2-34 |
| 2.3.8  | ARB Status Query.....   | 2-35 |
| 2.4    | Controlling Waveform Patterns in HDD/SSD.....                 | 2-36 |
| 2.4.1  | Copy pattern file to HDD/SSD.....                             | 2-37 |
| 2.4.2  | Delete Pattern file on HDD/SSD.....                           | 2-38 |
| 2.4.3  | Load Pattern File / Query Load Status and<br>Wave Memory..... | 2-39 |
| 2.4.4  | Cancel Loading.....   | 2-41 |
| 2.4.5  | Pattern File Version.....                                     | 2-42 |
| 2.4.6  | HDD/SSD Size.....   | 2-43 |

|        |  |      |
|--------|--|------|
| 2.5    | Modulation and AWGN Settings .....                           | 2-44 |
| 2.5.1  | Modulation .....   | 2-45 |
| 2.5.2  | AWGN .....   | 2-46 |
| 2.5.3  | C/N Ratio .....  | 2-47 |
| 2.5.4  | Target of C/N Setting .....                                  | 2-49 |
| 2.5.5  | Carrier Power .....  | 2-50 |
| 2.5.6  | Sampling Clock .....   | 2-51 |
| 2.6    | External In/Output Settings .....                            | 2-52 |
| 2.6.1  | Pulse Modulation Source .....                                | 2-53 |
| 2.6.2  | External Trigger Mode .....                                  | 2-54 |
| 2.6.3  | External Trigger .....                                       | 2-55 |
| 2.6.4  | External Trigger Source .....                                | 2-56 |
| 2.6.5  | External Trigger Delay .....                                 | 2-57 |
| 2.6.6  | External Trigger Delay Time .....                            | 2-59 |
| 2.6.7  | External Trigger Edge .....                                  | 2-60 |
| 2.6.8  | Baseband Reference Clock Source .....                        | 2-61 |
| 2.6.9  | Baseband Reference Clock .....                               | 2-62 |
| 2.6.10 | Frame Count .....  | 2-64 |
| 2.6.11 | Remote Command Trigger .....                                 | 2-65 |
| 2.7    | External output signal settings .....                        | 2-66 |
| 2.7.1  | Marker Polarity .....  | 2-67 |
| 2.7.2  | Marker Edit .....  | 2-69 |
| 2.7.3  | Marker Pulse Cycle Value .....                               | 2-71 |
| 2.7.4  | Marker Pulse Start Offset Value .....                        | 2-73 |
| 2.8    | Setting Trigger to Be Output to SG Marker of<br>SA/SPA ..... | 2-77 |
| 2.8.1  | SA Trigger Out .....   | 2-77 |
| 2.9    | Display Settings .....                                       | 2-79 |
| 2.9.1  | SG Window Position .....                                     | 2-79 |
| 2.10   | Other Settings .....   | 2-81 |
| 2.10.1 | SG Status .....  | 2-81 |

## 2.1 Setting Frequency

Table 2.1-1 shows device messages for frequency.

**Table 2.1-1 Device messages for frequency**

| Function             | Device Messages  |
|----------------------|--|
| Frequency            | <code>[ :SOURce ] :FREQuency [ :CW   :FIXed ] &lt;freq&gt;</code>              |
|                      | <code>[ :SOURce ] :FREQuency [ :CW   :FIXed ] ?</code>                         |
| Frequency Step Value | <code>[ :SOURce ] :FREQuency :STEP [ :INCRement ] &lt;numeric_value&gt;</code> |
|                      | <code>[ :SOURce ] :FREQuency :STEP [ :INCRement ] ?</code>                     |
| RF Spectrum          | <code>[ :SOURce ] :DM :POLarity [ :ALL ] NORMal   INVert</code>                |
|                      | <code>[ :SOURce ] :DM :POLarity [ :ALL ] ?</code>                              |

### 2.1.1 Frequency

`[:SOURce]:FREQuency[:CW|:FIXed] <freq>`

Frequency

Function

Sets frequency

Command

`[:SOURce]:FREQuency[:CW|:FIXed] <freq>`

Parameter

|                           |   |
|---------------------------|---|
| <code>&lt;freq&gt;</code> | Frequency                                       |
| Range                     | 250 kHz to 3.6 GHz (*)<br>250 kHz to 6 GHz (**) |
| Resolution                | 0.01 Hz   |
| Default                   | 1 GHz   |
| Suffix code               | HZ, KHZ, KZ, MHZ, MZ, GHZ, GZ                   |
| When omitted:             | Hz  |

(\*) When option 020/120 is installed.

(\*\*) When option 021/121 is installed.

Example of Use

To set the frequency to 800 MHz  
`FREQ 800MHZ`

## [:SOURce]:FREQuency[:CW|:FIXed]?

Frequency Query

Function

This command queries the frequency.

Query

[:SOURce]:FREQuency[:CW|:FIXed]?

Response

&lt;freq&gt;

Parameter

|            |   |
|------------|---|
| <freq>     | Frequency                                       |
| Range      | 250 kHz to 3.6 GHz (*)<br>250 kHz to 6 GHz (**) |
| Resolution | 0.01 Hz   |
| Default    | 1 GHz   |

(\*) When option 020/120 is installed.

(\*\*) When option 021/121 is installed.

Example of Use

To query the frequency.

FREQ?

&gt; 800000000.00

## 2.1.2 Frequency Step Value

`[[:SOURce]:FREQUency:STEP[:INCRement] <numeric_value>`

Frequency - Step Value

### Function

This command sets the amount the frequency to be incremented or decremented (frequency step width) when the frequency setting is stepped up or down.

### Command

`[[:SOURce]:FREQUency:STEP[:INCRement] <numeric_value>`

### Parameter

|                                    |                               |
|------------------------------------|-------------------------------|
| <code>&lt;numeric_value&gt;</code> | Frequency step width          |
| Range                              | 0.01 Hz to 1 GHz              |
| Resolution                         | 0.01 Hz                       |
| Default                            | 100 kHz                       |
| Suffix code                        | HZ, KHZ, KZ, MHZ, MZ, GHZ, GZ |
| When omitted:                      | Hz                            |

### Example of Use

To set the frequency step width to 200 kHz.  
`FREQ:STEP 200KHZ`



**[[:SOURce]:FREQuency:STEP[:INCRement]]?**

Frequency - Step Value Query

## Function

This command queries the amount the frequency to be incremented or decremented (frequency step width) when the frequency setting is stepped up or down.

## Query

```
[[:SOURce]:FREQuency:STEP[:INCRement]]?
```

## Response

```
<numeric_value>
```

## Parameter

|                 |                      |
|-----------------|----------------------|
| <numeric_value> | Frequency step width |
| Range           | 0.01 Hz to 1 GHz     |
| Resolution      | 0.01 Hz              |
| Default         | 100 kHz              |

## Example of Use

```
To query the frequency step width.  
FREQ:STEP?  
> 200000.00
```

### 2.1.3 RF Spectrum

#### `[:SOURce]:DM:POLarity[:ALL] NORMal|INVert`

RF Spectrum - Reverse/Normal

Function

This command whether to invert spectrum of the output waveform (reverses I and Q).

Command

```
[ :SOURce ] :DM:POLarity [ :ALL ] <mode>
```

Parameter

|                           |                                   |
|---------------------------|-----------------------------------|
| <code>&lt;mode&gt;</code> | Whether to invert output waveform |
| <code>NORMal</code>       | Normal : Do not invert            |
| <code>INVert</code>       | Reverse : Invert                  |

Example of Use

To invert the output waveform.  
`DM:POL INV`

#### `[:SOURce]:DM:POLarity[:ALL]?`

RF Spectrum - Reverse/Normal Query

Function

This command queries the status of the spectrum invert (reverses I and Q) of the output waveform.

Query

```
[ :SOURce ] :DM:POLarity [ :ALL ] ?
```

Response

```
<mode>
```

Parameter

|                           |                                   |
|---------------------------|-----------------------------------|
| <code>&lt;mode&gt;</code> | Whether to invert output waveform |
| <code>NORM</code>         | Normal : Do not invert            |
| <code>INV</code>          | Reverse : Invert                  |

Example of Use

To query the invert status of the output waveform.  
`DM:POL?`  
`> INV`

## 2.2 Setting Level

Table 2.2-1 shows device messages for setting level.

**Table 2.2-1 Device messages for level**

| Function                    | Device Messages  |
|-----------------------------|--|
| Output Level Unit           | :DISPlay:ANNotation:AMPLitude:UNIT DBM DBU                           |
|                             | :DISPlay:ANNotation:AMPLitude:UNIT?                                  |
| Volt Unit Display           | :DISPlay:ANNotation:AMPLitude:UNIT:VOLTage EMF TERM                  |
|                             | :DISPlay:ANNotation:AMPLitude:UNIT:VOLTage?                          |
| RF Output                   | :OUTPut[:STATe] ON OFF 1 0   |
|                             | :OUTPut[:STATe]?   |
| Unit Power                  | :UNIT:POWer DBM DBUV DBUVEFM   |
|                             | :UNIT:POWer?   |
| SG Level Calibration        | [:SOURce]:POWer:ALC:SEARCh {ONCE}                                    |
| Relative Level Value        | [:SOURce]:POWer:REFEreNce:AMPLitude <numeric_value>                  |
|                             | [:SOURce]:POWer:REFEreNce:AMPLitude?                                 |
| Relative Level              | [:SOURce]:POWer:REFEreNce:STATe ON OFF 1 0                           |
|                             | [:SOURce]:POWer:REFEreNce:STATe?                                     |
| Reference of Relative Level | [:SOURce]:POWer:REFEreNce?   |
| Level Status List           | [:SOURce]:POWer:SETTing?   |
| Level Offset Value          | [:SOURce]:POWer[:LEVel][:IMMediate]:OFFSet <numeric_value>           |
|                             | [:SOURce]:POWer[:LEVel][:IMMediate]:OFFSet?                          |
| Level Offset                | [:SOURce]:POWer[:LEVel][:IMMediate]:OFFSet:STATe ON OFF 1 0          |
|                             | [:SOURce]:POWer[:LEVel][:IMMediate]:OFFSet:STATe?                    |
| Output Level Step Value     | [:SOURce]:POWer[:LEVel][:IMMediate]:STEP[:INCRement] <numeric_value> |
|                             | [:SOURce]:POWer[:LEVel][:IMMediate]:STEP[:INCRement]?                |
| Output Level                | [:SOURce]:POWer[:LEVel][:IMMediate][:AMPLitude] <numeric_value>      |
|                             | [:SOURce]:POWer[:LEVel][:IMMediate][:AMPLitude]? {<unit>}            |

### 2.2.1 Output Level Unit

#### :DISPlay:ANNotation:AMPLitude:UNIT DBM|DBU

Level Unit

Function

This command sets the output level unit.

Command

```
:DISPlay:ANNotation:AMPLitude:UNIT <unit>
```

Parameter

|        |                   |
|--------|-------------------|
| <unit> | Output level unit |
| DBM    | dBm               |
| DBU    | dB $\mu$ V        |

Example of Use

To set the level setting unit to dBm.  
DISP:ANN:AMPL:UNIT DBM

#### :DISPlay:ANNotation:AMPLitude:UNIT?

Level Unit Query

Function

This command queries the output level unit.

Query

```
:DISPlay:ANNotation:AMPLitude:UNIT?
```

Response

```
<unit>
```

Parameter

|        |                   |
|--------|-------------------|
| <unit> | Output level unit |
| DBM    | dBm               |
| DBU    | dB $\mu$ V        |

Example of Use

To query the level setting unit.  
DISP:ANN:AMPL:UNIT?  
> DBM

## 2.2.2 Volt Unit Display

**:DISPlay:ANNotation:AMPLitude:UNIT:VOLTage EMF|TERM**

Volt Unit

Function

This command sets the display method when the output level is set in voltage units.

Command

```
:DISPlay:ANNotation:AMPLitude:UNIT:VOLTage <unit>
```

Parameter

|        |                              |
|--------|------------------------------|
| <unit> | Voltage unit display system  |
| EMF    | Open circuit voltage display |
| TERM   | Termination voltage display  |

Example of Use

To display the voltage units using open voltage.  
 DISP:ANN:AMPL:UNIT:VOLT EMF

**:DISPlay:ANNotation:AMPLitude:UNIT:VOLTage?**

Volt Unit Query

Function

This command queries the display method when the output level is set in voltage units.

Query

```
:DISPlay:ANNotation:AMPLitude:UNIT:VOLTage?
```

Response

```
<unit>
```

Parameter

|        |                              |
|--------|------------------------------|
| <unit> | Voltage unit display system  |
| EMF    | Open circuit voltage display |
| TERM   | Termination voltage display  |

Example of Use

To query the voltage unit display system  
 DISP:ANN:AMPL:UNIT:VOLT?  
 > EMF

### 2.2.3 RF Output

#### :OUTPut[:STATe] ON|OFF|1|0

RF Output - On/Off

Function

This command turns RF output ON/OFF.

Command

```
:OUTPut[:STATe] <on_off>
```

Parameter

|          |                  |
|----------|------------------|
| <on_off> | RF output On/Off |
| ON 1     | On               |
| OFF 0    | Off              |

Example of Use

To set the RF signal output to Off.  
OUTP OFF

#### :OUTPut[:STATe]?

RF Output - On/Off Query

Function

This command queries the ON/OFF status of RF output.

Query

```
:OUTPut[:STATe]?
```

Response

```
<on_off>
```

Parameter

|          |                  |
|----------|------------------|
| <on_off> | RF output On/Off |
| ON 1     | On               |
| OFF 0    | Off              |

Example of Use

To query the ON/OFF status of RF output.  
OUTP?  
> 1

## 2.2.4 Unit Power

### :UNIT:POWer DBM|DBUV|DBUVEMF

Unit Power

Function

This command sets the output level unit.

Command

```
:UNIT:POWer <unit>
```

Parameter

|         |                                       |
|---------|---------------------------------------|
| <unit>  | Output level unit                     |
| DBM     | dBm                                   |
| DBUV    | dB $\mu$ V (terminal voltage display) |
| DBUVEMF | dB $\mu$ V (open voltage display)     |

Example of Use

To set the level setting unit to dB $\mu$ V (open voltage display).  
 UNIT:POW DBUVEMF

### :UNIT:POWer?

Unit Power Query

Function

This command queries the output level unit.

Query

```
:UNIT:POWer?
```

Response

```
<unit>
```

Parameter

|         |                                       |
|---------|---------------------------------------|
| <unit>  | Output level unit                     |
| DBM     | dBm                                   |
| DBUV    | dB $\mu$ V (terminal voltage display) |
| DBUVEMF | dB $\mu$ V (open voltage display)     |

Example of Use

To query the level setting unit.  
 UNIT:POW?  
 > DBM

## 2.2.5 SG Level Calibration

`[:SOURce]:POWer:ALC:SEARch {ONCE}`

SG Level Calibration

Function

This command calibrates the output level.

Command

`[ :SOURce ] : POWer : ALC : SEARch { ONCE }`

Example of Use

To calibrate the output level.

`POW:ALC:SEAR`



## 2.2.6 Relative Level Value

`[:SOURce]:POWer:REFerence:AMPLitude <numeric_value>`

Relative Level

Function

This command sets the screen display output level at relative output level display mode.

Command

`[:SOURce]:POWer:REFerence:AMPLitude <numeric_value>`

Parameter

|                                    |  |
|------------------------------------|--|
| <code>&lt;numeric_value&gt;</code> | Relative output level  |
| Range                              | 60 dB width within the range of -60.00 dB to +60.00 dB (> 25 MHz) (*)<br>42 dB width within the range of -42.00 dB to +42.00 dB ( $\leq$ 25 MHz) (*)<br>151 dB width within the range of -151.00 dB to +151.00 dB (> 25 MHz) (**)<br>133 dB width within the range of -133.00 dB to +133.00 dB ( $\leq$ 25 MHz) (**) |
| Resolution                         | 0.01 dB  |
| Response unit                      | dB   |
|                                    | (*) When option 022/122 is NOT installed.  |
|                                    | (**) When option 022/122 is installed.   |

Details

The range differs as follows according to the conditions:

When Offset is on:                      Range + Offset Value

Example of Use

To set the relative output to +10.00 dB.

`POW:REF:AMPL 10.00DB`

## [:SOURce]:POWer:REFerence:AMPLitude?

Relative Level Query

### Function

This command queries the screen display output level at relative output level display mode.

### Query

```
[ :SOURce ] : POWer : REFerence : AMPLitude ?
```

### Response

```
<numeric_value>
```

### Parameter

|                 |  |
|-----------------|--|
| <numeric_value> | Relative output level  |
| Range           | 60 dB width within the range of -60.00 dB to +60.00 dB (> 25 MHz)(*)<br>42 dB width within the range of -42.00 dB to +42.00 dB ( $\leq$ 25 MHz)(*)<br>151 dB width within the range of -151.00 dB to +151.00 dB (> 25 MHz)(**)<br>133 dB width within the range of -133.00 dB to +133.00 dB ( $\leq$ 25 MHz)(**) |
| Resolution      | 0.01 dB  |
| Response unit   | dB   |
|                 | (*) When option 022/122 is NOT installed.  |
|                 | (**) When option 022/122 is installed.   |

### Details

The range differs as follows according to the conditions:

|                    |                      |
|--------------------|----------------------|
| When Offset is on: | Range + Offset Value |
|--------------------|----------------------|

### Example of Use

```
To query the relative output level.  
POW:REF:AMPL?  
> 10.00
```

## 2.2.7 Relative Level

**[[:SOURce]:POWer:REFerence:STATe ON|OFF|1|0**

Relative - On/Off

Function

This command sets the relative output level display ON/OFF.

Command

`[[:SOURce]:POWer:REFerence:STATe <on_off>`

Parameter

|                             |                               |
|-----------------------------|-------------------------------|
| <code>&lt;on_off&gt;</code> | Relative output level display |
| <code>ON 1</code>           | On                            |
| <code>OFF 0</code>          | Off                           |

Example of Use

To enable relative output level display.  
`POW:REF:STAT ON`

**[[:SOURce]:POWer:REFerence:STATe?**

Relative - On/Off Query

Function

This command queries the relative output level display ON/OFF status.

Query

`[[:SOURce]:POWer:REFerence:STATe?`

Response

`<on_off>`

Parameter

|                             |                               |
|-----------------------------|-------------------------------|
| <code>&lt;on_off&gt;</code> | Relative output level display |
| <code>1</code>              | On                            |
| <code>0</code>              | Off                           |

Example of Use

To query the relative output level display ON/OFF status.  
`POW:REF:STAT?`  
`> 1`

## 2.2.8 Reference of Relative Level

### `[[:SOURce]:POWER:REFerence?`

Relative Level - Reference Level Query

Function

This command queries the relative output level in the relative output level display mode (the output level when relative output mode is on).

Query

`[[:SOURce]:POWER:REFerence?`

Response

`<numeric_value>`

Parameter

|   |  |
|---|--|
| <code>&lt;numeric_value&gt;</code>        | Reference level of relative output   |
| Range                                     | -40.00 dBm to +20.00 dBm (> 25 MHz)(*)<br>-40.00 dBm to +2.00 dBm ( $\leq$ 25 MHz)(*)<br>-136.00 dBm to +15.00 dBm (> 25 MHz)(**)<br>-136.00 dBm to -3.00 dBm ( $\leq$ 25 MHz)(**) |
| Resolution                                | 0.01 dB  |
| Response unit                             | dBm  |
| (*) When option 022/122 is NOT installed. |  |
| (**) When option 022/122 is installed.    |  |

Details

The range is based on an output level unit of dBm.

The range differs as follows according to the conditions:

When dB $\mu$ V (Term) is set as the output level unit

Range + 106.99 dB

When dB $\mu$ V (EMF) is set as the output level unit

Range + 113.01 dB

When Offset is on:

Range + Offset Value

Example of Use

```
To query reference level of relative output
POW:REF?
> -5.00
```

## 2.2.9 Level Status List

`[:SOURce]:POWer:SETTing?`

Level Status List Query

Function

This command queries the output level status.

Query

`[:SOURce]:POWer:SETTing?`

Response

`<unit>,<offset>,<unleveled>,INT,0,  
<relative>,NORM`

Parameter

|                                |  |
|--------------------------------|--|
| <code>&lt;unit&gt;</code>      | Voltage unit display                               |
| EMF                            | Open circuit voltage                               |
| TERM                           | Termination voltage                                |
| <code>&lt;offset&gt;</code>    | Level offset                                       |
| 1                              | On   |
| 0                              | Off  |
| <code>&lt;unleveled&gt;</code> | Output level accuracy status                       |
| NORM                           | Normal state                                       |
| UNL                            | Outside level accuracy assurance                   |
| INT                            | Fixed value  |
| Fixed value                    | <code>&lt;relative&gt;</code> Relative output mode |
| 1                              | On   |
| 0                              | Off  |

Fixed value Example of Use

To query the output level status.

`POW:SETT?`

`> EMF,0,NORM,1,0`

### 2.2.10 Level Offset Value

**[[:SOURce]:POWER[:LEVel][:IMMediate]:OFFSet <numeric\_value>**

Level Offset - Level

Function

This command sets the output level offset value

Command

```
[ :SOURce ] :POWER [ :LEVel ] [ :IMMediate ] :OFFSet  
<numeric_value>
```

Parameter

|                 |                       |
|-----------------|-----------------------|
| <numeric_value> | Output level offset   |
| Range           | -100.00 to +100.00 dB |
| Resolution      | 0.01 dB               |
| Default         | 0.00 dB               |

Example of Use

To set the output level offset to -15.00 dB.  
POW:OFFS -15.00

**[[:SOURce]:POWER[:LEVel][:IMMediate]:OFFSet?**

Level Offset - Level Query

Function

This queries the output level offset.

Query

```
[ :SOURce ] :POWER [ :LEVel ] [ :IMMediate ] :OFFSet?
```

Response

```
<numeric_value>
```

Parameter

|                 |                       |
|-----------------|-----------------------|
| <numeric_value> | Output level offset   |
| Range           | -100.00 to +100.00 dB |
| Resolution      | 0.01 dB               |

Example of Use

To query the output level offset.  
POW:OFFS?  
> -5.00

### 2.2.11 Level Offset

`[[:SOURce]:POWer[:LEVel][:IMMediate]:OFFSet:STATe ON|OFF|1|0`

Level Offset - On/Off

Function

This command sets the output level offset ON/OFF.

Command

`[[:SOURce]:POWer[:LEVel][:IMMediate]:OFFSet:STATe <on_off>`

Parameter

|                             |                            |
|-----------------------------|----------------------------|
| <code>&lt;on_off&gt;</code> | Output level offset On/Off |
| <code>ON 1</code>           | On                         |
| <code>OFF 0</code>          | Off                        |

Example of Use

To enable the output level offset.

`POW:OFFS:STAT ON`

`[[:SOURce]:POWer[:LEVel][:IMMediate]:OFFSet:STATe?`

Level Offset - On/Off Query

Function

This command queries the output level offset ON/OFF status.

Query

`[[:SOURce]:POWer[:LEVel][:IMMediate]:OFFSet:STATe?`

Response

`<on_off>`

Parameter

|                             |                            |
|-----------------------------|----------------------------|
| <code>&lt;on_off&gt;</code> | Output level offset On/Off |
| <code>1</code>              | On                         |
| <code>0</code>              | Off                        |

Example of Use

To query the output level offset ON/OFF status.

`POW:OFFS:STAT?`

`> 1`

## 2.2.12 Output Level Step Value

**[[:SOURce]:POWER[:LEVel][:IMMediate]:STEP[:INCRement] <numeric\_value>**

Output Level - Set Value

### Function

This command sets the numerical value fluctuation width (step value) when the output level is increased/decreased in step units.

### Command

```
[[:SOURce]:POWER[:LEVel][:IMMediate]:STEP[:INCRement]
<numeric_value>
```

### Parameter

|                 |                         |
|-----------------|-------------------------|
| <numeric_value> | Output level step width |
| Range           | 0.01 to 100.00 dB       |
| Resolution      | 0.01 dB                 |

### Example of Use

To set the output level step width to 5.00 dB.  
POW:STEP 5.00

**[[:SOURce]:POWER[:LEVel][:IMMediate]:STEP[:INCRement]?**

Output Level - Set Value Query

### Function

This command queries the numerical value fluctuation width (step value) when the output level is increased/decreased in step units.

### Query

```
[[:SOURce]:POWER[:LEVel][:IMMediate]:STEP[:INCRement]?
```

### Response

```
<numeric_value>
```

### Parameter

|                 |                         |
|-----------------|-------------------------|
| <numeric_value> | Output level step width |
| Range           | 0.01 to 100.00 dB       |
| Resolution      | 0.01 dB                 |

### Example of Use

To query the step width of the output level.  
POW:STEP?  
> 0.10



### 2.2.13 Output Level

`[[:SOURce]:POWer[:LEVel][:IMMediate][:AMPLitude] <numeric_value>`

Output Level

Function

This command sets the output level.

Command

```
[[:SOURce]:POWer[:LEVel][:IMMediate][:AMPLitude]
<numeric_value>
```

Parameter

|                 |  |
|-----------------|--|
| <numeric_value> | Output Level   |
| Range           | -40.00 dBm to +20.00 dBm (> 25 MHz)(*)<br>-40.00 dBm to +2.00 dBm (≤ 25 MHz)(*)<br>-136.00 dBm to +15.00 dBm (> 25 MHz) (**)<br>-136.00 dBm to -3.00 dBm (≤ 25 MHz) (**)<br> |
| Resolution      | 0.01 dB  |
| Default         | -40.00 dBm (*)<br>-136.00 dBm (**)   |
| Suffix code     | DBM, DBU   |
| When omitted:   | DBM  |

(\*) When option 022/122 is NOT installed.

(\*\*) Details of when option 022/122 is installed.

The range is based on an output level unit of dBm.

The set range differs as follows according to the setting conditions:

When dB $\mu$ V (Term) is set as the output level unit

Range + 106.99 dB

When dB $\mu$ V (EMF) is set as the output level unit

Range + 113.01 dB

When Offset is on:

Range + Offset Value

Example of Use

To set the output level to -30.00 dBm

```
POW -30.00
```

**[[:SOURce]:POWer[:LEVel][:IMMediate][:AMPLitude]? {<unit>}**

Output Level Query

Function

This command queries the output level.

Query

[[:SOURce]:POWer[:LEVel][:IMMediate][:AMPLitude]? {<unit>}

Response

<numeric\_value>

Parameter

|                 |  |
|-----------------|--|
| <numeric_value> | Output Level   |
| Range           | -40.00 dBm to +20.00 dBm (> 25 MHz)(*)<br>-40.00 dBm to +2.00 dBm (≤ 25 MHz)(*)<br>-136.00 dBm to +15.00 dBm (> 25 MHz) (**)<br>-136.00 dBm to -3.00 dBm (≤ 25 MHz) (**)<br> |
| Resolution      | 0.01 dB  |
| Response unit   | dBm or dBμV (according to the set value)   |

(\*) When option 022/122 is NOT installed.

(\*\*) When option 022/122 is installed.

|               |                   |
|---------------|-------------------|
| <unit>        | Output level unit |
| DBM           | dBm               |
| DBU           | dBμV              |
| When omitted: | dBm               |

Details

The range is based on an output level unit of dBm.

The range differs as follows according to the conditions:

When dBμV (Term) is specified as the output level unit

Range + 106.99 dB

When dBμV (EMF) is specified as the output level unit

Range + 113.01 dB

When Offset is on:

Range + Offset Value

Example of Use

To query the output level in dBm.

```
POW? DBM
```

```
> -30.00
```

## 2.3 Controlling Waveform Patterns in Waveform Memory

Table 2.3-1 shows the device messages for controlling waveform patterns loaded into the waveform memory.

**Table 2.3-1 Device messages for controlling waveform patterns loaded into the waveform memory**

| Function  | Device Message                                   |
|---|--|
| Delete Pattern file on Wave Memory                          | :MEMory:DELEte[:NAME] <package>,<pattern>        |
| Delete All Pattern files on Wave Memory (Clear Wave Memory) | :MEMory:DELEte:ALL                               |
| List of Loaded Pattern Files                                | :MEMory:WAVEform:NAME? <numeric_value>           |
| Number of loaded pattern files                              | :MEMory:WAVEform:COUNT?                          |
| Wave Memory Size  | :MEMory:FREE[:ALL]?                              |
| Select Pattern file on Wave Memory                          | [:SOURce]:RADio:ARB:WAVEform <package>,<pattern> |
|   | [:SOURce]:RADio:ARB:WAVEform?                    |
| Waveform Restart  | [:SOURce]:RADio:ARB:WAVEform:REStArt             |
| ARB Status Query  | [:SOURce]:RADio:ARB:REGister[:STATus]?           |

### 2.3.1 Delete Pattern file on Wave Memory

`:MEMory:DELeTe[:NAME] <package>,<pattern>`

Delete Pattern file on Waveform Memory

Function

This command deletes the waveform pattern file in the waveform memory.

Command

`:MEMory:DELeTe[:NAME] <package>,<pattern>`

Parameter

`<package>`      Package name (Character string)

`<pattern>`      Pattern name (Character string)

Details

This command does not delete waveform patterns on the HDD/SSD.

Example of Use

To delete the "TEST" pattern in the package "WCDMA".  
`MEM:DEL "WCDMA", "TEST"`

### 2.3.2 Delete All Pattern files on Wave Memory

**:MEMory:DELeTe:ALL**

Delete Pattern file on Waveform Memory

Function

This command deletes all waveform pattern files in the waveform memory.

Command

`:MEMory:DELeTe:ALL`

Details

This command does not delete waveform patterns on the HDD/SSD.

Example of Use

To delete all waveform pattern files in the waveform memory.  
`MEM:DEL:ALL`

### 2.3.3 List of Loaded Pattern Files

:MEMory:WAVEform:NAME? <numeric\_value>

Loaded File Name in Waveform Memory Query

Function

This command queries the waveform pattern filename loaded in the waveform memory.

Query

```
:MEMory:WAVEform:NAME? <numeric_value>
```

Response

```
<package>,<pattern>
```

Parameter

|                 |   |
|-----------------|---|
| <numeric_value> | Random numbers allocated to waveform patterns.                |
| Range           | 0 to (Number of waveform patterns in the waveform memory – 1) |
| Resolution      | 1   |
| <package>       | Package name (Character string)                               |
| <pattern>       | Pattern name (Character string)                               |

Example of Use

```
To query the waveform pattern filename loaded in the waveform memory.
MEM:WAV:NAME? 2
> "WCDMA", "TEST"
```

### 2.3.4 Number of loaded pattern files

#### :MEMory:WAVEform:COUNT?

Number of Loaded Files Query

Function

This command queries the number of waveform pattern files loaded in the waveform memory.

Query

:MEMory:WAVEform:COUNT?

Response

<n>

Parameter

<n>                    Number of waveform pattern files loaded to waveform  
                          memory  
                          Range        0 to 4096  
                          Resolution    1

Example of Use

To query the number of waveform pattern files loaded in the waveform memory.

MEM:WAV:COUNT?

> 2



### 2.3.5 Wave Memory Size

#### :MEMory:FREE[:ALL]?

Waveform Memory Space Query

Function

This command queries the waveform memory free space.

Query

```
:MEMory:FREE[:ALL]?
```

Response

```
<blank>,<consecutive_blank>,<total>
```

Parameter

```
<blank>           Free space (in byte)
<consecutive_blank>
                   Contiguous free space (in byte)
<total>          Total waveform memory size (in byte)
```

Example of Use

To query the waveform memory free space.  
MEM:FREE?

### 2.3.6 Select Pattern file on Wave Memory

`[:SOURce]:RADio:ARB:WAVEform <package>,<pattern>`

Select Waveform File

#### Function

This selects the waveform pattern file to be played from the waveform pattern files loaded to the waveform memory.

#### Command

`[:SOURce]:RADio:ARB:WAVEform <package>,<pattern>`

#### Parameter

|                              |                                    |
|------------------------------|------------------------------------|
| <code>&lt;package&gt;</code> | Package name (Character string)    |
| NONE                         | Waveform pattern file not selected |
| <code>&lt;pattern&gt;</code> | Pattern name (Character string)    |
| NONE                         | Waveform pattern file not selected |

#### Example of Use

To select the "TEST" pattern in the package "WCDMA".

`RAD:ARB:WAV "WCDMA", "TEST"`

## [:SOURce]:RADio:ARB:WAVEform?

Select Waveform File Query

### Function

This command queries the waveform pattern file to be played.

### Query

```
[ :SOURce ] :RADio:ARB:WAVEform?
```

### Response

```
<package>, <pattern>
```

### Parameter

|           |                                    |
|-----------|------------------------------------|
| <package> | Package name (Character string)    |
| NONE      | Waveform pattern file not selected |
| <pattern> | Pattern name (Character string)    |
| NONE      | Waveform pattern file not selected |

### Example of Use

To query the waveform pattern file to be played.

```
RAD:ARB:WAV?
```

```
> "WCDMA", "TEST"
```

### 2.3.7 Waveform Restart

`[:SOURce]:RADio:ARB:WAVEform:REStart`

Waveform Restart

Function

This command plays waveform pattern from the beginning.

Command

`[ :SOURce ] :RADio:ARB:WAVEform:REStart`

Example of Use

To play waveform pattern from the beginning.

`RAD:ARB:WAV:REST`

### 2.3.8 ARB Status Query

`[:SOURce]:RADio:ARB:REGister[:STATus]?`

ARB Status Query

Function

This command queries the waveform memory status.

Query

`[:SOURce]:RADio:ARB:REGister[:STATus]?`

Response

`<status>`

Parameter

`<status>` Waveform memory status  
 Value = bit0 + bit1 + bit2 + bit3 + bit4 + bit5 + bit6  
 + bit7 + bit8 + bit9 + bit10 + bit11 + bit12  
 + bit13 + bit14 + bit15

The bit assignments are as follows:

|                          |  |
|--------------------------|--|
| bit0 : $2^0 = 1$         | (Not used)   |
| bit1 : $2^1 = 2$         | (Not used)   |
| bit2 : $2^2 = 4$         | Waveform patter playback status:<br>(0: Paused, 1: Play) |
| bit3 : $2^3 = 8$         | (Not used)   |
| bit4 : $2^4 = 16$        | (Not used)   |
| bit5 : $2^5 = 32$        | (Not used)   |
| bit6 : $2^6 = 64$        | (Not used)   |
| bit7 : $2^7 = 128$       | (Not used)   |
| bit8 : $2^8 = 256$       | (Not used)   |
| bit9 : $2^9 = 512$       | (Not used)   |
| bit10 : $2^{10} = 1024$  | (Not used)   |
| bit11 : $2^{11} = 2048$  | (Not used)   |
| bit12 : $2^{12} = 4096$  | (Not used)   |
| bit13 : $2^{13} = 8192$  | (Not used)   |
| bit14 : $2^{14} = 16384$ | (Not used)   |
| bit15 : $2^{15} = 32768$ | (Not used)   |

Range 0 to 65535

Example of Use

To query the waveform memory status.

`RAD:ARB:REG?`

`> 4`

## 2.4 Controlling Waveform Patterns in HDD/SSD

Table 2.4-1 shows the device messages for controlling waveform patterns in the HDD/SSD.

**Table 2.4-1 Device messages for controlling waveform patterns in the HDD/SSD**

| Function  | Device Messages                                |
|---|--|
| Copy pattern file to HDD/SSD                                | :MMEMory:COpy <device>[,<package>]             |
| Delete Pattern file on HDD/SSD                              | :MMEMory:DELeTe[:NAME] <package>,<pattern>     |
| Load Pattern File /<br>Query Load Status and Wave<br>Memory | :MMEMory:LOAD:WAVEform <package>,<pattern>     |
|   | :MMEMory:LOAD:WAVEform? <package>,<pattern>    |
| Cancel Loading  | :MMEMory:LOAD:WAVEform:ABORt                   |
| Pattern File Version  | :MMEMory:WAVEform:VERSion? <package>,<pattern> |
| HDD/SSD Size  | :MMEMory:WAVEform:FREE[:ALL]?                  |

### 2.4.1 Copy pattern file to HDD/SSD

:MMEMory:COPIY <device>[,<package>]

Copy pattern file to HDD/SSD

#### Function

This command copies the waveform pattern file from the specified drive to the internal HDD/SSD. Specify a waveform pattern by a package name, which is the name of the folder that stores the waveform pattern file.

#### Command

```
:MMEMory:COPIY <device>[,<package>]
```

#### Parameter

|           |   |
|-----------|---|
| <device>  | Copy source drive name (A, B, D to Z, D when omitted) |
| <package> | Copy source package name (character string) or, ROOT  |

#### Details

An error occurs when the specified drive or waveform pattern file cannot be found.

When the package name (package) is omitted, all the packages in the root folder of the specified drive will be copied.

When `ROOT` is specified for <package>, all the patterns in the root folder of the specified drive will be copied.

#### Example of Use

To copy the waveform pattern in the package "WCDMA" of Drive D to the internal HDD/SSD.

```
MMEM:COPIY D, "WCDMA"
```

## 2.4.2 Delete Pattern file on HDD/SSD

**:MMEMory:DELeTe[:NAME] <package>,<pattern>**

Delete Pattern file on HDD/SSD

**Function**

This command deletes the waveform pattern file on the HDD/SSD.

**Command**

`:MMEMory:DELeTe[:NAME] <package>,<pattern>`

**Parameter**

|                              |                                 |
|------------------------------|---------------------------------|
| <code>&lt;package&gt;</code> | Package name (Character string) |
| <code>&lt;pattern&gt;</code> | Pattern name (Character string) |

**Details**

This command does not delete waveform patterns in the waveform memory.

**Example of Use**

To delete the "TEST" pattern in the package "WCDMA".  
`MMEM:DEL "WCDMA", "TEST"`



### 2.4.3 Load Pattern File / Query Load Status and Wave Memory

:MMEMory:LOAD:WAVEform <package>, <pattern>

Load Pattern File/Check Status of Lading Pattern and Waveform Memory

#### Function

This command starts loading the waveform pattern from the HDD/SSD to the waveform memory.

#### Command

```
:MMEMory:LOAD:WAVEform <package>, <pattern>
```

#### Parameter

|           |                                 |
|-----------|---------------------------------|
| <package> | Package name (Character string) |
| <pattern> | Pattern name (Character string) |

#### Details

If a waveform pattern is loaded when the same waveform pattern has already been loaded, the existing waveform pattern is overwritten.

#### Example of Use

To start loading “TEST” pattern in package “WCDMA”.

```
MMEM:LOAD:WAV "WCDMA", "TEST"
```

```
*OPC?
```

```
// Loaded when 1 is returned
```

**:MMEMory:LOAD:WAVEform? <package>,<pattern>**

Load Pattern File/Check Status of Lading Pattern and Waveform Memory Query

Function

Loaded results and current status for the specified waveform pattern are returned in response to the query.

Query

:MMEMory:LOAD:WAVEform? <package>,<pattern>

Response

<status>

Parameter

|           |   |
|-----------|---|
| <package> | Package name (Character string)                                 |
| <pattern> | Pattern name (Character string)                                 |
| <status>  | Status  |
| 0         | Already loaded  |
| 1         | Can be loaded   |
| 2         | License required  |
| 3         | No corresponding file   |
| 4         | Insufficient waveform memory free space                         |
| 5         | Internal error  |
| 6         | Version mismatch  |
| 7         | Pattern file analysis error                                     |
| 8         | Illegal pattern file (.wvi)                                     |
| 9         | Exceeded number of loadable waveform pattern files              |
| 10        | Exceeded number of loadable packages                            |
| 11        | Exceeded number of loadable waveform pattern files in 1 package |

Example of Use

To start the current status of "TEST" pattern in package"WCDMA".

```
MMEM:LOAD:WAV? "WCDMA", "TEST"
```

```
> 1 // Can be loaded
```

### 2.4.4 Cancel Loading

:MMEMory:LOAD:WAVeform:ABORt

Cancel Loading

Function

This command cancels loading waveform patterns to waveform memory.

Command

:MMEMory:LOAD:WAVeform:ABORt

Example of Use

To cancel loading waveform patterns to waveform memory.  
MMEM:LOAD:WAV:ABOR

### 2.4.5 Pattern File Version

:MMEMory:WAVeform:VERSion? <package>,<pattern>

File Version Query

Function

This command queries the waveform pattern file version on the HDD/SSD.

Query

:MMEMory:WAVeform:VERSion? <package>,<pattern>

Response

<version>

Parameter

<package>            Package name (Character string)

<pattern>            Pattern name (Character string)

<version>            Version number

Example of Use

To query the "TEST" pattern version number of the package "WCDMA".  
MMEM:WAV:VERS? "WCDMA", "TEST"  
> 1.00

## 2.4.6 HDD/SSD Size

:MMEMory:WAVeform:FREE[:ALL]?

HDD/SSD Size Query

Function

This command queries HDD/SSD free space information.

Query

:MMEMory:WAVeform:FREE[:ALL]?

Response

<total>, <blank>

Parameter

|               |                    |
|---------------|--------------------|
| <total>       | Total HDD/SSD size |
| Response unit | Byte               |
| <blank>       | HDD/SSD free space |
| Response unit | Byte               |

Example of Use

To query the HDD/SSD size.  
 MMEM:WAV:FREE?  
 > 1234567890,123456789

## 2.5 Modulation and AWGN Settings

Table 2.5-1 shows device messages for setting modulation and AWGN.

**Table 2.5-1 Device messages for setting modulation and AWGN**

| Function              | Device Messages  |
|-----------------------|--|
| Modulation            | :OUTPut:MODulation[:STATe] ON OFF 1 0                      |
|                       | :OUTPut:MODulation[:STATe]?                                |
| AWGN                  | [:SOURce]:RADio:ARB:NOISe[:STATe] ON OFF 1 0               |
|                       | [:SOURce]:RADio:ARB:NOISe[:STATe]?                         |
| C/N Ratio             | [:SOURce]:RADio:ARB:NOISe:CN <numeric_value><unit>         |
|                       | [:SOURce]:RADio:ARB:NOISe:CN?                              |
| Target of C/N Setting | [:SOURce]:RADio:ARB:NOISe:CN:TARGet CARRier NOISe CONStant |
|                       | [:SOURce]:RADio:ARB:NOISe:CN:TARGet?                       |
| Carrier Power         | [:SOURce]:RADio:ARB:NOISe:CPOWer <numeric_value><unit>     |
|                       | [:SOURce]:RADio:ARB:NOISe:CPOWer?                          |
| Sampling Clock        | [:SOURce]:RADio:ARB:SCLock:RATE?                           |

### 2.5.1 Modulation

**:OUTPut:MODulation[:STATe] ON|OFF|1|0**

Modulation - On/Off

Function

This command sets the modulation function ON/OFF.

Command

```
:OUTPut:MODulation[:STATe] <on_off>
```

Parameter

|          |                   |
|----------|-------------------|
| <on_off> | Modulation ON/OFF |
| ON 1     | On                |
| OFF 0    | Off               |

Details

Fixed to OFF when no waveform pattern file is selected.

Example of Use

To set the modulation function to ON.

```
OUTP:MOD ON
```

**:OUTPut:MODulation[:STATe]?**

Modulation - On/Off Query

Function

This command queries the modulation ON/OFF status.

Query

```
:OUTPut:MODulation[:STATe]?
```

Response

```
<on_off>
```

Parameter

|          |                   |
|----------|-------------------|
| <on_off> | Modulation ON/OFF |
| 1        | On                |
| 0        | Off               |

Details

Fixed to OFF when no waveform pattern file is selected.

Example of Use

To query the modulation ON/OFF status.

```
OUTP:MOD?
```

```
> 1
```

## 2.5.2 AWGN

`[ :SOURce ] :RADio :ARB :NOISe [ :STATe ] ON | OFF | 1 | 0`

AWGN

Function

This command turns AWGN output ON/OFF.

Command

`[ :SOURce ] :RADio :ARB :NOISe [ :STATe ] <on_off>`

Parameter

|                             |                    |
|-----------------------------|--------------------|
| <code>&lt;on_off&gt;</code> | AWGN output On/Off |
| <code>ON   1</code>         | On                 |
| <code>OFF   0</code>        | Off                |

Details

Outputs a signal with AWGN added when AWGN is ON.

The AWGN output function can be set to ON or OFF only when a waveform pattern file is selected and the modulation is enabled (ON).

The AWGN output function is automatically set to OFF when a waveform pattern is changed.

Example of Use

To add AWGN to output signal.  
`RAD : ARB : NOIS ON`

`[ :SOURce ] :RADio :ARB :NOISe [ :STATe ] ?`

AWGN Query

Function

This command queries the AWGN output ON/OFF status.

Query

`[ :SOURce ] :RADio :ARB :NOISe [ :STATe ] ?`

Response

`<on_off>`

Parameter

|                             |                    |
|-----------------------------|--------------------|
| <code>&lt;on_off&gt;</code> | AWGN output On/Off |
| <code>1</code>              | On                 |
| <code>0</code>              | Off                |

Example of Use

To query the ON/OFF status of the AWGN output signal.  
`RAD : ARB : NOIS ?`  
`> 1`



### 2.5.3 C/N Ratio

`[[:SOURce]:RADio:ARB:NOISe:CN <numeric_value>`

Power Ratio

Function

This command sets the output ratio of AWGN to carrier (C/N) when AWGN is ON.

Command

`[[:SOURce]:RADio:ARB:NOISe:CN <numeric_value>`

Parameter

|                                    |               |
|------------------------------------|---------------|
| <code>&lt;numeric_value&gt;</code> | C/N           |
| Range                              | -40 to +40 dB |
| Resolution                         | 0.01          |
| Default                            | -40.00        |

Details

The setting range may be narrowed if the RF output level is close to the upper or lower limit.

Example of Use

To set the C/N to 3 dB.  
`RAD:ARB:NOIS:CN 3DB`

## `[:SOURce]:RADio:ARB:NOISe:CN?`

Power Ratio Query

### Function

This command queries the output ratio of AWGN to carrier (C/N) when AWGN is ON.

### Query

```
[ :SOURce ] :RADio:ARB:NOISe:CN?
```

### Response

```
<numeric_value>
```

### Parameter

|                                    |               |
|------------------------------------|---------------|
| <code>&lt;numeric_value&gt;</code> | C/N           |
| Range                              | -40 to +40 dB |
| Resolution                         | 0.01          |
| Default                            | -40.00        |

### Example of Use

```
To query C/N.  
RAD:ARB:NOIS:CN?  
> -3.00
```

## 2.5.4 Target of C/N Setting

**[[:SOURce]:RADio:ARB:NOISe:CN:TARGet CARRier|NOISe|CONStant**

Target of C/N Setting

Function

This command sets the parameters to be changed when C/N is set.

Command

`[[:SOURce]:RADio:ARB:NOISe:CN:TARGet <target>`

Parameter

|                             |  |
|-----------------------------|--|
| <code>&lt;target&gt;</code> | Parameter to be changed when C/N is set. |
| <code>CARRier</code>        | Carrier signal                           |
| <code>NOISe</code>          | NOISE                                    |
| <code>CONStant</code>       | Fixed output level (Carrier + AWGN)      |

Example of Use

To set AWGN as the parameter to be changed when C/N is set.  
`RAD:ARB:NOIS:CN:TARG NOIS`

**[[:SOURce]:RADio:ARB:NOISe:CN:TARGet?**

Target of C/N Setting Query

Function

This command queries the parameters to be changed when C/N is set.

Query

`[[:SOURce]:RADio:ARB:NOISe:CN:TARGet?`

Response

`<target>`

Parameter

|                             |  |
|-----------------------------|--|
| <code>&lt;target&gt;</code> | Parameter to be changed when C/N is set. |
| <code>CARR</code>           | Carrier signal                           |
| <code>NOIS</code>           | NOISE                                    |
| <code>CONS</code>           | Fixed output level (Carrier + AWGN)      |

Example of Use

To query the parameters to be changed when C/N is set.  
`RAD:ARB:NOIS:CN:TARG?`  
`> NOIS`

### 2.5.5 Carrier Power

`[[:SOURce]:RADio:ARB:NOISe:CPOWer <numeric_value>`

Carrier Power

Function

This command sets the carrier signal level when AWGN is ON.

Command

`[[:SOURce]:RADio:ARB:NOISe:CPOWer <numeric_value>`

Parameter

|                                    |                                       |
|------------------------------------|---------------------------------------|
| <code>&lt;numeric_value&gt;</code> | Carrier signal level when AWGN is ON. |
| Range                              |                                       |
| Resolution                         | 0.01 dB                               |
| Suffix code                        | DB                                    |

Example of Use

To set the carrier signal level when AWGN is ON to -55.0 dBm.  
`RAD:ARB:NOIS:CPOW -55`

`[[:SOURce]:RADio:ARB:NOISe:CPOWer?`

Carrier Power Query

Function

This command queries the carrier signal level when AWGN is ON.

Query

`[[:SOURce]:RADio:ARB:NOISe:CPOWer?`

Response

`<numeric_value>`

Parameter

|                                    |                                       |
|------------------------------------|---------------------------------------|
| <code>&lt;numeric_value&gt;</code> | Carrier signal level when AWGN is ON. |
| Range                              |                                       |
| Resolution                         | 0.01 dB                               |

Example of Use

To query the carrier signal level when AWGN is ON.  
`RAD:ARB:NOIS:CPOW?`  
> -10.00

## 2.5.6 Sampling Clock

`[[:SOURce]:RADio:ARB:SCLock:RATE?`

Sampling Clock Query

Function

This command queries the baseband signal sampling clock.

Query

`[[:SOURce]:RADio:ARB:SCLock:RATE?`

Response

`<numeric_value>`

Parameter

|                                    |                 |
|------------------------------------|-----------------|
| <code>&lt;numeric_value&gt;</code> | Sampling clock  |
| Range                              | 0.02 to 160 MHz |
| Resolution                         | 0.001 Hz        |

Example of Use

To query the sampling clock  
`RAD:ARB:SCL:RATE?`  
> 80000000.000

## 2.6 External In/Output Settings

Table 2.6-1 shows device messages for setting external in/output signals.

**Table 2.6-1 Device messages for setting external input signals**

| Function                        | Device Messages   |
|---------------------------------|---|
| Pulse Modulation Source         | [ :SOURCE ] :RADio:ARB:PULM:SOURce INTernal EXTernal OFF                                    |
|                                 | [ :SOURCE ] :RADio:ARB:PULM:SOURce?   |
| External Trigger Mode           | [ :SOURCE ] :RADio:ARB:TRIGger:TYPE START FRAMe   |
|                                 | [ :SOURCE ] :RADio:ARB:TRIGger:TYPE?  |
| External Trigger                | [ :SOURCE ] :RADio:ARB:TRIGger[:STATe] ON OFF 0 1   |
|                                 | [ :SOURCE ] :RADio:ARB:TRIGger[:STATe]?   |
| External Trigger Source         | [ :SOURCE ] :RADio:ARB:TRIGger:SOURce EXTernal KEY BUS                                      |
|                                 | [ :SOURCE ] :RADio:ARB:TRIGger:SOURce?  |
| External Trigger Delay          | [ :SOURCE ] :RADio:ARB:TRIGger:DELAy <numeric_value>  |
|                                 | [ :SOURCE ] :RADio:ARB:TRIGger:DELAy?   |
| External Trigger Delay Time     | [ :SOURCE ] :RADio:ARB:TRIGger:DELAy:TIME?  |
| External Trigger Edge           | [ :SOURCE ] :RADio:ARB:TRIGger:SLOPe POSitive NEGative                                      |
|                                 | [ :SOURCE ] :RADio:ARB:TRIGger:SLOPe?   |
| Baseband Reference Clock Source | [ :SOURCE ] :RADio:ARB:CLOCK:REFerence[:SOURce] INTernal TTL AC                             |
|                                 | [ :SOURCE ] :RADio:ARB:CLOCK:REFerence[:SOURce]?  |
| Baseband Reference Clock        | [ :SOURCE ] :RADio:ARB:CLOCK:REFerence:DIVision<br>SIXTeenth EIGHth QUARter HALF 1 2 4 8 16 |
|                                 | [ :SOURCE ] :RADio:ARB:CLOCK:REFerence:DIVision?  |
| Frame Count                     | [ :SOURCE ] :RADio:ARB:TRIGger:FRAMe:COUNT <integer>  |
|                                 | [ :SOURCE ] :RADio:ARB:TRIGger:FRAMe:COUNT?   |
| Remote Command Trigger          | [ :SOURCE ] :RADio:ARB:TRIGger:GENerate   |

### 2.6.1 Pulse Modulation Source

`[[:SOURce]:RADio:ARB:PULM:SOURce INTernal|EXTernal|OFF`

Pulse Modulation Source

Function

This command sets the pulse modulation signal source.

Command

`[[:SOURce]:RADio:ARB:PULM:SOURce <source>`

Parameter

|                             |                                 |
|-----------------------------|---------------------------------|
| <code>&lt;source&gt;</code> | Pulse modulation signal source. |
| <code>INTernal</code>       | Internal signal                 |
| <code>EXTernal</code>       | External input signal           |
| <code>OFF</code>            | No pulse modulation             |

Example of Use

To set the pulse modulation signal source to internal signal.  
`RAD:ARB:PULM:SOUR INT`

`[[:SOURce]:RADio:ARB:PULM:SOURce?`

Pulse Modulation Source Query

Function

This command queries the pulse modulation signal source.

Query

`[[:SOURce]:RADio:ARB:PULM:SOURce?`

Response

`<source>`

Parameter

|                             |                                 |
|-----------------------------|---------------------------------|
| <code>&lt;source&gt;</code> | Pulse modulation signal source. |
| <code>INT</code>            | Internal signal                 |
| <code>EXT</code>            | External input signal           |
| <code>OFF</code>            | No pulse modulation             |

Example of Use

To query the status of the pulse modulation signal source.  
`RAD:ARB:PULM:SOUR?`  
`> INT`

## 2.6.2 External Trigger Mode

### `[:SOURce]:RADio:ARB:TRIGger:TYPE START|FRAMe`

External Trigger - Mode

Function

This command sets the external trigger operation mode.

Command

```
[ :SOURce ] :RADio:ARB:TRIGger:TYPE <mode>
```

Parameter

|        |                                  |
|--------|----------------------------------|
| <mode> | External trigger operation mode. |
| START  | Start trigger                    |
| FRAMe  | Frame trigger                    |

Example of Use

To set the external trigger operation mode to start trigger.  
`RAD:ARB:TRIG:TYPE START`

### `[:SOURce]:RADio:ARB:TRIGger:TYPE?`

External Trigger - Mode Query

Function

This command queries the external trigger operation mode.

Query

```
[ :SOURce ] :RADio:ARB:TRIGger:TYPE?
```

Response

```
<mode>
```

Parameter

|        |                                  |
|--------|----------------------------------|
| <mode> | External trigger operation mode. |
| STAR   | Start trigger                    |
| FRAM   | Frame trigger                    |

Example of Use

To query the external trigger operation mode.  
`RAD:ARB:TRIG:TYPE?`  
> STAR



### 2.6.3 External Trigger

`[ :SOURce ] :RADio :ARB :TRIGger [ :STATe ] ON | OFF | 0 | 1`

External Trigger - On/Off

Function

This command sets the external trigger ON/OFF.

Command

`[ :SOURce ] :RADio :ARB :TRIGger [ :STATe ] <on_off>`

Parameter

|                             |                         |
|-----------------------------|-------------------------|
| <code>&lt;on_off&gt;</code> | External trigger On/Off |
| <code>ON   1</code>         | On                      |
| <code>OFF   0</code>        | Off                     |

Example of Use

To enable the external trigger.

`RAD : ARB : TRIG ON`

`[ :SOURce ] :RADio :ARB :TRIGger [ :STATe ] ?`

External Trigger - On/Off Query

Function

This command queries the external trigger ON/OFF status.

Query

`[ :SOURce ] :RADio :ARB :TRIGger [ :STATe ] ?`

Response

`<on_off>`

Parameter

|                             |                         |
|-----------------------------|-------------------------|
| <code>&lt;on_off&gt;</code> | External trigger On/Off |
| <code>1</code>              | On                      |
| <code>0</code>              | Off                     |

Example of Use

To query the external trigger ON/OFF status.

`RAD : ARB : TRIG ?`

`> 0`

## 2.6.4 External Trigger Source

**[ :SOURce ] :RADio:ARB:TRIGger:SOURce EXTernal|KEY|BUS**

Start Trigger Delay Source

Function

This command sets the signal source of the external trigger.

Command

[ :SOURce ] :RADio:ARB:TRIGger:SOURce <source>

Parameter

|          |                                |
|----------|--------------------------------|
| <source> | External trigger signal source |
| EXTernal | External input signal          |
| KEY      | Trigger key input              |
| BUS      | Remote Command                 |

Example of Use

To set the signal source of the external trigger to the external input signal.

RAD:ARB:TRIG:SOUR EXT

**[ :SOURce ] :RADio:ARB:TRIGger:SOURce?**

Start Trigger Delay Source Query

Function

This command queries the signal source of the external trigger.

Query

[ :SOURce ] :RADio:ARB:TRIGger:SOURce?

Response

<source>

Parameter

|          |                                |
|----------|--------------------------------|
| <source> | External trigger signal source |
| EXT      | External input signal          |
| KEY      | Trigger key input              |
| BUS      | Remote Command                 |

Example of Use

To query the external trigger ON/OFF status.

RAD:ARB:TRIG:SOUR?

> EXT

## 2.6.5 External Trigger Delay

`[[:SOURce]:RADio:ARB:TRIGger:DElay <numeric_value>`

Start Trigger Delay

Function

This command sets the RF signal output timing in symbol or chip rate units of each system (determined by the overrate).

Command

`[[:SOURce]:RADio:ARB:TRIGger:DElay <numeric_value>`

Parameter

|                                    |  |
|------------------------------------|--|
| <code>&lt;numeric_value&gt;</code> | Start trigger delay time                           |
| Range                              | Varies depending on the selected waveform pattern. |
| Resolution                         | Varies depending on the selected waveform pattern. |
| Default                            | 0  |
| Unit                               | None (Symbol or chip)                              |

Example of Use

To set the start trigger delay time to 30 chips.  
`RAD:ARB:TRIG:DEL 30`

## [:SOURce]:RADio:ARB:TRIGger:DELAy?

Start Trigger Delay Query

### Function

This command queries the RF signal output timing in symbol or chip rate units of each system (determined by the overrate).

### Query

```
[ :SOURce ] :RADio:ARB:TRIGger:DELAy?
```

### Response

```
<numeric_value>
```

### Parameter

|                 |  |
|-----------------|--|
| <numeric_value> | Start trigger delay time                           |
| Range           | Varies depending on the selected waveform pattern. |
| Resolution      | Varies depending on the selected waveform pattern. |
| Default         | 0  |
| Unit            | None (Symbol or chip)                              |

### Example of Use

To query the external trigger ON/OFF status.

```
RAD:ARB:TRIG:DEL?
```

```
> 30
```

## 2.6.6 External Trigger Delay Time

`[[:SOURce]:RADio:ARB:TRIGger:DELAy:TIME?`

Start Trigger Delay Time Query

Function

This command queries a value computed by converting the output timing of RF signals into time.

Query

`[[:SOURce]:RADio:ARB:TRIGger:DELAy:TIME?`

Response

`<numeric_value>`

Parameter

|                                    |                          |
|------------------------------------|--------------------------|
| <code>&lt;numeric_value&gt;</code> | Start trigger delay time |
| Unit                               | s                        |

Example of Use

To query the output timing of the external trigger.

`RAD:ARB:TRIG:DEL:TIME?`

`> 6.50E-8`

## 2.6.7 External Trigger Edge

`[:SOURce]:RADio:ARB:TRIGger:SLOPe POSitive|NEGative`

External Trigger Edge

Function

This command sets the polarity of the external trigger input.

Command

`[:SOURce]:RADio:ARB:TRIGger:SLOPe <edge>`

Parameter

|                           |                           |
|---------------------------|---------------------------|
| <code>&lt;edge&gt;</code> | External trigger polarity |
| <code>POSitive</code>     | Positive                  |
| <code>NEGative</code>     | Negative                  |

Example of Use

To set the polarity of the external trigger to Negative.  
`RAD:ARB:TRIG:SLOP NEG`

`[:SOURce]:RADio:ARB:TRIGger:SLOPe?`

External Trigger Edge Query

Function

This command queries the polarity of the external trigger input.

Query

`[:SOURce]:RADio:ARB:TRIGger:SLOPe?`

Response

`<edge>`

Parameter

|                           |                           |
|---------------------------|---------------------------|
| <code>&lt;edge&gt;</code> | External trigger polarity |
| <code>POS</code>          | Positive                  |
| <code>NEG</code>          | Negative                  |

Example of Use

To query the polarity of the external trigger input.  
`RAD:ARB:TRIG:SLOP?`  
> POS

## 2.6.8 Baseband Reference Clock Source

`[ :SOURce ] :RADio :ARB :CLOCK :REFerence [ :SOURce ] INTernal | EXTernal`

Baseband Reference Clock Source

Function

This command sets baseband signal reference clock.

Command

`[ :SOURce ] :RADio :ARB :CLOCK :REFerence [ :SOURce ] <source>`

Parameter

|                             |                                 |
|-----------------------------|---------------------------------|
| <code>&lt;source&gt;</code> | Baseband signal reference clock |
| <code>INTernal</code>       | Internal signal (Default)       |
| <code>EXTernal</code>       | External input signal           |

Example of Use

To set the baseband signal reference clock to external input signal.  
`RAD : ARB : CLOC : REF EXT`

`[ :SOURce ] :RADio :ARB :CLOCK :REFerence [ :SOURce ] ?`

Baseband Reference Clock Source Query

Function

This command queries baseband signal reference clock.

Query

`[ :SOURce ] :RADio :ARB :CLOCK :REFerence [ :SOURce ] ?`

Response

`<source>`

Parameter

|                             |                                 |
|-----------------------------|---------------------------------|
| <code>&lt;source&gt;</code> | Baseband signal reference clock |
| <code>INT</code>            | Internal signal (Default)       |
| <code>EXT</code>            | External input signal           |

Example of Use

To query baseband signal reference clock.  
`RAD : ARB : CLOC : REF ?`  
`> INT`

## 2.6.9 Baseband Reference Clock

[:SOURce]:RADio:ARB:CLOCK:REFerence:DIVision

SIXTeenth|EIGHth|QUARter|HALF|1|2|4|8|16

Baseband Reference Clock

Function

This command sets the baseband signal reference clock frequency in magnification ratio based on the sampling clock.

Command

[ :SOURce ] :RADio:ARB:CLOCK:REFerence:DIVision <clock>

Parameter

|           |                                 |
|-----------|---------------------------------|
| <clock>   | Baseband signal reference clock |
| SIXTeenth | Sampling Clock × 1/16           |
| EIGHth    | Sampling Clock × 1/8            |
| QUARter   | Sampling Clock × 1/4            |
| HALF      | Sampling Clock × 1/2            |
| 1         | Sampling Clock × 1              |
| 2         | Sampling Clock × 2              |
| 4         | Sampling Clock × 4              |
| 8         | Sampling Clock × 8              |
| 16        | Sampling Clock × 16             |

The setting range is as shown in the following table.

**Baseband reference clock setting range**

| Sampling Clock<br>[MHz]            | Baseband Reference Clock Setting |   |   |   |   |     |     |     |      |
|------------------------------------|----------------------------------|---|---|---|---|-----|-----|-----|------|
|                                    | 16                               | 8 | 4 | 2 | 1 | 1/2 | 1/4 | 1/8 | 1/16 |
| $0.02 \leq f < 0.024414062$        | ✓                                | ✓ | ✓ | ✓ | ✓ |     |     |     |      |
| $0.024414062 \leq f < 0.048828125$ | ✓                                | ✓ | ✓ | ✓ | ✓ | ✓   |     |     |      |
| $0.048828125 \leq f < 0.09765625$  | ✓                                | ✓ | ✓ | ✓ | ✓ | ✓   | ✓   |     |      |
| $0.09765625 \leq f < 0.1953125$    | ✓                                | ✓ | ✓ | ✓ | ✓ | ✓   | ✓   | ✓   |      |
| $0.1953125 \leq f < 2.5$           | ✓                                | ✓ | ✓ | ✓ | ✓ | ✓   | ✓   | ✓   | ✓    |
| $2.5 \leq f < 5$                   |                                  | ✓ | ✓ | ✓ | ✓ | ✓   | ✓   | ✓   | ✓    |
| $5 \leq f < 10$                    |                                  |   | ✓ | ✓ | ✓ | ✓   | ✓   | ✓   | ✓    |
| $10 \leq f < 20$                   |                                  |   |   | ✓ | ✓ | ✓   | ✓   | ✓   | ✓    |
| $20 \leq f < 40$                   |                                  |   |   |   | ✓ | ✓   | ✓   | ✓   | ✓    |
| $40 \leq f < 80$                   |                                  |   |   |   |   | ✓   | ✓   | ✓   | ✓    |
| $80 \leq f < 160$                  |                                  |   |   |   |   |     | ✓   | ✓   | ✓    |

Example of Use

To set the baseband signal reference lock frequency to sampling clock ×2.  
 RAD:ARB:CLOC:REF:DIV 2



## [:SOURce]:RADio:ARB:CLOCK:REFerence:DIVision?

Baseband Reference Clock Query

## Function

This command queries the reference clock frequency of the baseband signal.

## Query

[:SOURce]:RADio:ARB:CLOCK:REFerence:DIVision?

## Response

&lt;clock&gt;

## Parameter

|         |                                 |
|---------|---------------------------------|
| <clock> | Baseband signal reference clock |
| SIXT    | Sampling Clock $\times$ 1/16    |
| EIGH    | Sampling Clock $\times$ 1/8     |
| QUAR    | Sampling Clock $\times$ 1/4     |
| HALF    | Sampling Clock $\times$ 1/2     |
| 1       | Sampling Clock $\times$ 1       |
| 2       | Sampling Clock $\times$ 2       |
| 4       | Sampling Clock $\times$ 4       |
| 8       | Sampling Clock $\times$ 8       |
| 16      | Sampling Clock $\times$ 16      |

## Example of Use

To query the reference clock frequency of the baseband signal.

```
RAD:ARB:CLOC:REF:DIV?
> 1
```

### 2.6.10 Frame Count

`[:SOURce]:RADio:ARB:TRIGger:FRAMe:COUNT <integer>`

Frame Count

Function

This command sets the Frame Count from the Signal Generator option.

Command

`[:SOURce]:RADio:ARB:TRIGger:FRAMe:COUNT <integer>`

Parameter

|                                |                                   |
|--------------------------------|-----------------------------------|
| <code>&lt;integer&gt;,n</code> | Specifying the output frame count |
| Range                          | 1 to 32767                        |
| Resolution                     | 1                                 |
| Default                        | 1                                 |

Example of Use

To set the output frame count to 10.  
`RAD:ARB:TRIG:FRAM:COUN 10`

`[:SOURce]:RADio:ARB:TRIGger:FRAMe:COUNT?`

Frame Count Query

Function

This command queries the Frame Count from the Signal Generator option.

Query

`[:SOURce]:RADio:ARB:TRIGger:FRAMe:COUNT?`

Response

`<integer>,n`

Parameter

|                              |                         |
|------------------------------|-------------------------|
| <code>&lt;integer&gt;</code> | Number of output frames |
| Range                        | 1 to 32767              |
| Resolution                   | 1                       |

Example of Use

To query the Frame Count from the Signal Generator option.  
`RAD:ARB:TRIG:FRAM:COUN?`  
> 10

### 2.6.11 Remote Command Trigger

`[:SOURce]:RADio:ARB:TRIGger:GENerate`

Remote Command Trigger

Function

This command triggers the output of waveform pattern. This becomes available when Trigger Source is BUS.

Command

`[:SOURce]:RADio:ARB:TRIGger:GENerate`

Example of Use

To trigger the output of waveform pattern.  
`RAD:ARB:TRIG:GEN`

## 2.7 External output signal settings

Table 2.7-1 shows device messages for setting external output signals.

**Table 2.7-1 Device messages for setting external output signals**

| Function                        | Device Messages   |
|---------------------------------|---|
| Marker Polarity                 | [ :SOURce ] :RADio :ARB :MARKer1   2   3 :POLarity POSitive   NEGative                  |
|                                 | [ :SOURce ] :RADio :ARB :MARKer1   2   3 :POLarity ?                                    |
| Marker Edit                     | [ :SOURce ] :RADio :ARB :MARKer1   2   3 :EDIT [ :STATe ]<br>ON   OFF   1   0   PATSync |
|                                 | [ :SOURce ] :RADio :ARB :MARKer1   2   3 :EDIT [ :STSTe ] ?                             |
| Marker Pulse Cycle Value        | [ :SOURce ] :RADio :ARB :MARKer1   2   3 :EDIT :CYCLe <numeric_value>                   |
|                                 | [ :SOURce ] :RADio :ARB :MARKer1   2   3 :EDIT :CYCLe ?                                 |
| Marker Pulse Start Offset Value | [ :SOURce ] :RADio :ARB :MARKer1   2   3 :EDIT :OFFSet <numeric_value>                  |
|                                 | [ :SOURce ] :RADio :ARB :MARKer1   2   3 :EDIT :OFFSet ?                                |
| Marker Pulse Width Value        | [ :SOURce ] :RADio :ARB :MARKer1   2   3 :EDIT :WIDTh <numeric_value>                   |
|                                 | [ :SOURce ] :RADio :ARB :MARKer1   2   3 :EDIT :WIDTh ?                                 |

### 2.7.1 Marker Polarity

`[[:SOURce]:RADio:ARB:MARKer1|2|3:POLarity POSitive|NEGative`

Marker Polarity

Function

This command sets the polarity of the external output marker signal.

Command

`[[:SOURce]:RADio:ARB:MARKer[n]:POLarity <polarity>`

Parameter

|                               |                              |
|-------------------------------|------------------------------|
| <code>&lt;n&gt;</code>        | Marker type                  |
| 1                             | Marker 1                     |
| 2                             | Marker 2                     |
| 3                             | Marker 3                     |
| <code>&lt;polarity&gt;</code> | Polarity                     |
| POSitive                      | Positive (Positive polarity) |
| NEGative                      | Negative (Negative polarity) |

Example of Use

To set the polarity of Marker 1 to negative.

`RAD:ARB:MARK1:POL NEG`

## `[:SOURce]:RADio:ARB:MARKer1|2|3:POLarity?`

Marker Polarity Query

### Function

This command queries the polarity of the external output marker signal.

### Query

```
[ :SOURce ] :RADio :ARB :MARKer [ n ] :POLarity ?
```

### Response

```
< polarity >
```

### Parameter

|                               |                              |
|-------------------------------|------------------------------|
| <code>&lt;n&gt;</code>        | Marker type                  |
| 1                             | Marker 1                     |
| 2                             | Marker 2                     |
| 3                             | Marker 3                     |
| <code>&lt;polarity&gt;</code> | Polarity                     |
| POS                           | Positive (Positive polarity) |
| NEG                           | Negative (Negative polarity) |

### Example of Use

To query the polarity of Marker 1.

```
RAD:ARB:MARK1:POL?
```

```
> POS
```

## 2.7.2 Marker Edit

`[[:SOURce]:RADio:ARB:MARKer1|2|3:EDIT[STATE] ON|OFF|1|0|PATSync`

Marker Edit

Function

This command specifies the user setting mode for the external output marker.

Command

`[[:SOURce]:RADio:ARB:MARKer[n]:EDIT[:STATE] <mode>`

Parameter

|                           |   |
|---------------------------|---|
| <code>&lt;n&gt;</code>    | Marker type   |
| 1                         | Marker 1  |
| 2                         | Marker 2  |
| 3                         | Marker 3  |
| <code>&lt;mode&gt;</code> | User setting mode   |
| ON 1                      | Outputs the user setting marker.                                |
| OFF 0                     | Outputs the marker previously recorded in the waveform pattern. |
| PATSync                   | Outputs the marker at the start of the waveform pattern.        |

Details

OFF|0 can be set only when a waveform with a resolution of 14 bit IQ data is selected. When a waveform with a resolution of 15 or 16 bits is selected, the following restriction applies:

15-bit resolution: Markers 2 and 3 cannot be set to OFF|0.

16-bit resolution: Markers 1 and 3 cannot be set to OFF|0.

Example of Use

To set the Marker 1 to user setting mode.

`RAD:ARB:MARK1:EDIT ON`

## `[ :SOURce ] :RADio :ARB :MARKer 1 | 2 | 3 :EDIT [ :STSTe ] ?`

Marker Edit Query

### Function

This command queries the user setting mode for the external output marker.

### Query

```
[ :SOURce ] :RADio :ARB :MARKer [ n ] :EDIT [ :STSTe ] ?
```

### Response

```
<mode>
```

### Parameter

|                           |   |
|---------------------------|---|
| <code>&lt;n&gt;</code>    | Marker type   |
| 1                         | Marker 1  |
| 2                         | Marker 2  |
| 3                         | Marker 3  |
| <code>&lt;mode&gt;</code> | User setting mode   |
| 1                         | Outputs the user setting marker.                                |
| 0                         | Outputs the marker previously recorded in the waveform pattern. |
| PATS                      | Outputs the marker at the start of the waveform pattern.        |

### Example of Use

To query the setting mode for the external output marker of Marker 1.

```
RAD:ARB:MARK1:EDIT?  
> 1
```



### 2.7.3 Marker Pulse Cycle Value

`[[:SOURce]:RADio:ARB:MARKer1|2|3:EDIT:CYCLe <numeric_value>`

Marker Edit Mode Cycle Value

#### Function

This command sets the output pulse cycle when the external output marker is set to the user setting marker.

#### Command

`[[:SOURce]:RADio:ARB:MARKer[n]:EDIT:CYCLe <numeric_value>`

#### Parameter

|                                    |                    |
|------------------------------------|--------------------|
| <code>&lt;n&gt;</code>             | Marker type        |
| 1                                  | Marker 1           |
| 2                                  | Marker 2           |
| 3                                  | Marker 3           |
| <code>&lt;numeric_value&gt;</code> | Output pulse cycle |

#### Example of Use

To set the output pulse cycle of Marker 1 to 200.  
`RAD:ARB:MARK1:EDIT:CYCL 200`

## `[[:SOURce]:RADio:ARB:MARKer1|2|3:EDIT:CYCLe?`

Marker Edit Mode Cycle Value Query

### Function

This command queries the output pulse cycle when the external output marker is set to the user setting marker.

### Query

```
[[:SOURce]:RADio:ARB:MARKer[n]:EDIT:CYCLe?
```

### Response

```
<numeric_value>
```

### Parameter

|                 |                    |
|-----------------|--------------------|
| <n>             | Marker type        |
| 1               | Marker 1           |
| 2               | Marker 2           |
| 3               | Marker 3           |
| <numeric_value> | Output pulse cycle |

### Example of Use

To query the output pulse cycle of Marker 1.

```
RAD:ARB:MARK1:EDIT:CYCL?  
> 200.00
```

## 2.7.4 Marker Pulse Start Offset Value

`[[:SOURce]:RADio:ARB:MARKer1|2|3:EDIT:OFFSet <numeric_value>`

Marker Edit Mode Start Offset Value

### Function

This command sets the output pulse starting offset when the external output marker is set to the user setting marker.

### Command

`[[:SOURce]:RADio:ARB:MARKer[n]:EDIT:OFFSet <numeric_value>`

### Parameter

|                                    |                       |
|------------------------------------|-----------------------|
| <code>&lt;n&gt;</code>             | Marker type           |
| 1                                  | Marker 1              |
| 2                                  | Marker 2              |
| 3                                  | Marker 3              |
| <code>&lt;numeric_value&gt;</code> | Starting offset value |

### Example of Use

To set the starting offset of marker 1 to 100.  
`RAD:ARB:MARK1:EDIT:OFFS 100`

## [[:SOURce]:RADio:ARB:MARKer1|2|3:EDIT:OFFSet?

Marker Edit Mode Start Offset Value Query

### Function

This command queries the output pulse starting offset when the external output marker is set to the user setting marker.

### Query

```
[[:SOURce]:RADio:ARB:MARKer[n]:EDIT:OFFSet?
```

### Response

```
<numeric_value>
```

### Parameter

|                 |                       |
|-----------------|-----------------------|
| <n>             | Marker type           |
| 1               | Marker 1              |
| 2               | Marker 2              |
| 3               | Marker 3              |
| <numeric_value> | Starting offset value |

### Example of Use

To query the starting offset value of Marker 1.

```
RAD:ARB:MARK1:EDIT:OFFS?  
> 100.00
```

### 2.7.5 Marker Pulse Width Value

`[[:SOURce]:RADio:ARB:MARKer1|2|3:EDIT:WIDTh <numeric_value>`

Marker Edit Mode Width Value

#### Function

This command sets the output pulse width when the external output marker is set to the user setting marker.

#### Command

`[[:SOURce]:RADio:ARB:MARKer[n]:EDIT:WIDTh <numeric_value>`

#### Parameter

|                                    |             |
|------------------------------------|-------------|
| <code>&lt;n&gt;</code>             | Marker type |
| 1                                  | Marker 1    |
| 2                                  | Marker 2    |
| 3                                  | Marker 3    |
| <code>&lt;numeric_value&gt;</code> | Pulse width |

#### Example of Use

To set the pulse width of marker 1 to 50.  
`RAD:ARB:MARK1:EDIT:WIDTh 50`

## `[[:SOURce]:RADio:ARB:MARKer1|2|3:EDIT:WIDTh?`

Marker Edit Mode Width Value Query

### Function

This command queries the output pulse width when the external output marker is set to the user setting marker.

### Query

```
[[:SOURce]:RADio:ARB:MARKer[n]:EDIT:WIDTh?
```

### Response

```
<numeric_value>
```

### Parameter

|                 |             |
|-----------------|-------------|
| <n>             | Marker type |
| 1               | Marker 1    |
| 2               | Marker 2    |
| 3               | Marker 3    |
| <numeric_value> | Pulse width |

### Example of Use

To query the pulse width of marker 1.

```
RAD:ARB:MARK1:EDIT:WIDTh?  
> 50.00
```

## 2.8 Setting Trigger to Be Output to SG Marker of SA/SPA

Table 2.8-1 shows the device messages for setting the trigger to be output to the SG marker of SA/SPA.

**Table 2.8-1 Device messages for setting the trigger to be output to the SG marker of SA/SPA**

| Function       | Device Messages                               |
|----------------|---|
| SA Trigger Out | :ROUte:SATRigger[:OUTPut] MARKer1 2 3 PATSync |
|                | :ROUte:SATRigger[:OUTPut]?                    |

### 2.8.1 SA Trigger Out

:ROUte:SATRigger[:OUTPut] MARKer1|2|3|PATSync

SA Trigger Out

Function

This command selects the type of the trigger to be output to the SG marker of SA/SPA.

Command

```
:ROUte:SATRigger[:OUTPut] <triggertoSA>
```

Parameter

|               |   |
|---------------|---|
| <triggertoSA> | Output trigger                                |
| MARKer1       | Marker 1                                      |
| MARKer2       | Marker 2                                      |
| MARKer3       | Marker 3                                      |
| PATSync       | A marker synchronized with the top of pattern |

Example of Use

To select the type of the trigger to be output to the SG marker of SA/SPA.  
ROUT:SATR MARK1

## :ROUTe:SATRigger[:OUTPut]?

SA Trigger Out Query

### Function

This command queries the type of the trigger to be output to the SG marker of SA/SPA.

### Query

```
:ROUTe:SATRigger[:OUTPut]?
```

### Response

```
<triggertoSA>
```

### Parameter

|               |   |
|---------------|---|
| <triggertoSA> | Output trigger                                |
| MARK1         | Marker 1                                      |
| MARK2         | Marker 2                                      |
| MARK3         | Marker 3                                      |
| PATS          | A marker synchronized with the top of pattern |

### Example of Use

To query the type of the trigger to be output to the SG marker of SA/SPA.

```
ROUT:SATR?  
> MARK1
```



## 2.9 Display Settings

Table 2.9-1 shows the device messages for setting the display function.

**Table 2.9-1 Device messages for setting the display function**

| Function           | Device Messages                       |
|--------------------|---------------------------------------|
| SG Window Position | :DISPlay[:WINDow]:POSition TOP BOTTom |
|                    | :DISPlay[:WINDow]:POSition?           |

2

SCPI Device Message

### 2.9.1 SG Window Position

:DISPlay[:WINDow]:POSition TOP|BOTTom

SG Window Position

Function

This command switches the display position of the Signal Generator screen.

Command

```
:DISPlay[:WINDow]:POSition <position>
```

Parameter

|            |                  |
|------------|------------------|
| <position> | Display position |
| TOP        | Top              |
| BOTTom     | Bottom           |

Example of Use

To display the Signal Generator screen at the lower portion.  
DISP:POS BOTT

## :DISPlay[:WINDow]:POSition?

SG Window Position Query

### Function

This command queries the display position of the Signal Generator screen.

### Query

```
:DISPlay[:WINDow]:POSition?
```

### Response

```
<position>
```

### Parameter

|            |                  |
|------------|------------------|
| <position> | Display position |
| TOP        | Top              |
| BOTT       | Bottom           |

### Example of Use

To query the display position of the Signal Generator screen.

```
DISP:POS?
```

```
> BOTT
```

## 2.10 Other Settings

Table 2.10-1 shows the device messages for setting other functions.

**Table 2.10-1 Device Messages for Other Settings**

| Function  | Device Messages |
|-----------|-----------------|
| SG Status | :STATus:ERRor?  |

2

SCPI Device Message

### 2.10.1 SG Status

:STATus:ERRor?

SG Status Query

Function

This command queries the SG operating status (normal/malfunction) when the application to be operated is SG.

Query

:STATus:ERRor?

Response

<status>

Parameter

<status>      Measurement status  
 Value            = bit0 + bit1 + bit2 + bit3 + bit4 + bit5 + bit6  
                   + bit7 + bit8 + bit9 + bit10 + bit11 + bit12  
                   + bit13 + bit14 + bit15

The bit assignments are as follows:

|                                |   |
|--------------------------------|---|
| bit0 : 2 <sup>0</sup> = 1      | Lock malfunction occurred while external reference signal source was being used |
| bit1 : 2 <sup>1</sup> = 2      | ALC circuit is abnormal.  |
| bit2 : 2 <sup>2</sup> = 4      | Outside level accuracy assurance  |
| bit3 : 2 <sup>3</sup> = 8      | (Not used)  |
| bit4 : 2 <sup>4</sup> = 16     | (Not used)  |
| bit5 : 2 <sup>5</sup> = 32     | (Not used)  |
| bit6 : 2 <sup>6</sup> = 64     | (Not used)  |
| bit7 : 2 <sup>7</sup> = 128    | (Not used)  |
| bit8 : 2 <sup>8</sup> = 256    | (Not used)  |
| bit9 : 2 <sup>9</sup> = 512    | (Not used)  |
| bit10 : 2 <sup>10</sup> = 1024 | (Not used)  |
| bit11 : 2 <sup>11</sup> = 2048 | (Not used)  |

bit12 :  $2^{12} = 4096$  (Not used)  
bit13 :  $2^{13} = 8192$  (Not used)  
bit14 :  $2^{14} = 16384$  (Not used)  
bit15 :  $2^{15} = 32768$  (Not used)

Range 0 to 65535

Details

0 is returned if the operation is normal.

Example of Use

To query the current operation status.

STAT:ERR?

> 0

## Chapter 3 Native Device Message List

---

This chapter describes remote control commands for executing functions of this application using a list organized by functions. Refer to Chapter 4 “Device Message Details” for detailed specifications for each command. Refer to the *MS2690A/MS2691A/MS2692A or MS2830A/MS2840A Signal Analyzer Operation Manual (Mainframe Remote Control)* for detailed specifications on IEEE488.2 common device messages and application common device messages.

|      |   |      |
|------|---|------|
| 3.1  | IEEE488.2 Common Device Messages .....              | 3-2  |
| 3.2  | Application Common Device Messages .....            | 3-4  |
| 3.3  | Frequency Settings .....                            | 3-7  |
| 3.4  | Level Settings .....                                | 3-8  |
| 3.5  | Controlling Waveform Patterns in Waveform Memory    | 3-10 |
| 3.6  | Controlling Waveform Patterns in HDD/SSD .....      | 3-12 |
| 3.7  | Modulation and AWGN Settings .....                  | 3-13 |
| 3.8  | External Input Signal Settings .....                | 3-14 |
| 3.9  | External Output Signal Settings .....               | 3-16 |
| 3.10 | Setting Trigger to Be Output to SG Marker of SA/SPA | 3-17 |
| 3.11 | Display Settings .....                              | 3-18 |

## 3.1 IEEE488.2 Common Device Messages

IEEE488.2 common device messages available in this application are shown in Table 3.1-1.

Table 3.1-1 IEEE488.2 common device messages

| Function                        | Command   | Query | Response                         | Remarks   |
|---------------------------------|-----------|-------|----------------------------------|---|
| Identification                  | ---       | *IDN? | ANRITSU,model,serial<br>,version | model: Main unit model name<br>serial: Main unit serial number<br>version: Software package version   |
| Operation Complete              | *OPC      | *OPC? | 1                                |   |
| Preset (All Application)        | *RST      | ---   | ---                              |   |
| Self Test                       | ---       | *TST? | result                           | Result: Self test results<br>= 0   1  |
| Wait to Continue                | *WAI      | ---   | ---                              |   |
| Clear Status                    | *CLS      | ---   | ---                              |   |
| Service Request Enable Register | *SRE byte | *SRE? | byte                             | byte =<br>bit7: EESB7<br>bit6: Not used<br>bit5: ESB<br>bit4: MAV<br>bit3: EESB3<br>bit2: EESB2<br>bit1: EESB1 (ERROR Event)<br>bit0: EESB0 (END Event) |

Table 3.1-1 IEEE488.2 common device messages (Continued)

| Function                              | Command   | Query | Response | Remarks   |
|---------------------------------------|-----------|-------|----------|---|
| Status Byte Register                  | ---       | *STB? | byte     | byte =<br>bit7: EESB7<br>bit6: MSS/RQS<br>bit5: ESB<br>bit4: MAV<br>bit3: EESB3<br>bit2: EESB2<br>bit1: EESB1 (ERROR Event)<br>bit0: EESB0 (END Event)                                  |
| Standard Event Status Enable Register | *ESE byte | *ESE? | byte     | byte =<br>bit7: Power on<br>bit6: User request<br>bit5: Command error<br>bit4: Execution error<br>bit3: Device error<br>bit2: Query error<br>bit1: Not used<br>bit0: Operation complete |
| Standard Event Status Register        | ---       | *ESR? | byte     |   |

## 3.2 Application Common Device Messages

Application common device messages available in this application are shown in Table 3.2-1.

**Table 3.2-1 Application common device messages**

| Function                         | Command             | Query    | Response      | Remarks  |
|----------------------------------|---------------------|----------|---------------|--|
| Application Switch               | SYS apl,window      | SYS? apl | status,window | apl: Application name<br>= SG<br>window: Window status<br>= ACT   INACT   MIN   NON<br>status: Application<br>execution status<br>= CURRENT   IDLE   RUN  <br>UNLOAD |
| Preset (All Application)         | *RST                | ---      | ---           |  |
| Preset (Active Application only) | PRE                 | ---      | ---           |  |
|                                  | INI                 | ---      | ---           |  |
| System Restart                   | REBOOT              | ---      | ---           |  |
| LCD Power                        | DISPLAY on_off      | DISPLAY? | on_off        |  |
| Error Display Mode               | REMDISP mode        | REMDISP? | mode          | mode : Display mode<br>= NORMAL   REMAIN  <br>REMAIN_LAST  |
| Save Parameter                   | SVPRM               | ---      | ---           | fname : Filename   |
|                                  | SVPRM fname,dev     | ---      | ---           | dev Drive name<br>= D   E   ...  |
| Recall Parameter                 | RCPRM fname,dev,apl | ---      | ---           | fname : Filename<br>dev Drive name<br>= D   E   ...  |
|                                  | RCPRM fname,dev     | ---      | ---           | apl : Target application<br>= ALL   CURR   |



Table 3.2-1 Application common device messages (Continued)

| Function                                    | Command          | Query | Response | Remarks   |
|---|------------------|-------|----------|---|
| Hard Copy                                   | PRINT            | ---   | ---      | fname : Filename  |
|   | PRINT fname, dev | ---   | ---      | dev Drive name<br>= D   E   ...   |
| Hard Copy Mode                              | PMOD format      | PMOD? | format   | format : Specifies file format  |
|   | PMOD             | PMOD? | BMP      | = BMP   PNG   |
| Extended End Event Status Enable Register   | ESE0 n           | ESE0? | byte     | byte = Status bit<br>bit7 : Not used  |
| Extended End Event Status Register          | ---              | ESR0? | byte     | bit6 : Not used<br>bit5 : Not used<br>bit4 : Not used<br>bit3 : Not used<br>bit2 : Not used<br>bit1 : Not used<br>bit0 : Signal Generator |
| Extended Error Event Status Enable Register | ESE1 n           | ESE1? | byte     | byte = Status bit<br>bit7 : Not used  |
| Extended Error Event Status Register        | ---              | ESR1? | byte     | bit6 : Not used<br>bit5 : Not used<br>bit4 : Not used<br>bit3 : Not used<br>bit2 : Not used<br>bit1 : Not used<br>bit0 : Signal Generator |

Table 3.2-1 Application common device messages (Continued)

| Function                           | Command  | Query    | Response | Remarks   |
|------------------------------------|----------|----------|----------|---|
| END Event Status Enable Register   | ESEEND n | ESEEND?  | byte     | byte = Status bit<br>bit7 : Not used<br>bit6 : Not used<br>bit5 : Waveform pattern copied<br>bit4 : Waveform pattern loaded         |
| END Event Status Register          | ---      | ESREND?  | byte     | bit3 : Not used<br>bit2 : Not used<br>bit1 : Not used<br>bit0 : Not used  |
| ERROR Event Status Enable Register | ESEERR n | ESEERR?  | byte     | byte = Status bit<br>bit7 : Not used<br>bit6 : Not used<br>bit5 : Waveform pattern copy error<br>bit4 : Waveform pattern load error |
| ERROR Event Status Register        | ---      | ESREERR? | byte     | bit3 : Not used<br>bit2 : Not used<br>bit1 : Not used<br>bit0 : Not used  |

## 3.3 Frequency Settings

Device messages for setting frequencies are shown in Table 3.3-1.

**Table 3.3-1** Frequency setting messages

| Function               | Command     | Query  | Response | Remarks                                    |
|------------------------|-------------|--------|----------|--|
| Frequency              | FREQ freq   | FREQ?  | freq     |  |
| Frequency Step Value   | FIS freq    | FIS?   | freq     |  |
| Frequency Step Up/Down | FRS up_down | ---    | ---      |  |
| RF Spectrum            | SPREV mode  | SPREV? | mode     | mode: Invert output waveform<br>= ON   OFF |

## 3.4 Level Settings

Device messages for setting levels are shown in Tables 3.4-1 to 3.4-2.

**Table 3.4-1 Level setting messages**

| Function                    | Command     | Query      | Response | Remarks   |
|-----------------------------|-------------|------------|----------|---|
| RF Output                   | LVL on_off  | LVL?       | on_off   |   |
| Output Level                | OLVL level  | OLVL? unit | level    | unit: Units<br>= DBM   DBU                        |
| Output Level Step Value     | OIS level   | OIS?       | level    |   |
| Output Level Step           | OLS up_down | ---        | ---      | up_down: Up/Down<br>= UP   DOWN   DN              |
| Output Level Unit           | OLU unit    | OLU?       |          | unit: Units<br>= DBM   DBU                        |
| Volt Unit Display           | VDSPL unit  | VDSPL?     | unit     | unit: Voltage unit display system<br>= EMF   TERM |
| Level Offset                | OOF on_off  | OOF?       | on_off   |   |
| Level Offset Value          | OOS level   | OOS?       | level    |   |
| Relative Level              | ORL on_off  | ORL?       | on_off   |   |
| Relative Level Value        | ORLV level  | ORLV?      | level    |   |
| Reference of Relative Level | ---         | ORLR?      | level    |   |

Table 3.4-1 Level setting messages (Continued)

| Function             | Command | Query      | Response   | Remarks   |
|----------------------|---------|------------|--|---|
| SG Level Calibration | LVLCAL  | ---        | ---  |   |
| ALC Status           | ---     | ALCSTT?    | status   | status: ALC status<br>= NORMAL   ALCALARM   |
| Unleveled Status     | --      | LVLACCSTT? | unleveled  | unleveled: Output level accuracy<br>status<br>= NORMAL   UNLEVELED  |
| Level Status List    | ---     | LVLSTTLST? | unit,offset,unleveled,INTALC,CONTOFF,relative,NORMAL | unit: Voltage unit display<br>= EMF   TERM<br>offset: Level offset<br>= OFFSETON   OFFSETOFF<br>unleveled: Output level accuracy<br>status<br>= NORMAL   UNLEVELED<br>INTALC : Fixed Value<br>CONTOFF : Fixed Value<br>relative: Relative output mode<br>= RELON   RELOFF<br>NORMAL : Fixed Value |

## 3.5 Controlling Waveform Patterns in Waveform Memory

Tables 3.5-1 and Table 3.5-2 show the device messages for controlling waveform patterns loaded into the waveform memory.

**Table 3.5-1 Controlling waveform patterns in waveform memory**

| Function   | Command                           | Query          | Response         | Remarks  |
|--|-----------------------------------|----------------|------------------|--|
| Waveform Restart   | DLRES                             | ---            | ---              |  |
| Waveform Status  | ---                               | PATRUNSTT?     | status           | status : playback status<br>= STOP   PLAY        |
| Select Pattern file on Wave Memory                             | LOADEDFILESEL<br>package, pattern | LOADEDFILESEL? | package, pattern | package : package name<br>pattern : pattern name |
|  | PAT package, pattern              | PAT?           | package, pattern |  |
| Delete Pattern file on Wave Memory                             | DELFILEWM<br>package, pattern     | ---            | ---              |  |
|  | DELPATWM<br>package, pattern      | ---            | ---              |  |
| Delete All Pattern files on Wave Memory<br>(Clear Wave Memory) | DELFILEWM ALL                     | ---            | ---              |  |
| Number of loaded pattern files                                 | ---                               | LOADEDFILENUM? | number           | number : Waveform pattern                        |
|  | ---                               | PATNUM?        | number           | number   |

Table 3.5-2 Controlling waveform patterns in waveform memory (Continued)

| Function                     | Command | Query                     | Response              | Remarks  |
|------------------------------|---------|---------------------------|-----------------------|--|
| List of Loaded Pattern Files | ---     | LOADEDFILENAME?<br>number | package, pattern      | number : Waveform pattern<br>number  |
|                              | ---     | PATNAME? number           | package, pattern      | package : package name<br>pattern : pattern name   |
| Wave Memory Size             | ---     | WMSPC?                    | blank1, blank2, total | blank1 : Free memory space (byte)<br>blank2 : Contiguous free memory<br>space (byte)<br>total : Total memory space |

## 3.6 Controlling Waveform Patterns in HDD/SSD

Table 3.6-1 shows the device messages for controlling waveform patterns in the HDD/SSD.

**Table 3.6-1 Controlling waveform patterns in HDD/SSD**

| Function  | Command                        | Query                        | Response     | Remarks  |
|---|--------------------------------|------------------------------|--------------|--|
| Load Pattern File /<br>Query Load Status and Wave<br>Memory | LDFILE<br>package, pattern     | LDFILE?<br>package, pattern  | status       | package : package name<br>pattern : pattern name<br>status : Loaded          |
|   | LDPAT<br>package, pattern      | LDPAT?<br>package, pattern   |              |  |
| Cancel Loading  | LDCANCEL                       | ---                          | ---          |  |
| Pattern File Version  | ---                            | FILEVER?<br>package, pattern | version      | package : package name<br>pattern : pattern name<br>version : Version number |
| HDD/SSD Size  | ---                            | HDDSPC?                      | total, blank | total : Total HDD/SSD capacity<br>blank : Free space in HDD/SSD              |
| Copy pattern file to HDD/SSD                                | CPYPATTOHDD<br>drive, package  | ---                          | ---          | drive : Name of destination<br>drive<br>package : package name               |
| Delete Pattern file on HDD/SSD                              | DELFILEHDD<br>package, pattern | ---                          | ---          | package : package name<br>pattern : pattern name                             |
|   | DELPATHDD<br>package, pattern  | ---                          | ---          |  |



## 3.7 Modulation and AWGN Settings

Device messages for setting modulation and AWGN are shown in Table 3.7-1.

**Table 3.7-1 Modulation and AWGN setting messages**

| Function              | Command                  | Query             | Response | Remarks   |
|-----------------------|--------------------------|-------------------|----------|---|
| Modulation            | MOD on_off               | MOD?              | on_off   |   |
| Sampling Clock        | ---                      | SAMPLINGCLK?      | freq     |   |
| AWGN                  | AWGN on_off              | AWGN?             | on_off   |   |
| C/N Ratio             | PATWMPowRATIO level      | PATWMPowRATIO?    | level    |   |
| Target of C/N Setting | POWRATIOTARGET<br>target | POWERRATIOTARGET? | target   | target : target to change<br>= CARRIER   NOISE   CONSTANT |
| Carrier Power         | CARRIERPOW level         | CARRIERPOW?       | level    |   |

## 3.8 External Input Signal Settings

Device messages for external input settings are shown in Table 3.8-1.

**Table 3.8-1 External input signal setting messages**

| Function                           | Command          | Query      | Response   | Remarks  |
|------------------------------------|------------------|------------|------------|--|
| External Trigger                   | SFTRG on_off     | SFTRG?     | on_off     |  |
| External Trigger Source            | STDLYSRC source  | STDLYSRC?  | source     | source : signal source<br>= EXTTRG   KEY   BUS   |
| External Trigger Mode              | SFTRGMODE mode   | SFTRGMODE? | mode       | mode : operating time<br>= START   FRAME   |
|                                    | STGS mode        | STGS?      | mode       | mode : operating time<br>= INT   EXTSTA   EXTFRM   |
| External Trigger Delay             | STDLYSYM delay   | STDLYSYM?  | delay      | delay : delay time<br>= (Number of symbols or chips)                                     |
|                                    | ---              | STDLYTIME? | time       | time : delay time (s)  |
| External Trigger Edge              | EIST edge        | EIST?      | edge       | edge : polarity<br>= RISE   FALL   |
| Baseband Reference Clock Source    | REFCLKSRC source | REFCLKSRC? | source INT | source : clock source<br>= INT   EXT   |
| Baseband Reference Clock           | REFCLKVAL clock  | REFCLKVAL? | clock      | clock : reference clock<br>= SIXTEENTH   EIGHTH   QUARTER<br>  HALF   1   2   4   8   16 |
| Baseband Reference Clock Condition | ---              | BBREFCOND? | status     | status : lock status<br>= NORMAL   CHKEXT  |
| Pulse Modulation Source            | PMO source       | PMO?       | source     | source : signal source<br>= INT   EXT   OFF  |

**Table 3.8-1 External input signal setting messages (Cont'd)**

| <b>Function</b>        | <b>Command</b>     | <b>Query</b> | <b>Response</b> | <b>Remarks</b>                    |
|------------------------|--------------------|--------------|-----------------|-----------------------------------|
| Frame Count            | FRAMECOUNT integer | FRAMECOUNT?  | integer         | integer : Number of output frames |
| Remote Command Trigger | SFTGGENBUS         | ---          | ---             |                                   |

## 3.9 External Output Signal Settings

Device messages for external output settings are shown in Table 3.9-1.

**Table 3.9-1 External output signal setting messages**

| Function                        | Command                           | Query                       | Response | Remarks   |
|---------------------------------|-----------------------------------|-----------------------------|----------|---|
| Marker Edit                     | MARKEREDIT<br>marker,mode         | MARKEREDIT? marker          | mode     | marker : marker type<br>= 1   2   3<br>mode : marker mode<br>= OFF   ON   PATSYNC   |
| Marker Polarity                 | MARKERPOL<br>marker,polarity      | MARKERPOL? marker           | polarity | marker : marker type<br>= 1   2   3<br>polarity : polarity<br>= POSITIVE   NEGATIVE |
| Marker Pulse Start Offset Value | MARKEREDITOFFSET<br>marker,offset | MARKEREDITOFFSET?<br>marker | offset   | marker : marker type<br>= 1   2   3<br>offset : pulse start offset                  |
| Marker Pulse Width Value        | MARKEREDITWIDTH<br>marker,width   | MARKEREDITWIDTH?<br>marker  | width    | marker : marker type<br>= 1   2   3<br>width : pulse width                          |
| Marker Pulse Cycle Value        | MARKEREDITCYCLE<br>marker,cycle   | MARKEREDITCYCLE?<br>marker  | cycle    | marker : marker type<br>= 1   2   3<br>cycle : pulse cycle                          |

## 3.10 Setting Trigger to Be Output to SG Marker of SA/SPA

Tables 3.10-1 shows the device messages for setting the trigger to be output to the SG marker of SA/SPA.

**Table 3.10-1 Setting trigger to be output to SG marker of SA/SPA**

| Function       | Command               | Query      | Response    | Remarks  |
|----------------|-----------------------|------------|-------------|--|
| SA Trigger Out | SATRGOOUT triggertoSA | SATRGOOUT? | triggertoSA | triggertoSA: trigger selection<br>= MARKER1   MARKER2  <br>MARKER3   PATSYNC |

## 3.11 Display Settings

Device messages for display settings are shown in Table 3.11-1.

**Table 3.11-1 Display setting messages**

| Function           | Command              | Query        | Response | Remarks                                       |
|--------------------|----------------------|--------------|----------|---|
| SG Window Position | SGWINDOWPOS position | SGWINDOWPOS? | position | position : display position<br>= TOP   BOTTOM |

## Chapter 4 Native Device Message Details

---

This chapter describes detailed specifications on remote control commands for executing functions of this application, in alphabetical order. Refer to the *MS2690A/MS2691A/MS2692A and MS2830A/MS2840A Signal Analyzer Operation Manual (Mainframe Remote Control)* for detailed specifications of the IEEE488.2 common device messages and application common device messages.

|                                   |      |
|-----------------------------------|------|
| ALCSTT? .....                     | 4-3  |
| AWGN/AWGN?.....                   | 4-4  |
| BBREFCOND?.....                   | 4-5  |
| CARRIERPOW/CARRIERPOW? .....      | 4-6  |
| CPYPATTOHDD .....                 | 4-7  |
| DELFILEHDD.....                   | 4-8  |
| DELFILEWMM .....                  | 4-9  |
| DELPATHDD .....                   | 4-10 |
| DELPATWMM.....                    | 4-10 |
| DLRES .....                       | 4-10 |
| EIST/EIST? .....                  | 4-11 |
| ESE0/ESE0?.....                   | 4-12 |
| ESE1/ESE1?.....                   | 4-13 |
| ESEEND/ESEEND?.....               | 4-14 |
| ESEERR/ESEERR?.....               | 4-15 |
| ESR0?.....                        | 4-16 |
| ESR1?.....                        | 4-17 |
| ESREND? .....                     | 4-18 |
| ESRERR? .....                     | 4-19 |
| FILEVER? .....                    | 4-20 |
| FIS/FIS? .....                    | 4-21 |
| FRAMECOUNT/FRAMECOUNT? .....      | 4-22 |
| FREQ/FREQ? .....                  | 4-23 |
| FRS .....                         | 4-24 |
| HDDSPC? .....                     | 4-25 |
| INI .....                         | 4-26 |
| LDCANCEL .....                    | 4-27 |
| LDFILE/LDFILE?.....               | 4-28 |
| LDPAT/LDPAT?.....                 | 4-29 |
| LOADEDFILENAME? .....             | 4-30 |
| LOADEDFILENUM?.....               | 4-31 |
| LOADEDFILESEL/LOADEDFILESEL?..... | 4-32 |
| LVL/LVL? .....                    | 4-33 |
| LVLACCSTT? .....                  | 4-34 |
| LVLCAL.....                       | 4-35 |

|  |      |
|--|------|
| LVLSTTLST? .....                         | 4-36 |
| MARKEREDIT/MARKEREDIT? .....             | 4-37 |
| MARKEREDITCYCLE/MARKEREDITCYCLE? .....   | 4-38 |
| MARKEREDITOFFSET/MARKEREDITOFFSET? ..... | 4-39 |
| MARKEREDITWIDTH/MARKEREDITWIDTH? .....   | 4-40 |
| MARKERPOL/MARKERPOL? .....               | 4-41 |
| MOD/MOD? .....                           | 4-42 |
| OIS/OIS? .....                           | 4-43 |
| OLS .....                                | 4-44 |
| OLU/OLU? .....                           | 4-45 |
| OLVL/OLVL? .....                         | 4-46 |
| OOF/OOF? .....                           | 4-47 |
| OOS/OOS? .....                           | 4-48 |
| ORL/ORL? .....                           | 4-49 |
| ORLR? .....                              | 4-50 |
| ORLV/ORLV? .....                         | 4-51 |
| PAT .....                                | 4-52 |
| PATNAME? .....                           | 4-52 |
| PATNUM? .....                            | 4-52 |
| PATRUNSTT? .....                         | 4-53 |
| PATWMPOWRATIO/PATWMPOWRATIO? .....       | 4-54 |
| PMO/PMO? .....                           | 4-55 |
| POWRATIOTARGET/POWRATIOTARGET? .....     | 4-56 |
| PRE .....                                | 4-57 |
| REFCLKSRC/REFCLKSRC? .....               | 4-58 |
| REFCLKVAL/REFCLKVAL? .....               | 4-59 |
| SAMPLINGCLK? .....                       | 4-61 |
| SATRGOUT/SATRGOUT? .....                 | 4-62 |
| SFTGGENBUS .....                         | 4-63 |
| SFTRG/SFTRG? .....                       | 4-63 |
| SFTRGMODE/SFTRGMODE? .....               | 4-64 |
| SGWINDOWPOS/SGWINDOWPOS? .....           | 4-65 |
| SPREV/SPREV? .....                       | 4-66 |
| STDLYSRC/STDLYSRC? .....                 | 4-67 |
| STDLYSYM/STDLYSYM? .....                 | 4-68 |
| STDLYTIME? .....                         | 4-69 |
| STGS/STGS? .....                         | 4-70 |
| SYS/SYS? .....                           | 4-71 |
| VDSPL/VDSPL? .....                       | 4-72 |
| WMSPC? .....                             | 4-72 |



## ALCSTT?

ALC Status Query

Function

This command queries the output level alarm information.

Query

ALCSTT?

Response

status

Parameter

|          |                          |
|----------|--------------------------|
| status   | Level alarm status       |
| NORMAL   | Normal state             |
| ALCALARM | ALC circuit is abnormal. |

Example of Use

To query level alarm status.  
ALCSTT?

## AWGN/AWGN?

AWGN

Function

This command turns AWGN output ON/OFF.

Command

AWGN on\_off

Query

AWGN?

Response

on\_off

Parameter

|        |                    |
|--------|--------------------|
| on_off | AWGN output On/Off |
| ON     | On                 |
| OFF    | Off                |

Details

Outputs a signal with AWGN added when AWGN is ON.

The AWGN output function can be set to ON or OFF only when a waveform pattern file is selected and the modulation is enabled (ON).

The AWGN output function is automatically set to OFF when a waveform pattern is changed.

Example of Use

To add AWGN to output signal.

AWGN ON

## BBREFCOND?

Baseband Reference Clock Condition

Function

This command queries the lock status of the baseband reference clock.

Query

BBREFCOND?

Response

status

Parameter

|        |  |
|--------|--|
| status | Lock status of reference clock   |
| NORMAL | Normal   |
| CHKEXT | Lock abnormal status when an external reference signal source is used. |

Example of Use

To query the lock status of the baseband reference clock.  
BBREFCOND?

## CARRIERPOW/CARRIERPOW?

Carrier Power

Function

This command sets the carrier signal level when AWGN is ON.

Command

CARRIERPOW level

Query

CARRIERPOW?

Response

level

Parameter

level Carrier signal level when AWGN is ON.

Range

Resolution 0.01 dB

Suffix code DBM

Example of Use

To set the carrier signal level when AWGN is ON to -55.0 dBm.

AWGN ON

CARRIERPOW -55.0DBM

Related Command

AWGN

AWGN On/Off setting

## CPYPATTOHDD

Copy pattern file to HDD/SSD

### Function

This command copies the waveform pattern file from the specified drive to the internal HDD/SSD. Specify a waveform pattern by using a package name. The package name is the name of the folder that stores the waveform pattern file.

### Command

```
CPYPATTOHDD drive,package
```

### Parameter

|         |   |
|---------|---|
| drive   | Copy source drive name (D to Z, D when omitted)     |
| package | Package name to copy (Character string)<br>Or, ROOT |

### Details

An error occurs when the specified drive or waveform pattern file cannot be found.

When the package name (package) is omitted, all the packages in the root folder of the specified drive will be copied.

When ROOT is specified for <package>, all the patterns in the root folder of the specified drive will be copied.

### Example of Use

To copy the waveform pattern in the package "WCDMA" of Drive D to the internal HDD/SSD.

```
CPYPATTOHDD D,"WCDMA"
```

## DELFILEHDD

Delete Pattern file on HDD/SSD

### Function

This command deletes the waveform pattern file on the HDD/SSD.

### Command

```
DELFILEHDD package, pattern
```

### Parameter

|         |                                 |
|---------|---------------------------------|
| package | Package name (Character string) |
| pattern | Pattern name (Character string) |

### Details

This command does not delete waveform patterns in the waveform memory.

### Example of Use

To delete the "TEST" pattern in the package "WCDMA".  
DELFILEHDD "WCDMA", "TEST"

### Related Command

|           |                    |
|-----------|--------------------|
| DELPATHDD | Same as DELFILEHDD |
|-----------|--------------------|

## DELFILEWM

Delete Pattern file on Waveform Memory

### Function

This command deletes the waveform pattern file in the waveform memory.

### Command

```
DELFILEWM package, pattern
DELFILEWM ALL
```

### Parameter

|         |                                 |
|---------|---------------------------------|
| package | Package name (Character string) |
| ALL     | Deleting All Waveform Patterns  |
| pattern | Pattern name (Character string) |

### Details

This command does not delete waveform patterns on the HDD/SSD.

### Example of Use

To delete the "TEST" pattern in the package "WCDMA".  
`DELFILEWM "WCDMA", "TEST"`

### Related Command

|          |                   |
|----------|-------------------|
| DELPATWM | Same as DELFILEWM |
|----------|-------------------|

## DELPATHDD

Delete Pattern file on HDD/SSD

Function

This command deletes the waveform pattern file on the HDD/SSD.

Same as DELFILEHDD. Refer to section explaining DELFILEHDD.

## DELPATWM

Delete Pattern file on Waveform Memory

Function

This command deletes the waveform pattern file in the waveform memory.

Same as DELFILEWWM. Refer to section explaining DELFILEWWM.

## DLRES

Waveform Restart

Function

This command plays waveform pattern from the beginning.

Command

DLRES

Example of Use

To play waveform pattern from the beginning.

DLRES



## EIST/EIST?

External Trigger Edge

Function

This command sets the polarity of the external trigger input.

Command

EIST edge

Query

EIST?

Response

edge

Parameter

|      |                           |
|------|---------------------------|
| edge | External trigger polarity |
| RISE | Rise                      |
| FALL | Fall                      |

Example of Use

To set the external trigger polarity to Fall.  
EIST FALL

Related Command

SFTRG                      External trigger On/Off setting.

## ESE0/ESE0?

Extended End Event Status Enable Register

### Function

This command sets the extended end event status enable register. When an end event occurs in the specified application, the end summary bit (ESB) value of the corresponding status byte register is set to 1 (true).

### Command

ESE0 n

### Query

ESE0?

### Response

n

### Parameter

n                      Extended end event status enable register  
Value = bit0 + bit1 + ... + bit7

|                    |                                  |
|--------------------|----------------------------------|
| bit7 = $2^7 = 128$ | Bit 7: Not used                  |
| bit6 = $2^6 = 64$  | Bit 6: Not used                  |
| bit5 = $2^5 = 32$  | Bit 5: Not used                  |
| bit4 = $2^4 = 16$  | Bit 4: Not used                  |
| bit3 = $2^3 = 8$   | Bit 3: Not used                  |
| bit2 = $2^2 = 4$   | Bit 2: Not used                  |
| bit1 = $2^1 = 2$   | Bit 1: Not used                  |
| bit0 = $2^0 = 1$   | Bit 0: Signal Generator Function |

### Details

Set the sum of the values for bits to be enabled to the parameter, from the values  $2^0 = 1$ ,  $2^1 = 2$ ,  $2^2 = 4$ ,  $2^3 = 8$ ,  $2^4 = 16$ ,  $2^5 = 32$ ,  $2^6 = 64$ , and  $2^7 = 128$ , corresponding to the extended end event status enable register bits 0, 1, 2, 3, 4, 5, 6, and 7.

### Example of Use

To enable an end event for the Signal Generator function.  
ESE0 1

### Related Command

ESR0?                      Extended end event status register query.

## ESE1/ESE1?

Extended Error Event Status Enable Register

### Function

This command sets the extended error event status enable register. When an error event occurs in the specified application, the end summary bit (ESB) value of the corresponding status byte register is set to 1 (true).

### Command

ESE1 n

### Query

ESE1?

### Response

n

### Parameter

n                      Extended error event status enable register  
Value = bit0 + bit1 + ... + bit7

|                    |                                  |
|--------------------|----------------------------------|
| bit7 = $2^7 = 128$ | Bit 7: Not used                  |
| bit6 = $2^6 = 64$  | Bit 6: Not used                  |
| bit5 = $2^5 = 32$  | Bit 5: Not used                  |
| bit4 = $2^4 = 16$  | Bit 4: Not used                  |
| bit3 = $2^3 = 8$   | Bit 3: Not used                  |
| bit2 = $2^2 = 4$   | Bit 2: Not used                  |
| bit1 = $2^1 = 2$   | Bit 1: Not used                  |
| bit0 = $2^0 = 1$   | Bit 0: Signal Generator Function |

### Details

Set the sum of the values for bits to be enabled to the parameter, from the values  $2^0 = 1$ ,  $2^1 = 2$ ,  $2^2 = 4$ ,  $2^3 = 8$ ,  $2^4 = 16$ ,  $2^5 = 32$ ,  $2^6 = 64$ , and  $2^7 = 128$ , corresponding to the extended error event status enable register bits 0, 1, 2, 3, 4, 5, 6, and 7.

### Example of Use

To enable an error event for the Signal Generator function.

ESE1 1

### Related Command

ESR1?                      Extended error event status register query.

## ESEEND/ESEEND?

End Event Status Enable Register

### Function

This command sets the end event status enable register that can be used for the Signal Generator function. When a specified end event occurs, the end summary bit (ESB) value corresponding to the event is set to 1 (true).

### Command

ESEEND n

### Query

ESEEND?

### Response

n

### Parameter

n                      End event status enable register

Value = bit0 + bit1 + ... + bit7

#### Signal Generator function

bit7 =  $2^7 = 128$       Bit 7: Not used

bit6 =  $2^6 = 64$         Bit 6: Not used

bit5 =  $2^5 = 32$         Bit 5: Completion of waveform pattern copy

bit4 =  $2^4 = 16$         Bit 4: Completion of waveform pattern loading  
to waveform memory

bit3 =  $2^3 = 8$          Bit 3: Not used

bit2 =  $2^2 = 4$          Bit 2: Not used

bit1 =  $2^1 = 2$          Bit 1: Not used

bit0 =  $2^0 = 1$          Bit 0: Not used

### Details

Set the sum of the values for bits to be enabled to the parameter, from the values  $2^0 = 1$ ,  $2^1 = 2$ ,  $2^2 = 4$ ,  $2^3 = 8$ ,  $2^4 = 16$ ,  $2^5 = 32$ ,  $2^6 = 64$ , and  $2^7 = 128$ , corresponding to the end event status enable register bits 0, 1, 2, 3, 4, 5, 6, and 7.

### Example of Use

To enable the waveform pattern loading completion event.

```
SYS SG  
ESEEND 16
```

### Related Command

ESREND?                      End event status register query.

## ESEERR/ESEERR?

Error Event Status Enable Register

### Function

This command sets the error event status enable register that can be used for the Signal Generator function. When a specified error event occurs, the error summary bit (ESB) value corresponding to the event is set to 1 (true).

This command can be used for the currently active function.

### Command

```
ESEERR n
```

### Query

```
ESEERR?
```

### Response

```
n
```

### Parameter

n Error event status enable register

Value = bit0 + bit1 + ... + bit7

#### Signal Generator function

bit7 =  $2^7 = 128$

Bit 7: Not used

bit6 =  $2^6 = 64$

Bit 6: Not used

bit5 =  $2^5 = 32$

Bit 5: Waveform pattern copy error

bit4 =  $2^4 = 16$

Bit 4: Waveform pattern loading to waveform memory error

bit3 =  $2^3 = 8$

Bit 3: Not used

bit2 =  $2^2 = 4$

Bit 2: Not used

bit1 =  $2^1 = 2$

Bit 1: Not used

bit0 =  $2^0 = 1$

Bit 0: Not used

### Details

Set the sum of the values for bits to be enabled to the parameter, from the values  $2^0 = 1$ ,  $2^1 = 2$ ,  $2^2 = 4$ ,  $2^3 = 8$ ,  $2^4 = 16$ ,  $2^5 = 32$ ,  $2^6 = 64$ , and  $2^7 = 128$ , corresponding to the error event status enable register bits 0, 1, 2, 3, 4, 5, 6, and 7.

### Example of Use

To enable the waveform pattern loading error event.

```
SYS SG
```

```
ESEEND 16
```

### Related Command

```
ESEERR?
```

Error event status register query.

## ESR0?

Extended End Event Status Register Query

Function

This command queries the extended end event status.

Query

ESR0?

Response

n

Parameter

n                      Extended End Event Status register  
Value = bit0 + bit1 + ... + bit7

|                    |                                  |
|--------------------|----------------------------------|
| bit7 = $2^7 = 128$ | Bit 7: Not used                  |
| bit6 = $2^6 = 64$  | Bit 6: Not used                  |
| bit5 = $2^5 = 32$  | Bit 5: Not used                  |
| bit4 = $2^4 = 16$  | Bit 4: Not used                  |
| bit3 = $2^3 = 8$   | Bit 3: Not used                  |
| bit2 = $2^2 = 4$   | Bit 2: Not used                  |
| bit1 = $2^1 = 2$   | Bit 1: Not used                  |
| bit0 = $2^0 = 1$   | Bit 0: Signal Generator Function |

Details

The response is the sum of the values  $2^0 = 1$ ,  $2^1 = 2$ ,  $2^2 = 4$ ,  $2^3 = 8$ ,  $2^4 = 16$ ,  $2^5 = 32$ ,  $2^6 = 64$ , and  $2^7 = 128$ , corresponding to the extended end event status register bits 0, 1, 2, 3, 4, 5, 6, and 7. When a response is read, the extended end event status register value is cleared.

Example of Use

To query the extended end event status register.  
ESR0?

Related Command

ESE0                      Extended END event status enable register contents

## ESR1?

Extended Error Event Status Register Query

Function

This command queries the extended error event status.

Query

ESR1?

Response

n

Parameter

n Extended Error Event Status register  
Value = bit0 + bit1 + ... + bit7

|                             |                                  |
|-----------------------------|----------------------------------|
| bit7 = 2 <sup>7</sup> = 128 | Bit 7: Not used                  |
| bit6 = 2 <sup>6</sup> = 64  | Bit 6: Not used                  |
| bit5 = 2 <sup>5</sup> = 32  | Bit 5: Not used                  |
| bit4 = 2 <sup>4</sup> = 16  | Bit 4: Not used                  |
| bit3 = 2 <sup>3</sup> = 8   | Bit 3: Not used                  |
| bit2 = 2 <sup>2</sup> = 4   | Bit 2: Not used                  |
| bit1 = 2 <sup>1</sup> = 2   | Bit 1: Not used                  |
| bit0 = 2 <sup>0</sup> = 1   | Bit 0: Signal Generator Function |

Details

The response is the sum of the values 2<sup>0</sup> = 1, 2<sup>1</sup> = 2, 2<sup>2</sup> = 4, 2<sup>3</sup> = 8, 2<sup>4</sup> = 16, 2<sup>5</sup> = 32, 2<sup>6</sup> = 64, and 2<sup>7</sup> = 128, corresponding to the extended error event status register bits 0, 1, 2, 3, 4, 5, 6, and 7. When a response is read, the extended error event status register value is cleared.

Example of Use

To query the extended error event status register.  
ESR1?

Related Command

ESE1 Extended ERROR event status enable register contents

## ESREND?

Event Status Register Query

Function

This command queries the end event status that is used for the Signal Generator.

Query

ESREND?

Response

n

Parameter

n                      End Event Status register  
Value = bit0 + bit1 + ... + bit7

Signal Generator function

|                    |   |
|--------------------|---|
| bit7 = $2^7 = 128$ | Bit 7: Not used   |
| bit6 = $2^6 = 64$  | Bit 6: Not used   |
| bit5 = $2^5 = 32$  | Bit 5: Completion of waveform pattern copy                          |
| bit4 = $2^4 = 16$  | Bit 4: Completion of waveform pattern loading<br>to waveform memory |
| bit3 = $2^3 = 8$   | Bit 3: Not used   |
| bit2 = $2^2 = 4$   | Bit 2: Not used   |
| bit1 = $2^1 = 2$   | Bit 1: Not used   |
| bit0 = $2^0 = 1$   | Bit 0: Not used   |

Details

The response is the sum of the values  $2^0 = 1$ ,  $2^1 = 2$ ,  $2^2 = 4$ ,  $2^3 = 8$ ,  $2^4 = 16$ ,  $2^5 = 32$ ,  $2^6 = 64$ , and  $2^7 = 128$ , corresponding to the error event status register bits 0, 1, 2, 3, 4, 5, 6, and 7. When a response is read, the end event status register value is cleared.

Example of Use

To query the end event status register for the Signal Generator function.

```
SYS SG  
ESREND?
```

Related Command

ESEERR                      End event status enable register setting



## ESRERR?

Error Event Status Register Query

### Function

This command queries the error event status that is used for the Signal Generator function.

This command can be used for the currently active function.

### Query

ESRERR?

### Response

n

### Parameter

n Error event status register

Value = bit0 + bit1 + ... + bit7

#### Signal Generator function

bit7 =  $2^7 = 128$  Bit 7: Not used

bit6 =  $2^6 = 64$  Bit 6: Not used

bit5 =  $2^5 = 32$  Bit 5: Waveform pattern copy error

bit4 =  $2^4 = 16$  Bit 4: Waveform pattern loading to waveform memory error

bit3 =  $2^3 = 8$  Bit 3: Not used

bit2 =  $2^2 = 4$  Bit 2: Not used

bit1 =  $2^1 = 2$  Bit 1: Not used

bit0 =  $2^0 = 1$  Bit 0: Not used

### Details

The response is the sum of the values  $2^0 = 1$ ,  $2^1 = 2$ ,  $2^2 = 4$ ,  $2^3 = 8$ ,  $2^4 = 16$ ,  $2^5 = 32$ ,  $2^6 = 64$ , and  $2^7 = 128$ , corresponding to the error event status register bits 0, 1, 2, 3, 4, 5, 6, and 7. When a response is read, the error event status register value is cleared.

### Example of Use

To query the error event status register for the Signal Generator function.

```
SYS SG
```

```
ESRERR?
```

### Related Command

ESEERR

Error event status enable register setting

## FILEEVER?

File Version Query

Function

This command queries the waveform pattern file version on the HDD/SSD.

Query

```
FILEEVER? package,pattern
```

Response

```
version
```

Parameter

|         |                                 |
|---------|---------------------------------|
| package | Package name (Character string) |
| pattern | Pattern name (Character string) |
| version | Version number                  |

Example of Use

To query the "TEST" pattern version number of the package "WCDMA".  
FILEEVER? "WCDMA", "TEST"



## FRAMECOUNT/FRAMECOUNT?

Frame Count

Function

This command sets the Frame Count from the Signal Generator option.

Command

```
FRAMECOUNT integer
```

Query

```
FRAMECOUNT?
```

Response

```
integer
```

Parameter

|            |                                   |
|------------|-----------------------------------|
| integer    | Specifying the output frame count |
| Range      | 1 to 32767                        |
| Resolution | 1                                 |
| Default    | 1                                 |

Example of Use

To set the output frame count to 10.

```
FRAMECOUNT 10
```

To query the Frame Count from the Signal Generator option.

```
FRAMECOUNT?
```

```
> 10
```

## FREQ/FREQ?

Frequency

Function

This command sets frequency

Command

FREQ freq

Query

FREQ?

Response

freq

Parameter

|  |   |
|--|---|
| freq                                   | Frequency                                       |
| Range                                  | 250 kHz to 3.6 GHz (*)<br>250 kHz to 6 GHz (**) |
| Resolution                             | 0.01 Hz   |
| Default                                | 1 GHz   |
| Response unit                          | Hz  |
| Suffix code                            | HZ, KHZ, KZ, MHZ, MZ, GHZ, GZ                   |
| When omitted:                          | Hz  |
| (*) When option 020/120 is installed.  |   |
| (**) When option 021/121 is installed. |   |

Example of Use

To set the frequency to 800 MHz  
FREQ 800MHZ

## FRS

Frequency Step Up/Down

Function

This command raises/lowers the frequency in a set width (step value).

Command

```
FRS up_down
```

Parameter

|         |   |
|---------|---|
| up_down | Fluctuation direction of the frequency step width |
| UP      | Raises the frequency                              |
| DN      | Lowers the frequency                              |
| DOWN    | Lowers the frequency                              |

Example of Use

To raise the frequency twice in the 200 kHz width.

```
FIS 200KHZ
```

```
FRS UP
```

```
FRS UP
```

Related Command

|     |                                |
|-----|--------------------------------|
| FIS | Sets the frequency step width. |
|-----|--------------------------------|

## HDDSPC?

HDD/SSD Size Query

Function

This command queries HDD/SSD free space information.

Query

HDDSPC?

Response

total,blank

Parameter

|               |                    |
|---------------|--------------------|
| total         | Total HDD/SSD size |
| Response unit | Byte               |
| blank         | HDD/SSD free space |
| Response unit | Byte               |

Example of Use

To query the HDD/SSD size.  
HDDSPC?

## **INI**

Preset

Function

This command executes initialization.

Command

INI

Details

The application currently selected is the target.

Example of Use

To execute initialization

INI

Related Command

PRE

Same function as INI.

\*RST

Initialization of all applications



## LDCANCEL

Cancel Loading

Function

This command cancels loading waveform patterns to waveform memory.

Command

```
LDCANCEL
```

Example of Use

To cancel loading waveform patterns to waveform memory.

```
LDCANCEL
```

## LDFILE/LDFILE?

Load Pattern File/Check Status of Lading Pattern and Waveform Memory

### Function

This command starts loading the waveform pattern from the HDD/SSD to the waveform memory. Load results and current status for the specified waveform pattern are returned in response to the query.

### Command

```
LDFILE package,pattern
```

### Query

```
LDFILE? package,pattern
```

### Response

```
status
```

### Parameter

|                         |   |
|-------------------------|---|
| package                 | Package name (Character string)                                 |
| pattern                 | Pattern name (Character string)                                 |
| status                  | Status  |
| EXIST                   | Already loaded  |
| ENABLE                  | Can be loaded   |
| NEED_LICENSE            | License required  |
| NO_PATTERN_HDD          | No corresponding file   |
| TOO_LARGE_SIZE          | Insufficient waveform memory free space                         |
| DISABLE_LOAD            | Internal error  |
| INVALID_VERSION         | Version mismatch  |
| FILE_ERROR              | Pattern file analysis error                                     |
| WVI_FILE_ERROR          | Illegal pattern file (.wvi)                                     |
| PATTERN_OVER_ON_WM      | Exceeded number of loadable waveform pattern files              |
| PACKAGE_OVER_ON_WM      | Exceeded number of loadable packages                            |
| PATTERN_OVER_ON_PACKAGE | Exceeded number of loadable waveform pattern files in 1 package |

### Details

If a waveform pattern is loaded when the same waveform pattern has already been loaded, the existing waveform pattern is overwritten.

### Example of Use

To start loading "TEST" pattern in package "WCDMA".

```
LDFILE "WCDMA", "TEST"
```

```
*OPC?
```

```
// Loaded when 1 is returned
```

Related Command

LDPAT

Same as LDFILE

## LDPAT/LDPAT?

Load Pattern File/Check Status of Lading Pattern and Waveform Memory

Function

This command starts loading the waveform pattern from the HDD/SSD to the waveform memory. Load results and current status for the specified waveform pattern are returned in response to the query.

Same function as LDFILE. Refer to the descriptions of LDFILE for details.

## LOADEDFILENAME?

Loaded File Name in Waveform Memory

### Function

This command queries the waveform pattern filename loaded in the waveform memory.

### Query

LOADEDFILENAME? n

### Response

package, pattern

### Parameter

|            |   |
|------------|---|
| n          | Random numbers allocated to waveform patterns.                |
| Range      | 0 to (Number of waveform patterns in the waveform memory – 1) |
| Resolution | 1   |
| package    | Package name (Character string)                               |
| pattern    | Pattern name (Character string)                               |

### Example of Use

To query the waveform pattern filename loaded in the waveform memory.

|                 |              |
|-----------------|--------------|
| LOADEDFILENUM?  | Response > 3 |
| LOADEDFILENAME? | 0            |
| LOADEDFILENAME? | 1            |
| LOADEDFILENAME? | 2            |

### Related Command

|                |   |
|----------------|---|
| LOADEDFILENUM? | Querying the number of waveform pattern files in the waveform memory. |
|----------------|---|

## LOADEDFILENUM?

Number of Loaded Files Query

### Function

This command queries the number of waveform pattern files loaded in the waveform memory.

### Query

LOADEDFILENUM?

### Response

n

### Parameter

n                      Number of waveform pattern files loaded to waveform memory  
 Range                0 to 1000  
 Resolution          1

### Example of Use

To query the number of waveform pattern files loaded in the waveform memory.

```
LOADEDFILENUM?
> 3
```

### Related Command

PATNUM?                      Same as LOADEDFILENUM?

## LOADEDFILESEL/LOADEDFILESEL?

Select Waveform File

Function

This selects the waveform pattern file to be played from the waveform pattern files loaded to the waveform memory.

Command

LOADEDFILESEL package, pattern

Query

LOADEDFILESEL?

Response

package, pattern

Parameter

|         |                                    |
|---------|------------------------------------|
| package | Package name (Character string)    |
| NONE    | Waveform pattern file not selected |
| pattern | Pattern name (Character string)    |
| NONE    | Waveform pattern file not selected |

Example of Use

To select loading "TEST" pattern in package "WCDMA".  
LOADEDFILESEL "WCDMA", "TEST"

Related Command

PAT Same as LOADEDFILESEL

## LVL/LVL?

RF Output - On/Off

Function

This command turns RF output ON/OFF.

Command

LVL on\_off

Query

LVL?

Response

on\_off

Parameter

| on_off | RF Output |
|--------|-----------|
| ON     | On        |
| OFF    | Off       |

Example of Use

To set the RF signal output to Off.  
LVL OFF

## LVLACCSTT?

Level Accuracy Status Query

Function

This command queries the output level accuracy status.

Query

LVLACCSTT?

Response

status

Parameter

|           |                                      |
|-----------|--------------------------------------|
| status    | Output level accuracy status         |
| NORMAL    | Normal state                         |
| UNLEVELED | Outside performance assurance status |

Example of Use

To query the output level accuracy status.  
LVLACCSTT?



## LVLCAL

SG Level Calibration

Function

This command calibrates the output level.

Command

LVLCAL

Example of Use

To calibrate the output level.

LVLCAL

## LVLSTTLST?

Level Status List Query

### Function

This command queries the output level status.

### Query

LVLSTTLST?

### Response

unit,offset,unleveled, INTALC,CONTOFF,  
relative,NORMAL

### Parameter

|           |                                  |
|-----------|----------------------------------|
| unit      | Voltage display unit             |
| EMF       | Open circuit voltage             |
| TERM      | Termination voltage              |
| offset    | Level offset                     |
| OFFSETON  | On                               |
| OFFSETOFF | Off                              |
| unleveled | Output level accuracy status     |
| NORMAL    | Normal state                     |
| UNLEVELED | Outside level accuracy assurance |
| INTALC    | Fixed Value                      |
| CONTOFF   | Fixed Value                      |
| relative  | Relative output mode             |
| RELON     | On                               |
| RELOFF    | Off                              |
| NORMAL    | Fixed Value                      |

### Example of Use

To query the output level status.  
LVLSTTLST?

## MARKEREDIT/MARKEREDIT?

Marker Edit

Function

This command specifies the user setting mode for the external output marker.

Command

```
MARKEREDIT n,mode
```

Query

```
MARKEREDIT? n
```

Response

```
mode
```

Parameter

|         |   |
|---------|---|
| n       | Marker type   |
| 1       | Marker 1  |
| 2       | Marker 2  |
| 3       | Marker 3  |
| mode    | User setting mode   |
| OFF     | Outputs the marker previously recorded in the waveform pattern. |
| ON      | Outputs the user setting marker.                                |
| PATSYNC | Outputs the marker at the start of the waveform pattern.        |

Details

OFF can only be specified if a waveform pattern that consists of 14-bit resolution IQ data is selected. If a 15-bit or 16-bit resolution waveform pattern is selected, the following restrictions apply:

15-bit resolution: Markers 2 and 3 cannot be set to OFF.

16-bit resolution: Markers 1 to 3 cannot be set to OFF.

Example of Use

To specify the user setting mode for marker 1.

```
MARKEREDIT 1,ON
```

## MARKEREDITCYCLE/MARKEREDITCYCLE?

Marker Edit Mode Cycle Value

### Function

This command sets the output pulse cycle when the external output marker is set to the user setting marker.

### Command

```
MARKEREDITCYCLE n,cycle
```

### Query

```
MARKEREDITCYCLE? n
```

### Response

```
cycle
```

### Parameter

|       |                    |
|-------|--------------------|
| n     | Marker type        |
| 1     | Marker 1           |
| 2     | Marker 2           |
| 3     | Marker 3           |
| cycle | Output pulse cycle |

### Example of Use

To set Marker 1 to the user setting marker and set the output pulse cycle to 200.

```
1 : MARKEREDIT 1,ON  
2 : MARKEREDITCYCLE 1,200
```

## MARKEREDITOFFSET/MARKEREDITOFFSET?

Marker Edit Mode Start Offset Value

**Function**

This command sets the output pulse starting offset when the external output marker is set to the user setting marker.

**Command**

MARKEREDITOFFSET n,offset

**Query**

MARKEREDITOFFSET? n

**Response**

offset

**Parameter**

|        |                       |
|--------|-----------------------|
| n      | Marker type           |
| 1      | Marker 1              |
| 2      | Marker 2              |
| 3      | Marker 3              |
| offset | Starting offset value |

**Example of Use**

To set Marker 1 to the user setting marker and set the output pulse starting offset to 100.

```
1 : MARKEREDIT 1,ON
2 : MARKEREDITOFFSET 1,100
```

## MARKEREDITWIDTH/MARKEREDITWIDTH?

Marker Edit Mode Width Value

### Function

This command sets the output pulse width when the external output marker is set to the user setting marker.

### Command

MARKEREDITWIDTH n,width

### Query

MARKEREDITWIDTH? n

### Response

width

### Parameter

|   |             |
|---|-------------|
| n | Marker type |
| 1 | Marker 1    |
| 2 | Marker 2    |
| 3 | Marker 3    |

|       |             |
|-------|-------------|
| width | Pulse width |
|-------|-------------|

### Example of Use

To set Marker 1 to the user setting marker and set the output pulse width to 50.

1 : MARKEREDIT 1,ON

2 : MARKEREDITWIDTH 1,50

## MARKERPOL/MARKERPOL?

Marker Polarity

Function

This command sets the polarity of the external output marker signal.

Command

MARKERPOL n,polarity

Query

MARKERPOL? n

Response

polarity

Parameter

|          |                              |
|----------|------------------------------|
| n        | Marker type                  |
| 1        | Marker 1                     |
| 2        | Marker 2                     |
| 3        | Marker 3                     |
| polarity | Polarity                     |
| POS      | Positive (Positive polarity) |
| NEG      | Negative (Negative polarity) |

Example of Use

To set the polarity of Marker 1 to negative.  
 MARKERPOL 1,NEG

## MOD/MOD?

Modulation - On/Off

Function

This command sets the modulation function ON/OFF.

Command

MOD on\_off

Query

MOD?

Response

on\_off

Parameter

| on_off | Modulation ON/OFF |
|--------|-------------------|
| ON     | On                |
| OFF    | Off               |

Details

Fixed to OFF when no waveform pattern file is selected.

Example of Use

To set the modulation function to ON.  
MOD ON





## OLS

Level Set Up/Down

Function

This command increments or decrements the output level by a specified amount.

Command

OLS up\_down

Parameter

|         |   |
|---------|---|
| up_down | Incrementing or decrementing the output level in step units |
| UP      | Raises the output level                                     |
| DN      | Lowers the output level                                     |
| DOWN    | Lowers the output level                                     |

Example of Use

To raise the output level twice using 2.00 dB width.

```
OLS 2.00DB
```

```
OLS UP
```

```
OLS UP
```

Related Command

OLS                      Sets the output level in step units.

## OLU/OLU?

Level Unit

Function

This command sets the output level unit.

Command

OLU unit

Query

OLU?

Response

unit

Parameter

|      |                   |
|------|-------------------|
| unit | Output level unit |
| DBM  | dBm               |
| DBU  | dB $\mu$ V        |

Example of Use

To set the level setting unit to dBm.  
OLU DBM

## OLVL/OLVL?

Output Level

Function

This command sets the output level.

Command

OLVL level

Query

OLVL? unit

Response

level

Parameter

|               |  |
|---------------|--|
| level         | Output Level   |
| Range         | -40.00 dBm to +20.00 dBm (> 25 MHz) (*)<br>-40.00 dBm to +2.00 dBm ( $\leq$ 25 MHz) (*)<br>-136.00 dBm to +15.00 dBm (> 25 MHz) (**)<br>-136.00 dBm to -3.00 dBm ( $\leq$ 25 MHz) (**)<br> |
| Resolution    | 0.01 dB  |
| Default       | -40.00 dBm (*)<br>-136.00 dBm (**)   |
| Suffix code   | DBM, DBU   |
| When omitted: | DBM  |
|               | (*) When option 022/122 is not installed.  |
|               | (**) When option 022/122 is installed.   |
| unit          | Output level unit (optional)   |
| DBM           | dBm  |
| DBU           | dB $\mu$ V   |
| When omitted: | dBm  |

Details

The range is based on an output level unit of dBm.

The range differs as follows according to the conditions:

When dB $\mu$ V (Term) is set as the output level unit

Range + 106.99 dB

When dB $\mu$ V (EMF) is set as the output level unit

Range + 113.01 dB

When Offset is on:

Range + Offset Value

Example of Use

Setting the output level to -30.00 dBm  
 OLVL -30.00DBM

OOF/OOF?

Level Offset - On/Off

Function

This command sets the output level offset ON/OFF.

Command

OOF on\_off

Query

OOF?

Response

on\_off

Parameter

|        |                     |
|--------|---------------------|
| on_off | Output level offset |
| ON     | On                  |
| OFF    | Off                 |

Example of Use

To enable the output level offset.  
 OOF ON

## OOS/OOS?

Level Offset - Level

Function

This command sets the output level offset value

Command

OOS level

Query

OOS?

Response

level

Parameter

|               |                      |
|---------------|----------------------|
| level         | Output level offset  |
| Range         | -100.00 to 100.00 dB |
| Resolution    | 0.01 dB              |
| Default       | 0.00 dB              |
| Response unit | dB                   |
| Suffix code   | DB                   |

Example of Use

To set the output level offset to -15.00 dB.

OOS -15.00DB

## ORL/ORL?

Relative - On/Off

Function

This command sets the relative output level display ON/OFF.

Command

ORL on\_off

Query

ORL?

Response

on\_off

Parameter

|        |                       |
|--------|-----------------------|
| on_off | Relative output level |
| ON     | On                    |
| OFF    | Off                   |

Example of Use

To enable relative output level display.  
ORL ON

## ORLR?

Relative Level - Reference Level

### Function

This command queries the reference output level at relative output level display mode (Output level when the relative display mode is set to ON).

### Query

ORLR?

### Response

level

### Parameter

|               |  |
|---------------|--|
| level         | Reference level of relative output   |
| Range         | -40.00 dBm to +20.00 dBm (> 25 MHz) (*)<br>-40.00 dBm to +2.00 dBm (≤ 25 MHz) (*)<br>-136.00 dBm to +15.00 dBm (> 25 MHz) (**)<br>-136.00 dBm to -3.00 dBm (≤ 25 MHz) (**) |
| Resolution    | 0.01 dB  |
| Response unit | dBm  |
|               | (*) When option 022/122 is not installed.  |
|               | (**) When option 022/122 is installed.   |

### Details

The range is based on an output level unit of dBm.

The range differs as follows according to the conditions:

When dB $\mu$ V (Term) is set as the output level unit

Range + 106.99 dB

When dB $\mu$ V (EMF) is set as the output level unit

Range + 113.01 dB

When Offset is on:

Range + Offset Value

### Example of Use

```
To query reference level of relative output
OLVL -75.00DBM
ORL ON
ORLR?           Response > -75.00
```



## ORLV/ORLV?

Relative Level

Function

This command sets the screen display output level at relative output level display mode.

Command

ORLV level

Query

ORLV?

Response

level

Parameter

|               |   |
|---------------|---|
| level         | Relative output level   |
| Range         | 60 dB width within the range of -60.00 dB to +60.00 dB (> 25 MHz) (*)     |
|               | 42 dB width within the range of -42.00 dB to +42.00 dB (≤ 25 MHz) (*)     |
|               | 151 dB width within the range of -151.00 dB to +151.00 dB (> 25 MHz) (**) |
|               | 133 dB width within the range of -133.00 dB to +133.00 dB (≤ 25 MHz) (**) |
| Resolution    | 0.01 dB   |
| Response unit | dB  |
|               | (*) When option 022/122 is not installed.                                 |
|               | (**) When option 022/122 is installed.                                    |

Details

The range differs as follows according to the conditions:

When Offset is on: Range + Offset Value

Example of Use

To set the relative output to +10.00 dB based on an output level of -75.00 dBm.

```
OLVL -75.00DBM
ORL ON
ORLV 10.00DB
```

## **PAT**

Select Waveform File

Function

This selects the waveform pattern file to be played from the waveform pattern files loaded to the waveform memory.

The function is the same as that of `LOADEDFILESEL`. Refer to the descriptions of `LOADEDFILESEL` for details.

## **PATNAME?**

Loaded File Name in Waveform Memory

Function

This command queries the waveform pattern filename loaded in the waveform memory.

The function is the same as that of `LOADEDFILENAME?` Refer to the descriptions of `LOADEDFILENAME?` for details.

## **PATNUM?**

Number of Loaded Files

Function

This command queries the number of waveform pattern filenames loaded in the waveform memory.

The function is the same as that of `LOADEDFILENUM?` Refer to the descriptions of `LOADEDFILENUM?` for details.

## PATRUNSTT?

Pattern Running Status Query

Function

This command queries the running status of a waveform pattern.

Query

PATRUNSTT?

Response

status

Parameter

|        |                                     |
|--------|-------------------------------------|
| status | The waveform pattern running status |
| STOP   | Stopped                             |
| PLAY   | Running                             |

Example of Use

To query the waveform pattern status.  
PATRUNSTT?

## PATWMPowRatio/PATWMPowRatio?

Power Ratio

Function

This command sets the output ratio of AWGN to carrier (C/N) when AWGN is ON.

Command

PATWMPowRatio level

Query

PATWMPowRatio?

Response

level

Parameter

|               |               |
|---------------|---------------|
| level         | C/N           |
| Range         | -40 to +40 dB |
| Resolution    | 0.01          |
| Default       | -40.00        |
| Response unit | dB            |
| Suffix code   | DB            |

Details

The setting range may be narrowed if the RF output level is close to the upper or lower limit.

Example of Use

To set the C/N to 3 dB.  
PATWMPowRatio 3DB

## PMO/PMO?

Pulse Modulation Source

Function

This command sets the pulse modulation signal source.

Command

```
PMO source
```

Query

```
PMO?
```

Response

```
source
```

Parameter

|        |                                 |
|--------|---------------------------------|
| source | Pulse modulation signal source. |
| INT    | Internal signal                 |
| EXT    | External input signal           |
| OFF    | No pulse modulation             |

Example of Use

To set the pulse modulation signal source to internal signal.  
PMO INT

## POWRATIOTARGET/POWRATIOTARGET?

Target of C/N Setting

Function

This command sets the parameters to be changed when C/N is set.

Command

```
POWRATIOTARGET target
```

Query

```
POWRATIOTARGET?
```

Response

```
target
```

Parameter

|          |  |
|----------|--|
| target   | Parameter to be changed when C/N is set. |
| CARRIER  | Carrier signal                           |
| NOISE    | AWGN                                     |
| CONSTANT | Fixed output level (Carrier + AWGN)      |

Example of Use

To set AWGN as the parameter to be changed when C/N is set.  
POWRATIOTARGET NOISE

## PRE

Preset

Function

This command executes initialization.

Command

PRE

Details

The application currently selected is the target.

Example of Use

To execute initialization

PRE

Related Command

INI

Same as PRE

\*RST

Initializes all applications

## REFCLKSRC/REFCLKSRC?

Baseband Reference Clock Source

Function

This command sets baseband signal reference clock.

Command

```
REFCLKSRC source
```

Query

```
REFCLKSRC?
```

Response

```
source
```

Parameter

|        |                                 |
|--------|---------------------------------|
| source | Baseband signal reference clock |
| INT    | Internal signal (Default)       |
| EXT    | External input signal           |

Example of Use

To set the baseband signal reference clock to external input signal.  
REFCLKSRC EXT



## REFCLKVAL/REFCLKVAL?

Baseband Reference Clock

Function

This command sets the baseband signal reference clock frequency in magnification ratio based on the sampling clock.

Command

REFCLKVAL clock

Query

REFCLKVAL?

Response

clock

Parameter

|           |                                 |
|-----------|---------------------------------|
| clock     | Baseband signal reference clock |
| SIXTEENTH | Sampling Clock × 1/16           |
| EIGHTH    | Sampling Clock × 1/8            |
| QUARTER   | Sampling Clock × 1/4            |
| HALF      | Sampling Clock × 1/2            |
| 1         | Sampling Clock × 1              |
| 2         | Sampling Clock × 2              |
| 4         | Sampling Clock × 4              |
| 8         | Sampling Clock × 8              |
| 16        | Sampling Clock × 16             |

The setting range is as shown in the following table.

**Baseband reference clock setting range**

| Sampling Clock<br>[MHz]            | Baseband Reference Clock Setting |   |   |   |   |     |     |     |      |
|------------------------------------|----------------------------------|---|---|---|---|-----|-----|-----|------|
|                                    | 16                               | 8 | 4 | 2 | 1 | 1/2 | 1/4 | 1/8 | 1/16 |
| $0.02 \leq f < 0.024414062$        | ✓                                | ✓ | ✓ | ✓ | ✓ |     |     |     |      |
| $0.024414062 \leq f < 0.048828125$ | ✓                                | ✓ | ✓ | ✓ | ✓ | ✓   |     |     |      |
| $0.048828125 \leq f < 0.09765625$  | ✓                                | ✓ | ✓ | ✓ | ✓ | ✓   | ✓   |     |      |
| $0.09765625 \leq f < 0.1953125$    | ✓                                | ✓ | ✓ | ✓ | ✓ | ✓   | ✓   | ✓   |      |
| $0.1953125 \leq f < 2.5$           | ✓                                | ✓ | ✓ | ✓ | ✓ | ✓   | ✓   | ✓   | ✓    |
| $2.5 \leq f < 5$                   |                                  | ✓ | ✓ | ✓ | ✓ | ✓   | ✓   | ✓   | ✓    |
| $5 \leq f < 10$                    |                                  |   | ✓ | ✓ | ✓ | ✓   | ✓   | ✓   | ✓    |
| $10 \leq f < 20$                   |                                  |   |   | ✓ | ✓ | ✓   | ✓   | ✓   | ✓    |
| $20 \leq f < 40$                   |                                  |   |   |   | ✓ | ✓   | ✓   | ✓   | ✓    |
| $40 \leq f < 80$                   |                                  |   |   |   |   | ✓   | ✓   | ✓   | ✓    |
| $80 \leq f < 160$                  |                                  |   |   |   |   |     | ✓   | ✓   | ✓    |

Example of Use

To set the baseband signal reference lock frequency to sampling clock ×2.  
REFCLKVAL 2

## SAMPLINGCLK?

Sampling Clock Query

Function

This command queries the baseband signal sampling clock.

Query

SAMPLINGCLK?

Response

freq

Parameter

|               |                 |
|---------------|-----------------|
| freq          | Sampling clock  |
| Range         | 0.02 to 160 MHz |
| Resolution    | 0.001 Hz        |
| Response unit | Hz              |

Example of Use

To query the sampling clock  
SAMPLINGCLK?

## SATRGOUT/SATRGOUT?

SA Trigger Out

Function

This command selects the type of the trigger to be output to the SG marker of SA/SPA.

Command

```
SATRGOUT triggertoSA
```

Query

```
SATRGOUT?
```

Response

```
triggertoSA
```

Parameter

|             |   |
|-------------|---|
| triggertoSA | Output trigger                                |
| MARKER1     | Marker 1                                      |
| MARKER2     | Marker 2                                      |
| MARKER3     | Marker 3                                      |
| PATSYNC     | A marker synchronized with the top of pattern |

Example of Use

To select the type of the trigger to be output to the SG marker of SA/SPA.  
SATRGOUT MARKER1

## SFTGGENBUS

Remote Command Trigger

Function

This command triggers the output of waveform pattern. This becomes available when Trigger Source is BUS.

Command

SFTGGENBUS

Example of Use

To trigger the output of waveform pattern.

SFTGGENBUS

## SFTRG/SFTRG?

External Trigger - On/Off

Function

This command sets the external trigger ON/OFF.

Command

SFTRG on\_off

Query

SFTRG?

Response

on\_off

Parameter

|        |                         |
|--------|-------------------------|
| on_off | External trigger On/Off |
| ON     | On                      |
| OFF    | Off                     |

Example of Use

To enable the external trigger.

SFTRG ON

## SFTRGMODE/SFTRGMODE?

### External Trigger - Mode

#### Function

This command sets the external trigger operation mode.

#### Command

```
SFTRGMODE mode
```

#### Query

```
SFTRGMODE?
```

#### Response

```
mode
```

#### Parameter

|       |                                  |
|-------|----------------------------------|
| mode  | External trigger operation mode. |
| START | Start trigger                    |
| FRAME | Frame trigger                    |

#### Example of Use

To set the external trigger operation mode to start trigger.

```
SFTRG ON  
SFTRGMODE START
```

## SGWINDOWPOS/SGWINDOWPOS?

SG Window Position

Function

This command switches the display position of the Signal Generator screen.

Command

```
SGWINDOWPOS position
```

Query

```
SGWINDOWPOS?
```

Response

```
position
```

Parameter

| position | Display position |
|----------|------------------|
| TOP      | Top              |
| BOTTOM   | Bottom           |

Example of Use

To display the Signal Generator screen at the bottom.  
SGWINDOWPOS BOTTOM

## SPREV/SPREV?

RF Spectrum - Reverse/Normal

### Function

This command whether to invert spectrum of the output waveform (reverses I and Q).

### Command

SPREV mode

### Query

SPREV?

### Response

mode

### Parameter

|        |                                       |
|--------|---------------------------------------|
| mode   | Whether to invert output waveform     |
| ON     | Reverse: Invert                       |
| REV    | Reverse: Invert (command only)        |
| INV    | Normal: Invert (command only)         |
| OFF    | Normal: Do not invert (initial value) |
| NORMAL | Normal: Do not invert (command only)  |

### Example of Use

To invert the output waveform.  
SPREV ON



## STDLYSRC/STDLYSRC?

Start Trigger Delay Source

Function

This command sets the signal source of the external trigger.

Command

```
STDLYSRC source
```

Query

```
STDLYSRC?
```

Response

```
source
```

Parameter

|        |                                |
|--------|--------------------------------|
| source | External trigger signal source |
| EXTTRG | External input signal          |
| KEY    | Trigger key input              |
| BUS    | Remote Command                 |

Example of Use

To set the signal source of the external trigger to the external input signal.

```
STDLYSRC EXTTRG
```

## STDLYSYM/STDLYSYM?

### Start Trigger Delay

#### Function

This command sets the RF signal output timing in symbol or chip rate units of each system (determined by the overrate).

#### Command

STDLYSYM t

#### Query

STDLYSYM?

#### Response

t

#### Parameter

|               |  |
|---------------|--|
| t             | Start trigger delay time                           |
| Range         | Varies depending on the selected waveform pattern. |
| Resolution    | Varies depending on the selected waveform pattern. |
| Default       | 0  |
| Response unit | None (Symbol or chip)                              |

#### Example of Use

To set the start trigger delay time to 30 chips.

STDLYSYM 30



## STGS/STGS?

### External Trigger - Mode

#### Function

This command sets the external trigger operation mode.

#### Command

```
STGS mode
```

#### Query

```
STGS?
```

#### Response

```
mode
```

#### Parameter

|        |   |
|--------|---|
| mode   | External trigger operation mode.        |
| INT    | Does not use external trigger (Default) |
| EXTSTA | Start trigger                           |
| EXT    | Start trigger (Command only)            |
| EXTFRM | Frame trigger                           |

#### Example of Use

To set the external trigger operation mode to start trigger.  
STGS EXTSTA

## SYS/SYS?

Application Switch Command/Application Status Query

### Function

This command sets the operation target (application) to the signal generator. The execution status of the specified application is returned in response to a query.

### Command

```
SYS SG,window
```

### Query

```
SYS? SG
```

### Response

```
status,window
```

### Parameter

|              |   |
|--------------|---|
| window       | Window status (optional)                |
| ACT          | Active (brought to front)               |
| INACT        | Inactive                                |
| MIN          | Minimized                               |
| NON          | No window displayed (response only)     |
| When omitted | Same as ACT                             |
| status       | Application status                      |
| CURRENT      | Operation target                        |
| IDLE         | Loaded but not executed                 |
| RUN          | Executed but not targeted for operation |
| UNLOAD       | Not loaded                              |

### Example of Use

To switch the operation target to the signal generator.

```
SYS SG,ACT
```

## VDSPL/VDSPL?

### Volt Unit Display

#### Function

This command sets the display method when the output level is set in voltage units.

#### Command

VDSPL unit

#### Query

VDSPL?

#### Response

unit

#### Parameter

|      |                              |
|------|------------------------------|
| unit | Voltage unit display system  |
| EMF  | Open circuit voltage display |
| TERM | Termination voltage display  |

#### Example of Use

To display the voltage units using open voltage.  
VDSPL EMF

## WMSPC?

### Waveform Memory Space Query

#### Function

This command queries the waveform memory free space.

#### Query

WMSPC?

#### Response

blank,consecutive\_blank,total

#### Parameter

|                   |                                      |
|-------------------|--------------------------------------|
| blank             | Free space (in byte)                 |
| consecutive_blank | Contiguous free space (in byte)      |
| total             | Total waveform memory size (in byte) |

#### Example of Use

To query the waveform memory free space.